

 
부품 매뉴얼 PARTS MANUAL

C 20/25/30/33(35) D

SERIAL NUMBER : P232D - XXXX - 9661 CNF (Tier 2)

부품 청구시 항상 장비의 SERIAL NO. 도
함께 알려 주십시오.

ALWAYS GIVE TRUCK SERIAL NUMBER
WHEN ORDERING PARTS.

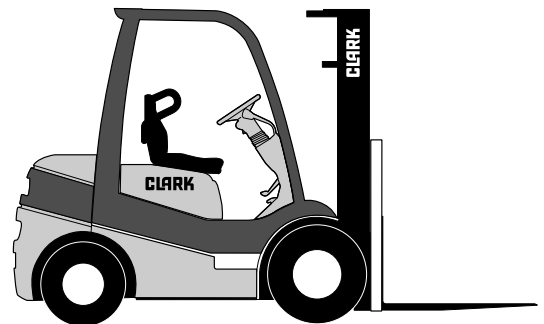

Publication Date : Dec. 2013




(본사) 경기도 부천시 오정구 오정동 202-1
(Head office) 202-1 Ojung-Dong, Ojung-Gu, Bucheon-city, Kyunggi-do, Korea
(공장) 경남 창원시 웅남동 40-1
(Factory) 40-1 Ungnam-dong, Changwon-city, Kyungnam, Korea



00-316	ENGINE SUB-ASSEMBLY MOUNTING 엔진 서브 어셈블리 마운팅	12-211	BATTERY MOUNTING 배터리 마운팅
00-426	CRANKCASE 크랭크케이스	13-033	KEY & DIRECTIONAL SWITCH INSTALLATION 키&방향스위치 조립그룹
00-428	GEAR COVER 기어 커버	13-236	COMBINATION & REAR WORK LIGHT INSTALLATION 컴비네이션&후방 작업등 조립그룹
00-442	CYLINDER HEAD 실린더 헤드	13-338	HEAD & T/SIGNAL LIGHT INSTALLATION 헤드&턴시그널 라이트 조립그룹
00-448	CAMSHAFT 캠 축	14-133	ELECTRICAL WIRING (INSTRUMENT) 전기장치 와이어링 (계기판)
00-462	CRANKSHAFT 크랭크 축	14-203	ELECTRICAL WIRING (MAIN) 전기장치 와이어링 (메인)
00-464	GASKETS 가스켓	20-086	DRIVE AXLE 드라이브 액슬
00-515	ENGINE MOUNTING 엔진 마운팅	22-011	BRAKE ASSEMBLY LH 브레이크 어셈블리 - 좌
01-091	LUBRICATION SYSTEM 윤활 오일 시스템	22-013	DRIVE WHEEL & TIRE MOUNTING 드라이브휠&타이어 마운팅
01-093	FLYWHEEL HOUSING 플라이휠 하우징	22-014	STEER WHEEL & TIRE MOUNTING 스티어휠&타이어 마운팅
01-170	FAN GUARD MOUNTING 팬 가드 마운팅	22-024	DRIVE WHEEL & TIRE (SOLID TYPE) 드라이브 휠&타이어 (솔리드 타입)
01-206	OIL COOLING LINES 오일 쿨러 라인	22-025	STEER WHEEL & TIRE (SOLID TYPE) 스티어 휠&타이어 (솔리드 타입)
01-241	WATER PUMP MOUNTING 워터 펌프 마운팅	22-054	BRAKE ASSEMBLY RH 브레이크 어셈블리 - 우
01-243	COOLING SYSTEM 쿨링 시스템	23-411	BRAKE & INCHING LINES 브레이크&인칭라인
02-262	FUEL LINES 연료 라인	23-448	DRIVE WHEEL & TIRE MOUNTING 드라이브휠&타이어 마운팅
02-299	FUEL INJECTION PUMP 연료 분사 펌프	23-460	BRAKE LINES 브레이크 라인
02-357	FUEL INJECTION LINE 연료 분사 라인	23-523	PARKING BRAKE LINKAGE 주차 브레이크 링크이지
02-366	FUEL LINES 연료 라인	25-050	STEER COLUMN & GEAR MOUNTING 스티어 컬럼&기어 마운팅
02-474	AIR CLEANER ASSEMBLY 에어 크리너 어셈블리	25-076	STEERING UNIT 스티어링 유닛
02-492	ACCELERATOR SYSTEM 악셀레이터 시스템	25-250	STEERING WHEEL MOUNTING 스티어링 휠 마운팅
03-161	INTAKE SYSTEM 흡기 시스템 (듀얼)	26-026	HYDRAULIC STEERING LINES 유압 스티어링 라인
03-190	EXHAUST MANIFOLD 배기 기관	26-211	STEERING AXLE 스티어링 액슬
03-191	INTAKE MANIFOLD 흡기 기관	26-225	HYDRAULIC RETURN LINES 유압 리턴 라인
03-361	FUEL SYSTEM 연료 시스템	26-266	STEER CYLINDER 스티어링 실린더
03-727	EXHAUST SYSTEM 배기 시스템	26-273	STEER AXLE MOUNTING 스티어링 액슬 마운팅
05-035	TRANSMISSION PUMP & HYDRAULICS 트랜스미션 펌프&유압	26-274	STEER CYLINDER 스티어링 실린더
05-036	CONVERTOR HOUSING AND PUMP DRIVE 컨버터 하우징&펌프 드라이브	26-276	STEER AXLE ASSEMBLY 스티어링 액슬 어셈블리
05-165	CONVERTER HOUSING & CLUTCH ASSY 컨버터 하우징&클러치 어셈블리	26-864	POWER STEERING CYLINDER 파워 스티어링 실린더
06-110	TRANSAXLE ASSEMBLY 트랜스엑슬 어셈블리	29-192	HYDRAULIC PUMP 유압 펌프
06-619	TRANSMISSION CASE AND DIFFERENTIAL ASSEMBLY 트랜스미션 케이스&디퍼렌셜 어셈블리	29-237	HYDRAULIC TANK & COMPONENTS MOUNTING 유압탱크&구성품 마운팅
06-750	E TRANSMISSION CLUTCH PACK 트랜스미션 클러치 팩	30-126	HYDRAULIC VALVE MOUNTING (3SPOOL) 유압밸브 마운팅 (3스풀)
06-801	CONTROL COVER 컨트롤 커버	30-127	HYDRAULIC VALVE MOUNTING (4SPOOL) 유압밸브 마운팅 (4스풀)
07-048	ENGINE & TRANSAXLE MOUNTING 엔진&트랜스엑슬 마운팅	30-128	MAIN CONTROL VALVE 2-SPOOL 메인 컨트롤 밸브 - 2 스푼
11-060	STARTER 스타터	30-129	MAIN CONTROL VALVE 3-SPOOL 메인 컨트롤 밸브 - 3 스푼
12-035	ALTERNATOR MOUNTING 알터네이터 마운팅	30-130	MAIN CONTROL VALVE 4-SPOOL 메인 컨트롤 밸브 - 4 스푼
12-191	ALTERNATOR MOUNTING 알터네이터 마운팅	30-209	HYDRAULIC VALVE MOUNTING (2SPOOL) 유압밸브 마운팅 (2스풀)


30-210	HYDRAULIC VALVE MOUNTING (3SPOOL) 유압밸브 마운팅 (3스풀)	66-999	EXTENTION FORK 익스텐션 포크
30-211	HYDRAULIC VALVE MOUNTING (4SPOOL) 유압밸브 마운팅 (4스풀)	99-999	SEE OLD STYLE PARTS MANUALS 구판 부품매뉴얼 참고
31-139	HYDRAULIC LIFT & TILT LINES 유압 리프트& 틸트 라인		
31-140	HYDRAULIC SUPPLY LINES 유압 공급 라인		
32-129	TILT CYLINDER 틸트 실린더		
32-155	TILT CYLINDER MOUNTING 틸트 실린더 마운팅		
32-167	TILT AMOUNT GROUP 틸트 어마운트 그룹		
34-044	LOAD BACK REST MOUNTING 로드 백 레스트 마운팅		
34-103	CARRIAGE ASSEMBLY 캐리지 어셈블리		
34-126	UPRIGHT MOUNTING 마스트 마운팅		
37-003	OVERHEAD GUARD COVER 오버헤드가드 커버		
37-114	HOOD MOUNTING 후드 마운팅		
37-115	SHEET METAL & TRIM 시트 메탈& 트림		
38-225	FRAME & COUNTERWEIGHT 프레임& 카운터웨이트		
38-270	FRAME TANK BOTTOM PLUG 프레임 탱크 하단 플러그		
39-012	LEAD WIRE GROUND 접지선		
39-510	OVERHEAD GUARD MOUNTING 오버헤드가드 마운팅		
39-511	COWL MOUNTING 카울 마운팅		
39-514	SEAT MOUNTING 시트 마운팅		
39-547	LOAD BACK REST 로드 백 레스트		
39-661	SEAT ASSEMBLY 시트 어셈블리		
39-672	SPONGE MOUNTING 스폰지 마운팅		
39-674	FLOOR PLATE MOUNTING 플로어 플레이트 마운팅		
39-829	SEAT MOUNTING 시트 마운팅		
40-243	MODEL & SPECIFICATION DECALS 모델& 사양 데칼		
40-254	DECALS 데칼		
40-260	TRUCK FLUIDS 트럭 윤활유		
50-410	ATTACHMENT HOSE ADAPTATION (UPRIGHT) 어태치 호스 적응 (마스트)		
50-590	AUXILIARY VALVE LINES 보조 밸브 라인		
50-791	ATTACHMENT HOSE ADAPTATION (CARRIAGE) 어태치 호스 적응 (캐리지)		
53-187	SIDE SHIFT ASSEMBLY 사이드 쉬프트 어셈블리		
53-198	SIDESHIFT CYLINDER 사이드 쉬프트 실린더		
66-058	FORK 포크		
66-267	TRIPLE STAGE UPRIGHT 3단 마스트		
66-515	LIFT CYLINDER ASSEMBLY 리프트 실린더 어셈블리		
66-607	FINAL LIFT CYLINDER 파이널 리프트 실린더		

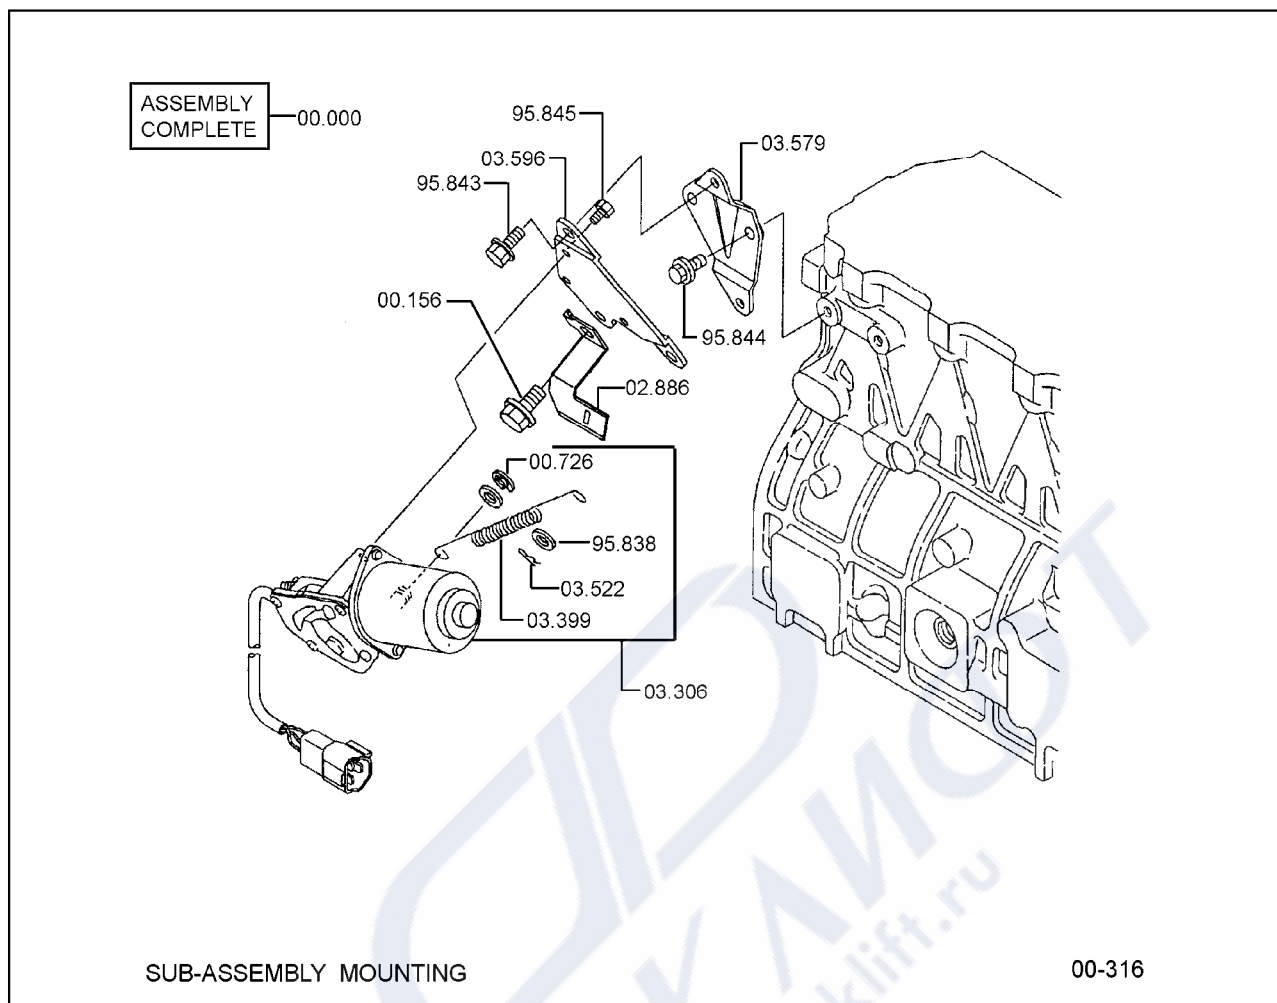 

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.156	PLUG, CRANKCASE OIL GALLEY 플러그
00.726	SEAL, ENGINE VALVE 씰
02.886	BRACKET, ENGINE STOP CABLE MOUNTING 브라켓
03.306	VALVE, FUEL LOCK-OFF 밸브
03.399	SPRING, FUEL VALVE OPERATING VALVE 스프링
03.522	PIN, FUEL INJECTION PUMP ADAPTOR 핀
03.579	BRACKET, FUEL SHUT OFF SOLENOID 브라켓
03.596	BRACKET, FUEL SHUT OFF VALVE 브라켓


95.838	WASHER, FUEL SHUT OFF SOLENOID BRACKET FASTENER 와셔
95.843	FASTENER, FUEL SHUT OFF SOLENOID BRACKET 패스너
95.844	FASTENER, FUEL SHUT OFF SOLENOID 패스너
95.845	FASTENER, FUEL SHUT OFF SOLENOID BRACKET 패스너

 
ФОРКЛИФТ
www.forklift.ru

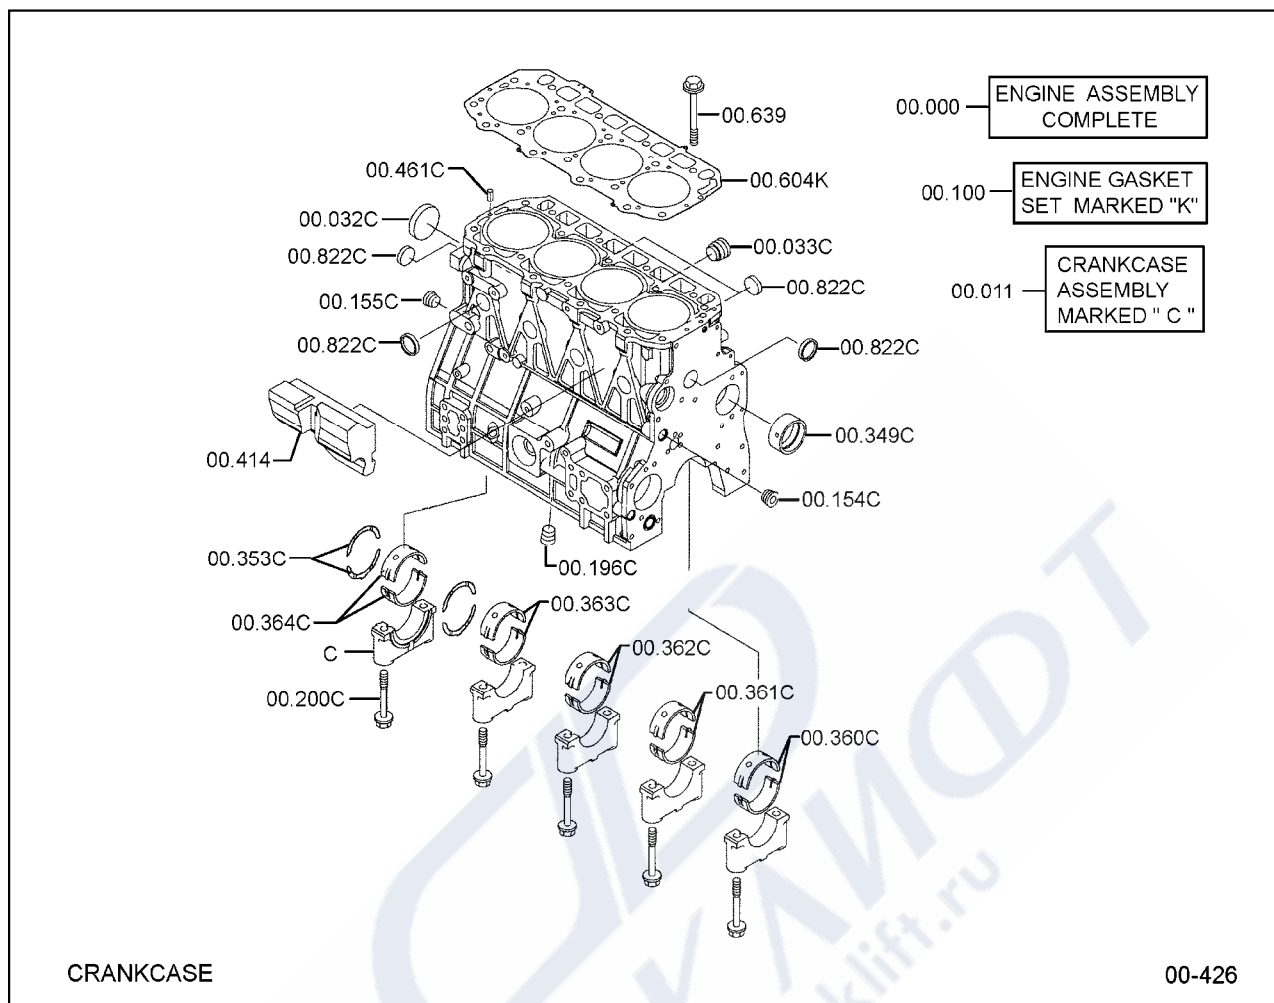

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.011	CRANKCASE 크랭크케이스
00.032	PLUG, CRANKCASE 플러그
00.033	PLUG, CRANKCASE 플러그
00.100	GASKET KIT, ENGINE OVERHAUL 가스킷키트
00.154	PLUG - EXPANSION, CRANKCASE END 플러그
00.155	PLUG - EXPANSION, CRANKCASE END 플러그
00.196	PLUG-EXPANSION, CRANKCASE SIDE 플러그
00.200	FASTENER, CRANKSHAFT BEARING NO. 1 CAP 패스너


00.349	BEARING, ENGINE BALANCER SHAFT FRONT 베어링
00.353	PLATE, CRANKSHAFT THRUST 플레이트
00.360	BEARING, NO. 1 MAIN JOURNAL 베어링
00.361	BEARING, NO. 2 MAIN JOURNAL 베어링
00.362	BEARING, NO. 3 MAIN JOURNAL 베어링
00.363	BEARING, NO. 4 MAIN JOURNAL 베어링
00.364	BEARING, NO. 5 MAIN JOURNAL 베어링
00.414	BLOCK, REAR FILLER 블록
00.461	DOWEL, CRANKCASE HEAD 다월
00.604	GASKET, CRANKCASE HEAD 가스켓
00.639	FASTENER, CRANKCASE HEAD 패스너
00.822	PLUG, CRANKCASE 플러그

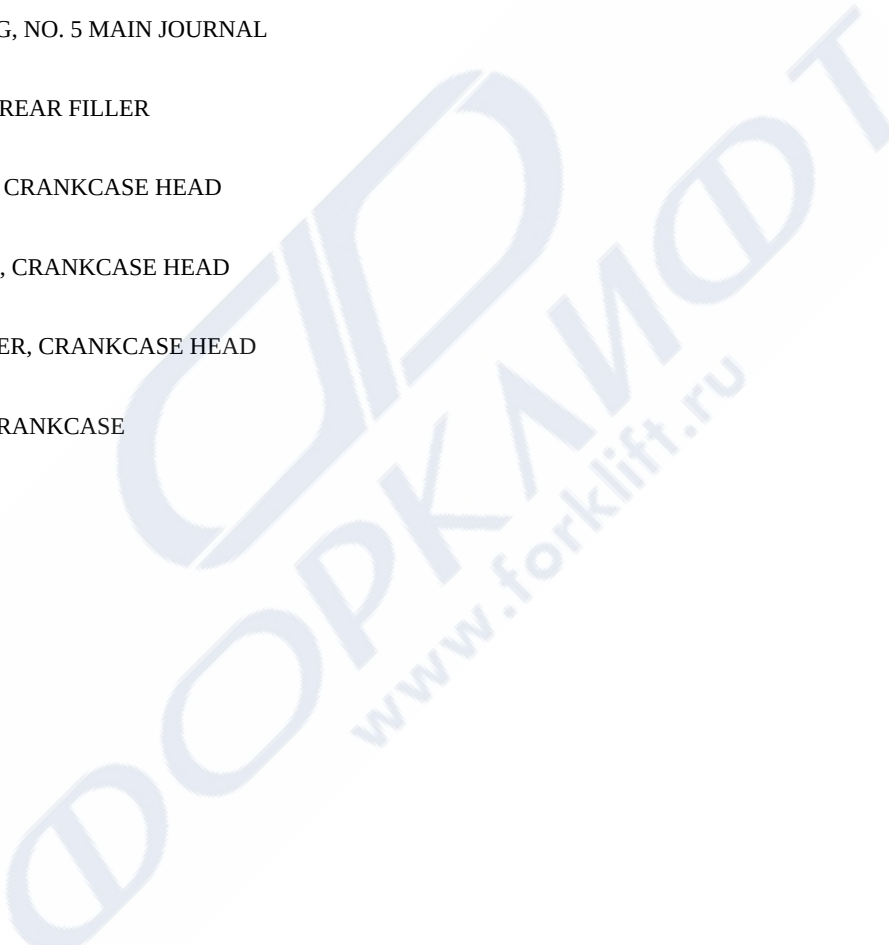 

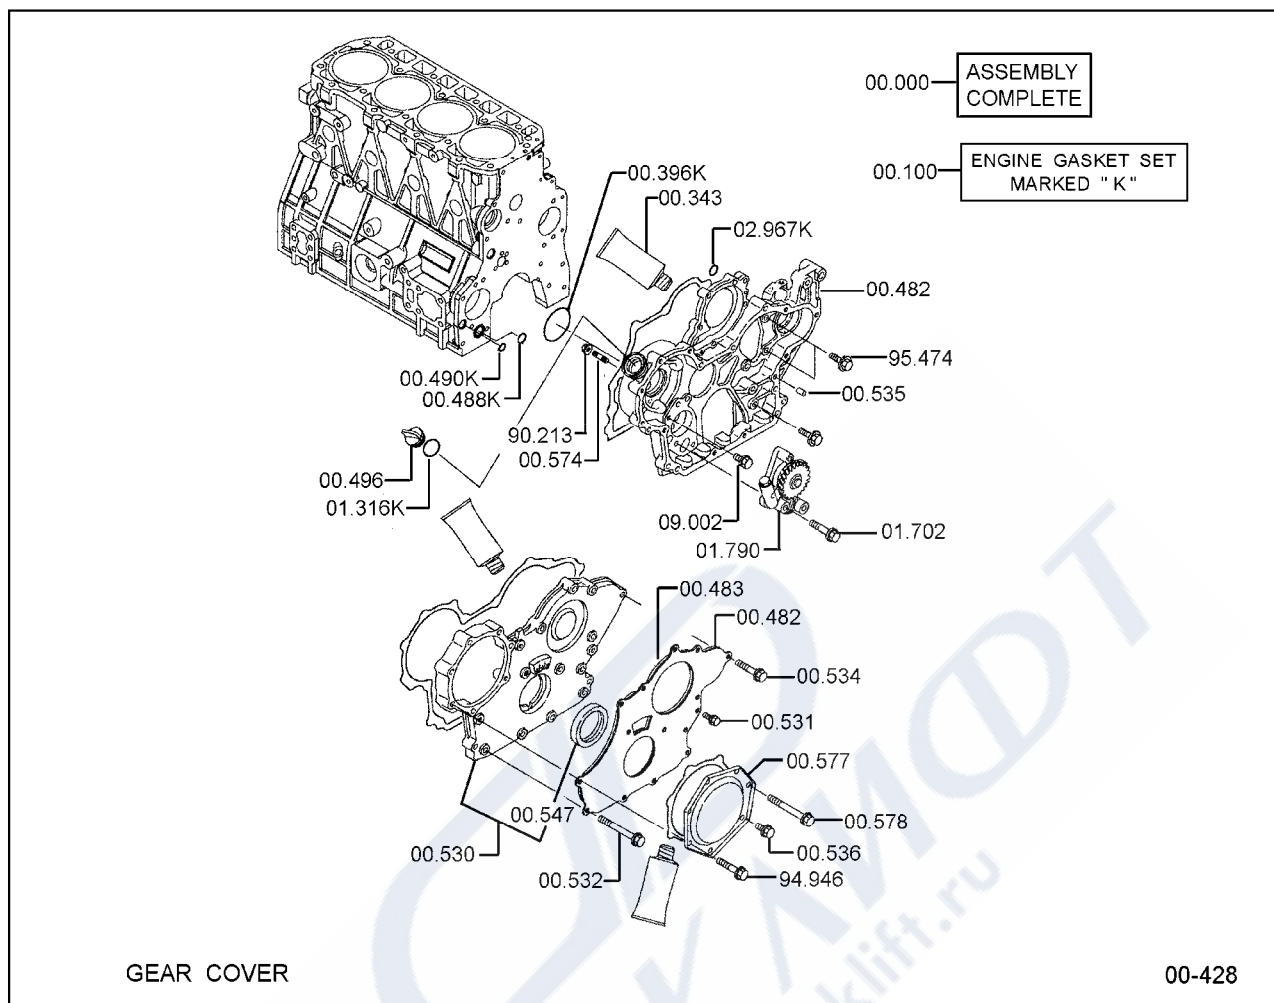 


00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.100	GASKET KIT, ENGINE OVERHAUL 가스켓키트
00.343	GASKET, LIQUID 가스켓
00.396	SEAL, ENGINE FRONT GEAR COVER GASKET 셀
00.482	PLATE, GEAR COVER BACKING 플레이트
00.483	GASKET, GEAR COVER BACKING PLATE ATTACHING 가스켓
00.488	SEAL, ENGINE FRONT GEAR COVER PLUG 셀
00.490	SEAL, ENGINE FRONT GEAR COVER PLUG 셀
00.496	PLUG, ENGINE FRONT GEAR COVER 플러그

00.530	COVER, ENGINE FRONT GEAR 커버
00.531	FASTENER, ENGINE FRONT GEAR COVER 패스너
00.532	FASTENER, ENGINE FRONT GEAR COVER 패스너
00.534	FASTENER, ENGINE FRONT GEAR COVER 패스너
00.535	FASTENER, ENGINE FRONT GEAR COVER 패스너
00.536	FASTENER, ENGINE FRONT GEAR COVER 패스너
00.547	SEAL, ENGINE FRONT GEAR COVER 씰
00.574	FASTENER, BACKING PLATE 패스너
00.577	COVER, INJECTION PUMP GEAR ACCESS 커버
00.578	FASTENER, INJECTION PUMP GEAR ACCESS COVER 패스너
01.316	SEAL, ENGINE OIL FILTER DRAIN COCK 씰
01.702	FASTENER, OIL PUMP 패스너
01.790	GEAR, OIL PUMP DRIVEN 기어
02.967	SEAL, FUEL FILTER DRAIN PLUG 씰
09.002	FASTENER, GEAR CASE COVER 패스너
90.213	NUT, ENGINE FRONT GEAR COVER FASTENER 너트
94.946	FASTENER, INJECTION PUMP GEAR ACCESS COVER 패스너
95.474	FASTENER, ENGINE OIL PUMP DRIVE CHAIN ACCESS HOLE 패스너

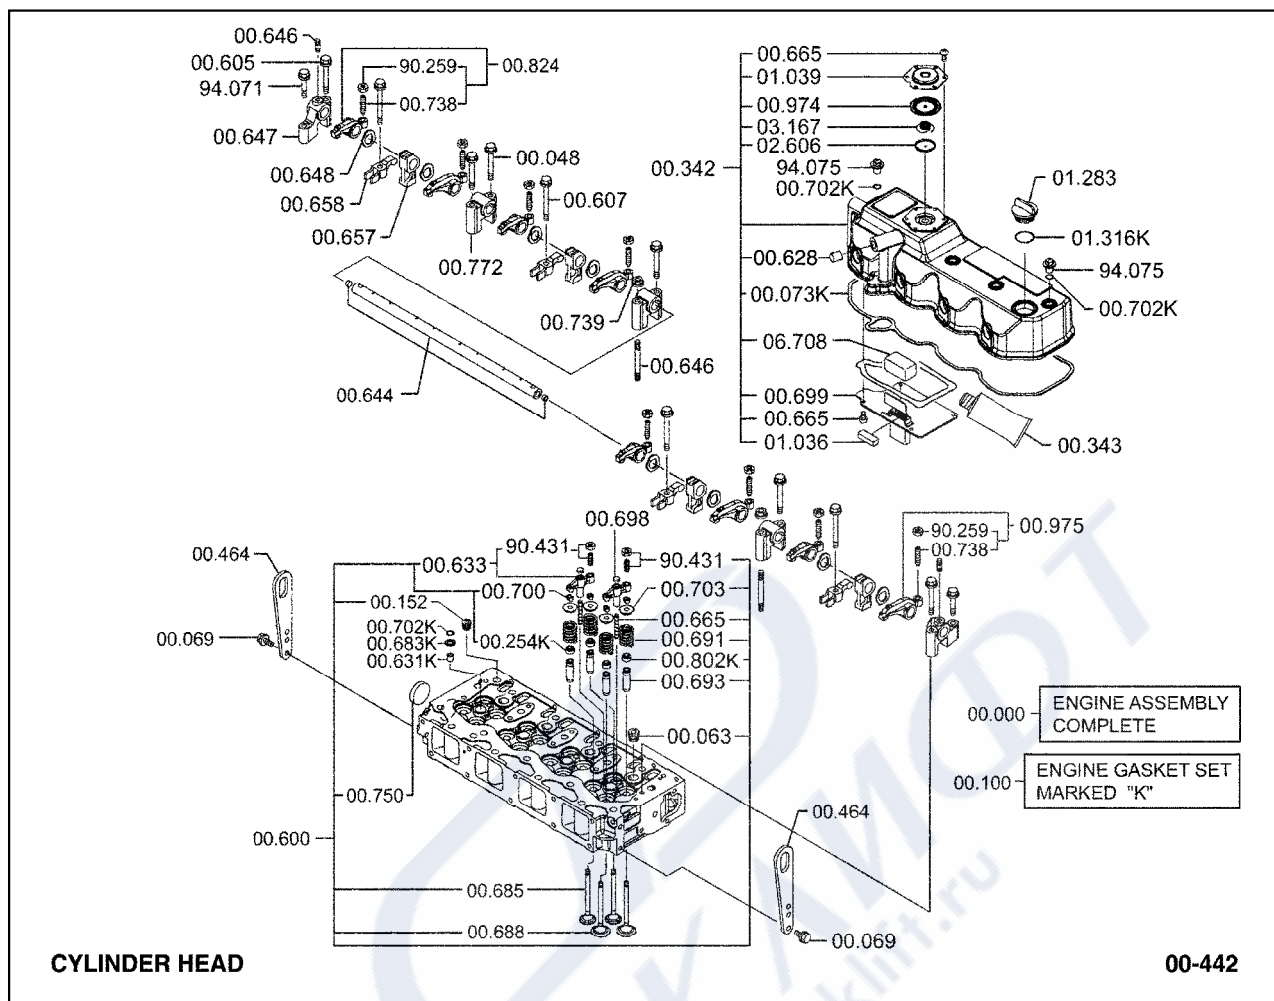 

00.000	PRODUCTION ENGINE ASSEMBLY 엔진	00.631	FASTENER, CRANKCASE HEAD 패스너
00.048	FASTENER, ENGINE REAR SUPPORT BRACKET 패스너	00.633	FASTENER, CRANKCASE HEAD 패스너
00.063	PLUG, CRANKCASE HEAD 플러그	00.644	PIVOT, ENGINE ROCKER ARM 피봇
00.069	FASTENER, ENGINE LIFTING BRACKET 패스너	00.646	FASTENER, ENGINE ROCKER ARM PIVOT SUPPORT 패스너
00.073	GASKET, CRANKCASE HEAD END COVER 가스켓	00.647	SUPPORT, ENGINE ROCKER ARM PIVOT 서포트
00.100	GASKET KIT, ENGINE OVERHAUL 가스켓키트	00.648	LOCATOR, ENGINE ROCKER ARM 로케이터
00.152	PLUG & WASHER, CRANKCASE HEAD FRONT 플러그&와셔	00.657	ROCKER ARM ASSEMBLY, ENGINE VALVE 로커
00.254	SEAL, CYLINDER HEADCOVER FASTENER 씰	00.658	ROCKER ARM ASSEMBLY, ENGINE VALVE 로커
00.342	BONNET ASSY 본넷	00.665	FASTENER, ROCKER ARM COVER 패스너
00.343	GASKET, LIQUID 가스켓	00.683	SEAT, EXHAUST VALVE INSERT 시트
00.464	BRACKET, ENGINE LIFTING 브라켓	00.685	VALVE, EXHAUST 밸브
00.600	HEAD ASSEMBLY, CRANKCASE 헤드	00.688	VALVE, INTAKE 밸브
00.605	FASTENER, CRANKCASE HEAD 패스너	00.691	SPRING, ENGINE INTAKE VALVE 스프링
00.607	FASTENER, CRANKCASE HEAD 패스너	00.693	GUIDE, INTAKE VALVE 가이드
00.628	PLUG, CRANKCASE HEAD 플러그	00.698	LOCK, EXHAUST VALVE SPRING SEAT 로크


00.699	OIL BAFFLE,CAMSHAFT 오일
00.700	LOCK, INTAKE VALVE SPRING SEAT 로크
00.702	SEAL, ROCKER ARM COVER FASTENER 씰
00.703	SEAT, INTAKE VALVE SPRING 시트
00.738	STUD, ENGINE ROCKER ARM PIVOT SUPPORT 스터드
00.739	NUT, ENGINE ROCKER ARM PIVOT SUPPORT 너트
00.750	PLUG, CRANKCASE HEAD 플러그
00.772	SUPPORT, ENGINE ROCKER ARM PIVOT 서포트
00.802	SEAL, CYLINDER SLEEVE 씰
00.824	ARM ASSY, ENGINE ROCKER 암
00.974	DIAPHRAGM, BONNET PLATE 다이어프램
00.975	ARM ASSY,CYLINDER HEAD ROCKER 암
01.036	BAFFLE, CRANKCASE VALVE 배플
01.039	COVER, CRANKCASE VENT 커버
01.283	CAP, CRANKCASE OIL FILLER 캡
01.316	SEAL, ENGINE OIL FILTER DRAIN COCK 씰
02.606	PLATE, DIAPHRAGM RETAINER 플레이트
03.167	SPRING, DIAPHRAGM RETURN 스프링
06.708	BAFFLE, CONTROL COVER OIL 배플
90.259	NUT, ENGINE ROCKER ARM PIVOT SUPPORT FASTENER 너트
90.431	NUT, CRANKCASE HEAD FASTENER 너트
94.071	FASTENER, ROCKER ARM PIVOT SUPPORT 패스너
94.075	FASTENER, ROCKER ARM COVER HOLE COVER 패스너

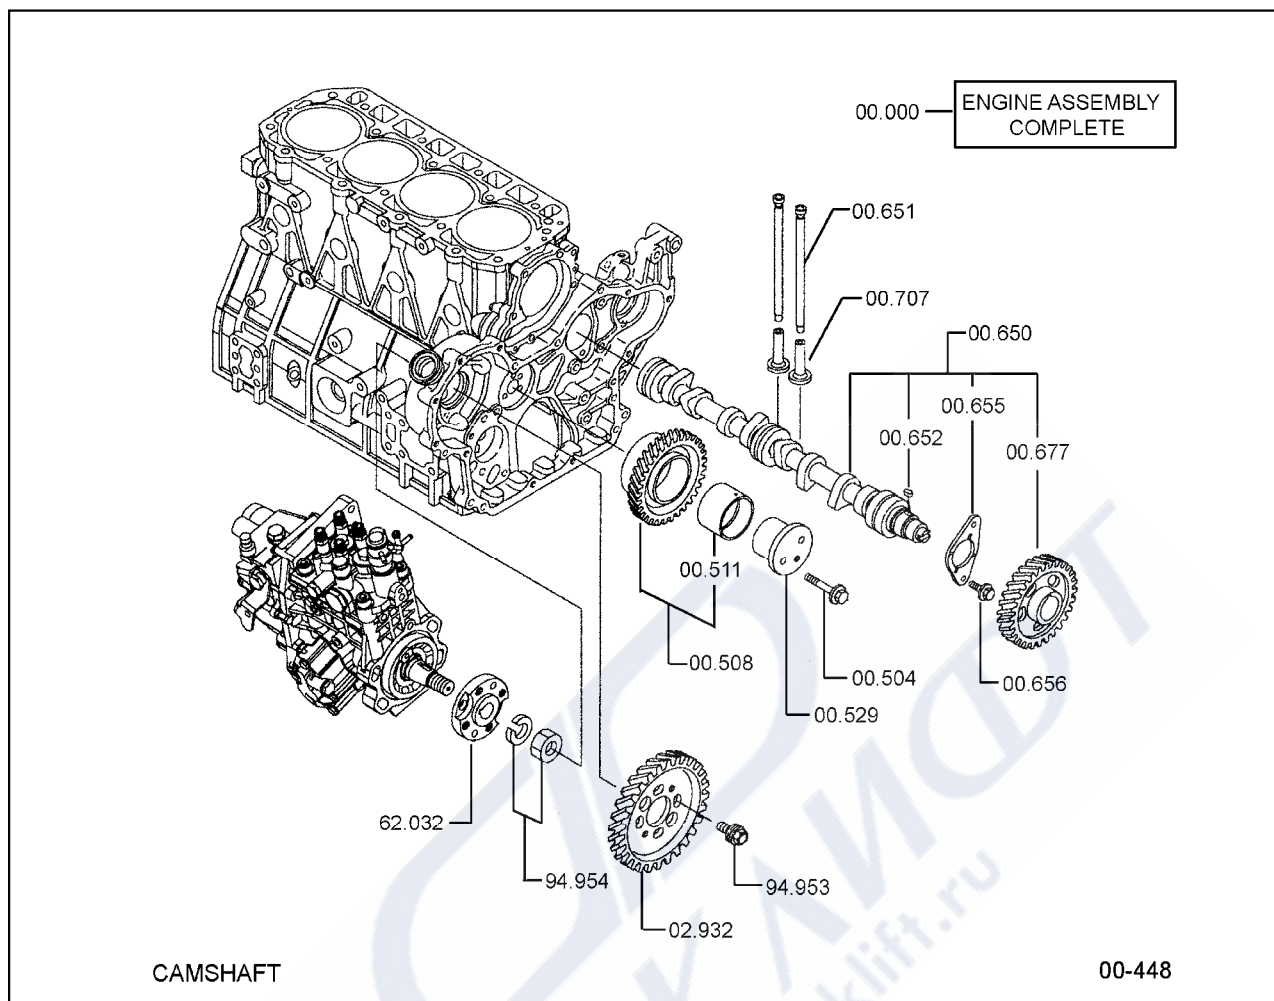 

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.504	FASTENER, UPPER IDLER GEAR SPINDLE 패스너
00.508	GEAR, ENGINE LOWER IDLER 기어
00.511	BEARING, IDLER GEAR SHAFT OUTER 베어링
00.529	SPINDLE, IDLER GEAR 스핀들
00.650	CAMSHAFT 캠샤프트
00.651	PUSH ROD, ENGINE ROCKET ARM 푸시로드
00.652	KEY, CAMSHAFT TIMING GEAR WOODRUFF 키
00.655	PLATE, CAMSHAFT THRUST 플레이트


00.656	FASTENER, CAMSHAFT THRUST PLATE 패스너
00.677	GEAR, CAMSHAFT TIMING 기어
00.707	LIFTER, ENGINE VALVE 리프터
02.932	GEAR, FUEL INJECTION PUMP DRIVE 기어
62.032	FLANGE, FUEL INJECTION PUMP DRIVE 플랜지
94.953	FASTENER, FUEL INJECTION PUMP ADAPTOR 패스너
94.954	FASTENER, FUEL INJECTION PUMP ADAPTOR 패스너



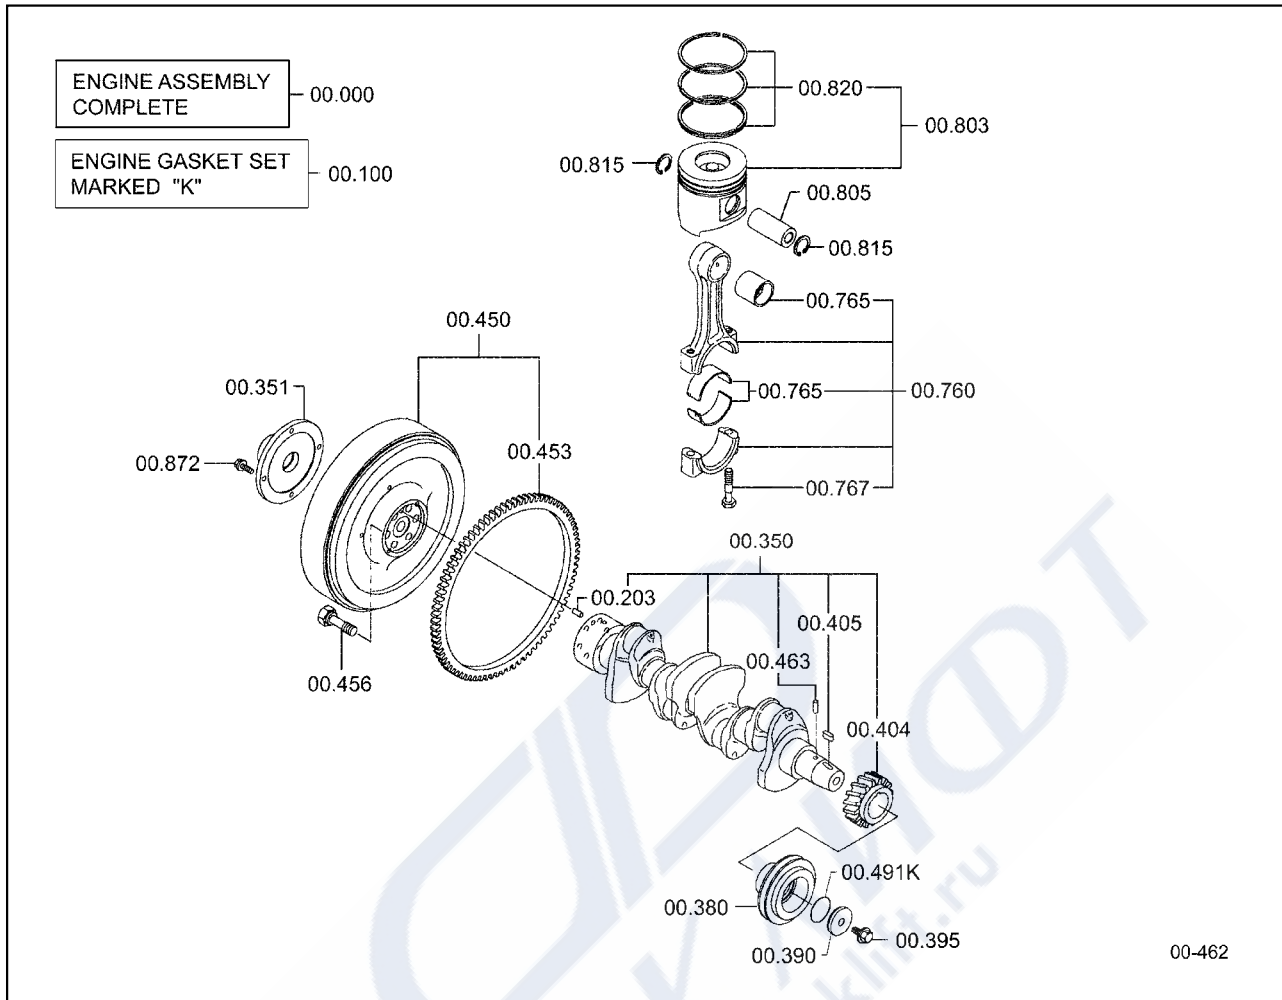 


00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.100	GASKET KIT, ENGINE OVERHAUL 가스켓키트
00.203	DOWEL, CRANKSHAFT BEARING CAP 다웰
00.350	CRANKSHAFT 크랭크샤프트
00.351	PLATE, FLYWHEEL REINFORCING 플레이트
00.380	PULLEY, CRANKSHAFT 풀리
00.390	WASHER, CRANKSHAFT PULLEY 와셔
00.395	FASTENER, CRANKSHAFT PULLEY 패스너
00.404	GEAR, CRANKSHAFT TIMING 기어

00.405	KEY, CRANKSHAFT TIMING GEAR 키
00.450	FLYWHEEL 플라이휠
00.453	GEAR, FLYWHEEL RING 기어
00.456	FASTENER, CRANKSHAFT TO FLYWHEEL 패스너
00.463	DOWEL, CRANKSHAFT 다월
00.491	SEAL, ENGINE FRONT GEAR COVER PLUG 씰
00.760	ROD ASSEMBLY, CONNECTING 로드
00.765	BEARING, CONNECTING ROD 베어링
00.767	FASTENER, CONNECTING ROD BEARING CAP 패스너
00.803	PISTON (ONE CYLINDER) 피스톤& 핀
00.805	PIN, PISTON 핀
00.815	RETAINER, PISTON PIN 리테이너
00.820	PISTON RING 피스톤링
00.872	FASTENER, FLYWHEEL HOUSING 패스너

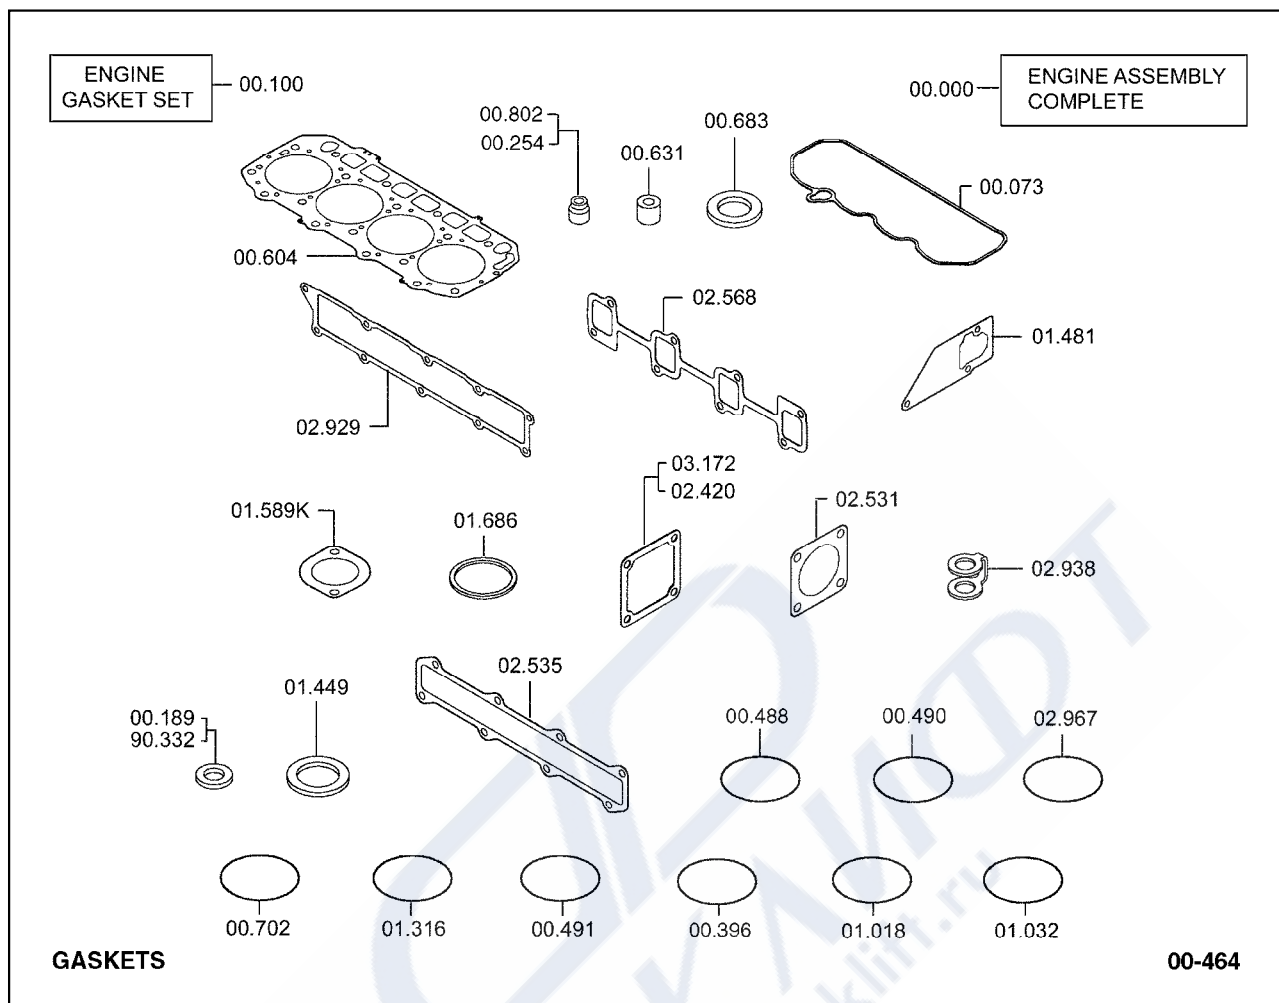 


00.000	PRODUCTION ENGINE ASSEMBLY 엔진	01.032	SEAL, ENGINE WATER PUMP DISCHARGE ELBOW 씰
00.073	GASKET, CRANKCASE HEAD END COVER 가스켓	01.316	SEAL, ENGINE OIL FILTER DRAIN COCK 씰
00.100	GASKET KIT, ENGINE OVERHAUL 가스켓키트	01.449	SEAL, ENGINE WATER PUMP 씰
00.189	SEAL, CRANKCASE OIL GALLEY PLUG 씰	01.481	GASKET, ENGINE WATER PUMP BODY 가스켓
00.254	SEAL, CYLINDER HEADCOVER FASTENER 씰	01.589	GASKET, WATER OUTLET ELBOW 가스켓
00.396	SEAL, ENGINE FRONT GEAR COVER GASKET 씰	01.686	GASKET, ENGINE THERMOSTAT 가스켓
00.488	SEAL, ENGINE FRONT GEAR COVER PLUG 씰	02.420	GASKET, ENGINE AIR INTAKE ADAPTOR 가스켓
00.490	SEAL, ENGINE FRONT GEAR COVER PLUG 씰	02.531	GASKET, EXHAUST SYSTEM VENTURI OUTLET 가스켓
00.491	SEAL, ENGINE FRONT GEAR COVER PLUG 씰	02.535	GASKET, EXHAUST SYSTEM VENTURI INLET 가스켓
00.604	GASKET, CRANKCASE HEAD 가스켓	02.568	GASKET, INTAKE TO EXHAUST MANIFOLD 가스켓
00.631	FASTENER, CRANKCASE HEAD 패스너	02.929	GASKET, INTAKE MANIFOLD 가스켓
00.683	SEAT, EXHAUST VALVE INSERT 시트	02.938	SEAL, INJECTOR LEAK OFF LINE 씰
00.702	SEAL, ROCKER ARM COVER FASTENER 씰	02.967	SEAL, FUEL FILTER DRAIN PLUG 씰
00.802	SEAL, CYLINDER SLEEVE 씰	03.172	GASKET, COLD START RESERVOIR COVER 가스켓
01.018	SEAL, OIL LEVEL DIPSTICK ADAPTOR 씰	90.332	WASHER, CRANKCASE OIL PAN FASTENER 와셔

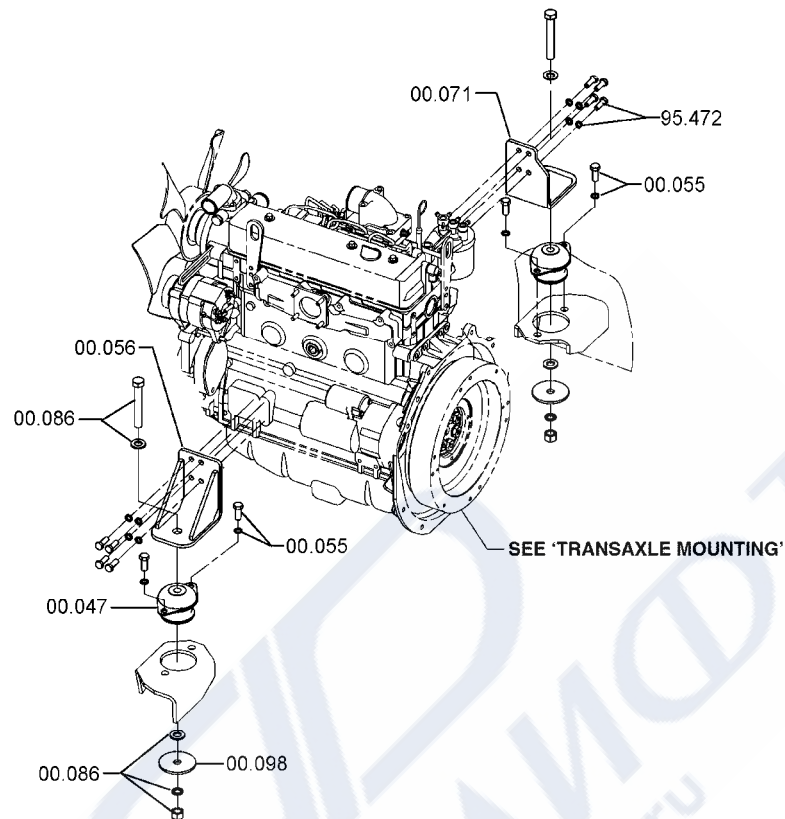 

ENGINE MOUNTING


00-515


00.047	DAMPENER, ENGINE FRONT VIBRATION 댐프너
00.055	FASTENER, ENGINE FRONT VIBRATION DAMPENER 패스너
00.056	MOUNT, ENGINE RH 마운트
00.071	MOUNT, ENGINE LH 마운트
00.086	FASTENER, RH ENGINE MOUNT 패스너
00.098	WASHER, ENGINE MOUNTING TO FRAME RH 와셔
95.472	FASTENER, ENGINE MOUNT 패스너

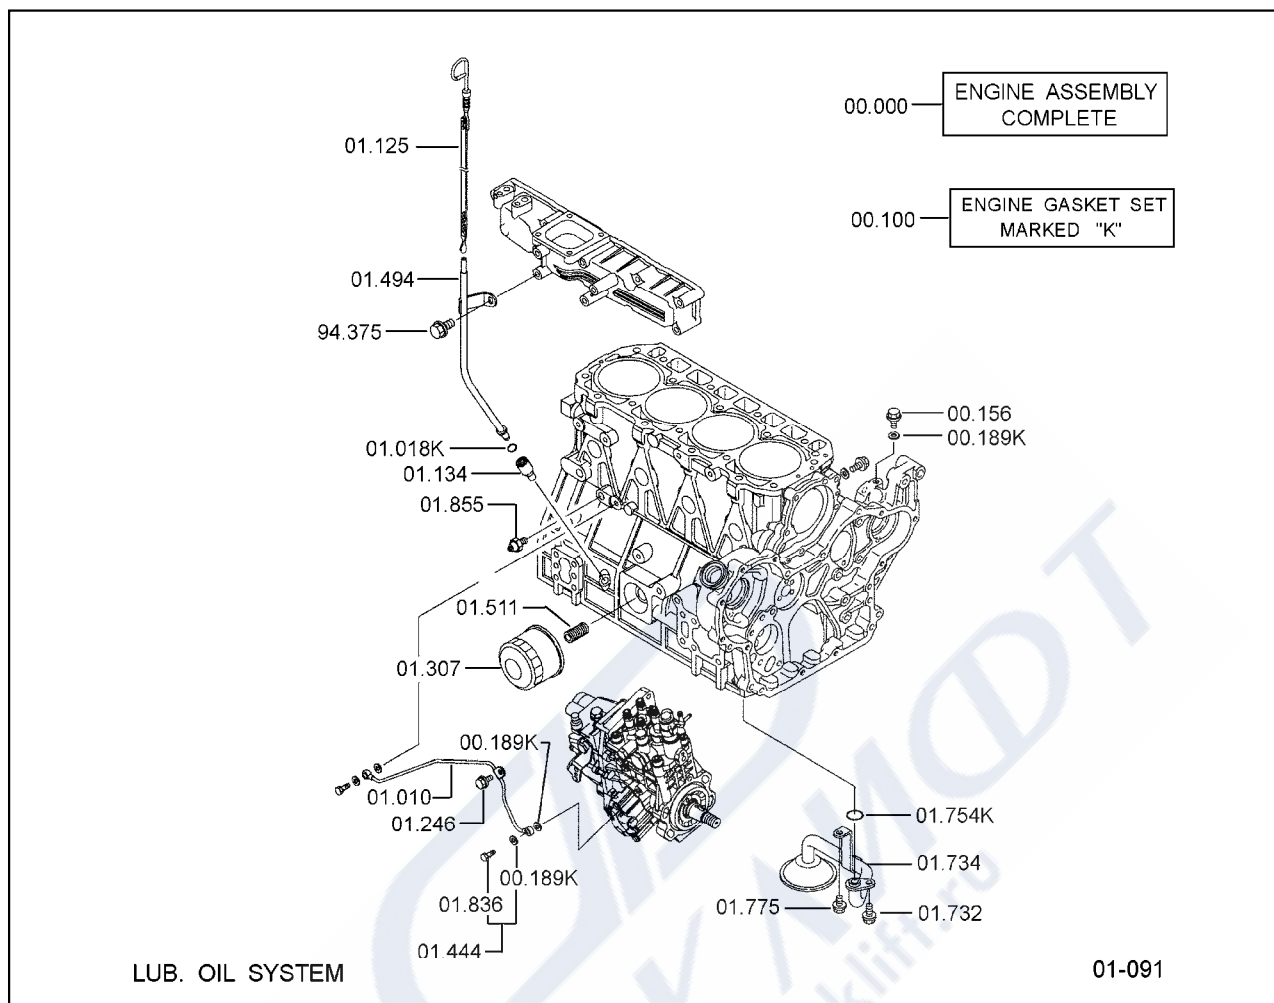 

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.100	GASKET KIT, ENGINE OVERHAUL 가스켓키트
00.156	PLUG, CRANKCASE OIL GALLEY 플러그
00.189	SEAL, CRANKCASE OIL GALLEY PLUG 씰
01.010	LINE, ENGINE OIL 라인
01.018	SEAL, OIL LEVEL DIPSTICK ADAPTOR 씰
01.125	DIPSTICK, CRANKCASE OIL LEVEL 딤스틱
01.134	ADAPTOR, CRANKCASE OIL LEVEL DIPSTICK 어댑터
01.246	FASTENER, ENGINE OIL LINE 패스너

01.307	CARTRIDGE & GASKET, ENGINE OIL FILTER 카트리지와 가스켓
01.444	FASTENER, PUMP TO CRANKCASE (THICK FLANGE) 패스너
01.494	TUBE, OIL LEVEL DIPSTICK ADAPTOR 튜브
01.511	ADAPTOR, ENGINE OIL FILTER 어댑터
01.732	FASTENER, OIL PUMP STRAINER TUBE 패스너
01.734	LINE, OIL PUMP STRAINER 라인
01.754	SEAL, OIL PUMP OUTLET TUBE FITTING 씰
01.775	BOLT, OIL PUMP STRAINER BRACKET 볼트
01.836	BOLT, ENGINE OIL BY-PASS FILTER OUTLET LINES 볼트
01.855	SENSOR, OIL PRESSURE 센서
94.375	FASTENER, CRANKCASE OIL LEVEL DIPSTICK ADAPTOR BRA 패스너

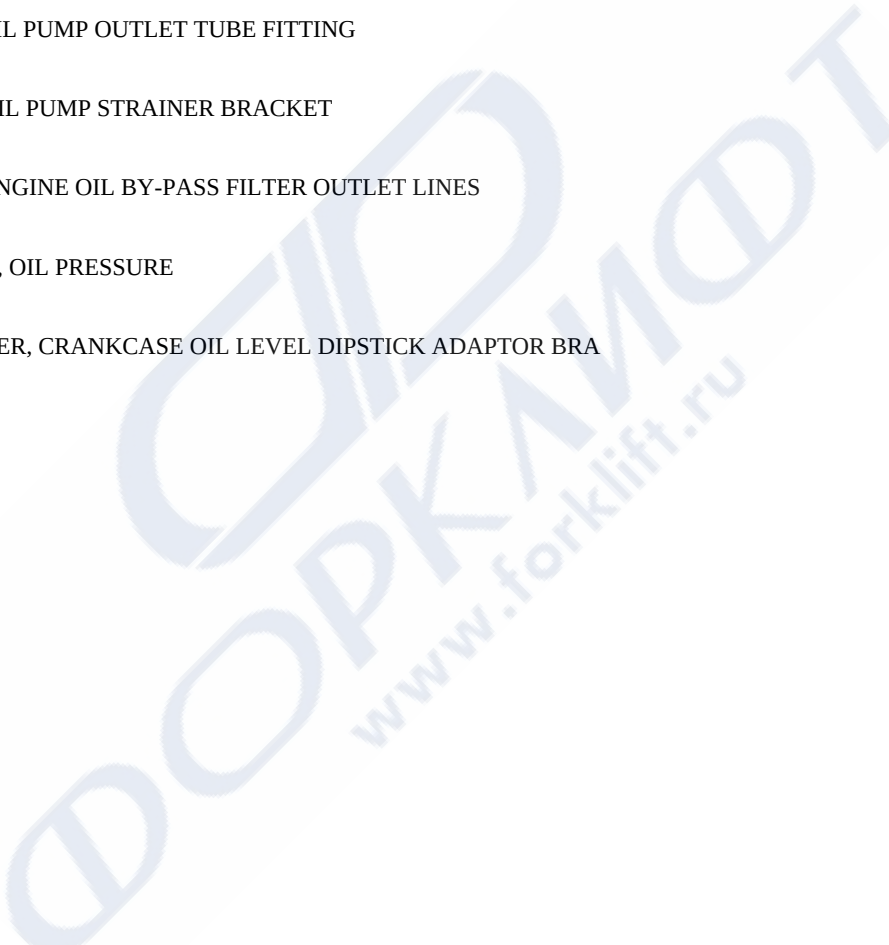 


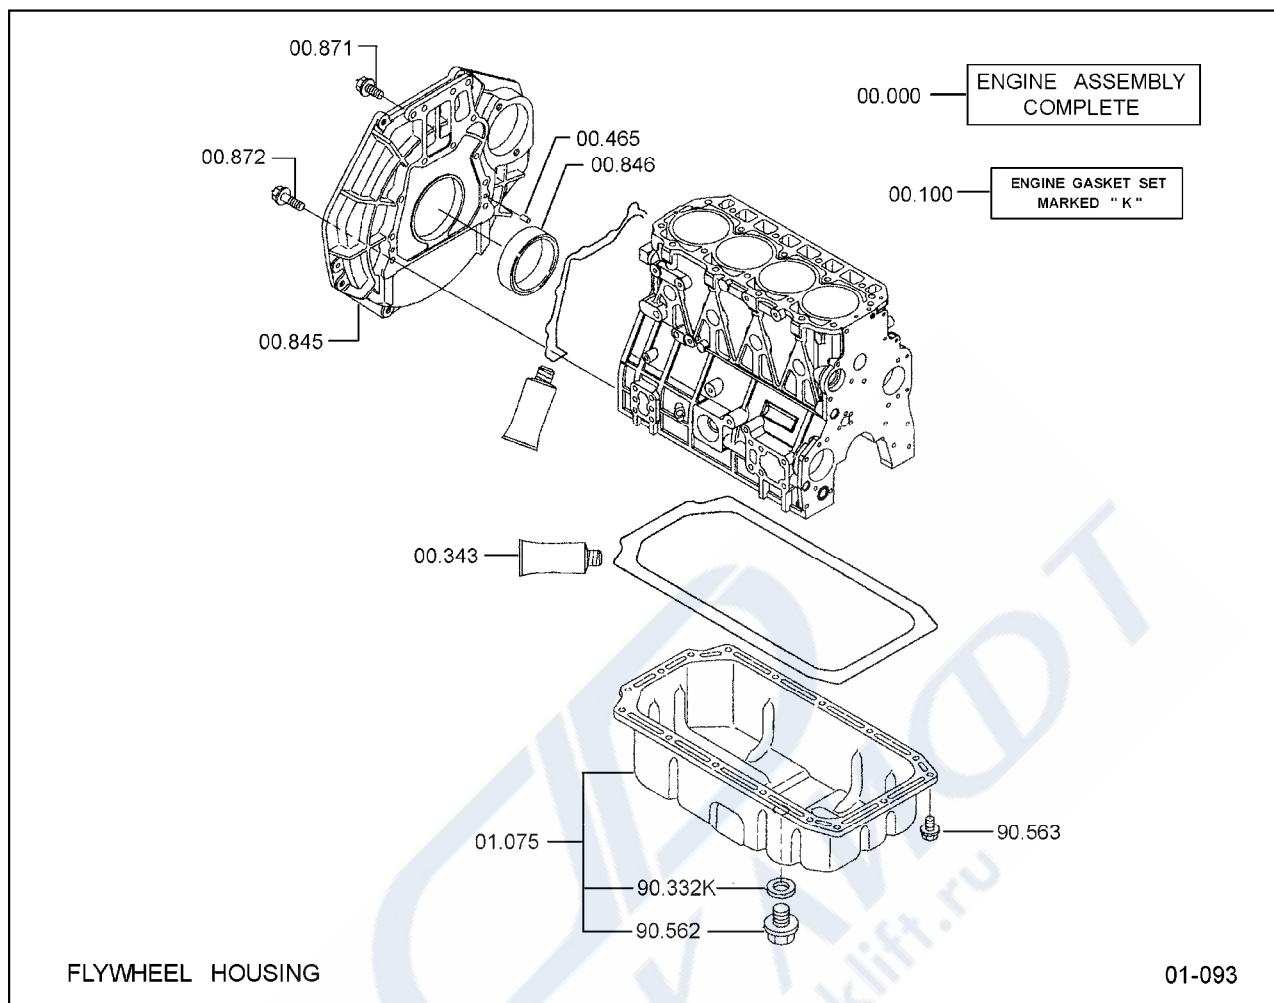 

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.100	GASKET KIT, ENGINE OVERHAUL 가스켓키트
00.343	GASKET, LIQUID 가스켓
00.465	DOWEL, FLYWHEEL 다월
00.845	HOUSING, FLYWHEEL 하우징
00.846	SEAL, FLYWHEEL HOUSING 씰
00.871	FASTENER, FLYWHEEL HOUSING 패스너
00.872	FASTENER, FLYWHEEL HOUSING 패스너
01.075	PAN, CRANKCASE OIL 팬

90.332	WASHER, CRANKCASE OIL PAN FASTENER 와셔
90.562	BOLT, CRANKCASE OIL PAN 볼트
90.563	BOLT, CRANKCASE OIL PAN 볼트




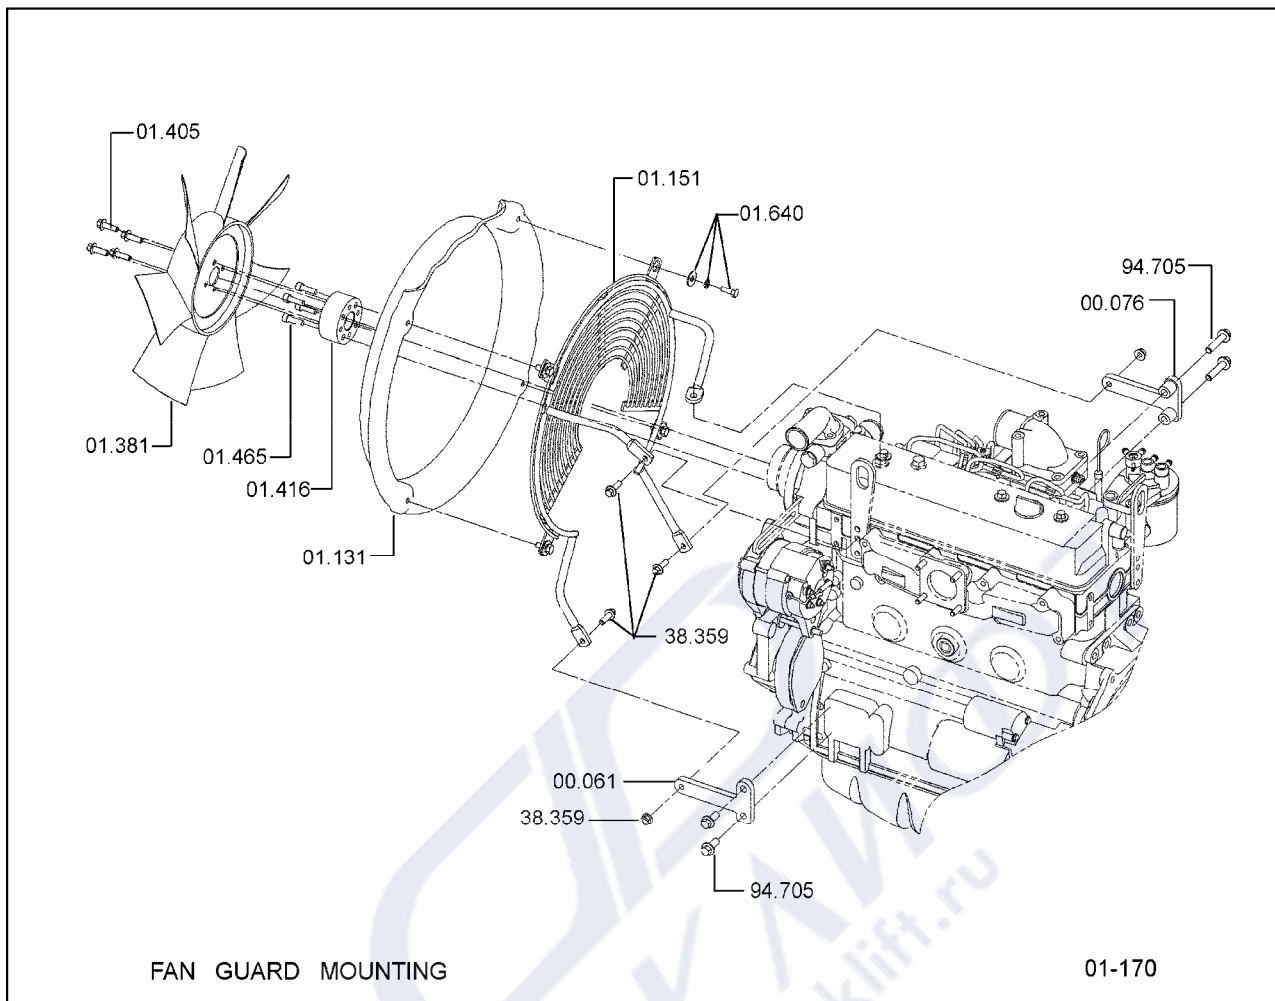 

00.061	BRACKET, ENGINE MOUNTING 브라켓
00.076	BRACKET, ENGINE MOUNTING 브라켓
01.131	RING, FAN BLADE 링
01.151	GUARD, RADIATOR FAN 가드
01.381	BLADE, FAN 블레이드
01.405	FASTENER, FAN BLADE 패스너
01.416	SPACER, FAN BLADE 스페이서
01.465	FASTENER, FAN BLADE SPACER 패스너
01.640	FASTENER, RADIATOR SHROUD EXTENTION 패스너

38.359	FASTENER, RADIATOR GUARD 패스너
94.705	FASTENER, ENGINE MOUNTING BRACKET 패스너




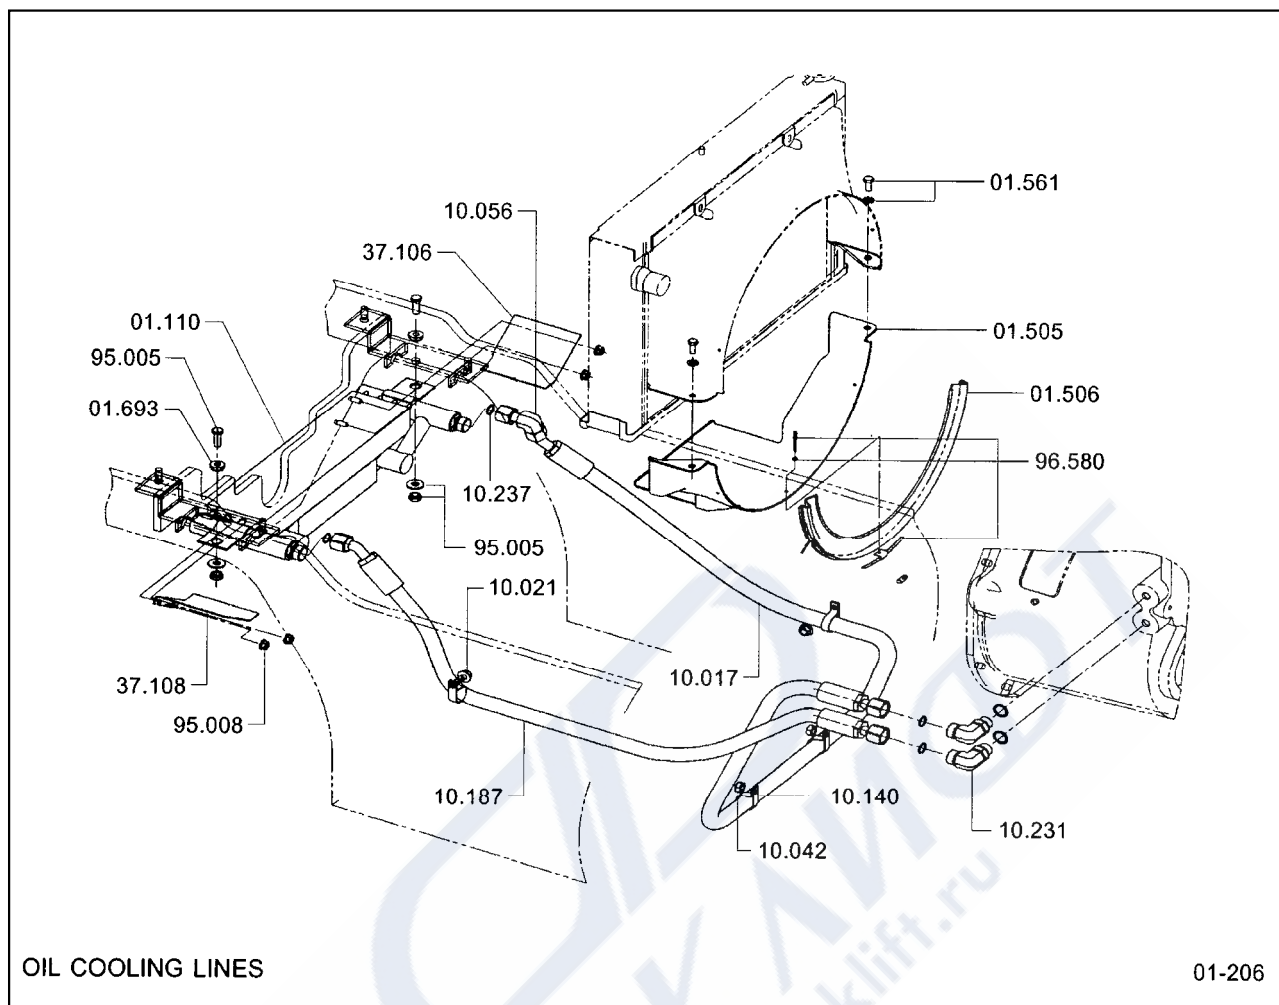 

01.110	OIL COOLER 오일쿨러
01.505	SHROUD, RADIATOR (LOWER) 슈라우드
01.506	SEAL, RADIATOR AND SHROUD 씰
01.561	FASTENER, RADIATOR MOUNTING 패스너
01.693	DAMPENER, RADIATOR VIBRATION 댐프너
10.017	LINE, COOLER OUTLET 라인
10.021	FASTENER, COOLER OUTLET LINE CLAMP 패스너
10.042	FASTENER, COOLER INLET LINE CLAMP 패스너
10.056	FITTING, COOLER OUTLET 피팅


10.140	CLAMP, COOLER LINE 클램프
10.187	LINE, TRANSMISSION COOLER INLET 라인
10.231	FITTING, OIL COOLING LINES 피팅
10.237	SEAL, OIL COOLER LINE FITTING 씰
37.106	SHIELD, LH REAR 실트
37.108	SHIELD, RH REAR 실트
95.005	FASTENER, OIL COOLER 패스너
95.008	NUT, OIL COOLER FASTENER 너트
96.580	FASTENER, RADIATOR SEAL 패스너



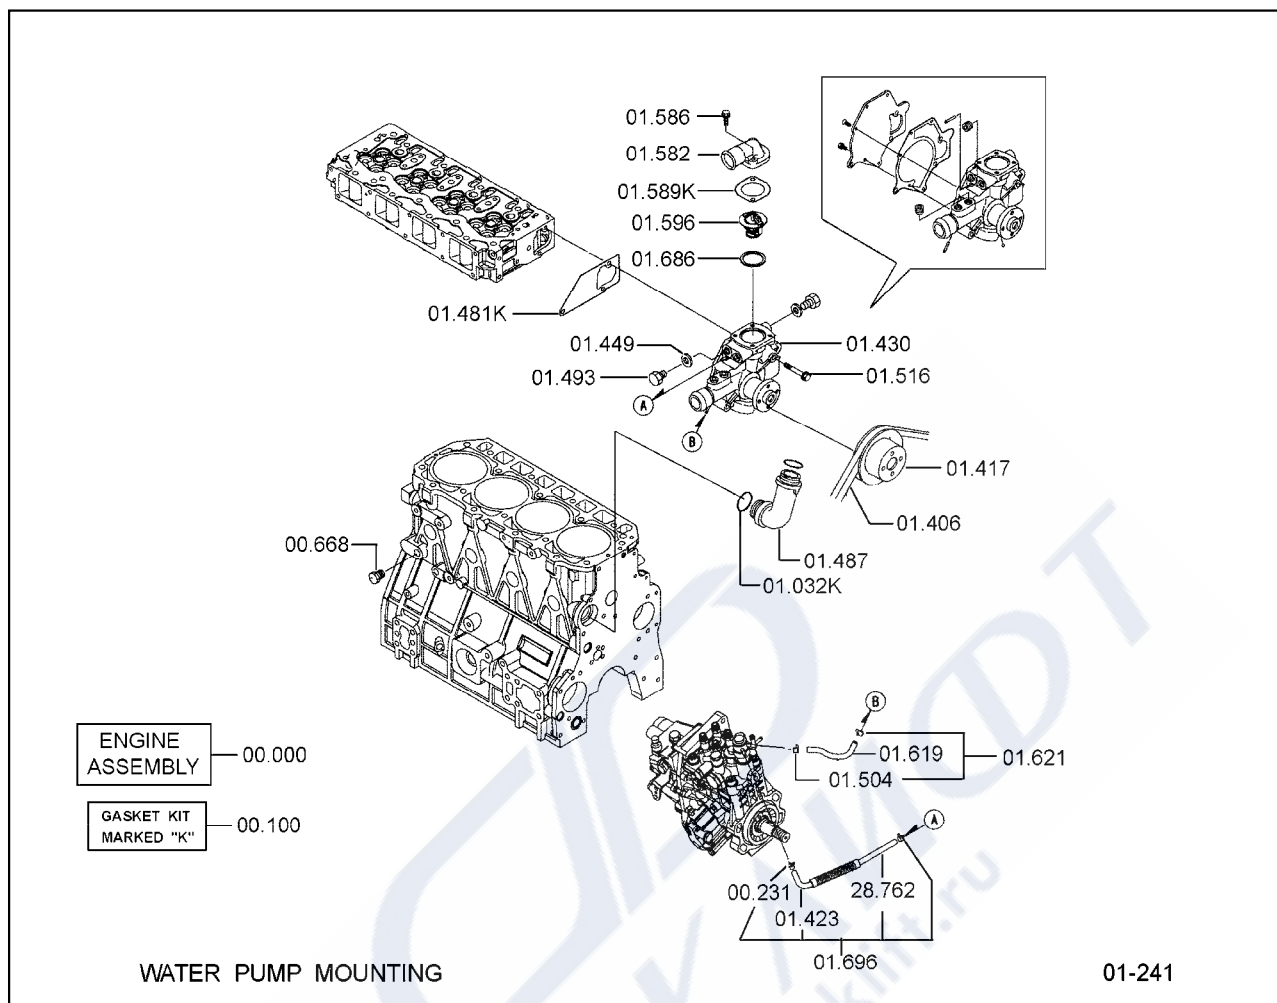 

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.100	GASKET KIT, ENGINE OVERHAUL 가스켓키트
00.231	CLAMP, WATER PUMP BLEEDER HOSE 클램프
00.668	PLUG, CRANKCASE WATER 플러그
01.032	SEAL, ENGINE WATER PUMP DISCHARGE ELBOW 셀
01.406	BELT, FAN 벨트
01.417	PULLEY, FAN 폴리
01.423	LINE, PUMP DRIVE LUBRICATING 라인
01.430	PUMP ASSEMBLY, ENGINE WATER 펌프

01.449	SEAL, ENGINE WATER PUMP 씰
01.481	GASKET, ENGINE WATER PUMP BODY 가스켓
01.487	HOSE, ENGINE WATER PUMP DISCHARGE 호스
01.493	ADAPTOR, OIL LEVEL DIPSTICK 어댑터
01.504	PIPE, ENGINE WATER PUMP INLET 파이프
01.516	FASTENER, ENGINE WATER PUMP DISCHARGE FLANGE 패스너
01.582	ELBOW, WATER OUTLET 엘보우
01.586	FASTENER, WATER OUTLET ELBOW - FANSIDE 패스너
01.589	GASKET, WATER OUTLET ELBOW 가스켓
01.596	THERMOSTAT, ENGINE 서모스탯
01.619	LINE, WATER PUMP BLEEDER 라인
01.621	CLAMP, WATER PUMP BLEEDER LINE 클램프
01.686	GASKET, ENGINE THERMOSTAT 가스켓
01.696	LINE, WATER PUMP BLEEDER 라인
28.762	PROTECTOR, HYDRAULIC LINE 보호장치

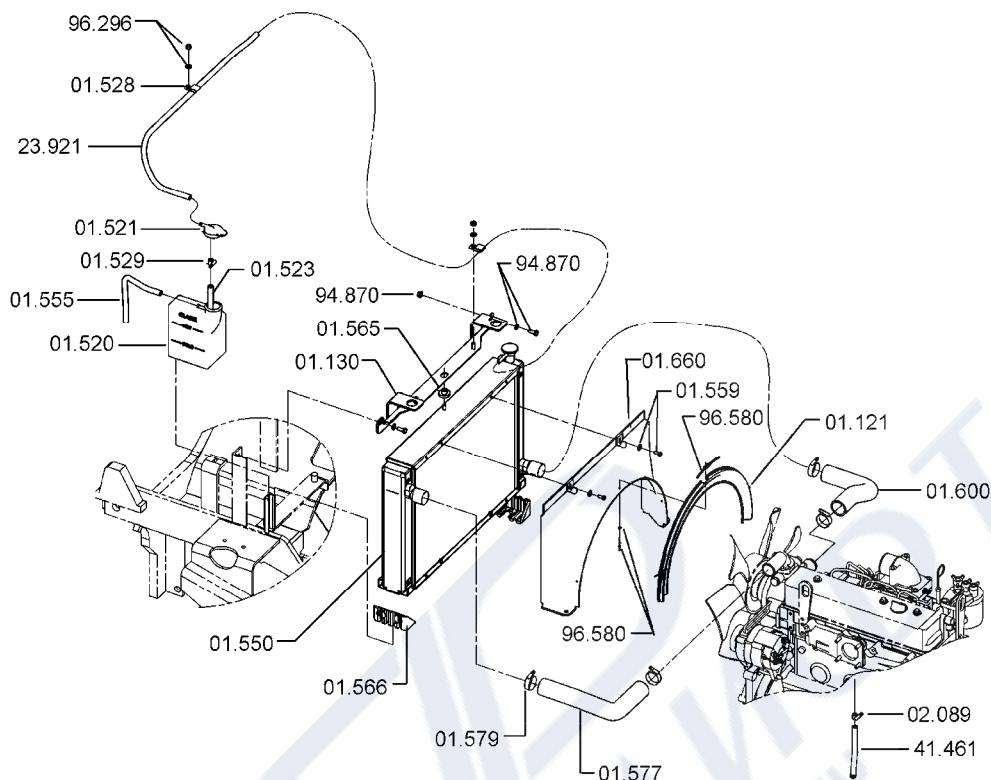 



COOLING SYSTEM

01-243

- | | |
|--------|--|
| 01.121 | SEAL, RADIATOR AND SHROUD
씰 |
| 01.130 | BRACKET, RADIATOR
브라켓 |
| 01.520 | COMPENSATION TANK, COOLING SYSTEM
보상기 |
| 01.521 | COVER, COMPENSATION TANK
커버 |
| 01.523 | LINE, COOLING SYSTEM COMPENSATION TANK
라인 |
| 01.528 | CLIP, RADIATOR OVERFLOW LINE
클립 |
| 01.529 | CLAMP, RADIATOR OVERFLOW LINE
클램프 |
| 01.550 | RADIATOR
라디에이터 |
| 01.555 | LINE, RADIATOR OVERFLOW
라인 |


01.559	FASTENER, RADIATOR UPPER SUPPORT (RADIATOR END) 패스너
01.565	SPACER, RADIATOR MOUNTING 스페이서
01.566	PAD, RADIATOR MOUNTING 패드
01.577	HOSE, RADIATOR UPPER 호스
01.579	CLAMP, RADIATOR UPPER HOSE 클램프
01.600	HOSE, RADIATOR LOWER 호스
01.660	SHROUD, RADIATOR 슈라우드
02.089	CLAMP, CARBURETOR INLET LINE 클램프
41.461	TUBE, DRAIN 튜브
93.921	LOCKWASHER, ACCEL CONTROL CIRCUIT BOARD BRACKET FA 로크와셔
94.870	FASTENER, RADIATOR MOUNTING BRACKET 패스너
96.296	FASTENER, RADIATOR OVERFLOW LINE CLIP 패스너
96.580	FASTENER, RADIATOR SEAL 패스너

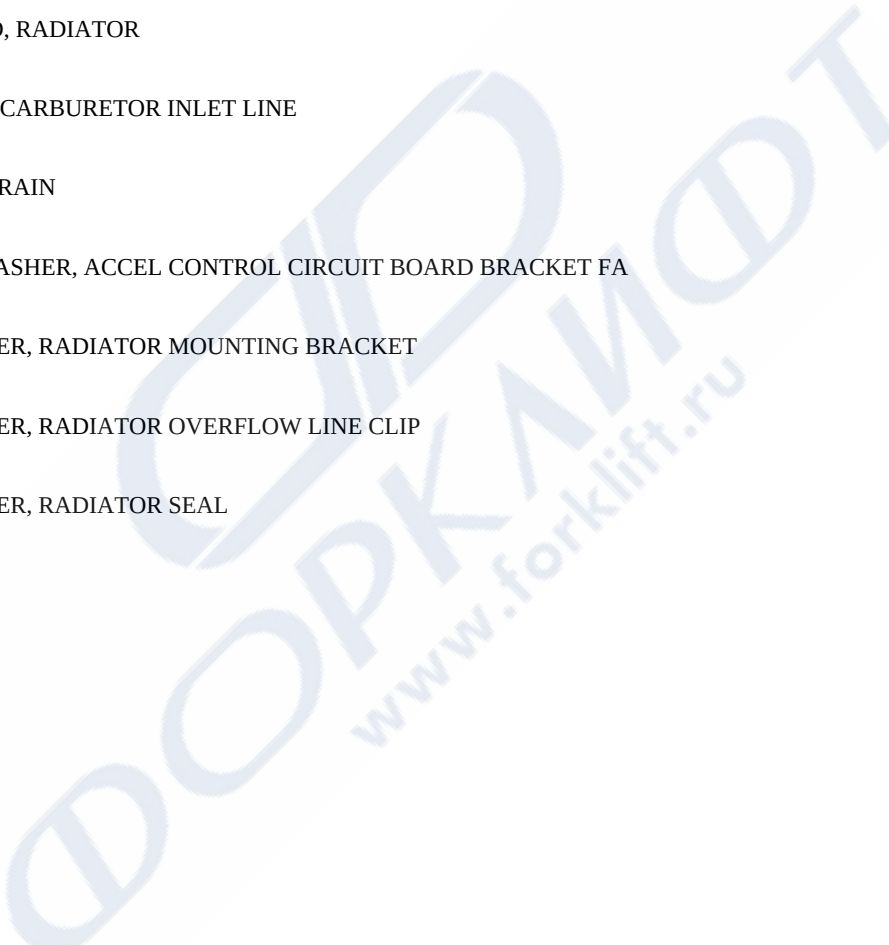 

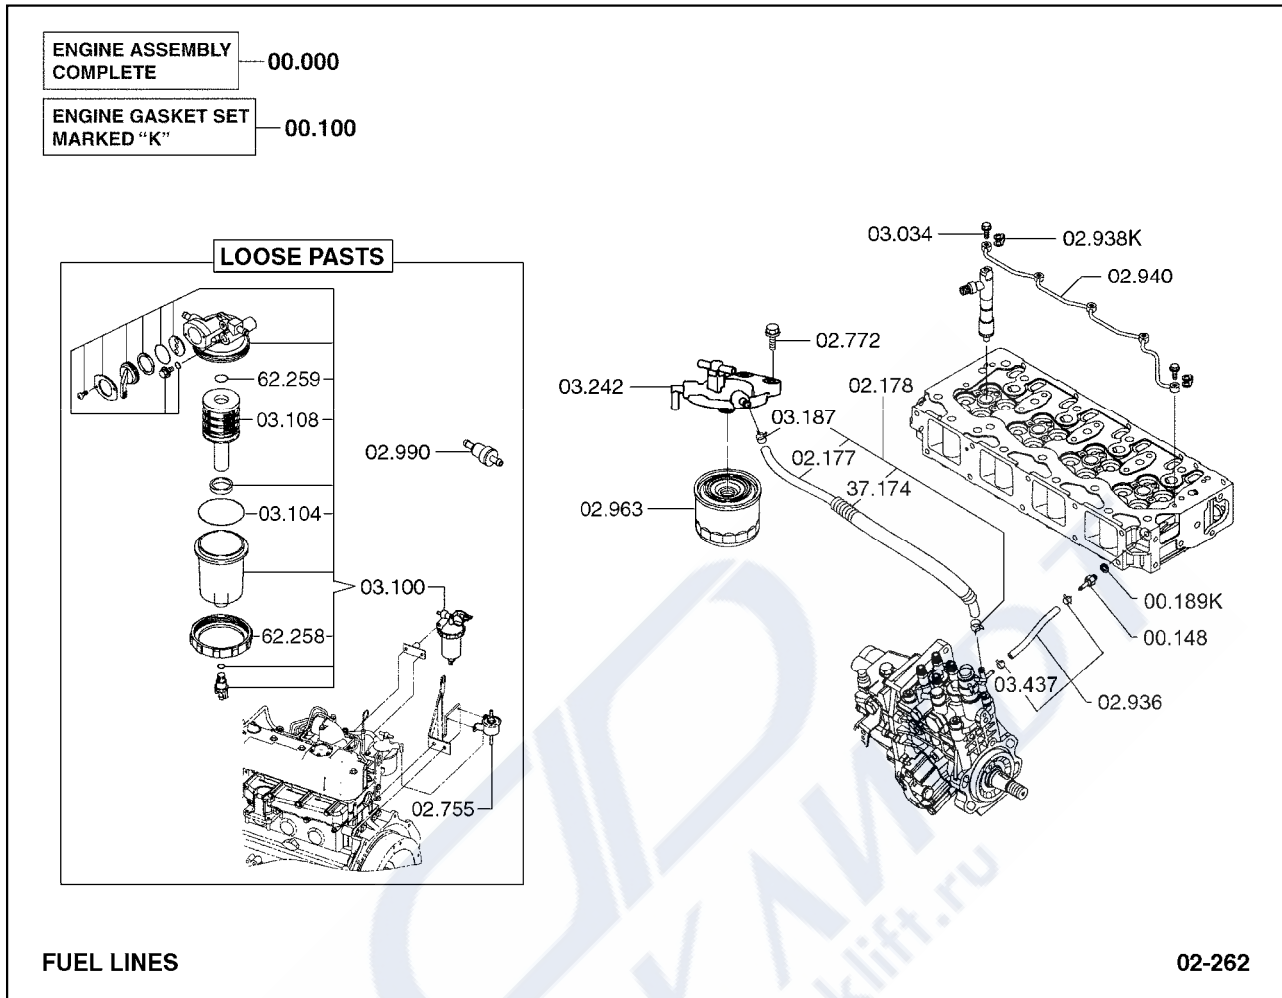 

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.100	GASKET KIT, ENGINE OVERHAUL 가스켓키트
00.148	FITTING, CRANKCASE VENT TUBE 피팅
00.189	SEAL, CRANKCASE OIL GALLEY PLUG 씰
02.177	LINE, FILTER INLET 라인
02.178	LINE, FILTER OUTLET 라인
02.755	PUMP, FUEL 펌프
02.772	FASTENER, FUEL FILTER COVER 패스너
02.936	LINE, INJECTION PUMP RETURN 라인


02.938	SEAL, INJECTOR LEAK OFF LINE 씰
02.940	LINE, INJECTOR LEAK OFF 라인
02.963	ELEMENT, FUEL FILTER 엘리먼트
02.990	VALVE, FUEL RETURN LINE CHECK 밸브
03.034	FITTING-BOLT, INJECTOR LEAK-OFF LINE 피팅
03.100	STRAINER ASSEMBLY, FUEL 스트레이너
03.104	SEAL, FUEL STRAINER BOWL FASTENER 씰
03.108	ELEMENT, FUEL STRAINER 엘리먼트
03.187	CLIP, FUEL LINE 클립
03.242	FITTING BODY, FUEL FILTER INLET 피팅
03.437	CLAMP, FUEL INJECTOR LINE 클램프
37.174	PROTECTOR, OIL SUMP BREATHER LINE 보호장치
62.258	RETAINER, FUEL STRAINER BOWL 리테이너
62.259	SEAL, FUEL STRAINER BOWL 씰

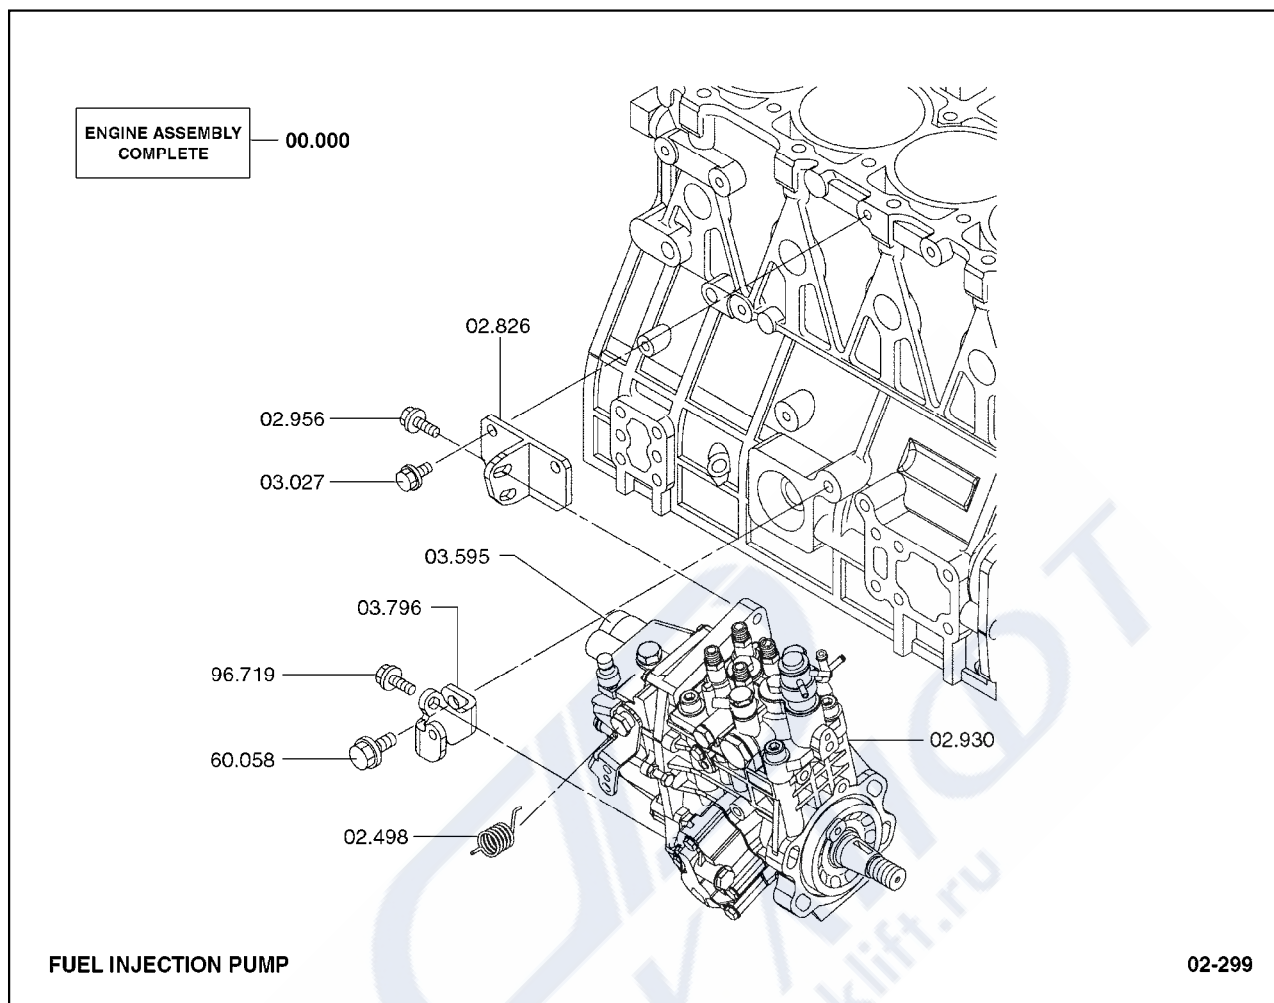 

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
02.498	SPRING, ACCELERATOR RETURN 스프링
02.826	BRACKET, FUEL LINE CLIP 브라켓
02.930	PUMP ASSEMBLY, FUEL INJECTION 펌프
02.956	FASTENER, FUEL INJECTION PUMP 패스너
03.027	FASTENER, FUEL INJECTION PUMP 패스너
03.595	SOLENOID VALVE, INJECTION PUMP COLD ADVANCE DEVICE 솔레노이드밸브
03.796	LEVER, INJECTION PUMP CONTROL 레버
60.058	SEAL, BOOM POSITIONING SWITCH SHAFT 셀

96.719 SCREW, LEVER STOP
스크류

 
ФОРКЛИФТ
www.forklift.ru

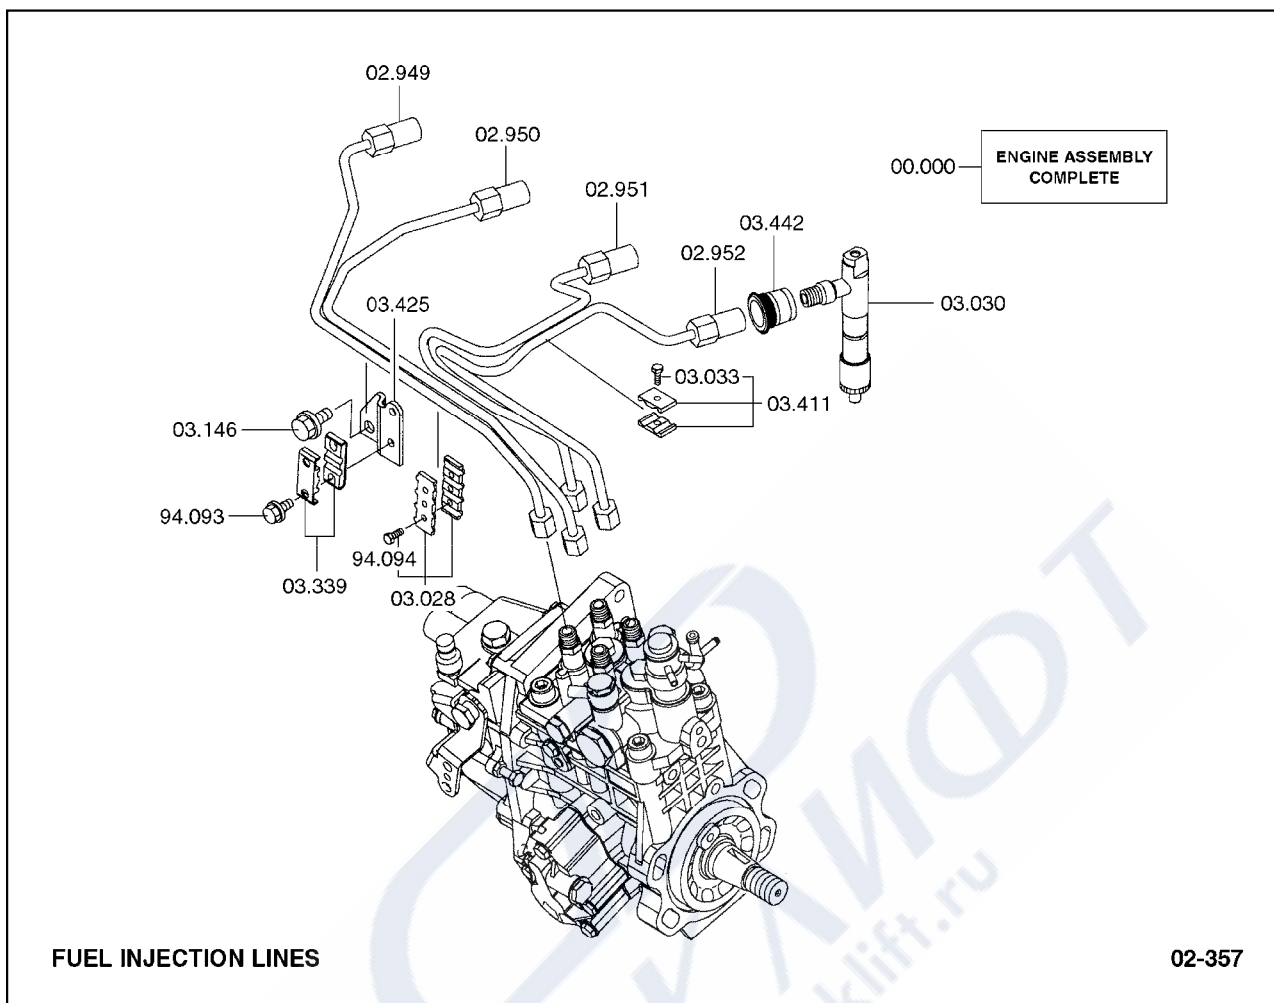

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
02.949	LINE, INJECTOR (NO 1 CYLINDER) 라인
02.950	LINE, INJECTOR (NO 2 CYLINDER) 라인
02.951	LINE, INJECTOR (NO 3 CYLINDER) 라인
02.952	LINE, INJECTOR (NO 4 CYLINDER) 라인
03.028	CLIP, INJECTOR LINE 클립
03.030	INJECTOR ASSEMBLY, FUEL 인젝터
03.033	FASTENER, FUEL INJECTOR 패스너
03.146	FASTENER, FUEL LINE CLIP BRACKET 패스너

03.339	CLIP, FUEL INJECTOR LINE 클립
03.411	CLIP, INJECTOR LINE 클립
03.425	SPACER, FUEL PUMP OUTLET LINE CLIP 스페이서
03.442	FITTING, INJECTOR LEAK-OFF LINE 피팅
94.093	FASTENER, FUEL LINE CLIP 패스너
94.094	FASTENER, FUEL LINE CLIP 패스너



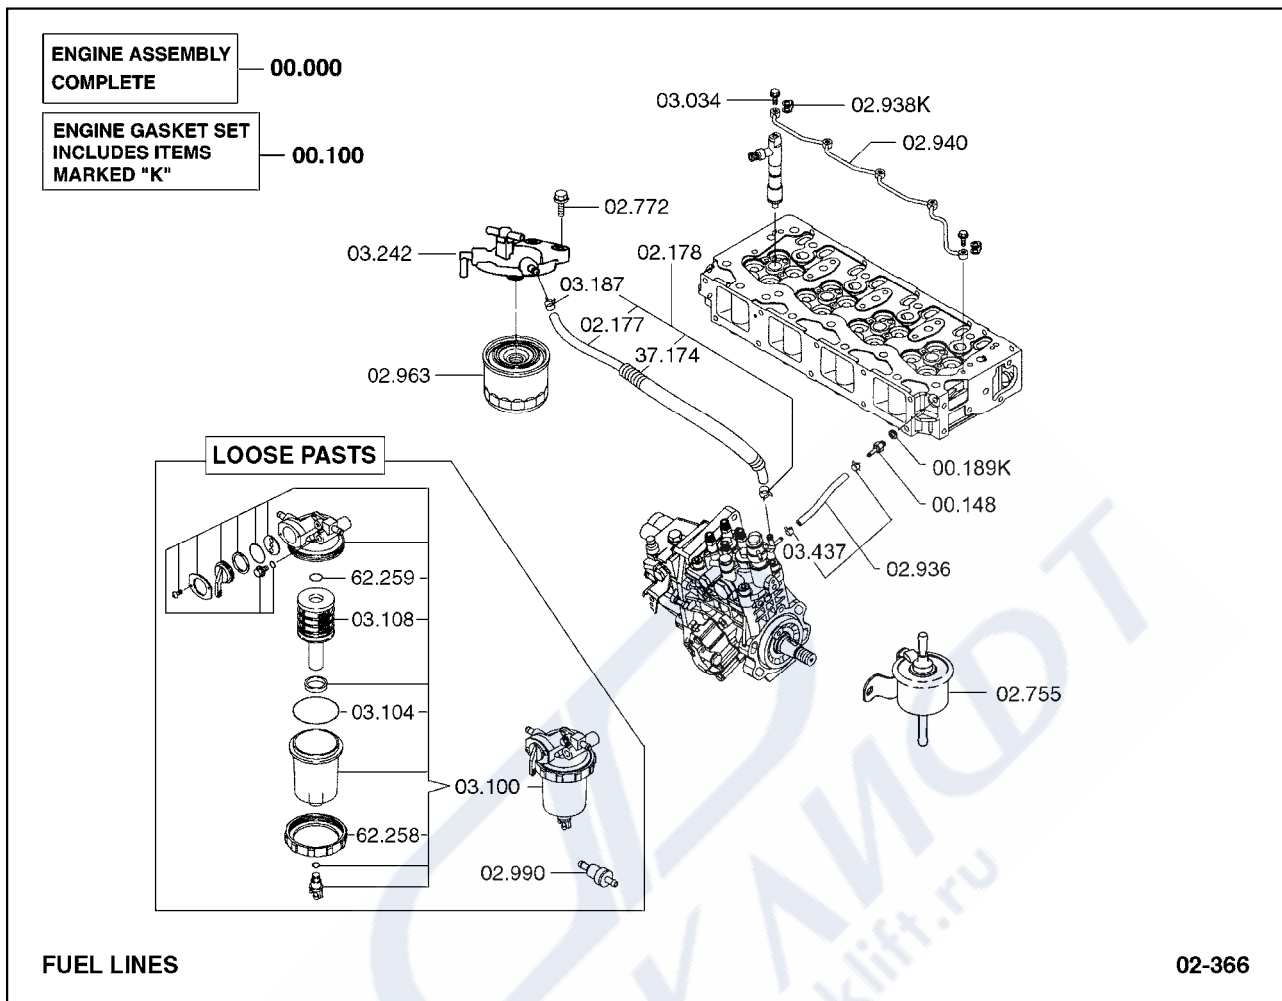 


FUEL LINES

02-366

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.100	GASKET KIT, ENGINE OVERHAUL 가스켓키트
00.148	FITTING, CRANKCASE VENT TUBE 피팅
00.189	SEAL, CRANKCASE OIL GALLEY PLUG 씰
02.177	LINE, FILTER INLET 라인
02.178	LINE, FILTER OUTLET 라인
02.755	PUMP, FUEL 펌프
02.772	FASTENER, FUEL FILTER COVER 패스너
02.936	LINE, INJECTION PUMP RETURN 라인

02.938	SEAL, INJECTOR LEAK OFF LINE 씰
02.940	LINE, INJECTOR LEAK OFF 라인
02.963	ELEMENT, FUEL FILTER 엘리먼트
02.990	VALVE, FUEL RETURN LINE CHECK 밸브
03.034	FITTING-BOLT, INJECTOR LEAK-OFF LINE 피팅
03.100	STRAINER ASSEMBLY, FUEL 스트레이너
03.104	SEAL, FUEL STRAINER BOWL FASTENER 씰
03.108	ELEMENT, FUEL STRAINER 엘리먼트
03.187	CLIP, FUEL LINE 클립
03.242	FITTING BODY, FUEL FILTER INLET 피팅
03.437	CLAMP, FUEL INJECTOR LINE 클램프
37.174	PROTECTOR, OIL SUMP BREATHER LINE 보호장치
62.258	RETAINER, FUEL STRAINER BOWL 리테이너
62.259	SEAL, FUEL STRAINER BOWL 씰

 
ASSEMBLY
COMPLETE — 02.225

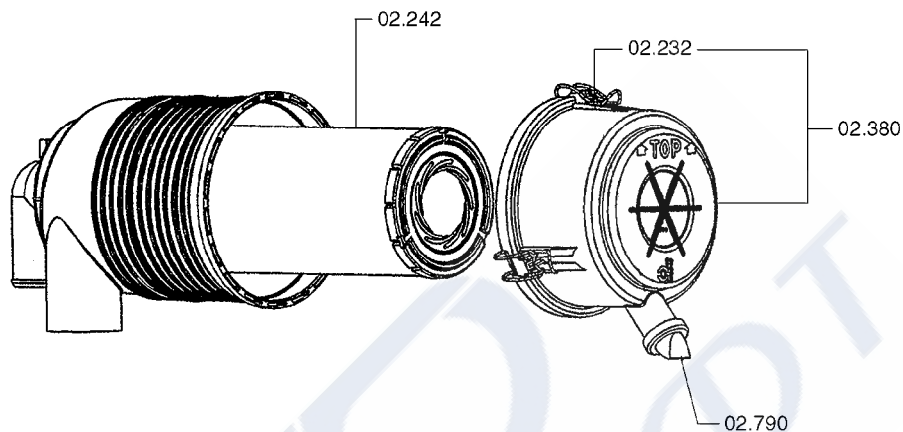

AIR CLEANER ASSEMBLY


02-474

02.225	CLEANER ASSEMBLY, ENGINE INTAKE AIR 에어클리너
02.232	CLAMP, INTAKE AIR CLEANER 클램프
02.242	ELEMENT & GASKET, ENGINE INTAKE AIR CLEANER 엘리먼트& 가스켓
02.380	CAP, FILTER 캡
02.790	VALVE, ENGINE INTAKE AIR CLEANER DUST UNLDR 밸브

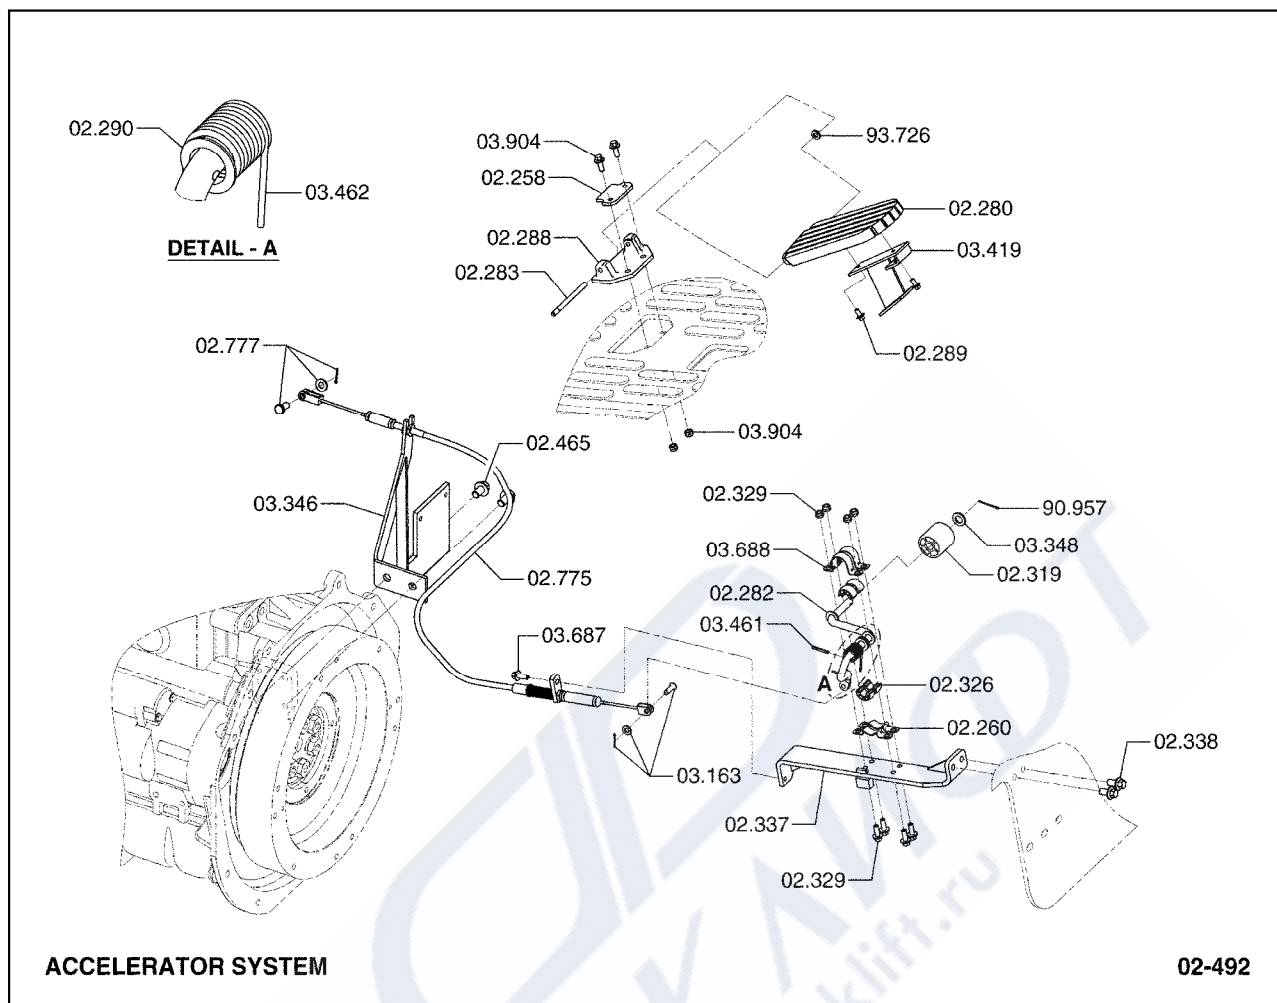 

02.258	STOP, ACCELERATOR PEDAL 스톱
02.260	BRACKET, ACCELERATOR LINKAGE MOUNTING 브라켓
02.280	PEDAL, ACCELERATOR 페달
02.282	ROD, ACCELERATOR PUSH 로드
02.283	PIN, ACCELERATOR PEDAL TO BRACKET PIVOT 핀
02.288	BRACKET, ACCELERATOR PEDAL ATTACHING 브라켓
02.289	FASTENER, ACCELERATOR PEDAL BRACKET ATTACHING 패스너
02.290	BUSHING, ACCELERATOR BELLCRANK 부싱
02.319	BUSHING, ACCELERATOR LINKAGE LEVER 부싱

02.326	BEARING, ACCELERATOR LEVER 베어링
02.329	FASTENER, ACCELERATOR PEDAL 패스너
02.337	BRACKET, ACCELERATOR LEVER MOUNTING 브라켓
02.338	FASTENER, ACCELERATOR LEVER MOUNTING BRACKET 패스너
02.465	FASTENER, ACCELERATOR CONTROL LINKAGE 패스너
02.775	CABLE, ACCELERATOR CONTROL 케이블
02.777	FASTENER, ACCELERATOR CONTROL CABLE 패스너
03.163	FASTENER, ACCELERATOR CONTROL ROD END 패스너
03.346	BRACKET, ACCELERATOR LINKAGE 브라켓
03.348	WASHER, ACCELERATOR LINKAGE RETURN LEVER FAST 와셔
03.419	WEAR PLATE, ACCELERATOR PEDAL ROLLER 웨어플레이트
03.461	PIN, ACCELERATOR CONTROL ROD END 핀
03.462	SPRING, ACCELERATOR PEDAL RETURN 스프링
03.687	FASTENER, ACC CONTROL CABLE BRACKET MTG 패스너
03.688	BRACKET, ACCELERATOR LEVER ATTACHING 브라켓
03.904	FASTENER, ACCELERATOR PEDAL ROLLER BRACKET 패스너
90.957	RETAINER, ACCELERATOR LINKAGE LEVER PIN 리테이너
93.726	WASHER, ACCELERATOR PEDAL PIVOT RETAINER 와셔

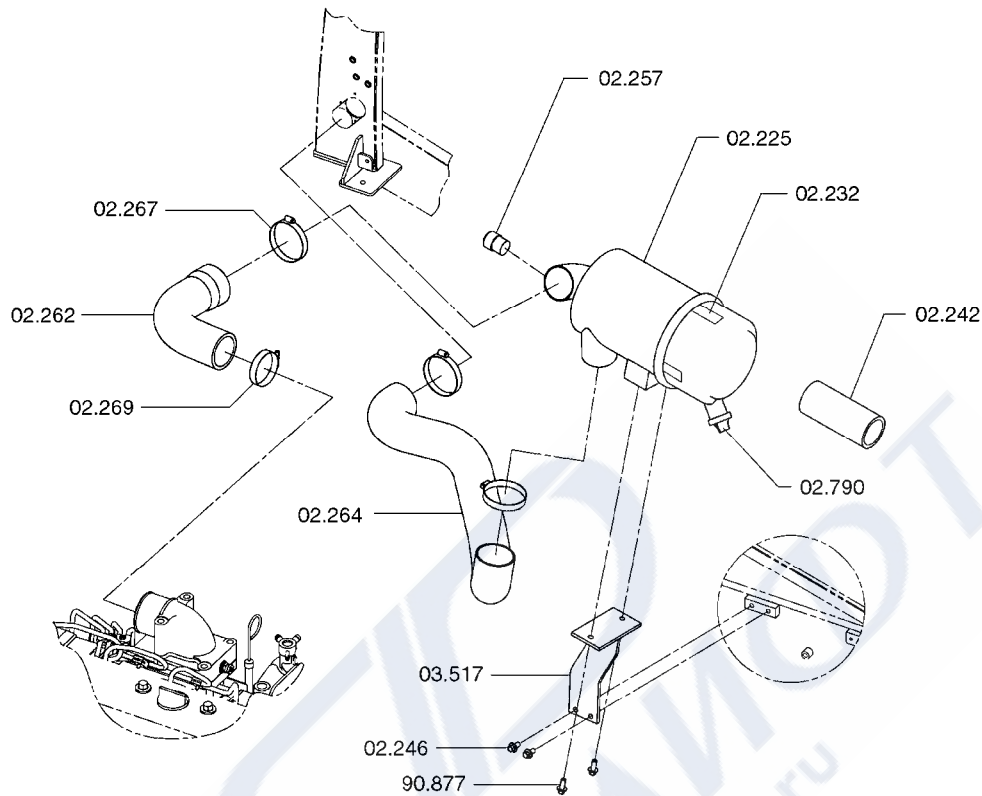 


INTAKE SYSTEM

03-161


- | | |
|--------|--|
| 02.225 | CLEANER ASSEMBLY, ENGINE INTAKE AIR
에어클리너 |
| 02.232 | CLAMP, INTAKE AIR CLEANER
클램프 |
| 02.242 | ELEMENT & GASKET, ENGINE INTAKE AIR CLEANER
엘리먼트& 가스켓 |
| 02.246 | FASTENER, ENGINE INTAKE AIR CLEANER ATTACHING
패스너 |
| 02.257 | INDICATOR, ENGINE INTAKE AIR CLEANER AIR RES
인디케이터 |
| 02.262 | HOSE, MAIN AIR CLEANER OUTLET
호스 |
| 02.264 | TUBE, MAIN AIR CLEANER OUTLET
튜브 |
| 02.267 | CLAMP, MAIN AIR CLEANER OUTLET HOSE
클램프 |
| 02.269 | CLAMP, MAIN AIR CLEANER OUTLET HOSE
클램프 |

02.790	VALVE, ENGINE INTAKE AIR CLEANER DUST UNLDR 밸브
03.517	BRACKET, AIR CLEANER MOUNTING 브라켓
90.877	NUT, ENGINE INTAKE AIR CLEANER BRACKET 너트



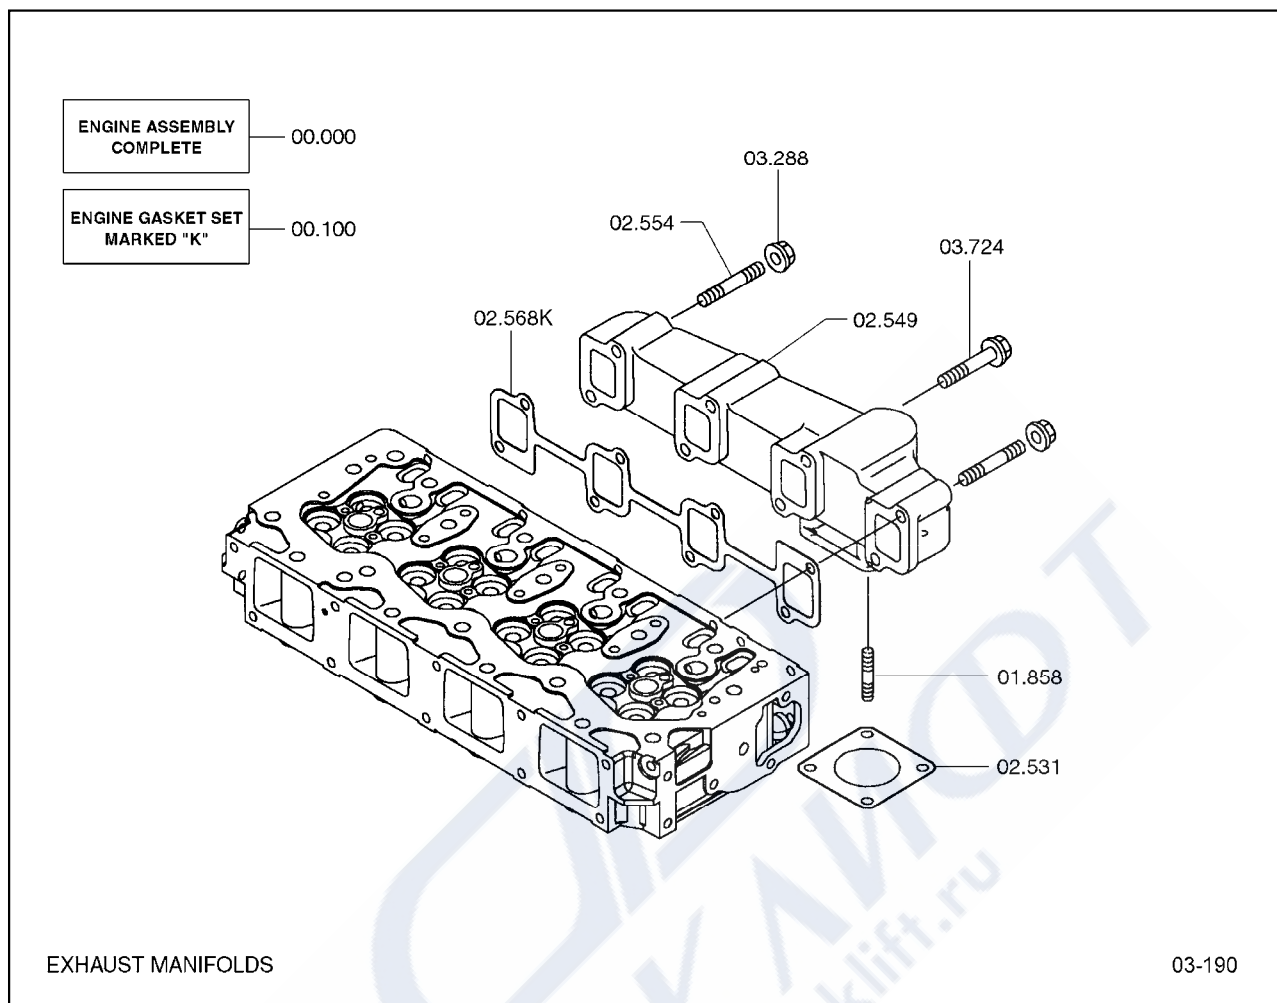 


00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.100	GASKET KIT, ENGINE OVERHAUL 가스켓키트
01.858	FASTENER, INTAKE MANIFOLD 패스너
02.531	GASKET, EXHAUST SYSTEM VENTURI OUTLET 가스켓
02.549	MANIFOLD, EXHAUST 매니폴드
02.554	FASTENER, MANIFOLD TO CRANKCASE 패스너
02.568	GASKET, INTAKE TO EXHAUST MANIFOLD 가스켓
03.288	NUT, EXHAUST MANIFOLD EXTENSION 너트
03.724	FASTENER, EXHAUST MANIFOLD 패스너

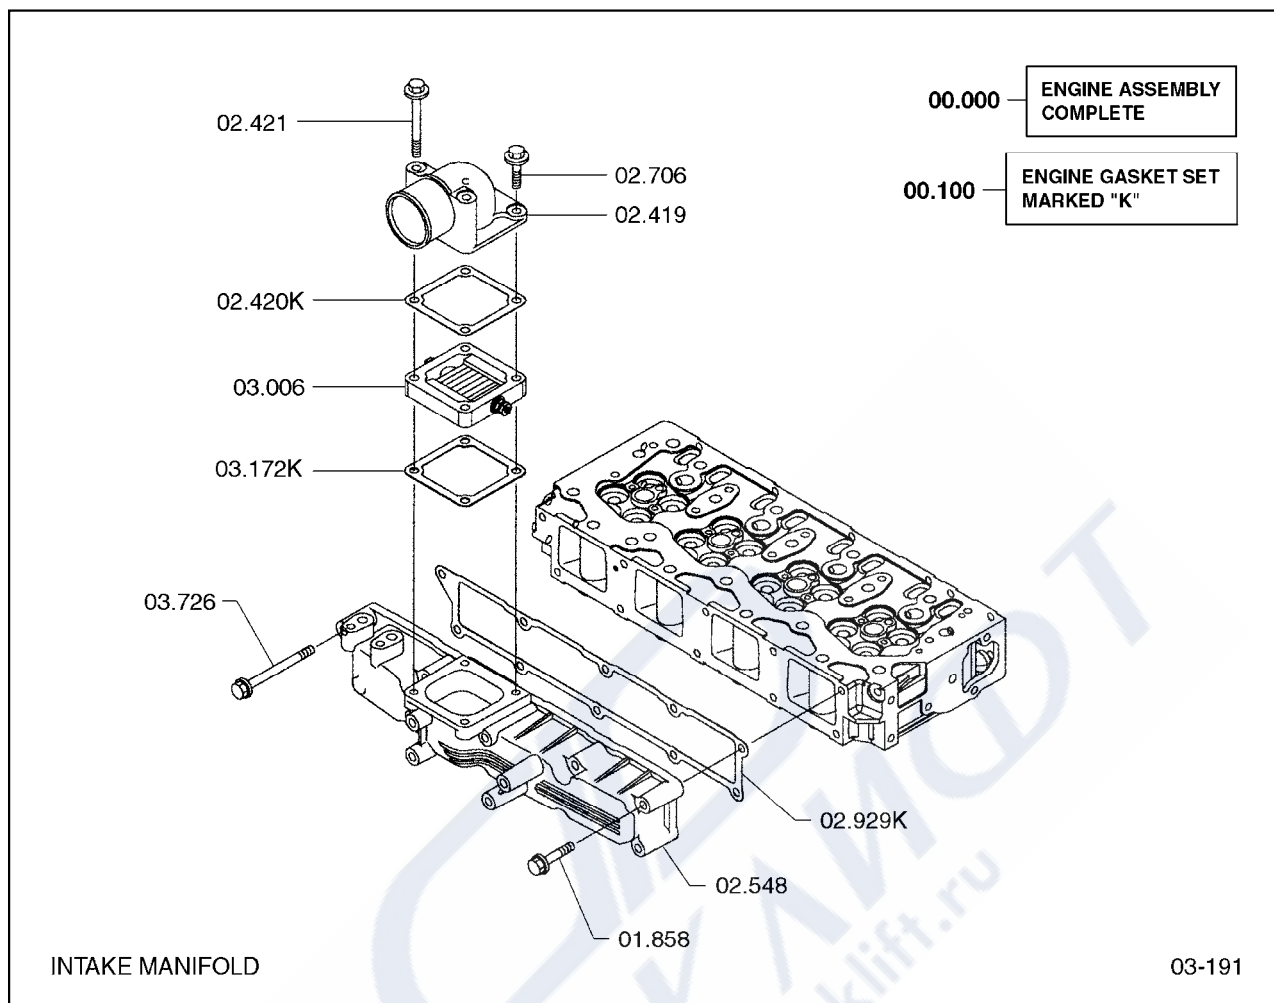 

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.100	GASKET KIT, ENGINE OVERHAUL 가스켓키트
01.858	FASTENER, INTAKE MANIFOLD 패스너
02.419	ADAPTOR, ENGINE AIR INTAKE 어댑터
02.420	GASKET, ENGINE AIR INTAKE ADAPTOR 가스켓
02.421	FASTENER, ENGINE AIR INTAKE ADAPTOR 패스너
02.548	MANIFOLD, INTAKE 매니폴드
02.706	FASTENER, AIR INTAKE ADAPTOR 패스너
02.929	GASKET, INTAKE MANIFOLD 가스켓

03.006	HEATER, COLD START 히터
03.172	GASKET, COLD START RESERVOIR COVER 가스켓
03.726	FASTENER, INTAKE MANIFOLD 패스너




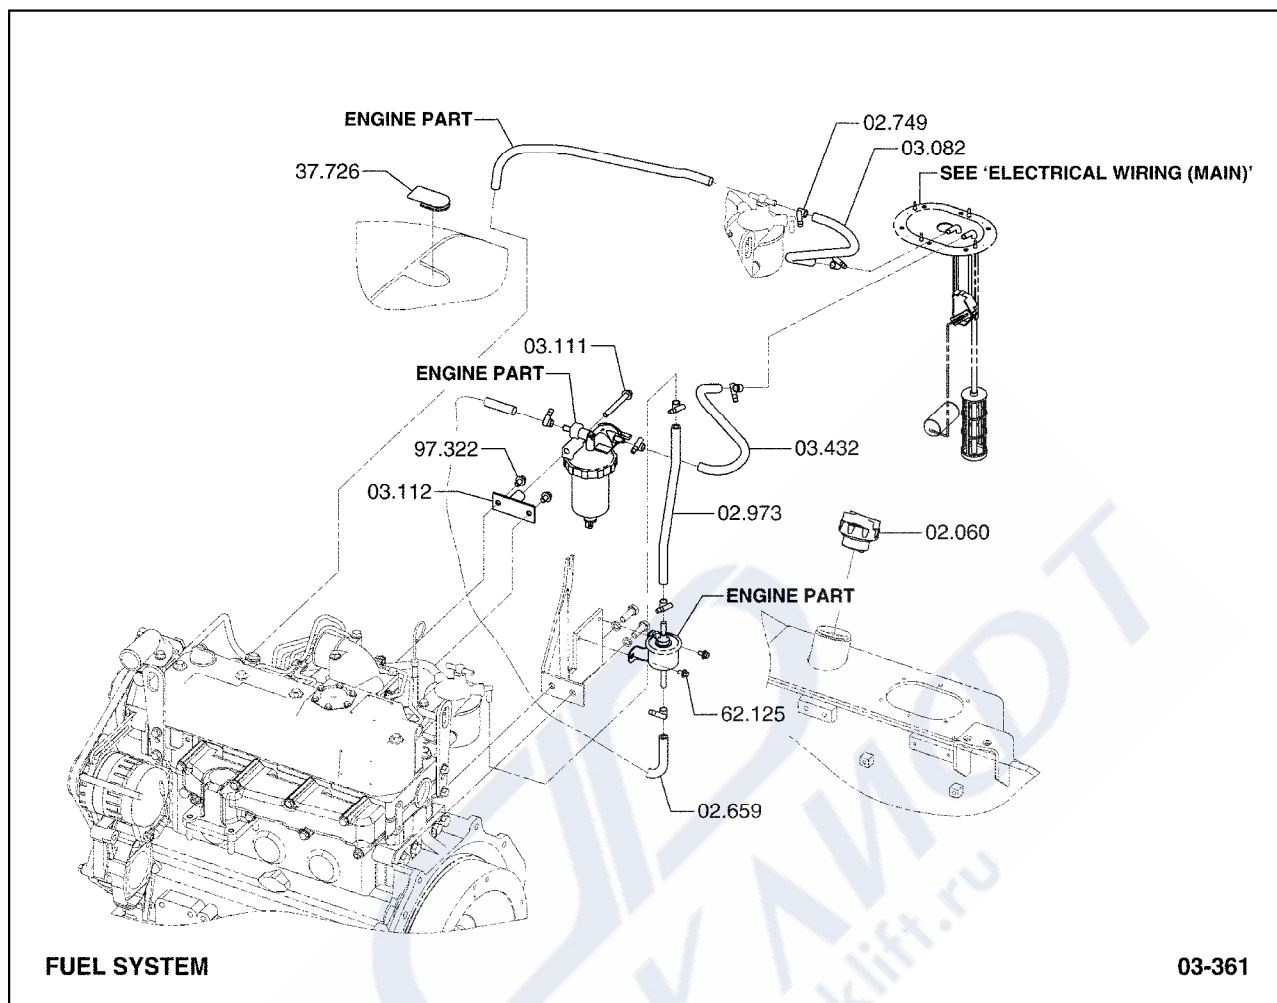 

02.060	CAP, FUEL TANK 캡
02.659	LINE, FUEL PUMP INLET 라인
02.749	CLAMP, TANK TO FUEL PUMP LINE 클램프
02.973	LINE, FUEL PUMP OUTLET 라인
03.082	LINE, FUEL TANK RETURN 라인
03.111	FASTENER, FUEL STRAINER 패스너
03.112	BRACKET, FUEL STRAINER MOUNTING 브라켓
03.432	LINE, FUEL STRAINER INLET 라인
37.726	PLUG, RADIATOR COVER HOLE 플러그


62.125	FASTENER, FUEL FEED PUMP 패스너
97.322	FASTENER, FUEL STRAINER MOUNTING BRACKET 패스너



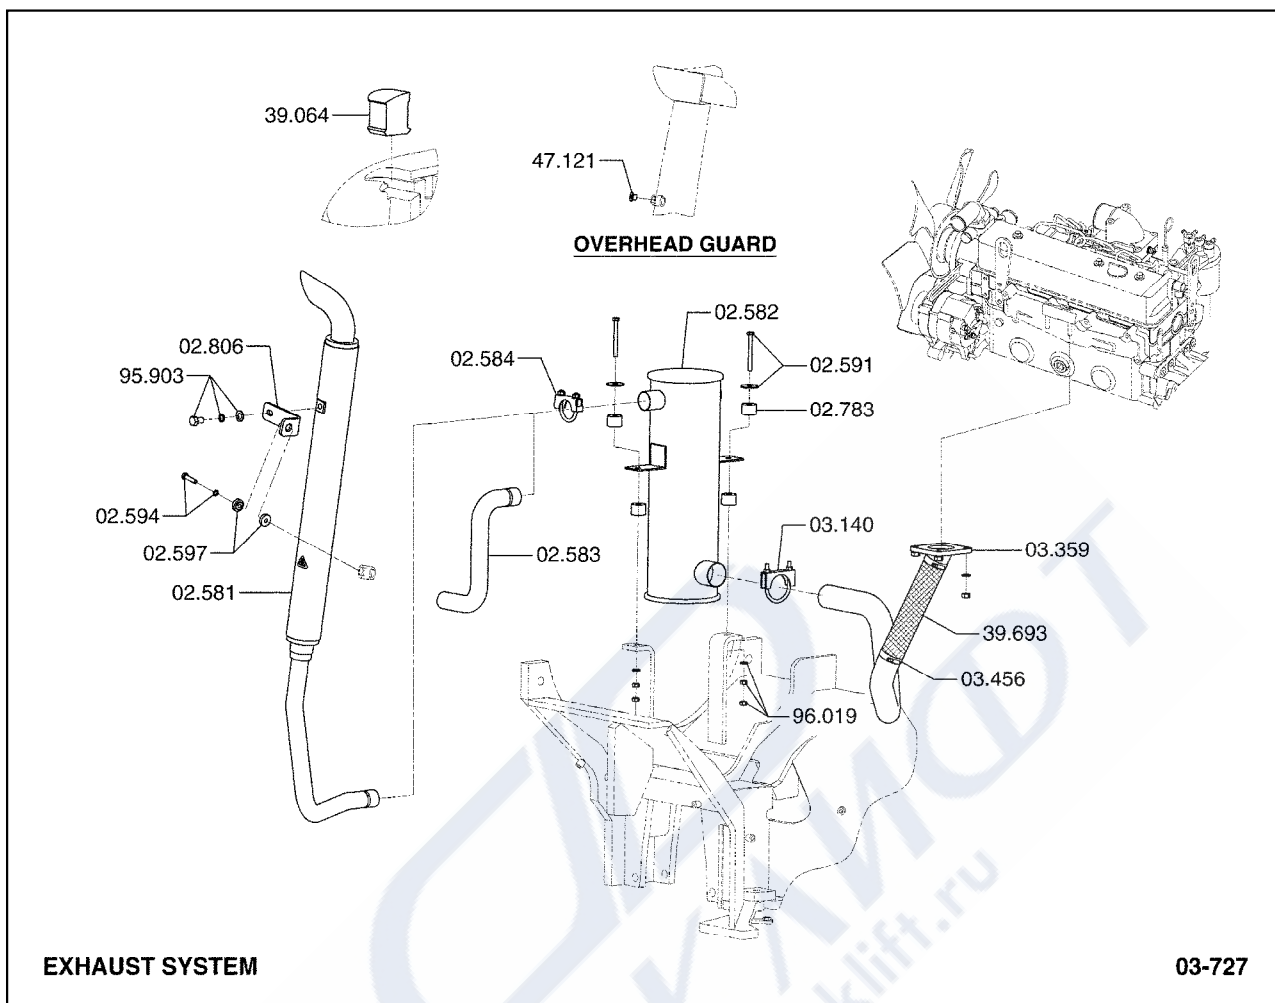 


02.581	EXTENSION, TAIL PIPE 익스텐션
02.582	MUFFLER 머플러
02.583	PIPE, TAIL 파이프
02.584	CLAMP, TAIL PIPE TO MUFFLER 클램프
02.591	FASTENER, MUFFLER MOUNTING 패스너
02.594	FASTENER, TAIL PIPE MOUNTING BRACKET 패스너
02.597	DAMPENER, TAIL PIPE VIBRATION 댐프너
02.783	DAMPENER, MUFFLER MOUNTING VIBRATION 댐프너
02.806	BRACKET, TAIL PIPE MOUNTING 브라켓

03.140	CLAMP, EXHAUST PIPE 클램프
03.359	PIPE, EXHAUST 파이프
03.456	CLAMP, EXHAUST PIPE HEAT SHIELD 클램프
39.064	COVER, COUNTERWEIGHT UPPER 커버
39.693	SHIELD, EXHAUST PIPE 실트
47.121	PLUG, OVERHEAD GUARD 플러그
95.903	FASTENER, EXHAUST PIPE BRACKET 패스너
96.019	FASTENER, EXHAUST PIPE BRACKET 패스너

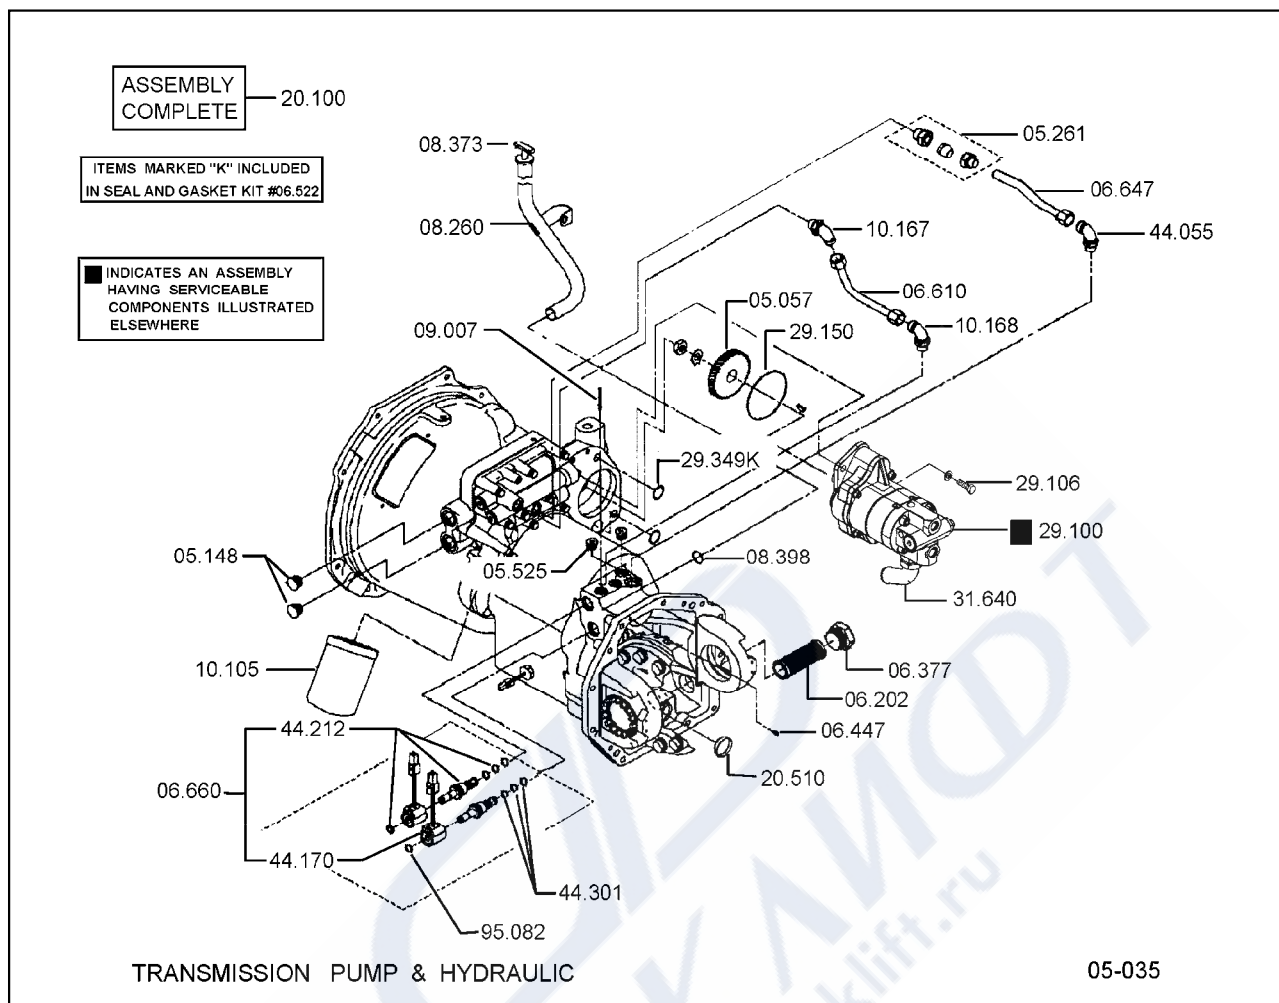 


05.057	GEAR, PUMP DRIVE 기어	10.167	FITTING, TRANSMISSION CONTROL COVER OUTLET 피팅
05.148	PLUG, CONVERTER HOUSING 플러그	10.168	FITTING, TRANSMISSION CONTROL COVER OUTLET 피팅
05.261	TUBE FITTING, TRANSMISSION LUB LINE 튜브피팅	20.100	TRANSAXLE ASSEMBLY 트랜스액슬
05.525	PLUG, TRANSMISSION CASE 플러그	20.510	EXPANSION PLUG, INTERNAL GEAR HUB 플러그
06.202	STRAINER, TRANSMISSION SUMP 스트레이너	29.100	PUMP ASSEMBLY, HYDRAULIC 펌프
06.377	PLUG, TRANSMISSION SUMP OIL LEVEL 플러그	29.106	FASTENER, PUMP TO PLATE 패스너
06.447	PLUG, TRANSMISSION CASE 플러그	29.150	GASKET, HYDRAULIC PUMP MOUNTING 가스켓
06.610	TUBE, TRANSMISSION "HIGH" OIL 튜브	29.349	SEAL, PUMP COVER SEAL LOCATOR 씰
06.647	LINE, TRANSMISSION LUBRICATION 라인	31.640	FITTING, HYD PUMP OUTLET (COVER END) 피팅
06.660	SOLENOID ASSEMBLY, TRANSMISSION 솔레노이드	44.055	FITTING, TRANSMISSION CONTROL COVER RETURN LINE 피팅
08.260	TUBE, TRAN OIL LEVEL DIPSTICK SUPPORT 튜브	44.170	COIL, TRANSMISSION CONTROL COVER SOLENOID 코일
08.373	DIPSTICK, TRANSMISSION 딥스틱	44.212	CARTRIDGE, CONTROL VALVE SHIFT SOLENOID 카트리지
08.398	SEAL, TRANSMISSION DIPSTICK SUPPORT 씰	44.301	SEAL KIT, SOLENOID VALVE 씰키트
09.007	PLUG - EXPANSION, GEAR CASE 플러그	95.082	FASTENER, CONTROL SELECTOR SOLENOID RELAY 패스너
10.105	ELEMENT & GASKET, OIL FILTER 엘리먼트& 가스켓		

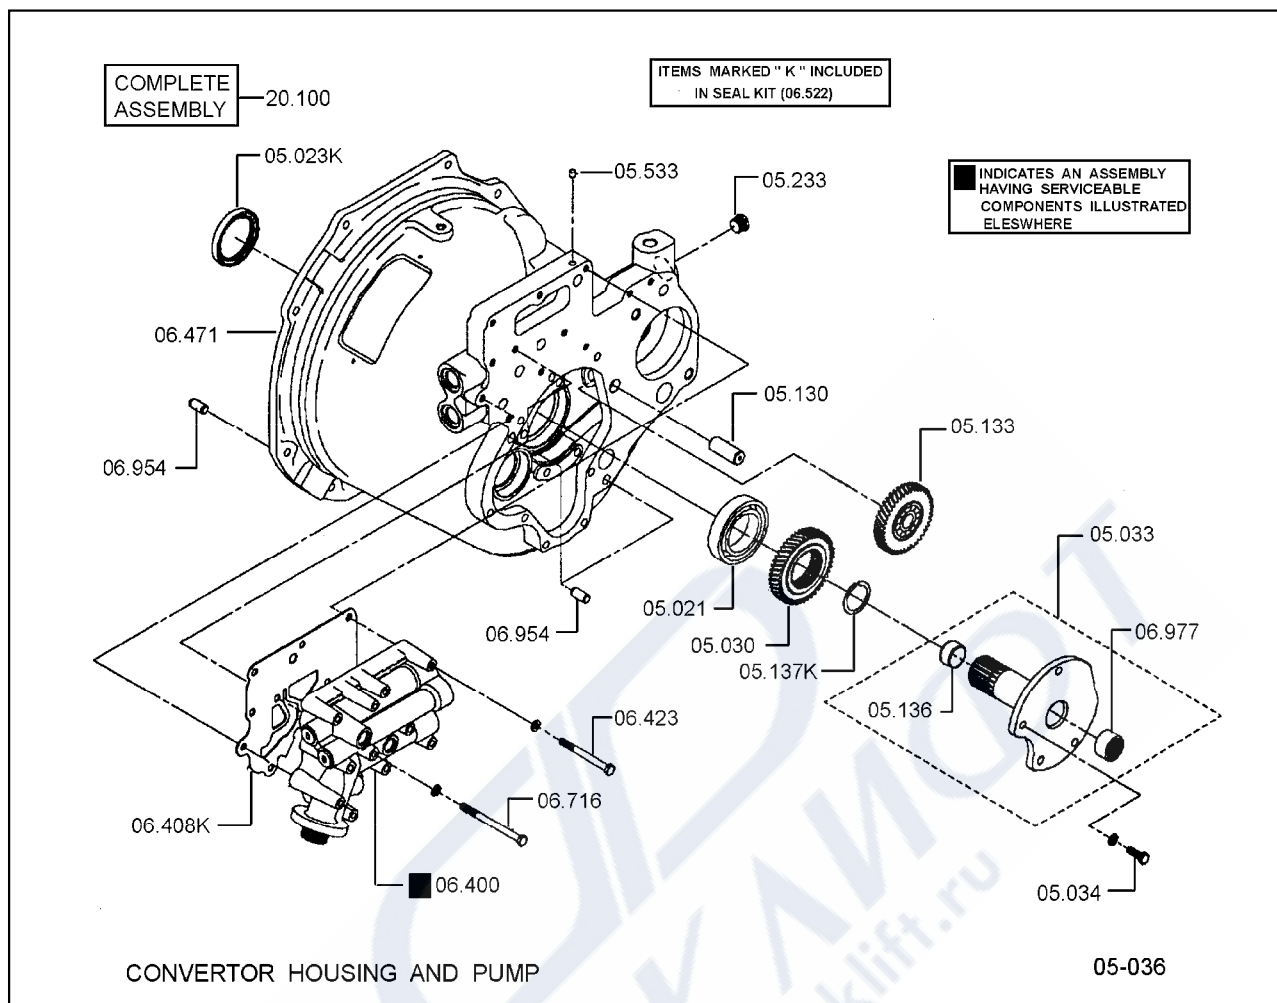 

- | | |
|--------|---|
| 05.021 | BEARING, IMPELLER HUB
베어링 |
| 05.023 | SEAL, CONVERTER IMPELLER HUB
씰 |
| 05.030 | GEAR, IMPELLER HUB
기어 |
| 05.033 | STATOR SUPPORT ASSEMBLY, CONVERTER
스테이터 |
| 05.034 | FASTENER, STATOR SUPPORT
패스너 |
| 05.130 | SHAFT, CONVERTER PUMP IDLER GEAR
샤프트 |
| 05.133 | GEAR, CONVERTOR PUMP IDLER
기어 |
| 05.136 | BEARING, CONVERTER STATOR SUPPORT
베어링 |
| 05.137 | LOCATOR, CONVERTER STATOR SUPPORT (OUTER)
로케이터 |


05.233	PLUG, CONVERTOR HOUSING EXPANDER 플러그
05.533	PLUG, CONVERTER HOUSING 플러그
06.400	CONTROL COVER & VALVE ASSEMBLY 컨트롤커버& 밸브
06.408	GASKET, CONTROL COVER ATTACHING 가스켓
06.423	FASTENER, CONTROL VALVE HOUSING 패스너
06.471	HOUSING, CONVERTER 하우징
06.522	SEAL AND GASKET KIT, TRANSMISSION 씰& 가스켓
06.716	FASTENER, CONTROL COVER 패스너
06.954	DOWEL, TRANSMISSION CASE TO CONVERTER 다월
06.977	BEARING, REVERSE CLUTCH HUB (ENGINE END) 베어링
20.100	TRANSAXLE ASSEMBLY 트랜스액슬

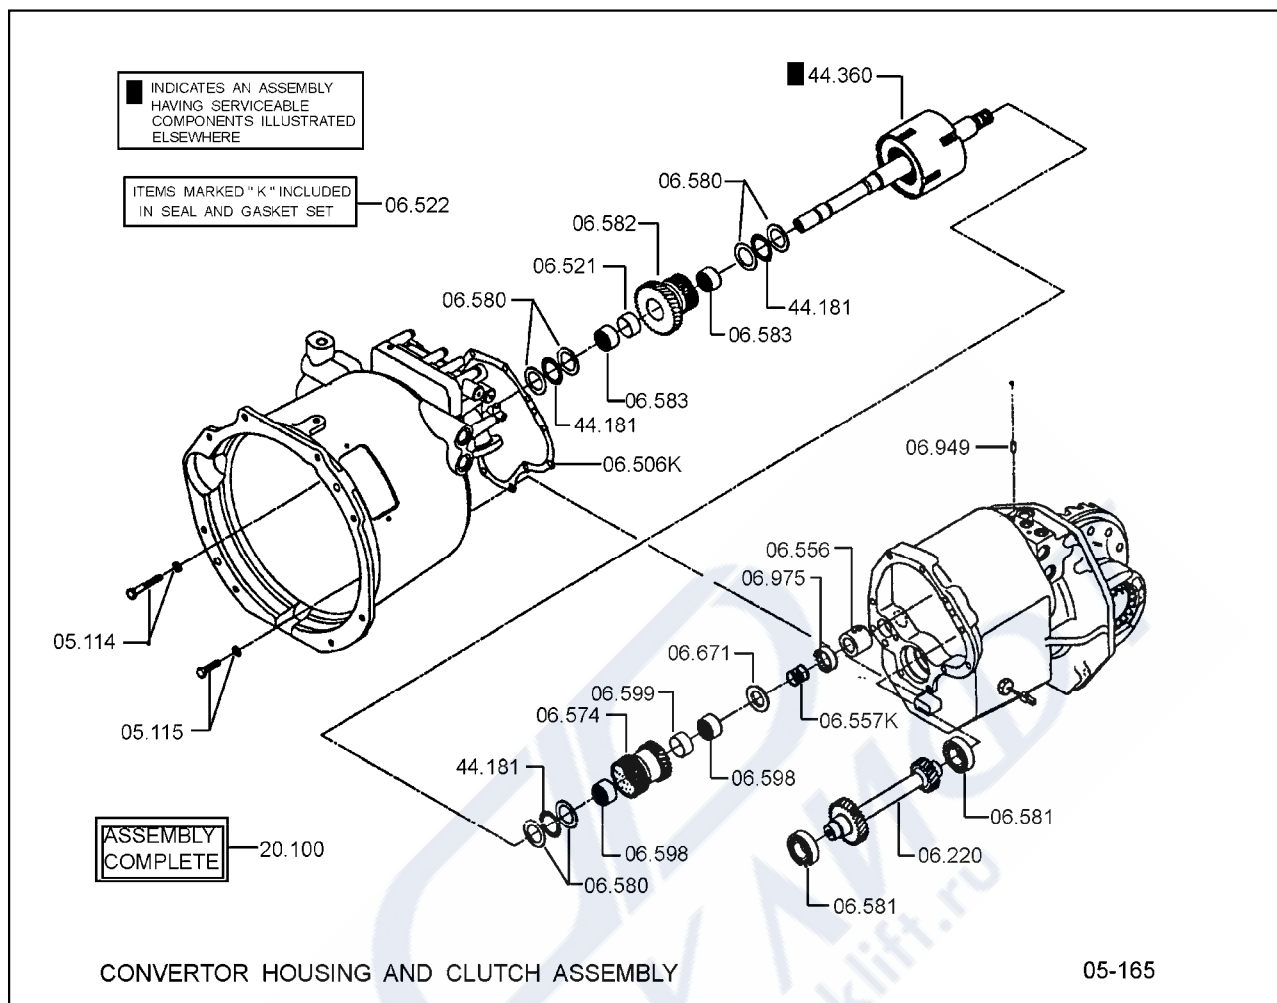 

- 05.114 FASTENER, CONVERTER TO CASE
패스너
- 05.115 FASTENER, CONVERTER TO CASE
패스너
- 06.220 GEAR, REVERSE IDLER
기어
- 06.506 SEAL, CONVERTER HOUSING TO CASE-INNER
씰
- 06.521 BALL, INCHING RELIEF VALVE
볼
- 06.522 SEAL AND GASKET KIT, TRANSMISSION
씰& 가스켓
- 06.556 DISTRIBUTOR, TRANSMISSION DIRECTION SEL OIL
디스트리뷰터
- 06.557 SEAL, TRANSMISSION DIRECTION SELECTOR OIL DIST
씰
- 06.574 GEAR & BEARING FORWARD
기어& 베어링


06.580	THRUST WASHER, REVERSE CLUTCH HUB & DRUM 스러스트와셔
06.581	BEARING, REVERSE GEAR 베어링
06.582	GEAR & BEARING, REVERSE 기어& 베어링
06.583	BEARING, REVERSE GEAR 베어링
06.598	BEARING, TRANSMISSION INTERMEDIATE SHAFT OUTER 베어링
06.599	SPACER, TRANSMISSION INTERMEDIATE SHAFT 스페이서
06.671	BEARING, DIRECTION SEL CL HUB 베어링
06.949	RETAINER, CLUTCH OIL DISTRIBUTION SLEEVE 리테이너
06.975	BEARING, REVERSE CLUTCH HUB (AXLE END) 베어링
20.100	TRANSAXLE ASSEMBLY 트랜스액슬
44.181	BEARING, CLUTCH SHAFT THRUST 베어링
44.360	TURBINE SHAFT, DRUM & CLUTCH ASSY 터빈샤프트



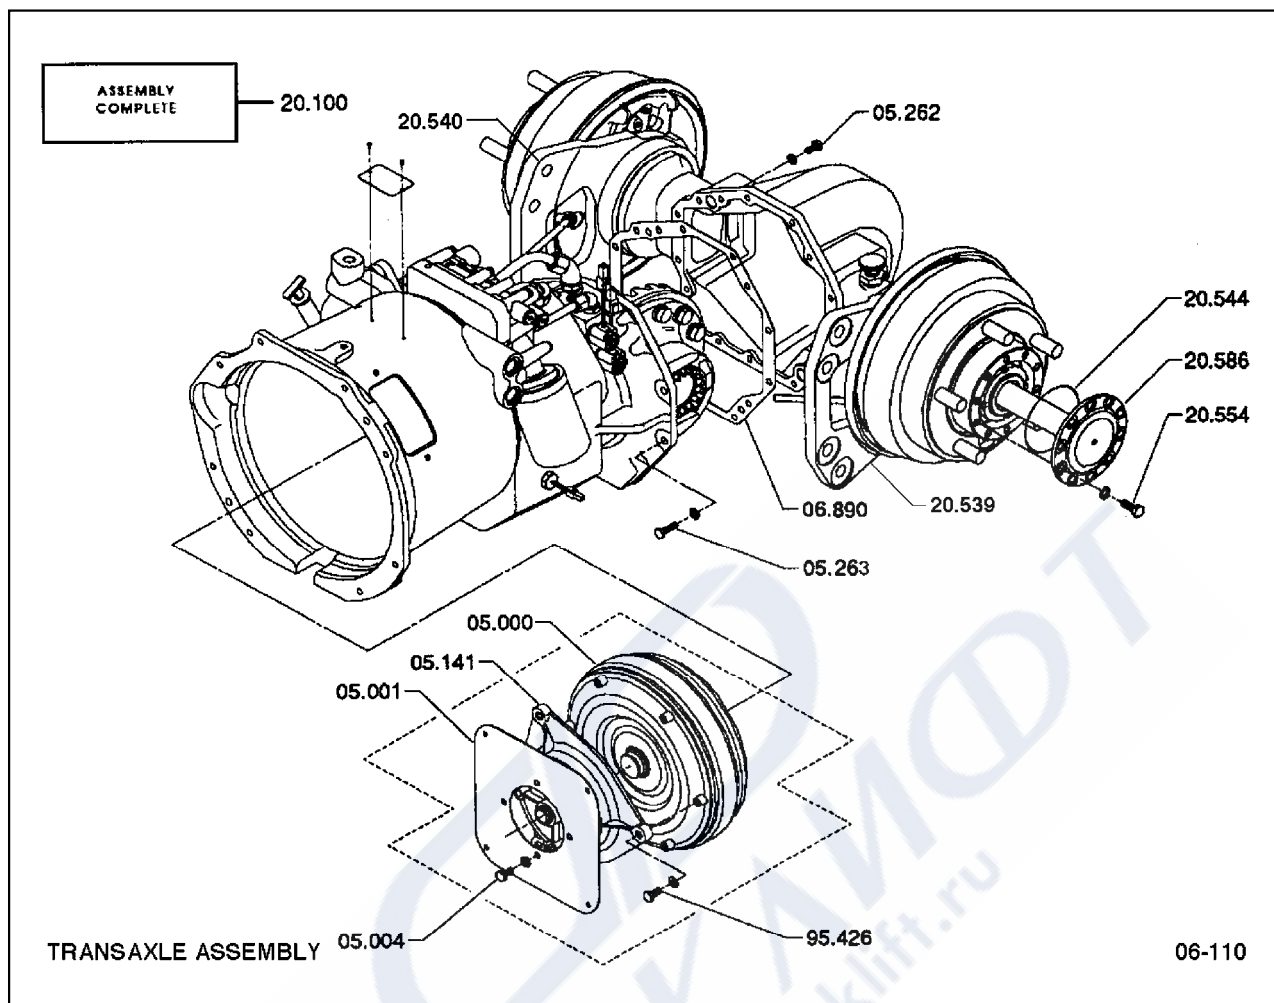 

05.000	CONVERTER ASSEMBLY, TORQUE 컨버터
05.001	GEAR, CONVERTER RING 기어
05.004	FASTENER, CONVERTER DRIVE & REINFORCING PLATE 패스너
05.141	ADAPTOR, CONVERTER DRIVE 어댑터
05.262	FASTENER, AXLE HOUSING TO CASE 패스너
05.263	FASTENER, CASE TO AXLE HOUSING 패스너
06.890	GASKET, CONTROL COVER PLATE 가스켓
20.100	TRANSAXLE ASSEMBLY 트랜스액슬
20.539	SUPPORT, DRIVE AXLE SPINDLE (RH) 서포트

20.540	SUPPORT, DRIVE AXLE SPINDLE (LH) 서포트
20.544	SEAL, DRIVE AXLE SHAFT 셀
20.554	FASTENER, DRIVE AXLE HUB CAP 패스너
20.586	SHAFT, DRIVE AXLE 샤프트
95.426	FASTENER, CONVERTER DRIVE ADAPTOR 패스너

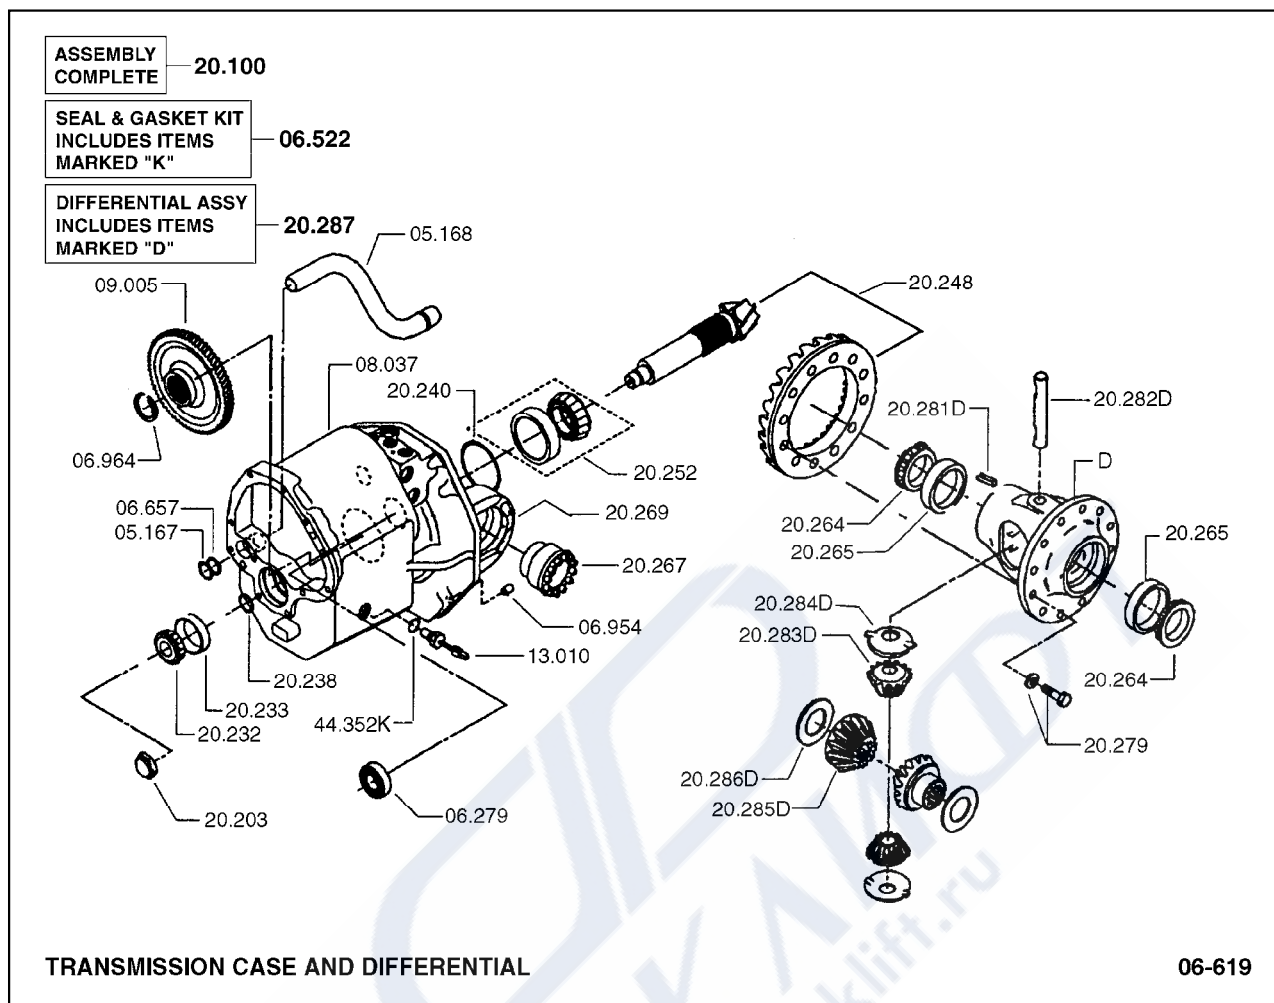 


TRANSMISSION CASE AND DIFFERENTIAL

06-619

05.167	FASTENER, CONVERTER PUMP INLET LINE 패스너	20.240	SPACER, DIFFERENTIAL PINION BEARING 스페이서
05.168	LINE, CONVERTER PUMP INLET 라인	20.248	RING GEAR & PINION SET, DIFFERENTIAL 링
06.279	BEARING, TRANSMISSION OUTPUT SHAFT 베어링	20.252	BEARING, DIFFERENTIAL PINION INNER 베어링
06.522	SEAL AND GASKET KIT, TRANSMISSION 씰& 가스켓	20.264	CONE, DIFFERENTIAL BEARING 콘
06.657	SEAL, TRANS VALVE PRESS PUMP INLET LINE 씰	20.265	CUP, DIFFERENTIAL BEARING 컵
06.954	DOWEL, TRANSMISSION CASE TO CONVERTER 다웰	20.267	NUT, DIFFERENTIAL BEARING ADJUSTING 너트
06.964	RING, OUTPUT SHAFT GEAR LOCATING 링	20.269	FASTENER, DIFF BEARING ADJUSTING NUT LOCK 패스너
08.037	CASE, TRANSMISSION 케이스	20.279	FASTENER, DIFFERENTIAL CASE TO RING GEAR 패스너
09.005	GEAR, OUTPUT 기어	20.281	FASTENER, DIFF SIDE PINION PIN 패스너
13.010	CONTROL, CONVERTOR TEMPERATURE INDICATOR 컨트롤	20.282	SPIDER, DIFFERENTIAL PINION 스파이더
20.100	TRANSAXLE ASSEMBLY 트랜스액슬	20.283	GEAR, DIFFERENTIAL SIDE PINION 기어
20.203	NUT, DIFFERENTIAL PINION COMPANION FLANGE 너트	20.284	WASHER, DIFF SIDE PINION GEAR THRUST 와셔
20.232	CONE, DIFFERENTIAL PINION OUTER BEARING 콘	20.285	GEAR, DIFFERENTIAL SIDE 기어
20.233	CUP, DIFFERENTIAL PINION OUTER BEARING 컵	20.286	WASHER, DIFFERENTIAL SIDE GEAR THRUST 와셔
20.238	SHIM KIT, DIFFERENTIAL PINION BEARING CAGE 심	20.287	CASE & GEAR ASSEMBLY, DIFFERENTIAL 케이스& 기어


44.352 SEAL, CONVERTOR TEMP INDICATOR CONTROL
세

 ФОРКЛИФТ
www.forklift.ru

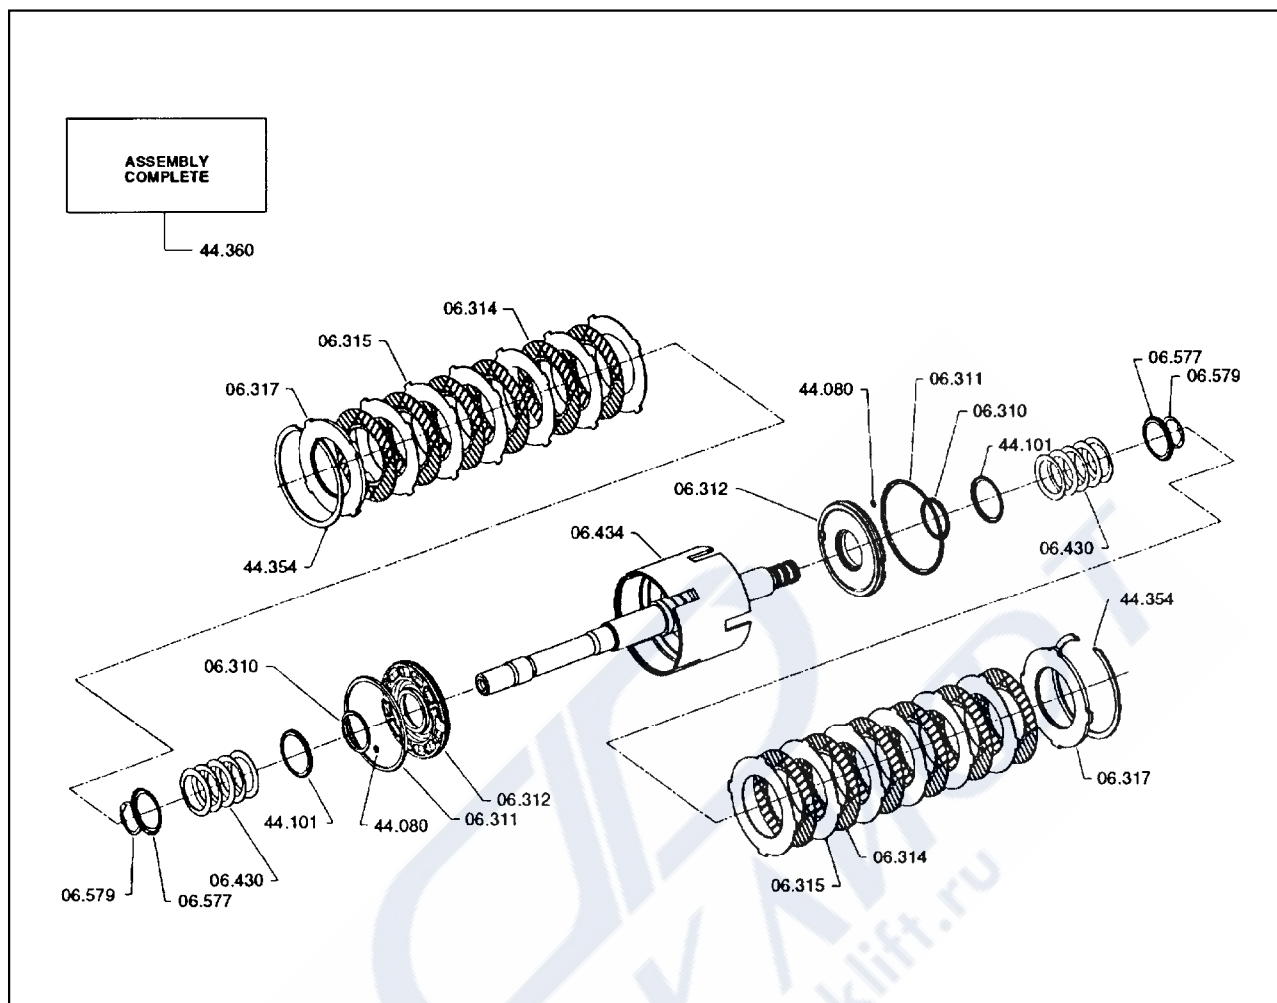

06.310	SEAL, FORWARD CLUCH PISTON INNER 씰
06.311	SEAL, FORWARD CLUTCH PISTON OUTER 씰
06.312	PISTON, FORWARD CLUTCH 피스톤
06.314	DISC, FORWARD CLUTCH INNER 디스크
06.315	DISC, FORWARD CLUTCH OUTER 디스크
06.317	PLATE, FORWARD CLUTCH DISC END 플레이트
06.430	SPRING, FORWARD CLUTCH PISTON RETURN 스프링
06.434	SHAFT & GEAR, CLUTCH DRIVE 샤프트& 기어
06.577	RETAINER, FORWARD CLUTCH SPRING 리테이너


06.579	FASTENER, REVERSE CLUTCH SPRING RETAINER 패스너
44.080	SEAL, FORWARD CLUTCH LUBRICATION PRESSURE PORT PLU 셀
44.101	THRUST WASHER, CLUTCH SHAFT PILOT BEARING 스러스트와셔
44.354	RING, CLUTCH PACK RETAINING 링
44.360	TURBINE SHAFT, DRUM & CLUTCH ASSY 터빈샤프트

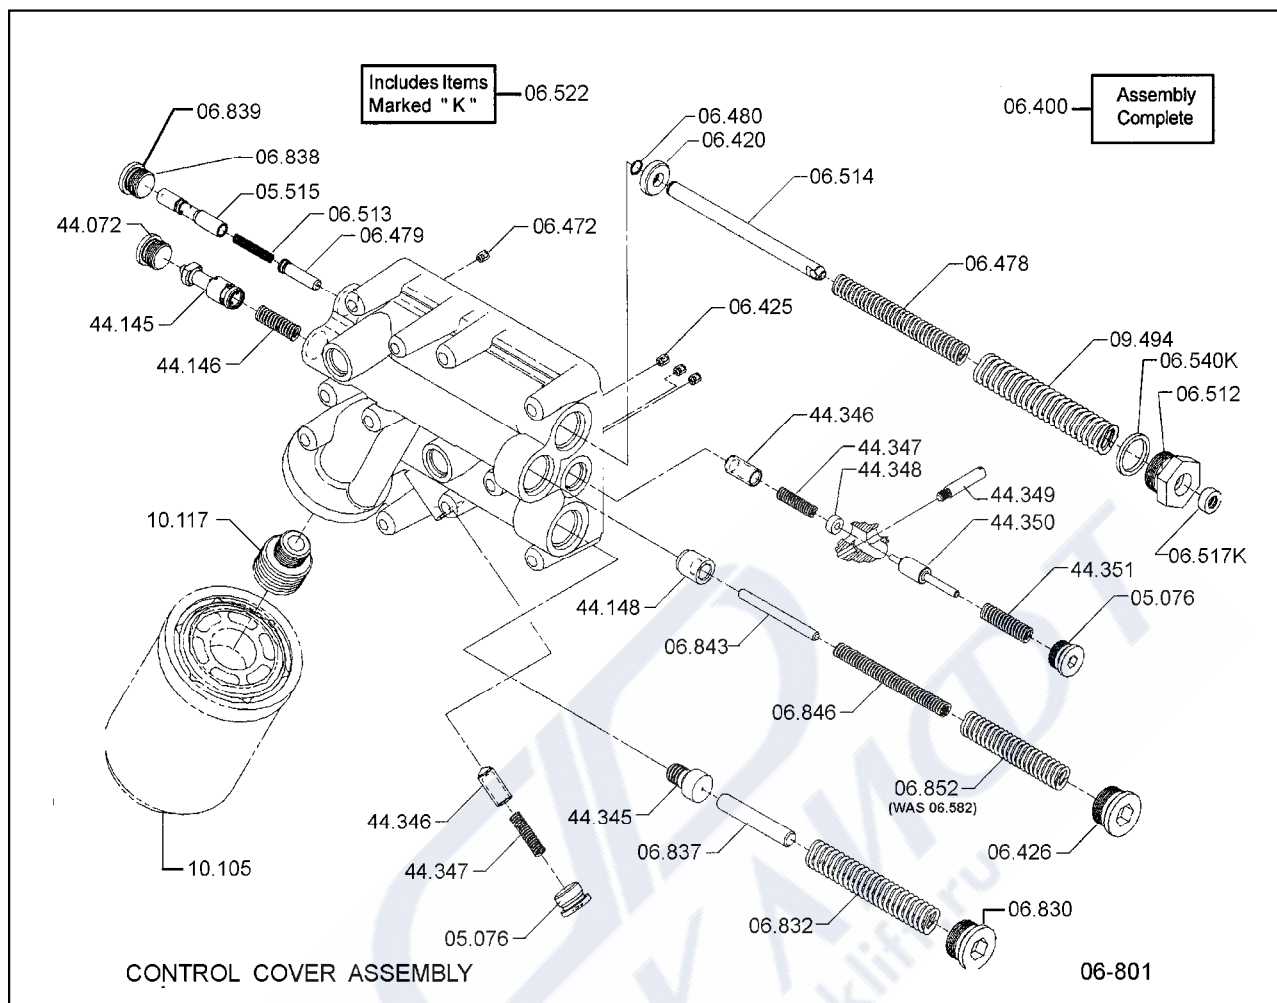 

05.076	PLUG, COOLER PORT (SMALL) 플러그	06.540	SEAL, INCHING PISTON HOUSING 씰
05.515	SPOOL, INCHING 스풀	06.830	STOP, PRESSURE REGULATING VALVE 스톱
06.400	CONTROL COVER & VALVE ASSEMBLY 컨트롤커버&밸브	06.832	SPRING, CLUTCH PRESSURE REGULATING VALVE 스프링
06.420	GUIDE & STOP, SHUT-OFF VALVE SPRING 가이드&스톱	06.837	FASTENER, PRESSURE REGULATING VALVE STOP 패스너
06.425	PLUG, CONTROL COVER OIL PASSAGE 플러그	06.838	STOP, INCHING VALVE 스톱
06.426	PLUG, CONTROL COVER 플러그	06.839	SEAL, INCHING VALVE STOP 씰
06.472	PLUG, CONTROL VALVE HOUSING OIL PASSAGE 플러그	06.843	STOP, ACCUMULATOR PISTON 스톱
06.478	SPRING, INCHING PISTON RETURN 스프링	06.846	SPRING, ACCUMULATOR PISTON (INNER) 스프링
06.479	PISTON, INCHING 피스톤	06.852	SPRING, ACCUMULATOR PISTON (OUTER) 스프링
06.480	SEAL, INCHING PISTON 씰	09.494	SPRING, INCHING SPOOL RETURN 스프링
06.512	STOP, INCHING SPOOL 스톱	10.105	ELEMENT & GASKET, OIL FILTER 엘리먼트&가스켓
06.513	SPRING, INCHING VALVE 스프링	10.117	FITTING, OIL FILTER TO BASE 피팅
06.514	ROD, INCHING VALVE 로드	44.072	PLUG, MODULATION VALVE BODY 플러그
06.517	SEAL, INCHING VALVE PISTON PORT FITTING 씰	44.145	SPOOL, MODULATOR 스풀
06.522	SEAL AND GASKET KIT, TRANSMISSION 씰&가스켓	44.146	SPRING, MODULATOR SPOOL 스프링

44.148	SPOOL, ACCUMULATOR 스풀
44.345	SPOOL, CLUTCH PRESSURE REGULATOR 스풀
44.346	SPOOL, TRANS COOLER/LUBE OIL FILTER BY-PASS 스풀
44.347	SPRING, TRANS COOLER/LUBE OIL FILTER BY-PASS SPO 스프링
44.348	STOP, TRANS LUBE BY-PASS SPOOL SPRING 스톱
44.349	PIN, TRANS LUBE BY-PASS AND COOLER SEPARATOR 핀
44.350	SPOOL, TRANS LUBE BY-PASS RELIEF 스풀
44.351	SPRING, TRANS LUBE BY-PASS RELIEF SPOOL 스프링

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

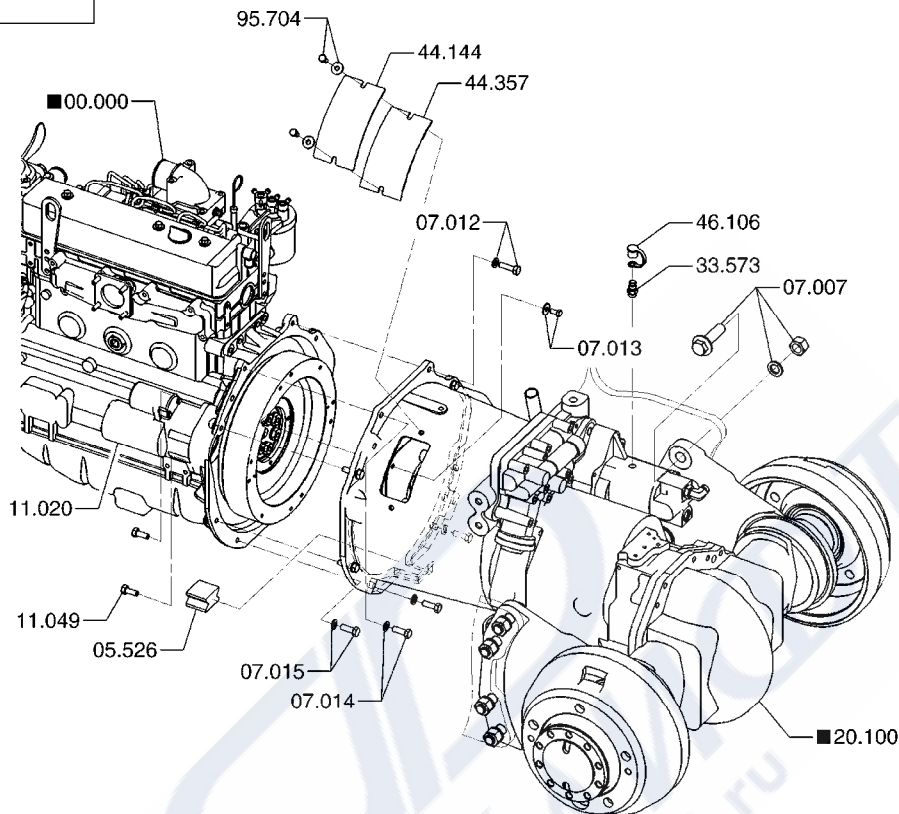


ENGINE & TRANSAXLE MOUNTING

07-048

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
05.526	PLUG, TRANSMISSION CASE 플러그
07.007	FASTENER, TRANSMISSION MOUNTING BRACKET LH 패스너
07.012	FASTENER, TRANSMISSION TO ENGINE 패스너
07.013	FASTENER, TRANSMISSION TO ENGINE 패스너
07.014	FASTENER, TRANSMISSION TO ENGINE 패스너
07.015	FASTENER, TRANSMISSION TO ENGINE 패스너
11.020	MOTOR ASSEMBLY, STARTING 모터
11.049	FASTENER, STARTING MOTOR 패스너


20.100	TRANSAXLE ASSEMBLY 트랜스액슬
33.573	FITTING, HYDRAULIC PRESSURE GAUGE 피팅
44.144	COVER, CONVERTER HOUSING 커버
44.357	GASKET, CONVERTER HOUSING COVER 가스켓
46.106	DUST CAP, HYDRAULIC PRESSURE GAUGE FITTING 더스트캡
95.704	FASTENER, CONVERTER HOUSING PLATE 패스너



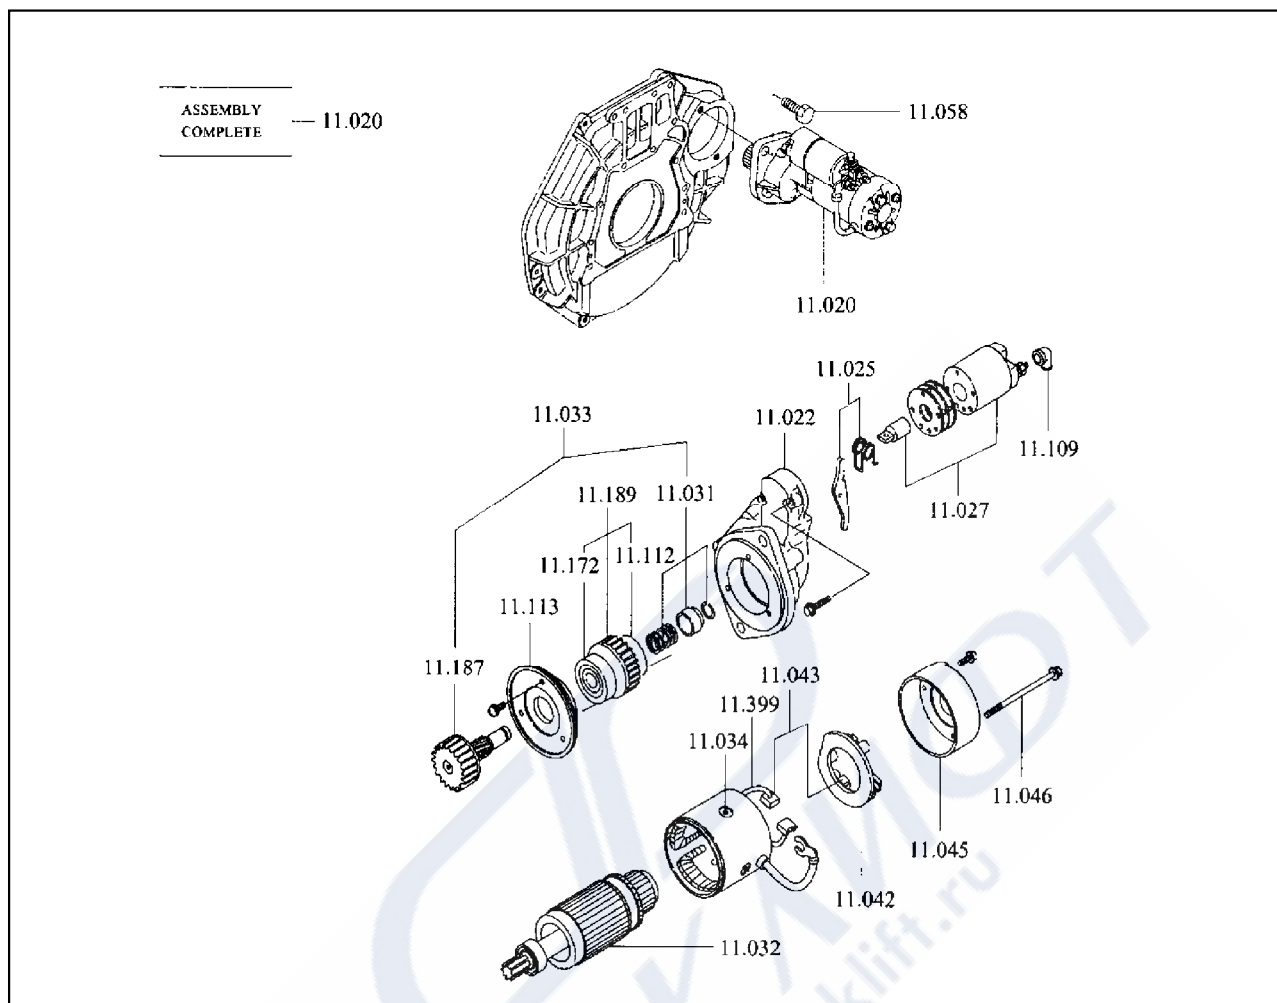 


11.020	MOTOR ASSEMBLY, STARTING 모터
11.022	HOUSING & BUSHING, DRIVE END 하우징& 부싱
11.025	LEVER, DRIVE SHIFT FORK 레버
11.027	SWITCH, SOLENOID 스위치
11.031	COLLAR, PINION STOP 칼라
11.032	ARMATURE, STARTING MOTOR 아마츄어
11.033	DRIVE ASSEMBLY, STARTING MOTOR 드라이브
11.034	FASTENER, STARTING MOTOR 패스너
11.042	BRUSH HOLDER & BRUSH (KIT) 브러쉬홀더

11.043	BRUSH SET, STARTING MOTOR 브러쉬셋
11.045	FRAME, COMMUTATOR END 프레임
11.046	FASTENER, THRU 패스너
11.058	SPACER, STARTING MOTOR MOUNTING 스페이서
11.109	FITTING, STARTER SOLENOID INTERLOCK 피팅
11.112	BEARING, CRANKING MOTOR DRIVE LINKAGE HOUSING 베어링
11.113	RETAINER, CRANKING MOTOR DRIVE SHIFT LEVER FULCRUM 리테이너
11.172	BEARING, CRANKING MOTOR CENTER 베어링
11.187	GEAR, STARTER REDUCTION INTERNAL 기어
11.189	CLUTCH, STARTER OVERRUNNING 클러치
11.399	HOUSING ASSEMBLY, CRANKING MOTOR 하우징

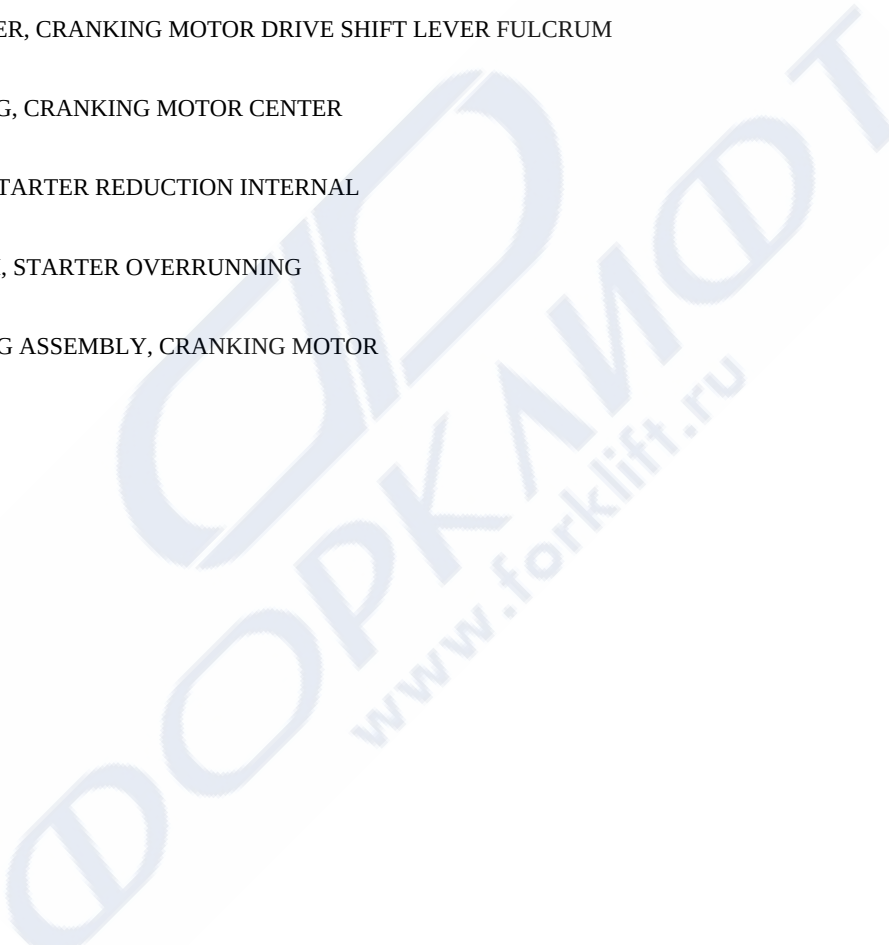 

ENGINE ASSEMBLY
COMPLETE

 00.000

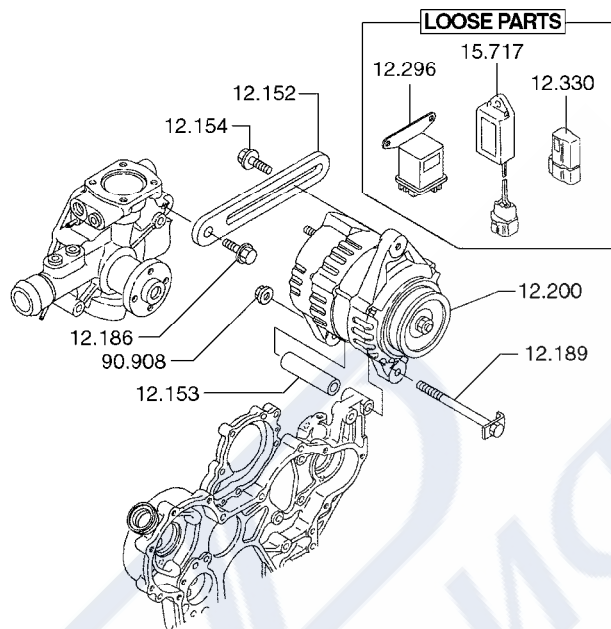

GENERATOR

12-035


00.000	PRODUCTION ENGINE ASSEMBLY 엔진
12.152	BRACKET, ALTERNATOR ADJUSTING STRAP 브라켓
12.153	SPACER, ALTERNATOR MOUNTING 스페이서
12.154	FASTENER, ALTERNATOR MOUNTING 패스너
12.186	FASTENER, ALTERNATOR MOUNTING 패스너
12.189	FASTENER, ALTERNATOR MOUNTING 패스너
12.200	ALTERNATOR ASSEMBLY 알터네이터
12.296	RELAY, ALTERNATOR FIELD 릴레이
12.330	DIODE, ALTERNATOR FIELD CURRENT 다이오드

15.717	TIME DELAY, ENGINE SHUTDOWN SYSTEM 타이머유닛
90.908	WASHER, ALT TO BRACKET FASTENER 와셔




ENGINE ASSEMBLY
COMPLETE

 00.000

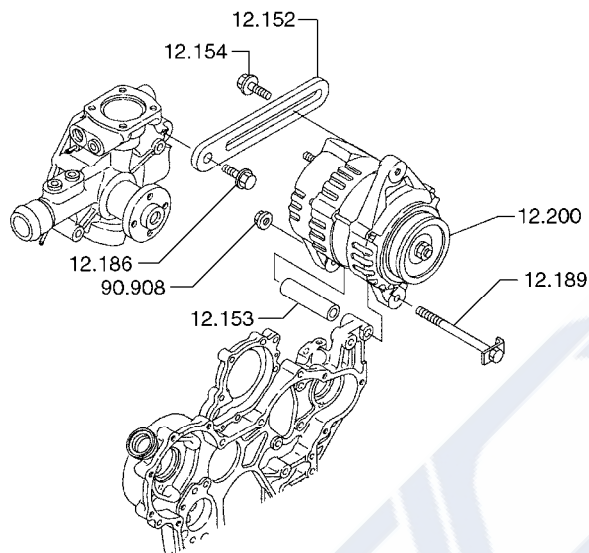

LOOSE PARTS

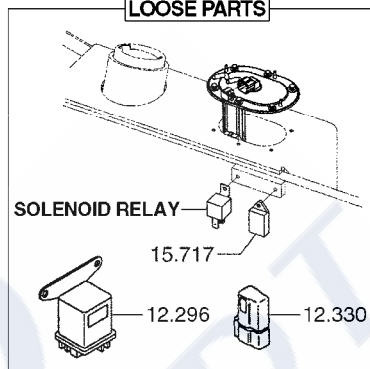 


ALTERNATOR MOUNTING

12-191

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
12.152	BRACKET, ALTERNATOR ADJUSTING STRAP 브라켓
12.153	SPACER, ALTERNATOR MOUNTING 스페이서
12.154	FASTENER, ALTERNATOR MOUNTING 패스너
12.186	FASTENER, ALTERNATOR MOUNTING 패스너
12.189	FASTENER, ALTERNATOR MOUNTING 패스너
12.200	ALTERNATOR ASSEMBLY 알터네이터
12.296	RELAY, ALTERNATOR FIELD 릴레이
12.330	DIODE, ALTERNATOR FIELD CURRENT 다이오드

15.717	TIME DELAY, ENGINE SHUTDOWN SYSTEM 타이머유닛
90.908	WASHER, ALT TO BRACKET FASTENER 와셔




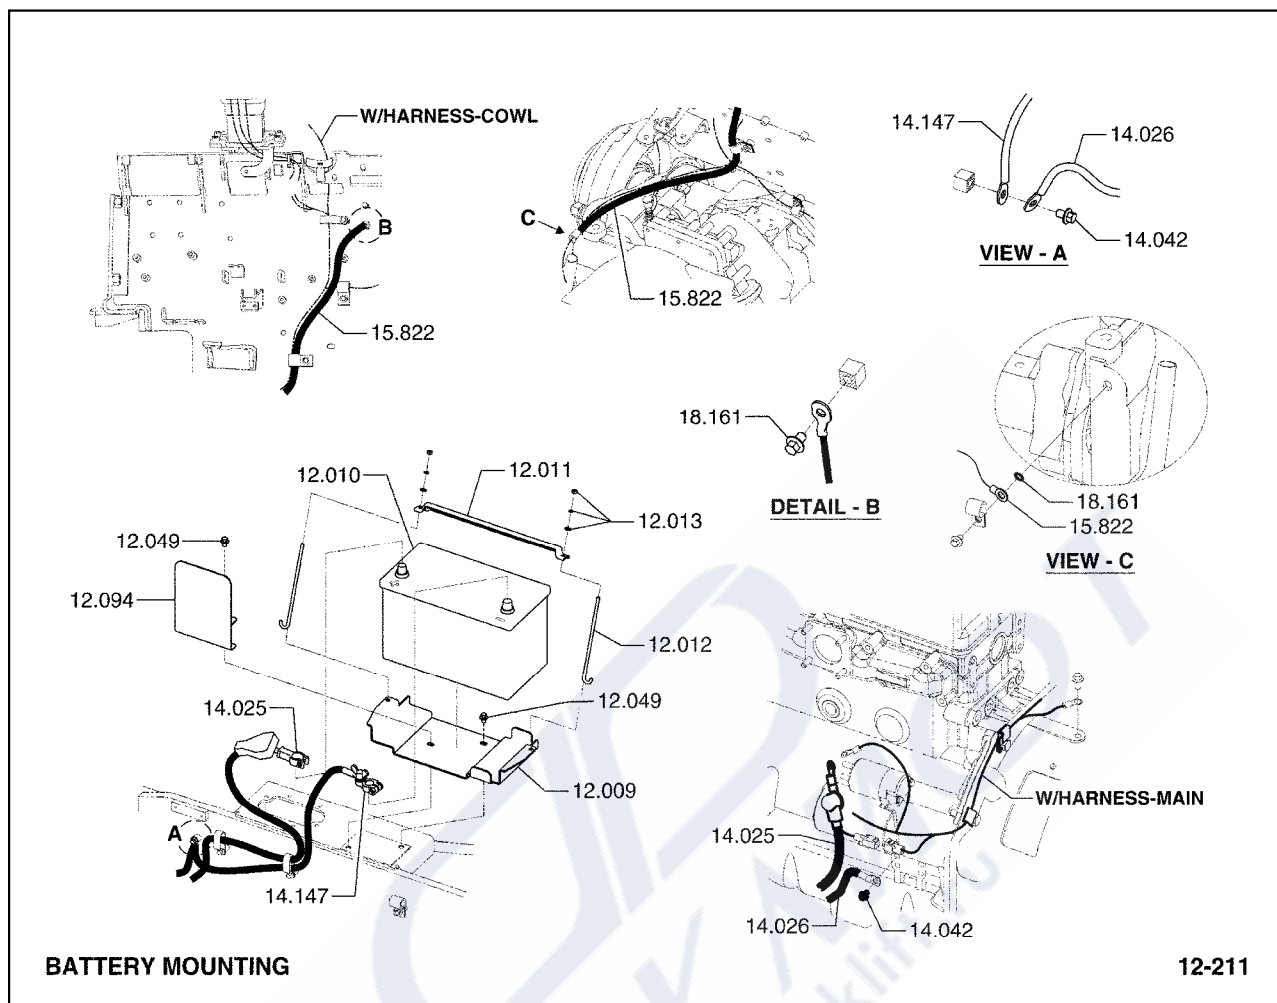 


12.009	SUPPORT, BATTERY 서포트
12.010	BATTERY 배터리
12.011	CLAMP, BATTERY HOLD DOWN 클램프
12.012	STUD, BATTERY HOLD DOWN 스터드
12.013	FASTENER, BATTERY HOLD DOWN (AT CLAMP) 패스너
12.049	FASTENER, BATTERY SUPPORT 패스너
12.094	BRACKET, BATTERY SUPPORT 브라켓
14.025	CABLE, BATTERY TO STARTER 케이블
14.026	CABLE, BATTERY GROUND 케이블

14.042	FASTENER, BATTERY GROUND CABLE 패스너
14.147	CABLE, BATTERY NEGATIVE 케이블
15.822	WIRE, MACHINE GROUND EXTENSION 와이어
18.161	FASTENER, GROUND WIRE 패스너



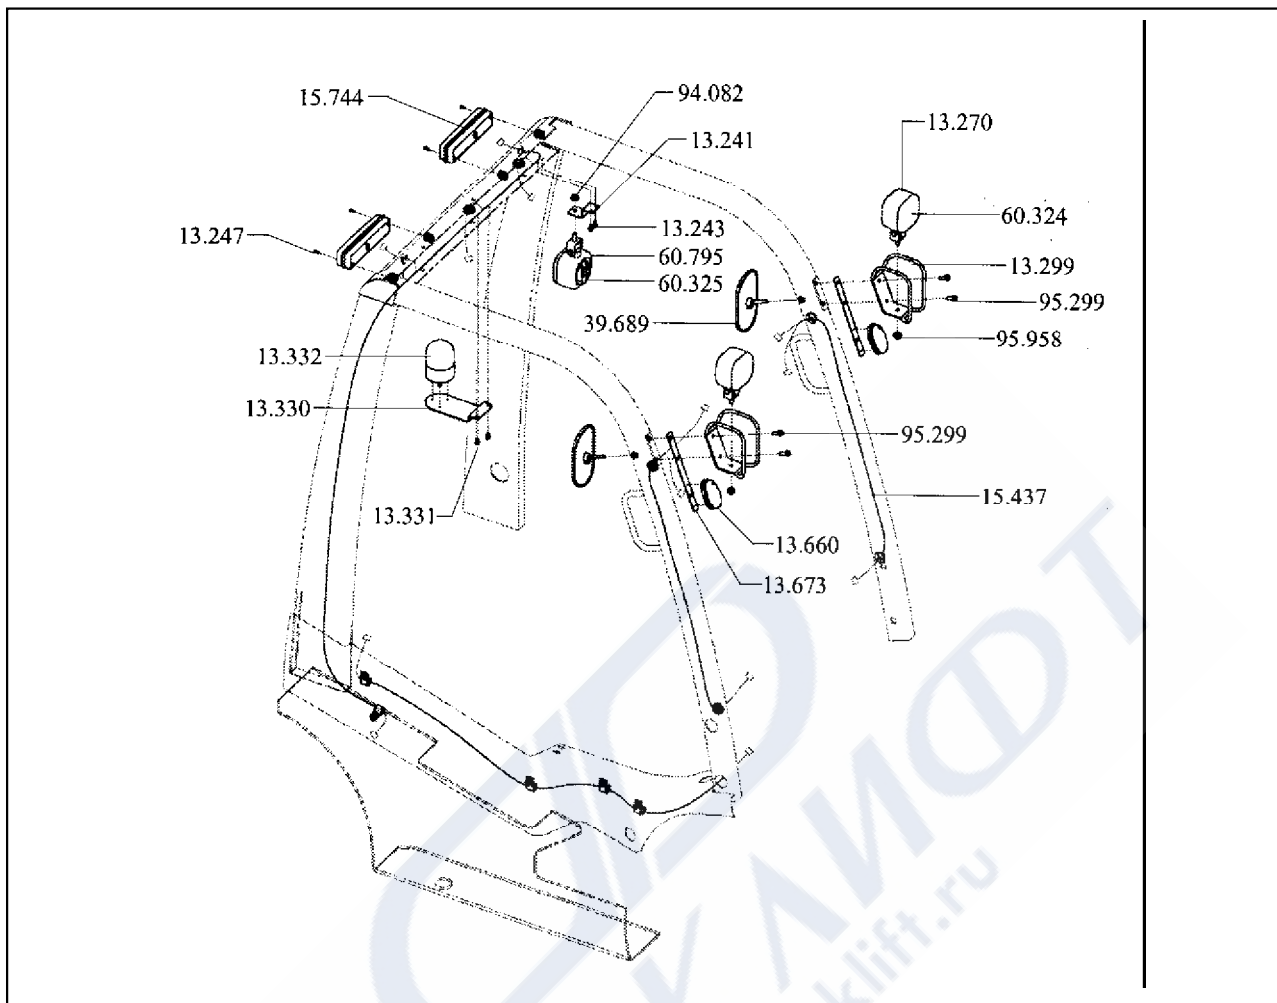 


- | | |
|--------|---|
| 13.047 | SWITCH, CIRCUIT LOCKING
스위치 |
| 14.238 | HARNESS, DIRECTION CONTROL SWITCH WIRING
하네스 |
| 14.502 | WIRE, IGNITION SWITCH TO ENGINE HARNESS
와이어 |
| 60.260 | KEY, CIRCUIT LOCKING SWITCH
키 |

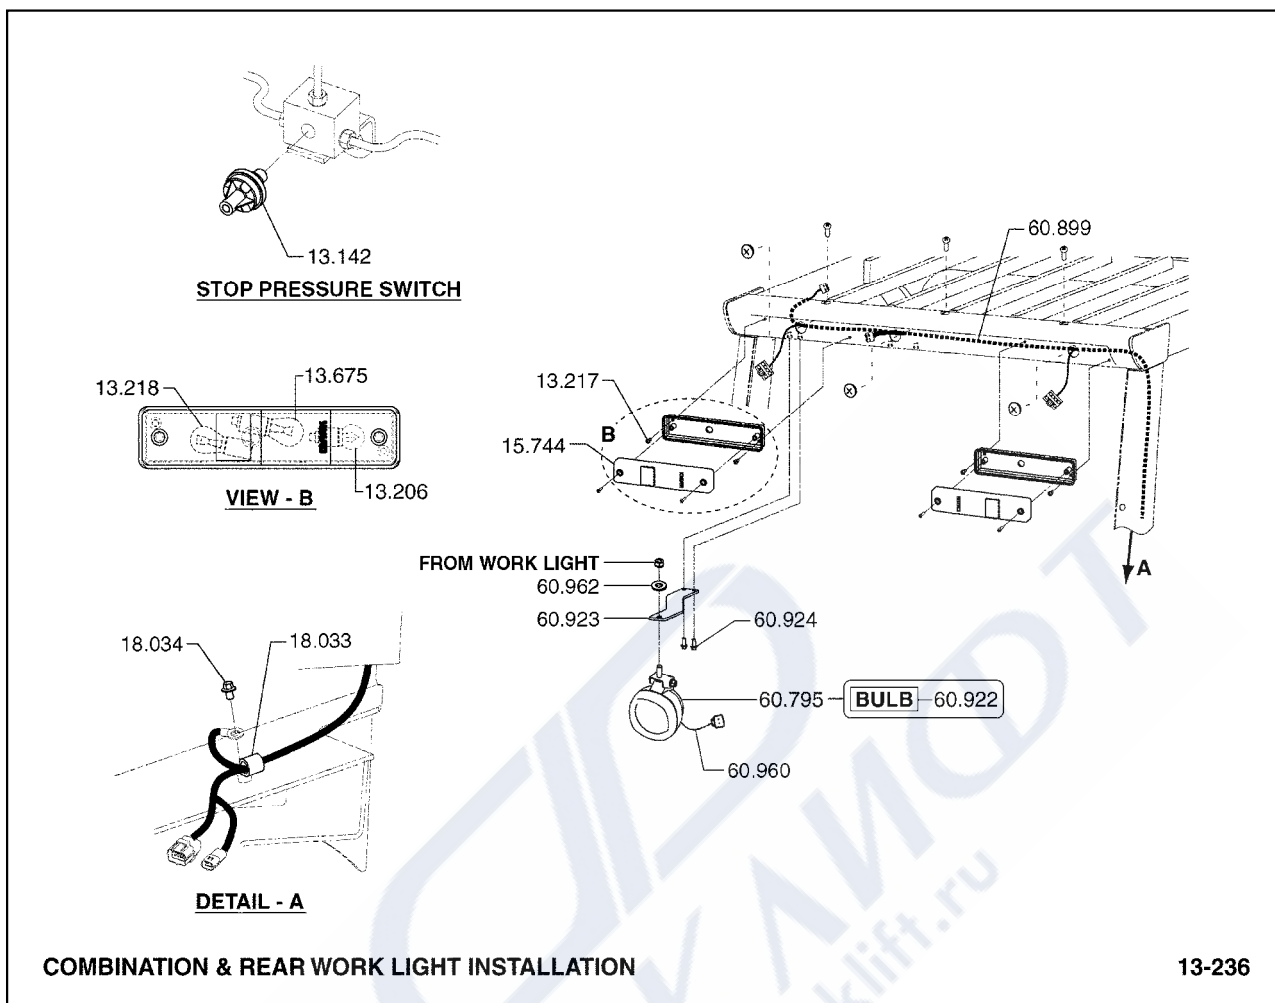 

13.142	SWITCH, BRAKE INTERLOCK 스위치
13.206	BULB, BACK-UP LAMP 전구
13.217	FASTENER, COM STOP & TAIL LAMP ASSY MTG 패스너
13.218	BULB, STOP & TAIL LAMP 전구
13.675	BULB, TURN LIGHT 전구
15.744	LAMP ASSEMBLY, COMBINATION STOP & TAIL 램프
18.033	CLIP, HARNESS 클립
18.034	FASTENER, HARNESS CLIP 패스너
60.795	LIGHT, REAR WORK 라이트

60.899	WIRING HARNESS, REAR ACCESSORY 와이어하네스
60.922	BULB, REAR WORK LAMP 전구
60.923	BRACKET, REAR WORK LAMP MOUNTING 브라켓
60.924	FASTENER, REAR WORK LAMP MOUNTING 패스너
60.960	HARNESS, REAR WORK LAMP EXTENSION 하네스
60.962	SPACER, REAR WORK LAMP MOUNTING 스페이서

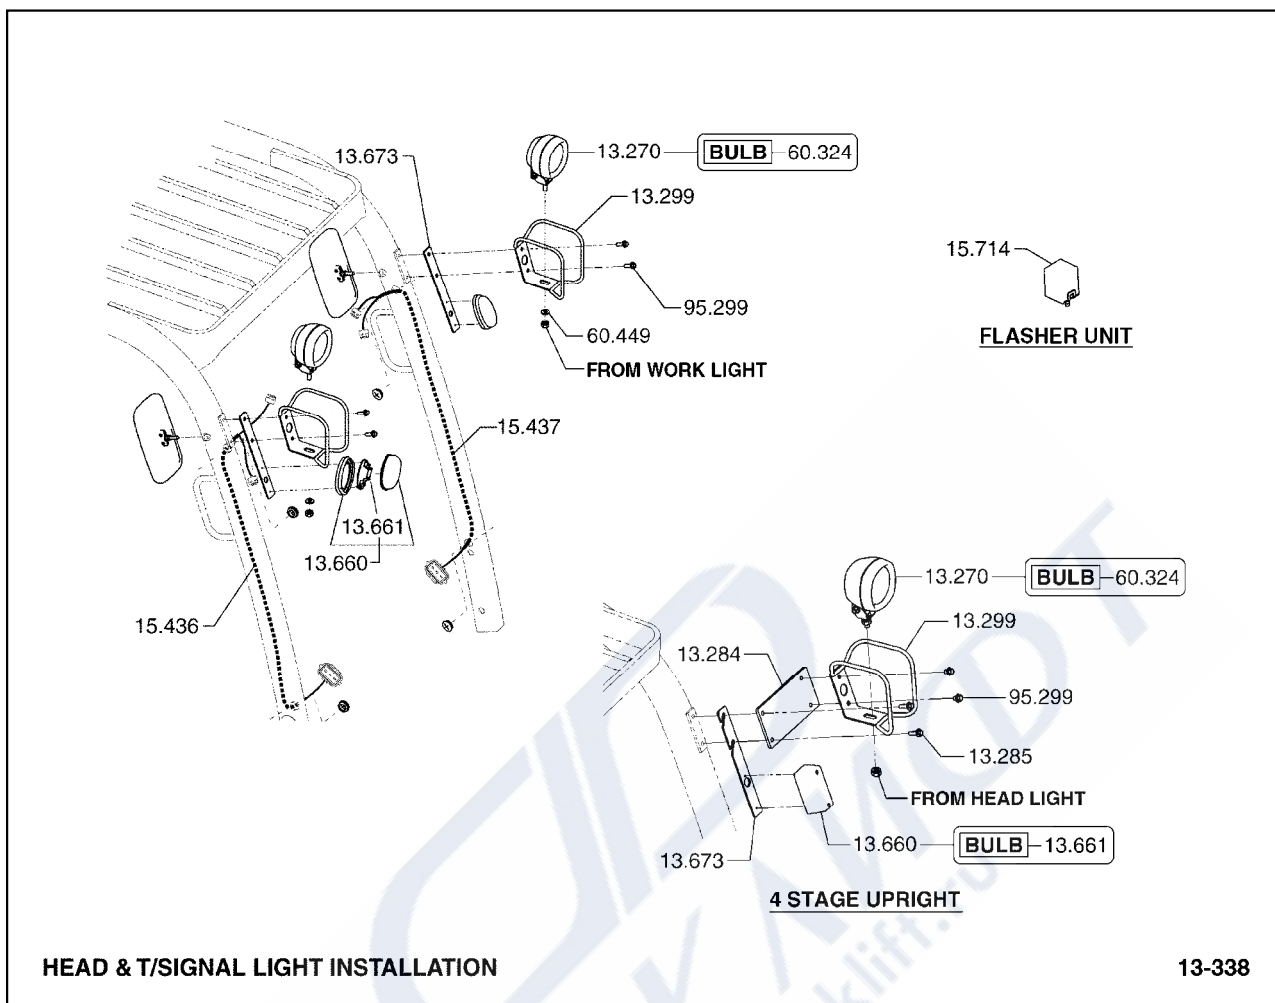 

- | | |
|--------|--|
| 13.270 | HEADLAMP, ADJUSTABLE
헤드램프 |
| 13.284 | BRACKET, ADJUSTABLE HEADLAMP
브라켓 |
| 13.285 | FASTENER, ADJUSTABLE HEADLAMP BRACKET
패스너 |
| 13.299 | GUARD, HEADLIGHT
가드 |
| 13.660 | LIGHT, TURN SIGNAL
라이트 |
| 13.661 | BULB, TURN SIGNAL LIGHT
전구 |
| 13.673 | BRACKET, TURN LIGHT
브라켓 |
| 15.436 | HARNESS, RH HEADLAMP WIRING
하네스 |
| 15.437 | HARNESS, HEADLAMP WIRING
하네스 |


15.714	FLASHER, UNIT 플래셔
60.324	BULB, HEADLAMP 전구
60.449	SPACER, HEAD LAMP BRACKET MOUNTING 스페이서
95.299	FASTENER, HEADLAMP GUARD 패스너



2	HARNESS, CONTROL CIRCUIT WIRING	14.050	16	CABLE, DRIVE
3	CLIP, CONTROL CIRCUIT WIRING HARNESS	18.025	17	CABLE, DRIVE
4	STRAP, HARNESS	18.027	18	CABLE, DRIVE
5	RECEPTACLE & CABLE, BATTERY	14.039	19	CABLE, DRIVE
6	RECEPTACLE, BATTERY CABLE	14.040	20	WIRE ASSEMBLY
7	WIRE ASSEMBLY, PUMP SOLENOID TO VALVE	14.163	21	FASTENER, BA1
8	WIRE ASSEMBLY, PUMP SOLENOID JUMPER	14.164	22	PLATE, RECEP1
9	WIRE ASSEMBLY, PUMP SOL TO PUMP MOTOR	14.047	23	FASTENER, REC
0	CABLE, BATTERY NEGATIVE	14.147	24	WIRE, DRIVE M
1	CABLE, RESISTOR TO B+	14.148	25	WIRE, PLUGGIN
2	WIRE ASSEMBLY, RESISTOR TO H/SPD CONT	14.221	26	WIRE, DIODE 1
3	WIRE ASSEMBLY, RESISTOR TO H/SPD CONT	14.257	27	WIRE, DIODE 1
4	CABLE, DRIVE MOTOR (A2)	14.087	28	CONNECTOR, AI
5	CABLE, DRIVE MOTOR (A1)	14.086		

13.000	PANEL, INSTRUMENT CLUSTER 판넬
13.003	HORN 혼
13.004	FASTENER, HORN MOUNTING BRACKET 패스너
13.079	FASTENER, INSTRUMENT CLUSTER TO INST PANEL 패스너
14.352	FUSE, CONTROL CIRCUIT 퓨즈
15.433	GROMMET, CONTROL CIRCUIT WIRING HARNESS 그로멧
15.447	DIODE, HARNESS 다이오드
15.640	WIRING HARNESS, MACHINE COWL 와이어하네스
15.710	RELAY, ELECTRICAL 릴레이


18.009	FASTENER, HARNESS CLIP 패스너
18.010	CLIP, HARNESS 클립
18.011	FASTENER, HARNESS CLIP 패스너
18.012	CLIP, WIRE HARNESS 클립
18.014	CLIP, HARNESS 클립
18.020	CLIP, HARNESS 클립
60.383	GROMMET, CONTROL CIRCUIT WIRING HARNESS 그로멧
65.289	BODY, FUSE BOX 바디
65.832	COVER, FUSE BOX 커버
95.009	FASTENER, FUSE BOX MOUNTING 패스너

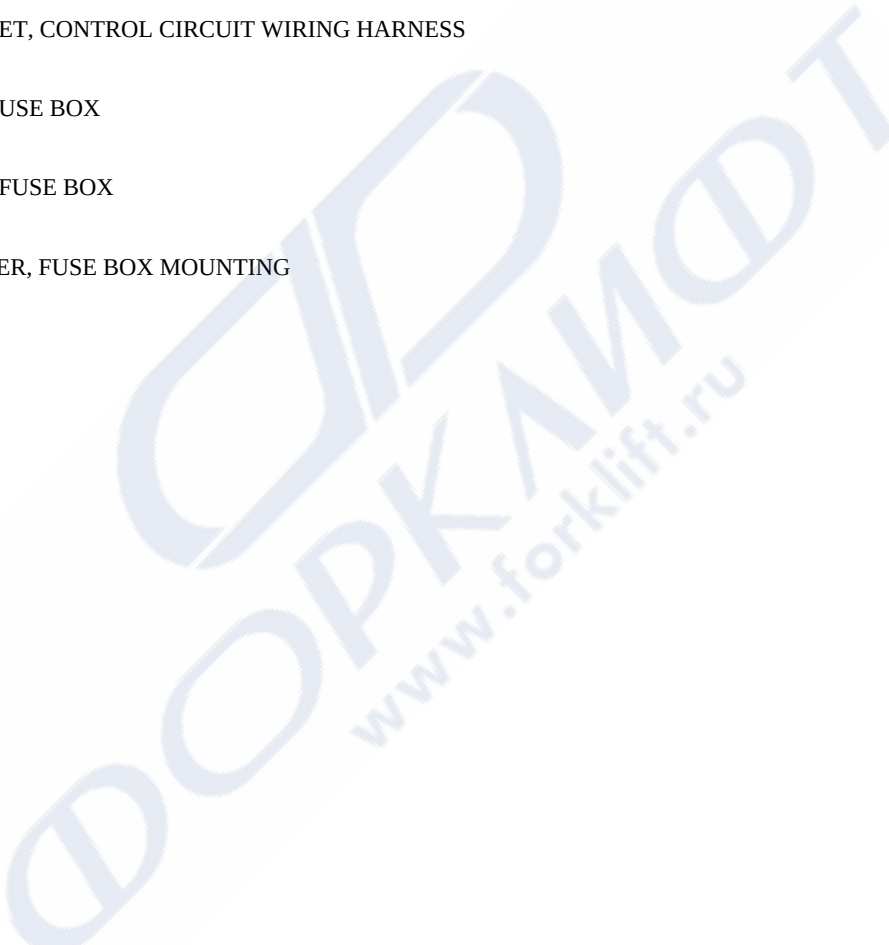 

HEATER, SEAT SAFETY SWITCH	14.940	3	BRACKET, HS IN
HEATER, BRAKE INTERLOCK SWITCH	14.944	3	BRACKET, DIR I
HEATER, HIGH SPEED INTERLOCK SW (2MS)	14.948	4	FASTENER, SEAT
HEATER, DIR INTERLOCK SWITCH (1MS)	14.952	4	FASTENER, BRAK
FASTENER, SEAT SAFETY SWITCH HEATER	14.941	4	FASTENER, HS IN
FASTENER, BRAKE INTERLOCK SW HEATER	14.945	4	FASTENER, DIR I
FASTENER, HS INTERLOCK SW (2MS) HEATER	14.949	5	HEATER, ACCELE
FASTENER, DIR INTERLOCK SW (1MS) HTR	14.953	6	FASTENER, ACCE
BRACKET, SEAT SAFETY SWITCH HEATER	14.942	7	HEATER, FORWAR
BRACKET, BRAKE INTERLOCK SWITCH HTR	14.946	8	FASTENER, F &


01.854	SENSOR, ENGINE COOLANT TEMPERATURE 센서
11.001	RELAY, STARTER 릴레이
11.002	FASTENER, STARTER RELAY 패스너
13.070	SENDER, FUEL GAUGE 센더
13.071	GASKET, FUEL GAUGE SENDER 가스켓
13.072	FASTENER, FUEL GAUGE SENDER 패스너
13.140	STRAINER, FUEL GAGE SENDER 스트레이너
14.035	WIRE, FUEL GAUGE SENDER TERMINAL 와이어
14.114	HARNESS, MACHINE WIRING 하네스


15.469	RELAY, FUEL SHUT OFF SOLENOID 릴레이
15.816	FASTENER, FUEL BLOCK SOLENOID TIMER 패스너
18.000	CLIP, WIRING HARNESS 클립
18.001	FASTENER, WIRING HARNESS CLIP 패스너
18.002	CLIP, WIRING HARNESS 클립
18.004	CLIP, WIRING HARNESS 클립
18.006	CLIP, WIRING HARNESS 클립
18.008	CLIP, WIRING HARNESS 클립
18.094	BRACKET, WIRE HARNESS STRAP 브라켓
60.866	RELAY, GLOW PLUG 릴레이
96.200	FASTENER, WIRING HARNESS GROUND 패스너
97.271	FASTENER, CABLE & WIRE TO ALTERNATOR 패스너
97.272	FASTENER, CABLE & WIRE TO STARTER 패스너
97.273	FASTENER, GLOW PLUG RELAY 패스너
97.274	FASTENER, FUEL SHUT OFF SOLENOID RELAY 패스너

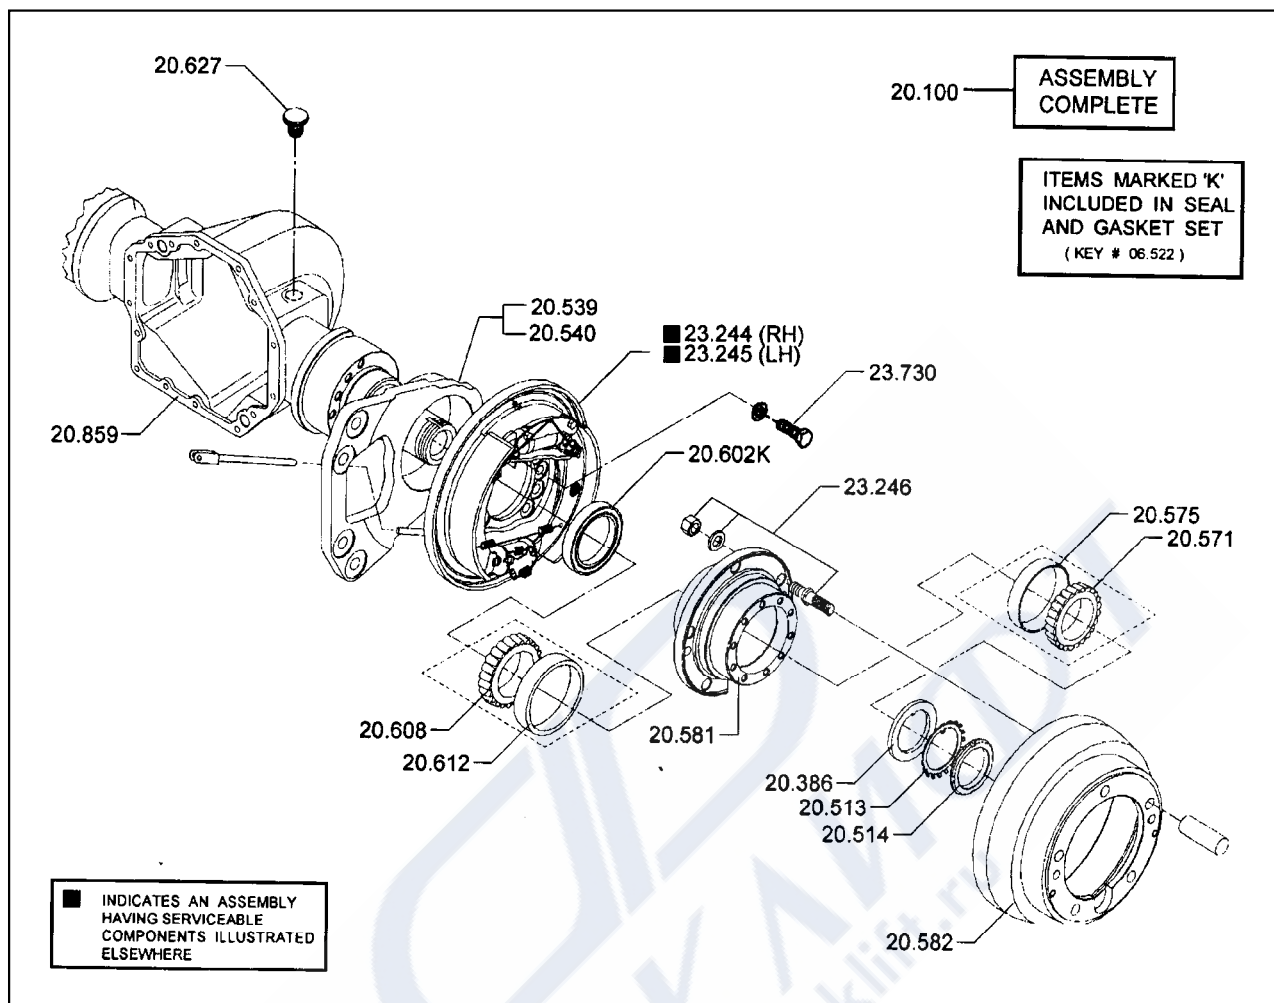 

- | | |
|--------|--|
| 20.100 | TRANSAXLE ASSEMBLY
트랜스액슬 |
| 20.386 | WASHER, DRIVE AXLE HUB SEAL
와셔 |
| 20.513 | RETAINER, DRIVE AXLE HUB BEARING
리테이너 |
| 20.514 | LOCKPLATE, DRIVE AXLE HUB BEARING RETAINER
로크플레이트 |
| 20.539 | SUPPORT, DRIVE AXLE SPINDLE (RH)
서포트 |
| 20.540 | SUPPORT, DRIVE AXLE SPINDLE (LH)
서포트 |
| 20.571 | CONE, DRIVE AXLE HUB OUTER BEARING
콘 |
| 20.575 | CUP, DRIVE AXLE HUB OUTER BEARING
컵 |
| 20.581 | HUB ASSEMBLY, DRIVE AXLE
허브 |

20.582	HUB, DRIVE WHEEL 허브
20.602	SEAL, DRIVE AXLE HUB INNER OIL 씰
20.608	CONE, DRIVE AXLE HUB INNER BEARING 콘
20.612	CUP, DRIVE AXLE HUB INNER BEARING 컵
20.627	VENT, DIFFERENTIAL & AXLE 벤트
20.859	HOUSING, DRIVE AXLE 하우징
23.244	BRAKE ASSEMBLY, RH DRIVE WHEEL 브레이크
23.245	BRAKE ASSEMBLY, LH DRIVE WHEEL 브레이크
23.246	FASTENER, BRAKE ASSEMBLY 패스너
23.730	FASTENER, BRAKE ASSEMBLY 패스너

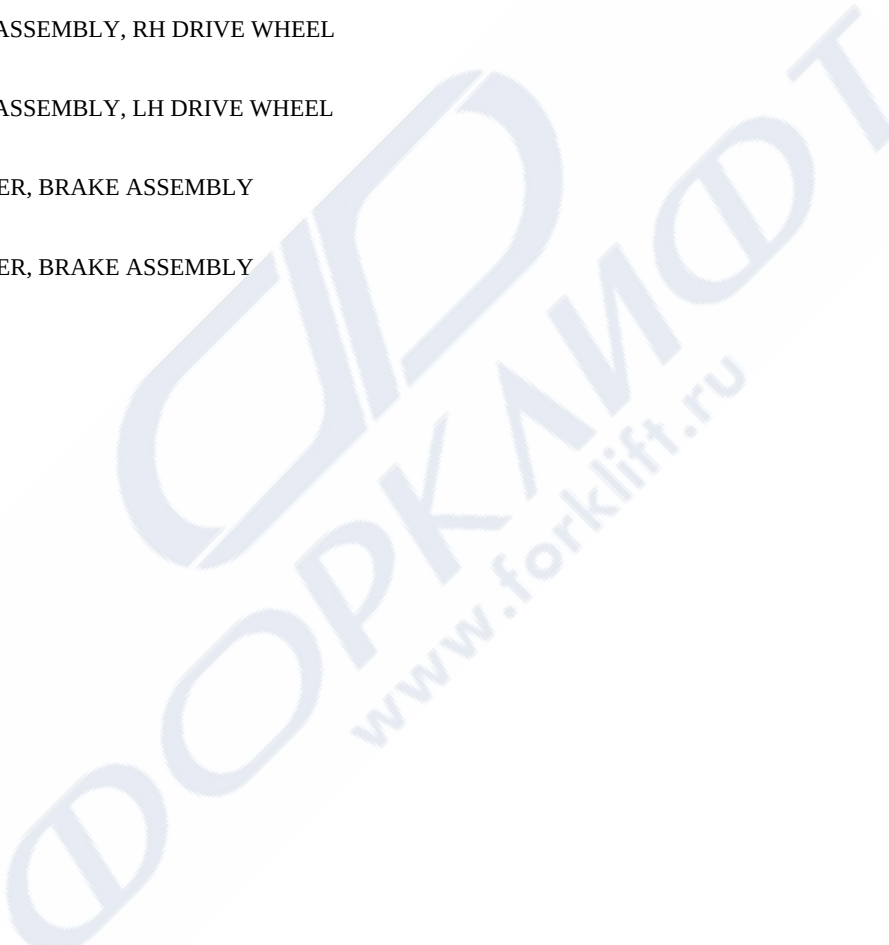 


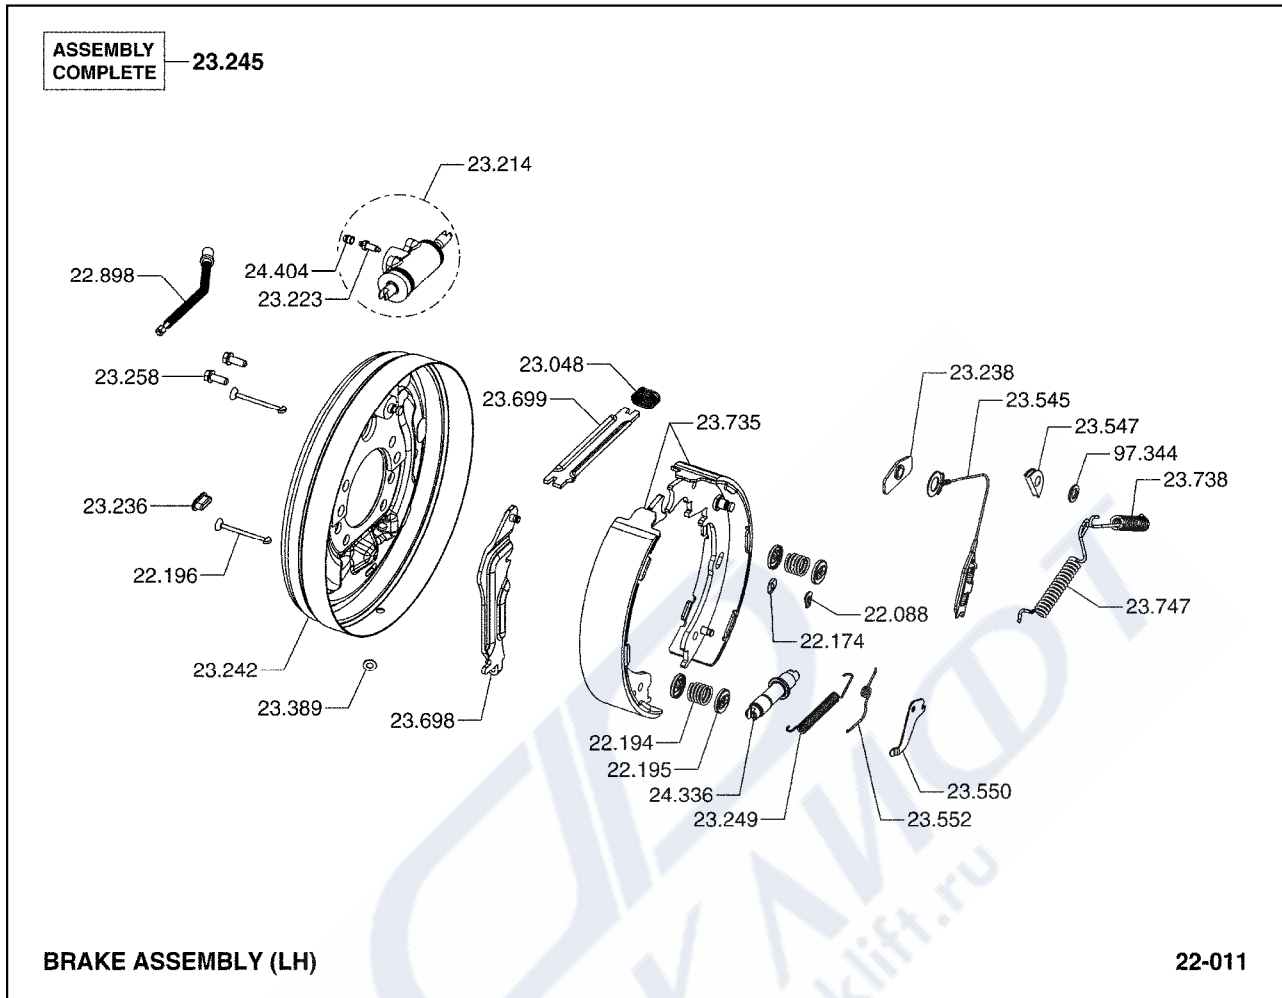 

22.088	RETAINER, PARKING BRAKE LINKAGE LEVER FULCRUM 리테이너
22.174	WASHER, PARKING BRAKE LINKAGE LEVER FULCRUM 와셔
22.194	SPRING, BRAKE SHOE GUIDE 스프링
22.195	CUP, BRAKE SHOE GUIDE 컵
22.196	LOCATOR, BRAKE SHOE 로케이터
22.898	CABLE, PARKING BRAKE DRAW - LH 케이블
23.048	SPRING, PARKING BRAKE OPERATING ARM ANTI-RATTLE 스프링
23.214	CYLINDER ASSEMBLY, LH BRAKE 실린더
23.223	BLEEDER, BRAKE WHEEL CYLINDER 블리더

23.236	COVER, LH BRAKE ADJUSTOR 커버
23.238	GUIDE, LH BRAKE SHOE 가이드
23.242	PLATE, LH BRAKE BACKING 플레이트
23.245	BRAKE ASSEMBLY, LH DRIVE WHEEL 브레이크
23.249	SPRING, LH BRAKE RETURN 스프링
23.258	FASTENER, LH WHEEL CYLINDER 패스너
23.389	RETAINER, PARKING BRAKE CABLE 리테이너
23.545	CABLE, BRAKE ADJUSTER (LH) 케이블
23.547	GUIDE, BRAKE ADJUSTOR CABLE (LH) 가이드
23.550	LEVER, BRAKE ADJUSTER (LH) 레버
23.552	SPRING, BRAKE ADJUSTER (LH) 스프링
23.698	LEVER, PARKING BRAKE OPERATING LH 레버
23.699	ARM, BRAKE ADJUSTOR REACTION LH 암
23.735	SHOE & LINING SET, BRAKE 슈& 라이닝
23.738	SPRING, BRAKE SHOE RETURN (RH) 스프링
23.747	SPRING, BRAKE SHOE RETURN (LH) 스프링
24.336	ADJUSTOR, BRAKE SHOE LH 어드저스터
24.404	CAP, BRAKE WHEEL CYLINDER BLEEDER 캡
97.344	FASTENER, BRAKE ADJUSTOR CABLE GUIDE 패스너

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

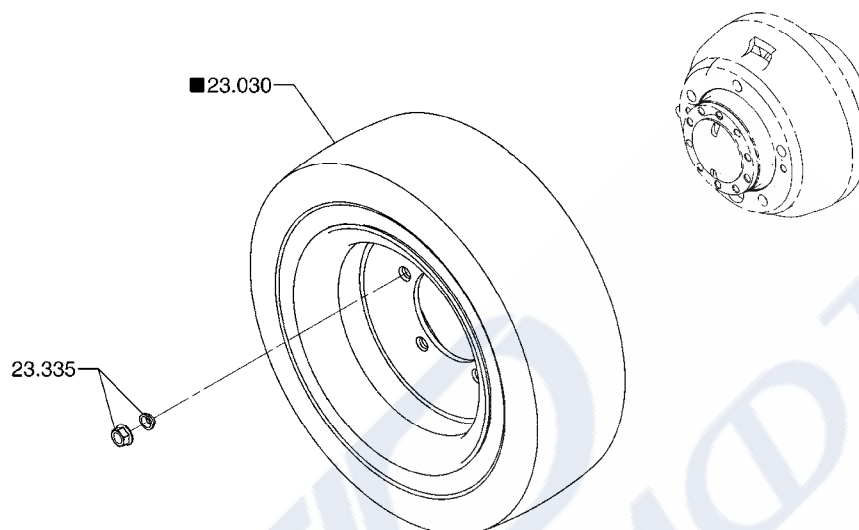


DRIVE WHEEL & TIRE MOUNTING

22-013

- | | |
|--------|--|
| 23.030 | DRIVE WHEEL AND TIRE ASSEMBLY
드라이브휠 & 타이어 |
| 23.335 | FASTENER, DRIVE WHEEL
패스너 |

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

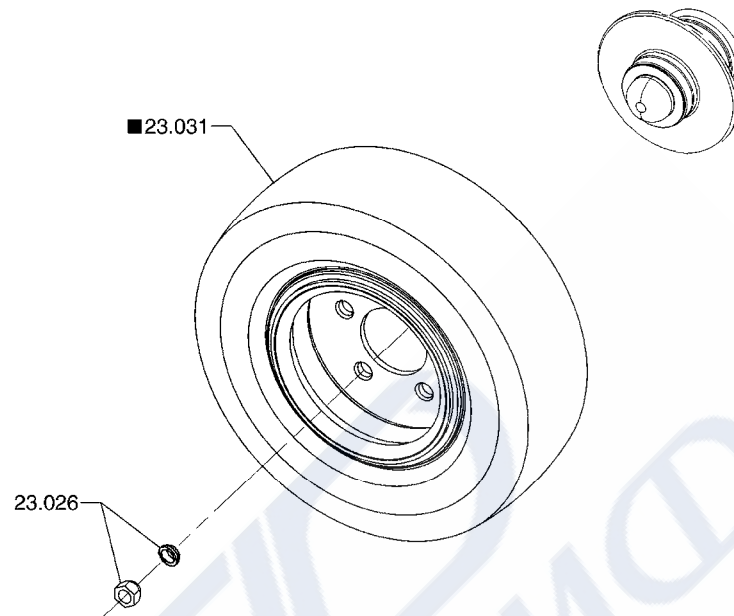


STEER WHEEL & TIRE MOUNTING

22-014

- | | |
|--------|---|
| 23.026 | FASTENER, STEER WHEEL
패스너 |
| 23.031 | STEER WHEEL AND TIRE ASSEMBLY
스티어휠 & 타이어 |

 ASSEMBLY
COMPLETE — 23.030

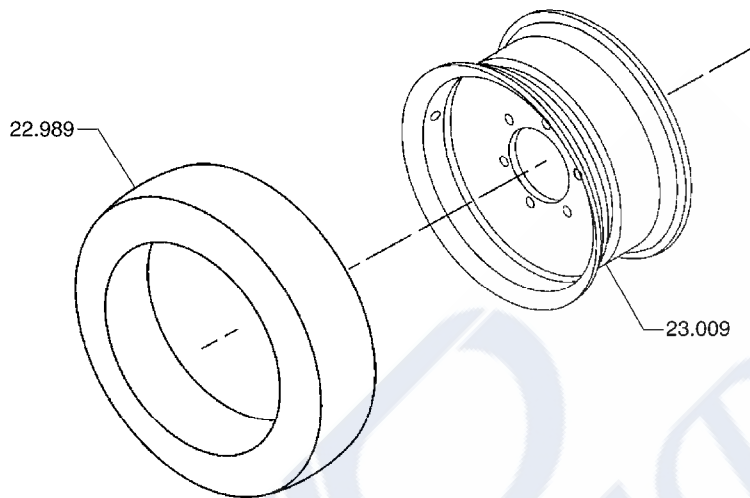


DRIVE WHEEL & TIRE (SOLID TYPE)

22-024

22.989	TIRE ASSEMBLY, DRIVE 타이어
23.009	RIM ASSEMBLY, DRIVE WHEEL 립
23.030	DRIVE WHEEL AND TIRE ASSEMBLY 드라이브휠& 타이어

 
ASSEMBLY
COMPLETE — 23.031

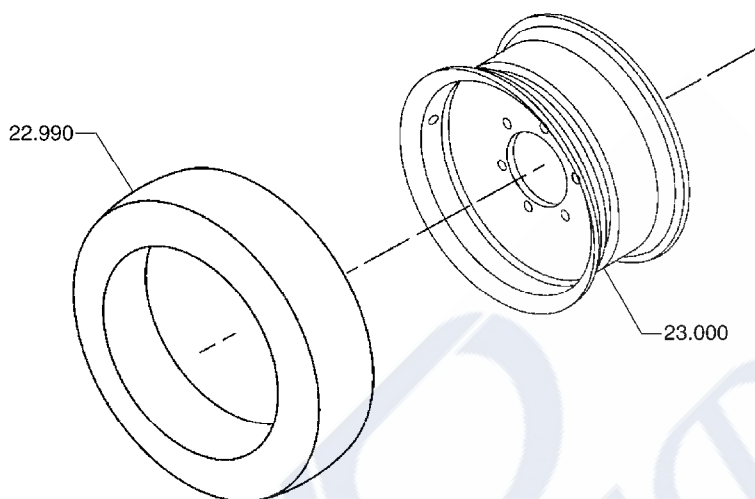

STEER WHEEL & TIRE (SOLID TYPE)


22-025

22.990	TIRE ASSEMBLY, STEER 타이어
23.000	RIM ASSEMBLY, STEER WHEEL 림
23.031	STEER WHEEL AND TIRE ASSEMBLY 스티어휠 & 타이어

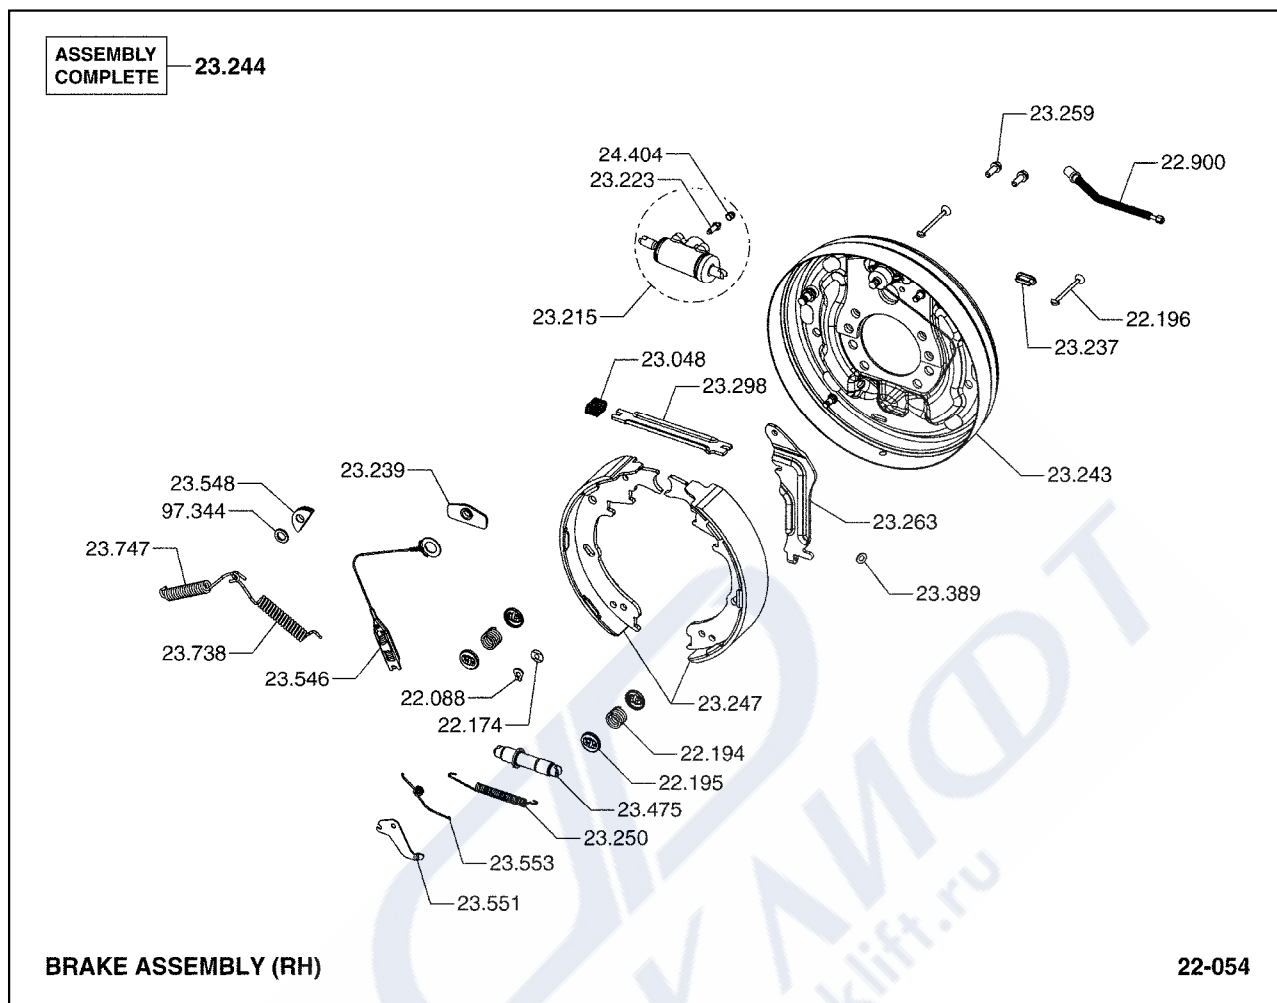 

22.088	RETAINER, PARKING BRAKE LINKAGE LEVER FULCRUM 리테이너
22.174	WASHER, PARKING BRAKE LINKAGE LEVER FULCRUM 와셔
22.194	SPRING, BRAKE SHOE GUIDE 스프링
22.195	CUP, BRAKE SHOE GUIDE 컵
22.196	LOCATOR, BRAKE SHOE 로케이터
22.900	CABLE, PARKING BRAKE DRAW - RH 케이블
23.048	SPRING, PARKING BRAKE OPERATING ARM ANTI-RATTLE 스프링
23.215	CYLINDER ASSEMBLY, RH BRAKE 실린더
23.223	BLEEDER, BRAKE WHEEL CYLINDER 블리더


23.237	COVER, RH BRAKE ADJUSTOR 커버
23.239	GUIDE, RH BRAKE SHOE 가이드
23.243	PLATE, RH BRAKE BACKING 플레이트
23.244	BRAKE ASSEMBLY, RH DRIVE WHEEL 브레이크
23.247	SHOE SET, BRAKE LINING 슈
23.250	SPRING, RH BRAKE RETURN 스프링
23.259	FASTENER, RH WHEEL CYLINDER 패스너
23.263	LEVER, PARKING BRAKE OPERATING 레버
23.298	ARM, BRAKE ADJUSTOR REACTION 암
23.389	RETAINER, PARKING BRAKE CABLE 리테이너
23.475	ADJUSTOR, BRAKE SHOE 어드져스터
23.546	CABLE, BRAKE ADJUSTER (RH) 케이블
23.548	GUIDE, BRAKE ADJUSTER CABLE (RH) 가이드
23.551	LEVER, BRAKE ADJUSTER (RH) 레버
23.553	SPRING, BRAKE ADJUSTER (RH) 스프링
23.738	SPRING, BRAKE SHOE RETURN (RH) 스프링
23.747	SPRING, BRAKE SHOE RETURN (LH) 스프링
24.404	CAP, BRAKE WHEEL CYLINDER BLEEDER 캡
97.344	FASTENER, BRAKE ADJUSTOR CABLE GUIDE 패스너

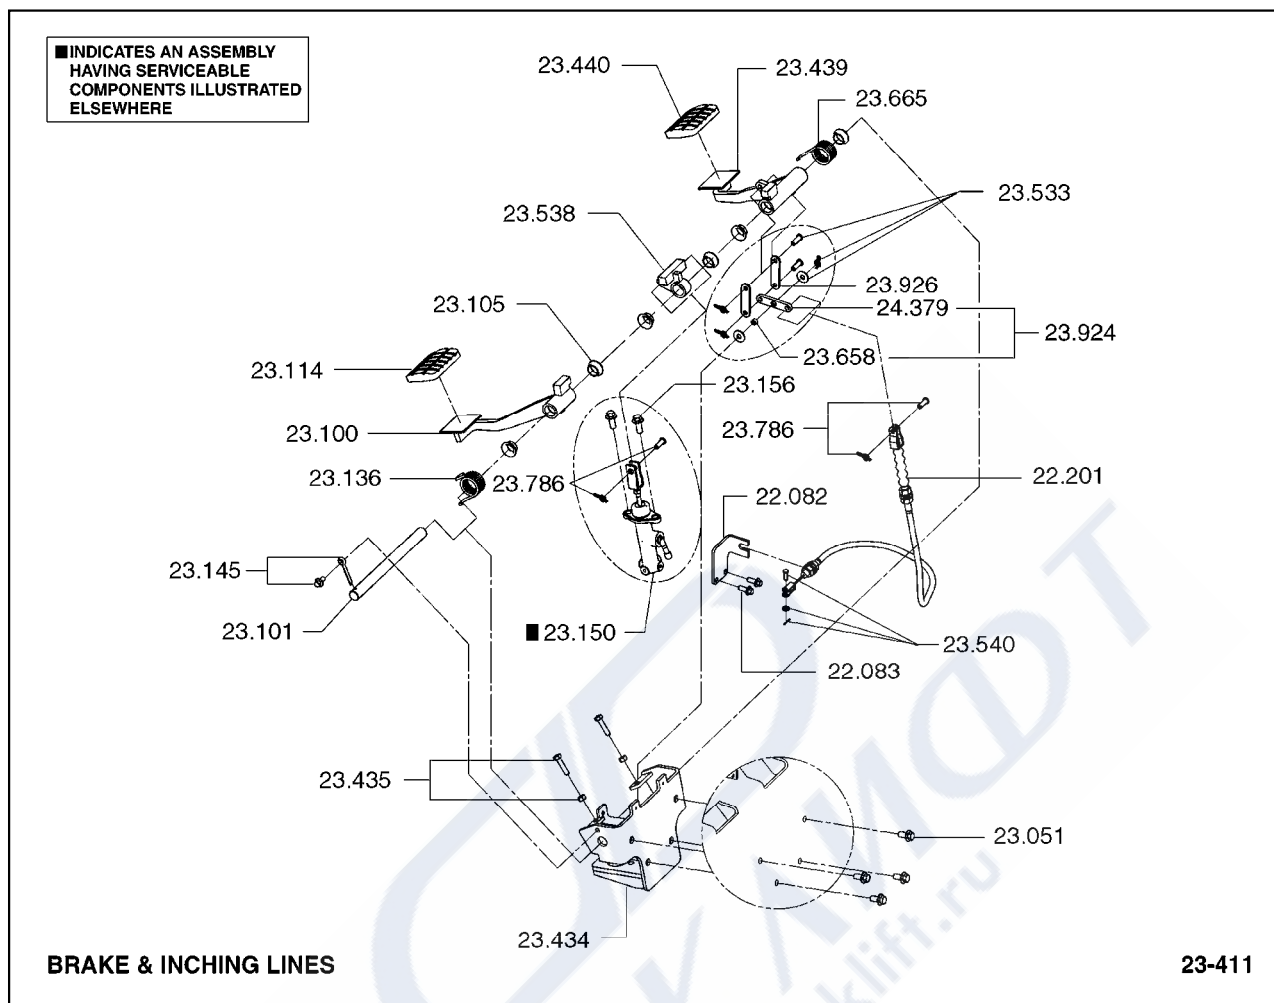 

22.082	BRACKET, BRAKE CABLE (BRAKE END) 브라켓
22.083	FASTENER, BRAKE CABLE BRACKET (BRAKE END) 패스너
22.122	FASTENER, BRAKE PEDAL PIVOT RETAINER 패스너
22.201	CABLE, INCHING 케이블
23.051	FASTENER, MASTER CYLINDER MOUNTING BRACKET 패스너
23.100	PEDAL, BRAKE 페달
23.101	SHAFT, BRAKE PEDAL 샤프트
23.105	BEARING, BRAKE PEDAL 베어링
23.114	PAD & FASTENER, BRAKE PEDAL 패드 & 패스너

23.136	SPRING, BRAKE PEDAL RETURN 스프링
23.145	FASTENER, BRAKE PEDAL SHAFT 패스너
23.150	CYLINDER ASSEMBLY, BRAKE MASTER COMPLETE 실린더
23.156	FASTENER, CYLINDER & TANK ATTACHING 패스너
23.434	BRACKET, BRAKE PEDAL PIVOT 브라켓
23.439	PEDAL, INCHING 페달
23.440	PAD & FASTENER, INCHING PEDAL 패드& 패스너
23.533	FASTENER, BRAKE LINK CLEVIS 패스너
23.538	ARM, BRAKE LINKAGE PIVOT 암
23.540	FASTENER, BRAKE LINKAGE PIVOT ARM 패스너
23.658	BEARING, BRAKE PEDAL LINK 베어링
23.665	SPRING, INCHING PEDAL RETURN 스프링
23.786	FASTENER, INCHING BRAKE PEDAL 패스너
23.924	LINK, BRAKE ADJUSTOR 링크
23.926	LINK, BRAKE ADJUSTOR 링크
24.379	LINK, INCHING 링크

 
■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

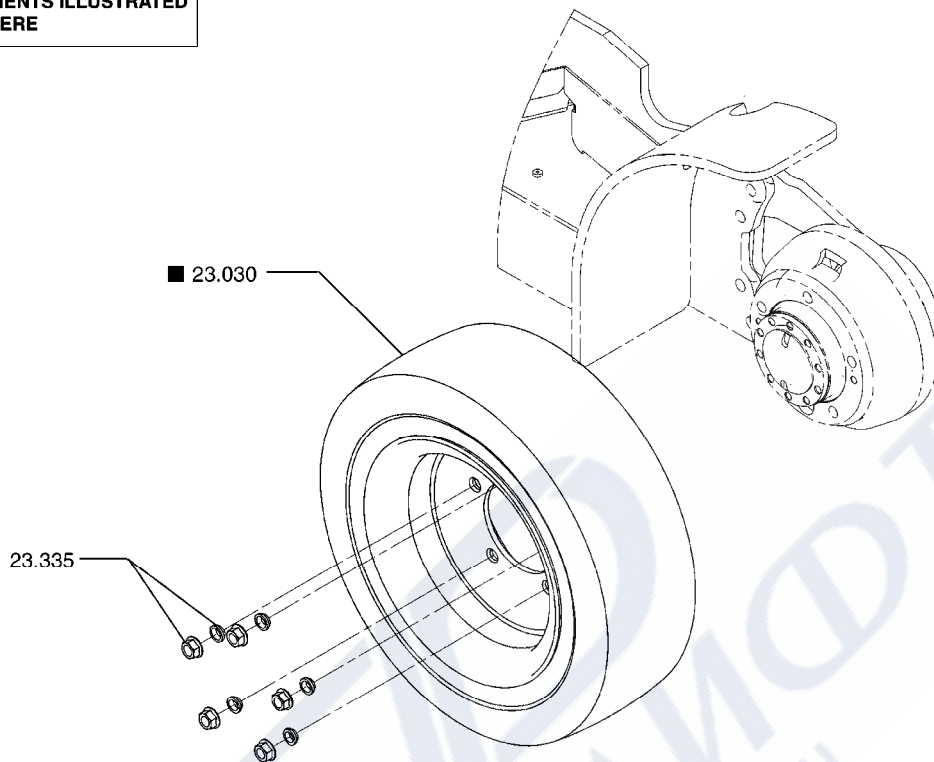

DRIVE WHEEL & TIRE MOUNTING

23-448

- | | |
|--------|---|
| 23.030 | DRIVE WHEEL AND TIRE ASSEMBLY
드라이브휠& 타이어 |
| 23.335 | FASTENER, DRIVE WHEEL
패스너 |

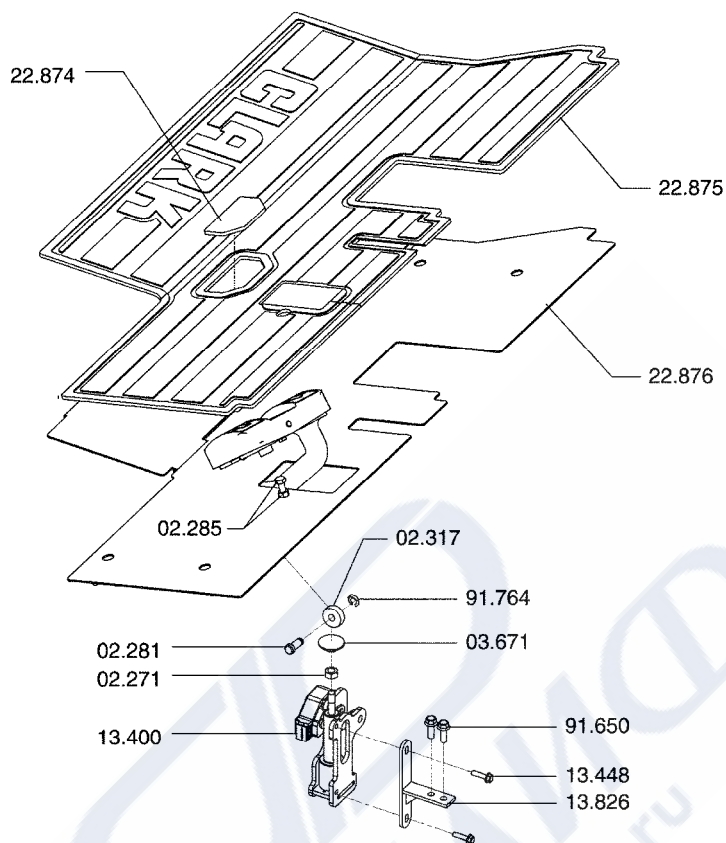 



UNITROL PEDAL MOUNTING

23-460

- | | |
|--------|---|
| 13.142 | SWITCH, BRAKE INTERLOCK
스위치 |
| 22.011 | COVER, BRAKE LINE REEL HOUSING
커버 |
| 22.023 | FASTENER, BRAKE LINE REEL
패스너 |
| 22.338 | CLAMP, BRAKE FLUID RESERVOIR
클램프 |
| 22.357 | CAP, BRAKE FLUID RESERVOIR
캡 |
| 22.452 | CLAMP, BRAKE MASTER CYLINDER FILLER LINE
클램프 |
| 22.528 | BLEEDER, BRAKE LINES ADAPTOR
블리더 |
| 22.627 | TEE, BRAKE LINE
티 |
| 22.951 | FASTENER, BRAKE LINE CLAMP
패스너 |

23.173	FITTING, BRAKE MASTER CYLINDER OUTLET 피팅
23.176	GASKET, BRAKE MASTER CYLINDER OUTLET FTG BOLT 가스켓
23.186	LINE, BRAKE MASTER CYLINDER OUTLET 라인
23.207	LINE, LH DRIVE WHEEL BRAKE CYLINDER TO TEE 라인
23.208	LINE, RH DRIVE WHEEL BRAKE CYLINDER TO TEE 라인
23.792	RESERVOIR, BRAKE FLUID 리저버
23.793	FASTENER, BRAKE FLUID RESERVOIR 패스너
23.794	LINE, BRAKE MASTER CYLINDER INLET 라인
23.906	CLAMP, BRAKE MASTER CYLINDER LINE 클램프

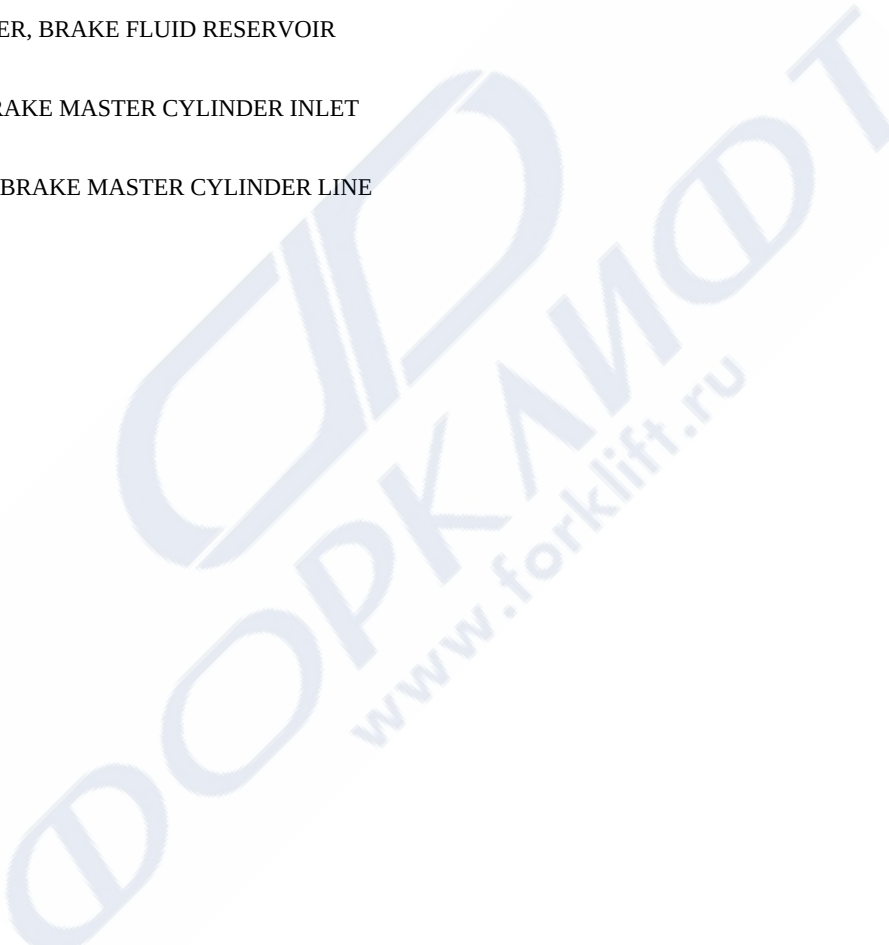 


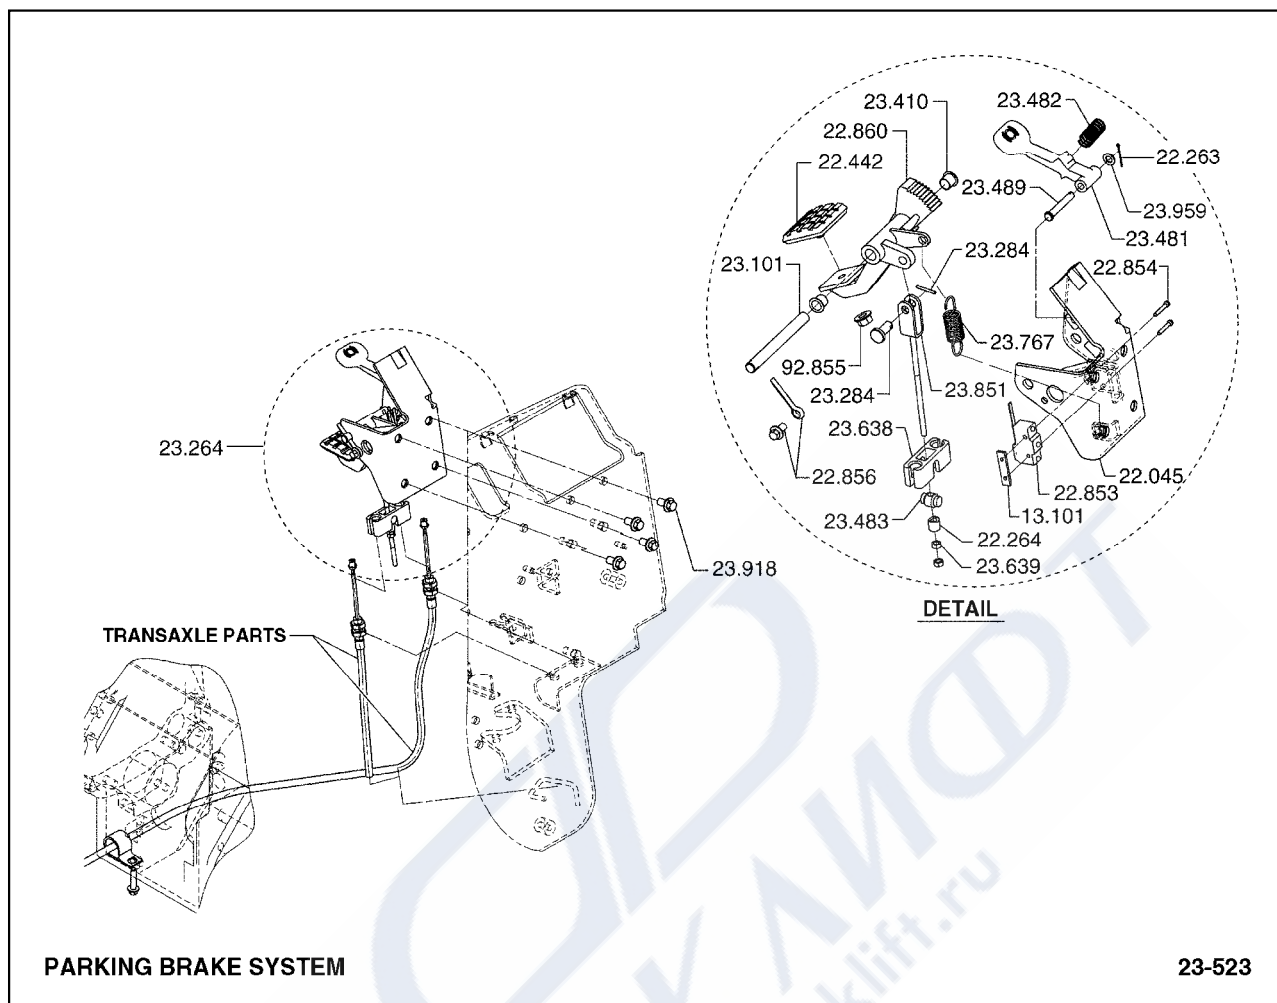 

- | | |
|--------|---|
| 13.101 | PLATE, BRAKE LOCK ACTUATING SWITCH
플레이트 |
| 22.045 | BRACKET, PARKING BRAKE PEDAL PIVOT MTG
브라켓 |
| 22.263 | RETAINER, PARKING BRAKE RELEASE LEVER PIVOT
리테이너 |
| 22.264 | ADJUSTOR, PARKING BRAKE
어드저스터 |
| 22.442 | PAD, PARKING BRAKE PEDAL
패드 |
| 22.853 | SWITCH, PARKING BRAKE PEDAL ACTUATING
스위치 |
| 22.854 | FASTENER, PARKING BRAKE PEDAL ACTUATING
패스너 |
| 22.855 | PIVOT, PARKING BRAKE PEDAL
피봇 |
| 22.856 | RETAINER, PARKING BRAKE PEDAL PIVOT
리테이너 |

22.860	PEDAL, PARKING BRAKE 페달
22.895	FASTENER, PARKING BRAKE PEDAL PIVOT RETAINER 패스너
23.264	BRAKE ASSEMBLY, PARKING 브레이크
23.284	FASTENER, PARKING BRAKE CABLE BRACKET 패스너
23.410	BEARING, PARKING BRAKE CAM ROLLER 베어링
23.481	LEVER, PARKING BRAKE RELEASE 레버
23.482	SPRING, PARKING BRAKE RELEASE LEVER 스프링
23.483	PIVOT, PARKING BRAKE RELEASE LEVER 피봇
23.489	PIVOT, PARKING BRAKE RELEASE LEVER 피봇
23.638	ANCHOR, PARKING BRAKE CABLE 앵커
23.639	FASTENER, PARKING BRAKE CABLE ANCHOR 패스너
23.767	SPRING, PARKING BRAKE DRAW 스프링
23.851	LINK, PARKING BRAKE 링크
23.918	FASTENER, PARKING BRAKE PEDAL PIVOT BRACKET 패스너
23.959	FASTENER, PARKING BRAKE RELEASE VALVE 패스너
92.855	NUT, PARKING BRAKE FASTENER 너트

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

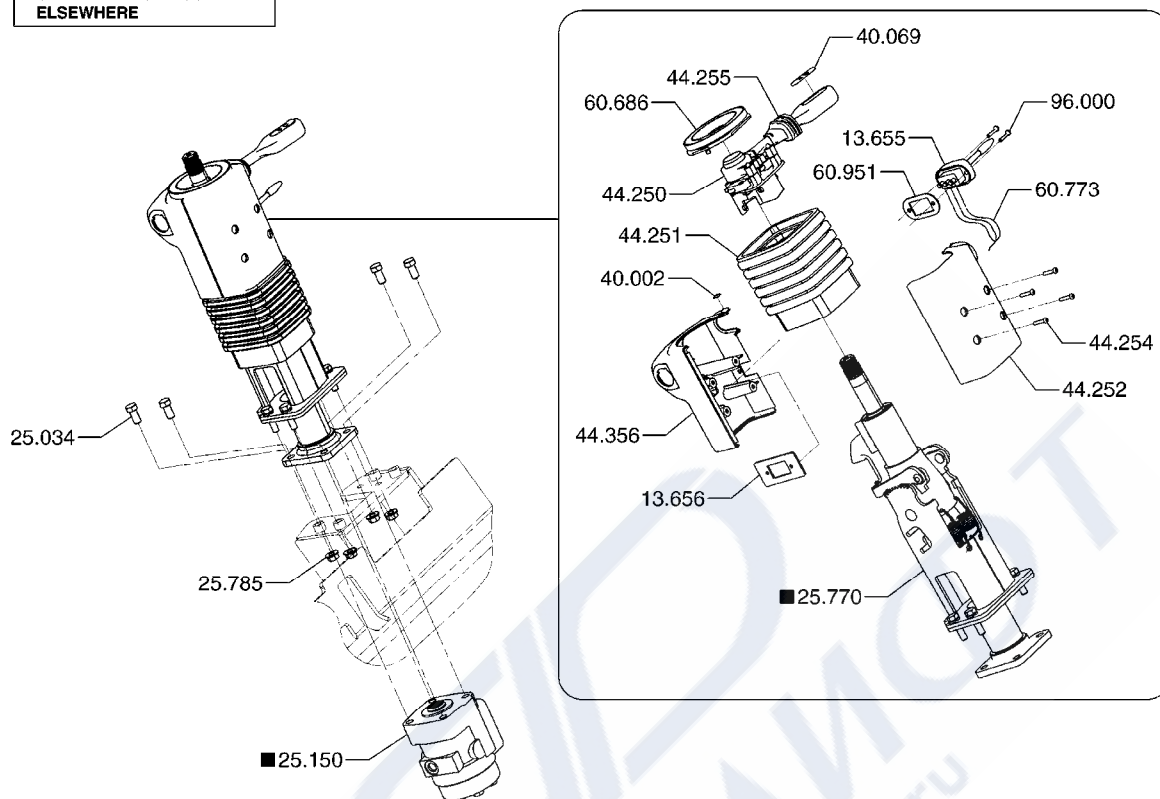

STEER COLUMN & GEAR MOUNTING

25-050


- | | |
|--------|--|
| 05.185 | BASE, DIRECTIONAL SELECTOR LEVER
베이스 |
| 06.101 | LEVER ASSEMBLY, FORWARD & REVERSE
레버 |
| 13.110 | SWITCH, DIRECTIONAL CONTROL (FORWARD)
스위치 |
| 13.111 | FASTENER, DIRECTIONAL CONTROL SWITCH
패스너 |
| 13.130 | FASTENER, DIRECTION CONTROL LEVER
패스너 |
| 13.655 | SWITCH, TURN INDICATOR
스위치 |
| 13.656 | BRACKET, TURN INDICATOR SWITCH
브라켓 |
| 25.034 | FASTENER, STEERING GEAR ATTACHING
패스너 |
| 25.150 | GEAR BOX ASSEMBLY, STEERING
기어박스 |

25.770	SHAFT & COLUMN ASSY, POWER STEERING (TILT) 샤프트& 컬럼
25.785	FASTENER, TILT STEERING SHAFT & COLUMN ASSEMBLY 패스너
40.002	LEGEND, SHIFT PATTERN 범례
40.069	DECAL, FORWARD-BACKWARD 데칼
44.250	DIRECTIONAL CONTROL ASSEMBLY 방향컨트롤
44.251	HOUSING, DIRECTIONAL CONTROL ASSEMBLY 하우징
44.252	COVER, DIRECTIONAL CONTROL ASSEMBLY HOUSING 커버
44.254	FASTENER, DIRECTIONAL CONTROL ASSY HOUSING COVER 패스너
44.255	SEAL, DIRECTIONAL CONTROL ASSY LEVER 씰
44.356	COVER, DIRECTIONAL CONTROL ASSEMBLY HOUSING REAR 커버
60.483	RETAINER, DIRECTIONAL CONTROL LEVER 리테이너
60.686	RING, HORN CONTACT 링
60.773	HARNESS, TURN SIGNAL 하네스
60.951	GROMMET, TURN INDICATOR SWITCH 그로멧
67.017	FASTENER, DIRECTIONAL CONTROL DETENT SUPPORT 패스너
67.018	SPRING, DIRECTIONAL CONTROL DETENT 스프링
96.000	FASTENER, TURN INDICATOR SWITCH 패스너

ASSEMBLY
COMPLETE — 25.150

SEAL KIT
INCLUDES ITEMS
MARKED "K" — 25.109

 
NEEDLE BEARING KIT
INCLUDES ITEMS
MARKED "R" — 25.972

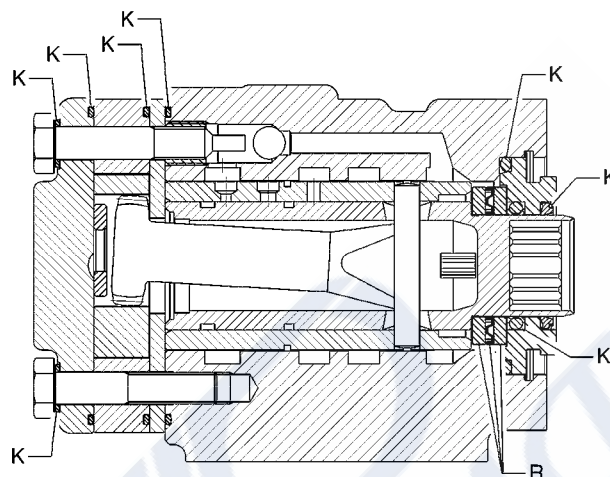

STEERING UNIT

25-076


- | | |
|--------|-------------------------------------|
| 25.109 | KIT, STEER GEAR SEAL
키트 |
| 25.150 | GEAR BOX ASSEMBLY, STEERING
기어박스 |
| 25.972 | BEARING KIT, STEERING GEAR
베어링키트 |

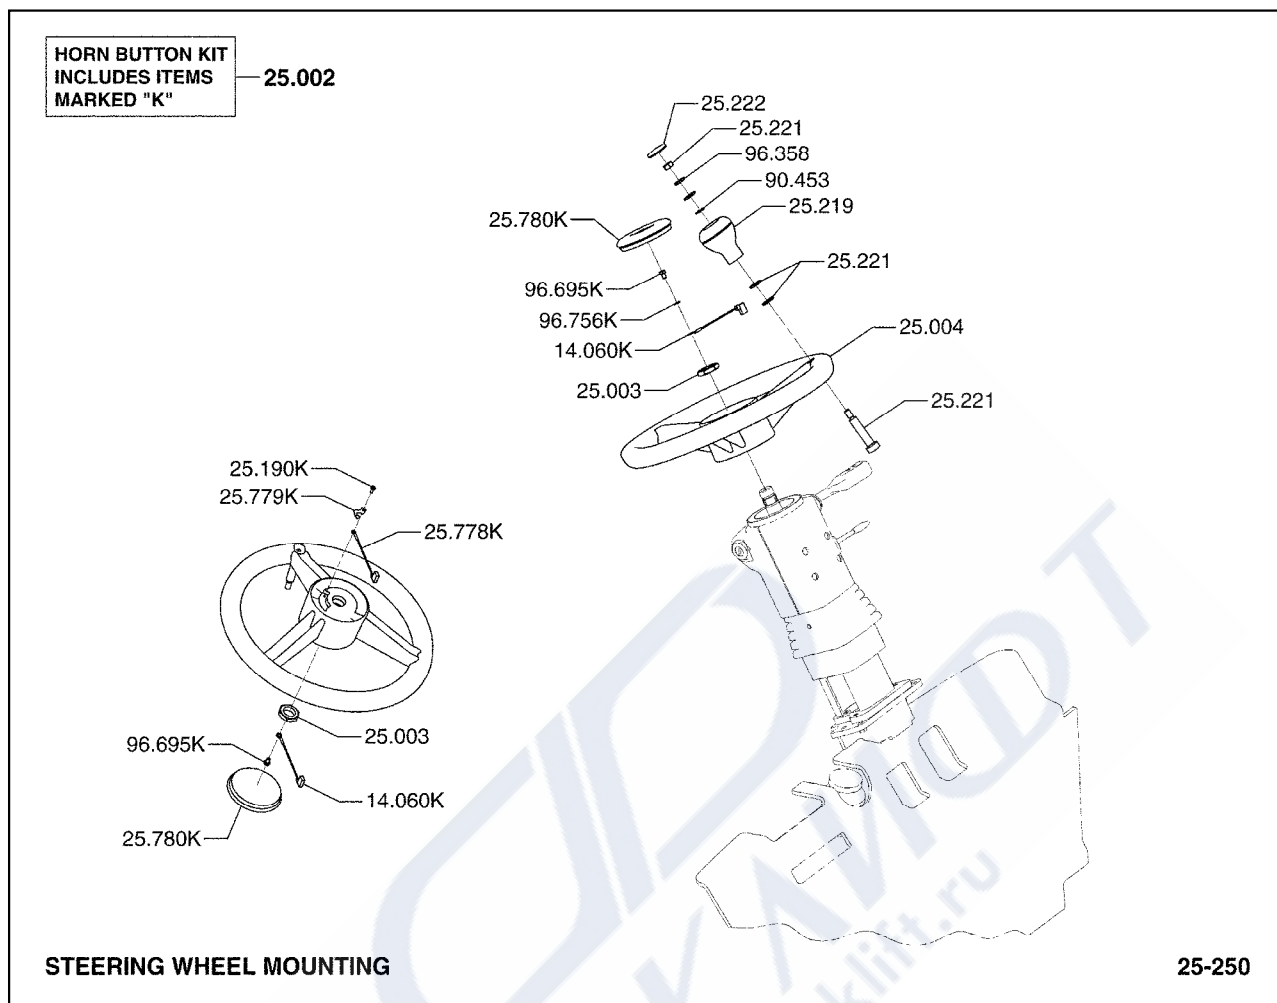 

14.060	WIRE, HORN BUTTON TERM TO CONNECTOR 와이어
25.002	HORN BUTTON KIT 혼버튼키트
25.003	NUT, HANDWHEEL 너트
25.004	HAND WHEEL, STEERING GEAR 핸드휠
25.190	FASTENER, HORN BUTTON 패스너
25.219	KNOB, STEERING HAND WHEEL SPINNER 노브
25.221	FASTENER, STEERING SPINNER KNOB 패스너
25.222	CAP, STEERING SPINNER KNOB 캡
25.778	WIRE, CONTACT HORN 와이어

25.779	CONTACT, HORN 컨택트
25.780	HORN BUTTON 혼버튼
90.453	WASHER, STEERING SPINNER KNOB FASTENER 와셔
96.358	WASHER, STEERING HANDWHEEL SPINNER KNOB FASTENER 와셔
96.695	FASTENER, WIRE MOUNTING 패스너
96.756	WASHER, WIRE MOUNTING FASTENER 와셔



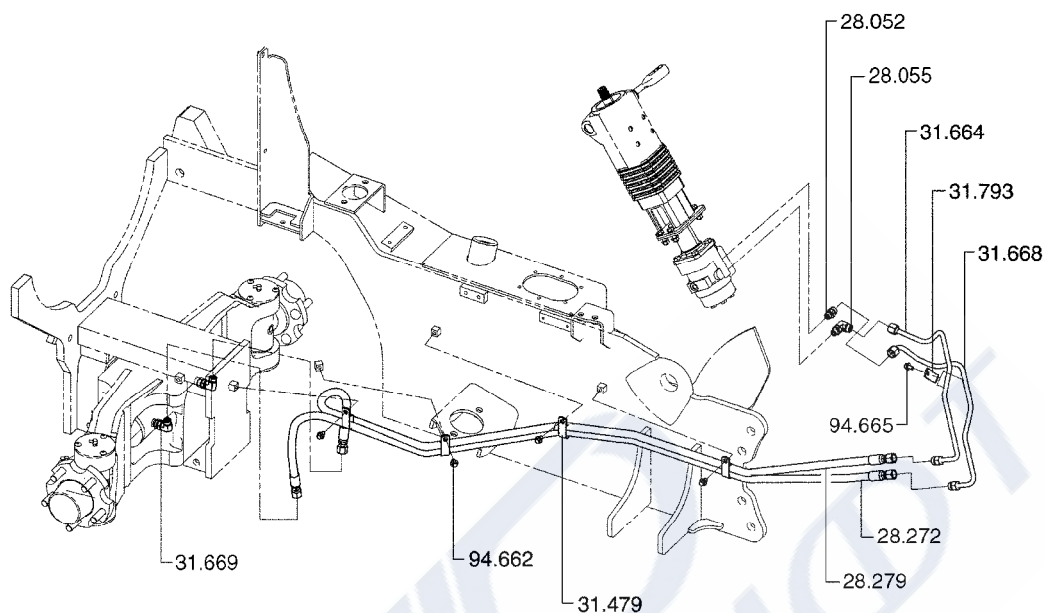 


HYDRAULIC STEERING LINES

26-026

28.052	FITTING, STEERING GEAR 피팅
28.055	FITTING, STEERING GEAR 피팅
28.272	LINE, STEER CYLINDER INLET 라인
28.279	LINE, STEER CYLINDER INLET 라인
31.479	CLAMP, STEERING LINES 클램프
31.664	LINE, STEERING CYLINDER ANCHOR PORT 라인
31.668	LINE, STEERING CYLINDER ROD PORT 라인
31.669	FITTING, STEERING CYLINDER ROD PORT 피팅
31.793	CLAMP, POWER STEERING LINES 클램프


94.662	FASTENER, POWER STEERING LINES CLAMP 패스너
94.665	FASTENER, POWER STEERING LINES CLAMP 패스너



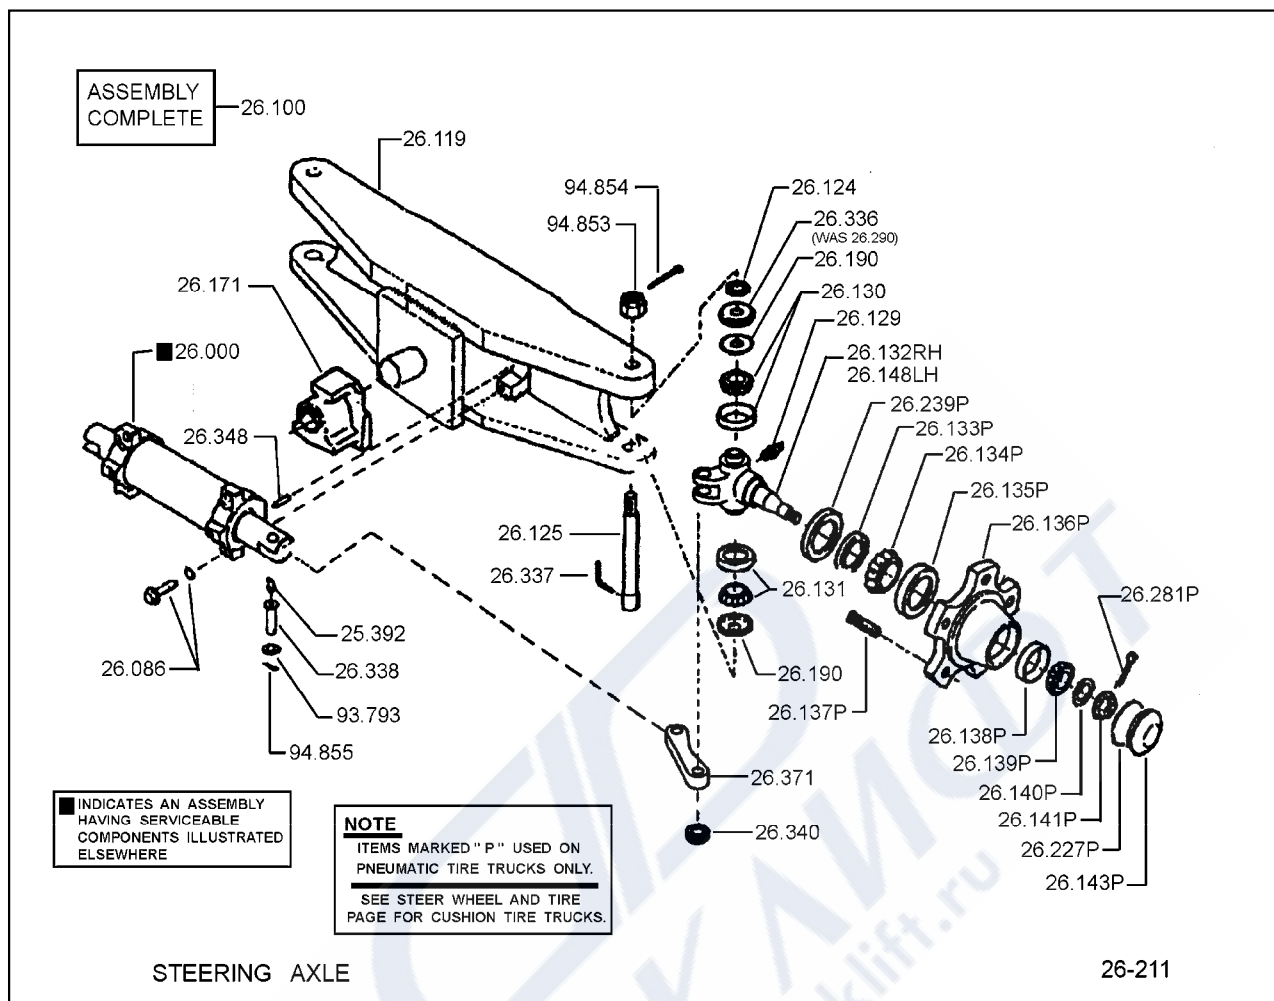 

25.392	FITTING-LUB, STEERING ARM 피팅	26.137	FASTENER, STEER WHEEL 패스너
26.000	CYLINDER ASSEMBLY, STEERING 실린더	26.138	CUP, STEER WHEEL HUB BEARING (OUTER) 컵
26.086	FASTENER, STEERING CYLINDER ANCHOR END 패스너	26.139	CONE, STEER WHEEL HUB BEARING (OUTER) 콘
26.100	AXLE ASSEMBLY, STEERING 스티어액슬	26.140	WASHER, STEER WHEEL HUB BEARING THRUST 와셔
26.119	AXLE, STEER 액슬	26.141	FASTENER, STEER WHEEL HUB 패스너
26.124	SHIM, STEER AXLE KNUCKLE 심	26.143	CAP, STEER WHEEL HUB 캡
26.125	PIN, STEER AXLE KNUCKLE 핀	26.148	KNUCKLE, STEER AXLE (LH) 너트
26.129	FITTING - LUB, STEER AXLE KNUCKLE 피팅	26.171	SILENT BLOCK, AXLE MOUNTING (FRONT) 사일런트블록
26.130	BEARING, STEER AXLE KNUCKLE PIN 베어링	26.190	SEAL, STEER AXLE KNUCKLE OIL 씰
26.131	BEARING, STEER AXLE KNUCKLE PIN LOWER 베어링	26.227	SEAL, STEER AXLE FORK HOUSING 씰
26.132	KNUCKLE, STEER AXLE (RH) 너트	26.239	SEAL, STEER AXLE FORK COVER 씰
26.133	SEAL, STEER WHEEL HUB 씰	26.281	RETAINER, STEER AXLE HUB BRG KNUCKLE NUT 리테이너
26.134	CONE, STEER WHEEL HUB BEARING (INNER) 콘	26.336	SEAL, STEER AXLE KNUCKLE OIL 씰
26.135	CUP, STEER WHEEL HUB BEARING (INNER) 컵	26.337	LOCATOR, STEER AXLE KNUCKLE PIN 로케이터
26.136	HUB & CUP, STEER WHEEL 허브& 컵	26.338	PIN, STEERING ARM 핀


26.340	BEARING, STEERING ARM PIN 베어링
26.348	LOCATOR, STEER CYLINDER 로케이터
26.371	TIE ROD, STEER AXLE 타이로드
93.793	WASHER, STEERING ARM PIVOT FASTENER 와셔
94.853	FASTENER, STEER AXLE KNUCKLE PIN 패스너
94.854	COTTER, STEER AXLE KNUCKLE PIN FASTENER 커터
94.855	RETAINER, STEERING ARM PIN 리테이너

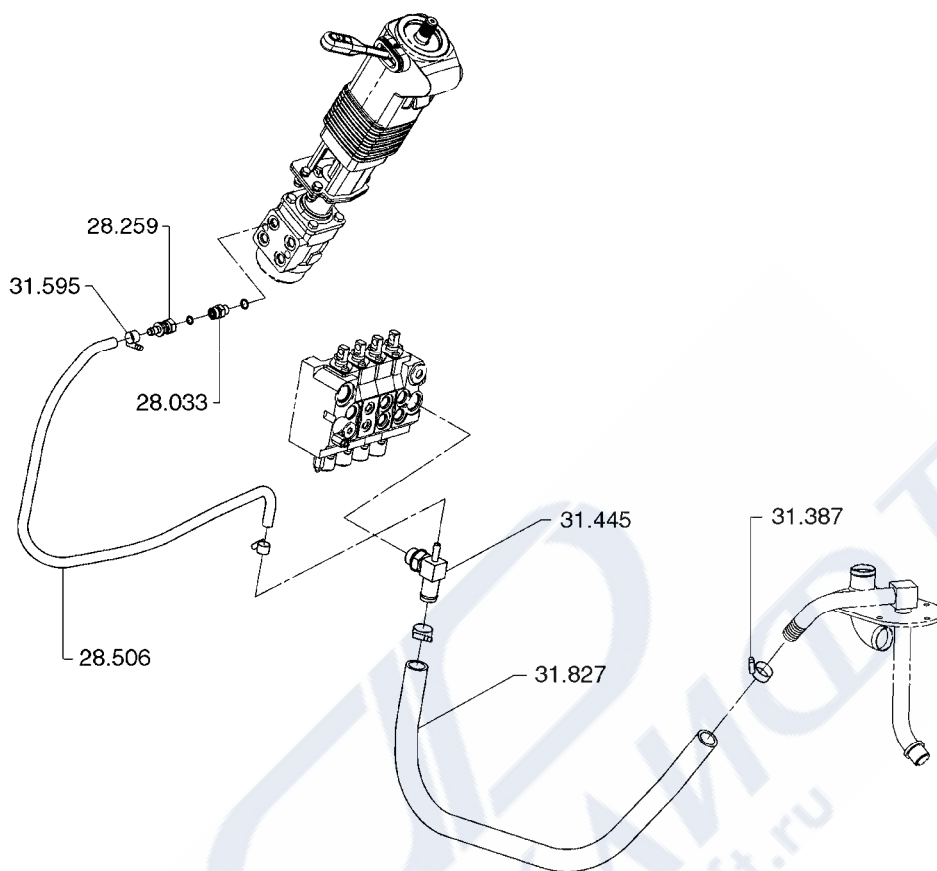 

HYDRAULIC RETURN LINES


26-225

28.033	FITTING, SUMP RETURN 피팅
28.259	FITTING, SUMP RETURN LINE 피팅
28.506	LINE, SUMP RETURN 라인
31.387	CLAMP, MAIN VALVE TO SUMP LINE 클램프
31.445	FITTING, MAIN VALVE TO FILTER LINE 피팅
31.595	CLAMP, SUMP RETURN LINE FITTING 클램프
31.827	LINE, FILTER INLET 라인

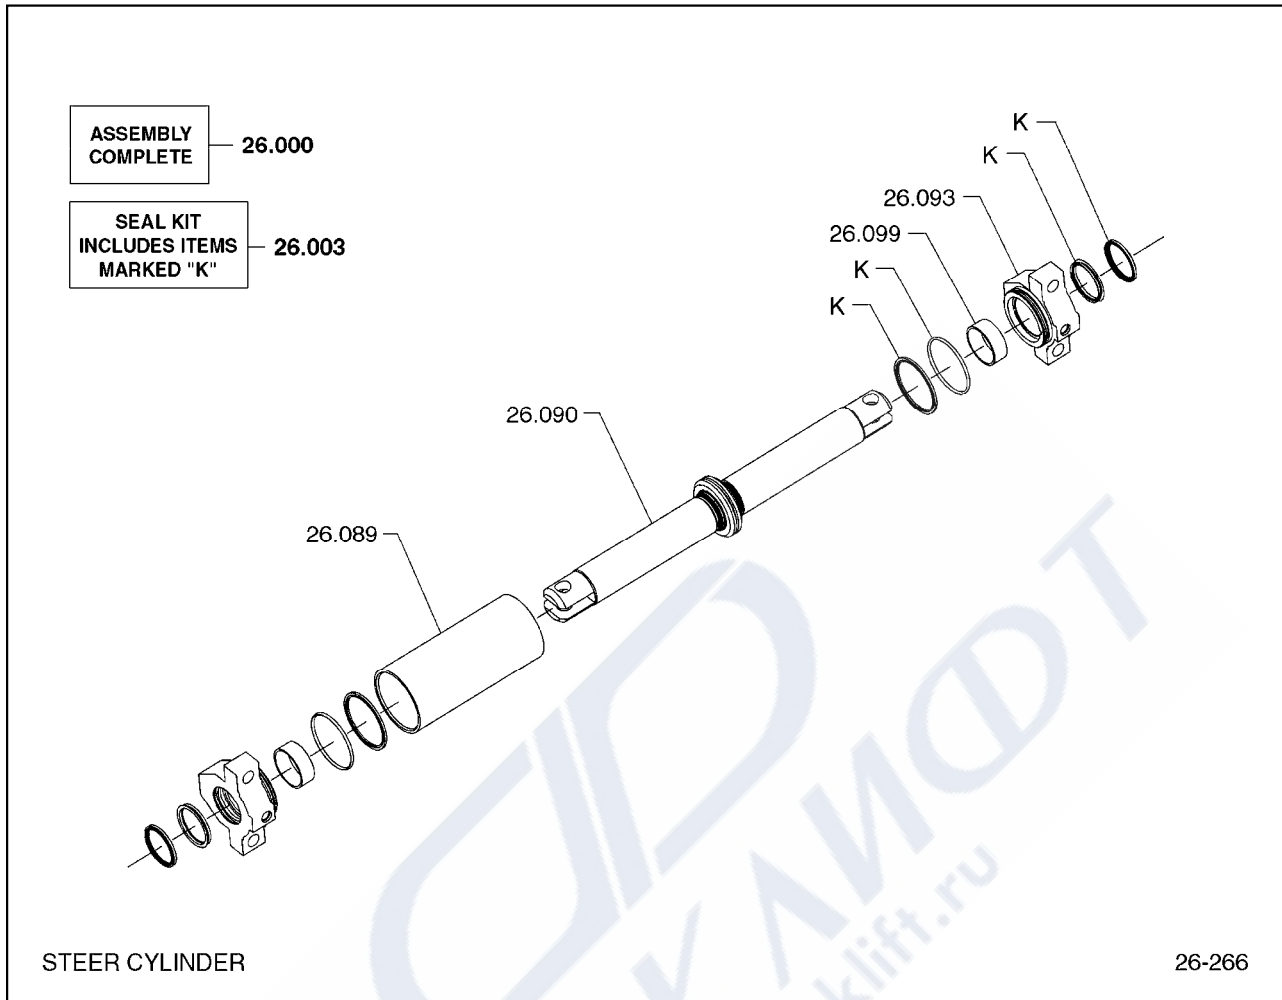 

26.000	CYLINDER ASSEMBLY, STEERING 실린더
26.003	SEAL KIT, PISTON ROD 씰키트
26.089	BARREL, STEERING CYLINDER 배럴
26.090	STEER CYLINDER PISTON 스티어실린더피스톤
26.093	GLAND, STEERING CYLINDER 그랜드
26.099	BUSHING, STEERING CYLINDER GLAND 부싱

 
■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

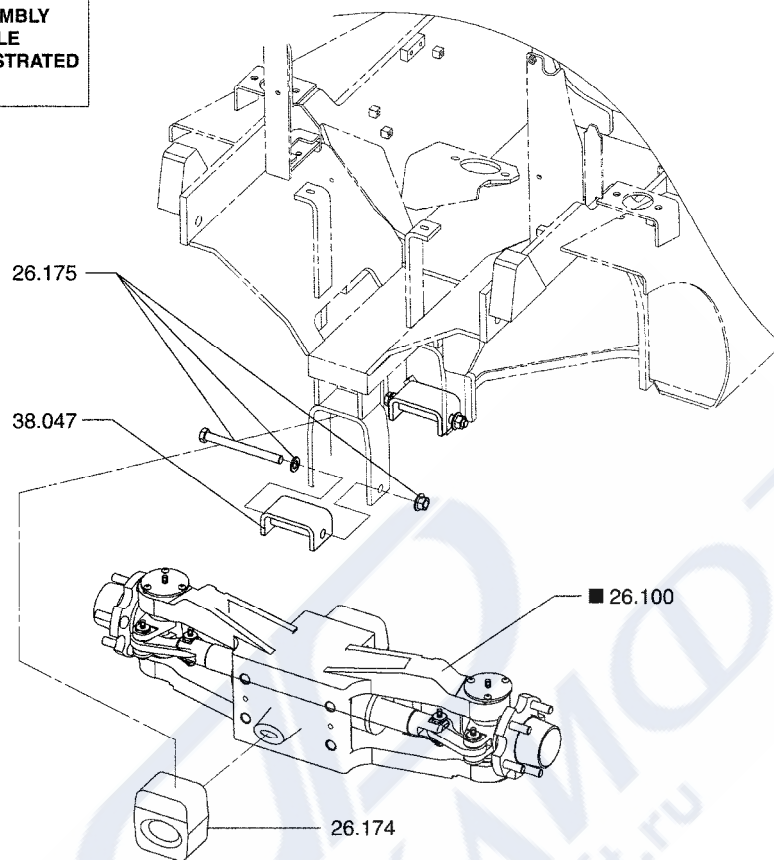


STEER AXLE MOUNTING

26-273

- | | |
|--------|---|
| 26.100 | AXLE ASSEMBLY, STEERING
스티어액슬 |
| 26.174 | SILENT BLOCK, AXLE MOUNTING (REAR)
사일런트블록 |
| 26.175 | FASTENER, SILENT BLOCK TO FRAME (REAR)
패스너 |
| 38.047 | BRACKET, STEER AXLE MOUNTING
브라켓 |

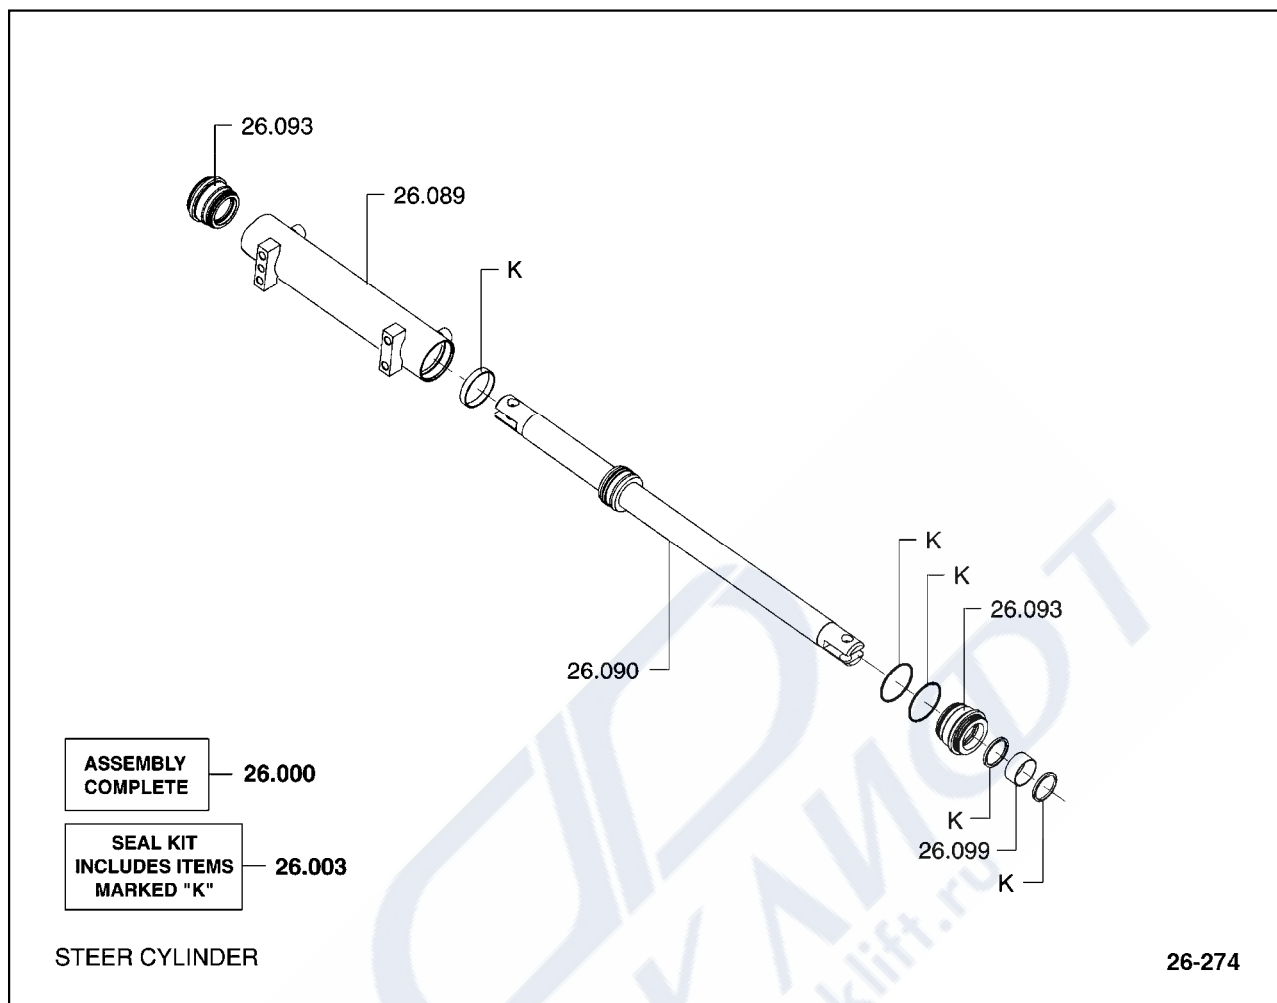 


26.000	CYLINDER ASSEMBLY, STEERING 실린더
26.003	SEAL KIT, PISTON ROD 씰키트
26.089	BARREL, STEERING CYLINDER 배럴
26.090	STEER CYLINDER PISTON 스티어실린더피스톤
26.093	GLAND, STEERING CYLINDER 그랜드
26.099	BUSHING, STEERING CYLINDER GLAND 부싱

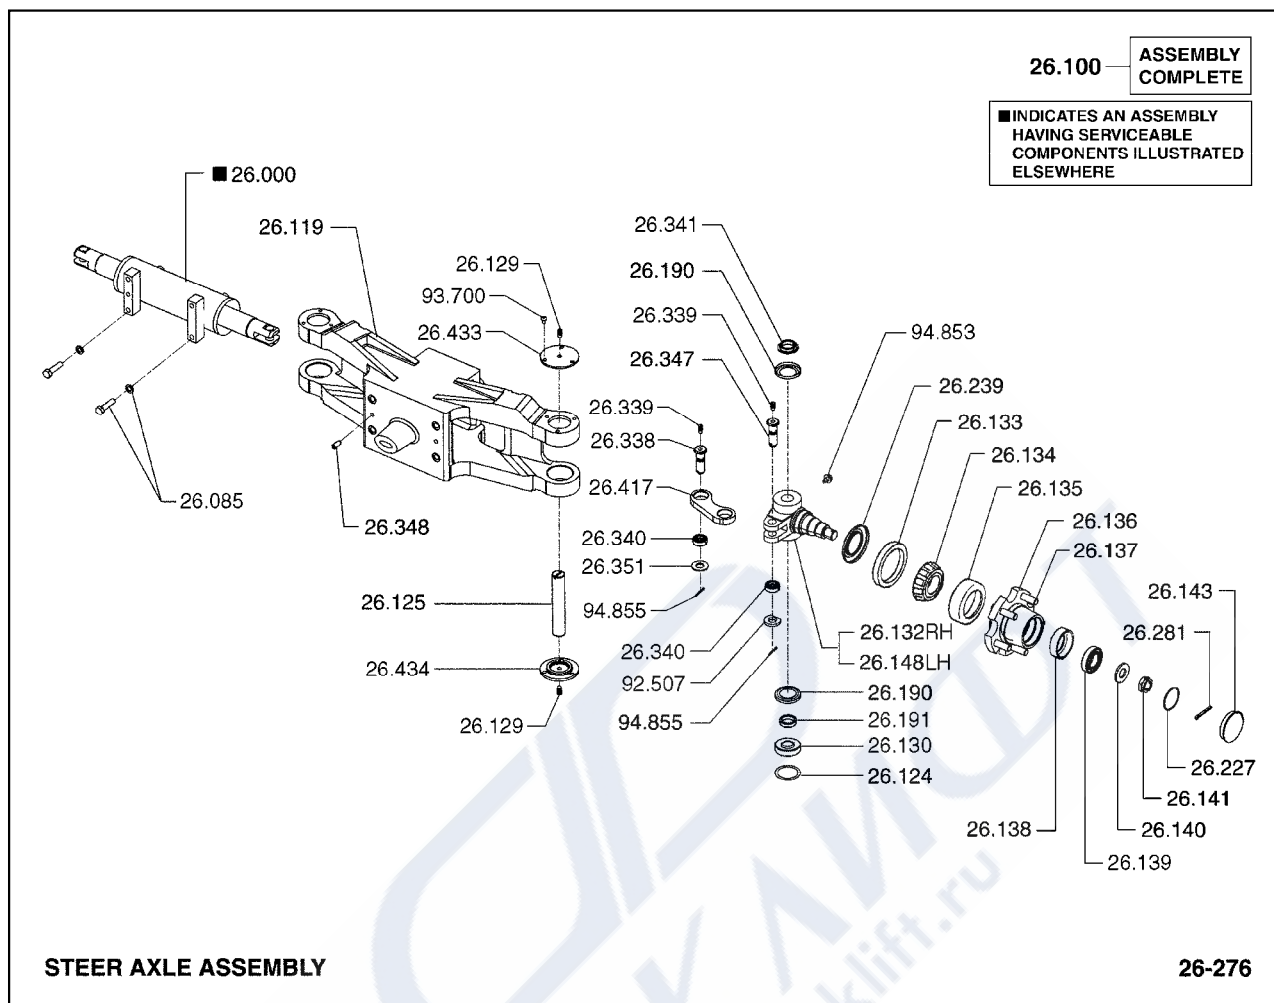 


26.000	CYLINDER ASSEMBLY, STEERING 실린더	26.139	CONE, STEER WHEEL HUB BEARING (OUTER) 콘
26.085	FASTENER, STEERING CYLINDER MOUNTING BRKT 패스너	26.140	WASHER, STEER WHEEL HUB BEARING THRUST 와셔
26.100	AXLE ASSEMBLY, STEERING 스티어액슬	26.141	FASTENER, STEER WHEEL HUB 패스너
26.119	AXLE, STEER 액슬	26.143	CAP, STEER WHEEL HUB 캡
26.124	SHIM, STEER AXLE KNUCKLE 심	26.148	KNUCKLE, STEER AXLE (LH) 너트
26.125	PIN, STEER AXLE KNUCKLE 핀	26.190	SEAL, STEER AXLE KNUCKLE OIL 씰
26.129	FITTING - LUB, STEER AXLE KNUCKLE 피팅	26.191	PLUG - EXPANSION, STEER AXLE KNUCKLE PIN 플러그
26.130	BEARING, STEER AXLE KNUCKLE PIN 베어링	26.227	SEAL, STEER AXLE FORK HOUSING 씰
26.132	KNUCKLE, STEER AXLE (RH) 너트	26.239	SEAL, STEER AXLE FORK COVER 씰
26.133	SEAL, STEER WHEEL HUB 씰	26.281	RETAINER, STEER AXLE HUB BRG KNUCKLE NUT 리테이너
26.134	CONE, STEER WHEEL HUB BEARING (INNER) 콘	26.338	PIN, STEERING ARM 핀
26.135	CUP, STEER WHEEL HUB BEARING (INNER) 컵	26.339	LUB-FITTING, STEERING ARM 윤활피팅
26.136	HUB & CUP, STEER WHEEL 허브&컵	26.340	BEARING, STEERING ARM PIN 베어링
26.137	FASTENER, STEER WHEEL 패스너	26.341	SPACER, STEER AXLE PIVOT BUSHING 스페이서
26.138	CUP, STEER WHEEL HUB BEARING (OUTER) 컵	26.347	PIN, STEER ARM 핀

26.348	LOCATOR, STEER CYLINDER 로케이터
26.351	WASHER, STEERING ARM PIN 와셔
26.417	ARM, STEERING 암
26.433	COVER, STEER AXLE KNUCKLE PIVOT (TOP) 커버
26.434	COVER, STEER AXLE KNUCKLE PIVOT (BOTTOM) 커버
92.507	WASHER, STEERING ARM FASTENER 와셔
93.700	FASTENER, STEER AXLE KNUCKLE PIN COVER 패스너
94.853	FASTENER, STEER AXLE KNUCKLE PIN 패스너
94.855	RETAINER, STEERING ARM PIN 리테이너

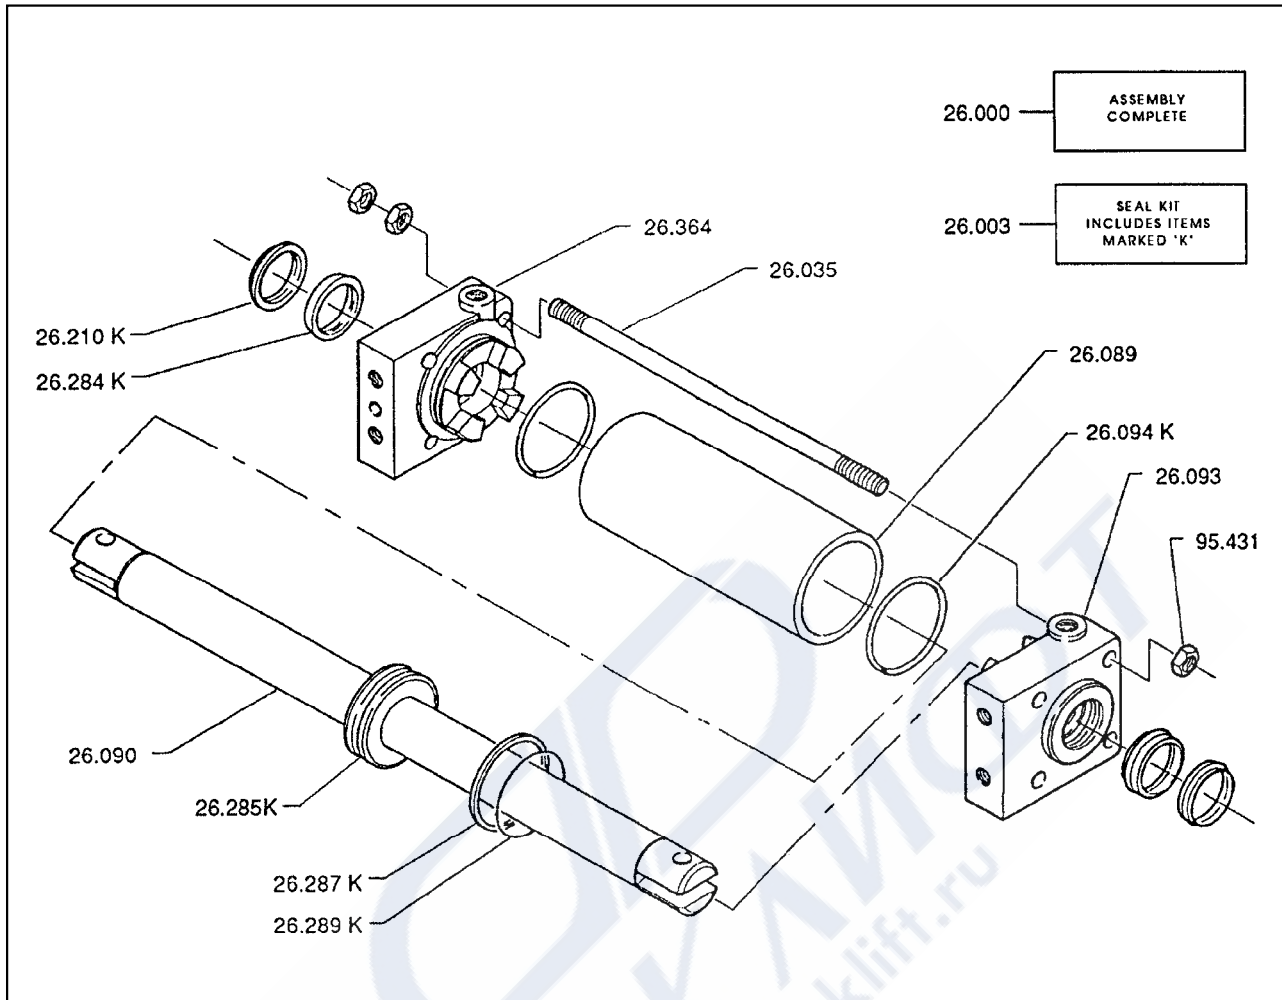 

26.000	CYLINDER ASSEMBLY, STEERING 실린더
26.003	SEAL KIT, PISTON ROD 씰키트
26.035	FASTENER, THRU 패스너
26.089	BARREL, STEERING CYLINDER 배럴
26.090	STEER CYLINDER PISTON 스티어실린더피스톤
26.093	GLAND, STEERING CYLINDER 그랜드
26.094	SEAL, STEERING CYLINDER GLAND 씰
26.210	WIPER, STEERING CYLINDER ROD 와이프
26.284	U-CUP, STEERING CYLINDER GLAND U컵


26.285	SEAL, STEERING CYLINDER PISTON ROD 씰
26.287	SEAL, STEERING CYLINDER PISTON 씰
26.289	EXPANDER, STEERING CYLINDER PISTON SEAL 익스팬더
26.364	GLAND, STEER CYLINDER LH 그랜드
95.431	NUT, STEERING CYLINDER THRU FASTENER 너트

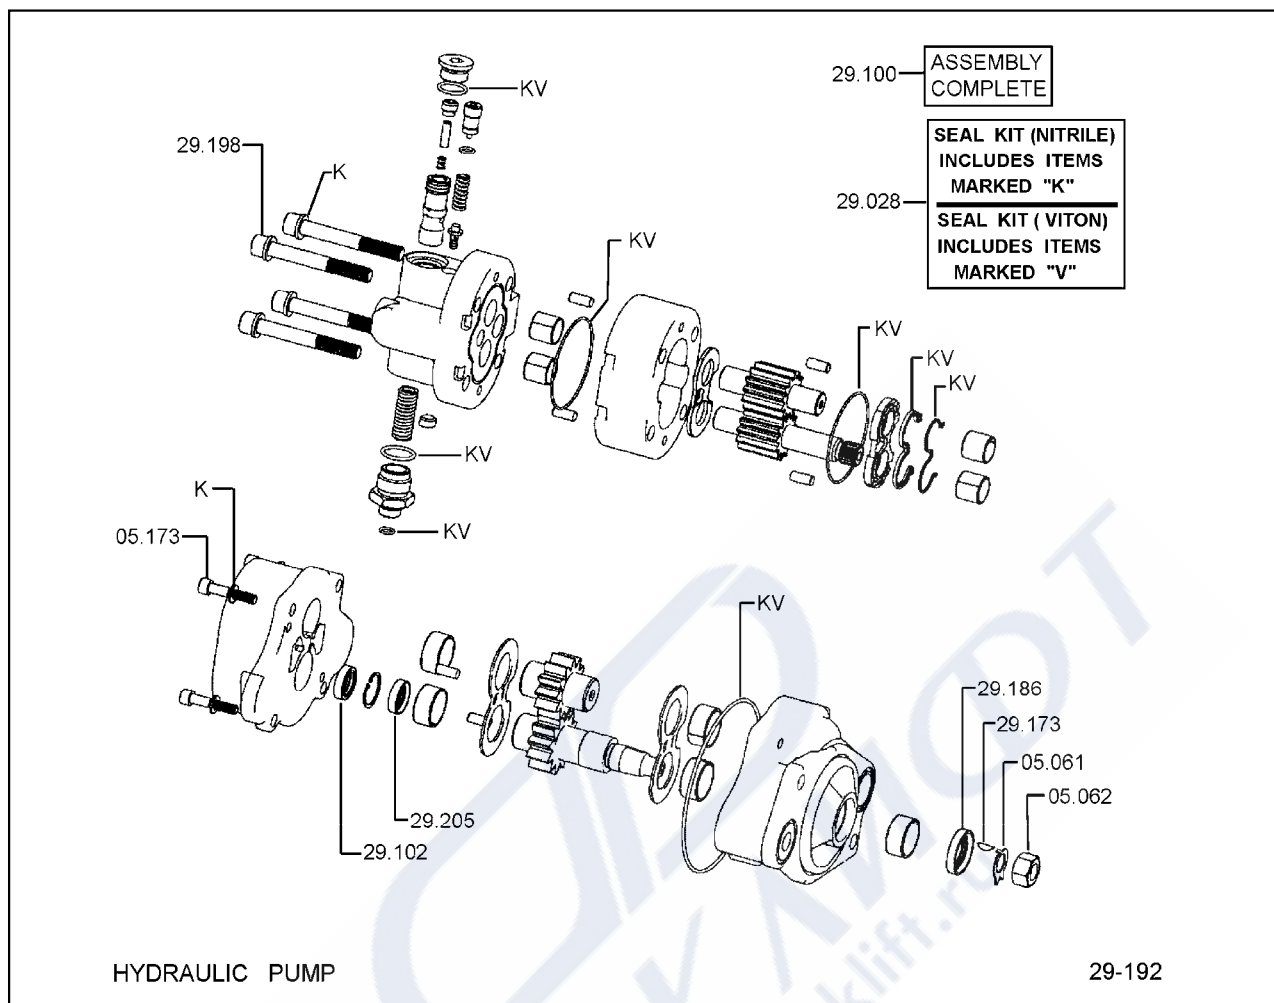 

05.061	RING-RETAINING, BEARING LOCATING 링
05.062	RING-RETAINING, PUMP SHAFT BEARING 링
05.173	FASTENER, CONVERTER PUMP COVER 패스너
29.028	SEAL KIT, HYDRAULIC UNIT PUMP 셀키트
29.100	PUMP ASSEMBLY, HYDRAULIC 펌프
29.102	SEAL, PUMP SHAFT 셀
29.173	KEY, PUMP GEAR 키
29.186	SEAL, PUMP SHAFT 셀
29.198	FASTENER, PUMP HOUSING 패스너

29.205 SEAL, PUMP SHAFT
셀

 ФОРКЛИФТ
www.forklift.ru

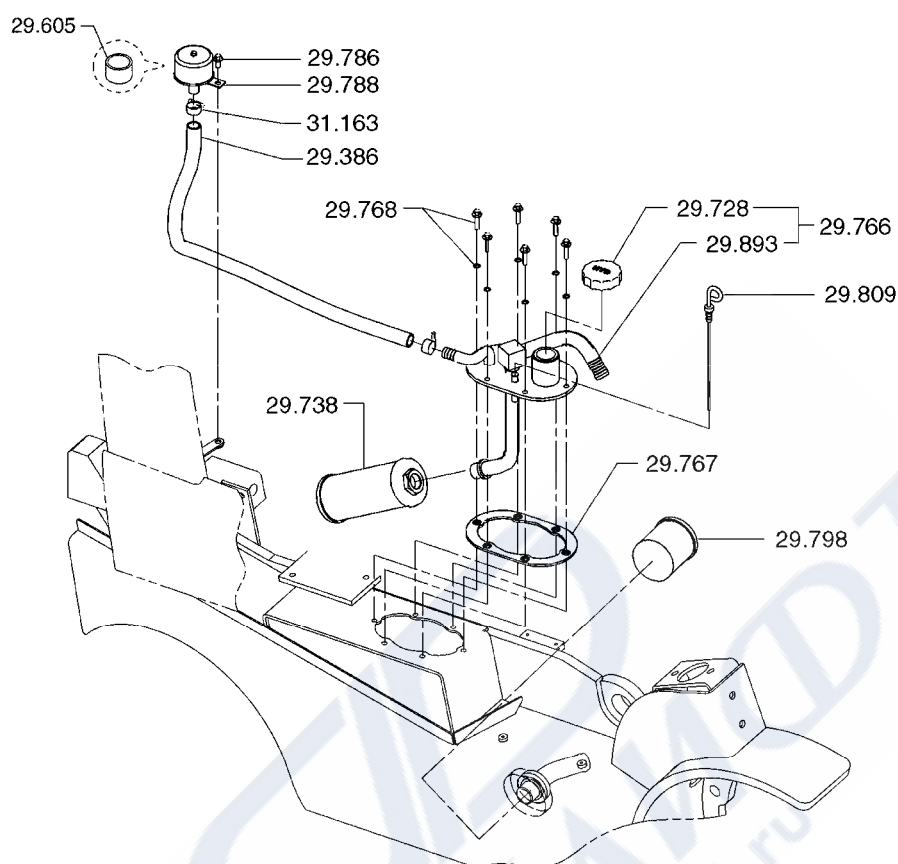

HYDRAULIC TANK & COMPONENTS MOUNTING

29-237


29.386	LINE, SUMP BREATHER 라인
29.605	FILTER, AIR BREATHER 필터
29.728	CAP, HYDRAULIC SUMP FILLER 캡
29.738	FILTER ASSEMBLY, HYDRAULIC SUMP 필터
29.766	COVER, SUMP TANK 커버
29.767	SEAL, SUMP TANK COVER 셀
29.768	FASTENER, SUMP TANK COVER 패스너
29.786	FASTENER, SUMP BREATHER 패스너
29.788	BREATHER, SUMP 브리더

29.798	SCREEN, HYDRAULIC SUMP PRE FILTER 스크린
29.809	DIPSTICK, SUMP LEVEL 딤스틱
29.893	PLATE, HYDRAULIC SUMP 플레이트
31.163	CLAMP, SUMP RETURN LINE 클램프



1ST AUXILIARY
VALVE KIT — 49.184

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

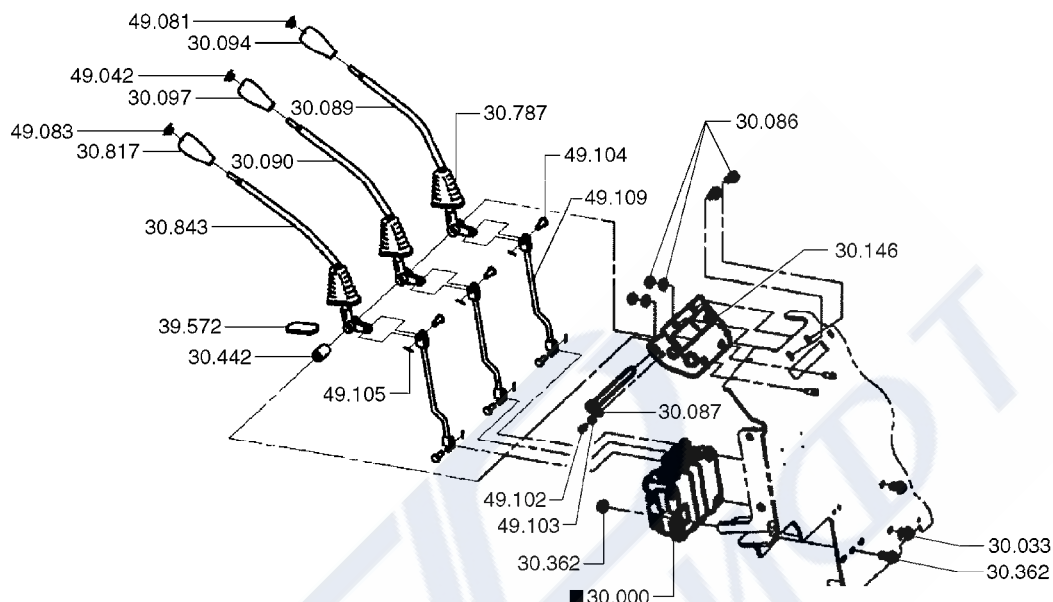


HYDRAULIC VALVE MOUNTING (3 SPOOL)

30-126

30.000	VALVE ASSEMBLY, HYDRAULIC 밸브
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너
30.086	FASTENER, CONTROL LEVER PIVOT BRACKET 패스너
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀
30.089	LEVER, LIFT CONTROL 레버
30.090	LEVER, TILT CONTROL 레버
30.094	KNOB, LIFT CONTROL LEVER 노브
30.097	KNOB, TILT CONTROL LEVER 노브
30.146	BRACKET, CONTROL LINKAGE LOWER 브라켓

30.362	FASTENER, VALVE MOUNTING PLATE 패스너
30.442	SPACER, CONTROL LEVERS 스페이서
30.787	BOOT, VALVE CONTROL LEVER 부트
30.817	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버
39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.083	CAP, VALVE CONTROL LEVER DECAL 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.103	RETAINER, VALVE CONTROL LEVER PIVOT PIN 리테이너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너
49.109	ROD, VALVE CONTROL CLEVIS 로드
49.184	VALVE KIT, 2ND AUXILIARY 밸브키트

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

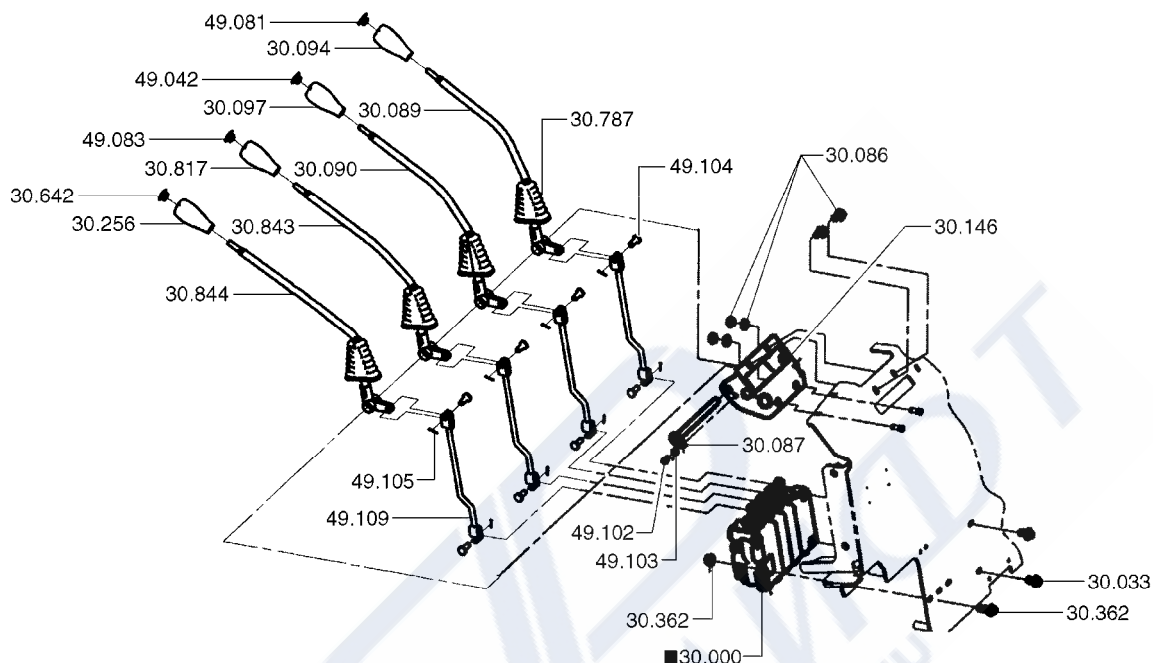


HYDRAULIC VALVE MOUNTING (4 SPOOL)

30-127


30.000	VALVE ASSEMBLY, HYDRAULIC 밸브
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너
30.086	FASTENER, CONTROL LEVER PIVOT BRACKET 패스너
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀
30.089	LEVER, LIFT CONTROL 레버
30.090	LEVER, TILT CONTROL 레버
30.094	KNOB, LIFT CONTROL LEVER 노브
30.097	KNOB, TILT CONTROL LEVER 노브
30.146	BRACKET, CONTROL LINKAGE LOWER 브라켓

30.256	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.362	FASTENER, VALVE MOUNTING PLATE 패스너
30.642	CAP, AUXILIARY VALVE SPOOL 캡
30.787	BOOT, VALVE CONTROL LEVER 부트
30.817	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버
30.844	LEVER, AUXILIARY VALVE CONTROL (2ND AUX) 레버
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.083	CAP, VALVE CONTROL LEVER DECAL 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.103	RETAINER, VALVE CONTROL LEVER PIVOT PIN 리테이너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너
49.109	ROD, VALVE CONTROL CLEVIS 로드

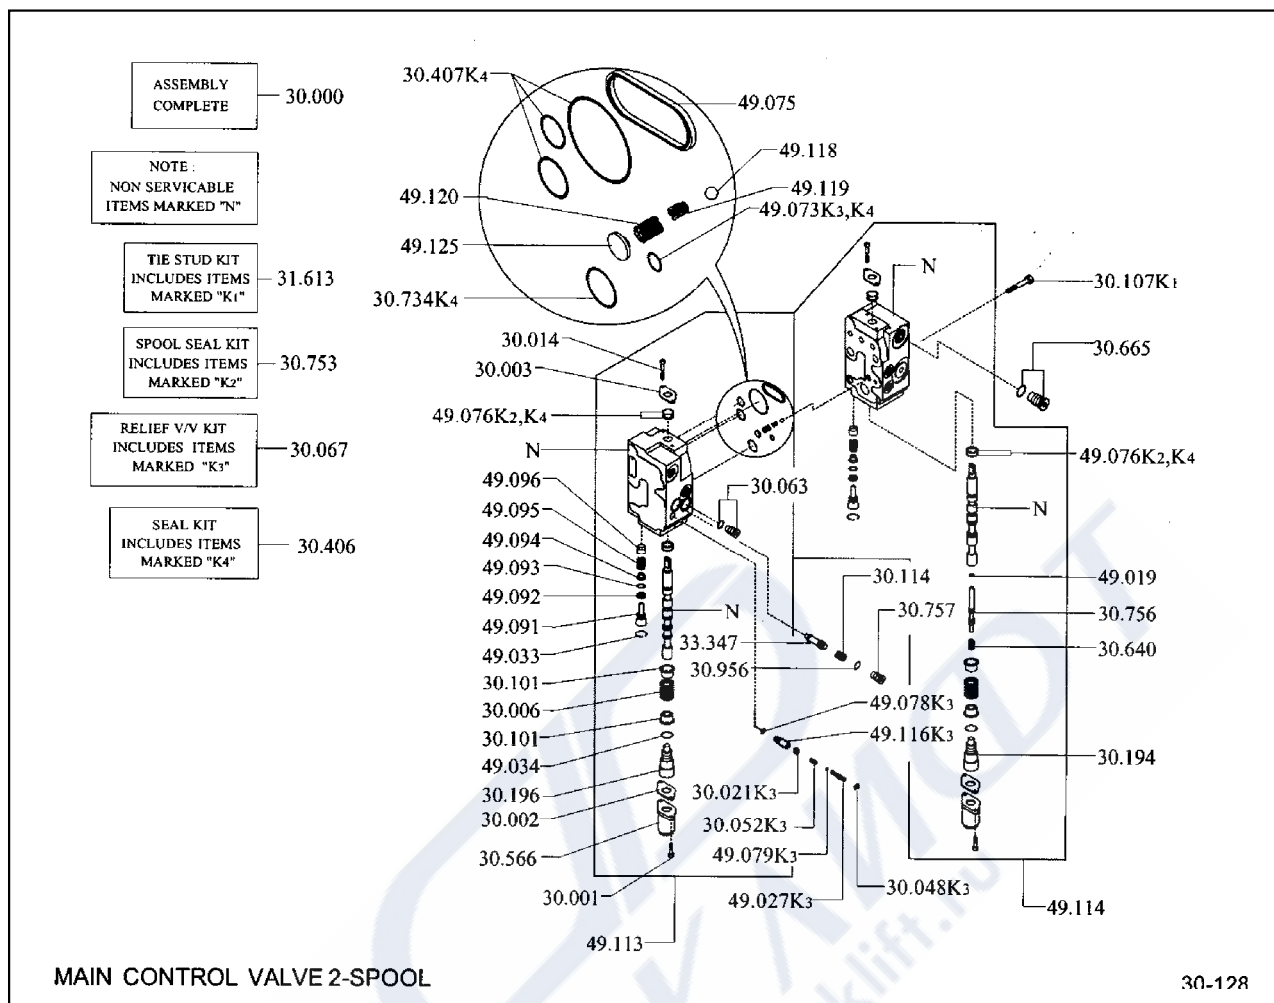 


30.000	VALVE ASSEMBLY, HYDRAULIC 밸브	30.196	FASTENER, SPOOL CENTERING SPRING GUIDE 패스너
30.001	FASTENER, SPRING COVER 패스너	30.406	SEAL KIT, HYDRAULIC VALVE (LIFT) 씰키트
30.002	COVER, SPOOL CENTERING SPRING 커버	30.407	SEAL, TILT VALVE SPOOL 씰
30.003	RETAINER, VALVE SPOOL LOWER SEAL 리테이너	30.566	DUST SHIELD, HYDRAULIC VALVE SPOOL 더스트실드
30.006	SPRING, VALVE SPOOL CENTERING 스프링	30.640	SPRING, VALVE SPOOL POPPET 스프링
30.014	FASTENER, SPOOL WIPER RETAINER 패스너	30.665	PLUG, INLET SECTION PRESSURE PORT 플러그
30.021	POPPET, RELIEF 포펫	30.734	SEAL, VALVE OUTLET SECTION (REAR) 씰
30.048	FASTENER, SPOOL WIPER RETAINER 패스너	30.753	SPOOL SEAL KIT 스풀씰키트
30.052	SPRING, RELIEF VALVE 스프링	30.756	FLOW CONTROL, HYDRAULIC VALVE TILT SECTION 플로우컨트롤
30.063	PLUG, INLET SECTION PRESSURE PORT 플러그	30.757	PLUG, HYDRAULIC VALVE CHECK VALVE 플러그
30.067	RELIEF VALVE KIT, VALVE INLET SECTION 릴리프밸브	30.956	SEAL, RELIEF VALVE PLUG 씰
30.101	RETAINER, SPOOL CENTERING SPRING 리테이너	31.613	TIE STUD KIT, HYDRAULIC VALVE 타이스터드키트
30.107	FASTENER, VALVE THRU 패스너	33.347	RELIEF VALVE, LIFT LINE CHECK VALVE 릴리프밸브
30.114	SPRING, VALVE OUTLET SECTION CHECK VALVE 스프링	49.019	SEAL, HYDRAULIC VALVE SPOOL EYE 씰
30.194	FASTENER, SPOOL CENTERING SPRING GUIDE 패스너	49.027	SPRING, HYDRAULIC VALVE BANK 스프링

49.033	SEAL, HYDRAULIC VALVE BANK 씰
49.034	SEAL, HYDRAULIC VALVE BANK 씰
49.073	SEAL, VALVE INLET SECTION CHECK VALVE BALL 씰
49.075	RETAINER, HYDRAULIC VALVE SECTION SEAL 리테이너
49.076	SEAL, MAIN HYDRAULIC VALVE INLET SECTION 씰
49.078	SEAL, MAIN HYDRAULIC VALVE INLET SECTION 씰
49.079	SEAL, MAIN HYDRAULIC VALVE INLET SECTION 씰
49.091	ADJUSTOR, MAIN VALVE FLOW CONTROL 어드저스터
49.092	SEAL, MAIN VALVE FLOW CONTROL BACK-UP 씰
49.093	SEAL, MAIN VALVE FLOW CONTROL ADJUSTOR 씰
49.094	SEAL, MAIN VALVE FLOW CONTROL ADJUSTOR RELIEF 씰
49.095	SPRING, MAIN VALVE FLOW CONTROL ADJUSTOR RELIEF 스프링
49.096	POPPET, MAIN VALVE FLOW CONTROL ADJUSTOR RELIEF 포펫
49.113	LIFT SECTION, HYDRAULIC VALVE 리프트섹션
49.114	TILT SECTION, HYDRAULIC VALVE 틸트섹션
49.116	PLUG, VALVE LIFT SECTION 플러그
49.118	BALL, VALVE SECTION CHECK VALVE 볼
49.119	SPRING, VALVE SECTION CHECK VALVE 스프링
49.120	SPRING, VALVE SECTION CHECK VALVE 스프링
49.125	PLUG, VALVE AUX SECTION 플러그

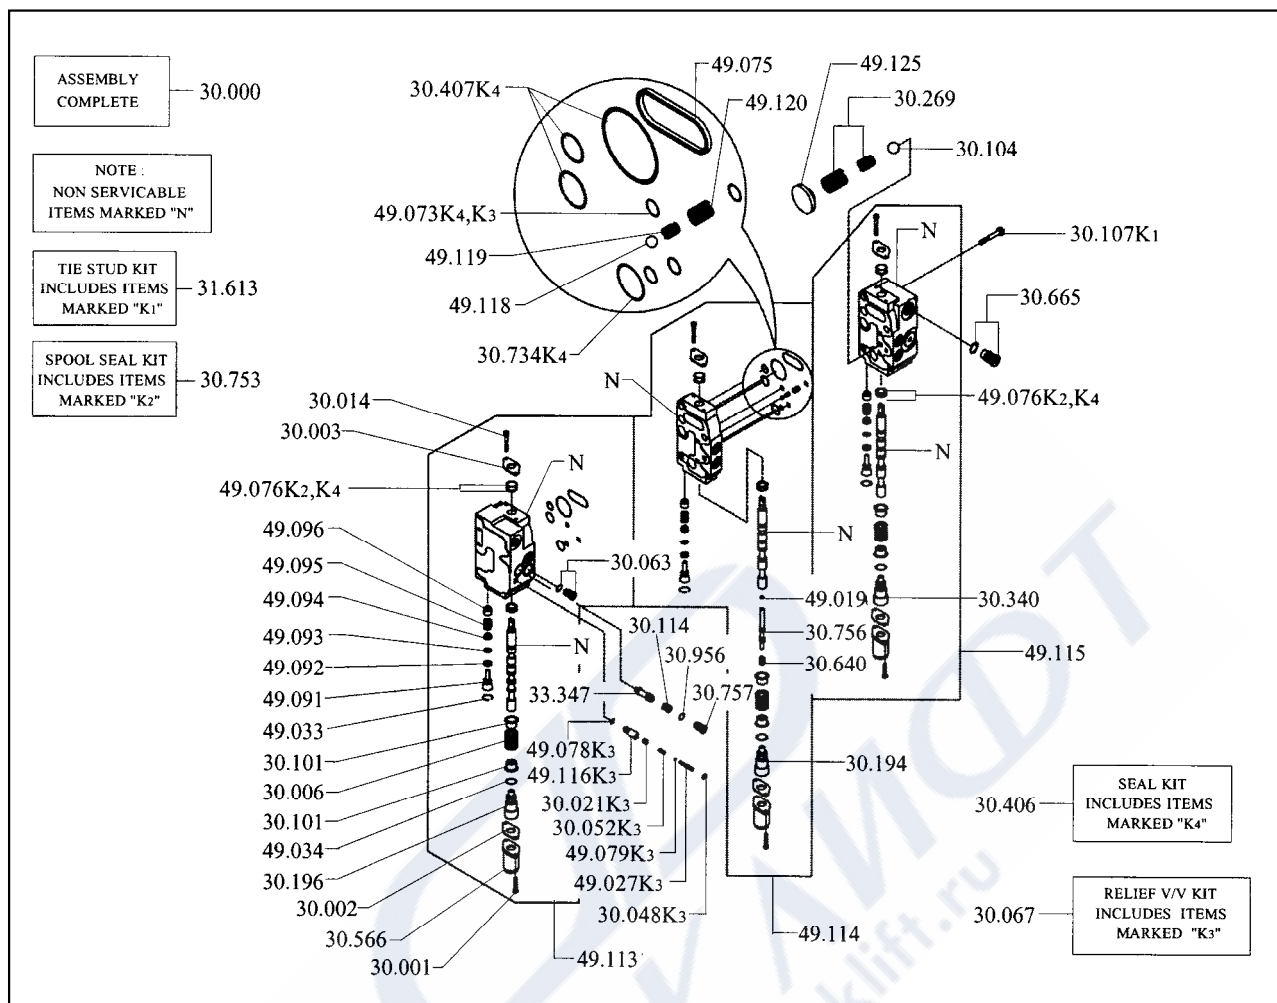 

30.000	VALVE ASSEMBLY, HYDRAULIC 밸브	30.194	FASTENER, SPOOL CENTERING SPRING GUIDE 패스너
30.001	FASTENER, SPRING COVER 패스너	30.196	FASTENER, SPOOL CENTERING SPRING GUIDE 패스너
30.002	COVER, SPOOL CENTERING SPRING 커버	30.269	SPRING, AUXILIARY INLET SECTION CHECK VALVE 스프링
30.003	RETAINER, VALVE SPOOL LOWER SEAL 리테이너	30.340	FASTENER, AUX VALVE SPOOL WIPER RETAINER 패스너
30.006	SPRING, VALVE SPOOL CENTERING 스프링	30.406	SEAL KIT, HYDRAULIC VALVE (LIFT) 씰키트
30.014	FASTENER, SPOOL WIPER RETAINER 패스너	30.407	SEAL, TILT VALVE SPOOL 씰
30.021	POPPET, RELIEF 포펫	30.566	DUST SHIELD, HYDRAULIC VALVE SPOOL 더스트실드
30.048	FASTENER, SPOOL WIPER RETAINER 패스너	30.640	SPRING, VALVE SPOOL POPPET 스프링
30.052	SPRING, RELIEF VALVE 스프링	30.665	PLUG, INLET SECTION PRESSURE PORT 플러그
30.063	PLUG, INLET SECTION PRESSURE PORT 플러그	30.734	SEAL, VALVE OUTLET SECTION (REAR) 씰
30.067	RELIEF VALVE KIT, VALVE INLET SECTION 릴리프밸브	30.753	SPOOL SEAL KIT 스풀씰키트
30.101	RETAINER, SPOOL CENTERING SPRING 리테이너	30.756	FLOW CONTROL, HYDRAULIC VALVE TILT SECTION 플로우컨트롤
30.104	BALL, VALVE INLET SECTION CHECK VALVE 볼	30.757	PLUG, HYDRAULIC VALVE CHECK VALVE 플러그
30.107	FASTENER, VALVE THRU 패스너	30.956	SEAL, RELIEF VALVE PLUG 씰
30.114	SPRING, VALVE OUTLET SECTION CHECK VALVE 스프링	31.613	TIE STUD KIT, HYDRAULIC VALVE 타이스터드키트


33.347	RELIEF VALVE, LIFT LINE CHECK VALVE 릴리프밸브
49.019	SEAL, HYDRAULIC VALVE SPOOL EYE 씰
49.027	SPRING, HYDRAULIC VALVE BANK 스프링
49.033	SEAL, HYDRAULIC VALVE BANK 씰
49.034	SEAL, HYDRAULIC VALVE BANK 씰
49.073	SEAL, VALVE INLET SECTION CHECK VALVE BALL 씰
49.075	RETAINER, HYDRAULIC VALVE SECTION SEAL 리테이너
49.076	SEAL, MAIN HYDRAULIC VALVE INLET SECTION 씰
49.078	SEAL, MAIN HYDRAULIC VALVE INLET SECTION 씰
49.079	SEAL, MAIN HYDRAULIC VALVE INLET SECTION 씰
49.091	ADJUSTOR, MAIN VALVE FLOW CONTROL 어드저스터
49.092	SEAL, MAIN VALVE FLOW CONTROL BACK-UP 씰
49.093	SEAL, MAIN VALVE FLOW CONTROL ADJUSTOR 씰
49.094	SEAL, MAIN VALVE FLOW CONTROL ADJUSTOR RELIEF 씰
49.095	SPRING, MAIN VALVE FLOW CONTROL ADJUSTOR RELIEF 스프링
49.096	POPPET, MAIN VALVE FLOW CONTROL ADJUSTOR RELIEF 포펫
49.113	LIFT SECTION, HYDRAULIC VALVE 리프트섹션
49.114	TILT SECTION, HYDRAULIC VALVE 틸트섹션
49.115	AUX SECTION, HYDRAULIC VALVE 보조섹션
49.116	PLUG, VALVE LIFT SECTION 플러그
49.118	BALL, VALVE SECTION CHECK VALVE 볼
49.119	SPRING, VALVE SECTION CHECK VALVE 스프링
49.120	SPRING, VALVE SECTION CHECK VALVE 스프링
49.125	PLUG, VALVE AUX SECTION 플러그

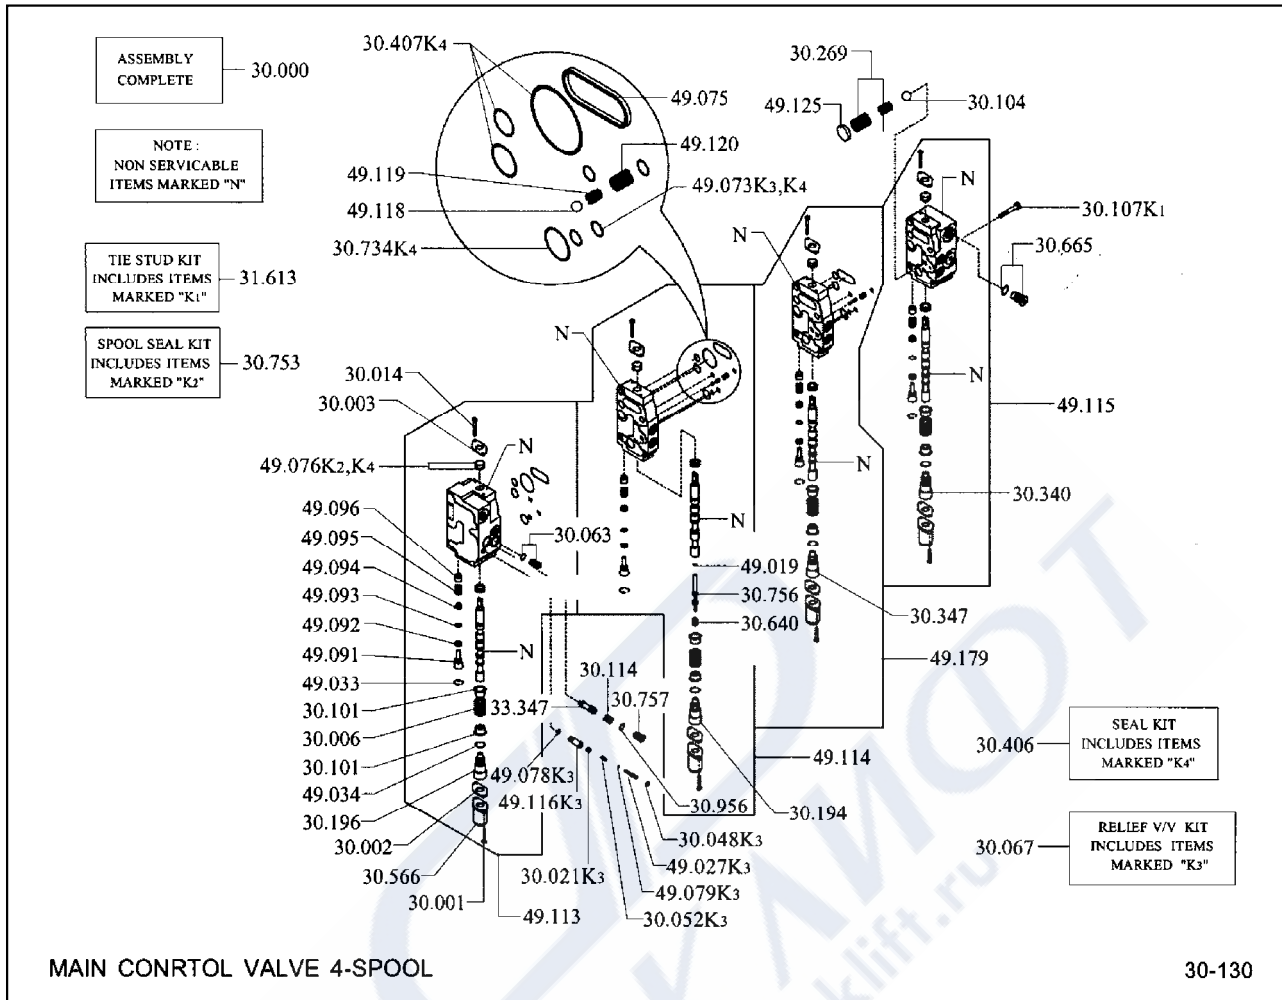 

30.000	VALVE ASSEMBLY, HYDRAULIC 밸브	30.196	FASTENER, SPOOL CENTERING SPRING GUIDE 패스너
30.002	COVER, SPOOL CENTERING SPRING 커버	30.269	SPRING, AUXILIARY INLET SECTION CHECK VALVE 스프링
30.003	RETAINER, VALVE SPOOL LOWER SEAL 리테이너	30.340	FASTENER, AUX VALVE SPOOL WIPER RETAINER 패스너
30.006	SPRING, VALVE SPOOL CENTERING 스프링	30.347	FASTENER, AUX VALVE SPOOL WIPER RETAINER 패스너
30.014	FASTENER, SPOOL WIPER RETAINER 패스너	30.406	SEAL KIT, HYDRAULIC VALVE (LIFT) 씰키트
30.021	POPPET, RELIEF 포펫	30.407	SEAL, TILT VALVE SPOOL 씰
30.048	FASTENER, SPOOL WIPER RETAINER 패스너	30.566	DUST SHIELD, HYDRAULIC VALVE SPOOL 더스트실드
30.052	SPRING, RELIEF VALVE 스프링	30.640	SPRING, VALVE SPOOL POPPET 스프링
30.063	PLUG, INLET SECTION PRESSURE PORT 플러그	30.665	PLUG, INLET SECTION PRESSURE PORT 플러그
30.067	RELIEF VALVE KIT, VALVE INLET SECTION 릴리프밸브	30.734	SEAL, VALVE OUTLET SECTION (REAR) 씰
30.101	RETAINER, SPOOL CENTERING SPRING 리테이너	30.753	SPOOL SEAL KIT 스폴씰키트
30.104	BALL, VALVE INLET SECTION CHECK VALVE 볼	30.756	FLOW CONTROL, HYDRAULIC VALVE TILT SECTION 플로우컨트롤
30.107	FASTENER, VALVE THRU 패스너	30.757	PLUG, HYDRAULIC VALVE CHECK VALVE 플러그
30.114	SPRING, VALVE OUTLET SECTION CHECK VALVE 스프링	30.956	SEAL, RELIEF VALVE PLUG 씰
30.194	FASTENER, SPOOL CENTERING SPRING GUIDE 패스너	31.613	TIE STUD KIT, HYDRAULIC VALVE 타이스터드키트

33.347	RELIEF VALVE, LIFT LINE CHECK VALVE 릴리프밸브
49.019	SEAL, HYDRAULIC VALVE SPOOL EYE 씰
49.027	SPRING, HYDRAULIC VALVE BANK 스프링
49.033	SEAL, HYDRAULIC VALVE BANK 씰
49.034	SEAL, HYDRAULIC VALVE BANK 씰
49.073	SEAL, VALVE INLET SECTION CHECK VALVE BALL 씰
49.075	RETAINER, HYDRAULIC VALVE SECTION SEAL 리테이너
49.076	SEAL, MAIN HYDRAULIC VALVE INLET SECTION 씰
49.078	SEAL, MAIN HYDRAULIC VALVE INLET SECTION 씰
49.079	SEAL, MAIN HYDRAULIC VALVE INLET SECTION 씰
49.091	ADJUSTOR, MAIN VALVE FLOW CONTROL 어드저스터
49.092	SEAL, MAIN VALVE FLOW CONTROL BACK-UP 씰
49.093	SEAL, MAIN VALVE FLOW CONTROL ADJUSTOR 씰
49.094	SEAL, MAIN VALVE FLOW CONTROL ADJUSTOR RELIEF 씰
49.095	SPRING, MAIN VALVE FLOW CONTROL ADJUSTOR RELIEF 스프링
49.096	POPPET, MAIN VALVE FLOW CONTROL ADJUSTOR RELIEF 포펫
49.113	LIFT SECTION, HYDRAULIC VALVE 리프트섹션
49.114	TILT SECTION, HYDRAULIC VALVE 틸트섹션
49.115	AUX SECTION, HYDRAULIC VALVE 보조섹션
49.116	PLUG, VALVE LIFT SECTION 플러그
49.118	BALL, VALVE SECTION CHECK VALVE 볼
49.119	SPRING, VALVE SECTION CHECK VALVE 스프링
49.120	SPRING, VALVE SECTION CHECK VALVE 스프링
49.125	PLUG, VALVE AUX SECTION 플러그
49.179	AUX SECTION, HYDRAULIC VALVE 보조섹션

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

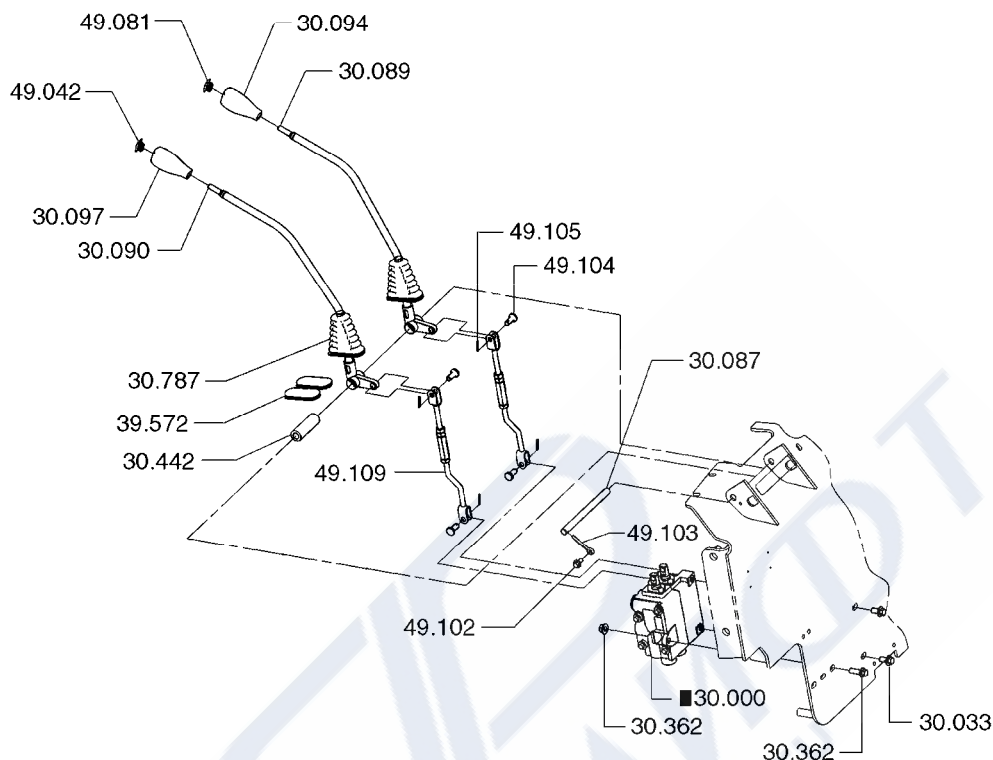



HYDRAULIC VALVE MOUNTING (2 SPOOL)

30-209

30.000	VALVE ASSEMBLY, HYDRAULIC 밸브
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀
30.089	LEVER, LIFT CONTROL 레버
30.090	LEVER, TILT CONTROL 레버
30.094	KNOB, LIFT CONTROL LEVER 노브
30.097	KNOB, TILT CONTROL LEVER 노브
30.362	FASTENER, VALVE MOUNTING PLATE 패스너
30.442	SPACER, CONTROL LEVERS 스페이서


30.787	BOOT, VALVE CONTROL LEVER 부트
39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.103	RETAINER, VALVE CONTROL LEVER PIVOT PIN 리테이너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너
49.109	ROD, VALVE CONTROL CLEVIS 로드

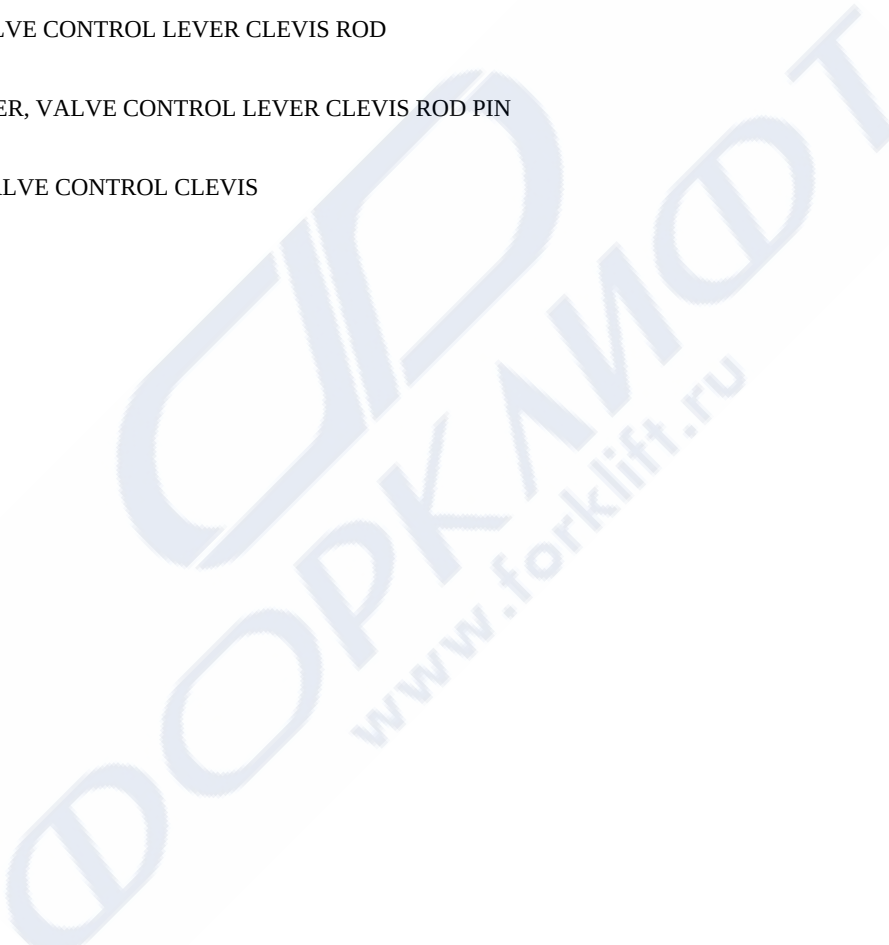 


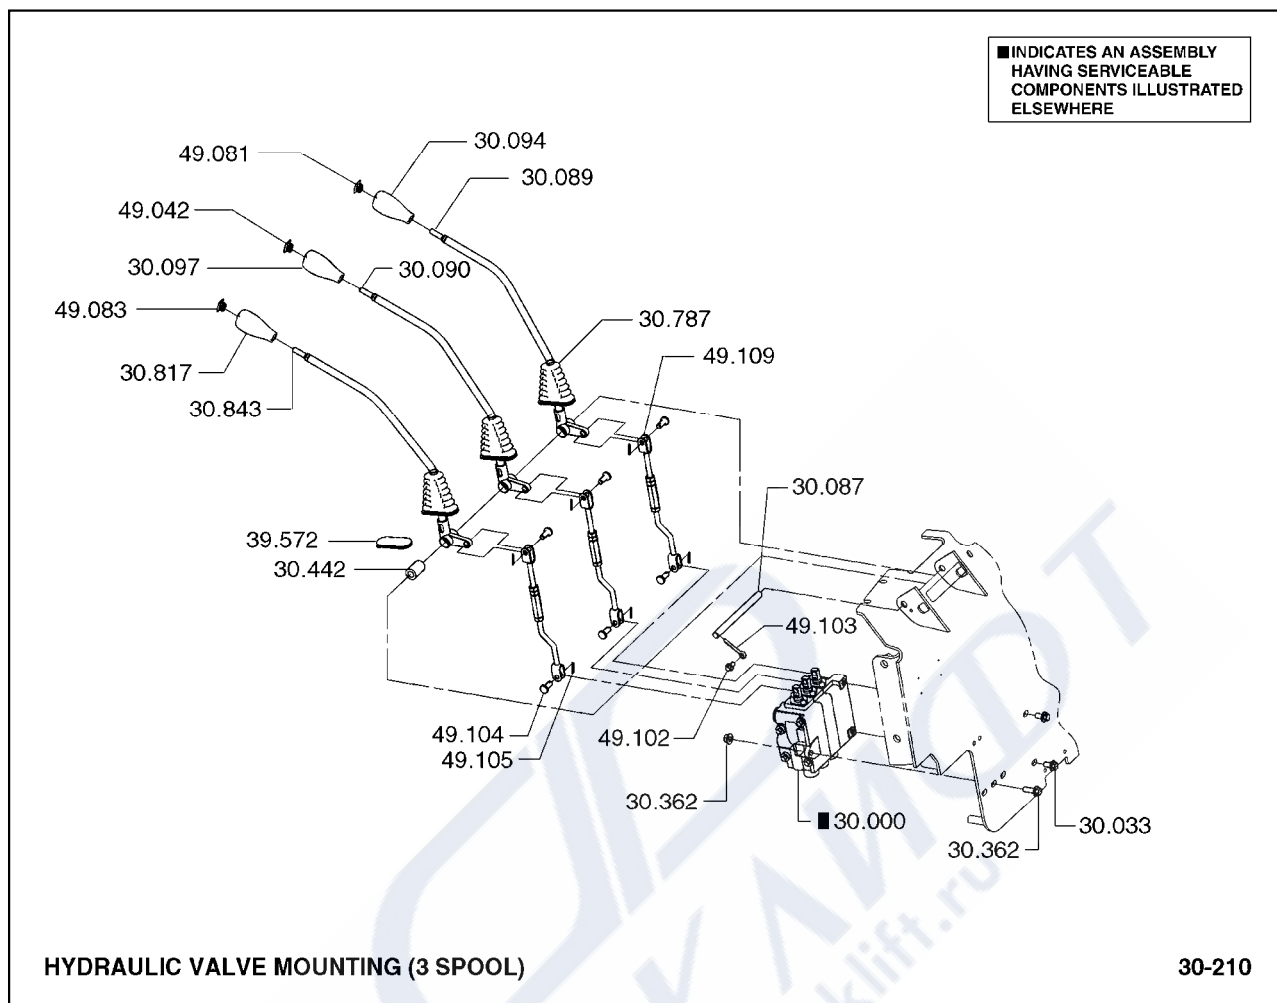 

30.000	VALVE ASSEMBLY, HYDRAULIC 밸브
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀
30.089	LEVER, LIFT CONTROL 레버
30.090	LEVER, TILT CONTROL 레버
30.094	KNOB, LIFT CONTROL LEVER 노브
30.097	KNOB, TILT CONTROL LEVER 노브
30.362	FASTENER, VALVE MOUNTING PLATE 패스너
30.442	SPACER, CONTROL LEVERS 스페이서


30.787	BOOT, VALVE CONTROL LEVER 부트
30.817	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버
39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.083	CAP, VALVE CONTROL LEVER DECAL 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.103	RETAINER, VALVE CONTROL LEVER PIVOT PIN 리테이너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너
49.109	ROD, VALVE CONTROL CLEVIS 로드

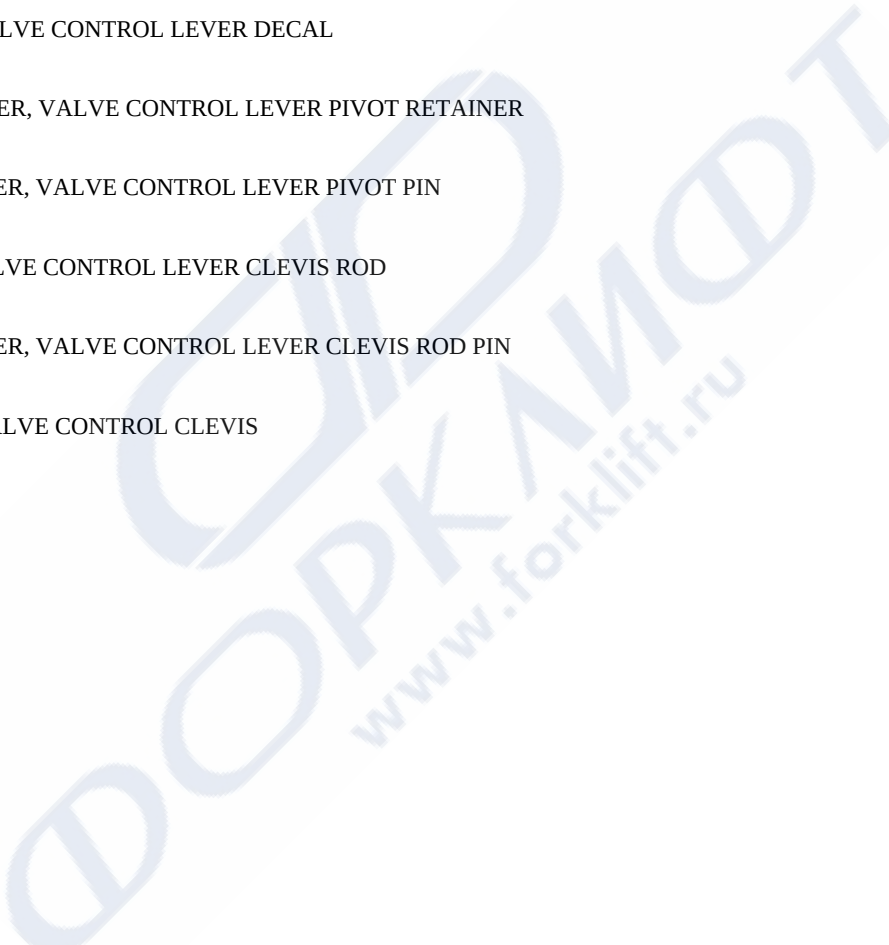 

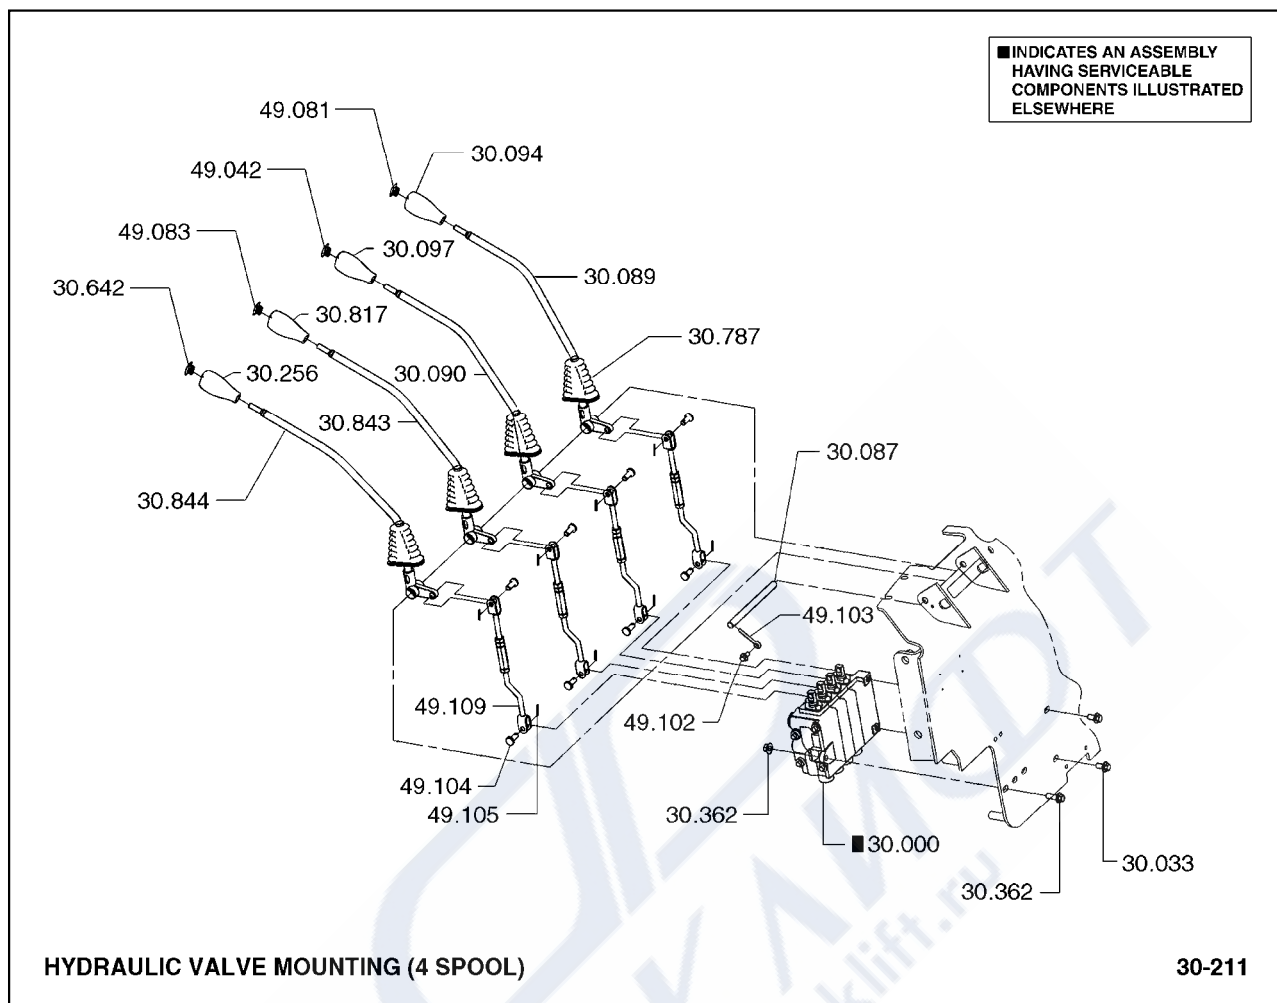 

30.000	VALVE ASSEMBLY, HYDRAULIC 밸브
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀
30.089	LEVER, LIFT CONTROL 레버
30.090	LEVER, TILT CONTROL 레버
30.094	KNOB, LIFT CONTROL LEVER 노브
30.097	KNOB, TILT CONTROL LEVER 노브
30.256	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.362	FASTENER, VALVE MOUNTING PLATE 패스너

30.642	CAP, AUXILIARY VALVE SPOOL 캡
30.787	BOOT, VALVE CONTROL LEVER 부트
30.817	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버
30.844	LEVER, AUXILIARY VALVE CONTROL (2ND AUX) 레버
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.083	CAP, VALVE CONTROL LEVER DECAL 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.103	RETAINER, VALVE CONTROL LEVER PIVOT PIN 리테이너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너
49.109	ROD, VALVE CONTROL CLEVIS 로드

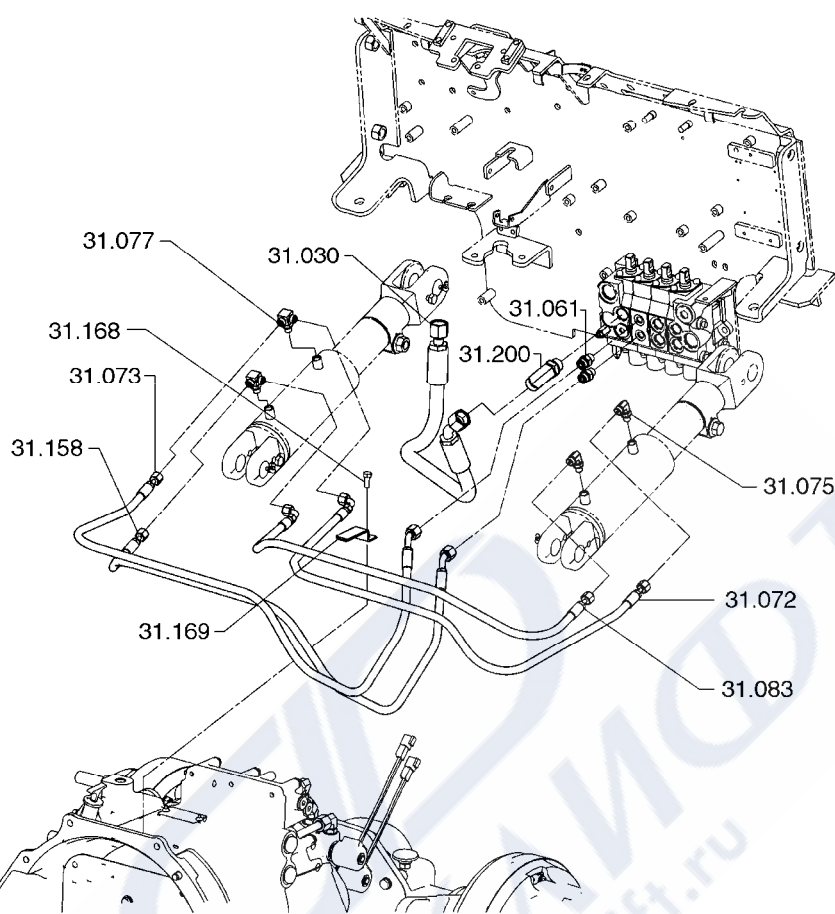 


HYDRAULIC LIFT & TILT LINES

31-139

31.030	LINE, VALVE TO LIFT CYLINDER 라인
31.061	FITTING, VALVE TILT PORT "A" 피팅
31.072	LINE, RH TILT CYLINDER ROD PORT 라인
31.073	LINE, LH TILT CYLINDER ROD PORT 라인
31.075	FITTING, RH TILT CYLINDER ROD PORT 피팅
31.077	FITTING, LH TILT CYLINDER ROD PORT 피팅
31.083	LINE, RH TILT CYLINDER ANCHOR PORT 라인
31.158	LINE, LH TILT CYLINDER ANCHOR PORT 라인
31.168	FASTENER, TILT LINE CLAMP 패스너

31.169	CLAMP, TILT LINE 클램프
31.200	FITTING, MAIN VALVE LIFT PORT 피팅



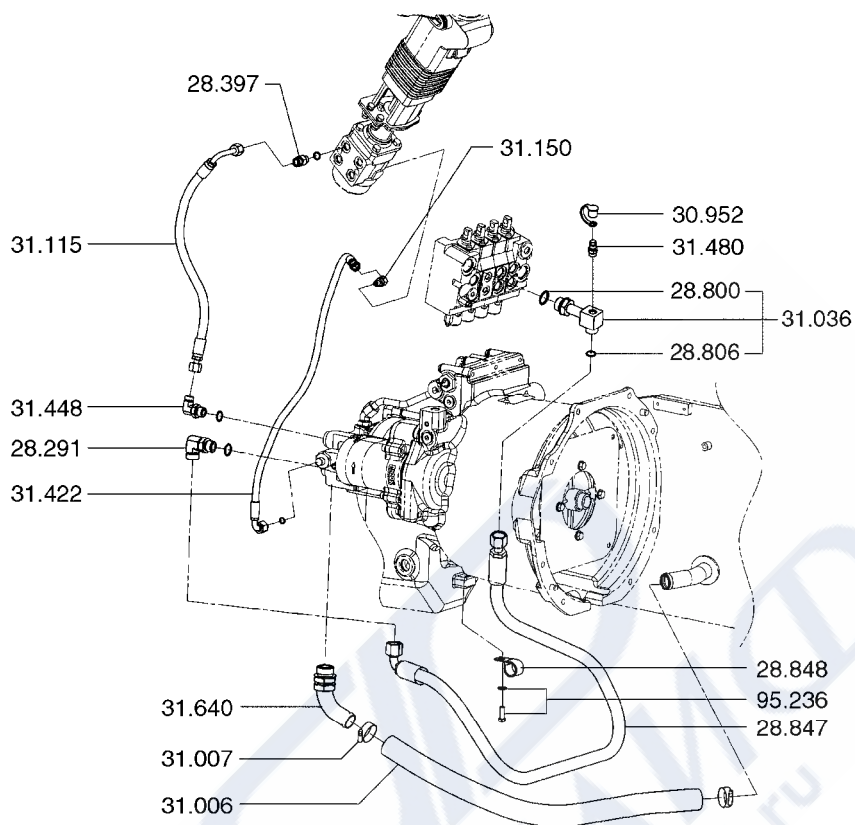 


HYDRAULIC SUPPLY LINES

31-140


28.291	FITTING, PUMP OUTLET 피팅
28.397	FITTING, STEERING GEAR LINE 피팅
28.800	SEAL, MAIN VALVE INLET PORT FITTING 씰
28.806	SEAL, MAIN VALVE INLET LINE FITTING 씰
28.847	LINE, MAIN VALVE INLET 라인
28.848	CLAMP, MAIN VALVE INLET LINE 클램프
30.952	DUST CAP, PRESSURE GAUGE PORT FITTING 더스트캡
31.006	LINE, PUMP INLET 라인
31.007	CLAMP, PUMP INLET LINE 클램프

31.036	FITTING, MAIN VALVE INLET PORT 피팅
31.115	LINE, STEERING PUMP OUTLET 라인
31.150	FITTING, STEER VALVE DISCHARGE PORT 피팅
31.422	LINE, PUMP OUTLET (COVER END) 라인
31.448	FITTING, PUMP OUTLET LINE 피팅
31.480	PLUG, PRESSURE GAUGE PORT 플러그
31.640	FITTING, HYD PUMP OUTLET (COVER END) 피팅
95.236	FASTENER, HYDRAULIC LINE CLAMP 패스너

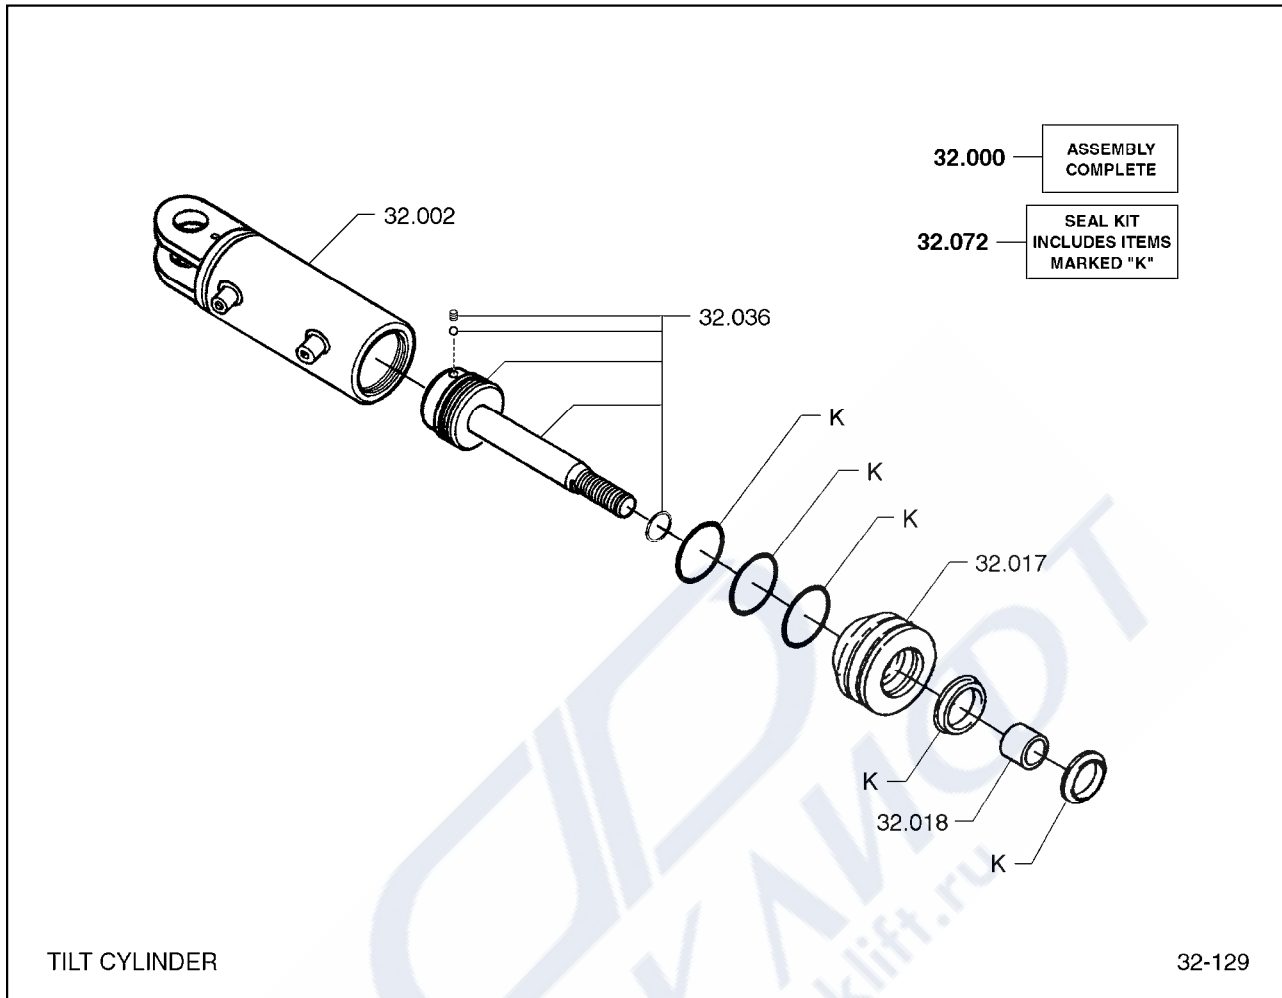 

32.000	CYLINDER ASSEMBLY, TILT 실린더
32.002	CYLINDER ASSEMBLY, WELDED 실린더
32.017	GLAND, TILT CYLINDER 그랜드
32.018	BUSHING, TILT CYLINDER GLAND 부싱
32.036	ROD & PISTON ASSEMBLY, TILT CYLINDER 로드& 피스톤
32.072	PACKING KIT, TILT CYLINDER 패킹키트

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

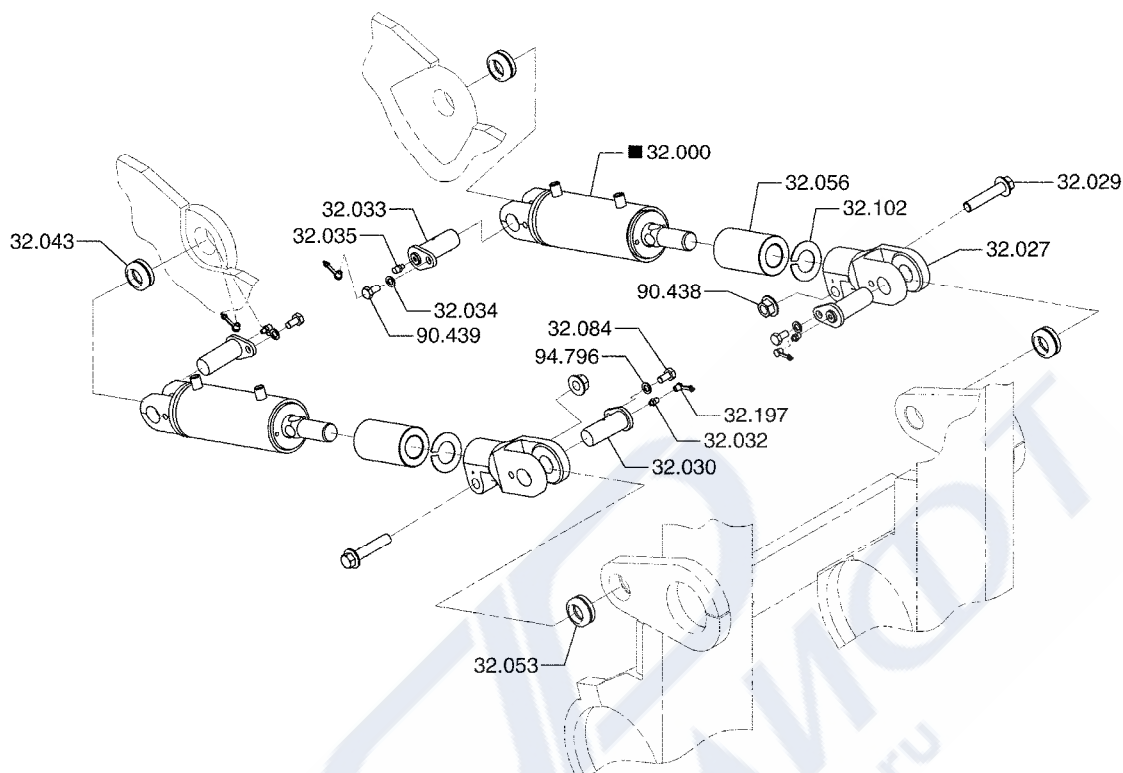


TILT CYLINDER MOUNTING


32-155

32.000	CYLINDER ASSEMBLY, TILT 실린더
32.027	END, RH TILT CYLINDER ROD 엔드
32.029	FASTENER, TILT CYLINDER ROD END 패스너
32.030	PIN, TILT CYLINDER TO UPRIGHT 핀
32.032	FITTING, TILT CYLINDER TO UPRIGHT PIN LUB 피팅
32.033	PIN, TILT CYLINDER REAR MOUNTING RH 핀
32.034	RETAINER, TILT CYLINDER ANCHOR PIN 리테이너
32.035	FITTING, TILT CYLINDER TO FRAME PIN LUB 피팅
32.043	BEARING, TILT CYLINDER FRAME MOUNTING 베어링

32.053	BEARING, TILT CYLINDER ROD END 베어링
32.056	SPACER, TILT CYLINDER ROD END 스페이서
32.084	CAPSCREW, TILT CYLINDER ROD END PIN RETAINER 캡스크류
32.102	SHIM, TILT CYLINDER STROKE ADJUSTING 심
32.197	PLUG, TILT CYLINDER GREASE NIPPLE 플러그
90.438	NUT, TILT CYLINDER ROD END FASTENER 너트
90.439	BOLT, TILT CYLINDER TO FRAME PIN LOCK 볼트
94.796	WASHER, TILT CYLINDER ROD END PIN RETAINER FASTENE 와셔

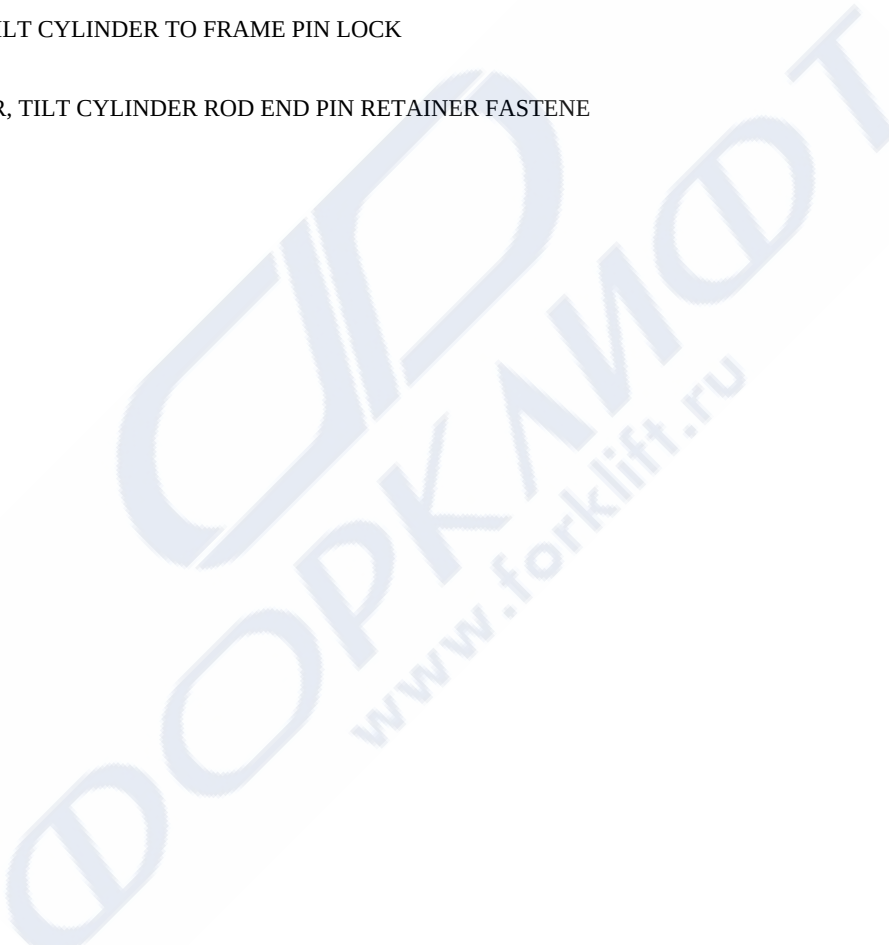 

 
■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

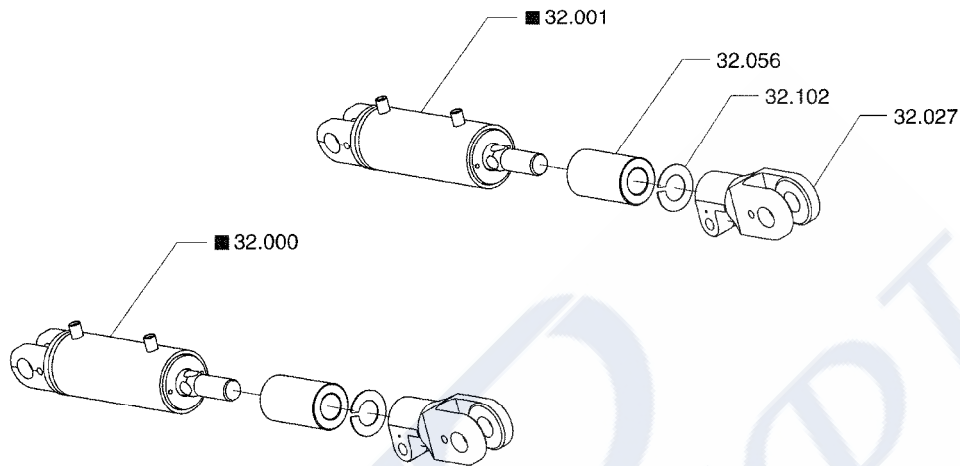

TILT AMOUNT GP

32-167


32.000	CYLINDER ASSEMBLY, TILT 실린더
32.001	TILT CYLINDER ASSEMBLY (LH) 틸트실린더
32.027	END, RH TILT CYLINDER ROD 엔드
32.056	SPACER, TILT CYLINDER ROD END 스페이서
32.102	SHIM, TILT CYLINDER STROKE ADJUSTING 심

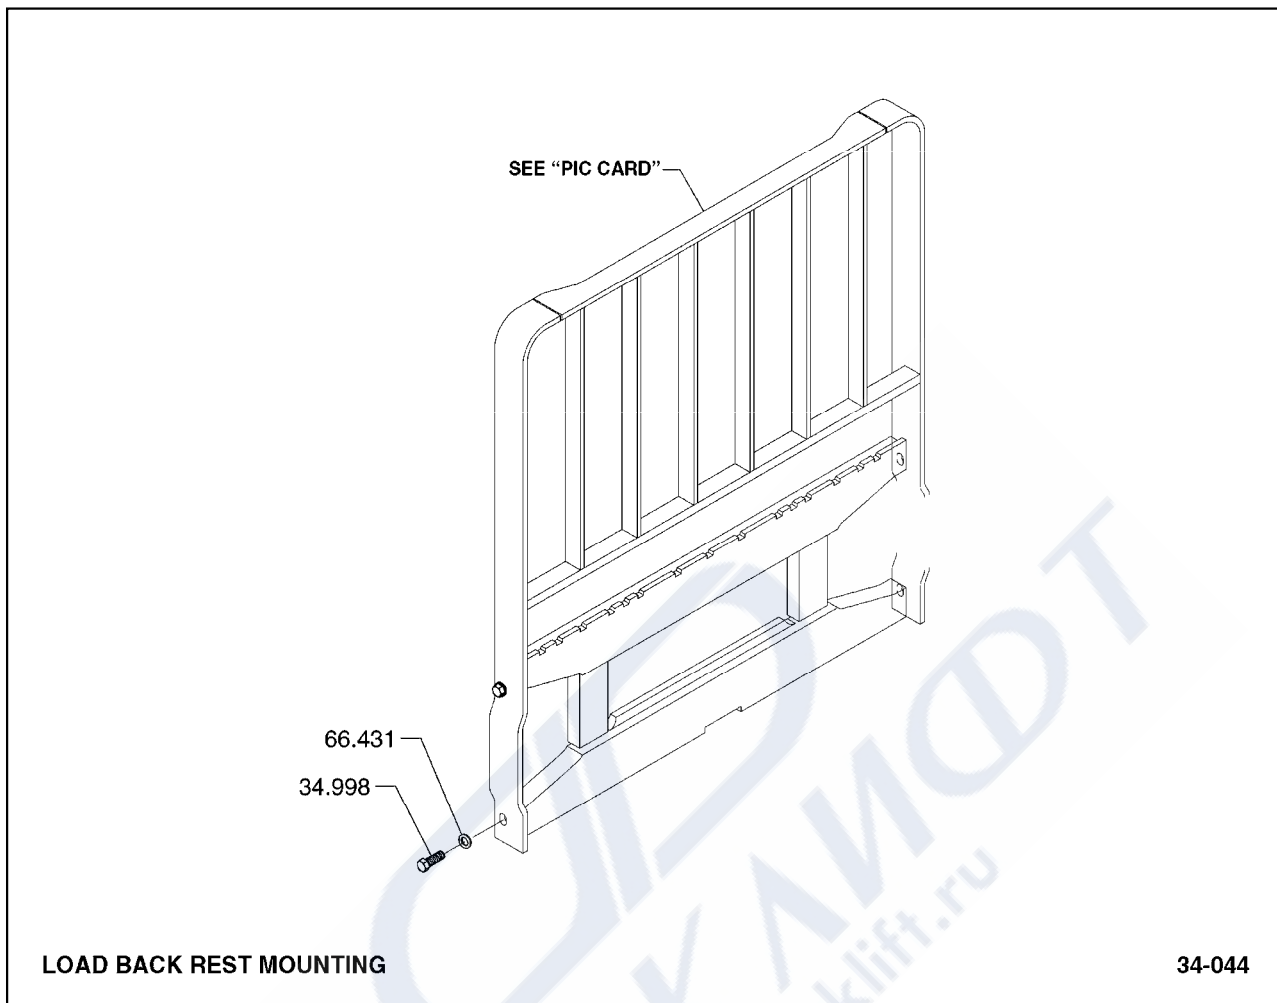 


34.998 FASTENER, LOAD SAFETY BACK REST
패스너

66.431 RETAINER, LBR CAPSCREW
리테이너

 
ASSEMBLY
COMPLETE 34.300

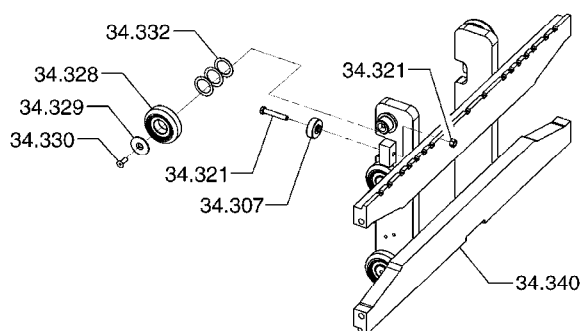


TYPE - 1

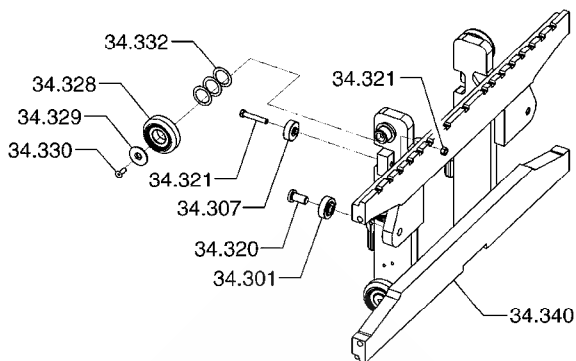 

TYPE - 2

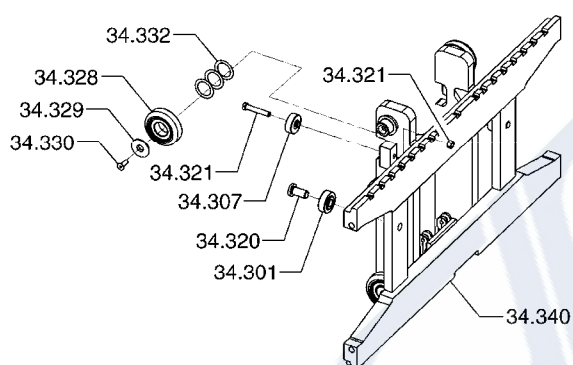 

TYPE - 3

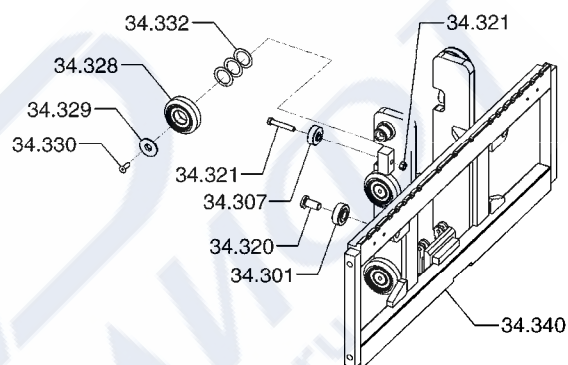 

TYPE - 4


CARRIAGE ASSEMBLY

34-103

34.300	ASSEMBLY, FORK BARS & CARRIAGE 캐리지
34.301	ROLLER, CARRIAGE OUTER THRUST 롤러
34.307	ROLLER, CARRIAGE INNER THRUST 롤러
34.320	SHAFT, CARRIAGE OUTER THRUST ROLLER 샤프트
34.321	FASTENER, CARRIAGE ROLLER SHAFT 패스너
34.328	ROLLER, CARRIAGE CAPTIVE 롤러
34.329	RETAINER, CARRIAGE CAPTIVE ROLLER 리테이너
34.330	FASTENER, CARRIAGE CAPTIVE ROLLER RETAINER 패스너
34.332	SHIM, CARRIAGE CAPTIVE ROLLER 심

 34.340 CARRIAGE WELDED ASSEMBLY
캐리지용 접물




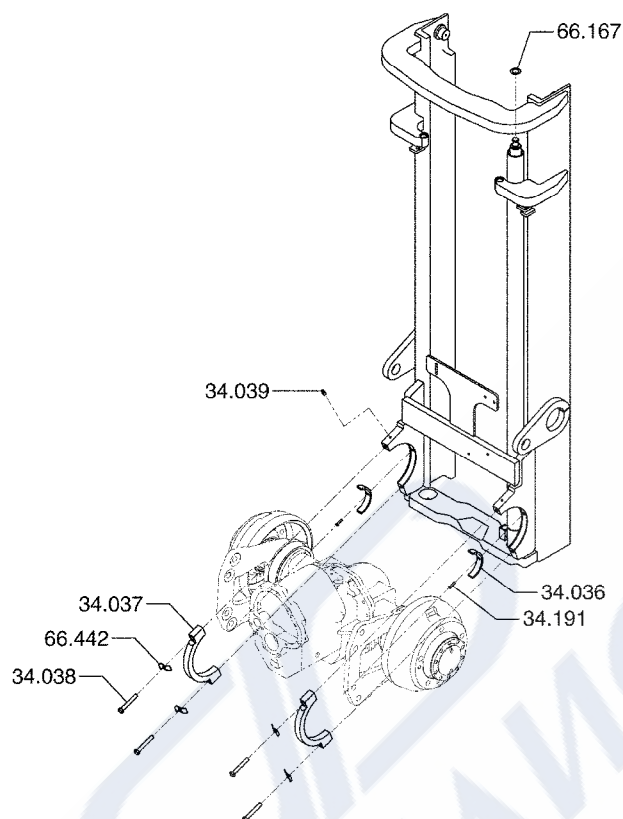

UPRIGHT MOUNTING

34-126


34.036	BUSHING, UPRIGHT TRUNNION 부싱
34.037	CAP, UPRIGHT TRUNNION 캡
34.038	FASTENER, UPRIGHT TRUNNION CAP 패스너
34.039	FITTING-LUB, UPRIGHT TRUNNION 피팅
34.191	FASTENER, UPRIGHT TRUNNION BUSHING 패스너
66.167	SHIM, LIFT CYLINDER UPPER 심
66.442	KEEPER, UPRIGHT TRUNNION CAP 키퍼

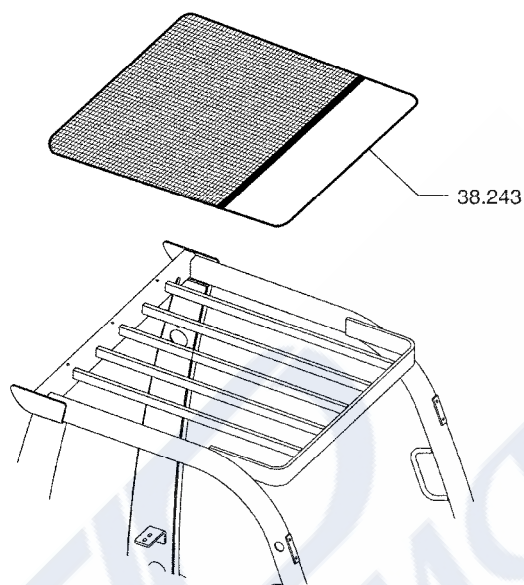 

OVERHEAD GUARD COVER

37-003

 38.243 COVER ASSEMBLY, OVERHEAD GUARD TOP
커버

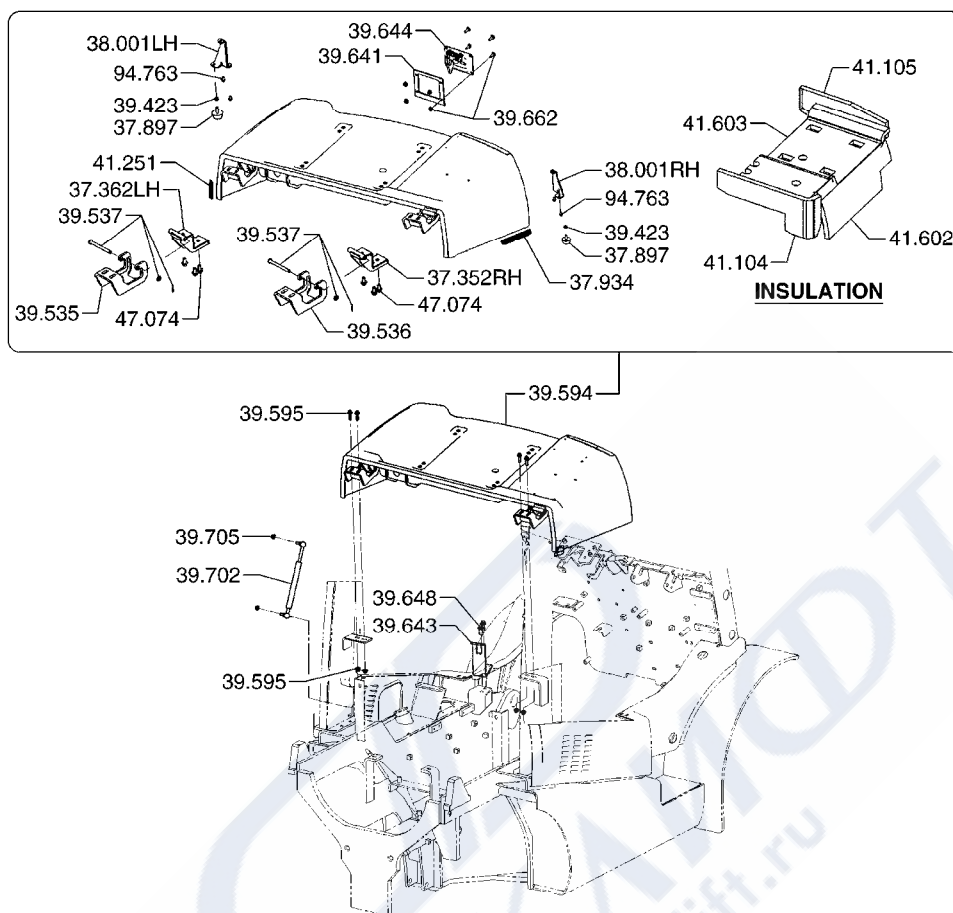


HOOD MOUNTING

37-114


37.352	BRACKET, TOP HOOD SPRING (RH) 브라켓
37.362	BRACKET, TOP HOOD SPRING (LH) 브라켓
37.897	BUMPER, TOP HOOD 범퍼
37.934	SEAL, HOOD ACCESS COVER 씰
38.001	BRACKET, HOOD SUPPORT 브라켓
39.423	FASTENER, TOP HOOD 패스너
39.535	BRACKET, TOP HOOD MOUNTING 브라켓
39.536	BRACKET, TOP HOOD MOUNTING 브라켓
39.537	FASTENER, TOP HOOD MOUNTING BRACKET 패스너


39.594	HOOD, TOP 후드
39.595	FASTENER, TOP HOOD 패스너
39.641	PLATE, TOP HOOD LATCH MOUNTING 플레이트
39.643	CATCH, TOP HOOD LATCH 캐치
39.644	LATCH, TOP HOOD 래치
39.648	FASTENER, TOP HOOD LATCH CATCH 패스너
39.662	FASTENER, TOP HOOD LATCH BRACKET 패스너
39.702	PROP, HOOD 지지대
39.705	FASTENER, HOOD PROP 패스너
41.104	SOUND SEAL, RH SIDE HOOD 사운드씰
41.105	SOUND SEAL, LH SIDE HOOD 사운드씰
41.251	SOUND SEAL, TOP HOOD 사운드씰
41.602	SOUND SEAL, ENGINE HOOD 사운드씰
41.603	SOUND SEAL, ENGINE HOOD 사운드씰
47.074	FASTENER, TOP HOOD SPRING BRACKET 패스너
94.763	FASTENER, HOOD SUPPORT 패스너

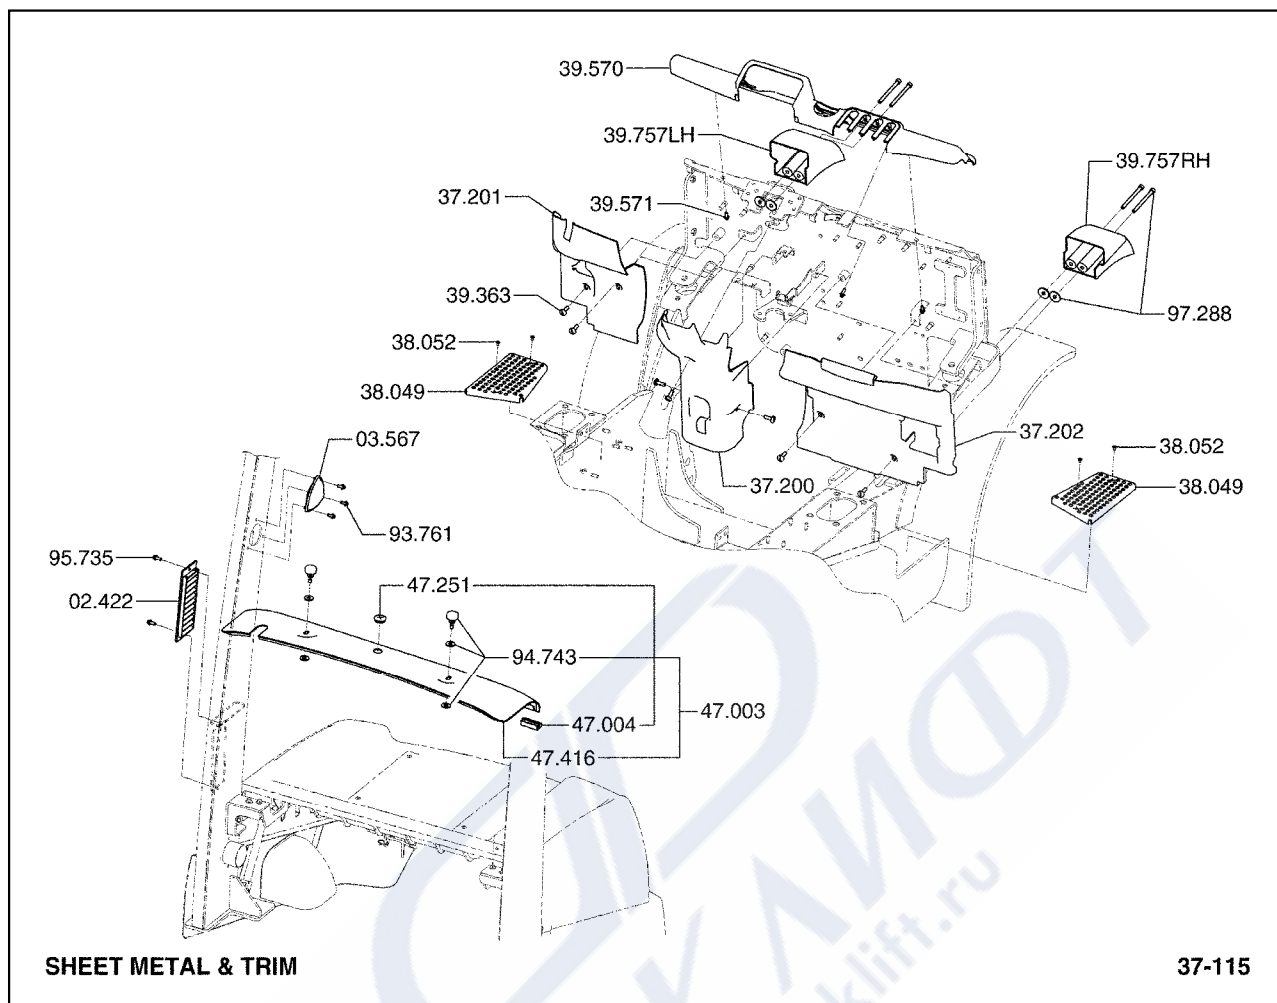 

- | | |
|--------|---|
| 02.422 | SCREEN, ENGINE INTAKE AIR
스크린 |
| 03.567 | PLUG, AIR INTAKE DRIVER OVERHEAD GUARD
플러그 |
| 37.200 | PANEL, FRONT
판넬 |
| 37.201 | PANEL, LH SIDE
판넬 |
| 37.202 | PANEL, RH SIDE
판넬 |
| 38.049 | STEP ASSEMBLY, RH
스텝 |
| 38.052 | FASTENER, STEP FRONT
패스너 |
| 39.363 | FASTENER, RH SIDE PANEL
패스너 |
| 39.570 | COVER ASSEMBLY, DASH
커버 |

39.757	COVER, FRAME END 커버
47.003	COVER, RADIATOR 커버
47.004	SEAL, RADIATOR COVER 씰
47.251	GROMMET, RADIATOR COVER 그로멧
47.416	COVER, RADIATOR 커버
94.743	FASTENER, RADIATOR COVER TRIM 패스너
95.735	FASTENER, ENGINE AIR INTAKE SCREEN 패스너
97.288	FASTENER, FRAME END COVER 패스너
97.761	FASTENER, FRAME END COVER 패스너


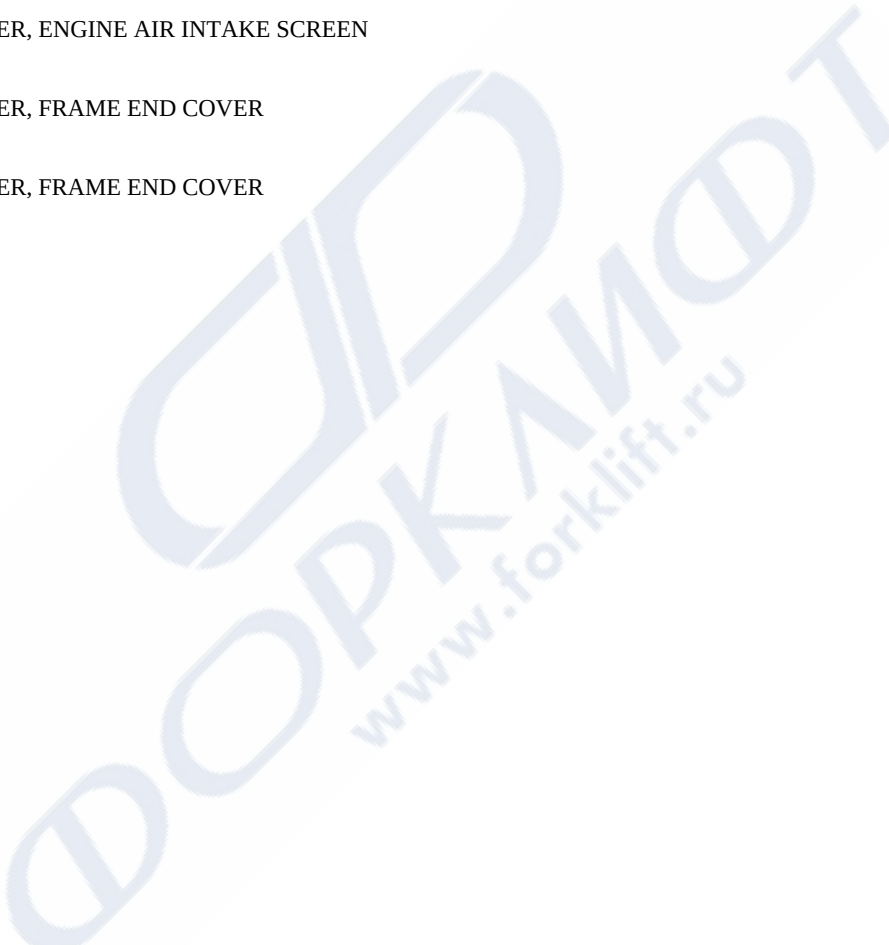 


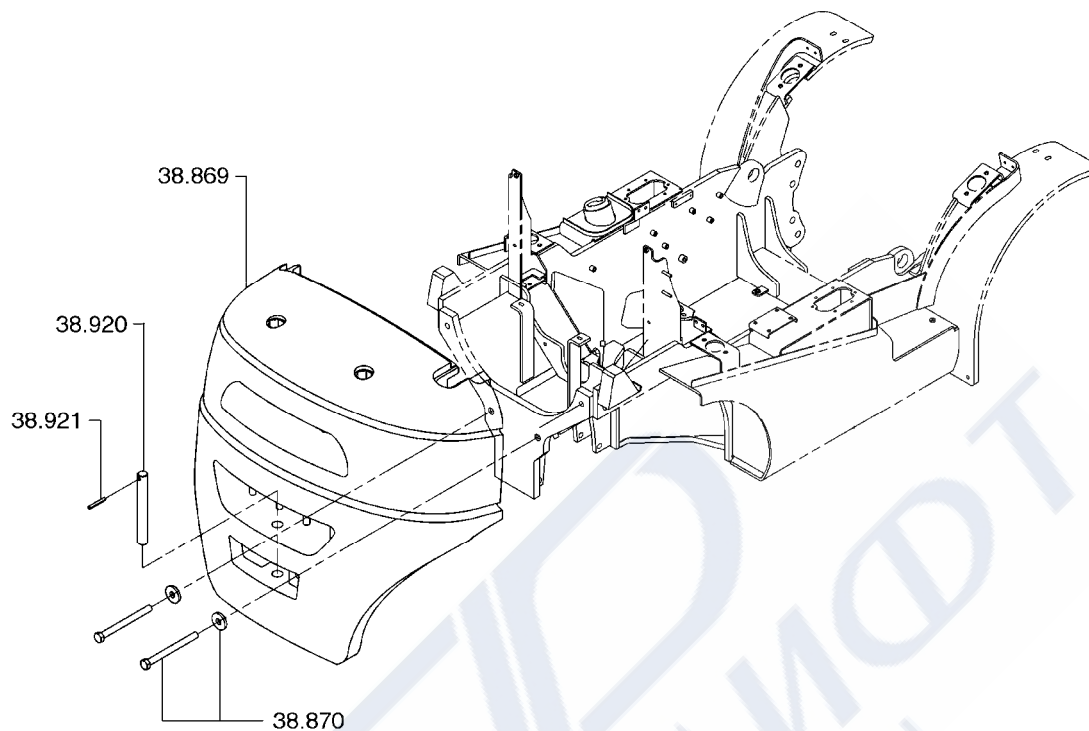 

FRAME & COUNTERWEIGHT

38-225


- | | |
|--------|--|
| 38.869 | COUNTERWEIGHT
카운터웨이트 |
| 38.870 | FASTENER, COUNTERWEIGHT (LOWER)
패스너 |
| 38.920 | PIN, COUPLER
핀 |
| 38.921 | PIN, COUPLER PIN CROSS
핀 |

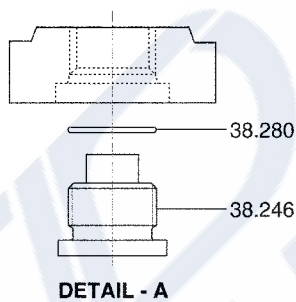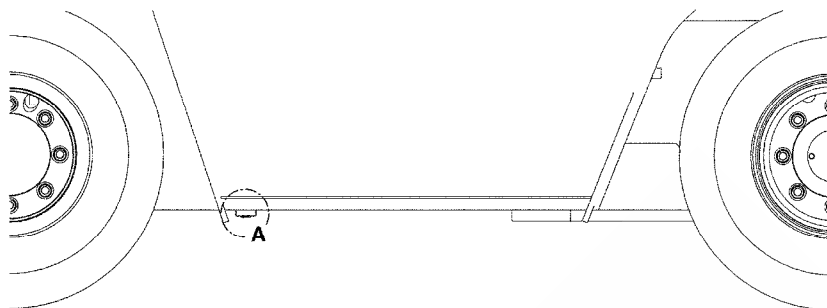  

FRAME TANK BOTTOM PLUG

38-270


- | | |
|--------|---------------------------------------|
| 38.246 | PLUG, FRAME BOTTOM MAGNETIC
플러그 |
| 38.280 | SEAL, FRAME BOTTOM MAGNETIC PLUG
씰 |

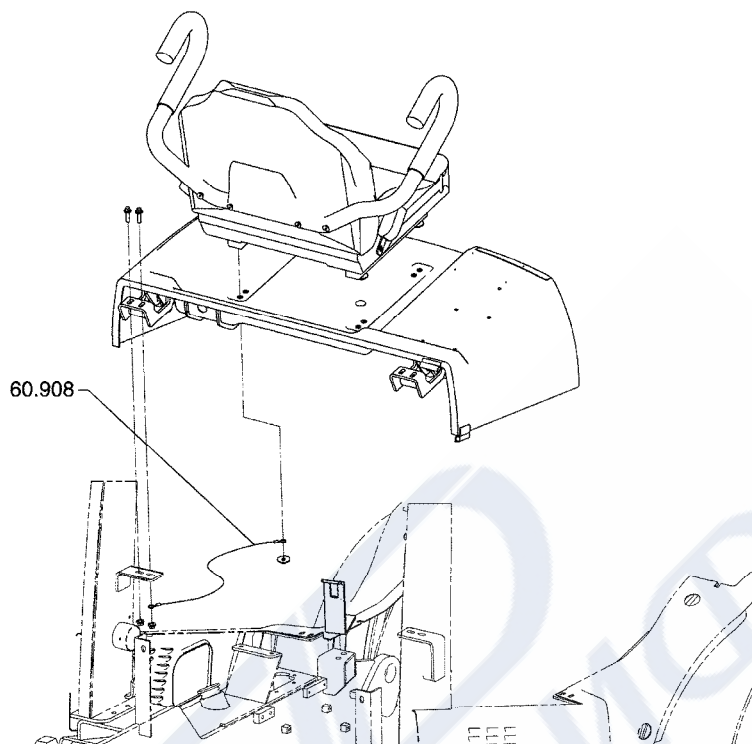 

LEAD WIRE GROUND

39-012

 
60.908 WIRE, LEAD GROUND
와이어

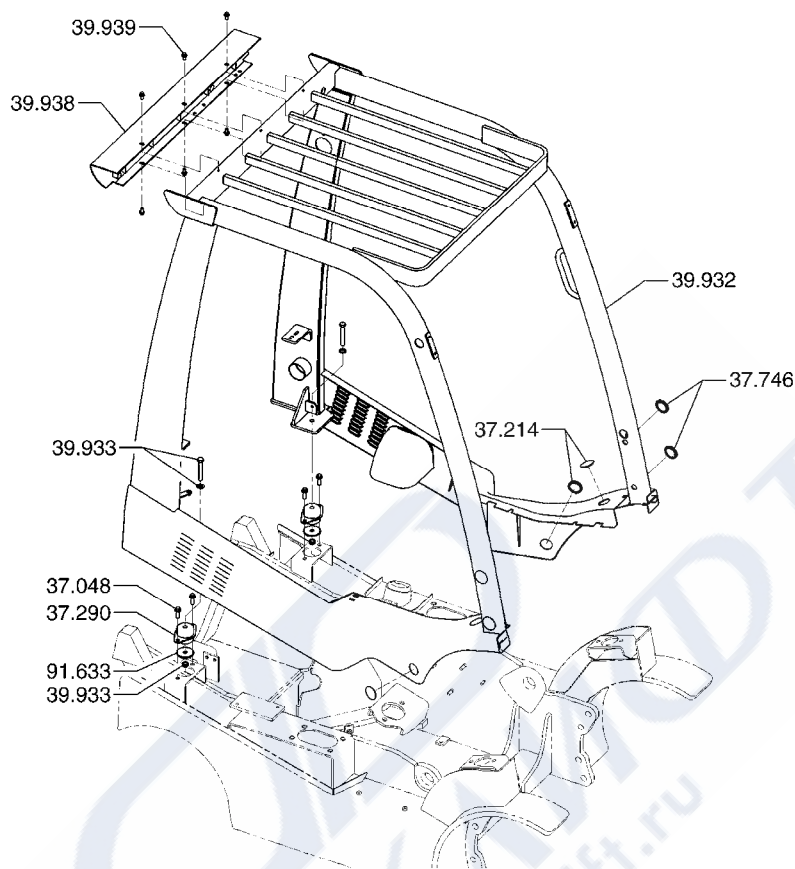

OVERHEAD GUARD MOUNTING

39-510


37.048	FASTENER, OVERHEAD GUARD BUMPER 패스너
37.214	PLUG-BUTTON 플러그
37.290	DAMPENER, OVERHEAD GUARD VIBRATION 댐프너
37.746	PLUG, DRIVER OVERHEAD GUARD 플러그
39.932	GUARD, OVERHEAD 가드
39.933	FASTENER, OVERHEAD GUARD 패스너
39.938	BRACKET, OVERHEAD GUARD REAR SUPPORT 브라켓
39.939	FASTENER, OVERHEAD GUARD REAR SUPPORT BRACKET 패스너
91.633	WASHER, OVERHEAD GUARD FASTENER 와셔

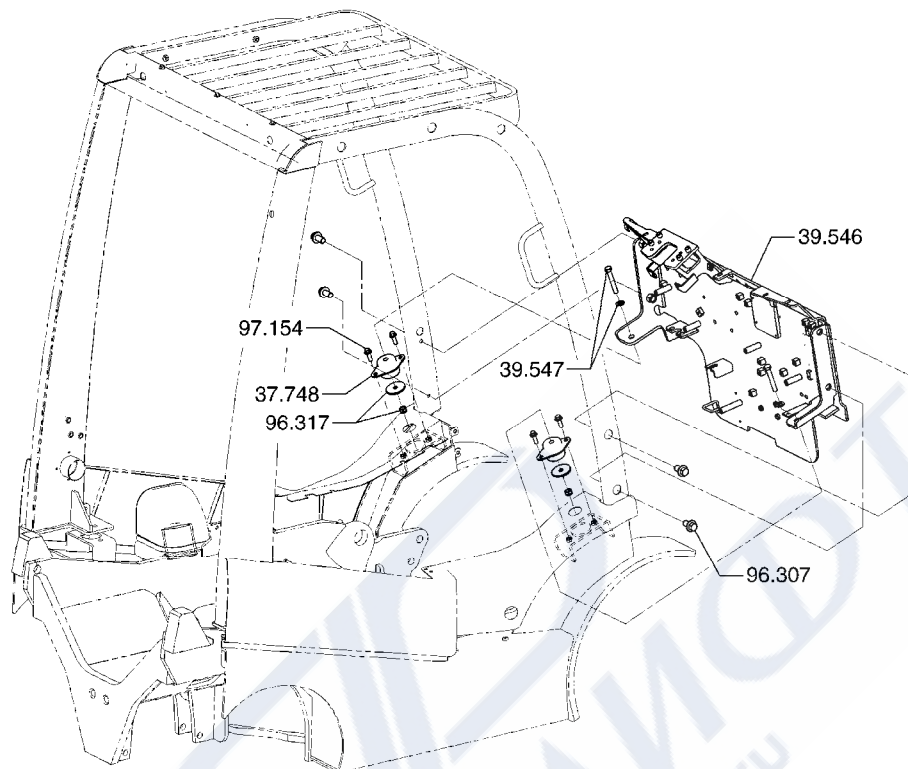 


COWL MOUNTING

39-511


37.748	DAMPENER, COWL VIBRATION 댐프너
39.546	COWL ASSEMBLY 카울
39.547	FASTENER, COWL ASSEMBLY 패스너
96.307	FASTENER, COWL PLATE 패스너
96.317	FASTENER, COWL PLATE SOUND SEAL 패스너
97.154	FASTENER, COWL DAMPENER MOUNTING 패스너

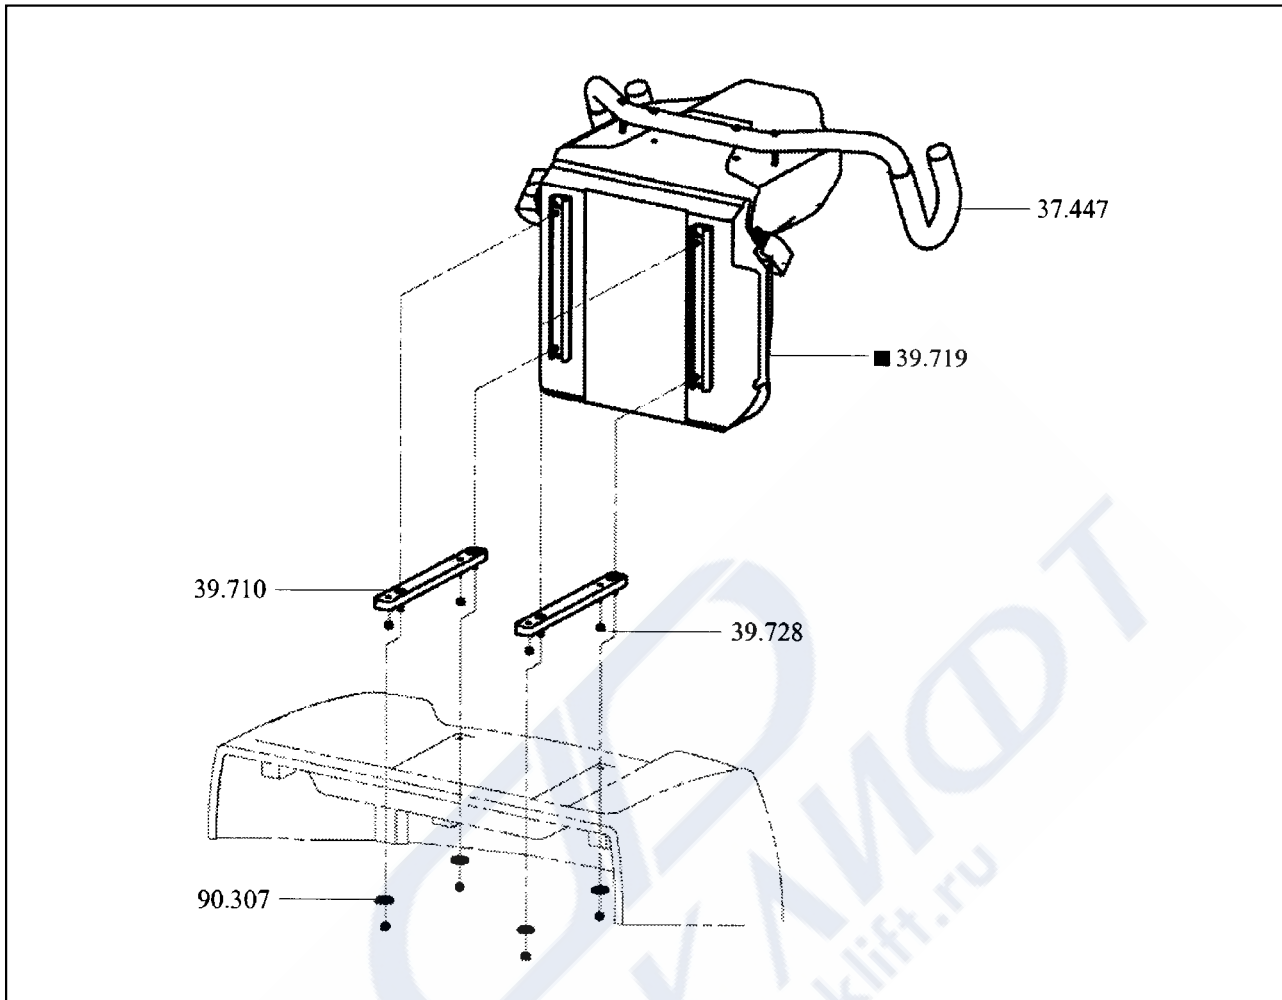 

- | | |
|--------|---|
| 37.447 | RESTRAINT, OPERATOR SEAT LATERAL
레스트레인트 |
| 39.710 | SUPPORT, SEAT ADJUSTOR (RH)
서포트 |
| 39.719 | SEAT ASSEMBLY
시트 |
| 39.728 | FASTENER, SEAT FRAME TO ADJUSTOR
패스너 |
| 90.307 | LOCKWASHER, ADJUSTOR TO SEAT SUPPORT FASTENER
로크와셔 |

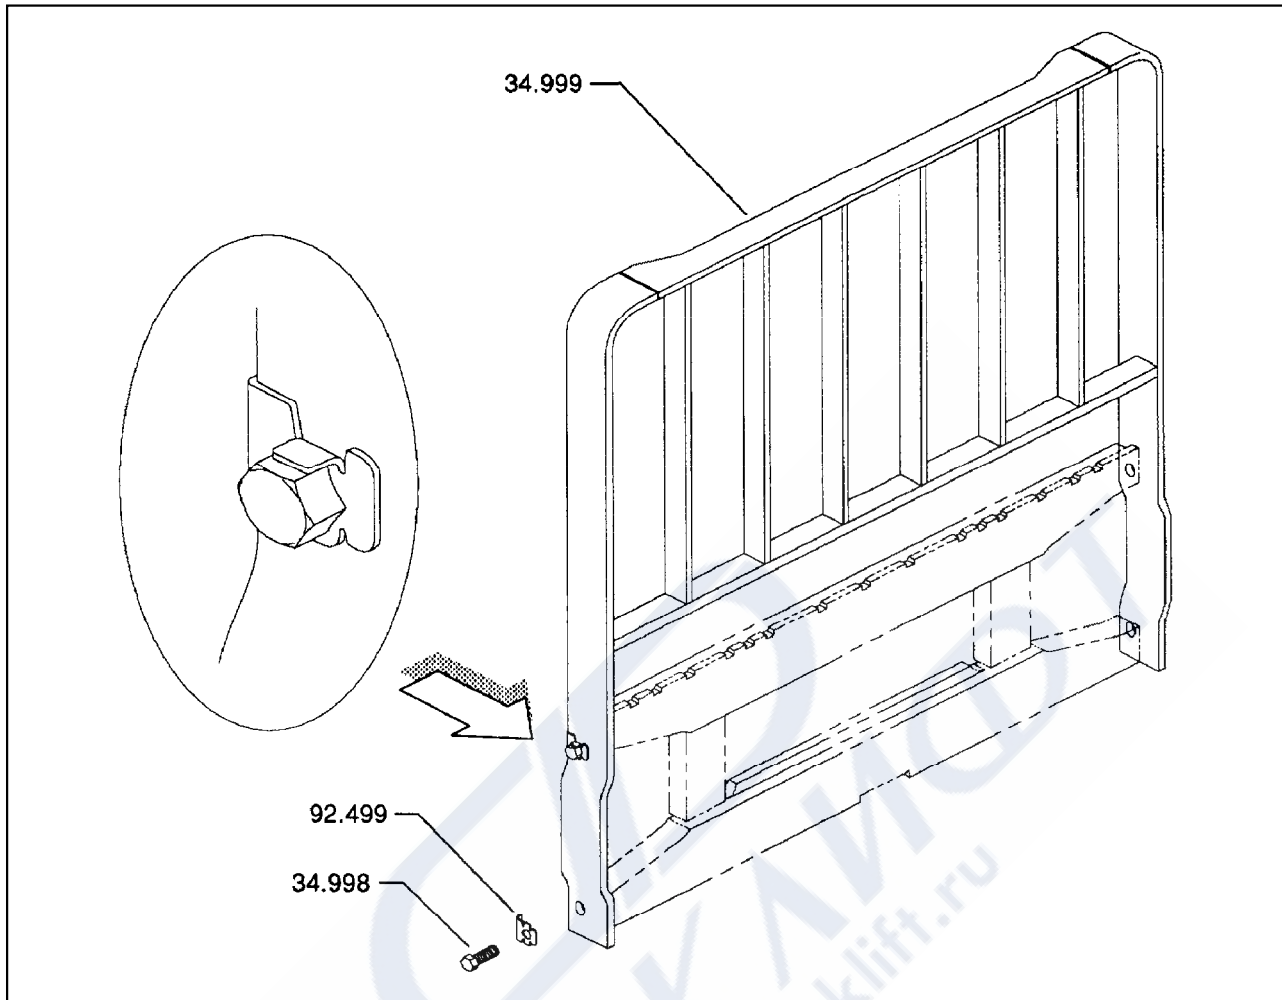 



- | | |
|--------|--|
| 34.998 | FASTENER, LOAD SAFETY BACK REST
패스너 |
| 34.999 | BACK REST, LOAD SAFETY-COMPLETE
백레스트 |
| 92.499 | LOCKWASHER, LOAD SAFETY BACK REST FASTENER
로크와셔 |

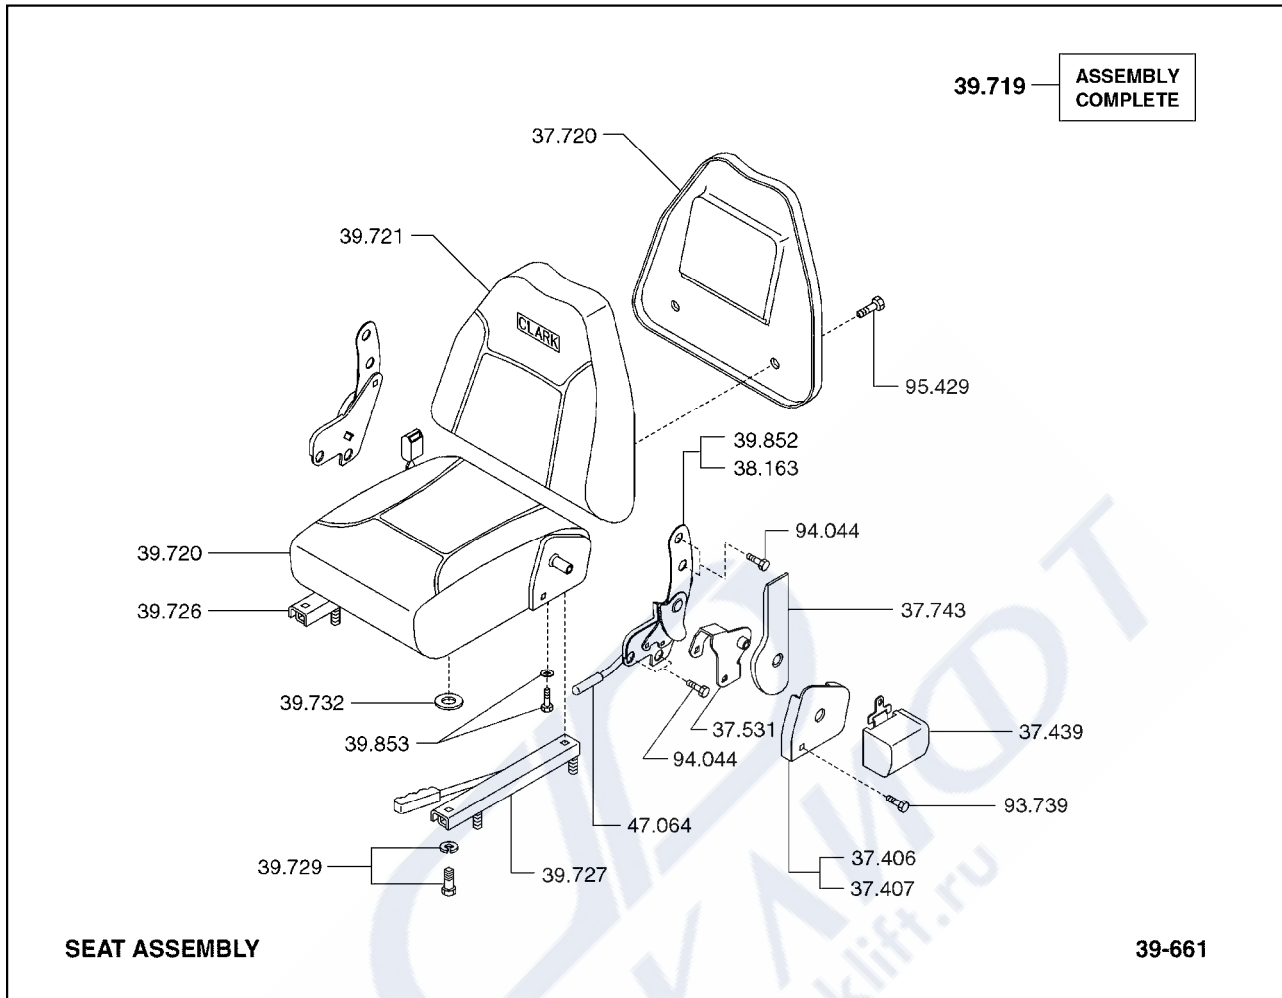 


37.406	BRACKET, SEAT BACK REST COVER LH 브라켓
37.407	BRACKET, SEAT BACK REST COVER RH 브라켓
37.439	SAFETY BELT, SEAT 안전벨트
37.531	BRACKET, SEAT SAFETY BELT MOUNTING 브라켓
37.720	COVER, OPERATOR SEAT LATERAL RESTRAINT 커버
37.743	COVER, SEAT SUPPORT LATCH 커버
38.163	BRACKET, SEAT SUPPORT RH 브라켓
39.719	SEAT ASSEMBLY 시트
39.720	CUSHION, SEAT 쿠션

39.721	CUSHION, SEAT BACK REST 쿠션
39.726	ADJUSTOR, SEAT 어드저스터
39.727	ADJUSTOR, SEAT WITH LATCH 어드저스터
39.729	FASTENER, ADJUSTOR TO SEAT SUPPORT 패스너
39.732	SPACER, SEAT FRAME TO ADJUSTOR 스페이서
39.852	BRACKET, SEAT SUPPORT LH 브라켓
39.853	FASTENER, SEAT SUPPORT BRACKET 패스너
47.064	KNOB, SEAT ASSEMBLY WEIGHT ADJUSTER 노브
93.739	FASTENER, SAFETY BELT ASSEMBLY 패스너
94.044	FASTENER, SEAT CUSHION MOUNTING PLATE 패스너
95.429	FASTENER, SEAT LATERAL RESTRAINT COVER 패스너

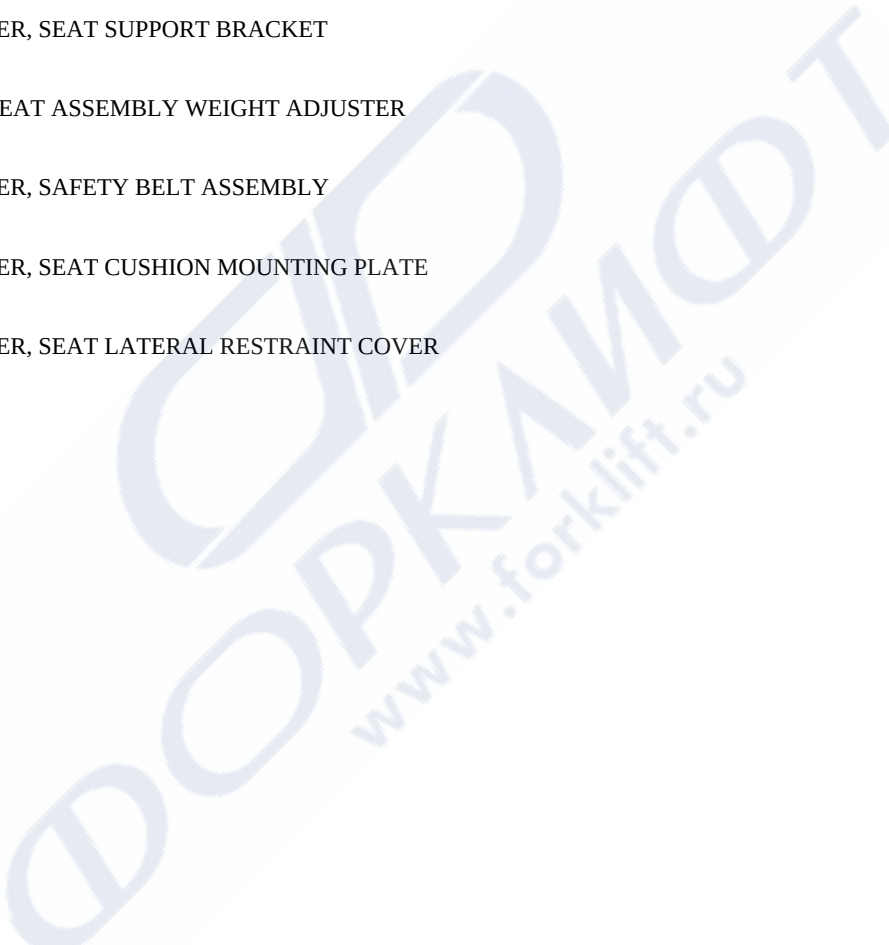 

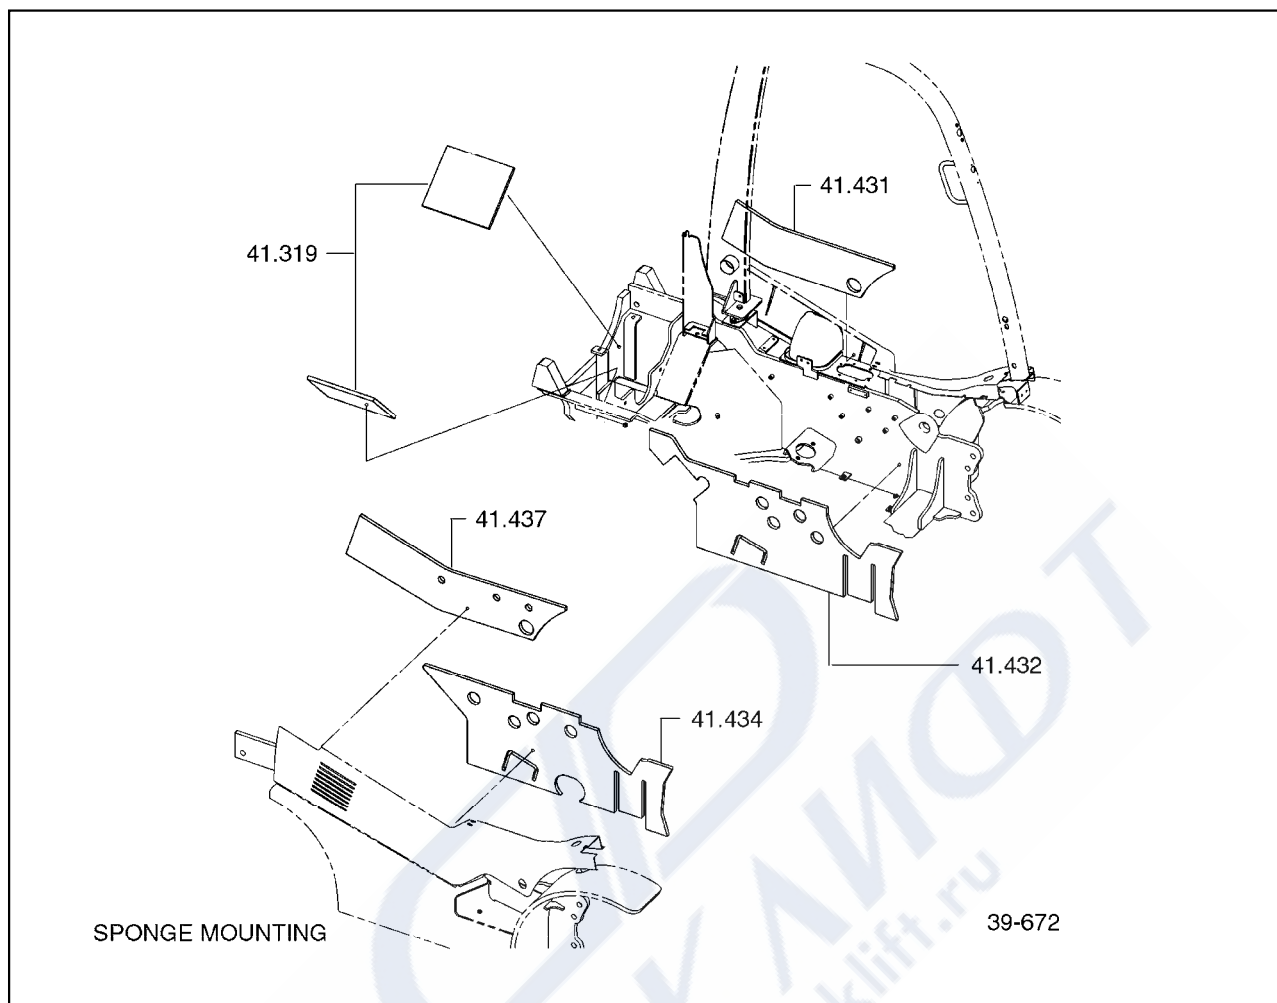 

- | | |
|--------|--------------------------------------|
| 41.319 | SOUND SEAL, REAR FRAME LOWER
사운드씰 |
| 41.431 | SOUND SEAL, FRAME UPPER LH
사운드씰 |
| 41.432 | SOUND SEAL, FRAME LOWER LH
사운드씰 |
| 41.434 | SOUND SEAL, FRAME LOWER RH
사운드씰 |
| 41.437 | SOUND SEAL, FRAME RH UPPER
사운드씰 |

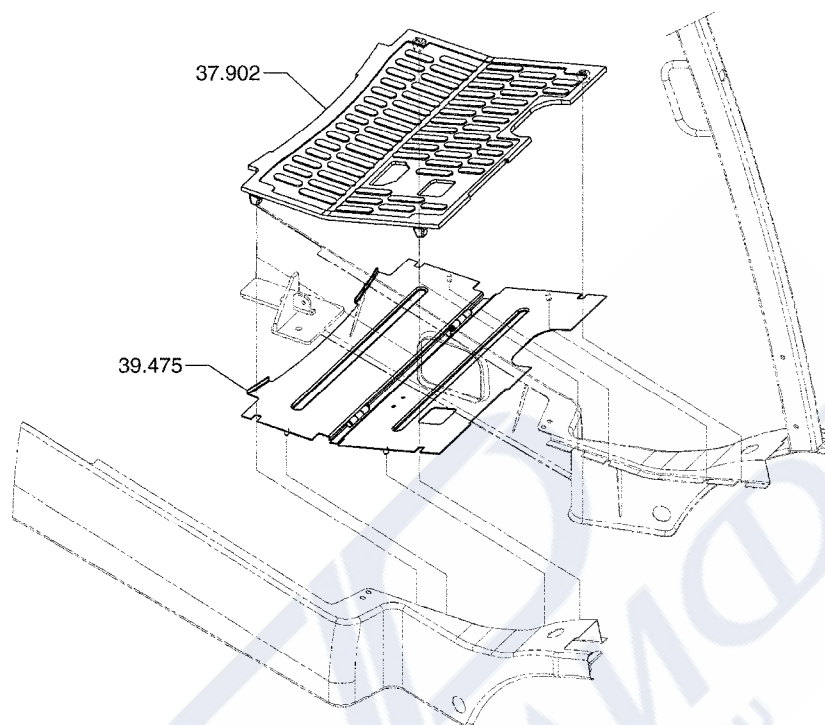 


FLOOR PLATE MOUNTING

39-674

- | | |
|--------|----------------------------|
| 37.902 | MAT, FLOORPLATE
매트 |
| 39.475 | PLATE, FRONT FLOOR
플레이트 |


 
■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

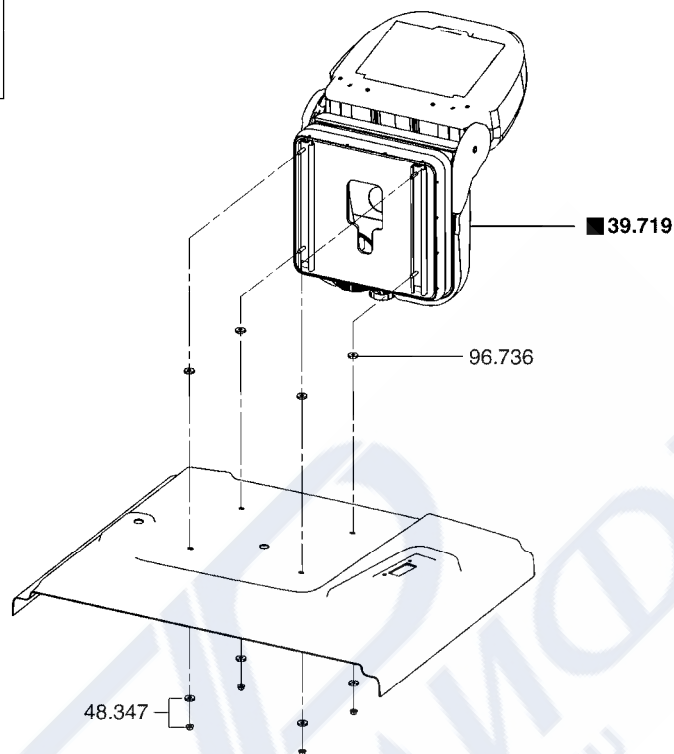

SEAT MOUNTING

39-829


39.719	SEAT ASSEMBLY 시트
48.347	FASTENER, SEAT ASSEMBLY 패스너
96.736	WASHER, SEAT ASSEMBLY FASTENER 와셔

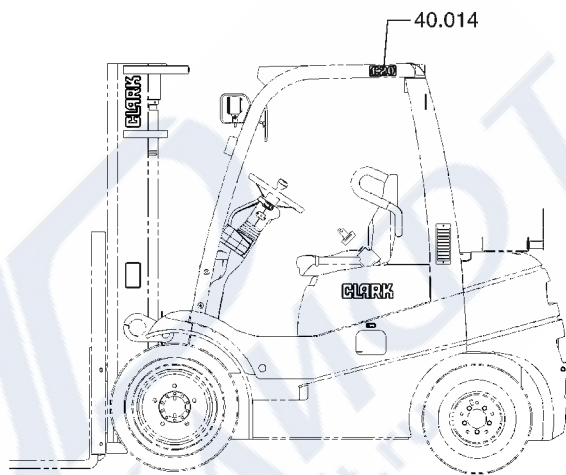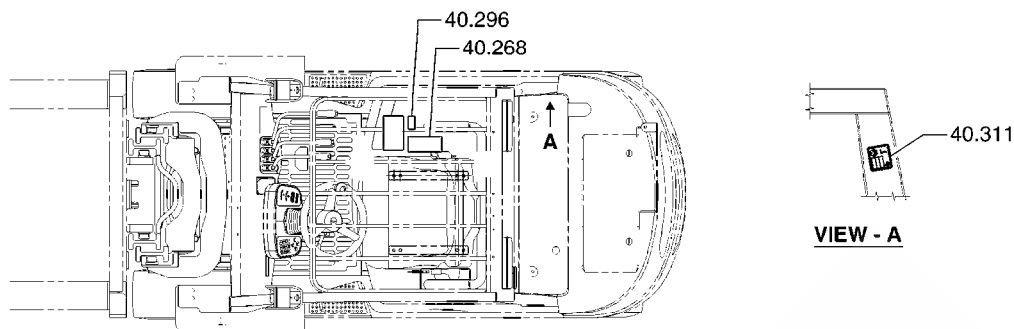  

MODEL & SPECIFICATION DECALS

40-243


40.014	DECAL, MODEL NAME 데칼
40.268	DECAL, SPEC 데칼
40.296	DECAL, TIRE PRESSURE 데칼
40.311	DECAL, SOUND POWER LEVEL 데칼

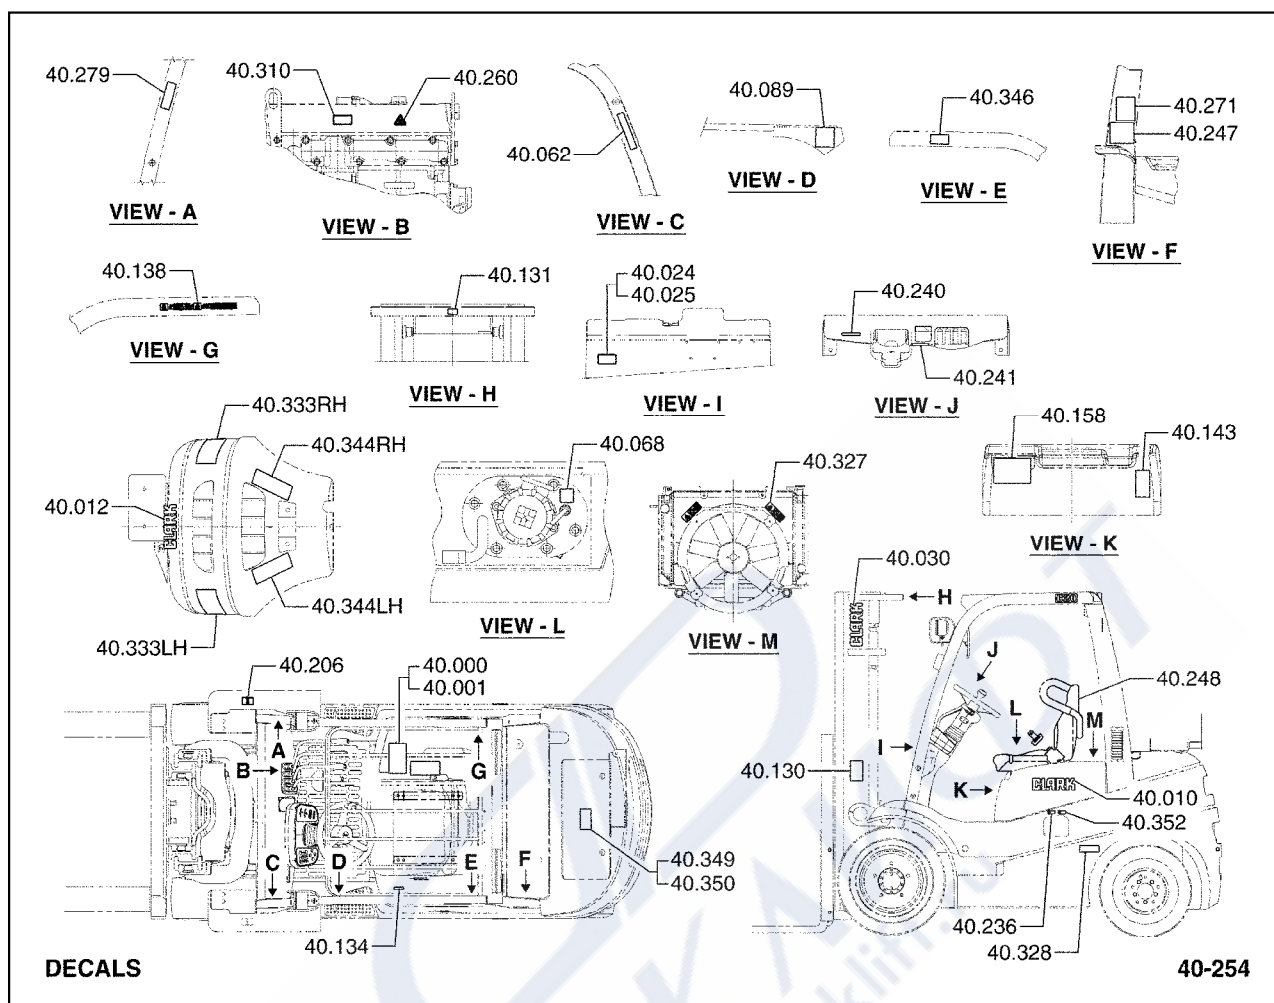 

40.000	PLATE, CAPACITY & SERIAL NUMBER 플레이트	40.158	DECAL, WARNING INDICATOR 데칼
40.001	FASTENER, CAPACITY & SERIAL PLATE 패스너	40.206	DECAL, SLING EYE 데칼
40.010	DECAL, CLARK 데칼	40.236	DECAL, FUEL 데칼
40.012	DECAL, CLARK LOGO-SMALL 데칼	40.240	DECAL, FUEL WARNING 데칼
40.024	PLATE, UNDERWRITERS LABEL 플레이트	40.241	DECAL, BRAKE OIL SPEC 데칼
40.025	FASTENER, UNDERWRITERS LABEL PLATE 패스너	40.247	DECAL, LPG FUEL CYL REPLACEMENT PROCEDURE 데칼
40.030	DECAL, CLARK VERTICAL 데칼	40.248	DECAL, SERVICE CHART 데칼
40.062	DECAL, DRIVERS CAUTION 데칼	40.260	DECAL, HOT SURFACE WARNING 데칼
40.068	DECAL, HYD-SYSTEM OIL 데칼	40.271	DECAL, LP GAS 데칼
40.089	PLATE, SAFETY INSTRUCTION 플레이트	40.279	DECAL, STARTING PROCEDURE 데칼
40.130	LEGEND, SAFETY 범례	40.310	DECAL, EXHAUST GAS 데칼
40.131	LEGEND, SAFETY 범례	40.327	DECAL, FAN WARNING 데칼
40.134	DECAL, OPERATORS MANUAL LOCATION 데칼	40.328	DECAL, WHEEL NUT WARNING 데칼
40.138	DECAL, SAFETY 데칼	40.333	REFLECTOR, COUNTERWEIGHT 리플렉터
40.143	DECAL, OPERATORS INSTRUCTIONS 데칼	40.344	REFLECTOR, COUNTERWEIGHT LOWER 리플렉터

40.346	DECAL, OVERHEAD GUARD DROP TEST 데칼
40.349	PLATE, LESS LP TANK 플레이트
40.350	FASTENER, PLATE LESS LP TANK 패스너
40.352	DECAL, USE LOW SULFUR FUEL 데칼



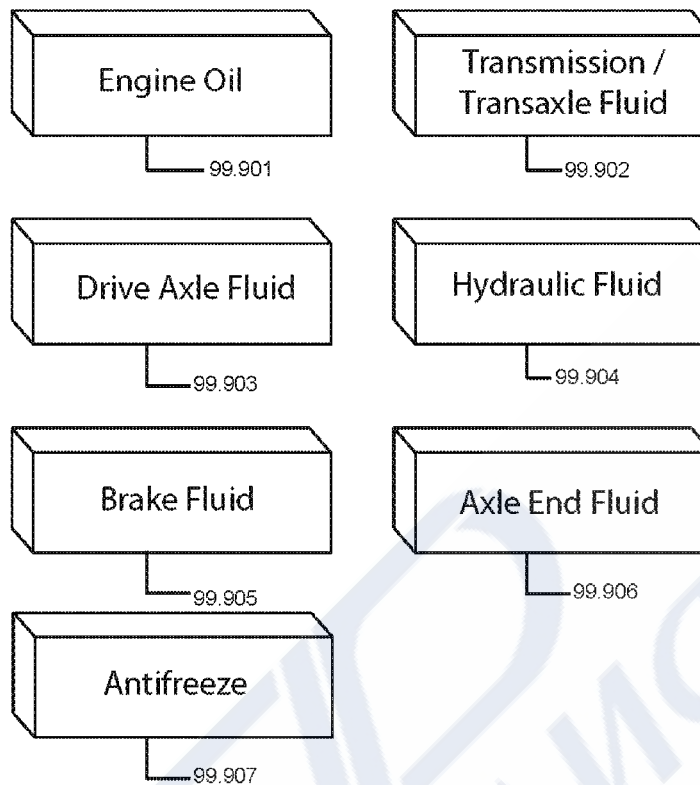 


NOTE: All Trucks Do Not Use All Fluid Key Numbers

TRUCK FLUIDS


40-260

99.901	ENGINE OIL 엔진오일
99.902	TRANSMISSION FLUID 트랜스미션오일
99.903	DRIVE AXLE FLUID 드라이브액슬
99.904	HYDRAULIC SUMP OIL 유압섬프오일
99.905	BRAKE FLUID 브레이크오일
99.906	AXLE END FLUID 액슬엔드오일
99.907	ENGINE ANTIFREEZE 부동액

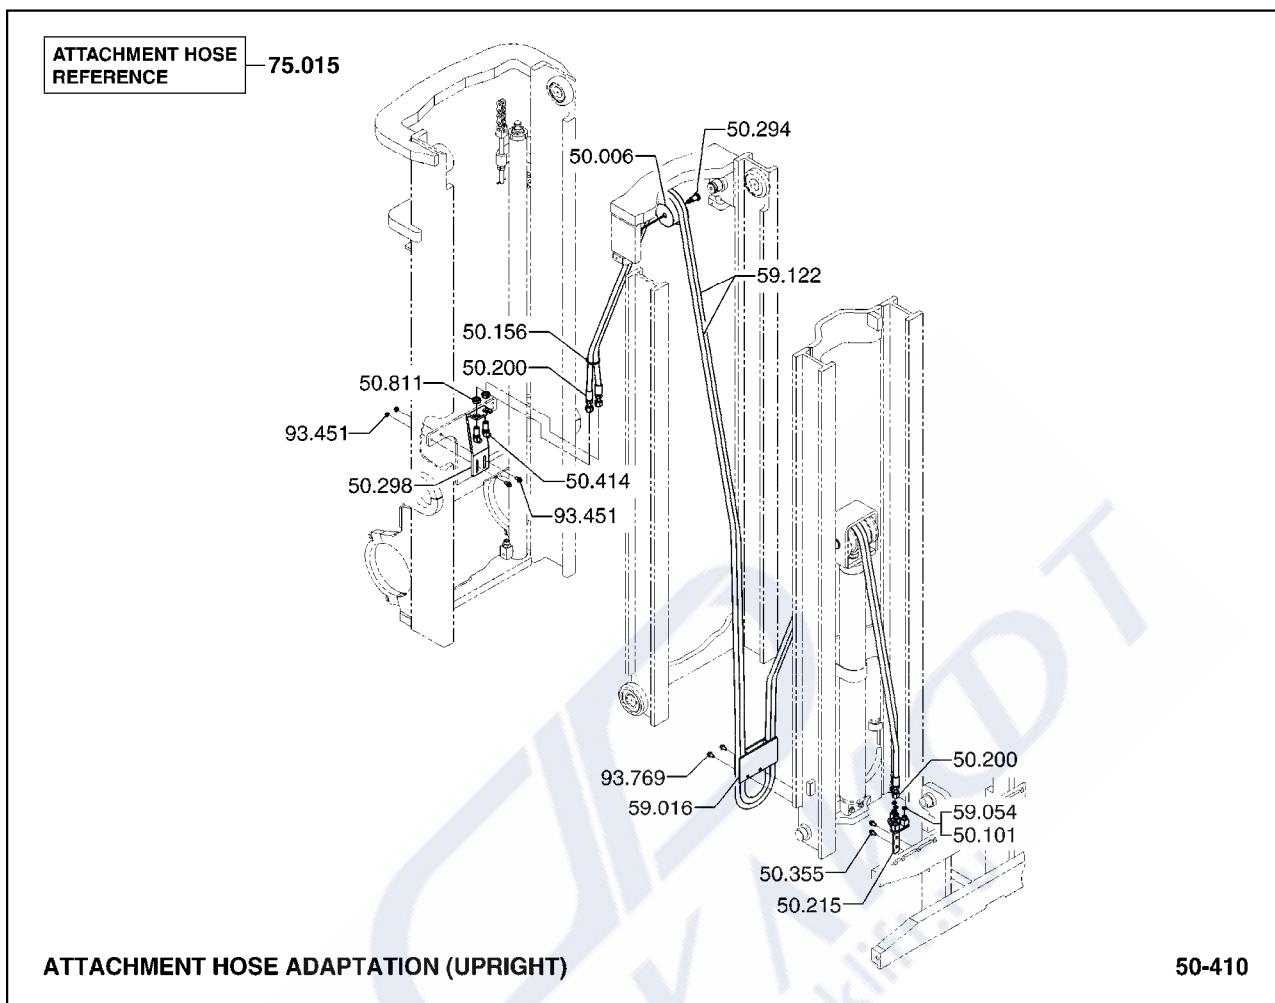 

50.006	SHEAVE, DEVICE HOSE UPPER шнёр
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING сальник
50.156	CLIP, DEVICE HOSE зажим
50.200	COUPLING, DEVICE HOSE соединитель
50.215	TERMINAL BLOCK, DEVICE HOSE терминальный блок
50.294	PIVOT, DEVICE HOSE UPPER SHEAVE опора
50.298	BRACKET, DEVICE HOSE TERMINAL кронштейн
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK крепёжка
50.414	FITTING, DEVICE HOSE CONNECTOR подсоединитель


50.811	NUT, DEVICE HOSE FITTING 너트
59.016	JUNCTION BLOCK, DEVICE HOSE 정크션 블록
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너
93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너

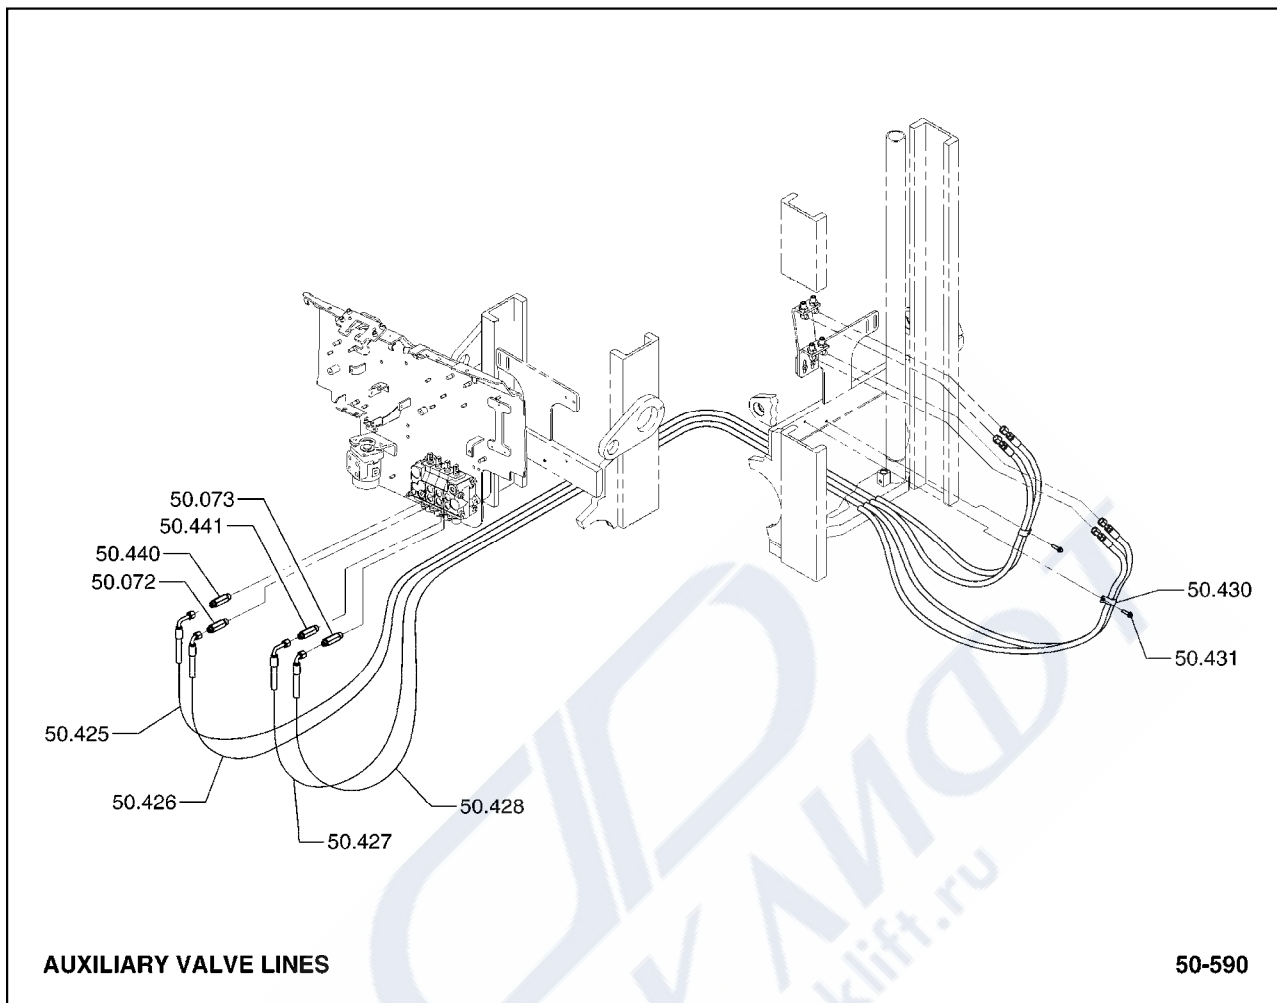 


50.072	FITTING, 1ST AUXILIARY VALVE "B" PORT 피팅
50.073	FITTING, 2ND AUXILIARY VALVE "B" PORT 피팅
50.425	LINE, 1ST AUXILIARY VALVE "A" PORT 라인
50.426	LINE, 1ST AUXILIARY VALVE "B" PORT 라인
50.427	LINE, 2ND AUXILIARY VALVE "A" PORT 라인
50.428	LINE, 2ND AUXILIARY VALVE "B" PORT 라인
50.430	CLAMP, AUXILIARY VALVE LINES 클램프
50.431	FASTENER, AUX VALVE LINES CLAMP 패스너
50.440	FITTING, 1ST AUXILIARY VALVE "A" PORT 피팅

 50.441 FITTING, 2ND AUXILIARY VALVE "A" PORT
 피팅




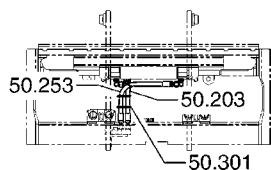

 
**MODEL: GTX162
GEX162**
UPRIGHT: STANDARD

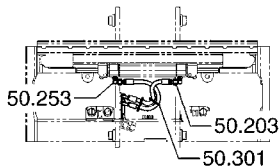

 
**MODEL: GTX162, GEX162
EPX162, CMP158
P152, TMX250, ESX250**
UPRIGHT: TRIPLE STAGE & HI-LO

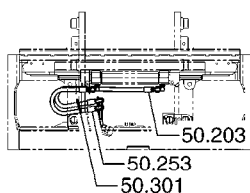

 
**MODEL: GTX162, GEX162
EPX162, CMP158
P152, TMX250, ESX250**
UPRIGHT: TRIPLE STAGE

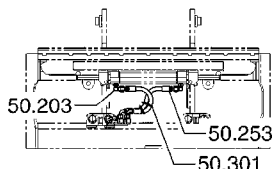

 
**MODEL: EPX162, CMP158
P152, TMX250, ESX250**
UPRIGHT: STANDARD

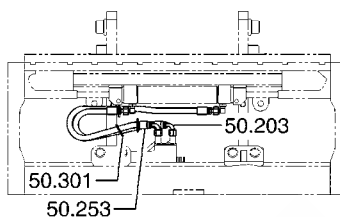

 **MODEL: EPX360, ECX360
GEX230, P232
GTS232, CQ230**
UPRIGHT: STANDARD

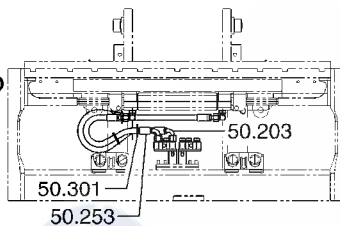

 **MODEL: EPX360, ECX360
GEX230, P232
GTS232, CQ230**
UPRIGHT: TRIPLE STAGE

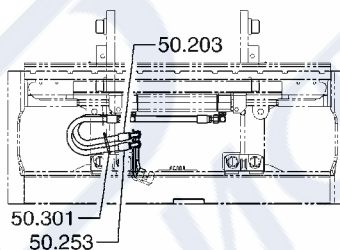


**MODEL: EPX360, ECX360
GEX230, P232
GTS232, CQ230**
UPRIGHT: HI-LO

ATTACHMENT HOSE ADAPTATION (CARRIAGE)

50-791


- | | |
|--------|--|
| 50.203 | LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인 |
| 50.253 | LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인 |
| 50.301 | CLIP, DEVICE RH HOSE (AT CARRIAGE)
클립 |

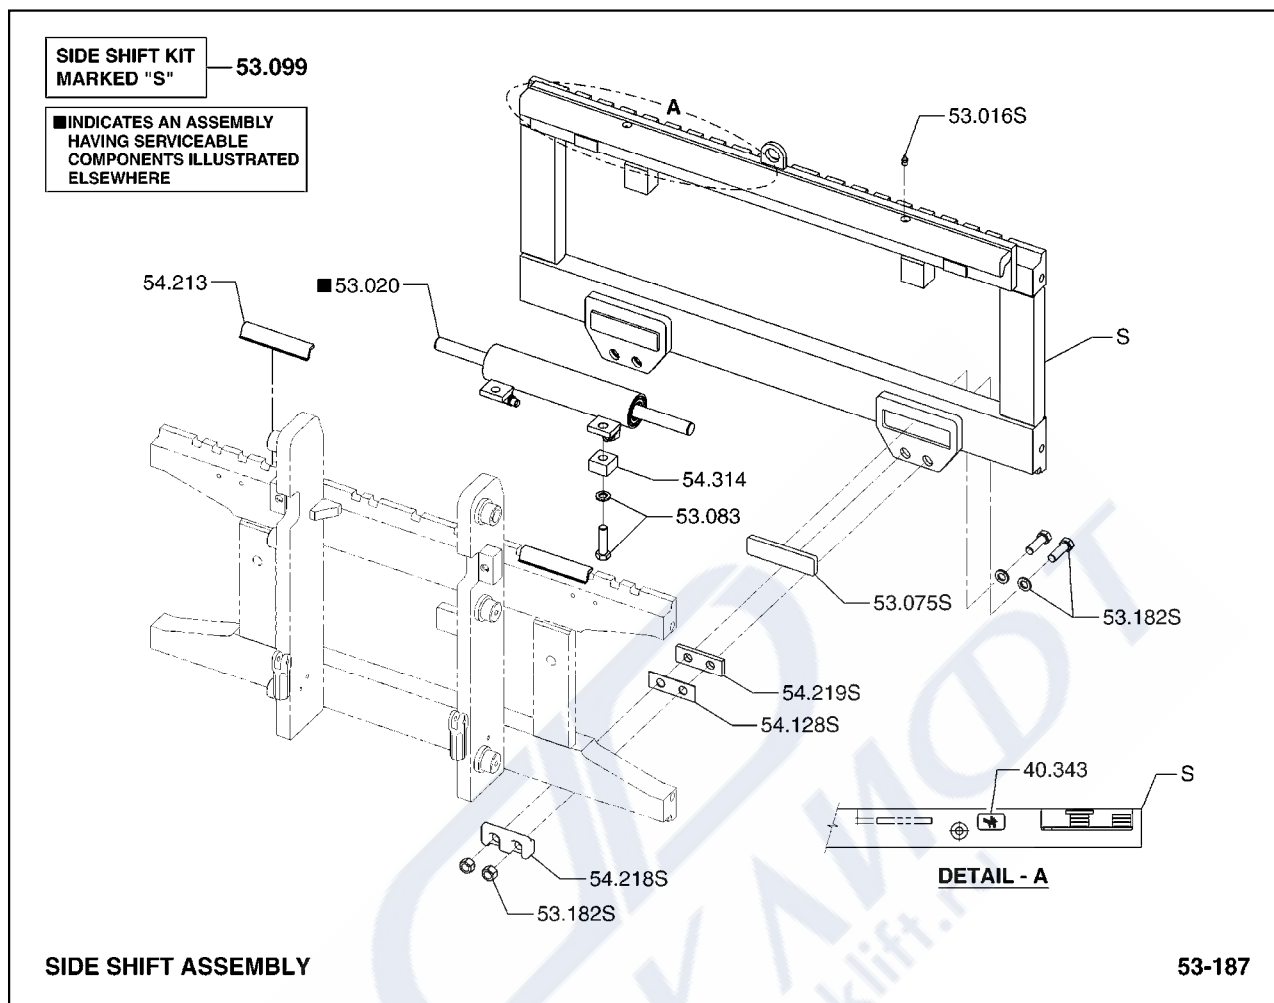 

40.343	DECAL, ATTACHMENT SAFETY 데칼
53.016	FITTING-LUB, SIDE SHIFTER MOVABLE FRAME SUPPORT SH 피팅
53.020	CYLINDER ASSEMBLY, SIDE SHIFTER 실린더
53.075	BEARING, SIDE SHIFTER (LOWER) 베어링
53.083	FASTENER, SIDE SHIFTER CYLINDER ANCHOR 패스너
53.099	SIDE SHIFTER, DEVICE 사이드쉬프트
53.182	FASTENER, SIDE SHIFTER HANGER 패스너
54.128	SPACER, SIDE SHIFTER MOVEABLE FRAME BEARING 스페이서
54.213	BEARING, SIDE SHIFTER (UPPER) 베어링

54.218	HOOK, SIDE SHIFTER HANGER 후크
54.219	SPACER, SIDE SHIFTING BASE PLATE HANGER 스페이서
54.314	SPACER, SIDE SHIFTER CYLINDER REAR 스페이서




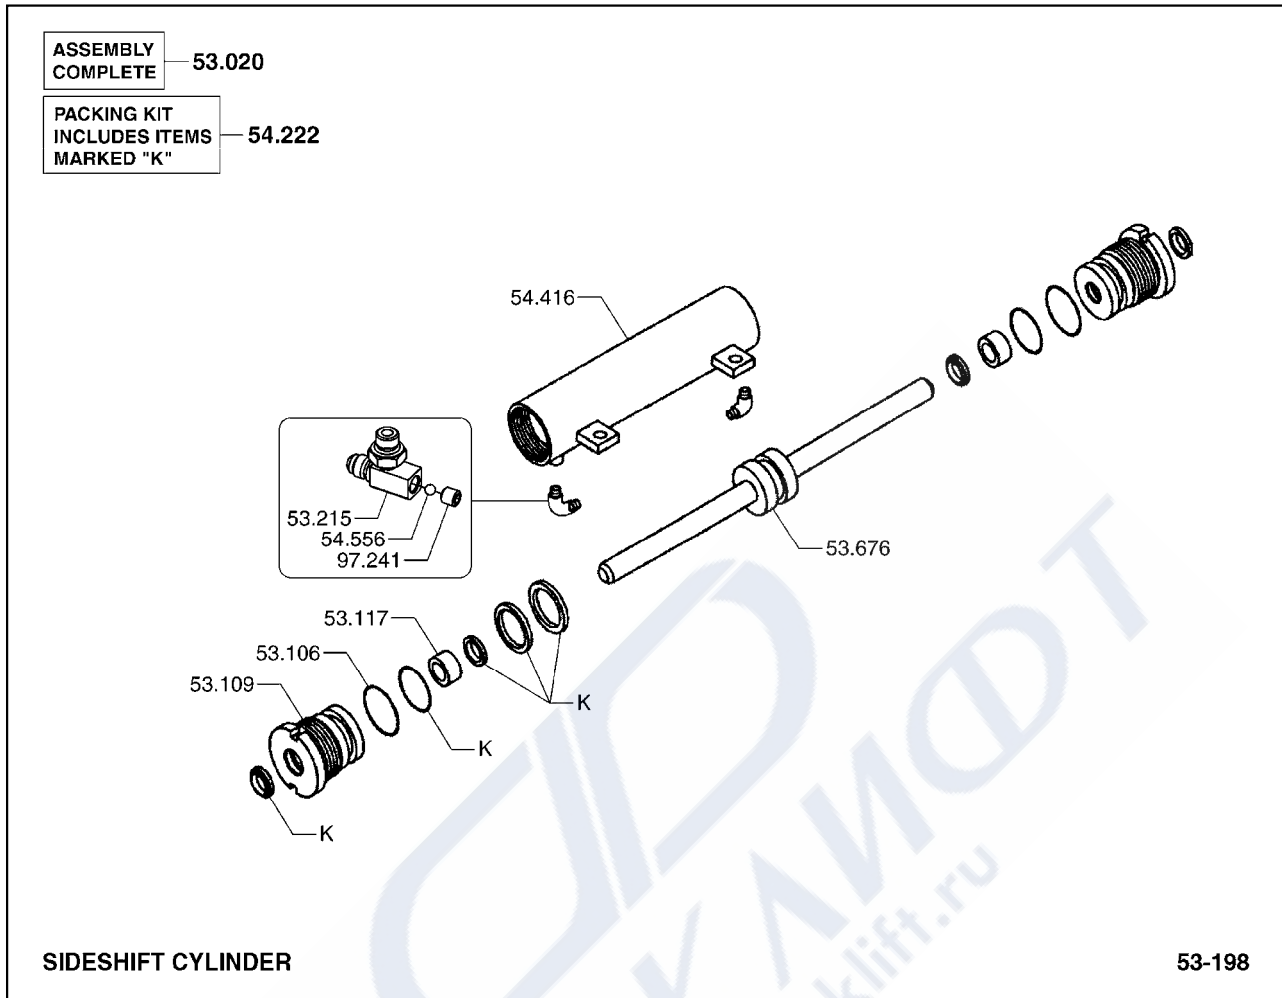 


53.020	CYLINDER ASSEMBLY, SIDE SHIFTER 실린더
53.109	GLAND, SIDE SHIFTER CYLINDER 그랜드
53.110	RETAINER, SIDE SHIFTER CYLINDER GLAND 리테이너
53.117	BUSHING, SIDE SHIFTER CYLINDER GLAND 부싱
53.215	FITTING, SIDE SHIFTER CYLINDER ROD PORT 피팅
53.676	ROD, SIDE SHIFTER CYLINDER PISTON 로드
54.222	PACKING KIT, SIDE SHIFTER CYLINDER 패킹키트
54.416	BARREL, SIDE SHIFT CYLINDER 배럴
54.556	BALL, SIDE SHIFTER CYLINDER ROD PORT 볼

 97.241 SET SCREW, SIDE SHIFTER CYLINDER ROD PORT
세트스크류



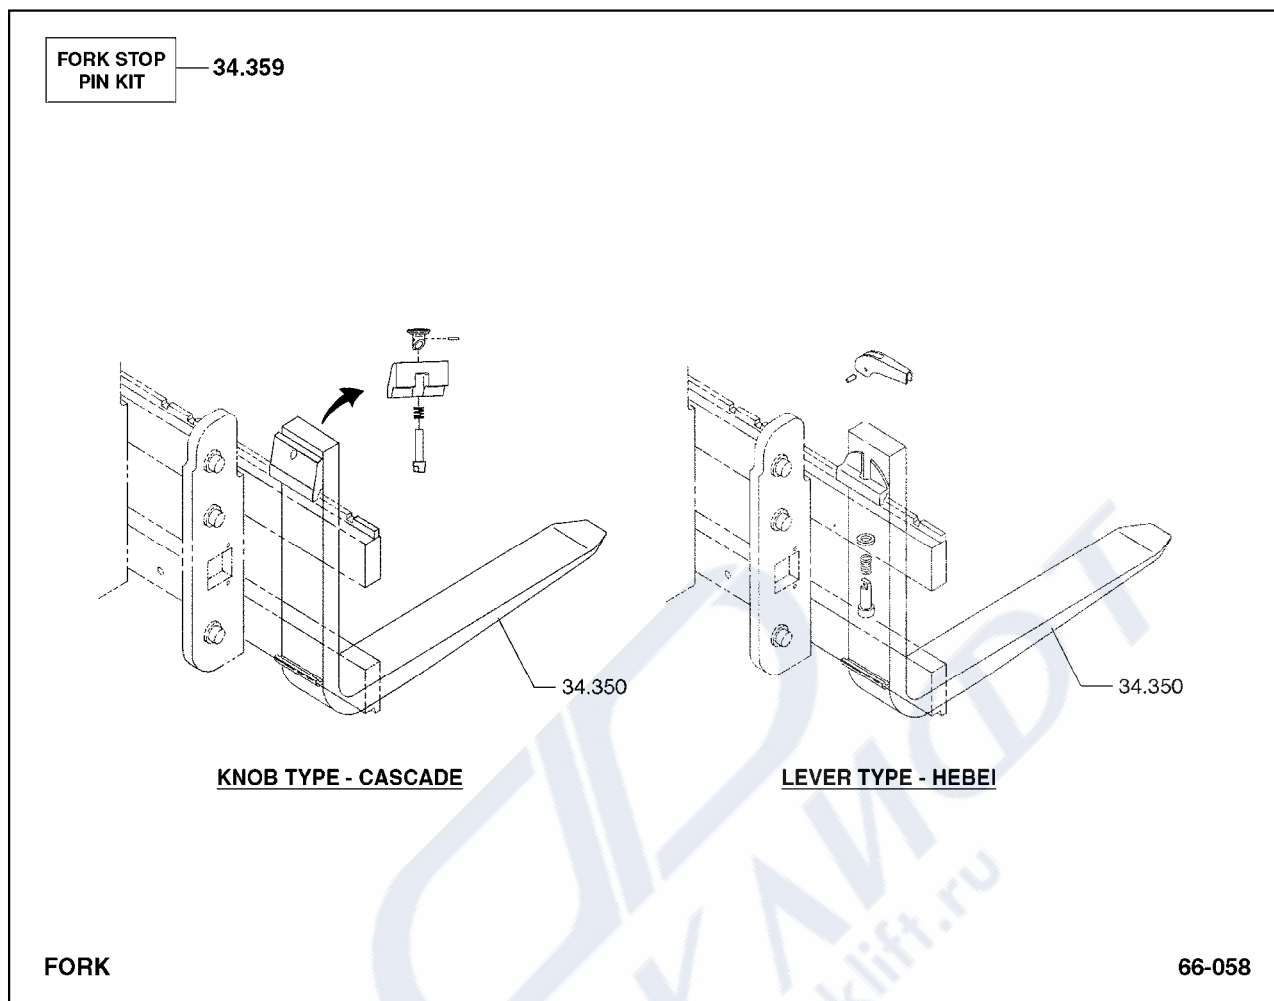


 - 34.350 FORK ASSEMBLY
포크
- 34.359 KIT, FORK STOP PIN (CAPTIVE)
키트

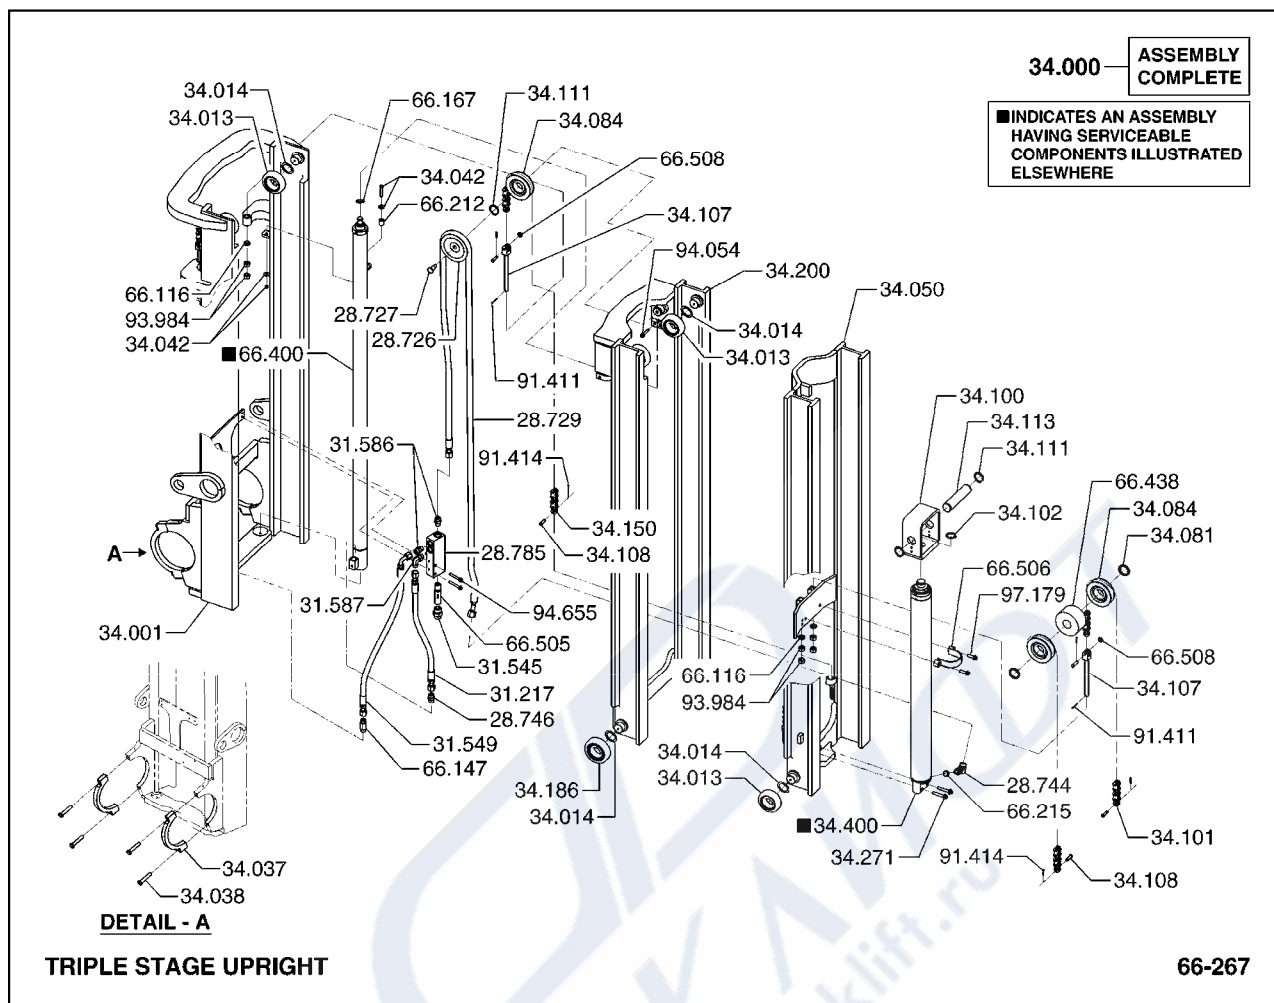


28.726	SHEAVE, LIFT CYLINDER HOSE 쉬브	34.037	CAP, UPRIGHT TRUNNION 캡
28.727	PIVOT, LIFT CYLINDER HOSE SHEAVE 피봇	34.038	FASTENER, UPRIGHT TRUNNION CAP 패스너
28.729	LINE, LIFT CYLINDER 라인	34.042	FASTENER, LIFT CYLINDER (UPPER) 패스너
28.744	FITTING, LIFT CYLINDER LINE 피팅	34.050	INNER RAIL WELDED ASSEMBLY, UPRIGHT 인너레일
28.746	FITTING, LIFT CYLINDER LINE 피팅	34.081	SPACER, LIFT CHAIN SHEAVE CARRIER 스페이서
28.785	JUNCTION BLOCK, LIFT CYLINDER LINES 정크션 블록	34.084	SHEAVE, LIFT CHAIN 쉬브
31.217	LINE, LIFT CYLINDER INLET FITTING 라인	34.100	CARRIER, LIFT CYLINDER CHAIN SHEAVE 캐리어
31.545	FITTING, LIFT CYL FLOW CONTROL VALVE INLET 피팅	34.101	CHAIN, LIFT 체인
31.549	LINE, LIFT CYL FLOW CONTROL VALVE INLET 라인	34.102	FASTENER, SHEAVE CARRIER 패스너
31.586	FITTING, LIFT CYLINDER VENT LINE 피팅	34.107	ANCHOR, LIFT CHAIN 앵커
31.587	FITTING, LIFT CYLINDER VENT LINE 피팅	34.108	FASTENER, LIFT CHAIN TO ANCHOR 패스너
34.000	UPRIGHT & LIFT CYL ASSEMBLY 마스트& 실린더	34.111	FASTENER, CHAIN SHEAVE SHAFT (CARRIER) 패스너
34.001	OUTER RAIL WELDER ASSEMBLY, UPRIGHT 아우터레일	34.113	SHAFT, LIFT CHAIN SHEAVE (CARRIER) 샤프트
34.013	ROLLER, UPRIGHT 롤러	34.150	CHAIN, UPRIGHT RAIL LIFT 체인
34.014	SHIM, UPRIGHT ROLLER 심	34.186	ROLLER, UPRIGHT 롤러

34.200	INTERMEDIATE RAIL WELDED ASSEMBLY, UPRIGHT 인터레일
34.271	FASTENER, LIFT CYLINDER LOWER 패스너
34.400	CYLINDER ASSEMBLY, LIFT 실린더
66.116	SPACER, LIFT CHAIN ANCHOR 스페이서
66.147	VALVE, FINAL LIFT CYLINDER PORT FLOW CONTROL 밸브
66.167	SHIM, LIFT CYLINDER UPPER 삼
66.212	SPACER, LIFT CYLINDER FASTENER 스페이서
66.215	VALVE, LIFT CYLINDER PORT FLOW CONTROL 밸브
66.400	CYLINDER ASSEMBLY, FINAL LIFT 실린더
66.438	SHEAVE, HOSE 쉬브
66.505	CARTRIDGE, LIFT CYLINDER FLOW CONTROL VALVE 카트리지
66.506	CLAMP, LIFT CYLINDER 클램프
66.508	SPACER, LIFT CHAIN ANCHOR FASTENER 스페이서
91.411	RETAINER, LIFT CHAIN TO ANCHOR FASTENER 리테이너
91.414	RETAINER, LIFT CHAIN TO ANCHOR FASTENER 리테이너
93.984	FASTENER, LIFT CHAIN ANCHOR 패스너
94.054	FASTENER, LIFT CYLINDER (UPPER) 패스너
94.655	FASTENER, LIFT CYLINDER LINE JUNCTION BLOCK 패스너
97.179	FASTENER, LIFT CYLINDER CLAMP 패스너

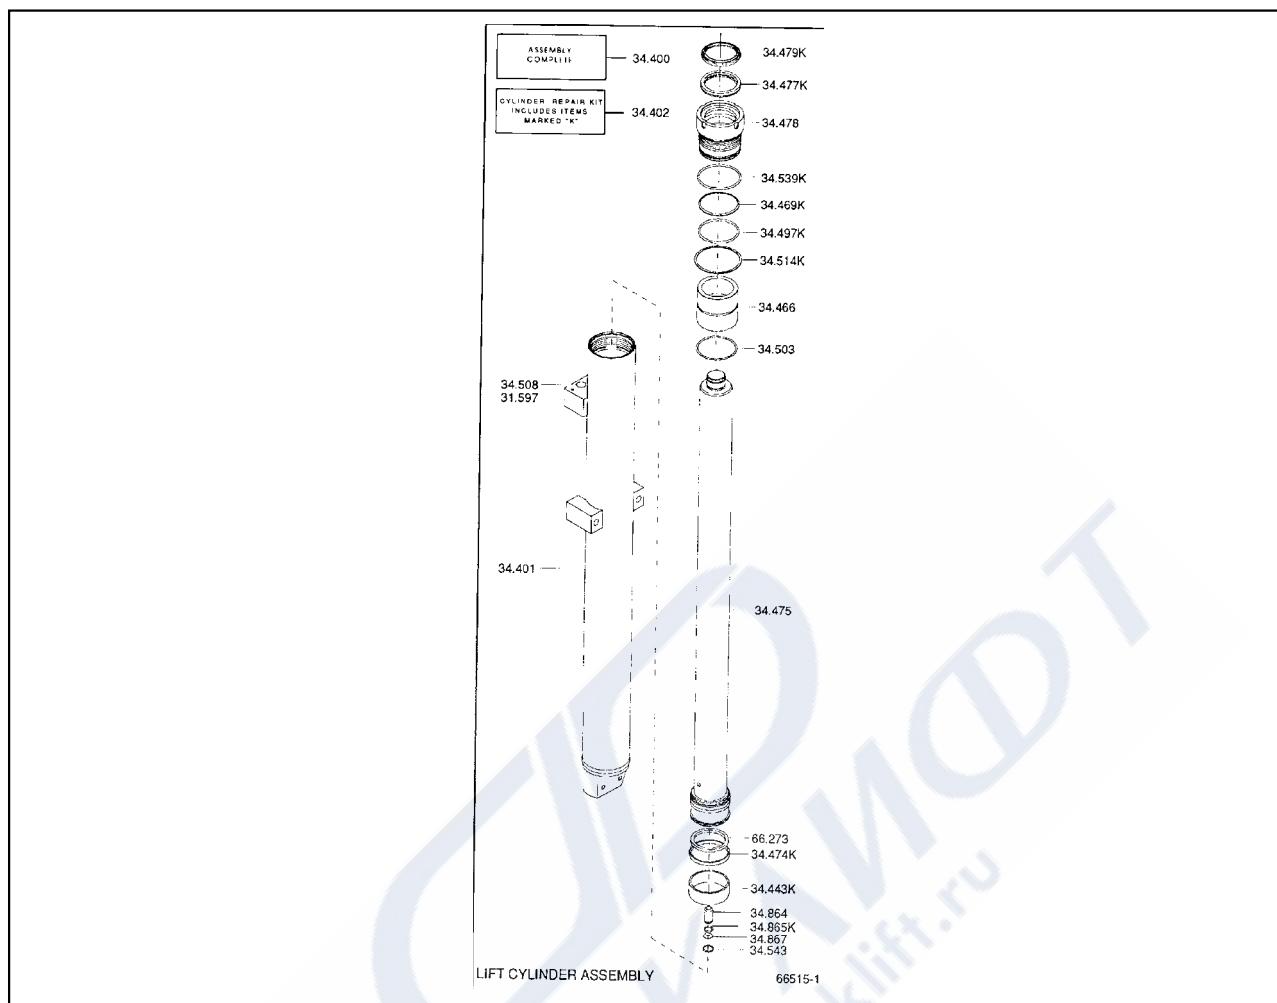 


31.597	SEAL, LIFT CYLINDER PORT 씰
34.400	CYLINDER ASSEMBLY, LIFT 실린더
34.401	BARREL, LIFT CYLINDER 배럴
34.402	SEAL & PACKING KIT, LIFT CYLINDER 씰& 팩킹키트
34.443	RING, LIFT CYLINDER PISTON WEAR 링
34.466	SPACER, LIFT CYLINDER FEED TUBE 스페이서
34.469	SEAL, LIFT CYLINDER GLAND 씰
34.474	SEAL, LIFT CYLINDER PISTON 씰
34.475	ROD, LIFT CYLINDER 로드

34.477	PACKING, LIFT CYLINDER FEED TUBE 패킹
34.478	GLAND, LIFT CYLINDER 그랜드
34.479	WIPER, LIFT CYLINDER FEED TUBE 와이퍼
34.497	SEAL, LIFT CYLINDER GLAND 씰
34.503	PACKING, LIFT CYLINDER PISTON ROD (OUTER) 패킹
34.508	PLUG, LIFT CYLINDER 플러그
34.514	BACK-UP RING, LIFT CYLINDER GLAND SEAL 백업링
34.539	RETAINER, LIFT CYLINDER GLAND BUSHING 리테이너
34.543	FASTENER, FLOW CONTROL VALVE 패스너
34.864	CHECK VALVE, LIFT CYLINDER 체크밸브
34.865	SEAL, LIFT CYLINDER CHECK VALVE 씰
34.867	RETAINER, LIFT CYLINDER CHECK VALVE 리테이너
66.273	SEAL, LIFT CYLINDER PISTON ROD ADAPTOR 씰

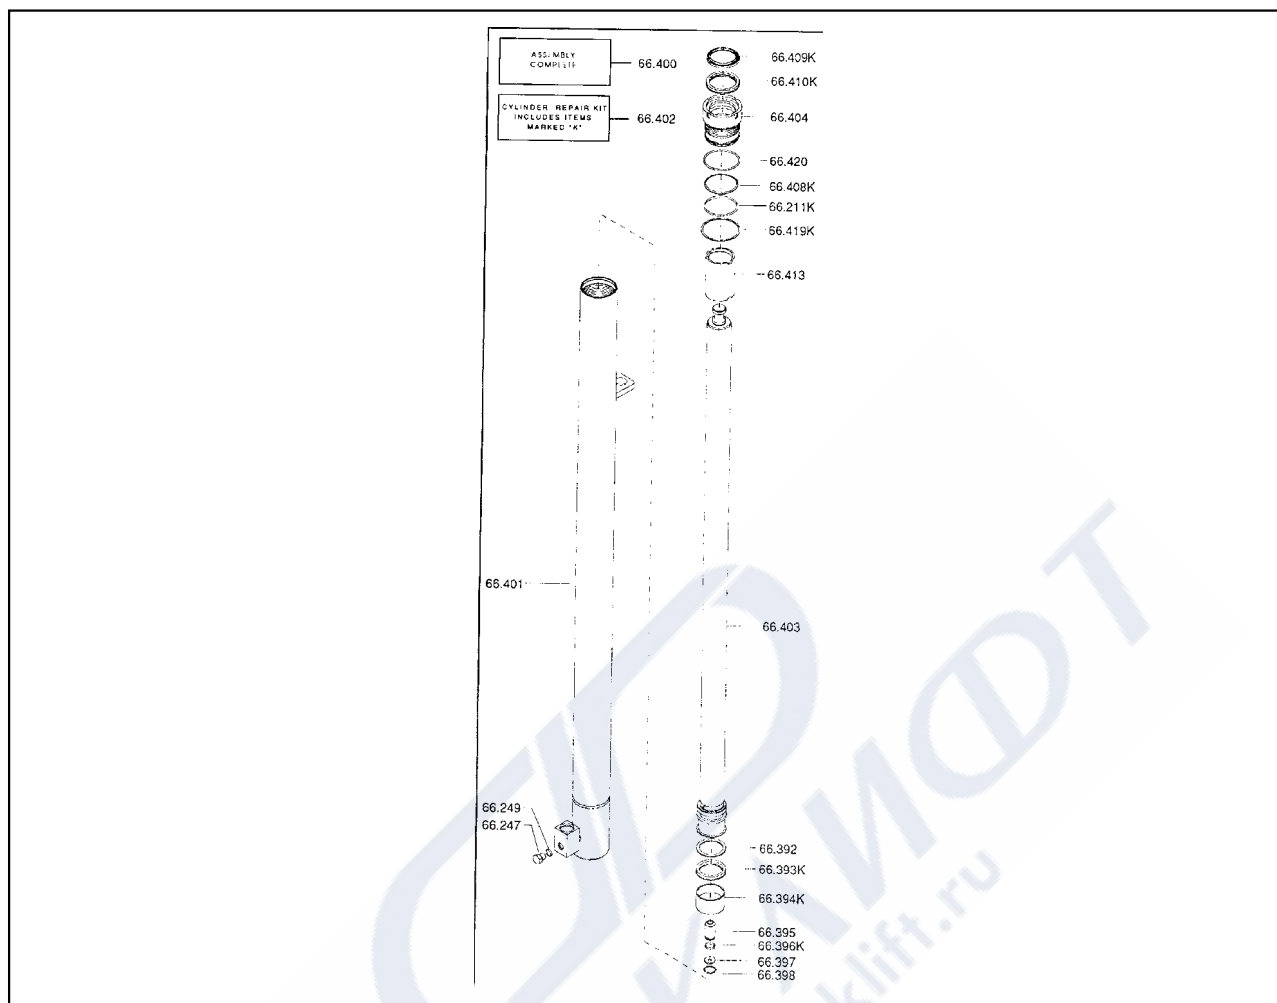 

- | | |
|--------|---|
| 66.211 | BACK-UP RING, FINAL LIFT CYLINDER GLAND SEAL
백업링 |
| 66.247 | FITTING, FINAL LIFT CYLINDER
피팅 |
| 66.249 | SEAL, FINAL LIFT CYLINDER FITTING
씰 |
| 66.392 | RING, FINAL LIFT CYLINDER PISTON BACK-UP
링 |
| 66.393 | SEAL, FINAL LIFT CYLINDER PISTON
씰 |
| 66.394 | RING, FINAL LIFT CYLINDER PISTON WEAR
링 |
| 66.395 | CHECK VALVE, FINAL LIFT CYLINDER
체크밸브 |
| 66.396 | SEAL, FINAL LIFT CYLINDER CHECK VALVE
씰 |
| 66.397 | WASHER, FINAL LIFT CYLINDER CHECK VALVE
와셔 |

66.398	SNAP RING, FINAL LIFT CYLINDER CHECK VALVE 스냅링
66.400	CYLINDER ASSEMBLY, FINAL LIFT 실린더
66.401	BARREL, FINAL LIFT CYLINDER 배럴
66.402	PACKING KIT, FINAL LIFT CYLINDER 패킹키트
66.403	PISTON ROD, FINAL LIFT CYLINDER 피스톤로드
66.404	CAP, FINAL LIFT CYLINDER GLAND 캡
66.408	SEAL, FINAL LIFT CYLINDER GLAND CAP 씰
66.409	WIPER, FINAL LIFT CYLINDER PISTON ROD 와이퍼
66.410	SEAL, FINAL LIFT CYLINDER PISTON ROD 씰
66.413	SPACER, FINAL LIFT CYLINDER PISTON ROD 스페이서
66.419	RING, LIFT CYLINDER GLAND 링
66.420	LOCK RING, LIFT CYLINDER GLAND 로크링

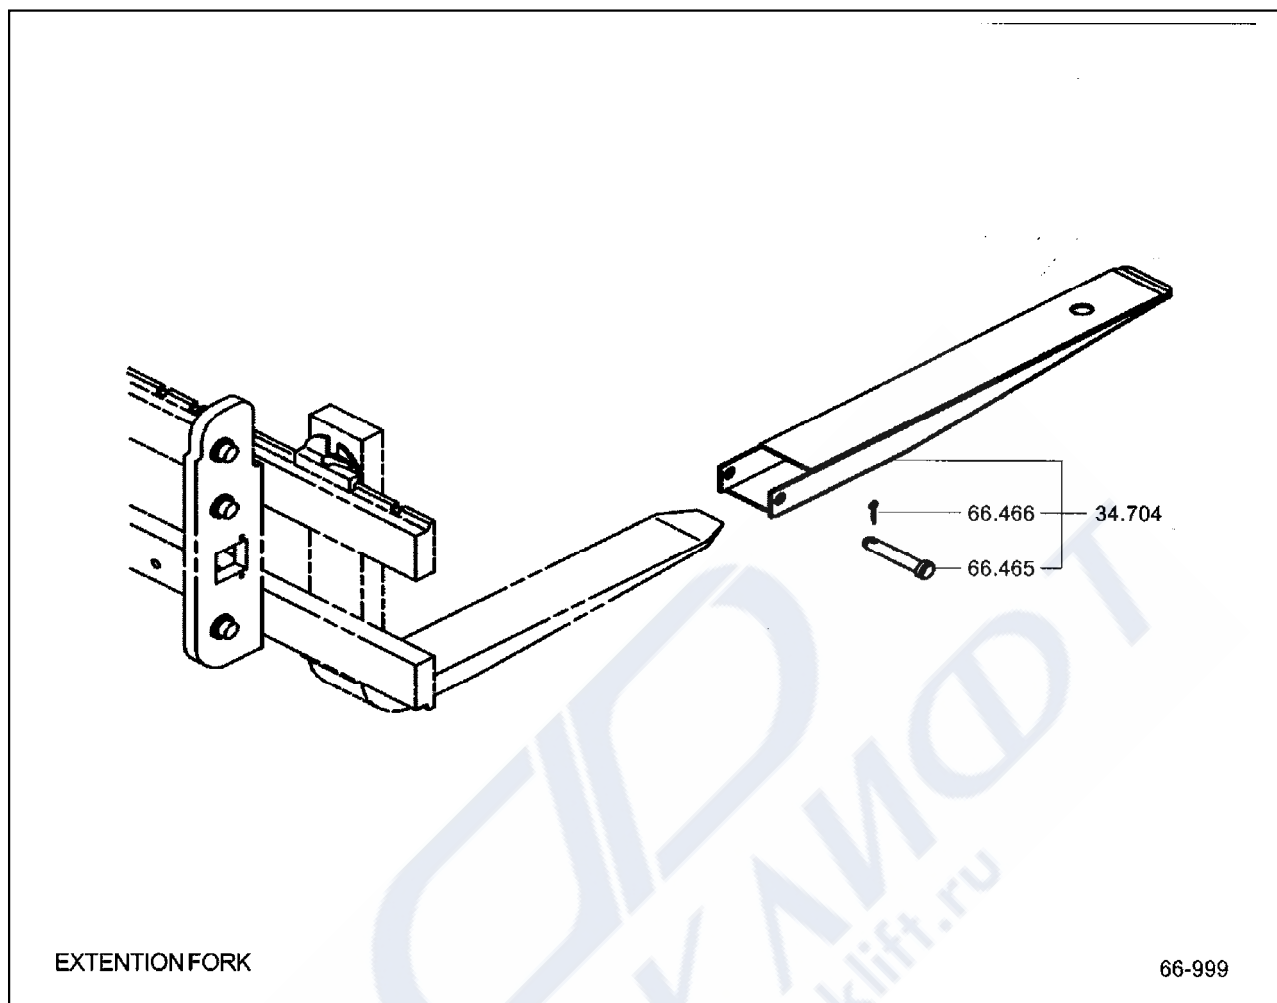 

- | | |
|--------|---|
| 34.704 | EXTENSION, FORK ASSEMBLY COMPLETE
익스텐션 |
| 66.465 | PIN, EXTENSION FORK
핀 |
| 66.466 | PIN, EXTENSION FORK
핀 |