

# 부품 매뉴얼 PARTS MANUAL

 
---

## ***C 50/60/70/75/80D***

SERIAL NUMBER : P680D - XXXX - 9851 KF (Tier 2)

부품 청구시 항상 장비의 SERIAL NO. 도  
함께 알려 주십시오.

ALWAYS GIVE TRUCK SERIAL NUMBER  
WHEN ORDERING PARTS.

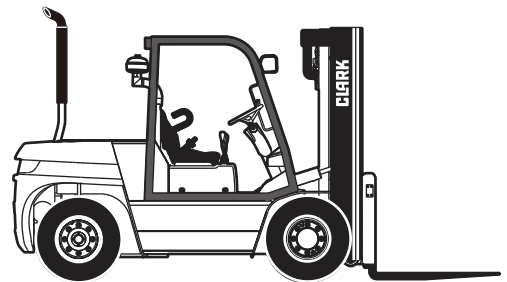

Publication Date : Dec. 2013



(본사) 경기도 부천시 오정구 오정동 202-1  
(Head office) 202-1 Ojung-Dong, Ojung-Gu, Bucheon-city, Kyunggi-do, Korea  
(공장) 경남 창원시 웅남동 40-1  
(Factory) 40-1 Ungnam-dong, Changwon-city, Kyungnam, Korea




|        |                                                     |        |                                                               |
|--------|-----------------------------------------------------|--------|---------------------------------------------------------------|
| 00-151 | ENGINE MOUNTING<br>엔진 마운팅                           | 12-268 | BATTERY MOUNTING<br>배터리 마운팅                                   |
| 00-526 | ENGINE GASKET KIT<br>엔진 가스켓 키트                      | 13-162 | STROBE LIGHT MOUNTING<br>경광등 마운팅                              |
| 00-527 | ENGINE SUB-ASSEMBLY<br>엔진 서브 어셈블리                   | 13-163 | COMBINATION LAMP INSTALLATION<br>컴비네이션 램프 조립그룹                |
| 00-528 | ROCKER COVER & CYLINDER HEAD<br>로커 커버& 실린더 헤드       | 13-182 | STROBE LIGHT<br>경광등                                           |
| 00-529 | CRANKSHAFT<br>크랭크 축                                 | 13-183 | STROBE LIGHT MOUNTING<br>경광등 마운팅                              |
| 00-530 | CAMSHAFT<br>캠 축                                     | 13-228 | BACK-UP ALARM INSTALLATION<br>백업 알람 조립그룹                      |
| 00-531 | OIL COOLER & FILTER<br>오일 쿨러& 필터                    | 13-292 | KEY SWITCH INSTALLATION<br>키스위치 조립그룹                          |
| 01-249 | COOLING SYSTEM<br>쿨링 시스템                            | 13-298 | REAR WORK LIGHT INSTALLATION<br>후방등 조립그룹                      |
| 01-266 | OIL PAN<br>오일 팬                                     | 13-300 | HEAD LAMP INSTALLATION<br>헤드램프 조립그룹                           |
| 01-268 | FAN & DRIVE<br>팬 & 드라이브                             | 13-302 | SIGNAL LIGHT INSTALLATION<br>시그널 라이트 조립그룹                     |
| 01-272 | HYDRAULIC OIL COOLER MOUNTING<br>유압 오일 쿨러 마운팅       | 13-304 | COMBINATION LAMP INSTALLATION<br>컴비네이션 램프 조립그룹                |
| 02-196 | ACCELERATOR LINKAGE<br>악셀레이터 링크에이지                  | 13-305 | REAR WORK LIGHT INSTALLATION<br>후방등 조립그룹                      |
| 02-471 | AIR CLEANER ASSEMBLY<br>에어 크리너 어셈블리                 | 13-317 | HORN SWITCH INSTALLATION<br>혼 스위치 조립그룹                        |
| 02-478 | INDICATOR LIGHT INSTALLATION<br>지시등 조립그룹            | 14-151 | REAR DETECTOR INSTALLATION<br>리어 디텍터 조립그룹                     |
| 02-489 | FUEL CAP WITH KEY<br>연료캡 - 키포함                      | 14-453 | ELECTRICAL WIRING<br>전기장치 와이어링                                |
| 03-379 | FUEL SYSTEM<br>연료 시스템                               | 14-497 | ELECTRICAL COMPONENTS<br>전기장치 구성품                             |
| 03-387 | EXHAUST SYSTEM<br>배기 시스템                            | 15-016 | PUSH BUTTON WIRING<br>푸시버튼 와이어링                               |
| 03-389 | FUEL INJECTION SYSTEM<br>연료 분사 시스템                  | 20-144 | DRIVE AXLE OIL COOLER LINES<br>드라이브 액슬 쿨러 라인                  |
| 03-390 | EXHAUST SYSTEM<br>배기 시스템                            | 20-193 | DRIVE AXLE HOUSING<br>드라이브 액슬 하우징                             |
| 03-549 | SWING DOWN LPG TANK MTG<br>스윙 다운 LPG 탱크 마운팅         | 20-194 | DRIVE AXLE HUB ASSEMBLY<br>드라이브 액슬 허브 어셈블리                    |
| 03-578 | INTAKE SYSTEM<br>흡기 시스템 (듀얼)                        | 20-195 | DRIVE AXLE MOUNTING<br>드라이브 액슬 마운팅                            |
| 03-581 | SWITCH INSTALLATION<br>스위치 조립그룹                     | 20-196 | DIFFERENTIAL & CARRIER ASSY<br>디퍼렌셜& 캐리어                      |
| 05-054 | TORQUE CONVERTER HOUSING<br>토크 컨버터 하우징              | 20-273 | DRIVE AXLE OIL COOLER MOUNTING<br>드라이브액슬 오일쿨러 마운팅             |
| 06-089 | TRANSMISSION INDUCTIVE PARTS<br>트랜스미션 인덕티브 부품       | 21-015 | PROP SHAFT<br>프로펠러 축                                          |
| 06-098 | TRANSMISSION OUTPUT SHAFT<br>트랜스미션 출력 샤프트           | 22-014 | STEER WHEEL & TIRE MOUNTING<br>스티어링휠& 타이어 마운팅                 |
| 06-100 | TRANSMISSION CLUTCH PACKS (FWD)<br>트랜스미션 클러치 팩 (전진) | 22-016 | DUAL DRIVE WHEEL & TIRE MOUNTING<br>듀얼 드라이브 휠& 타이어 마운팅        |
| 06-129 | TRANSMISSION CLUTCH PACKS (REV)<br>트랜스미션 클러치 팩 (후진) | 22-024 | DRIVE WHEEL & TIRE (SOLID TYPE)<br>드라이브 휠& 타이어 (솔리드 타입)       |
| 06-130 | TRANSMISSION CLUTCH PACKS (1ST)<br>트랜스미션 클러치 팩 (1속) | 22-025 | STEER WHEEL & TIRE (SOLID TYPE)<br>스티어링 휠& 타이어 (솔리드 타입)       |
| 06-131 | TRANSMISSION CLUTCH PACKS (2ND)<br>트랜스미션 클러치 팩 (2속) | 22-041 | DRIVE WHEEL AND TIRE<br>드라이브 휠& 타이어                           |
| 06-132 | TRANSMISSION CLUTCH PACKS (3RD)<br>트랜스미션 클러치 팩 (3속) | 22-042 | STEER WHEEL & TIRE<br>스티어링 휠& 타이어                             |
| 06-142 | TRANSMISSION CASE<br>트랜스미션 케이스                      | 23-542 | BRAKE LINES<br>브레이크 라인                                        |
| 07-065 | TRANSMISSION MOUNTING<br>트랜스미션 마운팅                  | 23-543 | PARKING BRAKE SYSTEM<br>파킹 브레이크 시스템                           |
| 10-127 | TRANS COOLING LINES<br>트랜스미션 쿨링 라인                  | 23-544 | BRAKE & INCHING LINES<br>브레이크& 인칭라인                           |
| 11-059 | STARTER MOTOR MOUNTING<br>스타터 모터 마운팅                | 24-007 | BRAKE ENERGIZER ASSEMBLY<br>브레이크 에너지저어 어셈블리                   |
| 11-109 | STARTER MOTOR<br>스타터 모터                             | 25-133 | STEERING WHEEL & COLUMN & GEAR MOUNTING<br>스티어링 휠& 컬럼& 기어 마운팅 |
| 12-088 | ALTERNATOR<br>알터네이터                                 | 25-145 | STEERING UNIT<br>스티어링 유닛                                      |

|        |                                                                    |        |                                                   |
|--------|--------------------------------------------------------------------|--------|---------------------------------------------------|
| 25-291 | STEERING COLUMN SHAFT ASSEMBLY<br>스티어링 컬럼 샤프트 어셈블리                 | 32-163 | TILT CYLINDER<br>틸트 실린더                           |
| 25-374 | STEERING COLUMN ASSEMBLY<br>스티어링 컬럼 어셈블리                           | 32-167 | TILT AMOUNT GROUP<br>틸트 어마운트 그룹                   |
| 26-262 | STEER AXLE MOUNTING<br>스티어링 액슬 마운팅                                 | 33-130 | SELECTOR SOLENOID VALVE<br>셀렉터 솔레노이드 밸브           |
| 26-267 | STEER CYLINDER<br>스티어링 실린더                                         | 34-185 | CARRIAGE ASSEMBLY (HOOK TYPE)<br>캐리지 어셈블리 (후크 타입) |
| 26-268 | STEER AXLE ASSEMBLY<br>스티어링 액슬 어셈블리                                | 37-023 | REAR VIEW MIRROR MOUNTING<br>후방미러 마운팅             |
| 26-319 | HYDRAULIC STEERING SYSTEM<br>유압 스티어링 시스템                           | 37-060 | REAR WINDOW ASSEMBLY<br>리어 윈도우 어셈블리               |
| 27-000 | PRIORITY VALVE ASSEMBLY<br>우선 밸브 어셈블리                              | 37-068 | ENCLOSED CAB<br>캐빈 (박스형)                          |
| 27-001 | FLOW CONTROL VALVE<br>플로우 컨트롤 밸브                                   | 37-071 | ENCLOSED CAB<br>캐빈 (박스형)                          |
| 29-049 | HYDRAULIC PUMP MOUNTING<br>유압 펌프 마운팅                               | 37-074 | ELECTRICAL COMPONENTS (CAB)<br>전기장치 구성품 (캐빈)      |
| 29-228 | HYDRAULIC BRAKE PUMP ASSY<br>유압 브레이크 펌프 어셈블리                       | 37-075 | CAB MOUNTING<br>캐빈 마운팅                            |
| 29-283 | HYDRAULIC PUMP ASSEMBLY<br>유압 펌프 어셈블리                              | 37-081 | OVERHEAD GUARD MOUNTING<br>오버헤드가드 마운팅             |
| 29-321 | HYDRAULIC TANK & COMPONENTS MOUNTING<br>유압탱크& 구성품 마운팅              | 37-084 | FLOOR PLATE MOUNTING<br>플로어 플레이트 마운팅              |
| 30-339 | HYDRAULIC VALVE MOUNTING<br>유압 밸브 마운팅                              | 37-085 | SHEET METAL<br>시트 메탈                              |
| 30-363 | HYDRAULIC CONTROL VALVE-2 SPOOL<br>유압 컨트롤 밸브 - 2 스톱                | 37-087 | SPONGE MOUNTING<br>스폰지 마운팅                        |
| 30-364 | HYDRAULIC CONTROL VALVE-3 SPOOL<br>유압 컨트롤 밸브 - 3 스톱                | 37-092 | REAR ACCESSORY MOUNTING<br>리어 액세서리 마운팅            |
| 30-365 | HYDRAULIC CONTROL VALVE-4 SPOOL<br>유압 컨트롤 밸브 - 4 스톱                | 37-124 | SEAT ARMREST ASSEMBLY<br>시트 암레스트 어셈블리             |
| 30-397 | MAIN CONTROL VALVE 2-SPOOL<br>메인 컨트롤 밸브 - 2 스톱                     | 37-139 | ENCLOSED CAB<br>캐빈 (박스형)                          |
| 30-398 | HYDRAULIC VALVE MOUNTING (3SPOOL)<br>유압밸브 마운팅 (3스톱)                | 37-140 | ENCLOSED CAB<br>캐빈 (박스형)                          |
| 30-399 | MAIN CONTROL VALVE 4-SPOOL<br>메인 컨트롤 밸브 - 4 스톱                     | 38-268 | BATTERY & TOOL COVER MOUNTING<br>배터리& 툴커버 마운팅     |
| 30-528 | MAIN CONTROL VALVE 5-SPOOL<br>메인 컨트롤 밸브 5스톱                        | 38-269 | COUNTERWEIGHT MOUNTING<br>카운터웨이트 조립그룹             |
| 30-529 | HYDRAULIC CONTROL VALVE-5 SPOOL<br>유압 컨트롤 밸브 - 5스톱                 | 38-270 | FRAME TANK BOTTOM PLUG<br>프레임 탱크 하단 플러그           |
| 30-579 | MAIN CONTROL VALVE 2-SPOOL(PUSH BUTTON)<br>메인 컨트롤 밸브 2-스톱 (푸시버튼)   | 39-661 | SEAT ASSEMBLY<br>시트 어셈블리                          |
| 30-580 | MAIN CONTROL VALVE 3-SPOOL(PUSH BUTTON)<br>메인 컨트롤 밸브 - 3 스톱 (푸시버튼) | 39-797 | SPONGE MOUNTING<br>스폰지 마운팅                        |
| 30-581 | MAIN CONTROL VALVE 4-SPOOL(PUSH BUTTON)<br>메인 컨트롤 밸브 - 4 스톱 (푸시버튼) | 39-829 | SEAT MOUNTING<br>시트 마운팅                           |
| 30-582 | MAIN CONTROL VALVE 3-SPOOL(PUSH BUTTON)<br>메인 컨트롤 밸브 - 3 스톱 (푸시버튼) | 39-834 | SEAT ASSEMBLY (SUSPENSION)<br>시트 어셈블리             |
| 30-583 | MAIN CONTROL VALVE 4-SPOOL(PUSH BUTTON)<br>메인 컨트롤 밸브 - 4 스톱 (푸시버튼) | 39-847 | HOOD MOUNTING<br>후드 마운팅                           |
| 31-082 | HYDRAULIC LIFT & TILT LINES<br>유압 리프트& 틸트 라인                       | 39-955 | HOOD MOUNTING<br>후드 마운팅                           |
| 31-100 | HYDRAULIC RETURN LINES<br>유압 리턴 라인                                 | 39-956 | ELECTRICAL COMPONENTS (CAB)<br>전기장치 구성품 (캐빈)      |
| 31-181 | TILT LIMIT WITH OVERRIDE<br>틸트 제어해제                                | 39-957 | ENCLOSED CAB<br>캐빈 (박스형)                          |
| 31-242 | AUX. VALVE PLUMBING<br>보조 밸브 기관                                    | 39-958 | CAB MOUNTING<br>캐빈 마운팅                            |
| 31-243 | AUX. VALVE PLUMBING<br>보조 밸브 기관                                    | 39-961 | AUDIO INSTALLATION<br>오디오 조립그룹                    |
| 31-315 | HYDRAULIC LIFT & TILT LINES<br>유압 리프트& 틸트 라인                       | 40-265 | DECALS<br>데칼                                      |
| 31-318 | HYDRAULIC SUPPLY LINES<br>유압 공급 라인                                 | 40-282 | MODEL & SPECIFICATION DECALS<br>모델& 사양 데칼         |
| 31-321 | HYDRAULIC RETURN LINES<br>유압 리턴 라인                                 | 41-019 | HEATER INSTALLATION<br>히터 조립그룹                    |
| 32-146 | TILT CYLINDER MOUNTING<br>틸트 실린더 마운팅                               | 41-023 | HEATER INSTALLATION<br>히터 조립그룹                    |
| 32-154 | HYDRAULIC ACCUMULATOR INSTALLATION<br>유압 어큐뮬레이터 조립그룹               | 41-029 | AIR CONDITIONER INSTALLATION<br>에어컨디셔너 조립그룹       |

|        |                                                                    |
|--------|--------------------------------------------------------------------|
| 41-089 | AIR CONDITIONER CONDENSER MOUNTING<br>에어컨 콘덴서 마운팅                  |
| 41-116 | AUDIO INSTALLATION<br>오디오 조립그룹                                     |
| 47-000 | SEAT WING KIT<br>시트윙 키트                                            |
| 49-001 | W/HARNESS ISO VALVE<br>와이어링 하네스 ISO 밸브                             |
| 50-118 | 4 HOSE ADAPT-2 STAGE UPRIGHT<br>4호스 어댑터 - 2단 마스트                   |
| 50-146 | AUXILIARY VALVE LINES<br>보조 밸브 라인                                  |
| 50-186 | AUX. VALVE PLUMBING<br>보조 밸브 기관                                    |
| 50-196 | ATTACHMENT HOSE ADAPTATION (UPRIGHT)<br>어태치 호스 적용 (마스트)            |
| 50-262 | ATTACHMENT HOSE ADAPTATION (UPRIGHT)<br>어태치 호스 적용 (마스트)            |
| 50-271 | ATTACHMENT HOSE ADAPTATION (UPRIGHT)<br>어태치 호스 적용 (마스트)            |
| 50-276 | ATTACHMENT HOSE SETTINGS (UPRIGHT)<br>어태치 호스 세팅 (마스트)              |
| 50-280 | QUICK DISCONNECT FOR DEVICE HOSE ADAPTATION<br>퀵 차단 (호스 어댑션 장치용)   |
| 50-281 | QUICK DISCONNECT FOR DEVICE HOSE ADAPTATION<br>퀵 차단 (호스 어댑션 장치용)   |
| 50-294 | HOSE ADAPTATION<br>호스 어댑션                                          |
| 50-791 | ATTACHMENT HOSE ADAPTATION (CARRIAGE)<br>어태치 호스 적용 (캐리지)           |
| 50-807 | SOLENOID VALVE FOR DEVICE HOSE ADAPTATION<br>솔레노이드 밸브 (디바이스 호스 적용) |
| 53-016 | SIDE SHIFT CARRIAGE (HOOK TYPE)<br>사이드 쉬프트 캐리지 (훅 타입)              |
| 53-018 | SIDESHIFT CYLINDER<br>사이드 쉬프트 실린더                                  |
| 53-152 | SIDESHIFT CYLINDER<br>사이드 쉬프트 실린더                                  |
| 53-180 | INTEGRAL SIDE SHIFT CARRIAGE<br>인테그랄 사이드 쉬프트 캐리지                   |
| 66-013 | LIFT CYLINDER PIPING<br>리프트 실린더 파이핑                                |
| 66-022 | UPRIGHT MOUNTING<br>마스트 마운팅                                        |
| 66-058 | FORK<br>포크                                                         |
| 66-099 | LIFT CYLINDER<br>리프트 실린더                                           |
| 66-173 | PRIMARY CYLINDER<br>프라이머리 실린더                                      |
| 66-175 | SECONDARY CYLINDER ASSEMBLY<br>2차 실린더 어셈블리                         |
| 66-237 | STANDARD UPRIGHT<br>표준 마스트                                         |
| 66-238 | STANDARD UPRIGHT<br>표준 마스트                                         |
| 66-239 | TRIPLE STAGE UPRIGHT<br>3단 마스트                                     |
| 66-999 | EXTENTION FORK<br>익스텐션 포크                                          |
| 75-004 | SEAT OPERATED BRAKE<br>시트 조작 브레이크                                  |
| 75-012 | SEAT OPERATED BRAKE SWITCH<br>시트 조작 브레이크 스위치                       |

 ■ INDICATES AN ASSEMBLY  
HAVING SERVICEABLE  
COMPONENTS ILLUSTRATED  
ELSEWHERE

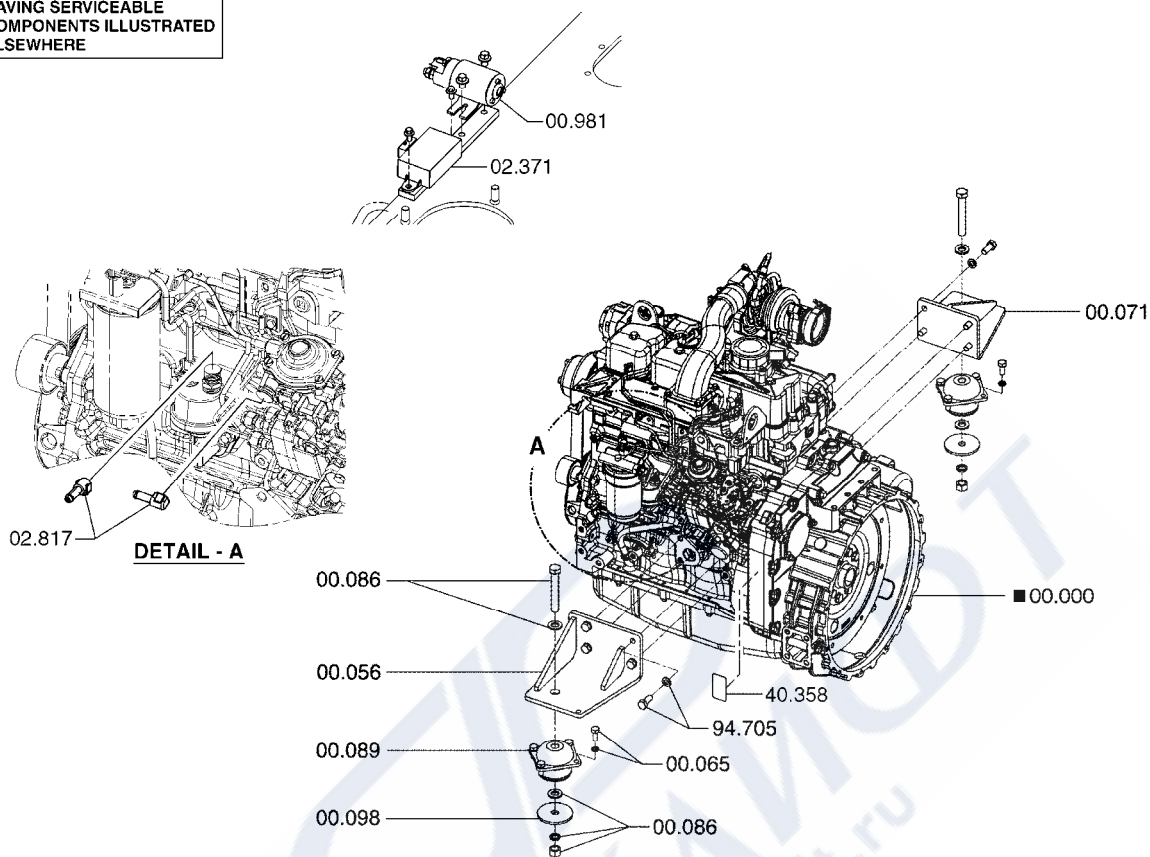


**ENGINE MOUNTING**

**00-151**

|        |                                            |
|--------|--------------------------------------------|
| 00.000 | PRODUCTION ENGINE ASSEMBLY<br>엔진           |
| 00.056 | MOUNT, ENGINE RH<br>마운트                    |
| 00.065 | FASTENER, ENGINE MOUNT<br>패스너              |
| 00.071 | MOUNT, ENGINE LH<br>마운트                    |
| 00.086 | FASTENER, RH ENGINE MOUNT<br>패스너           |
| 00.089 | DAMPENER, LH ENGINE MOUNT VIBRATION<br>댐프너 |
| 00.098 | WASHER, ENGINE MOUNTING TO FRAME RH<br>와셔  |
| 00.981 | RELAY, ENGINE PRE-HEATER<br>릴레이            |
| 02.371 | CONTROL UNIT, ELECTRONIC (ECU)<br>컨트롤유닛    |

 
|        |                                          |
|--------|------------------------------------------|
| 02.817 | FITTING, FUEL PUMP INLET PORT<br>피팅      |
| 40.358 | DECAL, ENGINE FLEXIBILITY SCHEME<br>데칼   |
| 94.705 | FASTENER, ENGINE MOUNTING BRACKET<br>패스너 |



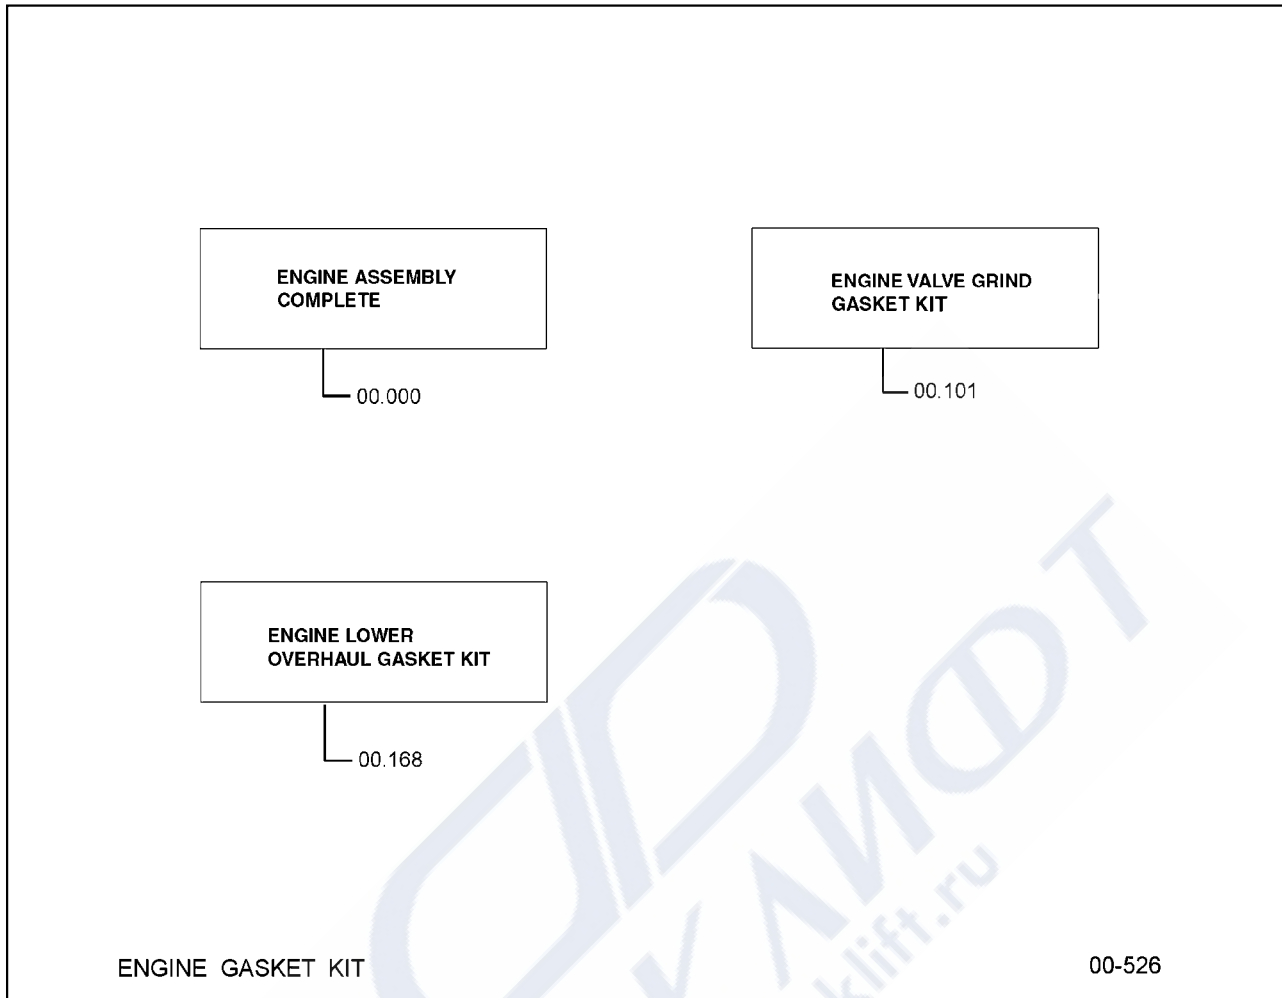

|        |                                             |
|--------|---------------------------------------------|
| 00.000 | PRODUCTION ENGINE ASSEMBLY<br>엔진            |
| 00.101 | VALVE GRIND GASKET KIT (TOP SET)<br>밸브가스켓키트 |
| 00.168 | ENGINE LOWER OVERHAUL GASKET SET<br>엔진가스켓세트 |




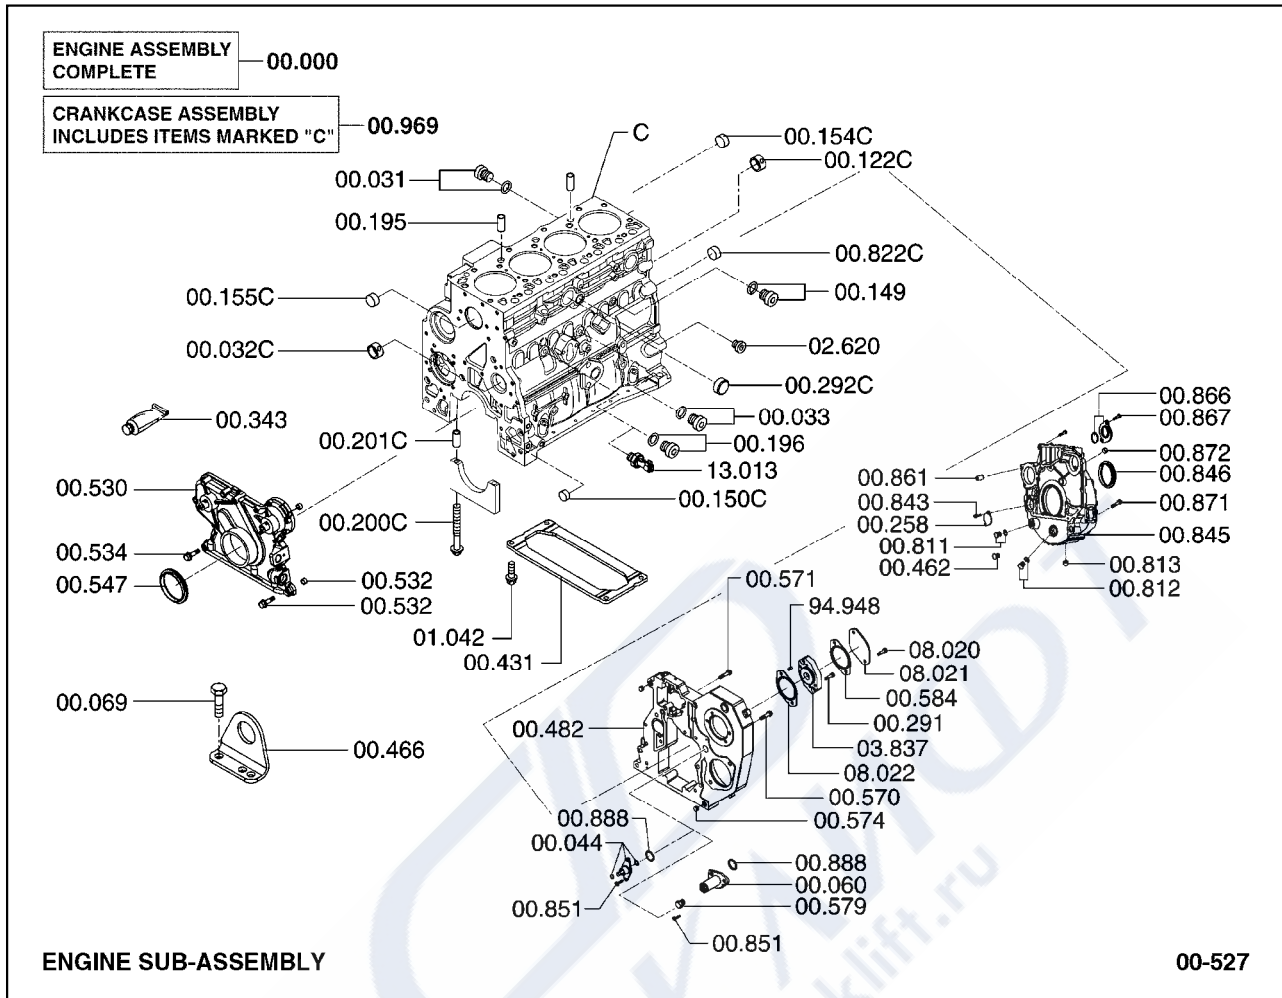 

|        |                                                     |        |                                                |
|--------|-----------------------------------------------------|--------|------------------------------------------------|
| 00.000 | PRODUCTION ENGINE ASSEMBLY<br>엔진                    | 00.201 | DOWEL, CRANKSHAFT BEARING CAP<br>다웰            |
| 00.031 | PLUG, CRANKCASE<br>플러그                              | 00.258 | PLATE, FLYWHEEL COVER<br>플레이트                  |
| 00.032 | PLUG, CRANKCASE<br>플러그                              | 00.291 | FASTENER, ACCESSORY DRIVE SHAFT HOUSING<br>패스너 |
| 00.033 | PLUG, CRANKCASE<br>플러그                              | 00.292 | PLUG, CRANKCASE<br>플러그                         |
| 00.044 | PLATE, ENGINE REAR LOWER VIBRATION DAMPENER<br>플레이트 | 00.343 | GASKET, LIQUID<br>가스켓                          |
| 00.060 | PLATE, ENGINE REAR UPPER VIBRATION DAMPENER<br>플레이트 | 00.431 | BRACKET, CRANKCASE BREATHER<br>브라켓             |
| 00.069 | FASTENER, ENGINE LIFTING BRACKET<br>패스너             | 00.462 | PLUG, FLYWHEEL DOWEL HOLE EXPANSION<br>플러그     |
| 00.122 | PLUG, CRANKCASE<br>플러그                              | 00.466 | BRACKET, ENGINE LIFTING<br>브라켓                 |
| 00.149 | PLUG - EXPANSION, CRANKCASE SIDE<br>플러그             | 00.482 | PLATE, GEAR COVER BACKING<br>플레이트              |
| 00.150 | PLUG - EXPANSION, CRANKCASE CORE<br>플러그             | 00.530 | COVER, ENGINE FRONT GEAR<br>커버                 |
| 00.154 | PLUG - EXPANSION, CRANKCASE END<br>플러그              | 00.532 | FASTENER, ENGINE FRONT GEAR COVER<br>패스너       |
| 00.155 | PLUG - EXPANSION, CRANKCASE END<br>플러그              | 00.534 | FASTENER, ENGINE FRONT GEAR COVER<br>패스너       |
| 00.195 | PLUG-EXPANSION, ROCKER OIL FEED HOLE<br>플러그         | 00.547 | SEAL, ENGINE FRONT GEAR COVER<br>씰             |
| 00.196 | PLUG-EXPANSION, CRANKCASE SIDE<br>플러그               | 00.570 | FASTENER, BACKING PLATE<br>패스너                 |
| 00.200 | FASTENER, CRANKSHAFT BEARING NO. 1 CAP<br>패스너       | 00.571 | FASTENER, BACKING PLATE<br>패스너                 |

---


|        |                                                       |
|--------|-------------------------------------------------------|
| 00.574 | FASTENER, BACKING PLATE<br>패스너                        |
| 00.579 | PLUG, ENGINE FRONT GEAR COVER<br>플러그                  |
| 00.584 | GASKET, ACCESSORY DRIVE SHAFT HOUSING<br>가스켓          |
| 00.811 | PLUG, FLYWHEEL HOUSING<br>플러그                         |
| 00.812 | PLUG, FLYWHEEL HOUSING<br>플러그                         |
| 00.813 | PLUG, FLYWHEEL HOUSING DRAIN<br>플러그                   |
| 00.822 | PLUG, CRANKCASE<br>플러그                                |
| 00.843 | FASTENER, FLYWHEEL HOUSING DUST SHIELD<br>패스너         |
| 00.845 | HOUSING, FLYWHEEL<br>하우징                              |
| 00.846 | SEAL, FLYWHEEL HOUSING<br>씰                           |
| 00.851 | FASTENER, ENGINE TIMING POINTER<br>패스너                |
| 00.861 | FASTENER, FLYWHEEL HOUSING TO CRANKCASE<br>패스너        |
| 00.866 | COVER, FLYWHEEL HOUSING TIMING HOLE<br>커버             |
| 00.867 | FASTENER, FLYWHEEL HOUSING TIMING HOLE COVER<br>패스너   |
| 00.871 | FASTENER, FLYWHEEL HOUSING<br>패스너                     |
| 00.872 | FASTENER, FLYWHEEL HOUSING<br>패스너                     |
| 00.888 | SEAL, ENGINE FRONT GEAR COVER PLUG<br>씰               |
| 00.969 | BLOCK ASSY, CYLINDER<br>블록                            |
| 01.042 | FASTENER, CRANKCASE VENT COVER<br>패스너                 |
| 02.620 | PLUG, WATER JACKET DRAIN<br>플러그                       |
| 03.837 | POWER VALVE<br>파워밸브                                   |
| 08.020 | FASTENER, POWER TAKE-OFF COVER<br>패스너                 |
| 08.021 | COVER, POWER TAKE-OFF<br>커버                           |
| 08.022 | GASKET, POWER TAKE-OFF<br>가스켓                         |
| 13.013 | CONTROL, ENGINE OIL PRESSURE INDICATOR<br>컨트롤         |
| 94.948 | FASTENER, ENGINE ADJUSTMENT OF INJECTION TIMER<br>패스너 |

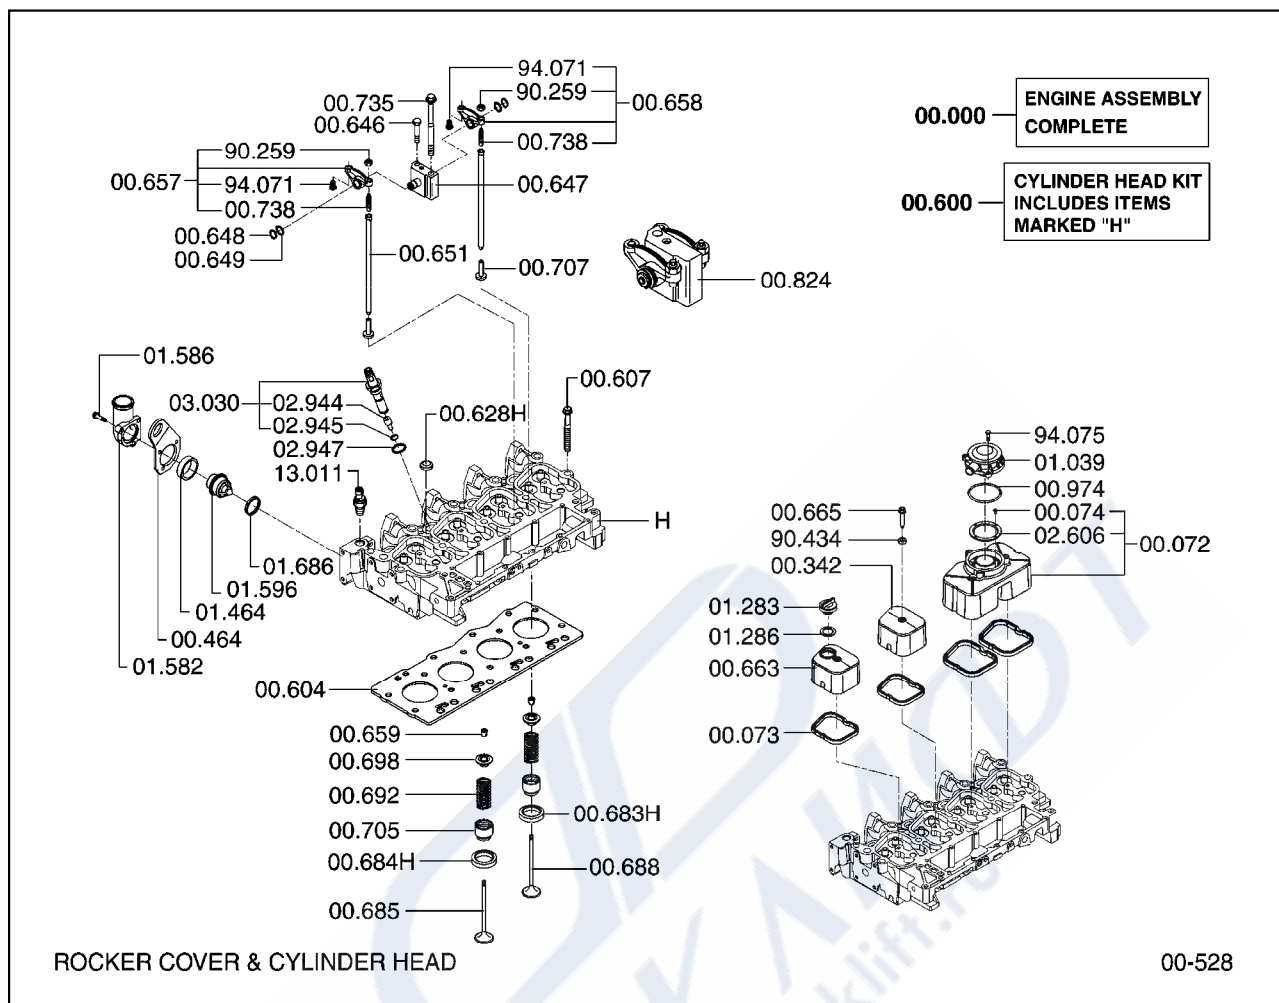 

|        |                                                  |        |                                              |
|--------|--------------------------------------------------|--------|----------------------------------------------|
| 00.000 | PRODUCTION ENGINE ASSEMBLY<br>엔진                 | 00.657 | ROCKER ARM ASSEMBLY, ENGINE VALVE<br>로커      |
| 00.072 | COVER, CRANKCASE HEAD END<br>커버                  | 00.658 | ROCKER ARM ASSEMBLY, ENGINE VALVE<br>로커      |
| 00.073 | GASKET, CRANKCASE HEAD END COVER<br>가스켓          | 00.659 | ADJUSTOR, ENGINE VALVE<br>어드저스터              |
| 00.074 | FASTENER, CRANKCASE HEAD END COVER<br>패스너        | 00.663 | COVER, ROCKER ARM<br>커버                      |
| 00.342 | BONNET ASSY<br>본넷                                | 00.665 | FASTENER, ROCKER ARM COVER<br>패스너            |
| 00.464 | BRACKET, ENGINE LIFTING<br>브라켓                   | 00.683 | SEAT, EXHAUST VALVE INSERT<br>시트             |
| 00.600 | HEAD ASSEMBLY, CRANKCASE<br>헤드                   | 00.684 | SEAT, INTAKE VALVE INSERT<br>시트              |
| 00.604 | GASKET, CRANKCASE HEAD<br>가스켓                    | 00.685 | VALVE, EXHAUST<br>밸브                         |
| 00.607 | FASTENER, CRANKCASE HEAD<br>패스너                  | 00.688 | VALVE, INTAKE<br>밸브                          |
| 00.628 | PLUG, CRANKCASE HEAD<br>플러그                      | 00.692 | SPRING, ENGINE EXHAUST VALVE<br>스프링          |
| 00.646 | FASTENER, ENGINE ROCKER ARM PIVOT SUPPORT<br>패스너 | 00.698 | LOCK, EXHAUST VALVE SPRING SEAT<br>로크        |
| 00.647 | SUPPORT, ENGINE ROCKER ARM PIVOT<br>서포트          | 00.705 | SEAT, EXHAUST VALVE SPRING<br>시트             |
| 00.648 | LOCATOR, ENGINE ROCKER ARM<br>로케이터               | 00.707 | LIFTER, ENGINE VALVE<br>리프터                  |
| 00.649 | WASHER, ENGINE ROCKER ARM PIVOT<br>와셔            | 00.735 | BOLT, ROCKER ARM LUBRICATING LINE<br>볼트      |
| 00.651 | PUSH ROD, ENGINE ROCKET ARM<br>푸시로드              | 00.738 | STUD, ENGINE ROCKER ARM PIVOT SUPPORT<br>스터드 |

---

|        |                                                     |
|--------|-----------------------------------------------------|
| 00.824 | ARM ASSY, ENGINE ROCKER<br>암                        |
| 00.974 | DIAPHRAGM, BONNET PLATE<br>다이어프램                    |
| 01.039 | COVER, CRANKCASE VENT<br>커버                         |
| 01.283 | CAP, CRANKCASE OIL FILLER<br>캡                      |
| 01.286 | GASKET, OIL FILLER CAP<br>가스켓                       |
| 01.464 | SEAT, ENGINE THERMOSTAT<br>시트                       |
| 01.582 | ELBOW, WATER OUTLET<br>엘보우                          |
| 01.586 | FASTENER, WATER OUTLET ELBOW - FANSIDE<br>패스너       |
| 01.596 | THERMOSTAT, ENGINE<br>서모스탯                          |
| 01.686 | GASKET, ENGINE THERMOSTAT<br>가스켓                    |
| 02.606 | PLATE, DIAPHRAGM RETAINER<br>플레이트                   |
| 02.944 | NOZZLE, FUEL INJECTOR<br>노즐                         |
| 02.945 | SPACER, INJECTOR NOZZLE<br>스페이서                     |
| 02.947 | SEAL, INJECTOR NOZZLE<br>씰                          |
| 03.030 | INJECTOR ASSEMBLY, FUEL<br>인젝터                      |
| 13.011 | CONTROL, ENGINE TEMPERATURE INDICATOR<br>컨트롤        |
| 90.259 | NUT, ENGINE ROCKER ARM PIVOT SUPPORT FASTENER<br>너트 |
| 90.434 | WASHER, ROCKER ARM COVER FASTENER<br>와셔             |
| 94.071 | FASTENER, ROCKER ARM PIVOT SUPPORT<br>패스너           |
| 94.075 | FASTENER, ROCKER ARM COVER HOLE COVER<br>패스너        |

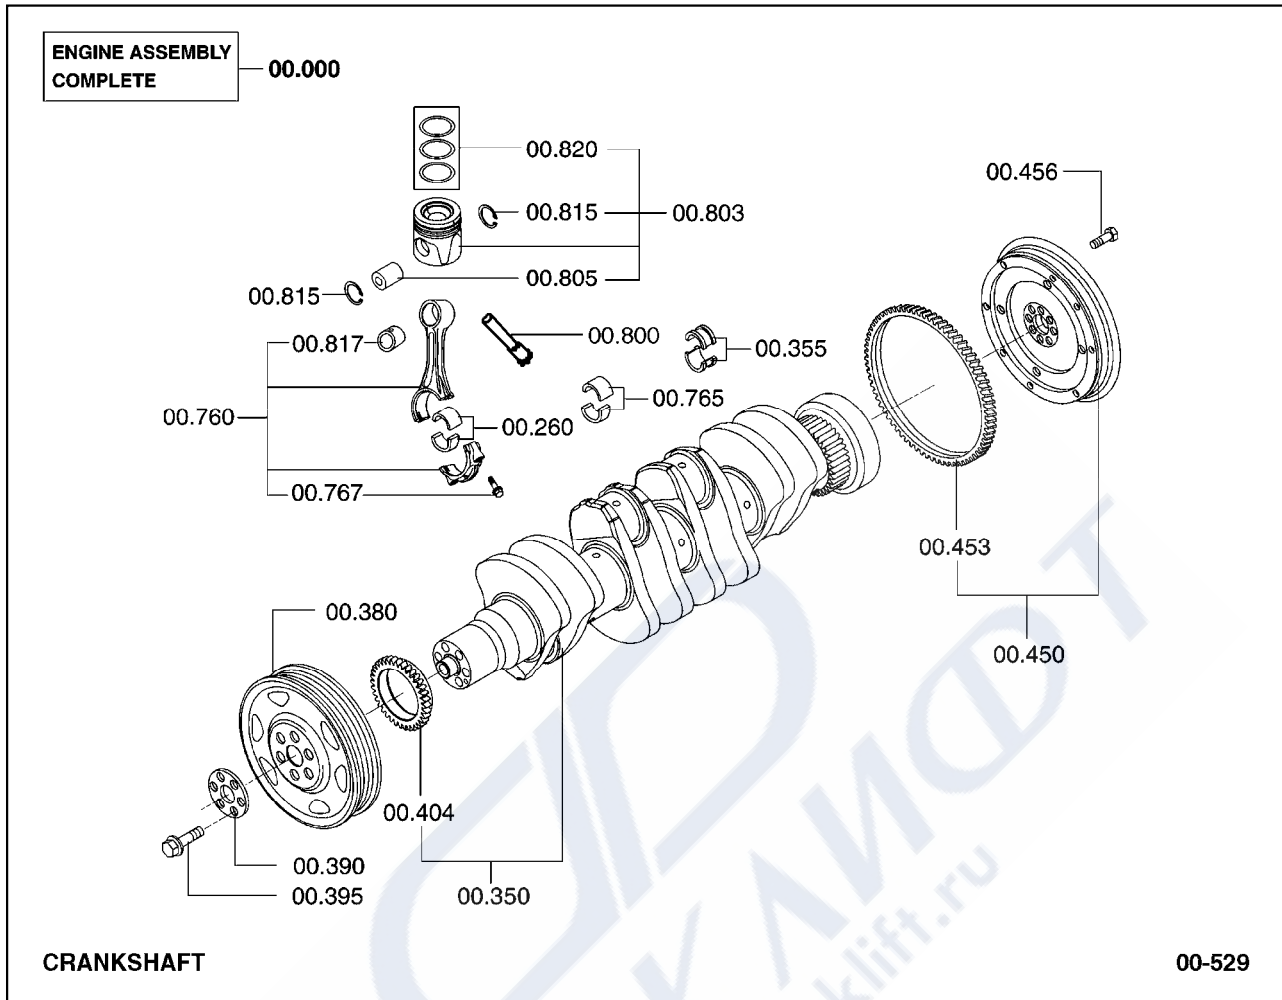 


|        |                                           |
|--------|-------------------------------------------|
| 00.000 | PRODUCTION ENGINE ASSEMBLY<br>엔진          |
| 00.260 | BEARING, CONNECTING ROD (CYL. #1)<br>베어링  |
| 00.350 | CRANKSHAFT<br>크랭크샤프트                      |
| 00.355 | BEARING, MAIN JOURNAL (ENGINE SET)<br>베어링 |
| 00.380 | PULLEY, CRANKSHAFT<br>폴리                  |
| 00.390 | WASHER, CRANKSHAFT PULLEY<br>와셔           |
| 00.395 | FASTENER, CRANKSHAFT PULLEY<br>패스너        |
| 00.404 | GEAR, CRANKSHAFT TIMING<br>기어             |
| 00.450 | FLYWHEEL<br>플라이휠                          |

---

|        |                                             |
|--------|---------------------------------------------|
| 00.453 | GEAR, FLYWHEEL RING<br>기어                   |
| 00.456 | FASTENER, CRANKSHAFT TO FLYWHEEL<br>패스너     |
| 00.760 | ROD ASSEMBLY, CONNECTING<br>로드              |
| 00.765 | BEARING, CONNECTING ROD<br>베어링              |
| 00.767 | FASTENER, CONNECTING ROD BEARING CAP<br>패스너 |
| 00.800 | PISTON AND PIN (ENGINE SET)<br>피스톤& 핀       |
| 00.803 | PISTON (ONE CYLINDER)<br>피스톤& 핀             |
| 00.805 | PIN, PISTON<br>핀                            |
| 00.815 | RETAINER, PISTON PIN<br>리테이너                |
| 00.817 | BUSHING, PISTON PIN (ENGINE SET)<br>부싱      |
| 00.820 | PISTON RING<br>피스톤링                         |



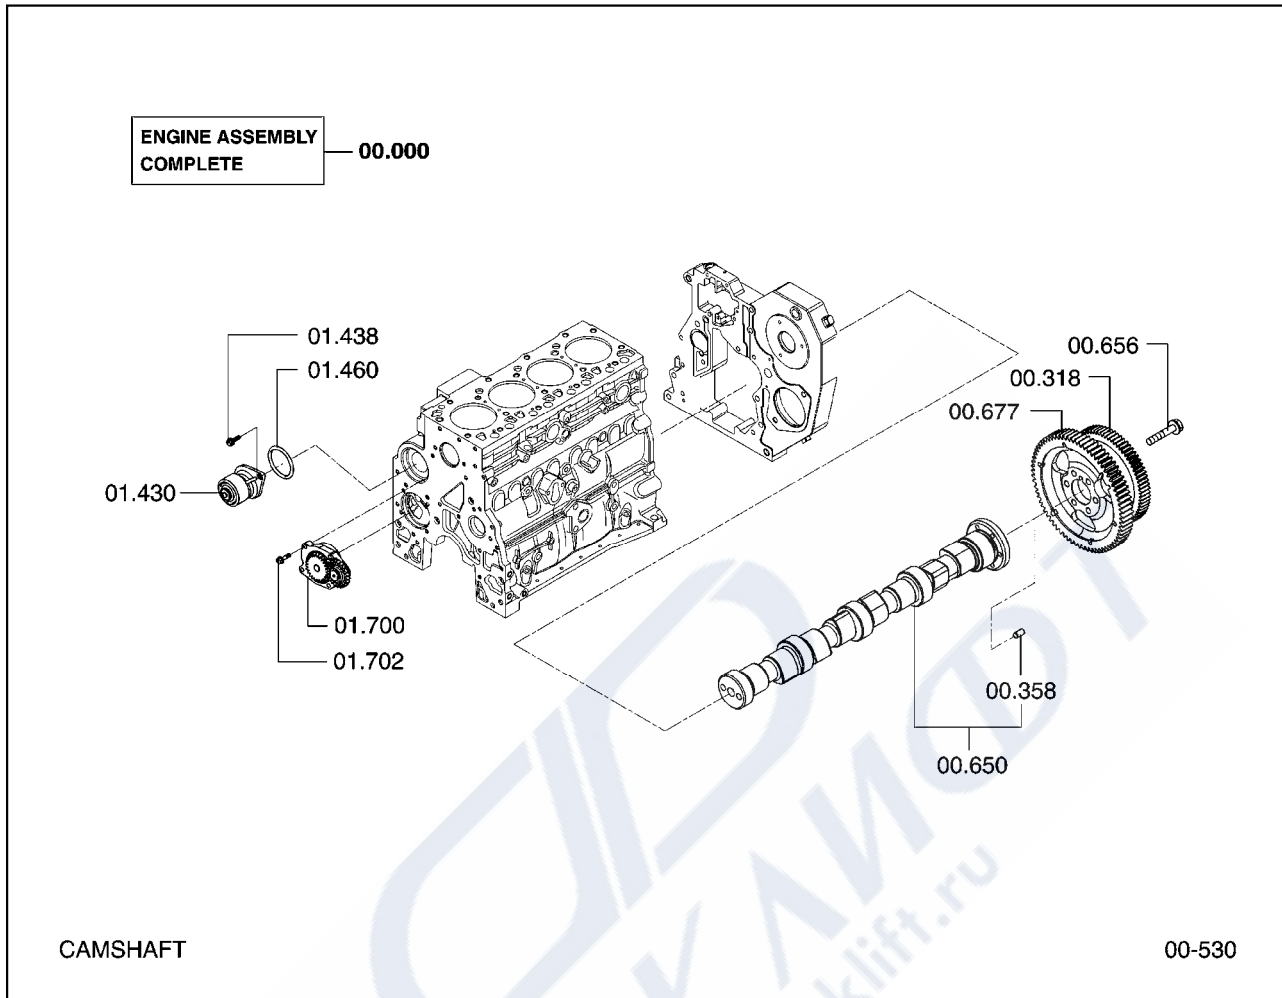 


|        |                                             |
|--------|---------------------------------------------|
| 00.000 | PRODUCTION ENGINE ASSEMBLY<br>엔진            |
| 00.318 | GEAR, ENGINE BALANCER DRIVE<br>기어           |
| 00.358 | PIN, CRANKSHAFT THRUST WASHER TO BLOCK<br>핀 |
| 00.650 | CAMSHAFT<br>캠샤프트                            |
| 00.656 | FASTENER, CAMSHAFT THRUST PLATE<br>패스너      |
| 00.677 | GEAR, CAMSHAFT TIMING<br>기어                 |
| 01.430 | PUMP ASSEMBLY, ENGINE WATER<br>펌프           |
| 01.438 | FASTENER, WATER PUMP<br>패스너                 |
| 01.460 | SEAL, WATER PUMP<br>씰                       |

---

|        |                           |
|--------|---------------------------|
| 01.700 | OIL PUMP ASSEMBLY<br>오일펌프 |
| 01.702 | FASTENER, OIL PUMP<br>패스너 |

 ФОРКЛИФТ  
www.forklift.ru




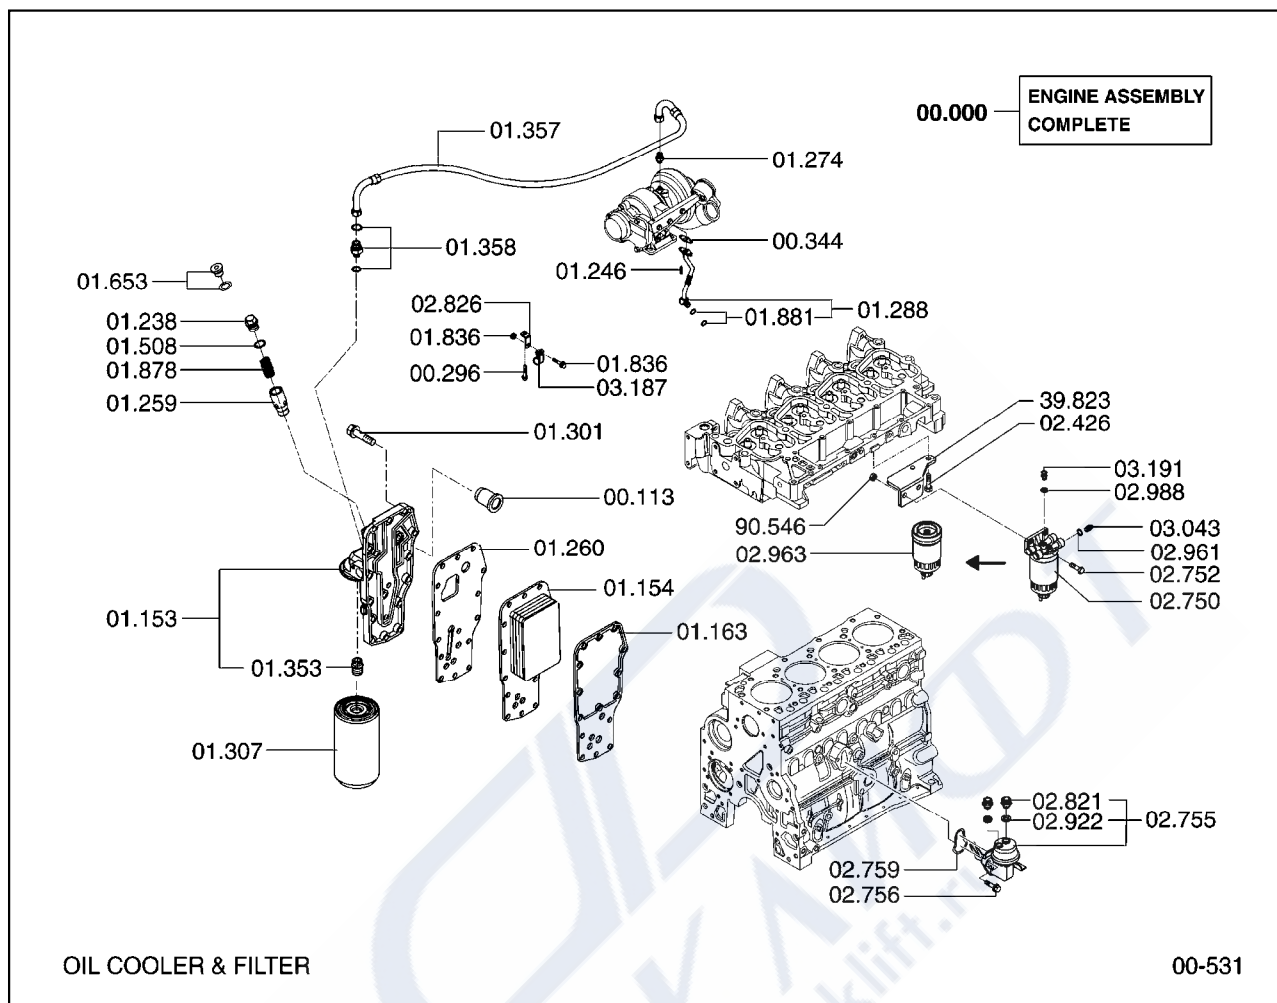

|        |                                                    |        |                                                    |
|--------|----------------------------------------------------|--------|----------------------------------------------------|
| 00.000 | PRODUCTION ENGINE ASSEMBLY<br>엔진                   | 01.353 | FITTING, BLOCK TO OIL FILTER<br>피팅                 |
| 00.113 | VALVE, ENGINE VENT FILTER UNIT<br>밸브               | 01.357 | LINE, ENGINE OIL FILTER OUTLET<br>라인               |
| 00.296 | FASTENER, ENGINE OIL FILTER HOLE PLATE<br>패스너      | 01.358 | FITTING, ENGINE OIL FILTER OUTLET LINE<br>피팅       |
| 00.344 | GASKET, ENGINE OIL LINE<br>가스켓                     | 01.508 | SEAL, OIL FILTER ADAPTER<br>씰                      |
| 01.153 | COVER, OIL COOLER<br>커버                            | 01.653 | PLUG, ENGINE OIL COOLING HEAT EXCH PORT<br>플러그     |
| 01.154 | PLATE, OIL COOLER<br>플레이트                          | 01.834 | ADAPTOR, ENGINE OIL PRESSURE SWITCH<br>어댑터         |
| 01.163 | GASKET, ENGINE OIL COOLER<br>가스켓                   | 01.836 | BOLT, ENGINE OIL BY-PASS FILTER OUTLET LINES<br>볼트 |
| 01.238 | CAP, OIL FILTER<br>캡                               | 01.878 | SPRING, ENGINE OIL FILTER BY-PASS<br>스프링           |
| 01.246 | FASTENER, ENGINE OIL LINE<br>패스너                   | 01.881 | SEAL, ENGINE OIL LINE<br>씰                         |
| 01.259 | VALVE, ENGINE OIL FILTER BY-PASS<br>밸브             | 02.426 | FASTENER, FUEL FILTER BRACKET<br>패스너               |
| 01.260 | GASKET, ENGINE OIL FILTER COVER<br>가스켓             | 02.750 | FILTER ASSEMBLY, FUEL<br>필터                        |
| 01.274 | FITTING, OIL FILLER TUBE<br>피팅                     | 02.752 | FASTENER, FUEL FILTER<br>패스너                       |
| 01.288 | LINE, ENGINE OIL FILTER OUTLET<br>라인               | 02.755 | PUMP, FUEL<br>펌프                                   |
| 01.301 | FASTENER, ENGINE OIL FILTER BRACKET<br>패스너         | 02.756 | FASTENER, FUEL PUMP ATTACHING<br>패스너               |
| 01.307 | CARTRIDGE & GASKET, ENGINE OIL FILTER<br>카트리지와 가스켓 | 02.759 | GASKET, FUEL PUMP ATTACHING<br>가스켓                 |

---

|        |                                          |
|--------|------------------------------------------|
| 02.821 | FITTING, FUEL PUMP OUTLET<br>피팅          |
| 02.826 | BRACKET, FUEL LINE CLIP<br>브라켓           |
| 02.922 | SEAL, FUEL FILTER BODY PLUG<br>씰         |
| 02.961 | SEAL, FUEL FILTER BODY PLUG<br>씰         |
| 02.963 | ELEMENT, FUEL FILTER<br>엘리먼트             |
| 02.988 | SEAL, FUEL RETURN LINE FITTING-BODY<br>씰 |
| 03.043 | FITTING, FUEL FILTER RETURN PORT<br>피팅   |
| 03.187 | CLIP, FUEL LINE<br>클립                    |
| 03.191 | FITTING, FUEL RETURN LINE<br>피팅          |
| 39.823 | BRACKET, FUEL FILTER<br>브라켓              |
| 90.546 | NUT, FUEL FILTER FASTENER<br>너트          |

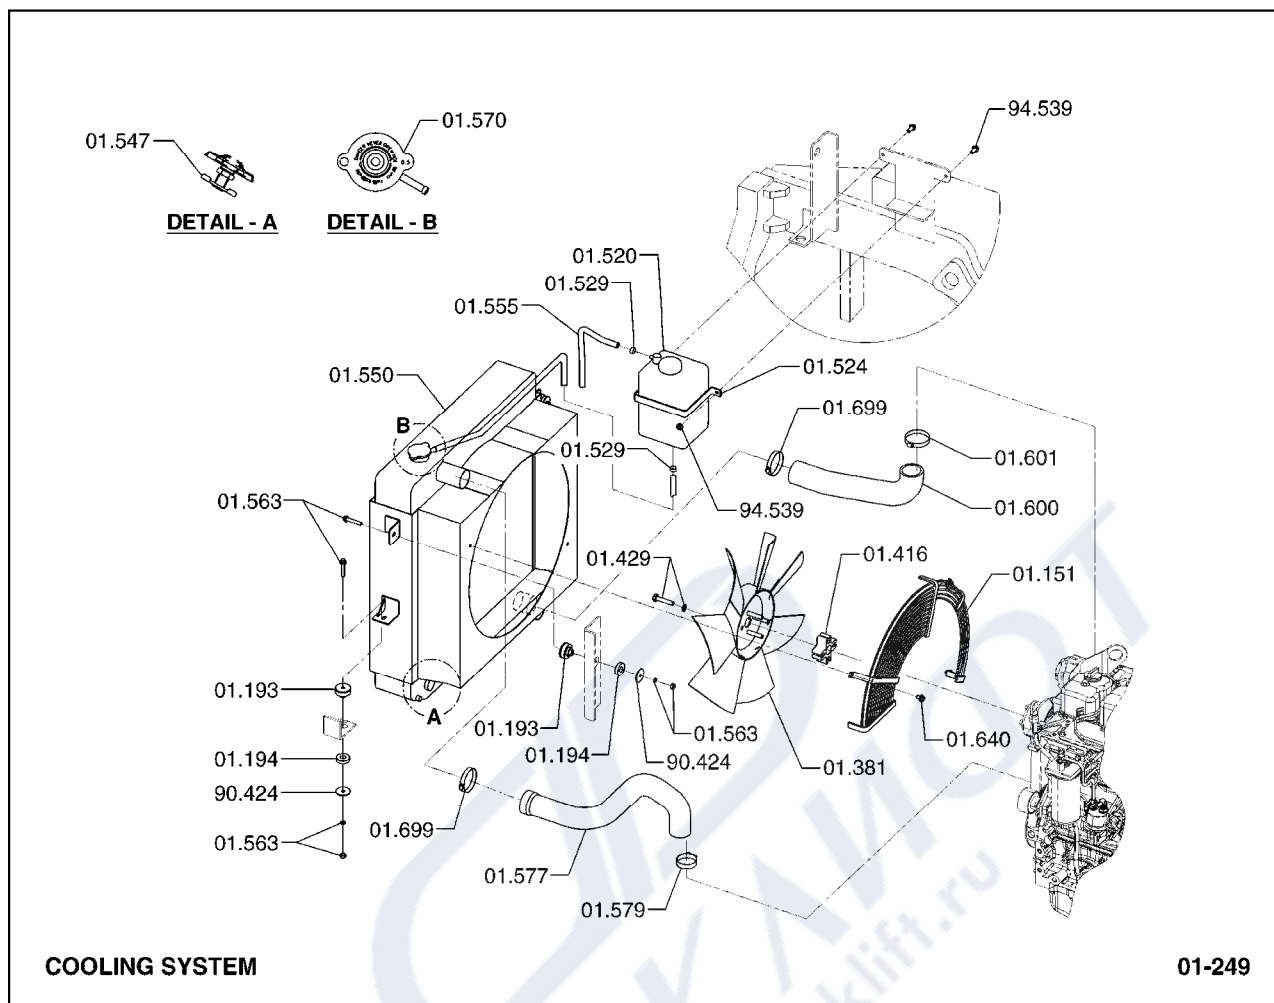 


|        |                                                     |
|--------|-----------------------------------------------------|
| 01.151 | GUARD, RADIATOR FAN<br>가드                           |
| 01.193 | ISOLATOR, RADIATOR MOUNTING<br>절연체                  |
| 01.194 | ISOLATOR, RADIATOR MOUNTING<br>절연체                  |
| 01.381 | BLADE, FAN<br>블레이드                                  |
| 01.416 | SPACER, FAN BLADE<br>스페이서                           |
| 01.429 | FASTENER, FAN CONTROL<br>패스너                        |
| 01.520 | COMPENSATION TANK, COOLING SYSTEM<br>보상기            |
| 01.524 | CLAMP, COOLING SYSTEM COMPENSATION TANK LINE<br>클램프 |
| 01.529 | CLAMP, RADIATOR OVERFLOW LINE<br>클램프                |

---

|        |                                            |
|--------|--------------------------------------------|
| 01.547 | DRAIN COCK, RADIATOR<br>드레인콕               |
| 01.550 | RADIATOR<br>라디에이터                          |
| 01.555 | LINE, RADIATOR OVERFLOW<br>라인              |
| 01.563 | FASTENER, RADIATOR MOUNTING BRACKET<br>패스너 |
| 01.570 | CAP, RADIATOR<br>캡                         |
| 01.577 | HOSE, RADIATOR UPPER<br>호스                 |
| 01.579 | CLAMP, RADIATOR UPPER HOSE<br>클램프          |
| 01.600 | HOSE, RADIATOR LOWER<br>호스                 |
| 01.601 | CLAMP, RADIATOR LOWER HOSE<br>클램프          |
| 01.640 | FASTENER, RADIATOR SHROUD EXTENTION<br>패스너 |
| 01.699 | CLAMP, RADIATOR HOSE FASTENER<br>클램프       |
| 90.424 | WASHER, RADIATOR MOUNTING FASTENER<br>와셔   |
| 94.539 | FASTENER, COMPENSATION TANK BRACKET<br>패스너 |

 
---

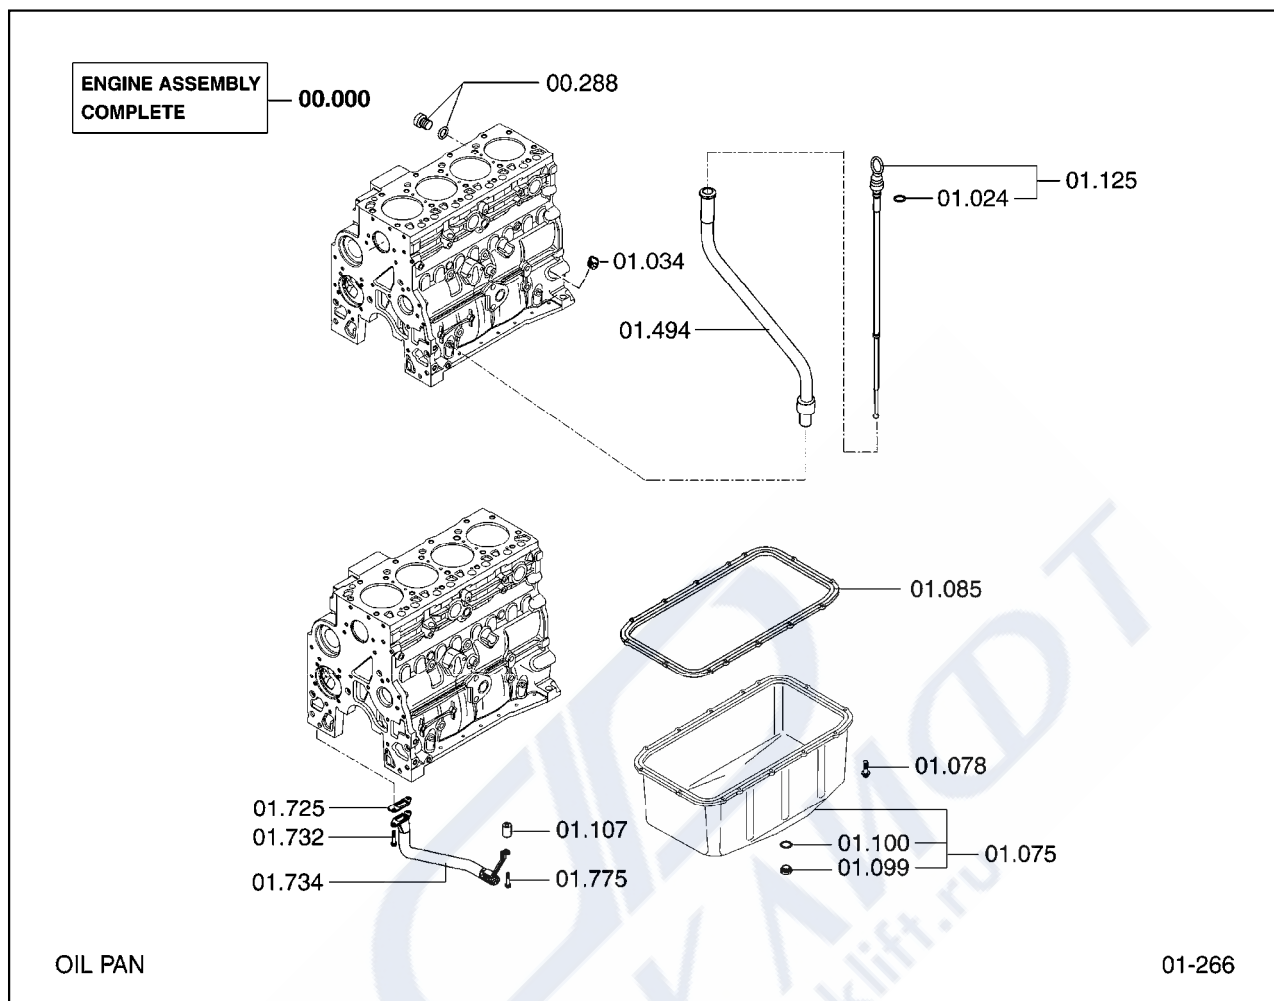

|        |                                               |
|--------|-----------------------------------------------|
| 00.000 | PRODUCTION ENGINE ASSEMBLY<br>엔진              |
| 00.288 | PLUG, CRANKCASE<br>플러그                        |
| 01.024 | SEAL, ENGINE OIL PUMP FASTENER<br>씰           |
| 01.034 | PLUG, CRANKCASE<br>플러그                        |
| 01.075 | PAN, CRANKCASE OIL<br>팬                       |
| 01.078 | FASTENER, CRANKCASE OIL PAN<br>패스너            |
| 01.085 | GASKET, CRANKCASE OIL PAN (ENGINE SET)<br>가스켓 |
| 01.099 | PLUG, CRANKCASE OIL PAN DRAIN<br>플러그          |
| 01.100 | GASKET, CRANKCASE OIL PAN DRAIN PLUG<br>가스켓   |

---

|        |                                         |
|--------|-----------------------------------------|
| 01.107 | SPACER, OIL PAN PIPE ASSY.<br>스페이서      |
| 01.125 | DIPSTICK, CRANKCASE OIL LEVEL<br>딤스틱    |
| 01.494 | TUBE, OIL LEVEL DIPSTICK ADAPTOR<br>튜브  |
| 01.725 | GASKET, OIL STRAINER FRAME<br>가스켓       |
| 01.732 | FASTENER, OIL PUMP STRAINER TUBE<br>패스너 |
| 01.734 | LINE, OIL PUMP STRAINER<br>라인           |
| 01.775 | BOLT, OIL PUMP STRAINER BRACKET<br>볼트   |

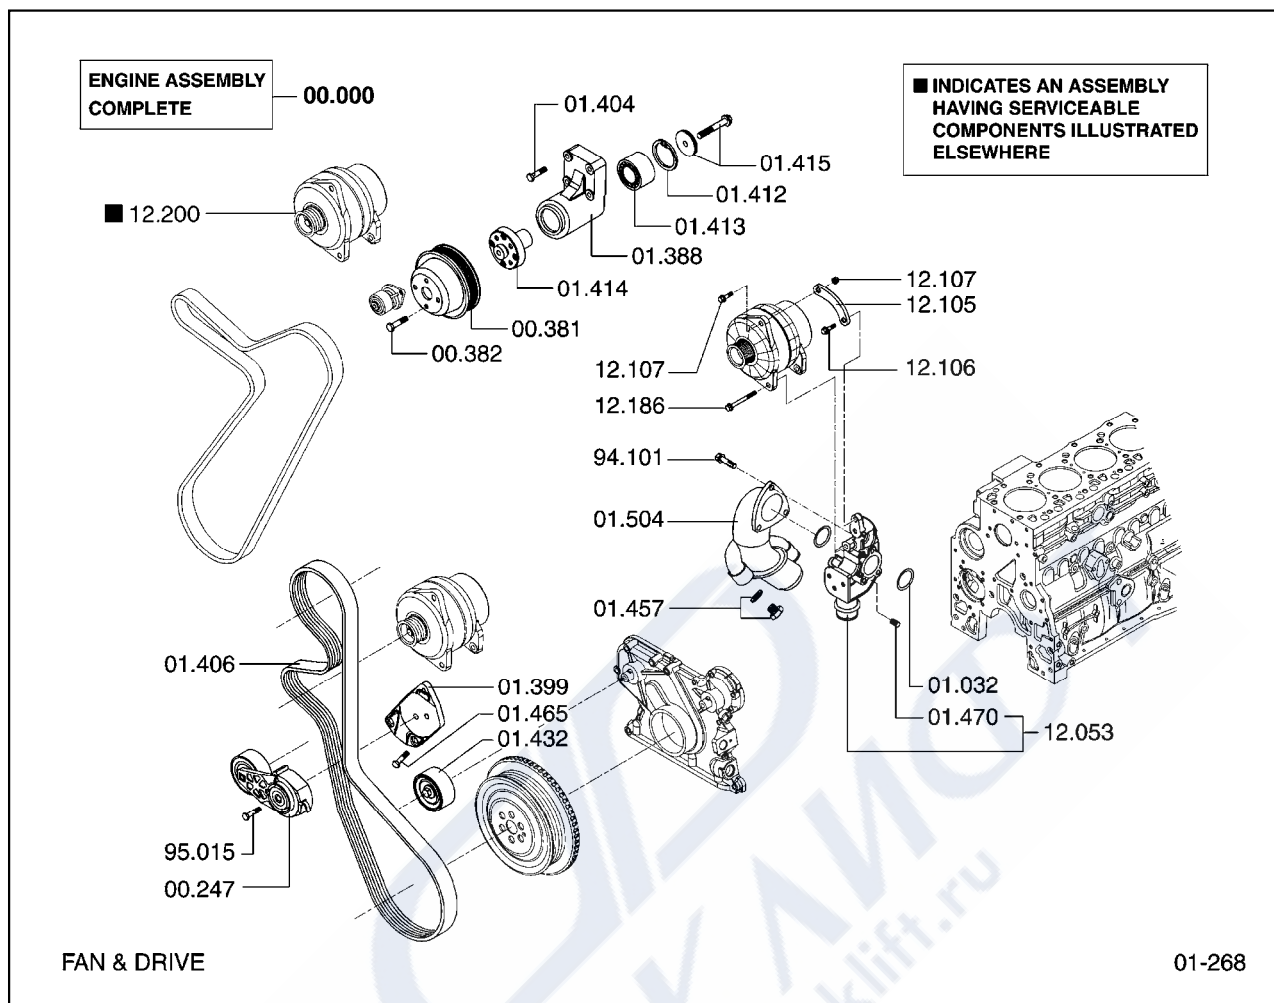 


|        |                                              |
|--------|----------------------------------------------|
| 00.000 | PRODUCTION ENGINE ASSEMBLY<br>엔진             |
| 00.247 | TENSIONER, CAMSHAFT TIMING BELT<br>텐서너       |
| 00.381 | PULLEY, CRANKSHAFT ACCESSORY DRIVE<br>폴리     |
| 00.382 | FASTENER, CRANKSHAFT ACCESS DR PULLEY<br>패스너 |
| 01.032 | SEAL, ENGINE WATER PUMP DISCHARGE ELBOW<br>셀 |
| 01.388 | HUB & PULLEY, FAN<br>허브& 폴리                  |
| 01.399 | BRACKET, FAN MOUNTING<br>브라켓                 |
| 01.404 | FASTENER, FAN BRACKET<br>패스너                 |
| 01.406 | BELT, FAN<br>벨트                              |

---

|        |                                                |
|--------|------------------------------------------------|
| 01.412 | RETAINER, IDLER SHEAVE BEARING<br>리테이너         |
| 01.413 | BEARING, BELT IDLER SHEAVE<br>베어링              |
| 01.414 | SPINDLE, BELT IDLER SHEAVE<br>스핀들              |
| 01.415 | FASTENER, BELT IDLER SHEAVE SPINDLE<br>패스너     |
| 01.432 | PULLEY, WATER PUMP<br>폴리                       |
| 01.457 | PLUG, WATER PUMP BODY<br>플러그                   |
| 01.465 | FASTENER, FAN BLADE SPACER<br>패스너              |
| 01.470 | PIN, ENGINE WATER PUMP IMPELLER<br>핀           |
| 01.504 | PIPE, ENGINE WATER PUMP INLET<br>파이프           |
| 12.053 | SUPPORT, GENERATOR MOUNTING BRACKET<br>서포트     |
| 12.105 | STRAP, ALTERNATOR ADJUSTING<br>스트랩             |
| 12.106 | FASTENER, ADJUSTING STRAP MOUNTING<br>패스너      |
| 12.107 | FASTENER, ADJUSTING STRAP TO ALTERNATOR<br>패스너 |
| 12.186 | FASTENER, ALTERNATOR MOUNTING<br>패스너           |
| 12.200 | ALTERNATOR ASSEMBLY<br>알터네이터                   |
| 94.101 | FASTENER, WATER PUMP DISCHARGE FLANGE<br>패스너   |
| 95.015 | FASTENER, BELT TENSIONING DEVICE<br>패스너        |




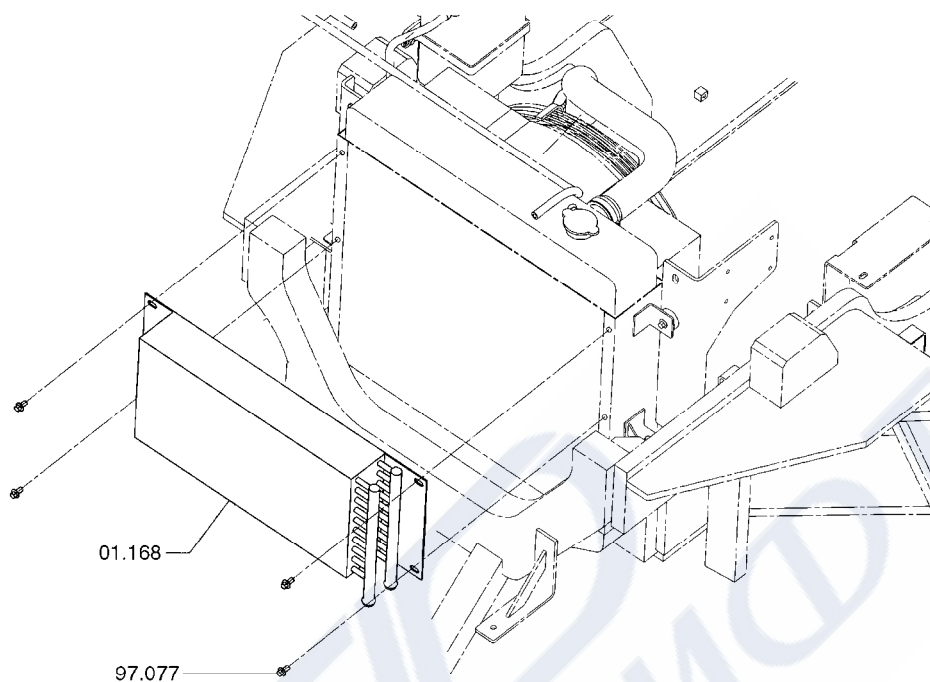 

HYDRAULIC OIL COOLER MOUNTING

01-272

- |        |                             |
|--------|-----------------------------|
| 01.168 | COOLER, HYDRAULIC<br>쿨러     |
| 97.077 | FASTENER, OIL COOLER<br>패스너 |

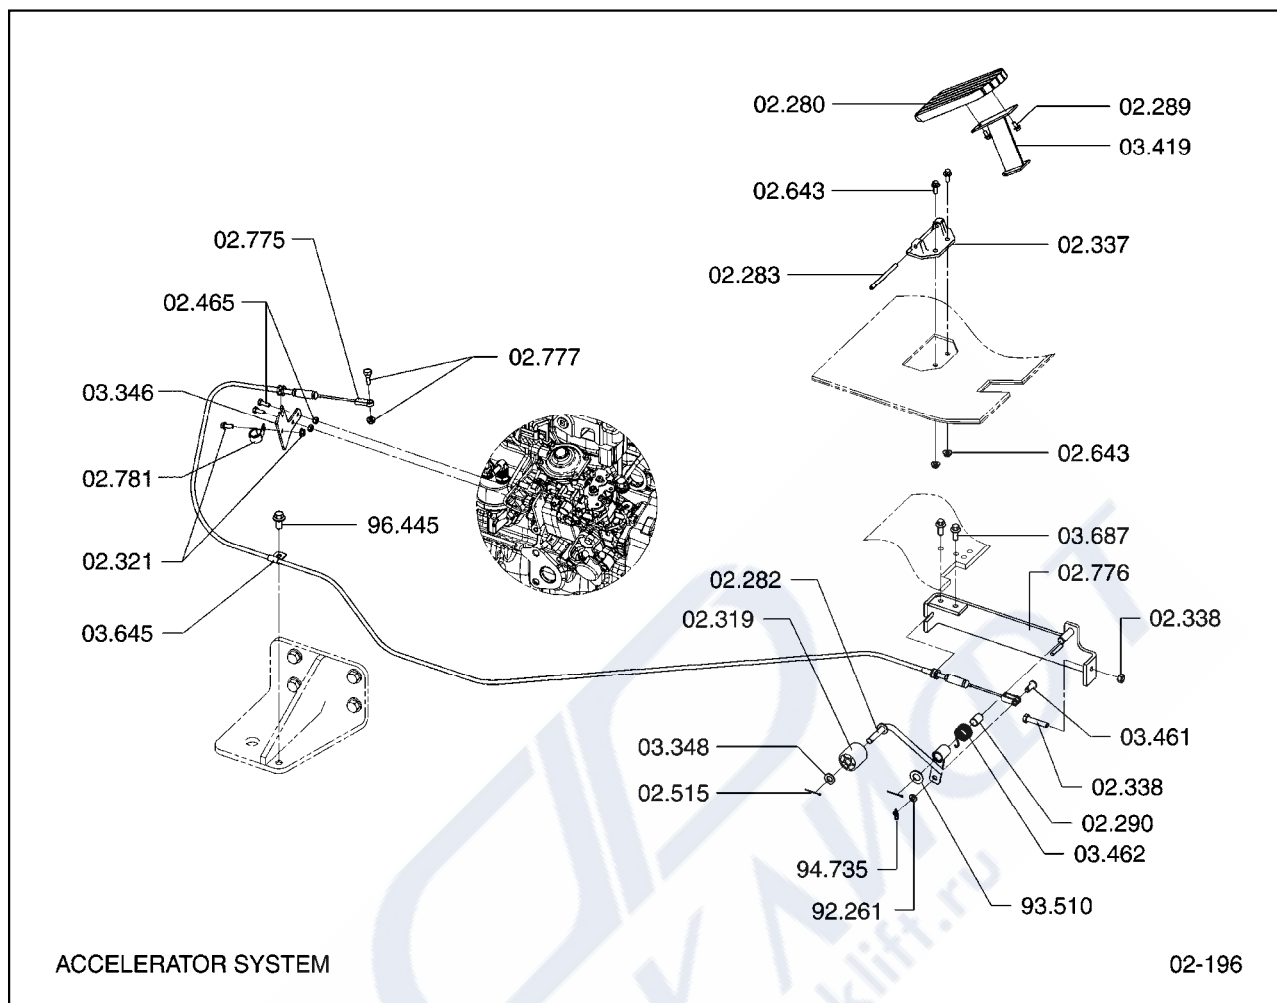 


|        |                                                      |
|--------|------------------------------------------------------|
| 02.280 | PEDAL, ACCELERATOR<br>페달                             |
| 02.282 | ROD, ACCELERATOR PUSH<br>로드                          |
| 02.283 | PIN, ACCELERATOR PEDAL TO BRACKET PIVOT<br>핀         |
| 02.289 | FASTENER, ACCELERATOR PEDAL BRACKET ATTACHING<br>패스너 |
| 02.290 | BUSHING, ACCELERATOR BELLCRANK<br>부싱                 |
| 02.319 | BUSHING, ACCELERATOR LINKAGE LEVER<br>부싱             |
| 02.321 | FASTENER, ACCELERATOR LEVER BRACKET<br>패스너           |
| 02.337 | BRACKET, ACCELERATOR LEVER MOUNTING<br>브라켓           |
| 02.338 | FASTENER, ACCELERATOR LEVER MOUNTING BRACKET<br>패스너  |

---

|        |                                                     |
|--------|-----------------------------------------------------|
| 02.465 | FASTENER, ACCELERATOR CONTROL LINKAGE<br>패스너        |
| 02.515 | PIN, ACCELERATOR PUSH ROD<br>핀                      |
| 02.643 | FASTENER, ACCELERATOR PEDAL HEEL SUPPORT<br>패스너     |
| 02.775 | CABLE, ACCELERATOR CONTROL<br>케이블                   |
| 02.776 | BRACKET, ACCELERATOR CONTROL CABLE<br>브라켓           |
| 02.777 | FASTENER, ACCELERATOR CONTROL CABLE<br>패스너          |
| 02.781 | CLIP, ACCELERATOR CABLE TO BRACKET<br>클립            |
| 03.346 | BRACKET, ACCELERATOR LINKAGE<br>브라켓                 |
| 03.348 | WASHER, ACCELERATOR LINKAGE RETURN LEVER FAST<br>와셔 |
| 03.419 | WEAR PLATE, ACCELERATOR PEDAL ROLLER<br>웨어플레이트      |
| 03.461 | PIN, ACCELERATOR CONTROL ROD END<br>핀               |
| 03.462 | SPRING, ACCELERATOR PEDAL RETURN<br>스프링             |
| 03.645 | CLIP, ACCELERATOR CONTROL CABLE<br>클립               |
| 03.687 | FASTENER, ACC CONTROL CABLE BRACKET MTG<br>패스너      |
| 92.261 | WASHER, ACCELERATOR CONTROL ROD END FASTENER<br>와셔  |
| 93.510 | WASHER, ACCELERATOR CONTROL ROD CLEVIS PIN<br>와셔    |
| 94.735 | RETAINER, ACCELERATOR CONTROL ROD END PIN<br>리테이너   |
| 96.445 | FASTENER, ACCELERATOR CONTROL CABLE CLIP<br>패스너     |

 
ASSEMBLY  
COMPLETE — 02.225

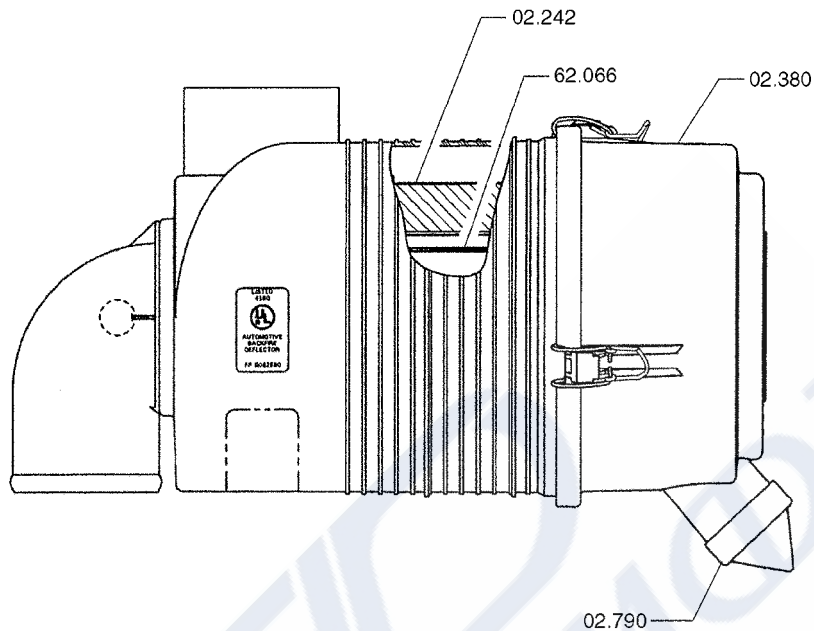

**AIR CLEANER ASSEMBLY**


**02-471**

 - |        |                                                          |
|--------|----------------------------------------------------------|
| 02.225 | CLEANER ASSEMBLY, ENGINE INTAKE AIR<br>에어클리너             |
| 02.242 | ELEMENT & GASKET, ENGINE INTAKE AIR CLEANER<br>엘리먼트& 가스켓 |
| 02.380 | CAP, FILTER<br>캡                                         |
| 02.790 | VALVE, ENGINE INTAKE AIR CLEANER DUST UNLDR<br>밸브        |
| 62.066 | ELEMENT & GASKET, ENGINE INTAKE AIR CLEANER<br>엘리먼트& 가스켓 |

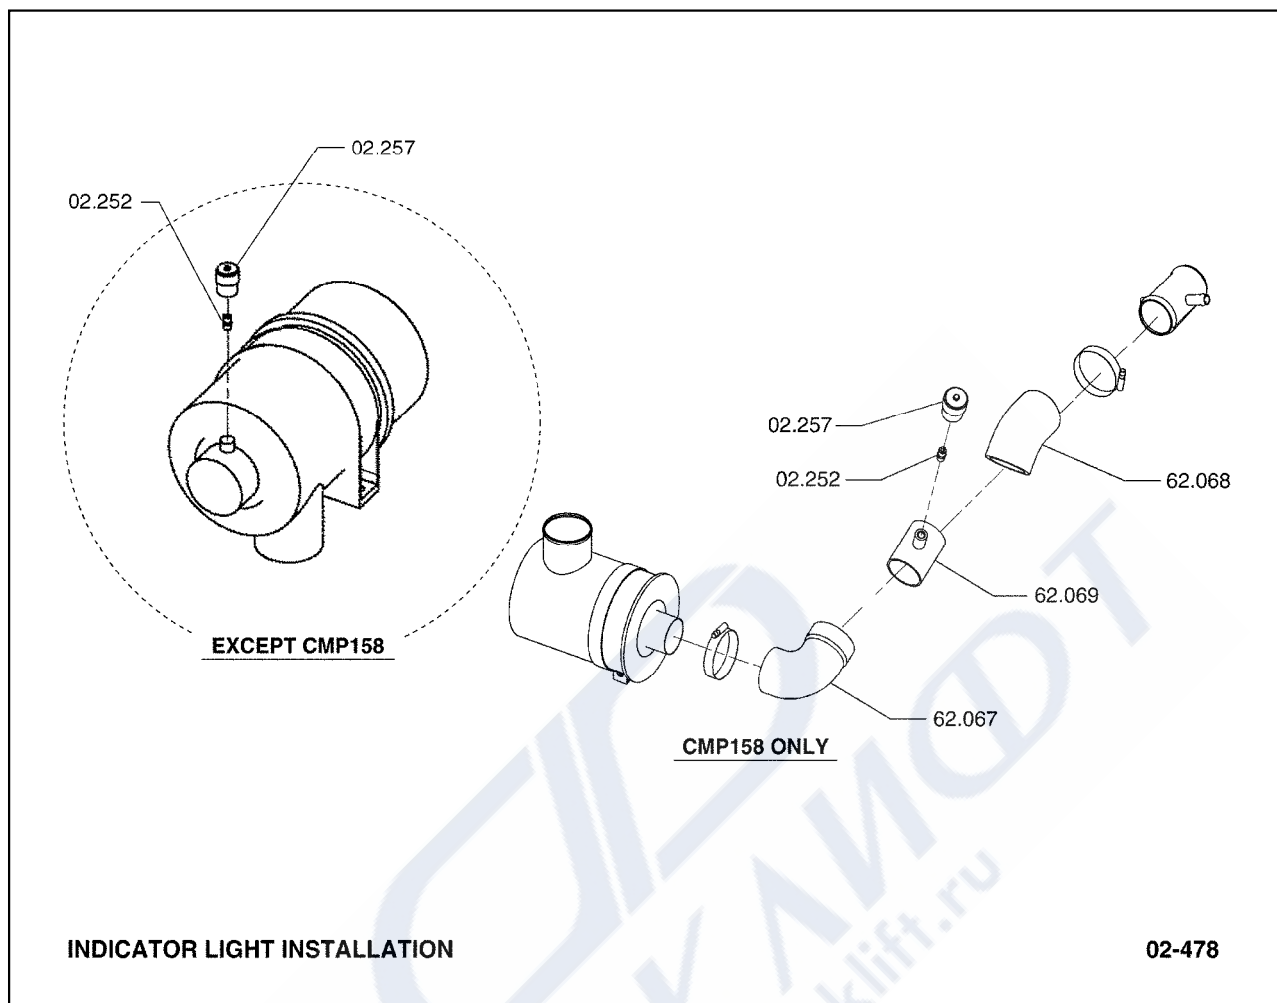

|        |                                                       |
|--------|-------------------------------------------------------|
| 02.252 | FITTING, MAIN AIR CLEANER OUTLET TUBE<br>피팅           |
| 02.257 | INDICATOR, ENGINE INTAKE AIR CLEANER AIR RES<br>인디케이터 |
| 62.067 | HOSE, AIR CLEANER INTAKE<br>호스                        |
| 62.068 | HOSE, AIR CLEANER INTAKE<br>호스                        |
| 62.069 | TUBE, AIR CLEANER INTAKE<br>튜브                        |

 
NOTE :  
NON SERVICEABLE  
ITEMS MARKED "N"

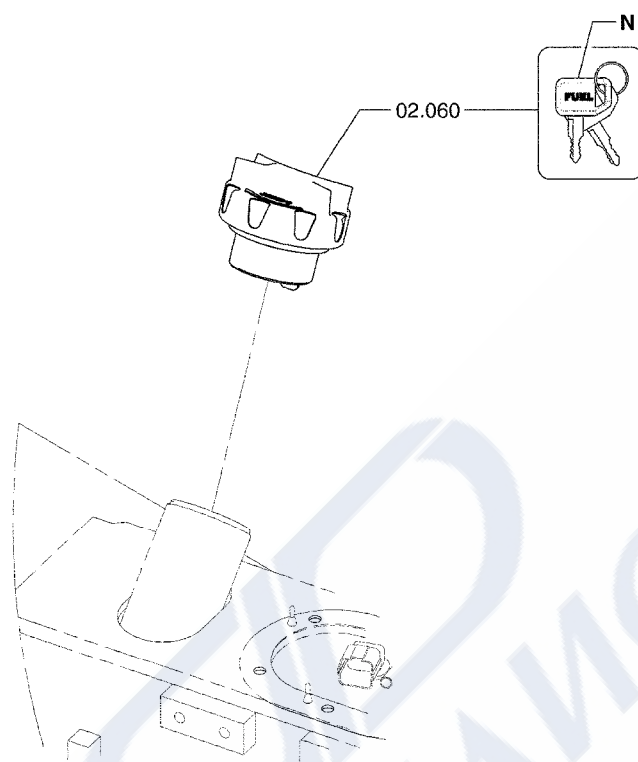

FUEL CAP WITH KEY

02-489

 
02.060 CAP, FUEL TANK  
캡

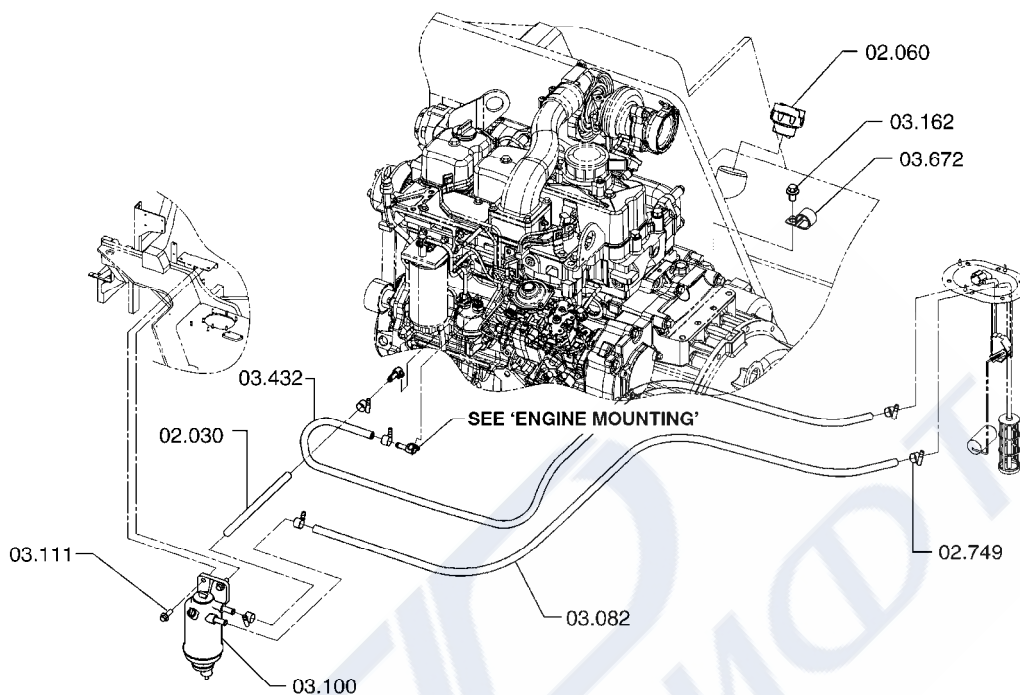

**FUEL SYSTEM**

**03-379**
 
|        |                                        |
|--------|----------------------------------------|
| 02.030 | LINE, FUEL TANK TO FUEL PUMP<br>라인     |
| 02.060 | CAP, FUEL TANK<br>캡                    |
| 02.749 | CLAMP, TANK TO FUEL PUMP LINE<br>클램프   |
| 03.082 | LINE, FUEL TANK RETURN<br>라인           |
| 03.100 | STRAINER ASSEMBLY, FUEL<br>스트레이너       |
| 03.111 | FASTENER, FUEL STRAINER<br>패스너         |
| 03.162 | FASTENER, FUEL RETURN LINE CLIP<br>패스너 |
| 03.432 | LINE, FUEL STRAINER INLET<br>라인        |
| 03.672 | CLIP, FUEL RETURN LINE<br>클립           |

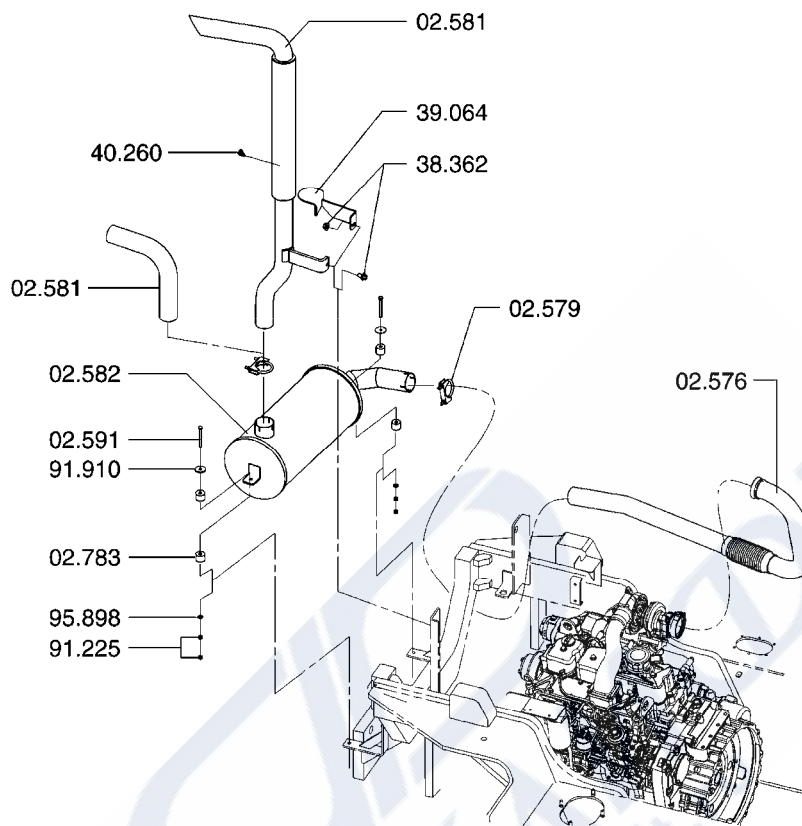

EXHAUST SYSTEM


03-387

|        |                                                  |
|--------|--------------------------------------------------|
| 02.576 | PIPE, EXHAUST<br>파이프                             |
| 02.579 | CLAMP, EXHAUST PIPE TO MUFFLER<br>클램프            |
| 02.581 | EXTENSION, TAIL PIPE<br>익스텐션                     |
| 02.582 | MUFFLER<br>머플러                                   |
| 02.591 | FASTENER, MUFFLER MOUNTING<br>패스너                |
| 02.783 | DAMPENER, MUFFLER MOUNTING VIBRATION<br>댐프너      |
| 38.362 | FASTENER, COUNTERWEIGHT COMPARTMENT COVER<br>패스너 |
| 39.064 | COVER, COUNTERWEIGHT UPPER<br>커버                 |
| 40.260 | DECAL, HOT SURFACE WARNING<br>데칼                 |



|        |                                                |
|--------|------------------------------------------------|
| 91.225 | NUT, MUFFLER MTG BRACKET FASTENER<br>너트        |
| 91.910 | WASHER, MUFFLER ATTACHING CLAMP FASTENER<br>와셔 |
| 95.898 | WASHER, MUFFLER ATTACHING FASTENER<br>와셔       |



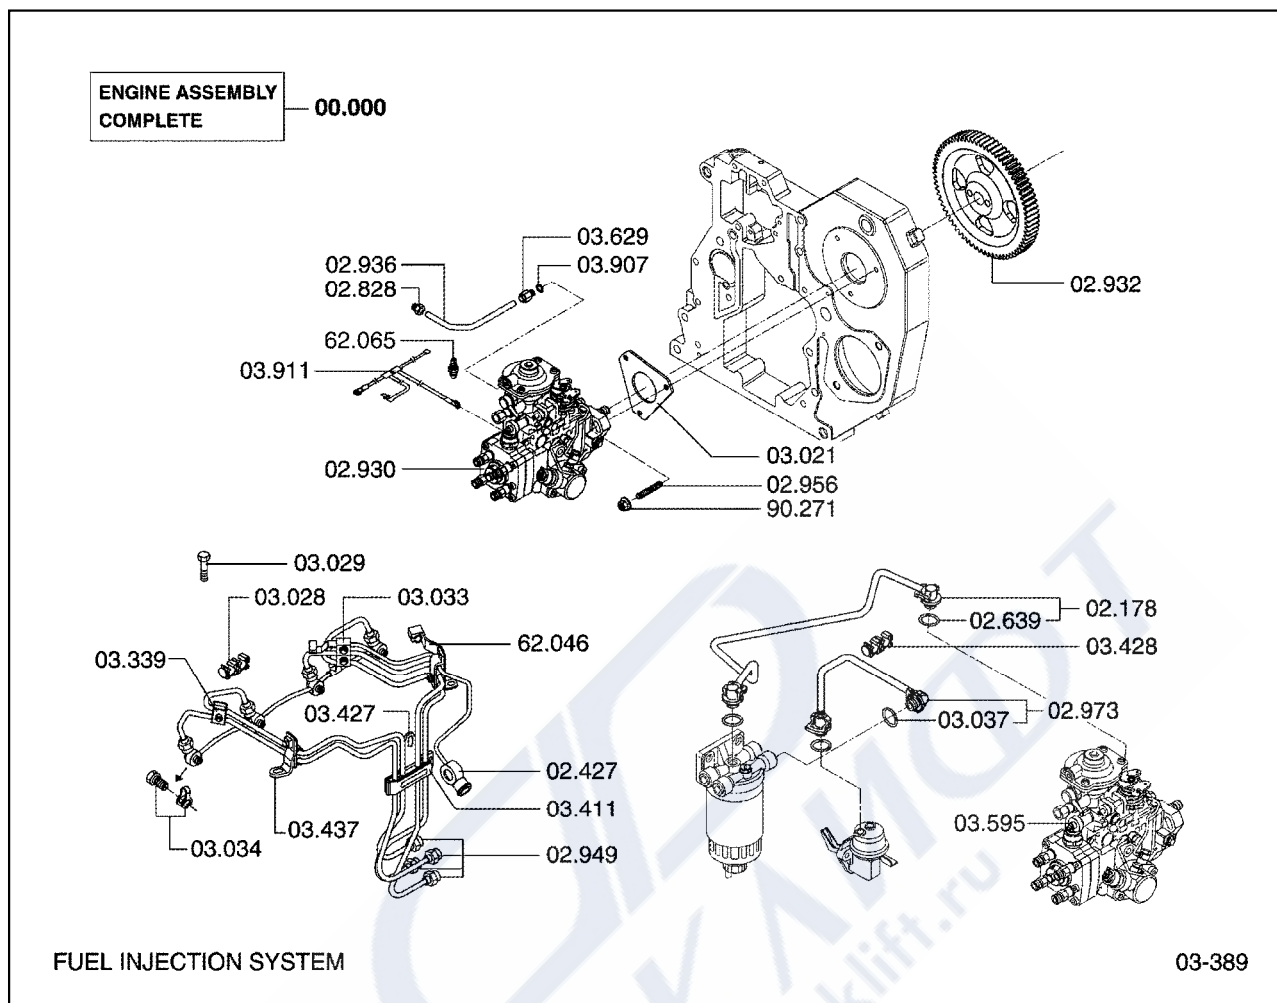 


|        |                                            |
|--------|--------------------------------------------|
| 00.000 | PRODUCTION ENGINE ASSEMBLY<br>엔진           |
| 02.178 | LINE, FILTER OUTLET<br>라인                  |
| 02.427 | LINE, FUEL RETURN<br>라인                    |
| 02.639 | SEAL, FUEL INJECTION PUMP RETURN LINE<br>씰 |
| 02.828 | FITTING, FUEL INJECTOR RETURN<br>피팅        |
| 02.930 | PUMP ASSEMBLY, FUEL INJECTION<br>펌프        |
| 02.932 | GEAR, FUEL INJECTION PUMP DRIVE<br>기어      |
| 02.936 | LINE, INJECTION PUMP RETURN<br>라인          |
| 02.949 | LINE, INJECTOR (NO 1 CYLINDER)<br>라인       |

---

|        |                                                               |
|--------|---------------------------------------------------------------|
| 02.973 | LINE, FUEL PUMP OUTLET<br>라인                                  |
| 03.021 | GASKET, FUEL INJECTION PUMP MOUNTING<br>가스켓                   |
| 03.028 | CLIP, INJECTOR LINE<br>클립                                     |
| 03.029 | FASTENER, INJECTION LINE CLIP<br>패스너                          |
| 03.033 | FASTENER, FUEL INJECTOR<br>패스너                                |
| 03.034 | FITTING-BOLT, INJECTOR LEAK-OFF LINE<br>피팅                    |
| 03.037 | SEAL, FUEL PUMP OUTLET LINE<br>셀                              |
| 03.339 | CLIP, FUEL INJECTOR LINE<br>클립                                |
| 03.411 | CLIP, INJECTOR LINE<br>클립                                     |
| 03.427 | CLIP, INJECTION PUMP LINES VIBRATION DAMPENER<br>클립           |
| 03.428 | CLIP, FUEL PUMP OUTLET LINE<br>클립                             |
| 03.437 | CLAMP, FUEL INJECTOR LINE<br>클램프                              |
| 03.595 | SOLENOID VALVE, INJECTION PUMP COLD ADVANCE DEVICE<br>솔레노이드밸브 |
| 03.629 | ADAPTOR, FUEL INJECTION SYSTEM FITTING NUT<br>어댑터             |
| 03.907 | SEAL, FUEL INJECTION SYSTEM FITTING NUT<br>셀                  |
| 03.911 | LEAD, FUEL PRESSURE SENDER<br>리드                              |
| 62.046 | CLIP, INJECTOR LINE<br>클립                                     |
| 62.065 | SENSOR, WATER TEMPERATURE<br>센서                               |
| 90.211 | LOCKWASHER, ENGINE FRONT GEAR COVER FASTENER<br>로크와셔          |

 
---

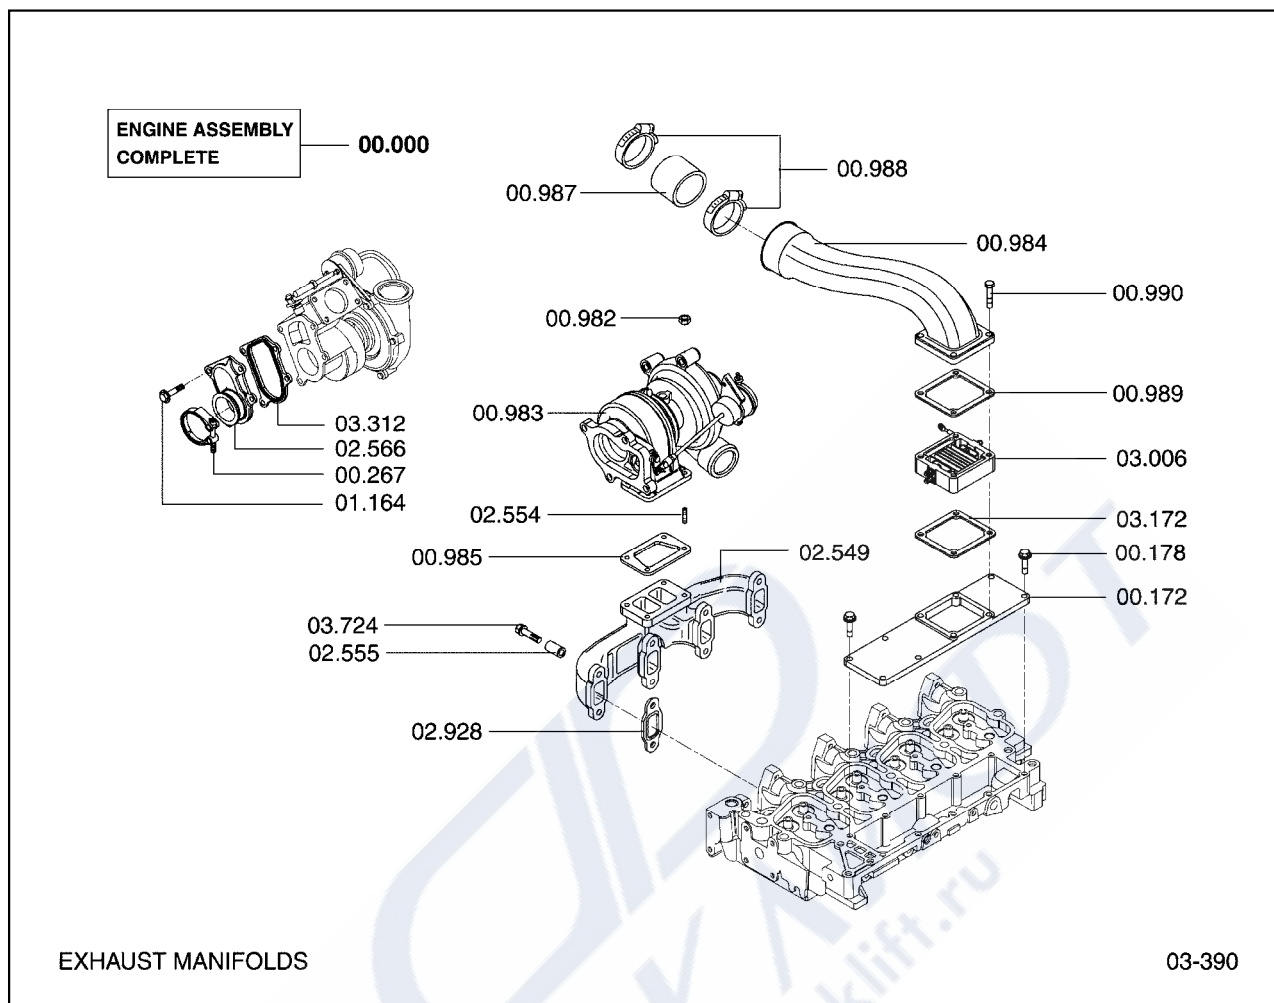


|        |                                                 |
|--------|-------------------------------------------------|
| 00.000 | PRODUCTION ENGINE ASSEMBLY<br>엔진                |
| 00.172 | COVER, CRANKCASE FUEL PUMP HOLE<br>커버           |
| 00.178 | FASTENER, CRANKCASE FUEL PUMP HOLE COVER<br>패스너 |
| 00.267 | SUPPORT, CRANKSHAFT BEARING #2<br>서포트           |
| 00.982 | NUT, TURBOCHARGER MOUNTING<br>너트                |
| 00.983 | TURBOCHARGER ASSEMBLY<br>터보차저                   |
| 00.984 | PIPE, TURBOCHARGER TO MANIFOLD<br>파이프           |
| 00.985 | GASKET, TURBOCHARGER<br>가스켓                     |
| 00.987 | HOSE, TURBOCHARGER<br>호스                        |

---

|        |                                              |
|--------|----------------------------------------------|
| 00.988 | CLAMP, TURBOCHARGER LINE<br>클램프              |
| 00.989 | GASKET, TURBOCHARGER PIPE TO MANIFOLD<br>가스켓 |
| 00.990 | FASTENER, TURBOCHARGER PIPE MOUNTING<br>패스너  |
| 01.164 | FASTENER, TURBOCHARGER MOUNTING<br>패스너       |
| 02.549 | MANIFOLD, EXHAUST<br>매니폴드                    |
| 02.554 | FASTENER, MANIFOLD TO CRANKCASE<br>패스너       |
| 02.555 | FASTENER, MANIFOLD TO CRANKCASE<br>패스너       |
| 02.566 | FLANGE, EXHAUST PIPE TO MANIFOLD<br>플랜지      |
| 02.928 | GASKET, EXHAUST MANIFOLD<br>가스켓              |
| 03.006 | HEATER, COLD START<br>히터                     |
| 03.172 | GASKET, COLD START RESERVOIR COVER<br>가스켓    |
| 03.312 | SEAL, EXHAUST FLANGE<br>씰                    |
| 03.724 | FASTENER, EXHAUST MANIFOLD<br>패스너            |

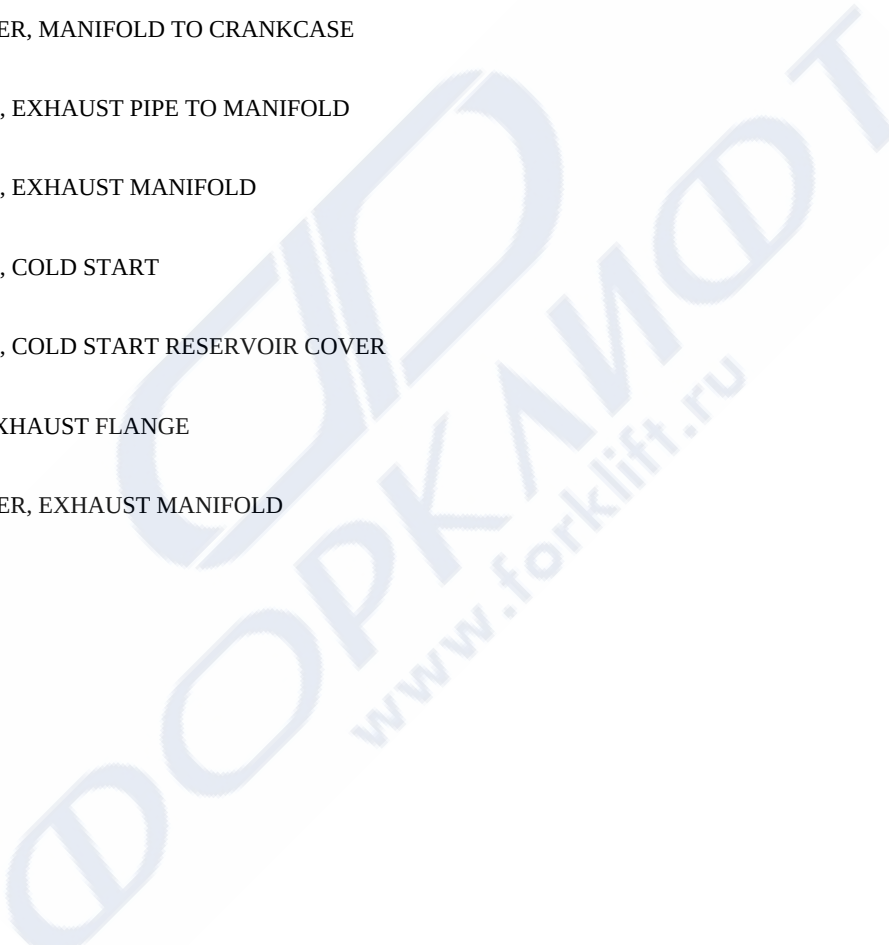 

 ■ INDICATES AN ASSEMBLY  
HAVING SERVICEABLE  
COMPONENTS ILLUSTRATED  
ELSEWHERE

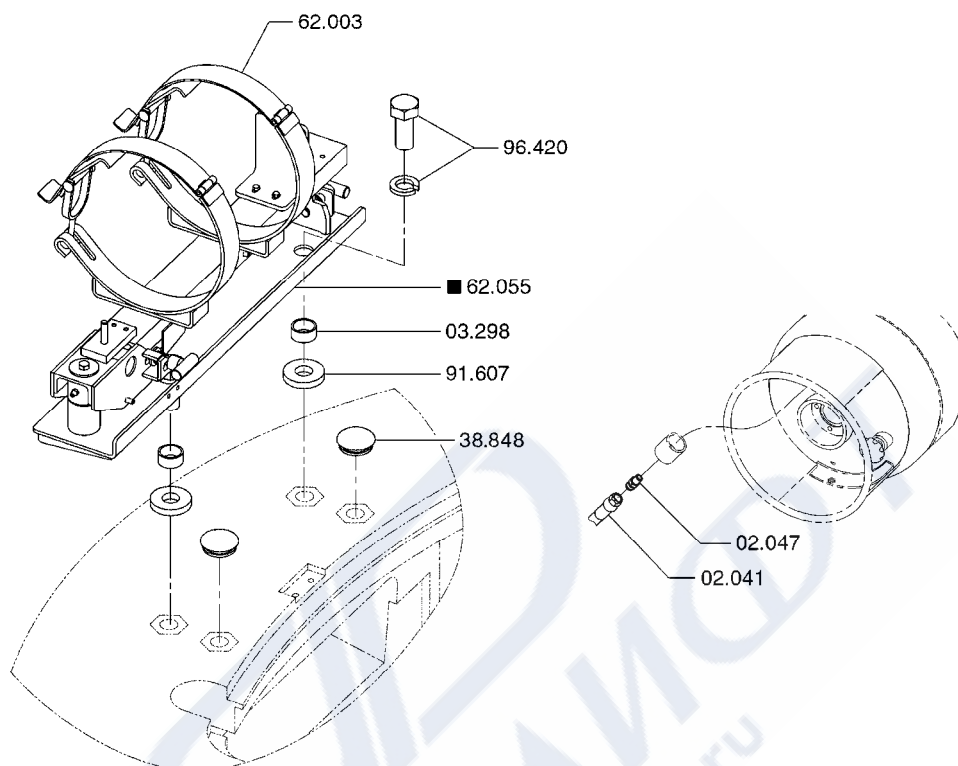


SWING DOWN LPG TANK MTG

03-549

|        |                                                  |
|--------|--------------------------------------------------|
| 02.041 | LINE, LP GAS TANK OUTLET<br>라인                   |
| 02.047 | FITTING, LPG ADAPTOR OUTLET<br>피팅                |
| 03.298 | SPACER, LPG TANK GUARD<br>스페이서                   |
| 38.848 | PLUG - BUTTON, REAR FENDER CTWT BOLT HOLE<br>플러그 |
| 62.003 | CLAMP, LPG TANK<br>클램프                           |
| 62.055 | BRACKET, SWING DOWN LPG TANK MTG<br>브라켓          |
| 91.607 | WASHER, LPG TANK GUARD MOUNTING FASTENER<br>와셔   |
| 96.420 | FASTENER, LPG TANK MOUNTING BRACKET<br>패스너       |

 ■ INDICATES AN ASSEMBLY  
HAVING SERVICEABLE  
COMPONENTS ILLUSTRATED  
ELSEWHERE

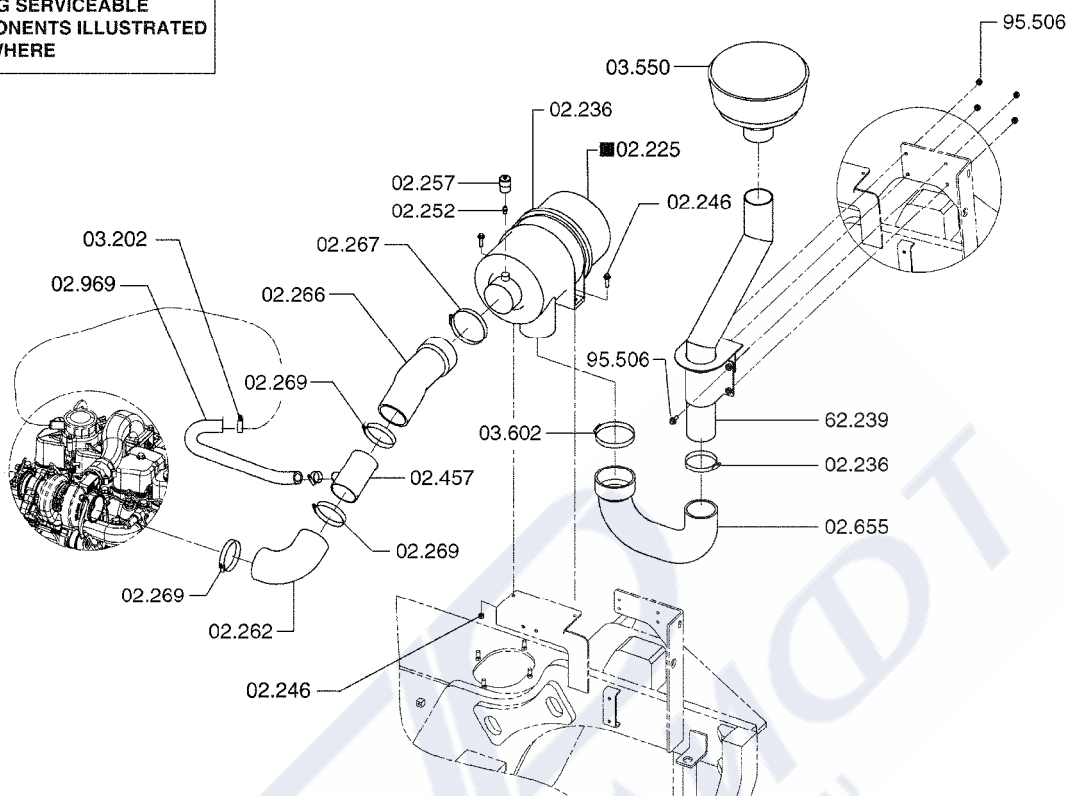


**INTAKE SYSTEM**

**03-578**


|        |                                                       |
|--------|-------------------------------------------------------|
| 02.225 | CLEANER ASSEMBLY, ENGINE INTAKE AIR<br>에어클리너          |
| 02.236 | CLAMP, MAIN AIR CLEANER INLET HOSE<br>클램프             |
| 02.246 | FASTENER, ENGINE INTAKE AIR CLEANER ATTACHING<br>패스너  |
| 02.252 | FITTING, MAIN AIR CLEANER OUTLET TUBE<br>피팅           |
| 02.257 | INDICATOR, ENGINE INTAKE AIR CLEANER AIR RES<br>인디케이터 |
| 02.262 | HOSE, MAIN AIR CLEANER OUTLET<br>호스                   |
| 02.266 | HOSE, MAIN AIR CLEANER OUTLET<br>호스                   |
| 02.267 | CLAMP, MAIN AIR CLEANER OUTLET HOSE<br>클램프            |
| 02.269 | CLAMP, MAIN AIR CLEANER OUTLET HOSE<br>클램프            |

---
  
|        |                                                       |
|--------|-------------------------------------------------------|
| 02.457 | FITTING, MAIN AIR CLEANER OUTLET TUBE<br>피팅           |
| 02.655 | LINE, ENGINE AIR PRE-CLEANER OUTLET<br>라인             |
| 02.969 | HOSE, MAIN AIR CLEANER INLET<br>호스                    |
| 03.202 | CLAMP, ENGINE AIR INTAKE ADAPTOR<br>클램프               |
| 03.550 | PRE CLEANER ASSEMBLY, ENGINE AIR<br>프리클리너             |
| 03.602 | CLAMP, AIR CLEANER TUBE<br>클램프                        |
| 62.239 | TUBE, PRE-AIR CLEANER LINE<br>튜브                      |
| 95.506 | FASTENER, PRE CLEANER MOUNTING BRACKET SUPPORT<br>패스너 |

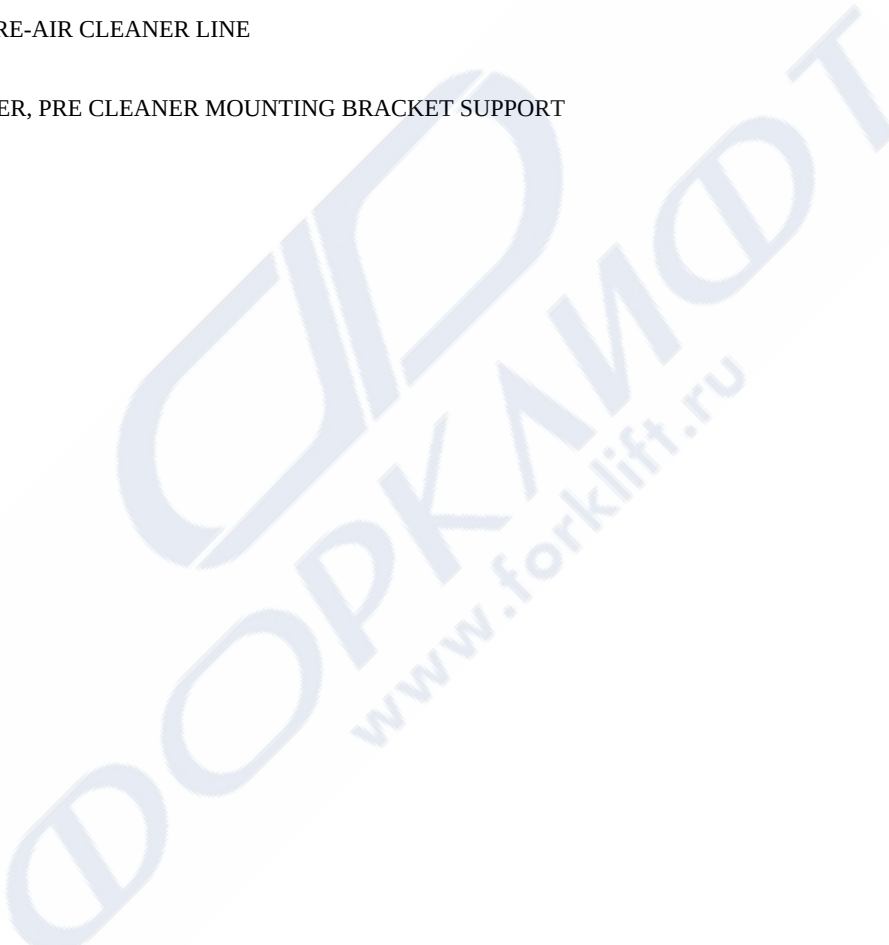




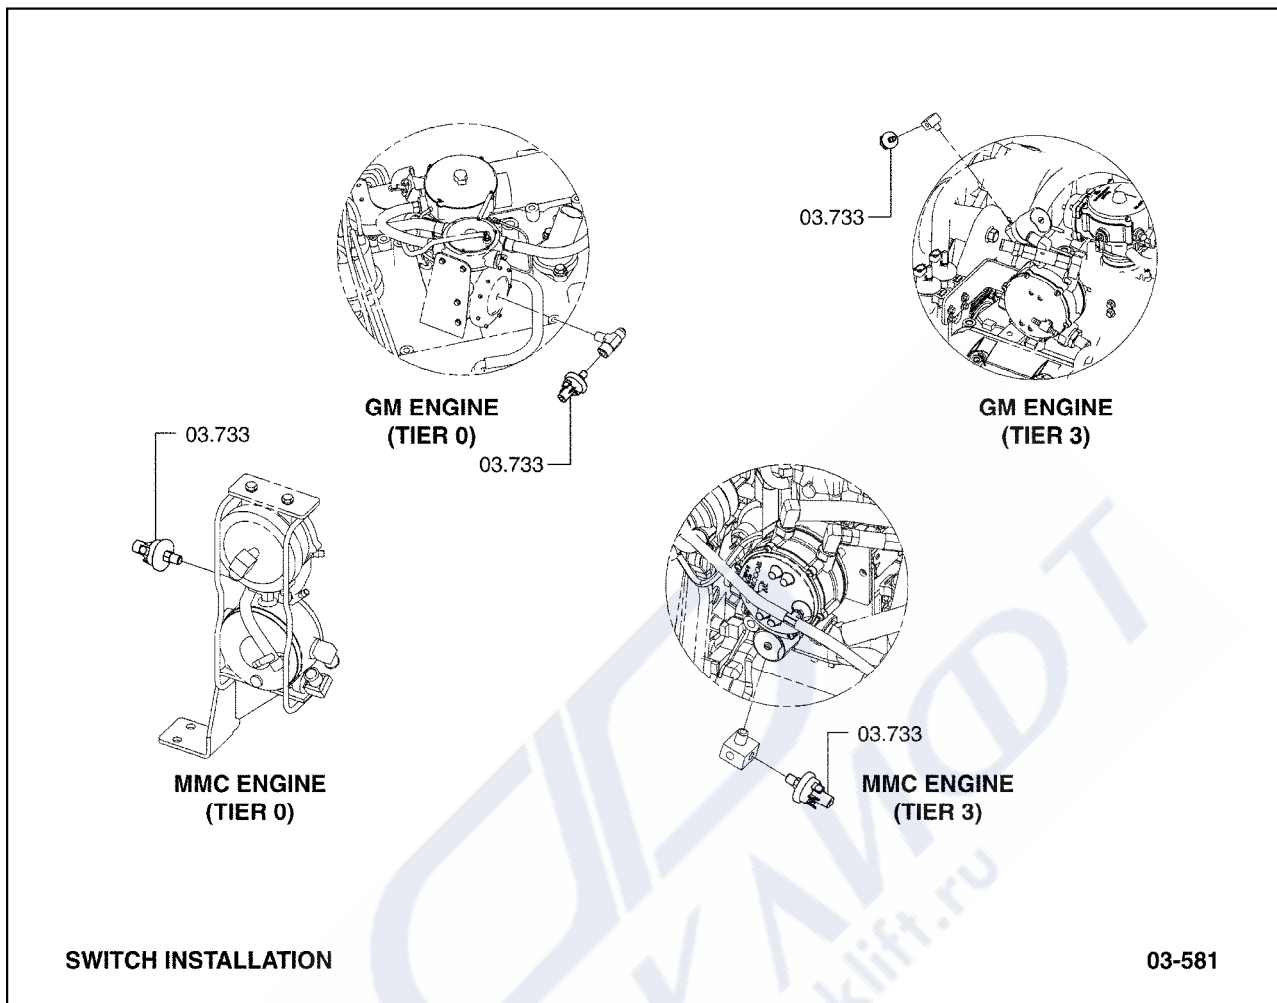

03.733 SWITCH,LPG PRESSURE  
스위치

 ASSEMBLY  
COMPLETE 06.200

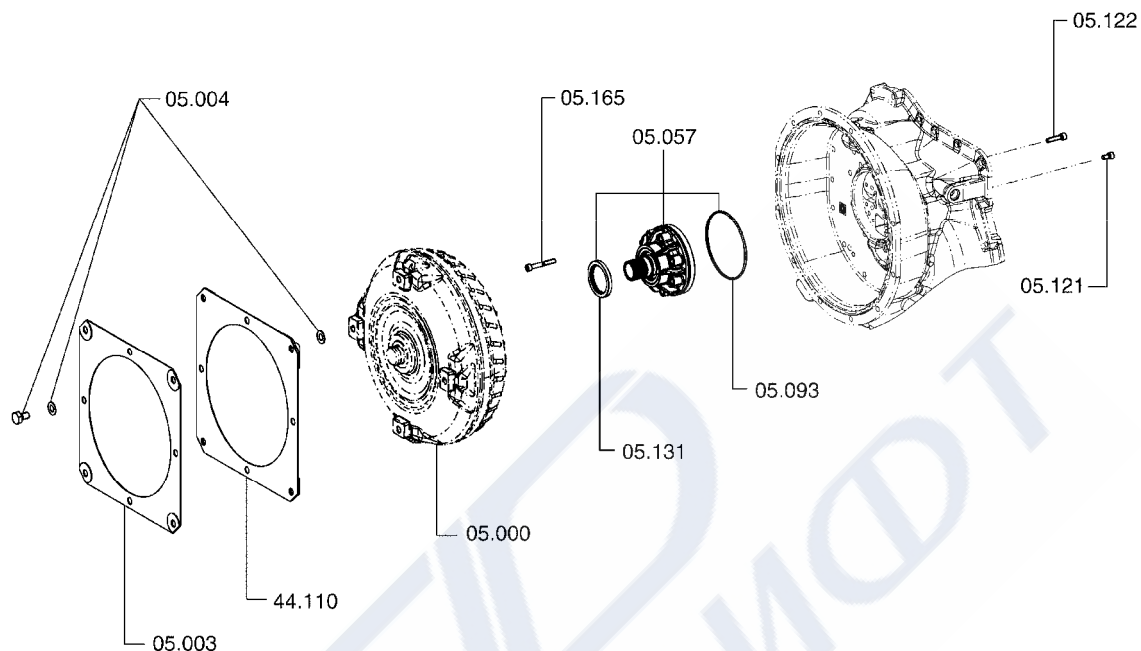


TORQUE CONVERTER HOUSING

05-054

|        |                                                      |
|--------|------------------------------------------------------|
| 05.000 | CONVERTER ASSEMBLY, TORQUE<br>컨버터                    |
| 05.003 | PLATE, CONVERTER DRIVE & REINFORCING<br>플레이트         |
| 05.004 | FASTENER, CONVERTER DRIVE & REINFORCING PLATE<br>패스너 |
| 05.057 | GEAR, PUMP DRIVE<br>기어                               |
| 05.093 | SEAL, CONVERTER PUMP GEAR COVER PLATE-UPPER<br>씰     |
| 05.121 | FASTENER, CONVERTER TO CASE<br>패스너                   |
| 05.122 | FASTENER, CONVERTER TO CASE<br>패스너                   |
| 05.131 | SEAL, CONVERTOR PUMP IDLER GEAR SHAFT<br>씰           |
| 05.165 | FASTENER, PUMP GEAR BEARING SPINDLE<br>패스너           |

|        |                                |
|--------|--------------------------------|
| 06.200 | TRANSMISSION ASSEMBLY<br>트랜스미션 |
| 44.110 | PLATE, CONVERTER DRIVE<br>플레이트 |



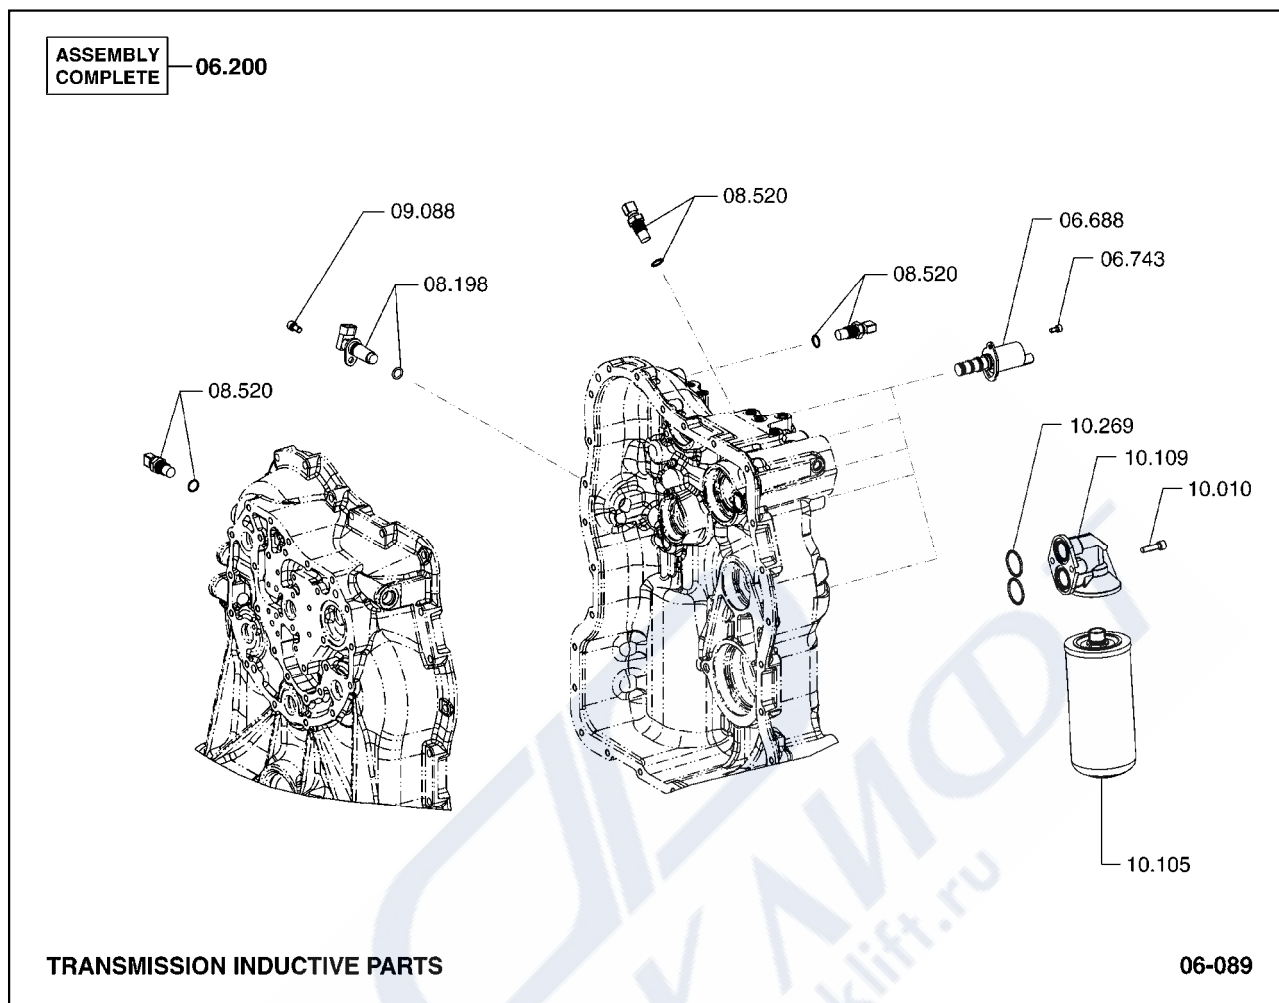 


|        |                                                         |
|--------|---------------------------------------------------------|
| 06.200 | TRANSMISSION ASSEMBLY<br>트랜스미션                          |
| 06.688 | VALVE, REGULATOR TRANSMISSION PRESSURE<br>밸브            |
| 06.743 | FASTENER, TRANSMISSION VALVE PRESSURE PUMP COVER<br>패스너 |
| 08.198 | SPEED SENSOR, ELECTRONIC GEAR SELECTOR<br>스피드센서         |
| 08.520 | SENSOR, TRANSMISSION SPEED TO ENGINE<br>센서              |
| 09.088 | BOLT, SPEED SENSOR MOUNTING<br>볼트                       |
| 10.010 | FASTENER, OIL FILTER ATTACHING<br>패스너                   |
| 10.105 | ELEMENT & GASKET, OIL FILTER<br>엘리먼트& 가스켓               |
| 10.109 | BASE, OIL FILTER<br>베이스                                 |

10.269

SEAL, FILTER EXTENSION

셀

 
ФОРКЛИФТ  
www.forklift.ru

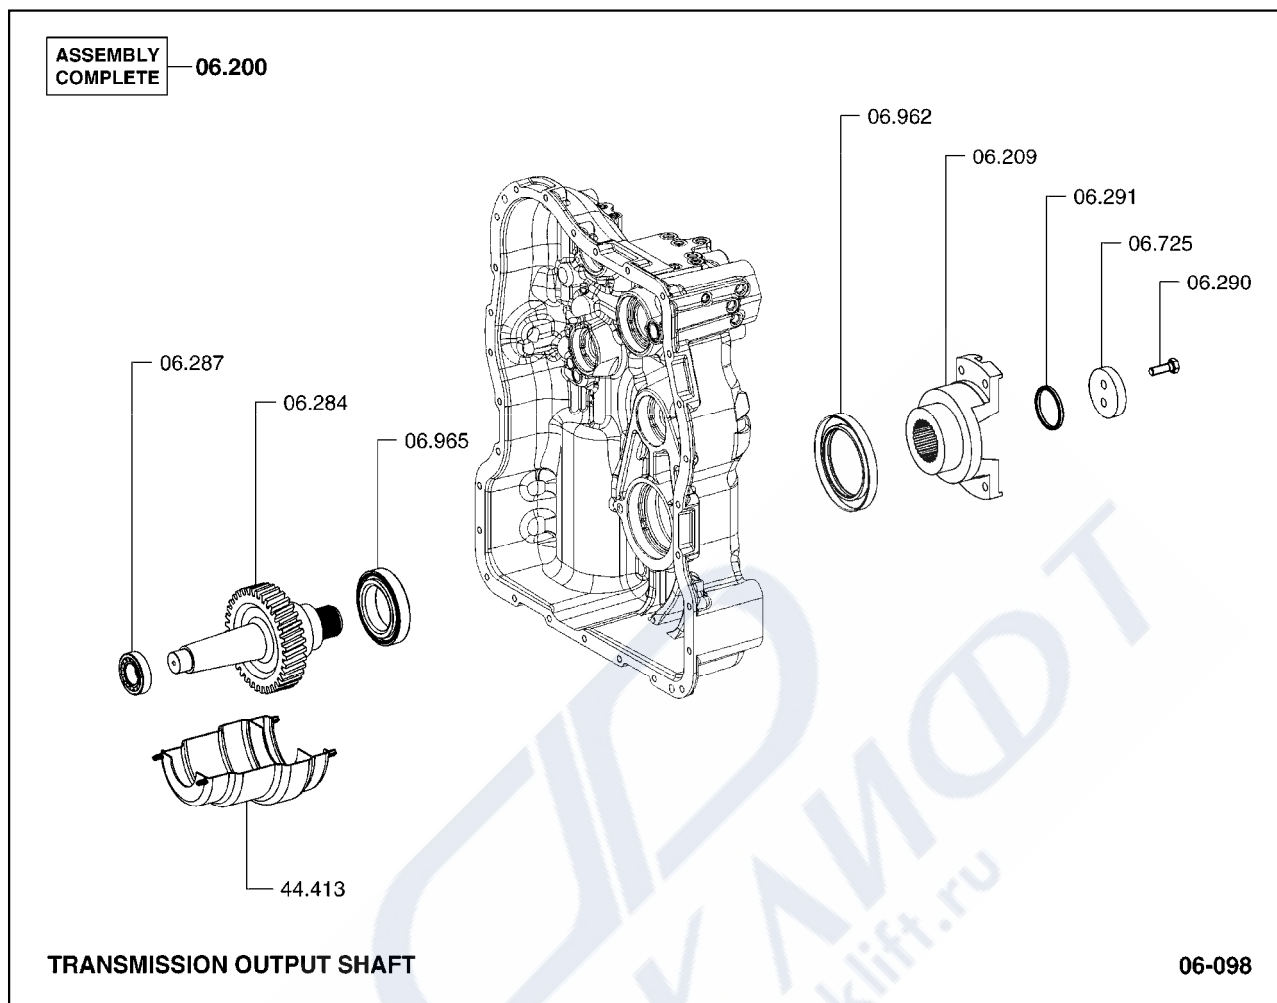

|        |                                                 |
|--------|-------------------------------------------------|
| 06.200 | TRANSMISSION ASSEMBLY<br>트랜스미션                  |
| 06.209 | FLANGE & DEFLECTOR, OUTPUT<br>플랜지 & 디플렉터        |
| 06.284 | SHAFT, OUTPUT<br>샤프트                            |
| 06.287 | BEARING, OUTPUT SHAFT FRONT<br>베어링              |
| 06.290 | FASTENER, OUTPUT SHAFT FRONT BEARING CAP<br>패스너 |
| 06.291 | SEAL, OUTPUT SHAFT<br>씰                         |
| 06.725 | WASHER, OUTPUT SHAFT GEAR THRUST<br>와셔          |
| 06.962 | SEAL, OUTPUT SHAFT BEARING CAP<br>씰             |
| 06.965 | BEARING, UPPER CLUTCH SHAFT (AXLE END)<br>베어링   |

44.413 COVER, OUTPUT SHAFT  
커버

 ФОРКЛИФТ  
www.forklift.ru

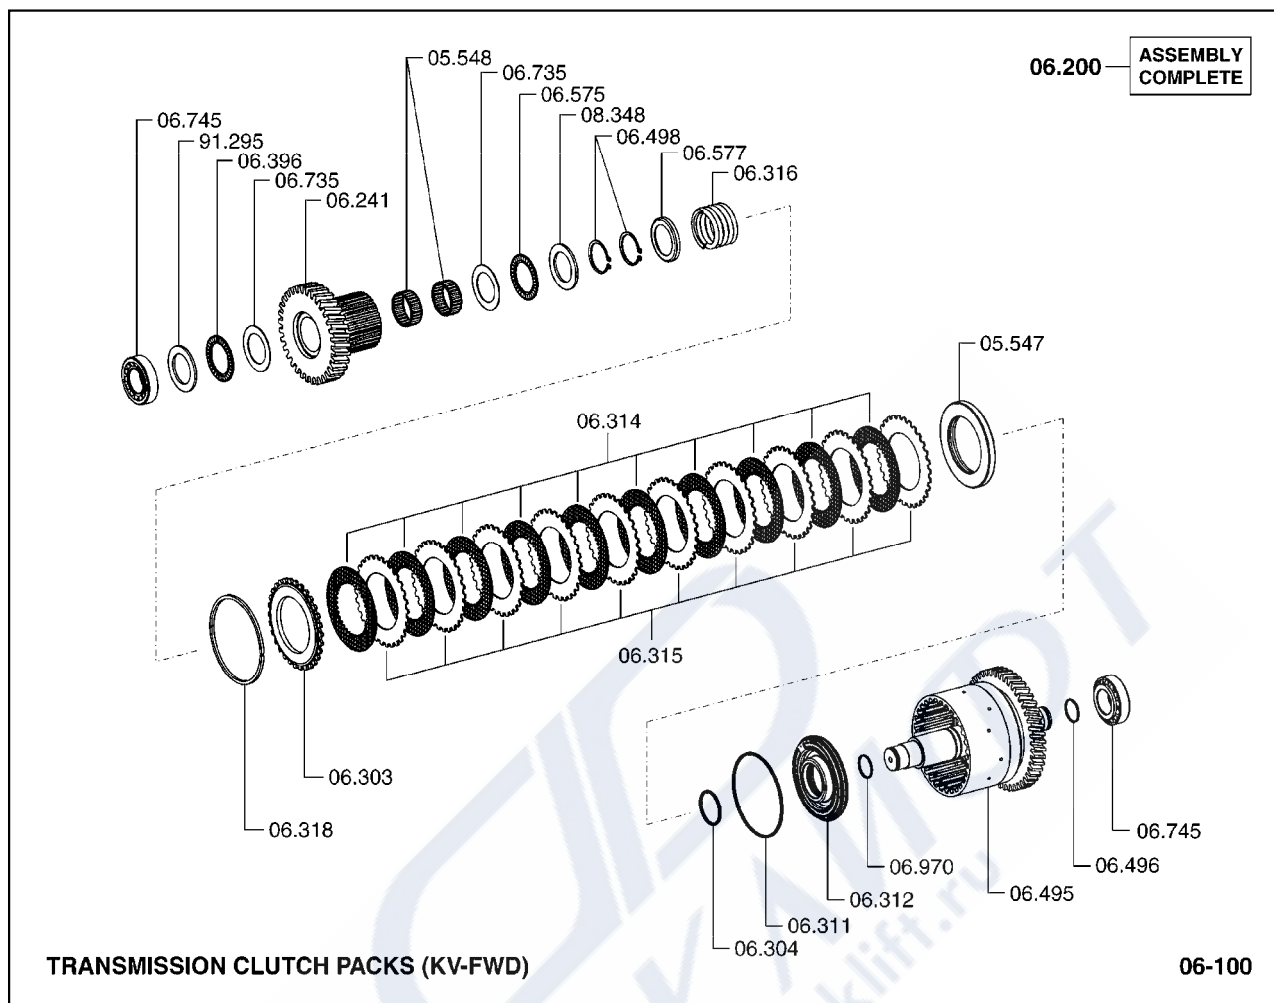


- 05.547 RETAINER, CLUTCH SHAFT OIL SEAL SLEEVE  
리테이너
- 05.548 BEARING, FORWARD CLUTCH SHAFT PILOT  
베어링
- 06.200 TRANSMISSION ASSEMBLY  
트랜스미션
- 06.241 GEAR, INPUT SHAFT FORWARD  
기어
- 06.303 SHIM, FORWARD CLUTCH BEARING CAP  
심
- 06.304 SEAL, FORWARD CLUTCH BEARING CAP  
셀
- 06.311 SEAL, FORWARD CLUTCH PISTON OUTER  
셀
- 06.312 PISTON, FORWARD CLUTCH  
피스톤
- 06.314 DISC, FORWARD CLUTCH INNER  
디스크



---

|        |                                                   |
|--------|---------------------------------------------------|
| 06.315 | DISC, FORWARD CLUTCH OUTER<br>디스크                 |
| 06.316 | SPRING, FORWARD CLUTCH DISC RELEASE<br>스프링        |
| 06.318 | RING, FORWARD CLUTCH DISC END PLATE RET<br>링      |
| 06.396 | BEARING, FORWARD CLUTCH CYLINDER<br>베어링           |
| 06.495 | SHAFT, FORWARD CLUTCH<br>샤프트                      |
| 06.496 | SEAL, FORWARD CLUTCH SHAFT-OUTER<br>씰             |
| 06.498 | RETAINER, FORWARD CLUTCH SHAFT SPACER<br>리테이너     |
| 06.575 | BEARING, FORWARD GEAR<br>베어링                      |
| 06.577 | RETAINER, FORWARD CLUTCH SPRING<br>리테이너           |
| 06.735 | WASHER, FORWARD CLUTCH DISC HUB<br>와셔             |
| 06.745 | BEARING, INPUT SHAFT<br>베어링                       |
| 06.970 | RING, CLUTCH HUB OIL BAFFLE<br>링                  |
| 08.348 | WASHER, FORWARD GEAR THRUST<br>와셔                 |
| 91.295 | WASHER, FORWARD CLUTCH BEARING CAP FASTENER<br>와셔 |

 
---

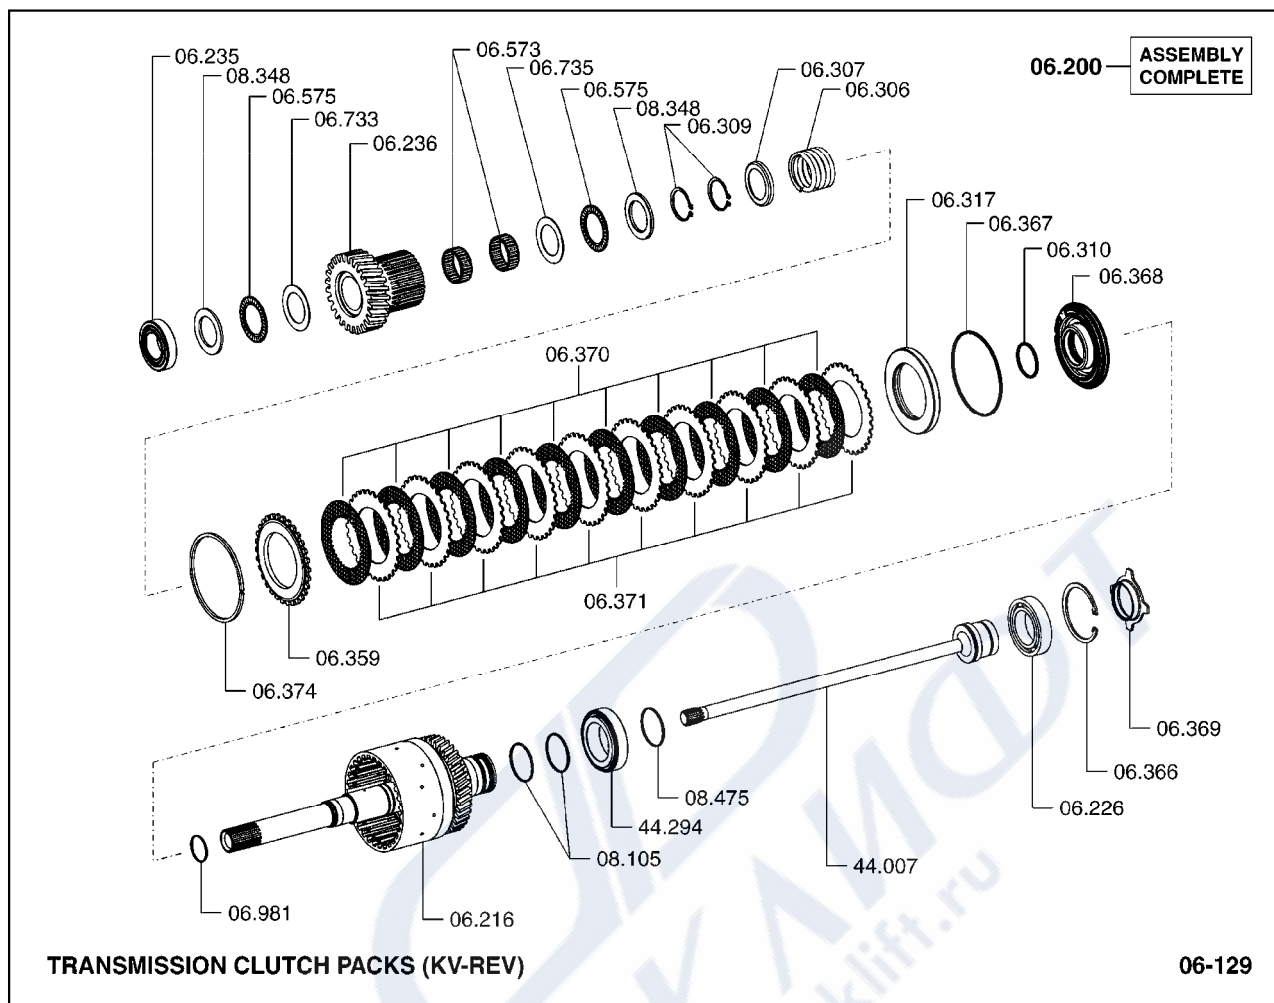

|        |                                             |
|--------|---------------------------------------------|
| 06.200 | TRANSMISSION ASSEMBLY<br>트랜스미션              |
| 06.216 | SHAFT, REVERSE<br>샤프트                       |
| 06.226 | BEARING, REVERSE SHAFT INNER<br>베어링         |
| 06.235 | BEARING, INPUT SHAFT INNER<br>베어링           |
| 06.236 | GEAR, INPUT SHAFT REVERSE<br>기어             |
| 06.306 | FASTENER, FORWARD CLUTCH BEARING CAP<br>패스너 |
| 06.307 | SEAL, FORWARD HUB<br>셀                      |
| 06.309 | RETAINER, FORWARD HUB<br>리테이너               |
| 06.310 | SEAL, FORWARD CLUCH PISTON INNER<br>셀       |

---


|        |                                              |
|--------|----------------------------------------------|
| 06.317 | PLATE, FORWARD CLUTCH DISC END<br>플레이트       |
| 06.359 | SHIM, REVERSE CLUTCH BEARING CAP<br>심        |
| 06.366 | SEAL, REVERSE CLUTCH PISTON INNER<br>씰       |
| 06.367 | SEAL, REVERSE CLUTCH PISTON OUTER<br>씰       |
| 06.368 | PISTON, REVERSE CLUTCH<br>피스톤                |
| 06.369 | DISC, REVERSE CLUTCH END<br>디스크              |
| 06.370 | DISC, REVERSE CLUTCH INNER<br>디스크            |
| 06.371 | DISC, REVERSE CLUTCH OUTER<br>디스크            |
| 06.374 | RING, REVERSE CLUTCH DISC END PLATE RET<br>링 |
| 06.573 | BEARING, FORWARD GEAR<br>베어링                 |
| 06.575 | BEARING, FORWARD GEAR<br>베어링                 |
| 06.733 | WASHER, REVERSE CLUTCH DISC HUB<br>와셔        |
| 06.735 | WASHER, FORWARD CLUTCH DISC HUB<br>와셔        |
| 06.981 | RING, CLUTCH HUB OIL BAFFLE<br>링             |
| 08.105 | RING, REVERSE GEAR RETAINING<br>링            |
| 08.348 | WASHER, FORWARD GEAR THRUST<br>와셔            |
| 08.475 | SEAL, REVERSE IDLER SHAFT<br>씰               |
| 44.007 | SHAFT, TRANSMISSION IDLER GEAR<br>샤프트        |
| 44.294 | BEARING, REVERSE CLUTCH GEAR<br>베어링          |

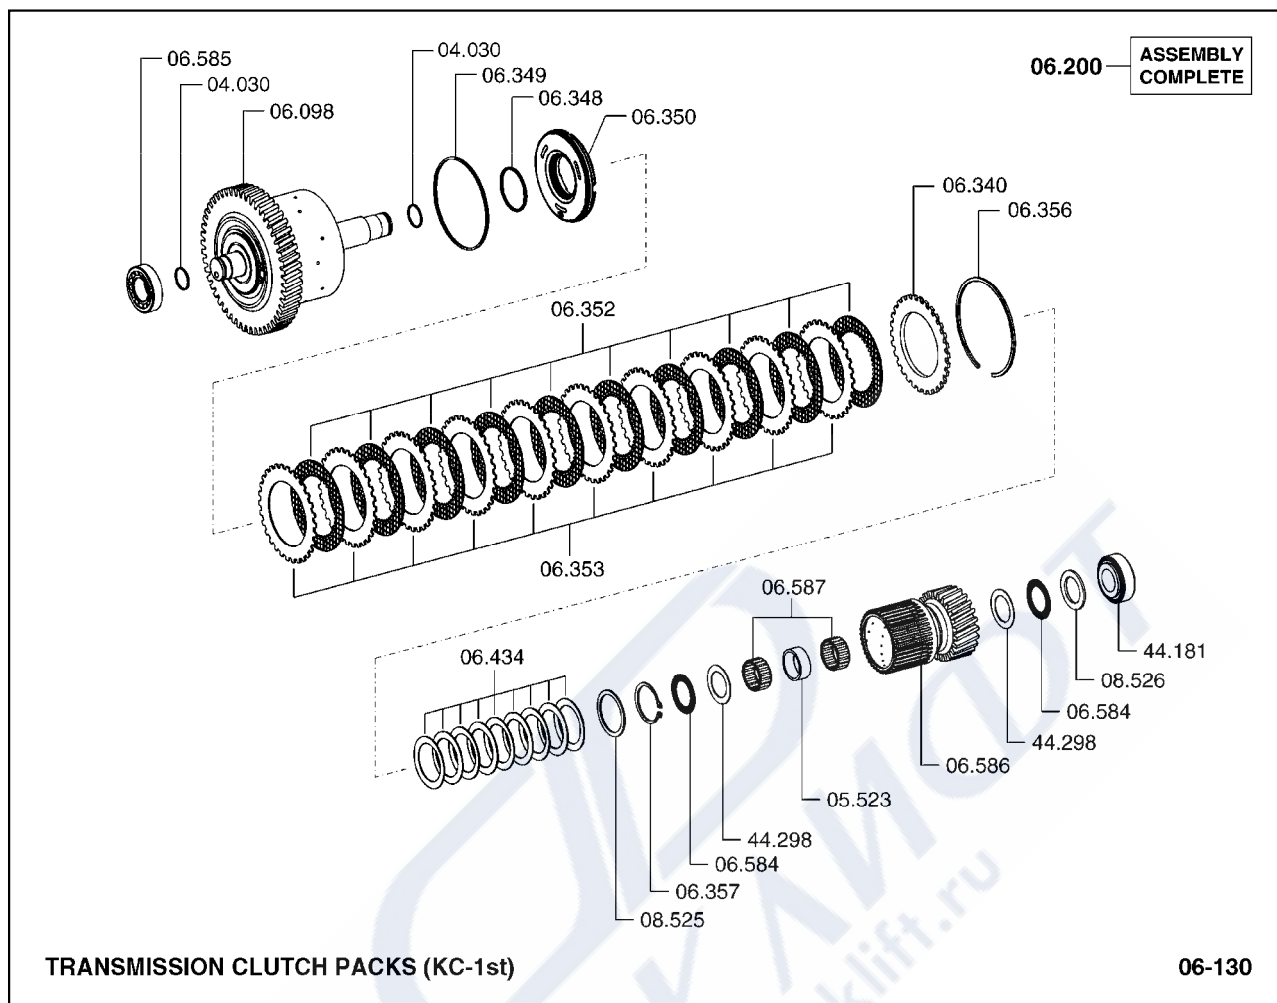 


|        |                                             |
|--------|---------------------------------------------|
| 04.030 | R-RING, CLUTCH COUPLING<br>링                |
| 05.523 | SPACER, 2ND GEAR BEARING<br>스페이서            |
| 06.098 | SHAFT, SPEED SELECTOR LEVER<br>샤프트          |
| 06.200 | TRANSMISSION ASSEMBLY<br>트랜스미션              |
| 06.340 | SHIM KIT, 1ST & 3RD CLUTCH BEARING CAP<br>심 |
| 06.348 | SEAL, 1ST & 3RD CLUTCH PISTON INNER<br>셀    |
| 06.349 | SEAL, 1ST & 3RD CLUTCH PISTON OUTER<br>셀    |
| 06.350 | PISTON, 1ST & 3RD CLUTCH<br>피스톤             |
| 06.352 | DISC, 1ST & 3RD CLUTCH INNER<br>디스크         |

---

|        |                                                |
|--------|------------------------------------------------|
| 06.353 | DISC, 1ST & 3RD CLUTCH OUTER<br>디스크            |
| 06.356 | RING, 1ST & 3RD CLUTCH DISC END PLATE RET<br>링 |
| 06.357 | RING, 1ST & 3RD CLUTCH DISC HUB RETAINER<br>링  |
| 06.434 | SHAFT & GEAR, CLUTCH DRIVE<br>샤프트& 기어          |
| 06.584 | THRUST WASHER, 1ST CLUTCH HUB & DRUM<br>스러스트와셔 |
| 06.585 | BEARING, 1ST GEAR<br>베어링                       |
| 06.586 | GEAR & BEARING, 1ST<br>기어& 베어링                 |
| 06.587 | BEARING, 1ST GEAR<br>베어링                       |
| 08.525 | WASHER, 1ND SPEED GEAR THRUST<br>와셔            |
| 08.526 | WASHER, 1ND SPEED GEAR THRUST<br>와셔            |
| 44.181 | BEARING, CLUTCH SHAFT THRUST<br>베어링            |
| 44.298 | THRUST WASHER, BEARING LOCATOR<br>스러스트와셔       |

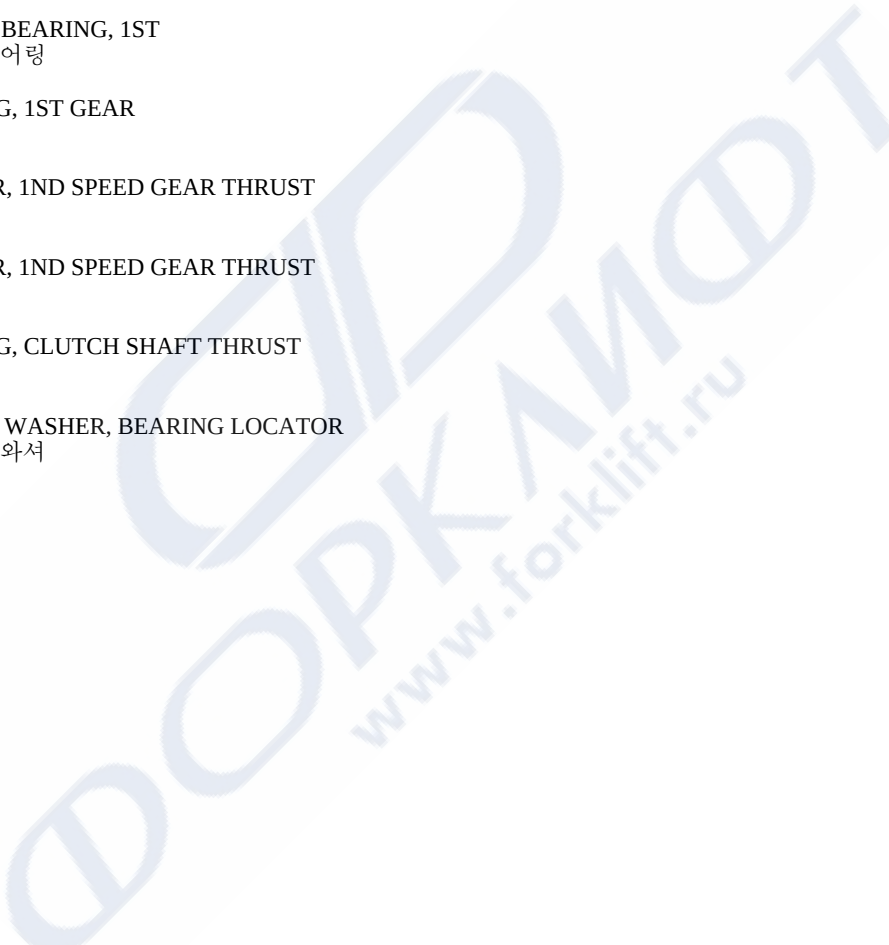 

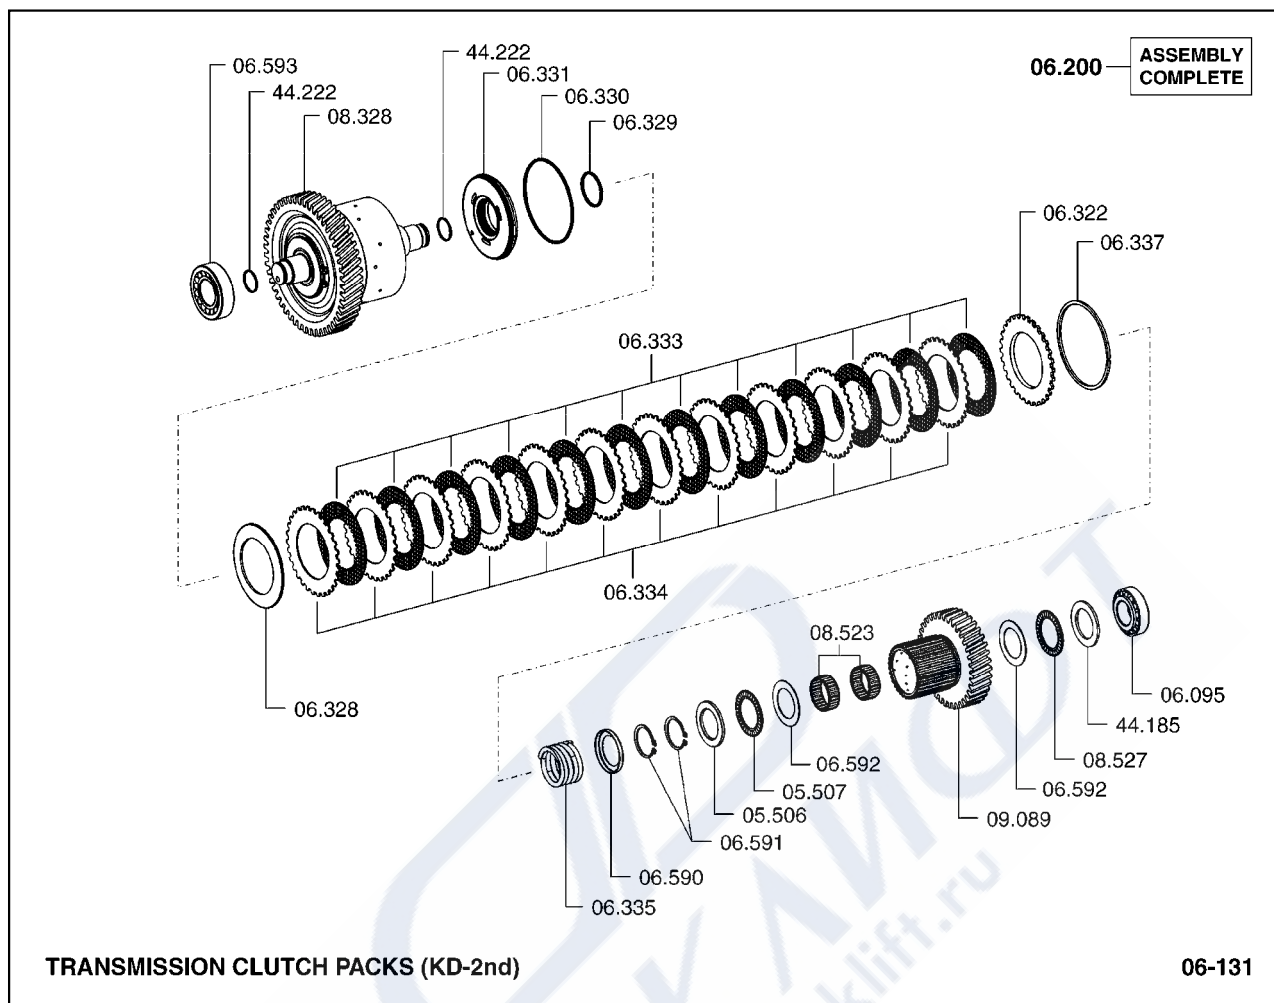 


|        |                                             |
|--------|---------------------------------------------|
| 05.506 | DISC, 3RD CLUTCH-INNER<br>디스크               |
| 05.507 | DISC, 3RD CLUTCH-OUTER<br>디스크               |
| 06.095 | BEARING, SPEED SELECTOR PUSH ROD<br>베어링     |
| 06.200 | TRANSMISSION ASSEMBLY<br>트랜스미션              |
| 06.322 | SHIM KIT, 2ND & 4TH CLUTCH BEARING CAP<br>심 |
| 06.328 | RETAINER, 2ND & 4TH HUB<br>리테이너             |
| 06.329 | SEAL, 2ND & 4TH CLUTCH PISTON INNER<br>셀    |
| 06.330 | SEAL, 2ND & 4TH CLUTCH PISTON OUTER<br>셀    |
| 06.331 | PISTON, 2ND & 4TH CLUTCH<br>피스톤             |

---

|        |                                                    |
|--------|----------------------------------------------------|
| 06.333 | DISC, 2ND & 4TH CLUTCH INNER<br>디스크                |
| 06.334 | DISC, CLUTCH OUTER<br>디스크                          |
| 06.335 | SPRING, 2ND & 4TH CLUTCH DISC RELEASE<br>스프링       |
| 06.337 | RING, 2ND & 4TH CLUTCH DISC END PLATE RET<br>링     |
| 06.590 | RETAINER, 2ND CLUTCH SPRING<br>리테이너                |
| 06.591 | FASTENER, 2ND CLUTCH SPRING RETAINER<br>패스너        |
| 06.592 | THRUST WASHER, 2ND CLUTCH HUB & DRUM<br>스러스트와셔     |
| 06.593 | BEARING, 2ND GEAR<br>베어링                           |
| 08.328 | SHAFT, CLUTCH<br>샤프트                               |
| 08.523 | BEARING, TRANSMISSION 2ND GEAR IDLER NEEDLE<br>베어링 |
| 08.527 | BEARING, 2ND CLUTCH GEAR NEEDLE<br>베어링             |
| 09.089 | GEAR, IDLER<br>기어                                  |
| 44.185 | WASHER, TRANSMISSION CLUTCH THRUST<br>와셔           |
| 44.222 | RETAINER, TRANSMISSION IDLER GEAR<br>리테이너          |

 ---

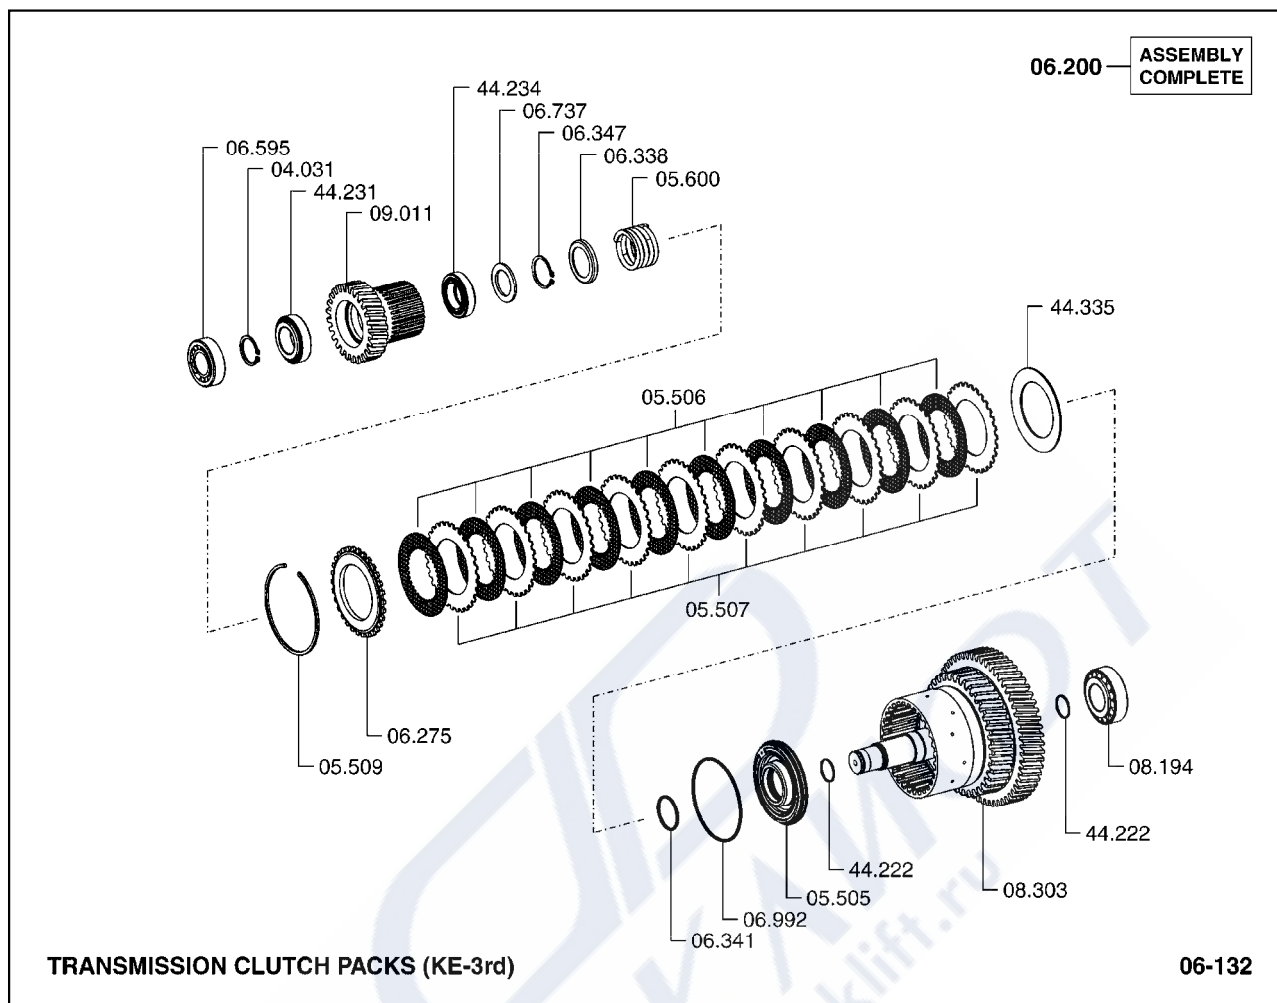


|        |                                               |
|--------|-----------------------------------------------|
| 04.031 | R-RING, CLUTCH COUPLING<br>링                  |
| 05.505 | PISTON, 3RD CLUTCH<br>피스톤                     |
| 05.506 | DISC, 3RD CLUTCH-INNER<br>디스크                 |
| 05.507 | DISC, 3RD CLUTCH-OUTER<br>디스크                 |
| 05.509 | RING, 3RD CLUTCH DISC END PLATE RET<br>링      |
| 05.600 | SPRING, 3RD CLUTCH DISC RELEASE<br>스프링        |
| 06.200 | TRANSMISSION ASSEMBLY<br>트랜스미션                |
| 06.275 | SHIM, OUTPUT SHAFT REAR BEARING RETAINER<br>심 |
| 06.338 | RING, 2ND & 4TH CLUTCH DISC HUB RETAINER<br>링 |



---

|        |                                           |
|--------|-------------------------------------------|
| 06.341 | SEAL, 1ST & 3RD CLUTCH BEARING CAP<br>씰   |
| 06.347 | RETAINER, 1ST & 3RD HUB<br>리테이너           |
| 06.595 | BEARING, 2ND GEAR<br>베어링                  |
| 06.737 | WASHER, 2ND & 4TH CLUTCH DISC HUB<br>와셔   |
| 06.992 | SEAL, CLUTCH SHAFT OIL<br>씰               |
| 08.194 | BEARING, OUTPUT SHAFT 3RD GEAR<br>베어링     |
| 08.303 | SHAFT, CLUTCH STUB<br>샤프트                 |
| 09.011 | GEAR, IDLER<br>기어                         |
| 44.222 | RETAINER, TRANSMISSION IDLER GEAR<br>리테이너 |
| 44.231 | BEARING, CLUTCH HUB & DRUM<br>베어링         |
| 44.234 | BEARING, CLUTCH HUB & DRUM<br>베어링         |
| 44.335 | RETAINER, 3RD CLUTCH SPRING<br>리테이너       |



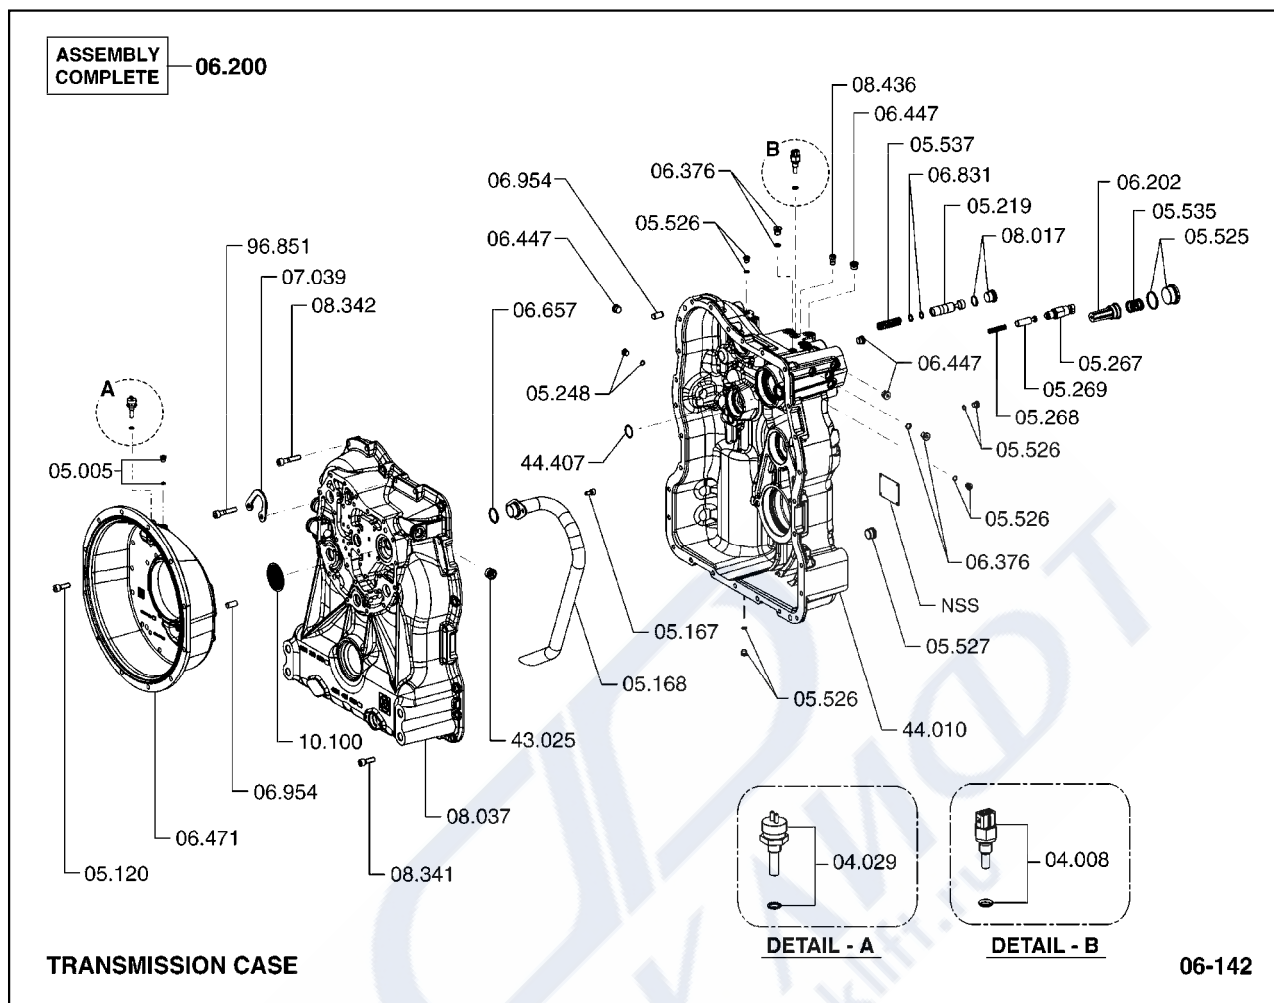 


|        |                                                        |        |                                                         |
|--------|--------------------------------------------------------|--------|---------------------------------------------------------|
| 04.008 | SENSOR, TRANSMISSION FLUID TEMPERATURE<br>센서           | 05.537 | SPRING, CONVERTER PRESSURE REGULATING VALVE RETU<br>스프링 |
| 04.029 | SENSOR, TRANSMISSION FLUID TEMPERATURE AFTER CON<br>센서 | 06.200 | TRANSMISSION ASSEMBLY<br>트랜스미션                          |
| 05.005 | PLUG, TORQUE CONVERTER DRAIN<br>플러그                    | 06.202 | STRAINER, TRANSMISSION SUMP<br>스트레이너                    |
| 05.120 | FASTENER, CONVERTER TO CASE<br>패스너                     | 06.376 | PLUG, TRANSMISSION CASE FILLER<br>플러그                   |
| 05.167 | FASTENER, CONVERTER PUMP INLET LINE<br>패스너             | 06.447 | PLUG, TRANSMISSION CASE<br>플러그                          |
| 05.168 | LINE, CONVERTER PUMP INLET<br>라인                       | 06.471 | HOUSING, CONVERTER<br>하우징                               |
| 05.219 | PISTON, PRESSURE REGULATING VALVE<br>피스톤               | 06.657 | SEAL, TRANS VALVE PRESS PUMP INLET LINE<br>씰            |
| 05.248 | SEAL, TORQUE CONVETER PRESSURE CHECK<br>씰              | 06.831 | SEAL, PRESSURE REGULATING VALVE STOP<br>씰               |
| 05.267 | SWITCH, TRANSMISSION CASE BYPASS<br>스위치                | 06.954 | DOWEL, TRANSMISSION CASE TO CONVERTER<br>다웰             |
| 05.268 | SPRING, TRANSMISSION CASE BYPASS SWITCH<br>스프링         | 07.039 | BRACKET, TRANSMISSION MOUNTING<br>브라켓                   |
| 05.269 | PISTON, TRANSMISSION CASE BYPASS SWITCH<br>피스톤         | 08.017 | PLUG, TRANSMISSION FILLER<br>플러그                        |
| 05.525 | PLUG, TRANSMISSION CASE<br>플러그                         | 08.037 | CASE, TRANSMISSION<br>케이스                               |
| 05.526 | PLUG, TRANSMISSION CASE<br>플러그                         | 08.341 | FASTENER, TRANSMISSION CASE TO CLUTCH HOUSING<br>패스너    |
| 05.527 | PLUG, TRANSMISSION CASE<br>플러그                         | 08.342 | FASTENER, TRANSMISSION CASE TO CLUTCH HOUSING<br>패스너    |
| 05.535 | SPRING, CONVERTER LUBE REGULATOR VALVE<br>스프링          | 08.436 | BREATHING, CLUTCH HOUSING<br>브리더                        |

---

|        |                                   |
|--------|-----------------------------------|
| 10.100 | FILTER, TRANSMISSION OIL<br>필터    |
| 43.025 | PLUG, DRIVE PUMP HOUSING<br>플러그   |
| 44.010 | CASE, TRANSMISSION<br>케이스         |
| 44.407 | SEAL, TRANSMISSION CASE PLUG<br>씰 |
| 96.851 | FASTENER, INSPECTION PLATE<br>패스너 |




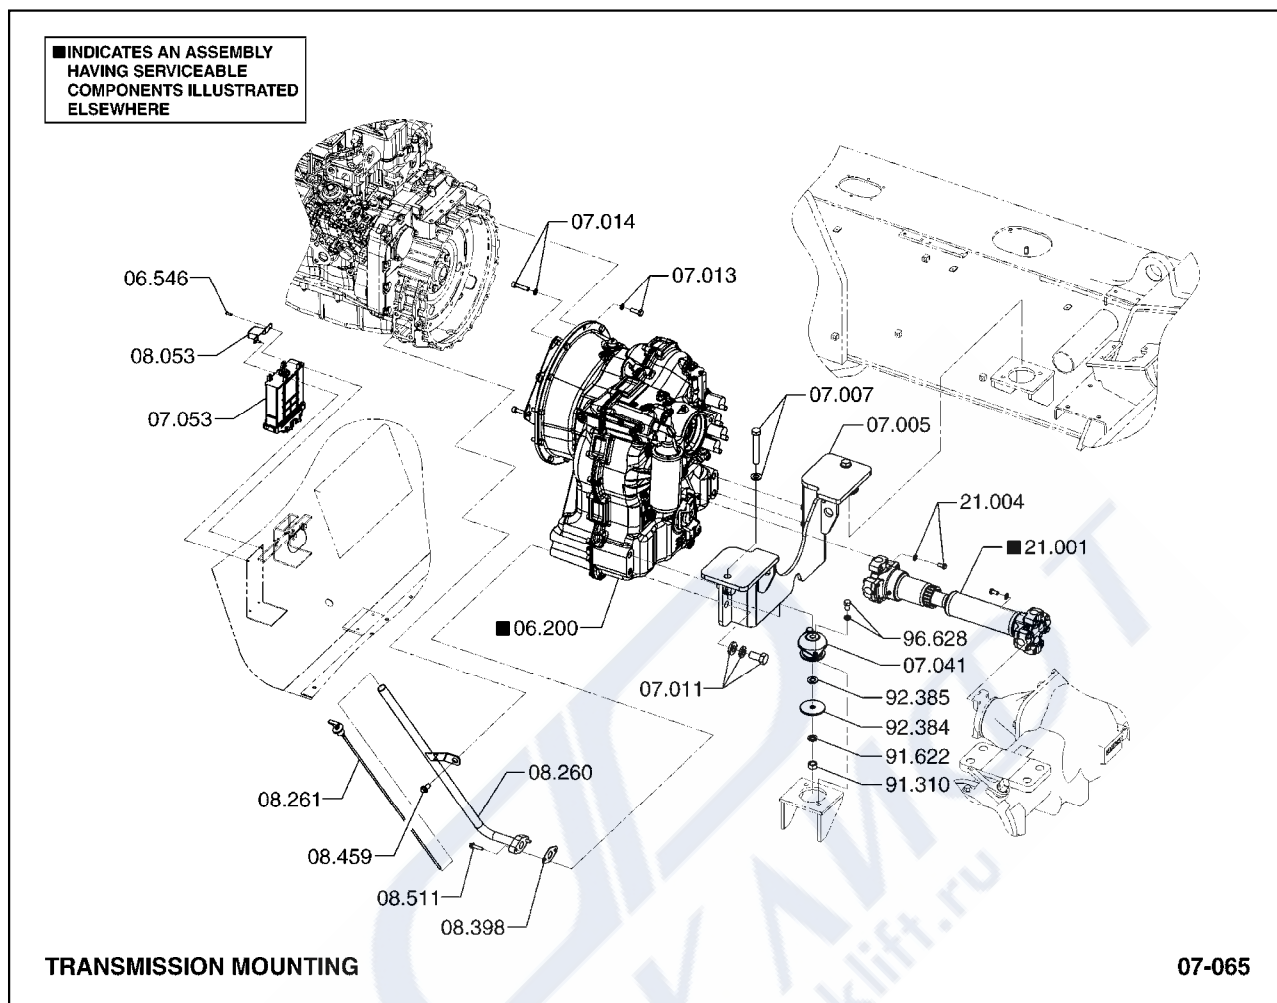 


|        |                                                   |
|--------|---------------------------------------------------|
| 06.200 | TRANSMISSION ASSEMBLY<br>트랜스미션                    |
| 06.546 | FASTENER, CONTROL COVER PLATE<br>패스너              |
| 07.005 | BRACKET, TRANSMISSION MOUNTING LH<br>브라켓          |
| 07.007 | FASTENER, TRANSMISSION MOUNTING BRACKET LH<br>패스너 |
| 07.011 | FASTENER, TRANSMISSION MOUNTING BRACKET LH<br>패스너 |
| 07.013 | FASTENER, TRANSMISSION TO ENGINE<br>패스너           |
| 07.014 | FASTENER, TRANSMISSION TO ENGINE<br>패스너           |
| 07.041 | DAMPENER, TRANSMISSION MOUNTING VIBRATION<br>댐프너  |
| 07.053 | TRANSMISSION CONTROL UNIT<br>트랜스미션컨트롤유닛           |

---

|        |                                                            |
|--------|------------------------------------------------------------|
| 08.053 | COVER, TRANSMISSION - SIDE<br>커버                           |
| 08.260 | TUBE, TRAN OIL LEVEL DIPSTICK SUPPORT<br>튜브                |
| 08.261 | DIPSTICK, TRANSMISSION OIL LEVEL<br>딥스틱                    |
| 08.398 | SEAL, TRANSMISSION DIPSTICK SUPPORT<br>씰                   |
| 08.459 | FASTENER, TRANSMISSION DIPSTICK TUBE CLIP<br>패스너           |
| 08.511 | FASTENER, TRANSMISSION DIPSTICK TUBE MOUNTING BRAC<br>패스너  |
| 21.001 | SHAFT ASSEMBLY, TRANSMISSION TO AXLE PROPELLER<br>샤프트      |
| 21.004 | FASTENER, PROPELLER SHAFT<br>패스너                           |
| 91.310 | NUT, TRANS MOUNTING BRACKET FASTENER (LH)<br>너트            |
| 91.622 | LOCKWASHER, TRANSMISSION MOUNTING BRACKET FASTENER<br>로크와셔 |
| 92.384 | WASHER, TRANSMISSION MOUNTING BRACKET TO FRAME FAS<br>와셔   |
| 92.385 | WASHER, TRANSMISSION MOUNTING BRACKET TO FRAME FAS<br>와셔   |
| 96.628 | FASTENER, VIBRATION DAMPENER MOUNT<br>패스너                  |

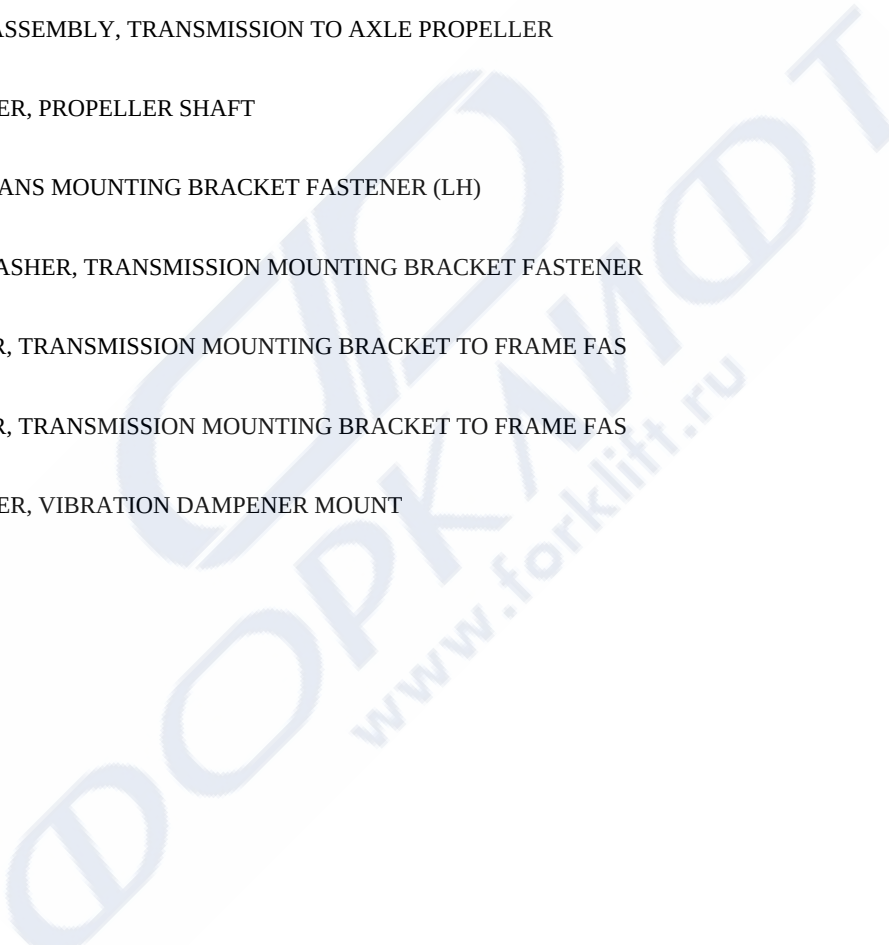 


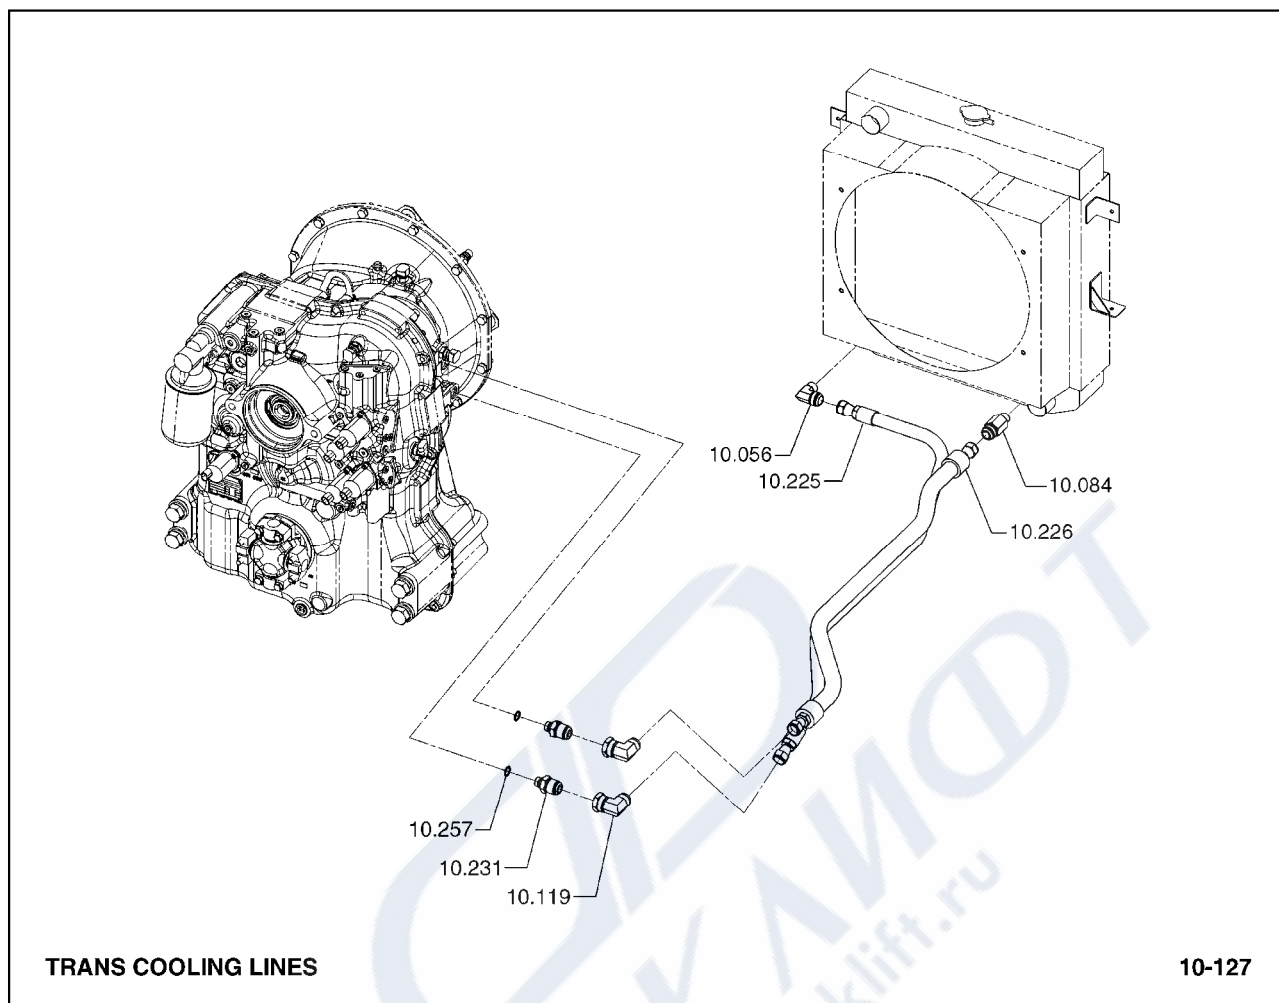 


TRANS COOLING LINES

10-127

|        |                                                   |
|--------|---------------------------------------------------|
| 10.056 | FITTING, COOLER OUTLET<br>피팅                      |
| 10.084 | FITTING, COOLER INLET LINE<br>피팅                  |
| 10.119 | FITTING, TRANSMISSION COOLER INLET LINE<br>피팅     |
| 10.225 | LINE, OIL COOLING<br>라인                           |
| 10.226 | LINE, OIL COOLING<br>라인                           |
| 10.231 | FITTING, OIL COOLING LINES<br>피팅                  |
| 10.257 | SEAL, TRANSMISSION COOLER INLET LINE FITTING<br>셀 |

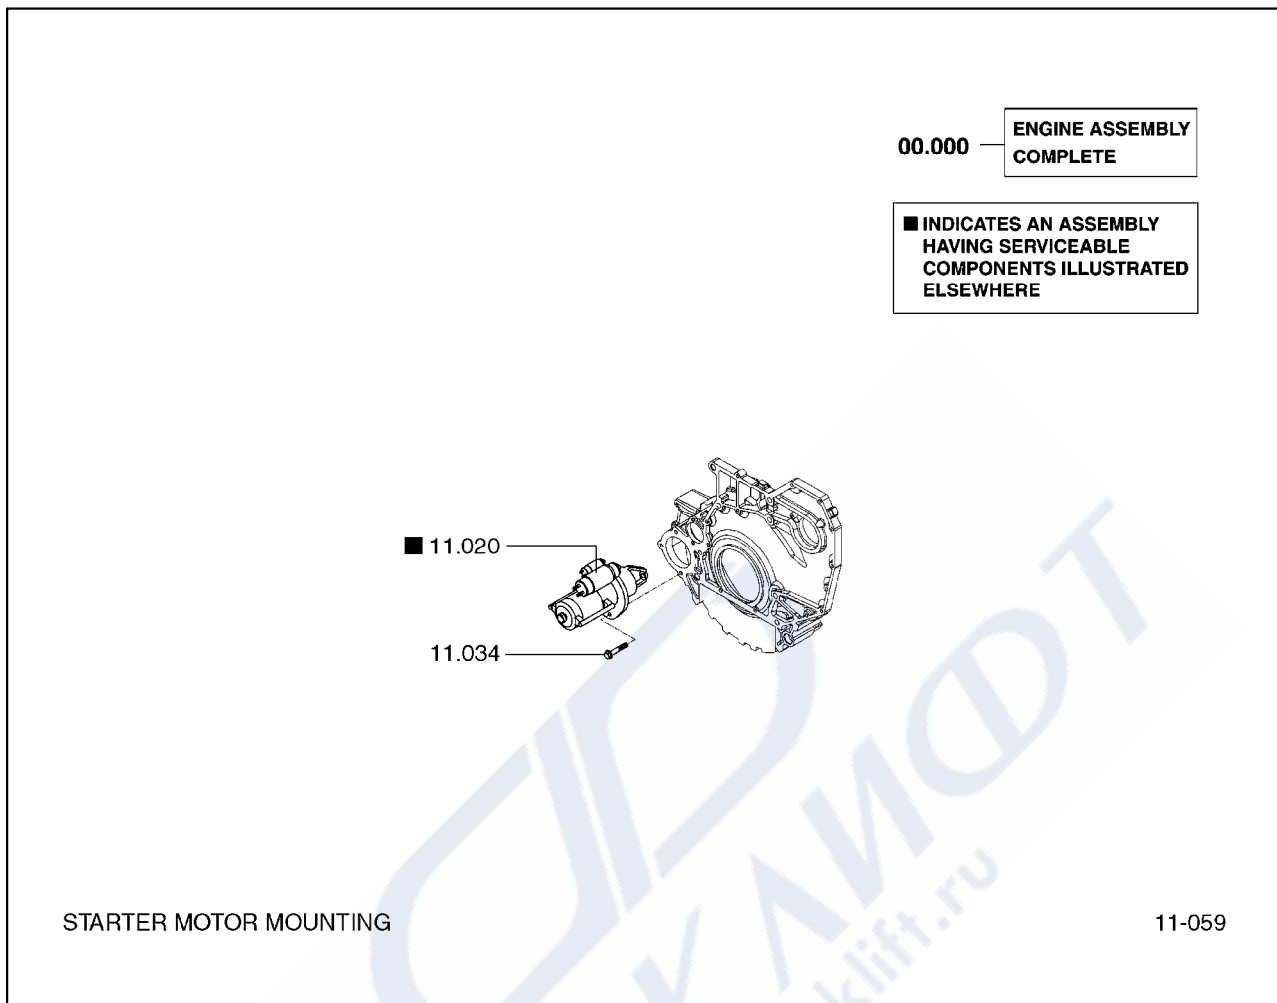 

|        |                                  |
|--------|----------------------------------|
| 00.000 | PRODUCTION ENGINE ASSEMBLY<br>엔진 |
| 11.020 | MOTOR ASSEMBLY, STARTING<br>모터   |
| 11.034 | FASTENER, STARTING MOTOR<br>패스너  |

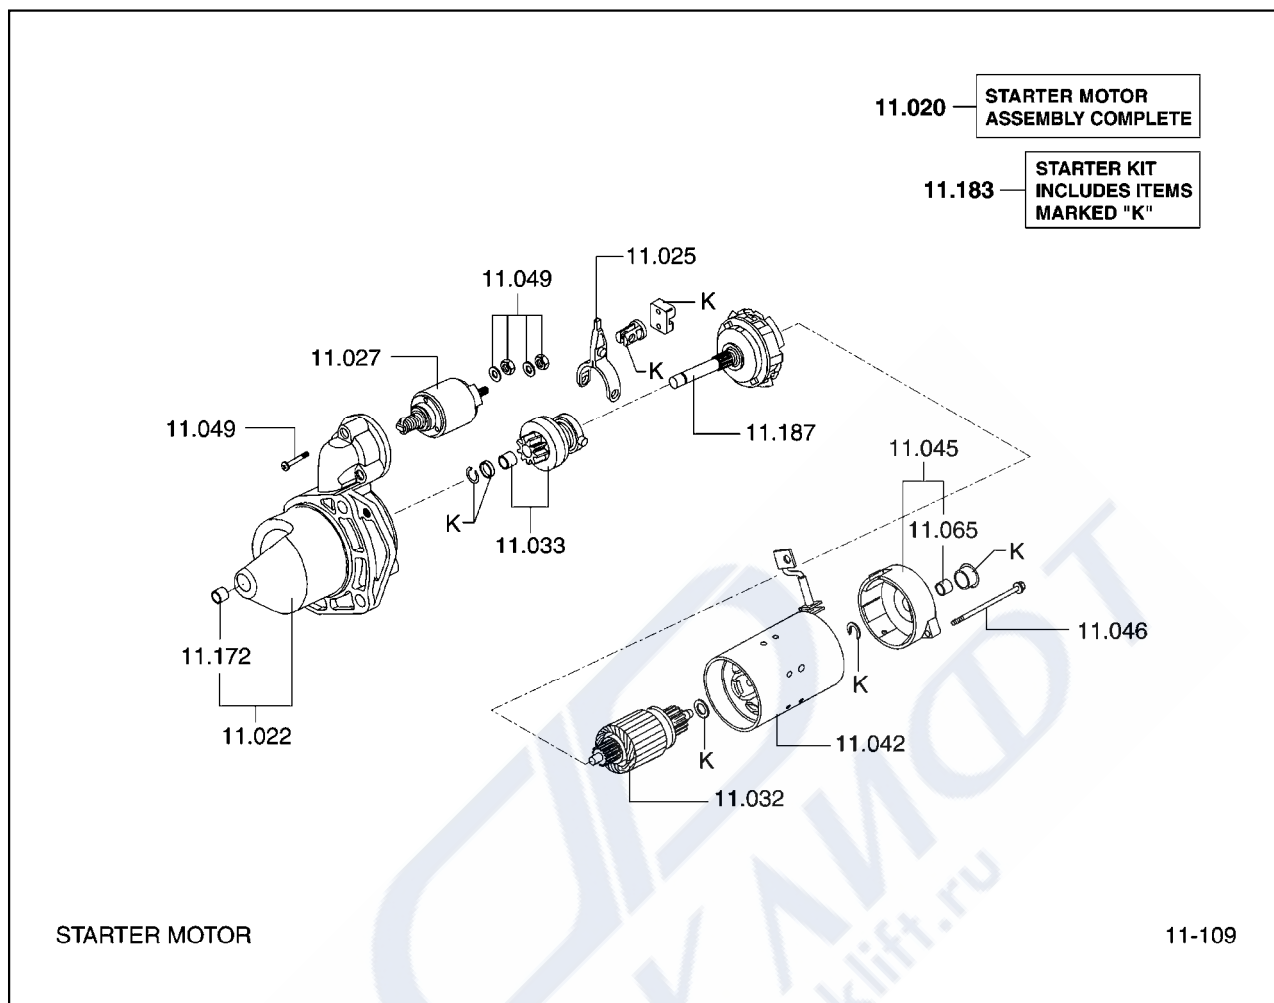 


|        |                                          |
|--------|------------------------------------------|
| 11.020 | MOTOR ASSEMBLY, STARTING<br>모터           |
| 11.022 | HOUSING & BUSHING, DRIVE END<br>하우징 & 부싱 |
| 11.025 | LEVER, DRIVE SHIFT FORK<br>레버            |
| 11.027 | SWITCH, SOLENOID<br>스위치                  |
| 11.032 | ARMATURE, STARTING MOTOR<br>아마츄어         |
| 11.033 | DRIVE ASSEMBLY, STARTING MOTOR<br>드라이브   |
| 11.042 | BRUSH HOLDER & BRUSH (KIT)<br>브러쉬홀더      |
| 11.045 | FRAME, COMMUTATOR END<br>프레임             |
| 11.046 | FASTENER, THRU<br>패스너                    |



---

|        |                                        |
|--------|----------------------------------------|
| 11.049 | FASTENER, STARTING MOTOR<br>패스너        |
| 11.065 | BEARING, COMMUTATOR END FRAME<br>베어링   |
| 11.172 | BEARING, CRANKING MOTOR CENTER<br>베어링  |
| 11.183 | KIT, CRANKING MOTOR DRIVE PINION<br>키트 |
| 11.187 | GEAR, STARTER REDUCTION INTERNAL<br>기어 |

 **ALTERNATOR ASSEMBLY  
COMPLETE** — 12.200

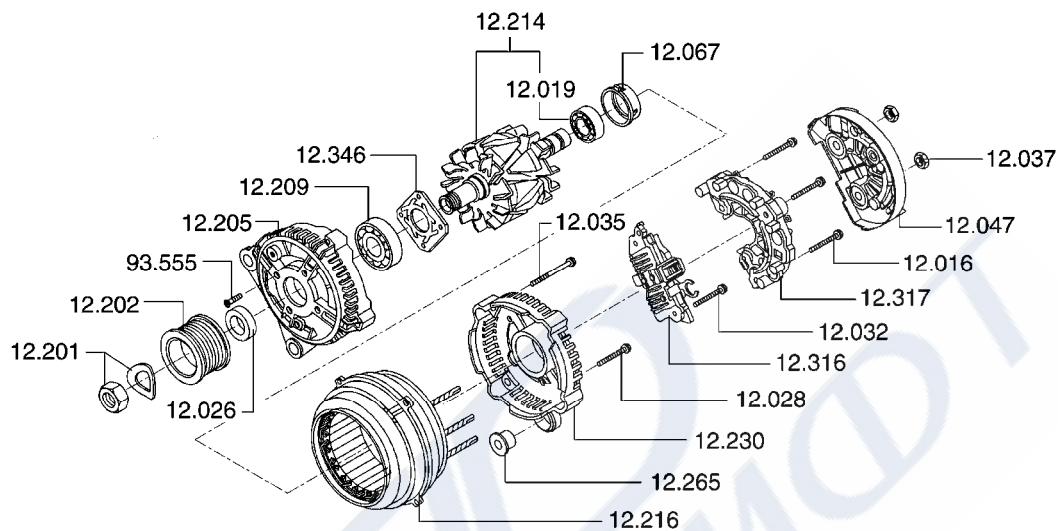


ALTERNATOR

12-088

|        |                                                    |
|--------|----------------------------------------------------|
| 12.016 | FASTENER, GENERATOR THRU<br>패스너                    |
| 12.019 | BEARING, GENERATOR DRIVE END<br>베어링                |
| 12.026 | COLLAR, GENERATOR DRIVE END<br>칼라                  |
| 12.028 | FASTENER, GENERATOR POLE SHOE<br>패스너               |
| 12.032 | FASTENER, GENERATOR DRIVE END BRG RET PLATE<br>패스너 |
| 12.035 | FASTENER, GENERATOR ARMATURE TERM WIRE<br>패스너      |
| 12.037 | FASTENER, GENERATOR FIELD TERMINAL WIRE<br>패스너     |
| 12.047 | FRAME, GENERATOR COMMUTATOR END<br>프레임             |
| 12.067 | RING, BEARING LOCATOR<br>링                         |

|        |                                                     |
|--------|-----------------------------------------------------|
| 12.200 | ALTERNATOR ASSEMBLY<br>알터네이터                        |
| 12.201 | FASTENER, ALTERNATOR PULLEY TO SHAFT<br>패스너         |
| 12.202 | PULLEY, ALTERNATOR<br>폴리                            |
| 12.205 | FRAME, ALTERNATOR DRIVE END<br>프레임                  |
| 12.209 | BEARING, ALTERNATOR DRIVE END<br>베어링                |
| 12.214 | ROTOR ASSEMBLY, ALTERNATOR<br>로터                    |
| 12.216 | STATOR ASSEMBLY, ALTERNATOR<br>스테이터                 |
| 12.230 | FRAME, ALTERNATOR SLIP RING END<br>프레임              |
| 12.265 | BUSHING, RECTIFIER INSULATOR<br>부싱                  |
| 12.316 | REGULATOR, ALTERNATOR VOLTAGE OUTPUT<br>레귤레이터       |
| 12.317 | RECTIFIER ASSEMBLY, ALTERNATOR<br>정류기               |
| 12.346 | RETAINER, ALTERNATOR DRIVE END BEARING<br>리테이너      |
| 93.555 | FASTENER, ALTERNATOR RECTIFIER HOUSING COVER<br>패스너 |

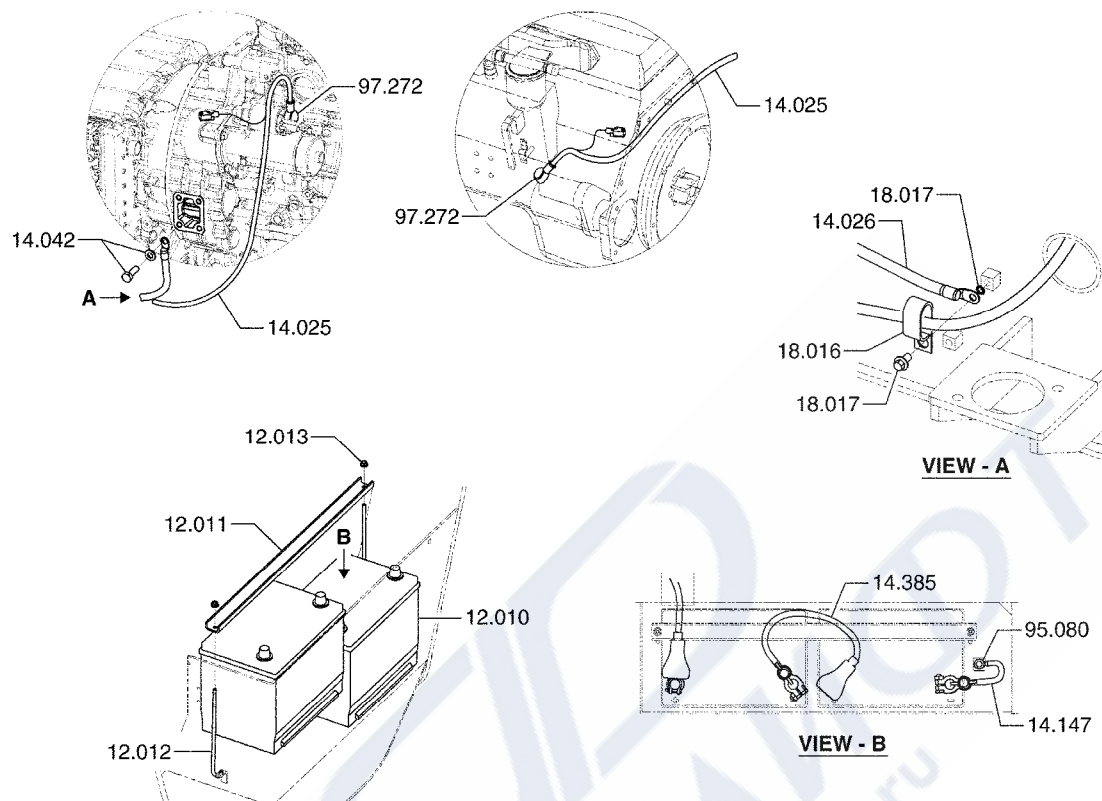 


**BATTERY MOUNTING**

**12-268**


|        |                                               |
|--------|-----------------------------------------------|
| 12.010 | BATTERY<br>배터리                                |
| 12.011 | CLAMP, BATTERY HOLD DOWN<br>클램프               |
| 12.012 | STUD, BATTERY HOLD DOWN<br>스터드                |
| 12.013 | FASTENER, BATTERY HOLD DOWN (AT CLAMP)<br>패스너 |
| 14.025 | CABLE, BATTERY TO STARTER<br>케이블              |
| 14.026 | CABLE, BATTERY GROUND<br>케이블                  |
| 14.042 | FASTENER, BATTERY GROUND CABLE<br>패스너         |
| 14.147 | CABLE, BATTERY NEGATIVE<br>케이블                |
| 14.385 | CABLE, BATTERY TO BATTERY<br>케이블              |
 
|        |                                          |
|--------|------------------------------------------|
| 18.016 | CLIP, CABLE<br>클립                        |
| 18.017 | FASTENER, CABLE CLIP<br>패스너              |
| 95.080 | FASTENER, BATTERY CABLE<br>패스너           |
| 97.272 | FASTENER, CABLE & WIRE TO STARTER<br>패스너 |




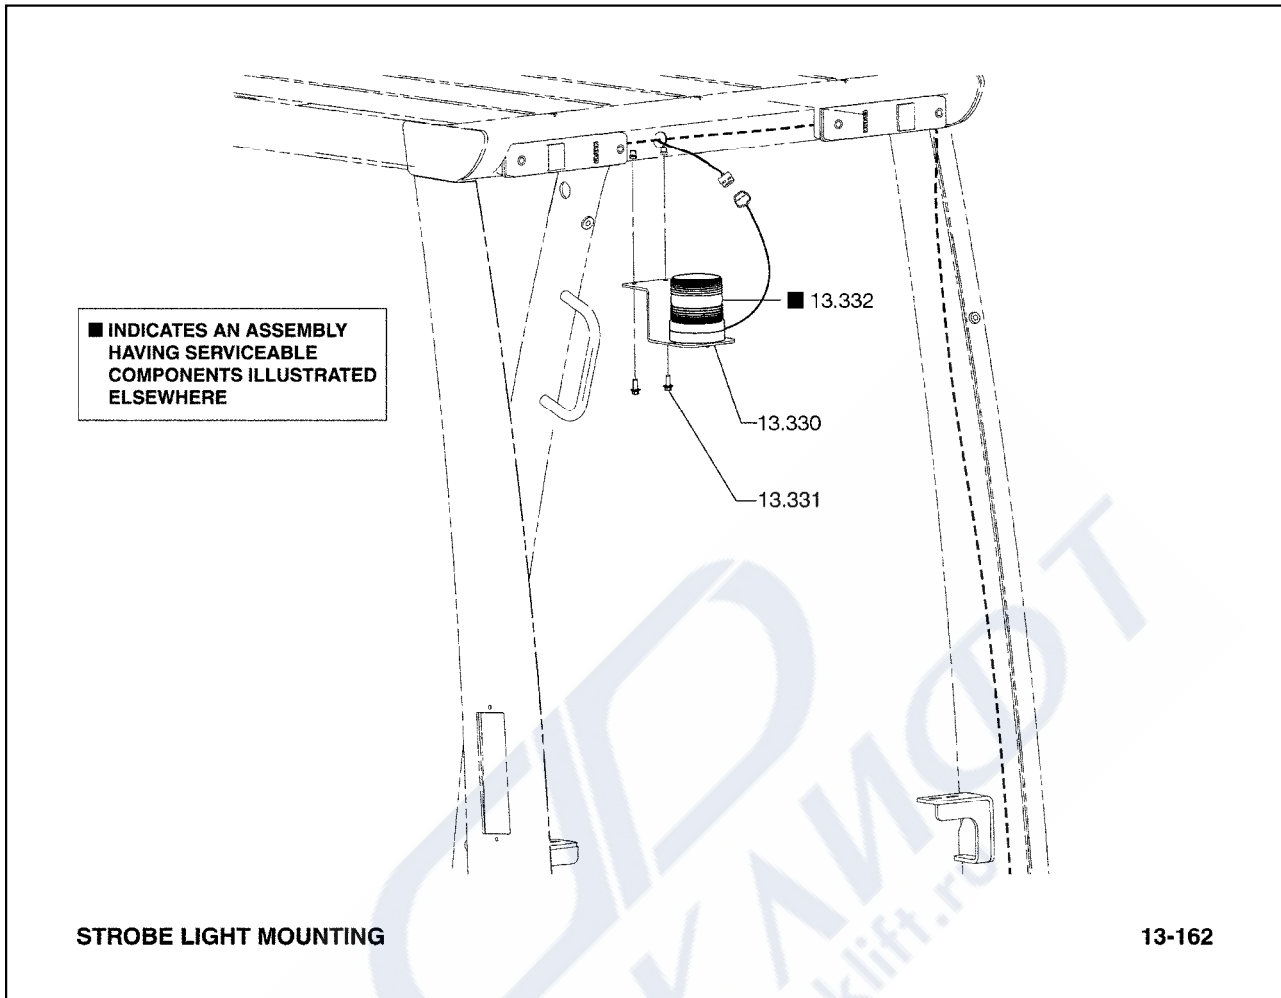

- |        |                                        |
|--------|----------------------------------------|
| 13.330 | BRACKET, WARNING LIGHT<br>브라켓          |
| 13.331 | FASTENER, WARNING LIGHT BRACKET<br>패스너 |
| 13.332 | ASSEMBLY, WARNING LIGHT<br>경고등         |

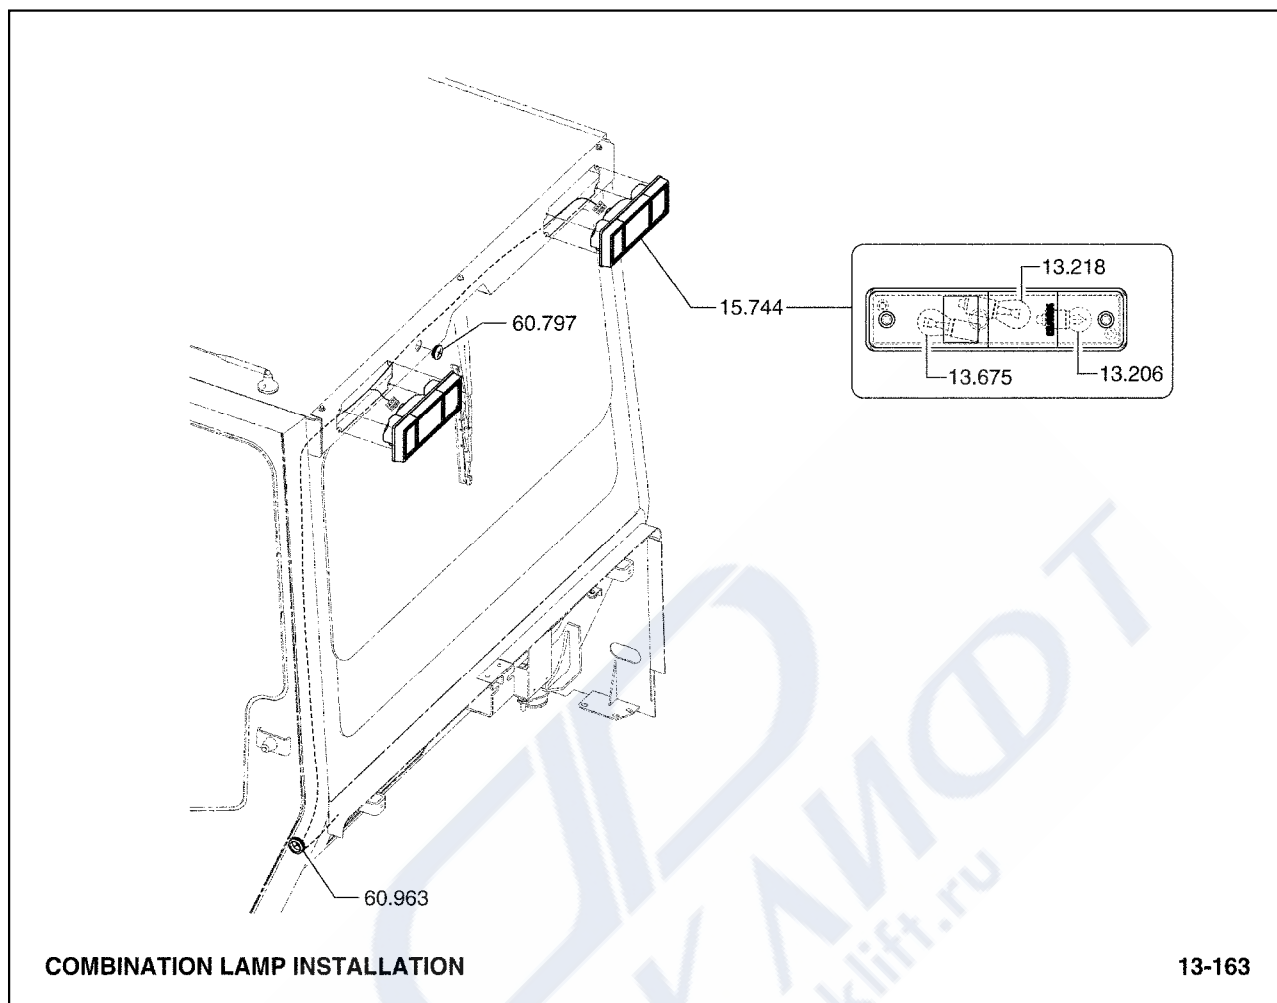 


|        |                                              |
|--------|----------------------------------------------|
| 13.206 | BULB, BACK-UP LAMP<br>전구                     |
| 13.218 | BULB, STOP & TAIL LAMP<br>전구                 |
| 13.675 | BULB, TURN LIGHT<br>전구                       |
| 15.744 | LAMP ASSEMBLY, COMBINATION STOP & TAIL<br>램프 |
| 60.797 | GROMMET, REAR ACCESSORY WIRE<br>그롬멧          |
| 60.963 | GROMMET, REAR ACCESSORY WIRING<br>그로멧        |

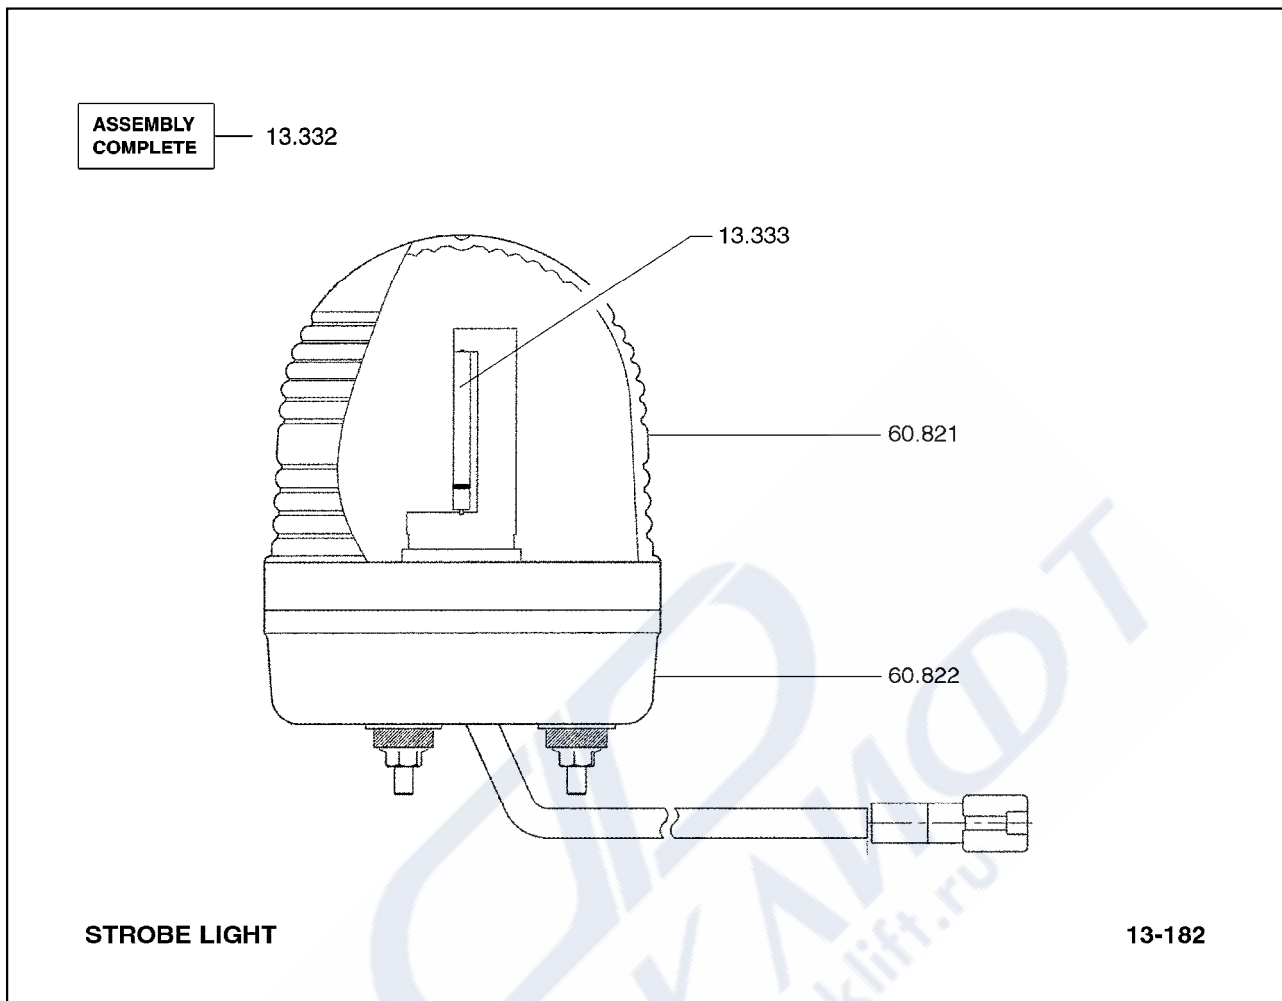 

|        |                                |
|--------|--------------------------------|
| 13.332 | ASSEMBLY, WARNING LIGHT<br>경고등 |
| 13.333 | BULB, WARNING LIGHT<br>전구      |
| 60.821 | GLOBE, STROBE LIGHT<br>글로브     |
| 60.822 | BASE, STROBE LIGHT<br>베이스      |



 
■ INDICATES AN ASSEMBLY  
HAVING SERVICEABLE  
COMPONENTS ILLUSTRATED  
ELSEWHERE

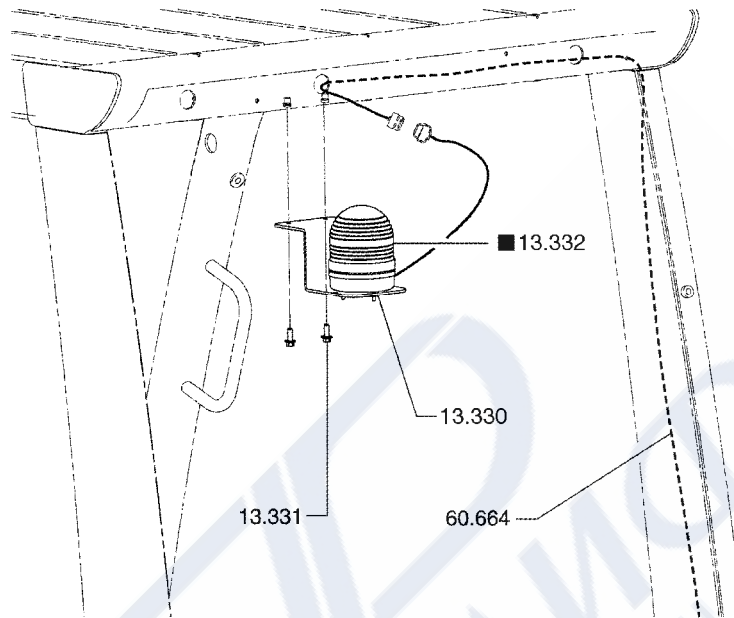

STROBE LIGHT MOUNTING

13-183


|        |                                        |
|--------|----------------------------------------|
| 13.330 | BRACKET, WARNING LIGHT<br>브라켓          |
| 13.331 | FASTENER, WARNING LIGHT BRACKET<br>패스너 |
| 13.332 | ASSEMBLY, WARNING LIGHT<br>경고등         |
| 60.664 | HARNESS, WARNING DEVICE<br>하네스         |

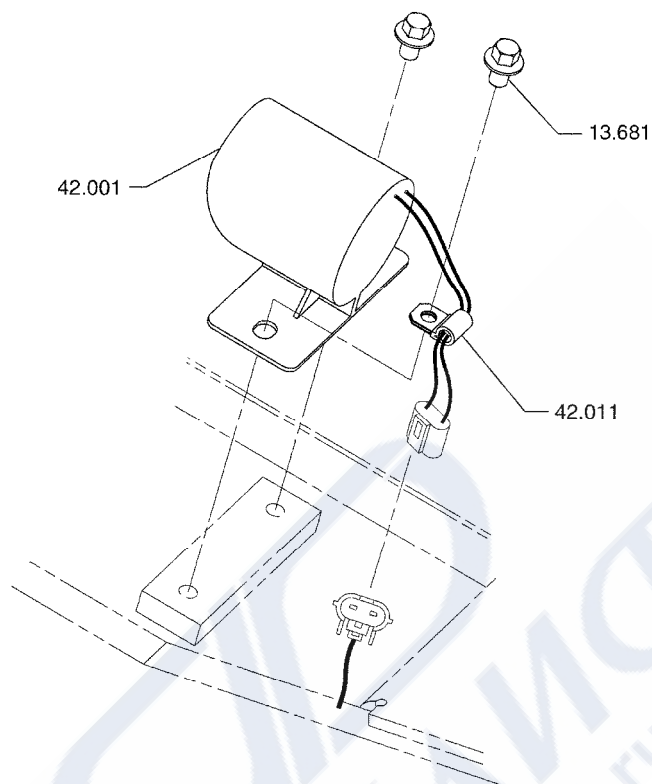 

**BACK-UP ALARM INSTALLATION**

**13-228**

 
- |        |                                            |
|--------|--------------------------------------------|
| 13.681 | FASTENER, WARNING DEVICE<br>패스너            |
| 42.001 | WARNING DEVICE, AUDIBLE (AIR OPER)<br>경고장치 |
| 42.011 | CLIP, AUDIBLE WARNING DEVICE CABLE<br>클립   |

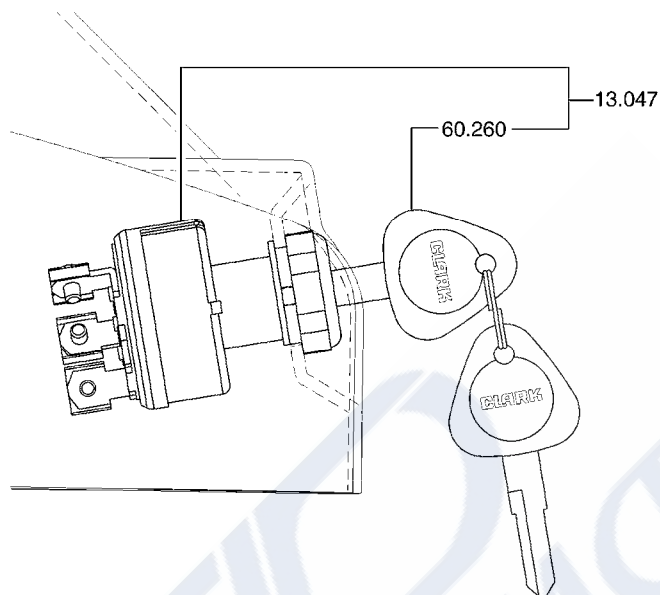


KEY SWITCH INSTALLATION

13-292

- |        |                                  |
|--------|----------------------------------|
| 13.047 | SWITCH, CIRCUIT LOCKING<br>스위치   |
| 60.260 | KEY, CIRCUIT LOCKING SWITCH<br>키 |

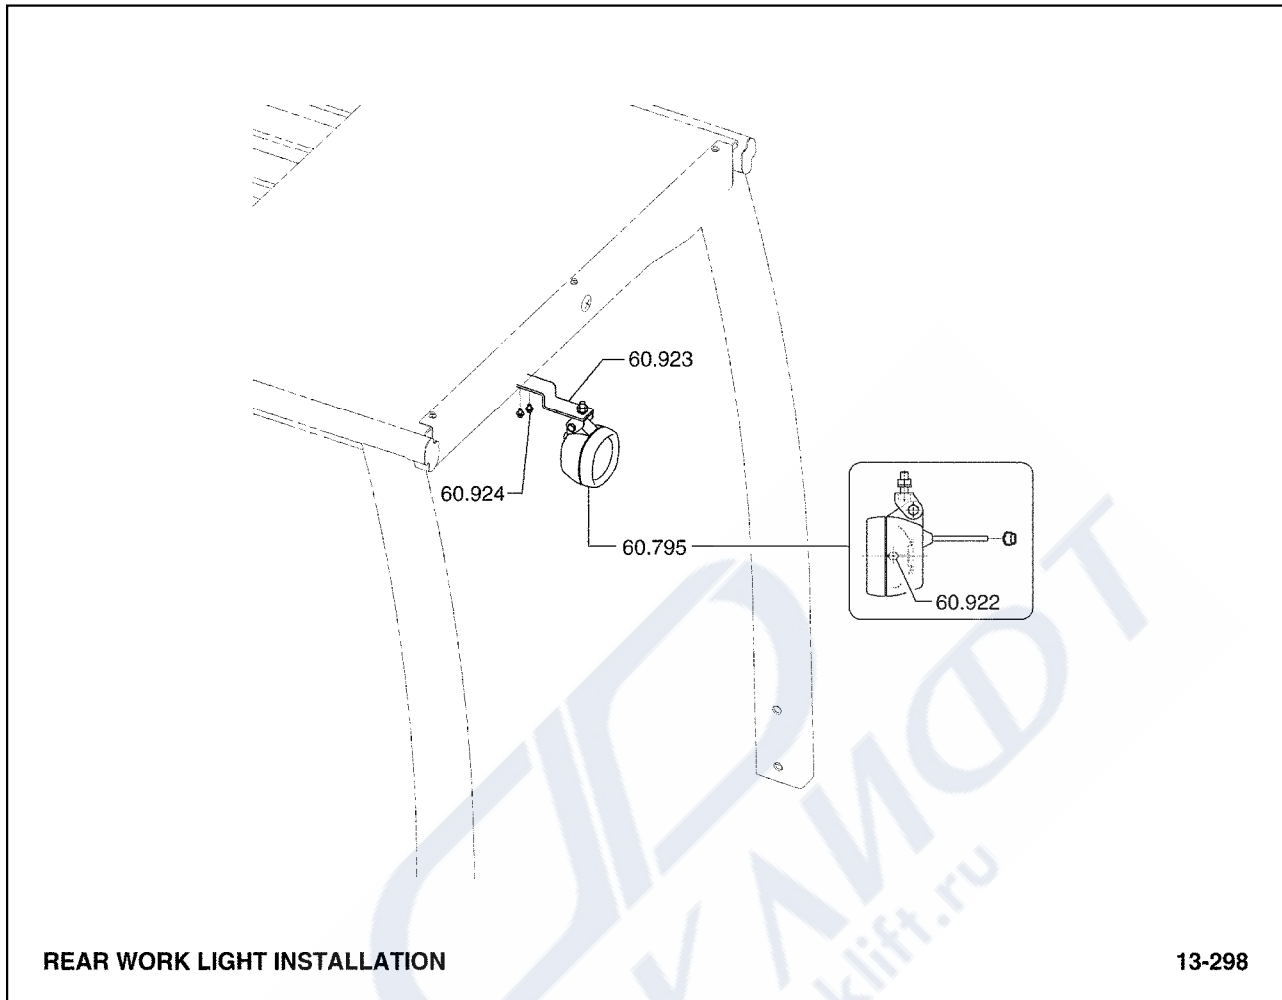 


- |        |                                          |
|--------|------------------------------------------|
| 60.795 | LIGHT, REAR WORK<br>라이트                  |
| 60.922 | BULB, REAR WORK LAMP<br>전구               |
| 60.923 | BRACKET, REAR WORK LAMP MOUNTING<br>브라켓  |
| 60.924 | FASTENER, REAR WORK LAMP MOUNTING<br>패스너 |

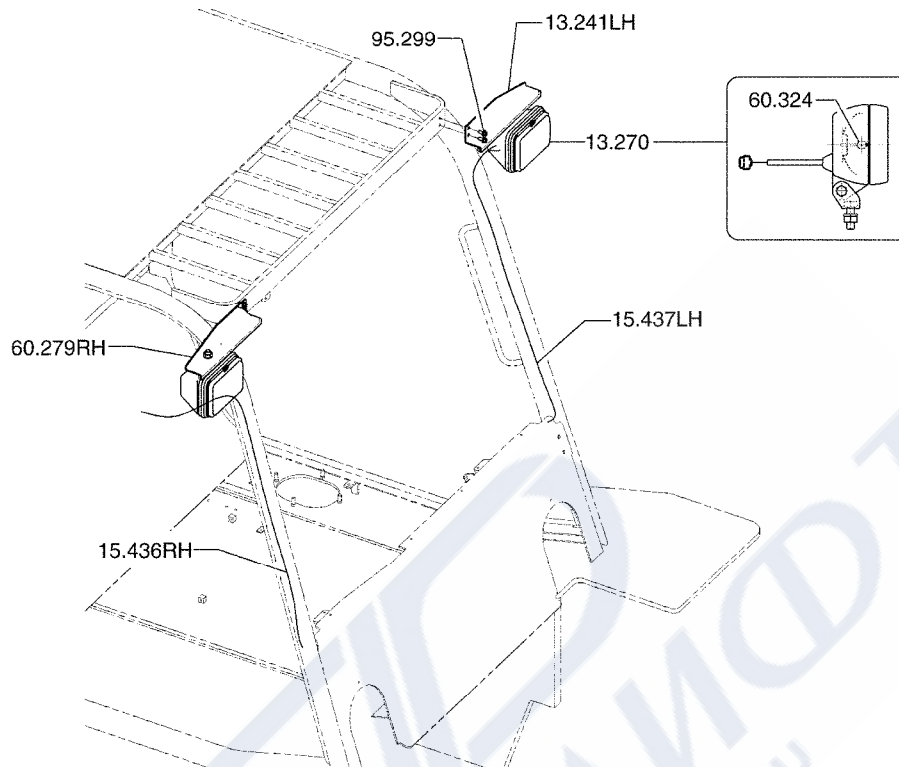 

HEAD LAMP INSTALLATION

13-300


|        |                                    |
|--------|------------------------------------|
| 13.241 | BRACKET, HEAD LAMP<br>브라켓          |
| 13.270 | HEADLAMP, ADJUSTABLE<br>헤드램프       |
| 15.436 | HARNESS, RH HEADLAMP WIRING<br>하네스 |
| 15.437 | HARNESS, HEADLAMP WIRING<br>하네스    |
| 60.279 | BRACKET, HEADLAMP<br>브라켓           |
| 60.324 | BULB, HEADLAMP<br>전구               |
| 95.299 | FASTENER, HEADLAMP GUARD<br>패스너    |

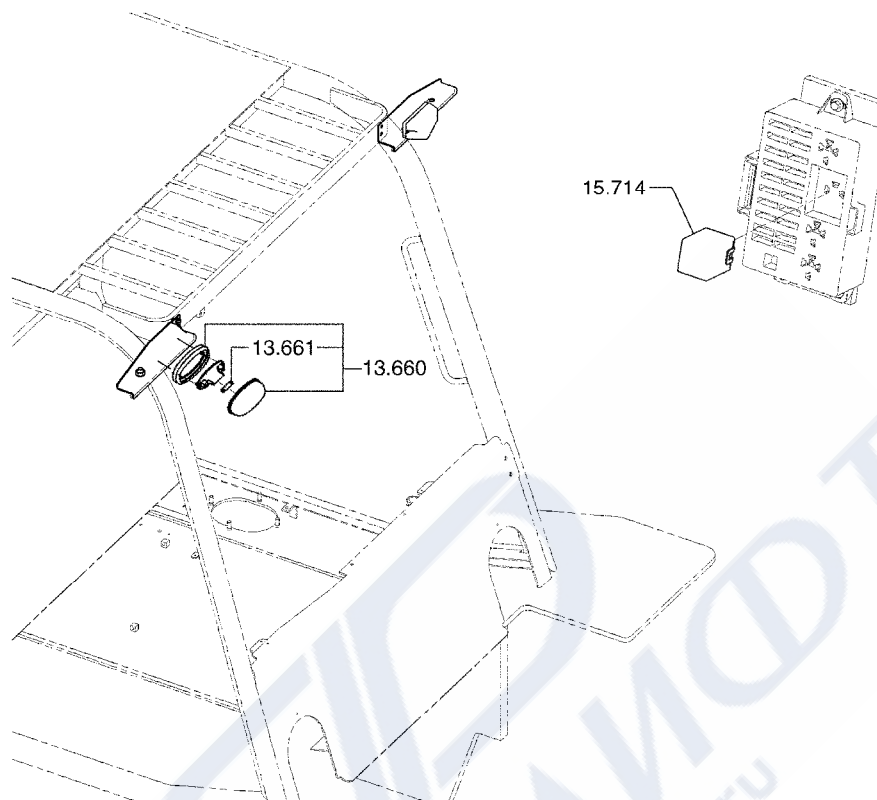 

**SIGNAL LIGHT INSTALLATION**

**13-302**

 
- |        |                               |
|--------|-------------------------------|
| 13.660 | LIGHT, TURN SIGNAL<br>라이트     |
| 13.661 | BULB, TURN SIGNAL LIGHT<br>전구 |
| 15.714 | FLASHER, UNIT<br>플래셔          |

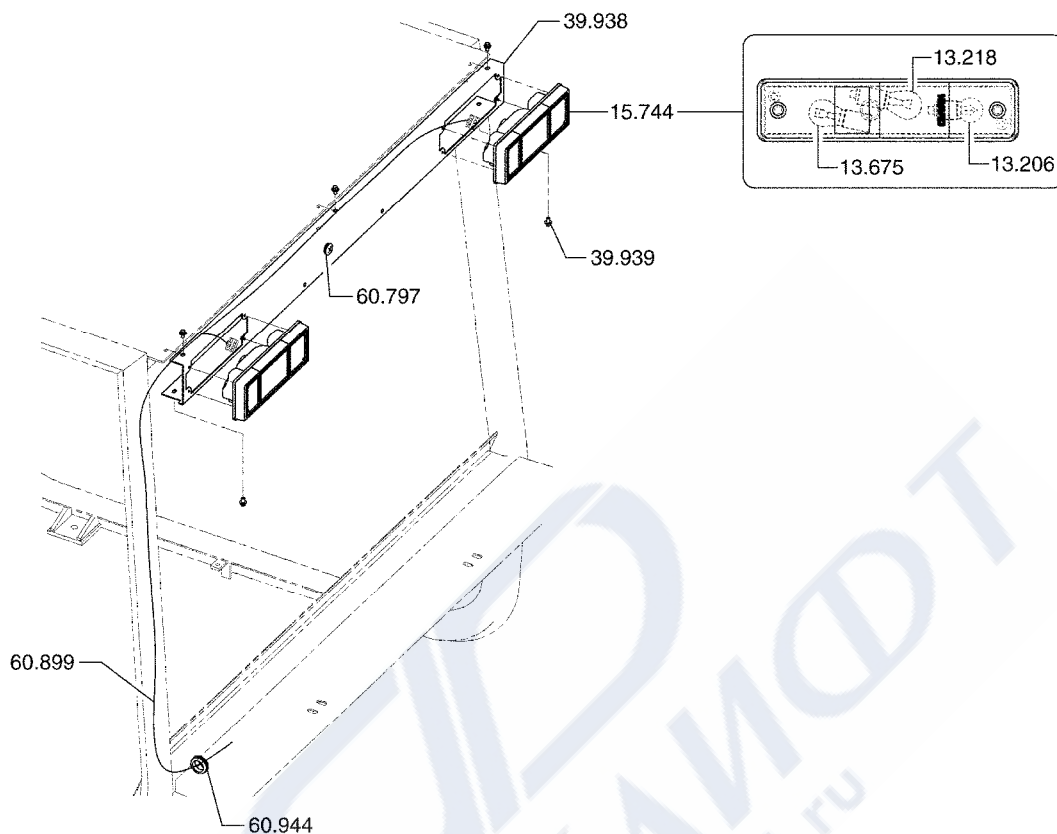

COMBINATION LAMP INSTALLATION

13-304

|        |                                                      |
|--------|------------------------------------------------------|
| 13.206 | BULB, BACK-UP LAMP<br>전구                             |
| 13.218 | BULB, STOP & TAIL LAMP<br>전구                         |
| 13.675 | BULB, TURN LIGHT<br>전구                               |
| 15.744 | LAMP ASSEMBLY, COMBINATION STOP & TAIL<br>램프         |
| 39.938 | BRACKET, OVERHEAD GUARD REAR SUPPORT<br>브라켓          |
| 39.939 | FASTENER, OVERHEAD GUARD REAR SUPPORT BRACKET<br>패스너 |
| 60.797 | GROMMET, REAR ACCESSORY WIRE<br>그롬멧                  |
| 60.899 | WIRING HARNESS, REAR ACCESSORY<br>와이어하네스             |
| 60.944 | GROMMET, ACCESSORY HARNESS<br>그로멧                    |

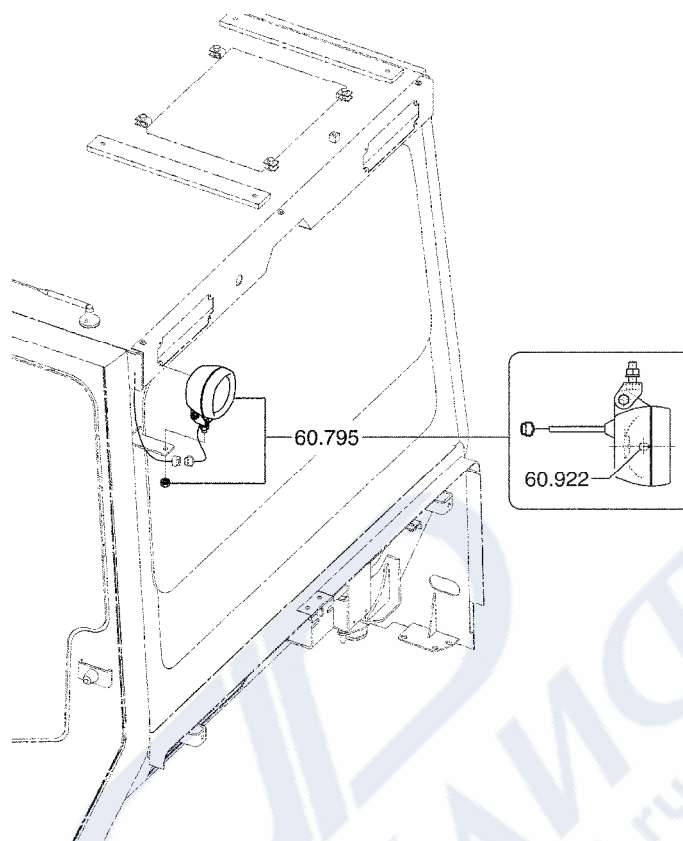 


REAR WORK LIGHT INSTALLATION


13-305

- |        |                            |
|--------|----------------------------|
| 60.795 | LIGHT, REAR WORK<br>라이트    |
| 60.922 | BULB, REAR WORK LAMP<br>전구 |



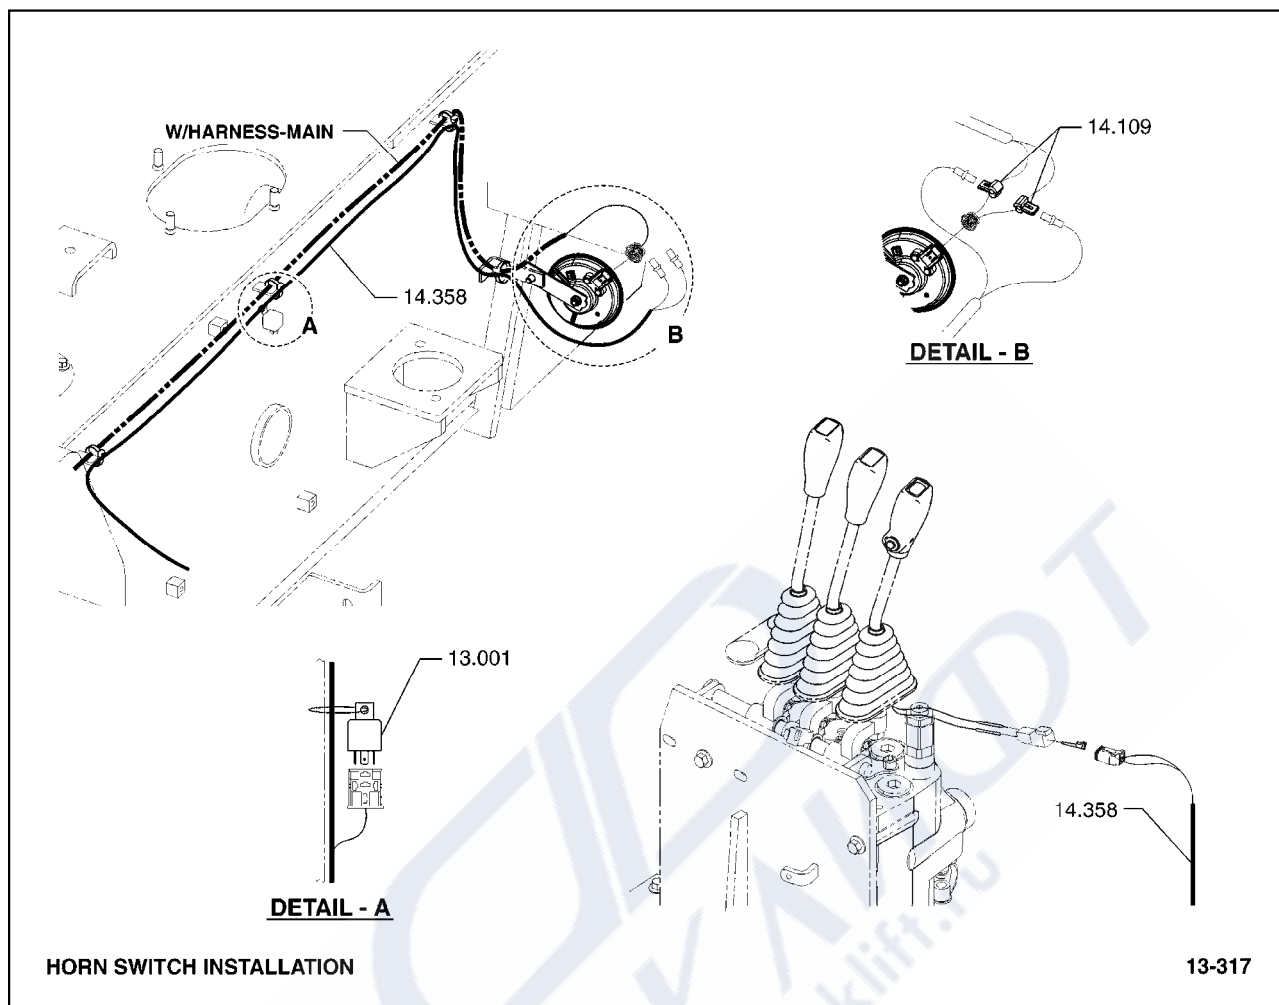 


- |        |                             |
|--------|-----------------------------|
| 13.001 | RELAY, HORN<br>릴레이          |
| 14.109 | CONNECTOR, HORN WIRE<br>커넥터 |
| 14.358 | WIRE ASSEMBLY, HORN<br>와이어  |

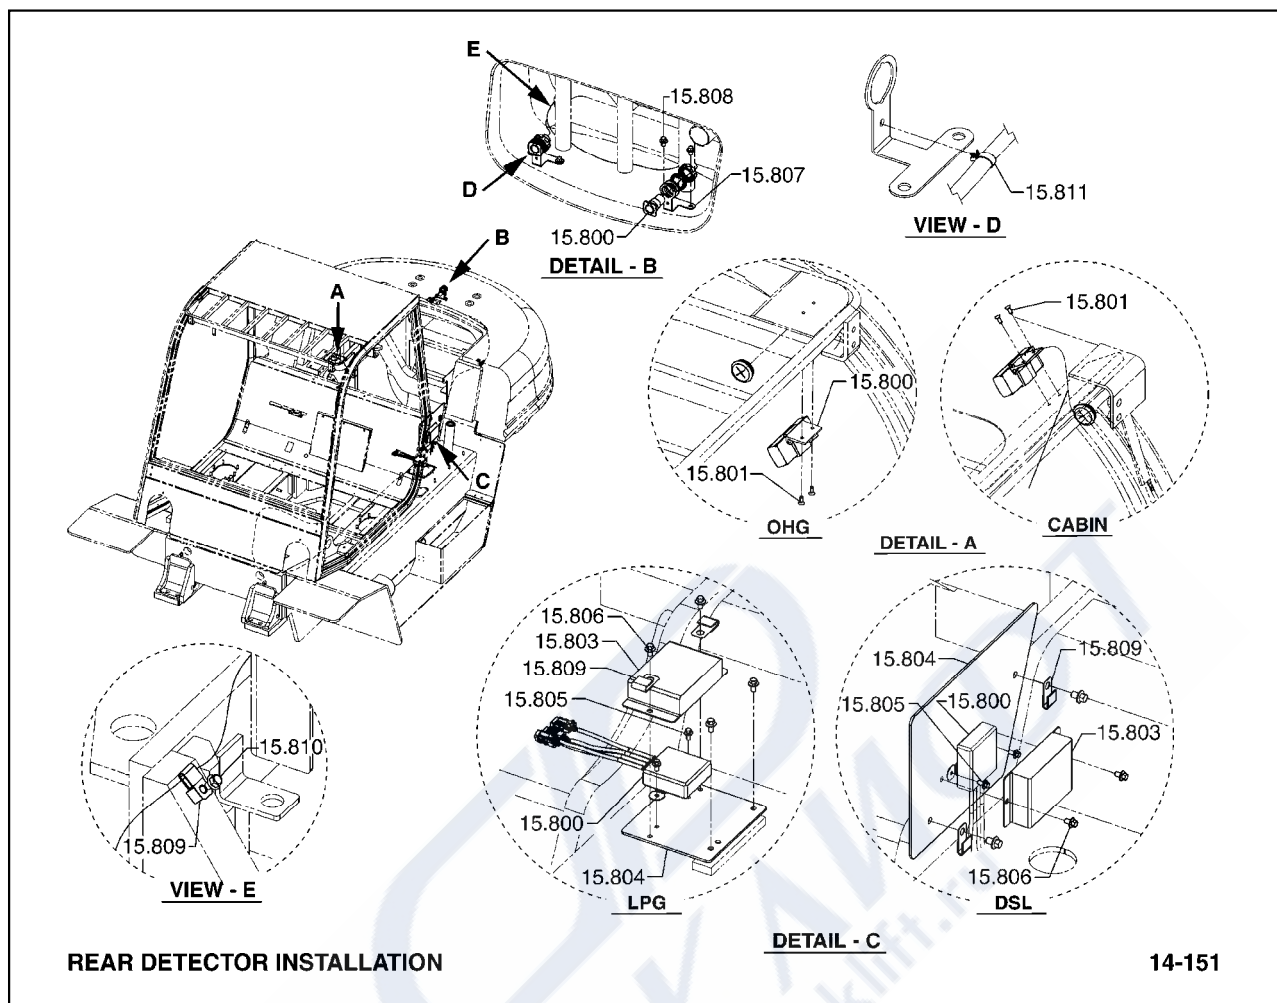 

|        |                                                          |
|--------|----------------------------------------------------------|
| 15.800 | DETECTOR, REAR<br>디텍터                                    |
| 15.801 | FASTENER, REAR DETECTOR DISPLAY MOUNTING<br>패스너          |
| 15.803 | COVER, REAR DETECTOR CONTROLLER<br>커버                    |
| 15.804 | BRACKET, REAR DETECTOR<br>브라켓                            |
| 15.805 | FASTENER, REAR DETECTOR CONTROLLER MOUNTING<br>패스너       |
| 15.806 | FASTENER, REAR DETECTOR CONTROLLER MOUNTING COVER<br>패스너 |
| 15.807 | BRACKET, REAR DETECTOR SENSOR MOUNTING<br>브라켓            |
| 15.808 | FASTENER, REAR DETECTOR SENSOR MOUNTING<br>패스너           |
| 15.809 | CLIP, REAR DETECTOR HARNESS<br>클립                        |

|        |                                             |
|--------|---------------------------------------------|
| 15.810 | FASTENER, REAR DETECTOR HARNESS CLIP<br>패스너 |
| 15.811 | TIE STRAP, REAR DETECTOR HARNESS<br>타이스트랩   |




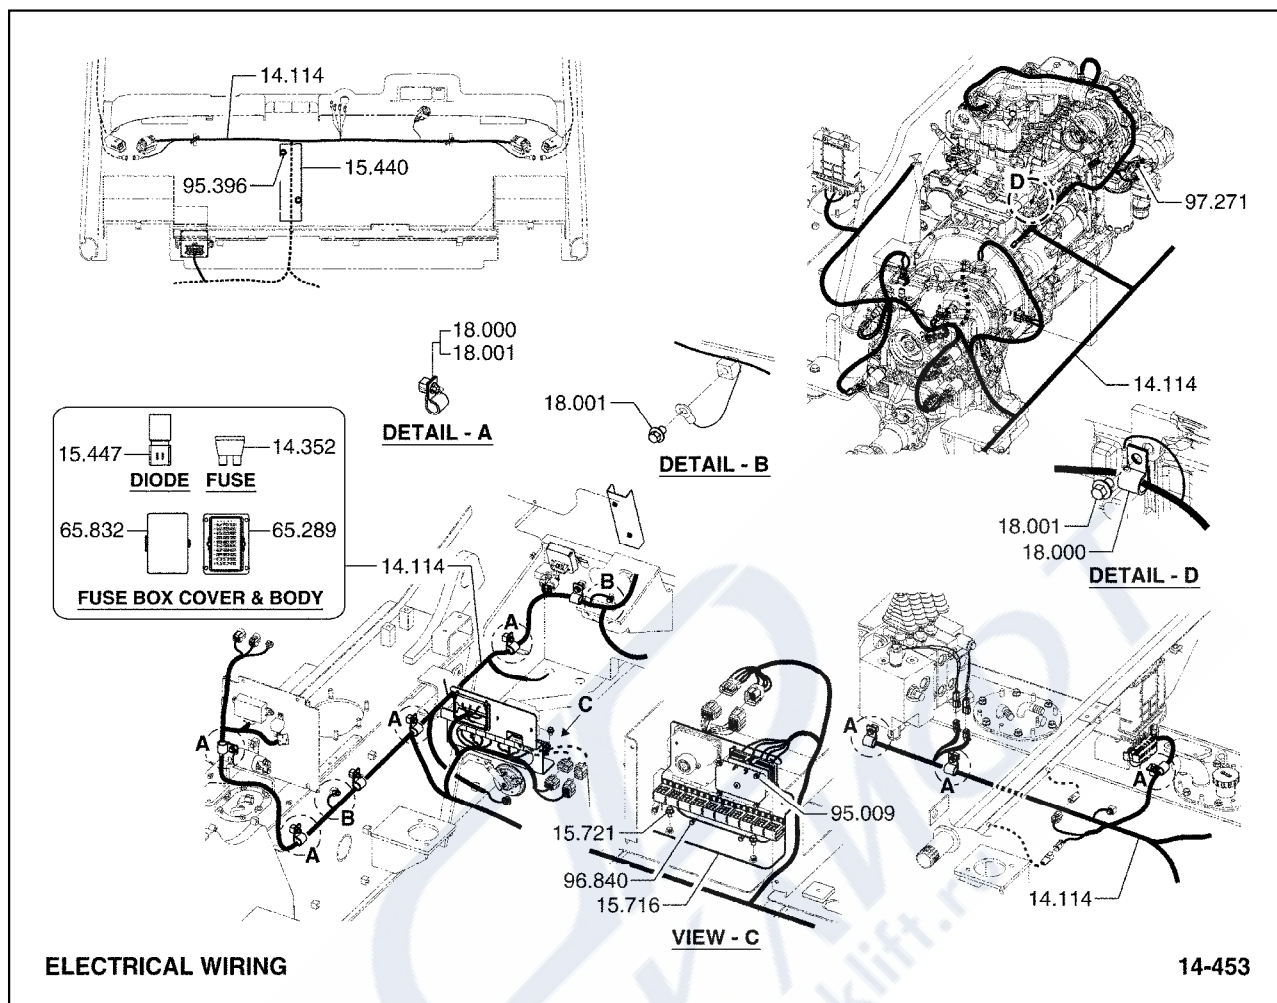 

|        |                                         |
|--------|-----------------------------------------|
| 14.114 | HARNESS, MACHINE WIRING<br>하네스          |
| 14.352 | FUSE, CONTROL CIRCUIT<br>퓨즈             |
| 15.440 | SHIELD, WIRING HARNESS PROTECTION<br>실드 |
| 15.447 | DIODE, HARNESS<br>다이오드                  |
| 15.716 | BRACKET, RELAY MOUNTING<br>브라켓          |
| 15.721 | FASTENER, RELAY BRACKET<br>패스너          |
| 18.000 | CLIP, WIRING HARNESS<br>클립              |
| 18.001 | FASTENER, WIRING HARNESS CLIP<br>패스너    |
| 65.289 | BODY, FUSE BOX<br>바디                    |

---

|        |                                                   |
|--------|---------------------------------------------------|
| 65.832 | COVER, FUSE BOX<br>커버                             |
| 95.009 | FASTENER, FUSE BOX MOUNTING<br>패스너                |
| 95.396 | FASTENER, WIRING HARNESS PROTECTION SHIELD<br>패스너 |
| 96.840 | FASTENER, RELAY MOUNTING BRACKET<br>패스너           |
| 97.271 | FASTENER, CABLE & WIRE TO ALTERNATOR<br>패스너       |

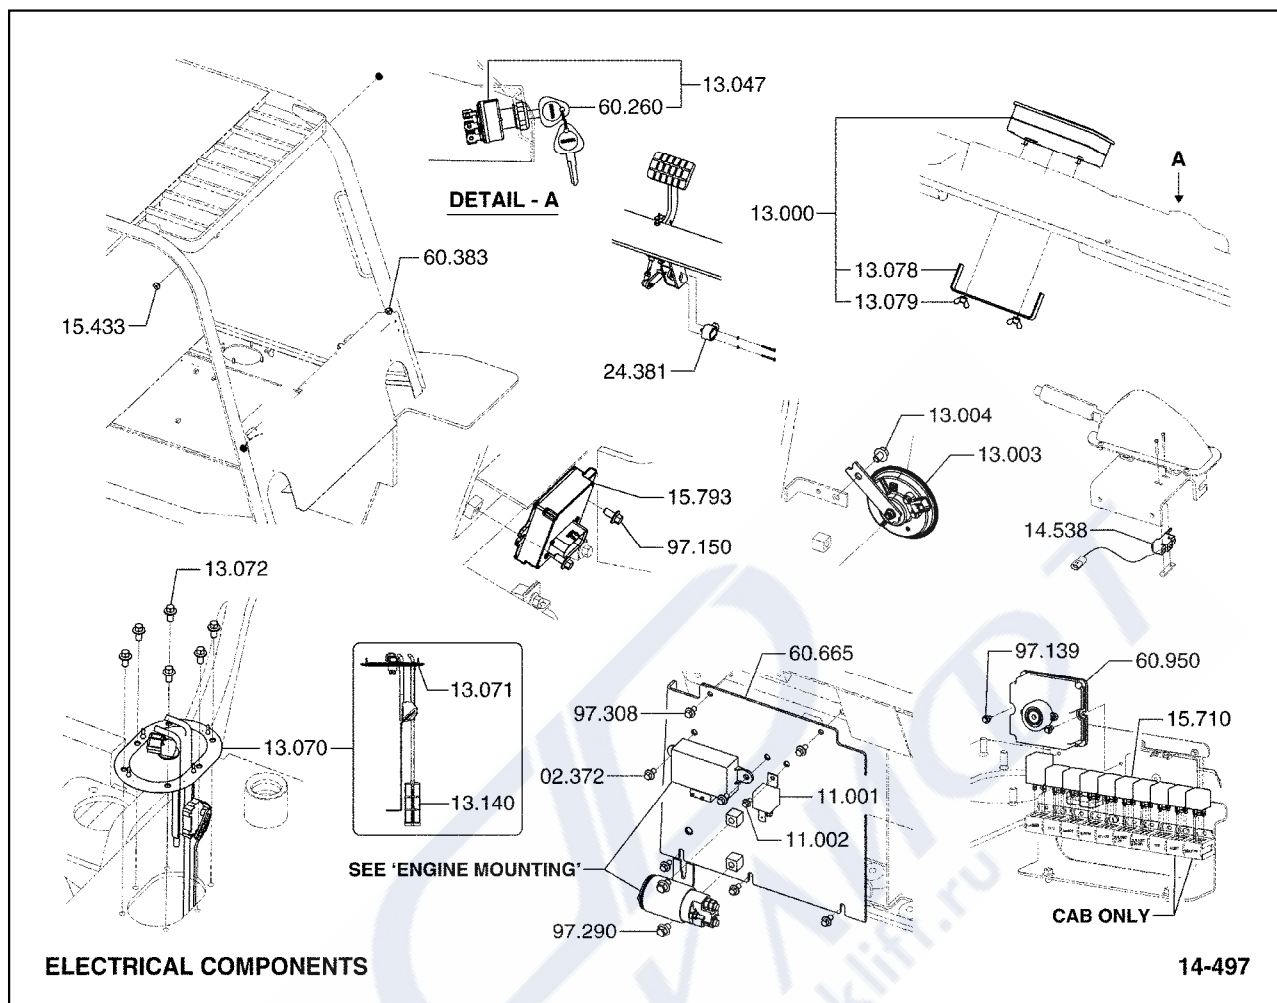 


|        |                                                |
|--------|------------------------------------------------|
| 02.372 | FASTENER, ELECTRONIC CONTROL UNIT COVER<br>패스너 |
| 11.001 | RELAY, STARTER<br>릴레이                          |
| 11.002 | FASTENER, STARTER RELAY<br>패스너                 |
| 13.000 | PANEL, INSTRUMENT CLUSTER<br>판넬                |
| 13.003 | HORN<br>혼                                      |
| 13.004 | FASTENER, HORN MOUNTING BRACKET<br>패스너         |
| 13.047 | SWITCH, CIRCUIT LOCKING<br>스위치                 |
| 13.070 | SENDER, FUEL GAUGE<br>센더                       |
| 13.071 | GASKET, FUEL GAUGE SENDER<br>가스켓               |

---



|        |                                                        |
|--------|--------------------------------------------------------|
| 13.072 | FASTENER, FUEL GAUGE SENDER<br>패스너                     |
| 13.078 | CLAMP, INSTRUMENT CLUSTER TO INST PANEL<br>클램프         |
| 13.079 | FASTENER, INSTRUMENT CLUSTER TO INST PANEL<br>패스너      |
| 13.140 | STRAINER, FUEL GAGE SENDER<br>스트레이너                    |
| 14.538 | SWITCH, PARK BRAKE<br>스위치                              |
| 15.433 | GROMMET, CONTROL CIRCUIT WIRING HARNESS<br>그로멧         |
| 15.710 | RELAY, ELECTRICAL<br>릴레이                               |
| 15.793 | CONTROLLER, SIGNAL FILTER<br>컨트롤러                      |
| 24.381 | SENSOR, INCHING BRAKE ANGLE<br>센서                      |
| 60.260 | KEY, CIRCUIT LOCKING SWITCH<br>키                       |
| 60.383 | GROMMET, CONTROL CIRCUIT WIRING HARNESS<br>그로멧         |
| 60.665 | BRACKET, ELECTRICAL COMPONENTS SUPPORT<br>브라켓          |
| 60.950 | CONTROLLER, ELECTRIC SIGNAL<br>컨트롤러                    |
| 97.139 | FASTENER, ELECTRIC SIGNAL CONTROLLER<br>패스너            |
| 97.150 | FASTENER, SIGNAL FILTER CONTROLLER<br>패스너              |
| 97.290 | FASTENER, ENGINE PRE-HEATER RELAY<br>패스너               |
| 97.308 | FASTENER, ELECTRICAL COMPONENTS SUPPORT BRACKET<br>패스너 |

 ---



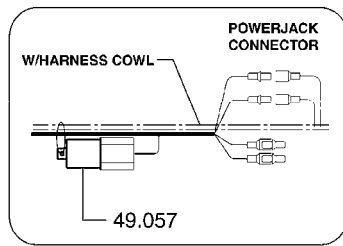

**DETAIL - A**

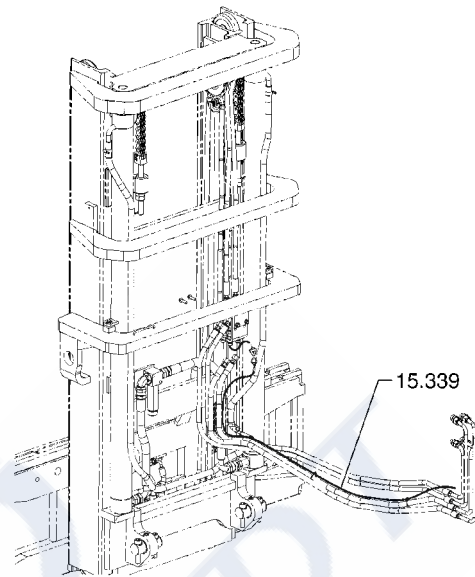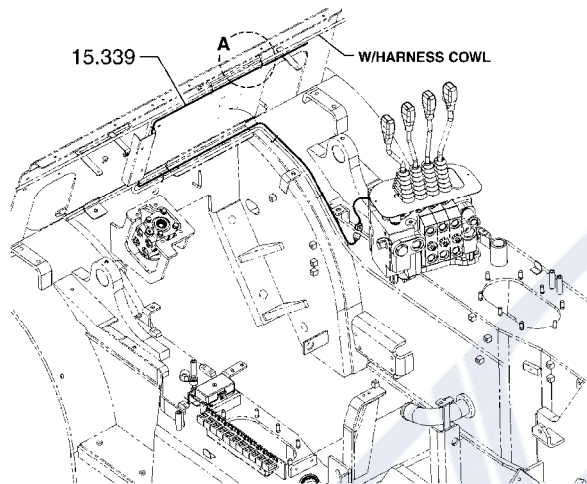  


**MAIN VALVE ELECTRICAL COMPONENTS (PUSH BUTTON)**

**15-016**

 - |        |                                               |
|--------|-----------------------------------------------|
| 15.339 | HARNESS, AUXILIARY VALVE SWITCH WIRING<br>하네스 |
| 49.057 | RELAY, AUXILIARY VALVE CONROL<br>릴레이          |



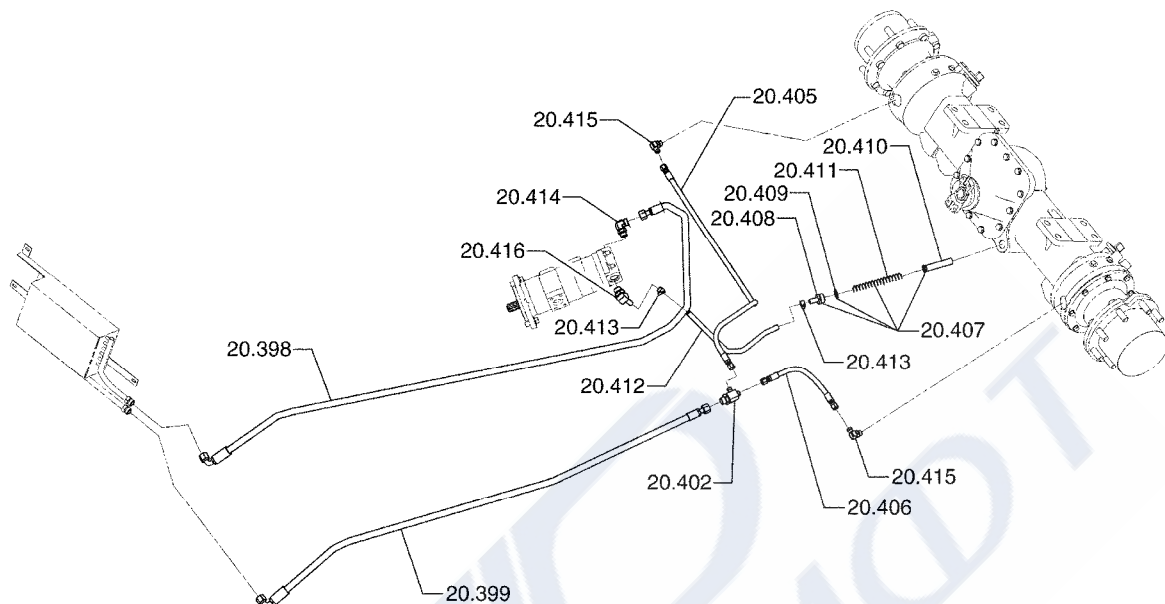

DRIVE AXLE OIL COOLER LINES


20-144

|        |                                            |
|--------|--------------------------------------------|
| 20.398 | LINE, DRIVE AXLE OIL COOLER<br>라인          |
| 20.399 | LINE, DRIVE AXLE OIL COOLER<br>라인          |
| 20.402 | TEE, DRIVE AXLE OIL COOLER LINE<br>티       |
| 20.405 | LINE, DRIVE AXLE OIL<br>라인                 |
| 20.406 | LINE, DRIVE AXLE OIL<br>라인                 |
| 20.407 | FITTING, DRIVE AXLE OIL LINE SUCTION<br>피팅 |
| 20.408 | PLUG, DRIVE AXLE OIL SUCTION<br>플러그        |
| 20.409 | SEAL, DRIVE AXLE OIL SUCTION<br>셀          |
| 20.410 | STRAINER, DRIVE AXLE OIL SUCTION<br>스트레이너  |

---

|        |                                            |
|--------|--------------------------------------------|
| 20.411 | SPRING, DRIVE AXLE OIL SUCTION<br>스프링      |
| 20.412 | LINE, DRIVE AXLE OIL SUCTION<br>라인         |
| 20.413 | CLAMP, DRIVE AXLE OIL SUCTION LINE<br>클램프  |
| 20.414 | FITTING, DRIVE AXLE OIL COOLER LINE<br>피팅  |
| 20.415 | FITTING, DRIVE AXLE OIL LINE<br>피팅         |
| 20.416 | FITTING, DRIVE AXLE OIL SUCTION LINE<br>피팅 |

 ASSEMBLY  
COMPLETE — 20.370

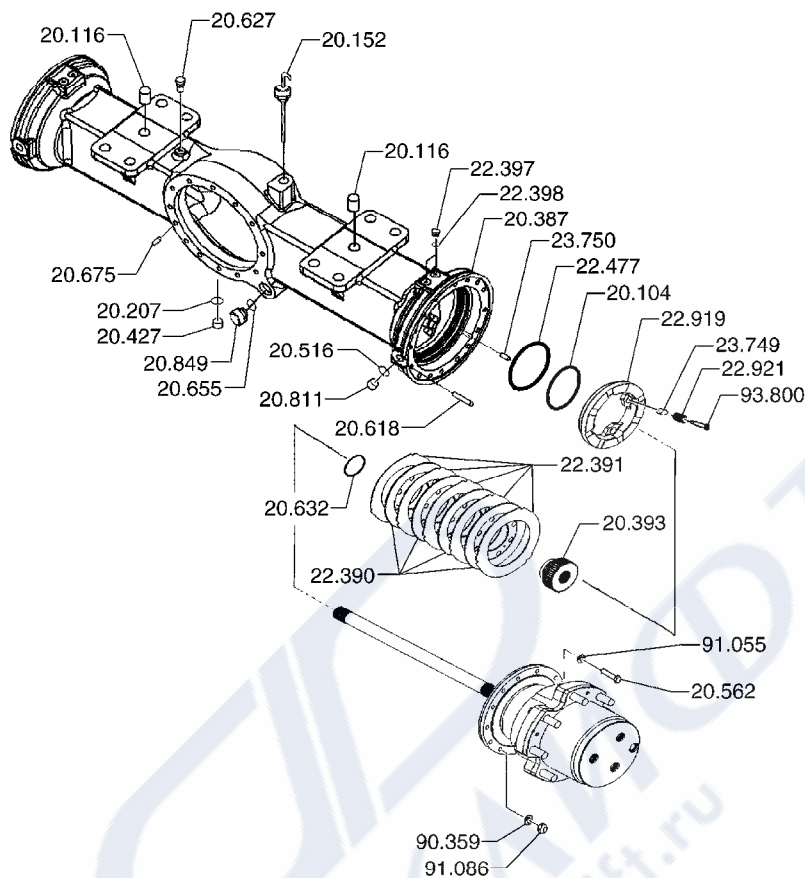


DRIVE AXLE HOUSING

20-193

|        |                                                   |        |                                             |
|--------|---------------------------------------------------|--------|---------------------------------------------|
| 20.104 | RING, RETAINER AXLE END<br>링                      | 20.811 | PLUG, DRIVE AXLE HOUSING<br>플러그             |
| 20.116 | PIN, DRIVE AXLE HOUSING & DIFF ALIGNMENT<br>핀     | 20.849 | PLUG, DRIVE AXLE HOUSING<br>플러그             |
| 20.152 | GAUGE, LEVEL GAUGE<br>게이지                         | 22.390 | DISC, BRAKE - INNER<br>디스크                  |
| 20.207 | SEAL, DIFFERENTIAL & AXLE HOUSING DRAIN PLUG<br>씰 | 22.391 | DISC, BRAKE - OUTER<br>디스크                  |
| 20.370 | AXLE ASSEMBLY, DRIVE<br>드라이브액슬                    | 22.397 | PLUG, BRAKE DISC HOUSING<br>플러그             |
| 20.387 | HOUSING, DIFFERENTIAL & AXLE<br>하우징               | 22.398 | SEAL, BRAKE DISC HOUSING PLUG<br>씰          |
| 20.393 | SPLINE, BRAKE DISC<br>스플라인                        | 22.477 | RING, BRAKE DRUM MOUNTING SPACER<br>링       |
| 20.427 | PLUG, DIFFERENTIAL & AXLE HOUSING DRAIN<br>플러그    | 22.919 | PLATE, BRAKE DISC PISTON<br>플레이트            |
| 20.516 | SEAL, DRIVE AXLE HUB DRAIN PLUG<br>씰              | 22.921 | SPRING, BRAKE DISC PISTON<br>스프링            |
| 20.562 | FASTENER, DRIVE AXLE END<br>패스너                   | 23.749 | BUSHING, BRAKE ACTUATING LEVER<br>부싱        |
| 20.618 | FASTENER, DRIVE AXLE SPINDLE<br>패스너               | 23.750 | PIN, BRAKE ACTUATING LEVER PIVOT<br>핀       |
| 20.627 | VENT, DIFFERENTIAL & AXLE<br>벤트                   | 90.359 | LOCKWASHER, DRIVE AXLE END FASTENER<br>로크와셔 |
| 20.632 | RETAINER, DRIVE AXLE INTERNAL GEAR HUB<br>리테이너    | 91.055 | LOCKWASHER, DRIVE AXLE END FAST<br>로크와셔     |
| 20.655 | SEAL, DRIVE UNIT HOUSING DRAIN PLUG<br>씰          | 91.086 | NUT, DRIVE AXLE SPINDLE FASTENER<br>너트      |
| 20.675 | DOWEL PIN, DRIVE AXLE END HOUSING<br>다웰핀          | 93.800 | FASTENER, BRAKE DISC HOUSING<br>패스너         |

 ASSEMBLY  
COMPLETE — 20.370

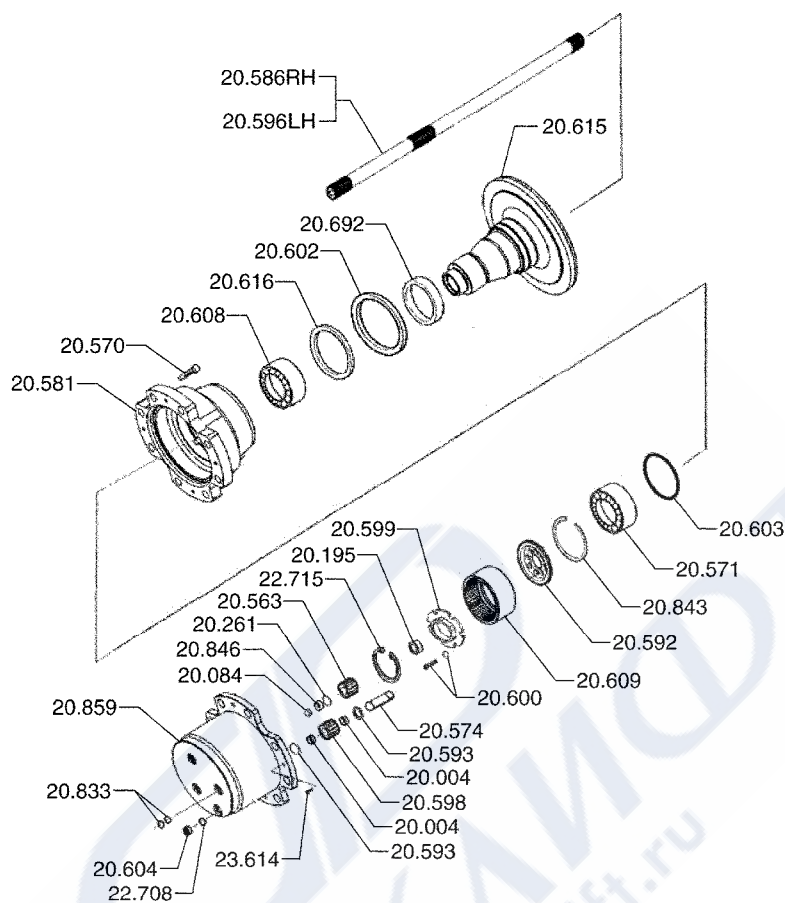


DRIVE AXLE HUB ASSEMBLY

20-194


|        |                                             |        |                                                       |
|--------|---------------------------------------------|--------|-------------------------------------------------------|
| 20.004 | BEARING, DRIVE HOUSING SPINDLE<br>베어링       | 20.599 | NUT, DRIVE AXLE HUB BEARING OUTER RETAINING<br>너트     |
| 20.084 | STOP, DRIVE AXLE<br>스톱                      | 20.600 | LOCK, DRIVE AXLE HUB BEARING RETAINING NUT<br>로크      |
| 20.195 | BUSHING, DRIVE END HOUSING<br>부싱            | 20.602 | SEAL, DRIVE AXLE HUB INNER OIL<br>씰                   |
| 20.261 | RETAINER, DIFF PINION OUTER BEARING<br>리테이너 | 20.603 | SEAL, DRIVE AXLE HUB OUTER OIL<br>씰                   |
| 20.370 | AXLE ASSEMBLY, DRIVE<br>드라이브액슬              | 20.604 | PLUG, DRIVE AXLE HUB DRAIN<br>플러그                     |
| 20.563 | GEAR, DRIVE AXLE SUN<br>기어                  | 20.608 | CONE, DRIVE AXLE HUB INNER BEARING<br>콘               |
| 20.570 | FASTENER, DRIVE WHEEL MOUNTING<br>패스너       | 20.609 | HUB, DRIVE AXLE INTERNAL GEAR<br>허브                   |
| 20.571 | CONE, DRIVE AXLE HUB OUTER BEARING<br>콘     | 20.615 | SPINDLE, DRIVE AXLE END<br>스핀들                        |
| 20.574 | SHAFT, DRIVE AXLE PLANET PINION<br>샤프트      | 20.616 | SEAL, DRIVE AXLE HUB<br>씰                             |
| 20.581 | HUB ASSEMBLY, DRIVE AXLE<br>허브              | 20.692 | SHIELD, DRIVE AXLE HUB INNER OIL SEAL<br>샬드           |
| 20.586 | SHAFT, DRIVE AXLE<br>샤프트                    | 20.833 | SEAL, DRIVE AXLE RING GEAR SHAFT BEARING HOUSING<br>씰 |
| 20.592 | PLANET, DRIVE AXLE<br>플래닛                   | 20.843 | LOCATOR, DRIVE AXLE OUTPUT GEAR BEARING<br>로케이터       |
| 20.593 | WASHER, PLANET PINION GEAR THRUST<br>와셔     | 20.846 | BEARING, DRIVE AXLE PLANET PINION GEAR<br>베어링         |
| 20.596 | SHAFT, DRIVE AXLE (LH)<br>샤프트               | 20.859 | HOUSING, DRIVE AXLE<br>하우징                            |
| 20.598 | GEAR, DRIVE AXLE PLANET PINION<br>기어        | 22.708 | SEAL, DRIVE AXLE HOUSING<br>씰                         |

|        |                                                   |
|--------|---------------------------------------------------|
| 22.715 | RETAINER, DRIVE AXLE ROTOR HOUSING<br>리테이너        |
| 23.614 | FASTENER, DRIVE WHEEL BRK DRUM TO HUB (RH)<br>패스너 |



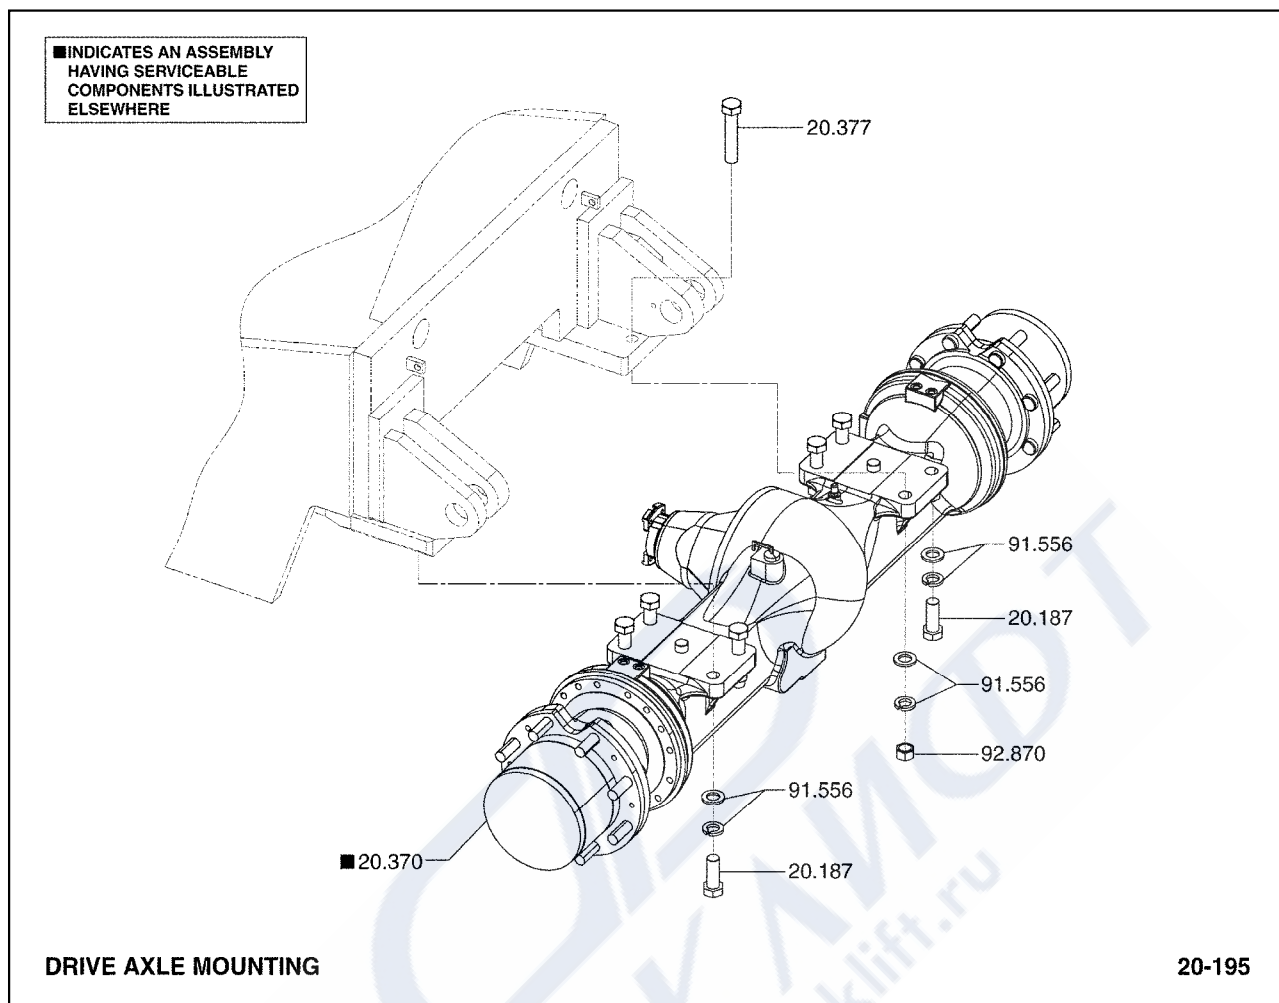 

|        |                                         |
|--------|-----------------------------------------|
| 20.187 | FASTENER, DRIVE AXLE TO FRAME<br>패스너    |
| 20.370 | AXLE ASSEMBLY, DRIVE<br>드라이브액슬          |
| 20.377 | FASTENER, DRIVE AXLE TO FRAME<br>패스너    |
| 91.556 | LOCKWASHER, DRIVE AXLE END<br>로크와셔      |
| 92.870 | NUT, DRIVE AXLE MOUNTING FASTENER<br>너트 |

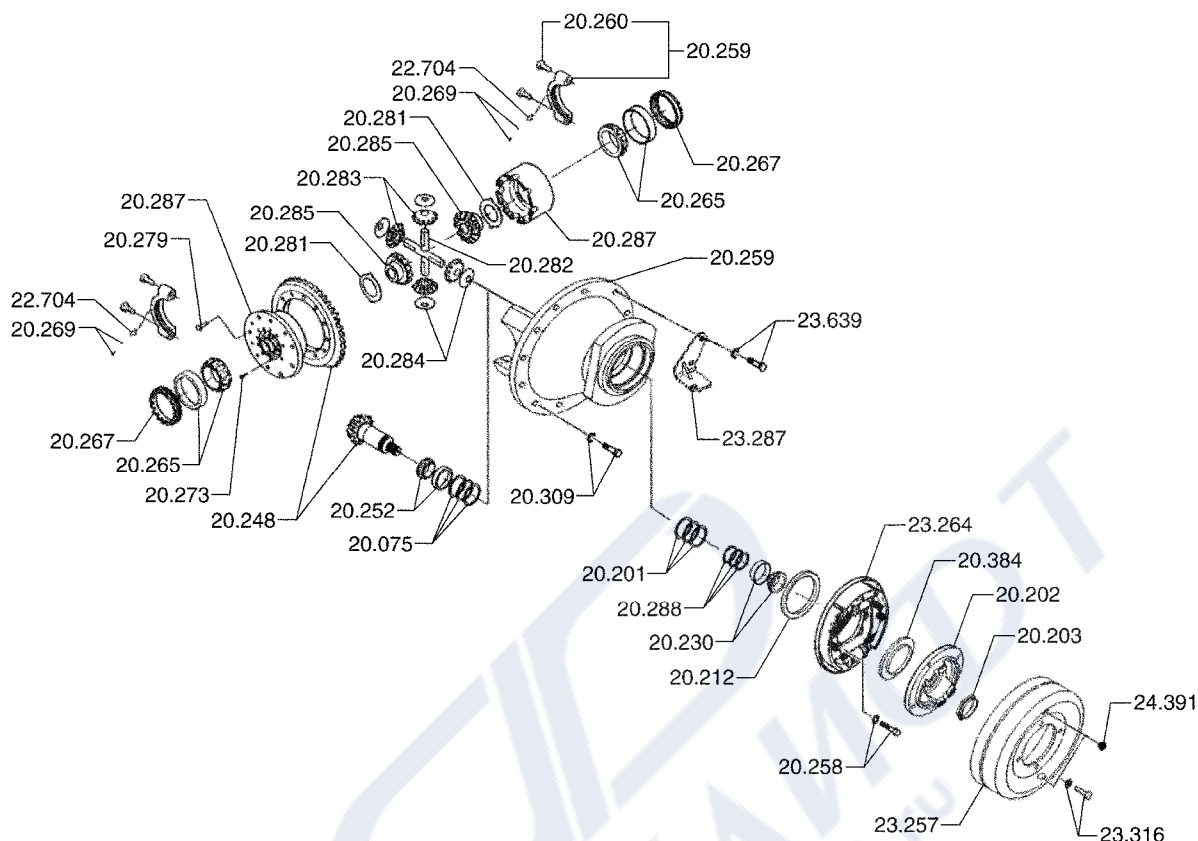 

DIFFERENTIAL &amp; CARRIER ASSY

20-196


|        |                                                  |        |                                                 |
|--------|--------------------------------------------------|--------|-------------------------------------------------|
| 20.075 | SHIM, DRIVE UNIT PINION BEARING<br>심             | 20.279 | FASTENER, DIFFERENTIAL CASE TO RING GEAR<br>패스너 |
| 20.201 | SHIM, DIFF BRG CARRIER TO AXLE HOUSING<br>심      | 20.281 | FASTENER, DIFF SIDE PINION PIN<br>패스너           |
| 20.202 | FLANGE, DIFFERENTIAL PINION COMPANION<br>플랜지     | 20.282 | SPIDER, DIFFERENTIAL PINION<br>스파이더             |
| 20.203 | NUT, DIFFERENTIAL PINION COMPANION FLANGE<br>너트  | 20.283 | GEAR, DIFFERENTIAL SIDE PINION<br>기어            |
| 20.212 | SEAL, DIFFERENTIAL PINION OIL<br>씰               | 20.284 | WASHER, DIFF SIDE PINION GEAR THRUST<br>와셔      |
| 20.230 | BEARING ASSEMBLY, DIFF PINION OUTER<br>베어링       | 20.285 | GEAR, DIFFERENTIAL SIDE<br>기어                   |
| 20.248 | RING GEAR & PINION SET, DIFFERENTIAL<br>링        | 20.287 | CASE & GEAR ASSEMBLY, DIFFERENTIAL<br>케이스& 기어   |
| 20.252 | BEARING, DIFFERENTIAL PINION INNER<br>베어링        | 20.288 | SPACER, PINION BEARING CONE<br>스페이서             |
| 20.258 | FASTENER, DIFFERENTIAL BRG CARRIER HSG<br>패스너    | 20.309 | FASTENER, DIFFERENTIAL HOUSING<br>패스너           |
| 20.259 | CARRIER & CAP ASSEMBLY, DIFFERENTIAL<br>캐리어& 캡   | 20.384 | PLUG, DRIVE AXLE HOUSING<br>플러그                 |
| 20.260 | FASTENER, DIFFERENTIAL CARRIER CAP<br>패스너        | 22.704 | PLATE, DRIVE AXLE END HOUSING<br>플레이트           |
| 20.265 | CUP, DIFFERENTIAL BEARING<br>컵                   | 23.257 | DRUM, PARKING BRAKE<br>드럼                       |
| 20.267 | NUT, DIFFERENTIAL BEARING ADJUSTING<br>너트        | 23.264 | BRAKE ASSEMBLY, PARKING<br>브레이크                 |
| 20.269 | FASTENER, DIFF BEARING ADJUSTING NUT LOCK<br>패스너 | 23.287 | BRACKET, PARKING BRAKE CABLE<br>브라켓             |
| 20.273 | FASTENER, DIFFERENTIAL CASE<br>패스너               | 23.316 | FASTENER, BRAKE DRUM<br>패스너                     |

23.639 FASTENER, PARKING BRAKE CABLE ANCHOR  
패스너

24.391 PLUG, BRAKE DRUM  
플러그

 ФОРКЛИФТ  
www.forklift.ru




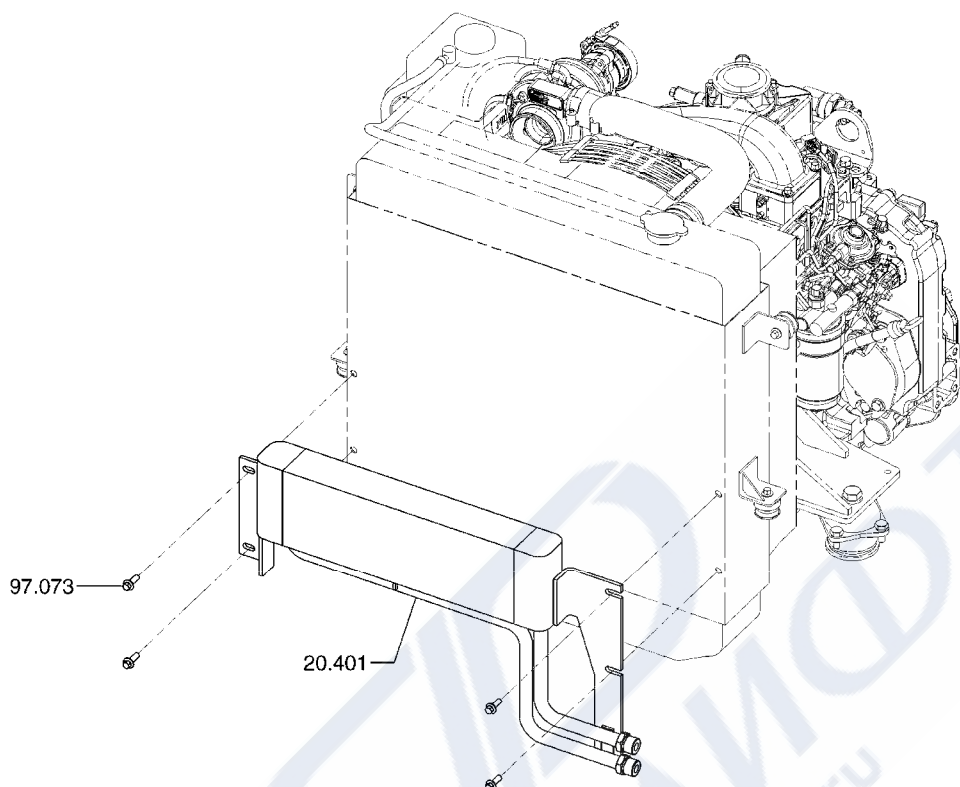

DRIVE AXLE OIL COOLER MOUNTING


20-273

- |        |                                             |
|--------|---------------------------------------------|
| 20.401 | COOLER, DRIVE AXLE OIL<br>쿨러                |
| 97.073 | FASTENER, DRIVE AXLE COOLER MOUNTING<br>패스너 |

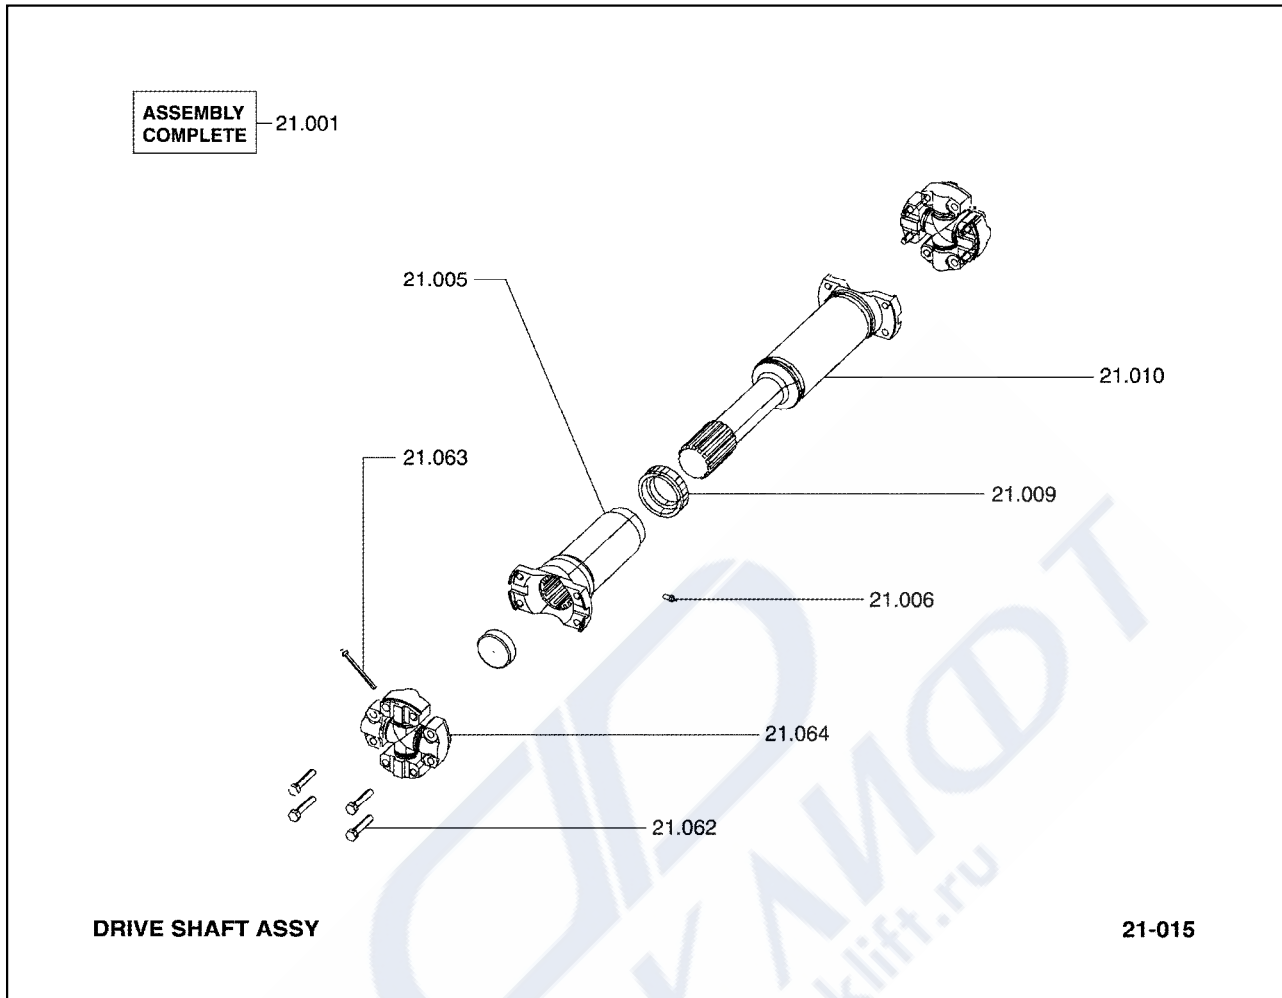 

- |        |                                                       |
|--------|-------------------------------------------------------|
| 21.001 | SHAFT ASSEMBLY, TRANSMISSION TO AXLE PROPELLER<br>샤프트 |
| 21.005 | YOKE CAP & WASHER ASSY, PROP SHAFT CLIP<br>요크캡& 와셔    |
| 21.006 | FITTING-LUB, PROPELLER SHAFT SLIP YOKE<br>피팅          |
| 21.009 | CAP, PROPELLER SHAFT SLIP YOKE DUST<br>캡              |
| 21.010 | YOKE & SPLINE ASSEMBLY, PROPELLER SHAFT<br>요크& 스플라인   |
| 21.062 | FASTENER, CROSS ASSEMBLY TO STUB SHAFT<br>패스너         |
| 21.063 | FITTING-LUB, CROSS ASSEMBLY<br>피팅                     |
| 21.064 | REPAIR KIT, PROPELLER SHAFT CENTER CROSS<br>리페어키트     |

 ■ INDICATES AN ASSEMBLY  
HAVING SERVICEABLE  
COMPONENTS ILLUSTRATED  
ELSEWHERE

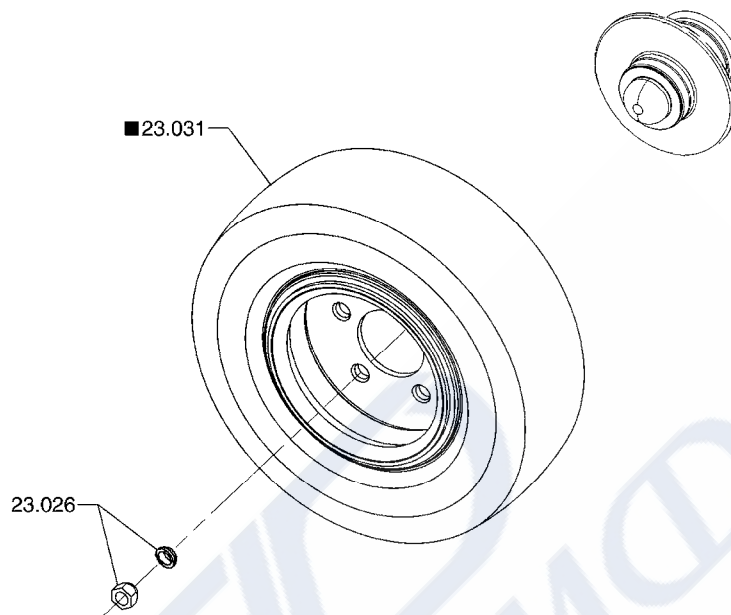


STEER WHEEL & TIRE MOUNTING

22-014

- |        |                                             |
|--------|---------------------------------------------|
| 23.026 | FASTENER, STEER WHEEL<br>패스너                |
| 23.031 | STEER WHEEL AND TIRE ASSEMBLY<br>스티어휠 & 타이어 |

 ■ INDICATES AN ASSEMBLY  
HAVING SERVICEABLE  
COMPONENTS ILLUSTRATED  
ELSEWHERE

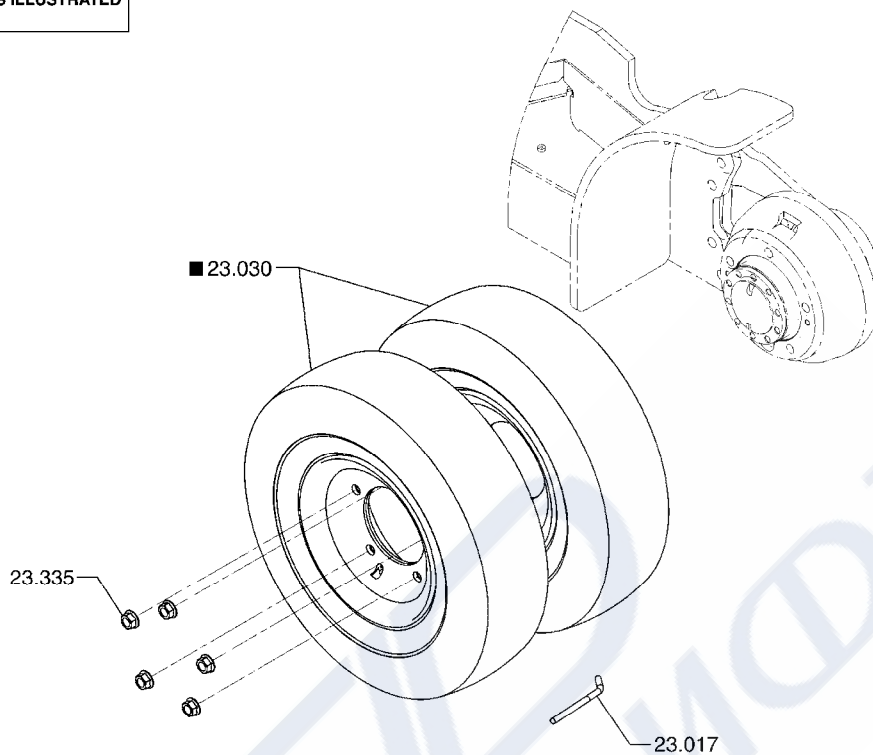


DUAL DRIVE WHEEL & TIRE MOUNTING

22-016

- |        |                                             |
|--------|---------------------------------------------|
| 23.017 | EXTENSION, DRIVE WHEEL VALVE<br>익스텐션        |
| 23.030 | DRIVE WHEEL AND TIRE ASSEMBLY<br>드라이브휠& 타이어 |
| 23.335 | FASTENER, DRIVE WHEEL<br>패스너                |

 ASSEMBLY  
COMPLETE — 23.030

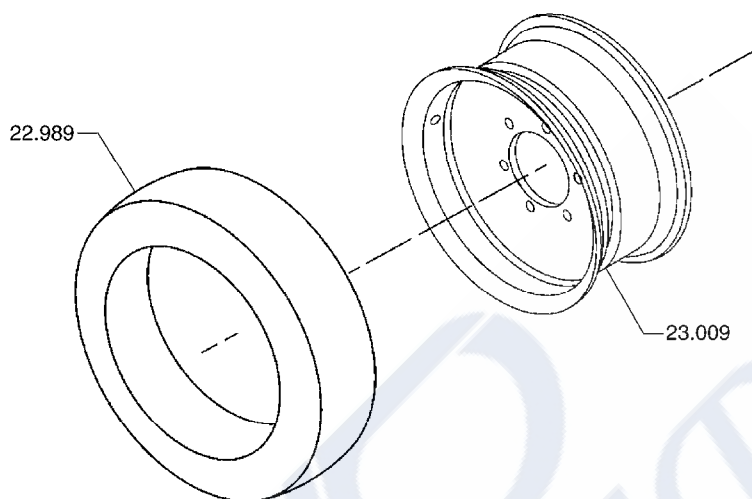


DRIVE WHEEL & TIRE (SOLID TYPE)

22-024

|        |                                             |
|--------|---------------------------------------------|
| 22.989 | TIRE ASSEMBLY, DRIVE<br>타이어                 |
| 23.009 | RIM ASSEMBLY, DRIVE WHEEL<br>립              |
| 23.030 | DRIVE WHEEL AND TIRE ASSEMBLY<br>드라이브휠& 타이어 |

 ASSEMBLY  
COMPLETE — 23.031

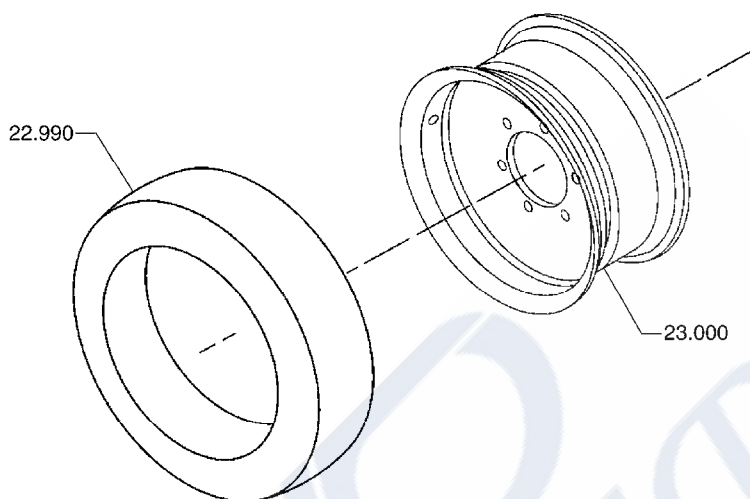


STEER WHEEL & TIRE (SOLID TYPE)

22-025

|        |                                             |
|--------|---------------------------------------------|
| 22.990 | TIRE ASSEMBLY, STEER<br>타이어                 |
| 23.000 | RIM ASSEMBLY, STEER WHEEL<br>립              |
| 23.031 | STEER WHEEL AND TIRE ASSEMBLY<br>스티어휠 & 타이어 |

 ASSEMBLY  
COMPLETE — 23.030

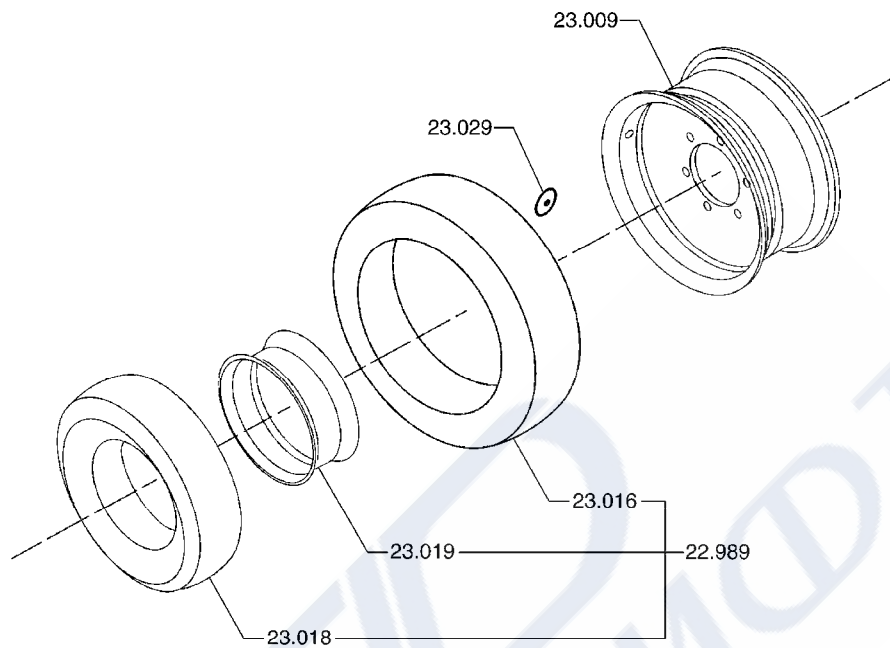


DRIVE WHEEL & TIRE

22-041

|        |                                             |
|--------|---------------------------------------------|
| 22.989 | TIRE ASSEMBLY, DRIVE<br>타이어                 |
| 23.009 | RIM ASSEMBLY, DRIVE WHEEL<br>립              |
| 23.016 | TIRE, DRIVE WHEEL<br>타이어                    |
| 23.018 | TUBE, DRIVE WHEEL<br>튜브                     |
| 23.019 | FLAP, DRIVE WHEEL TUBE<br>플랩                |
| 23.029 | FASTENER, DRIVE WHEEL ASSEMBLY<br>패스너       |
| 23.030 | DRIVE WHEEL AND TIRE ASSEMBLY<br>드라이브휠& 타이어 |

 ASSEMBLY  
COMPLETE — 23.031

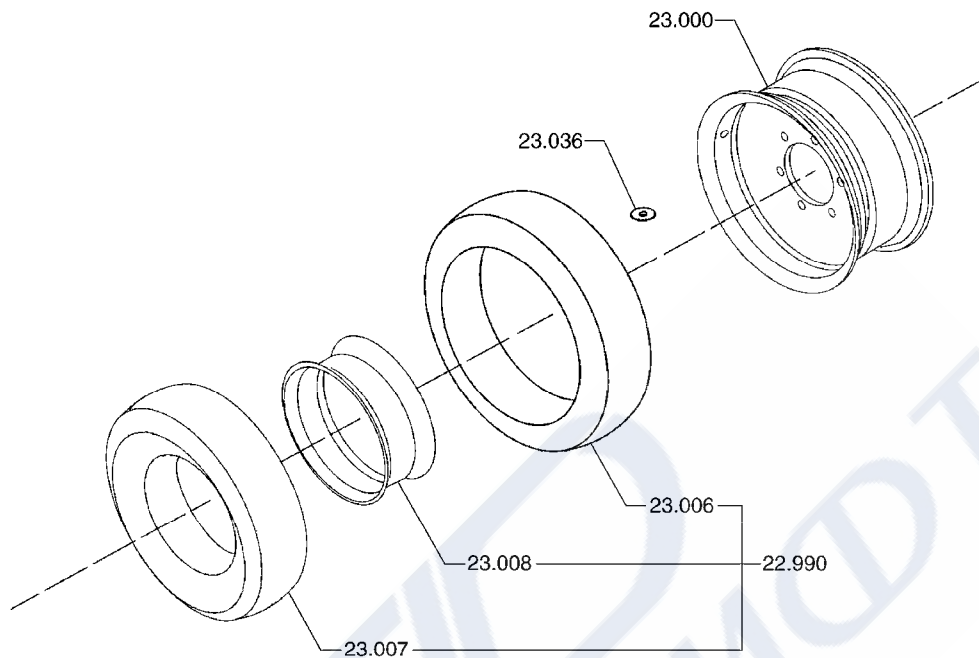


STEER WHEEL & TIRE

22-042

|        |                                            |
|--------|--------------------------------------------|
| 22.990 | TIRE ASSEMBLY, STEER<br>타이어                |
| 23.000 | RIM ASSEMBLY, STEER WHEEL<br>립             |
| 23.006 | TIRE, STEER WHEEL<br>타이어                   |
| 23.007 | TUBE, STEER WHEEL<br>튜브                    |
| 23.008 | FLAP, STEER WHEEL<br>플랩                    |
| 23.031 | STEER WHEEL AND TIRE ASSEMBLY<br>스티어휠& 타이어 |
| 23.036 | FASTENER, STEER WHEEL ASSEMBLY<br>패스너      |



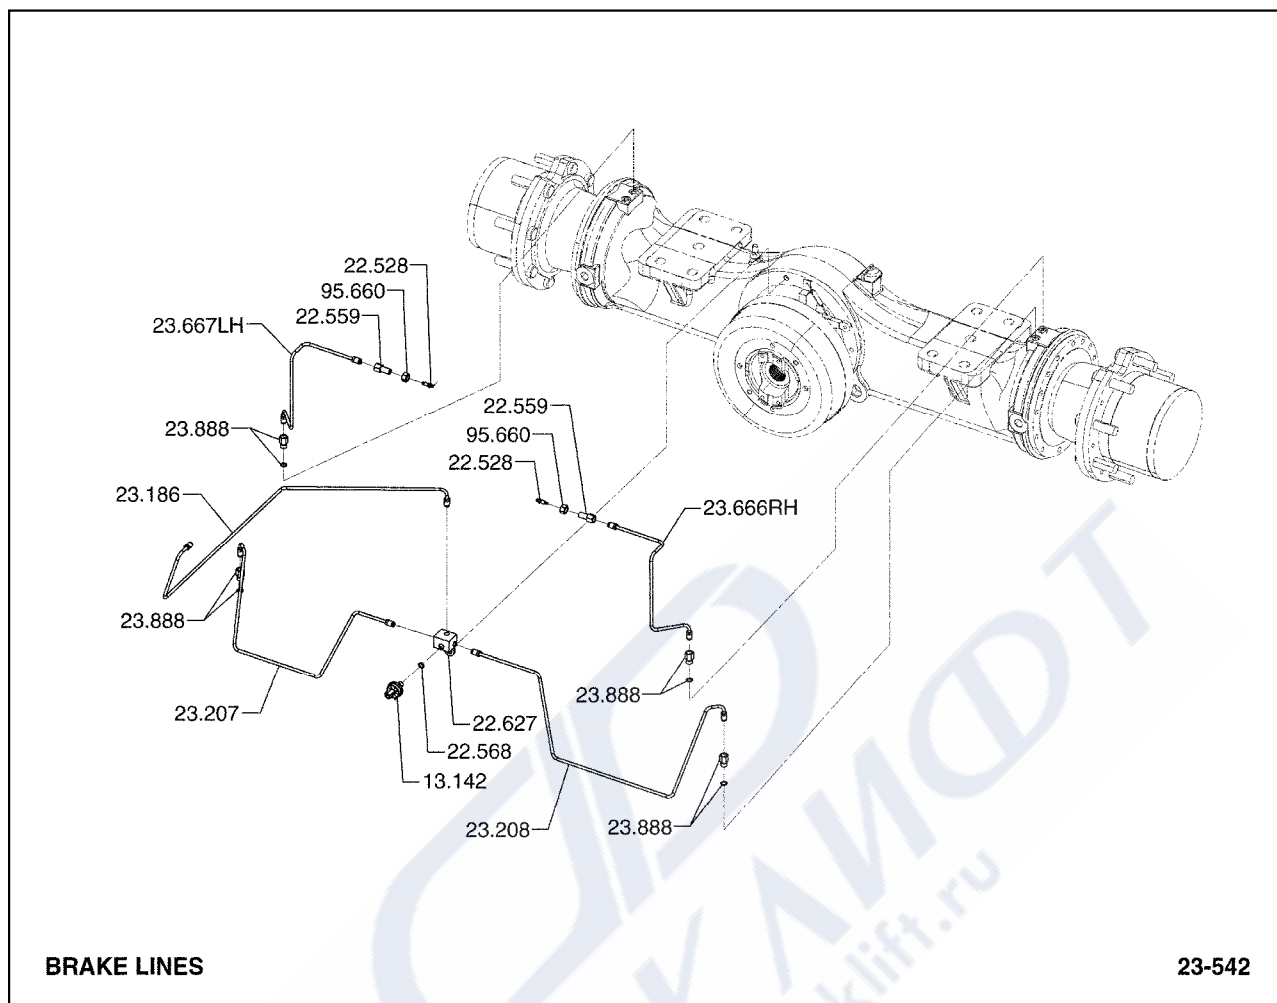 

**BRAKE LINES**

 
**23-542**

|        |                                                  |
|--------|--------------------------------------------------|
| 13.142 | SWITCH, BRAKE INTERLOCK<br>스위치                   |
| 22.528 | BLEEDER, BRAKE LINES ADAPTOR<br>블리더              |
| 22.559 | FITTING, BRAKE LINES BLEEDER<br>피팅               |
| 22.568 | SEAL, BRAKE LINE TEE PLUG<br>씰                   |
| 22.627 | TEE, BRAKE LINE<br>티                             |
| 23.186 | LINE, BRAKE MASTER CYLINDER OUTLET<br>라인         |
| 23.207 | LINE, LH DRIVE WHEEL BRAKE CYLINDER TO TEE<br>라인 |
| 23.208 | LINE, RH DRIVE WHEEL BRAKE CYLINDER TO TEE<br>라인 |
| 23.666 | LINE, BRAKE CYLINDER BLEEDER (RH)<br>라인          |

---

|        |                                         |
|--------|-----------------------------------------|
| 23.667 | LINE, BRAKE CYLINDER BLEEDER (LH)<br>라인 |
| 23.888 | FITTING, BRAKE LINE<br>피팅               |
| 95.660 | NUT, BRAKE LINES ADAPTER FASTENER<br>너트 |

ФОРКЛИФТ  
www.forklift.ru

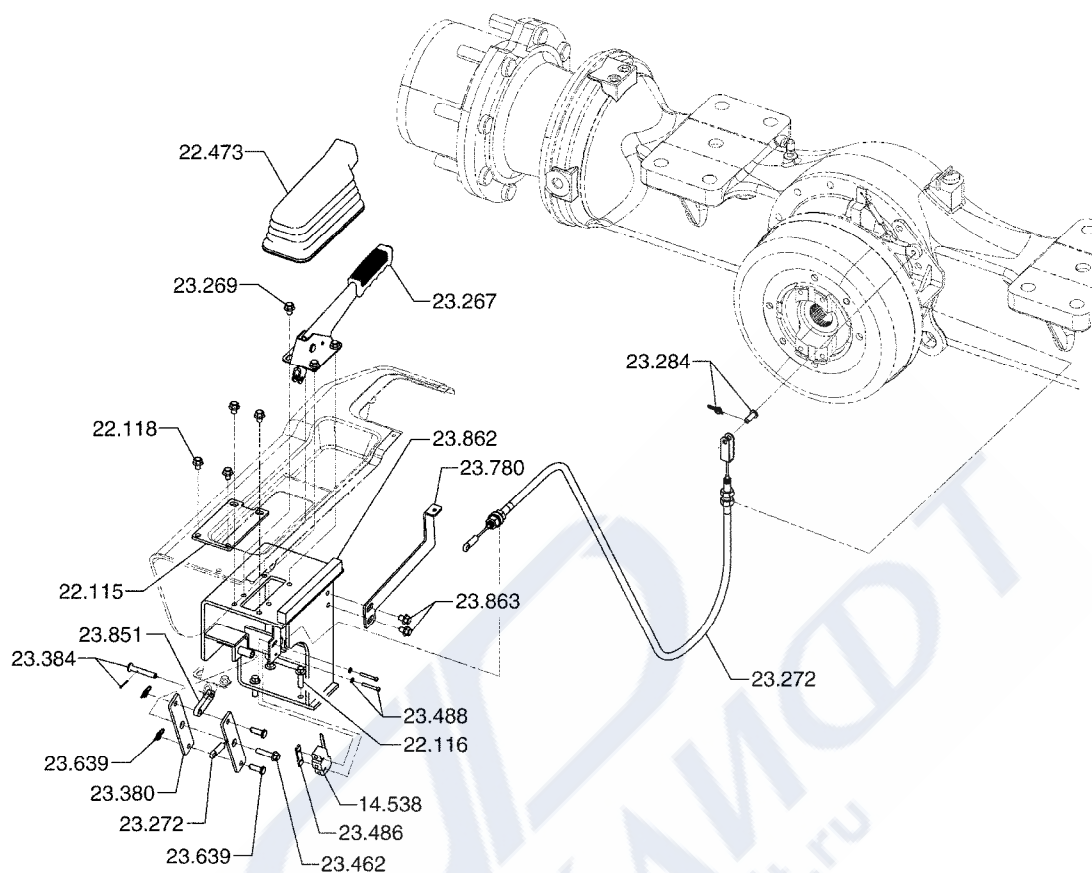


**PARKING BRAKE SYSTEM**

**23-543**

|        |                                                      |
|--------|------------------------------------------------------|
| 14.538 | SWITCH, PARK BRAKE<br>스위치                            |
| 22.115 | SUPPORT, PARKING BRAKE LEVER MOUNTING BRACKET<br>서포트 |
| 22.116 | FASTENER, PARKING BRAKE MOUNTING BRKT SUPPORT<br>패스너 |
| 22.118 | FASTENER, PARKING BRAKE LEVER<br>패스너                 |
| 22.473 | COVER, HAND BRAKE LEVER<br>커버                        |
| 23.267 | LEVER, PARKING BRAKE<br>레버                           |
| 23.269 | FASTENER, PARKING BRAKE LEVER<br>패스너                 |
| 23.272 | CABLE, PARKING BRAKE<br>케이블                          |
| 23.284 | FASTENER, PARKING BRAKE CABLE BRACKET<br>패스너         |

|        |                                              |
|--------|----------------------------------------------|
| 23.380 | LINK, PARKING BRAKE<br>링크                    |
| 23.384 | FASTENER, PARKING BRAKE LINK<br>패스너          |
| 23.462 | FASTENER, PARKING BRAKE LINK<br>패스너          |
| 23.486 | SIDE PLATE, PARKING BRAKE<br>사이드플레이트         |
| 23.488 | FASTENER, PARKING BRAKE SIDE PLATE<br>패스너    |
| 23.639 | FASTENER, PARKING BRAKE CABLE ANCHOR<br>패스너  |
| 23.780 | SUPPORT, PARKING BRAKE LINKAGE<br>서포트        |
| 23.851 | LINK, PARKING BRAKE<br>링크                    |
| 23.862 | BRACKET, PARKING BRAKE LEVER MOUNTING<br>브라켓 |
| 23.863 | FASTENER, PARKING BRAKE LEVER BRACKET<br>패스너 |

 
■ INDICATES AN ASSEMBLY  
HAVING SERVICEABLE  
COMPONENTS ILLUSTRATED  
ELSEWHERE

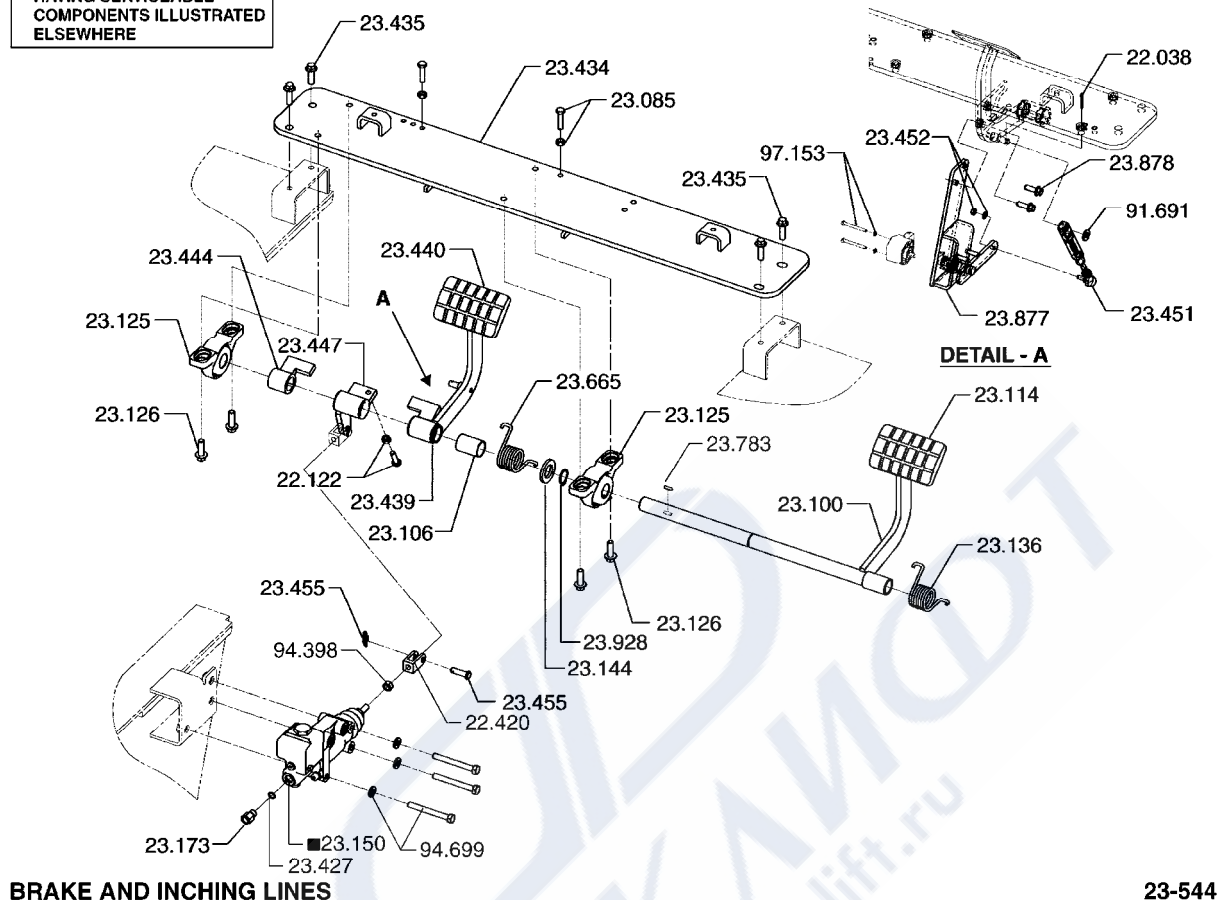

|        |                                                 |        |                                                         |
|--------|-------------------------------------------------|--------|---------------------------------------------------------|
| 22.038 | PIN, INCHING PEDAL LINKAGE<br>핀                 | 23.435 | FASTENER, BRAKE PEDAL PIVOT BRACKET<br>패스너              |
| 22.122 | FASTENER, BRAKE PEDAL PIVOT RETAINER<br>패스너     | 23.439 | PEDAL, INCHING<br>페달                                    |
| 22.420 | CLEVIS, MASTER CYLINDER PUSH ROD<br>클레비스        | 23.440 | PAD & FASTENER, INCHING PEDAL<br>패드 & 패스너               |
| 23.085 | FASTENER, BRAKE PEDAL STOP<br>패스너               | 23.444 | LEVER, INBOARD INCHING<br>레버                            |
| 23.100 | PEDAL, BRAKE<br>페달                              | 23.447 | LEVER, OUTBOARD INCHING<br>레버                           |
| 23.106 | SPACER, BRAKE PEDAL BEARING<br>스페이서             | 23.451 | ROD, INCHING LEVER<br>로드                                |
| 23.114 | PAD & FASTENER, BRAKE PEDAL<br>패드 & 패스너         | 23.452 | FASTENER, INCHING LEVER ROD<br>패스너                      |
| 23.125 | BEARING, BRAKE PEDAL SHAFT<br>베어링               | 23.455 | FASTENER, INCHING LEVER ROD CLEVIS<br>패스너               |
| 23.126 | FASTENER, BRAKE PEDAL SHAFT BEARING<br>패스너      | 23.665 | SPRING, INCHING PEDAL RETURN<br>스프링                     |
| 23.136 | SPRING, BRAKE PEDAL RETURN<br>스프링               | 23.783 | KEY, BRAKE PEDAL<br>키                                   |
| 23.144 | WASHER, BRAKE PEDAL SHAFT<br>와셔                 | 23.877 | BRACKET, INCHING PEDAL PIVOT<br>브라켓                     |
| 23.150 | CYLINDER ASSEMBLY, BRAKE MASTER COMPLETE<br>실린더 | 23.878 | FASTENER, INCHING PEDAL PIVOT BRACKET<br>패스너            |
| 23.173 | FITTING, BRAKE MASTER CYLINDER OUTLET<br>피팅     | 23.928 | RETAINER, INCHING PEDAL SHAFT<br>리테이너                   |
| 23.427 | SEAL, MASTER CYLINDER OUTLET HOUSING<br>씰       | 91.691 | WASHER, INCHING PEDAL FASTENER<br>와셔                    |
| 23.434 | BRACKET, BRAKE PEDAL PIVOT<br>브라켓               | 94.398 | NUT, BRAKE MASTER CYLINDER ACTUATING ROD FASTENER<br>너트 |


|        |                                                        |
|--------|--------------------------------------------------------|
| 94.699 | FASTENER, BRAKE MASTER CYLINDER SUPPORT BRACKET<br>패스너 |
| 97.153 | FASTENER, INCHING BRAKE ANGLE SENSOR<br>패스너            |



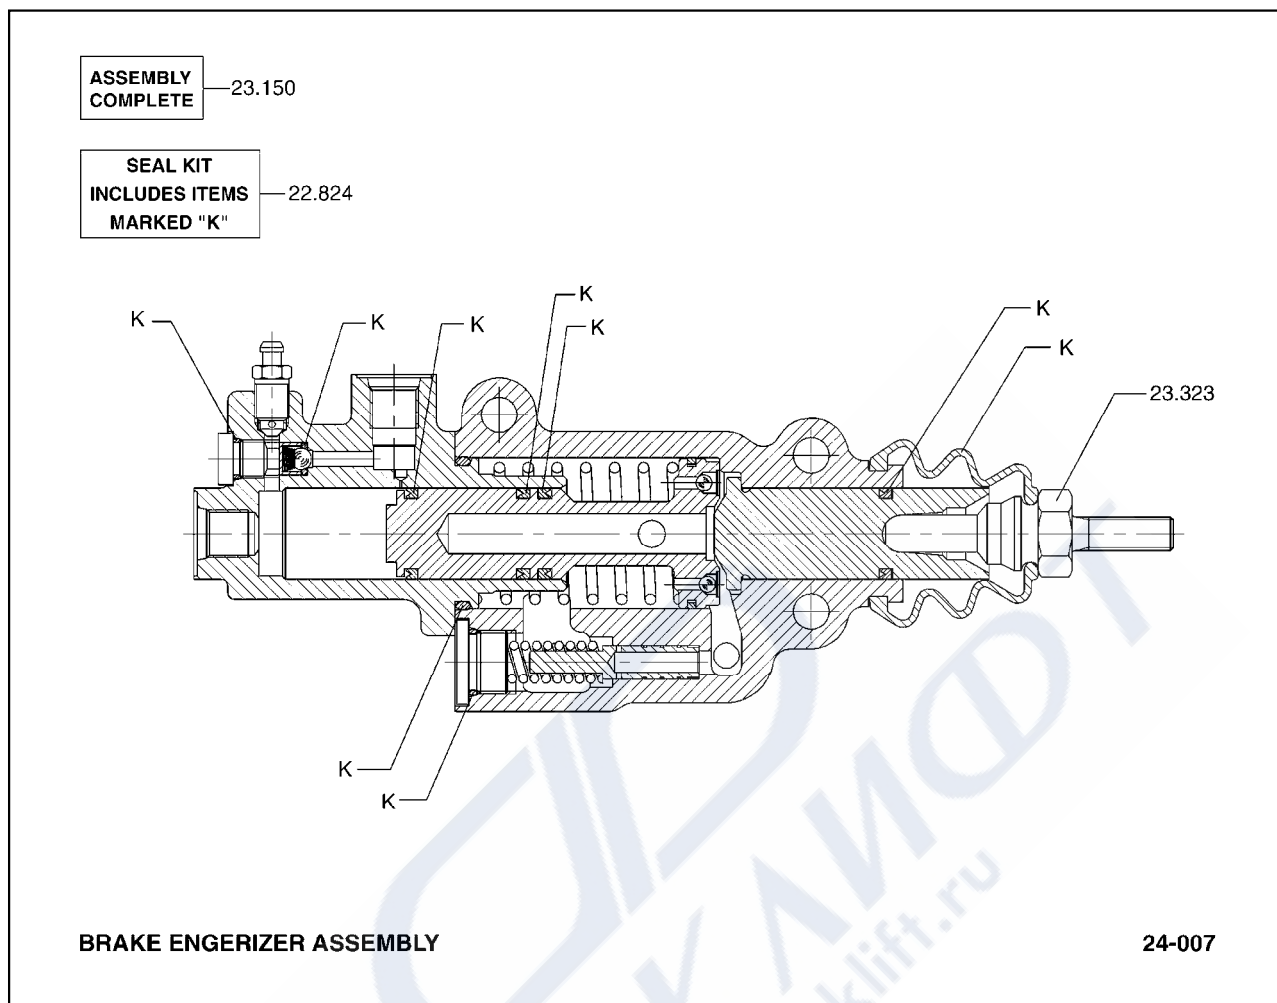 

- |        |                                                 |
|--------|-------------------------------------------------|
| 22.824 | SEAL KIT, BRAKE ENERGIZER/MASTER CYL<br>씰키트     |
| 23.150 | CYLINDER ASSEMBLY, BRAKE MASTER COMPLETE<br>실린더 |
| 23.323 | ROD, BRAKE ADJUSTING<br>로드                      |

 ■ INDICATES AN ASSEMBLY  
HAVING SERVICEABLE  
COMPONENTS ILLUSTRATED  
ELSEWHERE

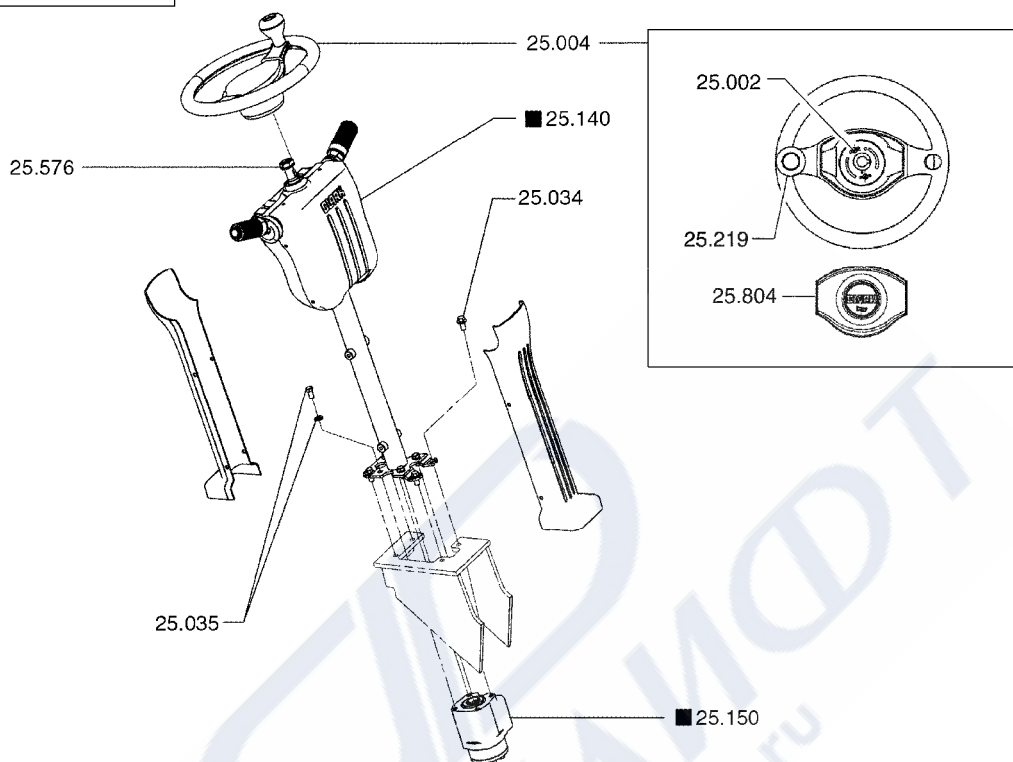


**STEERING WHEEL & COLUMN MOUNTING**

**25-133**

 
- |        |                                                        |
|--------|--------------------------------------------------------|
| 25.002 | HORN BUTTON KIT<br>혼버튼키트                               |
| 25.004 | HAND WHEEL, STEERING GEAR<br>핸드휠                       |
| 25.035 | FASTENER, STEERING GEAR ATTACHING<br>패스너               |
| 25.150 | GEAR BOX ASSEMBLY, STEERING<br>기어박스                    |
| 25.219 | KNOB, STEERING HAND WHEEL SPINNER<br>노브                |
| 25.576 | SPACER, STEERING HAND WHEEL<br>스페이서                    |
| 25.770 | SHAFT & COLUMN ASSY, POWER STEERING (TILT)<br>샤프트& 컬럼  |
| 25.785 | FASTENER, TILT STEERING SHAFT & COLUMN ASSEMBLY<br>패스너 |
| 25.804 | COVER, HANDLE CONTROL ASSEMBLY<br>커버                   |



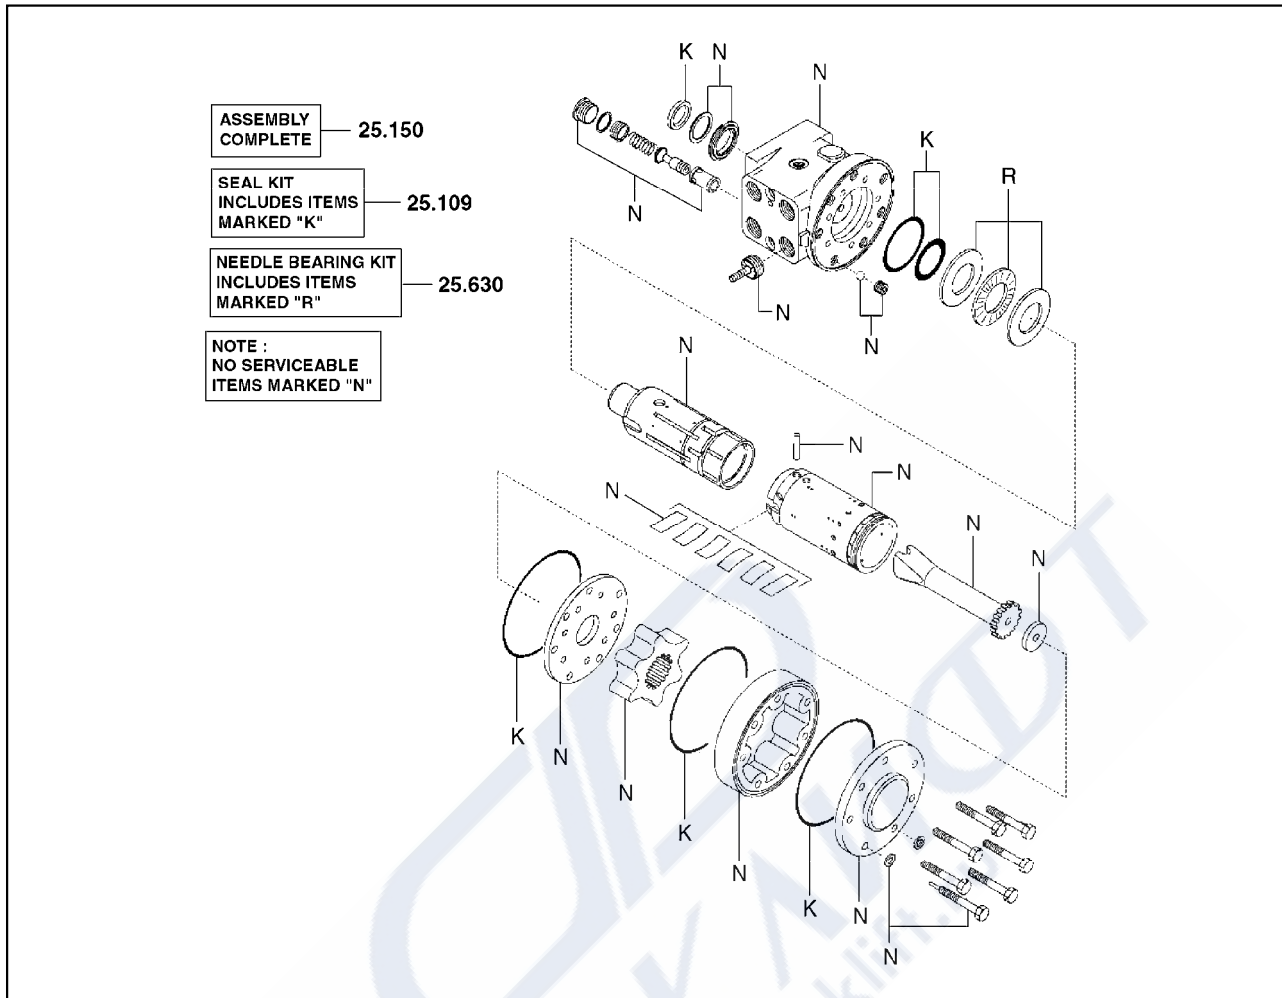

- |        |                                      |
|--------|--------------------------------------|
| 25.109 | KIT, STEER GEAR SEAL<br>키트           |
| 25.150 | GEAR BOX ASSEMBLY, STEERING<br>기어박스  |
| 25.630 | REPAIR KIT, STEERING COLUMN<br>리페어키트 |

 ASSEMBLY  
COMPLETE 25.030

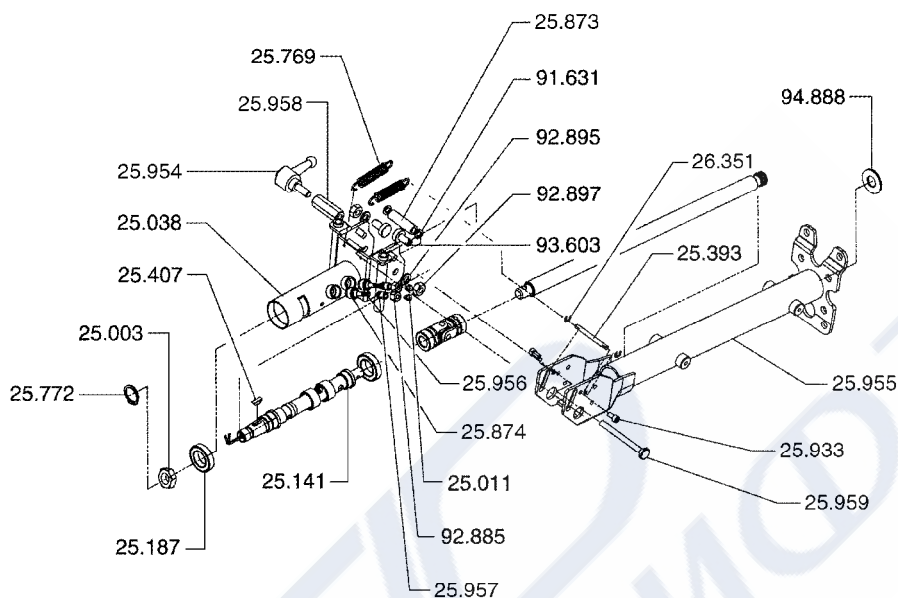

STEERING COLUMN SHAFT ASSEMBLY


25-291

|        |                                                 |
|--------|-------------------------------------------------|
| 25.003 | NUT, HANDWHEEL<br>너트                            |
| 25.011 | FASTENER, STEERING COLUMN<br>패스너                |
| 25.030 | SHAFT ASSEMBLY, STEERING COLUMN<br>샤프트          |
| 25.038 | HOUSING ASSEMBLY-CUP & BUSHING, STEERING<br>하우징 |
| 25.141 | SHAFT, STEERING GEAR<br>샤프트                     |
| 25.187 | BEARING, STEER SHAFT<br>베어링                     |
| 25.393 | PIN, STEERING LINK (STEERING ARM)<br>핀          |
| 25.407 | KEY, STEER COLUMN SHAFT COUPLING<br>키           |
| 25.769 | SPRING, STEERING COLUMN TILTING (LOWER)<br>스프링  |

---

|        |                                                           |
|--------|-----------------------------------------------------------|
| 25.772 | RETAINER, STEERING COLUMN SHAFT<br>리테이너                   |
| 25.873 | BUSHING, STEER COLUMN AXIAL<br>부싱                         |
| 25.874 | BUSHING, STEER COLUMN TELESCOPING<br>부싱                   |
| 25.933 | FASTENER, STEERING COLUMN<br>패스너                          |
| 25.954 | ARM, TILT STEERING COLUMN ADJUSTOR<br>암                   |
| 25.955 | SUPPORT, STEERING COLUMN SHAFT<br>서포트                     |
| 25.956 | BRUSH, STEERING COLUMN SHAFT<br>브러쉬                       |
| 25.957 | BRUSH HOLDER, STEERING COLUMN SHAFT<br>브러쉬홀더              |
| 25.958 | PIVOT, TILT STEERING COLUMN ADJUSTOR ARM<br>피봇            |
| 25.959 | PIN, TILT STEERING COLUMN ADJUSTOR ARM<br>핀               |
| 26.351 | WASHER, STEERING ARM PIN<br>와셔                            |
| 91.631 | WASHER, STEERING COLUMN UPPER BRACKET FASTENER<br>와셔      |
| 92.885 | NUT, STEERING COLUMN UPPER BRACKET FASTENER<br>너트         |
| 92.895 | WASHER, STEERING COLUMN SUPPORT FASTENER<br>와셔            |
| 92.897 | NUT, STEERING COLUMN SUPPORT FASTENER<br>너트               |
| 93.603 | FASTENER, STEERING COLUMN TILTING SPRING BALL STUD<br>패스너 |
| 94.888 | RETAINER, STEERING COLUMN ADJUSTOR<br>리테이너                |

 
---

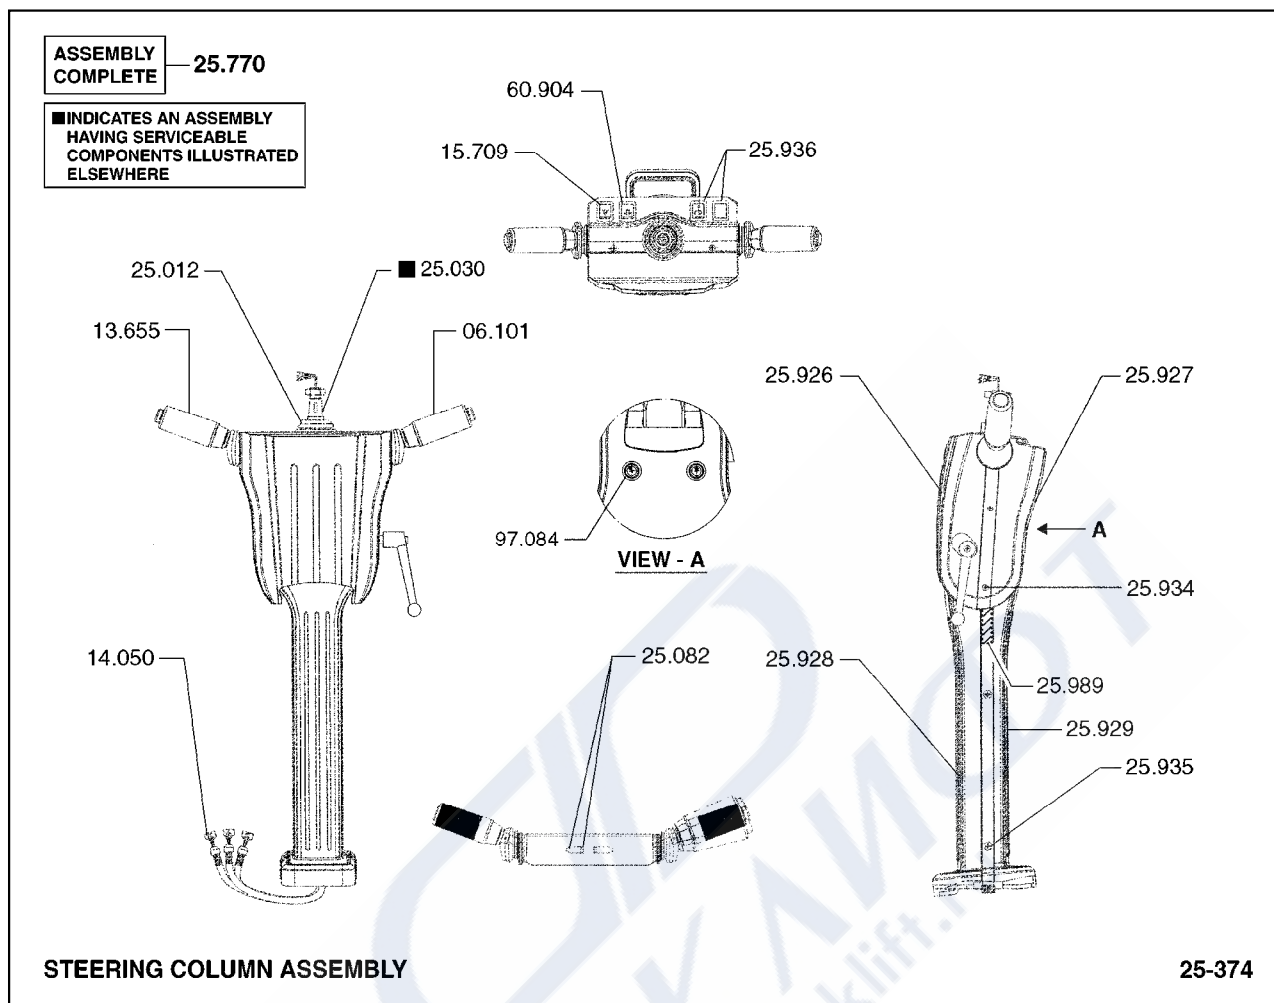


|        |                                                       |
|--------|-------------------------------------------------------|
| 06.101 | LEVER ASSEMBLY, FORWARD & REVERSE<br>레버               |
| 13.655 | SWITCH, TURN INDICATOR<br>스위치                         |
| 14.050 | HARNESS, CONTROL CIRCUIT WIRING<br>하네스                |
| 15.709 | SWITCH, EMERGENCY<br>스위치                              |
| 25.012 | CUSHION, STEERING COLUMN<br>쿠션                        |
| 25.030 | SHAFT ASSEMBLY, STEERING COLUMN<br>샤프트                |
| 25.082 | FASTENER, LEVER MOUNTING BRACKET<br>패스너               |
| 25.770 | SHAFT & COLUMN ASSY, POWER STEERING (TILT)<br>샤프트& 컬럼 |
| 25.926 | COVER, STEER COLUMN FRONT UPPER<br>커버                 |


---

|        |                                        |
|--------|----------------------------------------|
| 25.927 | COVER, STEER COLUMN REAR UPPER<br>커버   |
| 25.928 | COVER, STEER COLUMN FRONT LOWER<br>커버  |
| 25.929 | COVER, STEER COLUMN REAR LOWER<br>커버   |
| 25.934 | FASTENER, STEER COLUMN COVER<br>패스너    |
| 25.935 | FASTENER, STEER COLUMN COVER<br>패스너    |
| 25.936 | PLUG, STEER COLUMN SWITCH<br>플러그       |
| 25.989 | SOUND SEAL, STEER COLUMN COVER<br>사운드셀 |
| 60.904 | SWITCH, STROBE LIGHT<br>스위치            |
| 97.084 | FASTENER, STEER COLUMN COVER<br>패스너    |

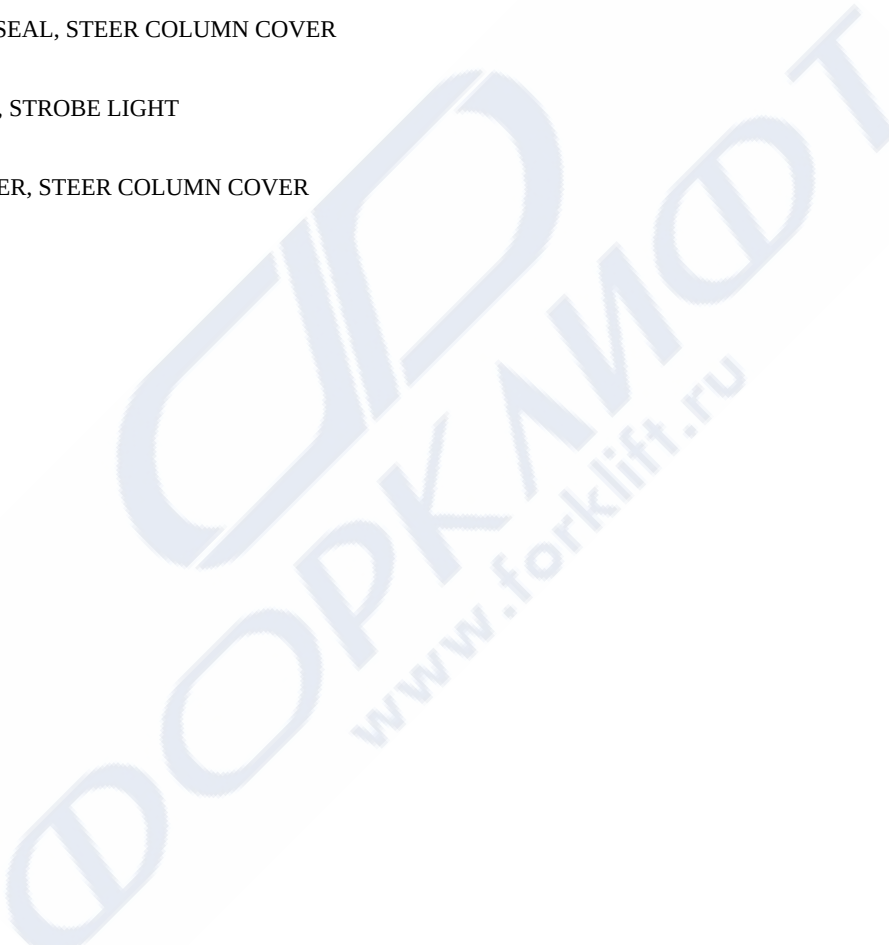 


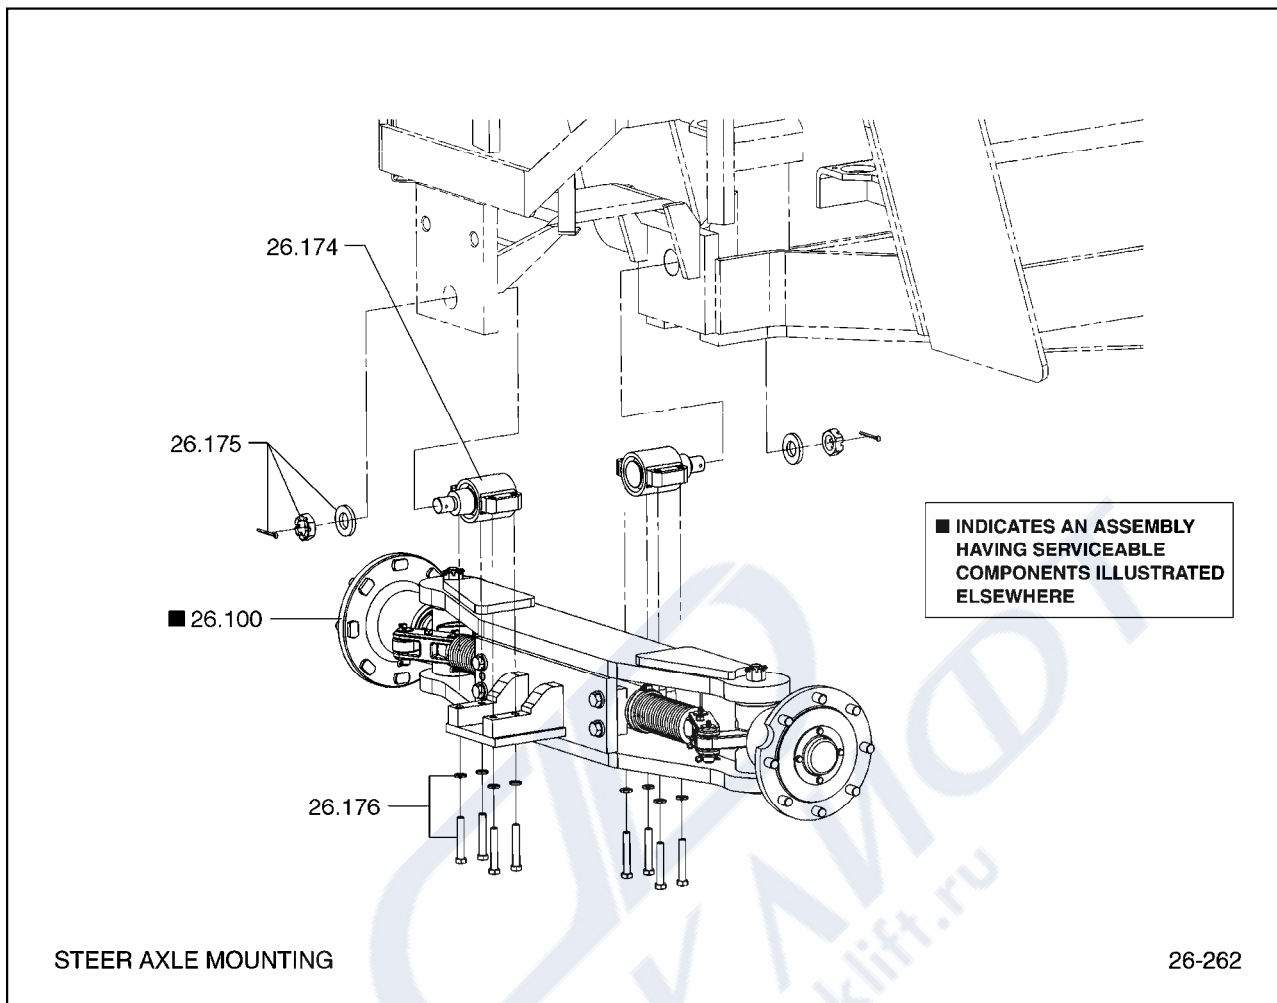 

- |        |                                               |
|--------|-----------------------------------------------|
| 26.100 | AXLE ASSEMBLY, STEERING<br>스티어액슬              |
| 26.174 | SILENT BLOCK, AXLE MOUNTING (REAR)<br>사일런트블록  |
| 26.175 | FASTENER, SILENT BLOCK TO FRAME (REAR)<br>패스너 |
| 26.176 | FASTENER, SILENT BLOCK (REAR)<br>패스너          |

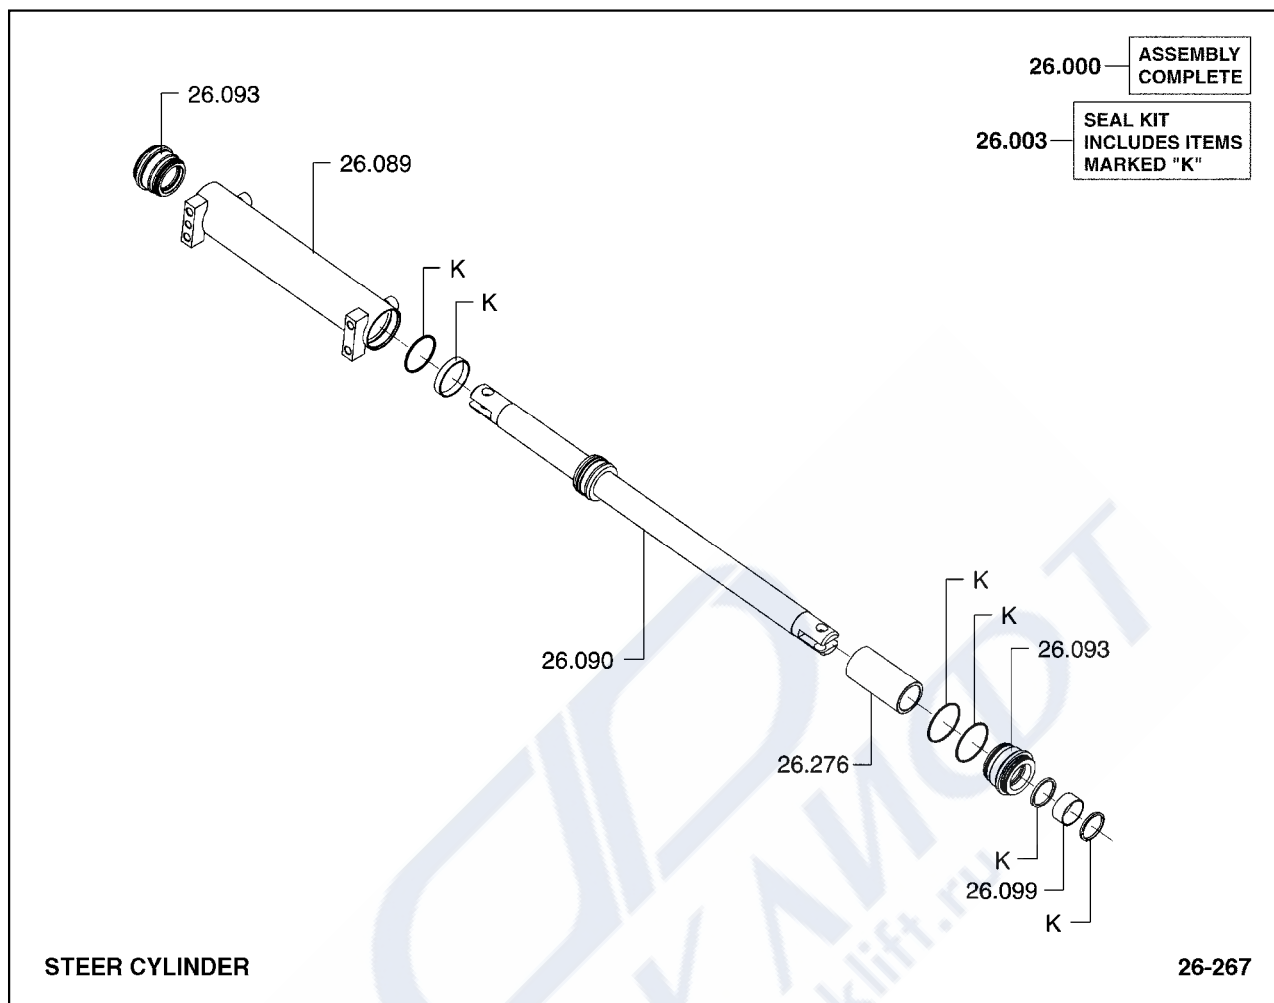 

|        |                                        |
|--------|----------------------------------------|
| 26.000 | CYLINDER ASSEMBLY, STEERING<br>실린더     |
| 26.003 | SEAL KIT, PISTON ROD<br>씰키트            |
| 26.089 | BARREL, STEERING CYLINDER<br>배럴        |
| 26.090 | STEER CYLINDER PISTON<br>스티어실린더피스톤     |
| 26.093 | GLAND, STEERING CYLINDER<br>그랜드        |
| 26.099 | BUSHING, STEERING CYLINDER GLAND<br>부싱 |
| 26.276 | SPACER, STEER CYLINDER ROD END<br>스페이서 |

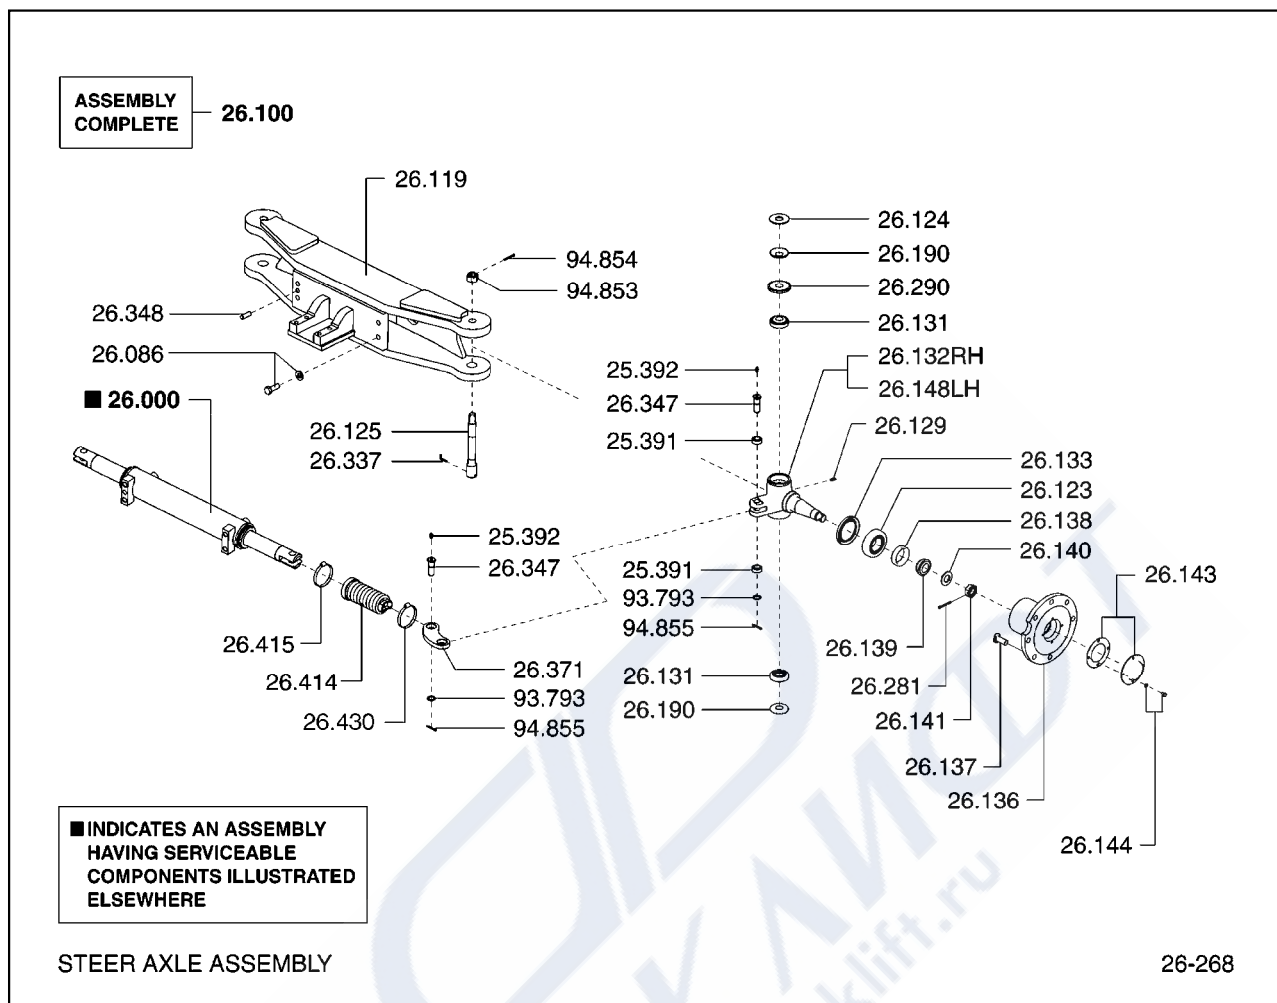 


|        |                                               |        |                                                        |
|--------|-----------------------------------------------|--------|--------------------------------------------------------|
| 25.391 | BEARING, STEERING ARM<br>베어링                  | 26.138 | CUP, STEER WHEEL HUB BEARING (OUTER)<br>컵              |
| 25.392 | FITTING-LUB, STEERING ARM<br>피팅               | 26.139 | CONE, STEER WHEEL HUB BEARING (OUTER)<br>콘             |
| 26.000 | CYLINDER ASSEMBLY, STEERING<br>실린더            | 26.140 | WASHER, STEER WHEEL HUB BEARING THRUST<br>와셔           |
| 26.086 | FASTENER, STEERING CYLINDER ANCHOR END<br>패스너 | 26.141 | FASTENER, STEER WHEEL HUB<br>패스너                       |
| 26.100 | AXLE ASSEMBLY, STEERING<br>스티어액슬              | 26.143 | CAP, STEER WHEEL HUB<br>캡                              |
| 26.119 | AXLE, STEER<br>액슬                             | 26.144 | FASTENER, STEER AXLE HUB CAP<br>패스너                    |
| 26.123 | BEARING, STEER AXLE KNUCKLE THRUST<br>베어링     | 26.148 | KNUCKLE, STEER AXLE (LH)<br>너트                         |
| 26.124 | SHIM, STEER AXLE KNUCKLE<br>심                 | 26.190 | SEAL, STEER AXLE KNUCKLE OIL<br>씰                      |
| 26.125 | PIN, STEER AXLE KNUCKLE<br>핀                  | 26.281 | RETAINER, STEER AXLE HUB BRG KNUCKLE NUT<br>리테이너       |
| 26.129 | FITTING - LUB, STEER AXLE KNUCKLE<br>피팅       | 26.290 | RETAINER, STEER AXLE KNUCKLE PIN LOWER BEARING<br>리테이너 |
| 26.131 | BEARING, STEER AXLE KNUCKLE PIN LOWER<br>베어링  | 26.337 | LOCATOR, STEER AXLE KNUCKLE PIN<br>로케이터                |
| 26.132 | KNUCKLE, STEER AXLE (RH)<br>너트                | 26.347 | PIN, STEER ARM<br>핀                                    |
| 26.133 | SEAL, STEER WHEEL HUB<br>씰                    | 26.348 | LOCATOR, STEER CYLINDER<br>로케이터                        |
| 26.136 | HUB & CUP, STEER WHEEL<br>허브&컵                | 26.371 | TIE ROD, STEER AXLE<br>타이드로드                           |
| 26.137 | FASTENER, STEER WHEEL<br>패스너                  | 26.414 | BOOT, STEER AXLE<br>부트                                 |



|        |                                               |
|--------|-----------------------------------------------|
| 26.415 | CLAMP, STEER AXLE BOOT<br>클램프                 |
| 26.430 | CLAMP, STEER AXLE BOOT MTG<br>클램프             |
| 93.793 | WASHER, STEERING ARM PIVOT FASTENER<br>와셔     |
| 94.853 | FASTENER, STEER AXLE KNUCKLE PIN<br>패스너       |
| 94.854 | COTTER, STEER AXLE KNUCKLE PIN FASTENER<br>커터 |
| 94.855 | RETAINER, STEERING ARM PIN<br>리테이너            |



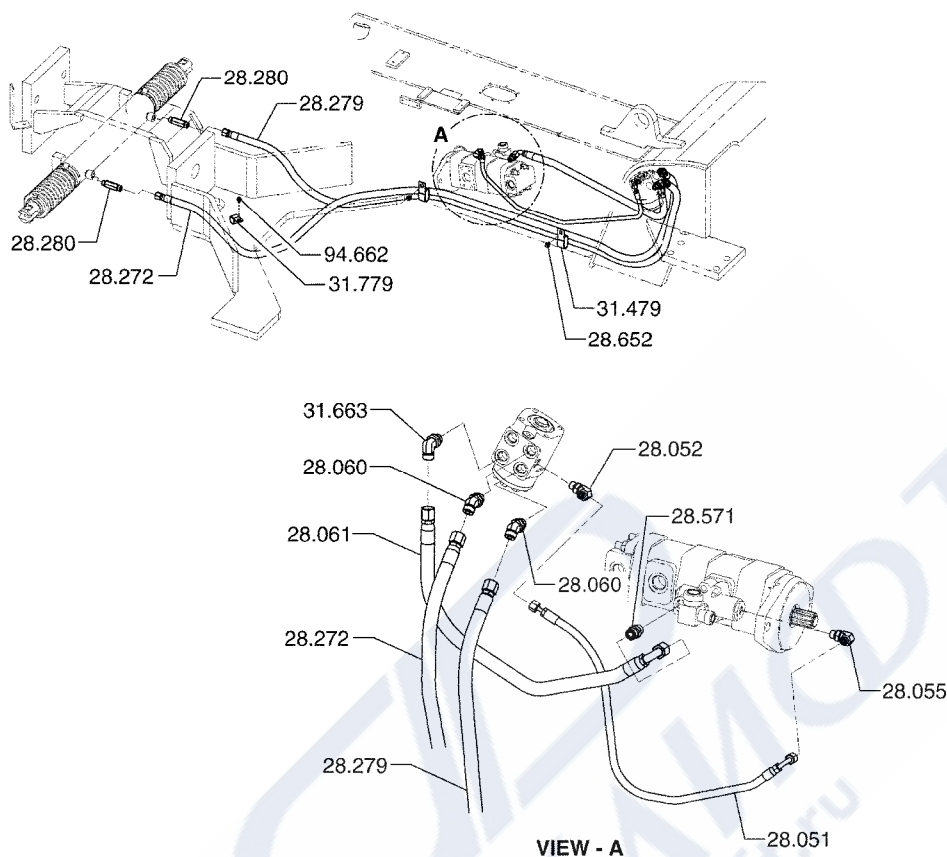 


HYDRAULIC STEERING SYSTEM

26-319


|        |                                         |
|--------|-----------------------------------------|
| 28.051 | LINE, STEERING GEAR<br>라인               |
| 28.052 | FITTING, STEERING GEAR<br>피팅            |
| 28.055 | FITTING, STEERING GEAR<br>피팅            |
| 28.060 | FITTING, STEER VALVE CONTROL PORT<br>피팅 |
| 28.061 | LINE, STEER VALVE CONTROL<br>라인         |
| 28.272 | LINE, STEER CYLINDER INLET<br>라인        |
| 28.279 | LINE, STEER CYLINDER INLET<br>라인        |
| 28.280 | FITTING, STEER CYLINDER<br>피팅           |
| 28.571 | FITTING, STEER VALVE INLET LINE<br>피팅   |

|        |                                             |
|--------|---------------------------------------------|
| 28.652 | CAPSCREW, STEERING LINES CLIP<br>캡스크류       |
| 31.479 | CLAMP, STEERING LINES<br>클램프                |
| 31.663 | FITTING, STEER VALVE INLET PORT<br>피팅       |
| 31.779 | CLAMP, POWER STEERING LINES<br>클램프          |
| 94.662 | FASTENER, POWER STEERING LINES CLAMP<br>패스너 |



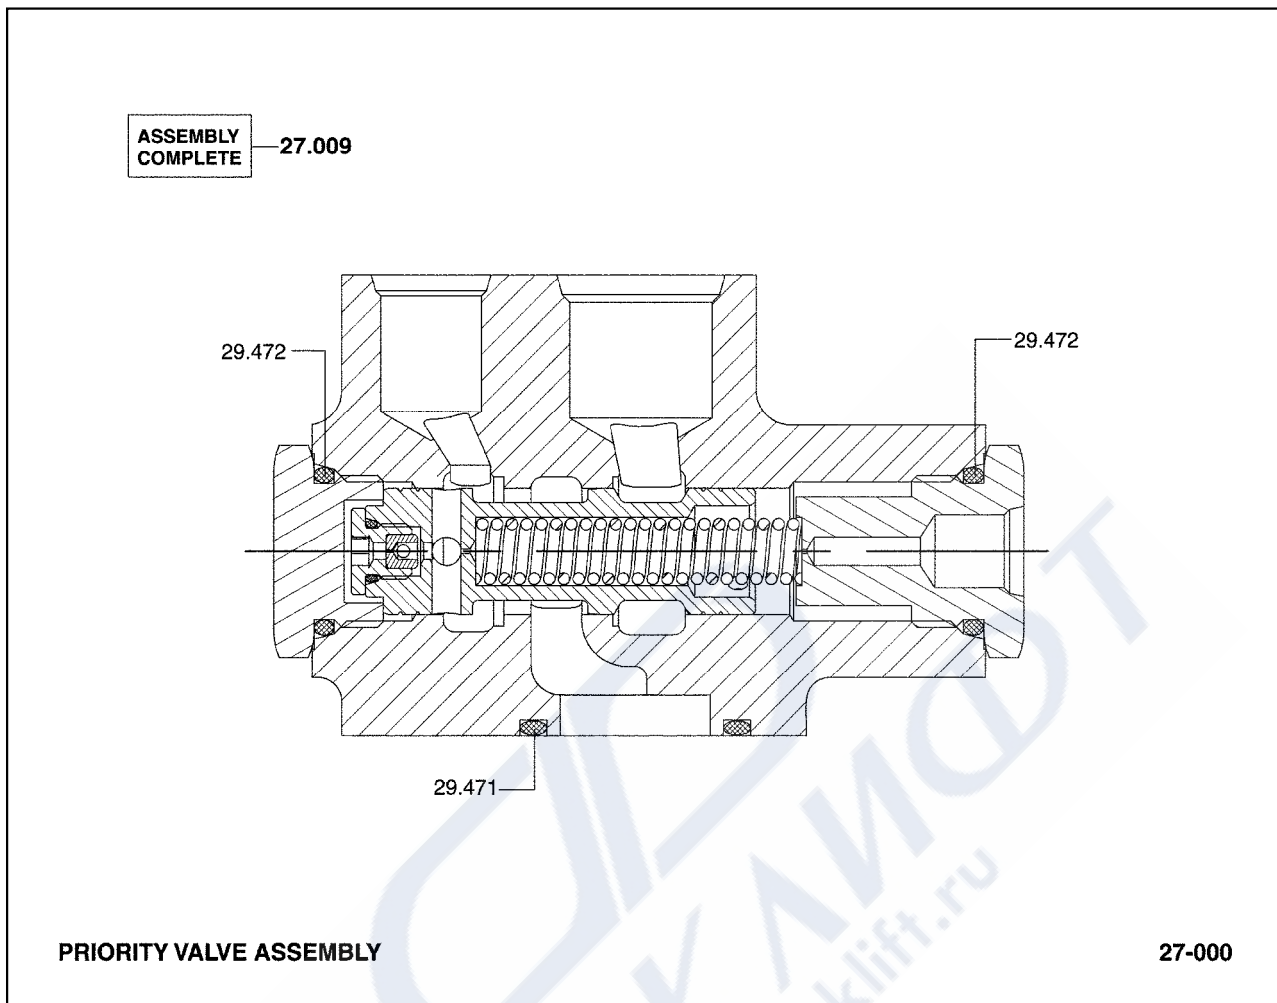 

|        |                                          |
|--------|------------------------------------------|
| 27.009 | VALVE ASSEMBLY, HYDRAULIC PRIORITY<br>밸브 |
| 29.471 | SEAL, PRIORITY VALVE FITTING<br>씰        |
| 29.472 | SEAL, PRIORITY VALVE FITTING<br>씰        |

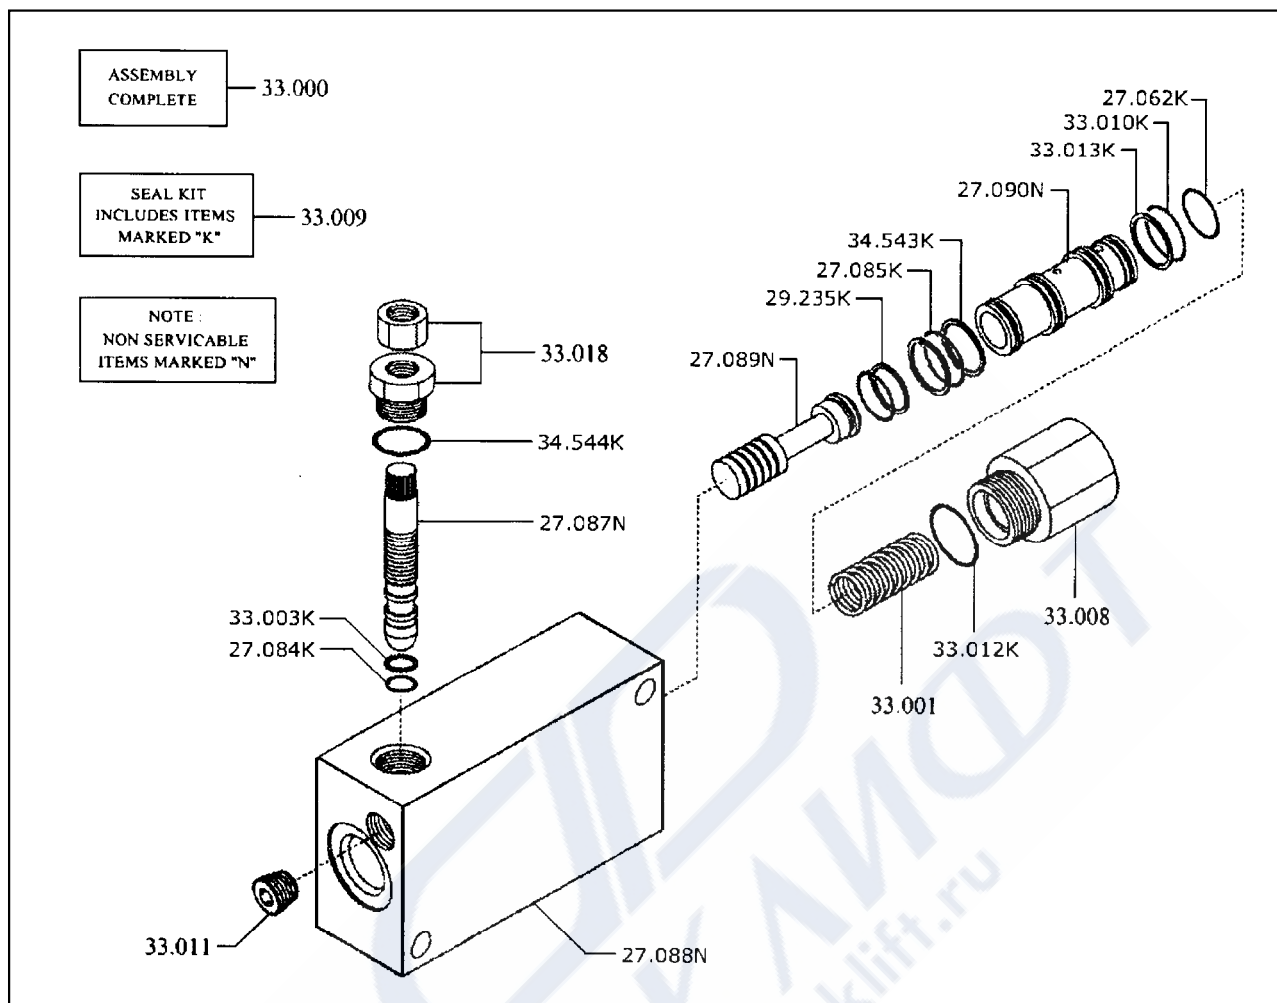 

|        |                                     |
|--------|-------------------------------------|
| 27.062 | SEAL, FLOW CONTROL VALVE<br>씰       |
| 27.084 | SEAL, FLOW CONTROL VALVE<br>씰       |
| 27.085 | SEAL, FLOW CONTROL VALVE<br>씰       |
| 27.087 | STEM, FLOW REGULATOR VALVE<br>스텝    |
| 27.088 | BODY, FLOW REGULATOR VALVE<br>바디    |
| 27.089 | SPOOL, FLOW REGULATOR VALVE<br>스풀   |
| 27.090 | SLEEVE, FLOW REGULATOR VALVE<br>슬리브 |
| 29.235 | RETAINER, RELIEF VALVE PLUG<br>리테이너 |
| 33.000 | VALVE ASSEMBLY, FLOW CONTROL<br>밸브  |

---


|        |                                                   |
|--------|---------------------------------------------------|
| 33.001 | SPRING, FLOW CONTROL VALVE<br>스프링                 |
| 33.003 | RETAINER, FLOW CONTROL VALVE SUB-ASSEMBLY<br>리테이너 |
| 33.008 | PLUG, FLOW VALVE<br>플러그                           |
| 33.009 | SEAL KIT, FLOW VALVE<br>씰키트                       |
| 33.010 | SEAL, FLOW VALVE PORT PLUG<br>씰                   |
| 33.011 | PLUG, FLOW VALVE PORT<br>플러그                      |
| 33.012 | SEAL, FLOW CONTROL VALVE SPRING PLUG<br>씰         |
| 33.013 | RETAINER, FLOW CONTROL VALVE SPRING PLUG<br>리테이너  |
| 33.018 | FASTENER, FLOW VALVE<br>패스너                       |
| 34.543 | FASTENER, FLOW CONTROL VALVE<br>패스너               |
| 34.544 | SEAL, FLOW CONTROL VALVE RETAINER<br>씰            |



|    |                                  |        |    |                                 |        |
|----|----------------------------------|--------|----|---------------------------------|--------|
| 1  | HYDRAULIC UNIT, CONTINUED        | 20.700 | 19 | ADAPTOR ASSEMBLY, PUMP          | ** 1   |
| 2  | HOUSING PUMP GEAR                | ** 1   | 20 | VALVE ASSEMBLY, RELIEF          | 29.181 |
| 3  | SEAT, RELEASE VALVE              | 29.195 | 21 | SPRING, RELIEF VALVE INNER      | 29.182 |
| 4  | VALVE ASSEMBLY, RELEASE          | 29.164 | 22 | SEAL, ADJUSTOR SCREW CAP        | 29.184 |
| 5  | SEAL, RELEASE VALVE ASSEMBLY CAP | 29.166 | 23 | CAP, RELIEF VALVE ASSEMBLY      | 29.185 |
| 6  | CAP, RELEASE VALVE ASSEMBLY      | 29.167 | 24 | SEAL, PUMP SHAFT                | 29.186 |
| 7  | BEARING, PUMP SHAFT INNER        | 29.138 | 25 | COUPLING, MOTOR TO PUMP         | 16.501 |
| 8  | BEARING, PUMP SHAFT OUTER        | 29.112 | 26 | FITTING, PUMP INLET             | 31.008 |
| 9  | RETAINER, PUMP IDLER GEAR        | 29.159 | 27 | LINE, PUMP INLET                | 31.006 |
| 10 | KEY, PUMP DRIVE GEAR             | 29.173 | 28 | FILTER, PUMP INLET              | 29.726 |
| 11 | GEAR, PUMP DRIVE                 | 29.171 | 29 | TANK, SUMP                      | 29.701 |
| 12 | SHAFT, PUMP DRIVE                | 29.139 | 30 | FASTENER, SUMP TANK             | 29.702 |
| 13 | SHAFT, PUMP IDLER                | 29.172 | 31 | RETAINER PUMP, DRIVE GEAR       | 29.170 |
| 14 | KEY, PUMP IDLER GEAR             | 29.188 | 32 | ADJUSTOR, RELIEF VALVE ASSEMBLY | 29.183 |
| 15 | GEAR, PUMP IDLER                 | 29.187 | 33 | SEAL, PUMP TO ADAPTOR           | 29.196 |
| 16 | SEAL, TANK TO ADAPTOR            | 29.703 | 34 | CAP, SUMP FILLER                | 29.728 |
| 17 | SEAL, PUMP TO ADAPTOR            | 29.176 | 35 | PUMP ASSEMBLY, MAIN HYDRAULIC   | 29.100 |
| 18 | FASTENER, PUMP HOUSING           | 29.119 |    |                                 |        |

\*\* NOT SOLD, USE ITEM NUMBER LISTED


|        |                                          |
|--------|------------------------------------------|
| 29.100 | PUMP ASSEMBLY, HYDRAULIC<br>펌프           |
| 29.106 | FASTENER, PUMP TO PLATE<br>패스너           |
| 29.150 | GASKET, HYDRAULIC PUMP MOUNTING<br>가스켓   |
| 29.500 | PUMP ASSEMBLY, AUXILIARY HYDRAULIC<br>펌프 |
| 29.507 | GASKET, AUXILIARY PUMP MOUNTING<br>가스켓   |
| 29.524 | FASTENER, AUXILIARY HYD PUMP<br>패스너      |
| 29.615 | SEAL, HYDRAULIC PUMP MOUNTING<br>셀       |

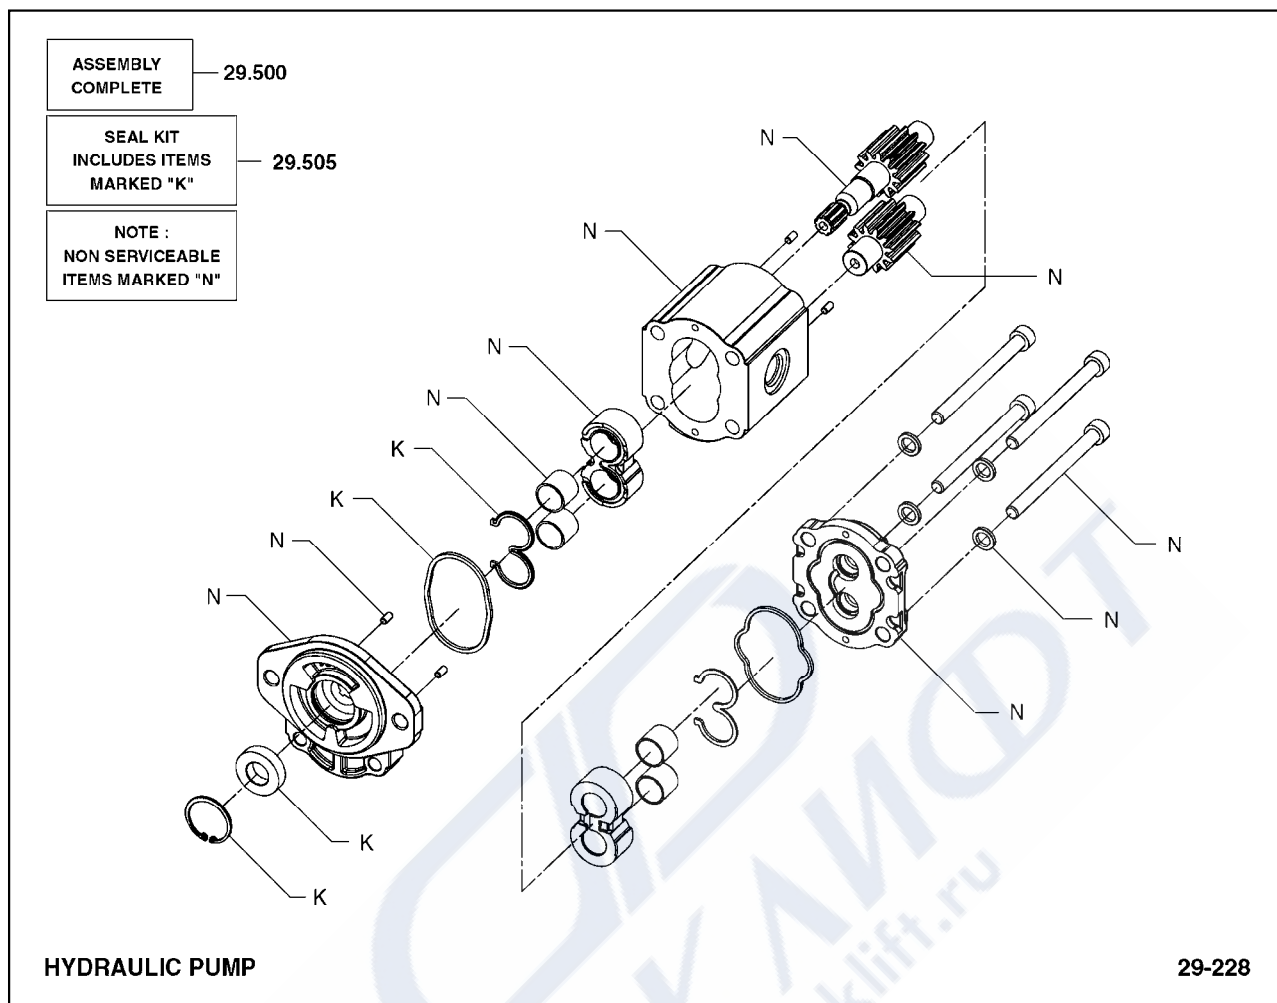 


29.500 PUMP ASSEMBLY, AUXILIARY HYDRAULIC  
펌프

 29.505 GASKET & SEAL KIT, AUXILIARY PUMP  
가스킷& 씬



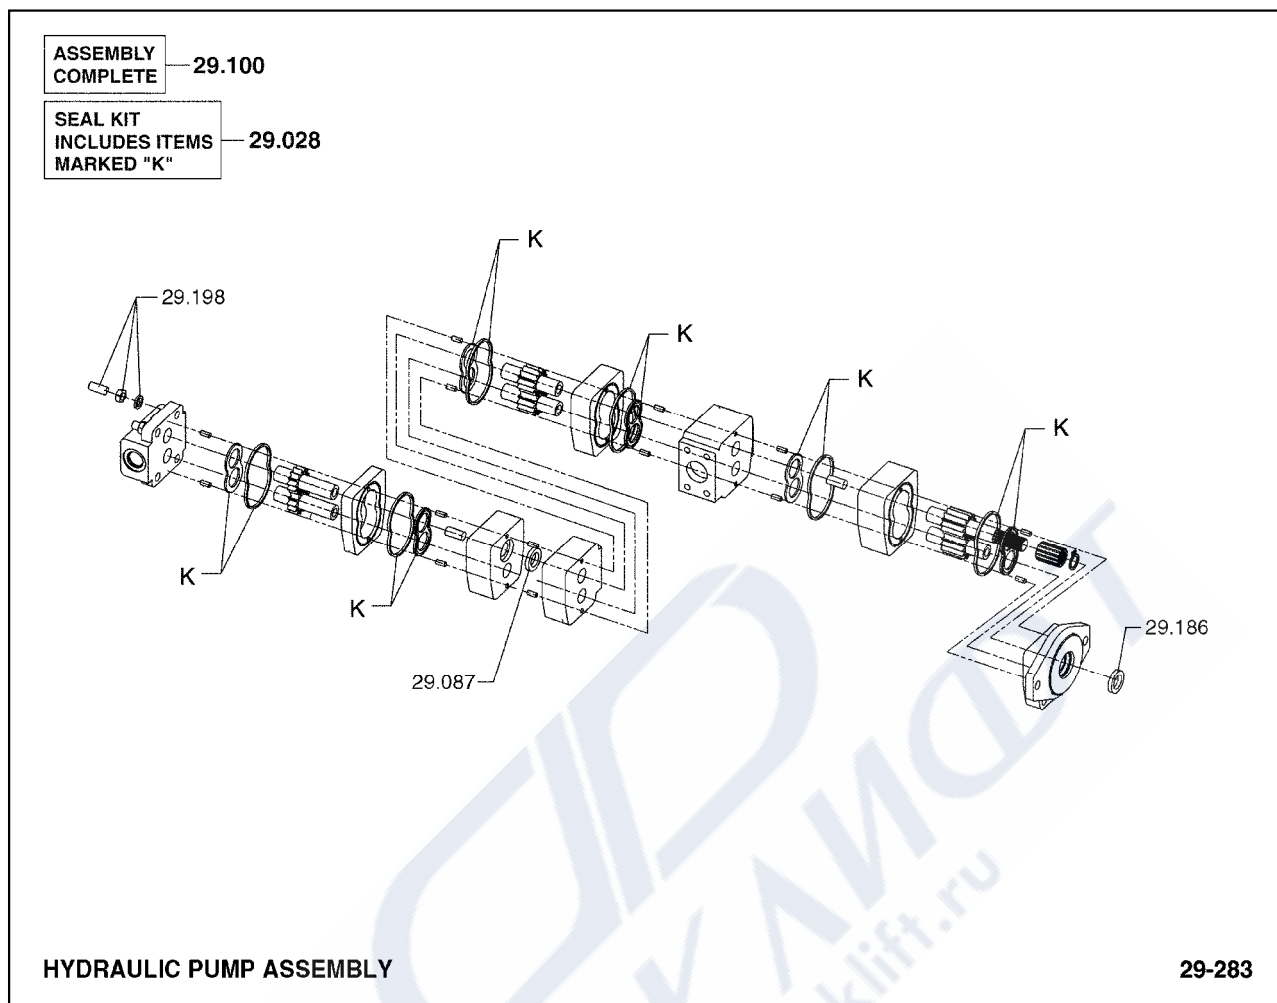

|        |                                      |
|--------|--------------------------------------|
| 29.028 | SEAL KIT, HYDRAULIC UNIT PUMP<br>씰키트 |
| 29.087 | SEAL, HYDRAULIC PUMP HOUSING<br>씰    |
| 29.100 | PUMP ASSEMBLY, HYDRAULIC<br>펌프       |
| 29.186 | SEAL, PUMP SHAFT<br>씰                |
| 29.198 | FASTENER, PUMP HOUSING<br>패스너        |

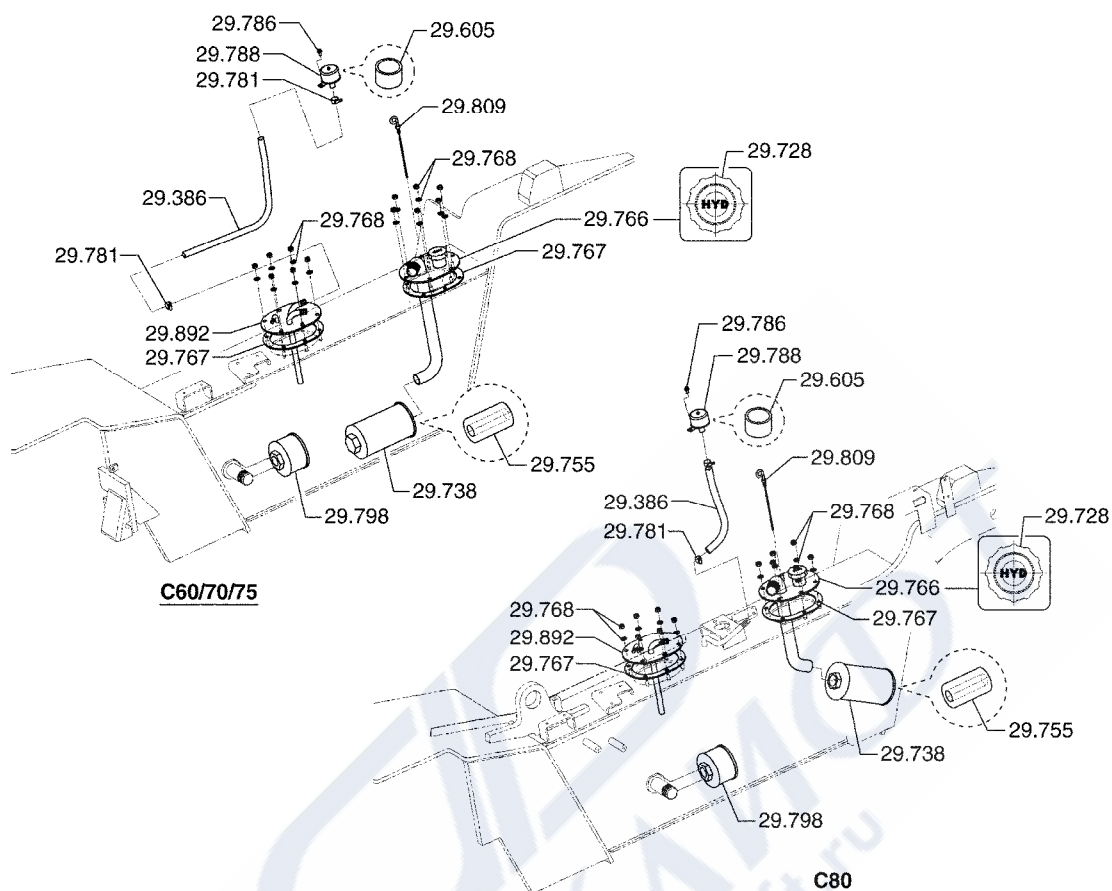 

HYD TANK & COMPONENTS MOUNTING


29-321

|        |                                       |
|--------|---------------------------------------|
| 29.386 | LINE, SUMP BREATHER<br>라인             |
| 29.605 | FILTER, AIR BREATHER<br>필터            |
| 29.728 | CAP, HYDRAULIC SUMP FILLER<br>캡       |
| 29.738 | FILTER ASSEMBLY, HYDRAULIC SUMP<br>필터 |
| 29.755 | SCREEN, HYDRAULIC SUMP FILTER<br>스크린  |
| 29.766 | COVER, SUMP TANK<br>커버                |
| 29.767 | SEAL, SUMP TANK COVER<br>셀            |
| 29.768 | FASTENER, SUMP TANK COVER<br>패스너      |
| 29.781 | CLAMP, SUMP BREATHER LINE<br>클램프      |

|        |                                          |
|--------|------------------------------------------|
| 29.786 | FASTENER, SUMP BREATHER<br>패스너           |
| 29.788 | BREATHER, SUMP<br>브리더                    |
| 29.798 | SCREEN, HYDRAULIC SUMP PRE FILTER<br>스크린 |
| 29.809 | DIPSTICK, SUMP LEVEL<br>딤스틱              |
| 29.892 | COVER, HYDRAULIC SUMP<br>커버              |



 
■ INDICATES AN ASSEMBLY  
HAVING SERVICEABLE  
COMPONENTS ILLUSTRATED  
ELSEWHERE

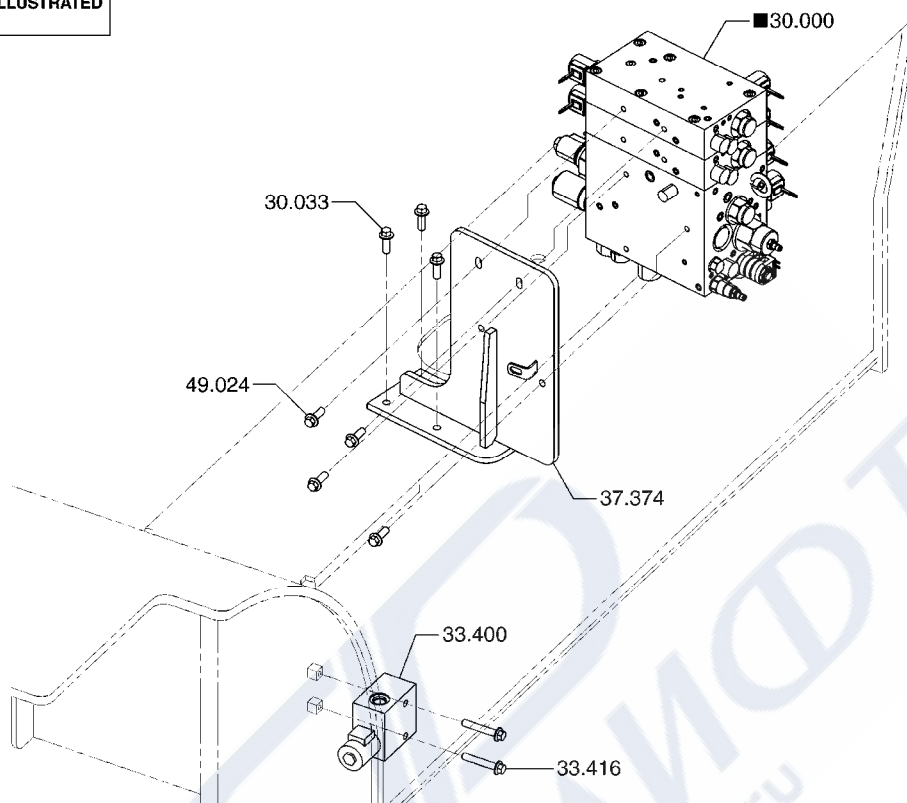

HYDRAULIC VALVE MOUNTING

30-339


|        |                                                   |
|--------|---------------------------------------------------|
| 30.000 | VALVE ASSEMBLY, HYDRAULIC<br>밸브                   |
| 30.033 | FASTENER, HYDRAULIC VALVE MOUNTING<br>패스너         |
| 33.400 | VALVE ASSEMBLY, UNLOADING<br>밸브                   |
| 33.416 | FASTENER, UNLOADING VALVE<br>패스너                  |
| 37.374 | COVER, HYDRAULIC VALVE<br>커버                      |
| 49.024 | FASTENER, HYDRAULIC VALVE MOUNTING BRACKET<br>패스너 |

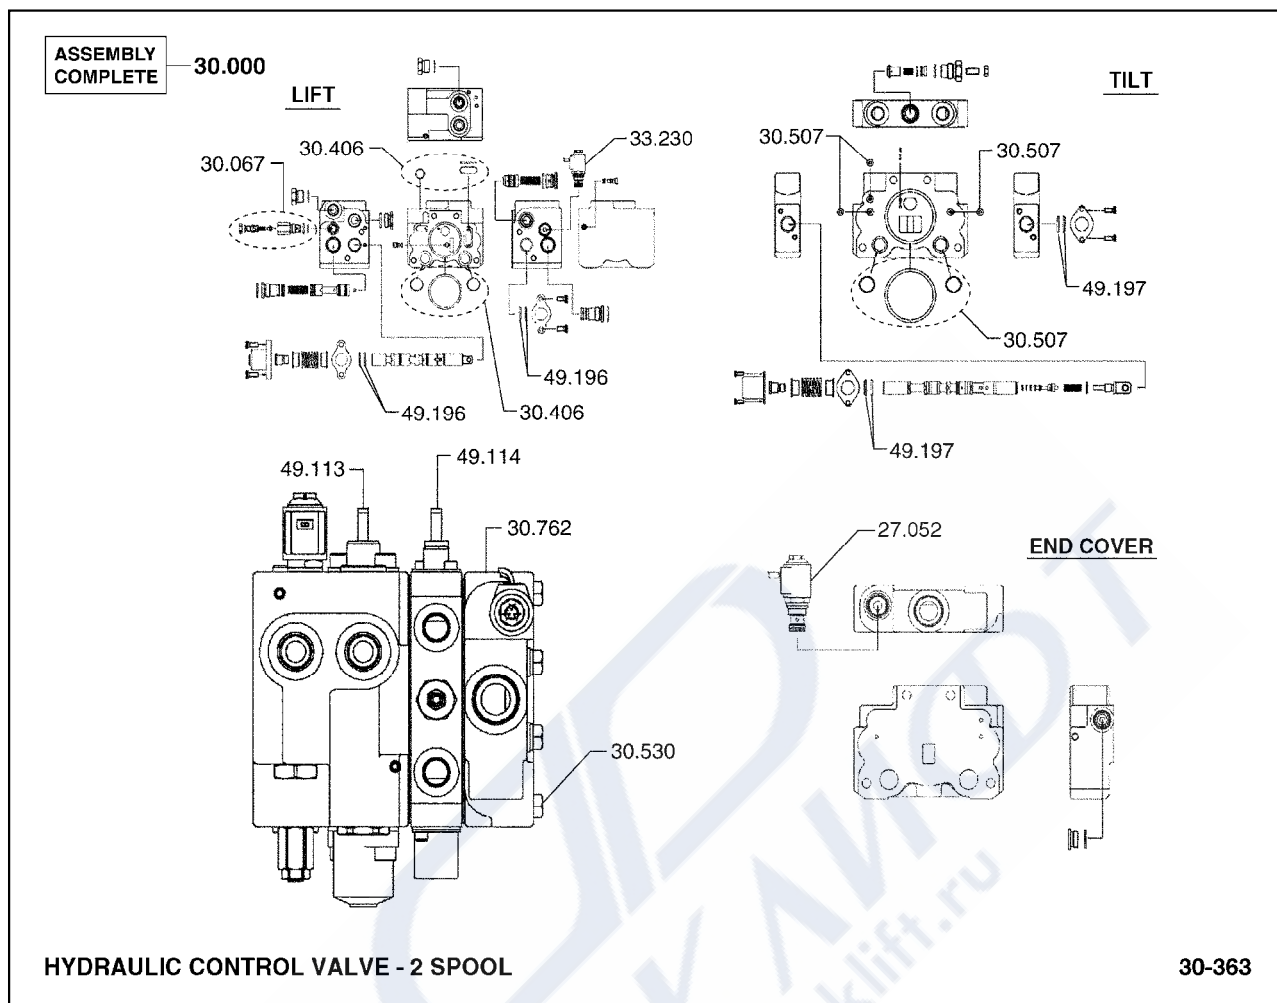 

|        |                                                |
|--------|------------------------------------------------|
| 27.052 | VALVE ASSEMBLY, AUXILIARY SOLENOID<br>밸브       |
| 30.000 | VALVE ASSEMBLY, HYDRAULIC<br>밸브                |
| 30.067 | RELIEF VALVE KIT, VALVE INLET SECTION<br>릴리프밸브 |
| 30.406 | SEAL KIT, HYDRAULIC VALVE (LIFT)<br>씰키트        |
| 30.507 | SEAL KIT, HYDRAULIC VALVE (TILT)<br>씰키트        |
| 30.530 | FASTENER, VALVE THRU<br>패스너                    |
| 30.762 | END COVER, HYDRAULIC VALVE<br>엔드커버             |
| 33.230 | VALVE ASSEMBLY, LIFT SOLENOID<br>밸브            |
| 49.113 | LIFT SECTION, HYDRAULIC VALVE<br>리프트섹션         |

|        |                                       |
|--------|---------------------------------------|
| 49.114 | TILT SECTION, HYDRAULIC VALVE<br>틸트섹션 |
| 49.196 | SPOOL SEAL KIT, LIFT SECTION<br>스풀씰키트 |
| 49.197 | SPOOL SEAL KIT, TILT SECTION<br>스풀씰키트 |




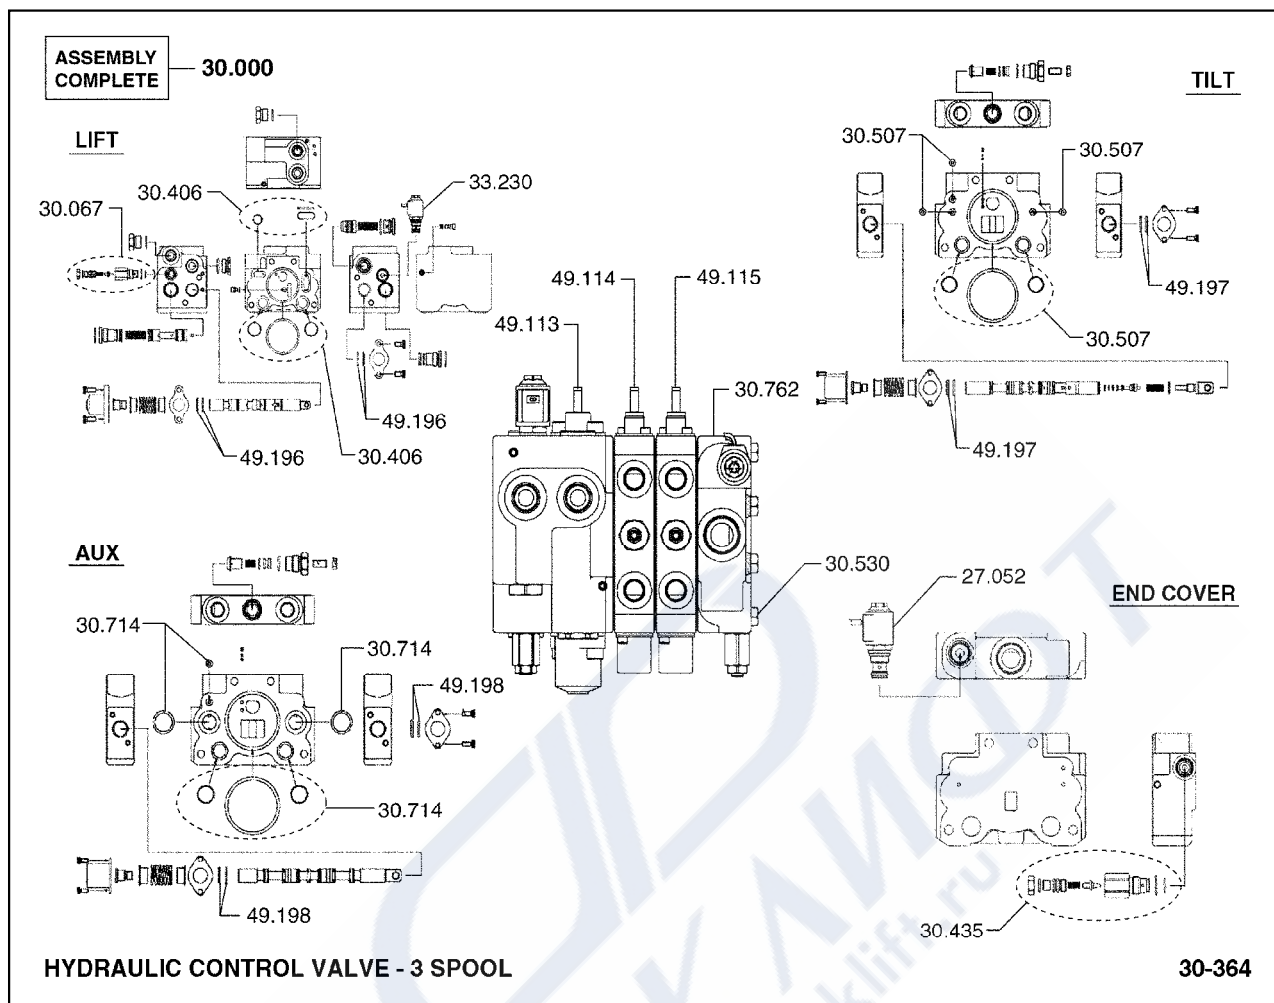 

|        |                                                 |
|--------|-------------------------------------------------|
| 27.052 | VALVE ASSEMBLY, AUXILIARY SOLENOID<br>밸브        |
| 30.000 | VALVE ASSEMBLY, HYDRAULIC<br>밸브                 |
| 30.067 | RELIEF VALVE KIT, VALVE INLET SECTION<br>릴리프밸브  |
| 30.406 | SEAL KIT, HYDRAULIC VALVE (LIFT)<br>씰키트         |
| 30.435 | RELIEF VALVE ASSEMBLY, AUXILIARY VALVE<br>릴리프밸브 |
| 30.507 | SEAL KIT, HYDRAULIC VALVE (TILT)<br>씰키트         |
| 30.530 | FASTENER, VALVE THRU<br>패스너                     |
| 30.714 | SEAL KIT, HYDRAULIC VALVE SECTION (AUX)<br>씰키트  |
| 30.762 | END COVER, HYDRAULIC VALVE<br>엔드커버              |

|        |                                        |
|--------|----------------------------------------|
| 33.230 | VALVE ASSEMBLY, LIFT SOLENOID<br>밸브    |
| 49.113 | LIFT SECTION, HYDRAULIC VALVE<br>리프트섹션 |
| 49.114 | TILT SECTION, HYDRAULIC VALVE<br>틸트섹션  |
| 49.115 | AUX SECTION, HYDRAULIC VALVE<br>보조섹션   |
| 49.196 | SPOOL SEAL KIT, LIFT SECTION<br>스풀씰키트  |
| 49.197 | SPOOL SEAL KIT, TILT SECTION<br>스풀씰키트  |
| 49.198 | SPOOL SEAL KIT, AUX SECTION<br>스풀씰키트   |




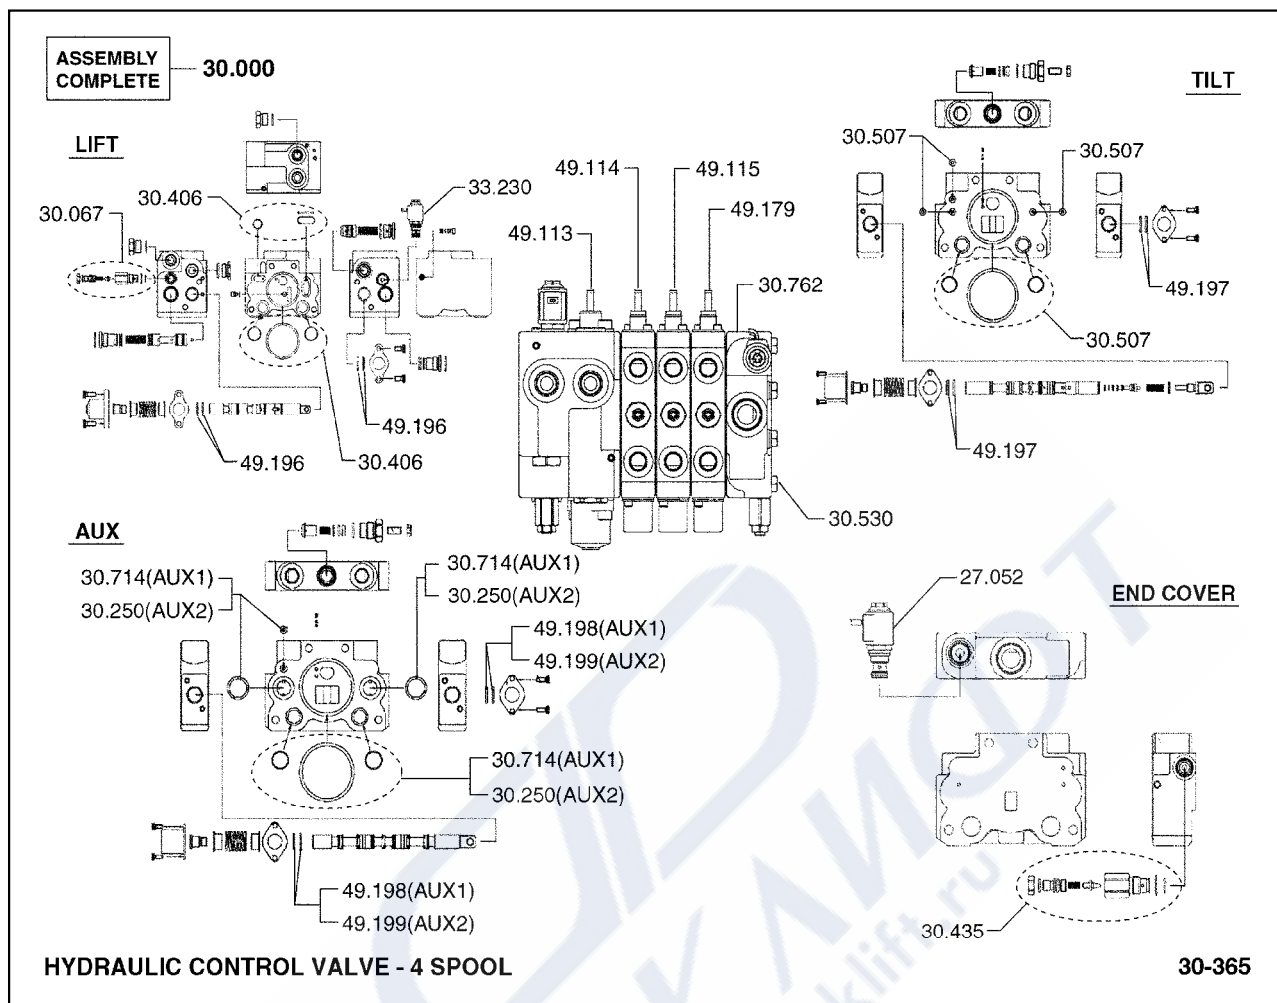 

|        |                                                 |
|--------|-------------------------------------------------|
| 27.052 | VALVE ASSEMBLY, AUXILIARY SOLENOID<br>밸브        |
| 30.000 | VALVE ASSEMBLY, HYDRAULIC<br>밸브                 |
| 30.067 | RELIEF VALVE KIT, VALVE INLET SECTION<br>릴리프밸브  |
| 30.250 | SEAL KIT, HYDRAULIC VALVE SECTION (AUX)<br>셀리트  |
| 30.406 | SEAL KIT, HYDRAULIC VALVE (LIFT)<br>셀리트         |
| 30.435 | RELIEF VALVE ASSEMBLY, AUXILIARY VALVE<br>릴리프밸브 |
| 30.507 | SEAL KIT, HYDRAULIC VALVE (TILT)<br>셀리트         |
| 30.530 | FASTENER, VALVE THRU<br>패스너                     |
| 30.714 | SEAL KIT, HYDRAULIC VALVE SECTION (AUX)<br>셀리트  |

|        |                                        |
|--------|----------------------------------------|
| 30.762 | END COVER, HYDRAULIC VALVE<br>엔드커버     |
| 33.230 | VALVE ASSEMBLY, LIFT SOLENOID<br>밸브    |
| 49.113 | LIFT SECTION, HYDRAULIC VALVE<br>리프트섹션 |
| 49.114 | TILT SECTION, HYDRAULIC VALVE<br>틸트섹션  |
| 49.115 | AUX SECTION, HYDRAULIC VALVE<br>보조섹션   |
| 49.179 | AUX SECTION, HYDRAULIC VALVE<br>보조섹션   |
| 49.196 | SPOOL SEAL KIT, LIFT SECTION<br>스풀씰키트  |
| 49.197 | SPOOL SEAL KIT, TILT SECTION<br>스풀씰키트  |
| 49.198 | SPOOL SEAL KIT, AUX SECTION<br>스풀씰키트   |
| 49.199 | SPOOL SEAL KIT, AUX SECTION<br>스풀씰키트   |

 ■ INDICATES AN ASSEMBLY  
HAVING SERVICEABLE  
COMPONENTS ILLUSTRATED  
ELSEWHERE

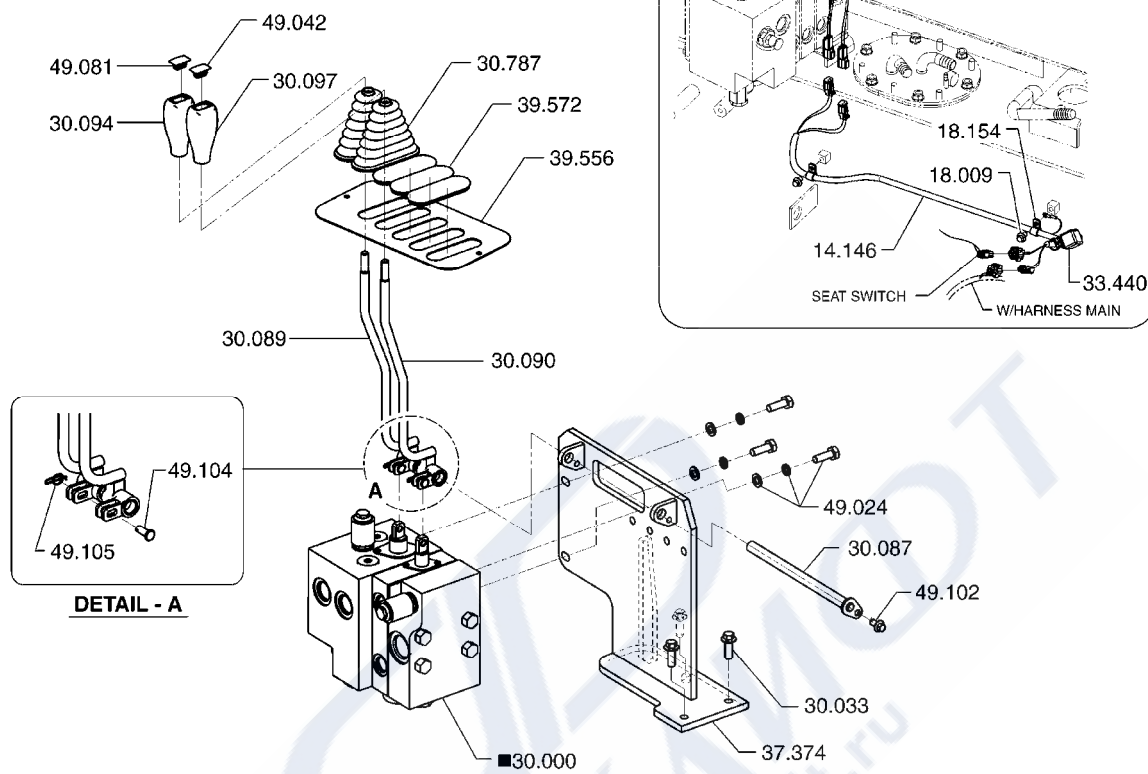


HYDRAULIC VALVE MOUNTING (2SPOOL)


30-397

- |        |                                                  |
|--------|--------------------------------------------------|
| 14.146 | HARNES, VALVE SWITCH WIRING<br>하네스               |
| 18.009 | FASTENER, HARNESS CLIP<br>패스너                    |
| 18.154 | CLAMP, WIRING HARNESS HYDROSTATIC CONTROL<br>클램프 |
| 30.000 | VALVE ASSEMBLY, HYDRAULIC<br>밸브                  |
| 30.033 | FASTENER, HYDRAULIC VALVE MOUNTING<br>패스너        |
| 30.087 | PIN, VALVE CONTROL LEVER PIVOT<br>핀              |
| 30.089 | LEVER, LIFT CONTROL<br>레버                        |
| 30.090 | LEVER, TILT CONTROL<br>레버                        |
| 30.094 | KNOB, LIFT CONTROL LEVER<br>노브                   |

---

|        |                                                      |
|--------|------------------------------------------------------|
| 30.097 | KNOB, TILT CONTROL LEVER<br>노브                       |
| 30.787 | BOOT, VALVE CONTROL LEVER<br>부트                      |
| 33.440 | RELAY, SOLENOID VALVE<br>릴레이                         |
| 37.374 | COVER, HYDRAULIC VALVE<br>커버                         |
| 39.556 | COVER, VALVE LINKAGE ACCESS<br>커버                    |
| 39.572 | COVER, AUXILIARY VALVE LEVER HOLE<br>커버              |
| 49.024 | FASTENER, HYDRAULIC VALVE MOUNTING BRACKET<br>패스너    |
| 49.042 | CAP, TILT CONTROL LEVER<br>캡                         |
| 49.081 | CAP, LIFT CONTROL LEVER<br>캡                         |
| 49.102 | FASTENER, VALVE CONTROL LEVER PIVOT RETAINER<br>패스너  |
| 49.104 | PIN, VALVE CONTROL LEVER CLEVIS ROD<br>핀             |
| 49.105 | RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN<br>리테이너 |

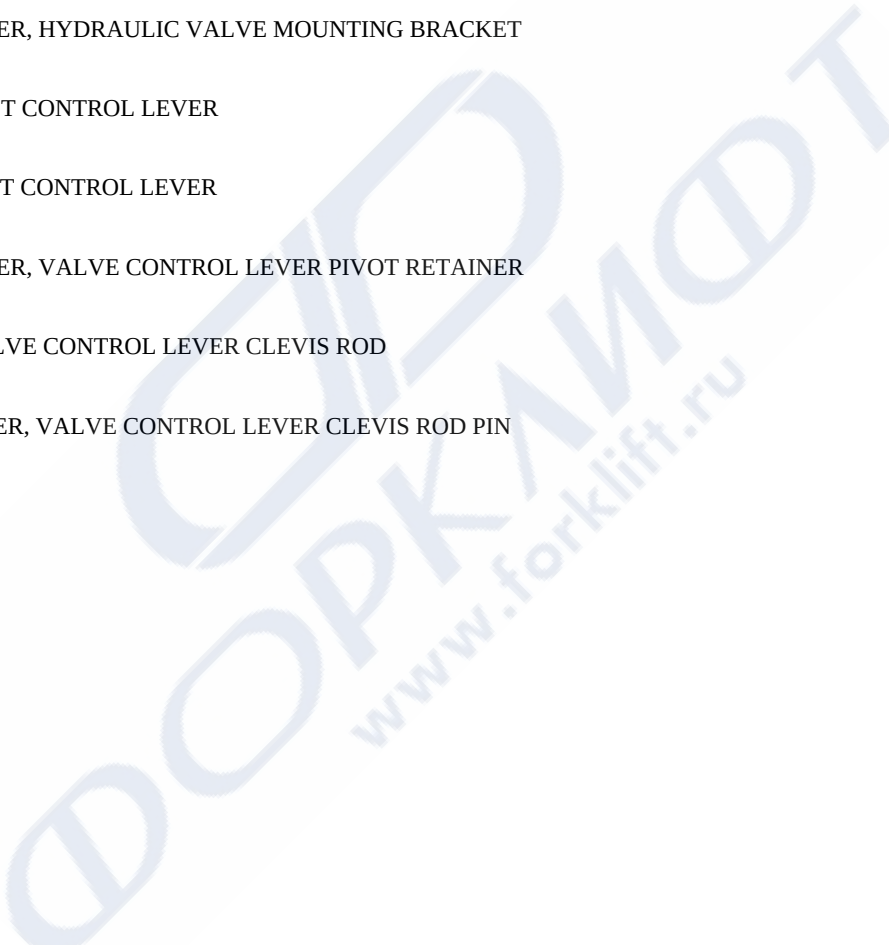 

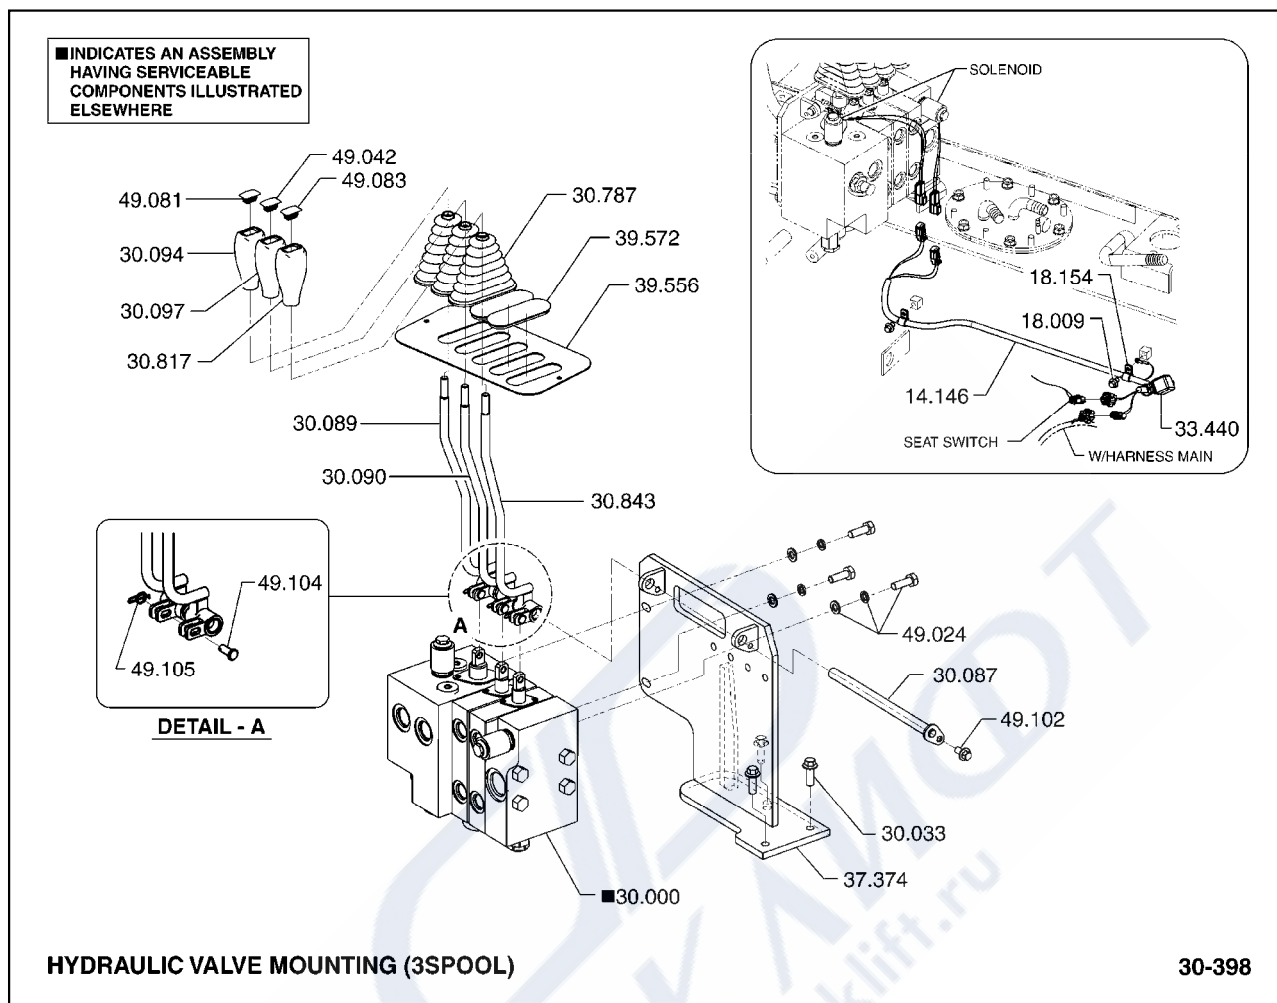 


|        |                                                  |
|--------|--------------------------------------------------|
| 14.146 | HARNESS, VALVE SWITCH WIRING<br>하네스              |
| 18.009 | FASTENER, HARNESS CLIP<br>패스너                    |
| 18.154 | CLAMP, WIRING HARNESS HYDROSTATIC CONTROL<br>클램프 |
| 30.000 | VALVE ASSEMBLY, HYDRAULIC<br>밸브                  |
| 30.033 | FASTENER, HYDRAULIC VALVE MOUNTING<br>패스너        |
| 30.087 | PIN, VALVE CONTROL LEVER PIVOT<br>핀              |
| 30.089 | LEVER, LIFT CONTROL<br>레버                        |
| 30.094 | KNOB, LIFT CONTROL LEVER<br>노브                   |
| 30.097 | KNOB, TILT CONTROL LEVER<br>노브                   |

---

|        |                                                      |
|--------|------------------------------------------------------|
| 30.787 | BOOT, VALVE CONTROL LEVER<br>부트                      |
| 30.817 | KNOB, AUXILIARY VALVE CONTROL LEVER<br>노브            |
| 30.843 | LEVER, AUXILIARY VALVE CONTROL (1ST AUX)<br>레버       |
| 33.440 | RELAY, SOLENOID VALVE<br>릴레이                         |
| 37.374 | COVER, HYDRAULIC VALVE<br>커버                         |
| 39.556 | COVER, VALVE LINKAGE ACCESS<br>커버                    |
| 39.572 | COVER, AUXILIARY VALVE LEVER HOLE<br>커버              |
| 49.024 | FASTENER, HYDRAULIC VALVE MOUNTING BRACKET<br>패스너    |
| 49.042 | CAP, TILT CONTROL LEVER<br>캡                         |
| 49.081 | CAP, LIFT CONTROL LEVER<br>캡                         |
| 49.083 | CAP, VALVE CONTROL LEVER DECAL<br>캡                  |
| 49.102 | FASTENER, VALVE CONTROL LEVER PIVOT RETAINER<br>패스너  |
| 49.104 | PIN, VALVE CONTROL LEVER CLEVIS ROD<br>핀             |
| 49.105 | RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN<br>리테이너 |

 ---

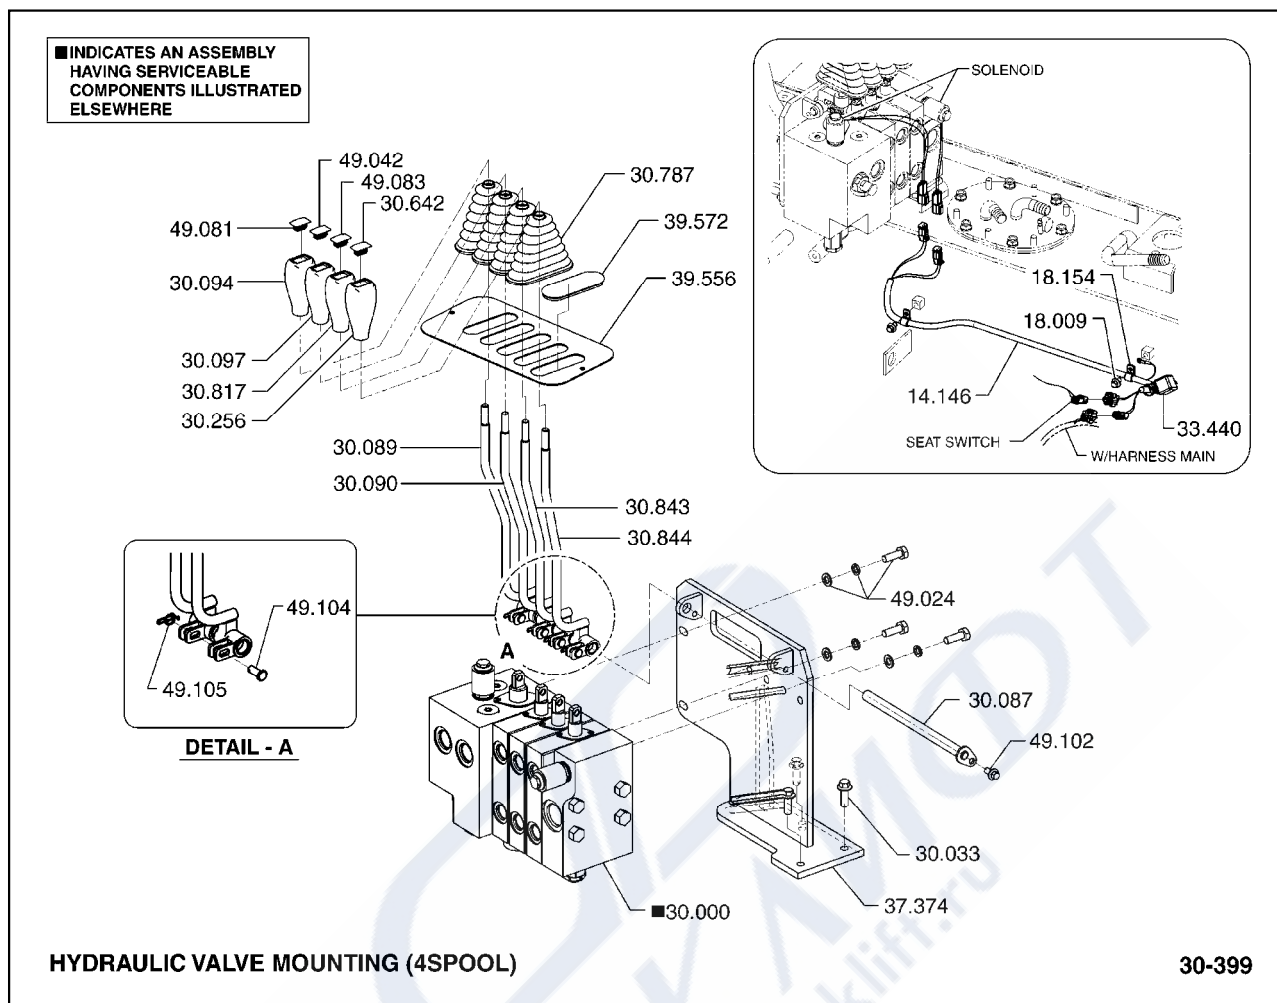

|        |                                                  |
|--------|--------------------------------------------------|
| 14.146 | HARNESS, VALVE SWITCH WIRING<br>하네스              |
| 18.009 | FASTENER, HARNESS CLIP<br>패스너                    |
| 18.154 | CLAMP, WIRING HARNESS HYDROSTATIC CONTROL<br>클램프 |
| 30.000 | VALVE ASSEMBLY, HYDRAULIC<br>밸브                  |
| 30.033 | FASTENER, HYDRAULIC VALVE MOUNTING<br>패스너        |
| 30.087 | PIN, VALVE CONTROL LEVER PIVOT<br>핀              |
| 30.089 | LEVER, LIFT CONTROL<br>레버                        |
| 30.090 | LEVER, TILT CONTROL<br>레버                        |
| 30.094 | KNOB, LIFT CONTROL LEVER<br>노브                   |




---

|        |                                                      |
|--------|------------------------------------------------------|
| 30.097 | KNOB, TILT CONTROL LEVER<br>노브                       |
| 30.256 | KNOB, AUXILIARY VALVE CONTROL LEVER<br>노브            |
| 30.642 | CAP, AUXILIARY VALVE SPOOL<br>캡                      |
| 30.787 | BOOT, VALVE CONTROL LEVER<br>부트                      |
| 30.817 | KNOB, AUXILIARY VALVE CONTROL LEVER<br>노브            |
| 30.843 | LEVER, AUXILIARY VALVE CONTROL (1ST AUX)<br>레버       |
| 30.844 | LEVER, AUXILIARY VALVE CONTROL (2ND AUX)<br>레버       |
| 33.440 | RELAY, SOLENOID VALVE<br>릴레이                         |
| 37.374 | COVER, HYDRAULIC VALVE<br>커버                         |
| 39.556 | COVER, VALVE LINKAGE ACCESS<br>커버                    |
| 39.572 | COVER, AUXILIARY VALVE LEVER HOLE<br>커버              |
| 49.024 | FASTENER, HYDRAULIC VALVE MOUNTING BRACKET<br>패스너    |
| 49.042 | CAP, TILT CONTROL LEVER<br>캡                         |
| 49.081 | CAP, LIFT CONTROL LEVER<br>캡                         |
| 49.083 | CAP, VALVE CONTROL LEVER DECAL<br>캡                  |
| 49.102 | FASTENER, VALVE CONTROL LEVER PIVOT RETAINER<br>패스너  |
| 49.104 | PIN, VALVE CONTROL LEVER CLEVIS ROD<br>핀             |
| 49.105 | RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN<br>리테이너 |

 ---




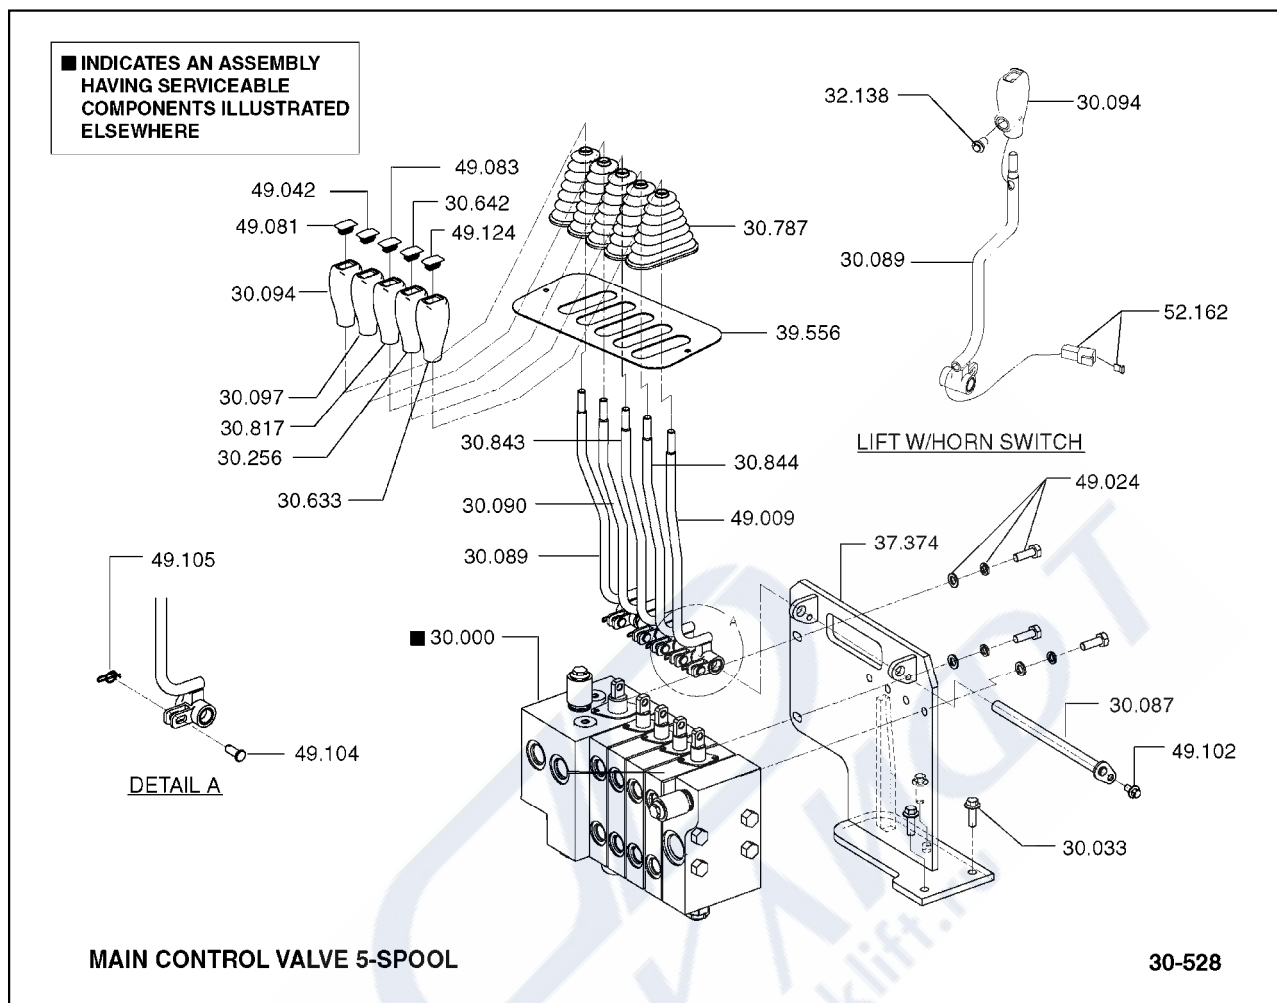

|        |                                           |
|--------|-------------------------------------------|
| 30.000 | VALVE ASSEMBLY, HYDRAULIC<br>밸브           |
| 30.033 | FASTENER, HYDRAULIC VALVE MOUNTING<br>패스너 |
| 30.087 | PIN, VALVE CONTROL LEVER PIVOT<br>핀       |
| 30.089 | LEVER, LIFT CONTROL<br>레버                 |
| 30.090 | LEVER, TILT CONTROL<br>레버                 |
| 30.094 | KNOB, LIFT CONTROL LEVER<br>노브            |
| 30.097 | KNOB, TILT CONTROL LEVER<br>노브            |
| 30.256 | KNOB, AUXILIARY VALVE CONTROL LEVER<br>노브 |
| 30.633 | KNOB, AUXILIARY VALVE CONTROL LEVER<br>노브 |

---

|        |                                                      |
|--------|------------------------------------------------------|
| 30.642 | CAP, AUXILIARY VALVE SPOOL<br>캡                      |
| 30.787 | BOOT, VALVE CONTROL LEVER<br>부트                      |
| 30.817 | KNOB, AUXILIARY VALVE CONTROL LEVER<br>노브            |
| 30.843 | LEVER, AUXILIARY VALVE CONTROL (1ST AUX)<br>레버       |
| 30.844 | LEVER, AUXILIARY VALVE CONTROL (2ND AUX)<br>레버       |
| 32.138 | SWITCH, PUSH BUTTON<br>스위치                           |
| 37.374 | COVER, HYDRAULIC VALVE<br>커버                         |
| 39.556 | COVER, VALVE LINKAGE ACCESS<br>커버                    |
| 49.009 | LEVER, 3RD AUXILIARY VALVE<br>레버                     |
| 49.024 | FASTENER, HYDRAULIC VALVE MOUNTING BRACKET<br>패스너    |
| 49.042 | CAP, TILT CONTROL LEVER<br>캡                         |
| 49.081 | CAP, LIFT CONTROL LEVER<br>캡                         |
| 49.083 | CAP, VALVE CONTROL LEVER DECAL<br>캡                  |
| 49.102 | FASTENER, VALVE CONTROL LEVER PIVOT RETAINER<br>패스너  |
| 49.104 | PIN, VALVE CONTROL LEVER CLEVIS ROD<br>핀             |
| 49.105 | RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN<br>리테이너 |
| 49.124 | CAP, AUXILIARY CONTROL LEVER<br>캡                    |
| 52.162 | CONNECTOR, AUXILIARY VALVE LEVER WIRE<br>커넥터         |

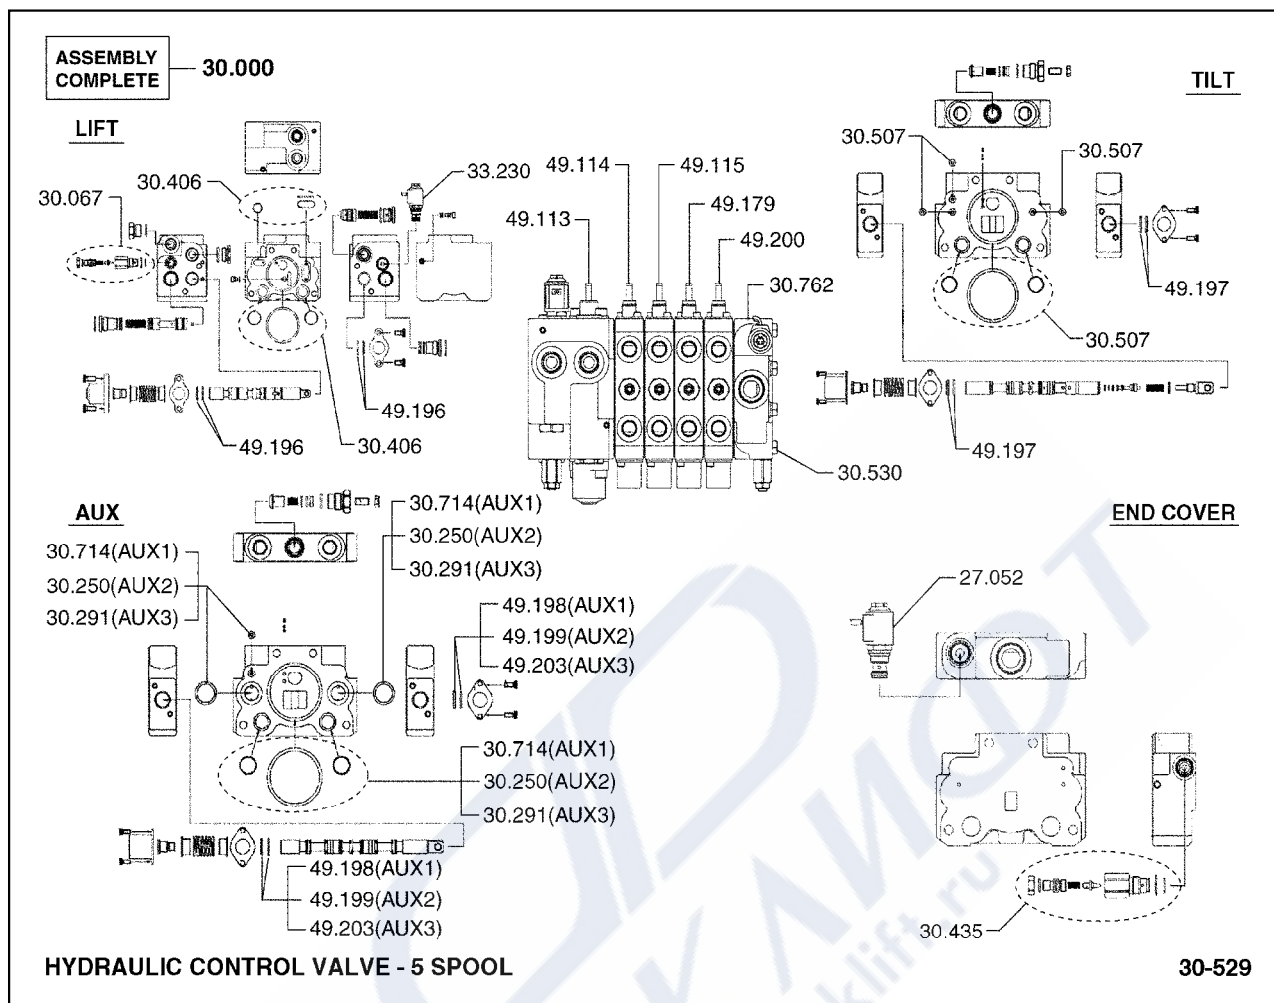 


- |        |                                                 |
|--------|-------------------------------------------------|
| 27.052 | VALVE ASSEMBLY, AUXILIARY SOLENOID<br>밸브        |
| 30.000 | VALVE ASSEMBLY, HYDRAULIC<br>밸브                 |
| 30.067 | RELIEF VALVE KIT, VALVE INLET SECTION<br>릴리프밸브  |
| 30.250 | SEAL KIT, HYDRAULIC VALVE SECTION (AUX)<br>셀리트  |
| 30.291 | SEAL KIT, HYDRAULIC VALVE SECTION (AUX)<br>셀리트  |
| 30.406 | SEAL KIT, HYDRAULIC VALVE (LIFT)<br>셀리트         |
| 30.435 | RELIEF VALVE ASSEMBLY, AUXILIARY VALVE<br>릴리프밸브 |
| 30.507 | SEAL KIT, HYDRAULIC VALVE (TILT)<br>셀리트         |
| 30.530 | FASTENER, VALVE THRU<br>패스너                     |

---

|        |                                                |
|--------|------------------------------------------------|
| 30.714 | SEAL KIT, HYDRAULIC VALVE SECTION (AUX)<br>씰키트 |
| 30.762 | END COVER, HYDRAULIC VALVE<br>엔드커버             |
| 33.230 | VALVE ASSEMBLY, LIFT SOLENOID<br>밸브            |
| 49.113 | LIFT SECTION, HYDRAULIC VALVE<br>리프트섹션         |
| 49.114 | TILT SECTION, HYDRAULIC VALVE<br>틸트섹션          |
| 49.115 | AUX SECTION, HYDRAULIC VALVE<br>보조섹션           |
| 49.179 | AUX SECTION, HYDRAULIC VALVE<br>보조섹션           |
| 49.196 | SPOOL SEAL KIT, LIFT SECTION<br>스풀씰키트          |
| 49.197 | SPOOL SEAL KIT, TILT SECTION<br>스풀씰키트          |
| 49.198 | SPOOL SEAL KIT, AUX SECTION<br>스풀씰키트           |
| 49.199 | SPOOL SEAL KIT, AUX SECTION<br>스풀씰키트           |
| 49.200 | AUX SECTION, HYDRAULIC VALVE<br>보조섹션           |
| 49.203 | SPOOL SEAL KIT, AUX SECTION<br>스풀씰키트           |

 ---

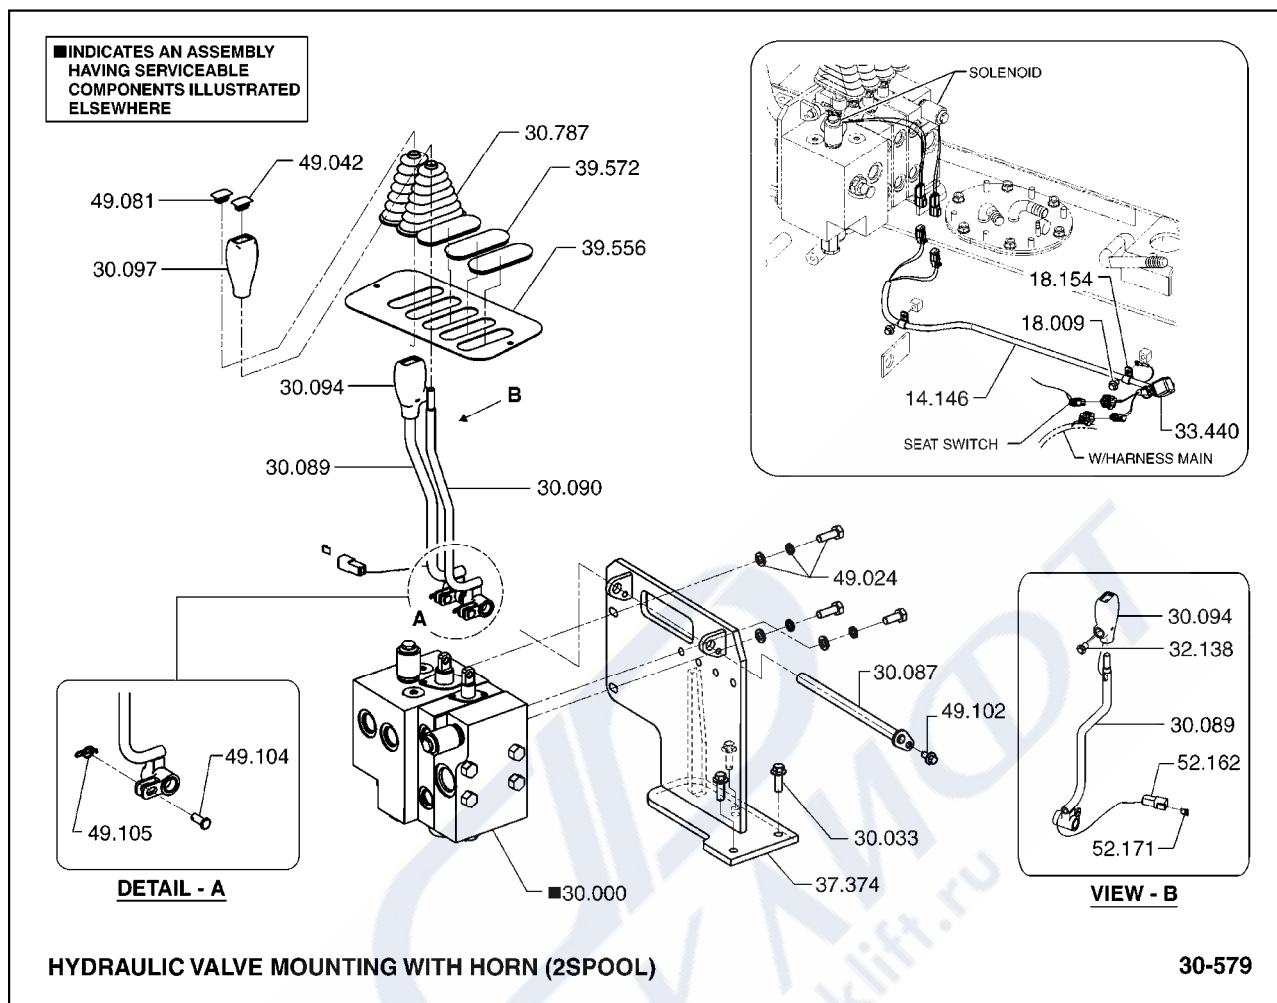


- |        |                                                  |
|--------|--------------------------------------------------|
| 14.146 | HARNESS, VALVE SWITCH WIRING<br>하네스              |
| 18.009 | FASTENER, HARNESS CLIP<br>패스너                    |
| 18.154 | CLAMP, WIRING HARNESS HYDROSTATIC CONTROL<br>클램프 |
| 30.000 | VALVE ASSEMBLY, HYDRAULIC<br>밸브                  |
| 30.033 | FASTENER, HYDRAULIC VALVE MOUNTING<br>패스너        |
| 30.087 | PIN, VALVE CONTROL LEVER PIVOT<br>핀              |
| 30.089 | LEVER, LIFT CONTROL<br>레버                        |
| 30.090 | LEVER, TILT CONTROL<br>레버                        |
| 30.094 | KNOB, LIFT CONTROL LEVER<br>노브                   |

---

|        |                                                      |
|--------|------------------------------------------------------|
| 30.097 | KNOB, TILT CONTROL LEVER<br>노브                       |
| 30.787 | BOOT, VALVE CONTROL LEVER<br>부트                      |
| 32.138 | SWITCH, PUSH BUTTON<br>스위치                           |
| 33.440 | RELAY, SOLENOID VALVE<br>릴레이                         |
| 37.374 | COVER, HYDRAULIC VALVE<br>커버                         |
| 39.556 | COVER, VALVE LINKAGE ACCESS<br>커버                    |
| 39.572 | COVER, AUXILIARY VALVE LEVER HOLE<br>커버              |
| 49.024 | FASTENER, HYDRAULIC VALVE MOUNTING BRACKET<br>패스너    |
| 49.042 | CAP, TILT CONTROL LEVER<br>캡                         |
| 49.081 | CAP, LIFT CONTROL LEVER<br>캡                         |
| 49.102 | FASTENER, VALVE CONTROL LEVER PIVOT RETAINER<br>패스너  |
| 49.104 | PIN, VALVE CONTROL LEVER CLEVIS ROD<br>핀             |
| 49.105 | RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN<br>리테이너 |
| 52.162 | CONNECTOR, AUXILIARY VALVE LEVER WIRE<br>커넥터         |
| 52.171 | LOCK, AUXILIARY VALVE LEVER WIRE<br>로크               |

 ---

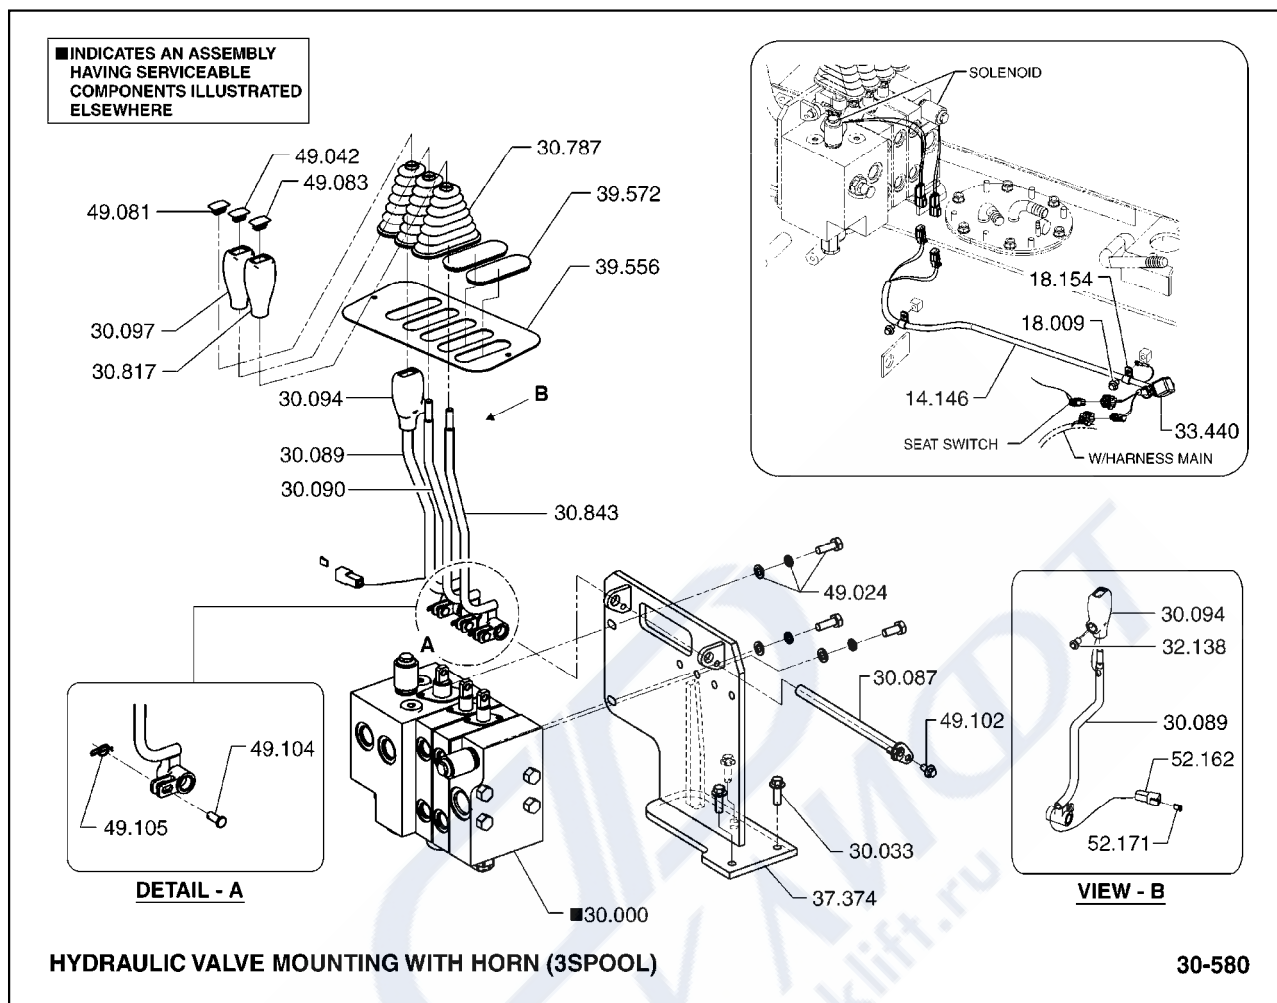

- |        |                                                  |
|--------|--------------------------------------------------|
| 14.146 | HARNESS, VALVE SWITCH WIRING<br>하네스              |
| 18.009 | FASTENER, HARNESS CLIP<br>패스너                    |
| 18.154 | CLAMP, WIRING HARNESS HYDROSTATIC CONTROL<br>클램프 |
| 30.000 | VALVE ASSEMBLY, HYDRAULIC<br>밸브                  |
| 30.033 | FASTENER, HYDRAULIC VALVE MOUNTING<br>패스너        |
| 30.087 | PIN, VALVE CONTROL LEVER PIVOT<br>핀              |
| 30.089 | LEVER, LIFT CONTROL<br>레버                        |
| 30.090 | LEVER, TILT CONTROL<br>레버                        |
| 30.094 | KNOB, LIFT CONTROL LEVER<br>노브                   |




---

|        |                                                      |
|--------|------------------------------------------------------|
| 30.097 | KNOB, TILT CONTROL LEVER<br>노브                       |
| 30.787 | BOOT, VALVE CONTROL LEVER<br>부트                      |
| 30.817 | KNOB, AUXILIARY VALVE CONTROL LEVER<br>노브            |
| 30.843 | LEVER, AUXILIARY VALVE CONTROL (1ST AUX)<br>레버       |
| 32.138 | SWITCH, PUSH BUTTON<br>스위치                           |
| 33.440 | RELAY, SOLENOID VALVE<br>릴레이                         |
| 37.374 | COVER, HYDRAULIC VALVE<br>커버                         |
| 39.556 | COVER, VALVE LINKAGE ACCESS<br>커버                    |
| 39.572 | COVER, AUXILIARY VALVE LEVER HOLE<br>커버              |
| 49.024 | FASTENER, HYDRAULIC VALVE MOUNTING BRACKET<br>패스너    |
| 49.042 | CAP, TILT CONTROL LEVER<br>캡                         |
| 49.081 | CAP, LIFT CONTROL LEVER<br>캡                         |
| 49.083 | CAP, VALVE CONTROL LEVER DECAL<br>캡                  |
| 49.102 | FASTENER, VALVE CONTROL LEVER PIVOT RETAINER<br>패스너  |
| 49.104 | PIN, VALVE CONTROL LEVER CLEVIS ROD<br>핀             |
| 49.105 | RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN<br>리테이너 |
| 52.162 | CONNECTOR, AUXILIARY VALVE LEVER WIRE<br>커넥터         |
| 52.171 | LOCK, AUXILIARY VALVE LEVER WIRE<br>로크               |



 
■ INDICATES AN ASSEMBLY  
HAVING SERVICEABLE  
COMPONENTS ILLUSTRATED  
ELSEWHERE

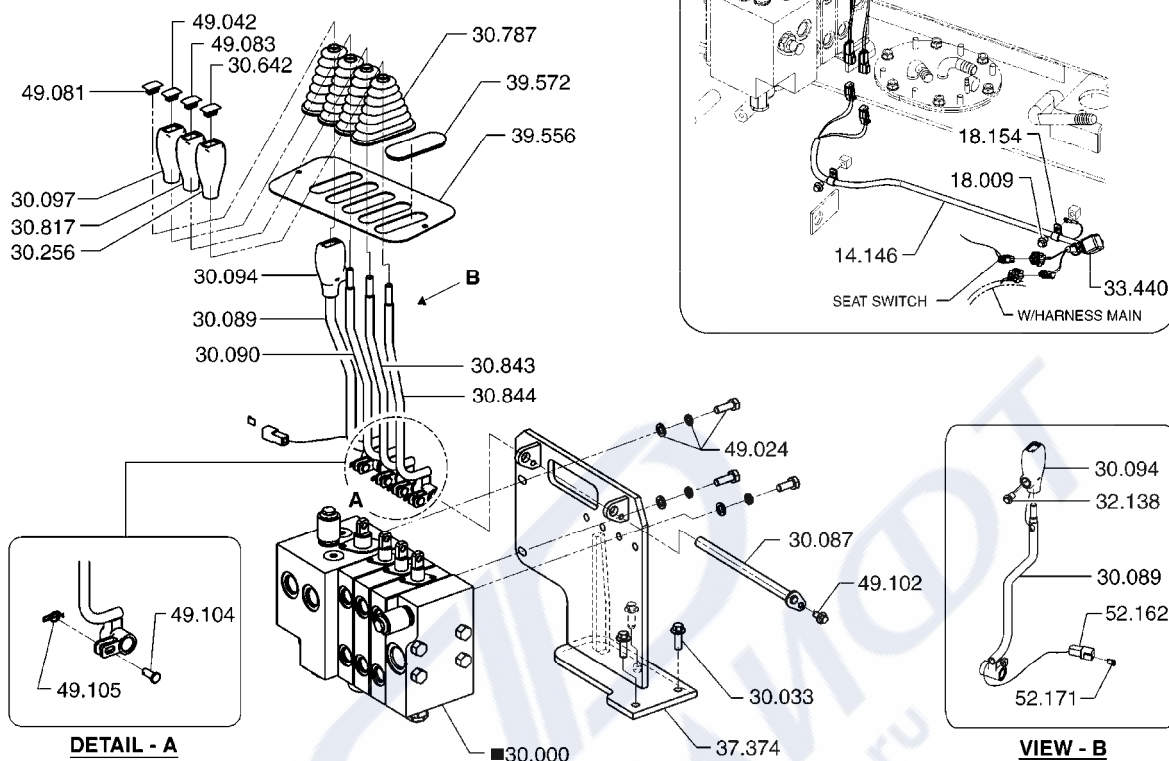

HYDRAULIC VALVE MOUNTING WITH HORN (4SPOOL)

30-581

|        |                                                  |        |                                                      |
|--------|--------------------------------------------------|--------|------------------------------------------------------|
| 14.146 | HARNESS, VALVE SWITCH WIRING<br>하네스              | 30.844 | LEVER, AUXILIARY VALVE CONTROL (2ND AUX)<br>레버       |
| 18.009 | FASTENER, HARNESS CLIP<br>패스너                    | 32.138 | SWITCH, PUSH BUTTON<br>스위치                           |
| 18.154 | CLAMP, WIRING HARNESS HYDROSTATIC CONTROL<br>클램프 | 33.440 | RELAY, SOLENOID VALVE<br>릴레이                         |
| 30.000 | VALVE ASSEMBLY, HYDRAULIC<br>밸브                  | 37.374 | COVER, HYDRAULIC VALVE<br>커버                         |
| 30.033 | FASTENER, HYDRAULIC VALVE MOUNTING<br>패스너        | 39.556 | COVER, VALVE LINKAGE ACCESS<br>커버                    |
| 30.087 | PIN, VALVE CONTROL LEVER PIVOT<br>핀              | 39.572 | COVER, AUXILIARY VALVE LEVER HOLE<br>커버              |
| 30.089 | LEVER, LIFT CONTROL<br>레버                        | 49.024 | FASTENER, HYDRAULIC VALVE MOUNTING BRACKET<br>패스너    |
| 30.090 | LEVER, TILT CONTROL<br>레버                        | 49.042 | CAP, TILT CONTROL LEVER<br>캡                         |
| 30.094 | KNOB, LIFT CONTROL LEVER<br>노브                   | 49.081 | CAP, LIFT CONTROL LEVER<br>캡                         |
| 30.097 | KNOB, TILT CONTROL LEVER<br>노브                   | 49.083 | CAP, VALVE CONTROL LEVER DECAL<br>캡                  |
| 30.256 | KNOB, AUXILIARY VALVE CONTROL LEVER<br>노브        | 49.102 | FASTENER, VALVE CONTROL LEVER PIVOT RETAINER<br>패스너  |
| 30.642 | CAP, AUXILIARY VALVE SPOOL<br>캡                  | 49.104 | PIN, VALVE CONTROL LEVER CLEVIS ROD<br>핀             |
| 30.787 | BOOT, VALVE CONTROL LEVER<br>부트                  | 49.105 | RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN<br>리테이너 |
| 30.817 | KNOB, AUXILIARY VALVE CONTROL LEVER<br>노브        | 52.162 | CONNECTOR, AUXILIARY VALVE LEVER WIRE<br>커넥터         |
| 30.843 | LEVER, AUXILIARY VALVE CONTROL (1ST AUX)<br>레버   | 52.171 | LOCK, AUXILIARY VALVE LEVER WIRE<br>로크               |

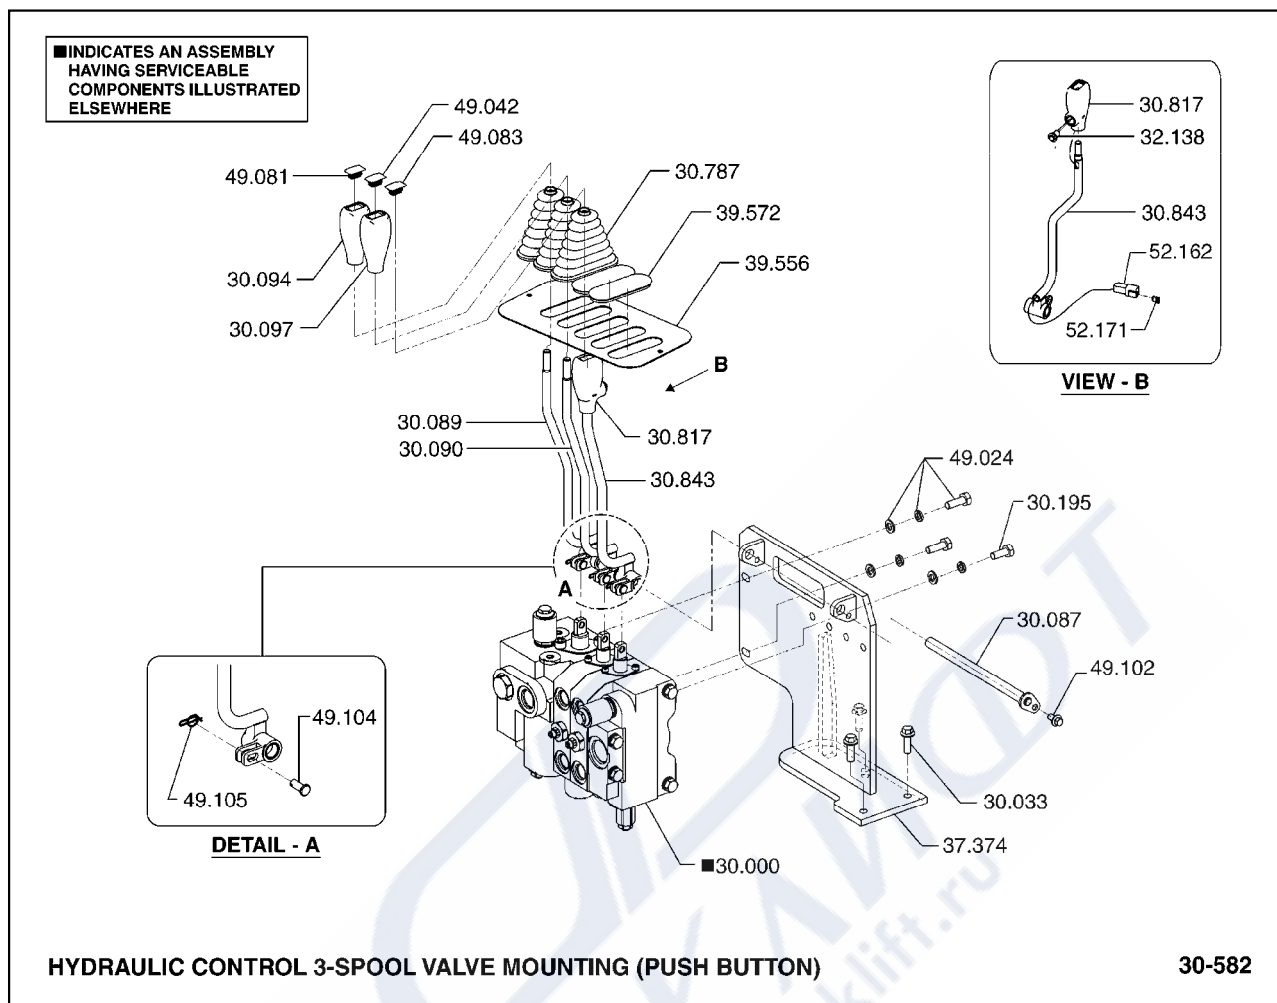 


|        |                                            |
|--------|--------------------------------------------|
| 30.000 | VALVE ASSEMBLY, HYDRAULIC<br>밸브            |
| 30.033 | FASTENER, HYDRAULIC VALVE MOUNTING<br>패스너  |
| 30.087 | PIN, VALVE CONTROL LEVER PIVOT<br>핀        |
| 30.089 | LEVER, LIFT CONTROL<br>레버                  |
| 30.090 | LEVER, TILT CONTROL<br>레버                  |
| 30.094 | KNOB, LIFT CONTROL LEVER<br>노브             |
| 30.097 | KNOB, TILT CONTROL LEVER<br>노브             |
| 30.195 | CAPSCREW, HYDRAULIC VALVE MOUNTING<br>캡스크류 |
| 30.787 | BOOT, VALVE CONTROL LEVER<br>부트            |

---

|        |                                                      |
|--------|------------------------------------------------------|
| 30.817 | KNOB, AUXILIARY VALVE CONTROL LEVER<br>노브            |
| 30.843 | LEVER, AUXILIARY VALVE CONTROL (1ST AUX)<br>레버       |
| 32.138 | SWITCH, PUSH BUTTON<br>스위치                           |
| 37.374 | COVER, HYDRAULIC VALVE<br>커버                         |
| 39.556 | COVER, VALVE LINKAGE ACCESS<br>커버                    |
| 39.572 | COVER, AUXILIARY VALVE LEVER HOLE<br>커버              |
| 49.024 | FASTENER, HYDRAULIC VALVE MOUNTING BRACKET<br>패스너    |
| 49.042 | CAP, TILT CONTROL LEVER<br>캡                         |
| 49.081 | CAP, LIFT CONTROL LEVER<br>캡                         |
| 49.083 | CAP, VALVE CONTROL LEVER DECAL<br>캡                  |
| 49.102 | FASTENER, VALVE CONTROL LEVER PIVOT RETAINER<br>패스너  |
| 49.104 | PIN, VALVE CONTROL LEVER CLEVIS ROD<br>핀             |
| 49.105 | RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN<br>리테이너 |
| 52.162 | CONNECTOR, AUXILIARY VALVE LEVER WIRE<br>커넥터         |
| 52.171 | LOCK, AUXILIARY VALVE LEVER WIRE<br>로크               |

 
---

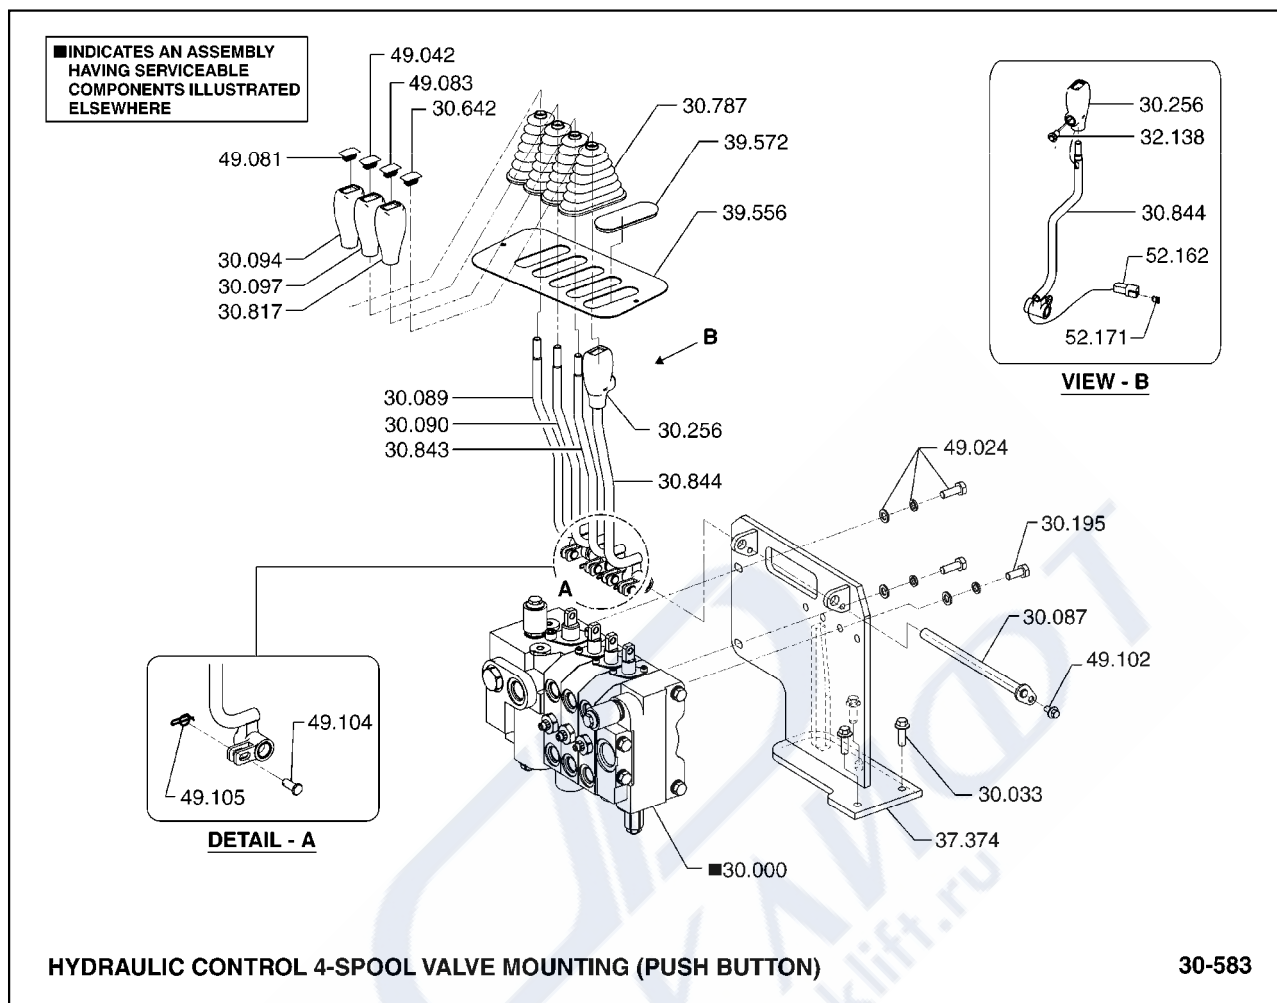

|        |                                            |
|--------|--------------------------------------------|
| 30.000 | VALVE ASSEMBLY, HYDRAULIC<br>밸브            |
| 30.033 | FASTENER, HYDRAULIC VALVE MOUNTING<br>패스너  |
| 30.087 | PIN, VALVE CONTROL LEVER PIVOT<br>핀        |
| 30.089 | LEVER, LIFT CONTROL<br>레버                  |
| 30.090 | LEVER, TILT CONTROL<br>레버                  |
| 30.094 | KNOB, LIFT CONTROL LEVER<br>노브             |
| 30.097 | KNOB, TILT CONTROL LEVER<br>노브             |
| 30.195 | CAPSCREW, HYDRAULIC VALVE MOUNTING<br>캡스크류 |
| 30.256 | KNOB, AUXILIARY VALVE CONTROL LEVER<br>노브  |

---

|        |                                                      |
|--------|------------------------------------------------------|
| 30.642 | CAP, AUXILIARY VALVE SPOOL<br>캡                      |
| 30.787 | BOOT, VALVE CONTROL LEVER<br>부트                      |
| 30.817 | KNOB, AUXILIARY VALVE CONTROL LEVER<br>노브            |
| 30.843 | LEVER, AUXILIARY VALVE CONTROL (1ST AUX)<br>레버       |
| 30.844 | LEVER, AUXILIARY VALVE CONTROL (2ND AUX)<br>레버       |
| 32.138 | SWITCH, PUSH BUTTON<br>스위치                           |
| 37.374 | COVER, HYDRAULIC VALVE<br>커버                         |
| 39.556 | COVER, VALVE LINKAGE ACCESS<br>커버                    |
| 39.572 | COVER, AUXILIARY VALVE LEVER HOLE<br>커버              |
| 49.024 | FASTENER, HYDRAULIC VALVE MOUNTING BRACKET<br>패스너    |
| 49.042 | CAP, TILT CONTROL LEVER<br>캡                         |
| 49.081 | CAP, LIFT CONTROL LEVER<br>캡                         |
| 49.083 | CAP, VALVE CONTROL LEVER DECAL<br>캡                  |
| 49.102 | FASTENER, VALVE CONTROL LEVER PIVOT RETAINER<br>패스너  |
| 49.104 | PIN, VALVE CONTROL LEVER CLEVIS ROD<br>핀             |
| 49.105 | RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN<br>리테이너 |
| 52.162 | CONNECTOR, AUXILIARY VALVE LEVER WIRE<br>커넥터         |
| 52.171 | LOCK, AUXILIARY VALVE LEVER WIRE<br>로크               |

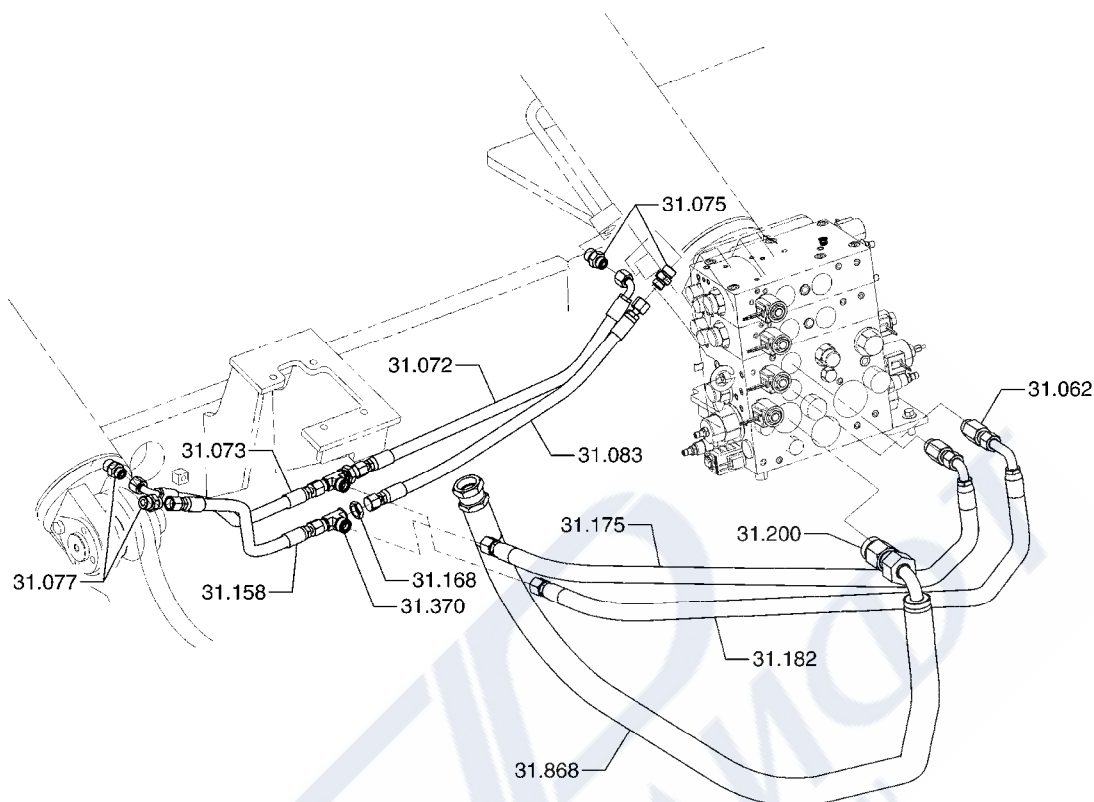 


HYDRAULIC LIFT & TILT LINES

31-082

|        |                                          |
|--------|------------------------------------------|
| 31.062 | FITTING, VALVE TILT PORT "B"<br>피팅       |
| 31.072 | LINE, RH TILT CYLINDER ROD PORT<br>라인    |
| 31.073 | LINE, LH TILT CYLINDER ROD PORT<br>라인    |
| 31.075 | FITTING, RH TILT CYLINDER ROD PORT<br>피팅 |
| 31.077 | FITTING, LH TILT CYLINDER ROD PORT<br>피팅 |
| 31.083 | LINE, RH TILT CYLINDER ANCHOR PORT<br>라인 |
| 31.158 | LINE, LH TILT CYLINDER ANCHOR PORT<br>라인 |
| 31.168 | FASTENER, TILT LINE CLAMP<br>패스너         |
| 31.175 | LINE, VALVE TILT PORT "B"<br>라인          |

|        |                                            |
|--------|--------------------------------------------|
| 31.182 | LINE, VALVE TILT PORT "A"<br>라인            |
| 31.200 | FITTING, MAIN VALVE LIFT PORT<br>피팅        |
| 31.370 | FITTING, TILT CYLINDER ROD PORT LINE<br>피팅 |
| 31.868 | LINE, MAIN VALVE LIFT<br>라인                |



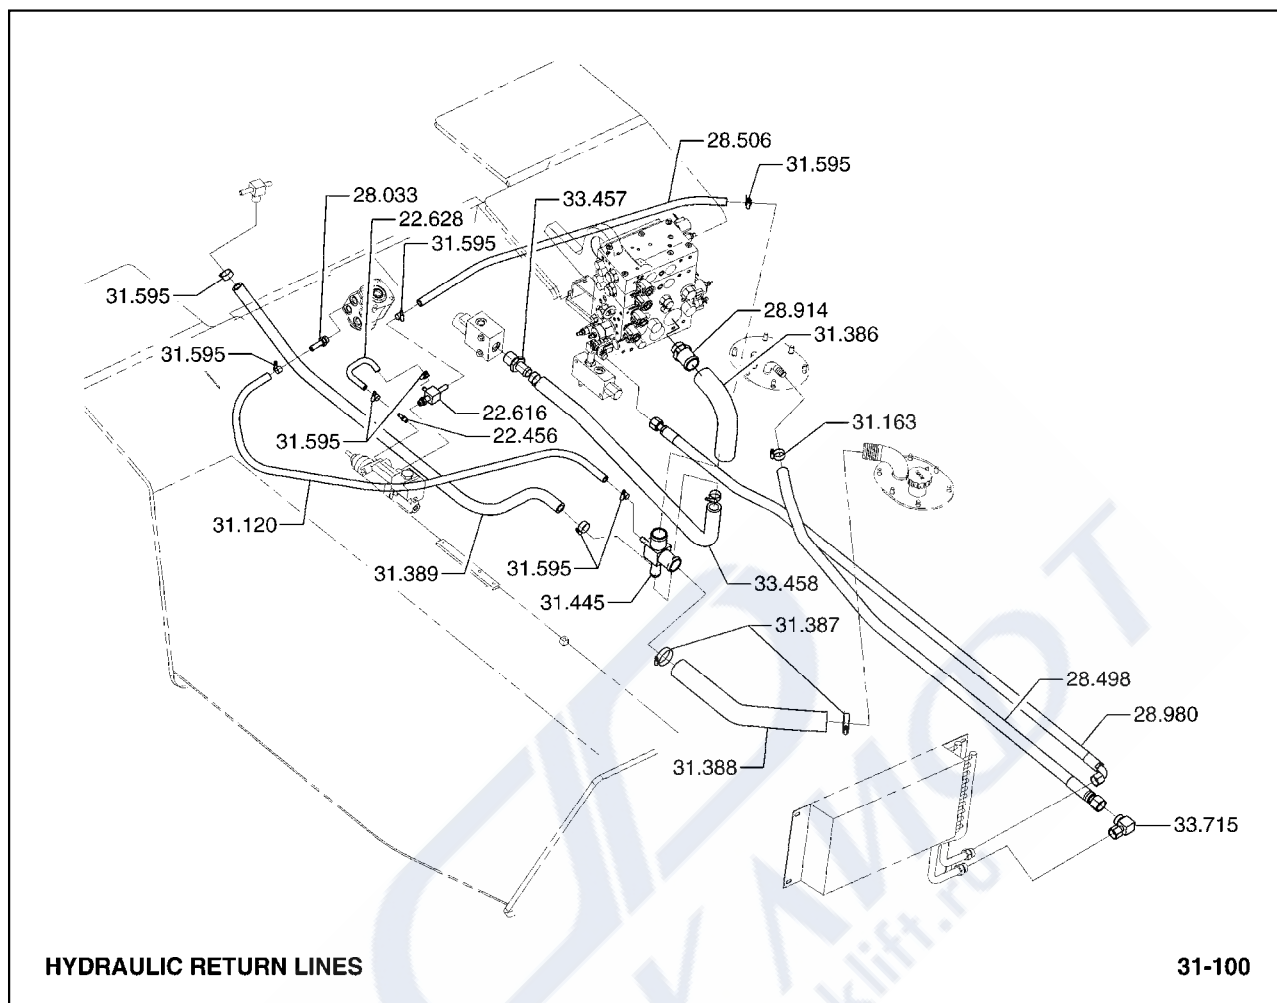 



|        |                                                 |
|--------|-------------------------------------------------|
| 22.456 | BALL, INCHING CHECK VALVE SPRING<br>볼           |
| 22.616 | FITTING, BRAKE ENERGIZER SUMP RETURN LINE<br>피팅 |
| 22.628 | LINE, BRAKE LINE RETURN TO SUMP<br>라인           |
| 28.033 | FITTING, SUMP RETURN<br>피팅                      |
| 28.498 | LINE, SUMP RETURN<br>라인                         |
| 28.506 | LINE, SUMP RETURN<br>라인                         |
| 28.914 | FITTING, VALVE SUMP RETURN PORT<br>피팅           |
| 28.980 | HOSE, CONTROL MODULE TO OIL COOLING LINE<br>호스  |
| 31.120 | LINE, SUMP RETURN (POWER STEERING)<br>라인        |




---

|        |                                            |
|--------|--------------------------------------------|
| 31.163 | CLAMP, SUMP RETURN LINE<br>클램프             |
| 31.386 | LINE, VALVE TO SUMP RETURN<br>라인           |
| 31.387 | CLAMP, MAIN VALVE TO SUMP LINE<br>클램프      |
| 31.388 | LINE, VALVE SUMP RETURN<br>라인              |
| 31.389 | LINE, VALVE SUMP RETURN<br>라인              |
| 31.445 | FITTING, MAIN VALVE TO FILTER LINE<br>피팅   |
| 31.595 | CLAMP, SUMP RETURN LINE FITTING<br>클램프     |
| 33.457 | FITTING, UNLOADING VALVE OUTLET LINE<br>피팅 |
| 33.458 | LINE, UNLOADING VALVE OUTLET<br>라인         |
| 33.715 | FITTING, SUMP RETURN LINE<br>피팅            |

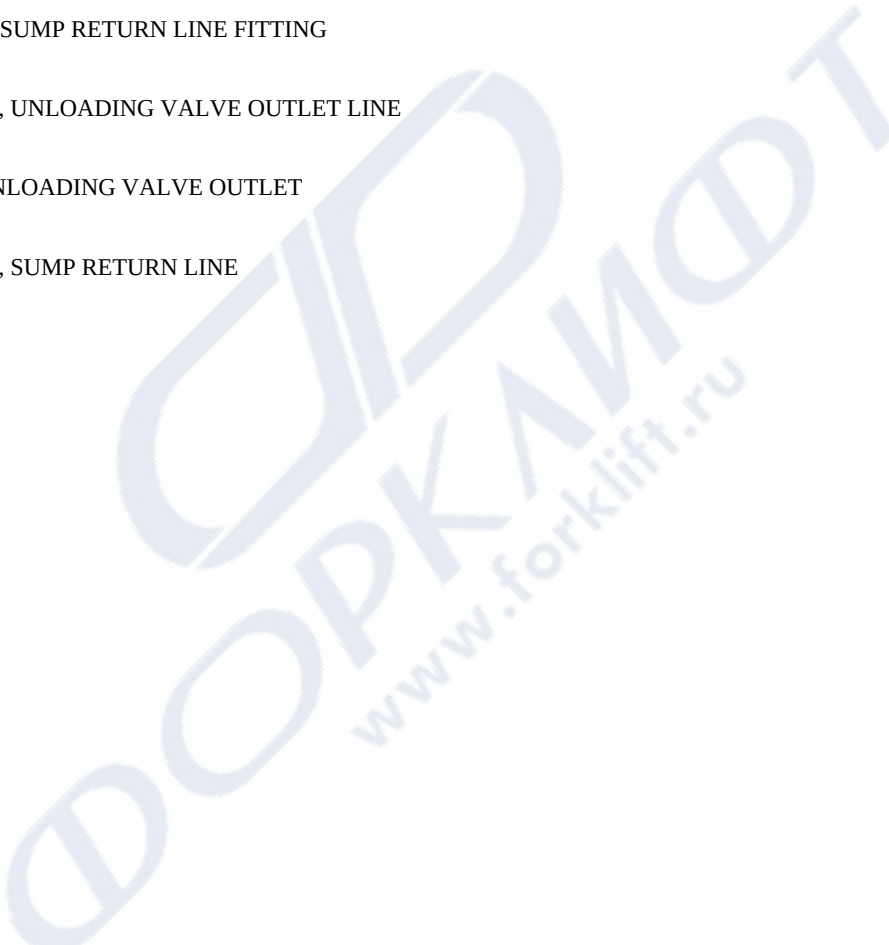 

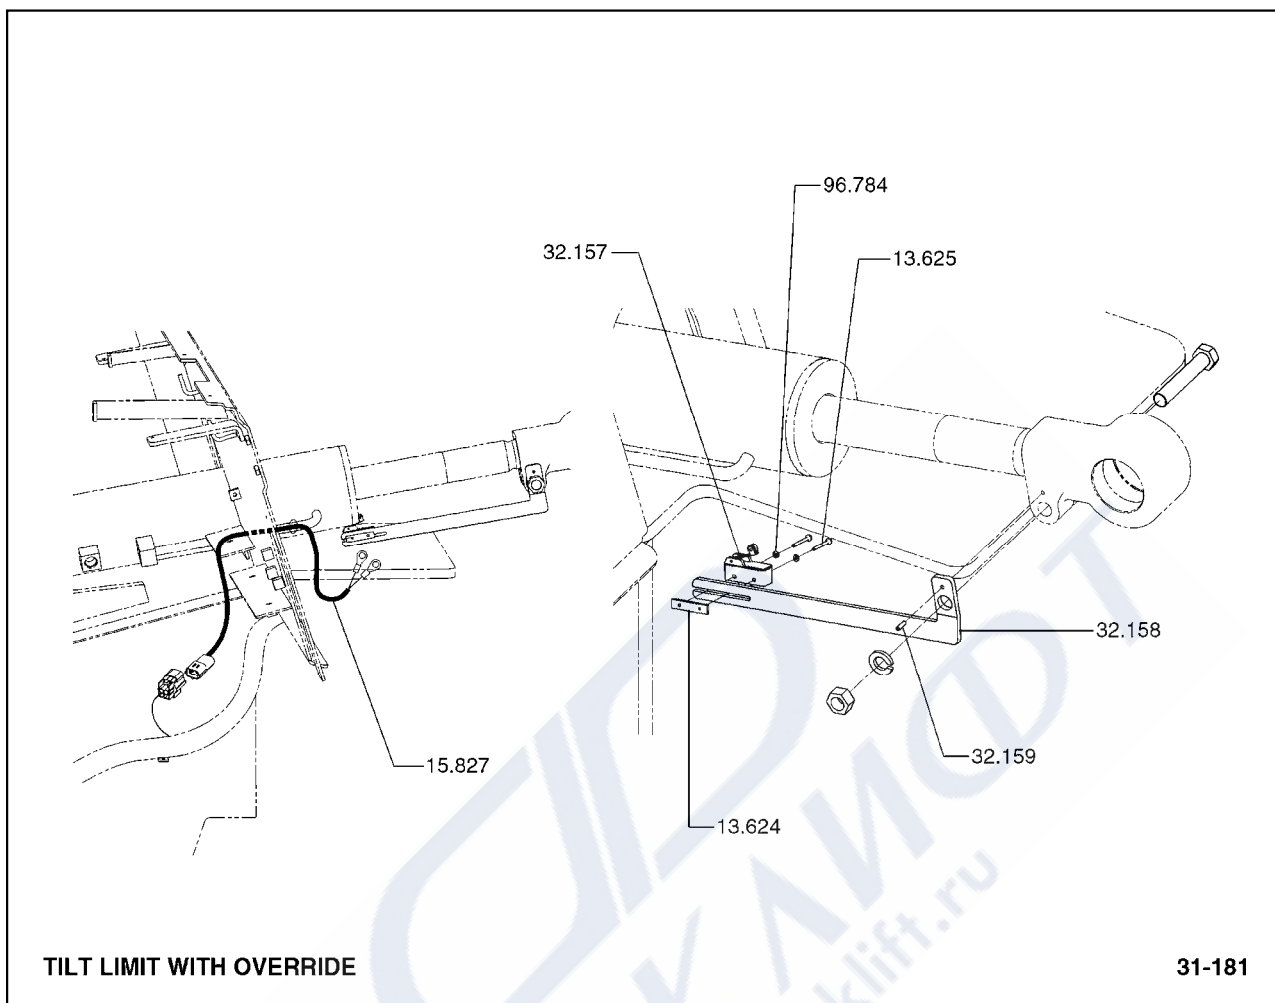 

- |        |                                             |
|--------|---------------------------------------------|
| 13.624 | BRACKET, TILT LIMIT SWITCH<br>브라켓           |
| 13.625 | FASTENER, TILT LIMIT SWITCH<br>패스너          |
| 15.827 | WIRE, TILT LIMIT SWITCH<br>와이어              |
| 32.157 | SWITCH, TILT LIMIT<br>스위치                   |
| 32.158 | BRACKET, TILT LIMIT SWITCH<br>브라켓           |
| 32.159 | RETAINER, TILT LIMIT SWITCH BRACKET<br>리테이너 |
| 96.784 | WASHER, TILT LIMIT SWITCH FASTENER<br>와셔    |

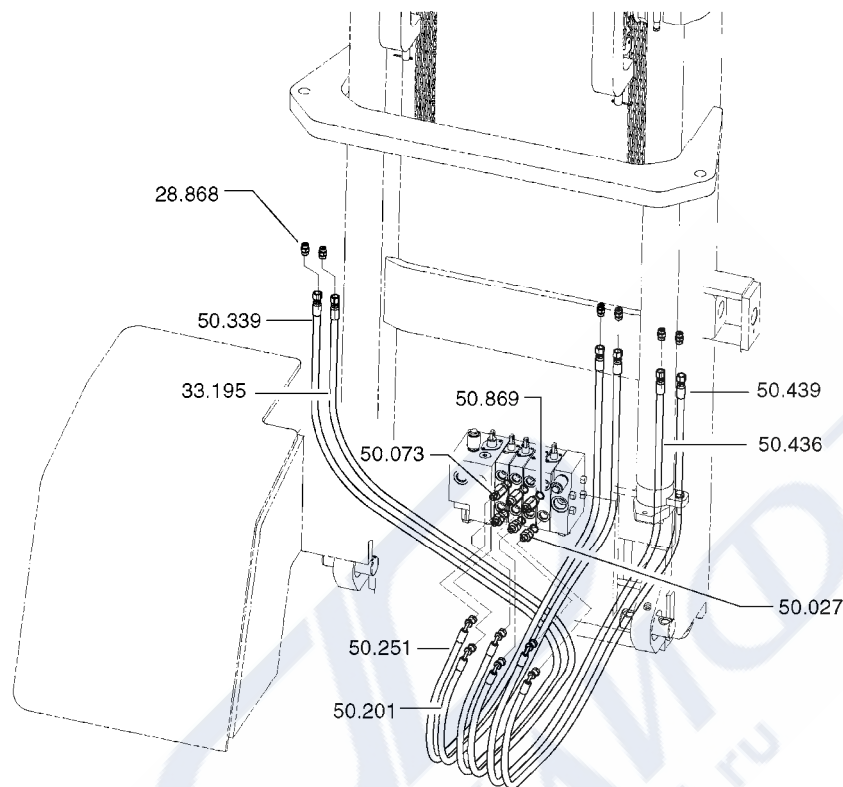 

**AUX VALVE PLUMBING (TRIPPLE)**

 
**31-242**

|        |                                             |
|--------|---------------------------------------------|
| 28.868 | FITTING, AUXILIARY VALVE<br>피팅              |
| 33.195 | LINE, DEVICE RH<br>라인                       |
| 50.027 | FITTING, 1ST AUXILIARY VALVE A PORT<br>피팅   |
| 50.073 | FITTING, 2ND AUXILIARY VALVE "B" PORT<br>피팅 |
| 50.201 | LINE, DEVICE<br>라인                          |
| 50.251 | LINE, DEVICE<br>라인                          |
| 50.339 | LINE, DEVICE LH<br>라인                       |
| 50.436 | LINE, 3RD AUXILIARY VALVE "B" PORT<br>라인    |
| 50.439 | LINE, 3RD AUXILIARY VALVE "B" PORT<br>라인    |

50.869

SEAL, AUXILIARY VALVE B PORT  
씰


ФОРКЛИФТ  
www.forklift.ru

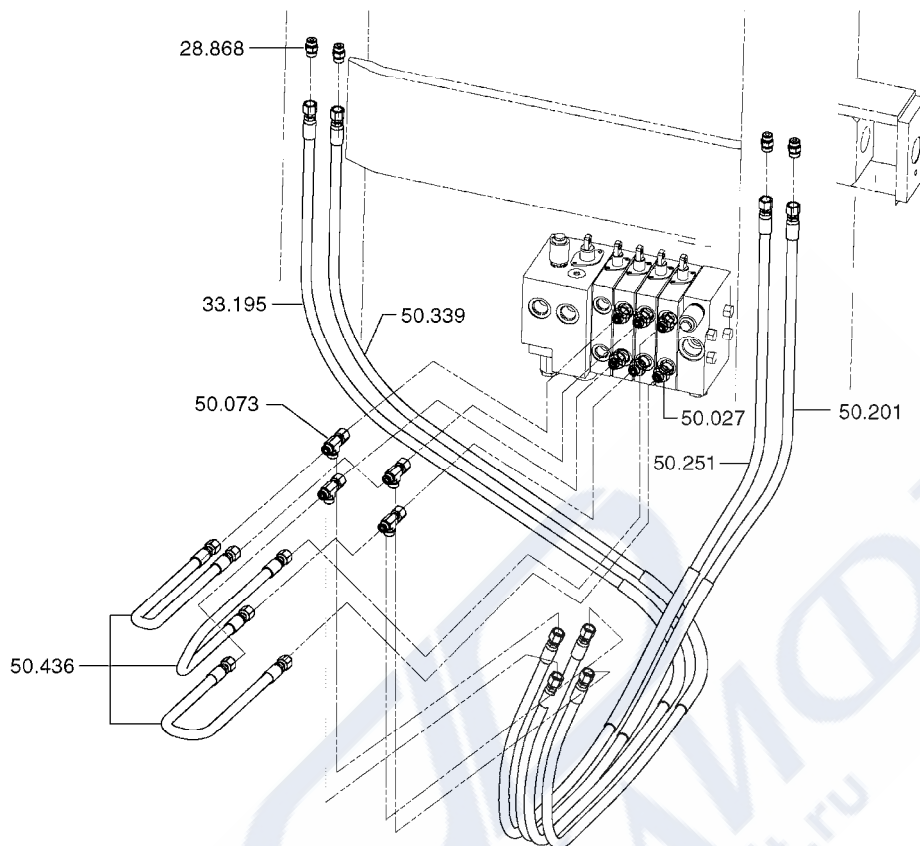

**AUX VALVE PLUMBING (TRIPPLE)**

**31-243**
 
|        |                                             |
|--------|---------------------------------------------|
| 28.868 | FITTING, AUXILIARY VALVE<br>피팅              |
| 33.195 | LINE, DEVICE RH<br>라인                       |
| 50.027 | FITTING, 1ST AUXILIARY VALVE A PORT<br>피팅   |
| 50.073 | FITTING, 2ND AUXILIARY VALVE "B" PORT<br>피팅 |
| 50.201 | LINE, DEVICE<br>라인                          |
| 50.251 | LINE, DEVICE<br>라인                          |
| 50.339 | LINE, DEVICE LH<br>라인                       |
| 50.436 | LINE, 3RD AUXILIARY VALVE "B" PORT<br>라인    |

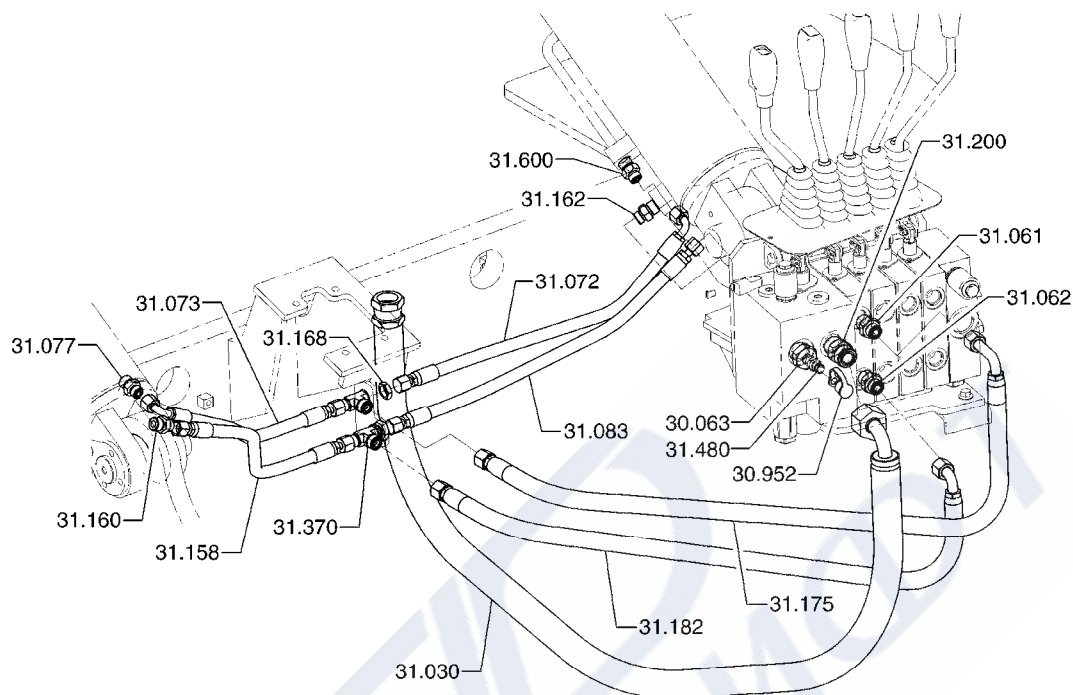


HYDRAULIC LIFT & TILT LINES

31-315


|        |                                               |
|--------|-----------------------------------------------|
| 30.063 | PLUG, INLET SECTION PRESSURE PORT<br>플러그      |
| 30.952 | DUST CAP, PRESSURE GAUGE PORT FITTING<br>더스트캡 |
| 31.030 | LINE, VALVE TO LIFT CYLINDER<br>라인            |
| 31.061 | FITTING, VALVE TILT PORT "A"<br>피팅            |
| 31.062 | FITTING, VALVE TILT PORT "B"<br>피팅            |
| 31.072 | LINE, RH TILT CYLINDER ROD PORT<br>라인         |
| 31.073 | LINE, LH TILT CYLINDER ROD PORT<br>라인         |
| 31.077 | FITTING, LH TILT CYLINDER ROD PORT<br>피팅      |
| 31.083 | LINE, RH TILT CYLINDER ANCHOR PORT<br>라인      |

---

|        |                                             |
|--------|---------------------------------------------|
| 31.158 | LINE, LH TILT CYLINDER ANCHOR PORT<br>라인    |
| 31.160 | FITTING, LH TILT CYLINDER ANCHOR PORT<br>피팅 |
| 31.162 | FITTING, RH TILT CYLINDER ANCHOR PORT<br>피팅 |
| 31.168 | FASTENER, TILT LINE CLAMP<br>패스너            |
| 31.175 | LINE, VALVE TILT PORT "B"<br>라인             |
| 31.182 | LINE, VALVE TILT PORT "A"<br>라인             |
| 31.200 | FITTING, MAIN VALVE LIFT PORT<br>피팅         |
| 31.370 | FITTING, TILT CYLINDER ROD PORT LINE<br>피팅  |
| 31.480 | PLUG, PRESSURE GAUGE PORT<br>플러그            |
| 31.600 | FITTING, RH TILT CYLINDER ROD PORT<br>피팅    |

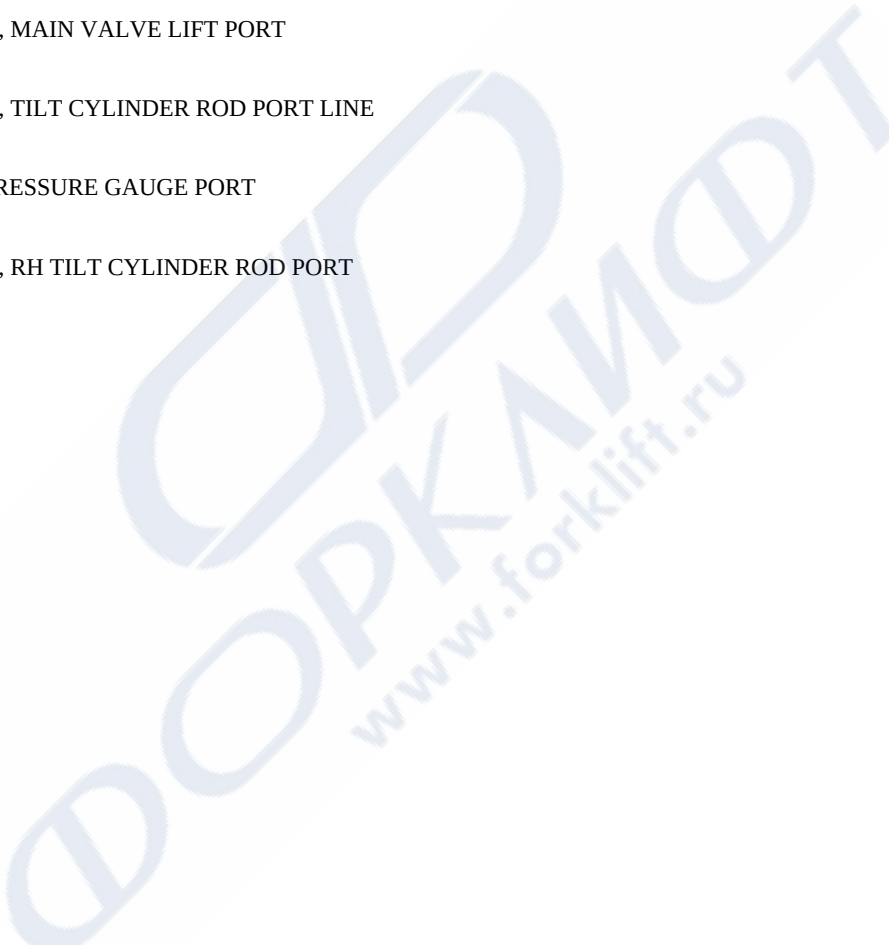 

 ■ INDICATES AN ASSEMBLY  
HAVING SERVICEABLE  
COMPONENTS ILLUSTRATED  
ELSEWHERE

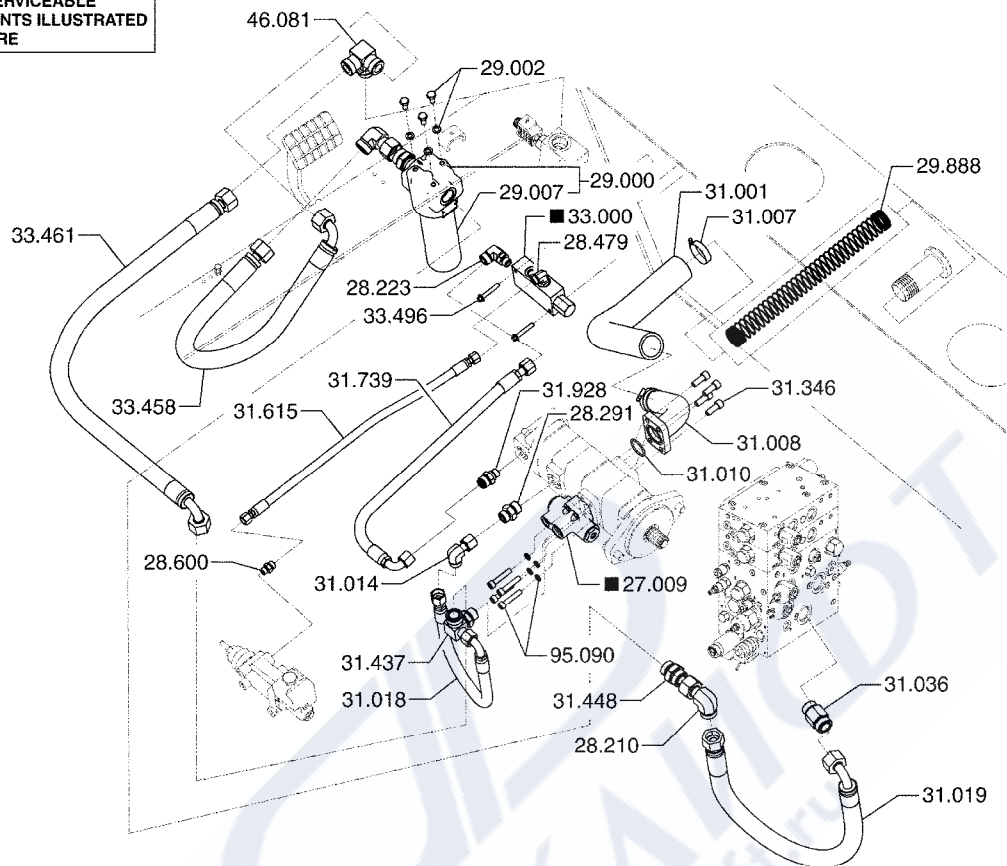


## HYDRAULIC SUPPLY LINES (ELH)

**31-318**
 
|        |                                               |        |                                                      |
|--------|-----------------------------------------------|--------|------------------------------------------------------|
| 27.009 | VALVE ASSEMBLY, HYDRAULIC PRIORITY<br>밸브      | 31.018 | LINE, PUMP OUTLET<br>라인                              |
| 28.210 | FITTING, MAIN VALVE INLET LINE<br>피팅          | 31.019 | LINE, VALVE INLET<br>라인                              |
| 28.223 | FITTING, FLOW CONTROL VALVE INLET PORT<br>피팅  | 31.036 | FITTING, MAIN VALVE INLET PORT<br>피팅                 |
| 28.291 | FITTING, PUMP OUTLET<br>피팅                    | 31.346 | FASTENER, PUMP INLET PORT FITTING<br>패스너             |
| 28.479 | FITTING, FLOW CONTROL OUTLET PORT<br>피팅       | 31.437 | FITTING, VALVE INLET LINE<br>피팅                      |
| 28.600 | FITTING, FLOW CONTROL VALVE OUTLET PORT<br>피팅 | 31.448 | FITTING, PUMP OUTLET LINE<br>피팅                      |
| 29.000 | FILTER, HYDRAULIC OIL<br>필터                   | 31.615 | LINE, FLOW CONTROL OUTLET<br>라인                      |
| 29.002 | FASTENER, HYDRAULIC OIL FILTER<br>패스너         | 31.739 | LINE, AUXILIARY PUMP OUTLET<br>라인                    |
| 29.007 | CARTRIDGE, HYDRAULIC OIL FILTER<br>카트리지       | 31.928 | FITTING, FLOW CONTROL VALVE<br>피팅                    |
| 29.888 | SPRING, HYDRAULIC SUMP<br>스프링                 | 33.000 | VALVE ASSEMBLY, FLOW CONTROL<br>밸브                   |
| 31.001 | LINE, SUMP OUTLET<br>라인                       | 33.458 | LINE, UNLOADING VALVE OUTLET<br>라인                   |
| 31.007 | CLAMP, PUMP INLET LINE<br>클램프                 | 33.461 | LINE, UNLOADING VALVE CONTROL<br>라인                  |
| 31.008 | FITTING, PUMP INLET<br>피팅                     | 33.496 | FASTENER, FLOW CONTROL VALVE MOUNTING BRACKET<br>패스너 |
| 31.010 | SEAL, PUMP INLET PORT<br>씰                    | 46.081 | FITTING, UNLOADING VALVE<br>피팅                       |
| 31.014 | FITTING, PUMP OUTLET<br>피팅                    | 95.090 | FASTENER, HYDRAULIC PRIORITY VALVE<br>패스너            |




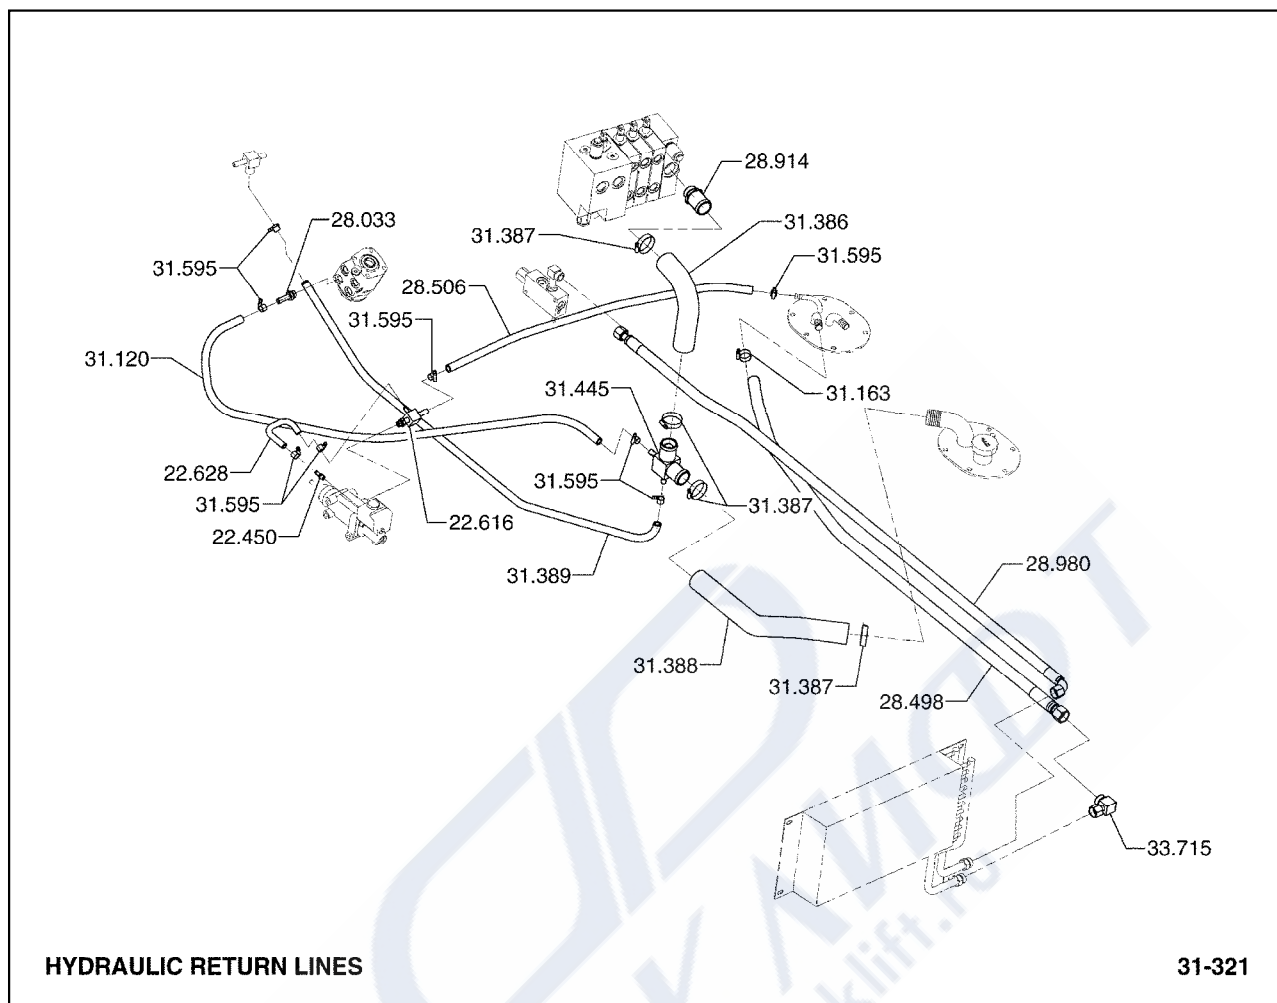

|        |                                                         |
|--------|---------------------------------------------------------|
| 22.450 | FITTING, BRAKE MASTER CYLINDER FILLER RETURN LINE<br>피팅 |
| 22.616 | FITTING, BRAKE ENERGIZER SUMP RETURN LINE<br>피팅         |
| 22.628 | LINE, BRAKE LINE RETURN TO SUMP<br>라인                   |
| 28.033 | FITTING, SUMP RETURN<br>피팅                              |
| 28.498 | LINE, SUMP RETURN<br>라인                                 |
| 28.506 | LINE, SUMP RETURN<br>라인                                 |
| 28.914 | FITTING, VALVE SUMP RETURN PORT<br>피팅                   |
| 28.980 | HOSE, CONTROL MODULE TO OIL COOLING LINE<br>호스          |
| 31.120 | LINE, SUMP RETURN (POWER STEERING)<br>라인                |

---


|        |                                          |
|--------|------------------------------------------|
| 31.163 | CLAMP, SUMP RETURN LINE<br>클램프           |
| 31.386 | LINE, VALVE TO SUMP RETURN<br>라인         |
| 31.387 | CLAMP, MAIN VALVE TO SUMP LINE<br>클램프    |
| 31.388 | LINE, VALVE SUMP RETURN<br>라인            |
| 31.389 | LINE, VALVE SUMP RETURN<br>라인            |
| 31.445 | FITTING, MAIN VALVE TO FILTER LINE<br>피팅 |
| 31.595 | CLAMP, SUMP RETURN LINE FITTING<br>클램프   |
| 33.715 | FITTING, SUMP RETURN LINE<br>피팅          |

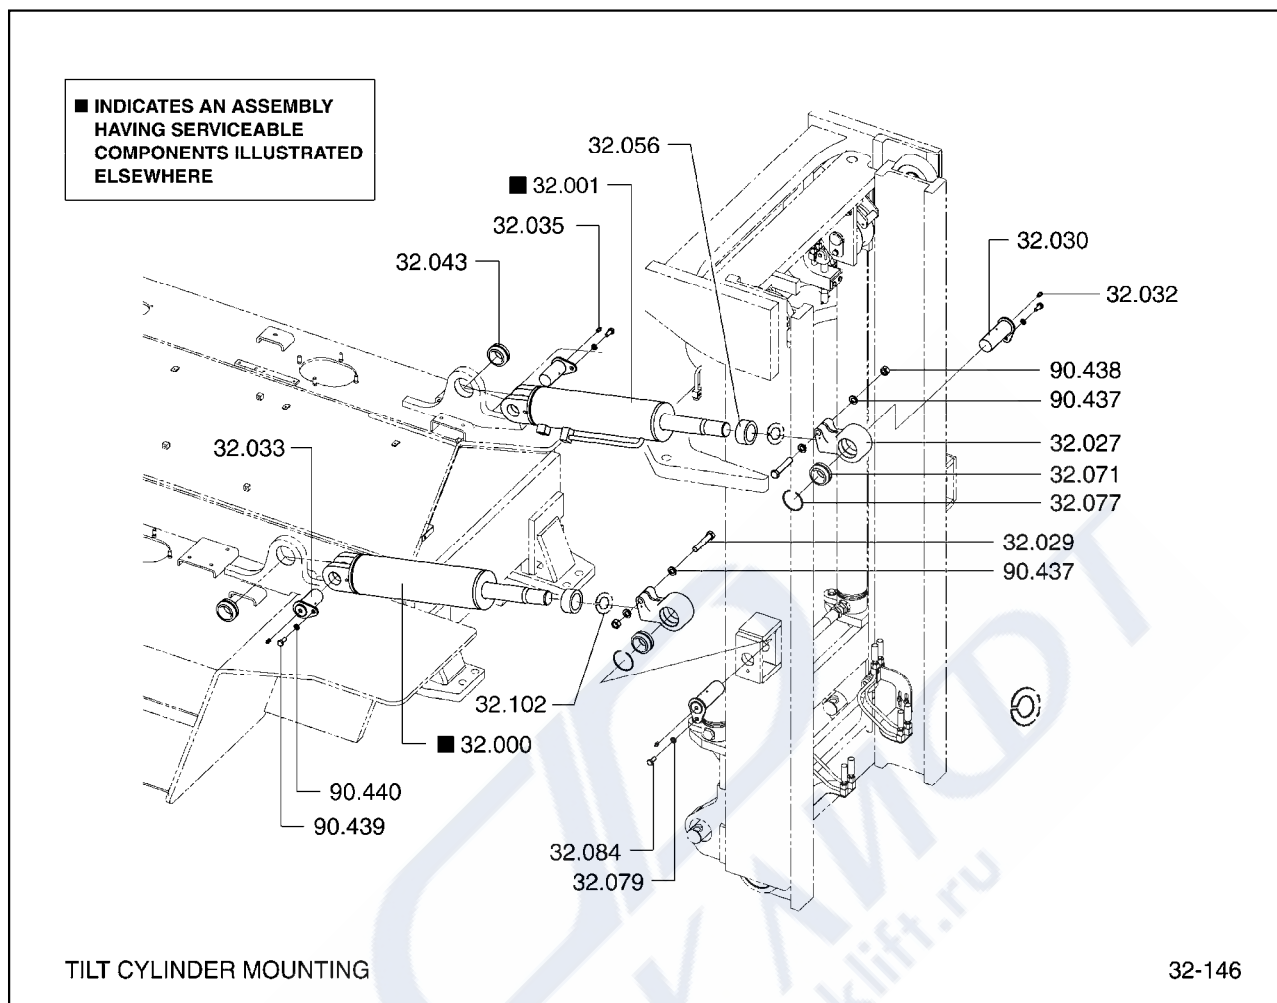 


|        |                                                 |
|--------|-------------------------------------------------|
| 32.000 | CYLINDER ASSEMBLY, TILT<br>실린더                  |
| 32.001 | TILT CYLINDER ASSEMBLY (LH)<br>틸트실린더            |
| 32.027 | END, RH TILT CYLINDER ROD<br>엔드                 |
| 32.029 | FASTENER, TILT CYLINDER ROD END<br>패스너          |
| 32.030 | PIN, TILT CYLINDER TO UPRIGHT<br>핀              |
| 32.032 | FITTING, TILT CYLINDER TO UPRIGHT PIN LUB<br>피팅 |
| 32.033 | PIN, TILT CYLINDER REAR MOUNTING RH<br>핀        |
| 32.035 | FITTING, TILT CYLINDER TO FRAME PIN LUB<br>피팅   |
| 32.043 | BEARING, TILT CYLINDER FRAME MOUNTING<br>베어링    |

---

|        |                                                            |
|--------|------------------------------------------------------------|
| 32.056 | SPACER, TILT CYLINDER ROD END<br>스페이서                      |
| 32.071 | BEARING, TILT CYLINDER UPRIGHT MOUNTING<br>베어링             |
| 32.077 | RETAINER, TILT CYLINDER ROD END<br>리테이너                    |
| 32.079 | LOCKWASHER, TILT CYLINDER ROD END FASTENER<br>로크와셔         |
| 32.084 | CAPSCREW, TILT CYLINDER ROD END PIN RETAINER<br>캡스크류       |
| 32.102 | SHIM, TILT CYLINDER STROKE ADJUSTING<br>심                  |
| 90.437 | LOCKWASHER, TILT CYLINDER ROD END FASTENER<br>로크와셔         |
| 90.438 | NUT, TILT CYLINDER ROD END FASTENER<br>너트                  |
| 90.439 | BOLT, TILT CYLINDER TO FRAME PIN LOCK<br>볼트                |
| 90.440 | LOCKWASHER, TILT CYLINDER TO FRAME PIN LOCK FASTEN<br>로크와셔 |

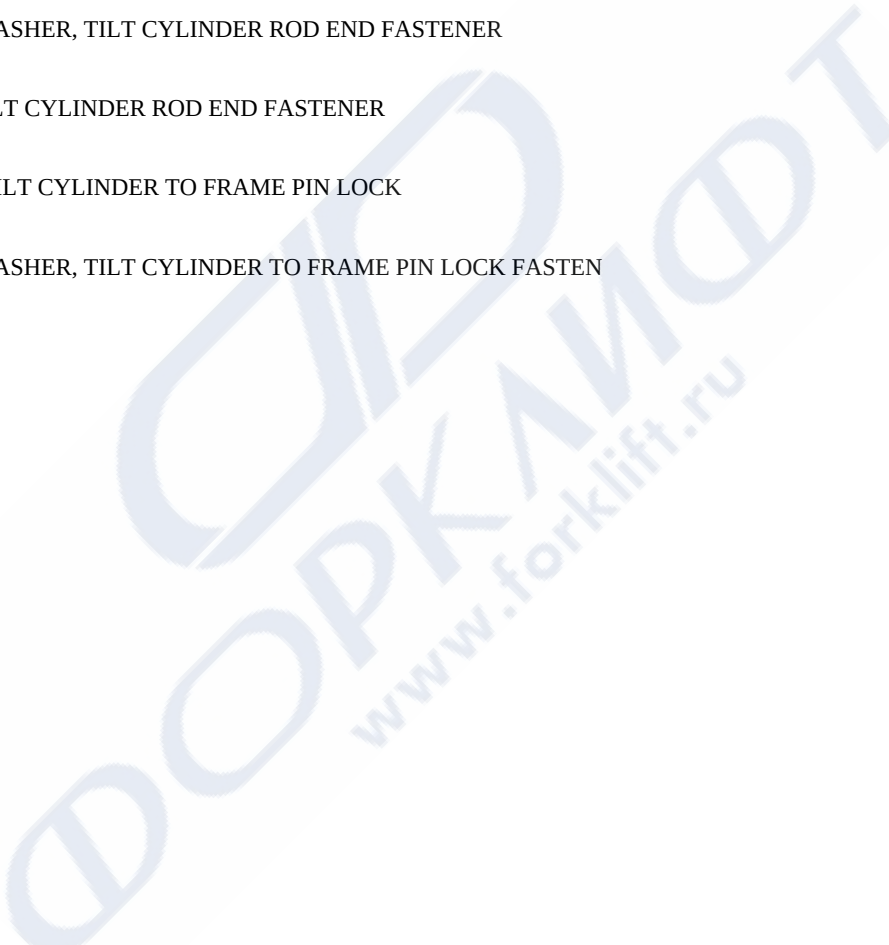 


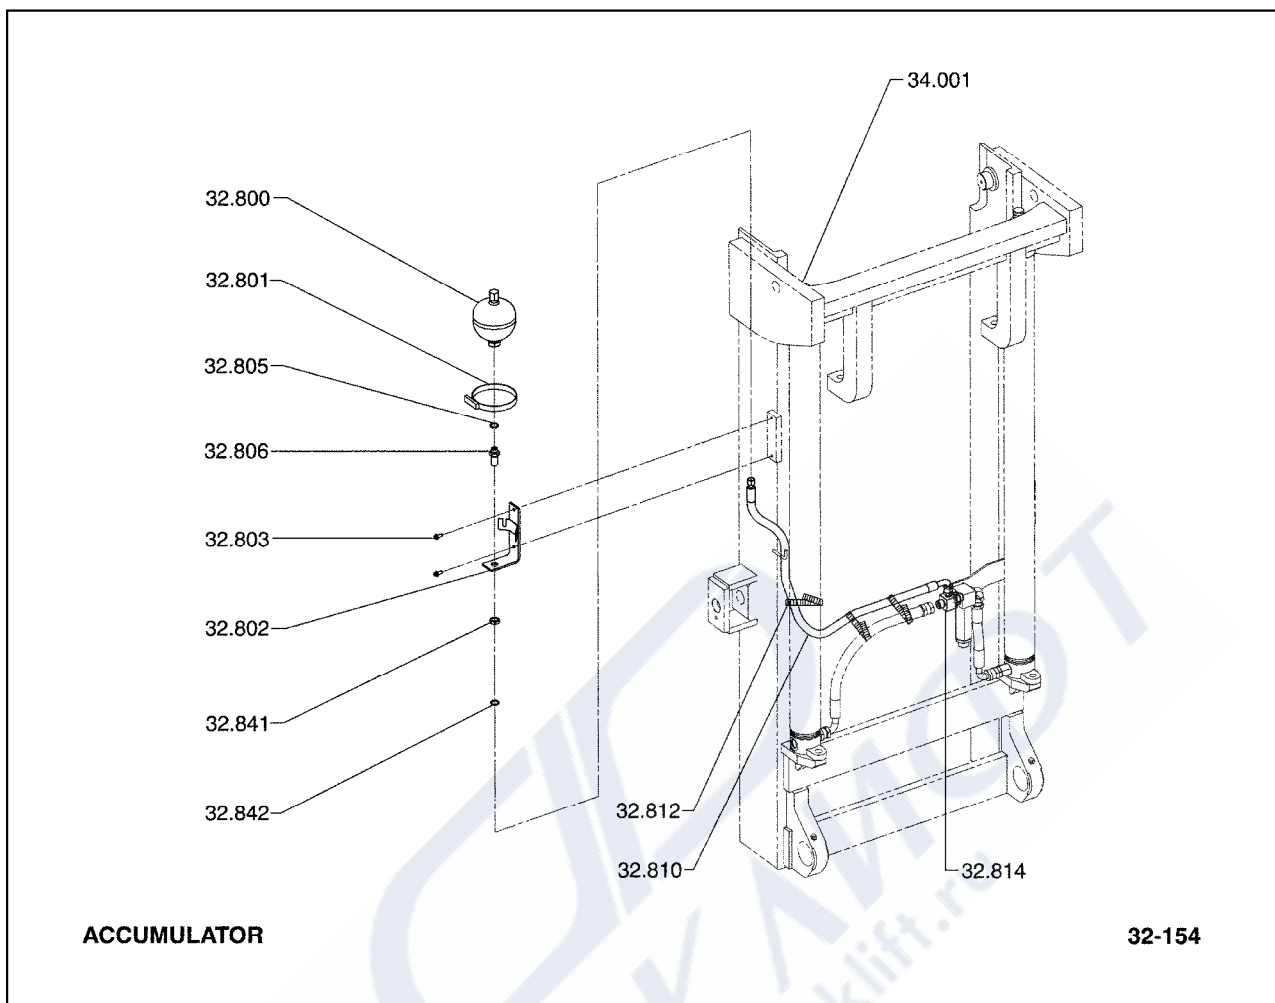 

|        |                                              |
|--------|----------------------------------------------|
| 32.800 | ACCUMULATOR, HYDRAULIC<br>어큐플레이터             |
| 32.801 | CLAMP, HYDRAULIC ACCUMULATOR MOUNTING<br>클램프 |
| 32.802 | BRACKET, HYDRAULIC ACCUMULATOR<br>브라켓        |
| 32.803 | FASTENER, HYDRAULIC ACCUMULATOR CLAMP<br>패스너 |
| 32.805 | SEAL, HYDRAULIC ACCUMULATOR CONNECTOR<br>셀   |
| 32.806 | CONNECTOR, HYDRAULIC ACCUMULATOR<br>커넥터      |
| 32.810 | LINE, HYDRAULIC ACCUMULATOR<br>라인            |
| 32.812 | CLIP, HYDRAULIC ACCUMULATOR LINE<br>클립       |
| 32.814 | FITTING, HYDRAULIC ACCUMULATOR LINE<br>피팅    |


|        |                                              |
|--------|----------------------------------------------|
| 32.841 | NUT, HYDRAULIC ACCUMULATOR FITTING<br>너트     |
| 32.842 | SEAL, HYDRAULIC ACCUMULATOR FITTING<br>씰     |
| 34.001 | OUTER RAIL WELDER ASSEMBLY, UPRIGHT<br>아우터레일 |



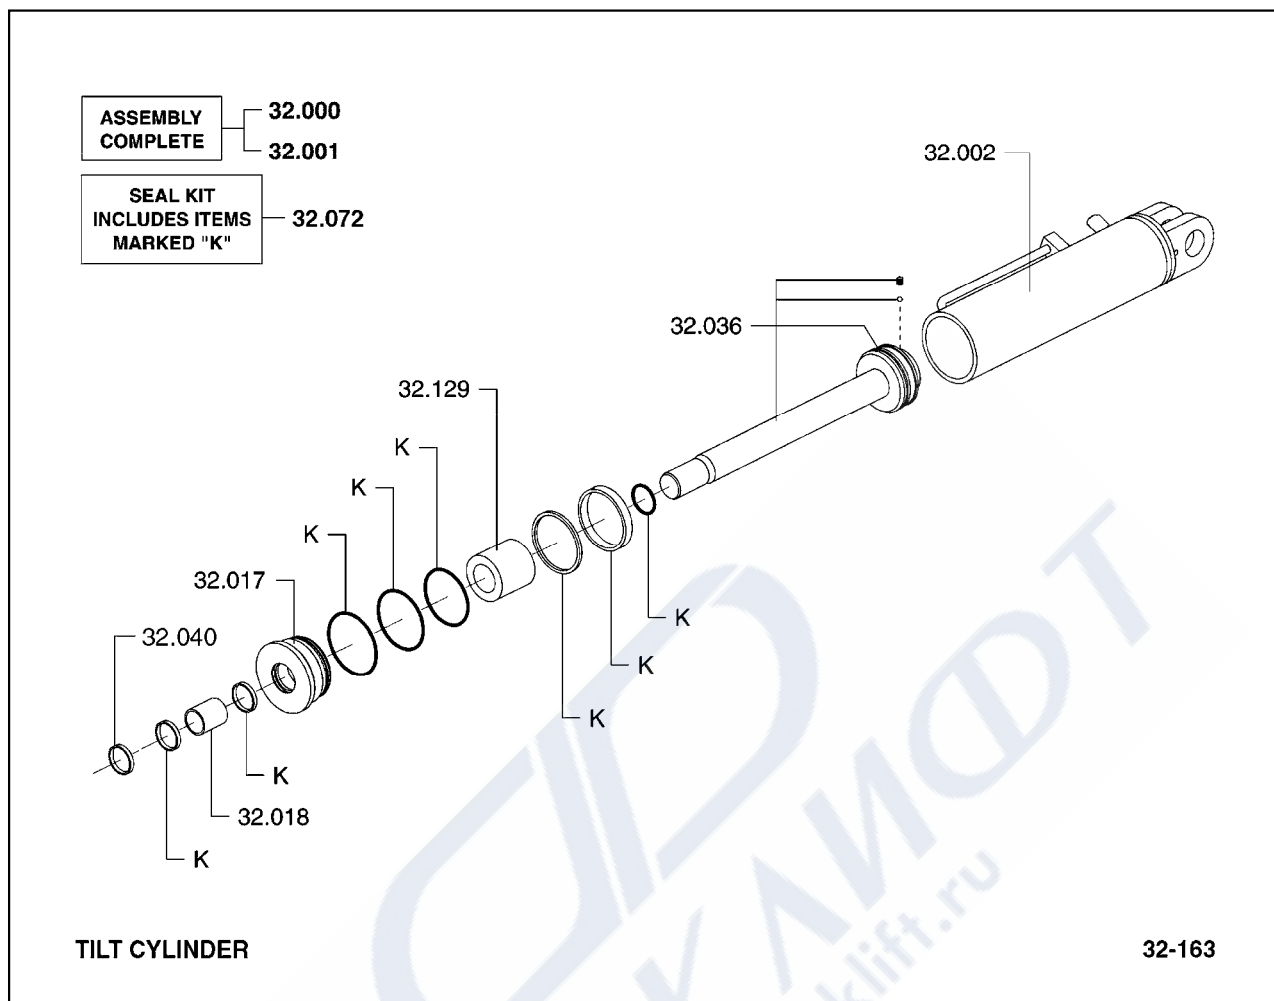 

|        |                                                  |
|--------|--------------------------------------------------|
| 32.000 | CYLINDER ASSEMBLY, TILT<br>실린더                   |
| 32.001 | TILT CYLINDER ASSEMBLY (LH)<br>틸트실린더             |
| 32.002 | CYLINDER ASSEMBLY, WELDED<br>실린더                 |
| 32.017 | GLAND, TILT CYLINDER<br>그랜드                      |
| 32.018 | BUSHING, TILT CYLINDER GLAND<br>부싱               |
| 32.036 | ROD & PISTON ASSEMBLY, TILT CYLINDER<br>로드 & 피스톤 |
| 32.040 | RING, TILT CYLINDER GLAND POSITIONING<br>링       |
| 32.072 | PACKING KIT, TILT CYLINDER<br>패킹키트               |
| 32.129 | SPACER, TILT CYLINDER BARREL END<br>스페이서         |

 ■ INDICATES AN ASSEMBLY  
HAVING SERVICEABLE  
COMPONENTS ILLUSTRATED  
ELSEWHERE

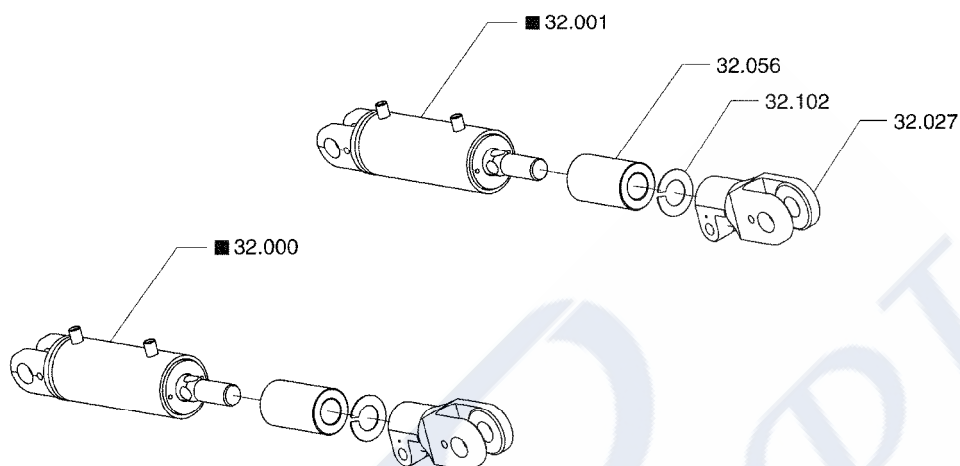


TILT AMOUNT GP


32-167

|        |                                           |
|--------|-------------------------------------------|
| 32.000 | CYLINDER ASSEMBLY, TILT<br>실린더            |
| 32.001 | TILT CYLINDER ASSEMBLY (LH)<br>틸트실린더      |
| 32.027 | END, RH TILT CYLINDER ROD<br>엔드           |
| 32.056 | SPACER, TILT CYLINDER ROD END<br>스페이서     |
| 32.102 | SHIM, TILT CYLINDER STROKE ADJUSTING<br>심 |



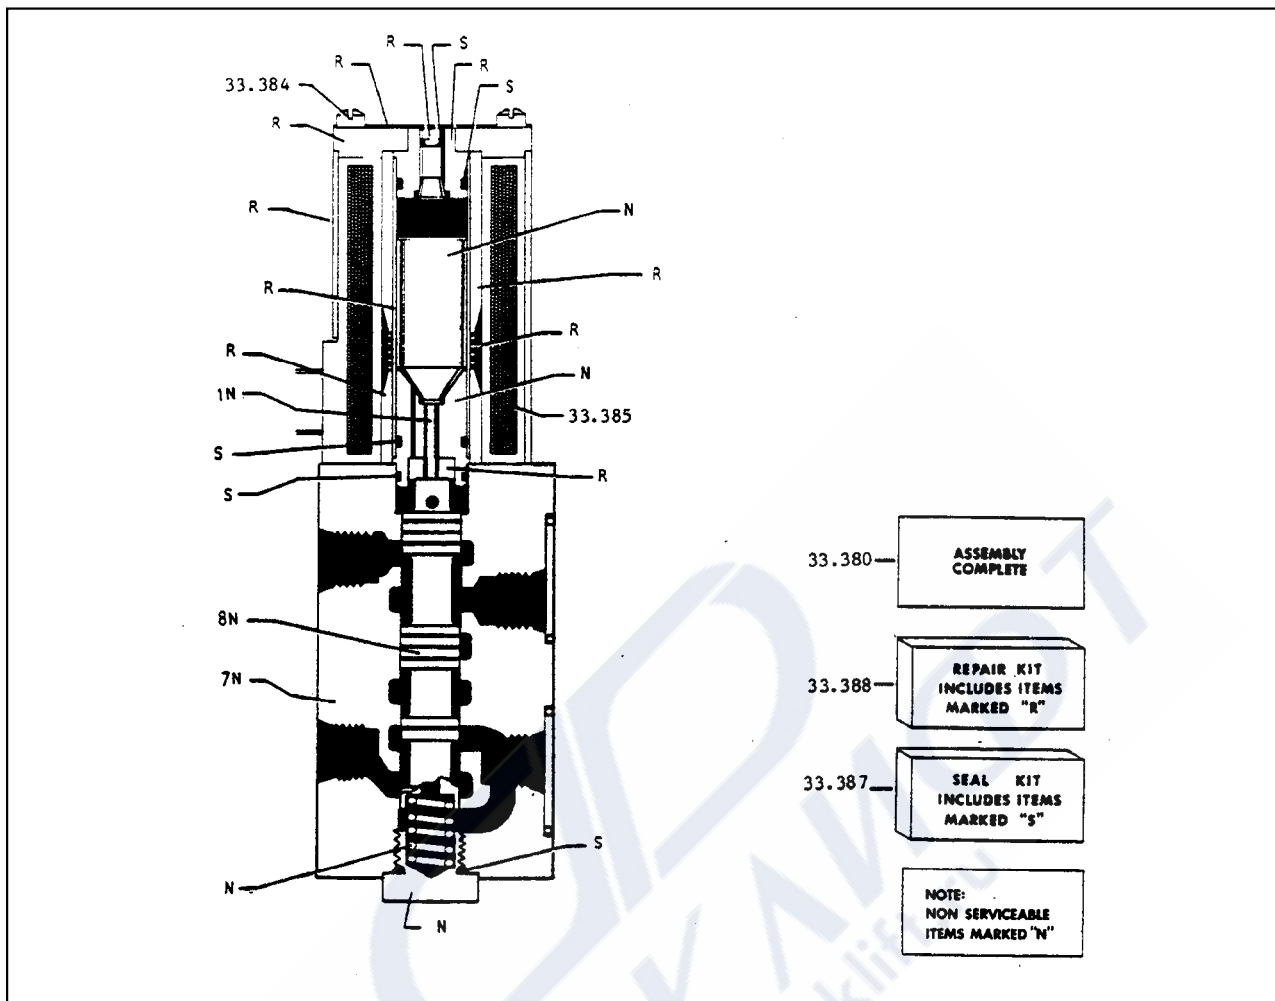 

 
- 33.380 VALVE ASSEMBLY, DEVICE SELECTOR SOLENOID  
밸브
- 33.384 FASTENER, DEV SELECTOR VALVE SOLENOID COIL  
패스너
- 33.385 COIL, DEVICE SELECTOR VALVE SOLENOID  
코일
- 33.387 SEAL KIT, DEVICE SELECTOR VALVE  
씰키트
- 33.388 REPAIR KIT, DEVICE SELECTOR VALVE  
리페어키트

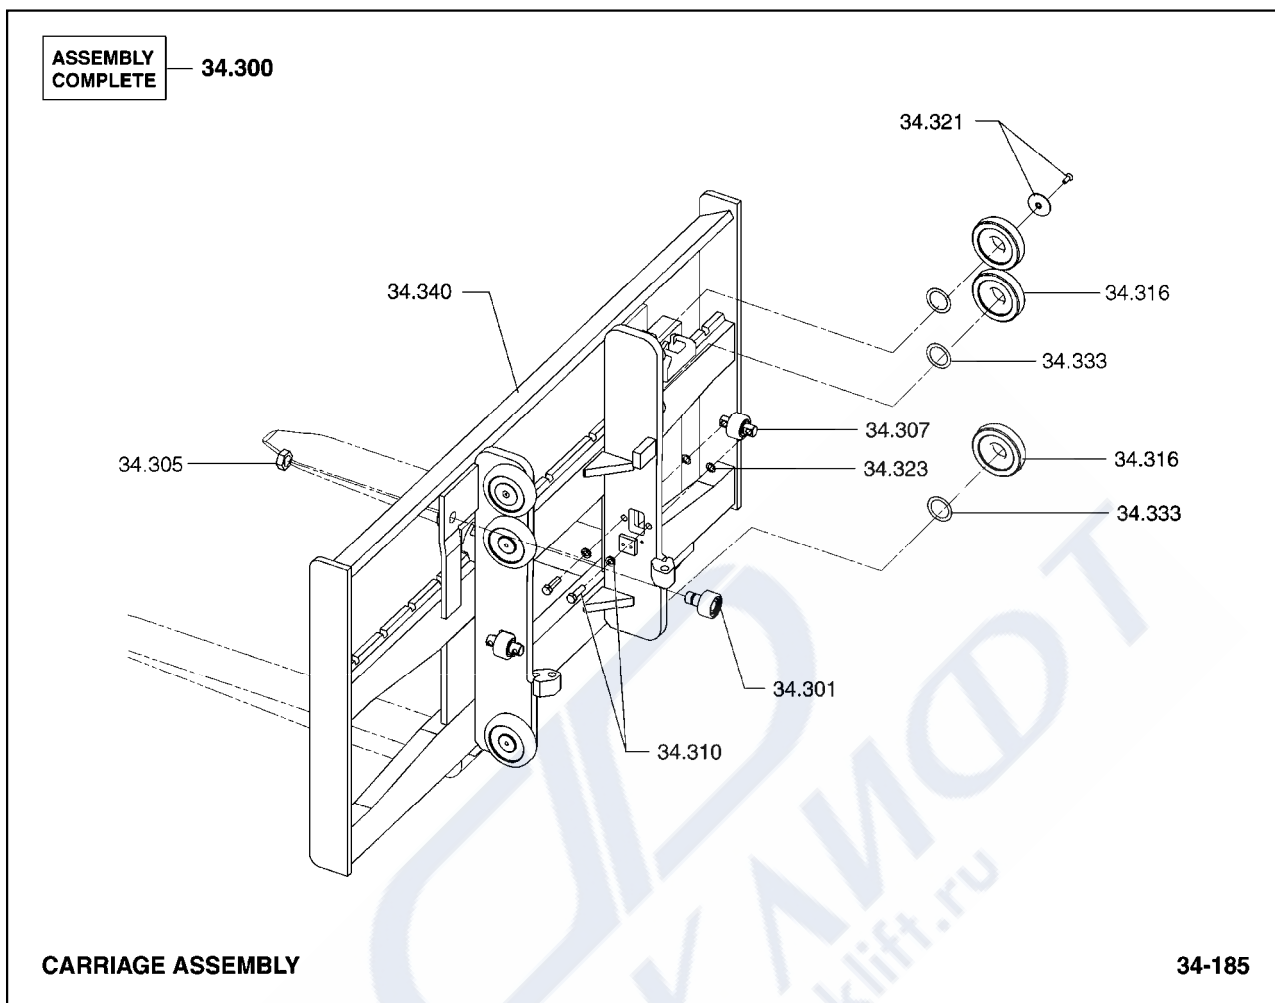

|        |                                                       |
|--------|-------------------------------------------------------|
| 34.300 | ASSEMBLY, FORK BARS & CARRIAGE<br>캐리지                 |
| 34.301 | ROLLER, CARRIAGE OUTER THRUST<br>롤러                   |
| 34.305 | NUT, CARRIAGE OUTER THRUST ROLLER<br>너트               |
| 34.307 | ROLLER, CARRIAGE INNER THRUST<br>롤러                   |
| 34.310 | FASTENER, CARRIAGE INNER THRUST ROLLER BRACKET<br>패스너 |
| 34.316 | ROLLER, CARRIAGE<br>롤러                                |
| 34.321 | FASTENER, CARRIAGE ROLLER SHAFT<br>패스너                |
| 34.323 | SHIM, INNER THRUST ROLLER<br>심                        |
| 34.333 | SHIM, CARRIAGE ROLLER<br>심                            |

 34.340 CARRIAGE WELDED ASSEMBLY  
캐리지용 접물



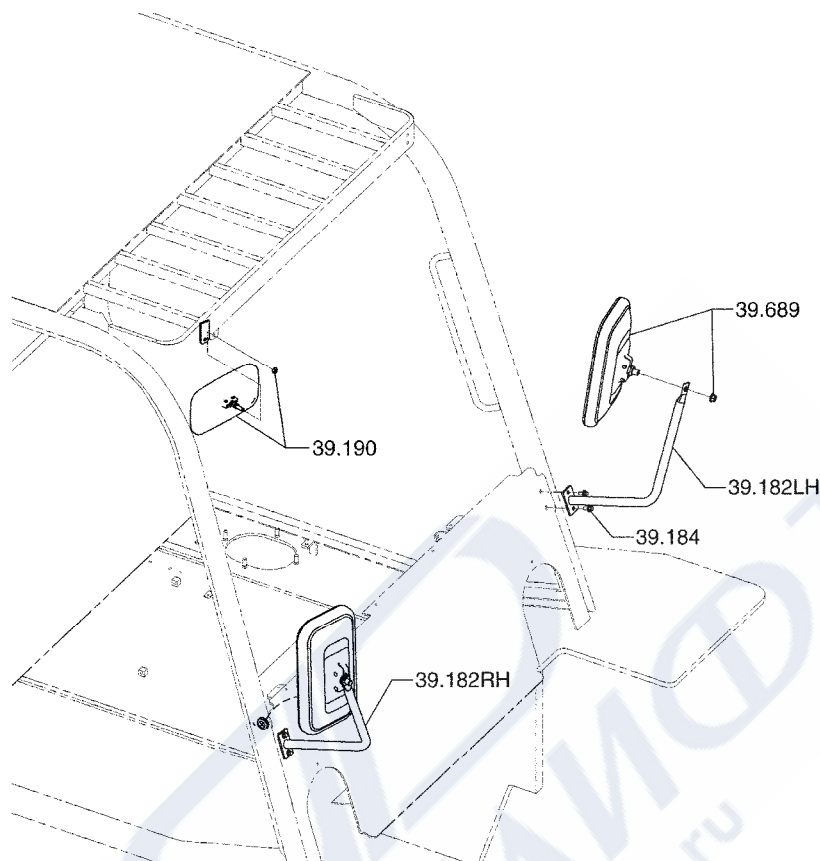


REAR VIEW MIRROR MOUNTING

37-023


- |        |                                           |
|--------|-------------------------------------------|
| 39.182 | BRACKET, REAR VIEW MIRROR MOUNTING<br>브라켓 |
| 39.184 | FASTENER, REAR VIEW MIRROR<br>패스너         |
| 39.190 | MIRROR, RH OUTSIDE<br>미러                  |
| 39.689 | MIRROR, REAR VIEW<br>미러                   |

ASSEMBLY  
COMPLETE — 37.554

 NOTE :  
ITEMS TO BE NOT SOLD  
SEPARATELY MARKED "NSS"

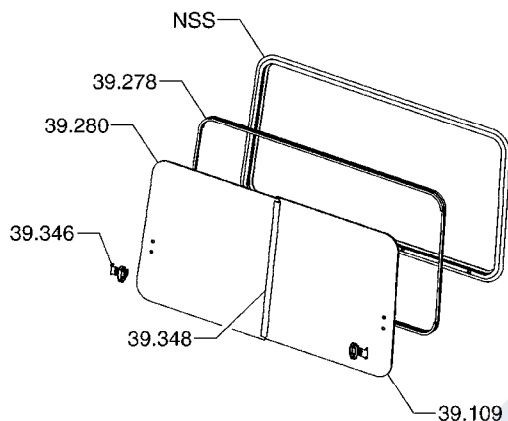

GLASS - DOUBLE SLIDING TYPE

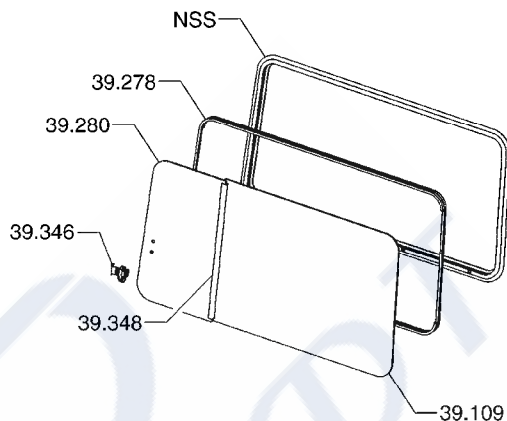 


GLASS - SINGLE SLIDING TYPE

REAR WINDOW ASSEMBLY

37-060


|        |                                               |
|--------|-----------------------------------------------|
| 37.554 | REAR GLASS COMPLETE, CABIN<br>리어글래스           |
| 39.109 | GLASS, REAR<br>글래스                            |
| 39.278 | CHANNEL, MOVEABLE REAR WINDOW - RH SIDE<br>채널 |
| 39.280 | GLASS, REAR WINDOW - MOVEABLE<br>글래스          |
| 39.346 | LATCH, CAB REAR WINDOW<br>래치                  |
| 39.348 | CHANNEL, CAB REAR WINDOW<br>채널                |

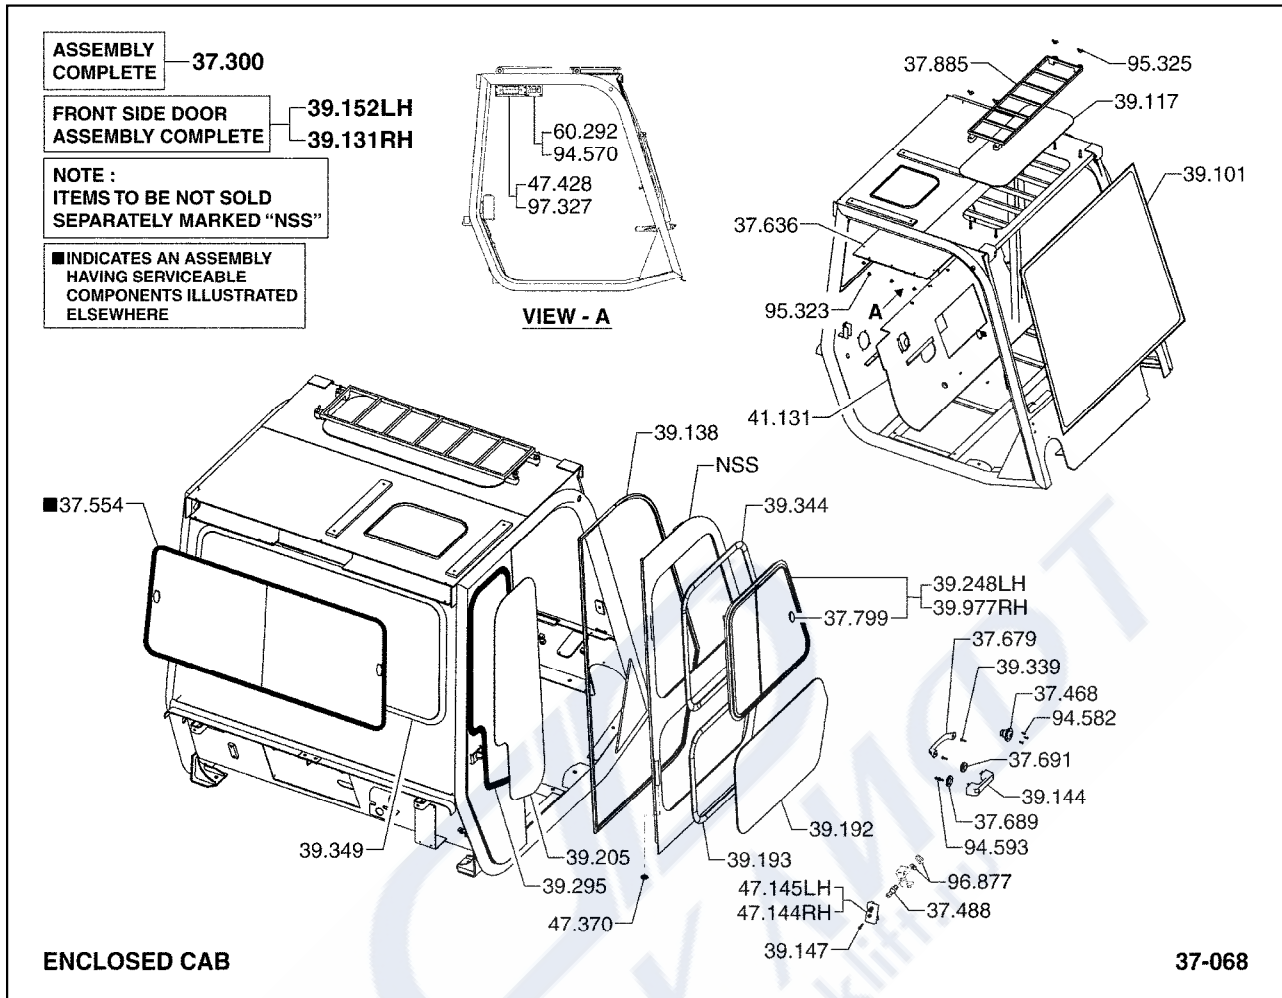 

|        |                                           |        |                                             |
|--------|-------------------------------------------|--------|---------------------------------------------|
| 37.300 | CAB ASSEMBLY<br>캐빈                        | 39.147 | FASTENER, RIGHT HAND DOOR LATCH<br>패스너      |
| 37.468 | CATCH, CAB DOOR LATCH<br>캐치               | 39.152 | DOOR ASSEMBLY, LEFT HAND<br>도어              |
| 37.488 | STRIKER PLATE, DOOR INSIDE LATCH<br>스트라이커 | 39.192 | GLASS, RIGHT HAND DOOR (LOWER)<br>글래스       |
| 37.554 | REAR GLASS COMPLETE, CABIN<br>리어글래스       | 39.193 | WEATHERSEAL, RH DOOR GLASS (LOWER)<br>웨더셀   |
| 37.636 | COVERING, CAB INSIDE ROOF<br>커버링          | 39.205 | GLASS, RH DOOR REAR<br>글래스                  |
| 37.679 | HANDLE, RH DOOR INSIDE<br>핸들              | 39.248 | WINDOW ASSEMBLY, CAB DOOR (LH)<br>윈도우       |
| 37.689 | SEAL, DOOR OUTSIDE HANDLE<br>셀            | 39.295 | WEATHERSEAL, DOOR REAR GLASS<br>웨더셀         |
| 37.691 | SEAL, DOOR OUTSIDE HANDLE<br>셀            | 39.339 | FASTENER, RH DOOR INSIDE HANDLE<br>패스너      |
| 37.799 | LATCH, CAB DOOR WINDOW ASSEMBLY<br>래치     | 39.344 | WEATHERSEAL, RH DOOR WINDOW ASSEMBLY<br>웨더셀 |
| 37.885 | ROOF, ROOF PANEL<br>루프                    | 39.349 | WEATHERSEAL, CAB REAR WINDOW<br>웨더셀         |
| 39.101 | GLASS, WINDSHIELD<br>글래스                  | 39.977 | WINDOW ASSEMBLY, CAB DOOR (RH)<br>윈도우       |
| 39.117 | ROOF SCREEN<br>루프스크린                      | 41.131 | SOUND ABSORBER, LOWER REAR PANEL<br>흡음재     |
| 39.131 | DOOR ASSEMBLY, RIGHT HAND<br>도어           | 47.144 | LATCH, RH DOOR INSIDE<br>래치                 |
| 39.138 | WEATHERSEAL, RIGHT HAND DOOR<br>웨더셀       | 47.145 | LATCH, LH DOOR INSIDE<br>래치                 |
| 39.144 | HANDLE, RH DOOR OUTSIDE<br>핸들             | 47.370 | SPACER, CAB DOOR HINGE<br>스페이서              |

|        |                                                  |
|--------|--------------------------------------------------|
| 47.428 | COVER, CAB AUDIO AND TRANSCEIVER MOUNUTING<br>커버 |
| 60.292 | COVER, CAB SWITCH PANEL<br>커버                    |
| 94.570 | FASTENER, CAB SWITCH PANEL COVER<br>패스너          |
| 94.582 | FASTENER, CAB DOOR LATCH CATCH<br>패스너            |
| 94.593 | FASTENER, OUTSIDE DOOR HANDLE<br>패스너             |
| 95.323 | FASTENER, CAB INSIDE ROOF COVERING<br>패스너        |
| 95.325 | FASTENER, CAB ROOF<br>패스너                        |
| 96.877 | FASTENER, DOOR INSIDE LATCH STRIKER<br>패스너       |
| 97.327 | FASTENER, CAB AUDIO AND TRANSCEIVER COVER<br>패스너 |



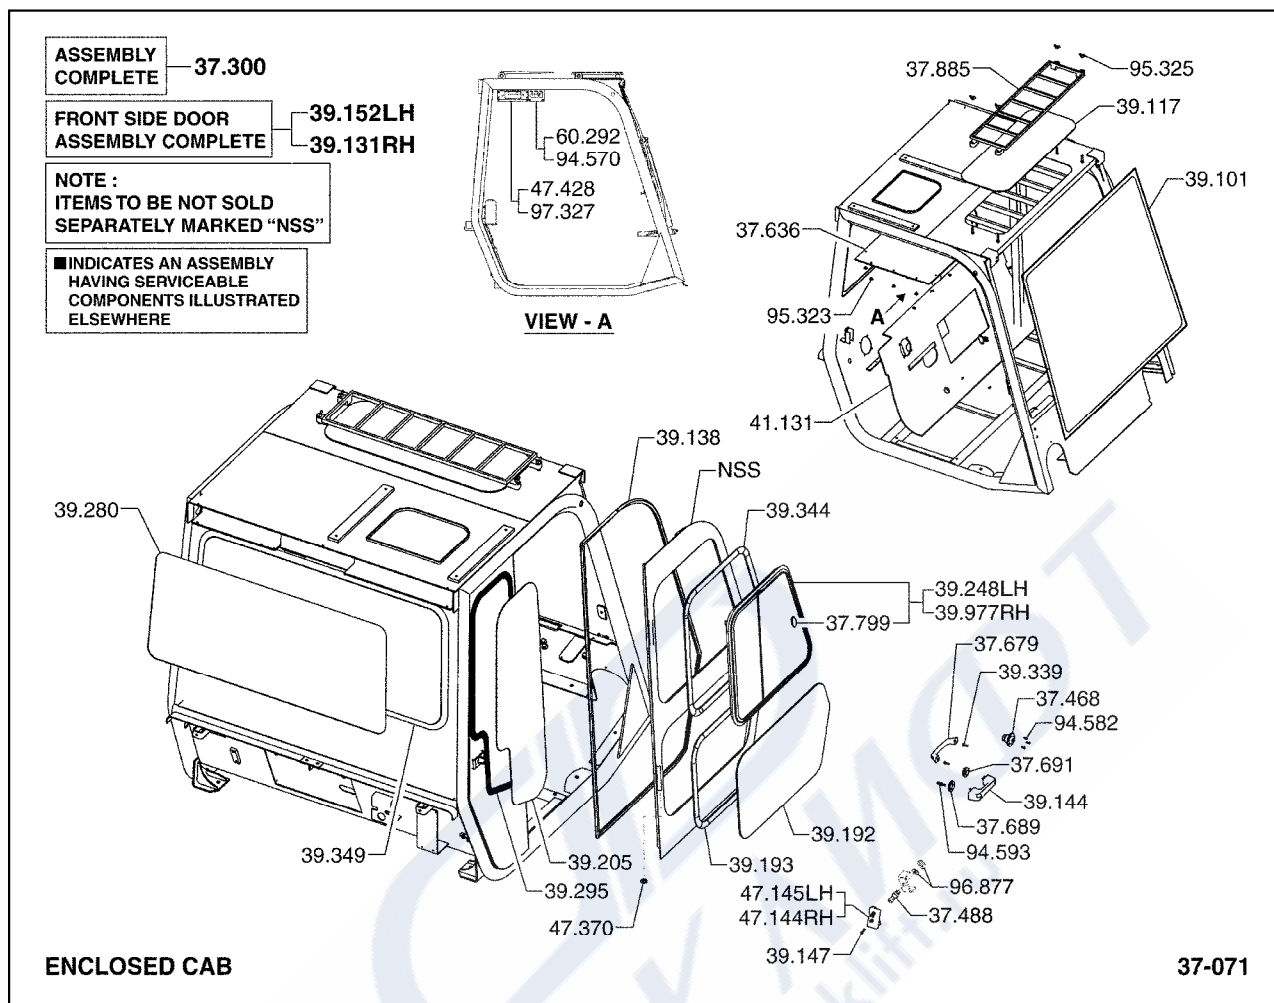 


|        |                                           |        |                                             |
|--------|-------------------------------------------|--------|---------------------------------------------|
| 37.300 | CAB ASSEMBLY<br>캐빈                        | 39.152 | DOOR ASSEMBLY, LEFT HAND<br>도어              |
| 37.468 | CATCH, CAB DOOR LATCH<br>캐치               | 39.192 | GLASS, RIGHT HAND DOOR (LOWER)<br>글래스       |
| 37.488 | STRIKER PLATE, DOOR INSIDE LATCH<br>스트라이커 | 39.193 | WEATHERSEAL, RH DOOR GLASS (LOWER)<br>웨더셀   |
| 37.636 | COVERING, CAB INSIDE ROOF<br>커버링          | 39.205 | GLASS, RH DOOR REAR<br>글래스                  |
| 37.679 | HANDLE, RH DOOR INSIDE<br>핸들              | 39.248 | WINDOW ASSEMBLY, CAB DOOR (LH)<br>윈도우       |
| 37.689 | SEAL, DOOR OUTSIDE HANDLE<br>셀            | 39.280 | GLASS, REAR WINDOW - MOVEABLE<br>글래스        |
| 37.691 | SEAL, DOOR OUTSIDE HANDLE<br>셀            | 39.295 | WEATHERSEAL, DOOR REAR GLASS<br>웨더셀         |
| 37.799 | LATCH, CAB DOOR WINDOW ASSEMBLY<br>래치     | 39.339 | FASTENER, RH DOOR INSIDE HANDLE<br>패스너      |
| 37.885 | ROOF, ROOF PANEL<br>루프                    | 39.344 | WEATHERSEAL, RH DOOR WINDOW ASSEMBLY<br>웨더셀 |
| 39.101 | GLASS, WINDSHIELD<br>글래스                  | 39.349 | WEATHERSEAL, CAB REAR WINDOW<br>웨더셀         |
| 39.117 | ROOF SCREEN<br>루프스크린                      | 39.977 | WINDOW ASSEMBLY, CAB DOOR (RH)<br>윈도우       |
| 39.131 | DOOR ASSEMBLY, RIGHT HAND<br>도어           | 41.131 | SOUND ABSORBER, LOWER REAR PANEL<br>흡음재     |
| 39.138 | WEATHERSEAL, RIGHT HAND DOOR<br>웨더셀       | 47.144 | LATCH, RH DOOR INSIDE<br>래치                 |
| 39.144 | HANDLE, RH DOOR OUTSIDE<br>핸들             | 47.145 | LATCH, LH DOOR INSIDE<br>래치                 |
| 39.147 | FASTENER, RIGHT HAND DOOR LATCH<br>패스너    | 47.370 | SPACER, CAB DOOR HINGE<br>스페이서              |



---

|        |                                                  |
|--------|--------------------------------------------------|
| 47.428 | COVER, CAB AUDIO AND TRANSCEIVER MOUNUTING<br>커버 |
| 60.292 | COVER, CAB SWITCH PANEL<br>커버                    |
| 94.570 | FASTENER, CAB SWITCH PANEL COVER<br>패스너          |
| 94.582 | FASTENER, CAB DOOR LATCH CATCH<br>패스너            |
| 94.593 | FASTENER, OUTSIDE DOOR HANDLE<br>패스너             |
| 95.323 | FASTENER, CAB INSIDE ROOF COVERING<br>패스너        |
| 95.325 | FASTENER, CAB ROOF<br>패스너                        |
| 96.877 | FASTENER, DOOR INSIDE LATCH STRIKER<br>패스너       |
| 97.327 | FASTENER, CAB AUDIO AND TRANSCEIVER COVER<br>패스너 |

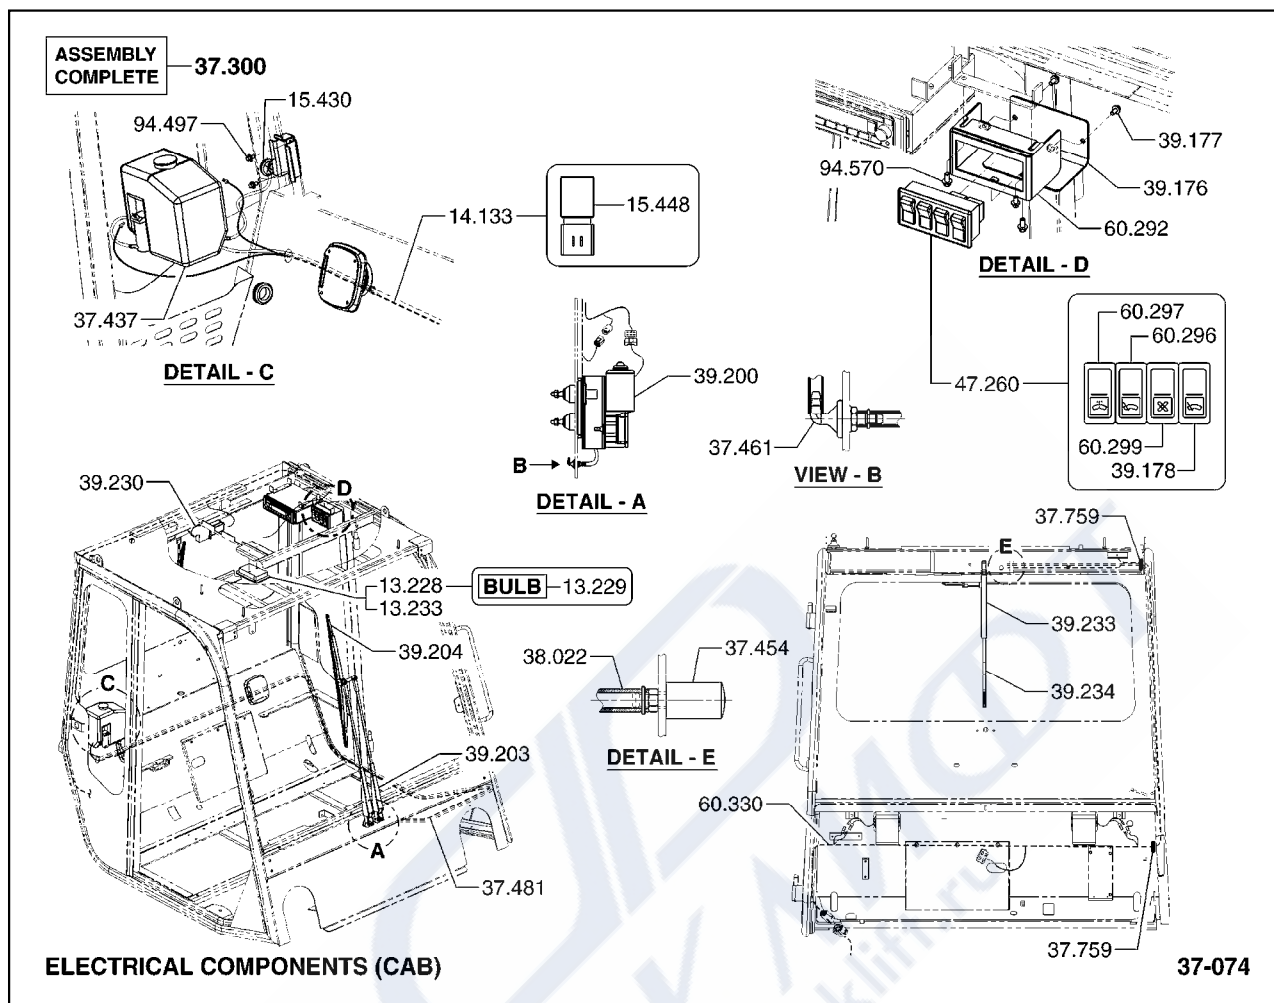 

13.228 LAMP ASSEMBLY, DOME  
램프

13.229 BULB, DOME LAMP  
전구

13.233 FASTENER, DOME LAMP  
패스너

14.133 WIRE, WIPER MOTOR  
와이어

15.430 GROMMET, CABIN WIRING HARNESS  
그로멧

15.448 DIODE, HARNESS  
다이오드

37.300 CAB ASSEMBLY  
캐빈

37.437 PUMP & TANK, WINDSHIELD WASHER  
펌프& 탱크

37.454 NOZZLE, REAR WINDOW GLASS WASHER  
노즐

37.461 NOZZLE, WINDSHIELD GLASS WASHER  
노즐

37.481 LINE, WINDOW GLASS WASHER  
라인

37.759 GROMMET, COVER WINDSHIELD WIPER MOTOR  
그로멧

38.022 HOSE, WINDOW WASHER  
호스

39.176 BRACKET, WINDSHIELD WIPER SWITCH  
브라켓

39.177 FASTENER, WINDSHIELD WIPER SWITCH BRACKET  
패스너

39.178 SWITCH, WINDSHIELD WIPER  
스위치

39.200 MOTOR, WINDSHIELD WIPER  
모터

39.203 ARM, WINDSHIELD WIPER  
암

39.204 BLADE, WINDSHIELD WIPER  
블레이드

39.230 MOTOR, REAR WINDOW WIPER  
모터

39.233 ARM, REAR WINDOW WIPER  
암

39.234 BLADE, REAR WINDOW WIPER  
블레이드

47.260 SWITCH ASSY, CABIN  
스위치

60.292 COVER, CAB SWITCH PANEL  
커버

60.296 SWITCH, WINDSHIELD WIPER (REAR)  
스위치

60.297 SWITCH, WINDSHIELD WASHER  
스위치

 
60.299 SWITCH, HEATER ON/OFF  
스위치

60.330 WIRING HARNESS, CAB  
와이어하네스

94.497 FASTENER, WINDSHIELD WASHER TANK  
패스너

94.570 FASTENER, CAB SWITCH PANEL COVER  
패스너


■ INDICATES AN ASSEMBLY  
HAVING SERVICEABLE  
COMPONENTS ILLUSTRATED  
ELSEWHERE

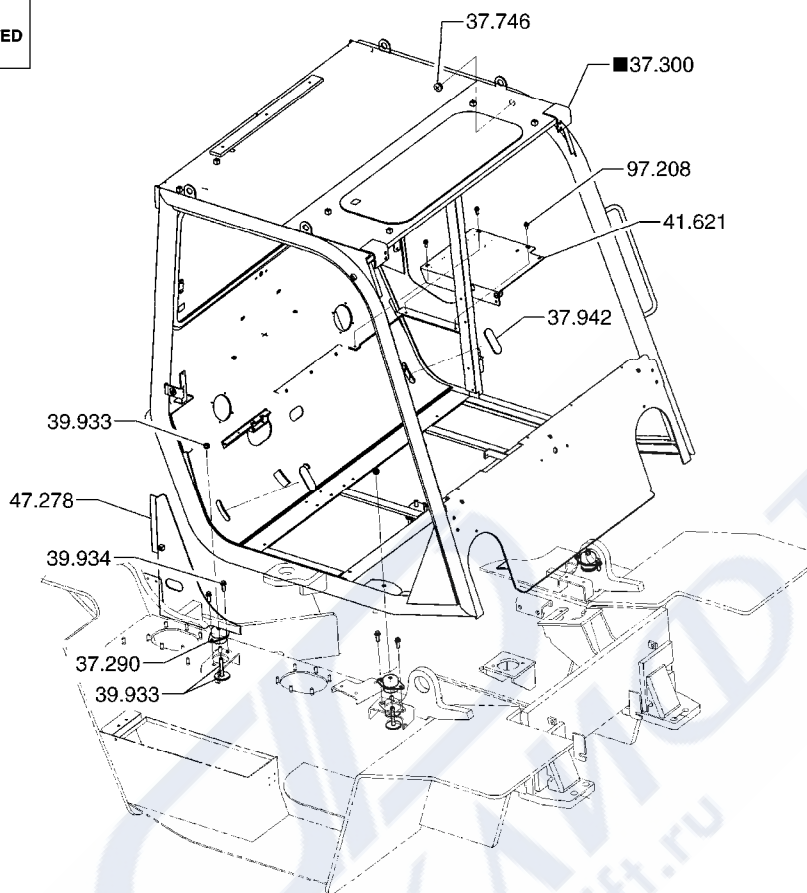

**CAB MOUNTING**

**37-075**
 
|        |                                                       |
|--------|-------------------------------------------------------|
| 37.290 | DAMPENER, OVERHEAD GUARD VIBRATION<br>댐프너             |
| 37.300 | CAB ASSEMBLY<br>캐빈                                    |
| 37.746 | PLUG, DRIVER OVERHEAD GUARD<br>플러그                    |
| 37.942 | PLUG, OVERHEAD GUARD REAR SUPPORT PAD FASTENER<br>플러그 |
| 39.933 | FASTENER, OVERHEAD GUARD<br>패스너                       |
| 39.934 | FASTENER, OVERHEAD GUARD<br>패스너                       |
| 41.621 | BRACKET, AIR CONDITIONER SUPPORT<br>브라켓               |
| 47.278 | COVER, FRONT RH<br>커버                                 |
| 97.208 | FASTENER, AIR CONDITIONER SUPPORT BRACKET<br>패스너      |

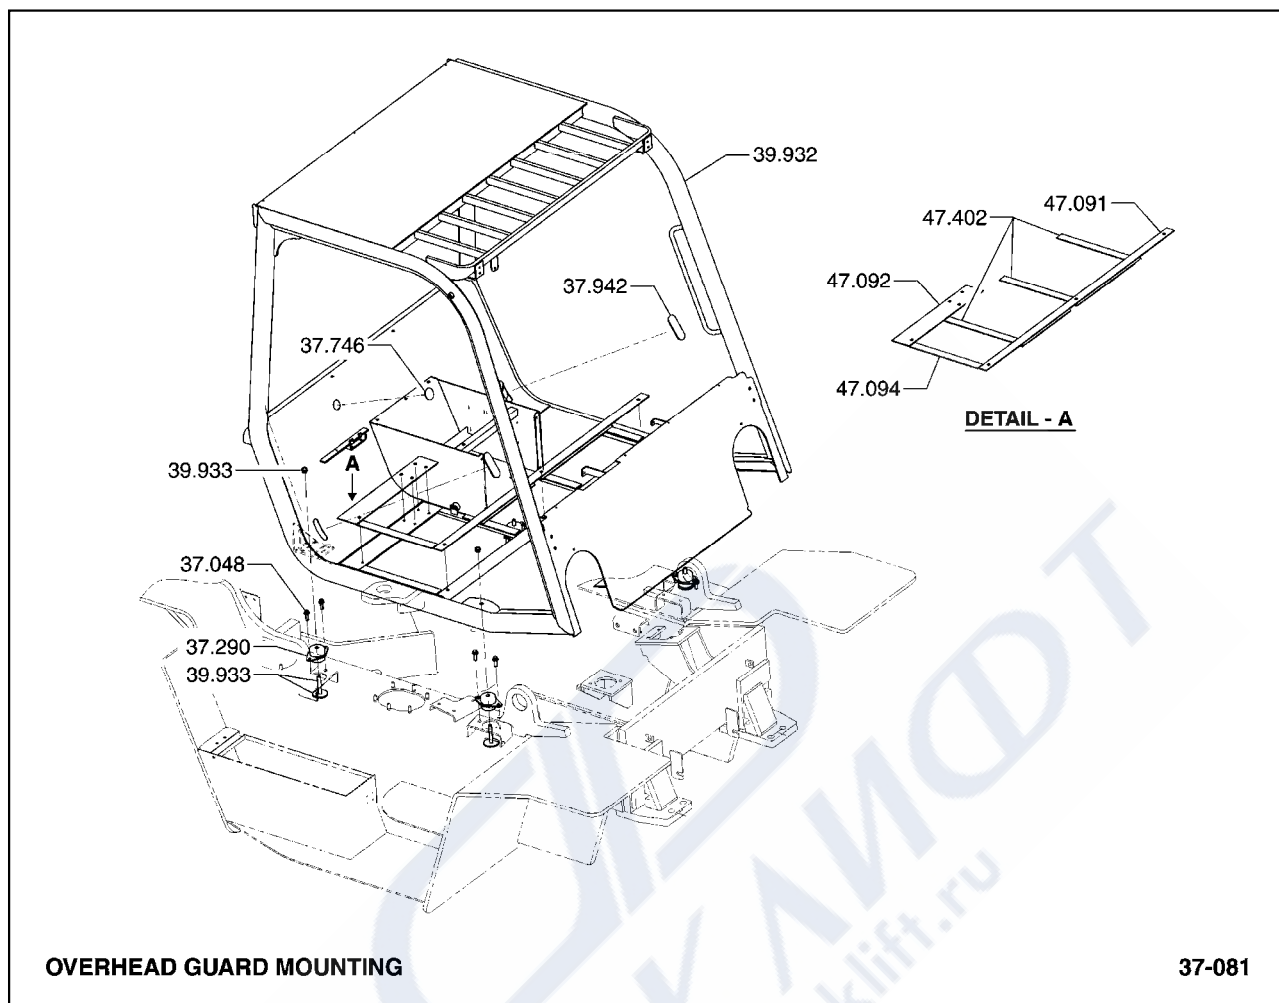


|        |                                                       |
|--------|-------------------------------------------------------|
| 37.048 | FASTENER, OVERHEAD GUARD BUMPER<br>패스너                |
| 37.290 | DAMPENER, OVERHEAD GUARD VIBRATION<br>댐프너             |
| 37.746 | PLUG, DRIVER OVERHEAD GUARD<br>플러그                    |
| 37.942 | PLUG, OVERHEAD GUARD REAR SUPPORT PAD FASTENER<br>플러그 |
| 39.932 | GUARD, OVERHEAD<br>가드                                 |
| 39.933 | FASTENER, OVERHEAD GUARD<br>패스너                       |
| 47.091 | SEAL, DRIVERS CELL, LH FRONT<br>셀                     |
| 47.092 | SEAL, DRIVERS CELL, LH REAR<br>셀                      |
| 47.094 | SEAL, DRIVERS CELL, RH CENTER<br>셀                    |

47.402

SEAL, DRIVERS CELL, LH CENTER

셀

 
ФОРКЛИФТ  
www.forklift.ru

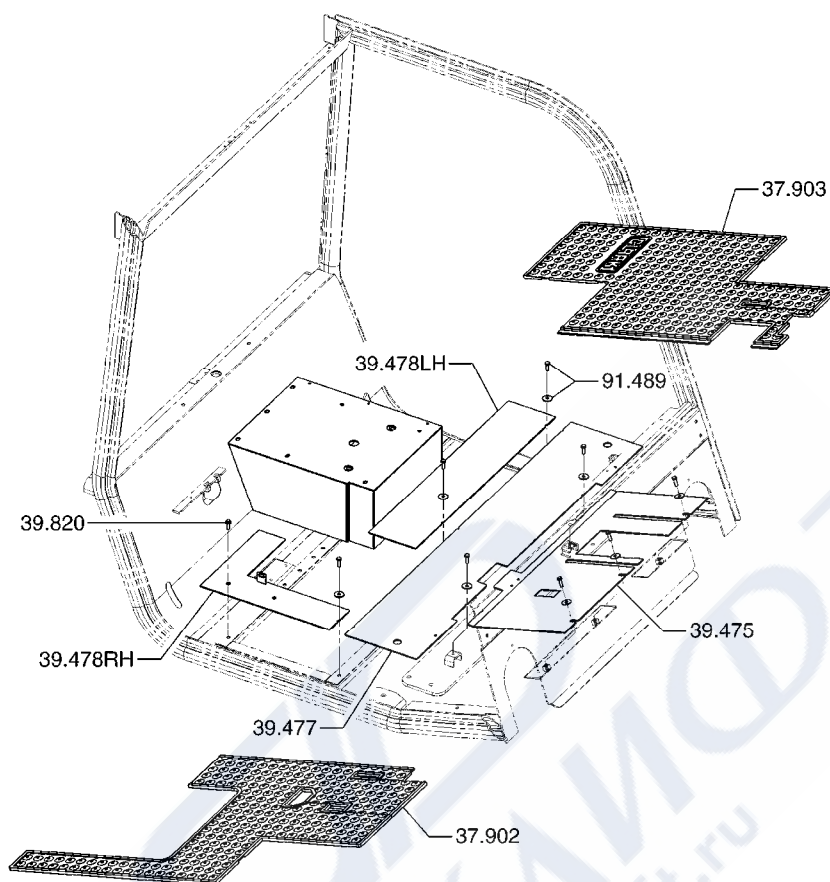

FLOOR PLATE MOUNTING

37-084

|        |                                               |
|--------|-----------------------------------------------|
| 37.902 | MAT, FLOORPLATE<br>매트                         |
| 37.903 | MAT, FLOORPLATE<br>매트                         |
| 39.475 | PLATE, FRONT FLOOR<br>플레이트                    |
| 39.477 | PLATE, CENTER FLOOR<br>플레이트                   |
| 39.478 | PLATE, REAR FLOOR<br>플레이트                     |
| 39.820 | FASTENER, FLOOR PLATE MOUNTING BRACKET<br>패스너 |
| 91.489 | FASTENER, FLOOR PLATE<br>패스너                  |

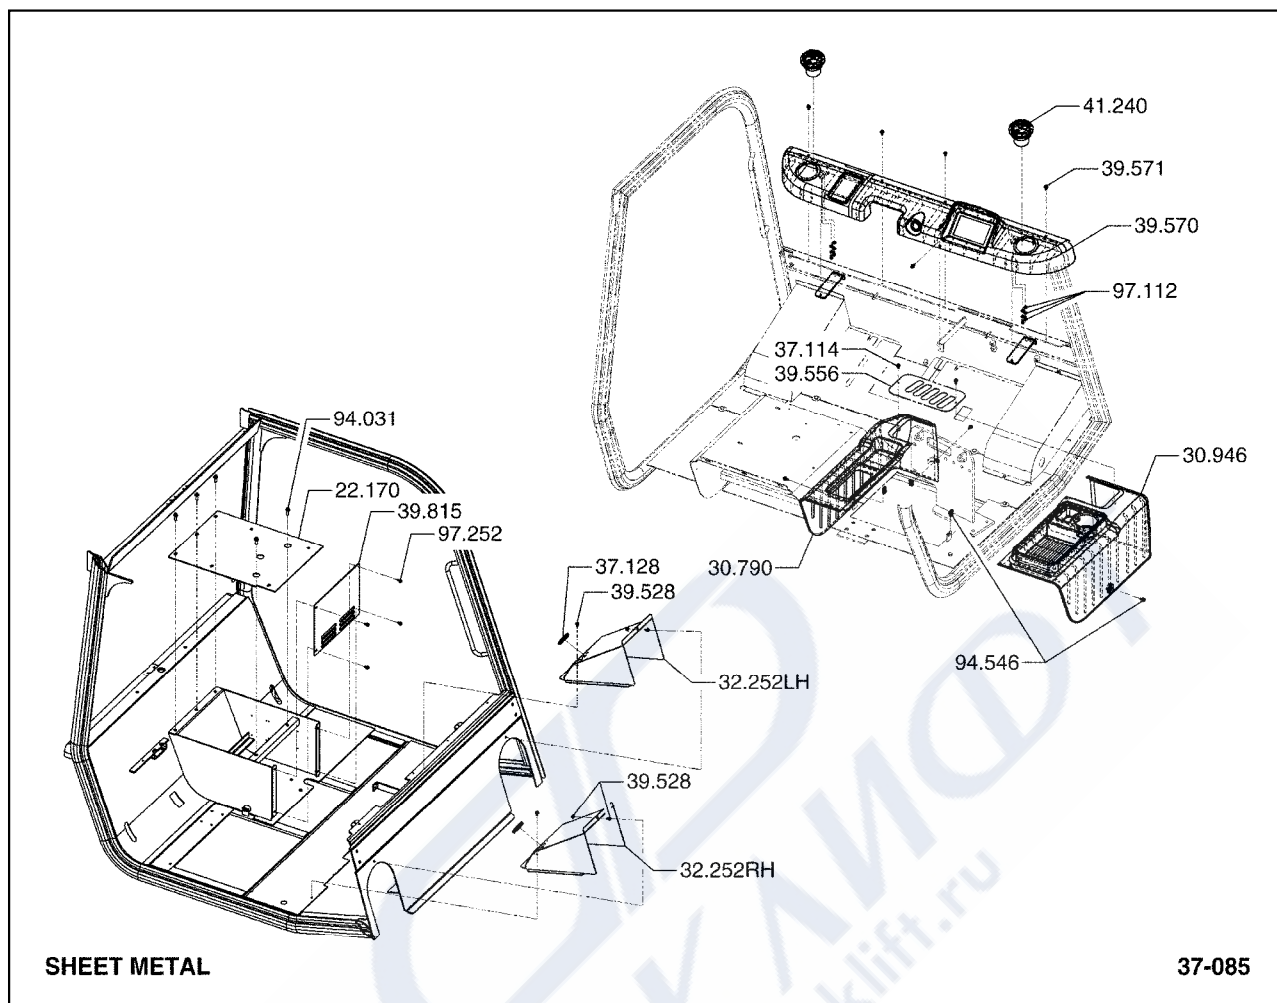 


|        |                                              |
|--------|----------------------------------------------|
| 22.170 | SUPPORT, SEAT MOUNTING PLATE<br>서포트          |
| 30.790 | COVER, VALVE CONTROL LINKAGE SHIELD<br>커버    |
| 30.946 | COVER, VALVE LEVER LOCKOUT<br>커버             |
| 32.252 | COVER, TILT CYLINDER PISTON ROD BOOT<br>커버   |
| 37.114 | FASTENER, VALVE LINKAGE ACCESS COVER<br>패스너  |
| 37.128 | PLUG, TILT CYLINDER COVER ACCESS HOLE<br>플러그 |
| 39.528 | FASTENER, TILT CYLINDER COVER<br>패스너         |
| 39.556 | COVER, VALVE LINKAGE ACCESS<br>커버            |
| 39.570 | COVER ASSEMBLY, DASH<br>커버                   |



---

|        |                                                     |
|--------|-----------------------------------------------------|
| 39.571 | FASTENER, DASH COVER<br>패스너                         |
| 39.815 | PLATE, SEAT SUPPORT MOUNTING<br>플레이트                |
| 41.240 | VENT, HEATER AIR OUTLET (UPPER)<br>벤트               |
| 94.031 | FASTENER, SEAT FRAME BASE<br>패스너                    |
| 94.546 | FASTENER, VALVE CONTROL LINKAGE SHIELD COVER<br>패스너 |
| 97.112 | FASTENER, DASH COVER SUPPORT<br>패스너                 |
| 97.252 | FASTENER, SEAT SUPPORT PLATE<br>패스너                 |



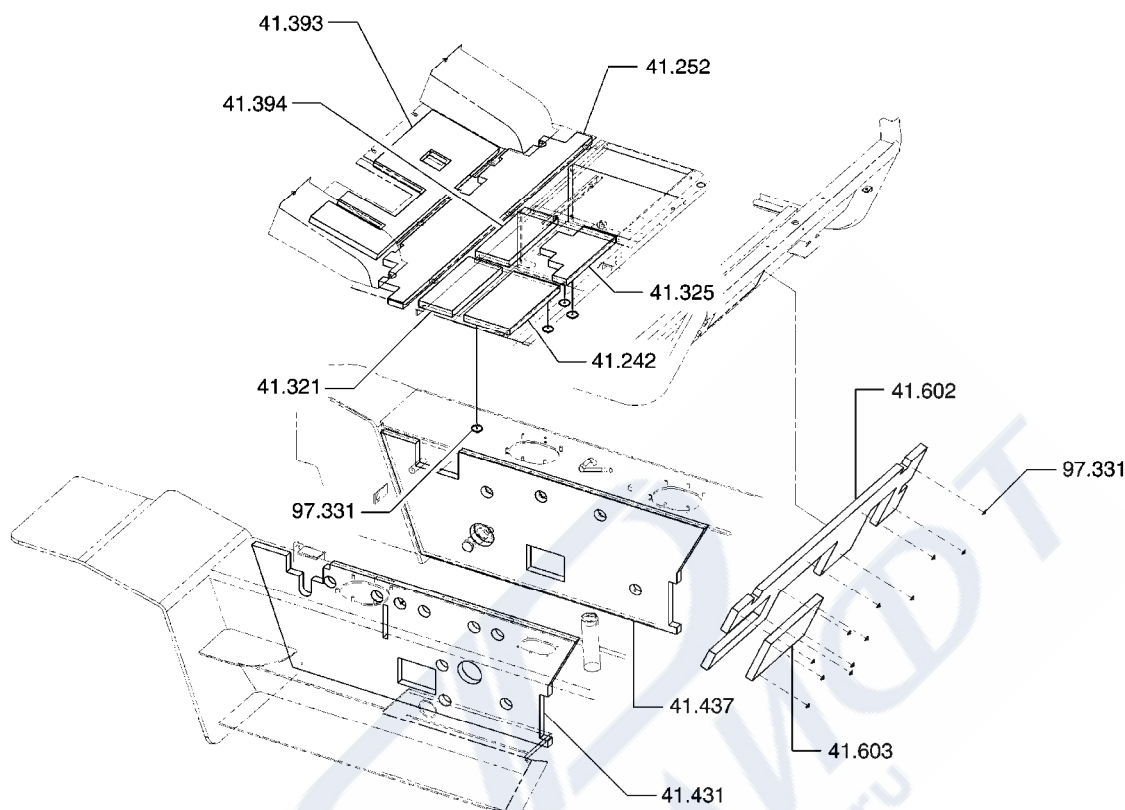 

SPONGE MOUNTING

37-087


|        |                                            |
|--------|--------------------------------------------|
| 41.242 | SOUND SEAL, ENGINE COMPARTMENT<br>사운드씰     |
| 41.252 | SOUND SEAL, FLOOR PLATE FRONT<br>사운드씰      |
| 41.321 | SOUND SEAL, FLOOR PLATE REAR<br>사운드씰       |
| 41.325 | SOUND SEAL, ENGINE COMPARTMENT RH<br>사운드씰  |
| 41.393 | SOUND ABSORBER, FLOOR PLATE - FRONT<br>흡음재 |
| 41.394 | SOUND ABSORBER, FLOOR PLATE - REAR<br>흡음재  |
| 41.431 | SOUND SEAL, FRAME UPPER LH<br>사운드씰         |
| 41.437 | SOUND SEAL, FRAME RH UPPER<br>사운드씰         |
| 41.602 | SOUND SEAL, ENGINE HOOD<br>사운드씰            |

---

|        |                                         |
|--------|-----------------------------------------|
| 41.603 | SOUND SEAL, ENGINE HOOD<br>사운드씰         |
| 97.331 | FASTENER, ENGINE HOOD SOUND SEAL<br>패스너 |



 
ASSEMBLY  
COMPLETE — 37.300

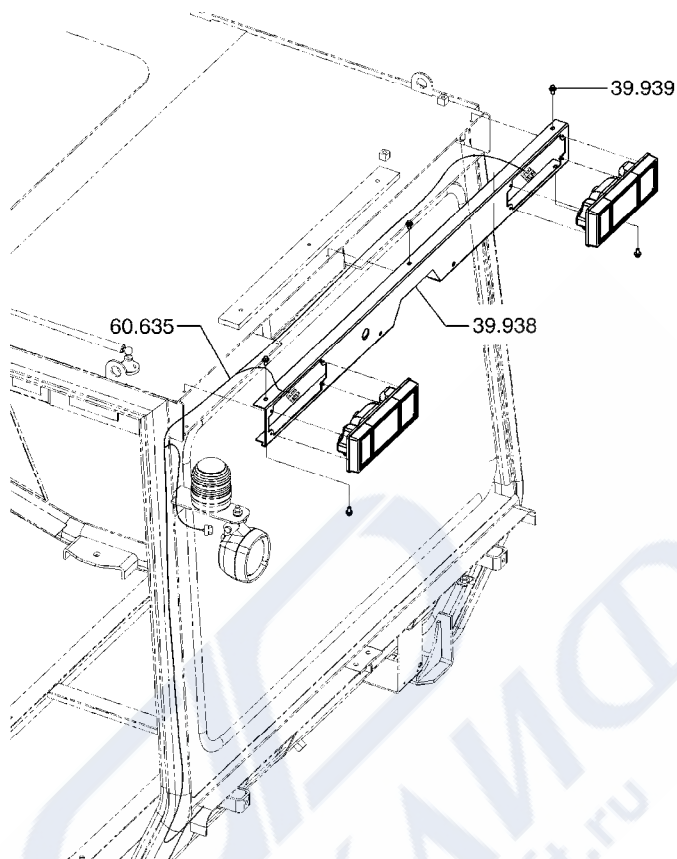


REAR ACCESSORY MOUNTING

37-092

|        |                                                      |
|--------|------------------------------------------------------|
| 37.300 | CAB ASSEMBLY<br>캐빈                                   |
| 39.938 | BRACKET, OVERHEAD GUARD REAR SUPPORT<br>브라켓          |
| 39.939 | FASTENER, OVERHEAD GUARD REAR SUPPORT BRACKET<br>패스너 |
| 60.635 | WIRING HARNESS, LIGHT<br>와이어하네스                      |

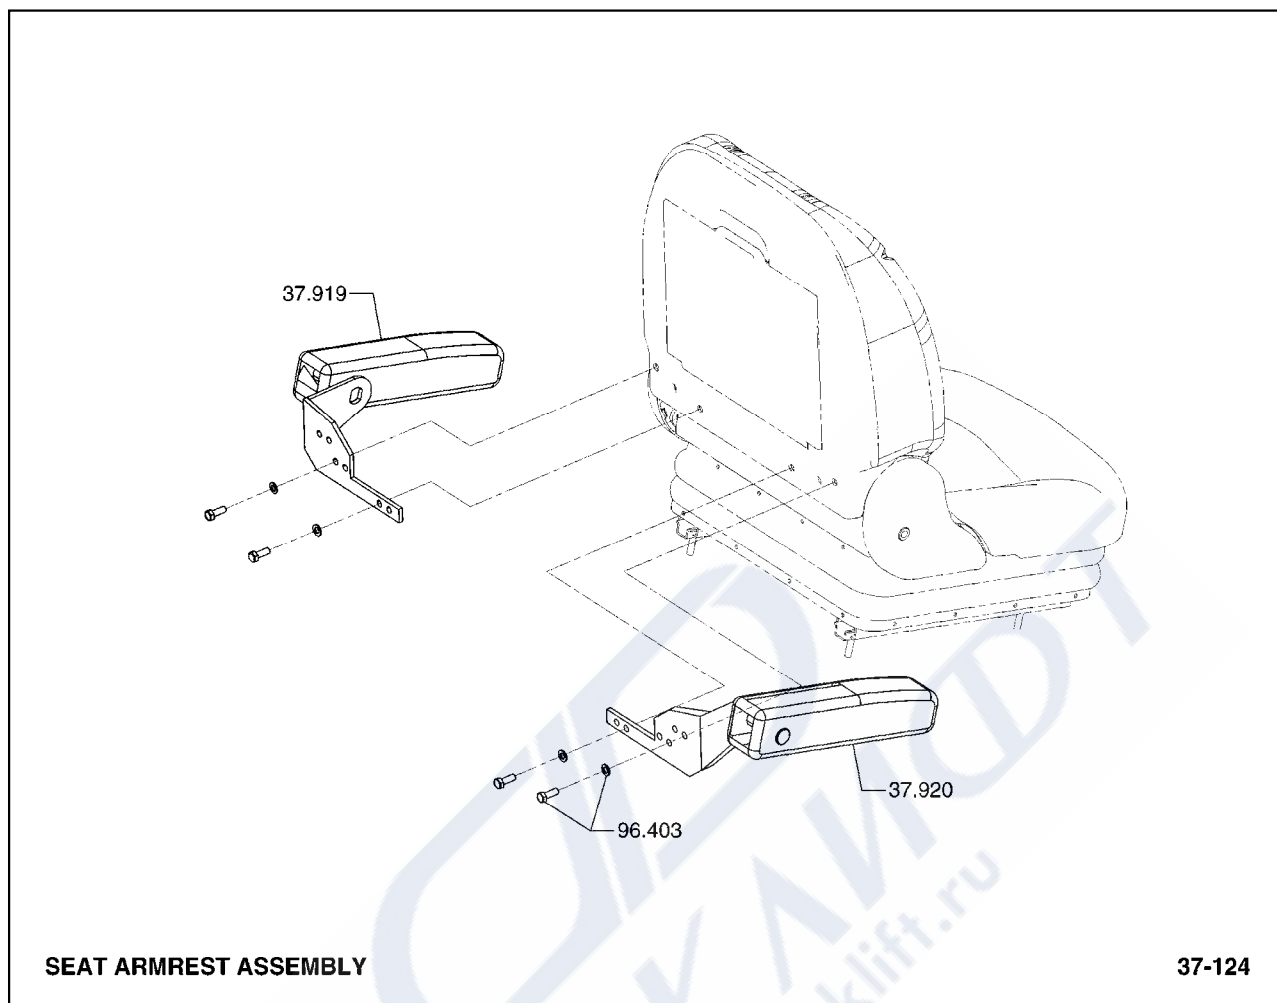 

- |        |                                       |
|--------|---------------------------------------|
| 37.919 | ARMREST LH, SEAT<br>암레스트              |
| 37.920 | ARMREST RH, SEAT<br>암레스트              |
| 96.403 | FASTENER, SEAT ARMREST BRACKET<br>패스너 |

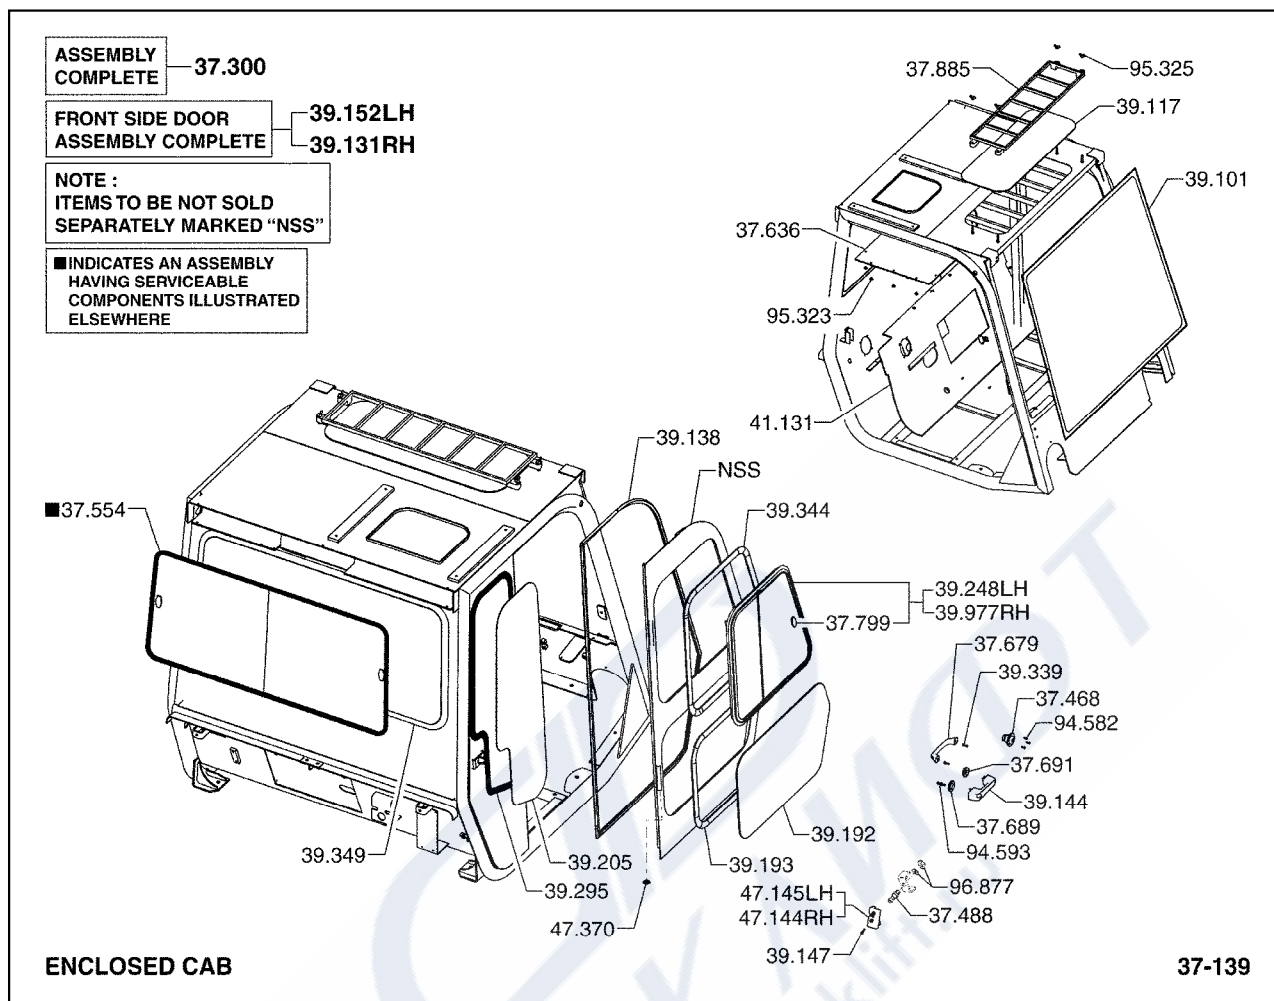 


|        |                                           |        |                                             |
|--------|-------------------------------------------|--------|---------------------------------------------|
| 37.300 | CAB ASSEMBLY<br>캐빈                        | 39.147 | FASTENER, RIGHT HAND DOOR LATCH<br>패스너      |
| 37.468 | CATCH, CAB DOOR LATCH<br>캐치               | 39.152 | DOOR ASSEMBLY, LEFT HAND<br>도어              |
| 37.488 | STRIKER PLATE, DOOR INSIDE LATCH<br>스트라이커 | 39.192 | GLASS, RIGHT HAND DOOR (LOWER)<br>글래스       |
| 37.554 | REAR GLASS COMPLETE, CABIN<br>리어글래스       | 39.193 | WEATHERSEAL, RH DOOR GLASS (LOWER)<br>웨더셀   |
| 37.636 | COVERING, CAB INSIDE ROOF<br>커버링          | 39.205 | GLASS, RH DOOR REAR<br>글래스                  |
| 37.679 | HANDLE, RH DOOR INSIDE<br>핸들              | 39.248 | WINDOW ASSEMBLY, CAB DOOR (LH)<br>윈도우       |
| 37.689 | SEAL, DOOR OUTSIDE HANDLE<br>셀            | 39.295 | WEATHERSEAL, DOOR REAR GLASS<br>웨더셀         |
| 37.691 | SEAL, DOOR OUTSIDE HANDLE<br>셀            | 39.339 | FASTENER, RH DOOR INSIDE HANDLE<br>패스너      |
| 37.799 | LATCH, CAB DOOR WINDOW ASSEMBLY<br>래치     | 39.344 | WEATHERSEAL, RH DOOR WINDOW ASSEMBLY<br>웨더셀 |
| 37.885 | ROOF, ROOF PANEL<br>루프                    | 39.349 | WEATHERSEAL, CAB REAR WINDOW<br>웨더셀         |
| 39.101 | GLASS, WINDSHIELD<br>글래스                  | 39.977 | WINDOW ASSEMBLY, CAB DOOR (RH)<br>윈도우       |
| 39.117 | ROOF SCREEN<br>루프스크린                      | 41.131 | SOUND ABSORBER, LOWER REAR PANEL<br>흡음재     |
| 39.131 | DOOR ASSEMBLY, RIGHT HAND<br>도어           | 47.144 | LATCH, RH DOOR INSIDE<br>래치                 |
| 39.138 | WEATHERSEAL, RIGHT HAND DOOR<br>웨더셀       | 47.145 | LATCH, LH DOOR INSIDE<br>래치                 |
| 39.144 | HANDLE, RH DOOR OUTSIDE<br>핸들             | 47.370 | SPACER, CAB DOOR HINGE<br>스페이서              |

---

|        |                                            |
|--------|--------------------------------------------|
| 94.582 | FASTENER, CAB DOOR LATCH CATCH<br>패스너      |
| 94.593 | FASTENER, OUTSIDE DOOR HANDLE<br>패스너       |
| 95.323 | FASTENER, CAB INSIDE ROOF COVERING<br>패스너  |
| 95.325 | FASTENER, CAB ROOF<br>패스너                  |
| 96.877 | FASTENER, DOOR INSIDE LATCH STRIKER<br>패스너 |



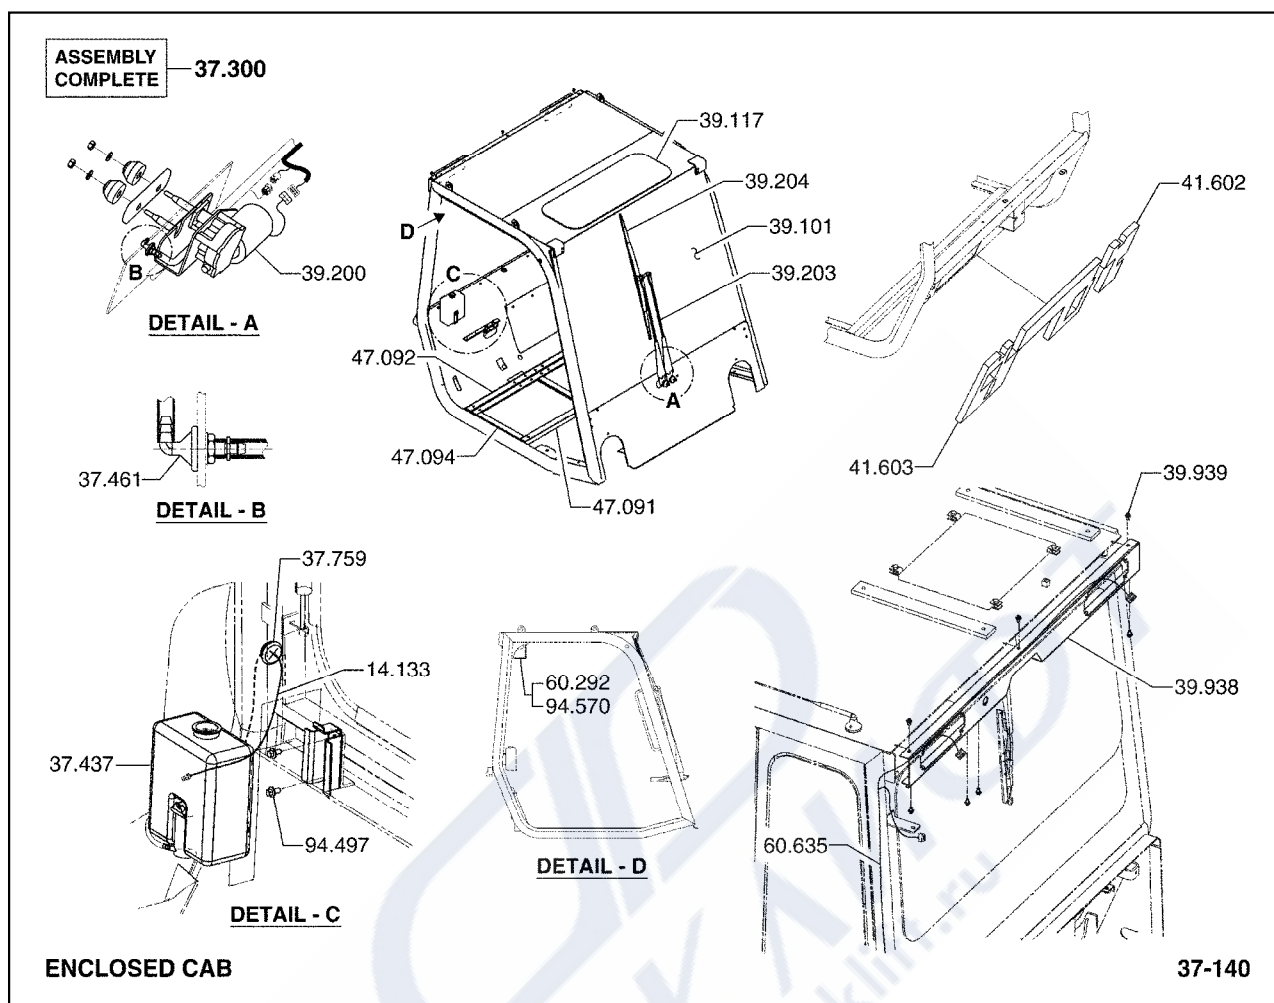 


|        |                                              |
|--------|----------------------------------------------|
| 14.133 | WIRE, WIPER MOTOR<br>와이어                     |
| 37.300 | CAB ASSEMBLY<br>캐빈                           |
| 37.437 | PUMP & TANK, WINDSHIELD WASHER<br>펌프& 탱크     |
| 37.461 | NOZZLE, WINDSHIELD GLASS WASHER<br>노즐        |
| 37.759 | GROMMET, COVER WINDSHIELD WIPER MOTOR<br>그로멧 |
| 39.101 | GLASS, WINDSHIELD<br>글래스                     |
| 39.117 | ROOF SCREEN<br>루프스크린                         |
| 39.200 | MOTOR, WINDSHIELD WIPER<br>모터                |
| 39.203 | ARM, WINDSHIELD WIPER<br>암                   |

---

|        |                                                      |
|--------|------------------------------------------------------|
| 39.204 | BLADE, WINDSHIELD WIPER<br>블레이드                      |
| 39.938 | BRACKET, OVERHEAD GUARD REAR SUPPORT<br>브라켓          |
| 39.939 | FASTENER, OVERHEAD GUARD REAR SUPPORT BRACKET<br>패스너 |
| 41.602 | SOUND SEAL, ENGINE HOOD<br>사운드씰                      |
| 41.603 | SOUND SEAL, ENGINE HOOD<br>사운드씰                      |
| 47.091 | SEAL, DRIVERS CELL, LH FRONT<br>씰                    |
| 47.092 | SEAL, DRIVERS CELL, LH REAR<br>씰                     |
| 47.094 | SEAL, DRIVERS CELL, RH CENTER<br>씰                   |
| 60.292 | COVER, CAB SWITCH PANEL<br>커버                        |
| 60.635 | WIRING HARNESS, LIGHT<br>와이어하네스                      |
| 94.497 | FASTENER, WINDSHIELD WASHER TANK<br>패스너              |
| 94.570 | FASTENER, CAB SWITCH PANEL COVER<br>패스너              |





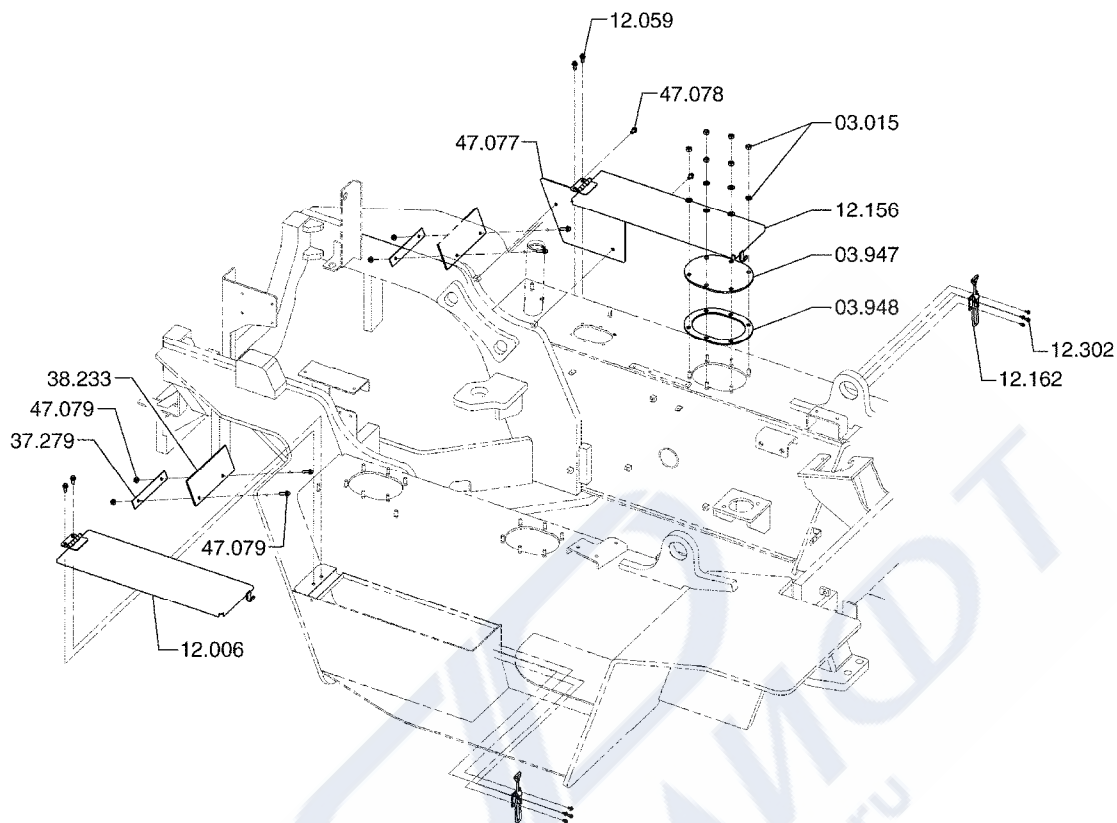 


BATTERY & TOOL COVER MOUNTING

38-268

|        |                                             |
|--------|---------------------------------------------|
| 03.015 | FASTENER, FUEL TANK INSPECTION COVER<br>패스너 |
| 03.947 | COVER, FUEL TANK<br>커버                      |
| 03.948 | GASKET, FUEL TANK COVER<br>가스켓              |
| 12.006 | COVER, BATTERY<br>커버                        |
| 12.059 | FASTENER, BATTERY COVER<br>패스너              |
| 12.156 | COVER, LH BATTERY<br>커버                     |
| 12.162 | CLIP, BATTERY RETAINER<br>클립                |
| 12.302 | FASTENER, BATTERY COVER LATCH<br>패스너        |
| 37.279 | PLATE, FRAME SIDE<br>플레이트                   |

|        |                                |
|--------|--------------------------------|
| 38.233 | RUBBER, FRAME SIDE COVER<br>리버 |
| 47.077 | COVER, FRAME<br>커버             |
| 47.078 | FASTENER, FRAME COVER<br>패스너   |
| 47.079 | FASTENER, FRAME COVER<br>패스너   |





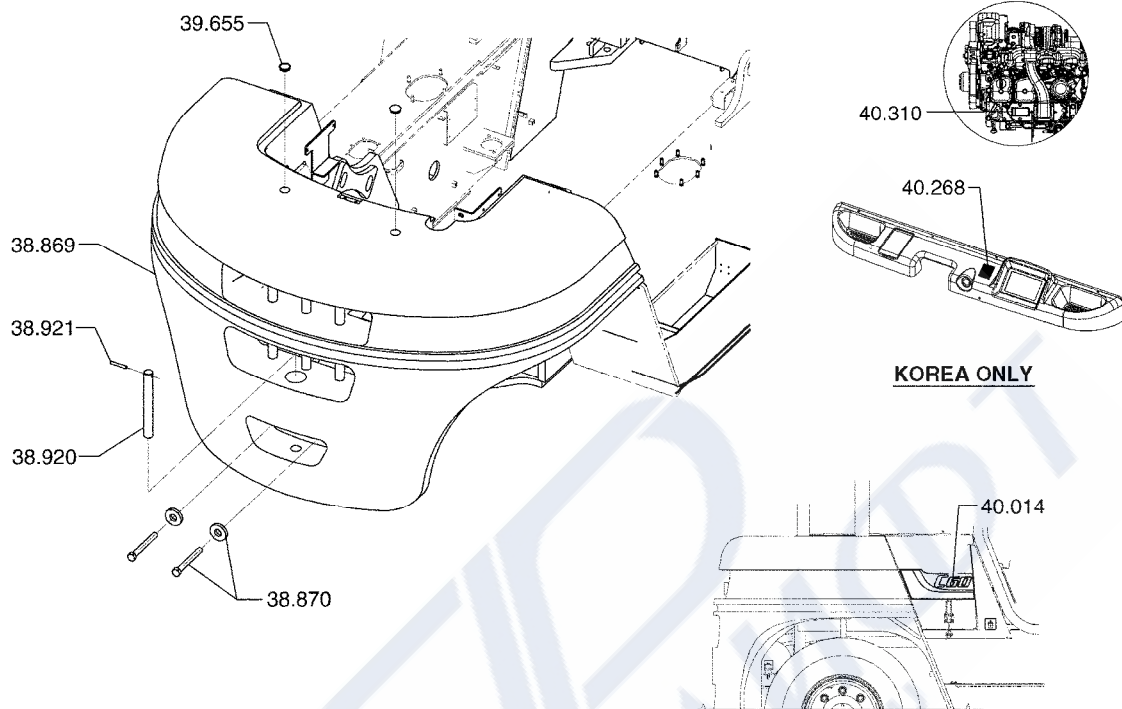 

COUNTERWEIGHT MOUNTING

38-269


|        |                                        |
|--------|----------------------------------------|
| 38.869 | COUNTERWEIGHT<br>카운터웨이트                |
| 38.870 | FASTENER, COUNTERWEIGHT (LOWER)<br>패스너 |
| 38.920 | PIN, COUPLER<br>핀                      |
| 38.921 | PIN, COUPLER PIN CROSS<br>핀            |
| 39.655 | PLUG, FUEL TANK FILLER HOLE<br>플러그     |

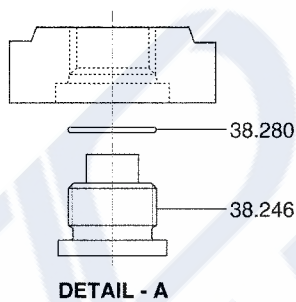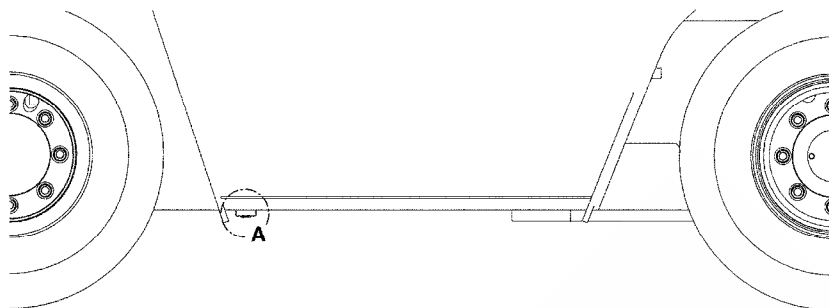  

FRAME TANK BOTTOM PLUG

38-270


- |        |                                       |
|--------|---------------------------------------|
| 38.246 | PLUG, FRAME BOTTOM MAGNETIC<br>플러그    |
| 38.280 | SEAL, FRAME BOTTOM MAGNETIC PLUG<br>씰 |

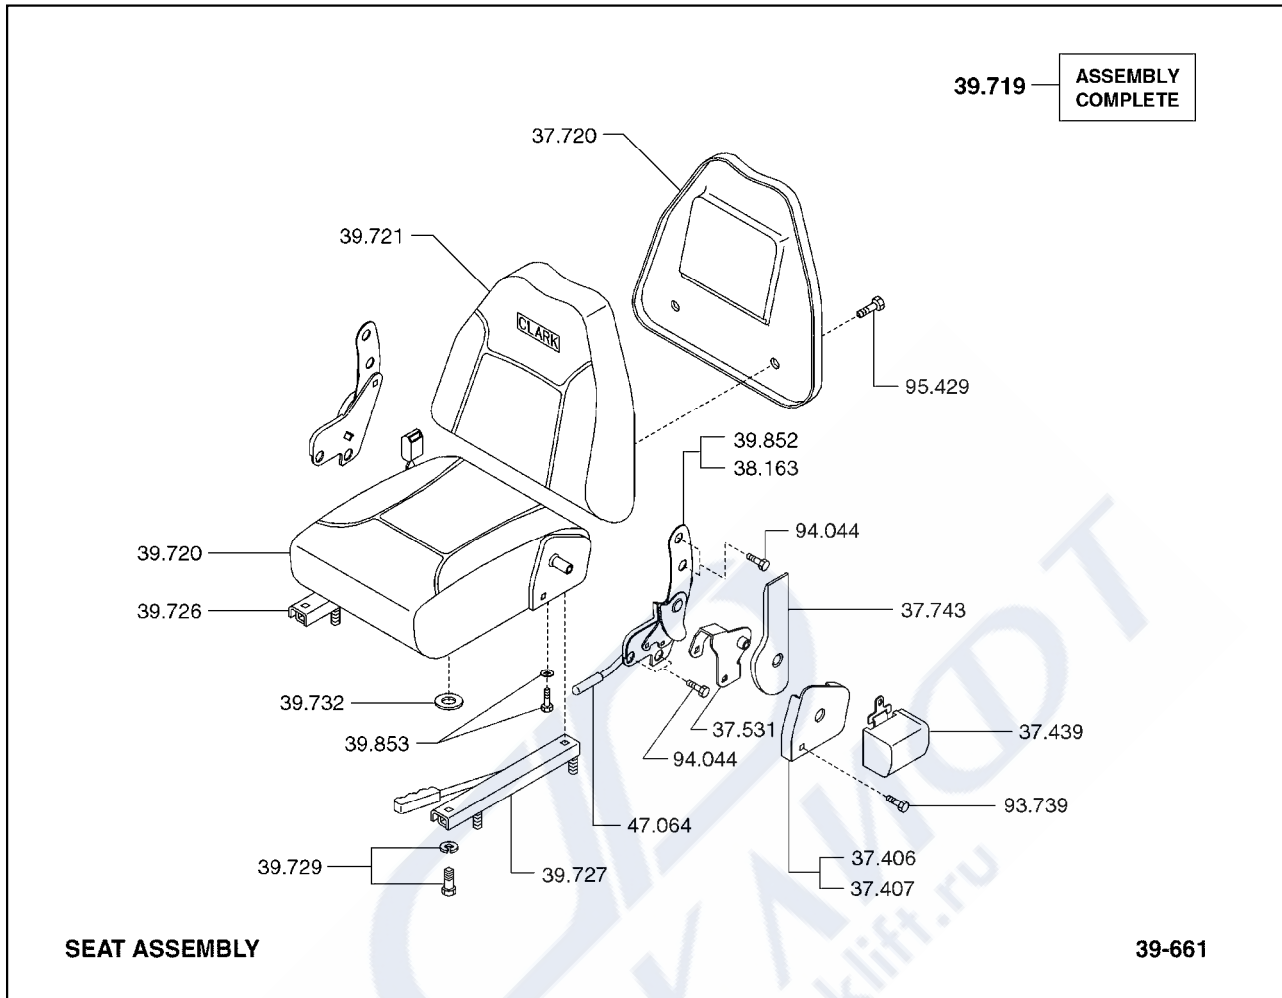 


|        |                                              |
|--------|----------------------------------------------|
| 37.406 | BRACKET, SEAT BACK REST COVER LH<br>브라켓      |
| 37.407 | BRACKET, SEAT BACK REST COVER RH<br>브라켓      |
| 37.439 | SAFETY BELT, SEAT<br>안전벨트                    |
| 37.531 | BRACKET, SEAT SAFETY BELT MOUNTING<br>브라켓    |
| 37.720 | COVER, OPERATOR SEAT LATERAL RESTRAINT<br>커버 |
| 37.743 | COVER, SEAT SUPPORT LATCH<br>커버              |
| 38.163 | BRACKET, SEAT SUPPORT RH<br>브라켓              |
| 39.719 | SEAT ASSEMBLY<br>시트                          |
| 39.720 | CUSHION, SEAT<br>쿠션                          |

---

|        |                                               |
|--------|-----------------------------------------------|
| 39.721 | CUSHION, SEAT BACK REST<br>쿠션                 |
| 39.726 | ADJUSTOR, SEAT<br>어드저스터                       |
| 39.727 | ADJUSTOR, SEAT WITH LATCH<br>어드저스터            |
| 39.729 | FASTENER, ADJUSTOR TO SEAT SUPPORT<br>패스너     |
| 39.732 | SPACER, SEAT FRAME TO ADJUSTOR<br>스페이서        |
| 39.852 | BRACKET, SEAT SUPPORT LH<br>브라켓               |
| 39.853 | FASTENER, SEAT SUPPORT BRACKET<br>패스너         |
| 47.064 | KNOB, SEAT ASSEMBLY WEIGHT ADJUSTER<br>노브     |
| 93.739 | FASTENER, SAFETY BELT ASSEMBLY<br>패스너         |
| 94.044 | FASTENER, SEAT CUSHION MOUNTING PLATE<br>패스너  |
| 95.429 | FASTENER, SEAT LATERAL RESTRAINT COVER<br>패스너 |

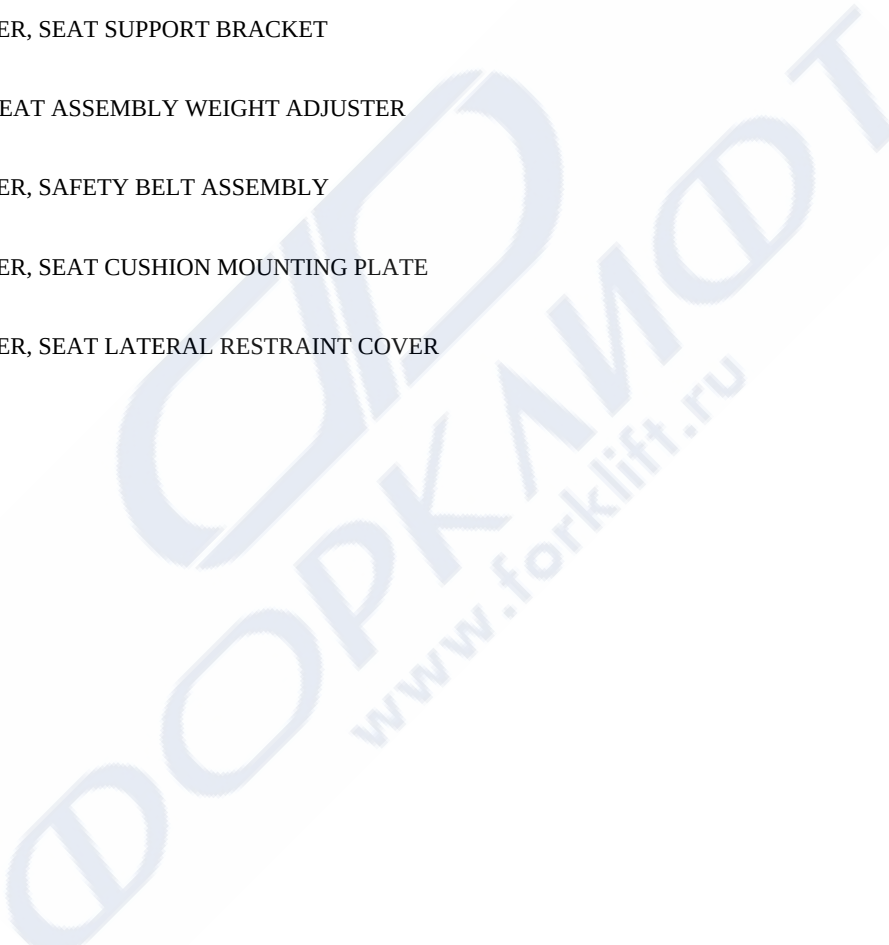 

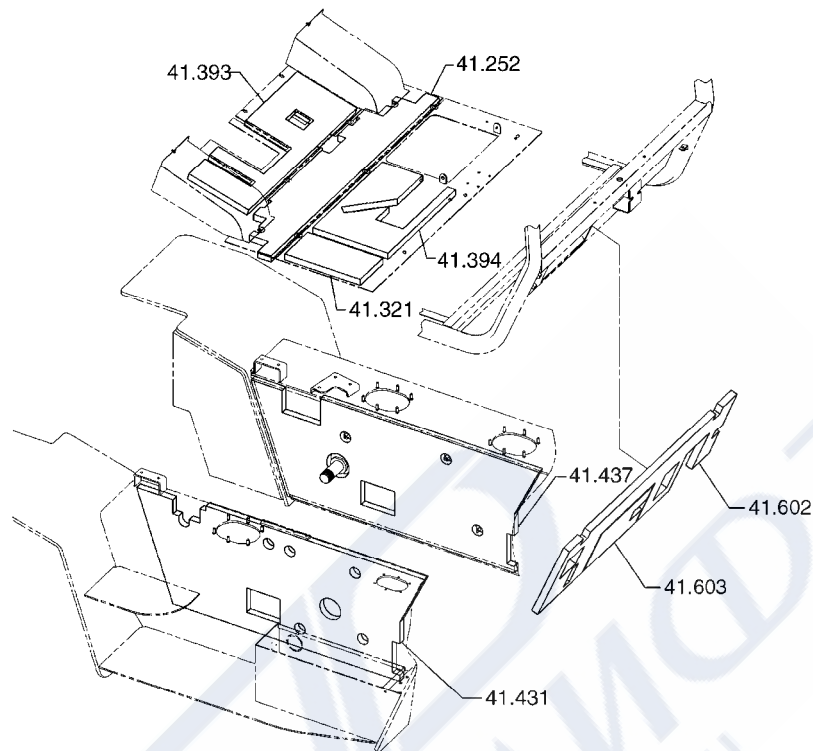 


**SPONGE MOUNTING**

**39-797**

- |        |                                            |
|--------|--------------------------------------------|
| 41.252 | SOUND SEAL, FLOOR PLATE FRONT<br>사운드씰      |
| 41.321 | SOUND SEAL, FLOOR PLATE REAR<br>사운드씰       |
| 41.393 | SOUND ABSORBER, FLOOR PLATE - FRONT<br>흡음재 |
| 41.394 | SOUND ABSORBER, FLOOR PLATE - REAR<br>흡음재  |
| 41.431 | SOUND SEAL, FRAME UPPER LH<br>사운드씰         |
| 41.437 | SOUND SEAL, FRAME RH UPPER<br>사운드씰         |
| 41.602 | SOUND SEAL, ENGINE HOOD<br>사운드씰            |
| 41.603 | SOUND SEAL, ENGINE HOOD<br>사운드씰            |

 ■ INDICATES AN ASSEMBLY  
HAVING SERVICEABLE  
COMPONENTS ILLUSTRATED  
ELSEWHERE

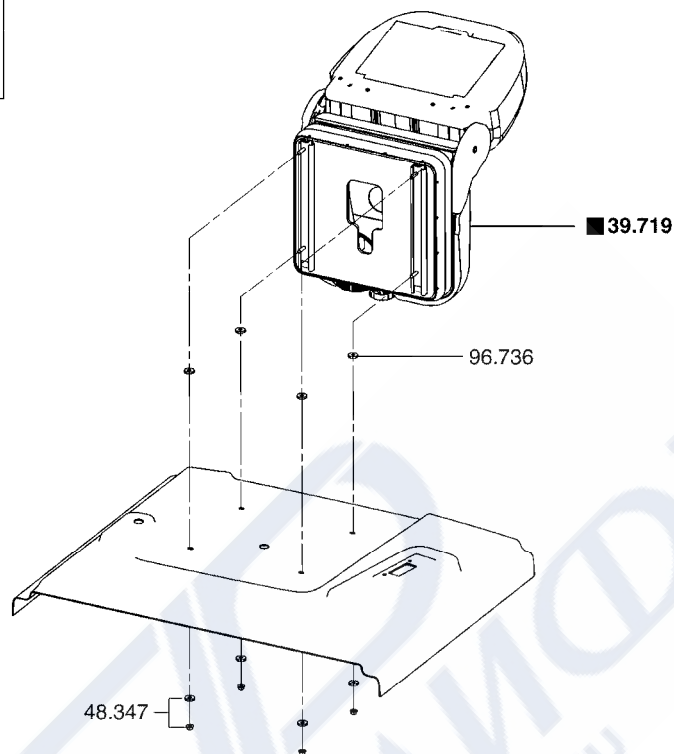


SEAT MOUNTING

39-829

|        |                                      |
|--------|--------------------------------------|
| 39.719 | SEAT ASSEMBLY<br>시트                  |
| 48.347 | FASTENER, SEAT ASSEMBLY<br>패스너       |
| 96.736 | WASHER, SEAT ASSEMBLY FASTENER<br>와셔 |




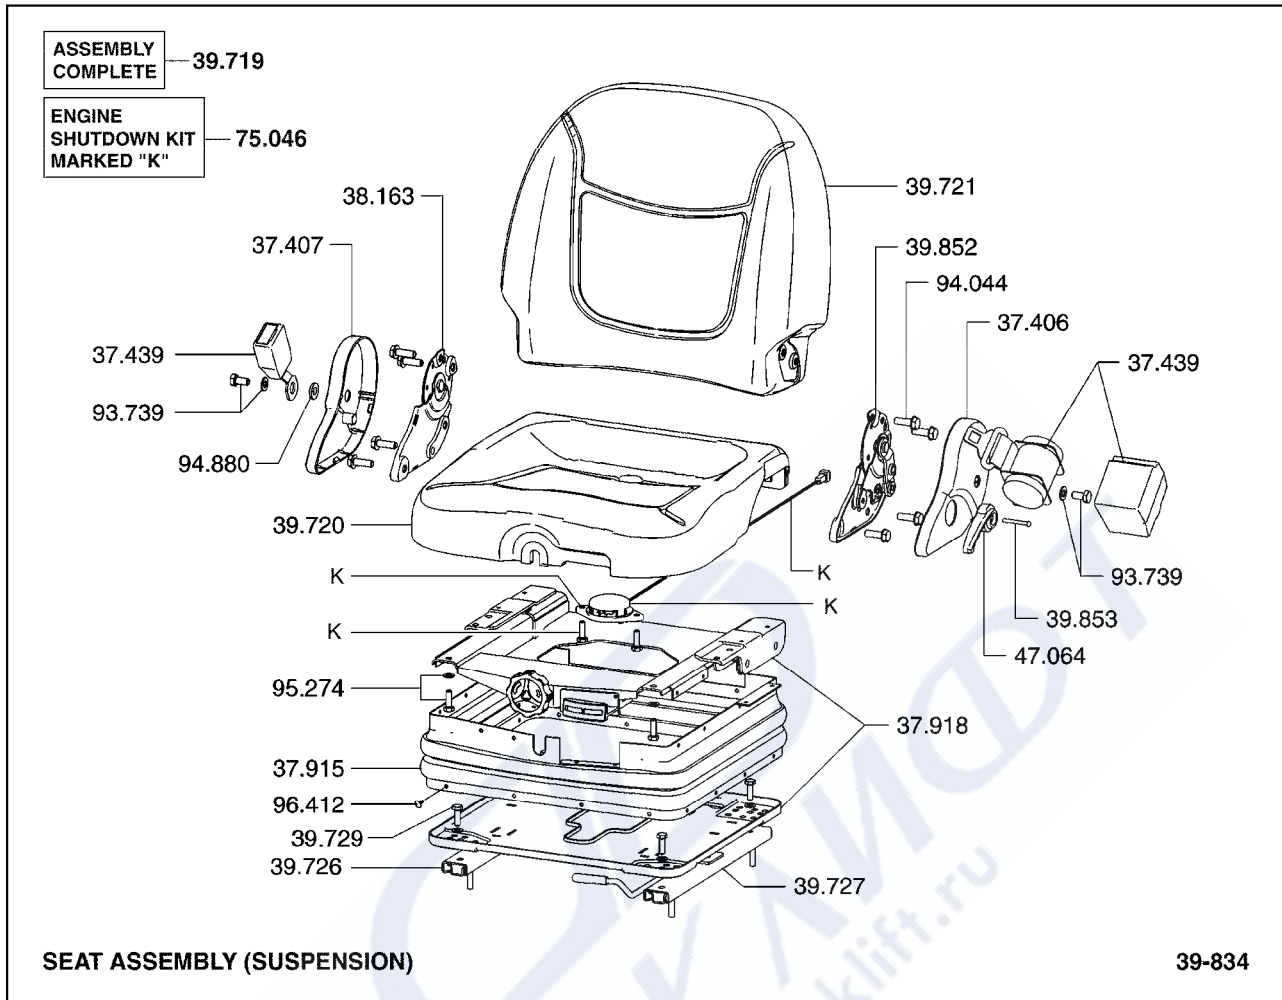 




- |        |                                             |
|--------|---------------------------------------------|
| 37.406 | BRACKET, SEAT BACK REST COVER LH<br>브라켓     |
| 37.407 | BRACKET, SEAT BACK REST COVER RH<br>브라켓     |
| 37.439 | SAFETY BELT, SEAT<br>안전벨트                   |
| 37.915 | SUSPENSION COVER, SEAT SUSPENSION<br>서스펜션커버 |
| 37.918 | SUSPENSION ASSEMBLY, SEAT<br>서스펜션           |
| 38.163 | BRACKET, SEAT SUPPORT RH<br>브라켓             |
| 39.719 | SEAT ASSEMBLY<br>시트                         |
| 39.720 | CUSHION, SEAT<br>쿠션                         |
| 39.721 | CUSHION, SEAT BACK REST<br>쿠션               |

---

|        |                                                  |
|--------|--------------------------------------------------|
| 39.726 | ADJUSTOR, SEAT<br>어드저스터                          |
| 39.727 | ADJUSTOR, SEAT WITH LATCH<br>어드저스터               |
| 39.729 | FASTENER, ADJUSTOR TO SEAT SUPPORT<br>패스너        |
| 39.852 | BRACKET, SEAT SUPPORT LH<br>브라켓                  |
| 39.853 | FASTENER, SEAT SUPPORT BRACKET<br>패스너            |
| 47.064 | KNOB, SEAT ASSEMBLY WEIGHT ADJUSTER<br>노브        |
| 75.046 | KIT, SEAT ACTUATED ENGINE SHUTDOWN<br>키트         |
| 93.739 | FASTENER, SAFETY BELT ASSEMBLY<br>패스너            |
| 94.044 | FASTENER, SEAT CUSHION MOUNTING PLATE<br>패스너     |
| 94.880 | FASTENER, SEAT SUPPORT CATCH BRACKET<br>패스너      |
| 95.274 | FASTENER, SEAT CUSHION SUSPENSION SUPPORT<br>패스너 |
| 96.412 | FASTENER, SEAT SUSPENSION BACK SIDE COVER<br>패스너 |

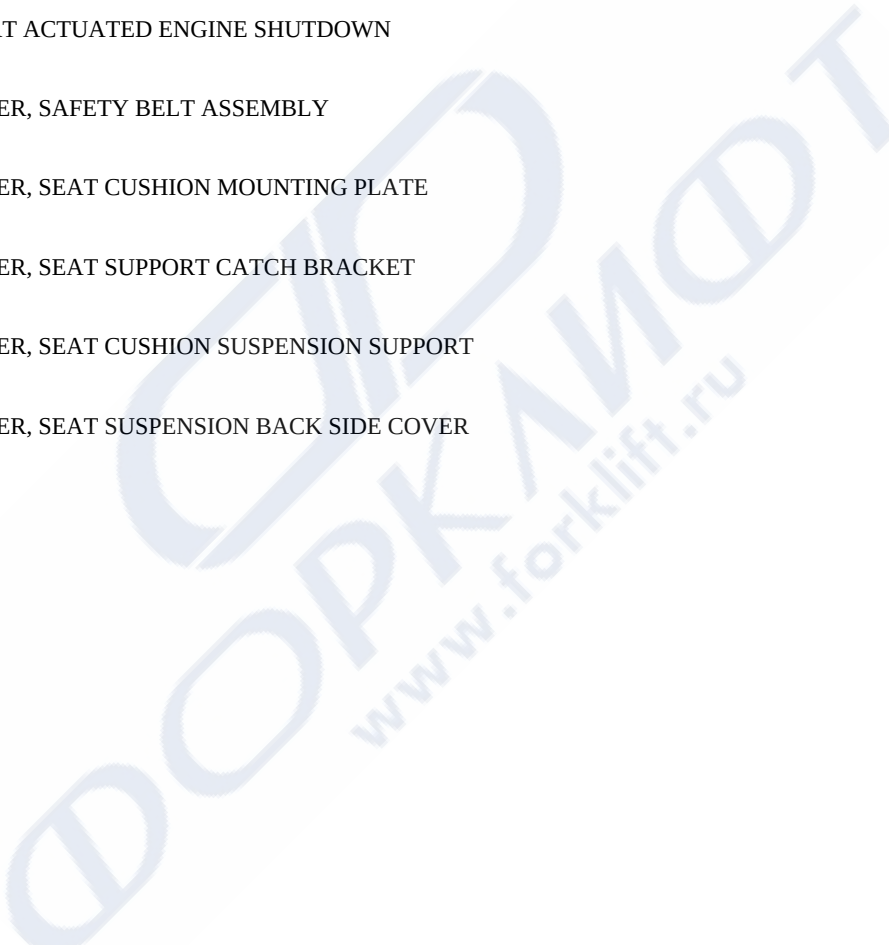 

   NOTE :  
ITEMS TO BE NOT SOLD  
SEPARATELY MARKED "NSS"

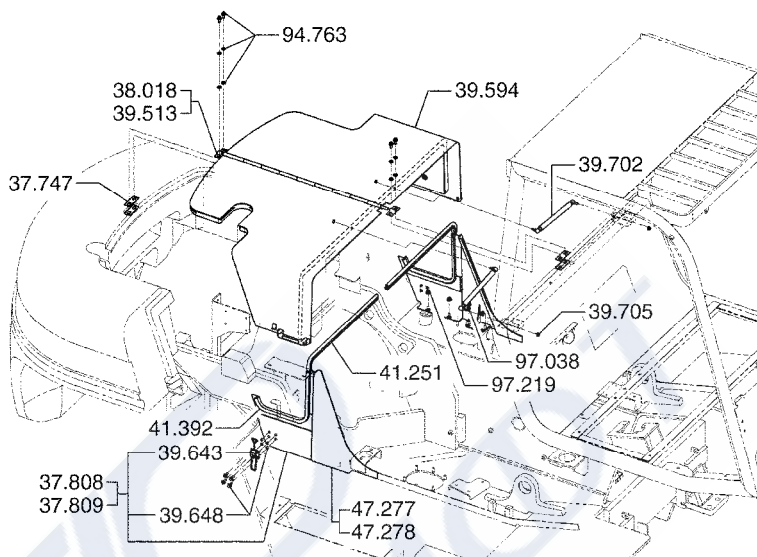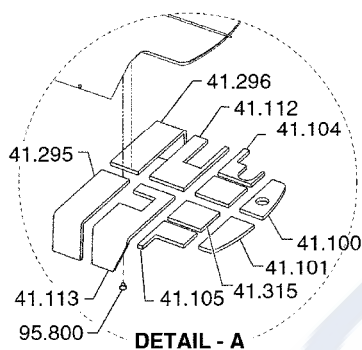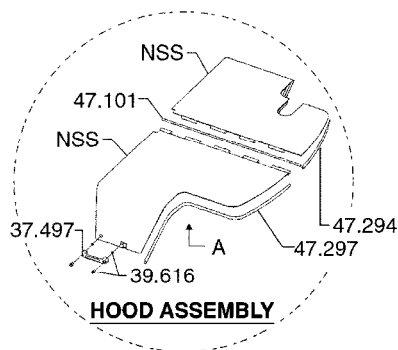


**HOOD MOUNTING**

**39-847**

|        |                                       |        |                                            |
|--------|---------------------------------------|--------|--------------------------------------------|
| 37.497 | HANDLE, TOP HOOD LATCH<br>핸들          | 41.105 | SOUND SEAL, LH SIDE HOOD<br>사운드씰           |
| 37.747 | SHIM, SIDE HOOD PIVOT BRACKET<br>심    | 41.112 | SOUND SEAL, RH SIDE HOOD FRONT<br>사운드씰     |
| 37.808 | COVER, REAR RH<br>커버                  | 41.113 | SOUND SEAL, LH SIDE HOOD FRONT<br>사운드씰     |
| 37.809 | COVER, REAR LH<br>커버                  | 41.251 | SOUND SEAL, TOP HOOD<br>사운드씰               |
| 38.018 | BRACKET, HOOD SUPPORT<br>브라켓          | 41.295 | SOUND ABSORBER, CAB SEAT HOOD LOWER<br>흡음재 |
| 39.513 | SPACER, HOOD REAR SUPPORT<br>스페이서     | 41.296 | SOUND ABSORBER, CAB SEAT HOOD LOWER<br>흡음재 |
| 39.594 | HOOD, TOP<br>후드                       | 41.315 | SOUND SEAL, TOP HOOD REAR<br>사운드씰          |
| 39.616 | FASTENER, TOP HOOD LATCH<br>패스너       | 41.392 | SOUND SEAL, TOP HOOD<br>사운드씰               |
| 39.643 | CATCH, TOP HOOD LATCH<br>캐치           | 47.101 | PIN, TOP HOOD CATCH TO BRACKET<br>핀        |
| 39.648 | FASTENER, TOP HOOD LATCH CATCH<br>패스너 | 47.277 | COVER, FRONT LH<br>커버                      |
| 39.702 | PROP, HOOD<br>지지대                     | 47.278 | COVER, FRONT RH<br>커버                      |
| 39.705 | FASTENER, HOOD PROP<br>패스너            | 47.294 | WEATHERSTRIP, REAR HOOD<br>웨더스트립           |
| 41.100 | SOUND SEAL, TOP HOOD RH<br>사운드씰       | 47.297 | WEATHERSTRIP, REAR HOOD<br>웨더스트립           |
| 41.101 | SOUND SEAL, TOP HOOD LH<br>사운드씰       | 94.763 | FASTENER, HOOD SUPPORT<br>패스너              |
| 41.104 | SOUND SEAL, RH SIDE HOOD<br>사운드씰      | 95.800 | FASTENER, SOUND SEAL<br>패스너                |
 
|        |                                   |
|--------|-----------------------------------|
| 97.038 | FASTENER, FRONT COVER<br>패스너      |
| 97.219 | FASTENER, REAR COVER LATCH<br>패스너 |




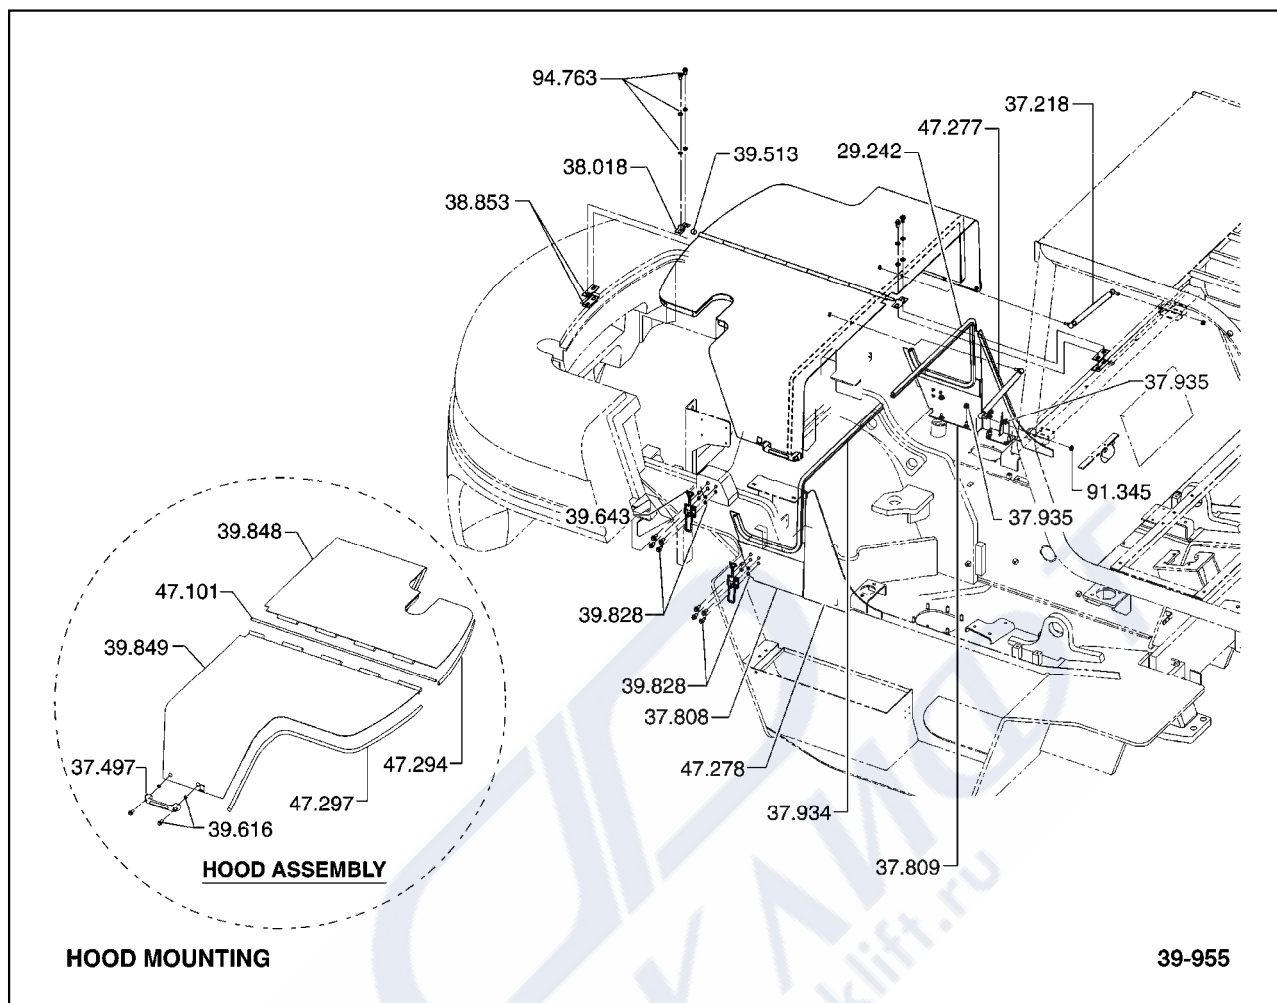


|        |                                    |
|--------|------------------------------------|
| 29.242 | SEAL, COVER FASTENER<br>씰          |
| 37.218 | SHOCK ABSORBER, TOW BAR<br>쇼크업쇼버   |
| 37.497 | HANDLE, TOP HOOD LATCH<br>핸들       |
| 37.808 | COVER, REAR RH<br>커버               |
| 37.809 | COVER, REAR LH<br>커버               |
| 37.934 | SEAL, HOOD ACCESS COVER<br>씰       |
| 37.935 | FASTENER, HOOD ACCESS COVER<br>패스너 |
| 38.018 | BRACKET, HOOD SUPPORT<br>브라켓       |
| 38.853 | SHIM, COUNTERWEIGHT<br>심           |

---

|        |                                     |
|--------|-------------------------------------|
| 39.513 | SPACER, HOOD REAR SUPPORT<br>스페이서   |
| 39.616 | FASTENER, TOP HOOD LATCH<br>패스너     |
| 39.643 | CATCH, TOP HOOD LATCH<br>캐치         |
| 39.828 | FASTENER, REAR HOOD PLATE<br>패스너    |
| 39.848 | HOOD, REAR LH SIDE<br>후드            |
| 39.849 | HOOD, REAR RH SIDE<br>후드            |
| 47.101 | PIN, TOP HOOD CATCH TO BRACKET<br>핀 |
| 47.277 | COVER, FRONT LH<br>커버               |
| 47.278 | COVER, FRONT RH<br>커버               |
| 47.294 | WEATHERSTRIP, REAR HOOD<br>웨더스트립    |
| 47.297 | WEATHERSTRIP, REAR HOOD<br>웨더스트립    |
| 91.345 | NUT, HOOD PROP FASTENER<br>너트       |
| 94.763 | FASTENER, HOOD SUPPORT<br>패스너       |

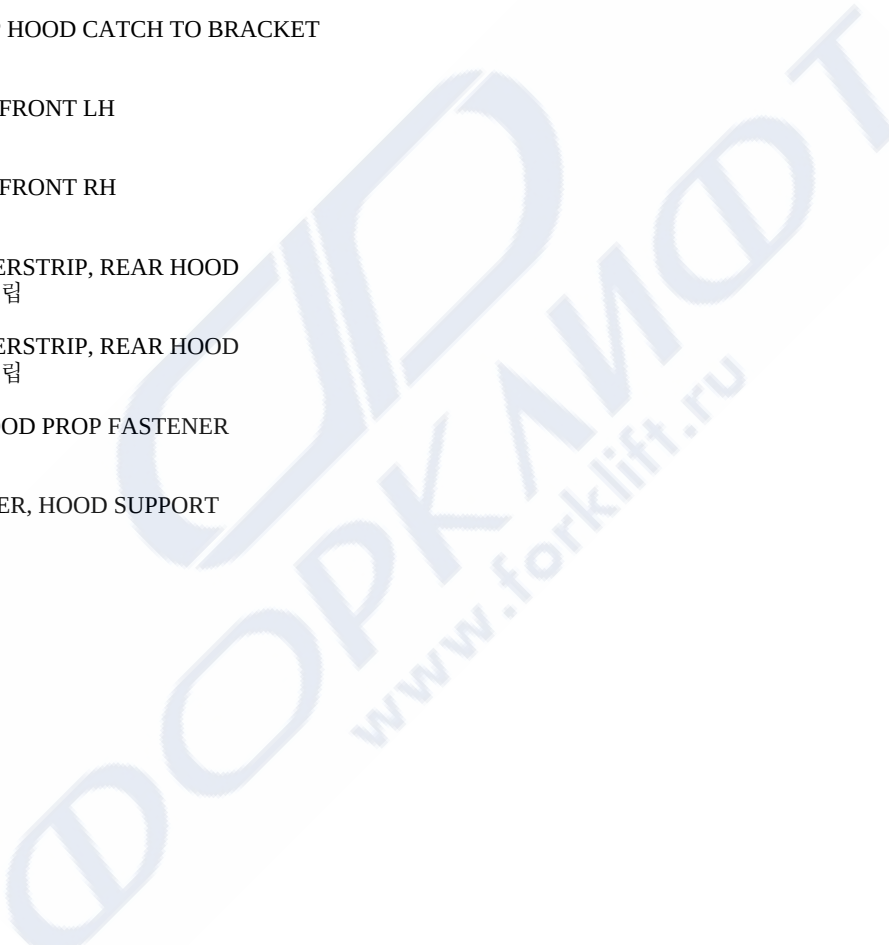 


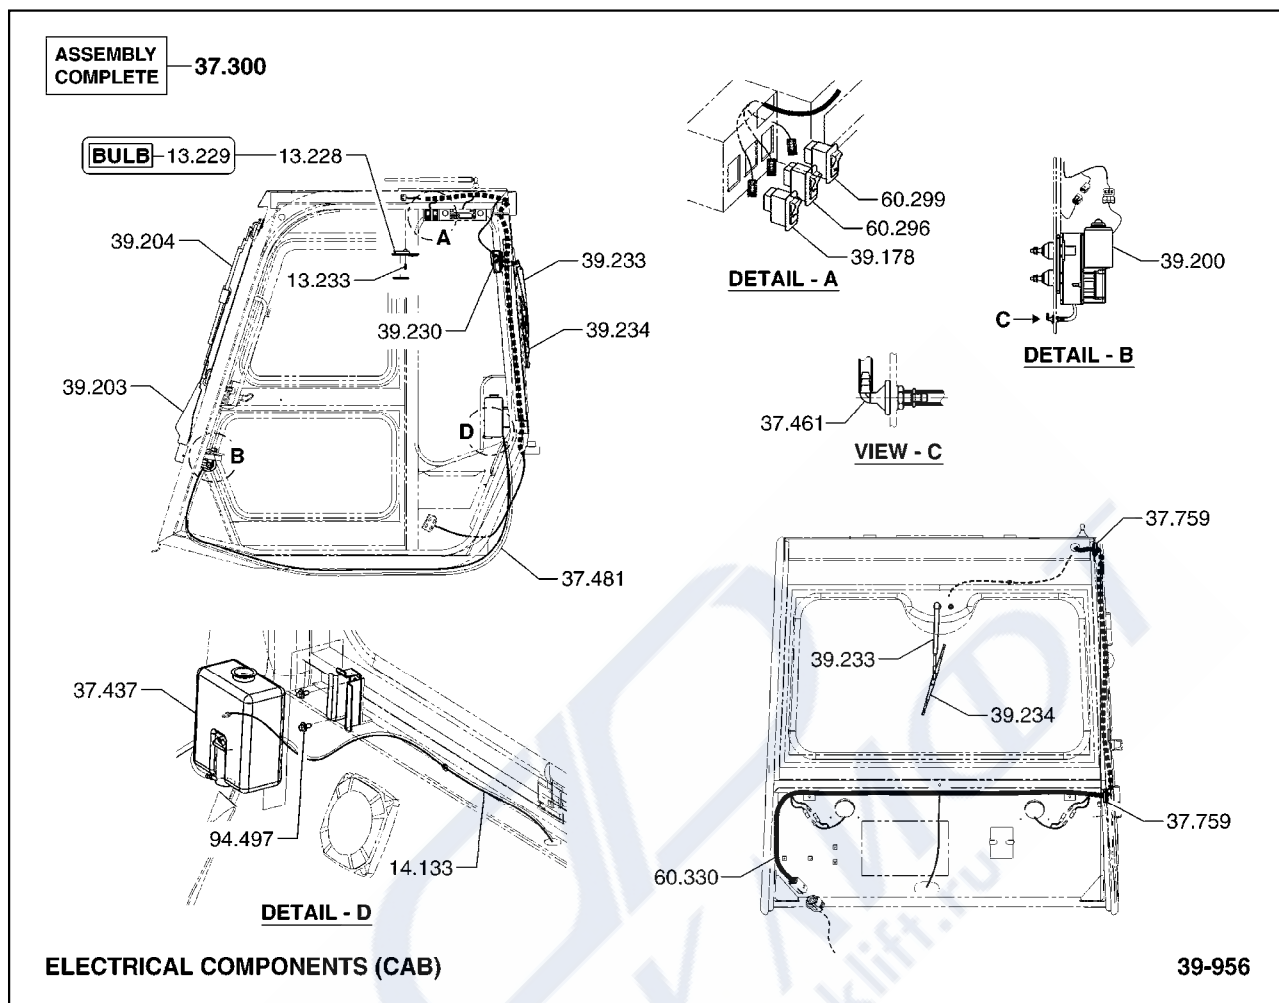 


|        |                                              |
|--------|----------------------------------------------|
| 13.228 | LAMP ASSEMBLY, DOME<br>램프                    |
| 13.229 | BULB, DOME LAMP<br>전구                        |
| 13.233 | FASTENER, DOME LAMP<br>패스너                   |
| 14.133 | WIRE, WIPER MOTOR<br>와이어                     |
| 37.300 | CAB ASSEMBLY<br>캐빈                           |
| 37.437 | PUMP & TANK, WINDSHIELD WASHER<br>펌프& 탱크     |
| 37.461 | NOZZLE, WINDSHIELD GLASS WASHER<br>노즐        |
| 37.481 | LINE, WINDOW GLASS WASHER<br>라인              |
| 37.759 | GROMMET, COVER WINDSHIELD WIPER MOTOR<br>그로멧 |

---

|        |                                         |
|--------|-----------------------------------------|
| 39.178 | SWITCH, WINDSHIELD WIPER<br>스위치         |
| 39.200 | MOTOR, WINDSHIELD WIPER<br>모터           |
| 39.203 | ARM, WINDSHIELD WIPER<br>암              |
| 39.204 | BLADE, WINDSHIELD WIPER<br>블레이드         |
| 39.230 | MOTOR, REAR WINDOW WIPER<br>모터          |
| 39.233 | ARM, REAR WINDOW WIPER<br>암             |
| 39.234 | BLADE, REAR WINDOW WIPER<br>블레이드        |
| 60.296 | SWITCH, WINDSHIELD WIPER (REAR)<br>스위치  |
| 60.299 | SWITCH, HEATER ON/OFF<br>스위치            |
| 60.330 | WIRING HARNESS, CAB<br>와이어하네스           |
| 94.497 | FASTENER, WINDSHIELD WASHER TANK<br>패스너 |

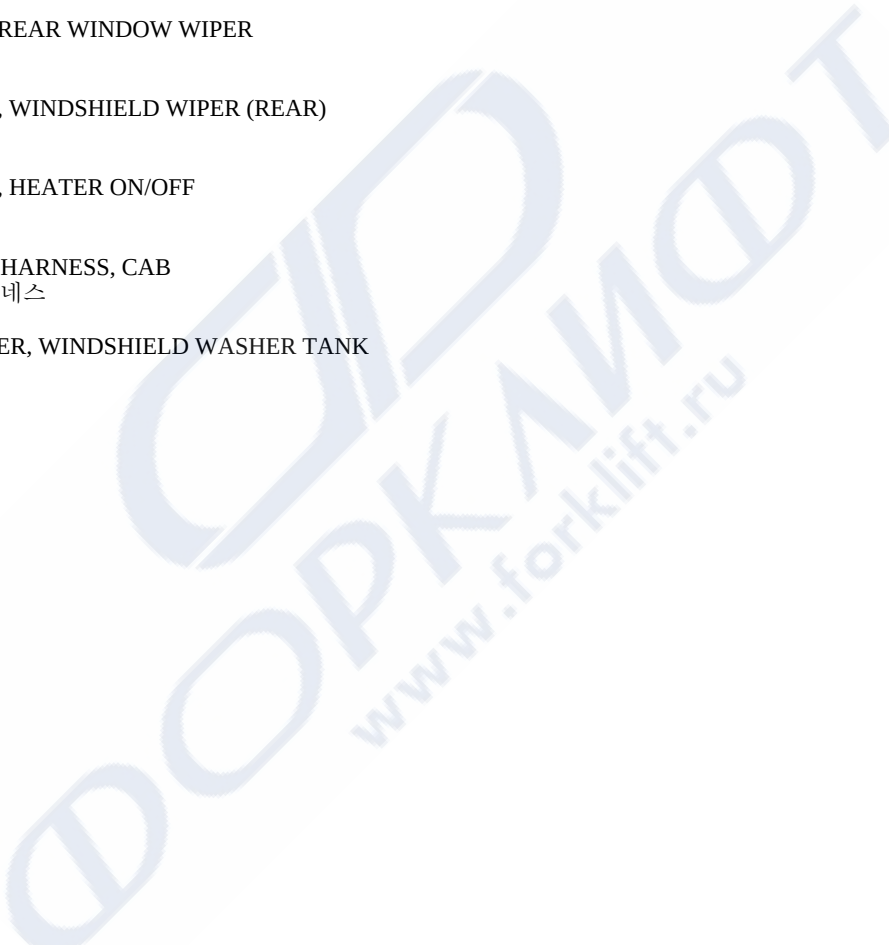 



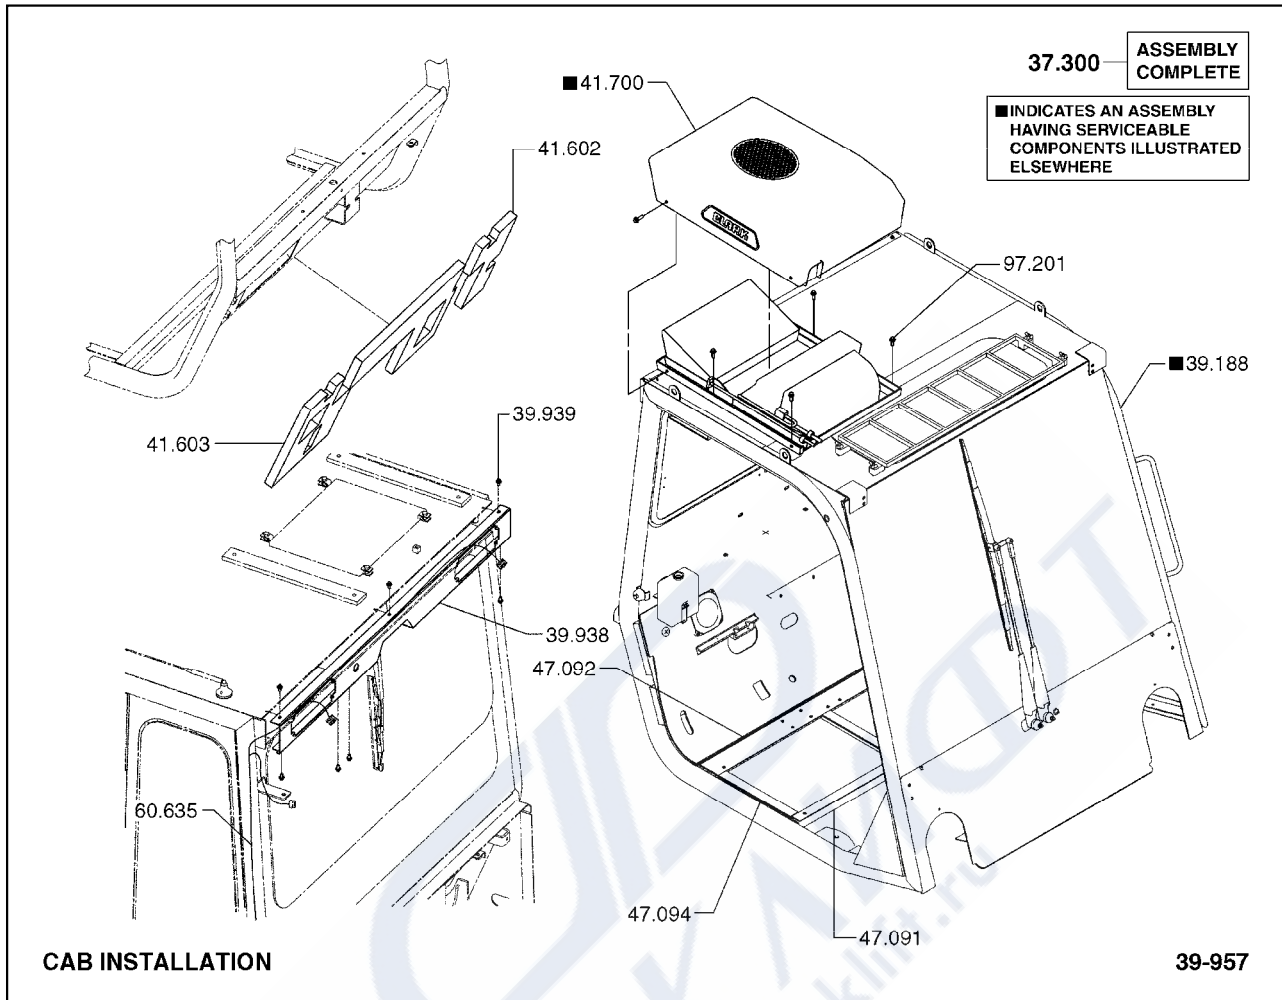 


|        |                                                      |
|--------|------------------------------------------------------|
| 37.300 | CAB ASSEMBLY<br>캐빈                                   |
| 39.188 | CAB ASSEMBLY, WELDED<br>캐빈                           |
| 39.938 | BRACKET, OVERHEAD GUARD REAR SUPPORT<br>브라켓          |
| 39.939 | FASTENER, OVERHEAD GUARD REAR SUPPORT BRACKET<br>패스너 |
| 41.602 | SOUND SEAL, ENGINE HOOD<br>사운드씰                      |
| 41.603 | SOUND SEAL, ENGINE HOOD<br>사운드씰                      |
| 41.700 | AIR CONDITIONER ASSEMBLY<br>에어컨디셔너                   |
| 47.091 | SEAL, DRIVERS CELL, LH FRONT<br>씰                    |
| 47.092 | SEAL, DRIVERS CELL, LH REAR<br>씰                     |

---

|        |                                           |
|--------|-------------------------------------------|
| 47.094 | SEAL, DRIVERS CELL, RH CENTER<br>씰        |
| 60.635 | WIRING HARNESS, LIGHT<br>와이어하네스           |
| 97.201 | FASTENER, AIR CONDITIONER MOUNTING<br>패스너 |

ФОРКЛИФТ  
www.forklift.ru

 
■ INDICATES AN ASSEMBLY  
HAVING SERVICEABLE  
COMPONENTS ILLUSTRATED  
ELSEWHERE

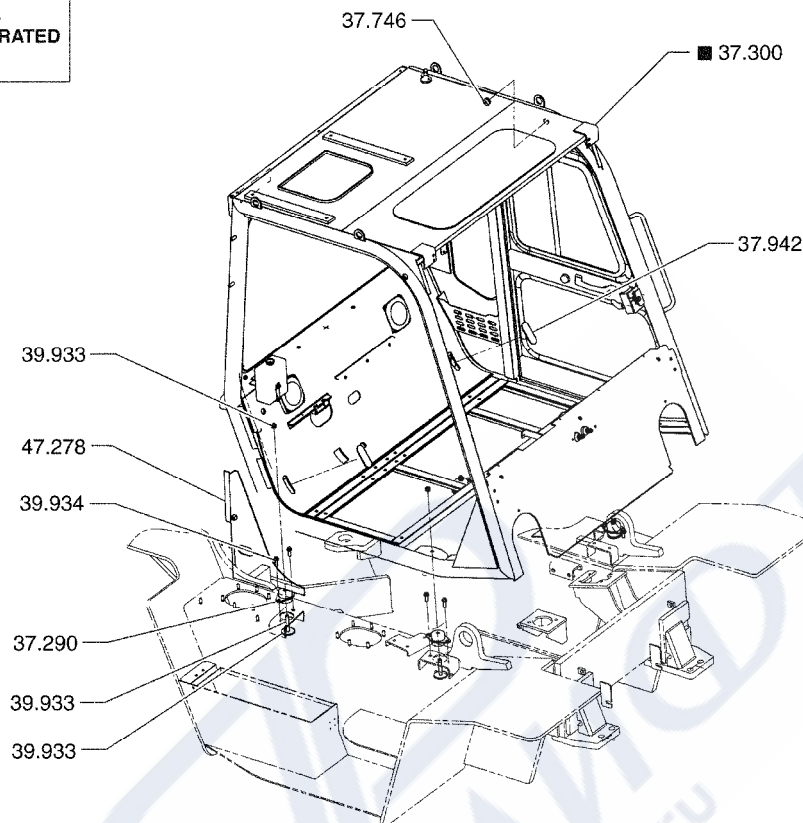

CAB MOUNTING

39-958


|        |                                                       |
|--------|-------------------------------------------------------|
| 37.290 | DAMPENER, OVERHEAD GUARD VIBRATION<br>댐프너             |
| 37.300 | CAB ASSEMBLY<br>캐빈                                    |
| 37.746 | PLUG, DRIVER OVERHEAD GUARD<br>플러그                    |
| 37.942 | PLUG, OVERHEAD GUARD REAR SUPPORT PAD FASTENER<br>플러그 |
| 39.933 | FASTENER, OVERHEAD GUARD<br>패스너                       |
| 39.934 | FASTENER, OVERHEAD GUARD<br>패스너                       |
| 47.278 | COVER, FRONT RH<br>커버                                 |

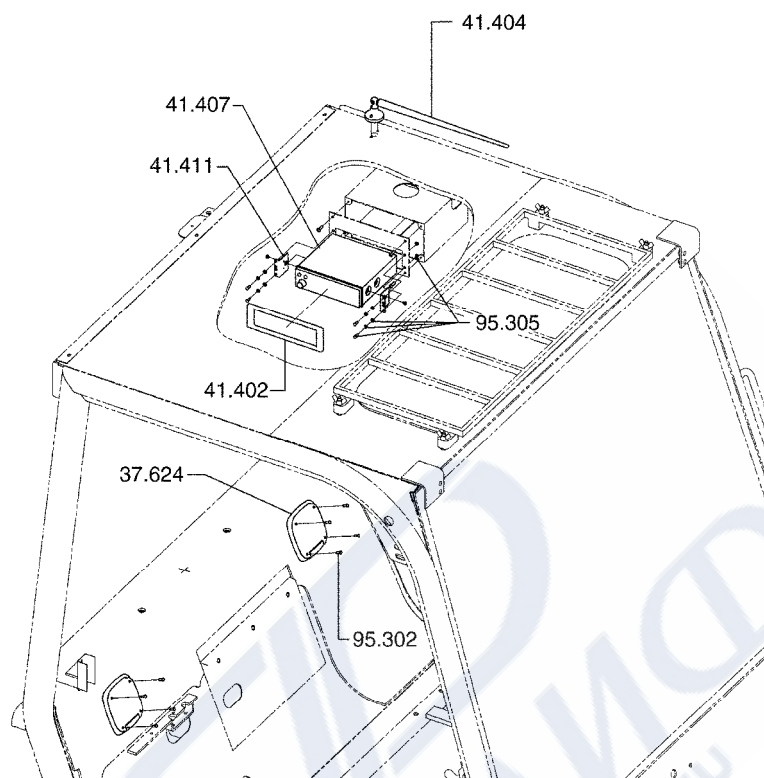 

**AUDIO INSTALLATION**

**39-961**
 
|        |                                                           |
|--------|-----------------------------------------------------------|
| 37.624 | SPEAKER, CABIN<br>스피커                                     |
| 41.402 | COVER, AUDIO AND TRANSCEIVER MOUNTING BOX<br>커버           |
| 41.404 | ANTENNA, AUDIO<br>안테나                                     |
| 41.407 | AUDIO<br>오디오                                              |
| 41.411 | BRACKET, AUDIO AND TRANSCEIVER BOX MOUNTING<br>브라켓        |
| 95.302 | FASTENER, LOUDSPEAKER<br>패스너                              |
| 95.305 | FASTENER, AUDIO AND TRANSCEIVER BOX TO MOUNTING BR<br>패스너 |

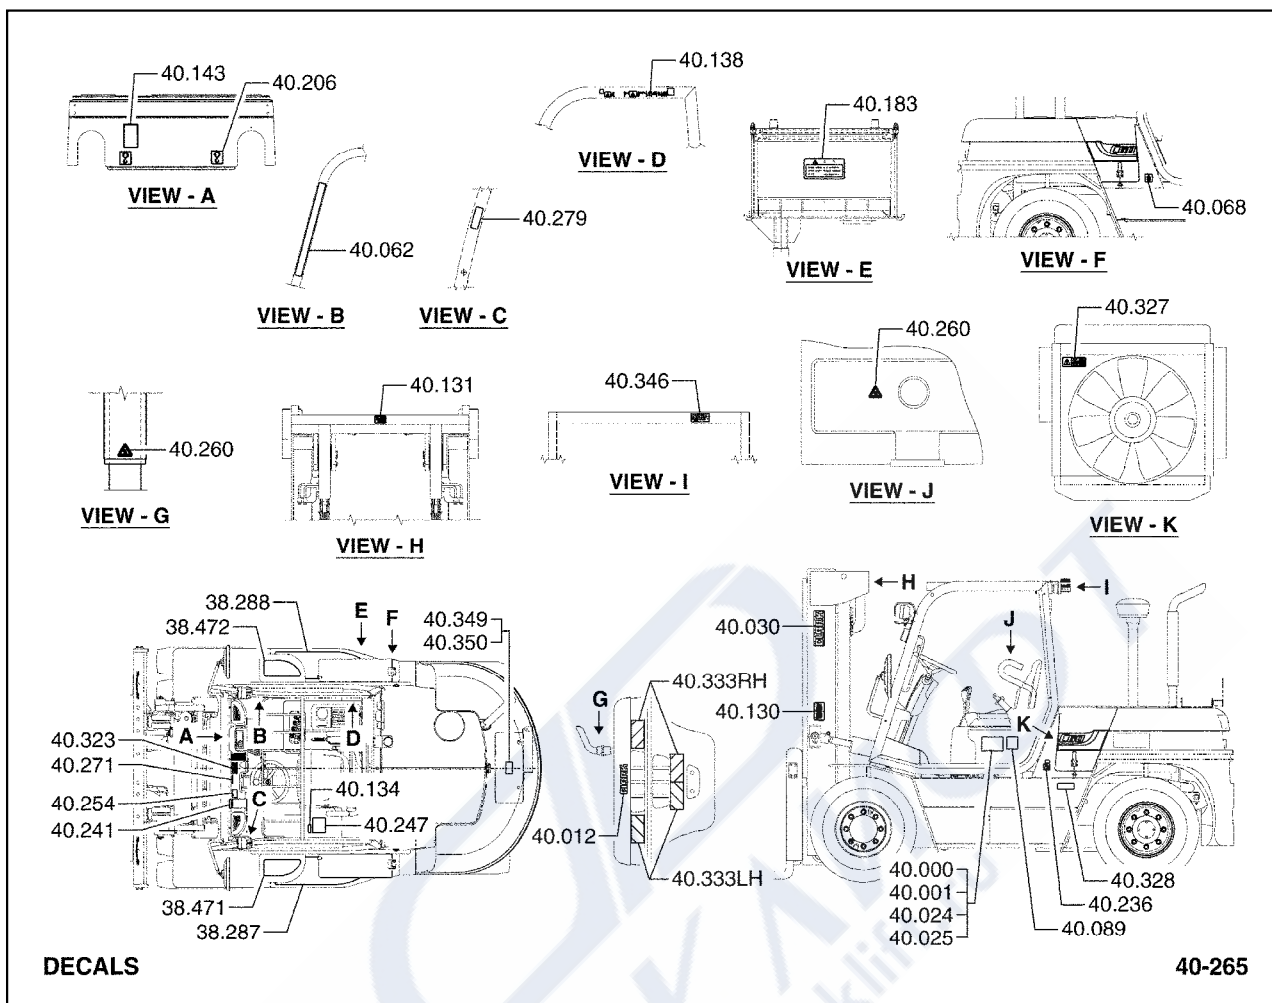


|        |                                           |        |                                                 |
|--------|-------------------------------------------|--------|-------------------------------------------------|
| 38.287 | PAD, LH STEP NON-SKID (BOTTOM)<br>패드      | 40.134 | DECAL, OPERATORS MANUAL LOCATION<br>데칼          |
| 38.288 | PAD, RH STEP NON-SKID (BOTTOM)<br>패드      | 40.138 | DECAL, SAFETY<br>데칼                             |
| 38.471 | PAD, LH STEP NON-SKID<br>패드               | 40.143 | DECAL, OPERATORS INSTRUCTIONS<br>데칼             |
| 38.472 | PAD, RH STEP NON-SKID<br>패드               | 40.183 | DECAL, BATTERY DISCONNECT WARNING<br>데칼         |
| 40.000 | PLATE, CAPACITY & SERIAL NUMBER<br>플레이트   | 40.206 | DECAL, SLING EYE<br>데칼                          |
| 40.001 | FASTENER, CAPACITY & SERIAL PLATE<br>패스너  | 40.236 | DECAL, FUEL<br>데칼                               |
| 40.012 | DECAL, CLARK LOGO-SMALL<br>데칼             | 40.241 | DECAL, BRAKE OIL SPEC<br>데칼                     |
| 40.024 | PLATE, UNDERWRITERS LABEL<br>플레이트         | 40.247 | DECAL, LPG FUEL CYL REPLACEMENT PROCEDURE<br>데칼 |
| 40.025 | FASTENER, UNDERWRITERS LABEL PLATE<br>패스너 | 40.254 | DECAL, TILT<br>데칼                               |
| 40.030 | DECAL, CLARK VERTICAL<br>데칼               | 40.260 | DECAL, HOT SURFACE WARNING<br>데칼                |
| 40.062 | DECAL, DRIVERS CAUTION<br>데칼              | 40.271 | DECAL, LP GAS<br>데칼                             |
| 40.068 | DECAL, HYD-SYSTEM OIL<br>데칼               | 40.279 | DECAL, STARTING PROCEDURE<br>데칼                 |
| 40.089 | PLATE, SAFETY INSTRUCTION<br>플레이트         | 40.323 | DECAL, NOTICE<br>데칼                             |
| 40.130 | LEGEND, SAFETY<br>범례                      | 40.327 | DECAL, FAN WARNING<br>데칼                        |
| 40.131 | LEGEND, SAFETY<br>범례                      | 40.328 | DECAL, WHEEL NUT WARNING<br>데칼                  |

---

|        |                                       |
|--------|---------------------------------------|
| 40.333 | REFLECTOR, COUNTERWEIGHT<br>리플렉터      |
| 40.346 | DECAL, OVERHEAD GUARD DROP TEST<br>데칼 |
| 40.349 | PLATE, LESS LP TANK<br>플레이트           |
| 40.350 | FASTENER, PLATE LESS LP TANK<br>패스너   |



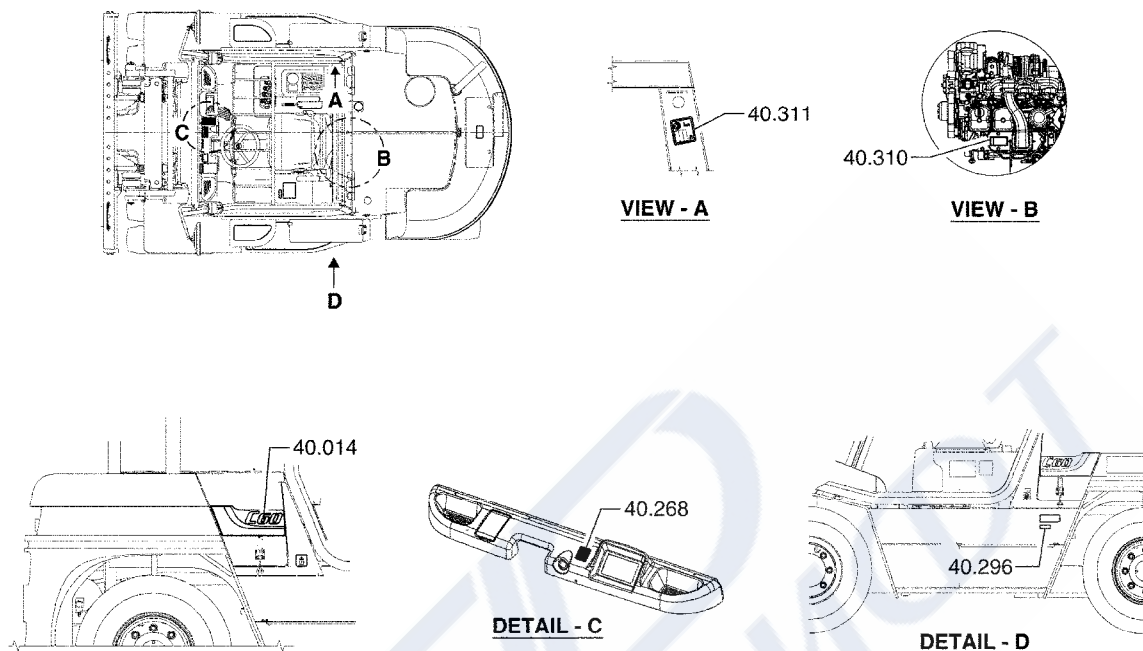 


**MODEL & SPECIFICATION DECALS**

**40-282**
 
|        |                                |
|--------|--------------------------------|
| 40.014 | DECAL, MODEL NAME<br>데칼        |
| 40.268 | DECAL, SPEC<br>데칼              |
| 40.296 | DECAL, TIRE PRESSURE<br>데칼     |
| 40.310 | DECAL, EXHAUST GAS<br>데칼       |
| 40.311 | DECAL, SOUND POWER LEVEL<br>데칼 |



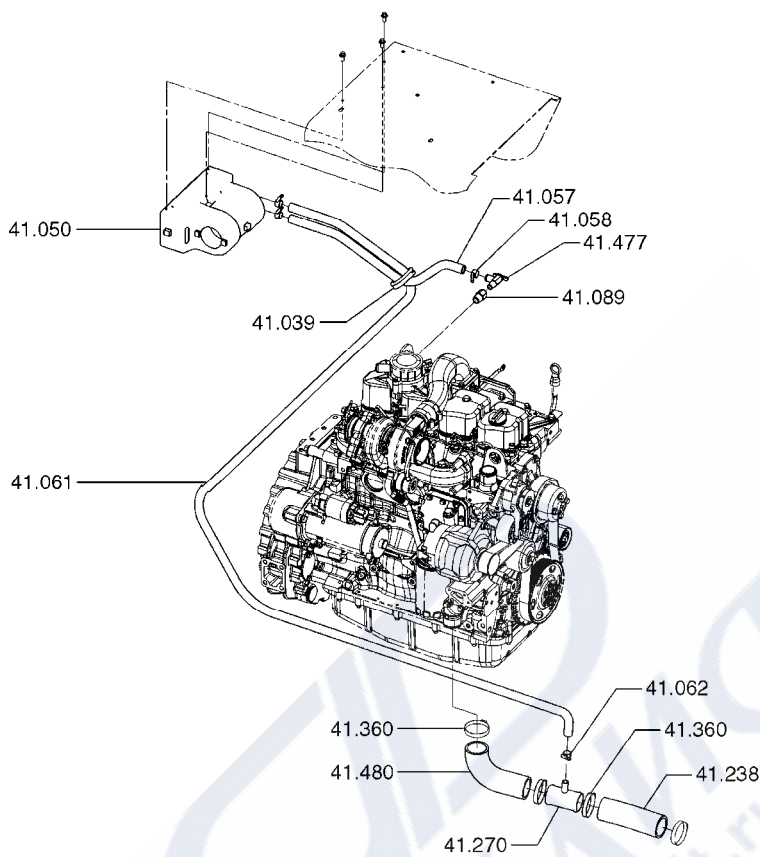

**HEATER INSTALLATION**

 
**41-019**

|        |                                  |
|--------|----------------------------------|
| 41.039 | GROMMET, HEATER LINE<br>그로멧      |
| 41.050 | HEATER ASSEMBLY<br>히터            |
| 41.057 | LINE, HEATER INLET<br>라인         |
| 41.058 | CLAMP, HEATER INLET LINE<br>클램프  |
| 41.061 | LINE, HEATER OUTLET<br>라인        |
| 41.062 | CLAMP, HEATER OUTLET LINE<br>클램프 |
| 41.089 | FITTING, HEATER INLET LINE<br>피팅 |
| 41.238 | LINE, HEATER OUTLET<br>라인        |
| 41.270 | TUBE, HEATER OUTLET<br>튜브        |



|        |                                       |
|--------|---------------------------------------|
| 41.360 | CLAMP, HEATER ASSY OUTLET LINE<br>클램프 |
| 41.477 | VALVE, HEATER LINE<br>밸브              |
| 41.480 | HOSE, HEATER<br>호스                    |




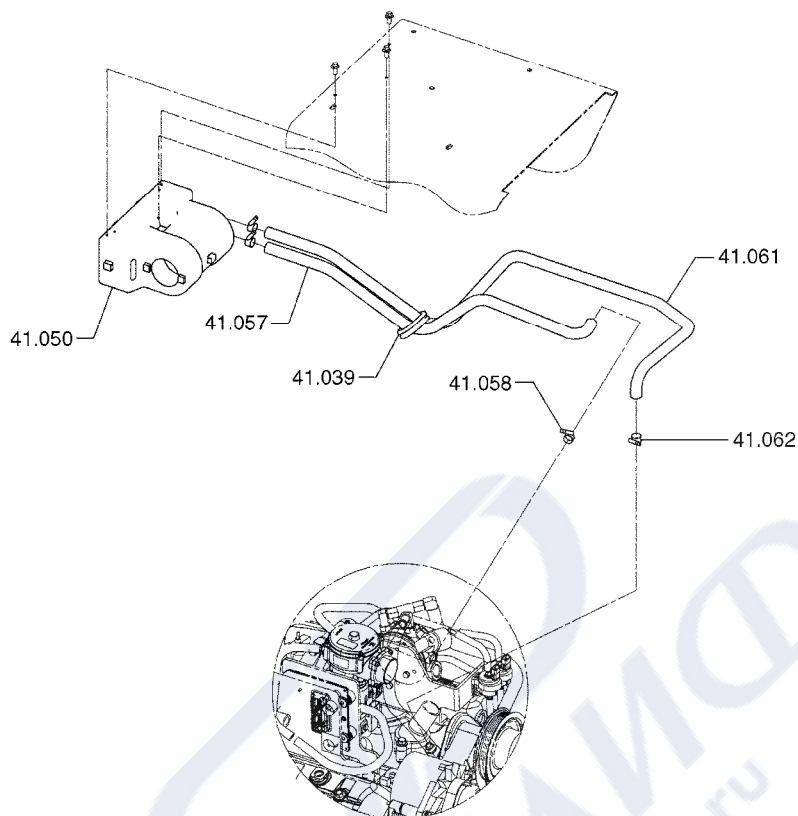

**HEATER INSTALLATION**

**41-023**

 - |        |                                  |
|--------|----------------------------------|
| 41.039 | GROMMET, HEATER LINE<br>그로멧      |
| 41.050 | HEATER ASSEMBLY<br>히터            |
| 41.057 | LINE, HEATER INLET<br>라인         |
| 41.058 | CLAMP, HEATER INLET LINE<br>클램프  |
| 41.061 | LINE, HEATER OUTLET<br>라인        |
| 41.062 | CLAMP, HEATER OUTLET LINE<br>클램프 |

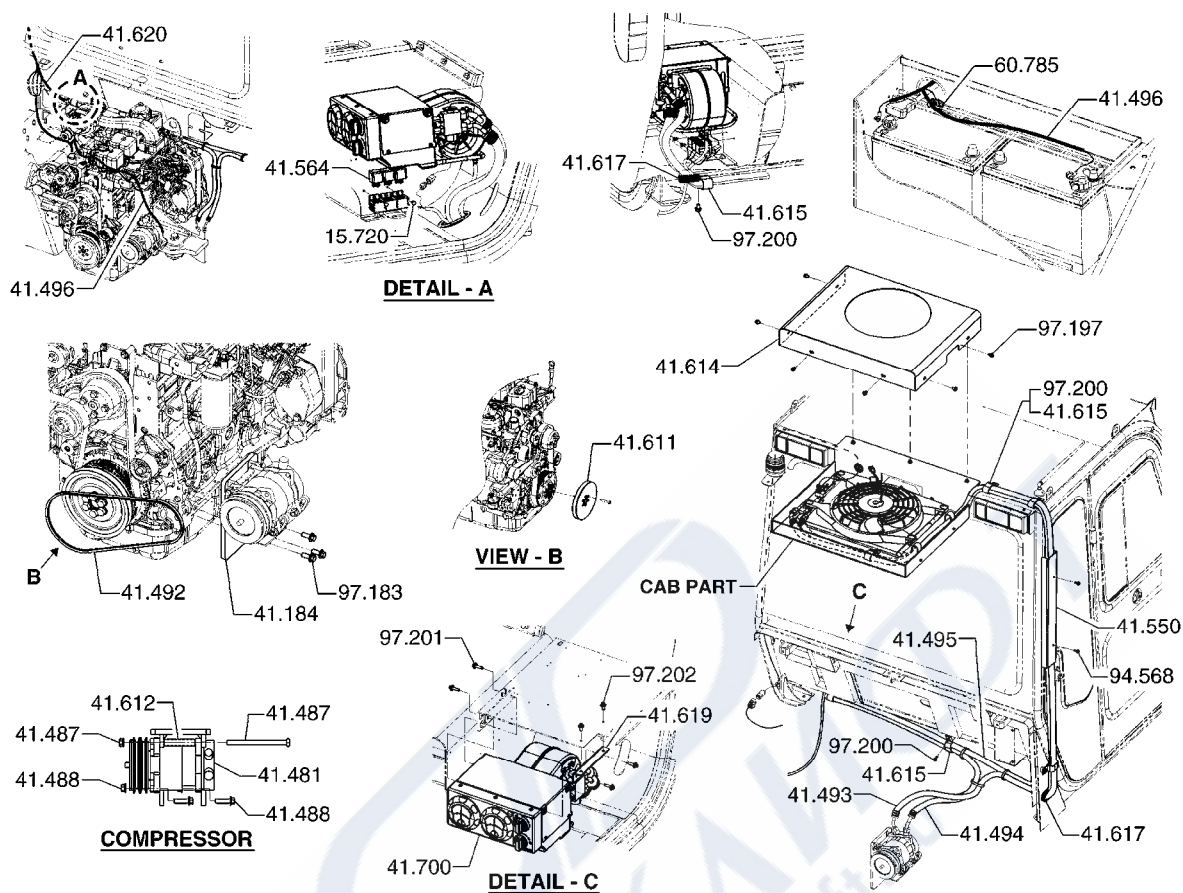

## AIR CONDITIONER INSTALLATION

 
**41-029**

- |        |                                                            |
|--------|------------------------------------------------------------|
| 15.720 | FASTENER, RELAY SOCKET<br>패스너                              |
| 41.184 | LOCKWASHER, VAPOR DETECTOR CONT IND POWER MODULE F<br>로크와셔 |
| 41.481 | COMPRESSOR, AIR CONDITIONING<br>컴프레서                       |
| 41.487 | BOLT, A/C COMPRESSOR MTG.<br>볼트                            |
| 41.488 | FASTENER, A/C COMPRESSOR MTG.<br>패스너                       |
| 41.492 | V-BELT, A/C COMPRESSOR<br>V-벨트                             |
| 41.493 | HOSE, A/C COMPRESSOR TO CONDENSER<br>호스                    |
| 41.494 | HOSE, A/C COMPRESSOR TO EXP. VALVE<br>호스                   |
| 41.495 | HOSE, EXPANSION VALVE TO CONDENSER<br>호스                   |

---

|        |                                                      |
|--------|------------------------------------------------------|
| 41.496 | WIRE HARNESS, AIR CONDITIONER<br>와이어하네스              |
| 41.550 | COVER, AIR CONDITIONER OUTER<br>커버                   |
| 41.564 | RELAY, AIR CONDITIONER<br>릴레이                        |
| 41.611 | PULLEY, AIR CONDITIONER COMPRESSOR<br>폴리             |
| 41.612 | BEARING, AIR CONDITIONER COMPRESSOR<br>베어링           |
| 41.614 | COVER, A/C CONDENSER<br>커버                           |
| 41.615 | CLAMP, AIR CONDITIONER LINE<br>클램프                   |
| 41.617 | GROMMET, AIR CONDITIONER LINE<br>그로멧                 |
| 41.619 | BRACKET, AIR CONDITIONER MOUNTING<br>브라켓             |
| 41.620 | WIRE HARNESS, AIR CONDITIONER EXPANSION<br>와이어하네스    |
| 41.700 | AIR CONDITIONER ASSEMBLY<br>에어컨디셔너                   |
| 60.785 | FUSE, MAIN ACCESSORY HARNESS<br>퓨즈                   |
| 94.568 | FASTENER, CAB REAR COVER<br>패스너                      |
| 97.183 | FASTENER, AIR CONDITIONER COMPRESSOR MOUNTING<br>패스너 |
| 97.197 | FASTENER, A/C CONDENSER COVER<br>패스너                 |
| 97.200 | FASTENER, AIR CONDITIONER LINE CLAMP<br>패스너          |
| 97.201 | FASTENER, AIR CONDITIONER MOUNTING<br>패스너            |
| 97.202 | FASTENER, AIR CONDITIONER MOUNTING BRACKET<br>패스너    |

ASSEMBLY  
COMPLETE — 37.300

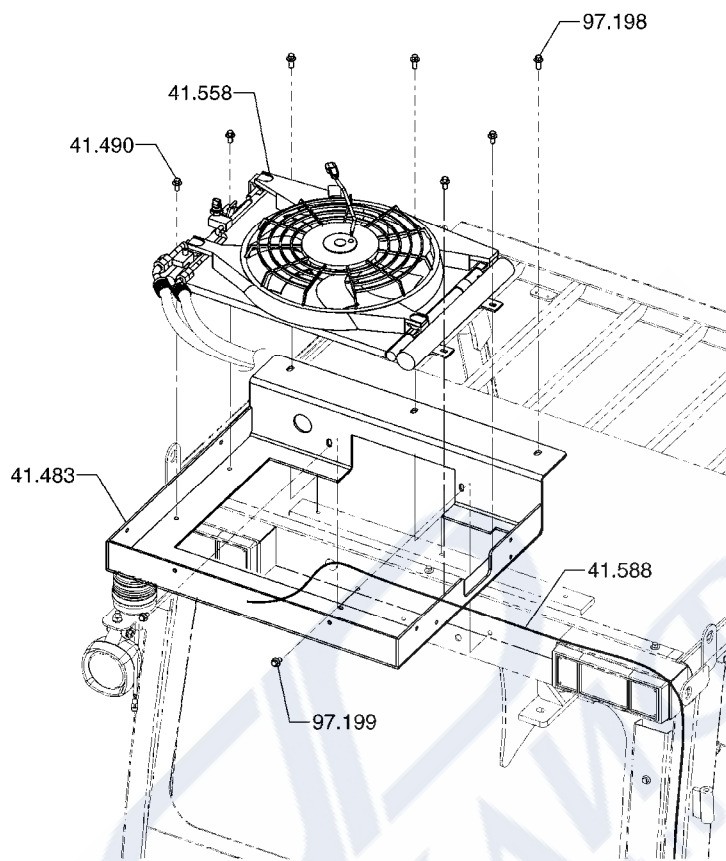


AIR CONDITIONER CONDENSER MOUNTING

41-089

|        |                                                   |
|--------|---------------------------------------------------|
| 37.300 | CAB ASSEMBLY<br>캐빈                                |
| 41.483 | BRACKET, A/C CONDENSER<br>브라켓                     |
| 41.490 | FASTENER, A/C CONDENSER MTG<br>패스너                |
| 41.558 | CONDENSER, AIR CONDITIONER<br>컨덴서                 |
| 41.588 | WIRE HARNESS, AIR CONDITIONER CONDENSER<br>와이어하네스 |
| 97.198 | FASTENER, A/C CONDENSER COVER MOUNTING<br>패스너     |
| 97.199 | FASTENER, A/C CONDENSER BRACKET<br>패스너            |

 ASSEMBLY  
COMPLETE — 37.300

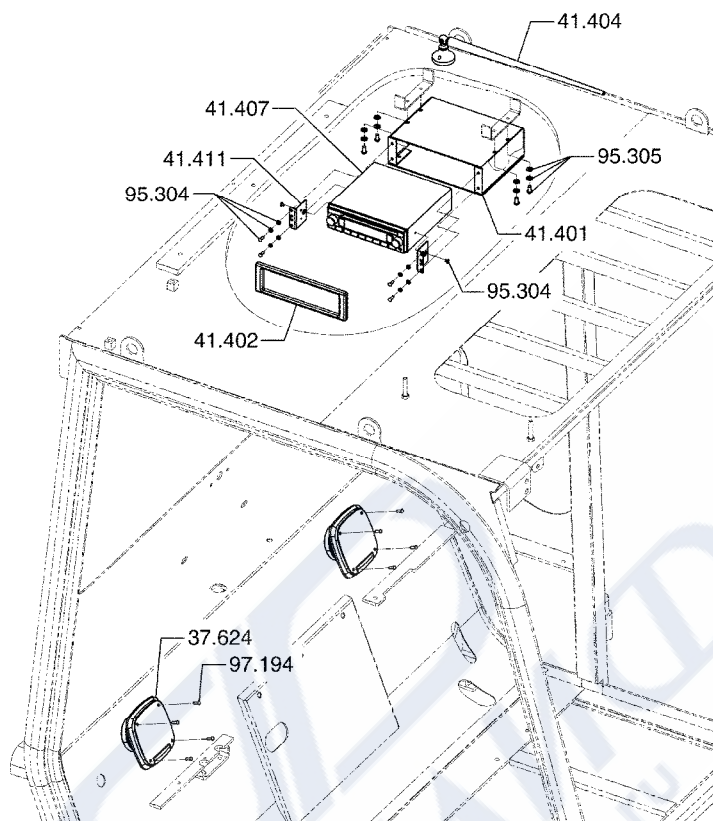

AUDIO INSTALLATION

41-116


|        |                                                           |
|--------|-----------------------------------------------------------|
| 37.300 | CAB ASSEMBLY<br>캐빈                                        |
| 37.624 | SPEAKER, CABIN<br>스피커                                     |
| 41.401 | BOX, AUDIO AND TRANSCEIVER MOUNTING<br>박스                 |
| 41.402 | COVER, AUDIO AND TRANSCEIVER MOUNTING BOX<br>커버           |
| 41.404 | ANTENNA, AUDIO<br>안테나                                     |
| 41.407 | AUDIO<br>오디오                                              |
| 41.411 | BRACKET, AUDIO AND TRANSCEIVER BOX MOUNTING<br>브라켓        |
| 95.304 | FASTENER, AUDIO AND TRANSCEIVER BOX MOUNTING BRACK<br>패스너 |
| 95.305 | FASTENER, AUDIO AND TRANSCEIVER BOX TO MOUNTING BR<br>패스너 |

97.194 FASTENER, CABIN SPEAKER  
패스너



SEAT SAFETY  
WING KIT

 37.970

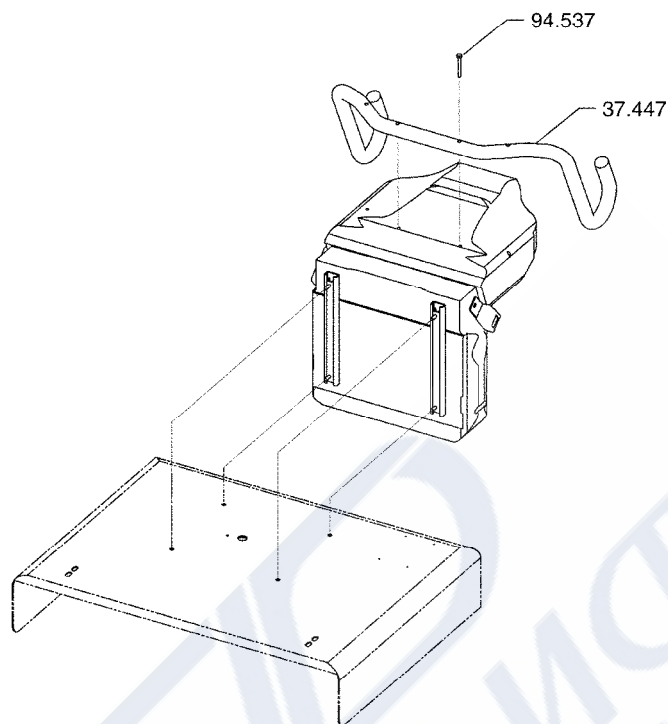


SEAT WING KIT


47-000

- |        |                                                  |
|--------|--------------------------------------------------|
| 37.447 | RESTRAINT, OPERATOR SEAT LATERAL<br>레스트레인트       |
| 37.970 | KIT, SEAT SAFETY<br>키트                           |
| 94.537 | FASTENER, OPERATOR SEAT LATERAL RESTRAINT<br>패스너 |



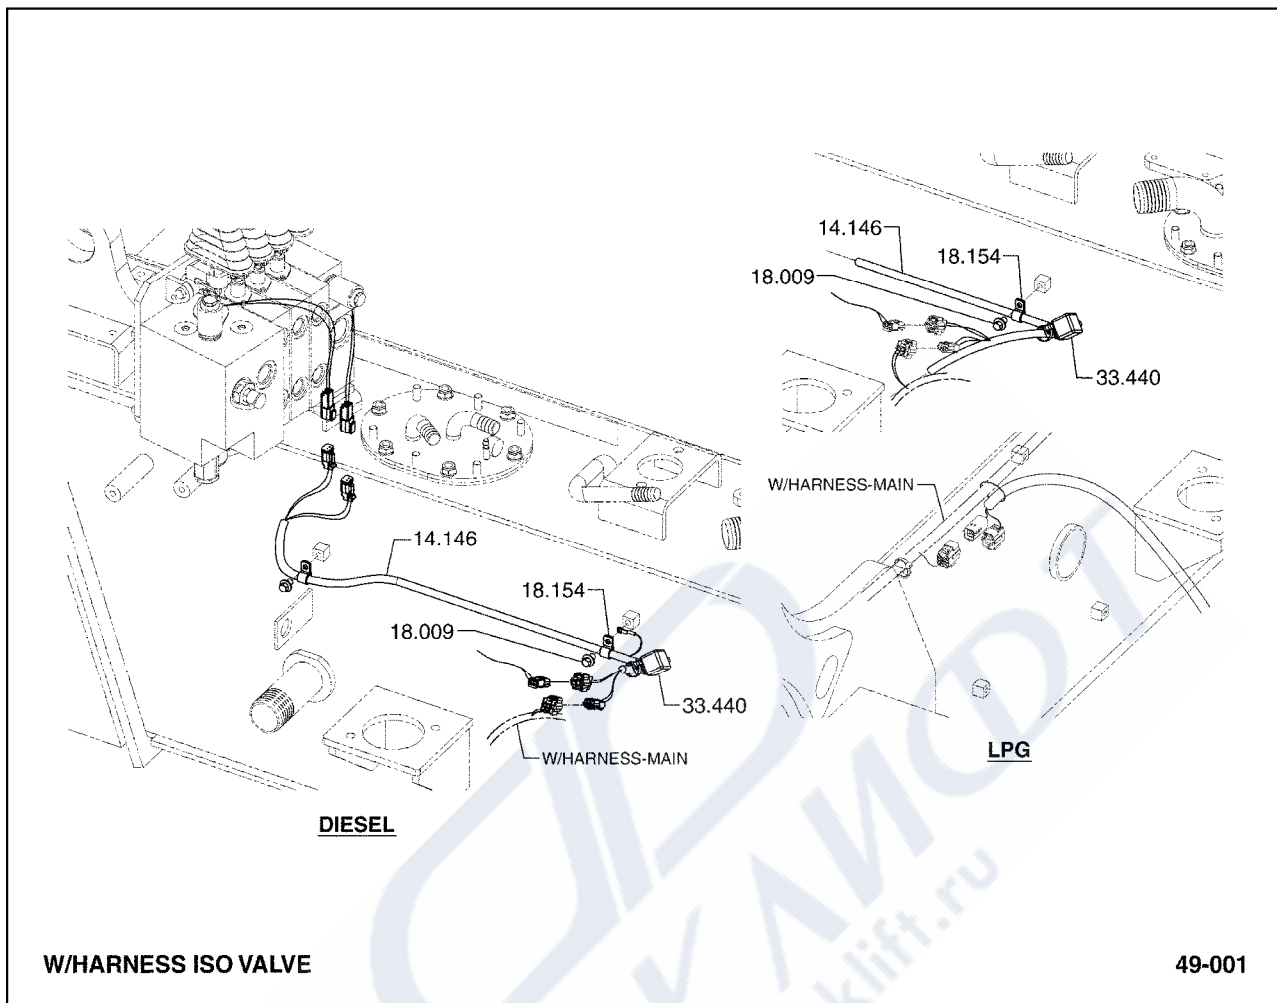 

|        |                                                  |
|--------|--------------------------------------------------|
| 14.146 | HARNESS, VALVE SWITCH WIRING<br>하네스              |
| 18.009 | FASTENER, HARNESS CLIP<br>패스너                    |
| 18.154 | CLAMP, WIRING HARNESS HYDROSTATIC CONTROL<br>클램프 |
| 33.440 | RELAY, SOLENOID VALVE<br>릴레이                     |

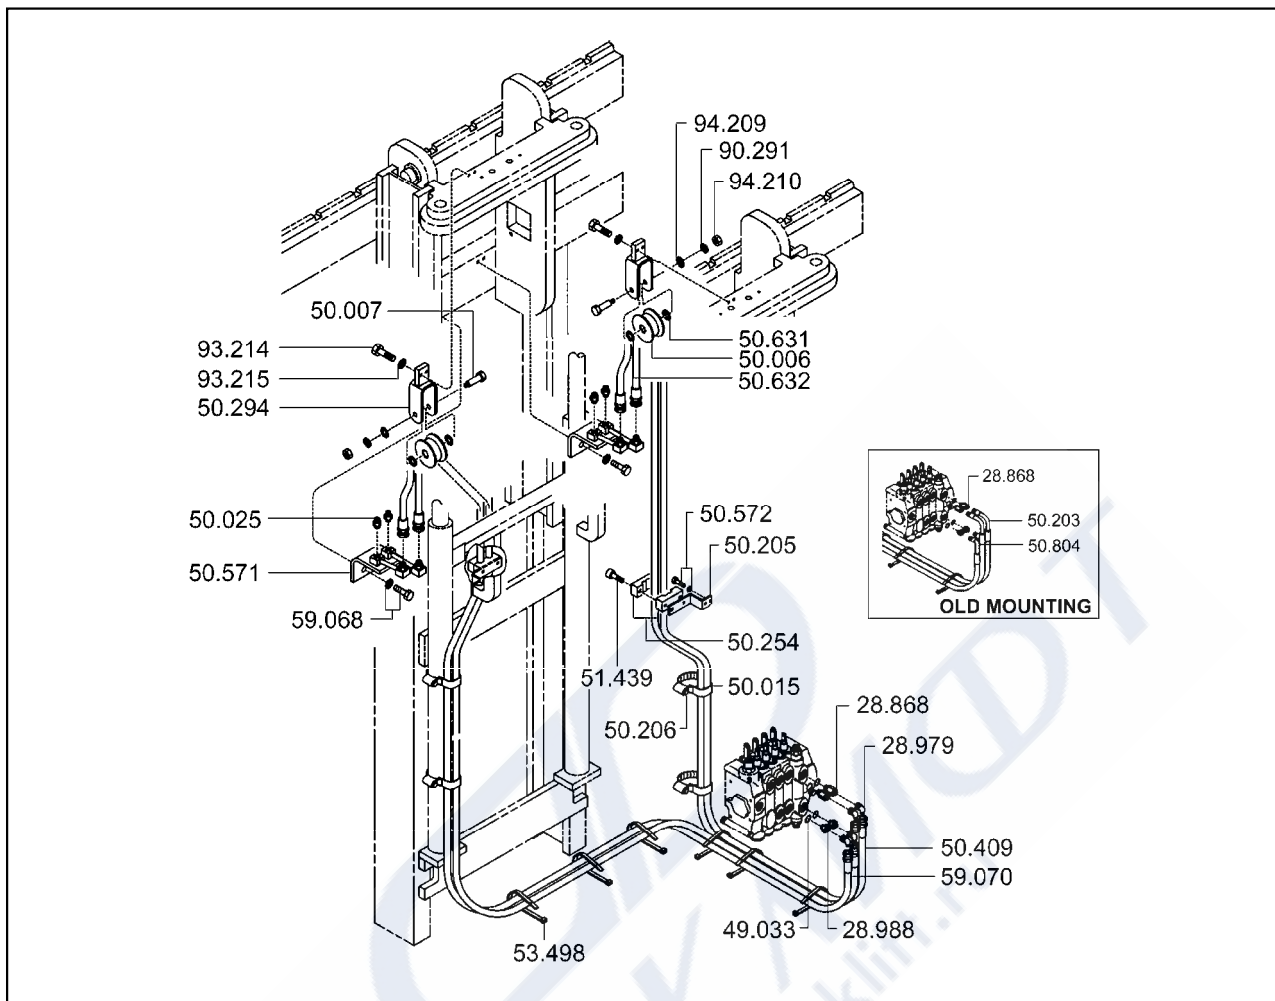 


|        |                                            |
|--------|--------------------------------------------|
| 28.868 | FITTING, AUXILIARY VALVE<br>피팅             |
| 28.979 | FITTING, HYDRAULIC LINES<br>피팅             |
| 28.988 | FITTING, HYDRAULIC VALVE BANK<br>피팅        |
| 49.033 | SEAL, HYDRAULIC VALVE BANK<br>씰            |
| 50.006 | SHEAVE, DEVICE HOSE UPPER<br>쉬브            |
| 50.007 | RETAINER, DEVICE HOSE SHEAVE<br>리테이너       |
| 50.015 | CLIP, DEVICE LINE TO UPRIGHT<br>클립         |
| 50.025 | FITTING, DEVICE HOSE<br>피팅                 |
| 50.203 | LINE, DEVICE HYDRAULIC (AT CARRIAGE)<br>라인 |

---

|        |                                              |
|--------|----------------------------------------------|
| 50.205 | BRACKET, DEVICE LINE CLAMP<br>브라켓            |
| 50.206 | FASTENER, DEVICE RH LINE CLAMP<br>패스너        |
| 50.254 | CLAMP, DEVICE LINE<br>클램프                    |
| 50.294 | PIVOT, DEVICE HOSE UPPER SHEAVE<br>피봇        |
| 50.409 | HOSE, DEVICE AT VALVE<br>호스                  |
| 50.571 | BRACKET, DEVICE HOSE<br>브라켓                  |
| 50.572 | FASTENER, DEVICE HOSE BRACKET<br>패스너         |
| 50.631 | SPACER, DEVICE HOSE SHEAVE<br>스페이서           |
| 50.632 | SPACER, DEVICE HOSE SHEAVE<br>스페이서           |
| 50.804 | LINE, DEVICE HYDRAULIC<br>라인                 |
| 51.439 | FASTENER, DEVICE HOSE CLIP<br>패스너            |
| 53.498 | CLIP, DEVICE HOSE<br>클립                      |
| 59.068 | FASTENER, DEVICE HOSE BRACKET<br>패스너         |
| 59.070 | LINE, DEVICE HOSE<br>라인                      |
| 90.291 | LOCKWASHER, DEVICE HOSE RETAINER<br>로크와셔     |
| 93.214 | FASTENER, DEVICE HOSE SHEAVE PIVOT<br>패스너    |
| 93.215 | LOCKWASHER, DEVICE HOSE SHEAVE PIVOT<br>로크와셔 |
| 94.209 | FASTENER, DEVICE HOSE RETAINER<br>패스너        |
| 94.210 | NUT, DEVICE HOSE RETAINER FASTENER<br>너트     |

 
---

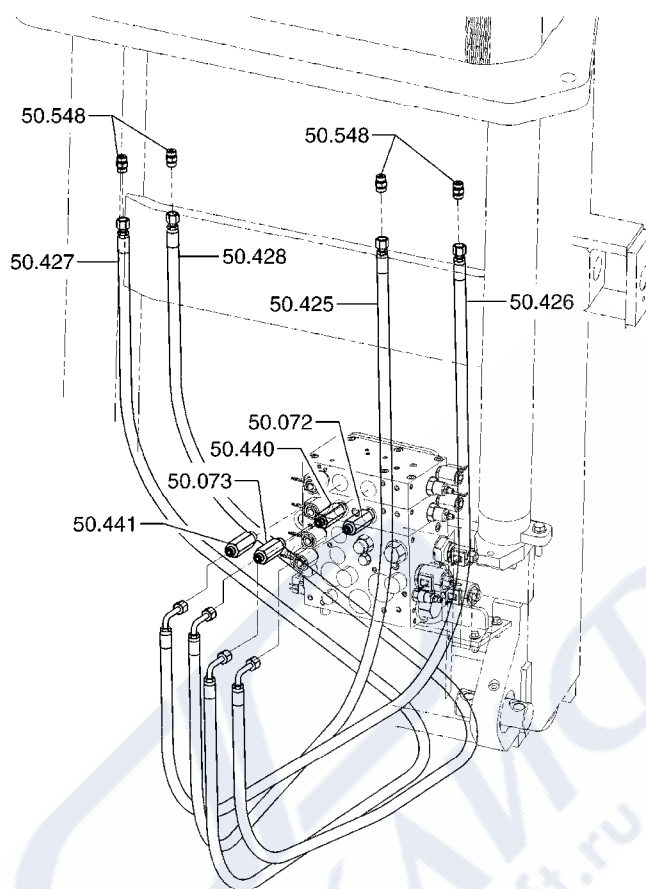

**AUXILIARY VALVE LINES**

**50-146**
 
|        |                                             |
|--------|---------------------------------------------|
| 50.072 | FITTING, 1ST AUXILIARY VALVE "B" PORT<br>피팅 |
| 50.073 | FITTING, 2ND AUXILIARY VALVE "B" PORT<br>피팅 |
| 50.425 | LINE, 1ST AUXILIARY VALVE "A" PORT<br>라인    |
| 50.426 | LINE, 1ST AUXILIARY VALVE "B" PORT<br>라인    |
| 50.427 | LINE, 2ND AUXILIARY VALVE "A" PORT<br>라인    |
| 50.428 | LINE, 2ND AUXILIARY VALVE "B" PORT<br>라인    |
| 50.440 | FITTING, 1ST AUXILIARY VALVE "A" PORT<br>피팅 |
| 50.441 | FITTING, 2ND AUXILIARY VALVE "A" PORT<br>피팅 |
| 50.548 | FITTING, DEVICE CROSSOVER HOSE<br>피팅        |

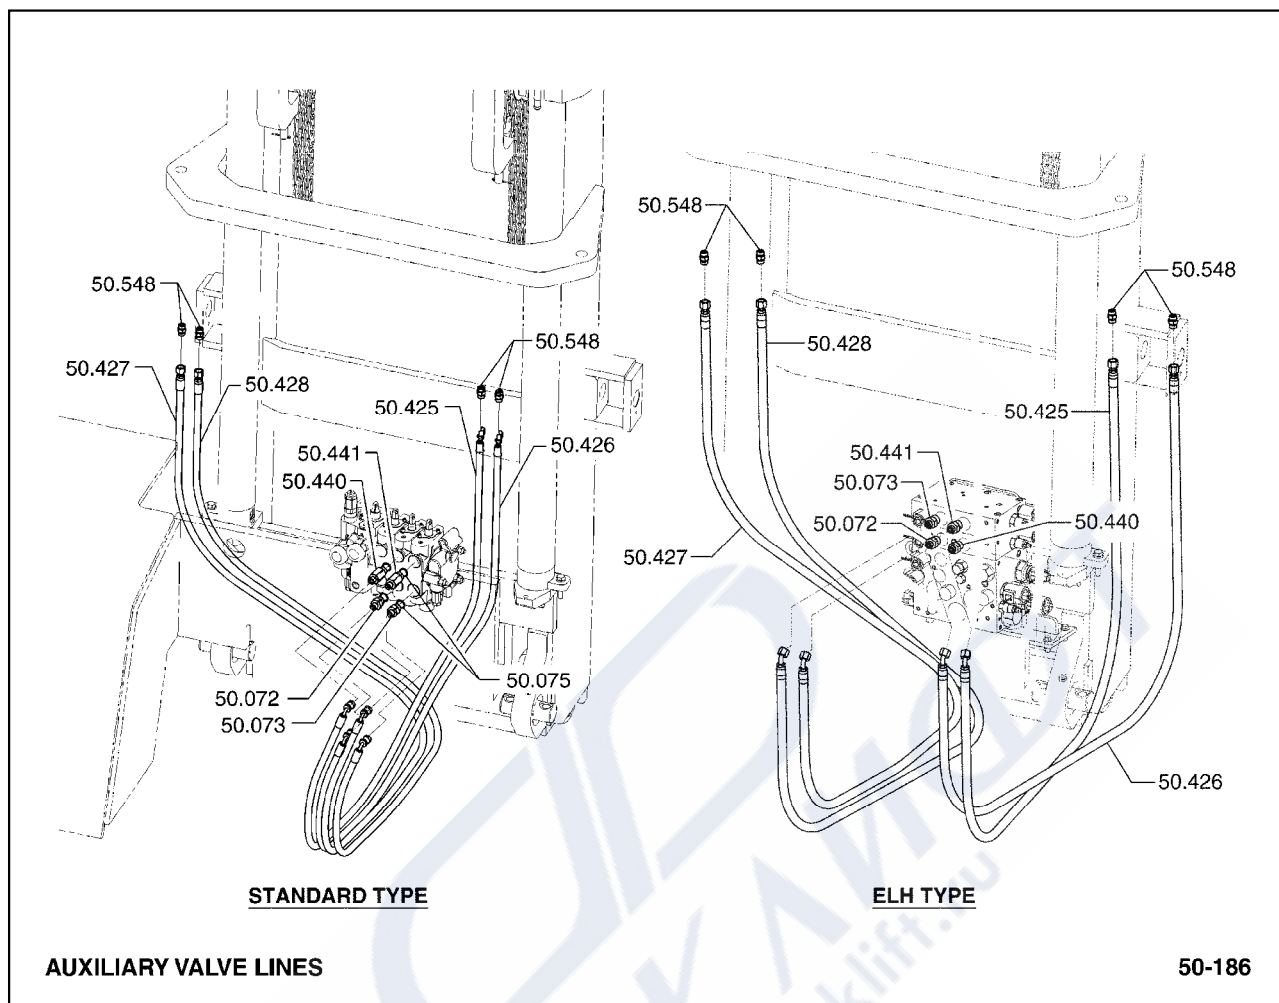


|        |                                             |
|--------|---------------------------------------------|
| 50.072 | FITTING, 1ST AUXILIARY VALVE "B" PORT<br>피팅 |
| 50.073 | FITTING, 2ND AUXILIARY VALVE "B" PORT<br>피팅 |
| 50.075 | SEAL, AUXILIARY VALVE PORT FITTING<br>씰     |
| 50.425 | LINE, 1ST AUXILIARY VALVE "A" PORT<br>라인    |
| 50.426 | LINE, 1ST AUXILIARY VALVE "B" PORT<br>라인    |
| 50.427 | LINE, 2ND AUXILIARY VALVE "A" PORT<br>라인    |
| 50.428 | LINE, 2ND AUXILIARY VALVE "B" PORT<br>라인    |
| 50.440 | FITTING, 1ST AUXILIARY VALVE "A" PORT<br>피팅 |
| 50.441 | FITTING, 2ND AUXILIARY VALVE "A" PORT<br>피팅 |

50.548

 FITTING, DEVICE CROSSOVER HOSE  
피팅



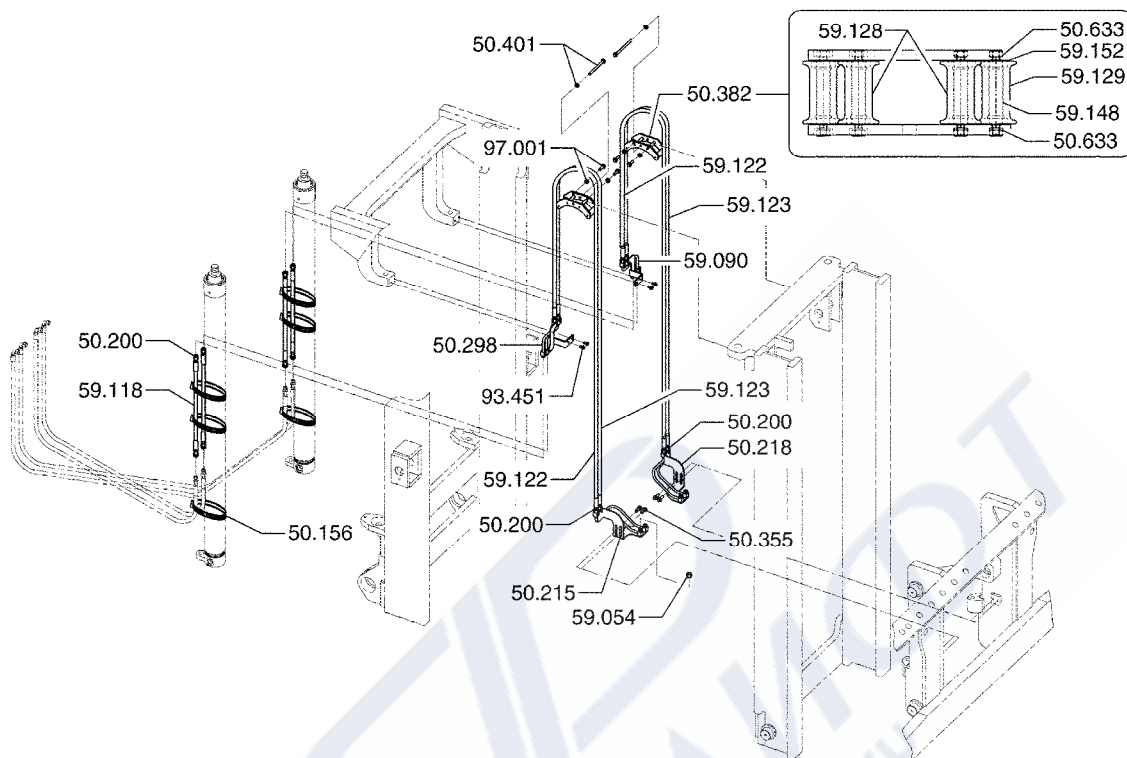


ATTACHMENT HOSE ADAPTATION (UPRIGHT)

50-196


- |        |                                             |
|--------|---------------------------------------------|
| 50.156 | CLIP, DEVICE HOSE<br>클립                     |
| 50.200 | COUPLING, DEVICE HOSE<br>커플링                |
| 50.215 | TERMINAL BLOCK, DEVICE HOSE<br>터미널블록        |
| 50.218 | TERMINAL BLOCK, DEVICE LH HOSE<br>터미널블록     |
| 50.298 | BRACKET, DEVICE HOSE TERMINAL<br>브라켓        |
| 50.355 | FASTENER, DEVICE HOSE TERMINAL BLOCK<br>패스너 |
| 50.382 | ROLLER, DEVICE HOSE<br>롤러                   |
| 50.401 | FASTENER, DEVICE HOSE ROLLER BRACKET<br>패스너 |
| 50.633 | FASTENER, DEVICE HOSE ROLLER PIVOT<br>패스너   |

---

|        |                                               |
|--------|-----------------------------------------------|
| 59.054 | PLUG, DEVICE HOSE JUNCTION BLOCK<br>플러그       |
| 59.090 | BRACKET, DEVICE HOSE TERMINAL<br>브라켓          |
| 59.118 | LINE, DEVICE HYDRAULIC (OUTER RAIL)<br>라인     |
| 59.122 | LINE, DEVICE HYDRAULIC (INNER RAIL)<br>라인     |
| 59.123 | LINE, DEVICE HYDRAULIC (INNER RAIL)<br>라인     |
| 59.128 | TUBE, DEVICE HOSE REEL BRACKET<br>튜브          |
| 59.129 | TUBE, DEVICE HOSE REEL BRACKET<br>튜브          |
| 59.148 | SHAFT, DEVICE HOSE ROLLER<br>샤프트              |
| 59.152 | SHIM, DEVICE HOSE ROLLER<br>심                 |
| 93.451 | FASTENER, DEVICE HOSE TERMINAL BRACKET<br>패스너 |
| 97.001 | FASTENER, DEVICE HOSE ROLLER BRACKET<br>패스너   |

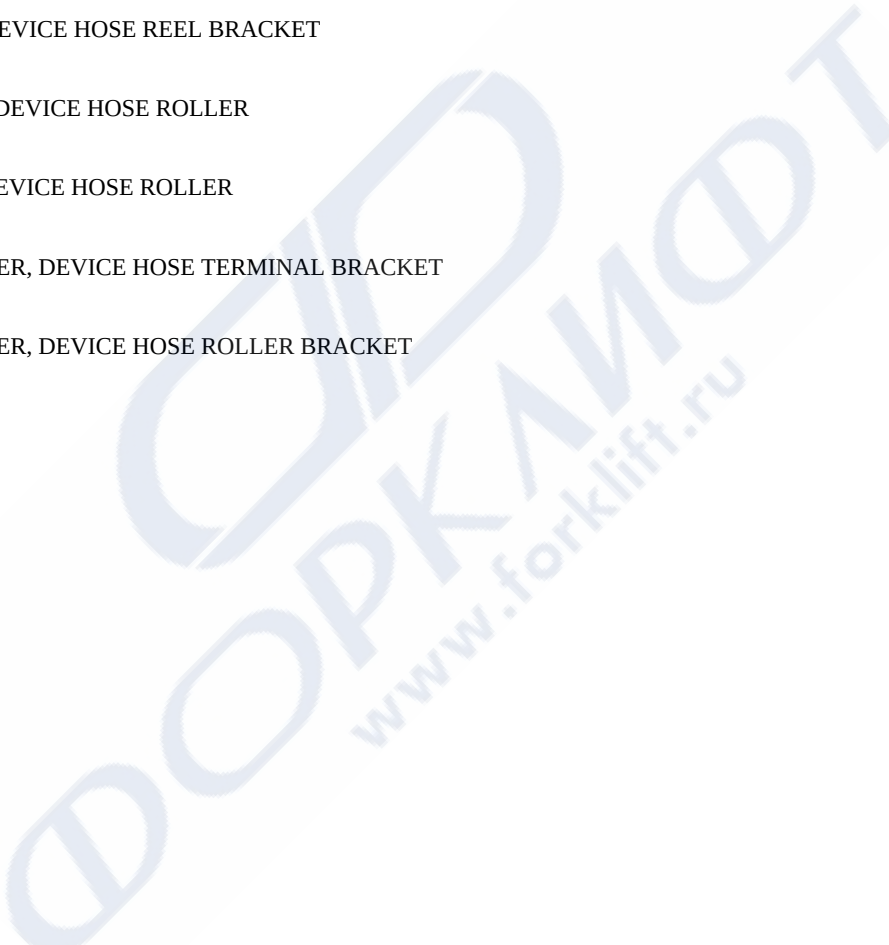 



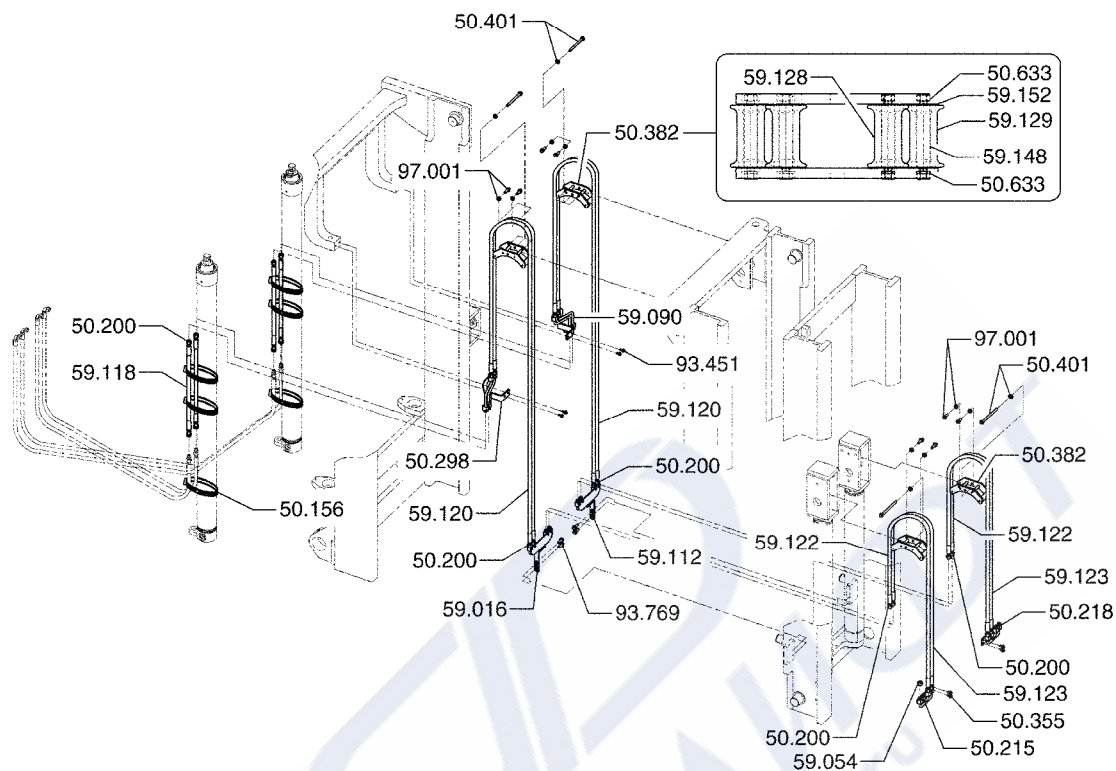 

ATTACHMENT HOSE ADAPTATION (UPRIGHT)


50-262

|        |                                             |
|--------|---------------------------------------------|
| 50.156 | CLIP, DEVICE HOSE<br>클립                     |
| 50.200 | COUPLING, DEVICE HOSE<br>커플링                |
| 50.215 | TERMINAL BLOCK, DEVICE HOSE<br>터미널블록        |
| 50.218 | TERMINAL BLOCK, DEVICE LH HOSE<br>터미널블록     |
| 50.298 | BRACKET, DEVICE HOSE TERMINAL<br>브라켓        |
| 50.355 | FASTENER, DEVICE HOSE TERMINAL BLOCK<br>패스너 |
| 50.382 | ROLLER, DEVICE HOSE<br>롤러                   |
| 50.401 | FASTENER, DEVICE HOSE ROLLER BRACKET<br>패스너 |
| 50.633 | FASTENER, DEVICE HOSE ROLLER PIVOT<br>패스너   |

---

|        |                                                  |
|--------|--------------------------------------------------|
| 59.016 | JUNCTION BLOCK, DEVICE HOSE<br>정크션 블록            |
| 59.054 | PLUG, DEVICE HOSE JUNCTION BLOCK<br>플러그          |
| 59.090 | BRACKET, DEVICE HOSE TERMINAL<br>브라켓             |
| 59.112 | JUNCTION BLOCK, DEVICE HOSE<br>정크션 블록            |
| 59.118 | LINE, DEVICE HYDRAULIC (OUTER RAIL)<br>라인        |
| 59.120 | LINE, DEVICE HYDRAULIC (INTERMEDIATE RAIL)<br>라인 |
| 59.122 | LINE, DEVICE HYDRAULIC (INNER RAIL)<br>라인        |
| 59.123 | LINE, DEVICE HYDRAULIC (INNER RAIL)<br>라인        |
| 59.128 | TUBE, DEVICE HOSE REEL BRACKET<br>튜브             |
| 59.129 | TUBE, DEVICE HOSE REEL BRACKET<br>튜브             |
| 59.148 | SHAFT, DEVICE HOSE ROLLER<br>샤프트                 |
| 59.152 | SHIM, DEVICE HOSE ROLLER<br>심                    |
| 93.451 | FASTENER, DEVICE HOSE TERMINAL BRACKET<br>패스너    |
| 93.769 | FASTENER, DEVICE LINE JUNCTION BLOCK<br>패스너      |
| 97.001 | FASTENER, DEVICE HOSE ROLLER BRACKET<br>패스너      |

 ---

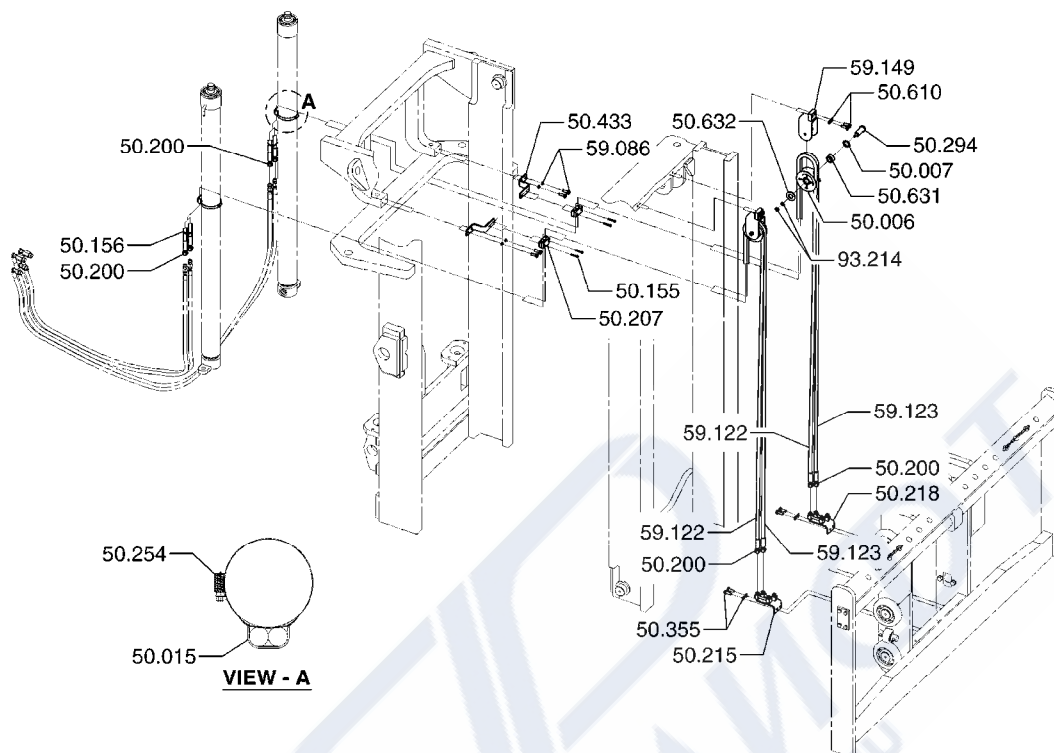

ATTACHMENT HOSE ADAPTATION (UPRIGHT)


50-271

|        |                                         |
|--------|-----------------------------------------|
| 50.006 | SHEAVE, DEVICE HOSE UPPER<br>쉬브         |
| 50.007 | RETAINER, DEVICE HOSE SHEAVE<br>리테이너    |
| 50.015 | CLIP, DEVICE LINE TO UPRIGHT<br>클립      |
| 50.155 | FASTENER, DEVICE HOSE CLIP<br>패스너       |
| 50.156 | CLIP, DEVICE HOSE<br>클립                 |
| 50.200 | COUPLING, DEVICE HOSE<br>커플링            |
| 50.207 | CLAMP, DEVICE HOSE<br>클램프               |
| 50.215 | TERMINAL BLOCK, DEVICE HOSE<br>터미널블록    |
| 50.218 | TERMINAL BLOCK, DEVICE LH HOSE<br>터미널블록 |

---

|        |                                             |
|--------|---------------------------------------------|
| 50.254 | CLAMP, DEVICE LINE<br>클램프                   |
| 50.294 | PIVOT, DEVICE HOSE UPPER SHEAVE<br>피벗       |
| 50.355 | FASTENER, DEVICE HOSE TERMINAL BLOCK<br>패스너 |
| 50.433 | BRACKET, DEVICE HOSE CLAMP<br>브라켓           |
| 50.610 | FASTENER, DEVICE HOSE GUARD<br>패스너          |
| 50.631 | SPACER, DEVICE HOSE SHEAVE<br>스페이서          |
| 50.632 | SPACER, DEVICE HOSE SHEAVE<br>스페이서          |
| 59.086 | FASTENER, DEVICE HOSE CLIP BRACKET<br>패스너   |
| 59.122 | LINE, DEVICE HYDRAULIC (INNER RAIL)<br>라인   |
| 59.123 | LINE, DEVICE HYDRAULIC (INNER RAIL)<br>라인   |
| 59.149 | GUARD, DEVICE HOSE SHEAVE<br>가드             |
| 93.214 | FASTENER, DEVICE HOSE SHEAVE PIVOT<br>패스너   |




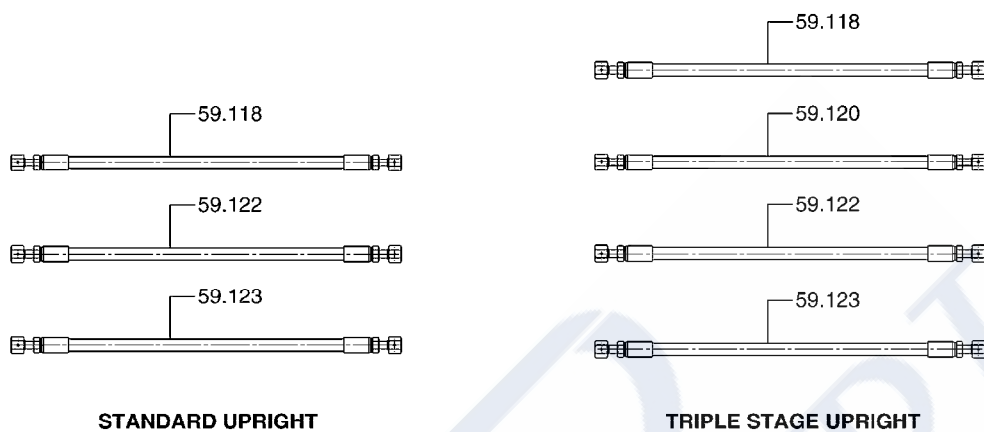 

ATTACHMENT HOSE SETTINGS (UPRIGHT)

50-276


|        |                                                  |
|--------|--------------------------------------------------|
| 59.118 | LINE, DEVICE HYDRAULIC (OUTER RAIL)<br>라인        |
| 59.120 | LINE, DEVICE HYDRAULIC (INTERMEDIATE RAIL)<br>라인 |
| 59.122 | LINE, DEVICE HYDRAULIC (INNER RAIL)<br>라인        |
| 59.123 | LINE, DEVICE HYDRAULIC (INNER RAIL)<br>라인        |

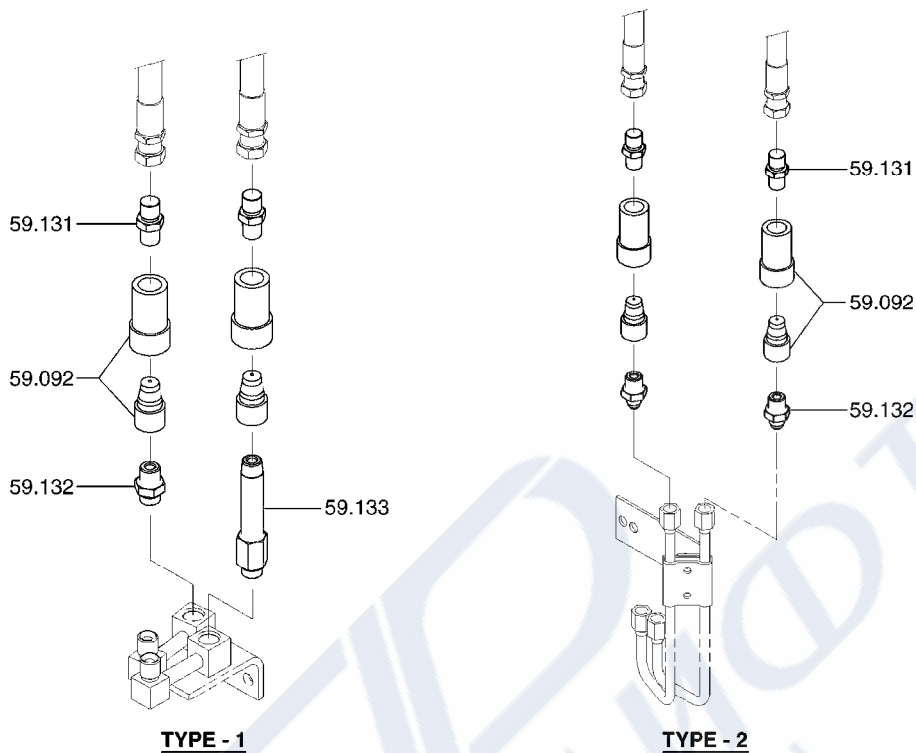 

QUICK DISCONNECT FOR DEVICE HOSE ADAPTATION

50-280


- |        |                                             |
|--------|---------------------------------------------|
| 59.092 | QUICK DISCONNECT, DEVICE HOSE<br>퀵디स्क넥트    |
| 59.131 | FITTING, DEVICE LINE QUICK DISCONNECT<br>피팅 |
| 59.132 | FITTING, DEVICE LINE QUICK DISCONNECT<br>피팅 |
| 59.133 | FITTING, DEVICE LINE QUICK DISCONNECT<br>피팅 |

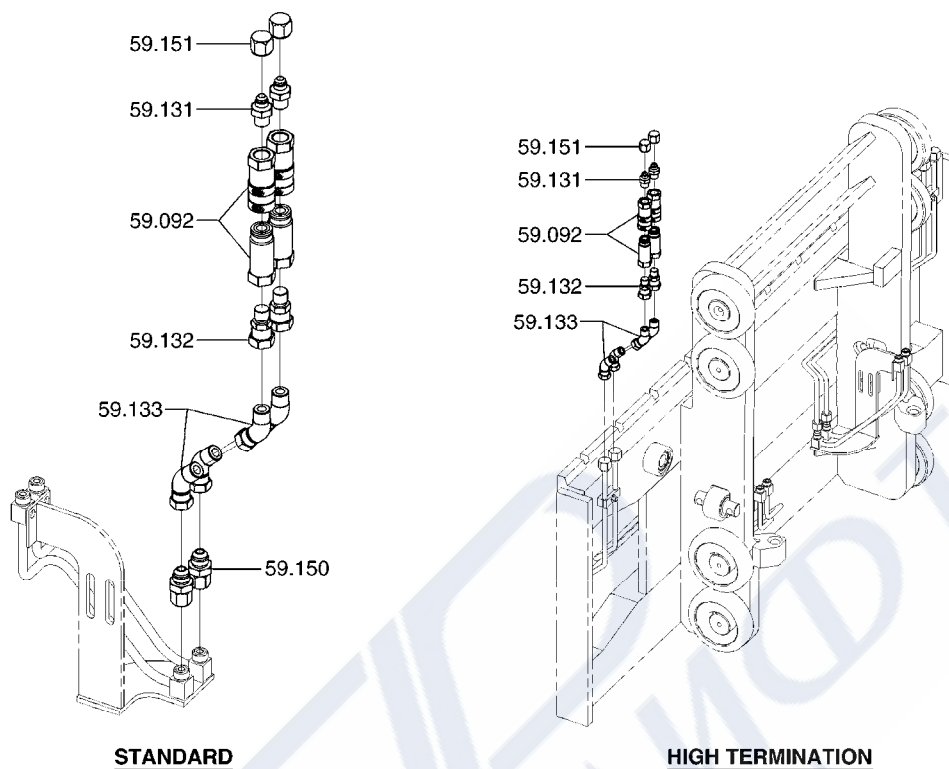 

QUICK DISCONNECT FOR DEVICE HOSE ADAPTATION

50-281

|        |                                                |
|--------|------------------------------------------------|
| 59.092 | QUICK DISCONNECT, DEVICE HOSE<br>퀵디स्क넥트       |
| 59.131 | FITTING, DEVICE LINE QUICK DISCONNECT<br>피팅    |
| 59.132 | FITTING, DEVICE LINE QUICK DISCONNECT<br>피팅    |
| 59.133 | FITTING, DEVICE LINE QUICK DISCONNECT<br>피팅    |
| 59.150 | FITTING, DEVICE LINE QUICK DISCONNECTOR<br>피팅  |
| 59.151 | CAP, DEVICE LINE QUICK DISCONNECT FITTING<br>캡 |

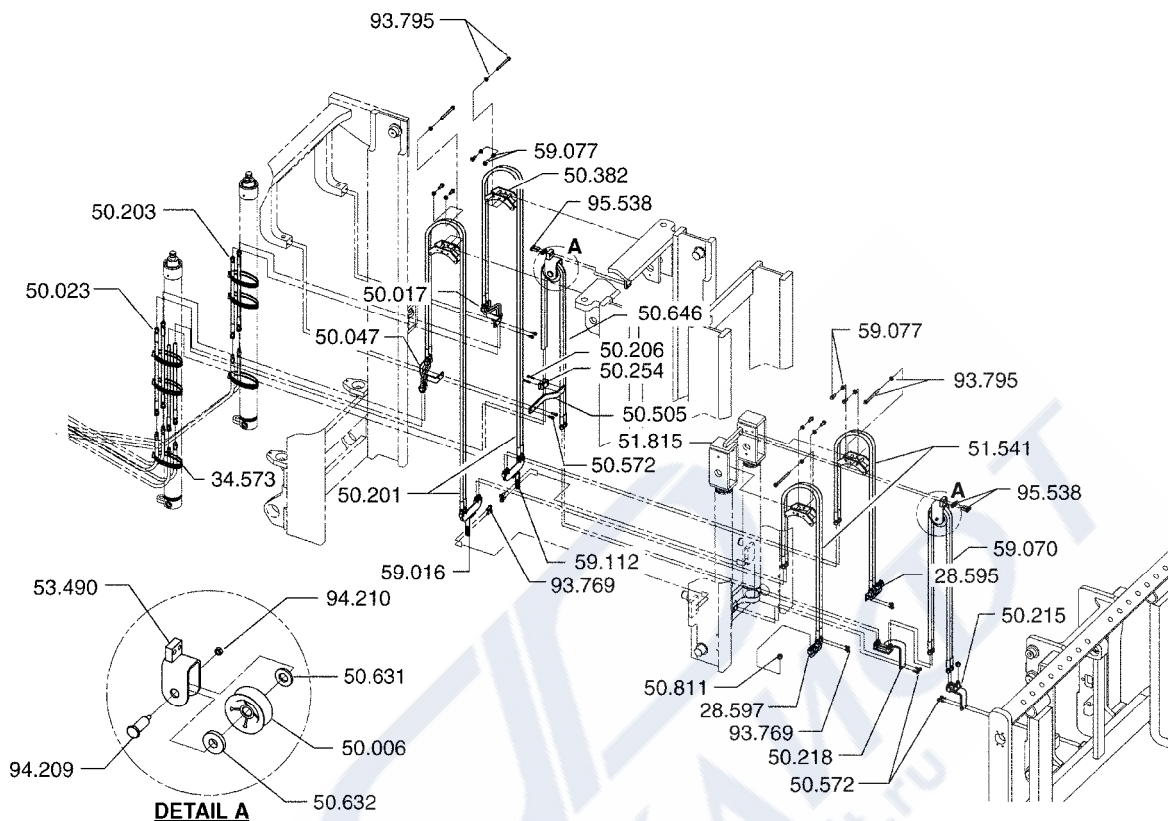 

HOSE ADAPTATION

50-294


|        |                                                     |        |                                              |
|--------|-----------------------------------------------------|--------|----------------------------------------------|
| 28.595 | TERMINAL BRACKET, UPRIGHT PIPING CARRIAGE<br>터미널브라켓 | 50.572 | FASTENER, DEVICE HOSE BRACKET<br>패스너         |
| 28.597 | TERMINAL BRACKET, UPRIGHT PIPING CARRIAGE<br>터미널브라켓 | 50.631 | SPACER, DEVICE HOSE SHEAVE<br>스페이서           |
| 34.573 | CLAMP, VENT LINE TO LIFT CYLINDER<br>클램프            | 50.632 | SPACER, DEVICE HOSE SHEAVE<br>스페이서           |
| 50.006 | SHEAVE, DEVICE HOSE UPPER<br>쉬브                     | 50.646 | LINE, DEVICE<br>라인                           |
| 50.017 | TERMINAL BRACKET, DEVICE HOSE<br>터미널브라켓             | 50.811 | NUT, DEVICE HOSE FITTING<br>너트               |
| 50.023 | LINE, DEVICE HYDRAULIC<br>라인                        | 51.541 | LINE, DEVICE HYDRAULIC<br>라인                 |
| 50.047 | TERMINAL BRACKET, DEVICE HOSE<br>터미널브라켓             | 51.815 | CARRIER, ROLL CLAMP ROTATING CYLINDER<br>캐리어 |
| 50.201 | LINE, DEVICE<br>라인                                  | 53.490 | GUARD, DEVICE HOSE<br>가드                     |
| 50.203 | LINE, DEVICE HYDRAULIC (AT CARRIAGE)<br>라인          | 59.016 | JUNCTION BLOCK, DEVICE HOSE<br>정크션 블록        |
| 50.206 | FASTENER, DEVICE RH LINE CLAMP<br>패스너               | 59.070 | LINE, DEVICE HOSE<br>라인                      |
| 50.215 | TERMINAL BLOCK, DEVICE HOSE<br>터미널블록                | 59.077 | FASTENER, DEVICE HOSE GUARD<br>패스너           |
| 50.218 | TERMINAL BLOCK, DEVICE LH HOSE<br>터미널블록             | 59.112 | JUNCTION BLOCK, DEVICE HOSE<br>정크션 블록        |
| 50.254 | CLAMP, DEVICE LINE<br>클램프                           | 93.769 | FASTENER, DEVICE LINE JUNCTION BLOCK<br>패스너  |
| 50.382 | ROLLER, DEVICE HOSE<br>롤러                           | 93.795 | FASTENER, DEVICE HOSE SHEAVE PIVOT<br>패스너    |
| 50.505 | PLATE, DEVICE HOSE REEL REWIND REAR<br>플레이트         | 94.209 | FASTENER, DEVICE HOSE RETAINER<br>패스너        |




---

|        |                                           |
|--------|-------------------------------------------|
| 94.210 | NUT, DEVICE HOSE RETAINER FASTENER<br>너트  |
| 95.538 | FASTENER, DEVICE HOSE REEL BRACKET<br>패스너 |

 
ФОРКЛИФТ  
www.forklift.ru

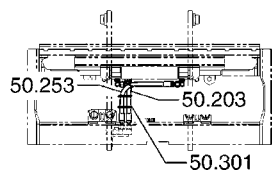

 
**MODEL: GTX162  
GEX162**  
**UPRIGHT: STANDARD**

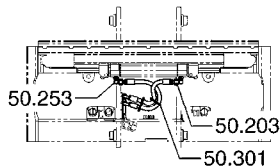

 
**MODEL: GTX162,GEX162  
EPX162,CMP158  
P152,TMX250,ESX250**  
**UPRIGHT: TRIPLE STAGE&HI-LO**

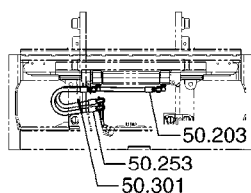

 
**MODEL: GTX162,GEX162  
EPX162,CMP158  
P152,TMX250,ESX250**  
**UPRIGHT: TRIPLE STAGE**

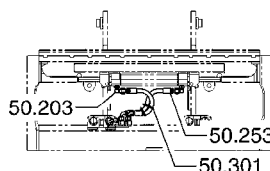

 
**MODEL: EPX162,CMP158  
P152,TMX250,ESX250**  
**UPRIGHT: STANDARD**

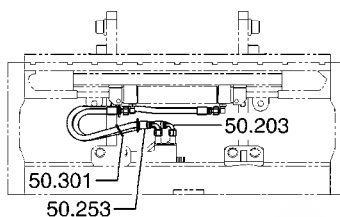

 **MODEL: EPX360,ECX360  
GEX230,P232  
GTS232,CQ230**  
**UPRIGHT: STANDARD**

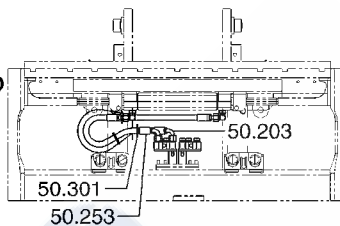

 **MODEL: EPX360,ECX360  
GEX230,P232  
GTS232,CQ230**  
**UPRIGHT: TRIPLE STAGE**

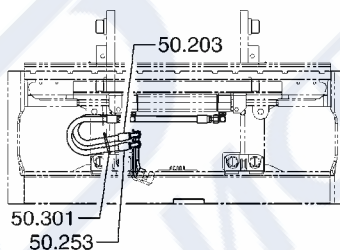


**MODEL: EPX360,ECX360  
GEX230,P232  
GTS232,CQ230**  
**UPRIGHT: HI-LO**

**ATTACHMENT HOSE ADAPTATION (CARRIAGE)**

 **50-791**

- |        |                                            |
|--------|--------------------------------------------|
| 50.203 | LINE, DEVICE HYDRAULIC (AT CARRIAGE)<br>라인 |
| 50.253 | LINE, DEVICE HYDRAULIC (AT CARRIAGE)<br>라인 |
| 50.301 | CLIP, DEVICE RH HOSE (AT CARRIAGE)<br>클립   |

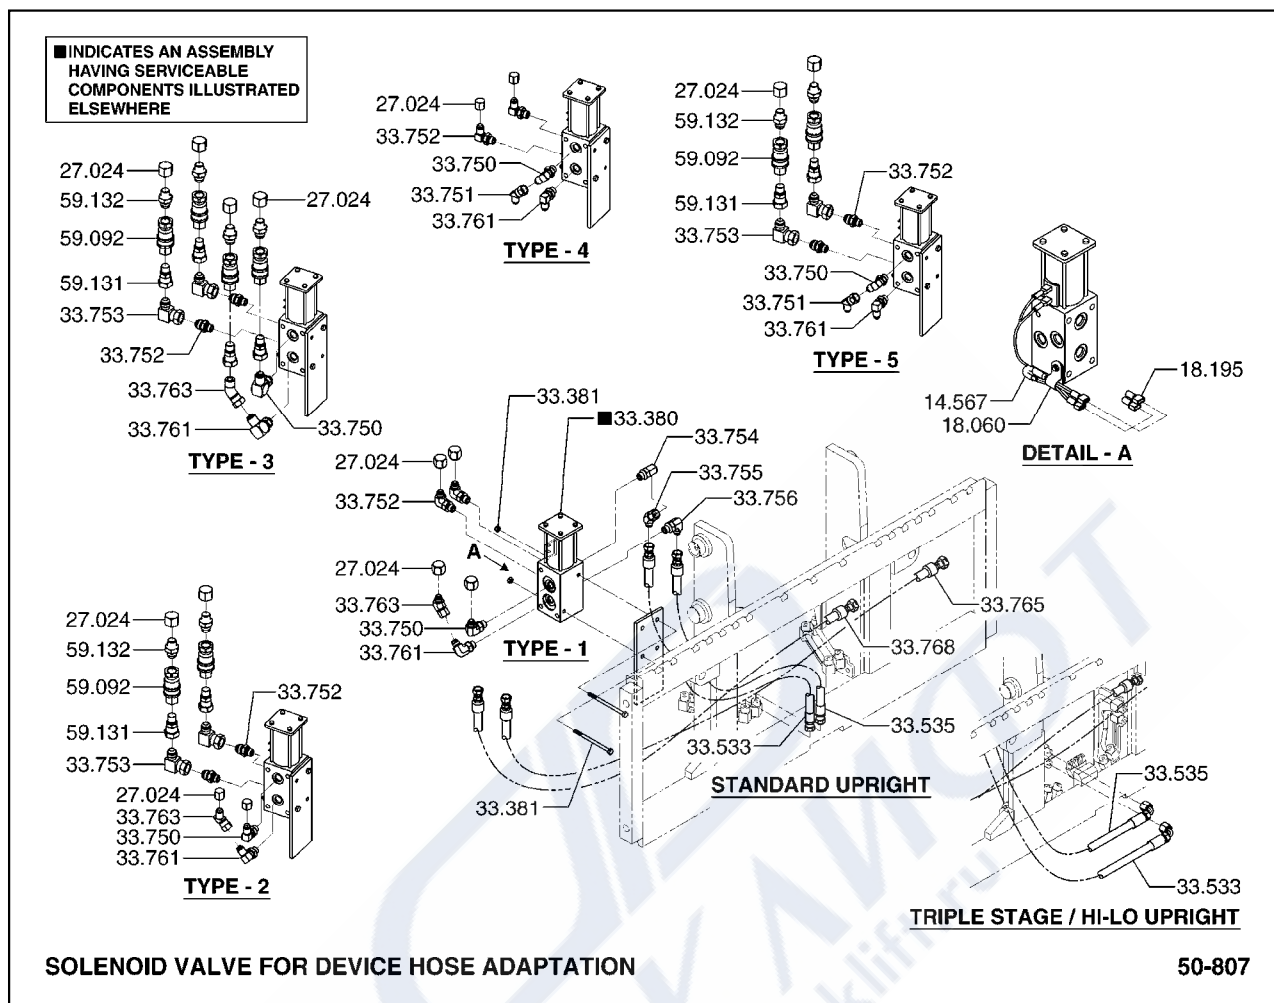


|        |                                                         |
|--------|---------------------------------------------------------|
| 14.567 | WIRE, DEVICE SELECTOR VALVE SWITCH FEED<br>와이어          |
| 18.060 | CLAMP, DEVICE SELECTOR VALVE CABLE<br>클램프               |
| 18.195 | TERMINAL, DEVICE SELECTOR VALVE SWITCH FEED WIRE<br>터미널 |
| 27.024 | PLUG, DEVICE SELECTOR VALVE OPTIONAL OUTLET PORT<br>플러그 |
| 33.380 | VALVE ASSEMBLY, DEVICE SELECTOR SOLENOID<br>밸브          |
| 33.381 | FASTENER, DEVICE SELECTOR VALVE<br>패스너                  |
| 33.533 | LINE, DEVICE SELECTOR VALVE "P" PORT HYDRAULIC<br>라인    |
| 33.535 | LINE, DEVICE SELECTOR VALVE "R" PORT HYDRAULIC<br>라인    |
| 33.750 | FITTING, DEVICE SELECTOR VALVE C1 PORT<br>피팅            |

---

|        |                                                     |
|--------|-----------------------------------------------------|
| 33.751 | FITTING, DEVICE SELECTOR VALVE C1 PORT<br>피팅        |
| 33.752 | FITTING, DEVICE SELECTOR VALVE C2 PORT<br>피팅        |
| 33.753 | FITTING, DEVICE SELECTOR VALVE C2 PORT<br>피팅        |
| 33.754 | FITTING, DEVICE SELECTOR VALVE "P" PORT<br>피팅       |
| 33.755 | FITTING, DEVICE SELECTOR VALVE "P" PORT<br>피팅       |
| 33.756 | FITTING, DEVICE SELECTOR VALVE "R" PORT<br>피팅       |
| 33.761 | FITTING, DEVICE SELECTOR VALVE C4 PORT<br>피팅        |
| 33.763 | FITTING, DEVICE SELECTOR VALVE C4 PORT<br>피팅        |
| 33.765 | LINE, DEVICE SELECTOR VALVE C4 PORT HYDRAULIC<br>라인 |
| 33.768 | LINE, DEVICE SELECTOR VALVE C1 PORT HYDRAULIC<br>라인 |
| 59.092 | QUICK DISCONNECT, DEVICE HOSE<br>퀵디स्क넥트            |
| 59.131 | FITTING, DEVICE LINE QUICK DISCONNECT<br>피팅         |
| 59.132 | FITTING, DEVICE LINE QUICK DISCONNECT<br>피팅         |



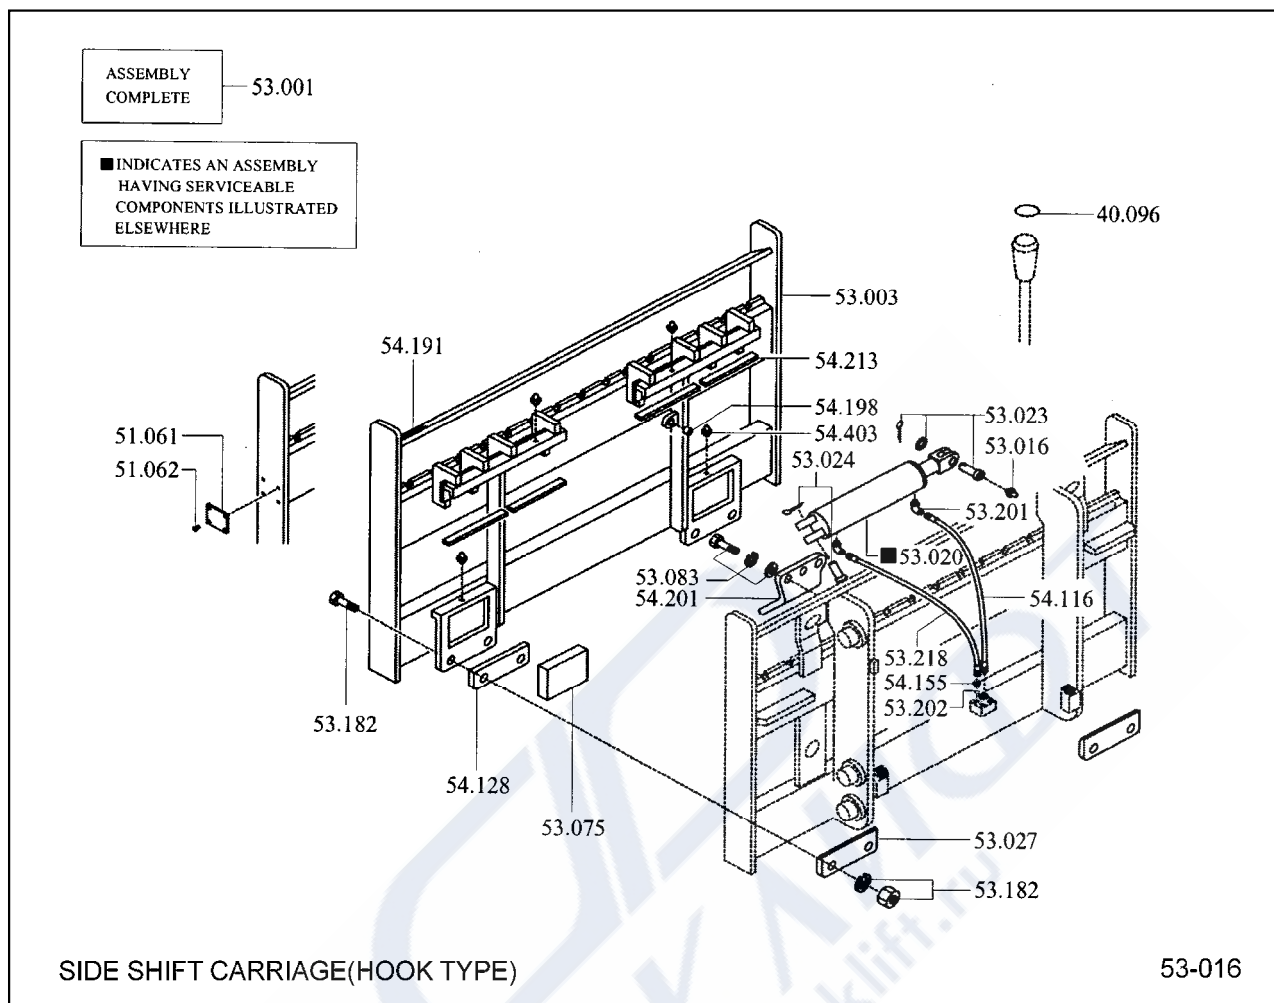 


|        |                                                          |
|--------|----------------------------------------------------------|
| 40.096 | DECAL, SIDE SHIFTER INSTRUCTION<br>데칼                    |
| 51.061 | PLATE, DEVICE CAPACITY & SERIAL NUMBER<br>플레이트           |
| 51.062 | FASTENER, DEVICE CAPACITY & SERIAL NUMBER PLATE<br>패스너   |
| 53.001 | ATTACHMENT, SIDE SHIFTER COMPLETE<br>어태치먼트               |
| 53.003 | FRAME, SIDE SHIFTER MOVABLE<br>프레임                       |
| 53.016 | FITTING-LUB, SIDE SHIFTER MOVABLE FRAME SUPPORT SH<br>피팅 |
| 53.020 | CYLINDER ASSEMBLY, SIDE SHIFTER<br>실린더                   |
| 53.023 | ANCHOR, SIDE SHIFTER CYLINDER ROD END<br>앵커              |
| 53.024 | ANCHOR, SIDE SHIFTER CYLINDER BASE<br>앵커                 |

---

|        |                                                        |
|--------|--------------------------------------------------------|
| 53.027 | SPACER, SIDE SHIFTER MOVABLE FRAME LOWER GUIDE<br>스페이서 |
| 53.075 | BEARING, SIDE SHIFTER (LOWER)<br>베어링                   |
| 53.083 | FASTENER, SIDE SHIFTER CYLINDER ANCHOR<br>패스너          |
| 53.182 | FASTENER, SIDE SHIFTER HANGER<br>패스너                   |
| 53.201 | FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT<br>피팅       |
| 53.202 | SEAL, SIDE SHIFTER CYLINDER ANCHOR PORT FITTING<br>씰   |
| 53.218 | LINE, SIDE SHIFTER CYLINDER ROD PORT<br>라인             |
| 54.116 | LINE, SIDE SHIFT CYLINDER ROD PORT<br>라인               |
| 54.128 | SPACER, SIDE SHIFTER MOVEABLE FRAME BEARING<br>스페이서    |
| 54.155 | FITTING, SIDE SHIFTER CYLINDER ROD PORT LINE<br>피팅     |
| 54.191 | PLATE, SIDE SHIFT NAME<br>플레이트                         |
| 54.198 | BEARING, SIDE SHIFTER BASE PLATE ARM<br>베어링            |
| 54.201 | PLATE, SIDE SHIFT CYLINDER RAM THRUST<br>플레이트          |
| 54.213 | BEARING, SIDE SHIFTER (UPPER)<br>베어링                   |
| 54.403 | FITTING-LUB, SIDE SHIFTER BASE PLATE ARM<br>피팅         |

 ---

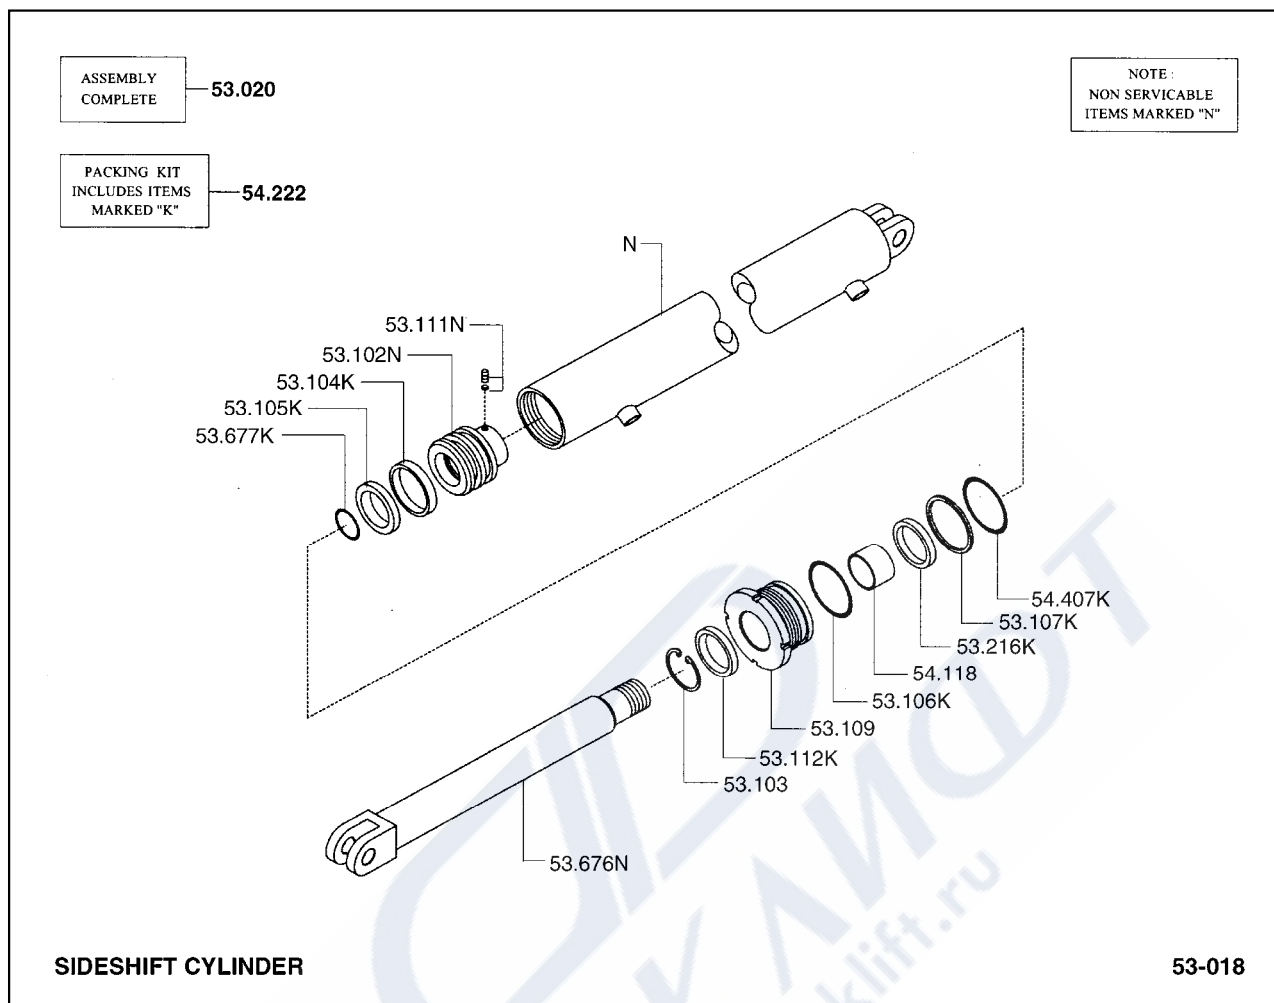


|        |                                                         |
|--------|---------------------------------------------------------|
| 53.020 | CYLINDER ASSEMBLY, SIDE SHIFTER<br>실린더                  |
| 53.102 | PISTON & ROD ASSEMBLY, SIDE SHIFTER CYLINDER<br>피스톤& 로드 |
| 53.103 | RING, SIDE SHIFTER CYLINDER PISTON WEAR<br>링            |
| 53.104 | RING, SIDE SHIFTER CYL PISTON PACKING BACK-UP<br>링      |
| 53.105 | PACKING, SIDE SHIFTER CYLINDER PISTON<br>패킹             |
| 53.106 | SEAL, SIDE SHIFTER CYLINDER GLAND<br>셀                  |
| 53.107 | RING, SIDE SHIFTER CYL GLAND SEAL BACK-UP<br>링          |
| 53.109 | GLAND, SIDE SHIFTER CYLINDER<br>그랜드                     |
| 53.111 | LOCK, SIDE SHIFTER CYLINDER GLAND RETAINER<br>로크        |

---

|        |                                                   |
|--------|---------------------------------------------------|
| 53.112 | WIPER, SIDE SHIFTER CYLINDER PISTON ROD<br>와이퍼    |
| 53.216 | SEAL, SIDE SHIFTER CYLINDER ROD PORT FITTING<br>씰 |
| 53.676 | ROD, SIDE SHIFTER CYLINDER PISTON<br>로드           |
| 53.677 | SEAL, SIDE SHIFTER CYLINDER PISTON<br>씰           |
| 54.118 | BEARING, SIDE SHIFTER CYLINDER ROD END<br>베어링     |
| 54.222 | PACKING KIT, SIDE SHIFTER CYLINDER<br>패킹키트        |
| 54.407 | SEAL, SIDE SHIFTER CYLINDER PORT ROD<br>씰         |



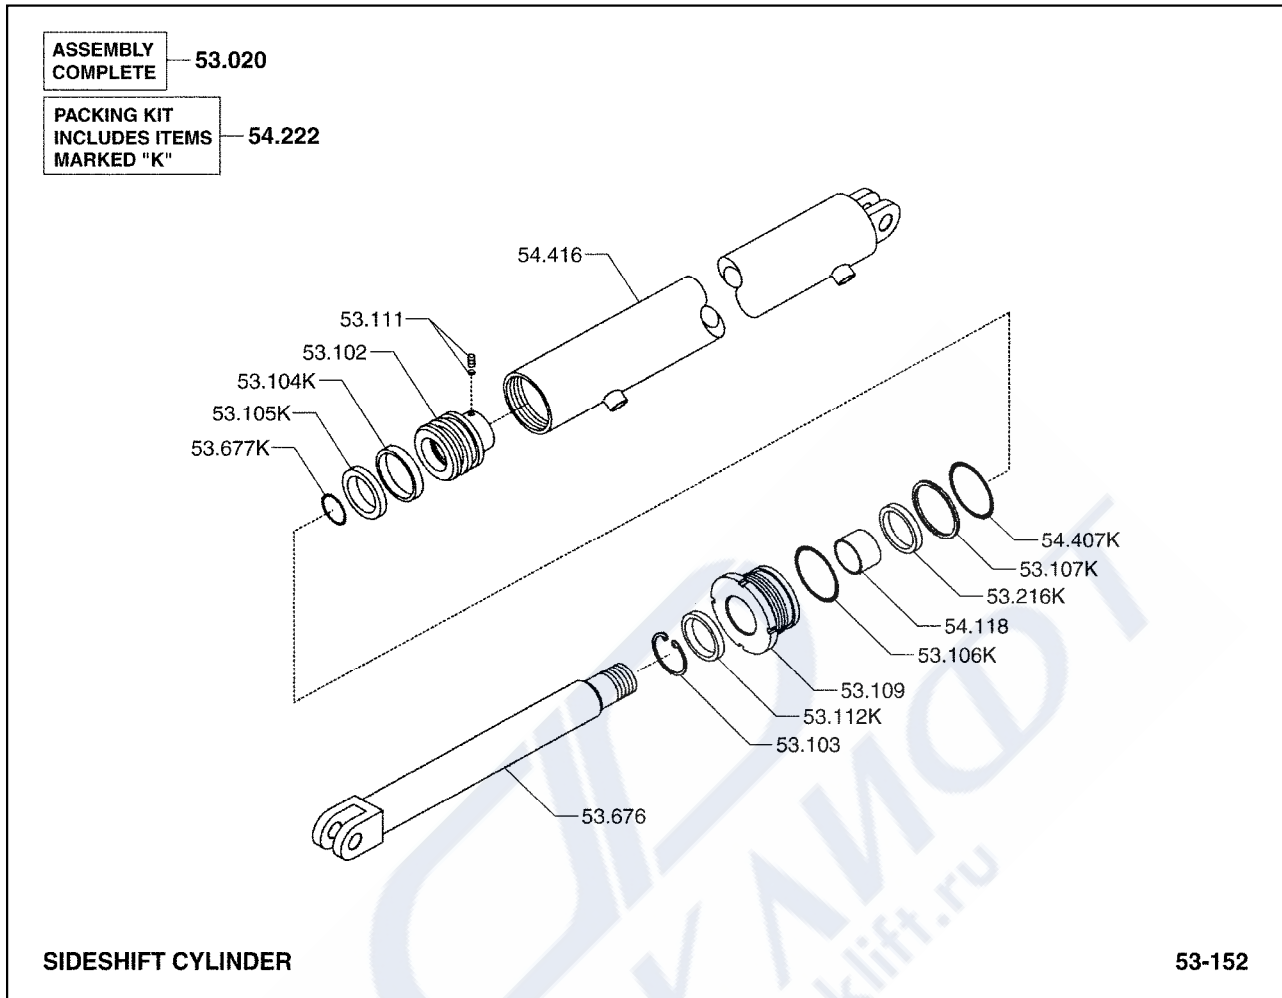 


|        |                                                         |
|--------|---------------------------------------------------------|
| 53.020 | CYLINDER ASSEMBLY, SIDE SHIFTER<br>실린더                  |
| 53.102 | PISTON & ROD ASSEMBLY, SIDE SHIFTER CYLINDER<br>피스톤& 로드 |
| 53.103 | RING, SIDE SHIFTER CYLINDER PISTON WEAR<br>링            |
| 53.104 | RING, SIDE SHIFTER CYL PISTON PACKING BACK-UP<br>링      |
| 53.105 | PACKING, SIDE SHIFT CYLINDER PISTON<br>패킹               |
| 53.106 | SEAL, SIDE SHIFTER CYLINDER GLAND<br>씼                  |
| 53.107 | RING, SIDE SHIFT CYL GLAND SEAL BACK-UP<br>링            |
| 53.109 | GLAND, SIDE SHIFTER CYLINDER<br>그랜드                     |
| 53.111 | LOCK, SIDE SHIFTER CYLINDER GLAND RETAINER<br>로크        |

---

|        |                                                   |
|--------|---------------------------------------------------|
| 53.112 | WIPER, SIDE SHIFTER CYLINDER PISTON ROD<br>와이퍼    |
| 53.216 | SEAL, SIDE SHIFTER CYLINDER ROD PORT FITTING<br>씼 |
| 53.676 | ROD, SIDE SHIFTER CYLINDER PISTON<br>로드           |
| 53.677 | SEAL, SIDE SHIFTER CYLINDER PISTON<br>씼           |
| 54.118 | BEARING, SIDE SHIFTER CYLINDER ROD END<br>베어링     |
| 54.222 | PACKING KIT, SIDE SHIFTER CYLINDER<br>패킹키트        |
| 54.407 | SEAL, SIDE SHIFTER CYLINDER PORT ROD<br>씼         |
| 54.416 | BARREL, SIDE SHIFT CYLINDER<br>배럴                 |

ASSEMBLY COMPLETE — 34.300

 ■ INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

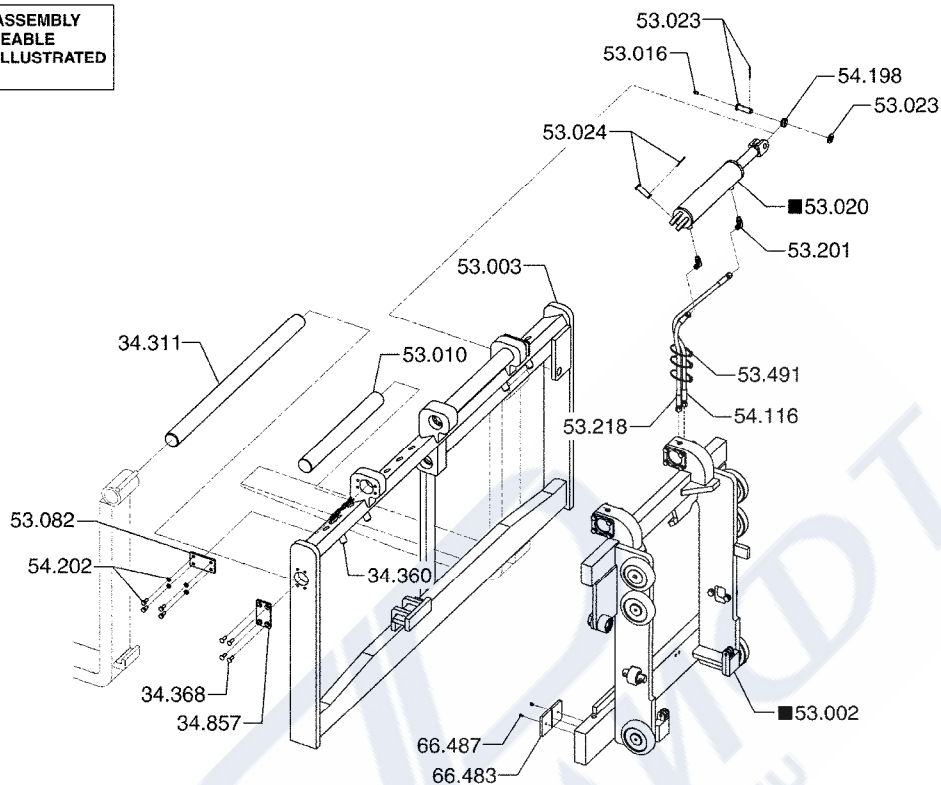

INTEGRAL SIDE SHIFT CARRIAGE


53-180

|        |                                                          |
|--------|----------------------------------------------------------|
| 34.300 | ASSEMBLY, FORK BARS & CARRIAGE<br>캐리지                    |
| 34.311 | ASSEMBLY, FORK HANGER<br>포크행거                            |
| 34.360 | PIN, FORK LOCATING<br>핀                                  |
| 34.368 | FASTENER, FORK LOCATING BAR<br>패스너                       |
| 34.857 | COVER, CARRIAGE STABILIZING GEAR (RH)<br>커버              |
| 53.002 | BASE, SIDE SHIFTER<br>베이스                                |
| 53.003 | FRAME, SIDE SHIFTER MOVABLE<br>프레임                       |
| 53.010 | SHAFT, SIDESHIFTER MOVABLE FRAME SUPPORT<br>샤프트          |
| 53.016 | FITTING-LUB, SIDE SHIFTER MOVABLE FRAME SUPPORT SH<br>피팅 |

---

|        |                                                       |
|--------|-------------------------------------------------------|
| 53.020 | CYLINDER ASSEMBLY, SIDE SHIFTER<br>실린더                |
| 53.023 | ANCHOR, SIDE SHIFTER CYLINDER ROD END<br>앵커           |
| 53.024 | ANCHOR, SIDE SHIFTER CYLINDER BASE<br>앵커              |
| 53.082 | SLIDE PLATE, SIDE SHIFTER<br>슬라이드판                    |
| 53.201 | FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT<br>피팅      |
| 53.218 | LINE, SIDE SHIFTER CYLINDER ROD PORT<br>라인            |
| 53.491 | CLAMP, DEVICE HOSE TO DEVICE<br>클램프                   |
| 54.116 | LINE, SIDE SHIFT CYLINDER ROD PORT<br>라인              |
| 54.198 | BEARING, SIDE SHIFTER BASE PLATE ARM<br>베어링           |
| 54.202 | FASTENER, SIDE SHIFT CYLINDER RAM THRUST PLATE<br>패스너 |
| 66.483 | SLIDER-SIDE<br>슬라이더                                   |
| 66.487 | FASTENER, SLIDER<br>패스너                               |




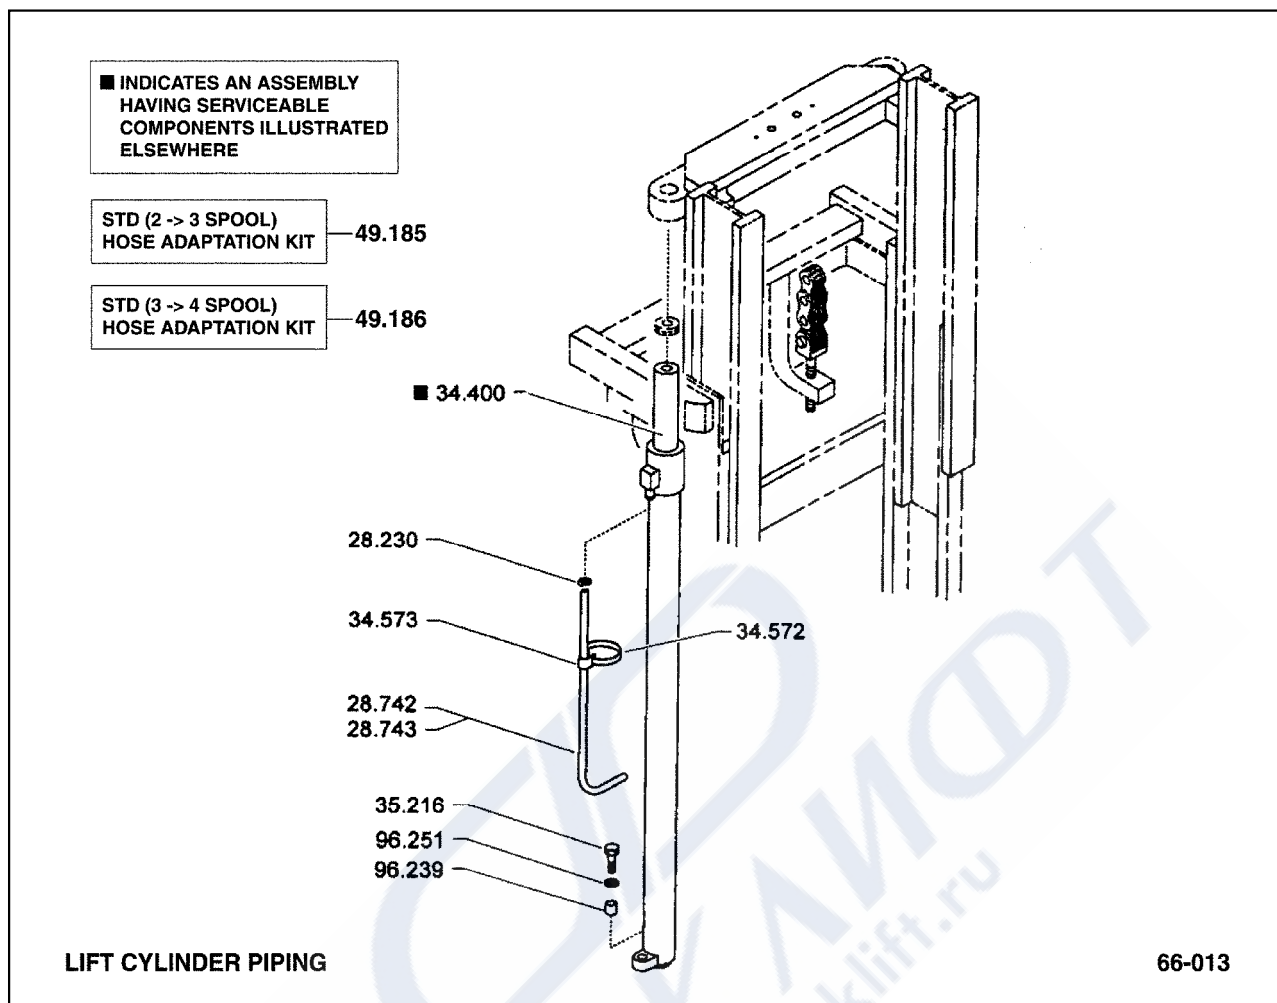 


|        |                                                       |
|--------|-------------------------------------------------------|
| 28.230 | CLAMP, LIFT CYLINDER VENT LINE<br>클램프                 |
| 28.742 | LINE, LIFT CYLINDER LEFT HAND<br>라인                   |
| 28.743 | LINE, LIFT CYLINDER RIGHT HAND<br>라인                  |
| 34.400 | CYLINDER ASSEMBLY, LIFT<br>실린더                        |
| 34.572 | STRAP, VENT LINE TO LIFT CYLINDER<br>스트랩              |
| 34.573 | CLAMP, VENT LINE TO LIFT CYLINDER<br>클램프              |
| 35.216 | FASTENER, LIFT CYLINDER (ANCHOR END)<br>패스너           |
| 49.185 | HOSE ADAPTATION KIT, STD 3 SPOOL CONVERSION<br>연결호스키트 |
| 49.186 | HOSE ADAPTATION KIT, STD 4 SPOOL CONVERSION<br>연결호스키트 |

|        |                                        |
|--------|----------------------------------------|
| 96.239 | SPACER, LIFT CYLINDER FASTENER<br>스페이서 |
| 96.251 | WASHER, LIFT CYLINDER FASTENER<br>와셔   |



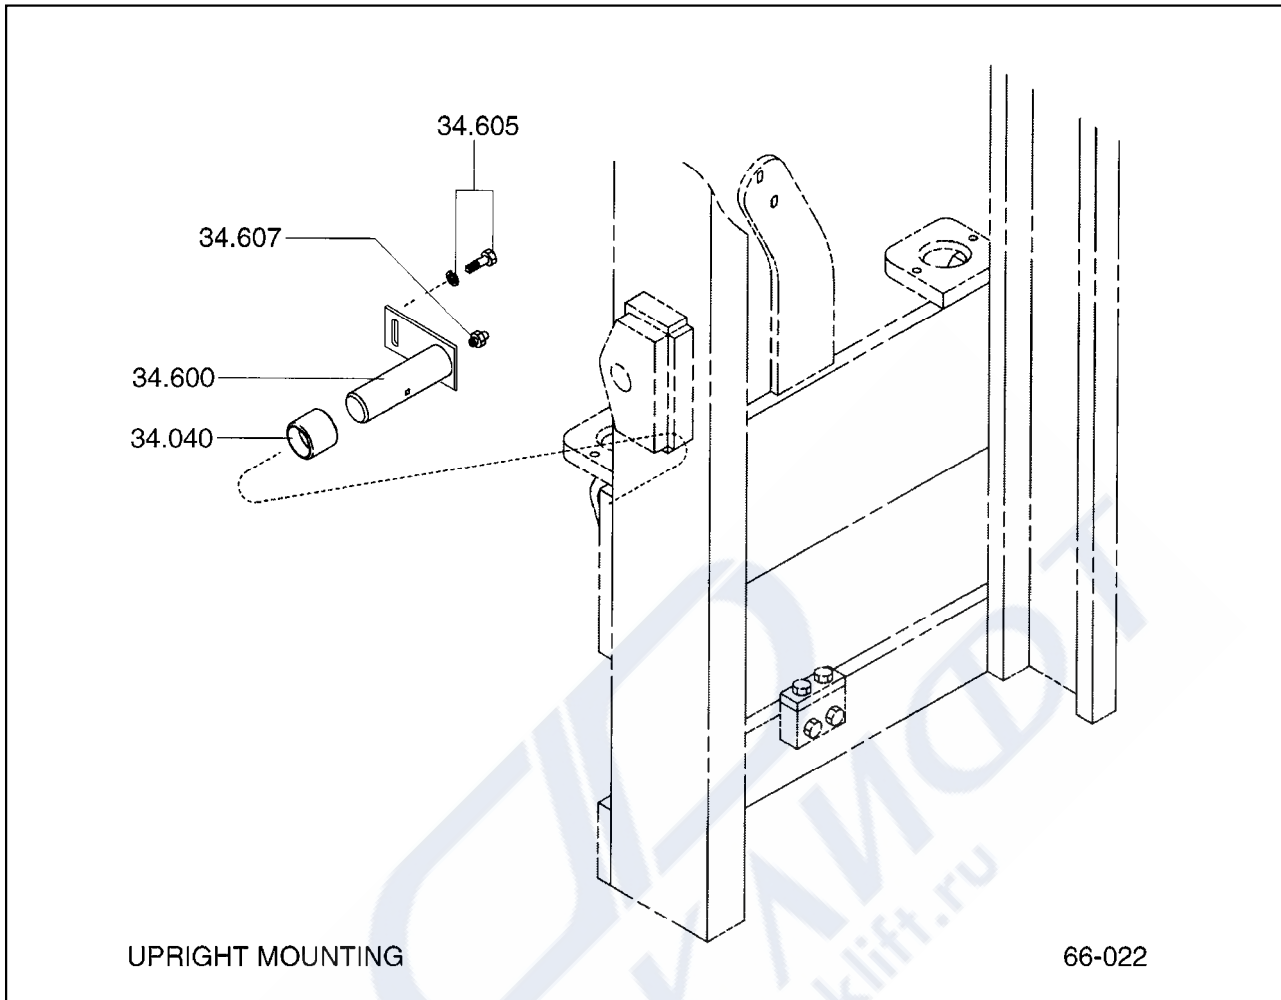 


- |        |                                                 |
|--------|-------------------------------------------------|
| 34.040 | BUSHING, UPRIGHT SUPPORT PIN<br>부싱              |
| 34.600 | SUPPORT, UPRIGHT<br>서포트                         |
| 34.605 | FASTENER, UPRIGHT SUPPORT PIN LOCK PLATE<br>패스너 |
| 34.607 | FITTING-LUB, UPRIGHT SUPPORT<br>피팅              |

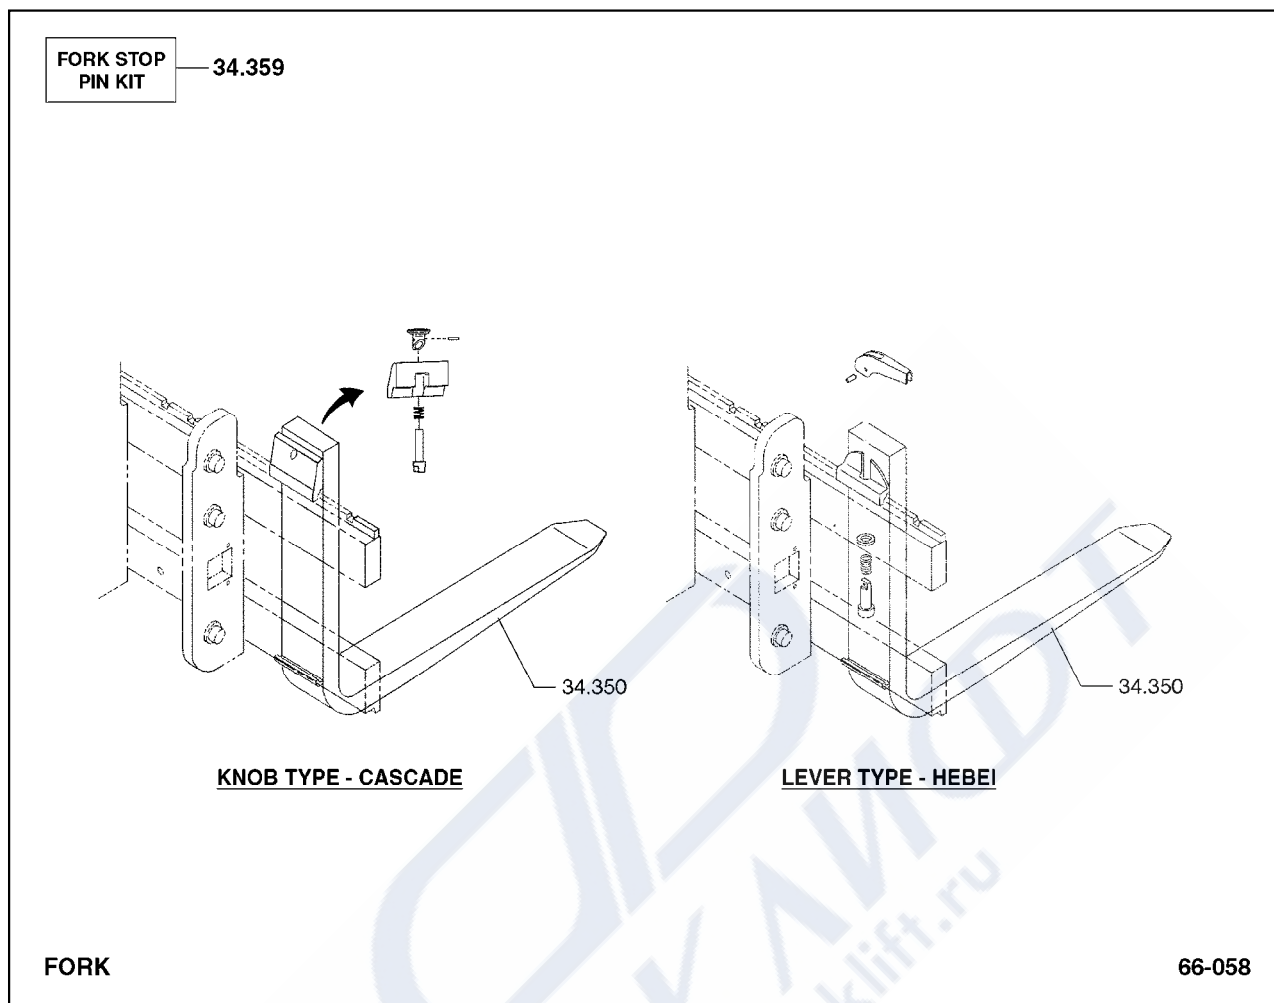 


 - 34.350 FORK ASSEMBLY  
포크
- 34.359 KIT, FORK STOP PIN (CAPTIVE)  
키트




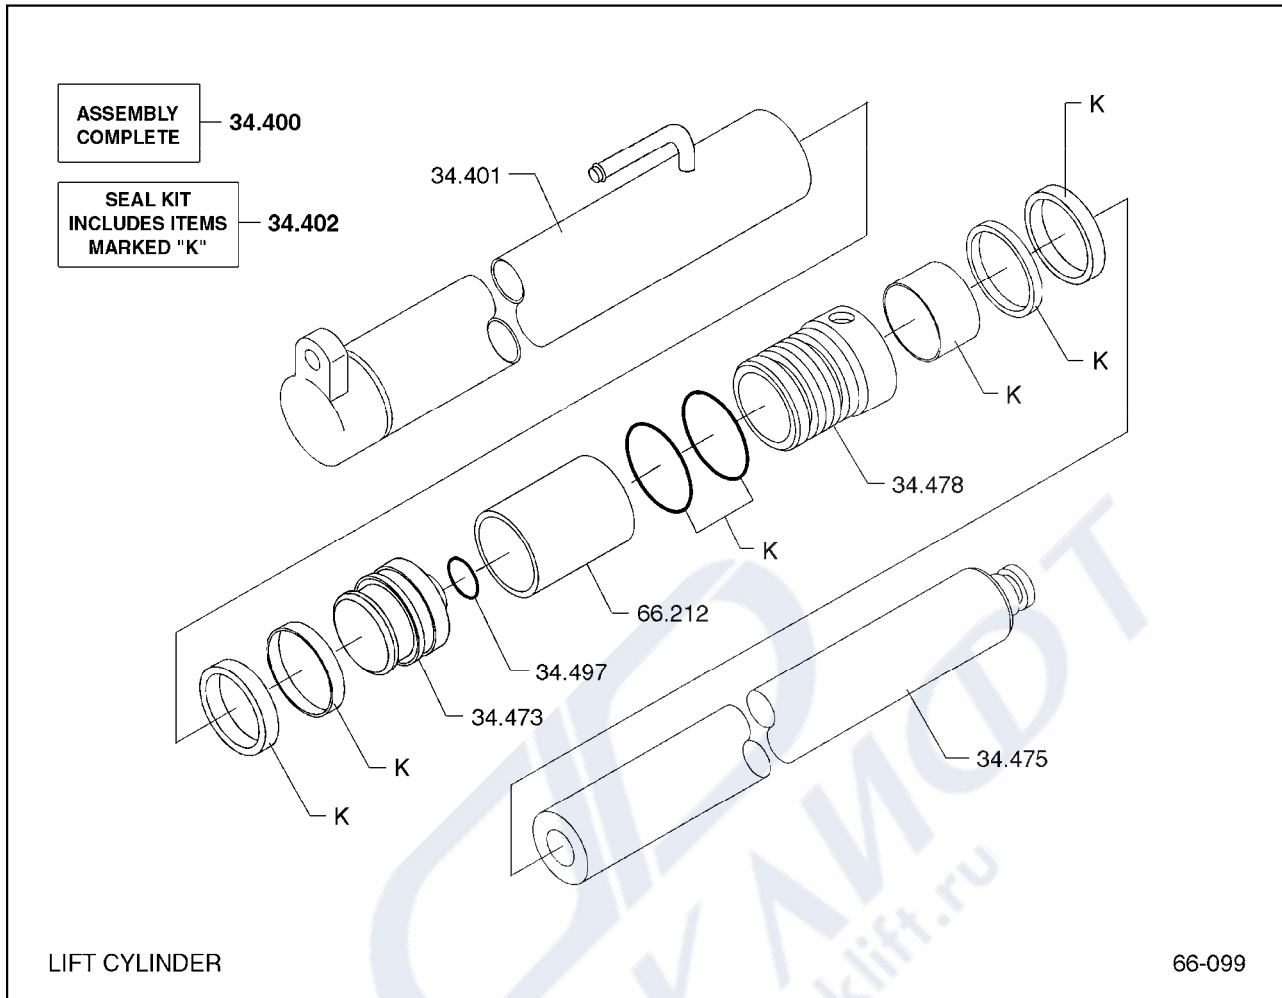


|        |                                              |
|--------|----------------------------------------------|
| 34.400 | CYLINDER ASSEMBLY, LIFT<br>실린더               |
| 34.401 | BARREL, LIFT CYLINDER<br>배럴                  |
| 34.402 | SEAL & PACKING KIT, LIFT CYLINDER<br>씰& 팩킹키트 |
| 34.473 | PISTON, LIFT CYLINDER<br>피스톤                 |
| 34.475 | ROD, LIFT CYLINDER<br>로드                     |
| 34.478 | GLAND, LIFT CYLINDER<br>그랜드                  |
| 34.497 | SEAL, LIFT CYLINDER GLAND<br>씰               |
| 66.212 | SPACER, LIFT CYLINDER FASTENER<br>스페이서       |

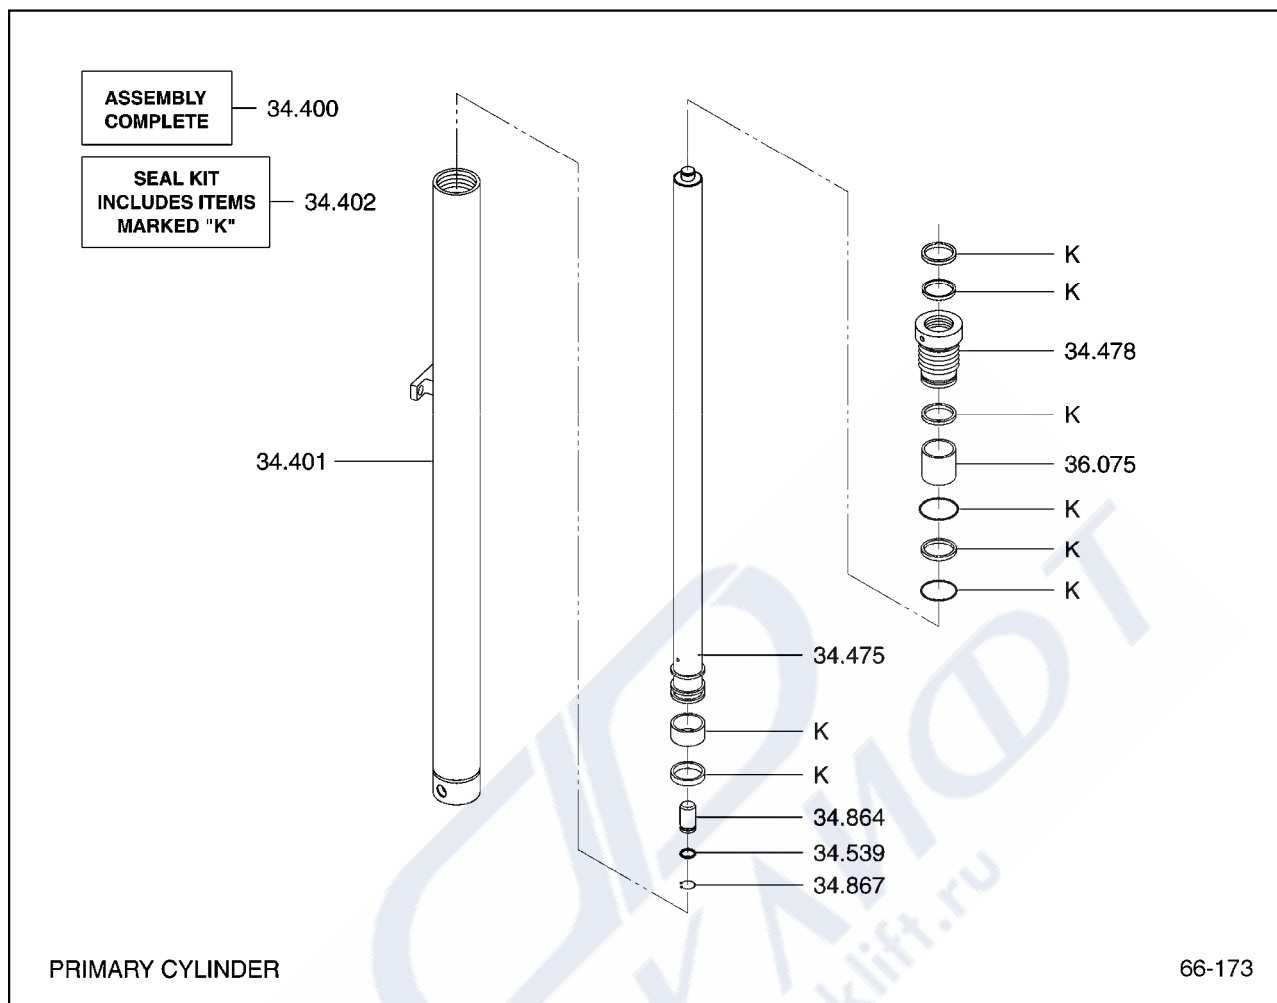 

|        |                                               |
|--------|-----------------------------------------------|
| 34.400 | CYLINDER ASSEMBLY, LIFT<br>실린더                |
| 34.401 | BARREL, LIFT CYLINDER<br>배럴                   |
| 34.402 | SEAL & PACKING KIT, LIFT CYLINDER<br>씰& 팩킹키트  |
| 34.475 | ROD, LIFT CYLINDER<br>로드                      |
| 34.478 | GLAND, LIFT CYLINDER<br>그랜드                   |
| 34.539 | RETAINER, LIFT CYLINDER GLAND BUSHING<br>리테이너 |
| 34.864 | CHECK VALVE, LIFT CYLINDER<br>체크밸브            |
| 34.867 | RETAINER, LIFT CYLINDER CHECK VALVE<br>리테이너   |
| 36.075 | BUSHING, CYLINDER PIVOT<br>부싱                 |

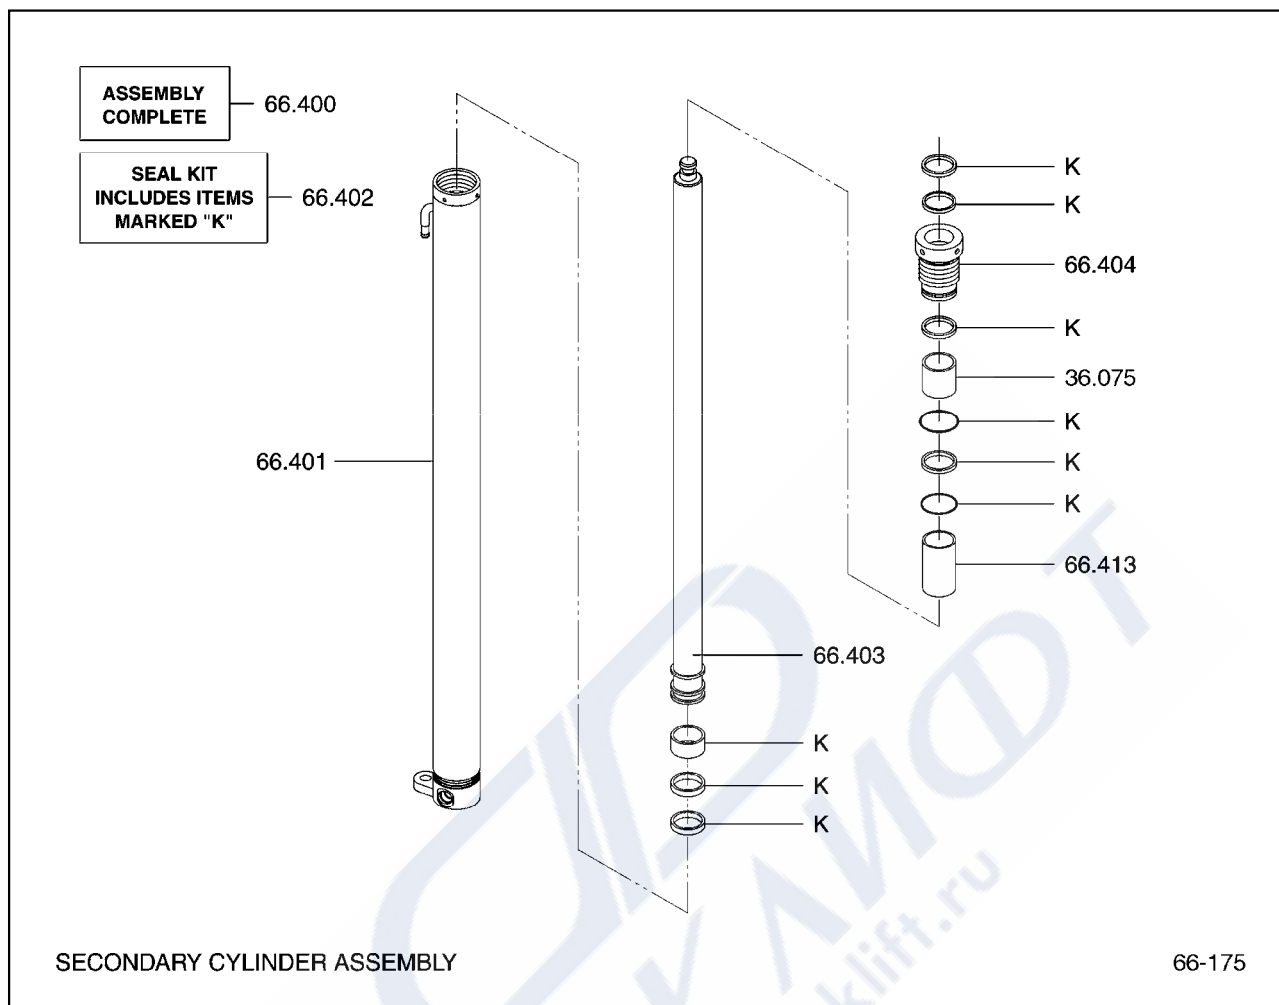 


|        |                                                |
|--------|------------------------------------------------|
| 36.075 | BUSHING, CYLINDER PIVOT<br>부싱                  |
| 66.400 | CYLINDER ASSEMBLY, FINAL LIFT<br>실린더           |
| 66.401 | BARREL, FINAL LIFT CYLINDER<br>배럴              |
| 66.402 | PACKING KIT, FINAL LIFT CYLINDER<br>패킹키트       |
| 66.403 | PISTON ROD, FINAL LIFT CYLINDER<br>피스톤로드       |
| 66.404 | CAP, FINAL LIFT CYLINDER GLAND<br>캡            |
| 66.413 | SPACER, FINAL LIFT CYLINDER PISTON ROD<br>스페이서 |

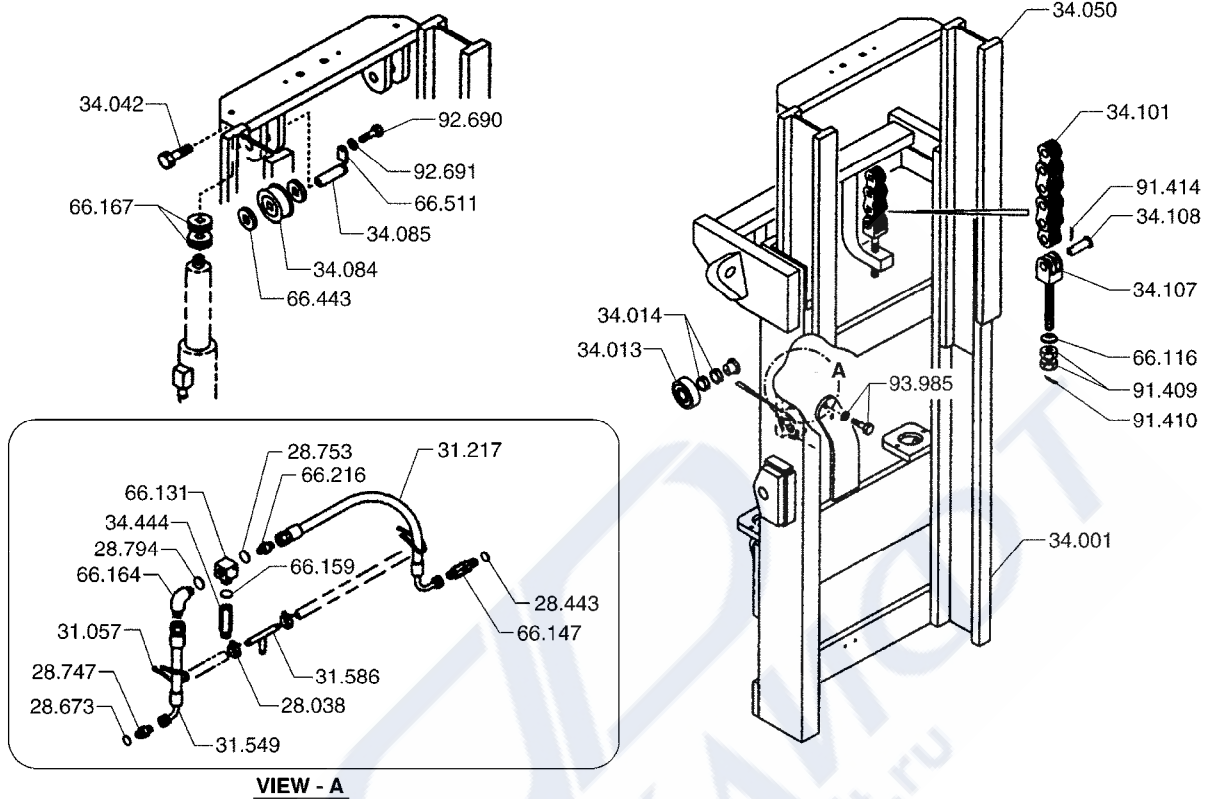 **ASSEMBLY  
COMPLETE** — 34.000

**STANDARD UPRIGHT**
**66-237**

|        |                                                   |        |                                                        |
|--------|---------------------------------------------------|--------|--------------------------------------------------------|
| 28.038 | CLAMP, LIFT CYLINDER VENT LINE<br>클램프             | 34.050 | INNER RAIL WELDED ASSEMBLY, UPRIGHT<br>인너레일            |
| 28.443 | SEAL, LIFT CYLINDER LOWERING PORT FITTING<br>씰    | 34.084 | SHEAVE, LIFT CHAIN<br>쉬브                               |
| 28.673 | SEAL, LIFT CYLINDER INLET PORT<br>씰               | 34.085 | SHAFT, LIFT CHAIN UPPER SHEAVE<br>샤프트                  |
| 28.747 | FITTING, LIFT CYLINDER LINE<br>피팅                 | 34.101 | CHAIN, LIFT<br>체인                                      |
| 28.753 | SEAL, LIFT CYLINDER VENT PORT<br>씰                | 34.107 | ANCHOR, LIFT CHAIN<br>앵커                               |
| 28.794 | SEAL, LIFT CYLINDER LINE JUNCTION BLOCK PORT<br>씰 | 34.108 | FASTENER, LIFT CHAIN TO ANCHOR<br>패스너                  |
| 31.057 | STRAP, VENT LINE TO CYLINDER<br>스트랩               | 34.444 | VALVE ASSEMBLY, LIFT CYLINDER FLOW CONTROL<br>밸브       |
| 31.217 | LINE, LIFT CYLINDER INLET FITTING<br>라인           | 66.116 | SPACER, LIFT CHAIN ANCHOR<br>스페이서                      |
| 31.549 | LINE, LIFT CYL FLOW CONTROL VALVE INLET<br>라인     | 66.131 | MANIFOLD, LIFT CYLINDER FLOW CONTROL VALVE<br>매니폴드     |
| 31.586 | FITTING, LIFT CYLINDER VENT LINE<br>피팅            | 66.147 | VALVE, FINAL LIFT CYLINDER PORT FLOW CONTROL<br>밸브     |
| 34.000 | UPRIGHT & LIFT CYL ASSEMBLY<br>마스트& 실린더           | 66.159 | SEAL, LIFT CYLINDER FLOW CONTROL VALVE INLET POR<br>씰  |
| 34.001 | OUTER RAIL WELDER ASSEMBLY, UPRIGHT<br>아웃더레일      | 66.164 | FITTING, LIFT CYLINDER FLOW CONTROL VALVE MANIFO<br>피팅 |
| 34.013 | ROLLER, UPRIGHT<br>롤러                             | 66.167 | SHIM, LIFT CYLINDER UPPER<br>심                         |
| 34.014 | SHIM, UPRIGHT ROLLER<br>심                         | 66.216 | FITTING, FLOW CONTROL VALVE MANIFOLD PORT<br>피팅        |
| 34.042 | FASTENER, LIFT CYLINDER (UPPER)<br>패스너            | 66.443 | WASHER, CHAIN SHEAVE<br>와셔                             |

 ---

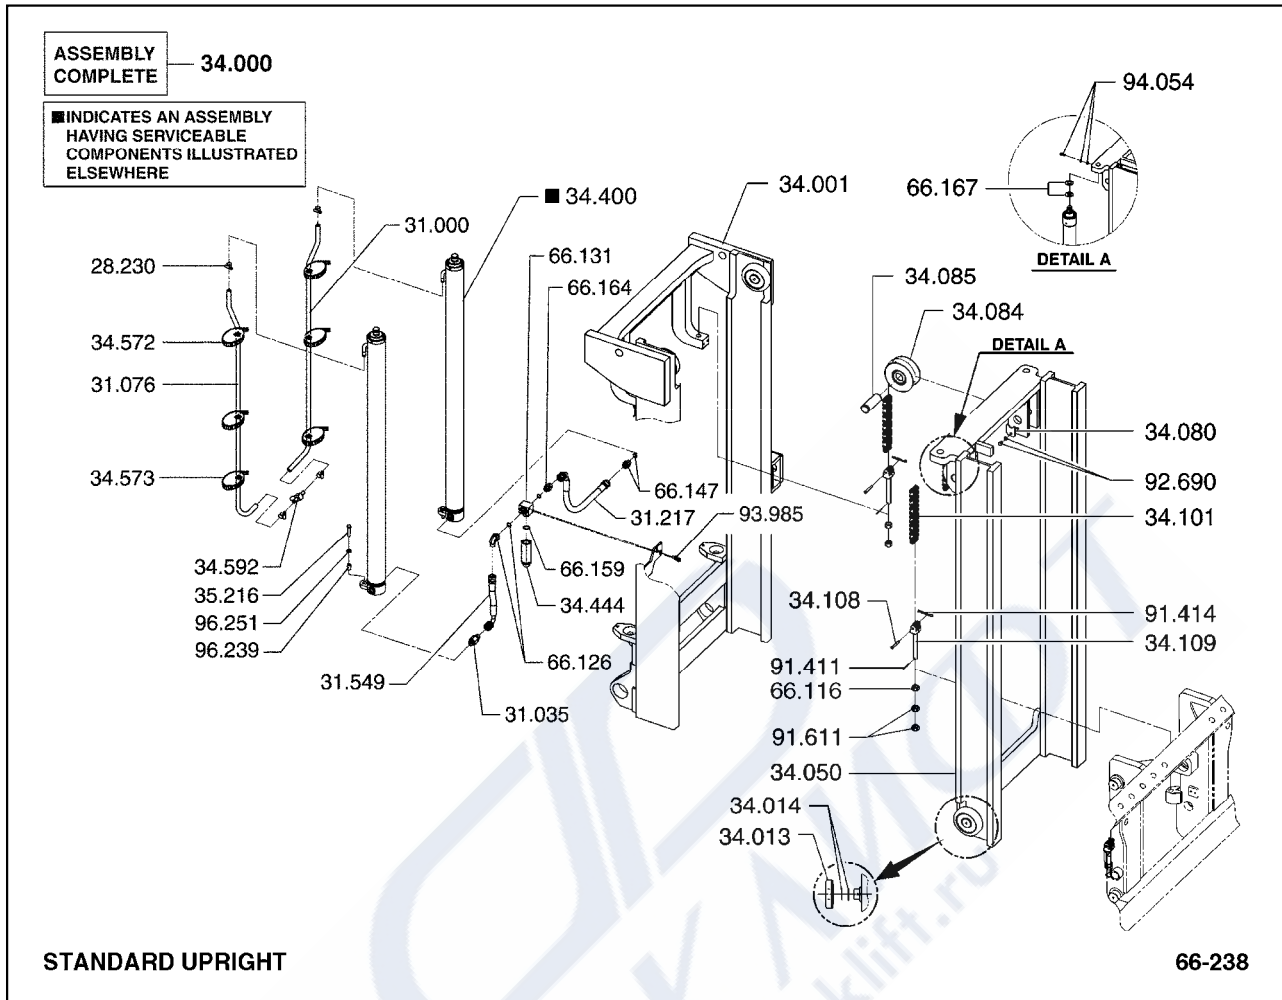
|        |                                                          |
|--------|----------------------------------------------------------|
| 66.511 | PLATE, LIFT CYLINDER CHAIN SHEAVE CARRIER<br>플레이트        |
| 91.409 | NUT, LIFT CHAIN FASTENER (CYLINDER END)<br>너트            |
| 91.410 | RETAINER, LIFT CHAIN FASTENER (CYLINDER END)<br>리테이너     |
| 91.414 | RETAINER, LIFT CHAIN TO ANCHOR FASTENER<br>리테이너          |
| 92.690 | FASTENER, LIFT CHAIN SHEAVE SHAFT RETAINER<br>패스너        |
| 92.691 | LOCKWASHER, LIFT CHAIN SHEAVE SHAFT RETAINER FAS<br>로크와셔 |
| 93.985 | FASTENER, LIFT CYLINDER FLOW CONTROL VALVE MANIF<br>패스너  |



|        |                                               |        |                                                        |
|--------|-----------------------------------------------|--------|--------------------------------------------------------|
| 28.230 | CLAMP, LIFT CYLINDER VENT LINE<br>클램프         | 34.108 | FASTENER, LIFT CHAIN TO ANCHOR<br>패스너                  |
| 31.000 | LINE, LIFT CYLINDER VENT<br>라인                | 34.109 | ANCHOR, LIFT CHAIN CARRIAGE END<br>앵커                  |
| 31.035 | FITTING, LIFT CYLINDER PORT<br>피팅             | 34.400 | CYLINDER ASSEMBLY, LIFT<br>실린더                         |
| 31.076 | LINE, LIFT CYLINDER VENT<br>라인                | 34.444 | VALVE ASSEMBLY, LIFT CYLINDER FLOW CONTROL<br>밸브       |
| 31.217 | LINE, LIFT CYLINDER INLET FITTING<br>라인       | 34.572 | STRAP, VENT LINE TO LIFT CYLINDER<br>스트랩               |
| 31.549 | LINE, LIFT CYL FLOW CONTROL VALVE INLET<br>라인 | 34.573 | CLAMP, VENT LINE TO LIFT CYLINDER<br>클램프               |
| 34.000 | UPRIGHT & LIFT CYL ASSEMBLY<br>마스트& 실린더       | 34.592 | FITTING, LIFT CYLINDER VENT LINE<br>피팅                 |
| 34.001 | OUTER RAIL WELDER ASSEMBLY, UPRIGHT<br>아웃더레일  | 35.216 | FASTENER, LIFT CYLINDER (ANCHOR END)<br>패스너            |
| 34.013 | ROLLER, UPRIGHT<br>롤러                         | 66.116 | SPACER, LIFT CHAIN ANCHOR<br>스페이서                      |
| 34.014 | SHIM, UPRIGHT ROLLER<br>삼                     | 66.126 | RETAINER, REACH LINE<br>리테이너                           |
| 34.050 | INNER RAIL WELDED ASSEMBLY, UPRIGHT<br>인너레일   | 66.131 | MANIFOLD, LIFT CYLINDER FLOW CONTROL VALVE<br>매니폴드     |
| 34.080 | FASTENER, LIFT CHAIN SHEAVE<br>패스너            | 66.147 | VALVE, FINAL LIFT CYLINDER PORT FLOW CONTROL<br>밸브     |
| 34.084 | SHEAVE, LIFT CHAIN<br>쉬브                      | 66.159 | SEAL, LIFT CYLINDER FLOW CONTROL VALVE INLET POR<br>씰  |
| 34.085 | SHAFT, LIFT CHAIN UPPER SHEAVE<br>샤프트         | 66.164 | FITTING, LIFT CYLINDER FLOW CONTROL VALVE MANIFO<br>피팅 |
| 34.101 | CHAIN, LIFT<br>체인                             | 66.167 | SHIM, LIFT CYLINDER UPPER<br>삼                         |

---


|        |                                                         |
|--------|---------------------------------------------------------|
| 91.411 | RETAINER, LIFT CHAIN TO ANCHOR FASTENER<br>리테이너         |
| 91.414 | RETAINER, LIFT CHAIN TO ANCHOR FASTENER<br>리테이너         |
| 91.611 | NUT, LIFT CHAIN ANCHOR FASTENER (CARRIAGE END)<br>너트    |
| 92.690 | FASTENER, LIFT CHAIN SHEAVE SHAFT RETAINER<br>패스너       |
| 93.985 | FASTENER, LIFT CYLINDER FLOW CONTROL VALVE MANIF<br>패스너 |
| 94.054 | FASTENER, LIFT CYLINDER (UPPER)<br>패스너                  |
| 96.239 | SPACER, LIFT CYLINDER FASTENER<br>스페이서                  |
| 96.251 | WASHER, LIFT CYLINDER FASTENER<br>와셔                    |

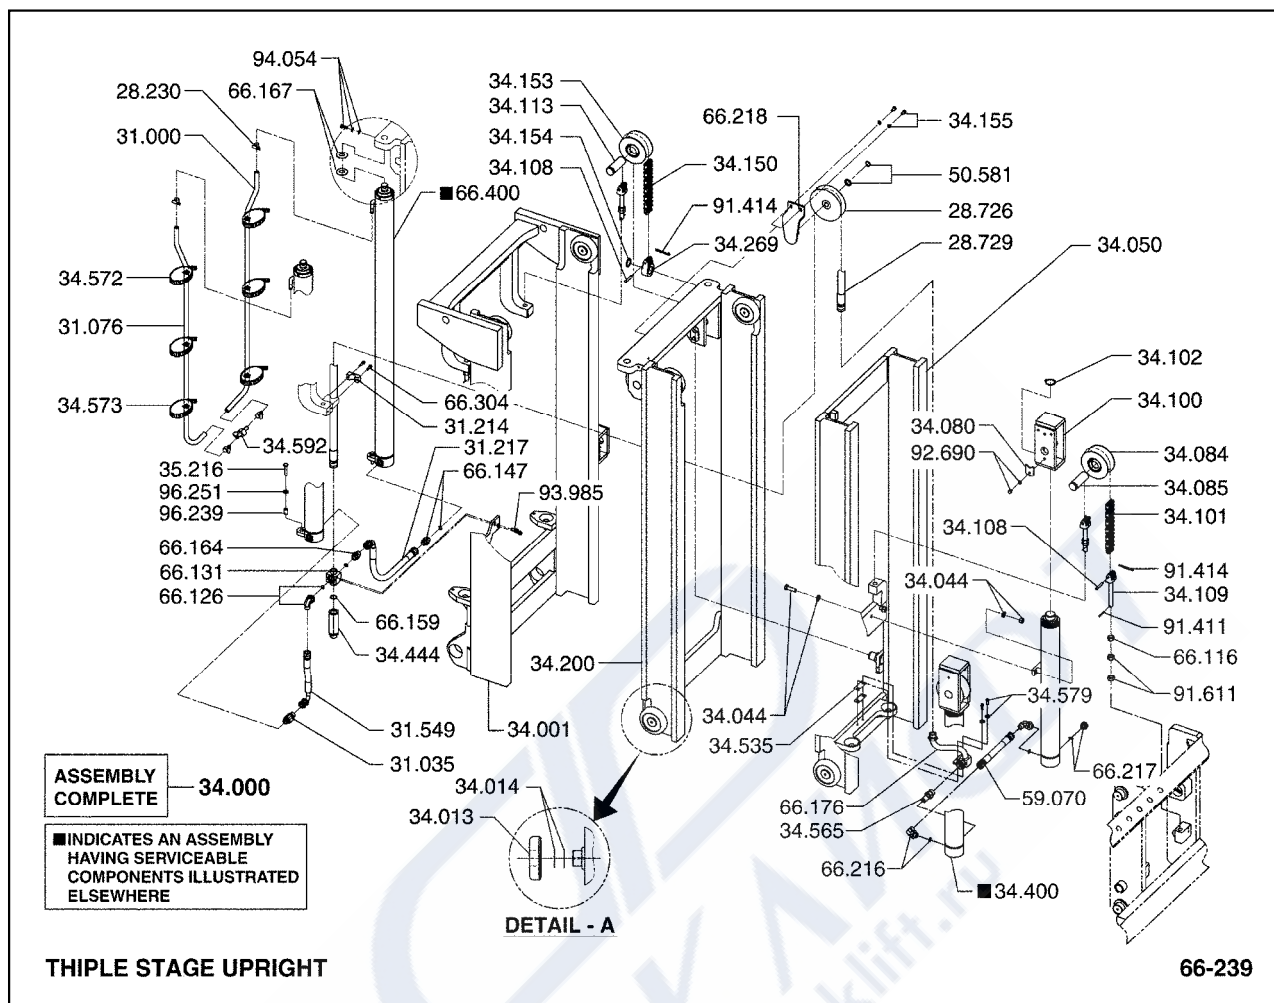 


|        |                                               |        |                                                    |
|--------|-----------------------------------------------|--------|----------------------------------------------------|
| 28.230 | CLAMP, LIFT CYLINDER VENT LINE<br>클램프         | 34.080 | FASTENER, LIFT CHAIN SHEAVE<br>패스너                 |
| 28.726 | SHEAVE, LIFT CYLINDER HOSE<br>쉬브              | 34.084 | SHEAVE, LIFT CHAIN<br>쉬브                           |
| 28.729 | LINE, LIFT CYLINDER<br>라인                     | 34.085 | SHAFT, LIFT CHAIN UPPER SHEAVE<br>샤프트              |
| 31.000 | LINE, LIFT CYLINDER VENT<br>라인                | 34.100 | CARRIER, LIFT CYLINDER CHAIN SHEAVE<br>캐리어         |
| 31.035 | FITTING, LIFT CYLINDER PORT<br>피팅             | 34.101 | CHAIN, LIFT<br>체인                                  |
| 31.076 | LINE, LIFT CYLINDER VENT<br>라인                | 34.102 | FASTENER, SHEAVE CARRIER<br>패스너                    |
| 31.214 | CLAMP, LIFT LINE<br>클램프                       | 34.108 | FASTENER, LIFT CHAIN TO ANCHOR<br>패스너              |
| 31.217 | LINE, LIFT CYLINDER INLET FITTING<br>라인       | 34.109 | ANCHOR, LIFT CHAIN CARRIAGE END<br>앵커              |
| 31.549 | LINE, LIFT CYL FLOW CONTROL VALVE INLET<br>라인 | 34.113 | SHAFT, LIFT CHAIN SHEAVE (CARRIER)<br>샤프트          |
| 34.000 | UPRIGHT & LIFT CYL ASSEMBLY<br>마스트& 실린더       | 34.150 | CHAIN, UPRIGHT RAIL LIFT<br>체인                     |
| 34.001 | OUTER RAIL WELDER ASSEMBLY, UPRIGHT<br>아우터레일  | 34.153 | SHEAVE, UPRIGHT RAIL CHAIN<br>쉬브                   |
| 34.013 | ROLLER, UPRIGHT<br>롤러                         | 34.154 | RETAINER, UPRIGHT RAIL CHAIN SHEAVE<br>리테이너        |
| 34.014 | SHIM, UPRIGHT ROLLER<br>심                     | 34.155 | FASTENER, CHAIN SHEAVE RETAINER<br>패스너             |
| 34.044 | FASTENER, LIFT CYLINDER UPPER ANCHOR<br>패스너   | 34.200 | INTERMEDIATE RAIL WELDED ASSEMBLY, UPRIGHT<br>인터레일 |
| 34.050 | INNER RAIL WELDED ASSEMBLY, UPRIGHT<br>인너레일   | 34.269 | ANCHOR, RAIL CHAIN LH<br>앵커                        |
|        |                                               | 34.080 | FASTENER, LIFT CHAIN SHEAVE<br>패스너                 |
|        |                                               | 34.084 | SHEAVE, LIFT CHAIN<br>쉬브                           |
|        |                                               | 34.085 | SHAFT, LIFT CHAIN UPPER SHEAVE<br>샤프트              |
|        |                                               | 34.100 | CARRIER, LIFT CYLINDER CHAIN SHEAVE<br>캐리어         |
|        |                                               | 34.101 | CHAIN, LIFT<br>체인                                  |
|        |                                               | 34.102 | FASTENER, SHEAVE CARRIER<br>패스너                    |
|        |                                               | 34.108 | FASTENER, LIFT CHAIN TO ANCHOR<br>패스너              |
|        |                                               | 34.109 | ANCHOR, LIFT CHAIN CARRIAGE END<br>앵커              |
|        |                                               | 34.113 | SHAFT, LIFT CHAIN SHEAVE (CARRIER)<br>샤프트          |
|        |                                               | 34.150 | CHAIN, UPRIGHT RAIL LIFT<br>체인                     |
|        |                                               | 34.153 | SHEAVE, UPRIGHT RAIL CHAIN<br>쉬브                   |
|        |                                               | 34.154 | RETAINER, UPRIGHT RAIL CHAIN SHEAVE<br>리테이너        |
|        |                                               | 34.155 | FASTENER, CHAIN SHEAVE RETAINER<br>패스너             |
|        |                                               | 34.200 | INTERMEDIATE RAIL WELDED ASSEMBLY, UPRIGHT<br>인터레일 |
|        |                                               | 34.269 | ANCHOR, RAIL CHAIN LH<br>앵커                        |



|        |                                                         |
|--------|---------------------------------------------------------|
| 34.400 | CYLINDER ASSEMBLY, LIFT<br>실린더                          |
| 34.444 | VALVE ASSEMBLY, LIFT CYLINDER FLOW CONTROL<br>밸브        |
| 34.535 | SHIM, LIFT CYLINDER FEED TUBE PACKING RETAINER<br>삼     |
| 34.565 | FITTING, LIFT CYLINDER FLOW CONTROL VALVE INLET<br>피팅   |
| 34.572 | STRAP, VENT LINE TO LIFT CYLINDER<br>스트랩                |
| 34.573 | CLAMP, VENT LINE TO LIFT CYLINDER<br>클램프                |
| 34.579 | FASTENER, LIFT CYLINDER PRESSURE LINE SUPPORT<br>패스너    |
| 34.592 | FITTING, LIFT CYLINDER VENT LINE<br>피팅                  |
| 35.216 | FASTENER, LIFT CYLINDER (ANCHOR END)<br>패스너             |
| 50.581 | FASTENER, HOSE SHEAVE FLANGE<br>패스너                     |
| 59.070 | LINE, DEVICE HOSE<br>라인                                 |
| 66.116 | SPACER, LIFT CHAIN ANCHOR<br>스페이서                       |
| 66.126 | RETAINER, REACH LINE<br>리테이너                            |
| 66.131 | MANIFOLD, LIFT CYLINDER FLOW CONTROL VALVE<br>매니폴드      |
| 66.147 | VALVE, FINAL LIFT CYLINDER PORT FLOW CONTROL<br>밸브      |
| 66.159 | SEAL, LIFT CYLINDER FLOW CONTROL VALVE INLET POR<br>씰   |
| 66.164 | FITTING, LIFT CYLINDER FLOW CONTROL VALVE MANIF<br>피팅   |
| 66.167 | SHIM, LIFT CYLINDER UPPER<br>삼                          |
| 66.176 | LINE, FREE LIFT CYLINDER PRESSURE<br>라인                 |
| 66.216 | FITTING, FLOW CONTROL VALVE MANIFOLD PORT<br>피팅         |
| 66.217 | FITTING, FLOW CONTROL VALVE MANIFOLD PORT<br>피팅         |
| 66.218 | BRACKET, LIFT LINE SHEAVE<br>브라켓                        |
| 66.304 | FASTENER, LIFT CYLINDER LINE CLAMP<br>패스너               |
| 66.400 | CYLINDER ASSEMBLY, FINAL LIFT<br>실린더                    |
| 91.411 | RETAINER, LIFT CHAIN TO ANCHOR FASTENER<br>리테이너         |
| 91.414 | RETAINER, LIFT CHAIN TO ANCHOR FASTENER<br>리테이너         |
| 91.611 | NUT, LIFT CHAIN ANCHOR FASTENER (CARRIAGE END)<br>너트    |
| 92.690 | FASTENER, LIFT CHAIN SHEAVE SHAFT RETAINER<br>패스너       |
| 93.985 | FASTENER, LIFT CYLINDER FLOW CONTROL VALVE MANIF<br>패스너 |
| 94.054 | FASTENER, LIFT CYLINDER (UPPER)<br>패스너                  |
| 96.239 | SPACER, LIFT CYLINDER FASTENER<br>스페이서                  |
| 96.251 | WASHER, LIFT CYLINDER FASTENER<br>와셔                    |

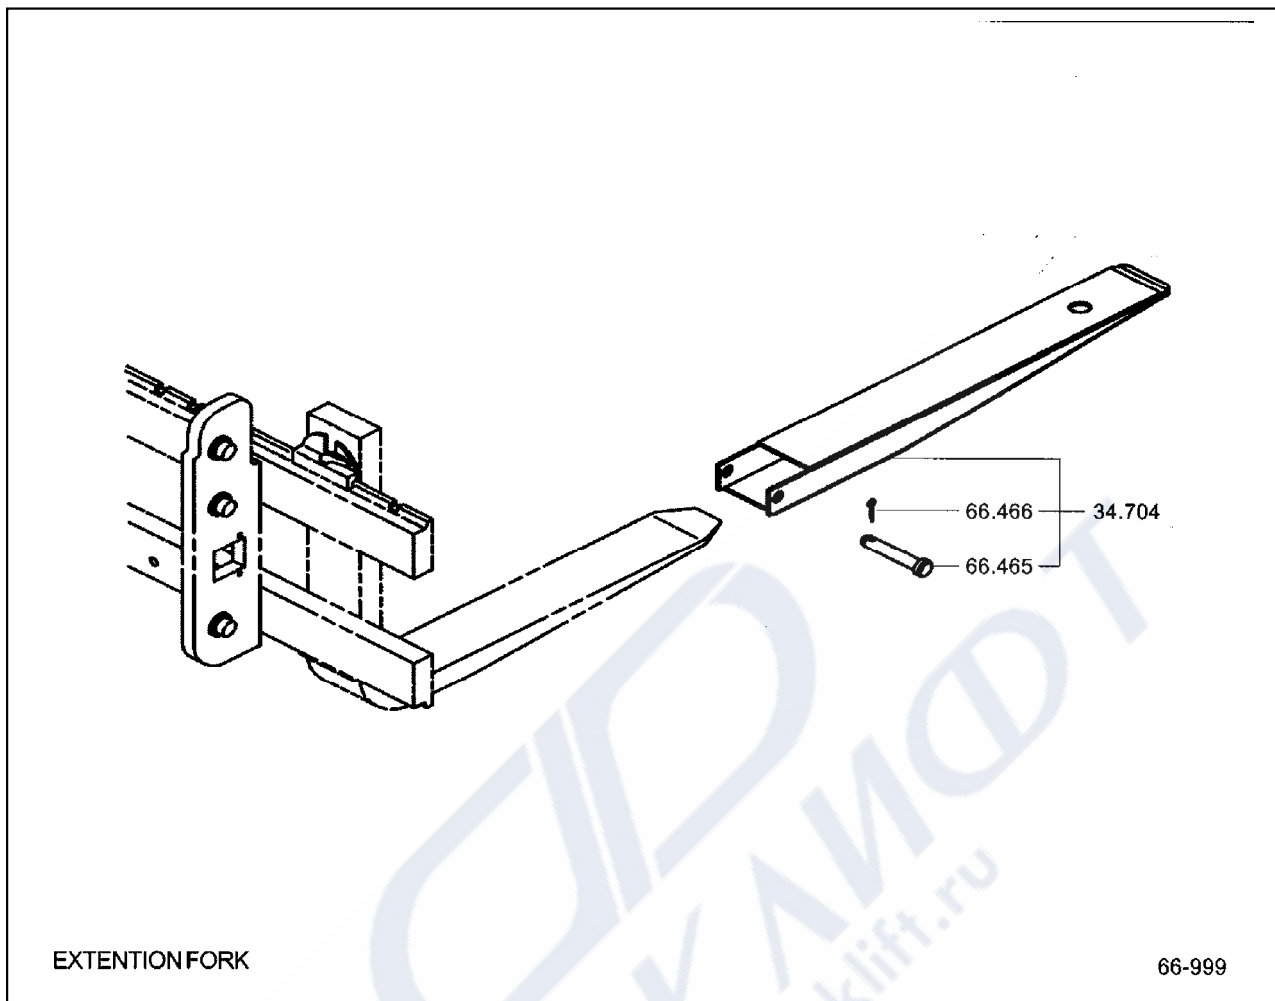 


- |        |                                           |
|--------|-------------------------------------------|
| 34.704 | EXTENSION, FORK ASSEMBLY COMPLETE<br>익스텐션 |
| 66.465 | PIN, EXTENSION FORK<br>핀                  |
| 66.466 | PIN, EXTENSION FORK<br>핀                  |

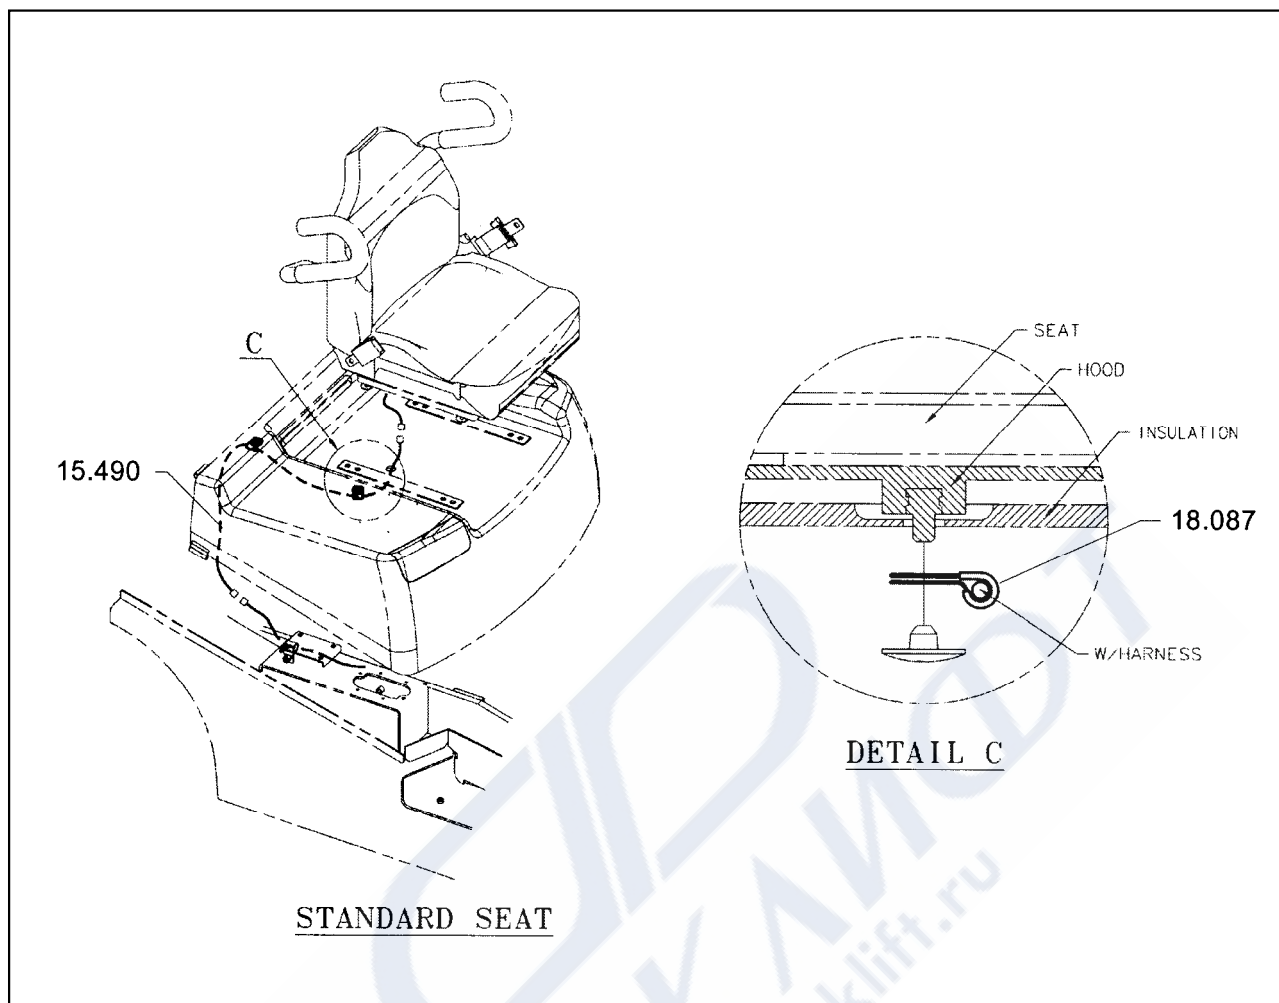 

15.490 HARNESS, SEAT ACTUATED ENGINE SHUTDOWN WIRING  
하네스

 18.087 CLIP, SEAT SAFETY SWITCH WIRE  
클립

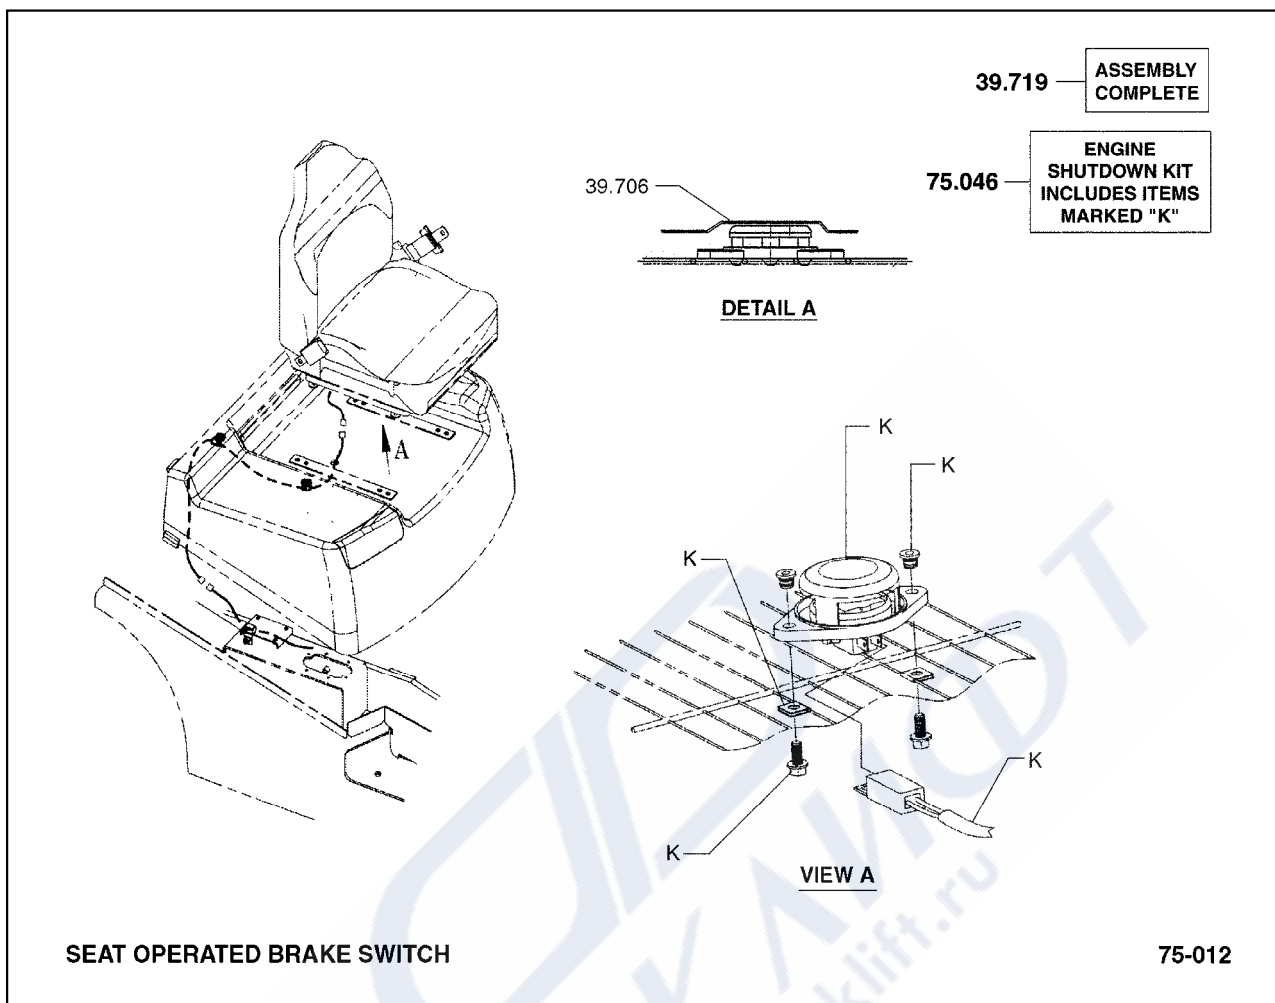

|        |                                          |
|--------|------------------------------------------|
| 39.706 | SUPPORT, SEAT<br>서포트                     |
| 39.719 | SEAT ASSEMBLY<br>시트                      |
| 75.046 | KIT, SEAT ACTUATED ENGINE SHUTDOWN<br>키트 |