

 
부품 매뉴얼 PARTS MANUAL

GTS 20/25/30/33 D (DI Engine)

SERIAL NUMBEL : GTS232D - XXXX - 9819 KF

부품 청구시 항상 장비의 SERIAL NO. 도
함께 알려 주십시오.

ALWAYS GIVE TRUCK SERIAL NUMBER
WHEN ORDERING PARTS.

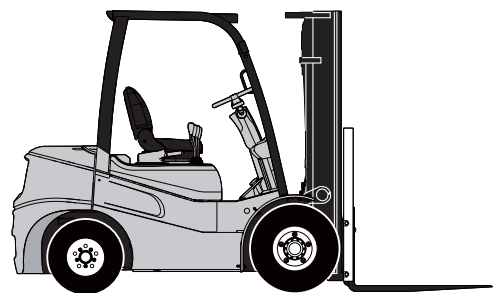

Part No : 8087212
Dec. 2013




(본사) 경기도 부천시 오정구 오정동 202-1
(Head office) 202-1 Ojung-Dong, Ojung-Gu, Bucheon-city, Kyunggi-do, Korea
(공장) 경남 창원시 웅남동 40-1
(Factory) 40-1 Ungnam-dong, Changwon-city, Kyungnam, Korea



00-426	CRANKCASE 크랭크케이스	06-141	TRANSMISSION CLUTCH ASSEMBLY 트랜스미션 클러치 어셈블리
00-428	GEAR COVER 기어 커버	07-067	TRANSMISSION MOUNTING 트랜스미션 마운팅
00-538	ENGINE MOUNTING 엔진 마운팅	07-073	TRANSMISSION MOUNTING 트랜스미션 마운팅
00-643	CRANKSHAFT 크랭크 축	10-132	TRANS COOLING LINES 트랜스미션 쿨링 라인
00-677	CYLINDER HEAD 실린더 헤드	12-189	ALTERNATOR MOUNTING 알터네이터 마운팅
00-678	GOVERNOR 가버너	12-262	BATTERY MOUNTING 배터리 마운팅
00-679	CAMSHAFT 캠 축	13-034	HEAD LAMP INSTALLATION 헤드램프 조립그룹
00-680	GASKETS 가스켓	13-162	STROBE LIGHT MOUNTING 경광등 마운팅
01-093	FLYWHEEL HOUSING 플라이휠 하우징	13-175	VALVE SWITCH WIRING 밸브 스위치 와이어링
01-334	LUBRICATION SYSTEM 윤활 오일 시스템	13-182	STROBE LIGHT 경광등
01-335	COOLING WATER SYSTEM 쿨링 워터 시스템	13-228	BACK-UP ALARM INSTALLATION 백-업 알람 조립그룹
01-346	COOLING SYSTEM 쿨링 시스템	13-230	HEAD & T/SIGNAL LIGHT INSTALLATION 헤드& 턴시그널 라이트 조립그룹
02-474	AIR CLEANER ASSEMBLY 에어 크리너 어셈블리	13-236	COMBINATION & REAR WORK LIGHT INSTALLATION 컴비네이션& 후방 작업등 조립그룹
02-478	INDICATOR LIGHT INSTALLATION 지시등 조립그룹	13-292	KEY SWITCH INSTALLATION 키스위치 조립그룹
02-480	ACCELERATOR SYSTEM 악셀레이터 시스템	13-360	STATIC ELECTRICITY DISCHARGER 고정 전압 방전기
02-481	FUEL INJECTION PUMP 연료 분사 펌프	14-879	ELECTRICAL WIRING (INSTRUMENT) 전기장치 와이어링 (계기판)
02-482	FUEL INJECTION LINE 연료 분사 라인	14-880	ELECTRICAL WIRING (MAIN) 전기장치 와이어링 (메인)
02-483	FUEL LINE 연료 라인	20-135	DRIVE AXLE MOUNTING 드라이브 액슬 마운팅
02-489	FUEL CAP WITH KEY 연료캡 - 키포함	20-183	DRIVE AXLE ASSEMBLY 드라이브 액슬 어셈블리
03-517	LICENSE PLATE 번호판	20-184	DIFFERENTIAL & CARRIER ASSY 디퍼렌셜& 캐리어
03-584	INTAKE SYSTEM 흡기 시스템 (듀얼)	20-185	DIFFERENTIAL ASSEMBLY 디퍼렌셜 어셈블리
03-585	FUEL SYSTEM 연료 시스템	21-017	PROP SHAFT 프로펠러 축
03-587	INTAKE MANIFOLD 흡기 기관	22-013	DRIVE WHEEL & TIRE MOUNTING 드라이브휠& 타이어 마운팅
03-588	EXHAUST MANIFOLD 배기 기관	22-014	STEER WHEEL & TIRE MOUNTING 스티어휠& 타이어 마운팅
03-589	ELECTRONIC CONTROL MODULE GP 전자 컨트롤 모듈 그룹	22-024	DRIVE WHEEL & TIRE (SOLID TYPE) 드라이브 휠& 타이어 (솔리드 타입)
03-696	EXHAUST SYSTEM 배기 시스템	22-026	DRIVE WHEEL & TIRE (SOLID TYPE) 드라이브 휠& 타이어 (솔리드 타입)
05-038	TORQUE CONVERTER CHARGING PUMP 토크 컨버터 충전펌프	22-027	STEER WHEEL & TIRE (SOLID TYPE) 스티어 휠& 타이어 (솔리드 타입)
05-047	TORQUE CONVERTER HOUSING 토크 컨버터 하우징	22-033	DUAL DRIVE WHEEL & TIRE MOUNTING 듀얼 드라이브 휠& 타이어 마운팅
06-125	TRANSMISSION CONTROL COVER 트랜스미션 컨트롤 커버	22-034	WIDE DRIVE WHEEL & TIRE MOUNTING 와이드 드라이브 휠& 타이어 마운팅
06-126	TRANSMISSION CLUTCH PACKS (FWD) 트랜스미션 클러치 팩 (전진)	22-041	DRIVE WHEEL AND TIRE 드라이브 휠& 타이어
06-127	TRANSMISSION CLUTCH PACKS (REV) 트랜스미션 클러치 팩 (후진)	22-043	DRIVE WHEEL AND TIRE 드라이브 휠& 타이어
06-128	TRANSMISSION OUTPUT SHAFT 트랜스미션 출력 샤프트	22-044	STEER WHEEL & TIRE 스티어휠& 타이어
06-135	TRANSMISSION CASE 트랜스미션 케이스	23-448	DRIVE WHEEL & TIRE MOUNTING 드라이브휠& 타이어 마운팅
06-138	TRANSMISSION ASSEMBLY 트랜스미션 어셈블리	23-535	BRAKE & INCHING LINES 브레이크& 인칭라인
06-139	TRANSMISSION IDLE GEAR SHAFT 트랜스미션 아이들 기어샤프트	23-536	BRAKE LINES 브레이크 라인
06-140	TRANSMISSION OUTPUT SHAFT 트랜스미션 출력 샤프트	23-537	PARKING BRAKE SYSTEM 파킹 브레이크 시스템


24-007	BRAKE ENERGIZER ASSEMBLY 브레이크 에너지저 어셈블리	34-130	UPRIGHT MOUNTING 마스트 마운팅
25-072	STEERING GEAR MOUNTING 스티어링 기어 마운팅	34-209	CARRIAGE ASSEMBLY 캐리지 어셈블리
25-143	STEERING UNIT 스티어링 유닛	37-003	OVERHEAD GUARD COVER 오버헤드가드 커버
25-291	STEERING COLUMN SHAFT ASSEMBLY 스티어링 컬럼 샤프트 어셈블리	37-009	SEAT ASSEMBLY 시트 어셈블리
25-353	STEERING COLUMN ASSEMBLY 스티어링 컬럼 어셈블리	37-039	REAR WINDOW ASSEMBLY 리어 윈도우 어셈블리
25-354	STEERING WHEEL & COLUMN MOUNTING 스티어링 휠& 컬럼 마운팅	37-046	CAB MOUNTING 캐빈 마운팅
26-157	HYDRAULIC RETURN LINES 유압 리턴 라인	37-048	ELECTRICAL COMPONENTS (CAB) 전기장치 구성품 (캐빈)
26-273	STEER AXLE MOUNTING 스티어링 액슬 마운팅	37-051	ENCLOSED CAB 캐빈 (박스형)
26-274	STEER CYLINDER 스티어링 실린더	37-052	CAB MOUNTING 캐빈 마운팅
26-276	STEER AXLE ASSEMBLY 스티어링 액슬 어셈블리	37-053	ELECTRICAL COMPONENTS (CAB) 전기장치 구성품 (캐빈)
26-277	HYDRAULIC STEERING LINES 유압 스티어링 라인	37-124	SEAT ARMREST ASSEMBLY 시트 암레스트 어셈블리
29-237	HYDRAULIC TANK & COMPONENTS MOUNTING 유압탱크& 구성품 마운팅	38-201	MODEL DECALS & COUNTERWEIGHT MOUNTING 모델 데칼& 카운터웨이트 마운팅
29-274	HYDRAULIC PUMP MOUNTING 유압 펌프 마운팅	38-245	CROSS PLATE MOUNTING 크로스 플레이트 마운팅
29-275	HYDRAULIC PUMP ASSEMBLY 유압 펌프 어셈블리	38-270	FRAME TANK BOTTOM PLUG 프레임 탱크 하단 플러그
30-495	MAIN CONTROL VALVE 2-SPOOL 메인 컨트롤 밸브 - 2 스톱	39-519	LOAD BACK REST 로드 백 레스트
30-496	MAIN CONTROL VALVE 3-SPOOL 메인 컨트롤 밸브 - 3 스톱	39-585	SEAT ASSEMBLY (SUSPENSION) 시트 어셈블리
30-497	MAIN CONTROL VALVE 4-SPOOL 메인 컨트롤 밸브 - 4 스톱	39-594	OVERHEAD GUARD 오버헤드가드
30-498	HYDRAULIC VALVE ASSEMBLY 유압 밸브 어셈블리	39-661	SEAT ASSEMBLY 시트 어셈블리
30-499	HYDRAULIC VALVE ASSEMBLY 유압 밸브 어셈블리	39-829	SEAT MOUNTING 시트 마운팅
30-500	HYDRAULIC VALVE ASSEMBLY 유압 밸브 어셈블리	39-834	SEAT ASSEMBLY (SUSPENSION) 시트 어셈블리
30-592	HYDRAULIC VALVE MOUNTING (2SPOOL) 유압밸브 마운팅 (2스톱)	39-902	CAB DOOR SASH ASSEMBLY 캐빈 도어 어셈블리
30-593	HYDRAULIC VALVE MOUNTING (3SPOOL) 유압밸브 마운팅 (3스톱)	39-920	CASSETTE & CD MOUNTING 카세트& CD 마운팅
30-594	HYDRAULIC VALVE MOUNTING (4SPOOL) 유압밸브 마운팅 (4스톱)	39-985	SHEET METAL 시트 메탈
31-189	TILT LIMIT WITH OVERRIDE 틸트 제어해제	39-987	HOOD & FLOOR PLATE MOUNTING 후드& 플로어 플레이트 마운팅
31-220	HYDRAULIC LIFT & TILT LINES 유압 리프트& 틸트 라인	40-011	DECALS 데칼
31-228	HYDRAULIC SUPPLY LINES 유압 공급 라인	41-024	HEATER INSTALLATION 히터 조립그룹
32-140	TILT CYLINDER MOUNTING 틸트 실린더 마운팅	41-034	HEATER INSTALLATION 히터 조립그룹
32-142	TILT CYLINDER 틸트 실린더	47-000	SEAT WING KIT 시트윙 키트
32-151	ACCUMULATOR 어큐뮬레이터	50-109	E DEVICE HOSE REEL 디바이스 호스릴
32-152	ACCUMULATOR 어큐뮬레이터	50-157	SOLENOID VALVE 솔레노이드 밸브
32-153	TILT CYLINDER 틸트 실린더	50-171	ATTACHMENT HOSE ADAPTATION (CARRIAGE) 어태치 호스 적응 (캐리지)
32-167	TILT AMOUNT GROUP 틸트 어마운트 그룹	50-172	HIGH TERMINATION FOR DEVICE HOSE ADAPTATION 하이 터미네이션 (디바이스 호스 적응)
33-069	RELIEF VALVE ASSEMBLY 릴리프 밸브 어셈블리	50-175	HIGH TERMINATION FOR DEVICE HOSE ADAPTATION 하이 터미네이션 (디바이스 호스 적응)
33-130	SELECTOR SOLENOID VALVE 셀렉터 솔레노이드 밸브	50-232	ATTACHMENT HOSE ADAPTATION (UPRIGHT) 어태치 호스 적응 (마스트)
34-044	LOAD BACK REST MOUNTING 로드 백 레스트 마운팅	50-243	QUICK DISCONNECT FOR DEVICE HOSE ADAPTATION 퀵 차단 (호스 어댑션 장치용)
34-103	CARRIAGE ASSEMBLY 캐리지 어셈블리	50-269	ATTACHMENT HOSE ADAPTATION (UPRIGHT) 어태치 호스 적응 (마스트)


50-270	ATTACHMENT HOSE & CABLE ADAPTATION (UPRIGHT) 어태치 호스& 케이블 적용 (마스트)	66-194	LIFT CYLINDER ASSEMBLY 리프트 실린더 어셈블리
50-289	ATTACHMENT HOSE & CABLE ADAPTATION (UPRIGHT) 어태치 호스& 케이블 적용 (마스트)	66-235	PRIMARY CYLINDER ASSEMBLY 프라이머리 실린더 어셈블리
50-290	ATTACHMENT HOSE & CABLE ADAPTATION (UPRIGHT) 어태치 호스& 케이블 적용 (마스트)	66-236	PRIMARY CYLINDER ASSEMBLY 프라이머리 실린더 어셈블리
50-291	ATTACHMENT HOSE & CABLE ADAPTATION (UPRIGHT) 어태치 호스& 케이블 적용 (마스트)	66-245	EXTENTION FORK 익스텐션 포크
50-407	ATTACHMENT HOSE ADAPTATION (UPRIGHT) 어태치 호스 적용 (마스트)	66-257	STANDARD UPRIGHT 표준 마스트
50-410	ATTACHMENT HOSE ADAPTATION (UPRIGHT) 어태치 호스 적용 (마스트)	66-261	TRIPLE STAGE UPRIGHT 3단 마스트
50-432	ATTACHMENT HOSE ADAPTATION (UPRIGHT) 어태치 호스 적용 (마스트)	66-265	HI-LO UPRIGHT 하이-로우 마스트
50-439	ATTACHMENT HOSE ADAPTATION (UPRIGHT) 어태치 호스 적용 (마스트)	75-(33)014	VARIABLE RELIEF VALVE INSTALLATION 가변 릴리프 밸브 조립그룹
50-716	E HOSE ADAPTATION 호스 어댑션	75-(33)045	DEVICE HYDRAULIC PRESSURE GAUGE INSTALLATION 디바이스 유압 압력게이지 조립그룹
50-744	AUXILIARY VALVE LINES 보조 밸브 라인	75-001	SEAT OPERATED BRAKE SWITCH 시트 조작 브레이크 스위치
50-765	HIGH TERMINATION PLUMBING 하이 터미네이션 기관	75-004	SEAT OPERATED BRAKE 시트 조작 브레이크
50-791	ATTACHMENT HOSE ADAPTATION (CARRIAGE) 어태치 호스 적용 (캐리지)	75-005	SEAT OPERATED BRAKE 시트 조작 브레이크
50-793	ATTACHMENT HOSE ADAPTATION (CARRIAGE) 어태치 호스 적용 (캐리지)	75-012	SEAT OPERATED BRAKE SWITCH 시트 조작 브레이크 스위치
50-794	ATTACHMENT HOSE ADAPTATION (CARRIAGE) 어태치 호스 적용 (캐리지)		
50-796	ATTACHMENT HOSE ADAPTATION (CARRIAGE) 어태치 호스 적용 (캐리지)		
50-797	ATTACHMENT HOSE ADAPTATION (CARRIAGE) 어태치 호스 적용 (캐리지)		
50-798	QUICK DISCONNECT FOR DEVICE HOSE ADAPTATION 퀵 차단 (호스 어댑션 장치용)		
50-819	DEIVCE LINE ADAPTORS 디바이스 라인 어댑터		
50-820	SOLENOID VALVE FOR DEVICE HOSE ADAPTATION 솔레노이드 밸브 (디바이스 호스 적용)		
53-008	SIDESHIFT CYLINDER 사이드 쉬프트 실린더		
53-024	FORK POSITIONER 포크 포지셔너		
53-084	FORK POSITIONER 포크 포지셔너		
53-146	F/P SIDESHIFT CYLINDER 포크포지셔너 사이드 쉬프트 실린더		
53-164	FORK POSITIONER 포크 포지셔너		
53-168	FORK POSITIONER (SHIFTING) 포크 포지셔너 (쉬프트 타임)		
53-170	FORK POSITIONER (BASIC) 포크 포지셔너 (기본)		
53-187	SIDE SHIFT ASSEMBLY 사이드 쉬프트 어셈블리		
53-198	SIDESHIFT CYLINDER 사이드 쉬프트 실린더		
53-223	FORK POSITIONER CYLINDER 포크 포지셔너 실린더		
54-015	FORK POSITIONER (BASIC) 포크 포지셔너 (기본)		
66-058	FORK 포크		
66-139	SECONDARY CYLINDER ASSEMBLY 2차 실린더 어셈블리		
66-163	PRIMARY CYLINDER ASSEMBLY 프라이머리 실린더 어셈블리		
66-169	LIFT CYLINDER ASSEMBLY 리프트 실린더 어셈블리		
66-170	SECONDARY CYLINDER ASSEMBLY 2차 실린더 어셈블리		
66-190	SECONDARY CYLINDER ASSEMBLY 2차 실린더 어셈블리		

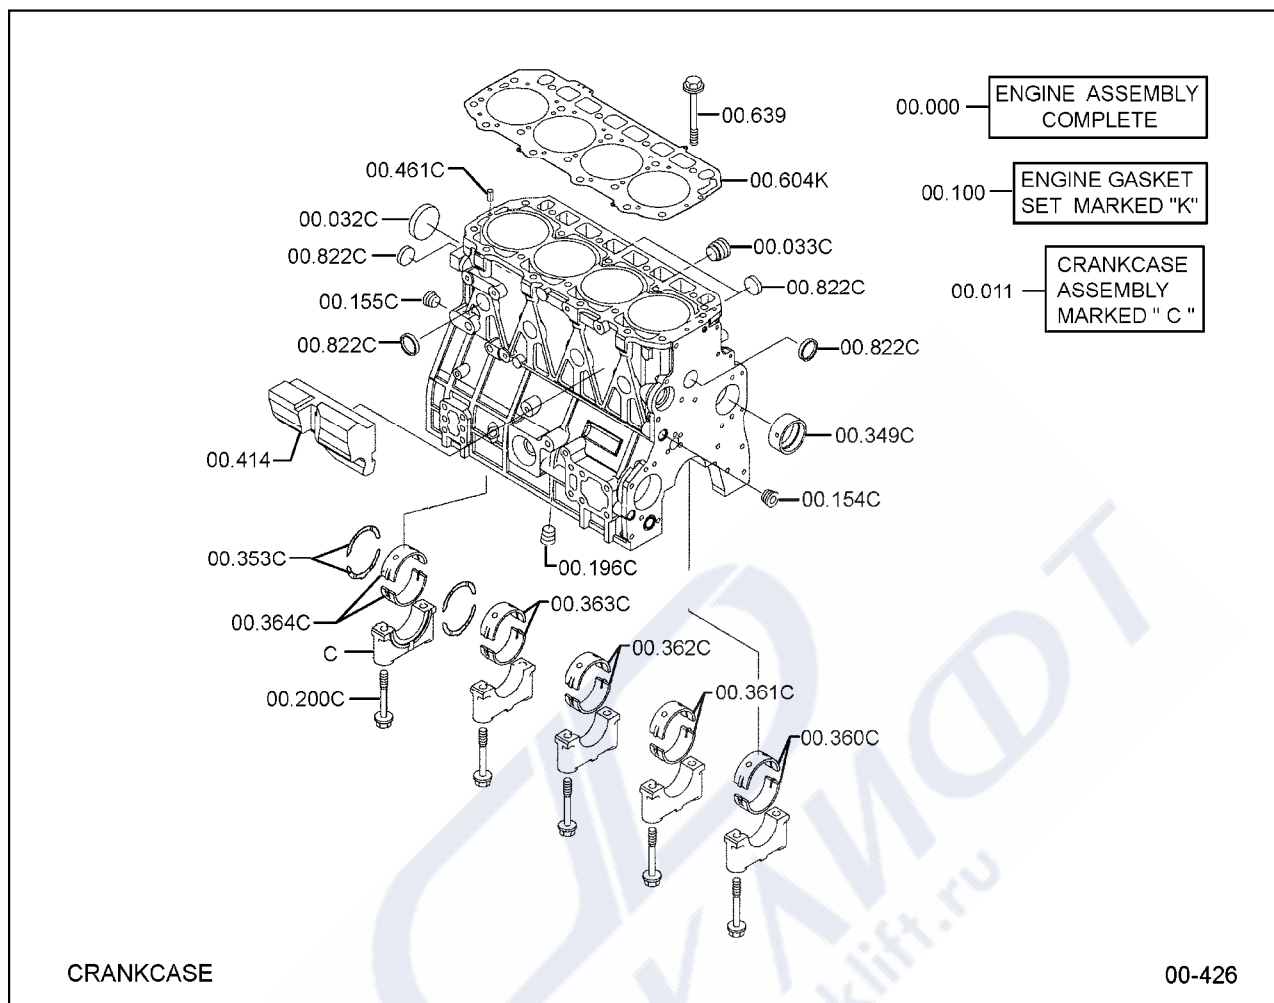 

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.011	CRANKCASE 크랭크케이스
00.032	PLUG, CRANKCASE 플러그
00.033	PLUG, CRANKCASE 플러그
00.100	GASKET KIT, ENGINE OVERHAUL 가스킷키트
00.154	PLUG - EXPANSION, CRANKCASE END 플러그
00.155	PLUG - EXPANSION, CRANKCASE END 플러그
00.196	PLUG-EXPANSION, CRANKCASE SIDE 플러그
00.200	FASTENER, CRANKSHAFT BEARING NO. 1 CAP 패스너

00.349	BEARING, ENGINE BALANCER SHAFT FRONT 베어링
00.353	PLATE, CRANKSHAFT THRUST 플레이트
00.360	BEARING, NO. 1 MAIN JOURNAL 베어링
00.361	BEARING, NO. 2 MAIN JOURNAL 베어링
00.362	BEARING, NO. 3 MAIN JOURNAL 베어링
00.363	BEARING, NO. 4 MAIN JOURNAL 베어링
00.364	BEARING, NO. 5 MAIN JOURNAL 베어링
00.414	BLOCK, REAR FILLER 블록
00.461	DOWEL, CRANKCASE HEAD 다월
00.604	GASKET, CRANKCASE HEAD 가스켓
00.639	FASTENER, CRANKCASE HEAD 패스너
00.822	PLUG, CRANKCASE 플러그

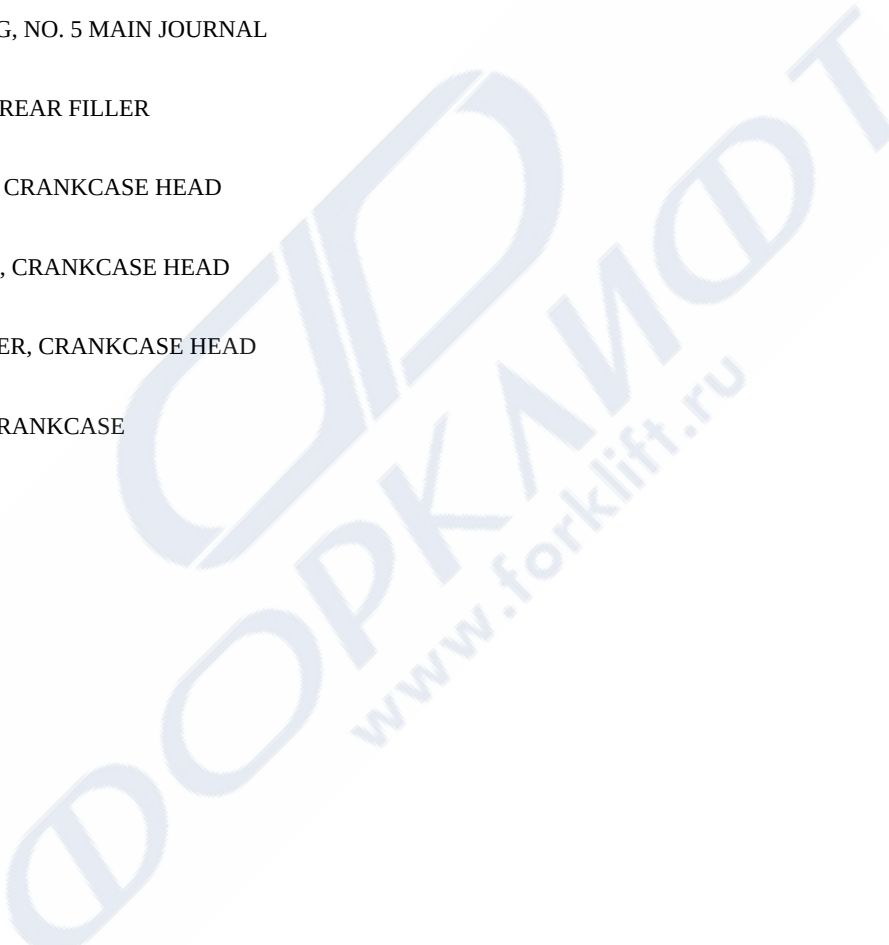 

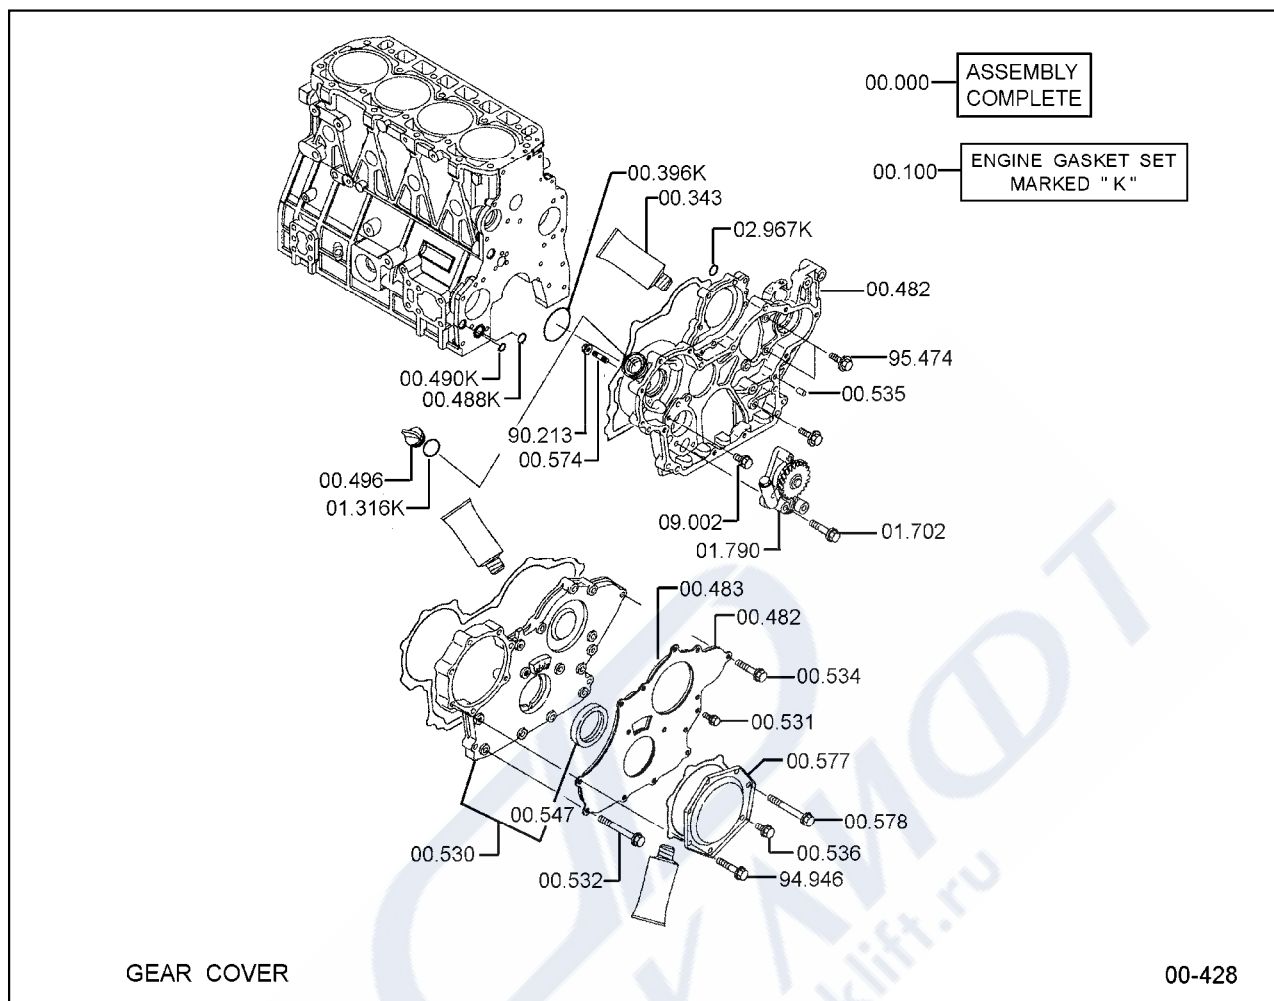 


GEAR COVER

00-428

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.100	GASKET KIT, ENGINE OVERHAUL 가스켓키트
00.343	GASKET, LIQUID 가스켓
00.396	SEAL, ENGINE FRONT GEAR COVER GASKET 셀
00.482	PLATE, GEAR COVER BACKING 플레이트
00.483	GASKET, GEAR COVER BACKING PLATE ATTACHING 가스켓
00.488	SEAL, ENGINE FRONT GEAR COVER PLUG 셀
00.490	SEAL, ENGINE FRONT GEAR COVER PLUG 셀
00.496	PLUG, ENGINE FRONT GEAR COVER 플러그

00.530	COVER, ENGINE FRONT GEAR 커버
00.531	FASTENER, ENGINE FRONT GEAR COVER 패스너
00.532	FASTENER, ENGINE FRONT GEAR COVER 패스너
00.534	FASTENER, ENGINE FRONT GEAR COVER 패스너
00.535	FASTENER, ENGINE FRONT GEAR COVER 패스너
00.536	FASTENER, ENGINE FRONT GEAR COVER 패스너
00.547	SEAL, ENGINE FRONT GEAR COVER 씰
00.574	FASTENER, BACKING PLATE 패스너
00.577	COVER, INJECTION PUMP GEAR ACCESS 커버
00.578	FASTENER, INJECTION PUMP GEAR ACCESS COVER 패스너
01.316	SEAL, ENGINE OIL FILTER DRAIN COCK 씰
01.702	FASTENER, OIL PUMP 패스너
01.790	GEAR, OIL PUMP DRIVEN 기어
02.967	SEAL, FUEL FILTER DRAIN PLUG 씰
09.002	FASTENER, GEAR CASE COVER 패스너
90.213	NUT, ENGINE FRONT GEAR COVER FASTENER 너트
94.946	FASTENER, INJECTION PUMP GEAR ACCESS COVER 패스너
95.474	FASTENER, ENGINE OIL PUMP DRIVE CHAIN ACCESS HOLE 패스너

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

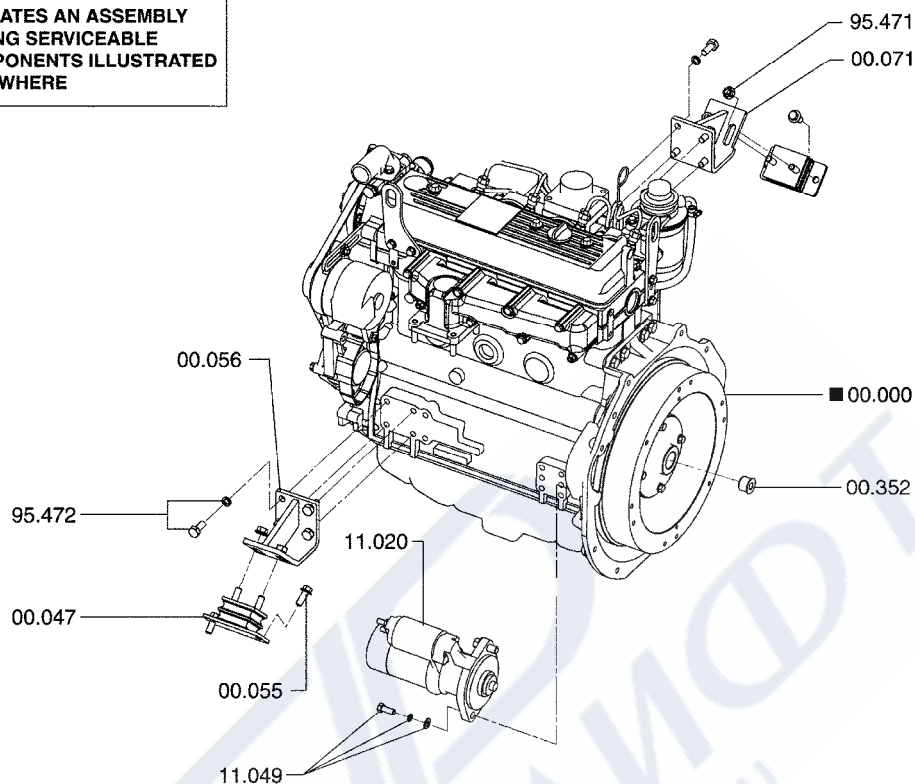


ENGINE MOUNTING

00-538

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.047	DAMPENER, ENGINE FRONT VIBRATION 댐프너
00.055	FASTENER, ENGINE FRONT VIBRATION DAMPENER 패스너
00.056	MOUNT, ENGINE RH 마운트
00.071	MOUNT, ENGINE LH 마운트
00.352	ADAPTOR, FLYWHEEL MOUNTING 어댑터
11.020	MOTOR ASSEMBLY, STARTING 모터
11.049	FASTENER, STARTING MOTOR 패스너
95.471	FASTENER, ENGINE MOUNT 패스너


95.472 FASTENER, ENGINE MOUNT
패스너

 ФОРКЛИФТ
www.forklift.ru

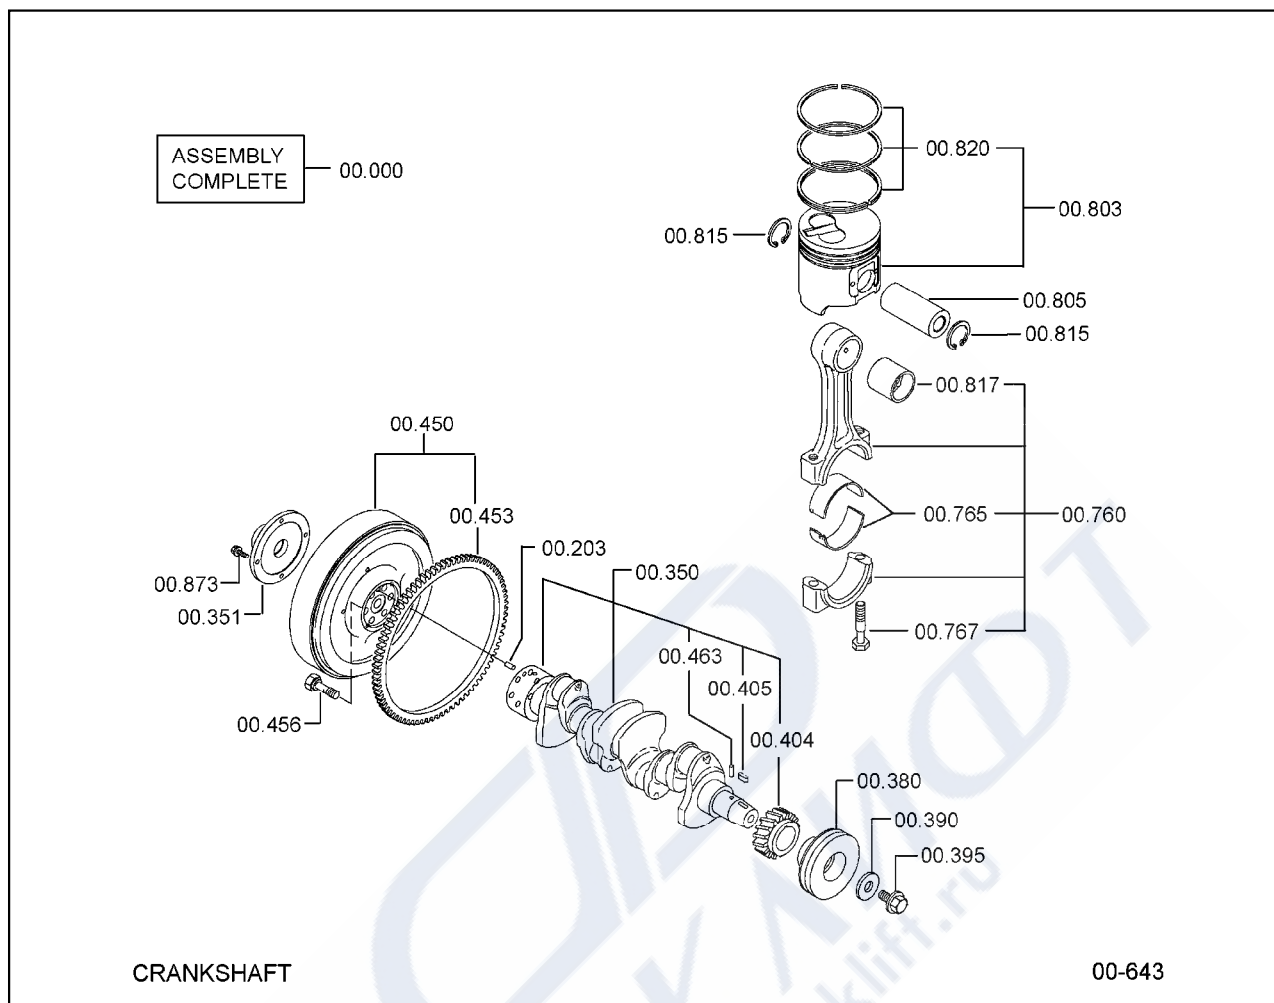


00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.203	DOWEL, CRANKSHAFT BEARING CAP 다월
00.350	CRANKSHAFT 크랭크샤프트
00.351	PLATE, FLYWHEEL REINFORCING 플레이트
00.380	PULLEY, CRANKSHAFT 폴리
00.390	WASHER, CRANKSHAFT PULLEY 와셔
00.395	FASTENER, CRANKSHAFT PULLEY 패스너
00.404	GEAR, CRANKSHAFT TIMING 기어
00.405	KEY, CRANKSHAFT TIMING GEAR 키

00.450	FLYWHEEL 플라이휠
00.453	GEAR, FLYWHEEL RING 기어
00.456	FASTENER, CRANKSHAFT TO FLYWHEEL 패스너
00.463	DOWEL, CRANKSHAFT 다웰
00.760	ROD ASSEMBLY, CONNECTING 로드
00.765	BEARING, CONNECTING ROD 베어링
00.767	FASTENER, CONNECTING ROD BEARING CAP 패스너
00.803	PISTON (ONE CYLINDER) 피스톤& 핀
00.805	PIN, PISTON 핀
00.815	RETAINER, PISTON PIN 리테이너
00.817	BUSHING, PISTON PIN (ENGINE SET) 부싱
00.820	PISTON RING 피스톤링
00.873	FASTENER, FLYWHEEL HSG TO CRANKCASE 패스너

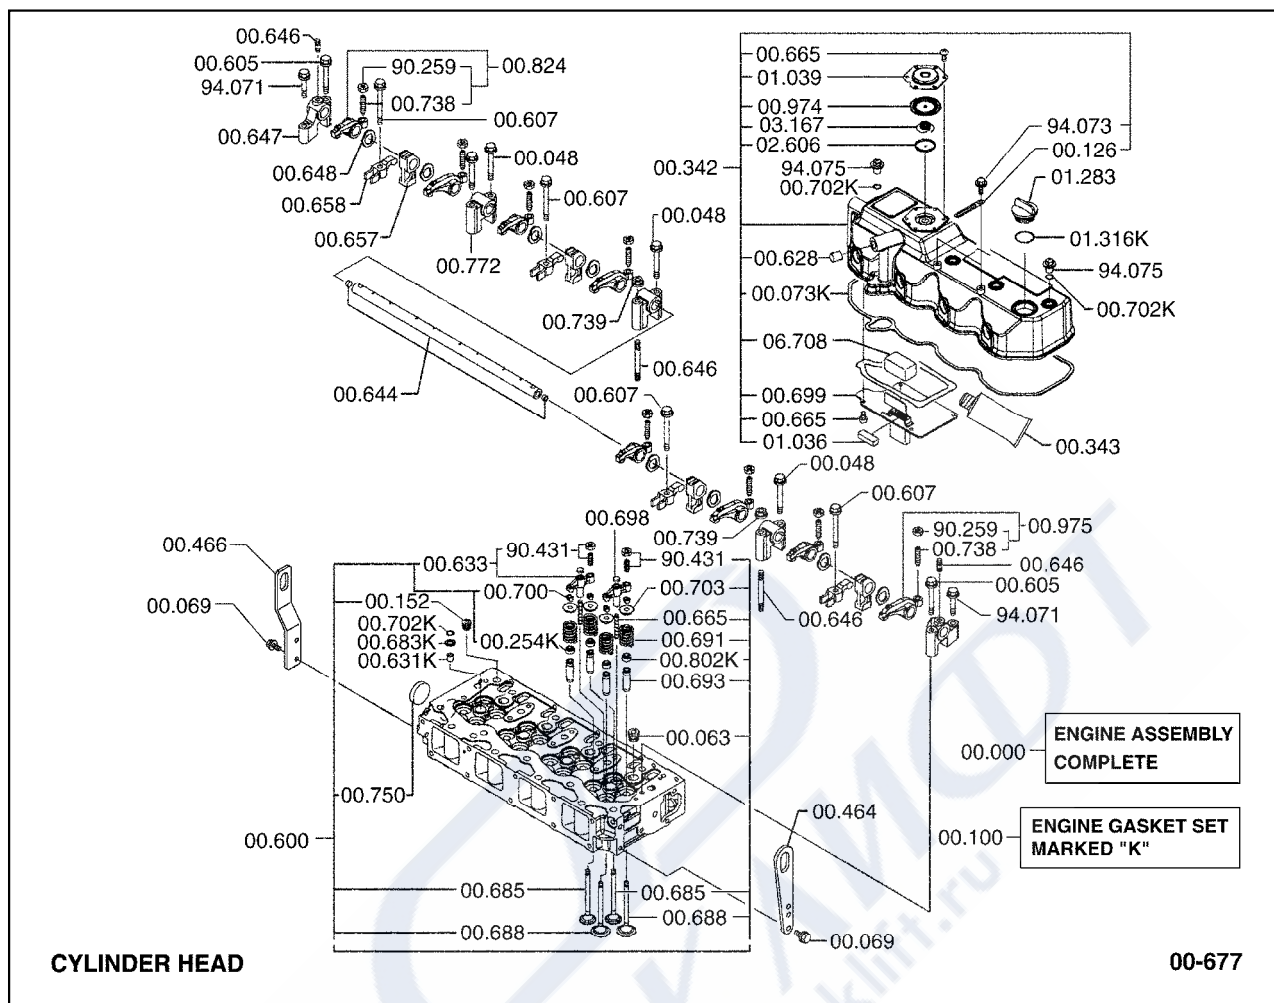 

00.000	PRODUCTION ENGINE ASSEMBLY 엔진	00.607	FASTENER, CRANKCASE HEAD 패스너
00.048	FASTENER, ENGINE REAR SUPPORT BRACKET 패스너	00.628	PLUG, CRANKCASE HEAD 플러그
00.063	PLUG, CRANKCASE HEAD 플러그	00.631	FASTENER, CRANKCASE HEAD 패스너
00.069	FASTENER, ENGINE LIFTING BRACKET 패스너	00.633	FASTENER, CRANKCASE HEAD 패스너
00.073	GASKET, CRANKCASE HEAD END COVER 가스켓	00.644	PIVOT, ENGINE ROCKER ARM 피봇
00.100	GASKET KIT, ENGINE OVERHAUL 가스켓키트	00.646	FASTENER, ENGINE ROCKER ARM PIVOT SUPPORT 패스너
00.126	CLIP, CRANKCASE VENT LINE 클립	00.647	SUPPORT, ENGINE ROCKER ARM PIVOT 서포트
00.152	PLUG & WASHER, CRANKCASE HEAD FRONT 플러그&와셔	00.648	LOCATOR, ENGINE ROCKER ARM 로케이터
00.254	SEAL, CYLINDER HEADCOVER FASTENER 씰	00.657	ROCKER ARM ASSEMBLY, ENGINE VALVE 로커
00.342	BONNET ASSY 본넷	00.658	ROCKER ARM ASSEMBLY, ENGINE VALVE 로커
00.343	GASKET, LIQUID 가스켓	00.665	FASTENER, ROCKER ARM COVER 패스너
00.464	BRACKET, ENGINE LIFTING 브라켓	00.683	SEAT, EXHAUST VALVE INSERT 시트
00.466	BRACKET, ENGINE LIFTING 브라켓	00.685	VALVE, EXHAUST 밸브
00.600	HEAD ASSEMBLY, CRANKCASE 헤드	00.688	VALVE, INTAKE 밸브
00.605	FASTENER, CRANKCASE HEAD 패스너	00.691	SPRING, ENGINE INTAKE VALVE 스프링

00.693	GUIDE, INTAKE VALVE 가이드
00.698	LOCK, EXHAUST VALVE SPRING SEAT 로크
00.699	OIL BAFFLE,CAMSHAFT 오일
00.700	LOCK, INTAKE VALVE SPRING SEAT 로크
00.702	SEAL, ROCKER ARM COVER FASTENER 씰
00.703	SEAT, INTAKE VALVE SPRING 시트
00.738	STUD, ENGINE ROCKER ARM PIVOT SUPPORT 스터드
00.739	NUT, ENGINE ROCKER ARM PIVOT SUPPORT 너트
00.750	PLUG, CRANKCASE HEAD 플러그
00.772	SUPPORT, ENGINE ROCKER ARM PIVOT 서포트
00.802	SEAL, CYLINDER SLEEVE 씰
00.824	ARM ASSY, ENGINE ROCKER 암
00.974	DIAPHRAGM, BONNET PLATE 다이어프램
00.975	ARM ASSY,CYLINDER HEAD ROCKER 암
01.036	BAFFLE, CRANKCASE VALVE 배플
01.039	COVER, CRANKCASE VENT 커버
01.283	CAP, CRANKCASE OIL FILLER 캡
01.316	SEAL, ENGINE OIL FILTER DRAIN COCK 씰
02.606	PLATE, DIAPHRAGM RETAINER 플레이트
03.167	SPRING, DIAPHRAGM RETURN 스프링
06.708	BAFFLE, CONTROL COVER OIL 배플
90.259	NUT, ENGINE ROCKER ARM PIVOT SUPPORT FASTENER 너트
90.431	NUT, CRANKCASE HEAD FASTENER 너트
94.071	FASTENER, ROCKER ARM PIVOT SUPPORT 패스너
94.073	FASTENER, ROCKER ARM COVER HOLE COVER 패스너
94.075	FASTENER, ROCKER ARM COVER HOLE COVER 패스너

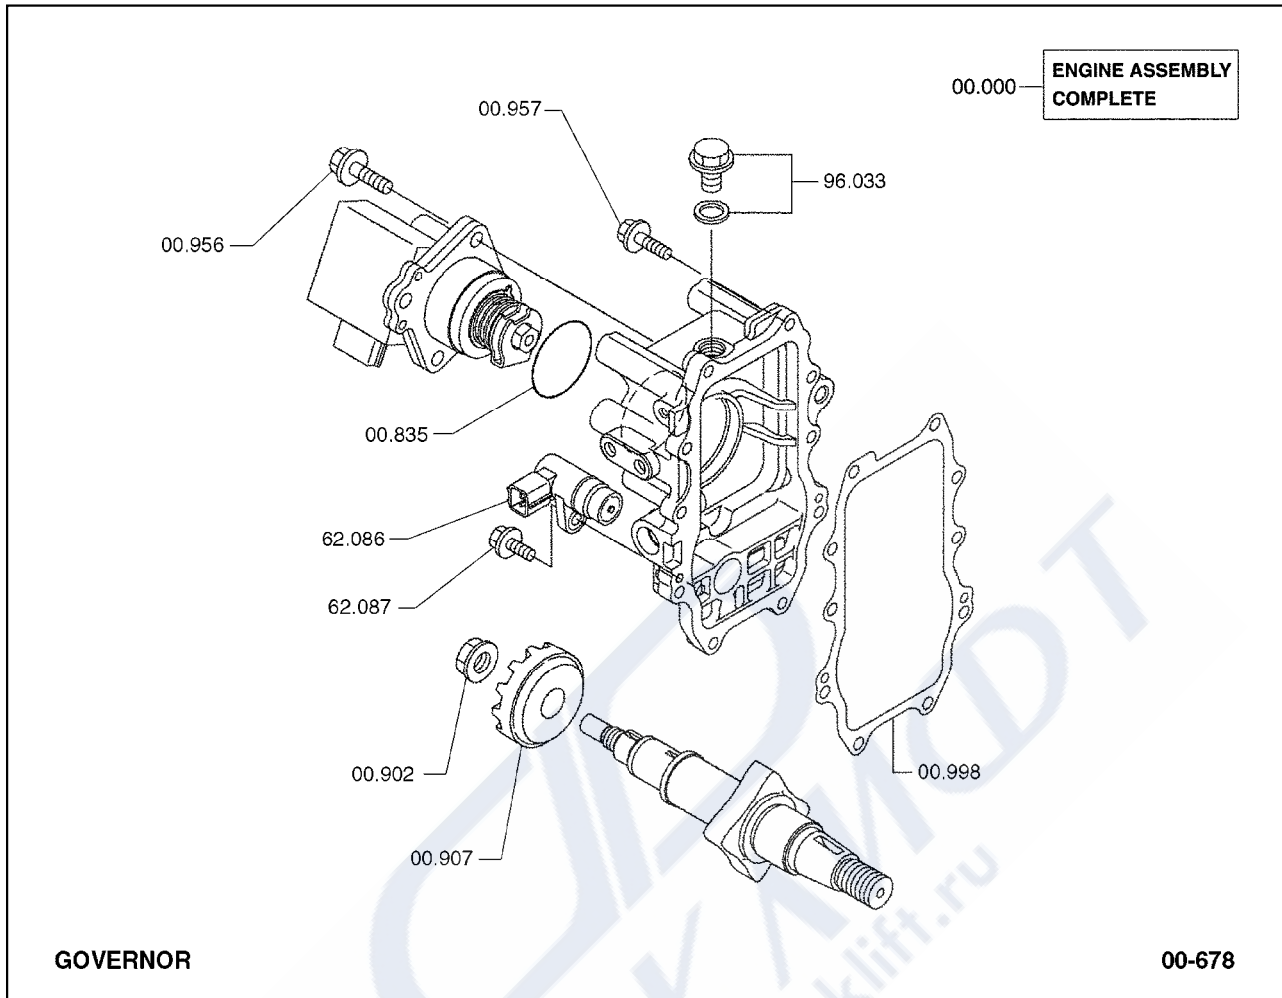 


00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.835	SEAL, GOVERNOR BODY WASHER 씰
00.902	FASTENER, GOVERNOR YOKE TO SHAFT 패스너
00.907	GEAR, GOVERNOR DRIVE SHAFT 기어
00.956	FASTENER, GOVERNOR 패스너
00.957	FASTENER, GOVERNOR 패스너
00.998	GASKET, GOVERNOR ACCESS COVER 가스켓
62.086	SENSOR, ENGINE SPEED 센서
62.087	FASTENER, ENGINE SPEED SENSOR 패스너

96.033

FASTENER, GOVERNOR ACCESS COVER


패스너

 ФОРКЛИФТ
www.forklift.ru

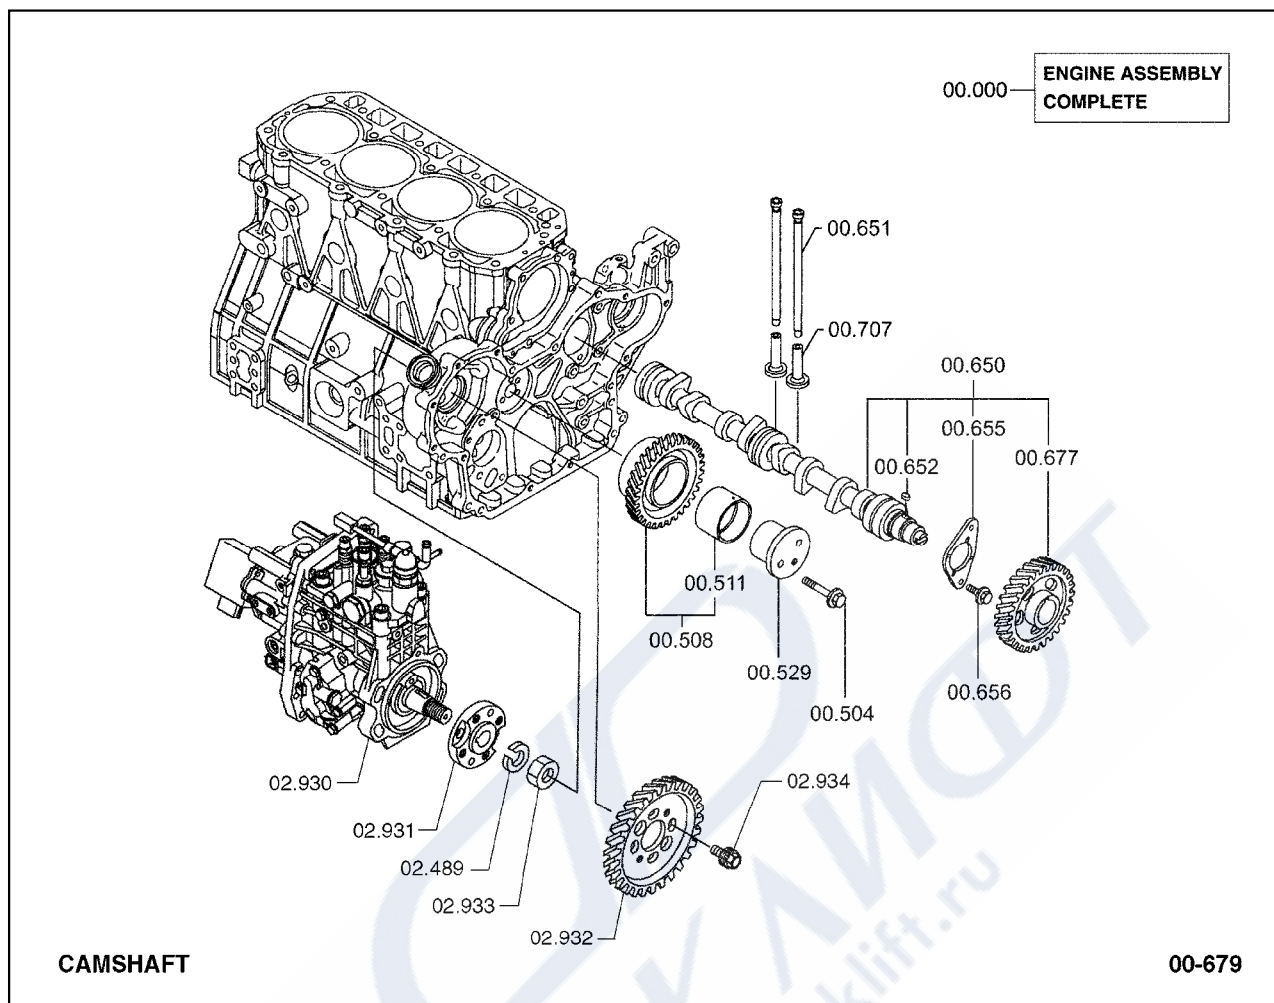

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.504	FASTENER, UPPER IDLER GEAR SPINDLE 패스너
00.508	GEAR, ENGINE LOWER IDLER 기어
00.511	BEARING, IDLER GEAR SHAFT OUTER 베어링
00.529	SPINDLE, IDLER GEAR 스핀들
00.650	CAMSHAFT 캠샤프트
00.651	PUSH ROD, ENGINE ROCKET ARM 푸시로드
00.652	KEY, CAMSHAFT TIMING GEAR WOODRUFF 키
00.655	PLATE, CAMSHAFT THRUST 플레이트


00.656	FASTENER, CAMSHAFT THRUST PLATE 패스너
00.677	GEAR, CAMSHAFT TIMING 기어
00.707	LIFTER, ENGINE VALVE 리프터
02.489	CLIP, ROD TO CARBURETOR 클립
02.930	PUMP ASSEMBLY, FUEL INJECTION 펌프
02.931	HUB, FUEL INJECTION PUMP DRIVE 허브
02.932	GEAR, FUEL INJECTION PUMP DRIVE 기어
02.933	FASTENER, INJECTION PUMP DRIVE HUB 패스너
02.934	FASTENER, INJECTION PUMP DRIVE GEAR 패스너

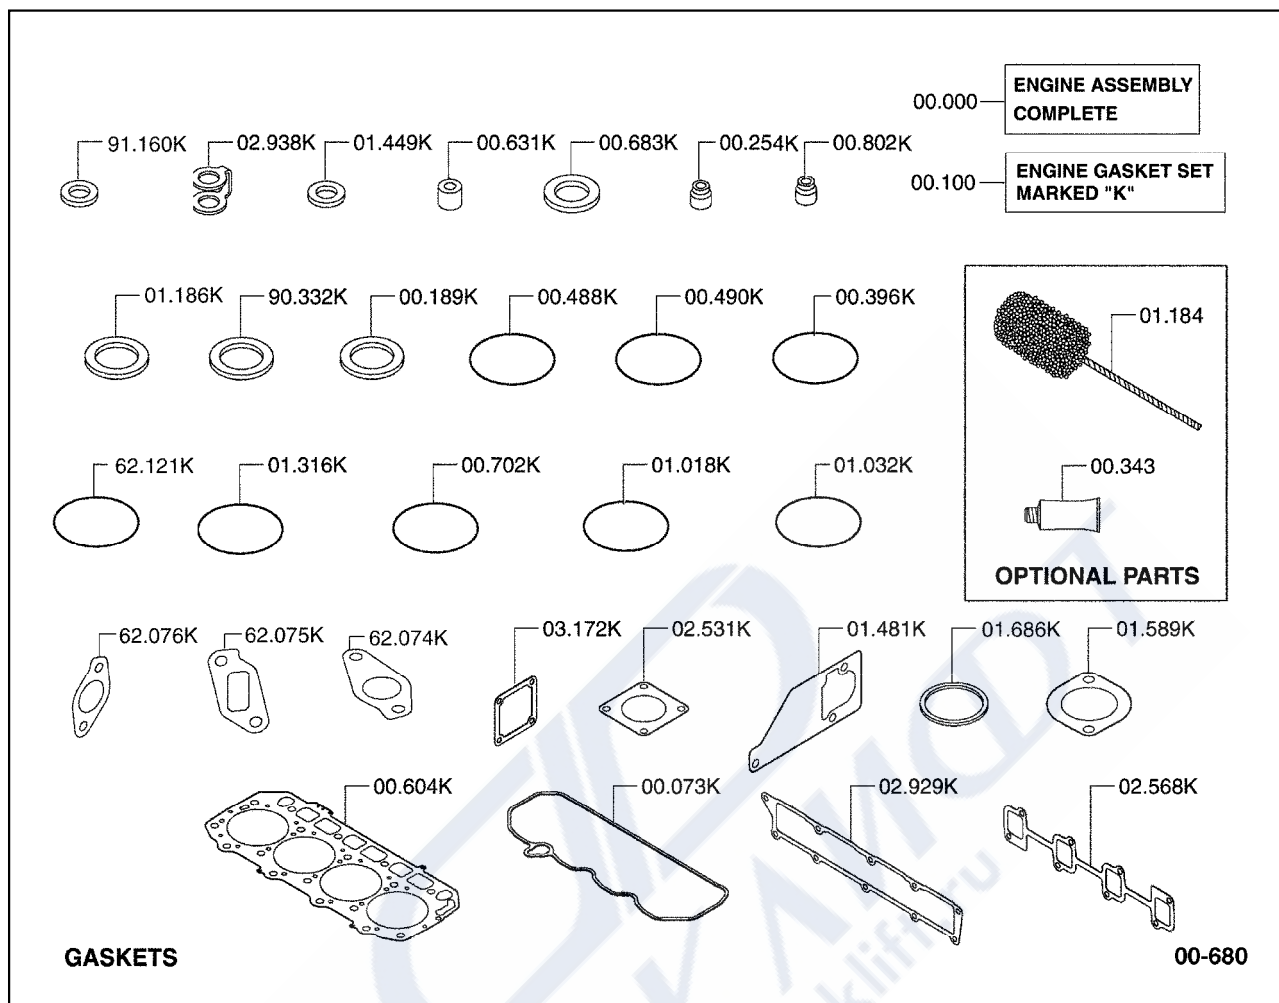 

00.000	PRODUCTION ENGINE ASSEMBLY 엔진	01.032	SEAL, ENGINE WATER PUMP DISCHARGE ELBOW 씰
00.073	GASKET, CRANKCASE HEAD END COVER 가스켓	01.184	CLEANER, FLEX HORN 클리너
00.100	GASKET KIT, ENGINE OVERHAUL 가스켓키트	01.186	FASTENER, ENGINE WATER PUMP THERMOMETER 패스너
00.189	SEAL, CRANKCASE OIL GALLEY PLUG 씰	01.316	SEAL, ENGINE OIL FILTER DRAIN COCK 씰
00.254	SEAL, CYLINDER HEADCOVER FASTENER 씰	01.449	SEAL, ENGINE WATER PUMP 씰
00.343	GASKET, LIQUID 가스켓	01.481	GASKET, ENGINE WATER PUMP BODY 가스켓
00.396	SEAL, ENGINE FRONT GEAR COVER GASKET 씰	01.589	GASKET, WATER OUTLET ELBOW 가스켓
00.488	SEAL, ENGINE FRONT GEAR COVER PLUG 씰	01.686	GASKET, ENGINE THERMOSTAT 가스켓
00.490	SEAL, ENGINE FRONT GEAR COVER PLUG 씰	02.531	GASKET, EXHAUST SYSTEM VENTURI OUTLET 가스켓
00.604	GASKET, CRANKCASE HEAD 가스켓	02.568	GASKET, INTAKE TO EXHAUST MANIFOLD 가스켓
00.631	FASTENER, CRANKCASE HEAD 패스너	02.929	GASKET, INTAKE MANIFOLD 가스켓
00.683	SEAT, EXHAUST VALVE INSERT 시트	02.938	SEAL, INJECTOR LEAK OFF LINE 씰
00.702	SEAL, ROCKER ARM COVER FASTENER 씰	03.172	GASKET, COLD START RESERVOIR COVER 가스켓
00.802	SEAL, CYLINDER SLEEVE 씰	62.074	GASKET, EGR VALVE OUTLET 가스켓
01.018	SEAL, OIL LEVEL DIPSTICK ADAPTOR 씰	62.075	GASKET, EGR VALVE INLET 가스켓

62.076	GASKET, EGR PIPE 가스켓
62.121	O-RING, FUEL INJECTION PUMP LIFTER 오링
90.332	WASHER, CRANKCASE OIL PAN FASTENER 와셔
91.160	LOCKWASHER, WATER OUTLET ELBOW FASTENER 로크와셔




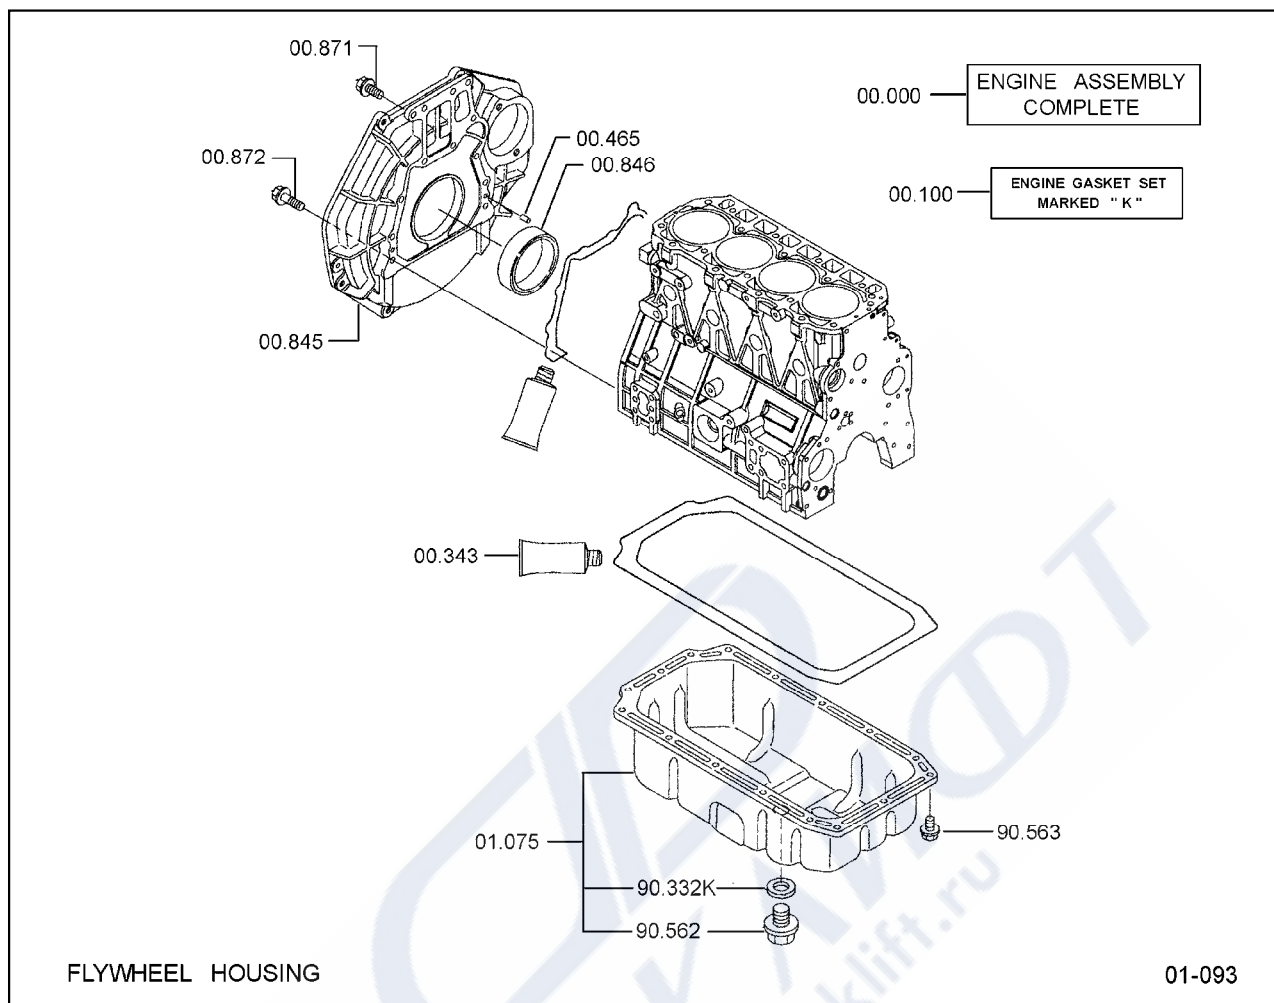 

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.100	GASKET KIT, ENGINE OVERHAUL 가스켓키트
00.343	GASKET, LIQUID 가스켓
00.465	DOWEL, FLYWHEEL 다월
00.845	HOUSING, FLYWHEEL 하우징
00.846	SEAL, FLYWHEEL HOUSING 씰
00.871	FASTENER, FLYWHEEL HOUSING 패스너
00.872	FASTENER, FLYWHEEL HOUSING 패스너
01.075	PAN, CRANKCASE OIL 팬


90.332	WASHER, CRANKCASE OIL PAN FASTENER 와셔
90.562	BOLT, CRANKCASE OIL PAN 볼트
90.563	BOLT, CRANKCASE OIL PAN 볼트



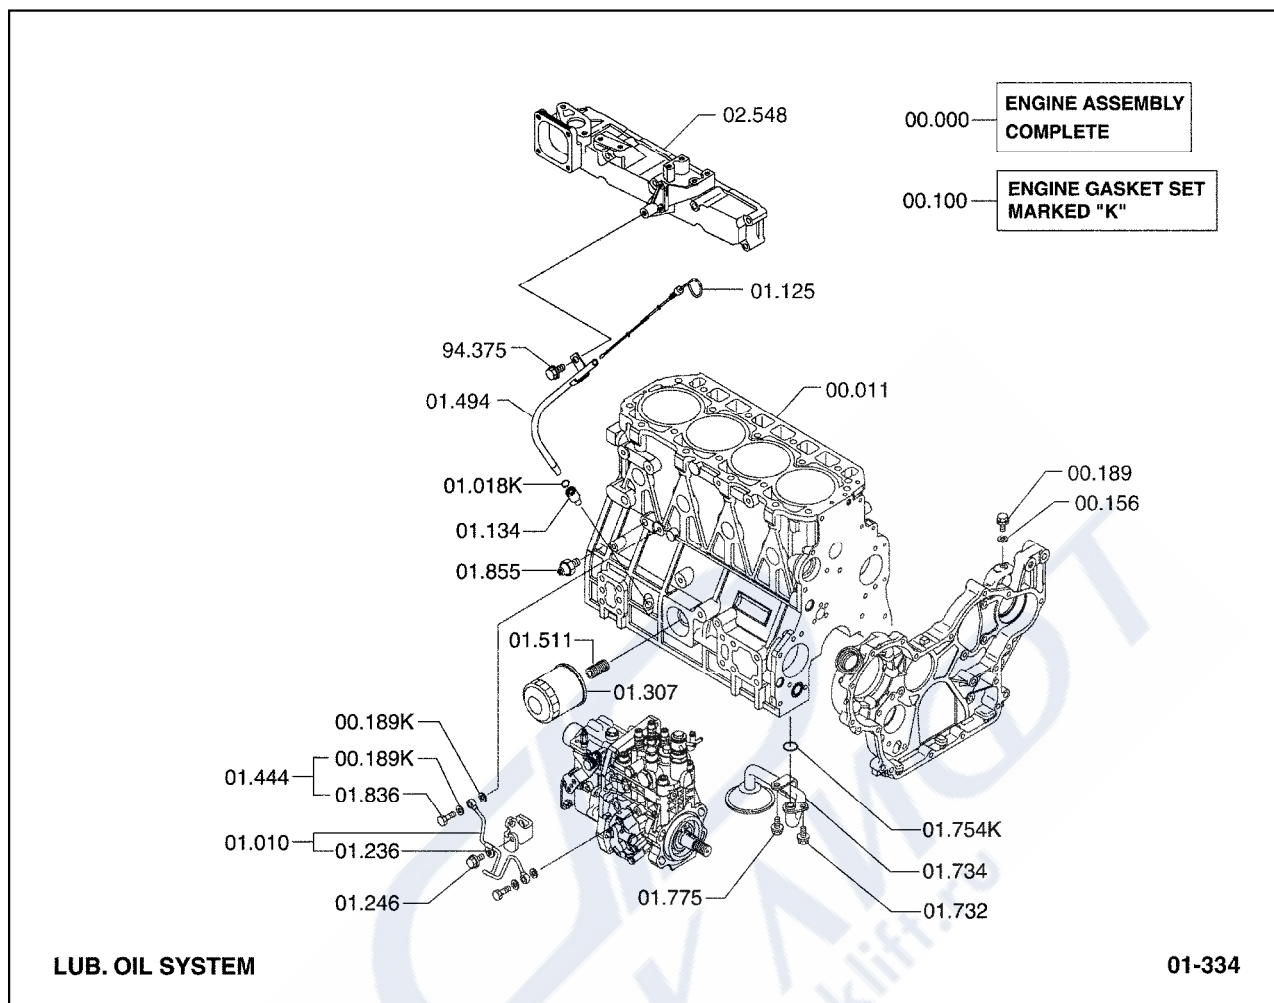 


00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.011	CRANKCASE 크랭크케이스
00.100	GASKET KIT, ENGINE OVERHAUL 가스킷키트
00.156	PLUG, CRANKCASE OIL GALLEY 플러그
00.189	SEAL, CRANKCASE OIL GALLEY PLUG 셀
01.010	LINE, ENGINE OIL 라인
01.018	SEAL, OIL LEVEL DIPSTICK ADAPTOR 셀
01.125	DIPSTICK, CRANKCASE OIL LEVEL 딥스틱
01.134	ADAPTOR, CRANKCASE OIL LEVEL DIPSTICK 어댑터

01.236	SPACER, ENGINE OIL LINE CLIP FASTENER 스페이서
01.246	FASTENER, ENGINE OIL LINE 패스너
01.307	CARTRIDGE & GASKET, ENGINE OIL FILTER 카트리지와 가스켓
01.444	FASTENER, PUMP TO CRANKCASE (THICK FLANGE) 패스너
01.494	TUBE, OIL LEVEL DIPSTICK ADAPTOR 튜브
01.511	ADAPTOR, ENGINE OIL FILTER 어댑터
01.732	FASTENER, OIL PUMP STRAINER TUBE 패스너
01.734	LINE, OIL PUMP STRAINER 라인
01.754	SEAL, OIL PUMP OUTLET TUBE FITTING 씰
01.775	BOLT, OIL PUMP STRAINER BRACKET 볼트
01.836	BOLT, ENGINE OIL BY-PASS FILTER OUTLET LINES 볼트
01.855	SENSOR, OIL PRESSURE 센서
02.548	MANIFOLD, INTAKE 매니폴드
94.375	FASTENER, CRANKCASE OIL LEVEL DIPSTICK ADAPTOR BRA 패스너

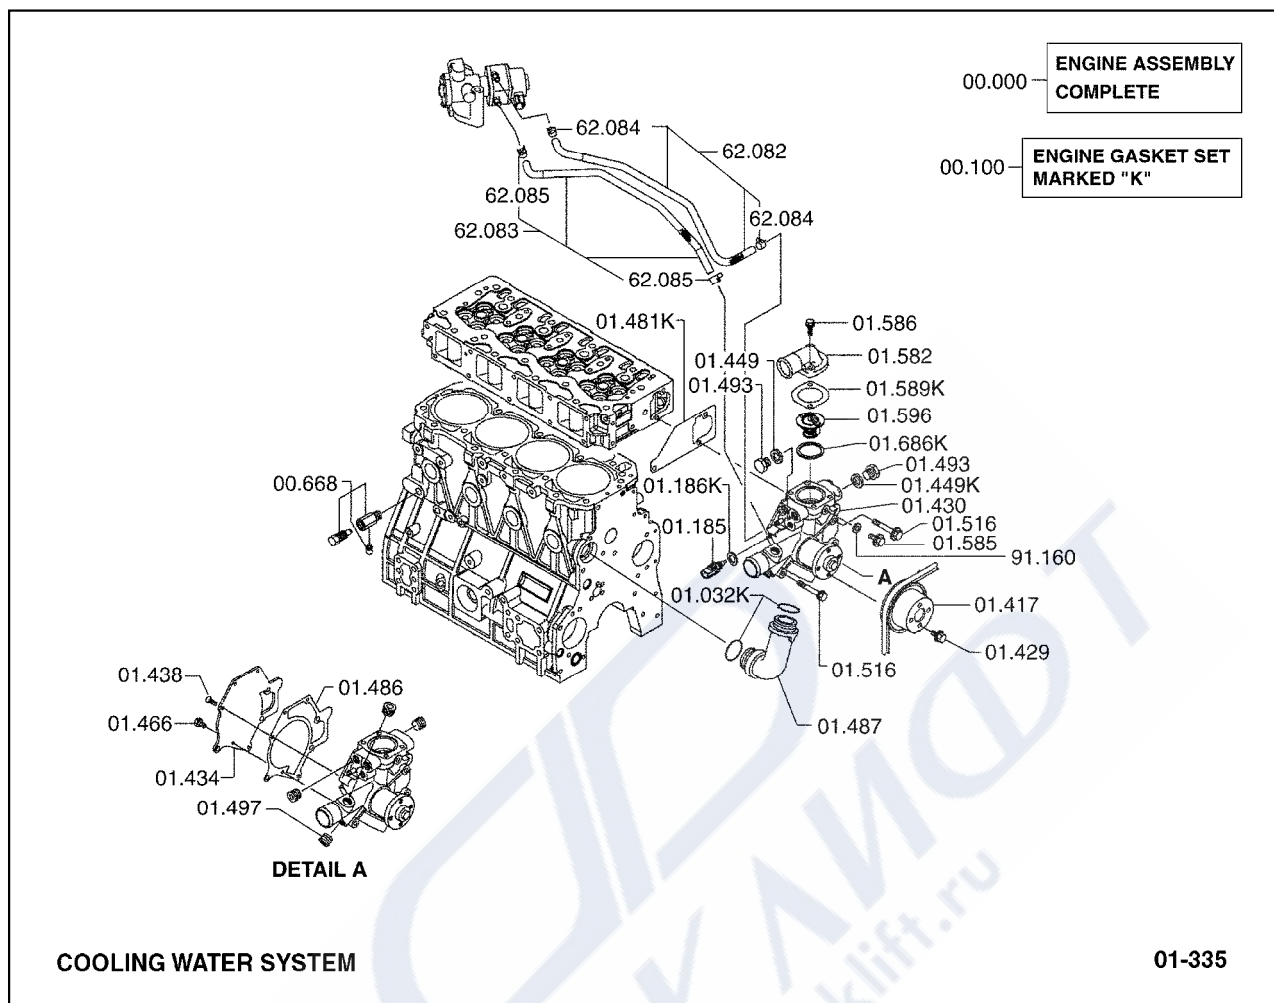 


00.000	PRODUCTION ENGINE ASSEMBLY 엔진	01.487	HOSE, ENGINE WATER PUMP DISCHARGE 호스
00.100	GASKET KIT, ENGINE OVERHAUL 가스켓키트	01.493	ADAPTOR, OIL LEVEL DIPSTICK 어댑터
00.668	PLUG, CRANKCASE WATER 플러그	01.497	PLUG, WATER PUMP BODY 플러그
01.032	SEAL, ENGINE WATER PUMP DISCHARGE ELBOW 씰	01.516	FASTENER, ENGINE WATER PUMP DISCHARGE FLANGE 패스너
01.185	THERMOMETER, ENGINE WATER PUMP 온도계	01.582	ELBOW, WATER OUTLET 엘보우
01.186	FASTENER, ENGINE WATER PUMP THERMOMETER 패스너	01.585	FASTENER, WATER OUTLET ELBOW-REAR 패스너
01.417	PULLEY, FAN 풀리	01.586	FASTENER, WATER OUTLET ELBOW - FANSIDE 패스너
01.429	FASTENER, FAN CONTROL 패스너	01.589	GASKET, WATER OUTLET ELBOW 가스켓
01.430	PUMP ASSEMBLY, ENGINE WATER 펌프	01.596	THERMOSTAT, ENGINE 서모스탯
01.434	COVER, WATER PUMP 커버	01.686	GASKET, ENGINE THERMOSTAT 가스켓
01.438	FASTENER, WATER PUMP 패스너	62.082	PIPE, EGR VALVE TO WATER PUMP 파이프
01.449	SEAL, ENGINE WATER PUMP 씰	62.083	PIPE, EGR VALVE TO WATER PUMP 파이프
01.466	FASTENER, WATER PUMP COVER 패스너	62.084	CLAMP, EGR VALVE TO WATER PUMP 클램프
01.481	GASKET, ENGINE WATER PUMP BODY 가스켓	62.085	CLAMP, EGR VALVE TO WATER PUMP 클램프
01.486	GASKET, WATER PUMP FRONT TO REAR BODY 가스켓	91.160	LOCKWASHER, WATER OUTLET ELBOW FASTENER 로크와셔

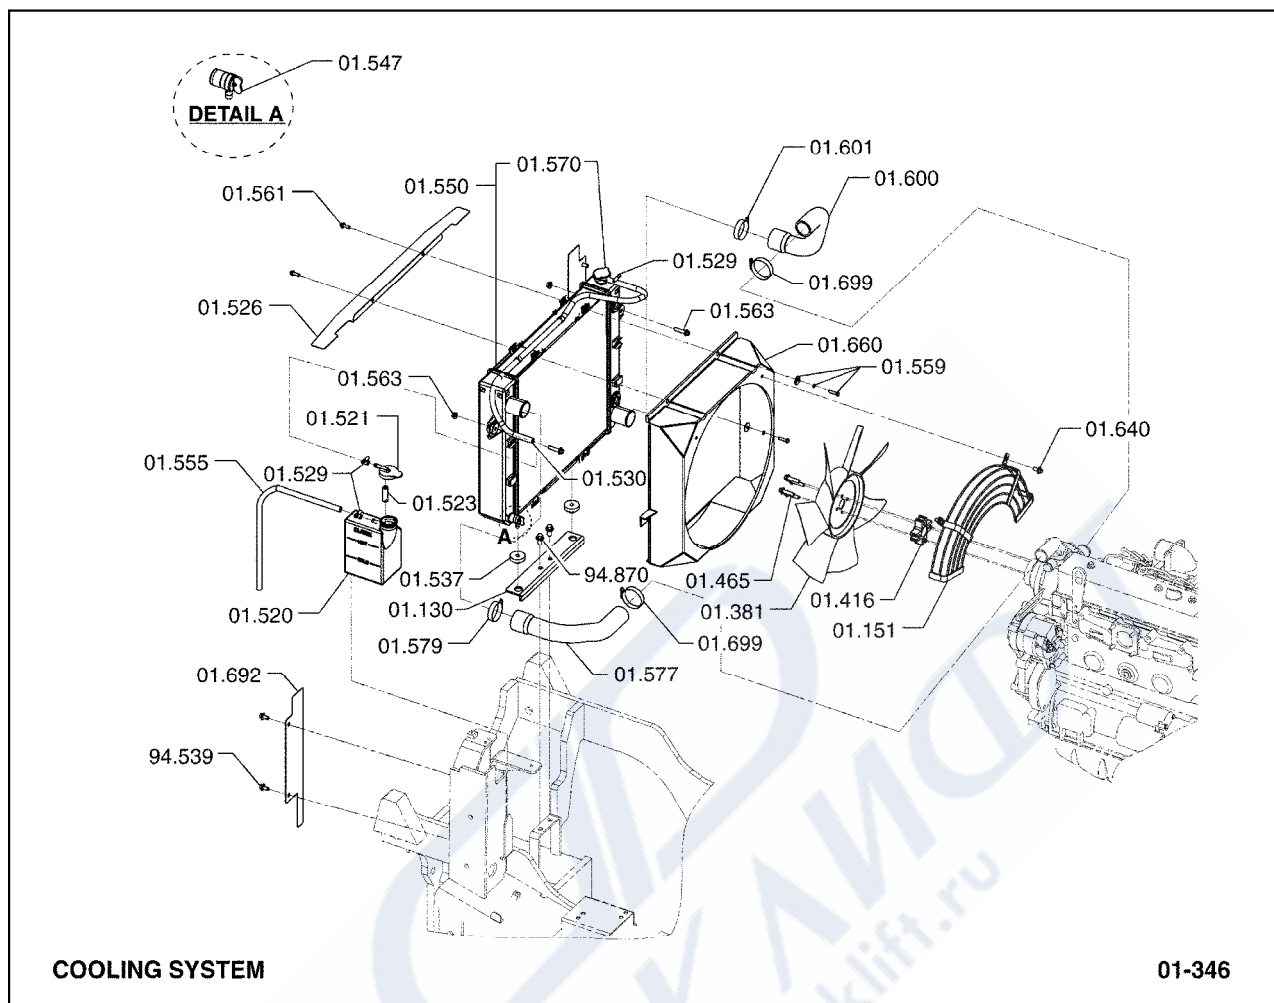 

01.130	BRACKET, RADIATOR 브라켓	01.559	FASTENER, RADIATOR UPPER SUPPORT (RADIATOR END) 패스너
01.151	GUARD, RADIATOR FAN 가드	01.561	FASTENER, RADIATOR MOUNTING 패스너
01.381	BLADE, FAN 블레이드	01.563	FASTENER, RADIATOR MOUNTING BRACKET 패스너
01.416	SPACER, FAN BLADE 스페이서	01.570	CAP, RADIATOR 캡
01.465	FASTENER, FAN BLADE SPACER 패스너	01.577	HOSE, RADIATOR UPPER 호스
01.520	COMPENSATION TANK, COOLING SYSTEM 보상기	01.579	CLAMP, RADIATOR UPPER HOSE 클램프
01.521	COVER, COMPENSATION TANK 커버	01.600	HOSE, RADIATOR LOWER 호스
01.523	LINE, COOLING SYSTEM COMPENSATION TANK 라인	01.601	CLAMP, RADIATOR LOWER HOSE 클램프
01.526	BRACKET, RADIATOR FILLER MOUNTING 브라켓	01.640	FASTENER, RADIATOR SHROUD EXTENTION 패스너
01.529	CLAMP, RADIATOR OVERFLOW LINE 클램프	01.660	SHROUD, RADIATOR 슈라우드
01.530	LINE, RADIATOR FILLER 라인	01.692	SUPPORT, COOLING SYSTEM COMPENSATION TANK 서포트
01.537	PAD, RADIATOR MOUNTING LOWER 패드	01.699	CLAMP, RADIATOR HOSE FASTENER 클램프
01.547	DRAIN COCK, RADIATOR 드레인콕	94.539	FASTENER, COMPENSATION TANK BRACKET 패스너
01.550	RADIATOR 라디에이터	94.870	FASTENER, RADIATOR MOUNTING BRACKET 패스너
01.555	LINE, RADIATOR OVERFLOW 라인		

 
ASSEMBLY
COMPLETE — 02.225

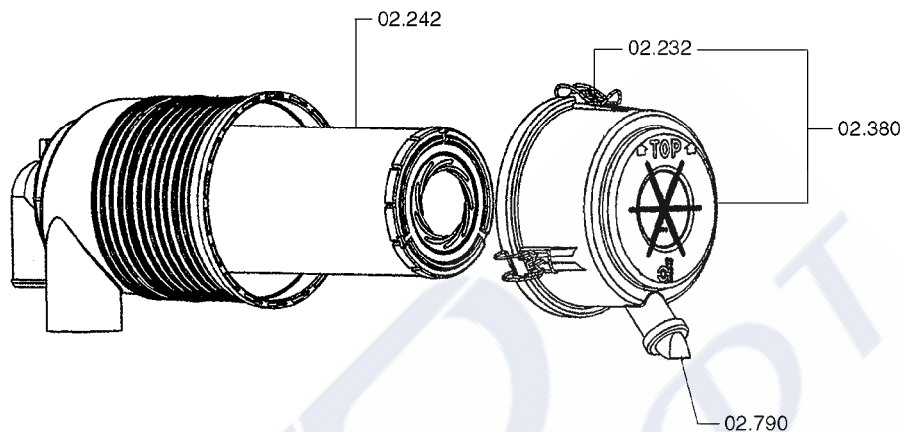


AIR CLEANER ASSEMBLY

02-474

02.225	CLEANER ASSEMBLY, ENGINE INTAKE AIR 에어클리너
02.232	CLAMP, INTAKE AIR CLEANER 클램프
02.242	ELEMENT & GASKET, ENGINE INTAKE AIR CLEANER 엘리먼트& 가스켓
02.380	CAP, FILTER 캡
02.790	VALVE, ENGINE INTAKE AIR CLEANER DUST UNLDR 밸브

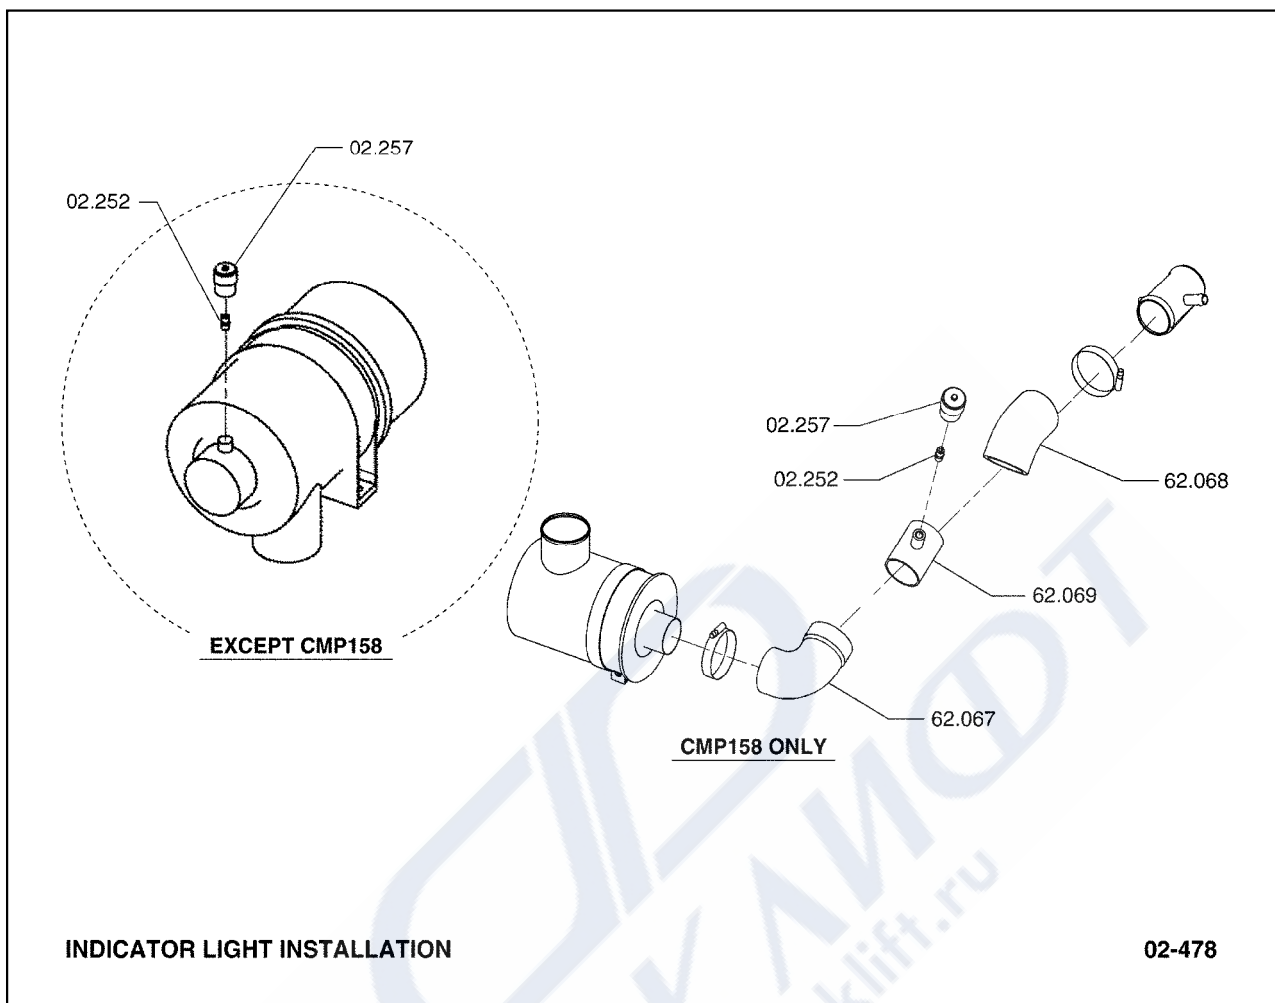 

02.252	FITTING, MAIN AIR CLEANER OUTLET TUBE 피팅
02.257	INDICATOR, ENGINE INTAKE AIR CLEANER AIR RES 인디케이터
62.067	HOSE, AIR CLEANER INTAKE 호스
62.068	HOSE, AIR CLEANER INTAKE 호스
62.069	TUBE, AIR CLEANER INTAKE 튜브

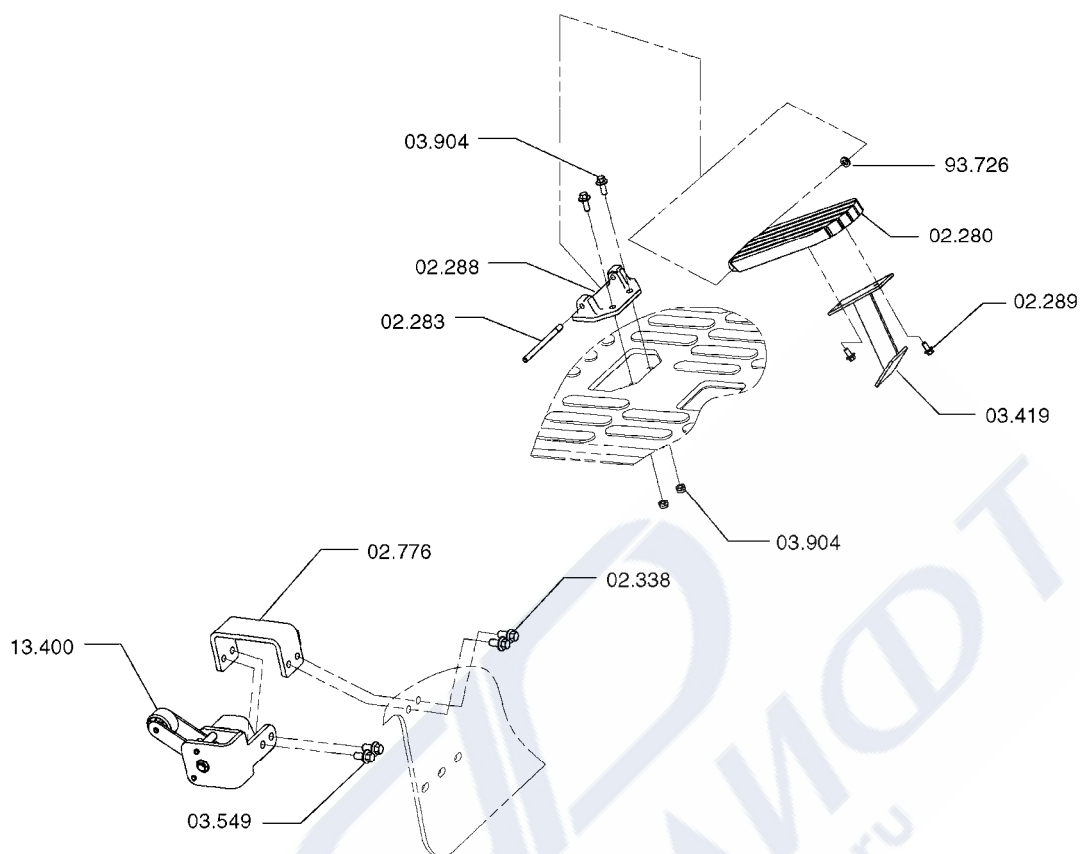 


ACCELERATOR SYSTEM

02-480

02.280	PEDAL, ACCELERATOR 페달
02.283	PIN, ACCELERATOR PEDAL TO BRACKET PIVOT 핀
02.288	BRACKET, ACCELERATOR PEDAL ATTACHING 브라켓
02.289	FASTENER, ACCELERATOR PEDAL BRACKET ATTACHING 패스너
02.338	FASTENER, ACCELERATOR LEVER MOUNTING BRACKET 패스너
02.776	BRACKET, ACCELERATOR CONTROL CABLE 브라켓
03.419	WEAR PLATE, ACCELERATOR PEDAL ROLLER 웨어플레이트
03.549	FASTENER, ACCELERATOR LINKAGE MOUNTING BRACKET 패스너
03.904	FASTENER, ACCELERATOR PEDAL ROLLER BRACKET 패스너


13.400	CONTROL ASSEMBLY, ACCELERATING 컨트롤
93.726	WASHER, ACCELERATOR PEDAL PIVOT RETAINER 와셔



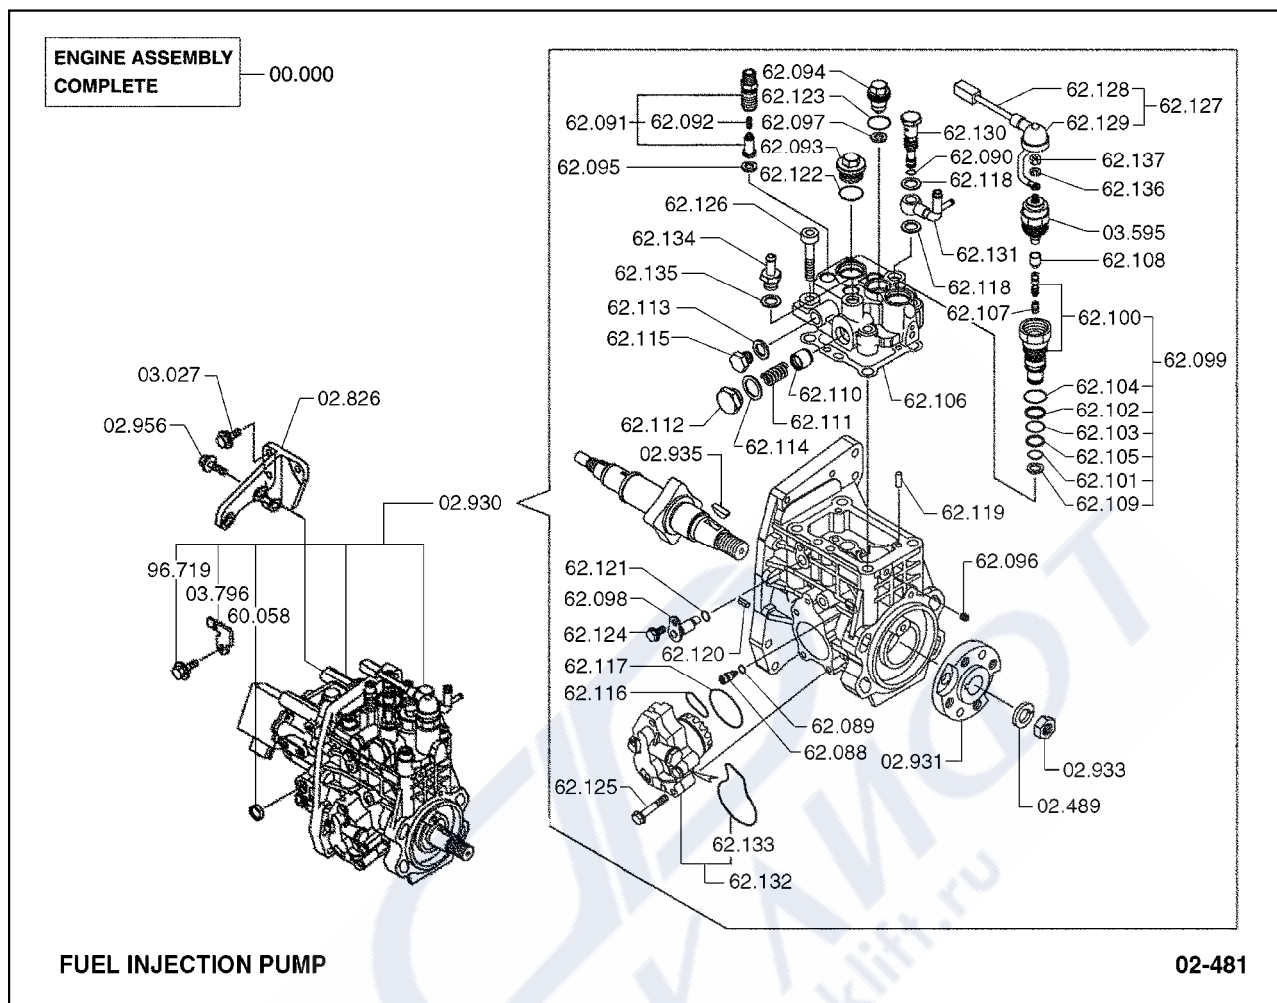 


00.000	PRODUCTION ENGINE ASSEMBLY 엔진	62.091	GUIDE, FUEL INJECTION PUMP HEAD 가이드
02.489	CLIP, ROD TO CARBURETOR 클립	62.092	SPRING, FUEL INJECTION PUMP HEAD 스프링
02.826	BRACKET, FUEL LINE CLIP 브라켓	62.093	PLUG, FUEL INJECTION PUMP HEAD 플러그
02.930	PUMP ASSEMBLY, FUEL INJECTION 펌프	62.094	PLUG, FUEL INJECTION PUMP HEAD 플러그
02.931	HUB, FUEL INJECTION PUMP DRIVE 허브	62.095	SEAL, FUEL INJECTION PUMP HEAD 씰
02.933	FASTENER, INJECTION PUMP DRIVE HUB 패스너	62.096	PLUG, FUEL INJECTION PUMP BODY 플러그
02.935	KEY, FUEL INJECTION PUMP SHAFT 키	62.097	SEAL, FUEL INJECTION PUMP HEAD PLUG 씰
02.956	FASTENER, FUEL INJECTION PUMP 패스너	62.098	LIFTER, FUEL INJECTION PUMP 리프터
03.027	FASTENER, FUEL INJECTION PUMP 패스너	62.099	TIMER SET, FUEL INJECTION PUMP 타이머
03.595	SOLENOID VALVE, INJECTION PUMP COLD ADVANCE DEVI 솔레노이드 밸브	62.100	TIMER, FUEL INJECTION PUMP 타이머
03.796	LEVER, INJECTION PUMP CONTROL 레버	62.101	O-RING, FUEL INJECTION PUMP TIMER 오링
60.058	SEAL, BOOM POSITIONING SWITCH SHAFT 씰	62.102	SEAL, FUEL INJECTION PUMP TIMER 씰
62.088	STOPPER, FUEL INJECTION PUMP 스토퍼	62.103	O-RING, FUEL INJECTION PUMP TIMER 오링
62.089	O-RING, FUEL INJECTION PUMP STOPPER 오링	62.104	SEAL, FUEL INJECTION PUMP TIMER 씰
62.090	O-RING, FUEL INJECTION PUMP JOINT 오링	62.105	O-RING, FUEL INJECTION PUMP TIMER 오링

62.106	GASKET, FUEL INJECTION PUMP HEAD 가스켓
62.107	SPRING, FUEL INJECTION PUMP TIMER 스프링
62.108	CAP, FUEL INJECTION PUMP TIMER 캡
62.109	SEAL, FUEL INJECTION PUMP TIMER 씰
62.110	PISTON, FUEL INJECTION PUMP HEAD 피스톤
62.111	SPRING, FUEL INJECTION PUMP HEAD 스프링
62.112	PLUG, FUEL INJECTION PUMP HEAD 플러그
62.113	SEAL, FUEL INJECTION PUMP HEAD PLUG 씰
62.114	SEAL, FUEL INJECTION PUMP HEAD PLUG 씰
62.115	PLUG, FUEL INJECTION PUMP HEAD 플러그
62.116	O-RING, FUEL FEED PUMP 오링
62.117	O-RING, FUEL FEED PUMP 오링
62.118	SEAL, FUEL INJECTION PUMP JOINT 씰
62.119	PIN, FUEL INJECTION PUMP 핀
62.120	SPRING PIN, FUEL INJECTION PUMP 스프링핀
62.121	O-RING, FUEL INJECTION PUMP LIFTER 오링
62.122	SEAL, FUEL INJECTION PUMP HEAD PLUG 씰
62.123	O-RING, FUEL INJECTION PUMP HEAD PLUG 오링
62.124	FASTENER, FUEL INJECTION PUMP LIFTER 패스너
62.125	FASTENER, FUEL FEED PUMP 패스너
62.126	FASTENER, FUEL INJECTION PUMP HEAD 패스너
62.127	HARNESS SET, FUEL INJECTION PUMP SOLENOID 하네스
62.128	HARNESS, FUEL INJECTION PUMP SOLENOID 하네스
62.129	CAP, FUEL INJECTION PUMP SOLENOID 캡
62.130	JOINT, FUEL INJECTION PUMP 조인트
62.131	JOINT, FUEL INJECTION PUMP 조인트
62.132	PUMP ASSEMBLY, FUEL FEED 펌프
62.133	O-RING, FUEL FEED PUMP 오링
62.134	JOINT, FUEL INJECTION PUMP HEAD 조인트
62.135	SEAL, FUEL INJECTION PUMP HEAD JOINT 씰
62.136	LOCKWASHER, FUEL INJECTION PUMP SOLENOID 로크와셔
62.137	NUT, FUEL INJECTION PUMP SOLENOID 너트
96.719	SCREW, LEVER STOP 스크류

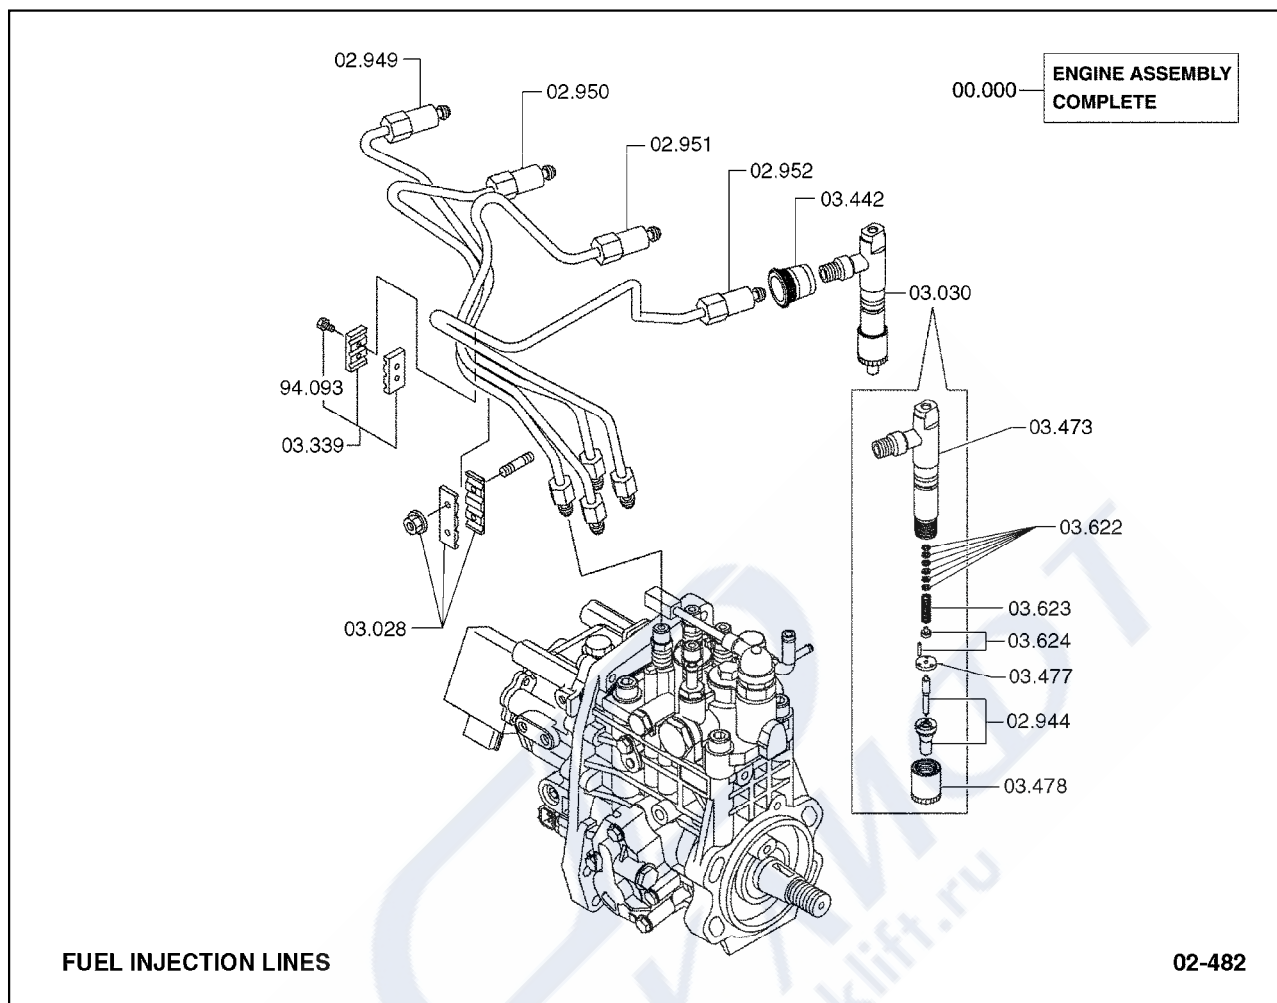 


00.000	PRODUCTION ENGINE ASSEMBLY 엔진
02.944	NOZZLE, FUEL INJECTOR 노즐
02.949	LINE, INJECTOR (NO 1 CYLINDER) 라인
02.950	LINE, INJECTOR (NO 2 CYLINDER) 라인
02.951	LINE, INJECTOR (NO 3 CYLINDER) 라인
02.952	LINE, INJECTOR (NO 4 CYLINDER) 라인
03.028	CLIP, INJECTOR LINE 클립
03.030	INJECTOR ASSEMBLY, FUEL 인젝터
03.339	CLIP, FUEL INJECTOR LINE 클립

03.442	FITTING, INJECTOR LEAK-OFF LINE 피팅
03.473	BODY, FUEL INJECTOR 바디
03.477	SPACER, FUEL INJECTOR PRESSURE PIN 스페이서
03.478	NUT, FUEL INJECTOR BODY RETAINING 너트
03.622	SHIM, FUEL INJECTOR HOUSING 심
03.623	SPRING, FUEL INJECTOR HOUSING 스프링
03.624	RETAINER, FUEL INJECTOR HOUSING SPRING 리테이너
94.093	FASTENER, FUEL LINE CLIP 패스너

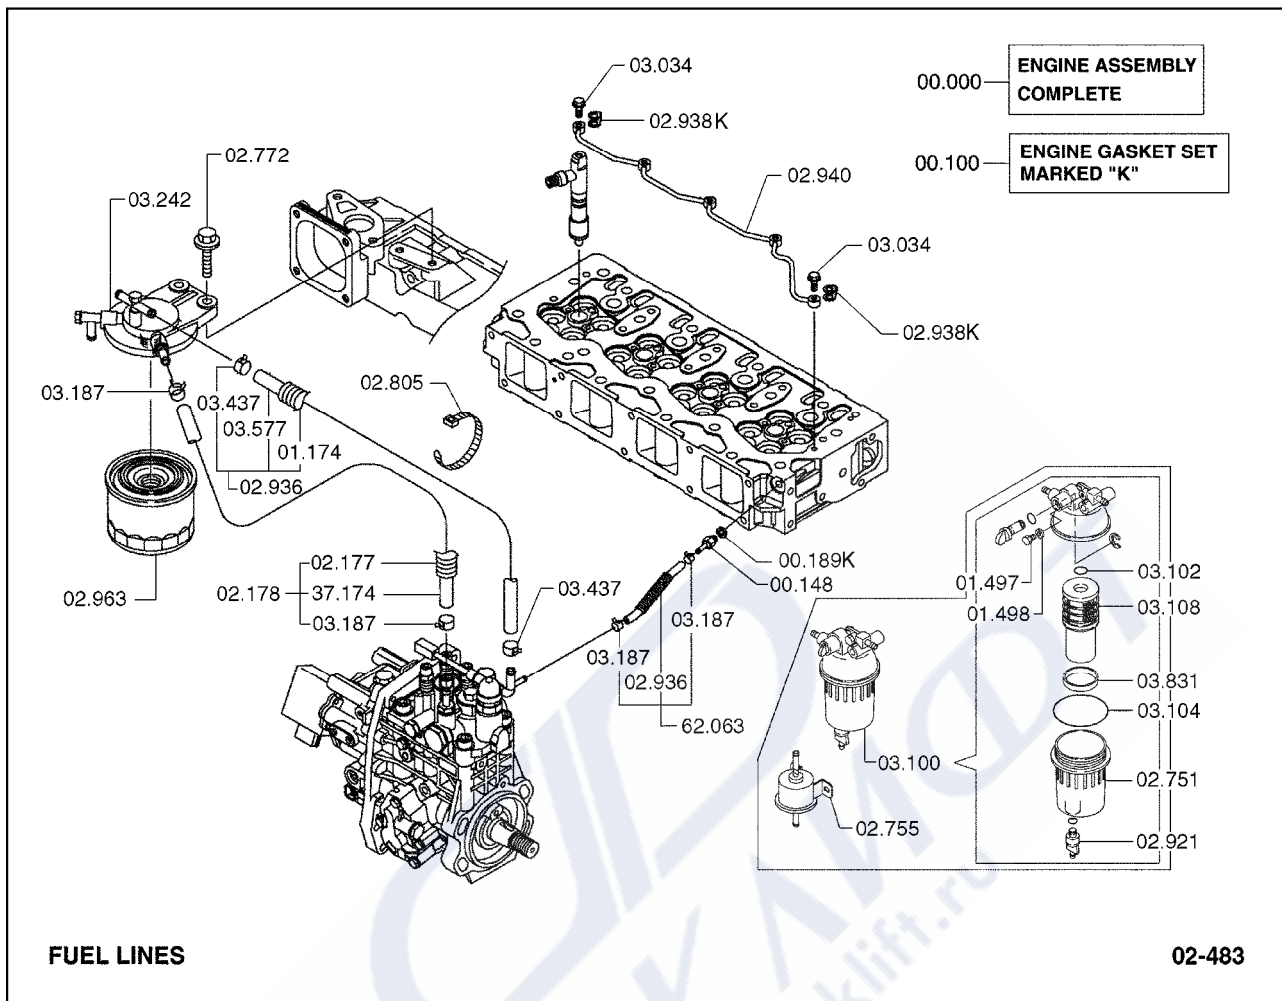 

00.000	PRODUCTION ENGINE ASSEMBLY 엔진	02.938	SEAL, INJECTOR LEAK OFF LINE 씰
00.100	GASKET KIT, ENGINE OVERHAUL 가스켓키트	02.940	LINE, INJECTOR LEAK OFF 라인
00.148	FITTING, CRANKCASE VENT TUBE 피팅	02.963	ELEMENT, FUEL FILTER 엘리먼트
00.189	SEAL, CRANKCASE OIL GALLEY PLUG 씰	03.034	FITTING-BOLT, INJECTOR LEAK-OFF LINE 피팅
01.174	PROTECTOR, FUEL LINE 보호장치	03.100	STRAINER ASSEMBLY, FUEL 스트레이너
01.497	PLUG, WATER PUMP BODY 플러그	03.102	SEAL, FUEL STRAINER DRAIN PLUG 씰
01.498	SEAL, WATER PUMP BODY PLUG 씰	03.104	SEAL, FUEL STRAINER BOWL FASTENER 씰
02.177	LINE, FILTER INLET 라인	03.108	ELEMENT, FUEL STRAINER 엘리먼트
02.178	LINE, FILTER OUTLET 라인	03.187	CLIP, FUEL LINE 클립
02.751	BOWL, FUEL STRAINER 바울	03.242	FITTING BODY, FUEL FILTER INLET 피팅
02.755	PUMP, FUEL 펌프	03.437	CLAMP, FUEL INJECTOR LINE 클램프
02.772	FASTENER, FUEL FILTER COVER 패스너	03.577	LINE, ENGINE FUEL FILTER 라인
02.805	CLAMP, FUEL RETURN LINE 클램프	03.831	FLOAT AND HINGE 플로트& 힌지
02.921	PLUG, FUEL FILTER DRAIN 플러그	37.174	PROTECTOR, OIL SUMP BREATHER LINE 보호장치
02.936	LINE, INJECTION PUMP RETURN 라인	62.063	LINE, FUEL STRAINER 라인

 
NOTE :
NON SERVICEABLE
ITEMS MARKED "N"

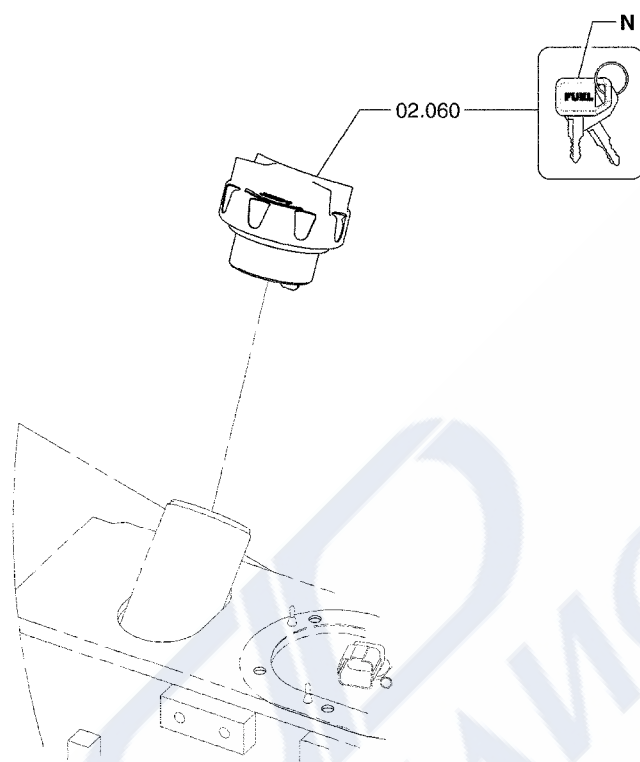


FUEL CAP WITH KEY

02-489

 02.060 CAP, FUEL TANK
캡

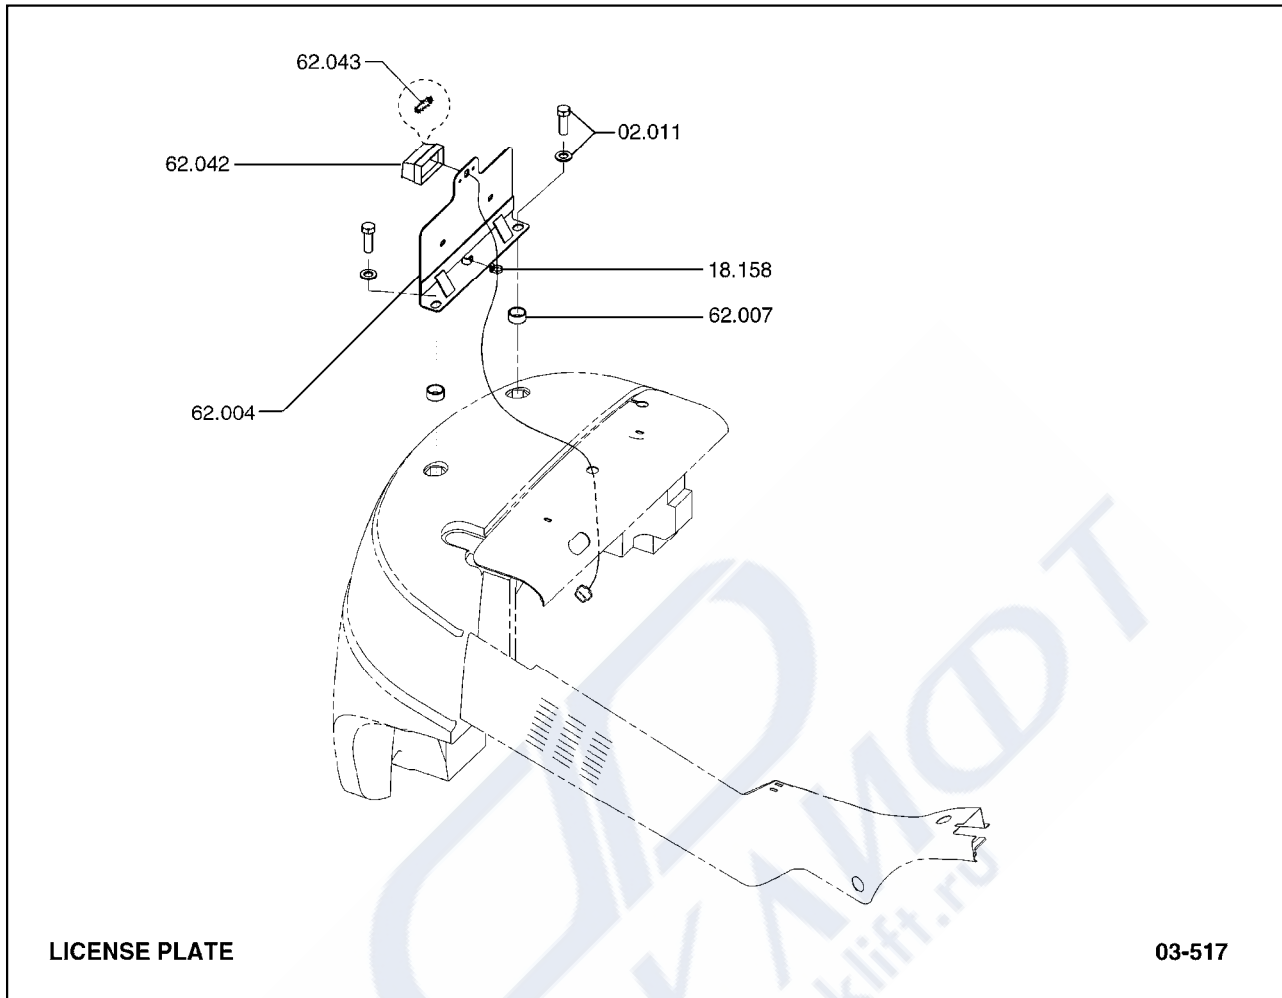


02.011	FASTENER, TANK REAR MOUNTING BRACKET 패스너
18.158	CLAMP, WIRE HARNESS 클램프
62.004	PLATE, LICENSE 플레이트
62.007	SHIM, TANK BRACKET 심
62.042	LAMP ASSEMBLY, LICENSE PLATE 램프
62.043	BULB, LICENSE PLATE LAMP 전구

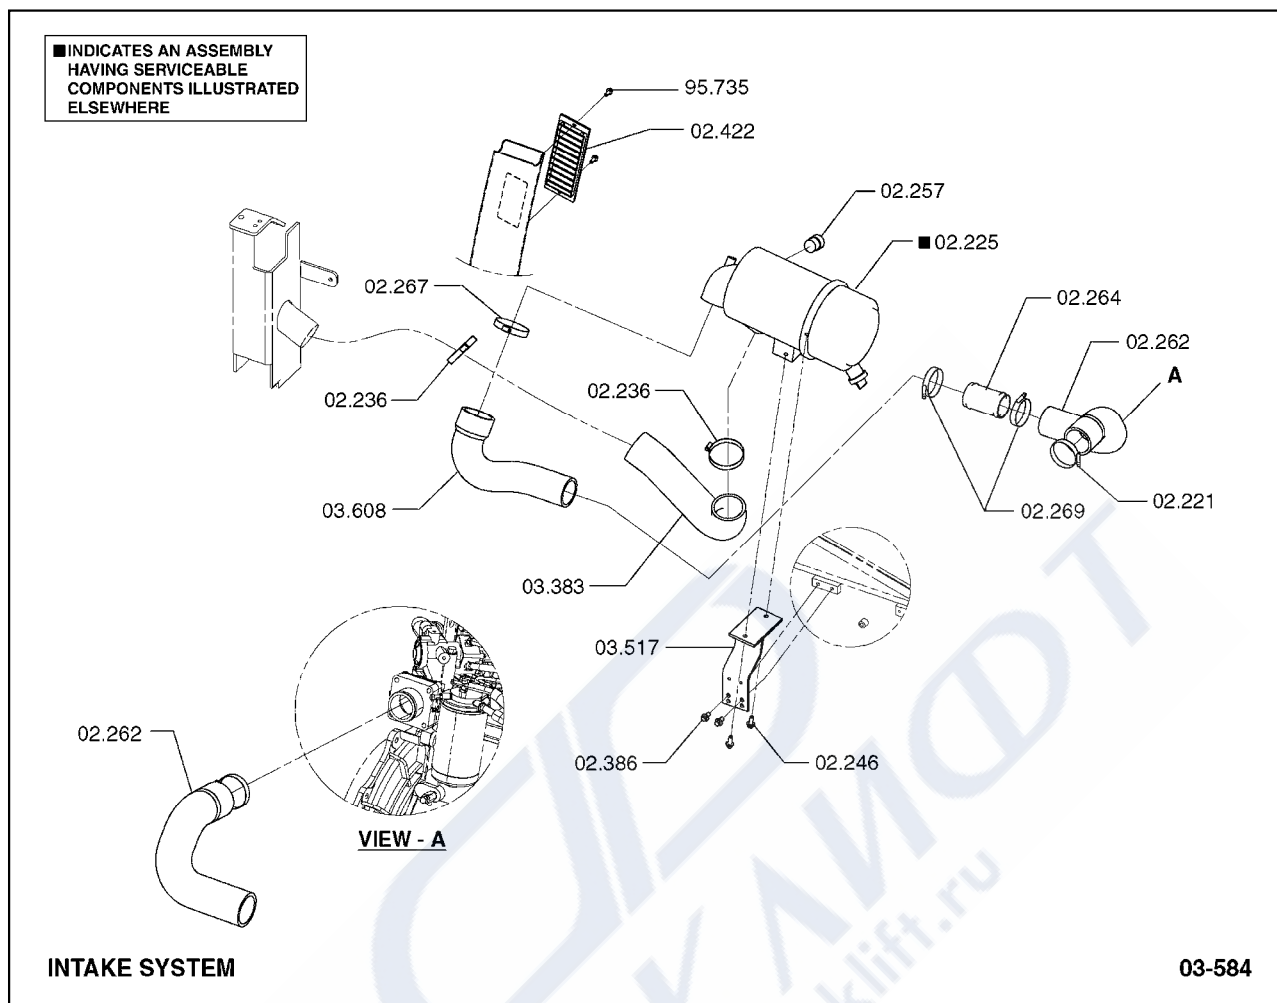 


- 02.221 CLAMP, MAIN AIR CLEANER OUTLET HOSE
클램프
- 02.225 CLEANER ASSEMBLY, ENGINE INTAKE AIR
에어클리너
- 02.236 CLAMP, MAIN AIR CLEANER INLET HOSE
클램프
- 02.246 FASTENER, ENGINE INTAKE AIR CLEANER ATTACHING
패스너
- 02.257 INDICATOR, ENGINE INTAKE AIR CLEANER AIR RES
인디케이터
- 02.262 HOSE, MAIN AIR CLEANER OUTLET
호스
- 02.264 TUBE, MAIN AIR CLEANER OUTLET
튜브
- 02.267 CLAMP, MAIN AIR CLEANER OUTLET HOSE
클램프
- 02.269 CLAMP, MAIN AIR CLEANER OUTLET HOSE
클램프

02.422	SCREEN, ENGINE INTAKE AIR 스크린
03.383	LINE, MAIN AIR CLEANER INLET LINE 라인
03.517	BRACKET, AIR CLEANER MOUNTING 브라켓
03.608	HOSE, AIR CLEANER OUTLET 호스
95.735	FASTENER, ENGINE AIR INTAKE SCREEN 패스너

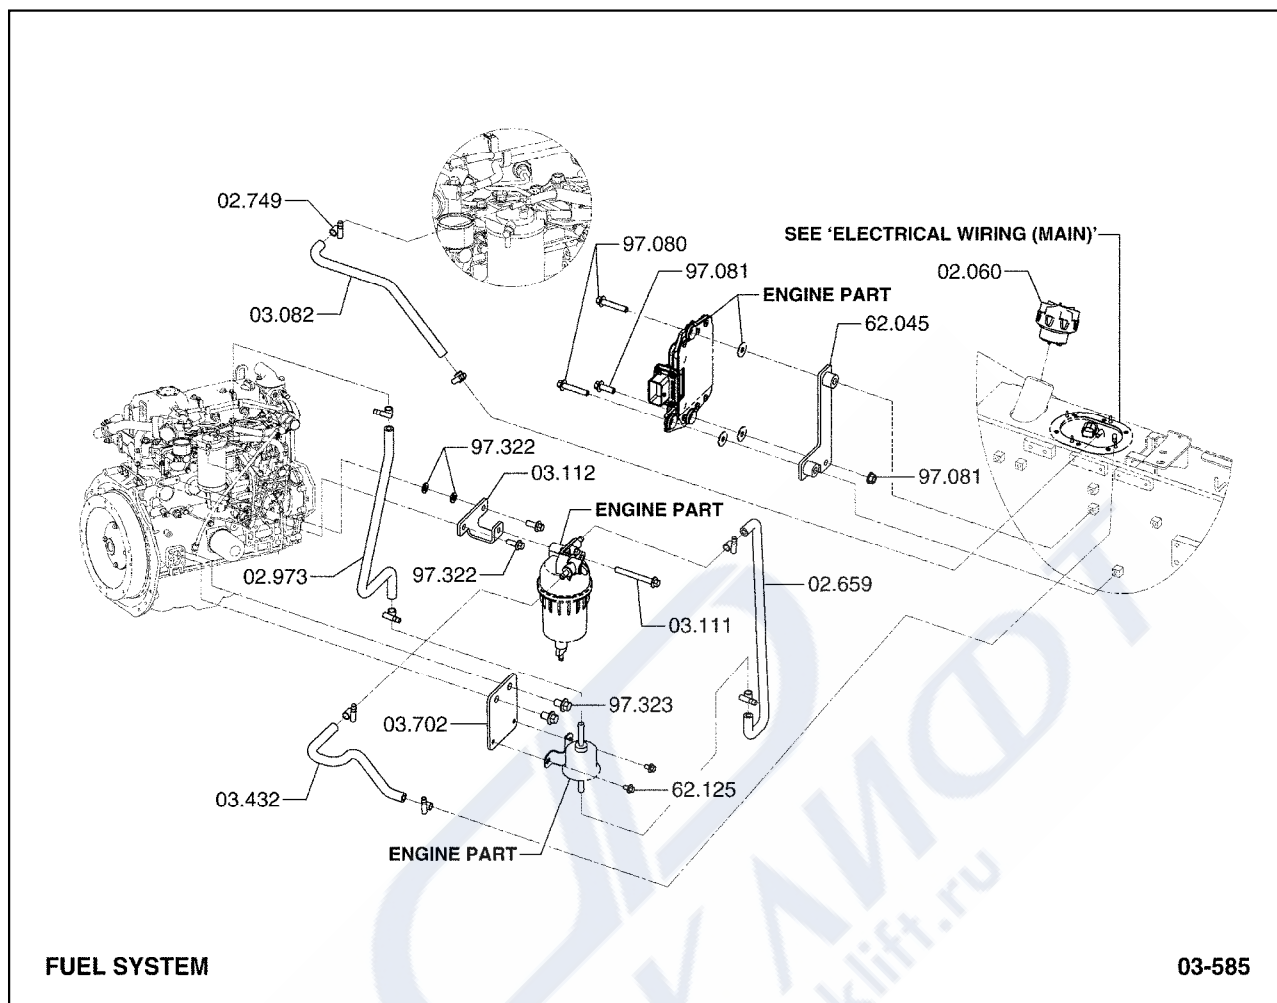 

02.060	CAP, FUEL TANK 캡
02.659	LINE, FUEL PUMP INLET 라인
02.749	CLAMP, TANK TO FUEL PUMP LINE 클램프
02.973	LINE, FUEL PUMP OUTLET 라인
03.082	LINE, FUEL TANK RETURN 라인
03.111	FASTENER, FUEL STRAINER 패스너
03.112	BRACKET, FUEL STRAINER MOUNTING 브라켓
03.432	LINE, FUEL STRAINER INLET 라인
03.702	BRACKET, FUEL PUMP MOUNTING 브라켓


62.045	BRACKET, ELECTRONIC CONTROL UNIT 브라켓
62.125	FASTENER, FUEL FEED PUMP 패스너
97.080	FASTENER, ECU MOUNTING 패스너
97.081	FASTENER, ECU MOUNTING 패스너
97.322	FASTENER, FUEL STRAINER MOUNTING BRACKET 패스너
97.323	FASTENER, FUEL PUMP MOUNTING BRACKET 패스너

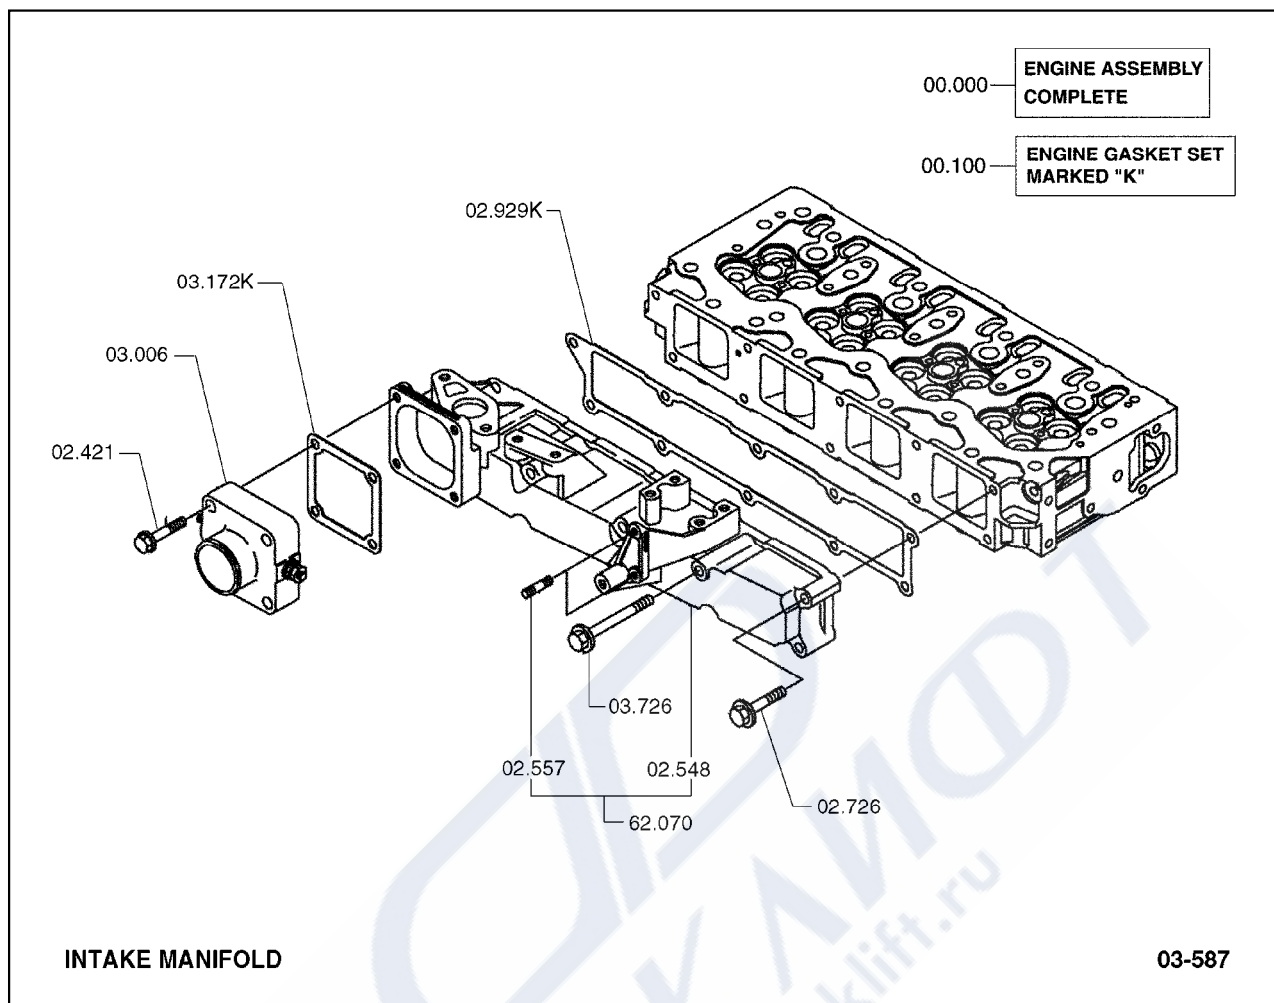 

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.100	GASKET KIT, ENGINE OVERHAUL 가스켓키트
02.421	FASTENER, ENGINE AIR INTAKE ADAPTOR 패스너
02.548	MANIFOLD, INTAKE 매니폴드
02.557	FASTENER, MANIFOLD TO CRANKCASE 패스너
02.726	FASTENER, MANIFOLD 패스너
02.929	GASKET, INTAKE MANIFOLD 가스켓
03.006	HEATER, COLD START 히터
03.172	GASKET, COLD START RESERVOIR COVER 가스켓


03.726	FASTENER, INTAKE MANIFOLD 패스너
62.070	MANIFOLD SET, INTAKE 매니폴드




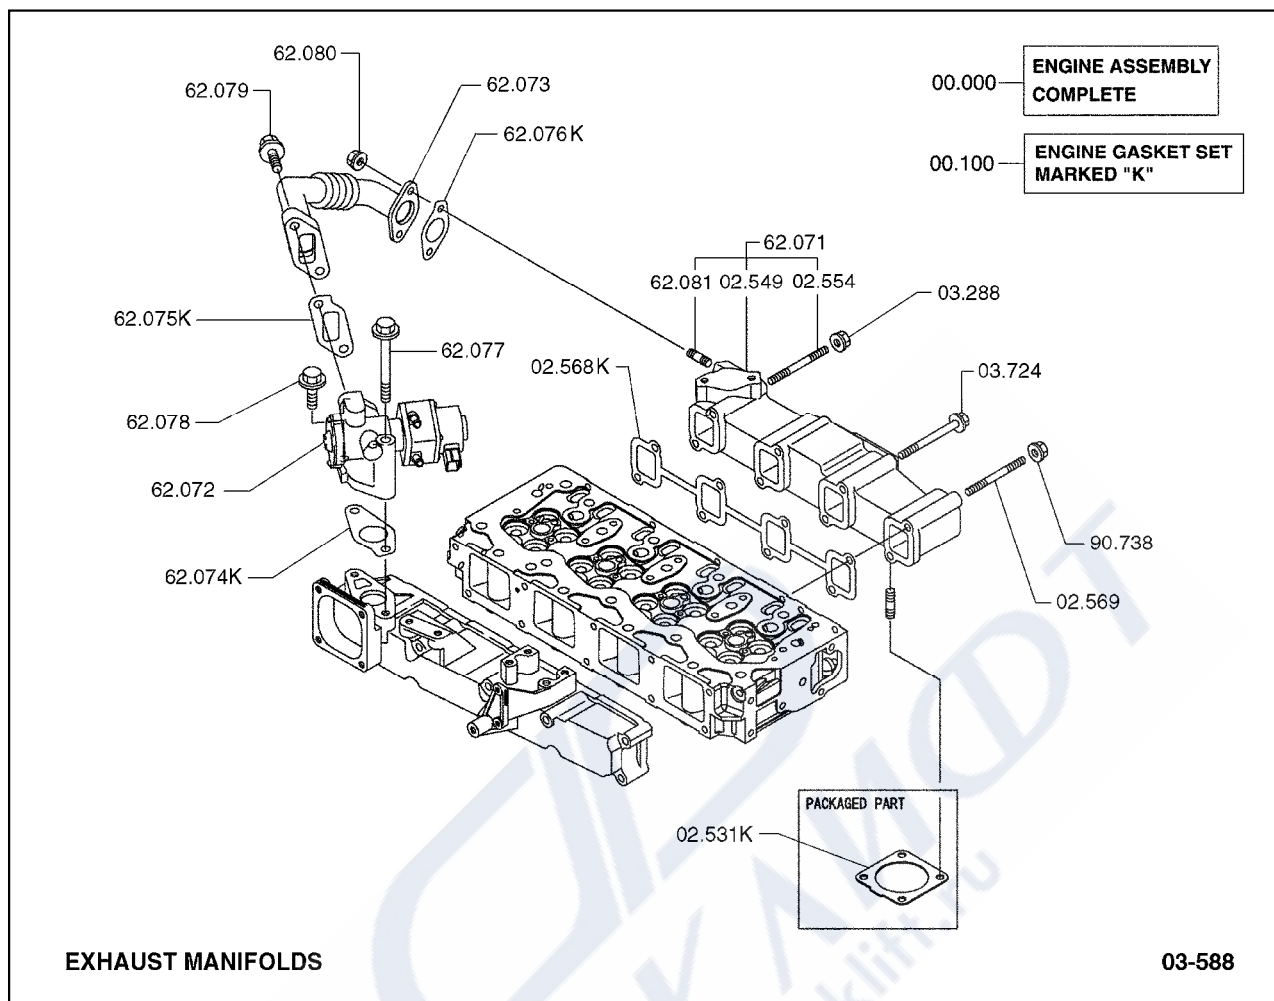 


00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.100	GASKET KIT, ENGINE OVERHAUL 가스켓키트
02.531	GASKET, EXHAUST SYSTEM VENTURI OUTLET 가스켓
02.549	MANIFOLD, EXHAUST 매니폴드
02.554	FASTENER, MANIFOLD TO CRANKCASE 패스너
02.568	GASKET, INTAKE TO EXHAUST MANIFOLD 가스켓
02.569	FASTENER, EXHAUST PIPE FLANGE TO MANIFOLD 패스너
03.288	NUT, EXHAUST MANIFOLD EXTENSION 너트
03.724	FASTENER, EXHAUST MANIFOLD 패스너

62.071	MANIFOLD SET, EXHAUST 매니폴드
62.072	VALVE, EXHAUST GAS RECIRCULATION(EGR) 밸브
62.073	PIPE, EGR VALVE 파이프
62.074	GASKET, EGR VALVE OUTLET 가스켓
62.075	GASKET, EGR VALVE INLET 가스켓
62.076	GASKET, EGR PIPE 가스켓
62.077	FASTENER, EGR VALVE MOUNTING 패스너
62.078	FASTENER, EGR VALVE MOUNTING 패스너
62.079	FASTENER, EGR VALVE TO PIPE 패스너
62.080	FASTENER, EGR PIPE TO MANIFOLD 패스너
62.081	FASTENER, EGR PIPE TO MANIFOLD 패스너
90.738	NUT, MANIFOLD FASTENER 너트

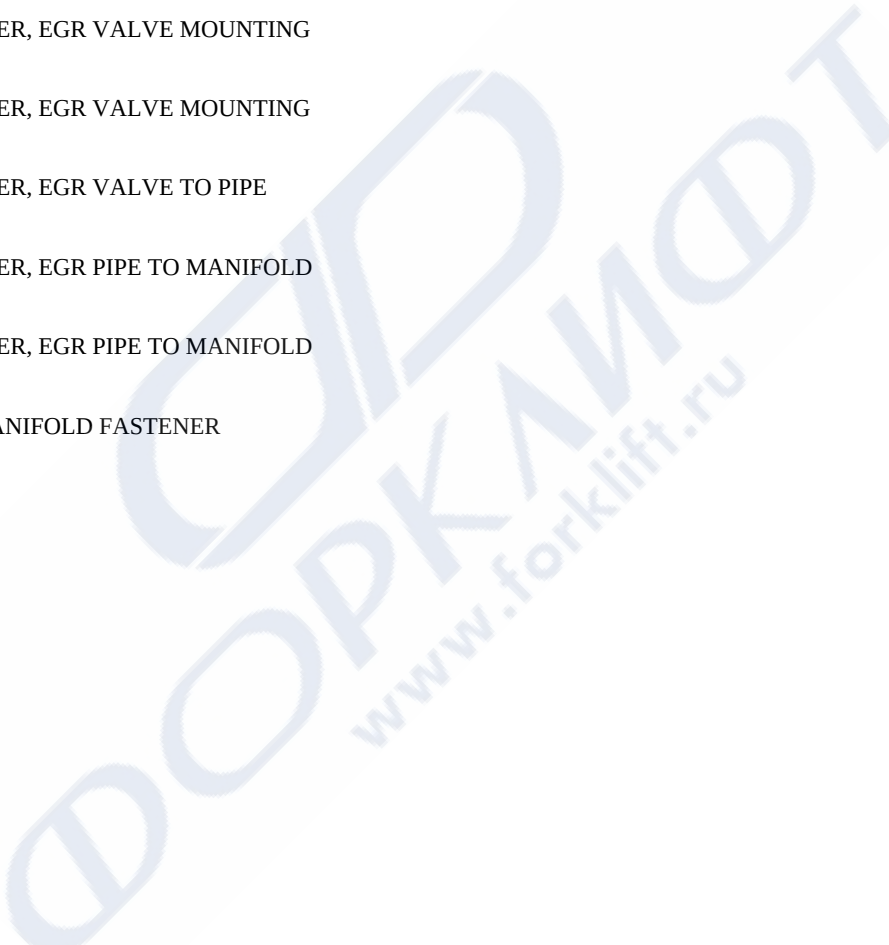 

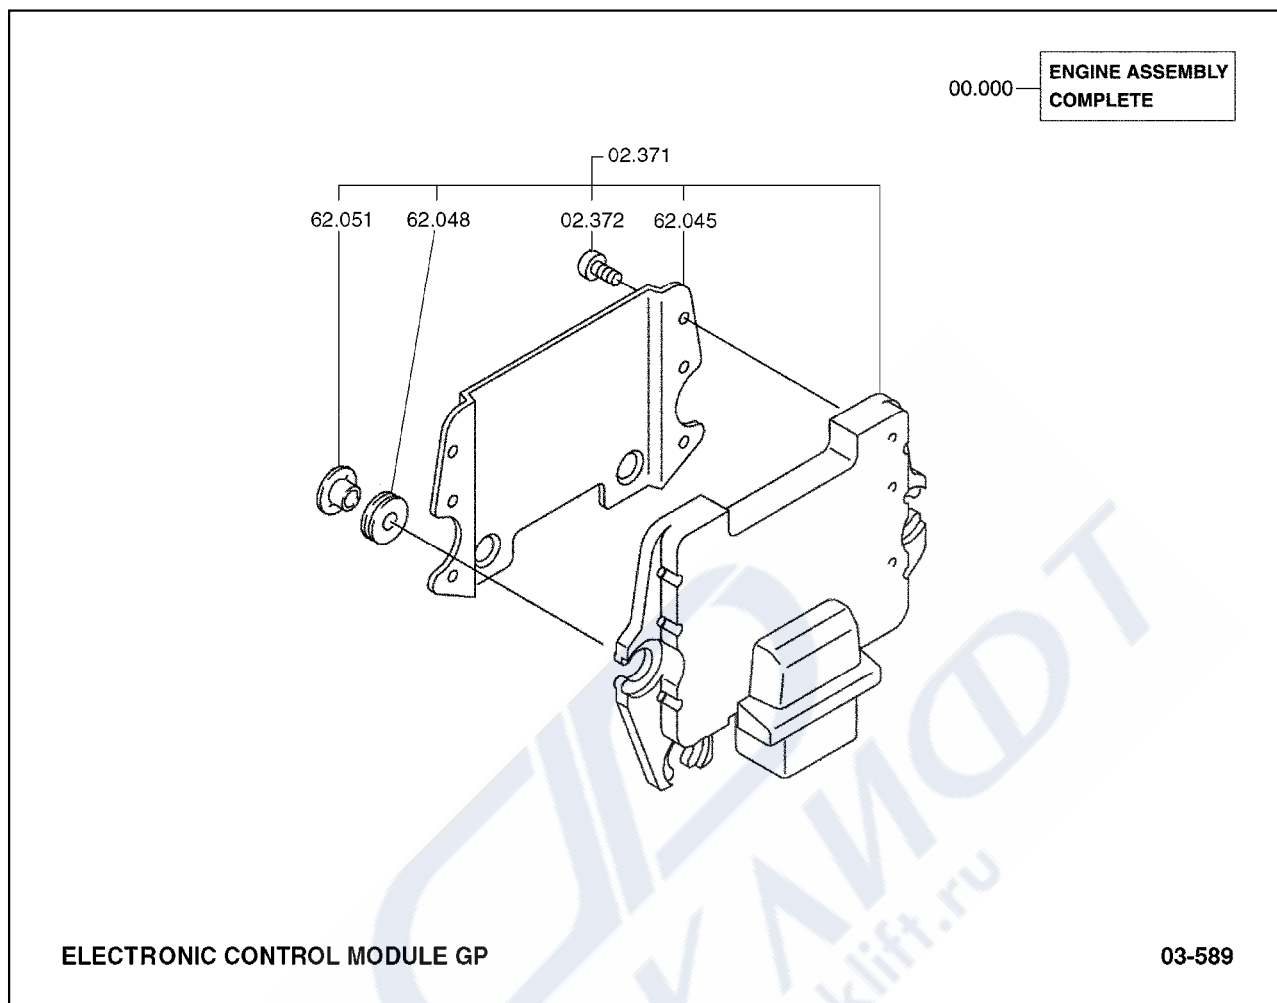 

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
02.371	CONTROL UNIT, ELECTRONIC (ECU) 컨트롤유닛
02.372	FASTENER, ELECTRONIC CONTROL UNIT COVER 패스너
62.045	BRACKET, ELECTRONIC CONTROL UNIT 브라켓
62.048	RUBBER, ELECTRONIC CONTROL MODULE MTG 리버
62.051	BUSH, ELECTRONIC CONTROL MODULE MTG 부시

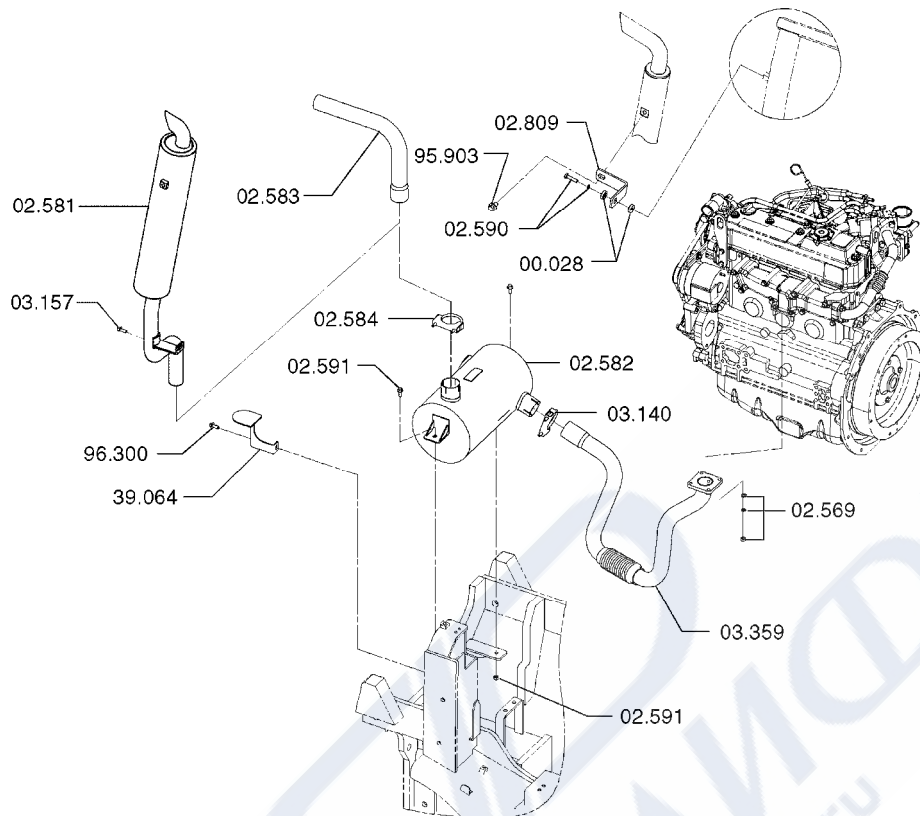 


EXHAUST SYSTEM

03-696


00.028	DAMPENER, VIBRATION 댐프너
02.569	FASTENER, EXHAUST PIPE FLANGE TO MANIFOLD 패스너
02.581	EXTENSION, TAIL PIPE 익스텐션
02.582	MUFFLER 머플러
02.583	PIPE, TAIL 파이프
02.584	CLAMP, TAIL PIPE TO MUFFLER 클램프
02.590	FASTENER, MUFFLER MOUNTING BRACKET 패스너
02.591	FASTENER, MUFFLER MOUNTING 패스너
02.809	BRACKET, MUFFLER MOUNTING 브라켓

03.140	CLAMP, EXHAUST PIPE 클램프
03.157	FASTENER, TAIL PIPE EXTENSION 패스너
03.359	PIPE, EXHAUST 파이프
39.064	COVER, COUNTERWEIGHT UPPER 커버
95.903	FASTENER, EXHAUST PIPE BRACKET 패스너
96.300	FASTENER, COUNTERWEIGHT COVERING 패스너

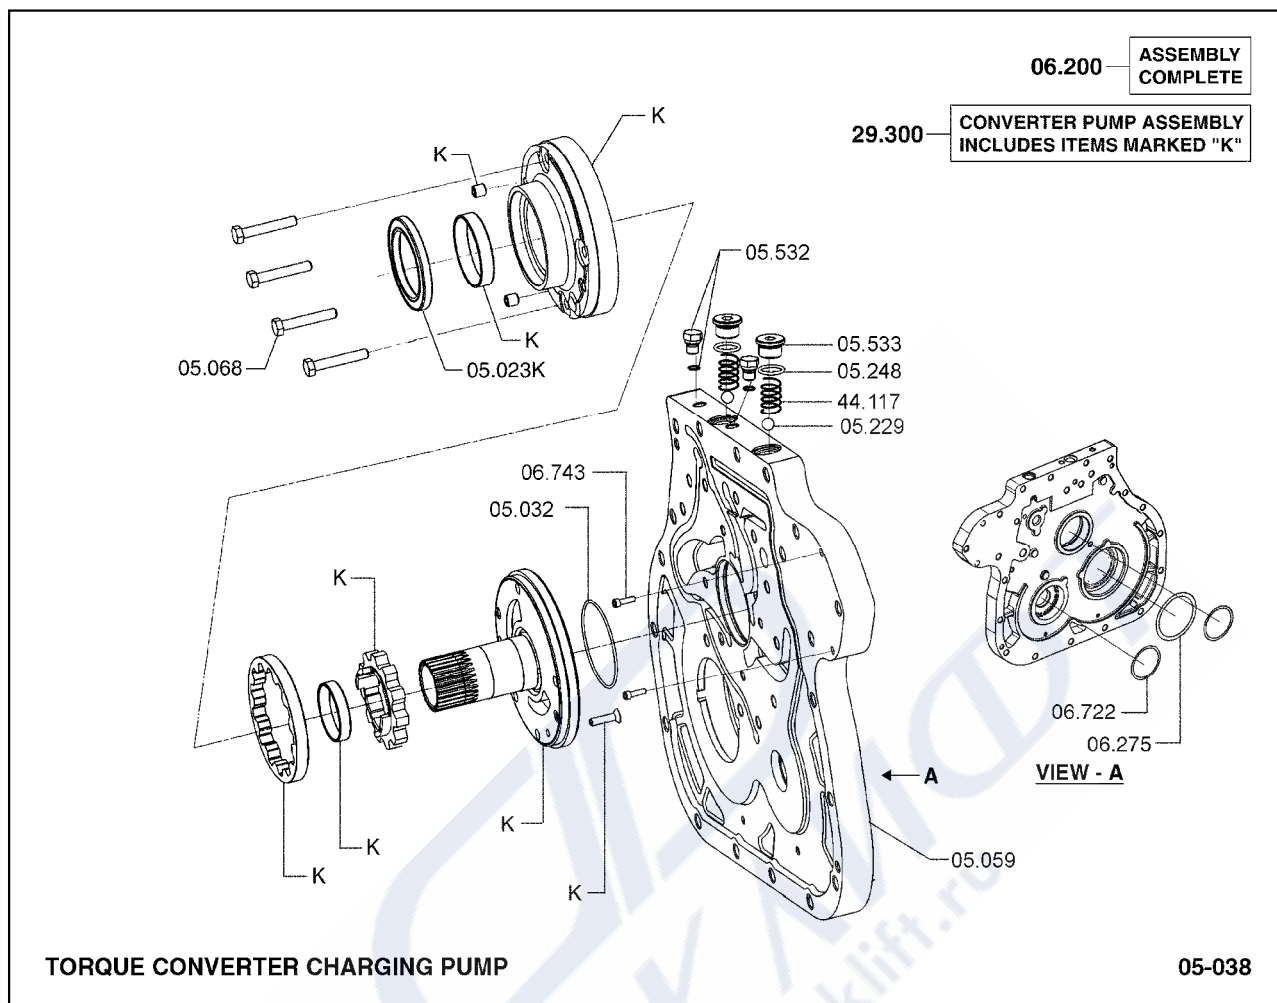 


05.023	SEAL, CONVERTER IMPELLER HUB 씰
05.032	SEAL, STATOR SUPPORT (PISTON RING) 씰
05.059	SPACER, PUMP SHAFT 스페이서
05.068	FASTENER, CONVERTER CHARGING PUMP 패스너
05.229	BALL, CONVERTER PRESSURE REGULATING CHECK 볼
05.248	SEAL, TORQUE CONVETER PRESSURE CHECK 씰
05.532	PLUG, TORQUE CONVERTER INLET FITTING 플러그
05.533	PLUG, CONVERTER HOUSING 플러그
06.200	TRANSMISSION ASSEMBLY 트랜스미션

06.275	SHIM, OUTPUT SHAFT REAR BEARING RETAINER 심
06.722	SHIM, TRANSMISSION STATOR SUPPORT 심
06.743	FASTENER, TRANSMISSION VALVE PRESSURE PUMP COVER 패스너
29.300	PUMP ASSEMBLY, CONVERTER CHARGING 펌프
44.117	SPRING, TRANSMISSION CONTROL ACCUMULATOR MIDDLE IN 스프링

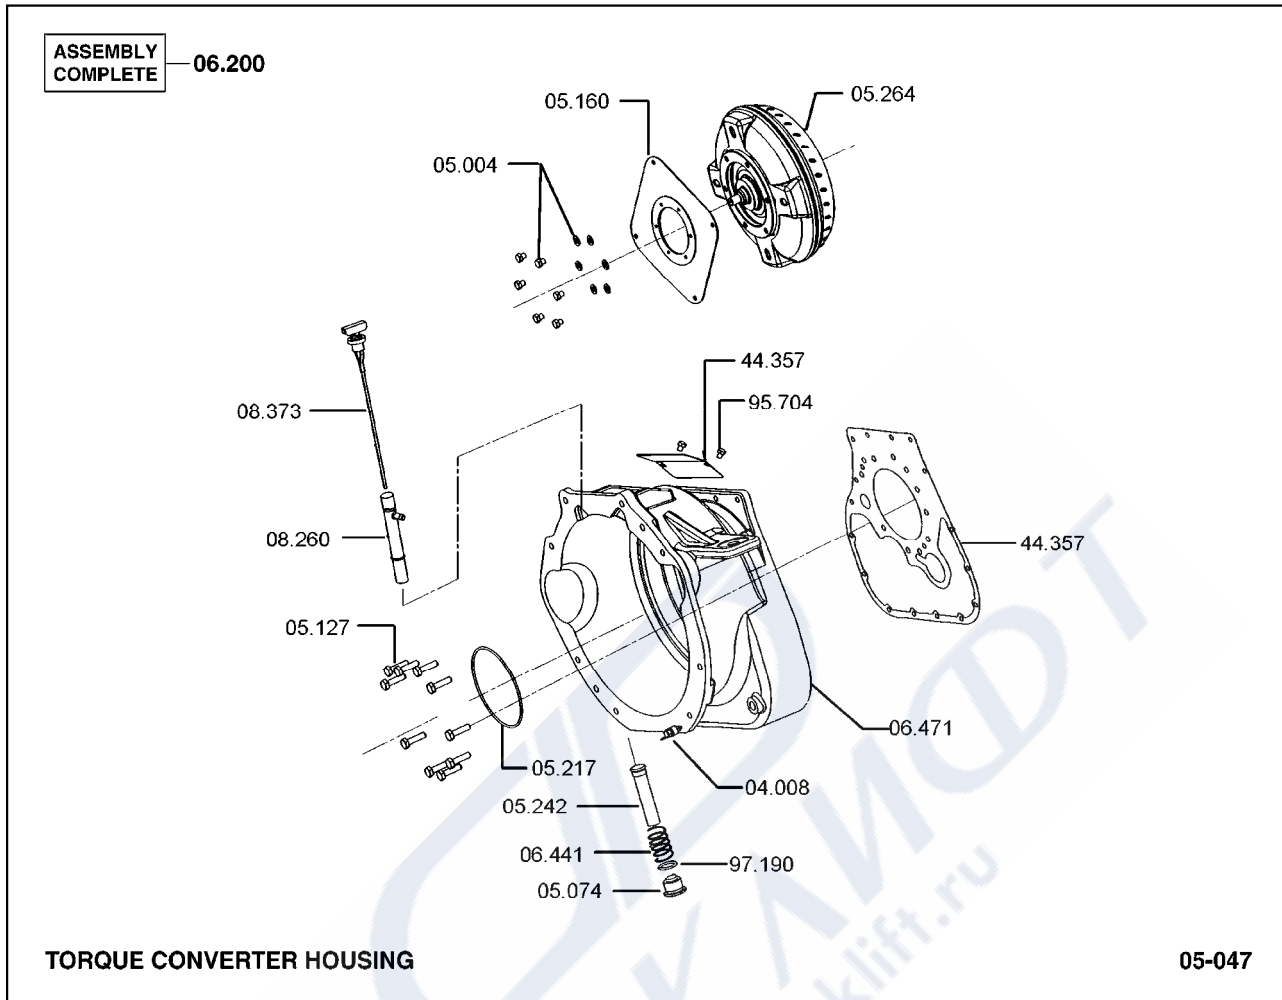 


04.008	SENSOR, TRANSMISSION FLUID TEMPERATURE 센서
05.004	FASTENER, CONVERTER DRIVE & REINFORCING PLATE 패스너
05.074	PLUG, HOUSING DRAIN 플러그
05.127	FASTENER, CONVERTER TO CASE 패스너
05.160	SEAL, REGULATING VALVE CONVERTER PORT 셀
05.217	SEAL, CONVERTER HOUSING COVER 셀
05.242	FILTER SCREEN, TRANSMISSION FLUID 필터스크린
05.264	CONVERTER SUB ASSEMBLY, TORQUE 컨버터
06.200	TRANSMISSION ASSEMBLY 트랜스미션

06.441	SPRING, CONVERTER OIL PRESSURE VALVE 스프링
06.471	HOUSING, CONVERTER 하우징
08.260	TUBE, TRAN OIL LEVEL DIPSTICK SUPPORT 튜브
08.373	DIPSTICK, TRANSMISSION 딥스틱
44.357	GASKET, CONVERTER HOUSING COVER 가스켓
95.704	FASTENER, CONVERTER HOUSING PLATE 패스너
97.190	SEAL, FILTER SCREEN 씰

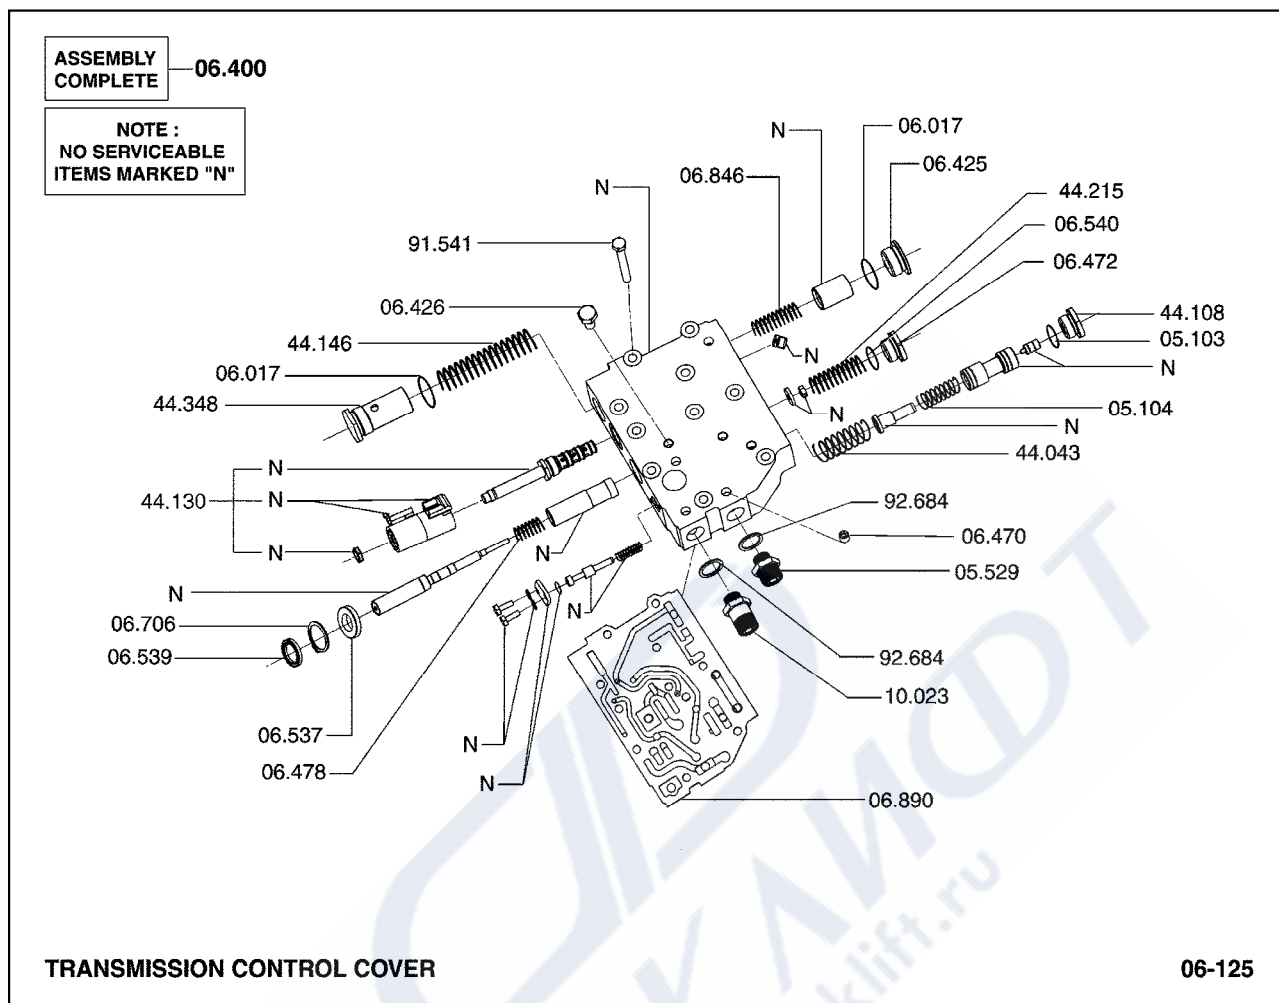 

05.103	SEAL, VALVE STOP 씰
05.104	SPRING, INNER 스프링
05.529	FITTING, CONTROL COVER OUTLET 피팅
06.017	O-RING, SPOOL CARTRIDGE 오링
06.400	CONTROL COVER & VALVE ASSEMBLY 컨트롤커버& 밸브
06.425	PLUG, CONTROL COVER OIL PASSAGE 플러그
06.426	PLUG, CONTROL COVER 플러그
06.470	PLUG, CONTROL VALVE HOUSING OIL PASSAGE 플러그
06.472	PLUG, CONTROL VALVE HOUSING OIL PASSAGE 플러그


06.478	SPRING, INCHING PISTON RETURN 스프링
06.537	FASTENER, SELECTOR VALVE STOP (LARGE) 패스너
06.539	SEAL, SELECTOR VALVE STOP (LARGE) 씰
06.540	SEAL, INCHING PISTON HOUSING 씰
06.706	RETAINER, INCHING PISTON SEAL 리테이너
06.846	SPRING, ACCUMULATOR PISTON (INNER) 스프링
06.890	GASKET, CONTROL COVER PLATE 가스켓
10.023	FITTING, CONTROL COVER INLET PORT 피팅
44.043	SPRING, CONTROL VALVE SPEED SELECTOR SPOOL CENTERI 스프링
44.108	PLUG, TRANSMISSION ACCUMULATOR BORE 플러그
44.130	SOLENOID VALVE, CONTROL COVER 솔레노이드밸브
44.146	SPRING, MODULATOR SPOOL 스프링
44.215	SPRING, INCHING PISTON RETURN OUTER SIDE 스프링
44.348	STOP, TRANS LUBE BY-PASS SPOOL SPRING 스톱
91.541	FASTENER, CONTROL COVER SEPARATOR PLATE 패스너
92.684	WASHER, TRANSMISSION OUTPUT FLANGE FASTENER 와셔

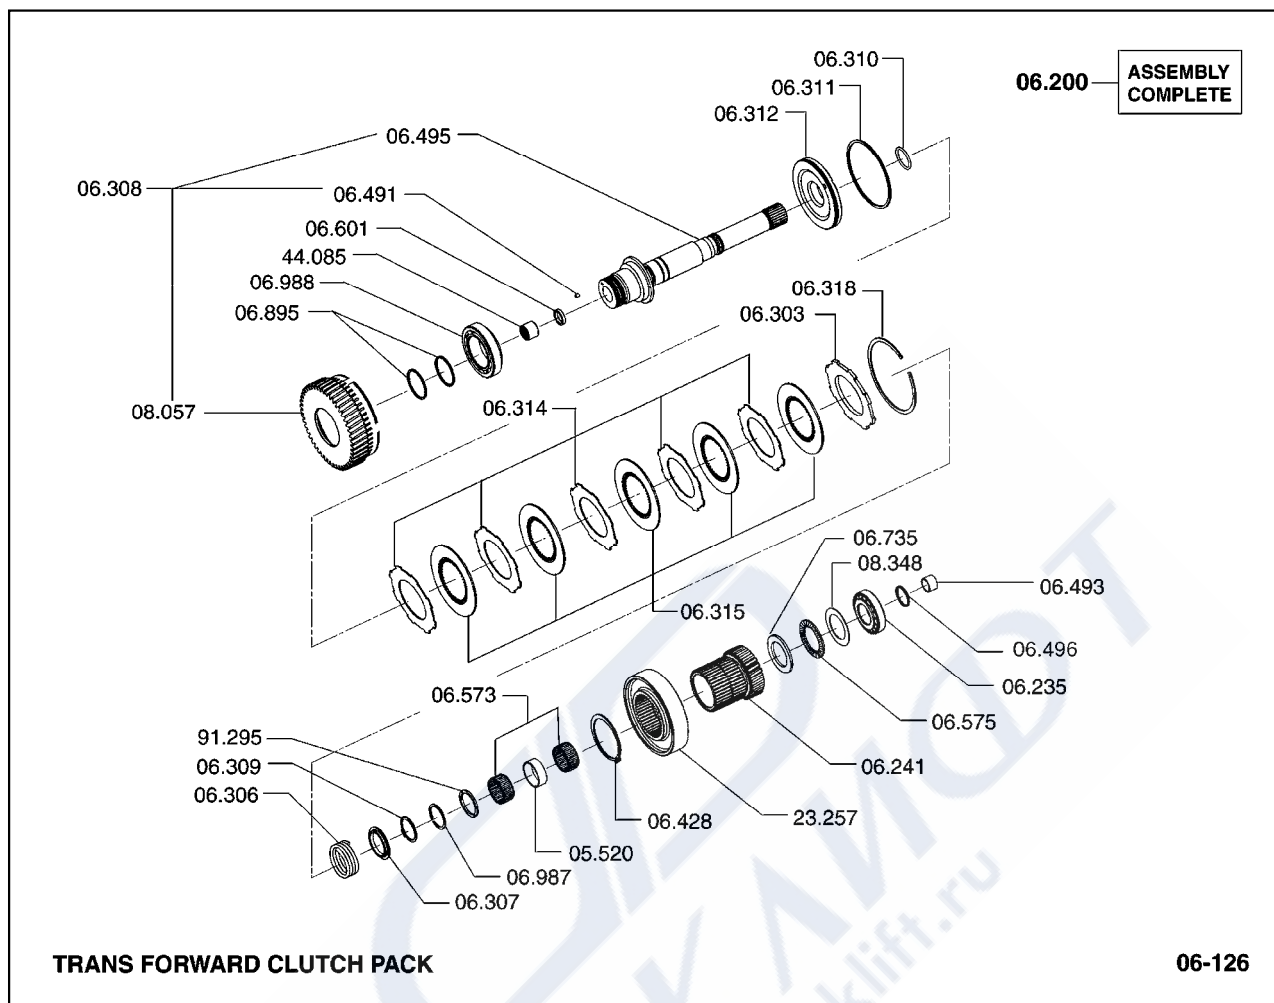 


05.520	SPACER, FORWARD GEAR BEARING 스페이서	06.428	RING, FORWARD CLUTCH PISTON SPRING WEAR 링
06.200	TRANSMISSION ASSEMBLY 트랜스미션	06.491	SEAL, FORWARD CLUTCH SHAFT-INNER 씰
06.235	BEARING, INPUT SHAFT INNER 베어링	06.493	BEARING, FORWARD SHAFT INNER 베어링
06.241	GEAR, INPUT SHAFT FORWARD 기어	06.495	SHAFT, FORWARD CLUTCH 샤프트
06.303	SHIM, FORWARD CLUTCH BEARING CAP 심	06.496	SEAL, FORWARD CLUTCH SHAFT-OUTER 씰
06.306	FASTENER, FORWARD CLUTCH BEARING CAP 패스너	06.573	BEARING, FORWARD GEAR 베어링
06.307	SEAL, FORWARD HUB 씰	06.575	BEARING, FORWARD GEAR 베어링
06.308	HUB & DRUM ASSEMBLY, FORWARD CLUTCH 허브& 드럼	06.601	RING, TRANS INT HIGH GEAR LOCATING 링
06.309	RETAINER, FORWARD HUB 리테이너	06.735	WASHER, FORWARD CLUTCH DISC HUB 와셔
06.310	SEAL, FORWARD CLUCH PISTON INNER 씰	06.895	RING, FWD CLUTCH SHAFT BRG LOCATING 링
06.311	SEAL, FORWARD CLUTCH PISTON OUTER 씰	06.987	RING, FORWARD CLUTCH HUB BEARING LOCATING 링
06.312	PISTON, FORWARD CLUTCH 피스톤	06.988	BEARING, FORWARD CLUTCH HUB (ENGINE END) 베어링
06.314	DISC, FORWARD CLUTCH INNER 디스크	08.057	GEAR, FORWARD & REVERSE 기어
06.315	DISC, FORWARD CLUTCH OUTER 디스크	08.348	WASHER, FORWARD GEAR THRUST 와셔
06.318	RING, FORWARD CLUTCH DISC END PLATE RET 링	23.257	DRUM, PARKING BRAKE 드럼

44.085	BEARING, IDLER SHAFT 베어링
91.295	WASHER, FORWARD CLUTCH BEARING CAP FASTENER 와셔




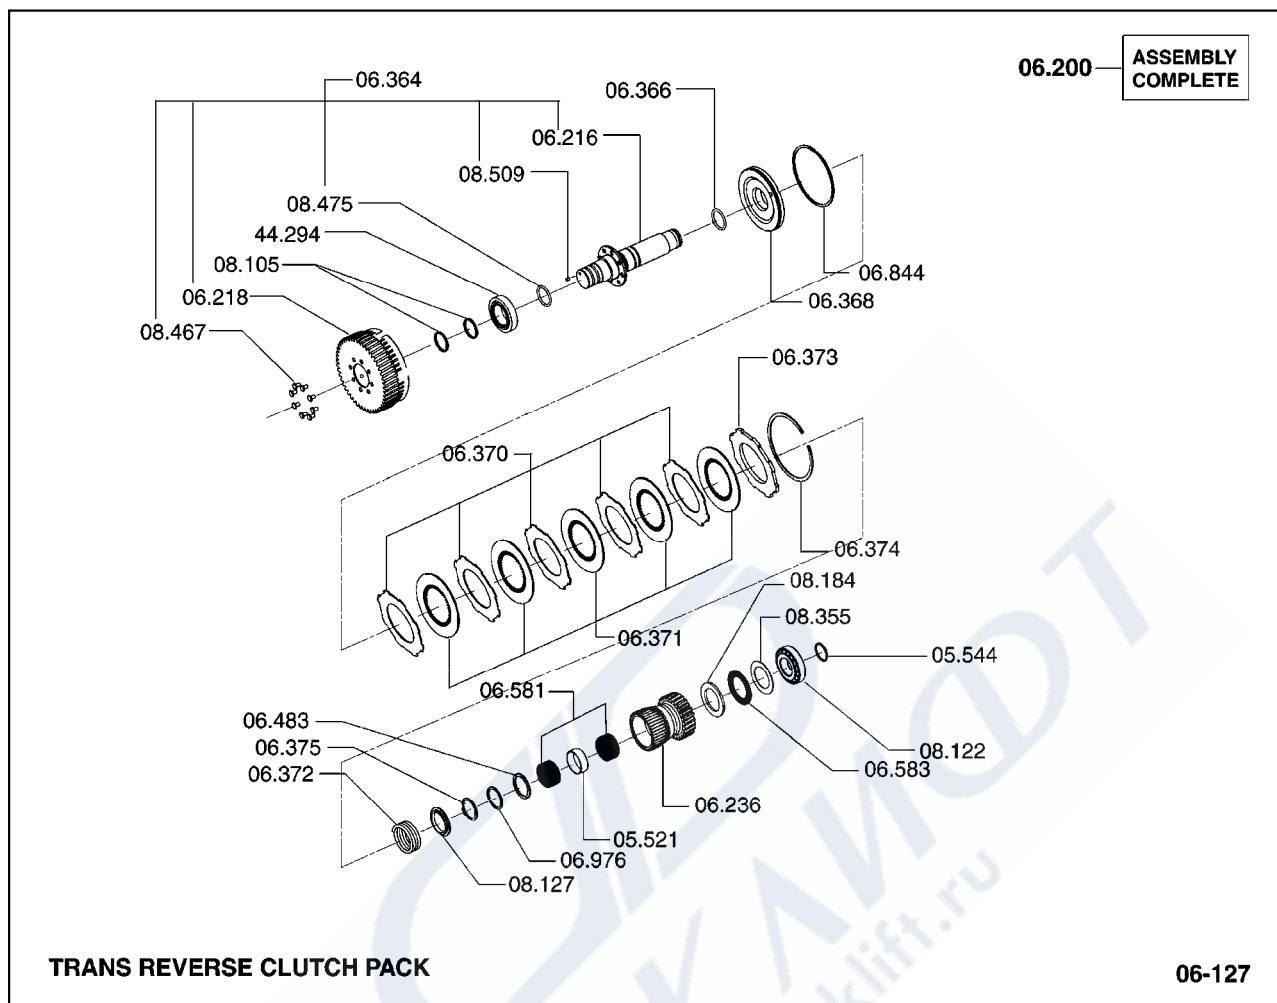 

05.521	SPACER, REVERSE GEAR BEARING 스페이서	06.483	WASHER, REVERSE CLUTCH HUB & DRUM THRUST 와셔
05.544	RING, REVERSE CLUTCH SHAFT BEARING LOCATING 링	06.581	BEARING, REVERSE GEAR 베어링
06.200	TRANSMISSION ASSEMBLY 트랜스미션	06.583	BEARING, REVERSE GEAR 베어링
06.216	SHAFT, REVERSE 샤프트	06.844	RING, REVERSE ACCUMULATOR PISTON 링
06.218	GEAR, REVERSE SHAFT DRIVE 기어	06.976	RING, REVERSE CLUTCH HUB BEARING LOCATING 링
06.236	GEAR, INPUT SHAFT REVERSE 기어	08.105	RING, REVERSE GEAR RETAINING 링
06.364	HUB & DRUM ASSEMBLY, REVERSE CLUTCH 허브& 드럼	08.122	BEARING, REVERSE UNIT DRIVE GEAR 베어링
06.366	SEAL, REVERSE CLUTCH PISTON INNER 씰	08.127	COVER, REVERSE UNIT CONTROL 커버
06.368	PISTON, REVERSE CLUTCH 피스톤	08.184	WASHER, REVERSE IDLER GEAR THRUST 와셔
06.370	DISC, REVERSE CLUTCH INNER 디스크	08.355	WASHER, REVERSE GEAR THRUST 와셔
06.371	DISC, REVERSE CLUTCH OUTER 디스크	08.467	FASTENER, REVERSE IDLER BEARING RETAINER 패스너
06.372	SPRING, REVERSE CLUTCH DISC RELEASE 스프링	08.475	SEAL, REVERSE IDLER SHAFT 씰
06.373	PLATE, REVERSE CLUTCH DISC END 플레이트	08.509	SEAL, REVERSE IDLER SHAFT 씰
06.374	RING, REVERSE CLUTCH DISC END PLATE RET 링	44.294	BEARING, REVERSE CLUTCH GEAR 베어링
06.375	RING, REVERSE CLUTCH DISC HUB RETAINER 링		

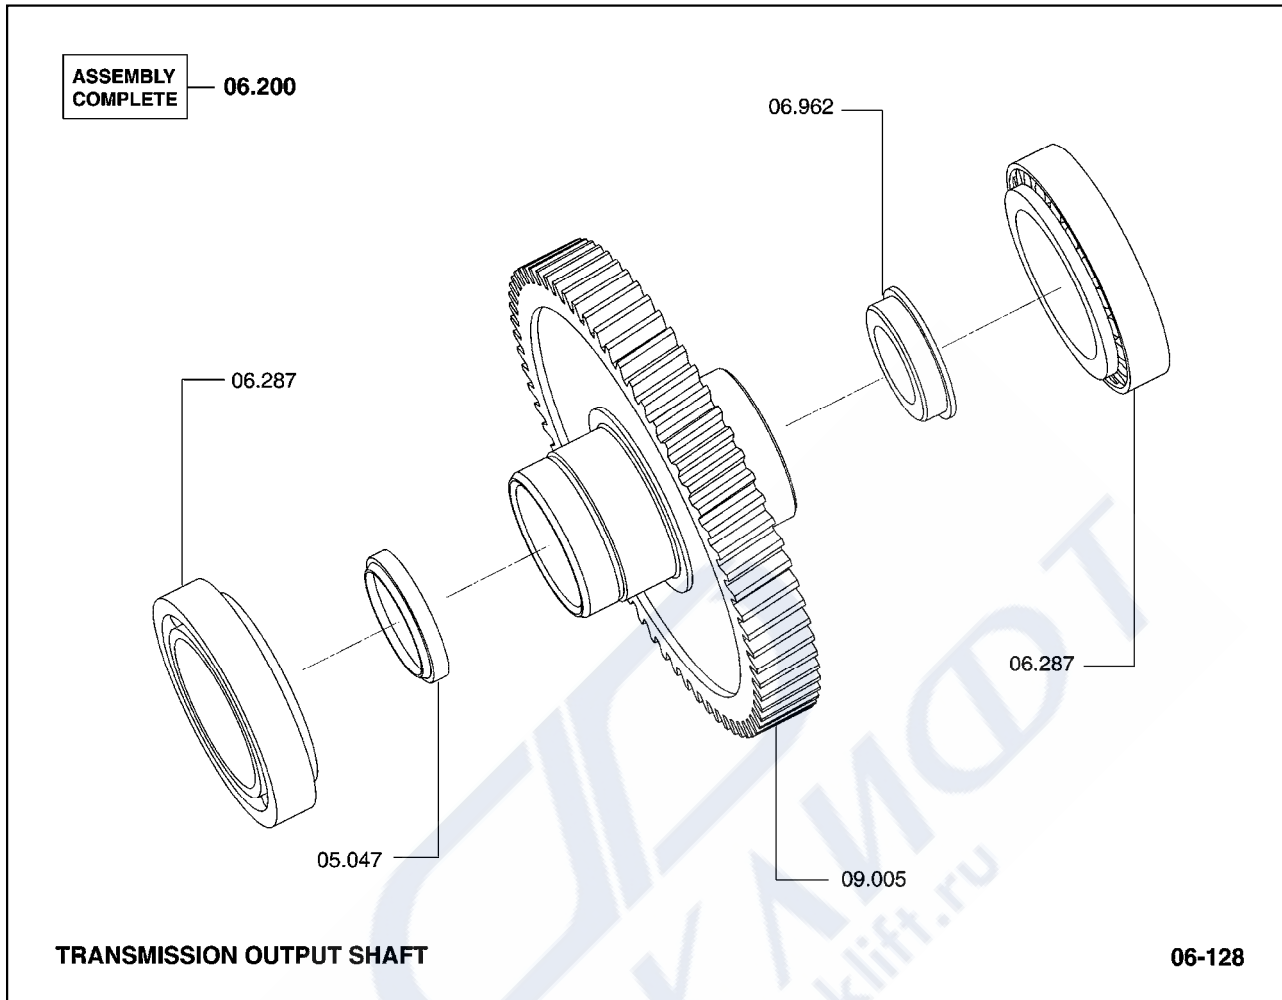 

05.047	SEAL, OUTPUT SHAFT BEARING RETAINER 씰
06.200	TRANSMISSION ASSEMBLY 트랜스미션
06.287	BEARING, OUTPUT SHAFT FRONT 베어링
06.962	SEAL, OUTPUT SHAFT BEARING CAP 씰
09.005	GEAR, OUTPUT 기어

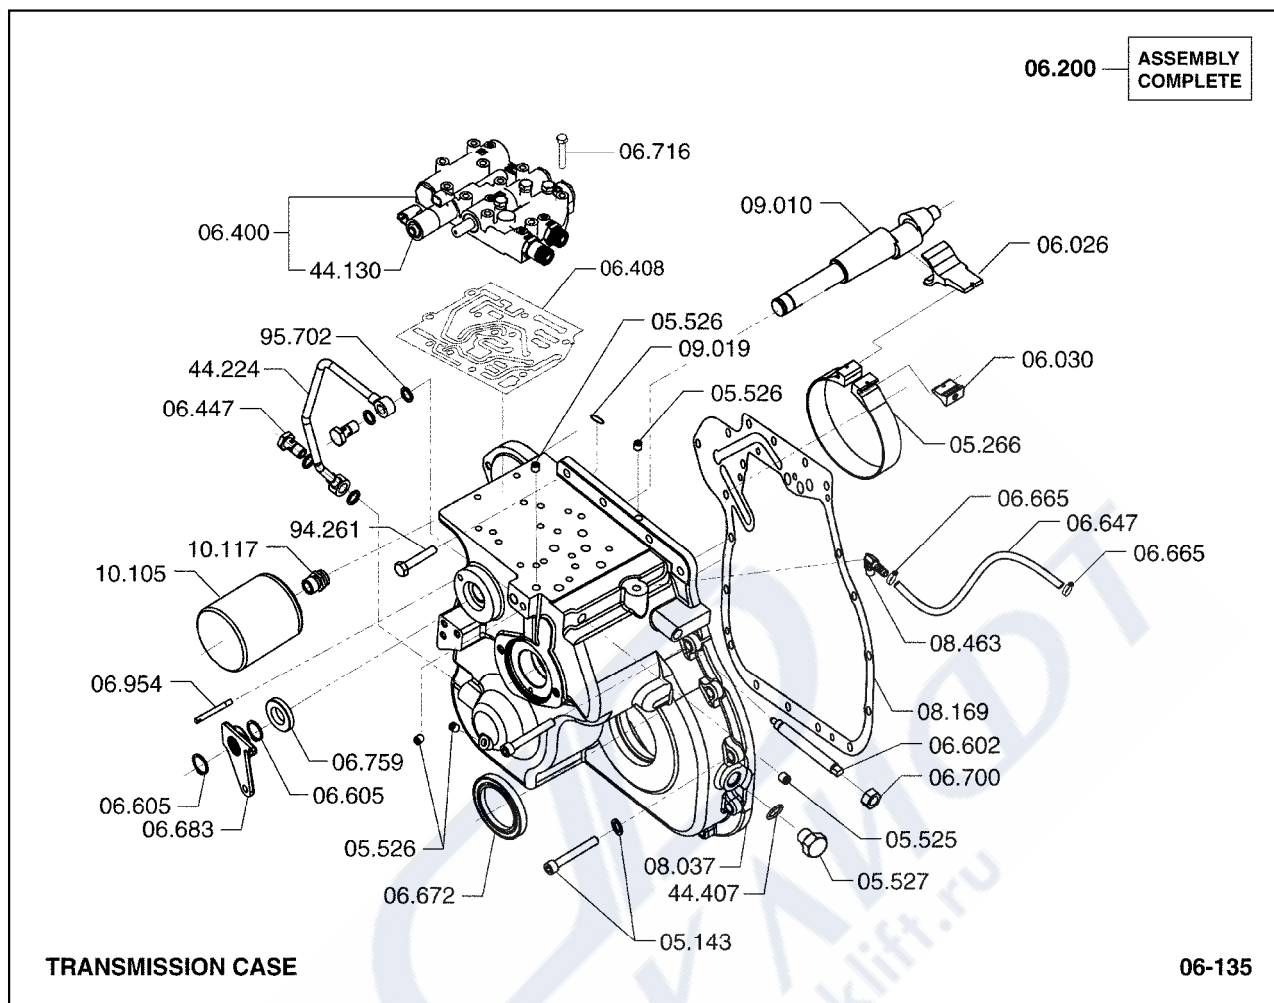 

05.143	FASTENER, CONVERTER HOUSING LOWER COVER 패스너	06.672	SEAL, TRANSMISSION DRIVE SHAFT (INPUT END) 씰
05.266	CLAMP, IDLE SHAFT BAND 클램프	06.683	LEVER, TRANSMISSION BRAKE ACTUATOR 레버
05.525	PLUG, TRANSMISSION CASE 플러그	06.700	FASTENER, TRANSMISSION REAR ACTUATOR ADJUSTOR 패스너
05.526	PLUG, TRANSMISSION CASE 플러그	06.716	FASTENER, CONTROL COVER 패스너
05.527	PLUG, TRANSMISSION CASE 플러그	06.759	SEAL, TRANS FRONT BRAKE ACT RELEASE PISTON 씰
06.026	ADJUSTOR, DIRECTION CONTROL INTERLOCK 어드저스터	06.954	DOWEL, TRANSMISSION CASE TO CONVERTER 다웰
06.030	SUPPORT, DIR CONTROL INTERLOCK LATCH 서포트	08.037	CASE, TRANSMISSION 케이스
06.200	TRANSMISSION ASSEMBLY 트랜스미션	08.169	GASKET, TRANSMISSION CASE TO ADAPTOR PLATE 가스켓
06.400	CONTROL COVER & VALVE ASSEMBLY 컨트롤커버&밸브	08.463	FITTING, TRANSMISSION OIL FILL 피팅
06.408	GASKET, CONTROL COVER ATTACHING 가스켓	09.010	SHAFT, IDLER 샤프트
06.447	PLUG, TRANSMISSION CASE 플러그	09.019	SEAL, TRANSFER CASE COVER 씰
06.602	SHAFT, TRANSMISSION INTERMEDIATE 샤프트	10.105	ELEMENT & GASKET, OIL FILTER 엘리먼트&가스켓
06.605	RING, TRANS INTERMEDIATE SHAFT INNER BRG LOC 링	10.117	FITTING, OIL FILTER TO BASE 피팅
06.647	LINE, TRANSMISSION LUBRICATION 라인	44.130	SOLENOID VALVE, CONTROL COVER 솔레노이드밸브
06.665	CLAMP, TRANSMISSION OIL FILLER TUBE 클램프	44.224	TUBE, TRANSMISSION OIL 튜브


44.407	SEAL, TRANSMISSION CASE PLUG 씰
94.261	FASTENER, TRANSMISSION CASE FRONT COVER 패스너
95.702	FASTENER, TRANSMISSION CASE TUBE 패스너



**ASSEMBLY
COMPLETE** — 06.200

NOTE :
ITEMS TO BE NOT SOLD
SEPARATELY MARKED "NSS"

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

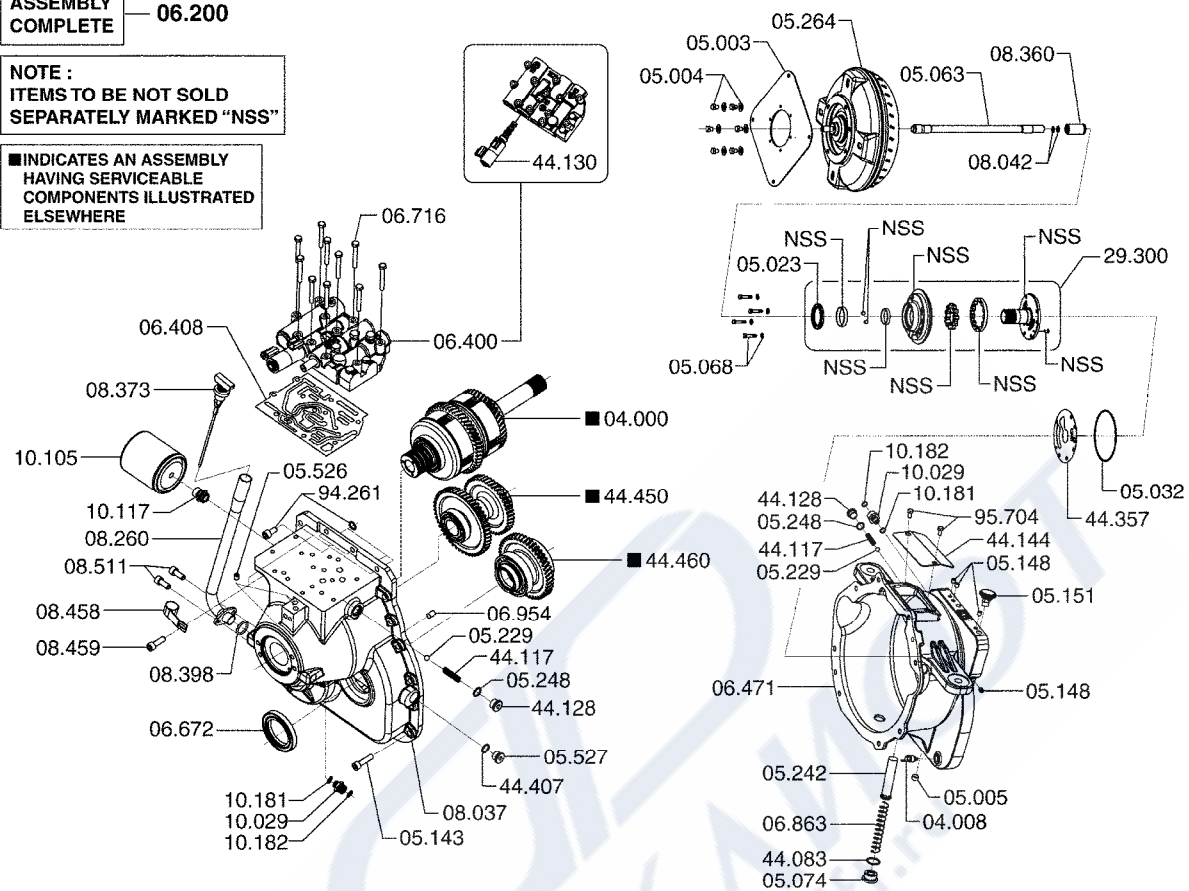


TRANSMISSION ASSEMBLY


06-138

04.000	CLUTCH ASSEMBLY, COMPLETE 클러치	05.248	SEAL, TORQUE CONVERTER PRESSURE CHECK 씰
04.008	SENSOR, TRANSMISSION FLUID TEMPERATURE 센서	05.264	CONVERTER SUB ASSEMBLY, TORQUE 컨버터
05.003	PLATE, CONVERTER DRIVE & REINFORCING 플레이트	05.526	PLUG, TRANSMISSION CASE 플러그
05.004	FASTENER, CONVERTER DRIVE & REINFORCING PLATE 패스너	05.527	PLUG, TRANSMISSION CASE 플러그
05.005	PLUG, TORQUE CONVERTER DRAIN 플러그	06.200	TRANSMISSION ASSEMBLY 트랜스미션
05.023	SEAL, CONVERTER IMPELLER HUB 씰	06.400	CONTROL COVER & VALVE ASSEMBLY 컨트롤커버& 밸브
05.032	SEAL, STATOR SUPPORT (PISTON RING) 씰	06.408	GASKET, CONTROL COVER ATTACHING 가스켓
05.063	SHAFT, PUMP DRIVE 샤프트	06.471	HOUSING, CONVERTER 하우징
05.068	FASTENER, CONVERTER CHARGING PUMP 패스너	06.672	SEAL, TRANSMISSION DRIVE SHAFT (INPUT END) 씰
05.074	PLUG, HOUSING DRAIN 플러그	06.716	FASTENER, CONTROL COVER 패스너
05.143	FASTENER, CONVERTER HOUSING LOWER COVER 패스너	06.863	SPRING, TRANSMISSION SUMP STRAINER 스프링
05.148	PLUG, CONVERTER HOUSING 플러그	06.954	DOWEL, TRANSMISSION CASE TO CONVERTER 다웰
05.151	BREATHER, CONVERTER AIR 브리더	08.037	CASE, TRANSMISSION 케이스
05.229	BALL, CONVERTER PRESSURE REGULATING CHECK 볼	08.042	PLUG - EXPANSION, COUNTERSHAFT HOLE 플러그
05.242	FILTER SCREEN, TRANSMISSION FLUID 필터스크린	08.260	TUBE, TRAN OIL LEVEL DIPSTICK SUPPORT 튜브


08.360	SLEEVE, MAINSHAFT 슬리브
08.373	DIPSTICK, TRANSMISSION 딤스틱
08.398	SEAL, TRANSMISSION DIPSTICK SUPPORT 씰
08.458	CLIP, TRANSMISSION DIPSTICK TUBE 클립
08.459	FASTENER, TRANSMISSION DIPSTICK TUBE CLIP 패스너
08.511	FASTENER, TRANSMISSION DIPSTICK TUBE MOUNTING BR 패스너
10.029	FITTING, TRANSMISSION COOLING LINE 피팅
10.105	ELEMENT & GASKET, OIL FILTER 엘리먼트& 가스켓
10.117	FITTING, OIL FILTER TO BASE 피팅
10.181	SEAL, TRANSMISSION COOLER INLET LINE FITTING 씰
10.182	SEAL, TRANSMISSION COOLER OUTLET LINE FITTING 씰
29.300	PUMP ASSEMBLY, CONVERTER CHARGING 펌프
44.083	SEAL, TRANSMISSION DRAIN PLUG 씰
44.117	SPRING, TRANSMISSION CONTROL ACCUMULATOR MIDDLE 스프링
44.128	PLUG, TRANSMISSION PRESSURE PICK UP 플러그
44.130	SOLENOID VALVE, CONTROL COVER 솔레노이드밸브
44.144	COVER, CONVERTER HOUSING 커버
44.357	GASKET, CONVERTER HOUSING COVER 가스켓
44.407	SEAL, TRANSMISSION CASE PLUG 씰
44.450	GEAR ASSEMBLY, TRANSMISSION IDLER 기어어셈블리
44.460	GEAR ASSEMBLY, TRANSMISSION OUTPUT SHAFT 기어어셈블리
94.261	FASTENER, TRANSMISSION CASE FRONT COVER 패스너
95.704	FASTENER, CONVERTER HOUSING PLATE 패스너

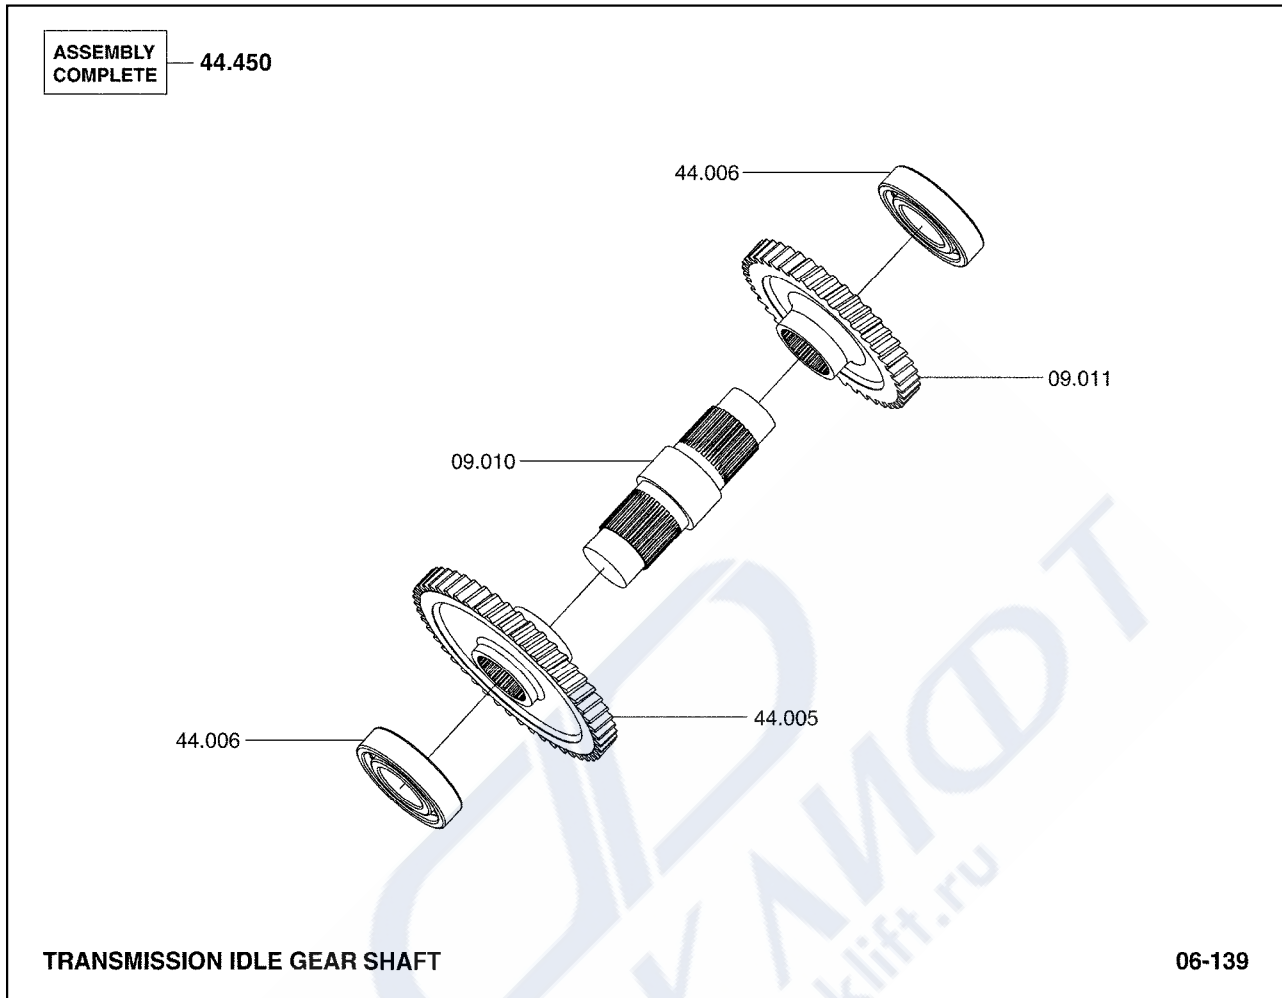 

09.010	SHAFT, IDLER 샤프트
09.011	GEAR, IDLER 기어
44.005	GEAR, TRANSMISSION IDLER 기어
44.006	BEARING, TRANSMISSION IDLER GEAR 베어링
44.450	GEAR ASSEMBLY, TRANSMISSION IDLER 기어어셈블리

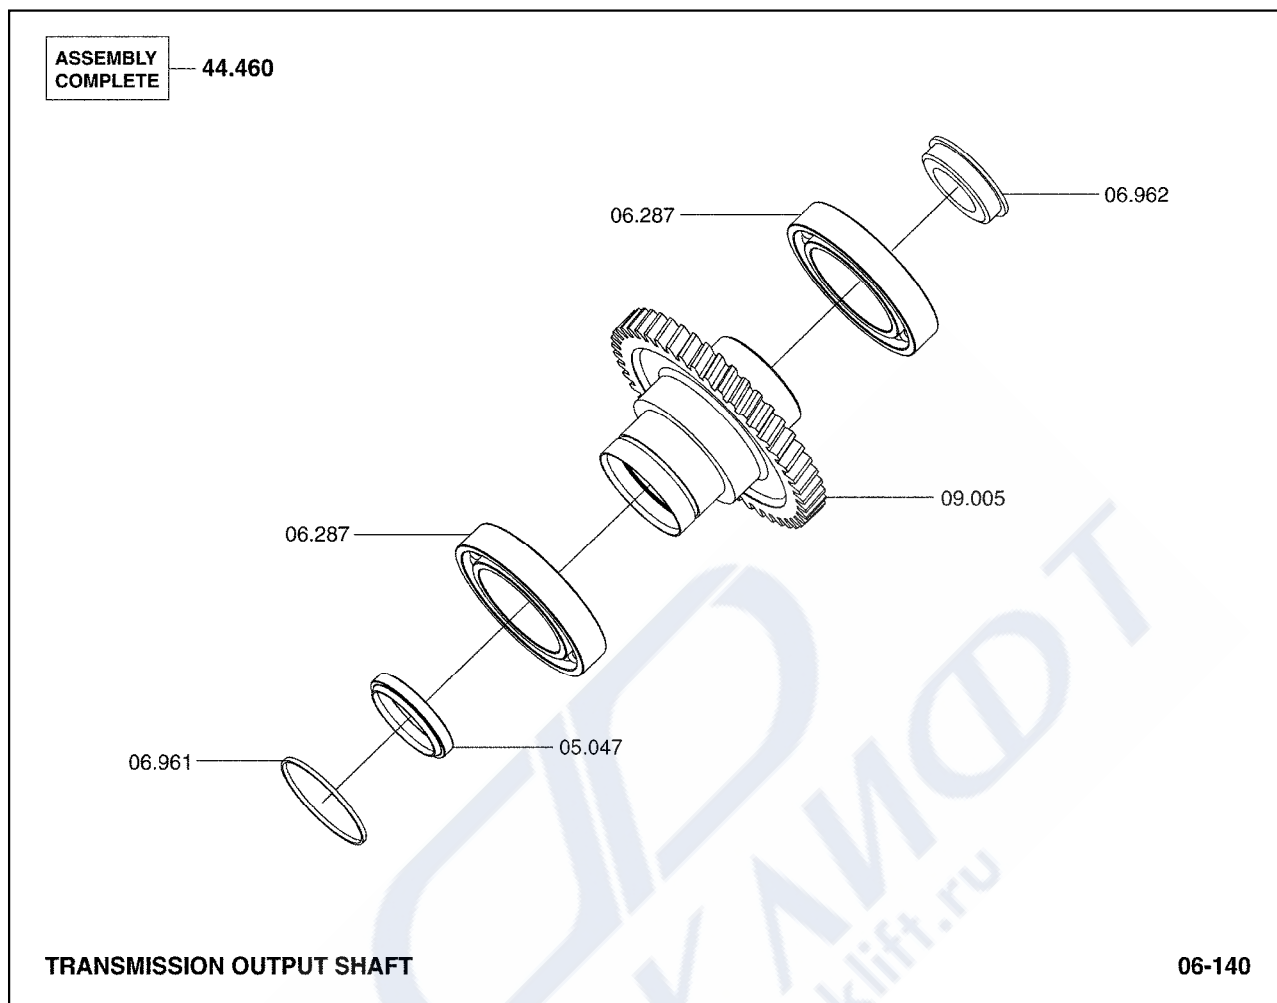 


05.047	SEAL, OUTPUT SHAFT BEARING RETAINER 씰
06.287	BEARING, OUTPUT SHAFT FRONT 베어링
06.961	SEAL, OUTPUT SHAFT FLANGE 씰
06.962	SEAL, OUTPUT SHAFT BEARING CAP 씰
09.005	GEAR, OUTPUT 기어
44.460	GEAR ASSEMBLY, TRANSMISSION OUTPUT SHAFT 기어어셈블리

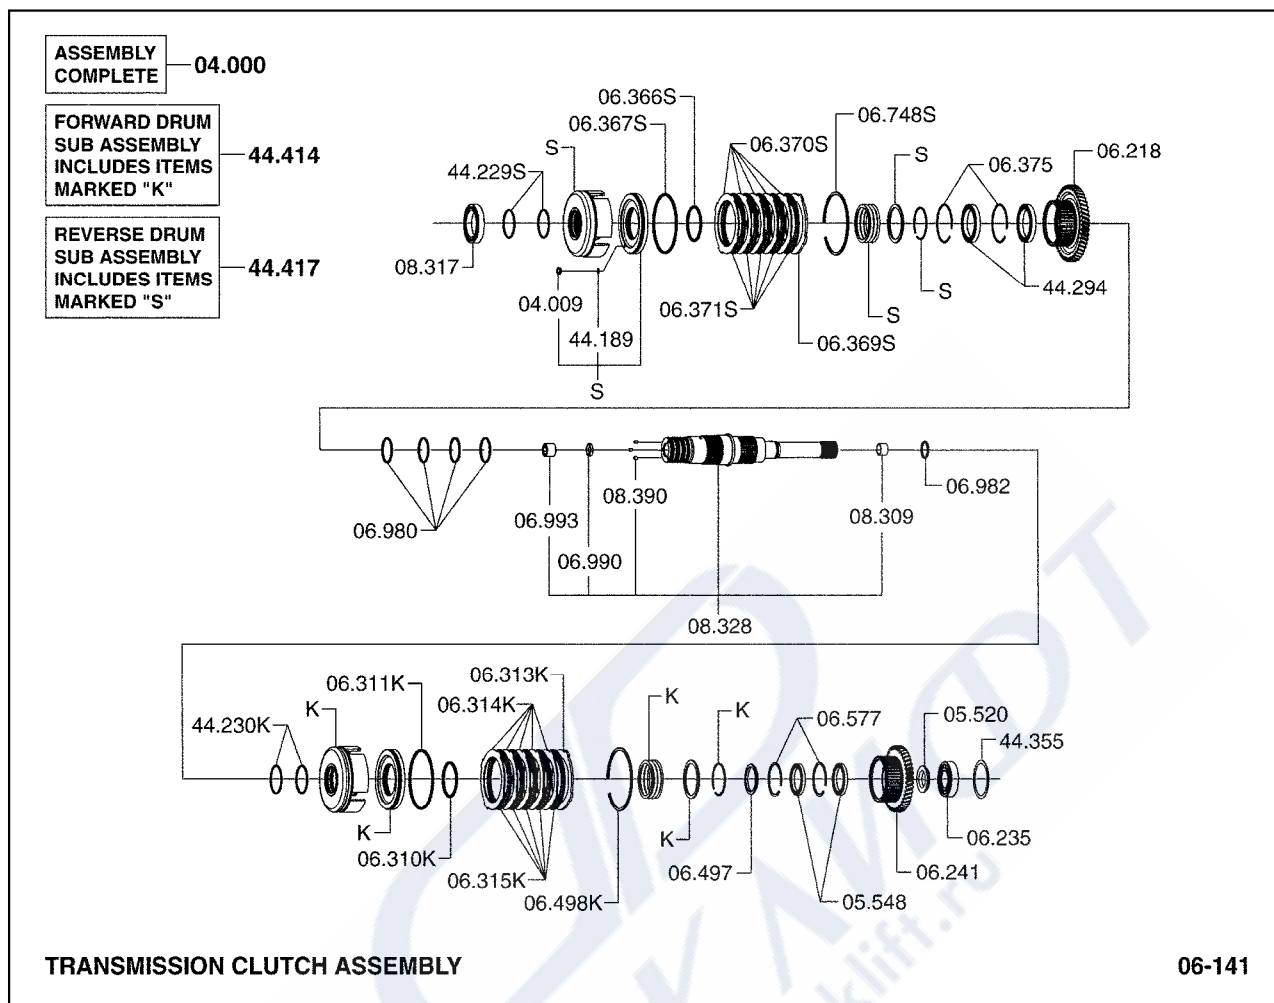 


04.000	CLUTCH ASSEMBLY, COMPLETE 클러치	06.370	DISC, REVERSE CLUTCH INNER 디스크
04.009	STOPPER, CLUTCH PISTON 스토퍼	06.371	DISC, REVERSE CLUTCH OUTER 디스크
05.520	SPACER, FORWARD GEAR BEARING 스페이서	06.375	RING, REVERSE CLUTCH DISC HUB RETAINER 링
05.548	BEARING, FORWARD CLUTCH SHAFT PILOT 베어링	06.497	SPACER, FORWARD CLUTCH SHAFT 스페이서
06.218	GEAR, REVERSE SHAFT DRIVE 기어	06.498	RETAINER, FORWARD CLUTCH SHAFT SPACER 리테이너
06.235	BEARING, INPUT SHAFT INNER 베어링	06.577	RETAINER, FORWARD CLUTCH SPRING 리테이너
06.241	GEAR, INPUT SHAFT FORWARD 기어	06.748	RETAINER, PLANETARY CLUTCH 리테이너
06.310	SEAL, FORWARD CLUTCH PISTON INNER 씰	06.980	SEAL, CLUTCH SHAFT OIL 씰
06.311	SEAL, FORWARD CLUTCH PISTON OUTER 씰	06.982	RING, 2ND GEAR RETAINER 링
06.313	DISC, FORWARD CLUTCH END 디스크	06.990	RING, CLUTCH SHAFT BEARING LOCATING 링
06.314	DISC, FORWARD CLUTCH INNER 디스크	06.993	BEARING, CLUTCH SHAFT PILOT 베어링
06.315	DISC, FORWARD CLUTCH OUTER 디스크	08.309	BUSHING, CLUTCH SHAFT 부싱
06.366	SEAL, REVERSE CLUTCH PISTON INNER 씰	08.317	BEARING, CLUTCH RELEASE 베어링
06.367	SEAL, REVERSE CLUTCH PISTON OUTER 씰	08.328	SHAFT, CLUTCH 샤프트
06.369	DISC, REVERSE CLUTCH END 디스크	08.390	SEAL, CLUTCH RELEASE SHAFT 씰

44.189	RING, TRANSMISSION CLUTCH PISTON 링
44.229	SEAL, CLUTCH PISTON RING 씰
44.230	SEAL, CLUTCH PISTON RING 씰
44.294	BEARING, REVERSE CLUTCH GEAR 베어링
44.355	SHIM, CLUTCH PACK PRIORITY LUBE 삼
44.414	DRUM SUB ASSEMBLY, FORWARD 서브드럼
44.417	DRUM SUB ASSEMBLY, REVERSE 서브드럼

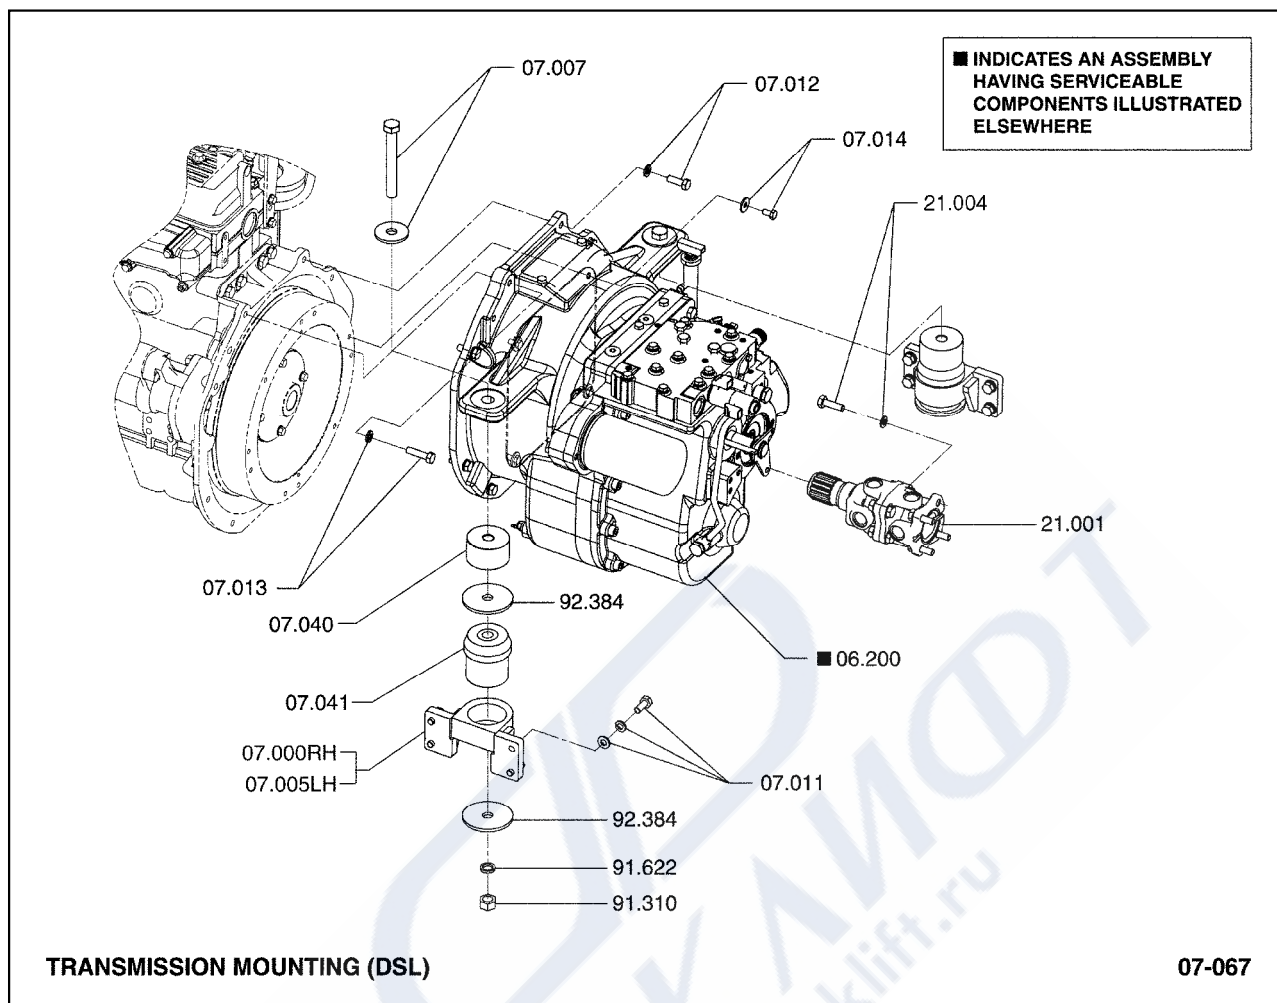 


06.200	TRANSMISSION ASSEMBLY 트랜스미션
07.000	BRACKET, TRANSMISSION MOUNTING (RH) 브라켓
07.005	BRACKET, TRANSMISSION MOUNTING LH 브라켓
07.007	FASTENER, TRANSMISSION MOUNTING BRACKET LH 패스너
07.011	FASTENER, TRANSMISSION MOUNTING BRACKET LH 패스너
07.012	FASTENER, TRANSMISSION TO ENGINE 패스너
07.013	FASTENER, TRANSMISSION TO ENGINE 패스너
07.014	FASTENER, TRANSMISSION TO ENGINE 패스너
07.040	SPACER, TRANSMISSION MOUNTING BRACKET FASTENER 스페이서

07.041	DAMPENER, TRANSMISSION MOUNTING VIBRATION 댐프너
21.001	SHAFT ASSEMBLY, TRANSMISSION TO AXLE PROPELLER 샤프트
21.004	FASTENER, PROPELLER SHAFT 패스너
91.310	NUT, TRANS MOUNTING BRACKET FASTENER (LH) 너트
91.622	LOCKWASHER, TRANSMISSION MOUNTING BRACKET FASTENER 로크와셔
92.384	WASHER, TRANSMISSION MOUNTING BRACKET TO FRAME FAS 와셔

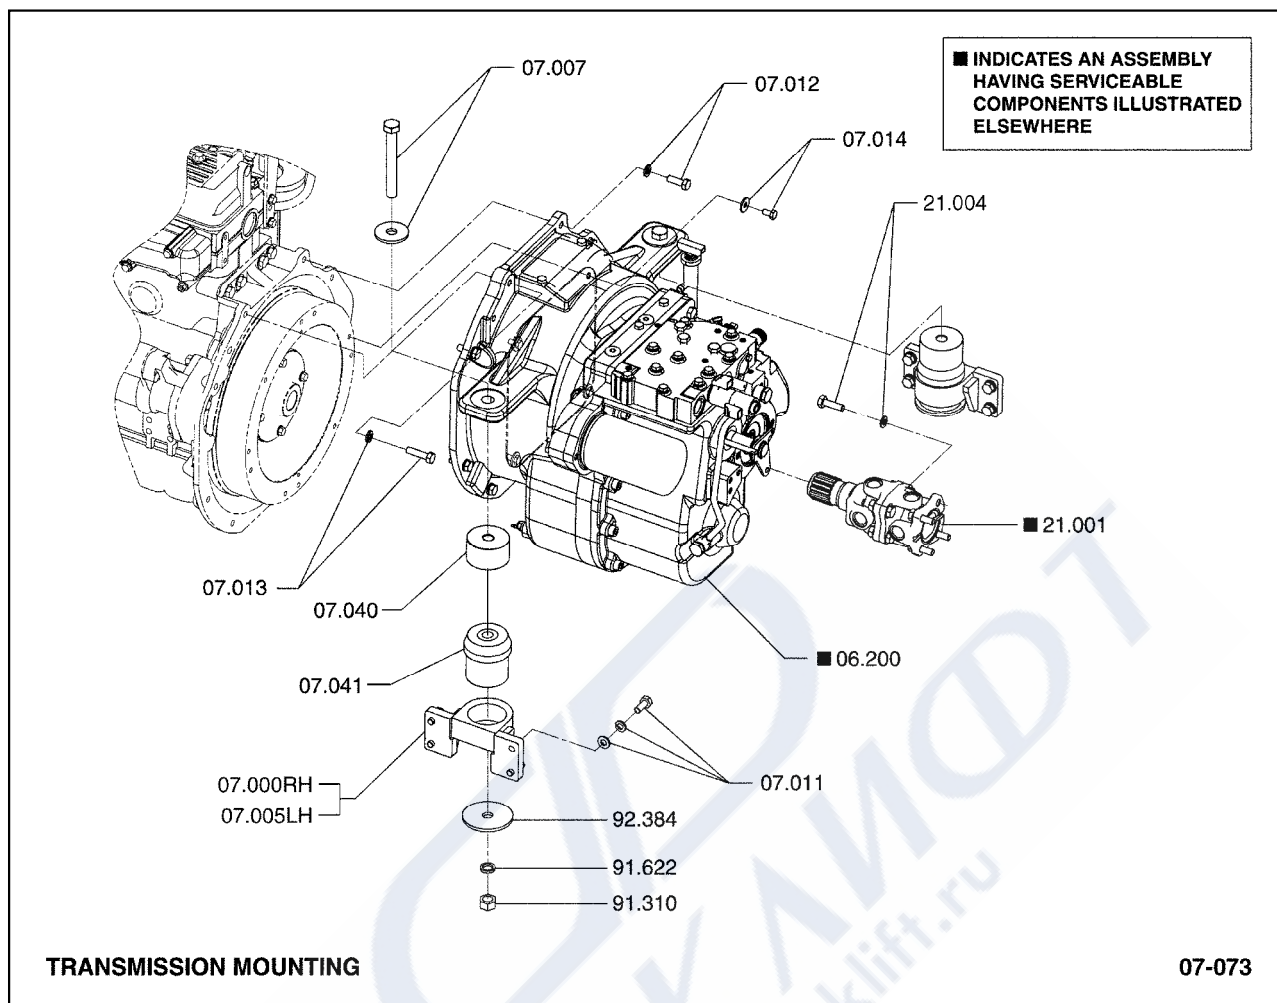 

06.200	TRANSMISSION ASSEMBLY 트랜스미션
07.000	BRACKET, TRANSMISSION MOUNTING (RH) 브라켓
07.005	BRACKET, TRANSMISSION MOUNTING LH 브라켓
07.007	FASTENER, TRANSMISSION MOUNTING BRACKET LH 패스너
07.011	FASTENER, TRANSMISSION MOUNTING BRACKET LH 패스너
07.012	FASTENER, TRANSMISSION TO ENGINE 패스너
07.013	FASTENER, TRANSMISSION TO ENGINE 패스너
07.014	FASTENER, TRANSMISSION TO ENGINE 패스너
07.039	BRACKET, TRANSMISSION MOUNTING 브라켓

07.040	SPACER, TRANSMISSION MOUNTING BRACKET FASTENER 스페이서
07.041	DAMPENER, TRANSMISSION MOUNTING VIBRATION 댐프너
21.001	SHAFT ASSEMBLY, TRANSMISSION TO AXLE PROPELLER 샤프트
21.004	FASTENER, PROPELLER SHAFT 패스너
91.310	NUT, TRANS MOUNTING BRACKET FASTENER (LH) 너트
91.622	LOCKWASHER, TRANSMISSION MOUNTING BRACKET FASTENER 로크와셔
92.384	WASHER, TRANSMISSION MOUNTING BRACKET TO FRAME FAS 와셔


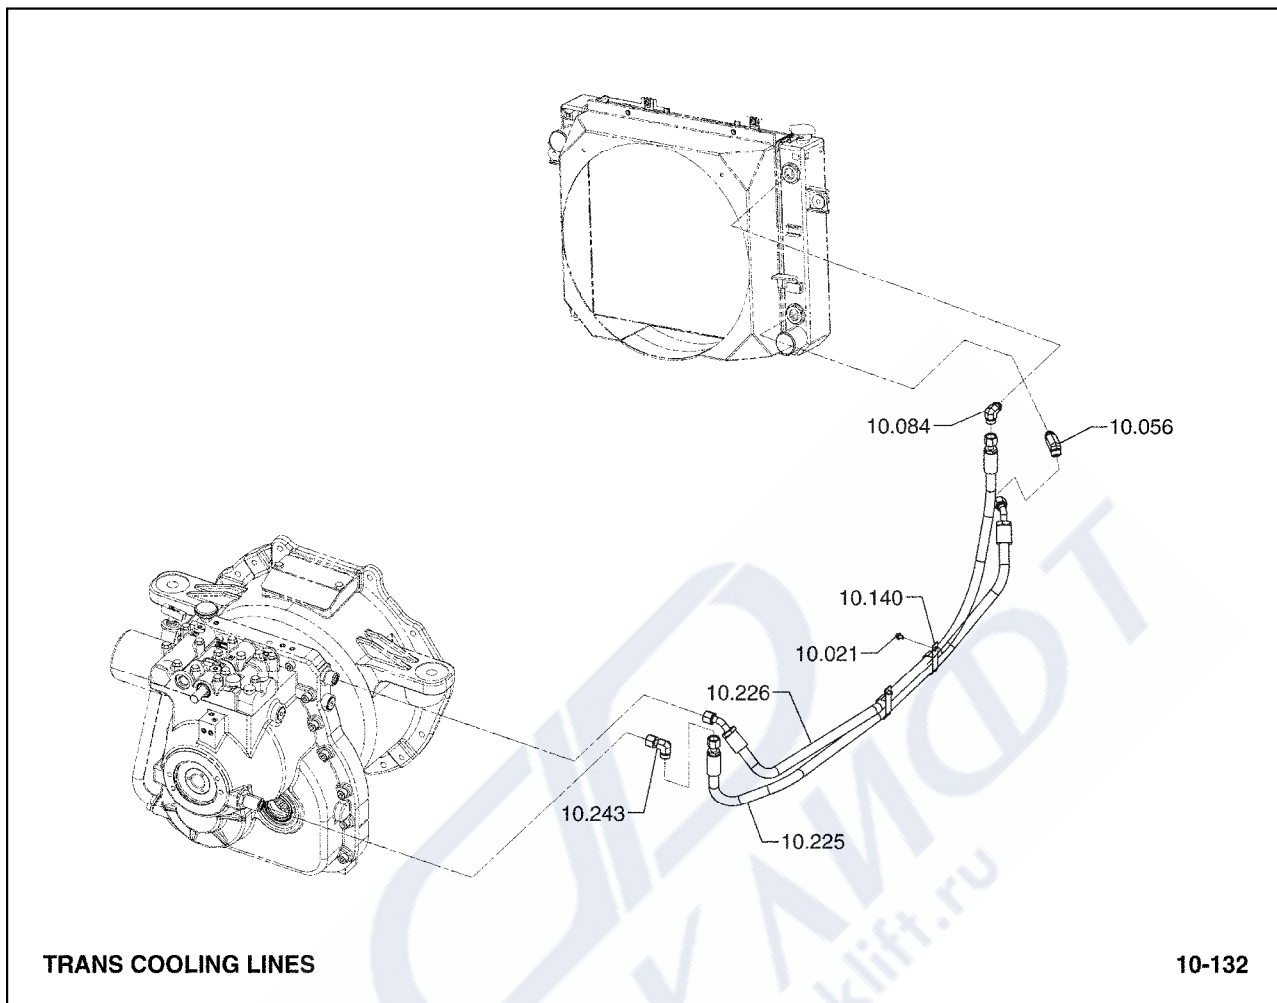 


TRANS COOLING LINES

10-132

10.021	FASTENER, COOLER OUTLET LINE CLAMP 패스너
10.056	FITTING, COOLER OUTLET 피팅
10.084	FITTING, COOLER INLET LINE 피팅
10.140	CLAMP, COOLER LINE 클램프
10.225	LINE, OIL COOLING 라인
10.226	LINE, OIL COOLING 라인
10.243	FITTING, COOLING LINE 피팅

  ENGINE ASSEMBLY
COMPLETE — 00.000

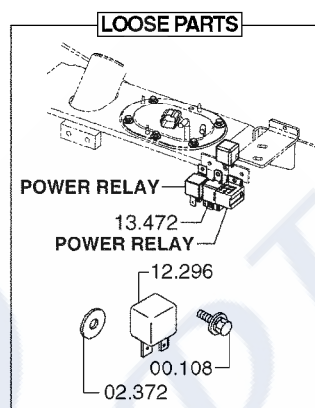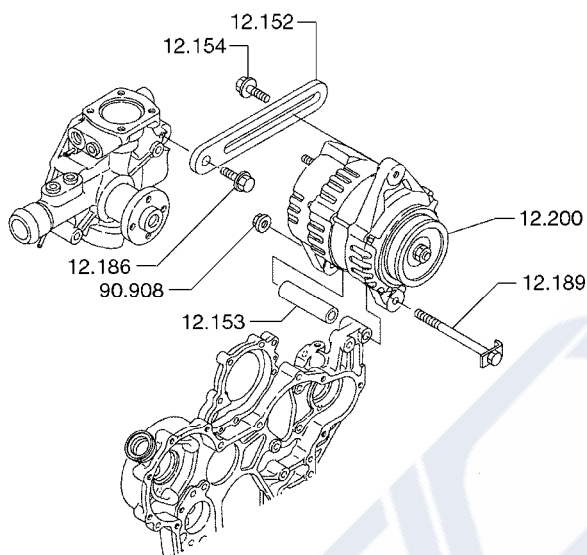


ALTERNATOR MOUNTING

12-189

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.108	FASTENER, ENGINE VENT 패스너
02.372	FASTENER, ELECTRONIC CONTROL UNIT COVER 패스너
12.152	BRACKET, ALTERNATOR ADJUSTING STRAP 브라켓
12.153	SPACER, ALTERNATOR MOUNTING 스페이서
12.154	FASTENER, ALTERNATOR MOUNTING 패스너
12.186	FASTENER, ALTERNATOR MOUNTING 패스너
12.189	FASTENER, ALTERNATOR MOUNTING 패스너
12.200	ALTERNATOR ASSEMBLY 알터네이터

12.296	RELAY, ALTERNATOR FIELD 릴레이
13.472	RELAY, MAIN POWER 릴레이
90.908	WASHER, ALT TO BRACKET FASTENER 와셔

 
ФОРКЛИФТ
www.forklift.ru

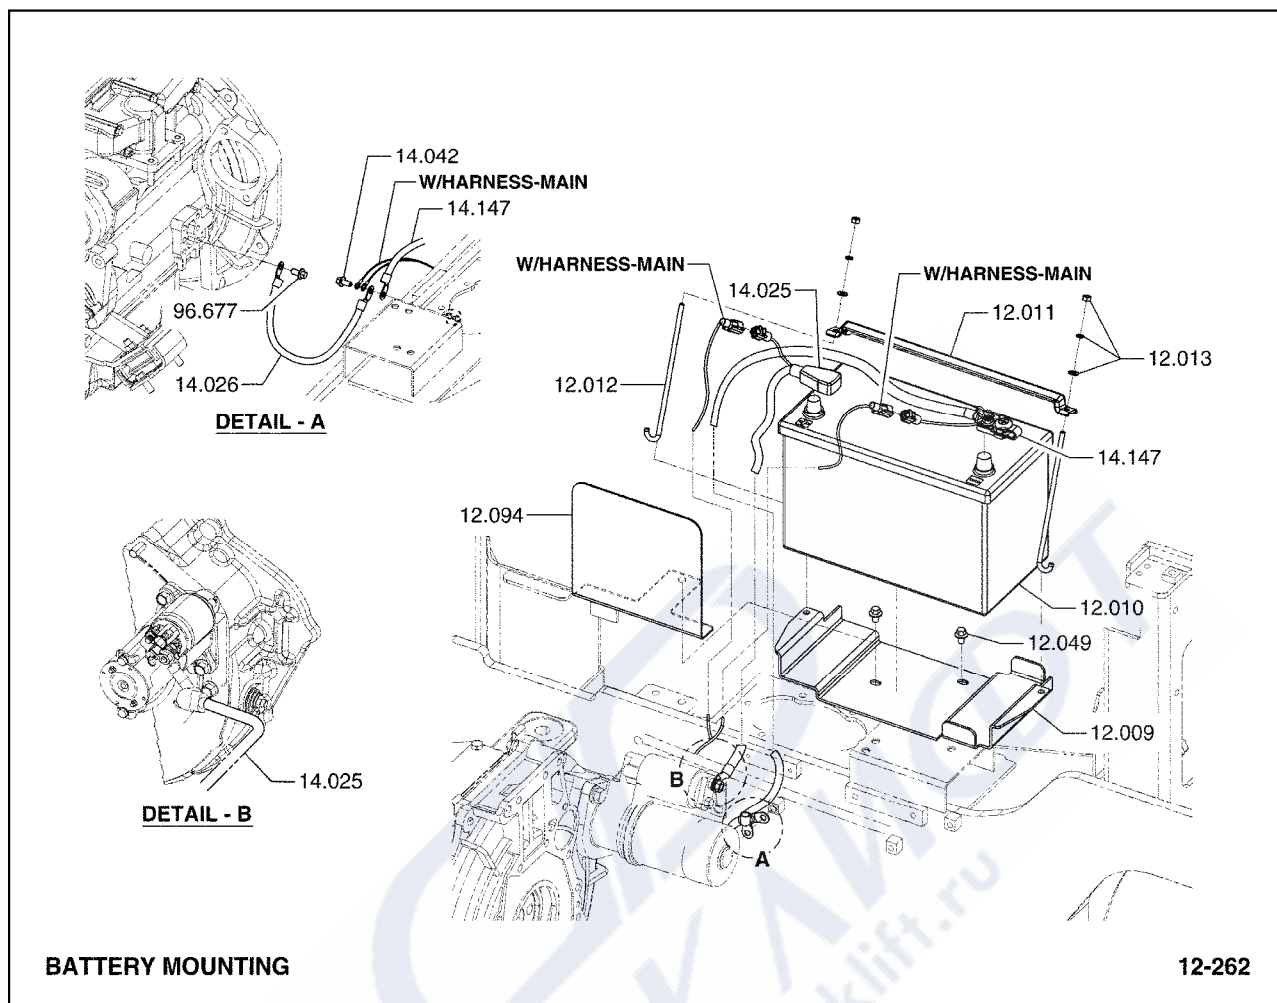


12.009	SUPPORT, BATTERY 서포트
12.010	BATTERY 배터리
12.011	CLAMP, BATTERY HOLD DOWN 클램프
12.012	STUD, BATTERY HOLD DOWN 스터드
12.013	FASTENER, BATTERY HOLD DOWN (AT CLAMP) 패스너
12.049	FASTENER, BATTERY SUPPORT 패스너
12.094	BRACKET, BATTERY SUPPORT 브라켓
14.025	CABLE, BATTERY TO STARTER 케이블
14.026	CABLE, BATTERY GROUND 케이블

14.042	FASTENER, BATTERY GROUND CABLE 패스너
14.147	CABLE, BATTERY NEGATIVE 케이블
96.677	FASTENER, GROUND CABLE 패스너




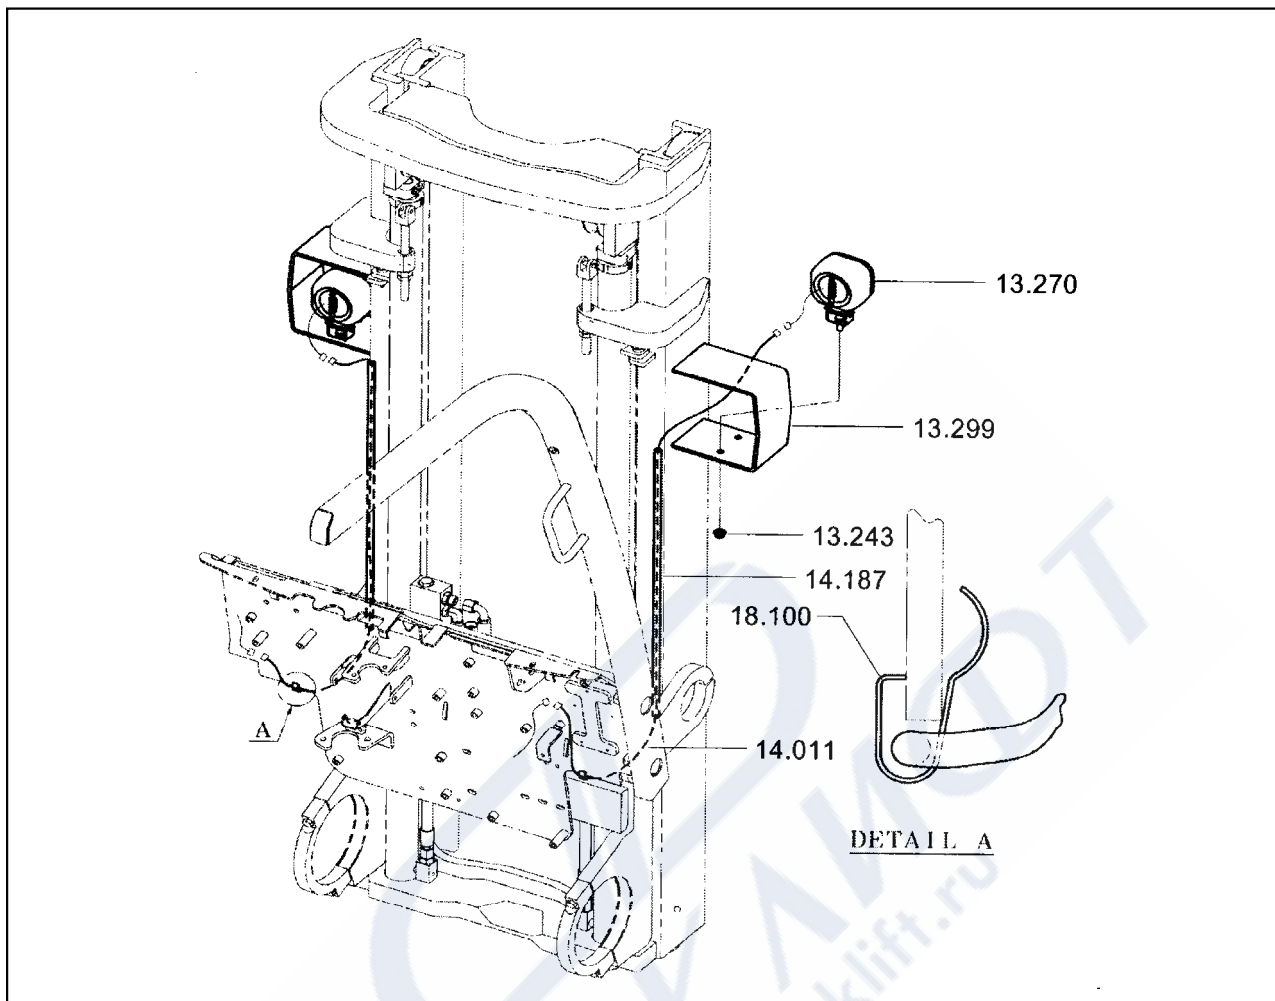 


- | | |
|--------|---------------------------------|
| 13.270 | HEADLAMP, ADJUSTABLE
헤드램프 |
| 14.018 | WIRE, HEADLIGHT
와이어 |
| 15.437 | HARNESS, HEADLAMP WIRING
하네스 |
| 18.100 | CLIP, HEAD LIGHT WIRE
클립 |
| 60.324 | BULB, HEADLAMP
전구 |

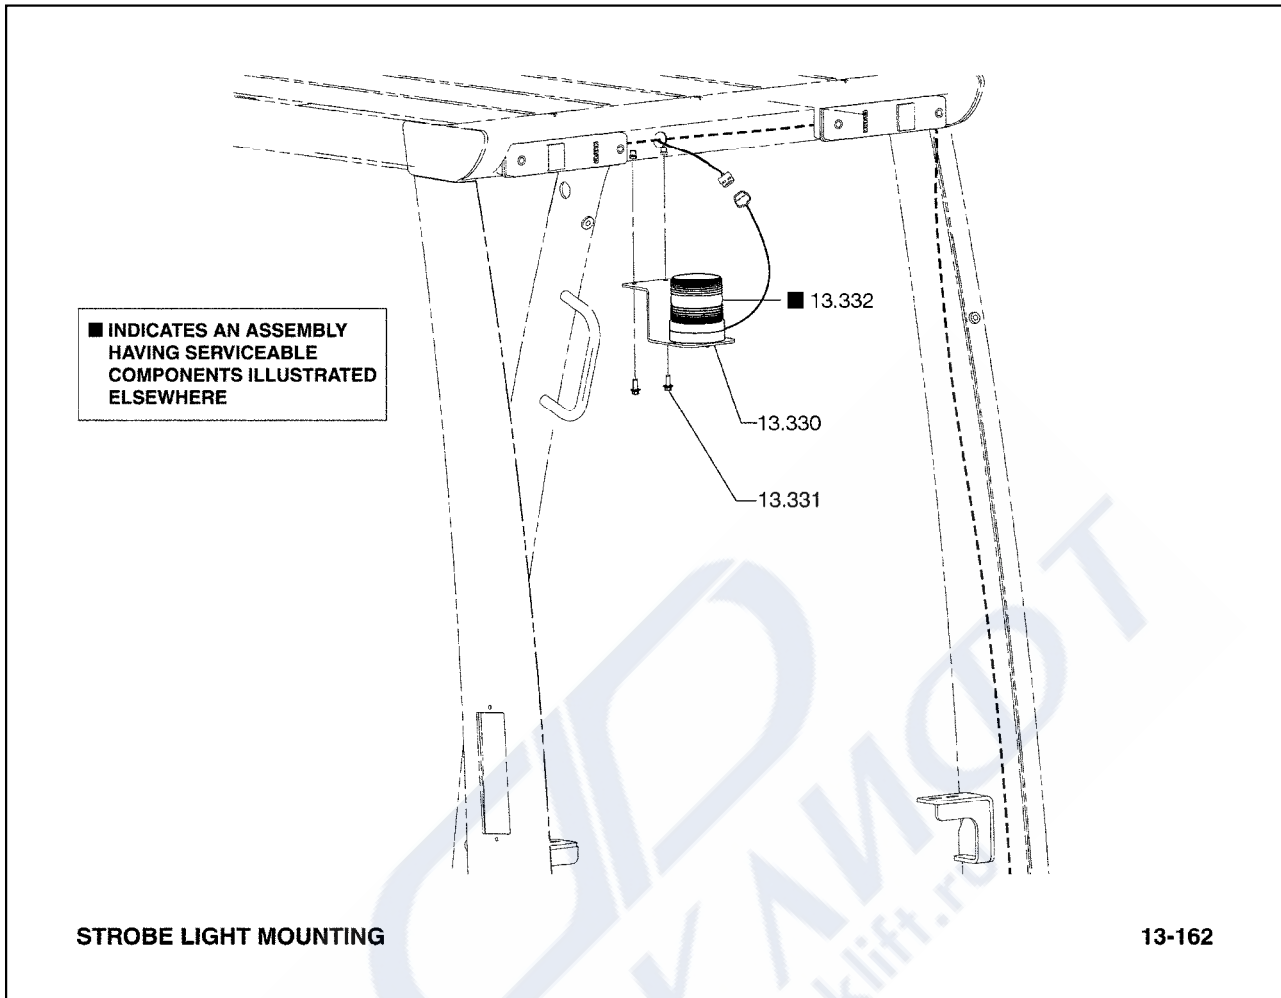 


- | | |
|--------|--|
| 13.330 | BRACKET, WARNING LIGHT
브라켓 |
| 13.331 | FASTENER, WARNING LIGHT BRACKET
패스너 |
| 13.332 | ASSEMBLY, WARNING LIGHT
경고등 |

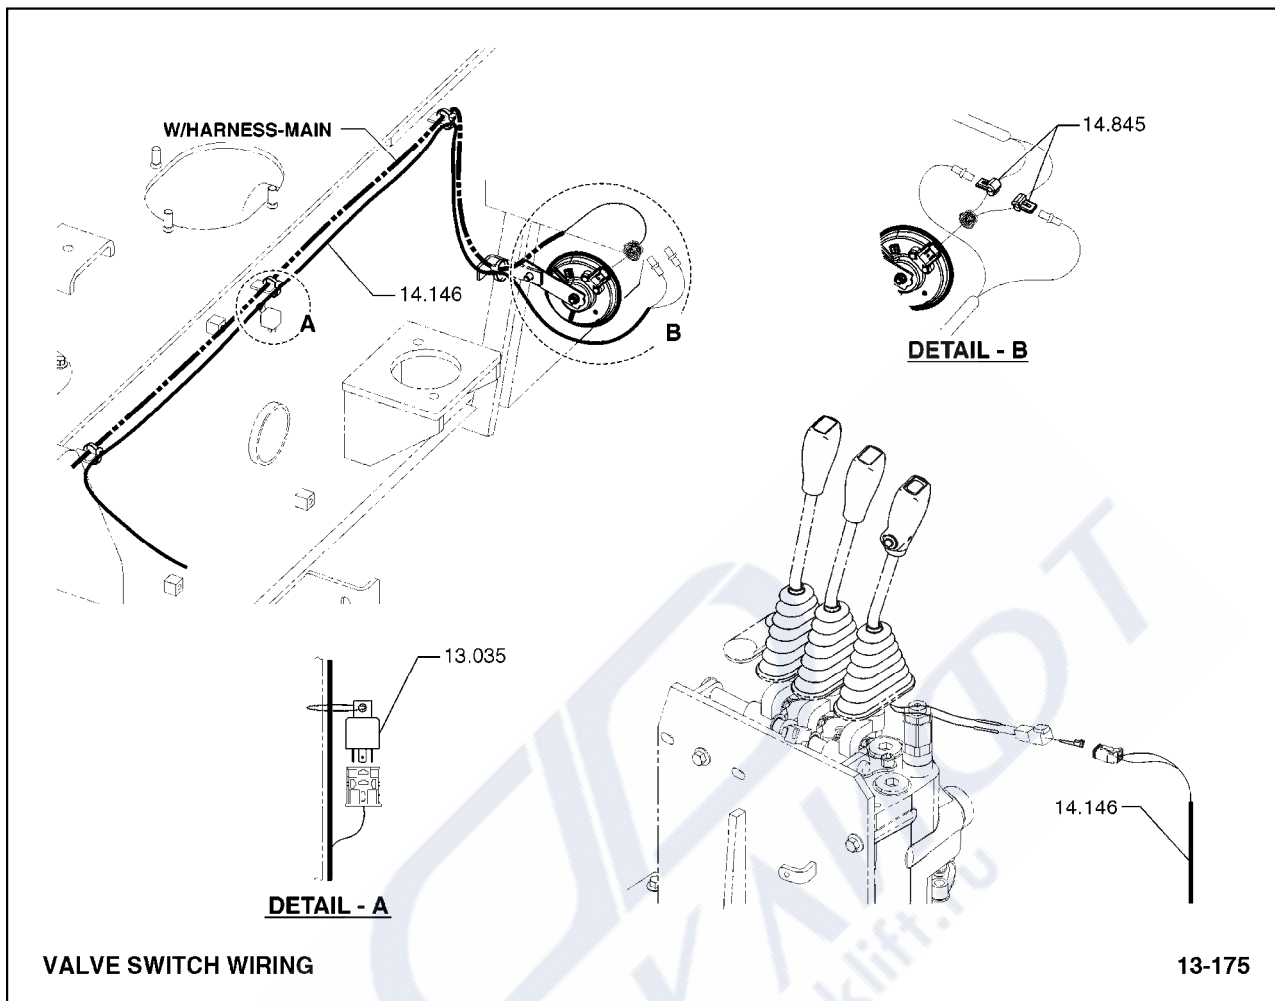 

 
- 13.035 RELAY, VALVE SWITCH WIRING HARNESS
릴레이
- 14.146 HARNESS, VALVE SWITCH WIRING
하네스
- 14.845 CONNECTOR, HYDRAULIC VALVE WIRE
커넥터

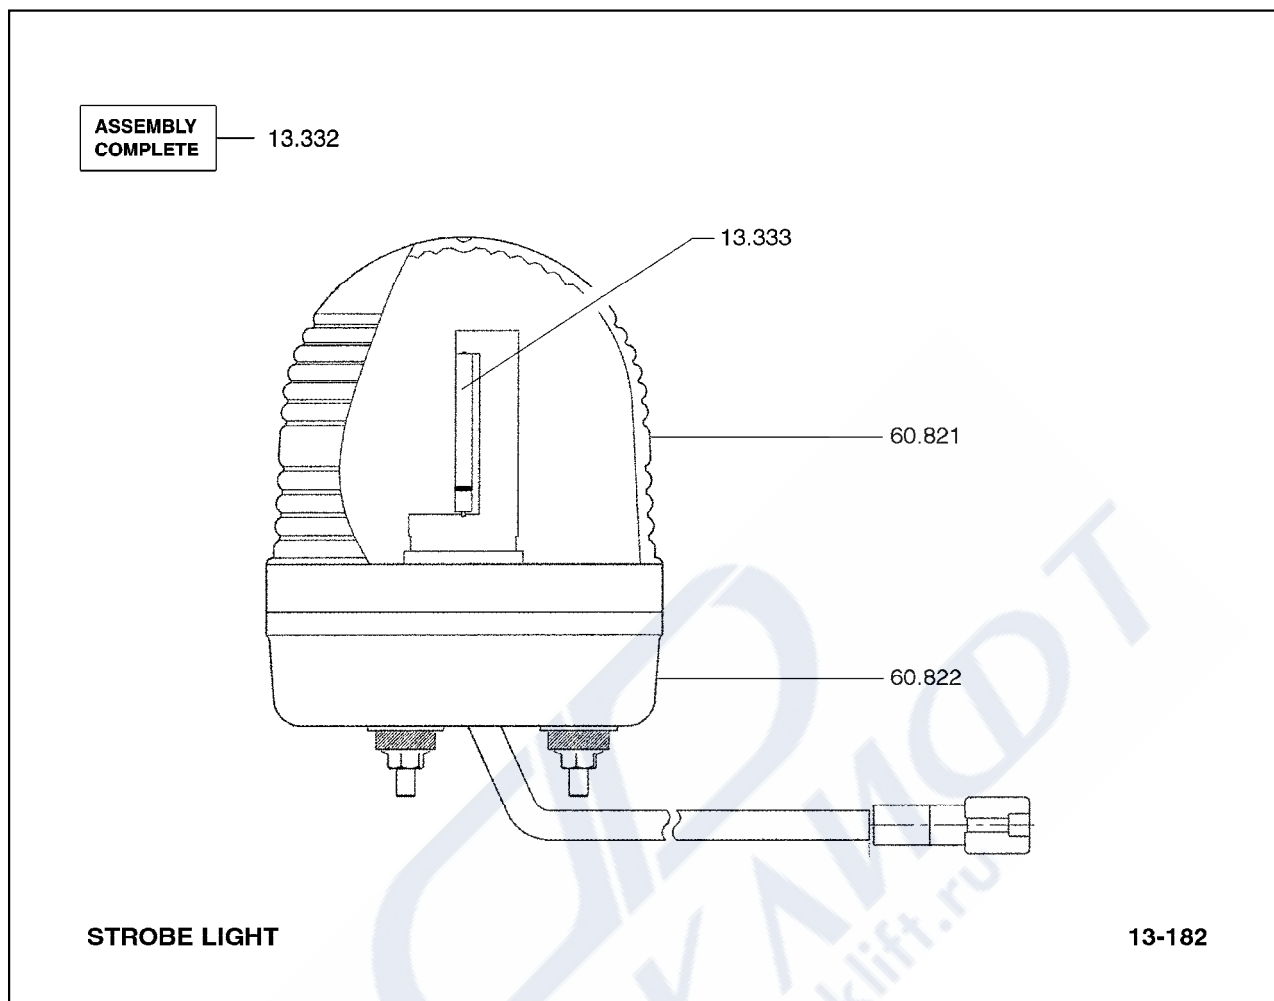

13.332	ASSEMBLY, WARNING LIGHT 경고등
13.333	BULB, WARNING LIGHT 전구
60.821	GLOBE, STROBE LIGHT 글로브
60.822	BASE, STROBE LIGHT 베이스

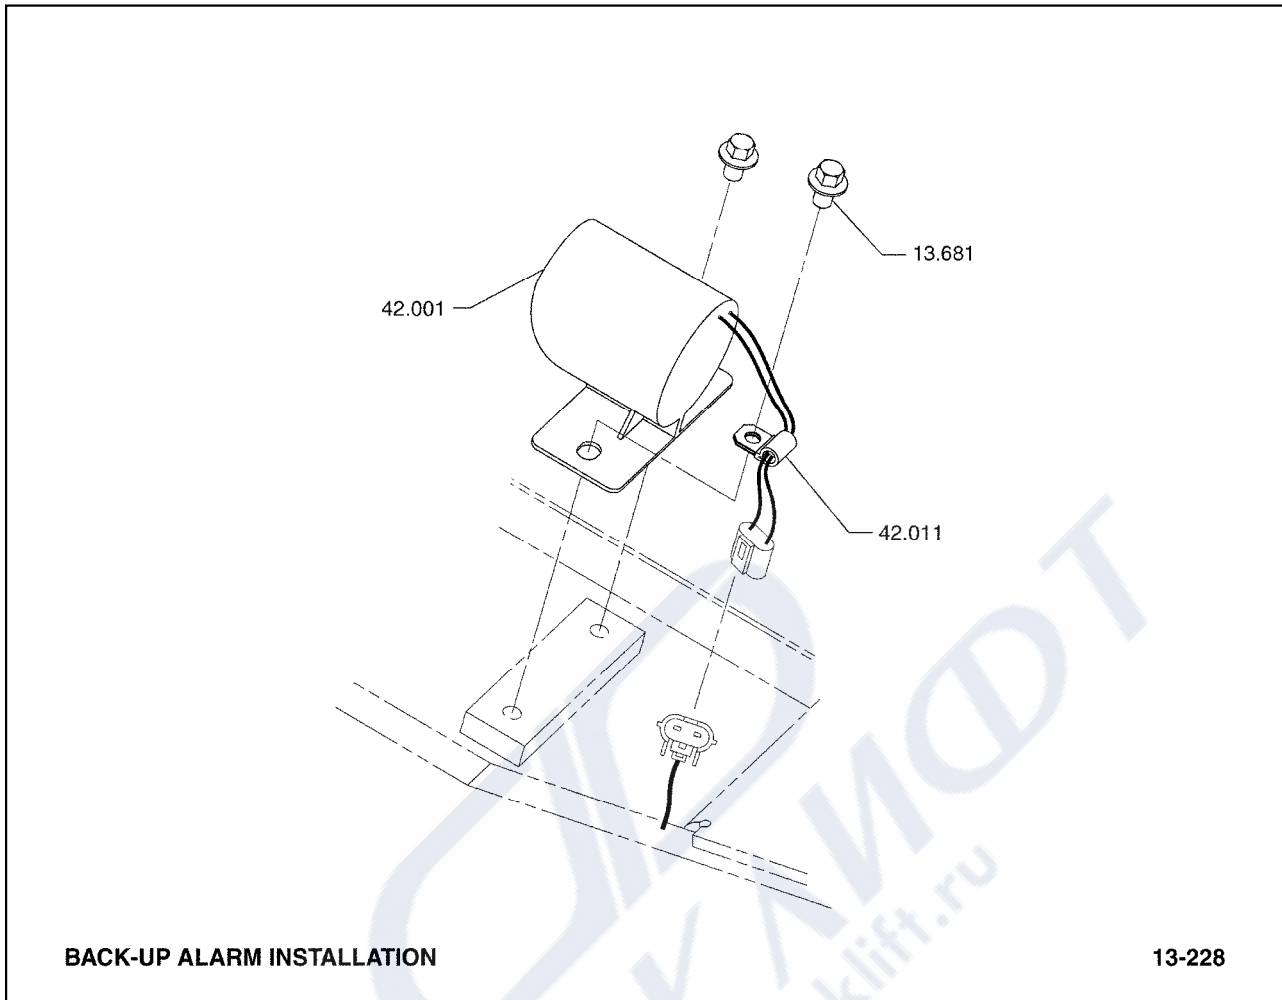 

- | | |
|--------|--|
| 13.681 | FASTENER, WARNING DEVICE
패스너 |
| 42.001 | WARNING DEVICE, AUDIBLE (AIR OPER)
경고장치 |
| 42.011 | CLIP, AUDIBLE WARNING DEVICE CABLE
클립 |

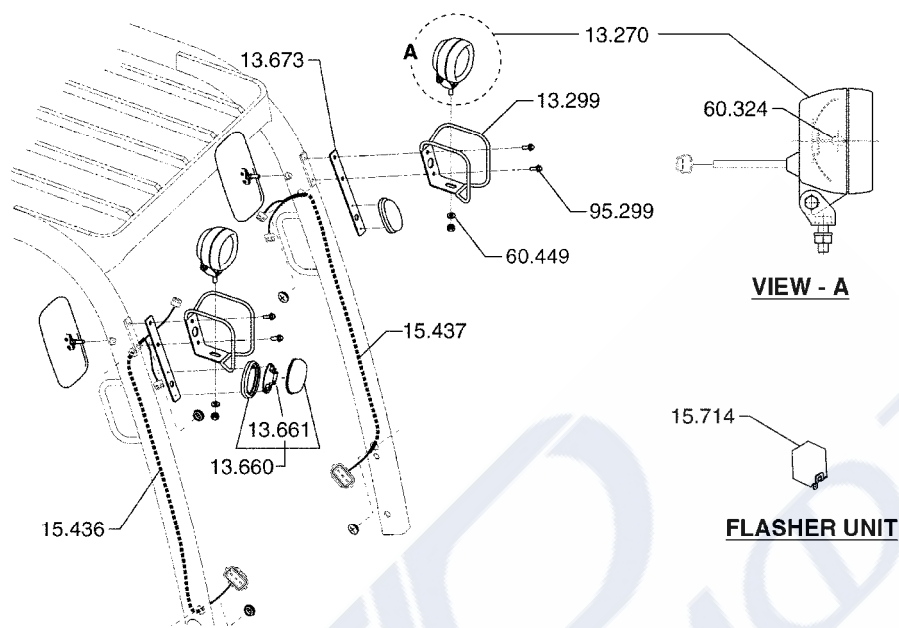 


HEAD & T/SIGNAL LIGHT INSTALLATION

13-230

13.270	HEADLAMP, ADJUSTABLE 헤드 램프
13.299	GUARD, HEADLIGHT 가드
13.660	LIGHT, TURN SIGNAL 라이트
13.661	BULB, TURN SIGNAL LIGHT 전구
13.673	BRACKET, TURN LIGHT 브라켓
15.436	HARNESS, RH HEADLAMP WIRING 하네스
15.437	HARNESS, HEADLAMP WIRING 하네스
15.714	FLASHER, UNIT 플래서
60.324	BULB, HEADLAMP 전구


60.449	SPACER, HEAD LAMP BRACKET MOUNTING 스페이서
95.299	FASTENER, HEADLAMP GUARD 패스너



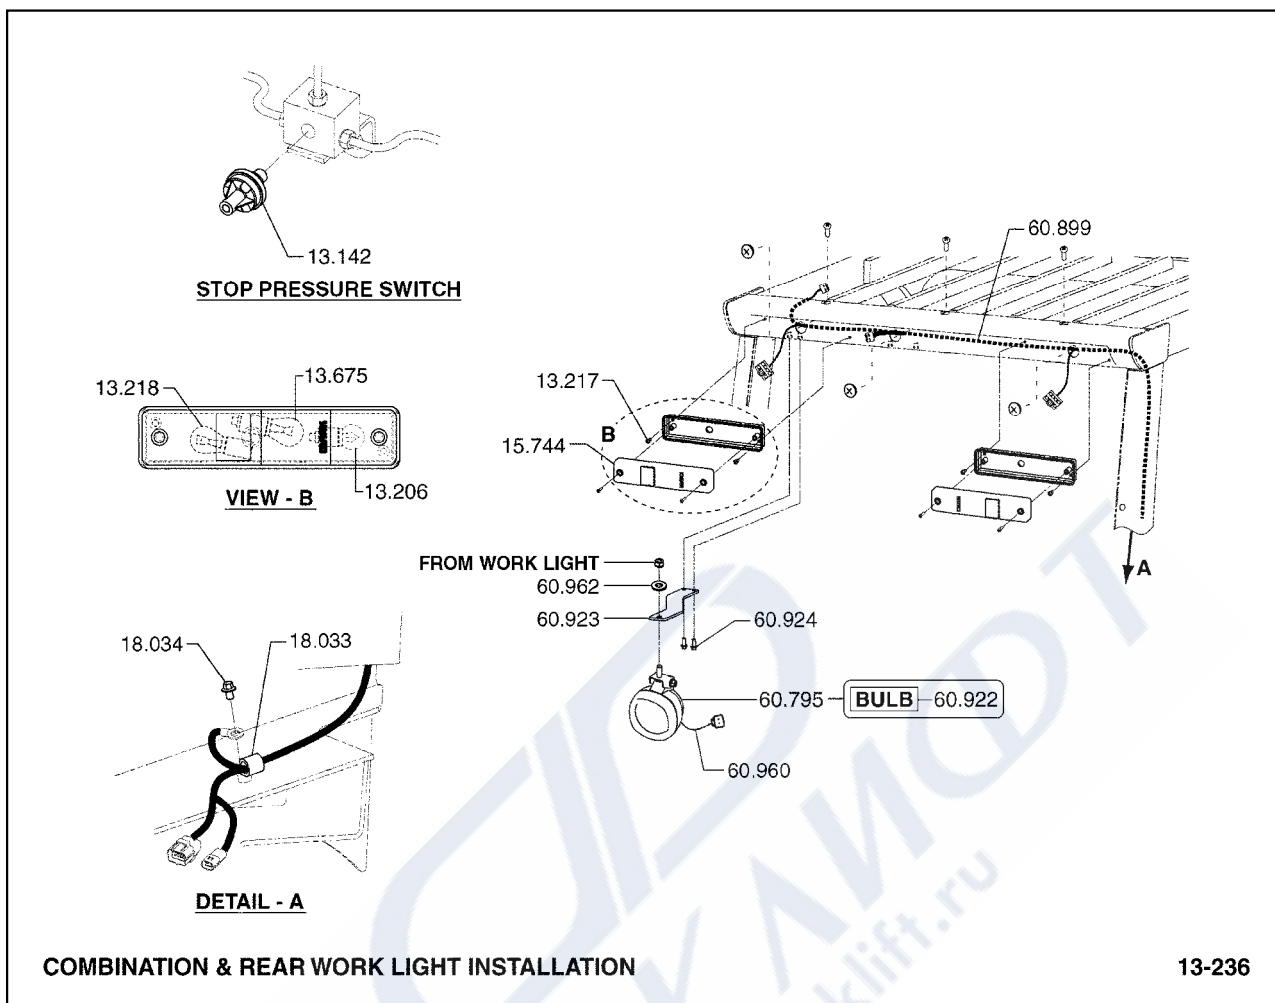 

13.142	SWITCH, BRAKE INTERLOCK 스위치
13.206	BULB, BACK-UP LAMP 전구
13.217	FASTENER, COM STOP & TAIL LAMP ASSY MTG 패스너
13.218	BULB, STOP & TAIL LAMP 전구
13.675	BULB, TURN LIGHT 전구
15.744	LAMP ASSEMBLY, COMBINATION STOP & TAIL 램프
18.033	CLIP, HARNESS 클립
18.034	FASTENER, HARNESS CLIP 패스너
60.795	LIGHT, REAR WORK 라이트


60.899	WIRING HARNESS, REAR ACCESSORY 와이어하네스
60.922	BULB, REAR WORK LAMP 전구
60.923	BRACKET, REAR WORK LAMP MOUNTING 브라켓
60.924	FASTENER, REAR WORK LAMP MOUNTING 패스너
60.960	HARNESS, REAR WORK LAMP EXTENSION 하네스
60.962	SPACER, REAR WORK LAMP MOUNTING 스페이서

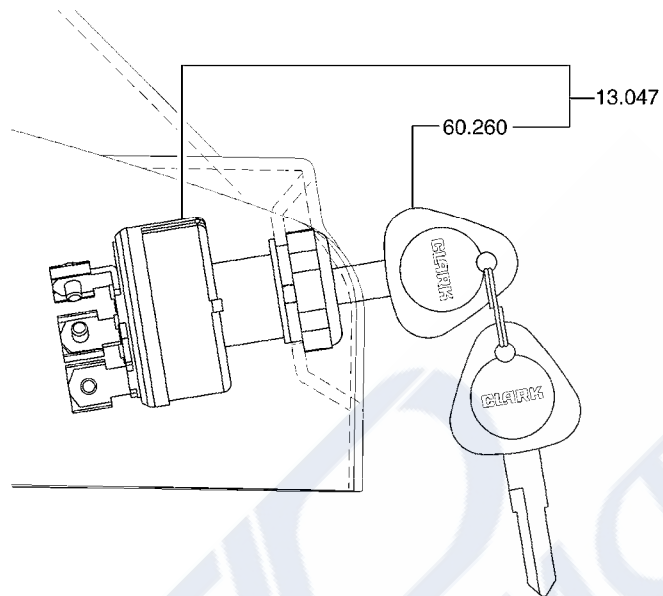 


KEY SWITCH INSTALLATION

13-292

- | | |
|--------|----------------------------------|
| 13.047 | SWITCH, CIRCUIT LOCKING
스위치 |
| 60.260 | KEY, CIRCUIT LOCKING SWITCH
키 |

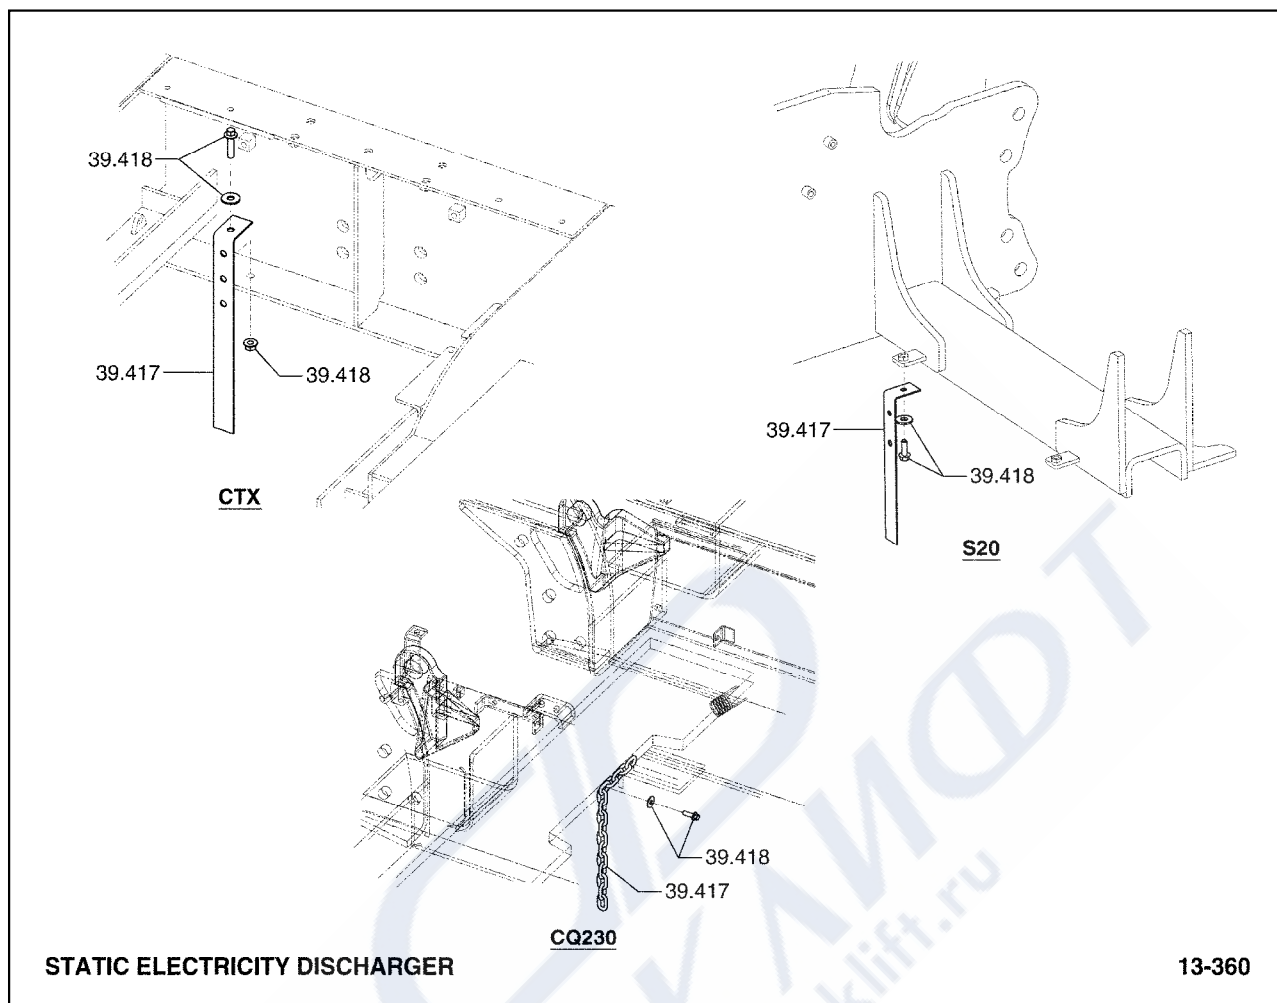 


- | | |
|--------|--|
| 39.417 | GROUND STRAP, ELECTRIC TRUCK
접지케이블 |
| 39.418 | FASTENER, ELECTRIC TRUCK GROUND STRAP
패스너 |

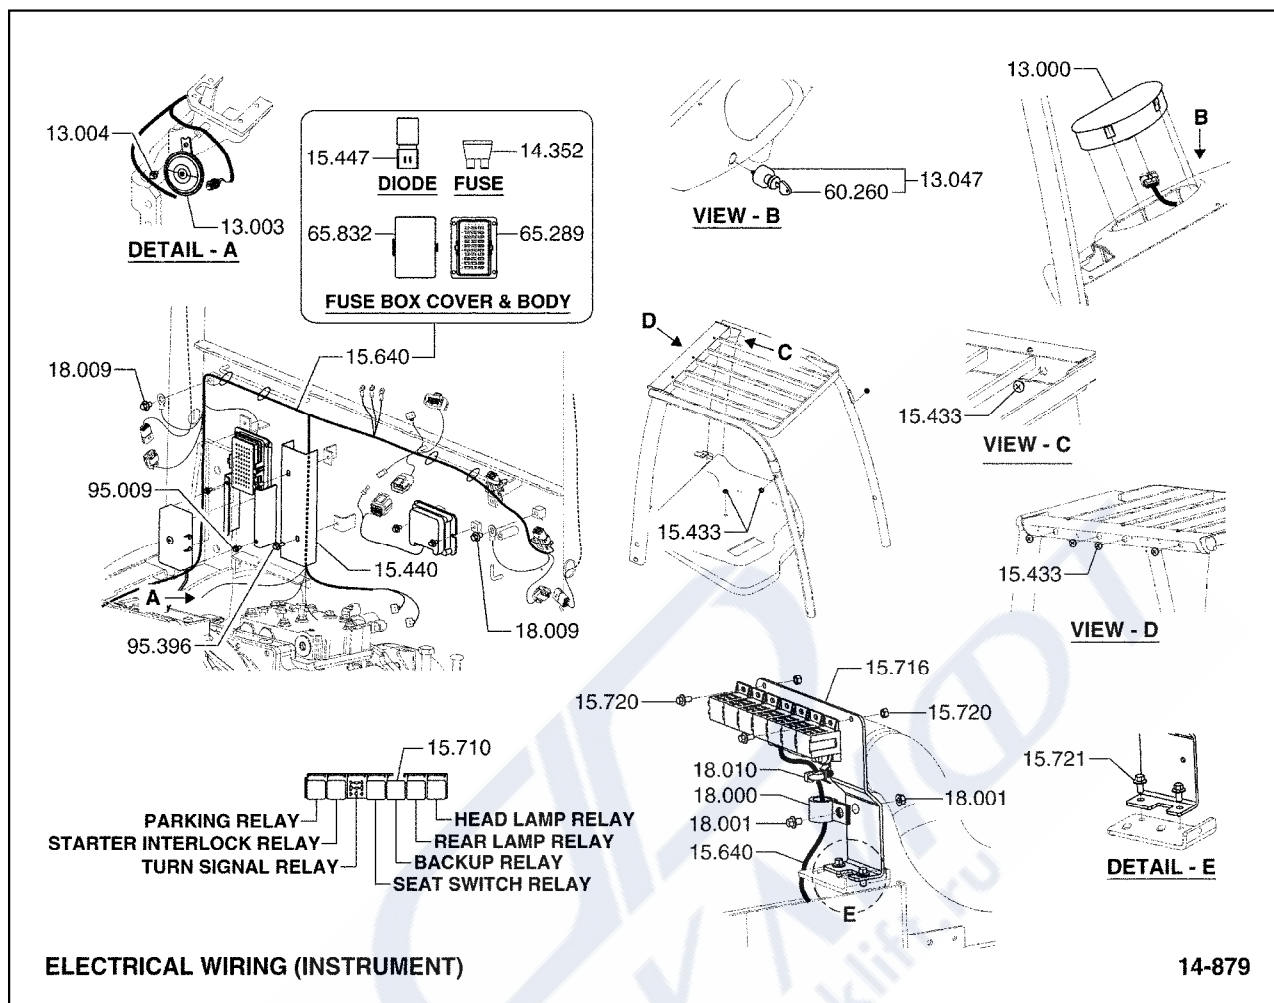 

13.000	PANEL, INSTRUMENT CLUSTER 판넬
13.003	HORN 혼
13.004	FASTENER, HORN MOUNTING BRACKET 패스너
13.047	SWITCH, CIRCUIT LOCKING 스위치
14.352	FUSE, CONTROL CIRCUIT 퓨즈
15.433	GROMMET, CONTROL CIRCUIT WIRING HARNESS 그로멧
15.440	SHIELD, WIRING HARNESS PROTECTION 실드
15.447	DIODE, HARNESS 다이오드
15.640	WIRING HARNESS, MACHINE COWL 와이어하네스

15.710	RELAY, ELECTRICAL 릴레이
15.716	BRACKET, RELAY MOUNTING 브라켓
15.720	FASTENER, RELAY SOCKET 패스너
15.721	FASTENER, RELAY BRACKET 패스너
18.000	CLIP, WIRING HARNESS 클립
18.001	FASTENER, WIRING HARNESS CLIP 패스너
18.009	FASTENER, HARNESS CLIP 패스너
18.010	CLIP, HARNESS 클립
60.260	KEY, CIRCUIT LOCKING SWITCH 키
65.289	BODY, FUSE BOX 바디
65.832	COVER, FUSE BOX 커버
95.009	FASTENER, FUSE BOX MOUNTING 패스너
95.396	FASTENER, WIRING HARNESS PROTECTION SHIELD 패스너




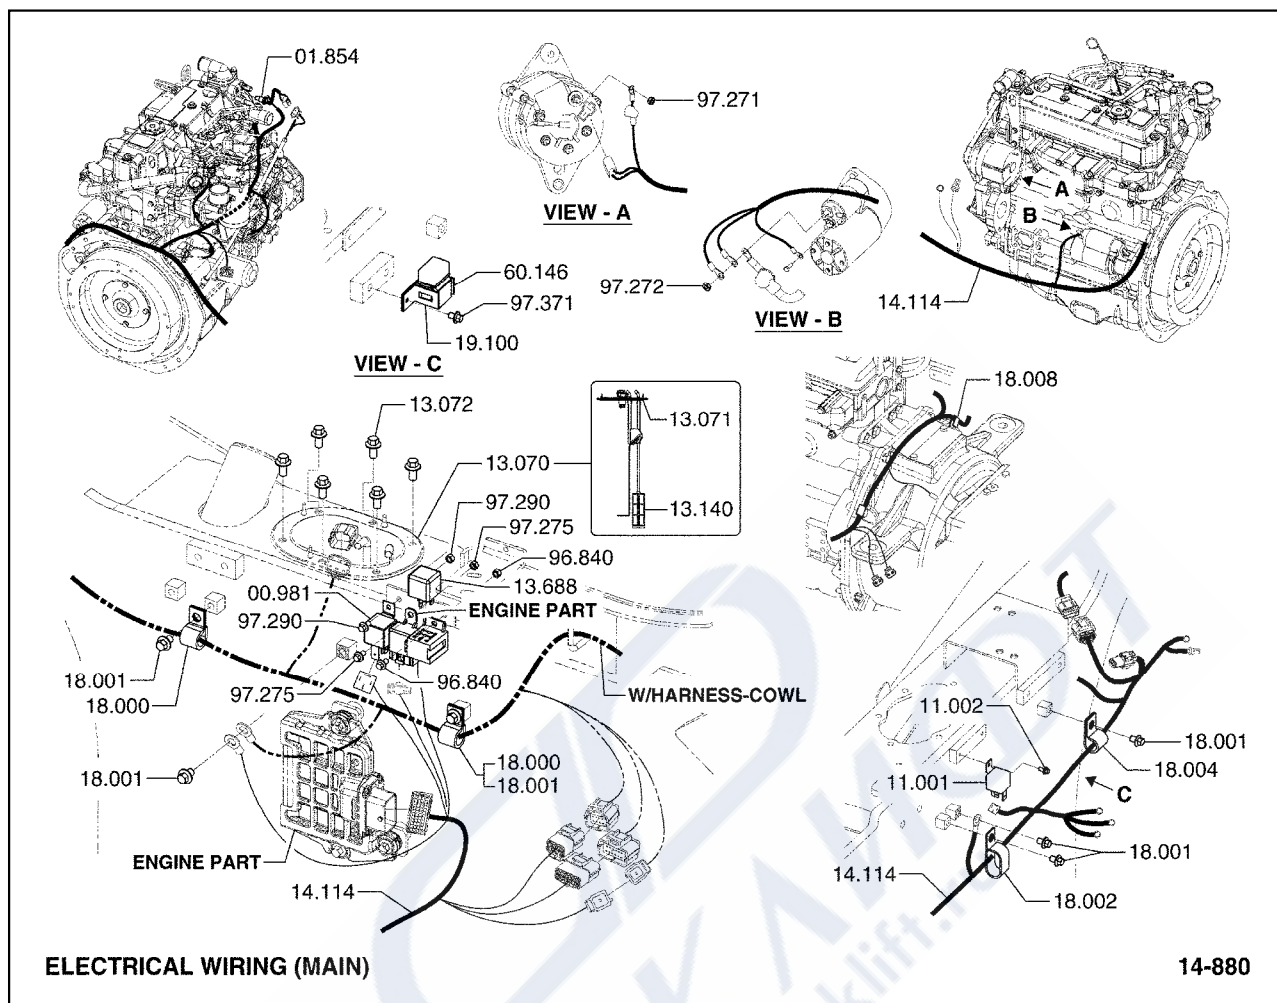 

00.981	RELAY, ENGINE PRE-HEATER 릴레이
01.854	SENSOR, ENGINE COOLANT TEMPERATURE 센서
11.001	RELAY, STARTER 릴레이
11.002	FASTENER, STARTER RELAY 패스너
13.070	SENDER, FUEL GAUGE 센더
13.071	GASKET, FUEL GAUGE SENDER 가스켓
13.072	FASTENER, FUEL GAUGE SENDER 패스너
13.140	STRAINER, FUEL GAGE SENDER 스트레이너
13.688	RELAY, ENGINE CONDITION SIGNAL 릴레이

14.114	HARNESS, MACHINE WIRING 하네스
18.000	CLIP, WIRING HARNESS 클립
18.001	FASTENER, WIRING HARNESS CLIP 패스너
18.002	CLIP, WIRING HARNESS 클립
18.004	CLIP, WIRING HARNESS 클립
18.008	CLIP, WIRING HARNESS 클립
19.100	BRACKET, RELAY MOUNTING 브라켓
60.146	BRACKET, STARTER RELAY MOUNTING 브라켓
96.840	FASTENER, RELAY MOUNTING BRACKET 패스너
97.271	FASTENER, CABLE & WIRE TO ALTERNATOR 패스너
97.272	FASTENER, CABLE & WIRE TO STARTER 패스너
97.275	FASTENER, MAIN POWER RELAY 패스너
97.290	FASTENER, ENGINE PRE-HEATER RELAY 패스너
97.371	FASTENER, STARTER RELAY MOUNTING BRACKET 패스너

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

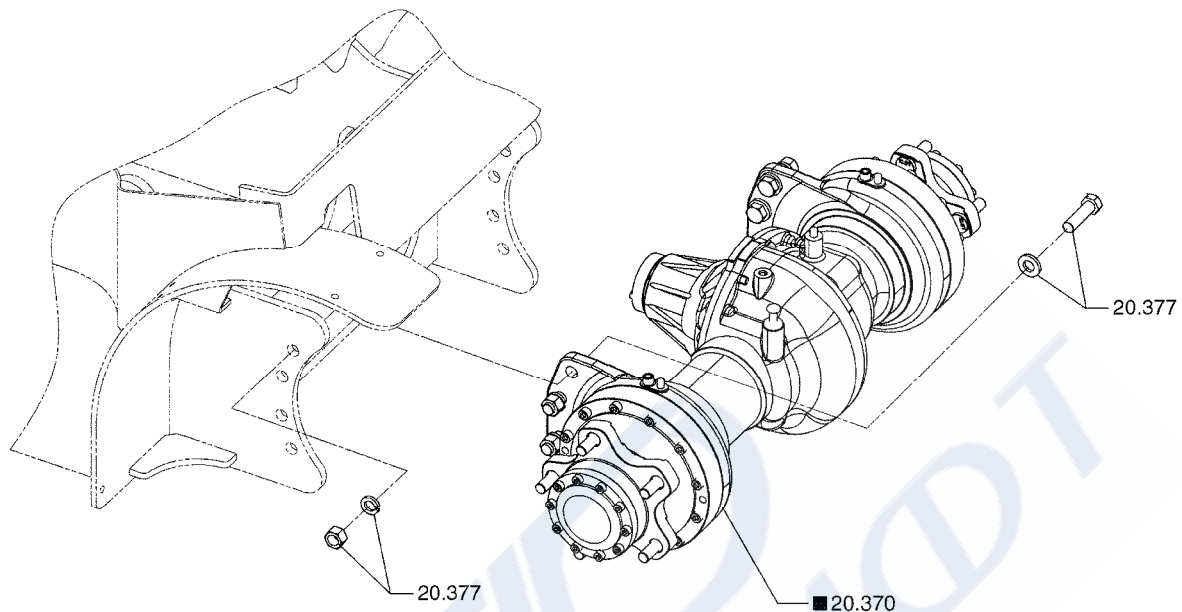


DRIVE AXLE MOUNTING

20-135

- | | |
|--------|--------------------------------------|
| 20.370 | AXLE ASSEMBLY, DRIVE
드라이브액슬 |
| 20.377 | FASTENER, DRIVE AXLE TO FRAME
패스너 |

ASSEMBLY COMPLETE — 20.370

 ■ INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

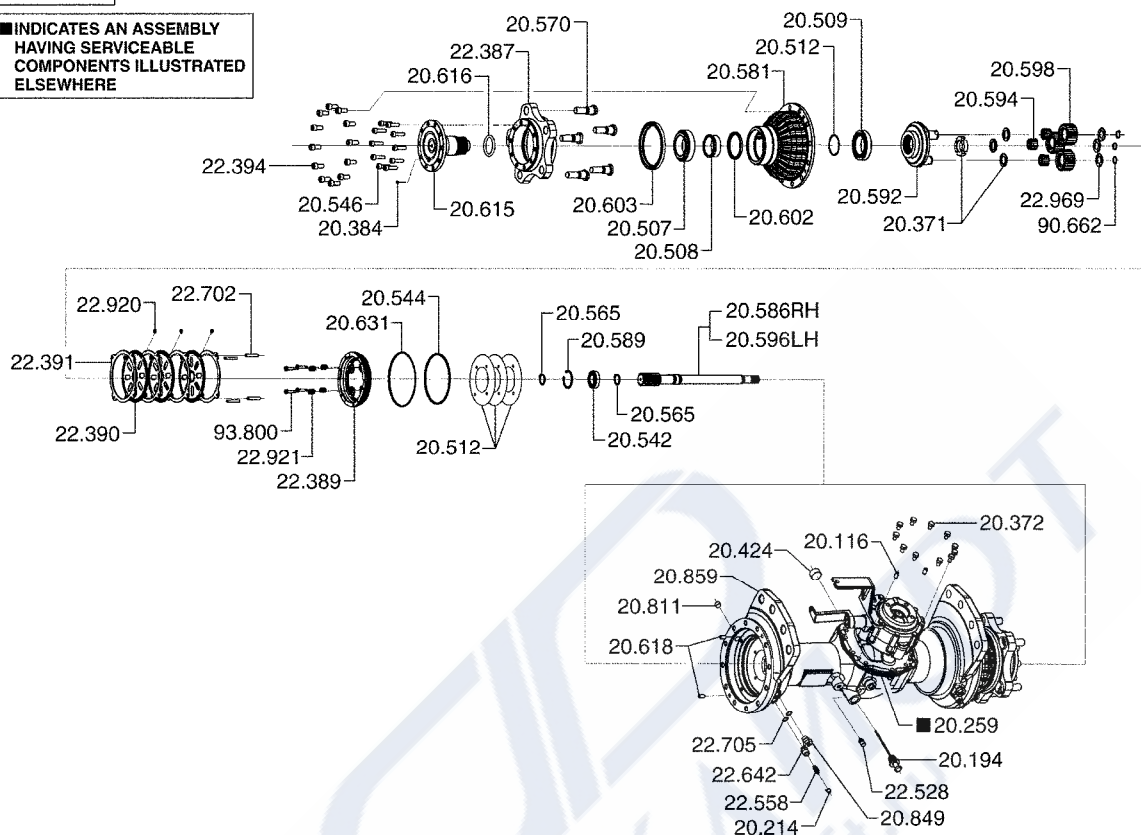

DRIVE AXLE ASSEMBLY


20-183

20.116	PIN, DRIVE AXLE HOUSING & DIFF ALIGNMENT 핀	20.546	FASTENER, DRIVE AXLE END 패스너
20.194	DIPSTICK, DRIVE AXLE 딤스틱	20.565	RETAINER, DRIVE AXLE SHAFT BEARING 리테이너
20.214	COVER, AXLE ADAPTOR BLEEDER OPENING 커버	20.570	FASTENER, DRIVE WHEEL MOUNTING 패스너
20.259	CARRIER & CAP ASSEMBLY, DIFFERENTIAL 캐리어& 캡	20.581	HUB ASSEMBLY, DRIVE AXLE 허브
20.370	AXLE ASSEMBLY, DRIVE 드라이브액슬	20.586	SHAFT, DRIVE AXLE 샤프트
20.371	FASTENER, DRIVE AXLE PLANET 패스너	20.589	RETAINER, DRIVE AXLE SHAFT SEAL 리테이너
20.372	FASTENER, AXLE HOUSING 패스너	20.592	PLANET, DRIVE AXLE 플래닛
20.384	PLUG, DRIVE AXLE HOUSING 플러그	20.594	ROLLER, DRIVE AXLE PLANET PINION GEAR 롤러
20.424	PLUG, DIFFERENTIAL & AXLE HOUSING FILLER 플러그	20.596	SHAFT, DRIVE AXLE (LH) 샤프트
20.507	BEARING, INTERNAL GEAR HUB PINION SHAFT - OUTBOA 베어링	20.598	GEAR, DRIVE AXLE PLANET PINION 기어
20.508	SPACER, INTERNAL GEAR HUB PINION SHAFT BEARING 스페이서	20.602	SEAL, DRIVE AXLE HUB INNER OIL 씰
20.509	BEARING, INTERNAL GEAR HUB PINION SHAFT - INBOAR 베어링	20.603	SEAL, DRIVE AXLE HUB OUTER OIL 씰
20.512	SHIM, DRIVE AXLE HUB BEARING 심	20.615	SPINDLE, DRIVE AXLE END 스핀들
20.542	BEARING, DRIVE AXLE SHAFT 베어링	20.616	SEAL, DRIVE AXLE HUB 씰
20.544	SEAL, DRIVE AXLE SHAFT 씰	20.618	FASTENER, DRIVE AXLE SPINDLE 패스너

20.631	SEAL, DRIVE AXLE PLANET CARRIER 씰
20.811	PLUG, DRIVE AXLE HOUSING 플러그
20.859	HOUSING, DRIVE AXLE 하우징
22.387	HUB, BRAKE DISC 허브
22.389	PISTON, BRAKE DISC 피스톤
22.390	DISC, BRAKE - INNER 디스크
22.391	DISC, BRAKE - OUTER 디스크
22.394	FASTENER, BRAKE DISC HUB 패스너
22.528	BLEEDER, BRAKE LINES ADAPTOR 블리더
22.558	BLEEDER, BRAKE LINES 블리더
22.642	FITTING, DRIVE AXLE INLET 피팅
22.702	DOWEL PIN, BRAKE DISC PISTON SLEEVE 다웰핀
22.705	SEAL, DRIVE AXLE END HOUSING 씰
22.920	SPRING, BRAKE DISC PISTON PLATE FASTENER 스프링
22.921	SPRING, BRAKE DISC PISTON 스프링
22.969	THRUST WASHER, PLANETARY GEAR ASSEMBLY 스러스트와셔
90.662	DOWEL RING, DRIVE AXLE PLANET FASTENER 다웰링
93.800	FASTENER, BRAKE DISC HOUSING 패스너

ASSEMBLY COMPLETE 20.259

 ■ INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

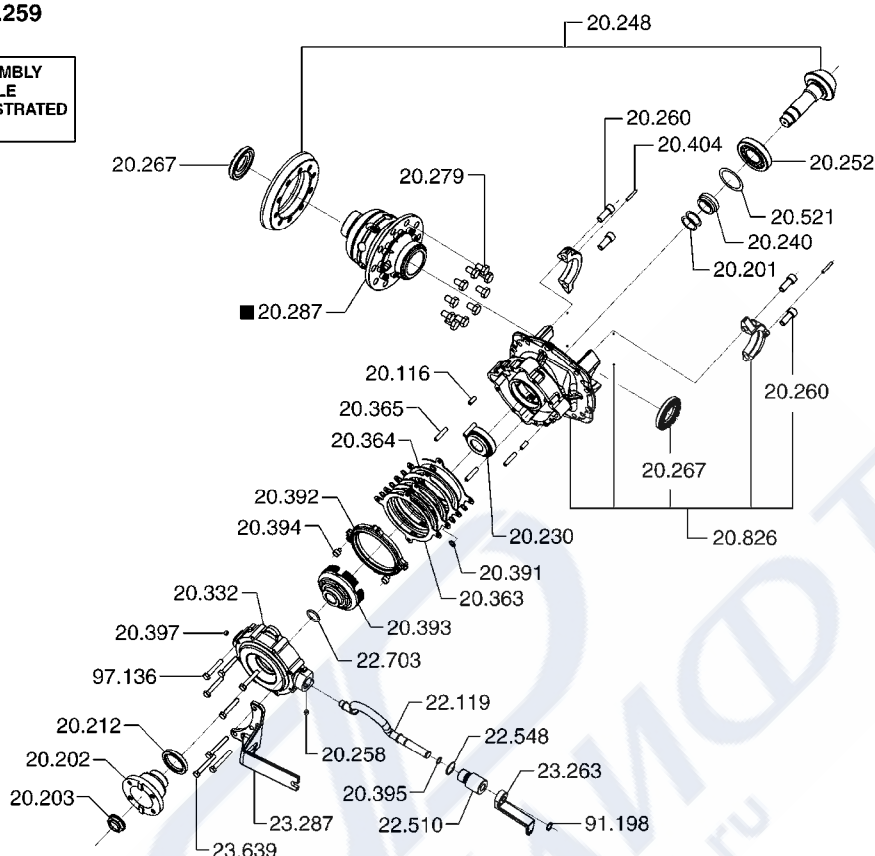


DIFFERENTIAL & CARRIER ASSEMBLY

20-184

20.116	PIN, DRIVE AXLE HOUSING & DIFF ALIGNMENT 핀	20.332	COVER, DRIVE AXLE CARRIER 커버
20.201	SHIM, DIFF BRG CARRIER TO AXLE HOUSING 심	20.363	DISC, PARKING BRAKE 디스크
20.202	FLANGE, DIFFERENTIAL PINION COMPANION 플랜지	20.364	DISC, PARKING BRAKE 디스크
20.203	NUT, DIFFERENTIAL PINION COMPANION FLANGE 너트	20.365	PIN, PARKING BRAKE DISC 핀
20.212	SEAL, DIFFERENTIAL PINION OIL 씰	20.391	SPRING, PARKING BRAKE DISC 스프링
20.230	BEARING ASSEMBLY, DIFF PINION OUTER 베어링	20.392	PISTON, PARKING BRAKE DISC 피스톤
20.240	SPACER, DIFFERENTIAL PINION BEARING 스페이서	20.393	SPLINE, BRAKE DISC 스플라인
20.248	RING GEAR & PINION SET, DIFFERENTIAL 링	20.394	PIN, PARKING BRAKE PISTON 핀
20.252	BEARING, DIFFERENTIAL PINION INNER 베어링	20.395	SEAL, PARKING BRAKE SHAFT 씰
20.258	FASTENER, DIFFERENTIAL BRG CARRIER HSG 패스너	20.397	CAP, DRIVE AXLE CARRIER COVER 캡
20.259	CARRIER & CAP ASSEMBLY, DIFFERENTIAL 캐리어& 캡	20.404	DOWEL PIN, DIFFERENTIAL CARRIER AND CAP ASSEMBLY 다웰핀
20.260	FASTENER, DIFFERENTIAL CARRIER CAP 패스너	20.521	SHIM, DRIVE AXLE SHAFT GEAR 심
20.267	NUT, DIFFERENTIAL BEARING ADJUSTING 너트	20.826	CARRIER, DRIVE AXLE HOUSING 캐리어
20.279	FASTENER, DIFFERENTIAL CASE TO RING GEAR 패스너	22.119	SHAFT, PARKING BRAKE LINKAGE LEVER 샤프트
20.287	CASE & GEAR ASSEMBLY, DIFFERENTIAL 케이스& 기어	22.510	SUPPORT, PARKING BRAKE CABLE BRACKET 서포트

22.548	SEAL, PARKING BRAKE CABLE 씰
22.703	SEAL, BRAKE DISC PISTON 씰
23.263	LEVER, PARKING BRAKE OPERATING 레버
23.287	BRACKET, PARKING BRAKE CABLE 브라켓
23.639	FASTENER, PARKING BRAKE CABLE ANCHOR 패스너
91.198	RETAINER, PARKING BRAKE CABLE END CLEVIS PIN 리테이너
97.136	FASTENER, DRIVE AXLE CARRIER COVER 패스너

 ASSEMBLY
COMPLETE 20.287

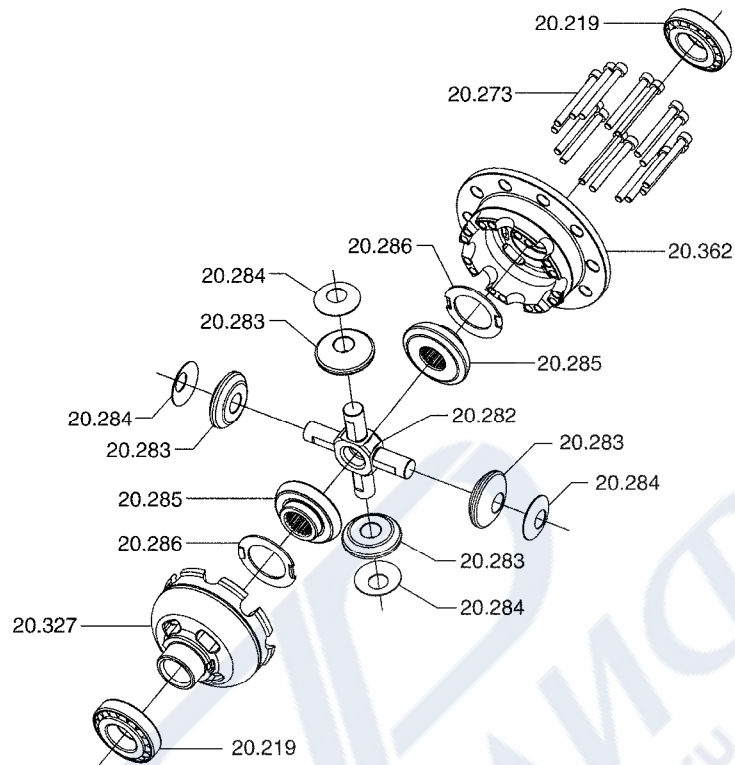

DIFFERENTIAL ASSEMBLY


20-185

20.219	BEARING, DIFFERENTIAL 베어링
20.273	FASTENER, DIFFERENTIAL CASE 패스너
20.282	SPIDER, DIFFERENTIAL PINION 스파이더
20.283	GEAR, DIFFERENTIAL SIDE PINION 기어
20.284	WASHER, DIFF SIDE PINION GEAR THRUST 와셔
20.285	GEAR, DIFFERENTIAL SIDE 기어
20.286	WASHER, DIFFERENTIAL SIDE GEAR THRUST 와셔
20.287	CASE & GEAR ASSEMBLY, DIFFERENTIAL 케이스& 기어
20.327	CASE, DIFFERENTIAL 케이스

20.362


CASE, DIFFERENTIAL
케이스

 ФОРКЛИФТ
www.forklift.ru

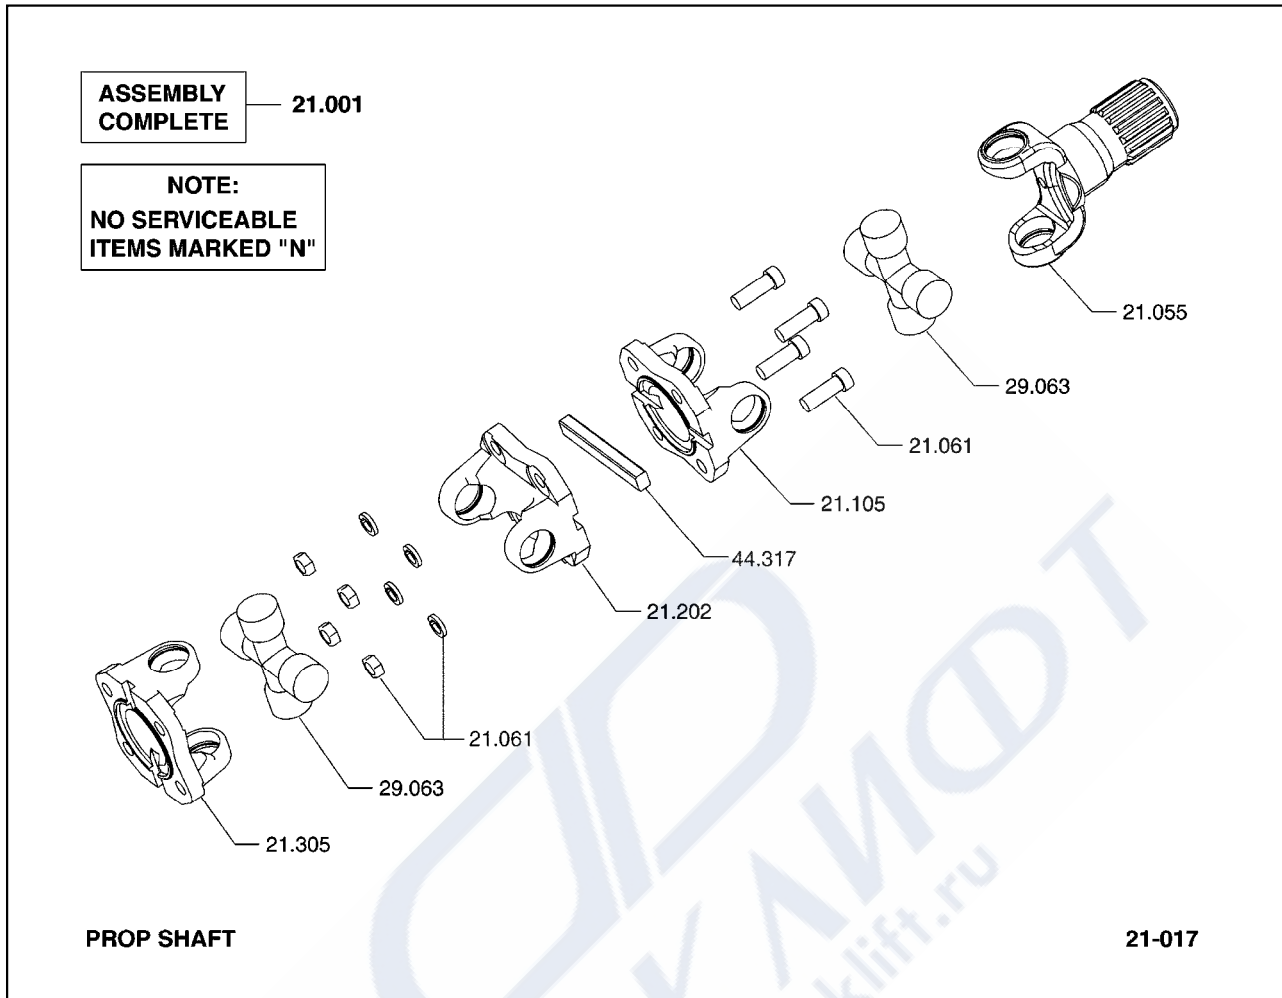

21.001	SHAFT ASSEMBLY, TRANSMISSION TO AXLE PROPELLER 샤프트
21.055	YOKE CAP & WASHER ASSEMBLY, PROP SHAFT SLIP 요크캡 & 와셔
21.061	FASTENER, PROPELLER SHAFT 패스너
21.105	YOKE, PROPELLER SHAFT FLANGED 요크
21.202	YOKE, PROPELLER SHAFT FLANGED 요크
21.305	YOKE, PROPELLER SHAFT FLANGED 요크
29.063	BEARING, WET DISC COOLING PUMP SHAFT 베어링
44.317	KEY, TRANSMISSION OUTPUT SHAFT 키

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

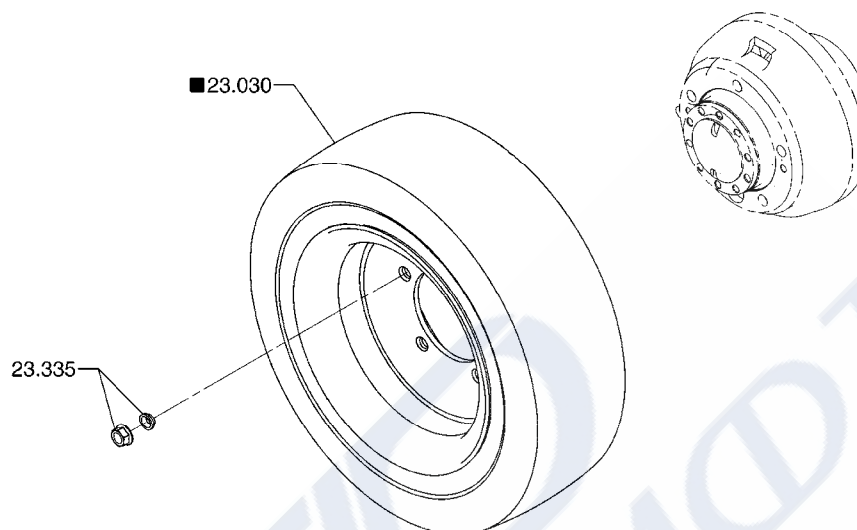


DRIVE WHEEL & TIRE MOUNTING

22-013

- | | |
|--------|--|
| 23.030 | DRIVE WHEEL AND TIRE ASSEMBLY
드라이브휠 & 타이어 |
| 23.335 | FASTENER, DRIVE WHEEL
패스너 |

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

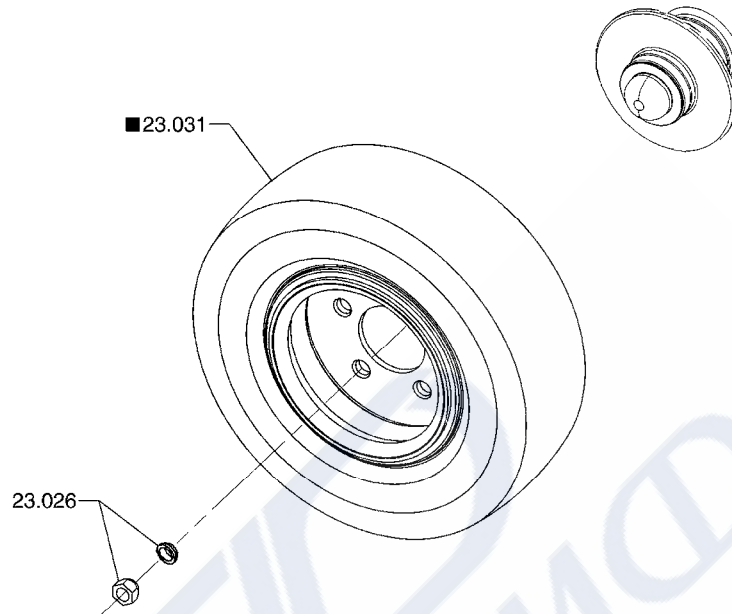


STEER WHEEL & TIRE MOUNTING

22-014

- | | |
|--------|---|
| 23.026 | FASTENER, STEER WHEEL
패스너 |
| 23.031 | STEER WHEEL AND TIRE ASSEMBLY
스티어휠 & 타이어 |

 ASSEMBLY
COMPLETE — 23.030

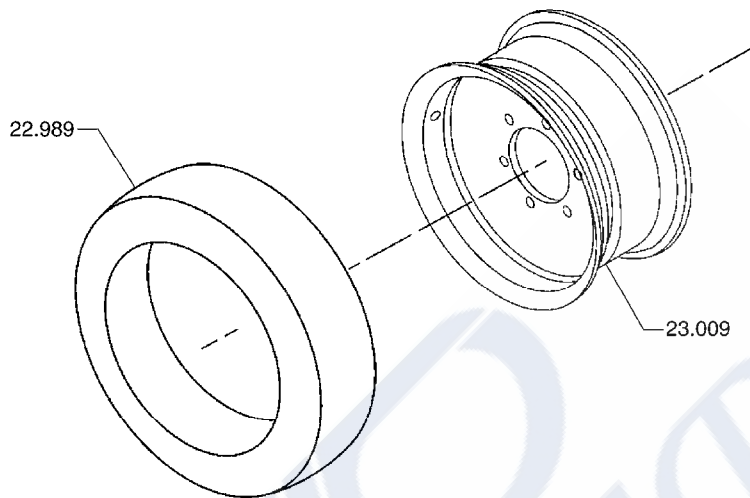


DRIVE WHEEL & TIRE (SOLID TYPE)

22-024

22.989	TIRE ASSEMBLY, DRIVE 타이어
23.009	RIM ASSEMBLY, DRIVE WHEEL 립
23.030	DRIVE WHEEL AND TIRE ASSEMBLY 드라이브휠& 타이어

 ASSEMBLY
COMPLETE — 23.030

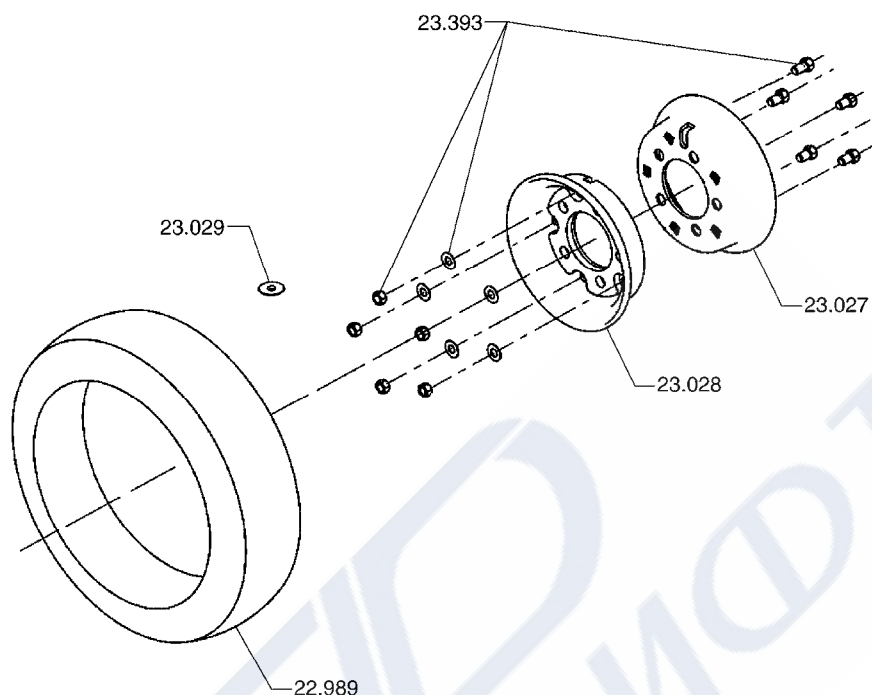


DRIVE WHEEL & TIRE (SOLID TYPE)

22-026

22.989	TIRE ASSEMBLY, DRIVE 타이어
23.027	OUTER HALF, DRIVE WHEEL 아우터하프
23.028	INNER HALF, DRIVE WHEEL 인너하프
23.029	FASTENER, DRIVE WHEEL ASSEMBLY 패스너
23.030	DRIVE WHEEL AND TIRE ASSEMBLY 드라이브휠& 타이어
23.393	FASTENER, DRIVE WHEEL 패스너

 ASSEMBLY
COMPLETE — 23.031

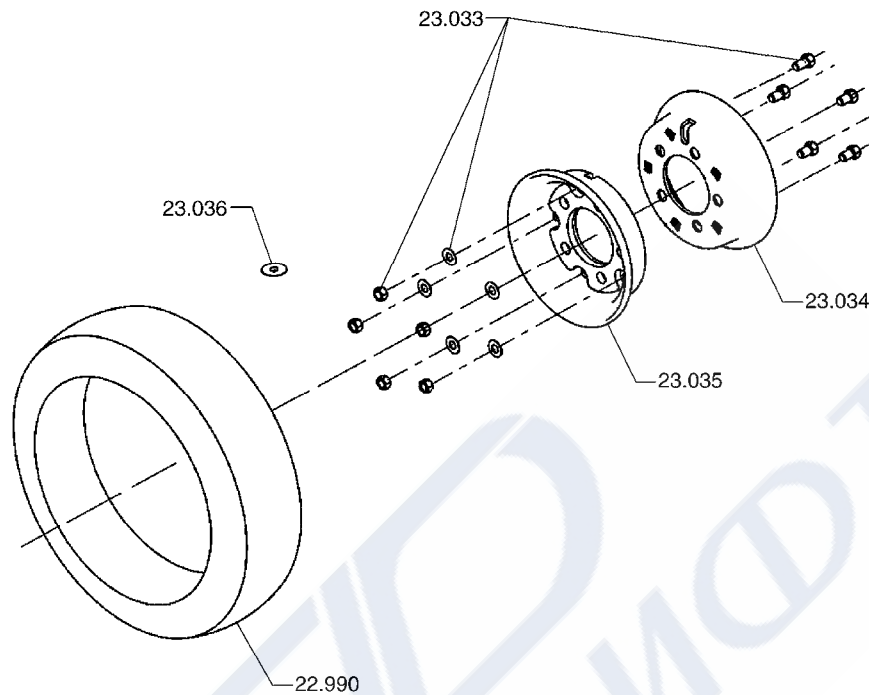


STEER WHEEL & TIRE (SOLID TYPE)

22-027

22.990	TIRE ASSEMBLY, STEER 타이어
23.031	STEER WHEEL AND TIRE ASSEMBLY 스티어휠 & 타이어
23.033	FASTENER, STEER WHEEL 패스너
23.034	OUTER HALF, STEER WHEEL 아웃터하프
23.035	INNER HALF, STEER WHEEL 인너하프
23.036	FASTENER, STEER WHEEL ASSEMBLY 패스너

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

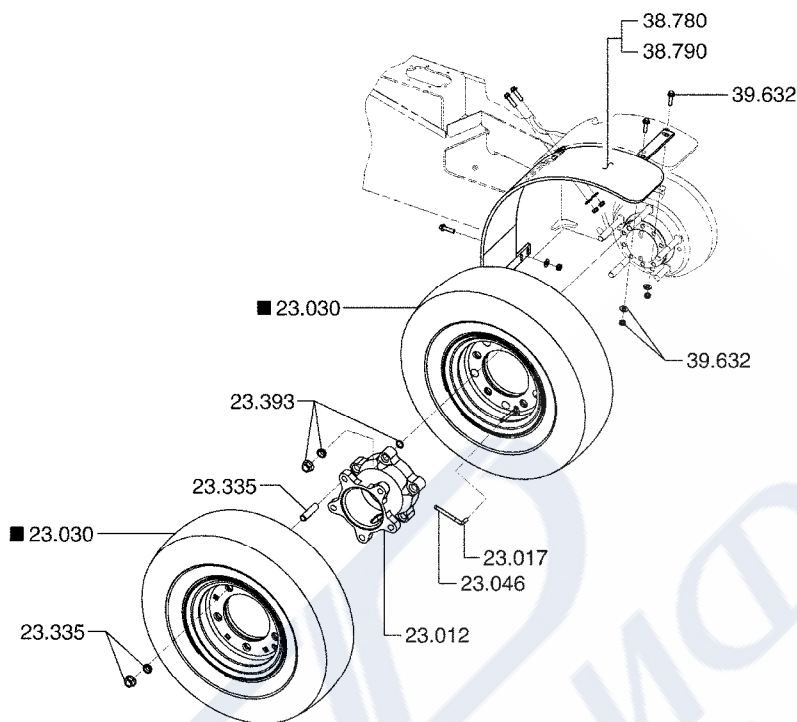


DUAL DRIVE TIRE MOUNTING

22-033

23.012	SPACER, DRIVE WHEEL DUAL RIM 스페이서
23.017	EXTENSION, DRIVE WHEEL VALVE 익스텐션
23.030	DRIVE WHEEL AND TIRE ASSEMBLY 드라이브휠& 타이어
23.046	EXTENSION, DRIVE WHEEL 익스텐션
23.335	FASTENER, DRIVE WHEEL 패스너
23.393	FASTENER, DRIVE WHEEL 패스너
38.780	FENDER, RIGHT HAND FRONT 펜더
38.790	FENDER, LEFT HAND FRONT 펜더
39.632	FASTENER, FENDER SUPPORT 패스너

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

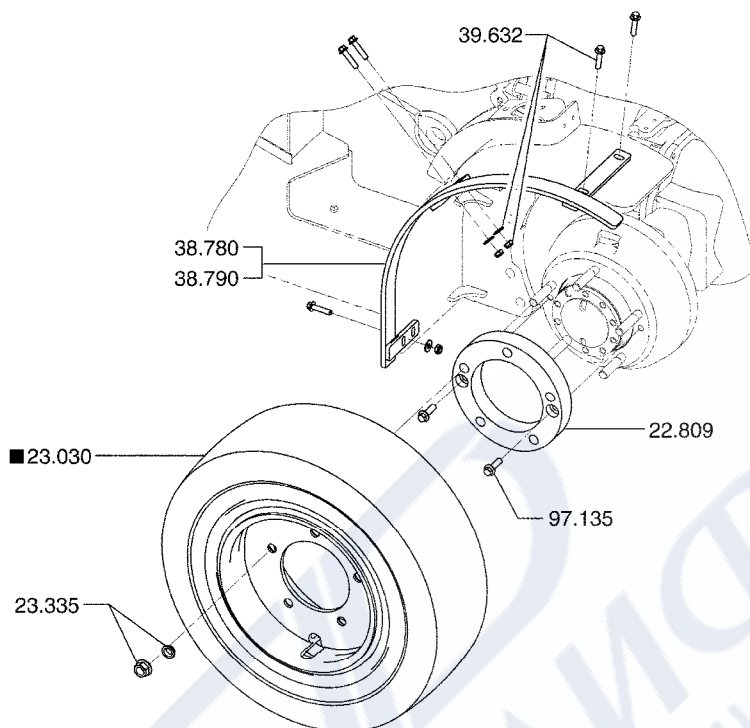


WIDE DRIVE TIRE MOUNTING

22-034

22.809	SPACER, DRIVE WHEEL OFFSET MOUNTING 스페이서
23.030	DRIVE WHEEL AND TIRE ASSEMBLY 드라이브휠& 타이어
23.335	FASTENER, DRIVE WHEEL 패스너
38.780	FENDER, RIGHT HAND FRONT 펜더
38.790	FENDER, LEFT HAND FRONT 펜더
39.632	FASTENER, FENDER SUPPORT 패스너
97.135	FASTENER, DRIVE WHEEL OFFSET SPACER 패스너

 ASSEMBLY
COMPLETE — 23.030

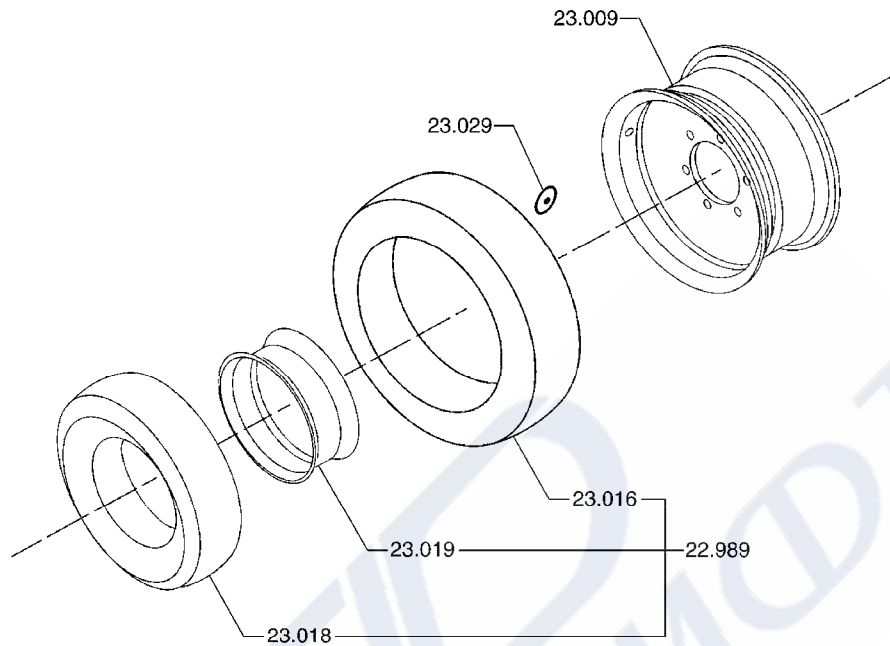


DRIVE WHEEL & TIRE

22-041

22.989	TIRE ASSEMBLY, DRIVE 타이어
23.009	RIM ASSEMBLY, DRIVE WHEEL 립
23.016	TIRE, DRIVE WHEEL 타이어
23.018	TUBE, DRIVE WHEEL 튜브
23.019	FLAP, DRIVE WHEEL TUBE 플랩
23.029	FASTENER, DRIVE WHEEL ASSEMBLY 패스너
23.030	DRIVE WHEEL AND TIRE ASSEMBLY 드라이브휠& 타이어

 ASSEMBLY
COMPLETE — 23.030

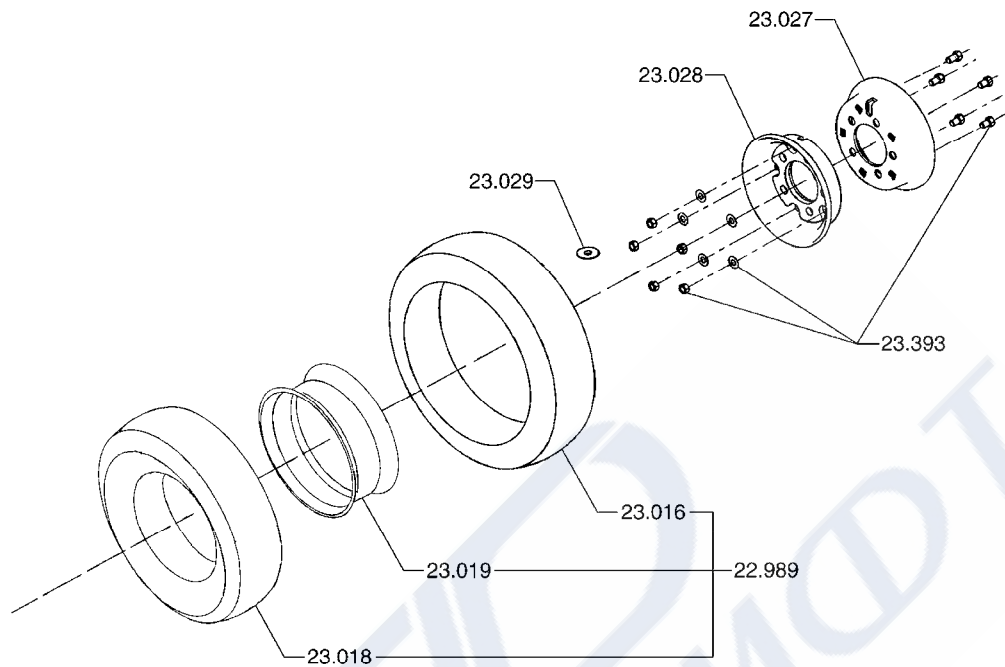


DRIVE WHEEL & TIRE

22-043

22.989	TIRE ASSEMBLY, DRIVE 타이어
23.016	TIRE, DRIVE WHEEL 타이어
23.018	TUBE, DRIVE WHEEL 튜브
23.019	FLAP, DRIVE WHEEL TUBE 플랩
23.027	OUTER HALF, DRIVE WHEEL 아웃터하프
23.028	INNER HALF, DRIVE WHEEL 인너하프
23.029	FASTENER, DRIVE WHEEL ASSEMBLY 패스너
23.030	DRIVE WHEEL AND TIRE ASSEMBLY 드라이브휠& 타이어
23.393	FASTENER, DRIVE WHEEL 패스너

 ASSEMBLY
COMPLETE — 23.031

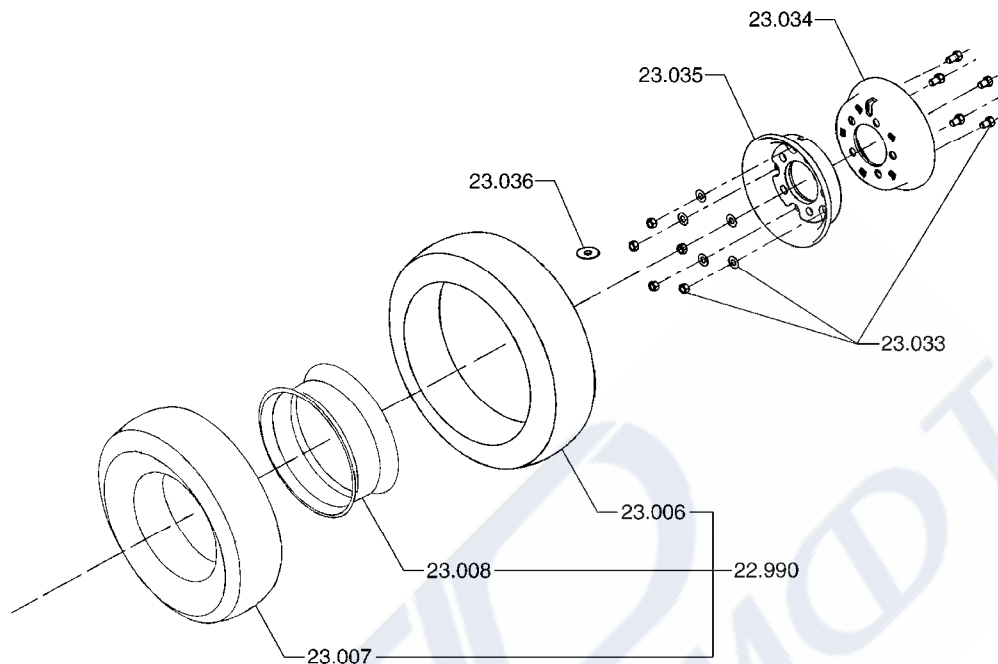


STEER WHEEL & TIRE

22-044

22.990	TIRE ASSEMBLY, STEER 타이어
23.006	TIRE, STEER WHEEL 타이어
23.007	TUBE, STEER WHEEL 튜브
23.008	FLAP, STEER WHEEL 플랩
23.031	STEER WHEEL AND TIRE ASSEMBLY 스티어휠 & 타이어
23.033	FASTENER, STEER WHEEL 패스너
23.034	OUTER HALF, STEER WHEEL 아웃터하프
23.035	INNER HALF, STEER WHEEL 인너하프
23.036	FASTENER, STEER WHEEL ASSEMBLY 패스너

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

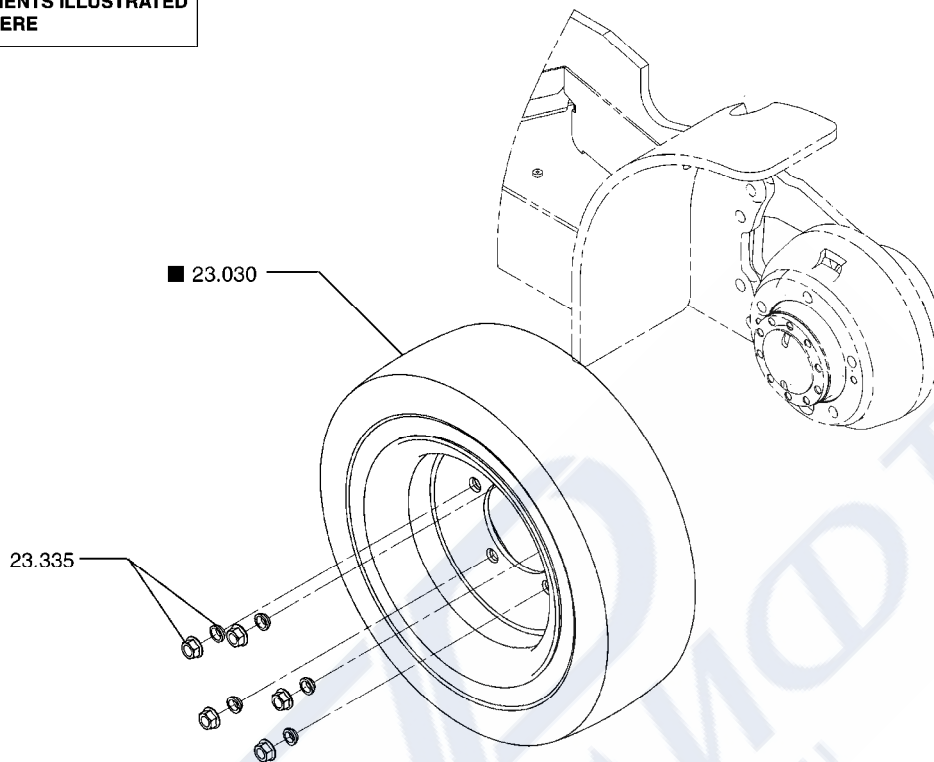


DRIVE WHEEL & TIRE MOUNTING

23-448

- | | |
|--------|--|
| 23.030 | DRIVE WHEEL AND TIRE ASSEMBLY
драйввхл & таир |
| 23.335 | FASTENER, DRIVE WHEEL
паснр |

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

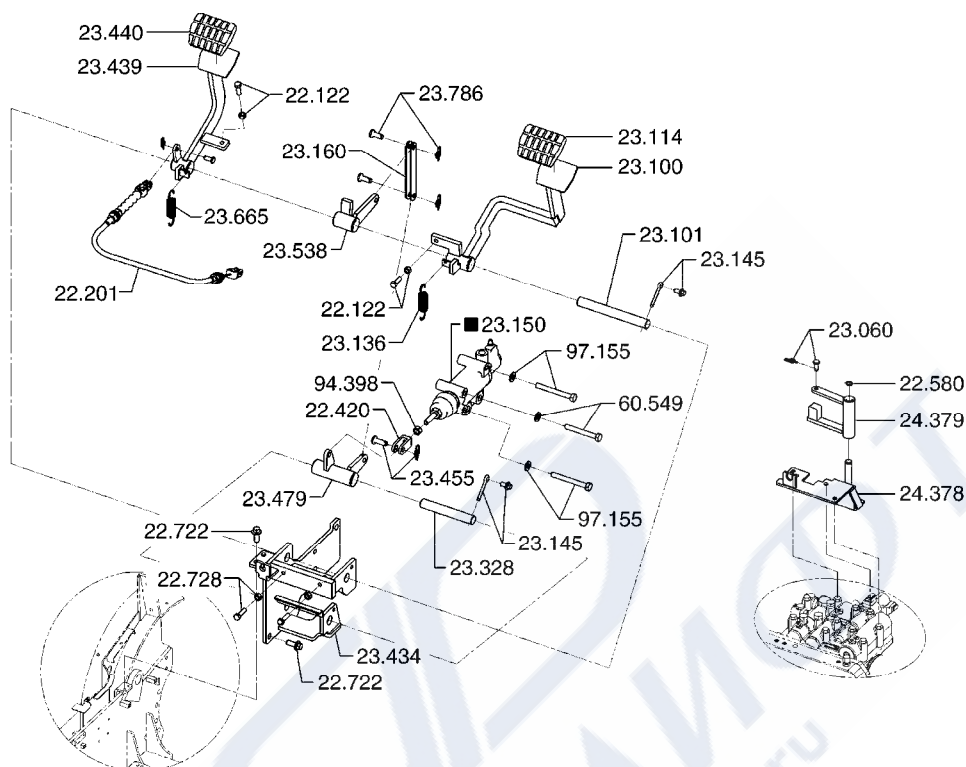


BRAKE & INCHING LINES

23-535

22.122	FASTENER, BRAKE PEDAL PIVOT RETAINER 패스너
22.201	CABLE, INCHING 케이블
22.420	CLEVIS, MASTER CYLINDER PUSH ROD 클레비스
22.580	RETAINER, BRAKE LINKAGE PIVOT ARM CLEVIS PIN 리테이너
22.722	FASTENER, BRAKE MOUNTING PLATE 패스너
22.728	FASTENER, BRAKE MOUNTING PLATE 패스너
23.060	CLEVIS, INCH ACTUATOR ROD 클레비스
23.100	PEDAL, BRAKE 페달
23.101	SHAFT, BRAKE PEDAL 샤프트

23.114	PAD & FASTENER, BRAKE PEDAL 패드& 패스너
23.136	SPRING, BRAKE PEDAL RETURN 스프링
23.145	FASTENER, BRAKE PEDAL SHAFT 패스너
23.150	CYLINDER ASSEMBLY, BRAKE MASTER COMPLETE 실린더
23.160	ROD, PUSH 로드
23.328	SHAFT, BRAKE OPERATING CAM 샤프트
23.434	BRACKET, BRAKE PEDAL PIVOT 브라켓
23.439	PEDAL, INCHING 페달
23.440	PAD & FASTENER, INCHING PEDAL 패드& 패스너
23.455	FASTENER, INCHING LEVER ROD CLEVIS 패스너
23.479	ARM, BRAKE RH 암
23.538	ARM, BRAKE LINKAGE PIVOT 암
23.665	SPRING, INCHING PEDAL RETURN 스프링
23.786	FASTENER, INCHING BRAKE PEDAL 패스너
24.378	BRACKET, INCHING 브라켓
24.379	LINK, INCHING 링크
60.549	FASTENER, BRAKE VALVE 패스너
94.398	NUT, BRAKE MASTER CYLINDER ACTUATING ROD FASTENER 너트
97.155	FASTENER, BRAKE VALVE MOUNTING 패스너

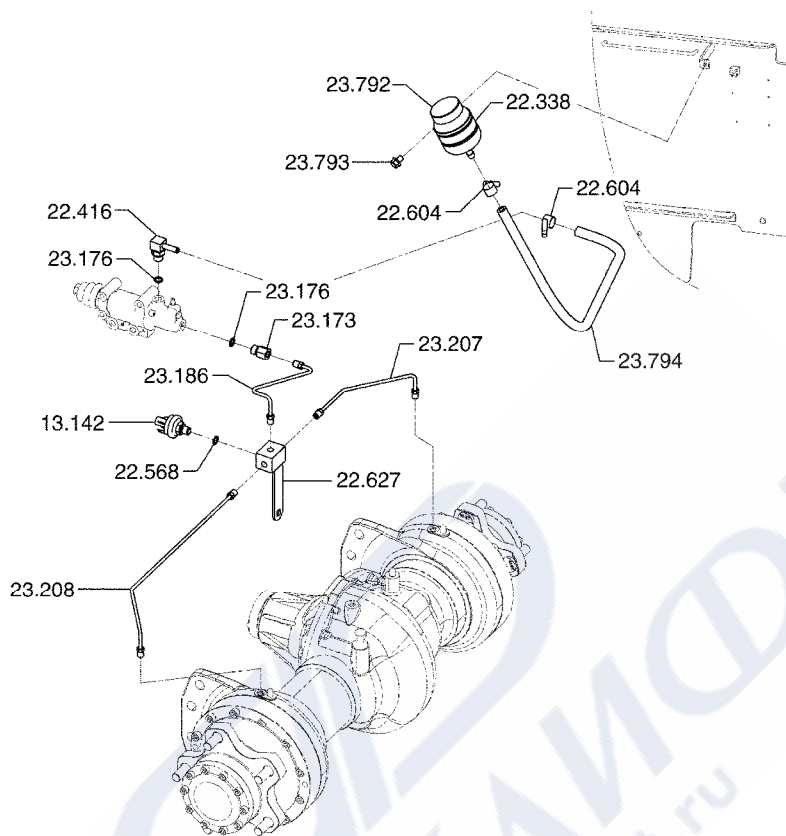 


BRAKE LINES

23-536

13.142	SWITCH, BRAKE INTERLOCK 스위치
22.338	CLAMP, BRAKE FLUID RESERVOIR 클램프
22.416	FITTING, BRAKE MASTER CYLINDER INLET LINE 피팅
22.568	SEAL, BRAKE LINE TEE PLUG 씰
22.604	CLAMP, BRAKE FLUID RESERVOIR LINE 클램프
22.627	TEE, BRAKE LINE 티
23.173	FITTING, BRAKE MASTER CYLINDER OUTLET 피팅
23.176	GASKET, BRAKE MASTER CYLINDER OUTLET FTG BOLT 가스켓
23.186	LINE, BRAKE MASTER CYLINDER OUTLET 라인


23.207	LINE, LH DRIVE WHEEL BRAKE CYLINDER TO TEE 라인
23.208	LINE, RH DRIVE WHEEL BRAKE CYLINDER TO TEE 라인
23.792	RESERVOIR, BRAKE FLUID 리저버
23.793	FASTENER, BRAKE FLUID RESERVOIR 패스너
23.794	LINE, BRAKE MASTER CYLINDER INLET 라인

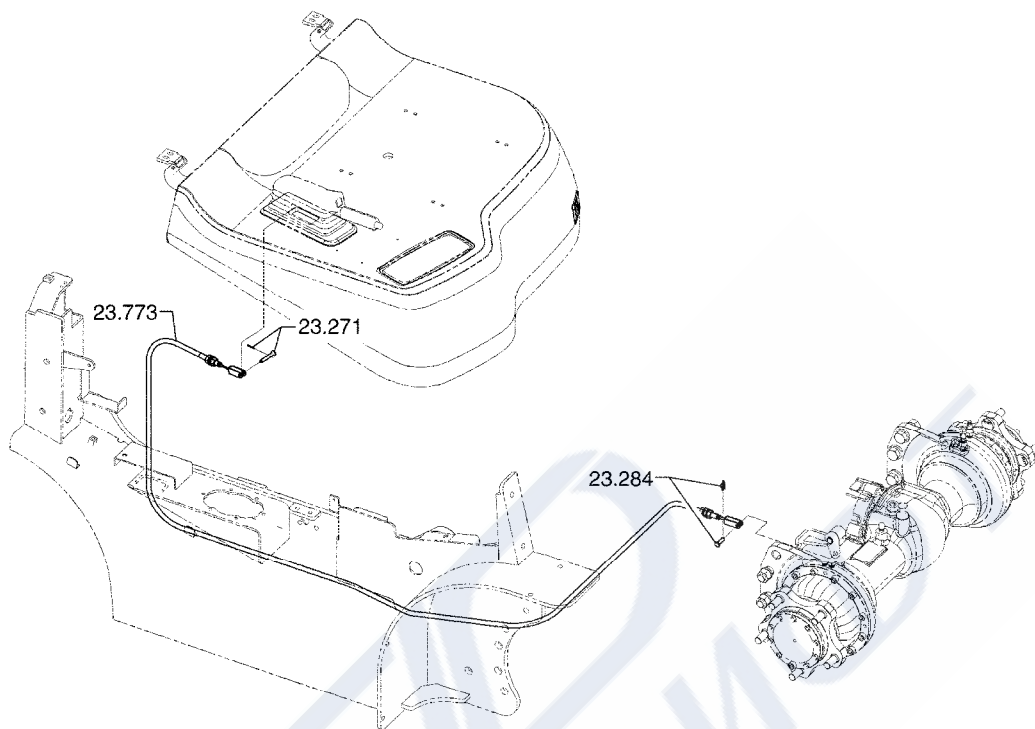 

PARKING BRAKE SYSTEM


23-537

- | | |
|--------|--|
| 23.271 | FASTENER, PARKING BRAKE LEVER
패스너 |
| 23.284 | FASTENER, PARKING BRAKE CABLE BRACKET
패스너 |
| 23.773 | CABLE, PARKING BRAKE WHEEL END
케이블 |

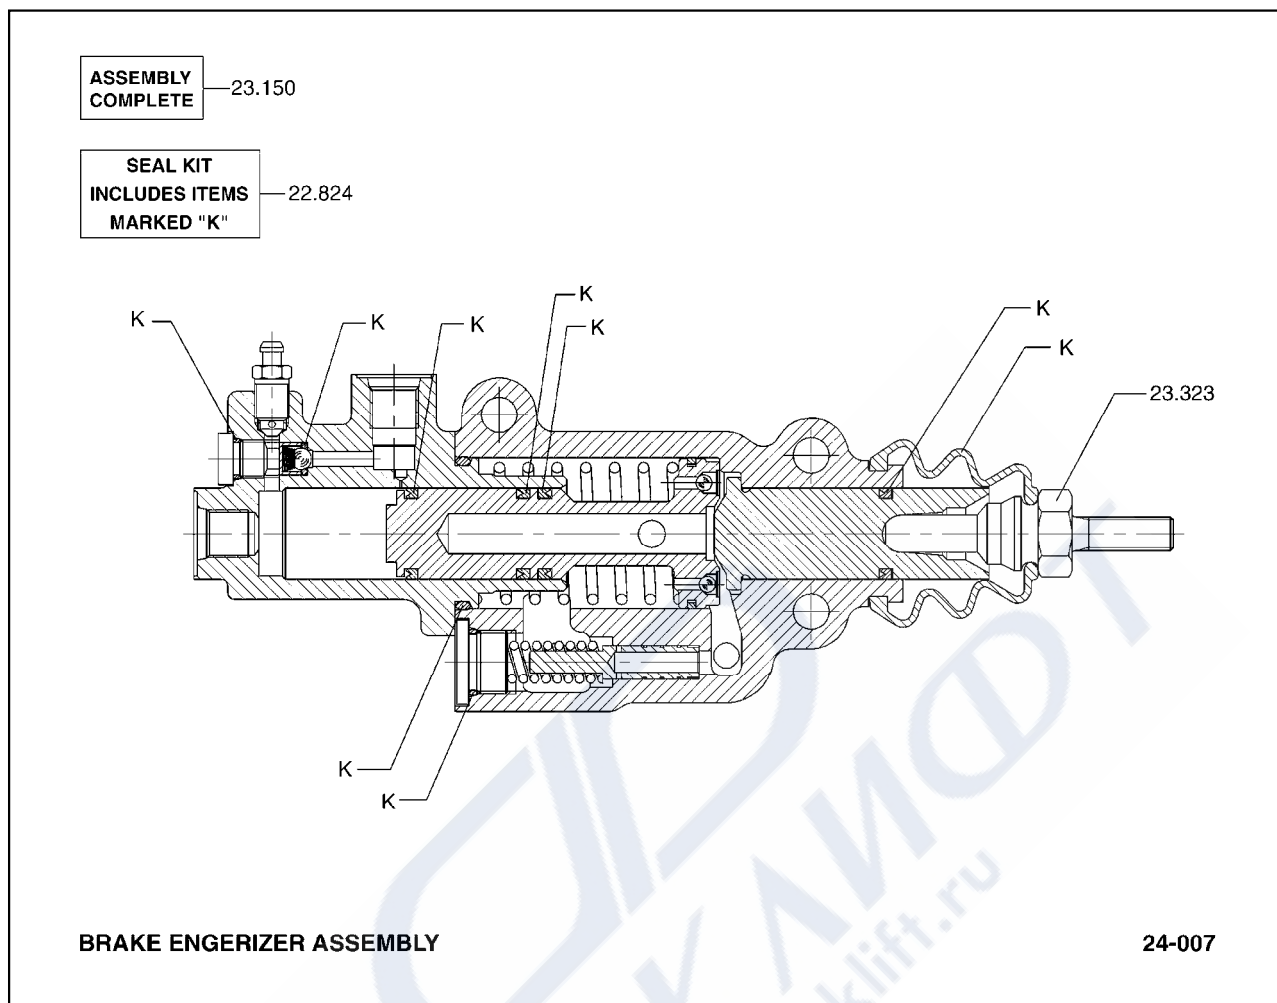 

- | | |
|--------|---|
| 22.824 | SEAL KIT, BRAKE ENERGIZER/MASTER CYL
씰키트 |
| 23.150 | CYLINDER ASSEMBLY, BRAKE MASTER COMPLETE
실린더 |
| 23.323 | ROD, BRAKE ADJUSTING
로드 |

 
■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

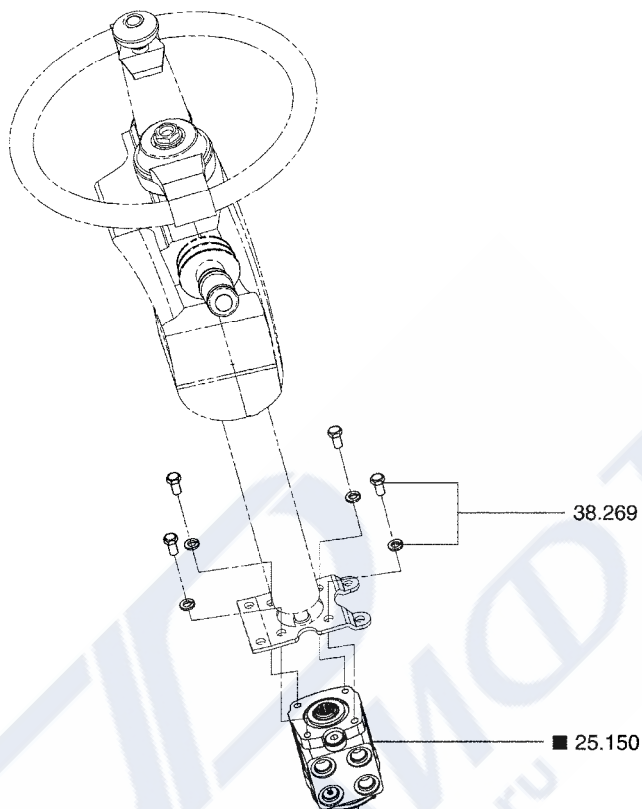

STEERING GEAR MOUNTING


25-072

- | | |
|--------|--|
| 25.150 | GEAR BOX ASSEMBLY, STEERING
기어박스 |
| 38.269 | FASTENER, STEERING COLUMN SUPPORT
패스너 |

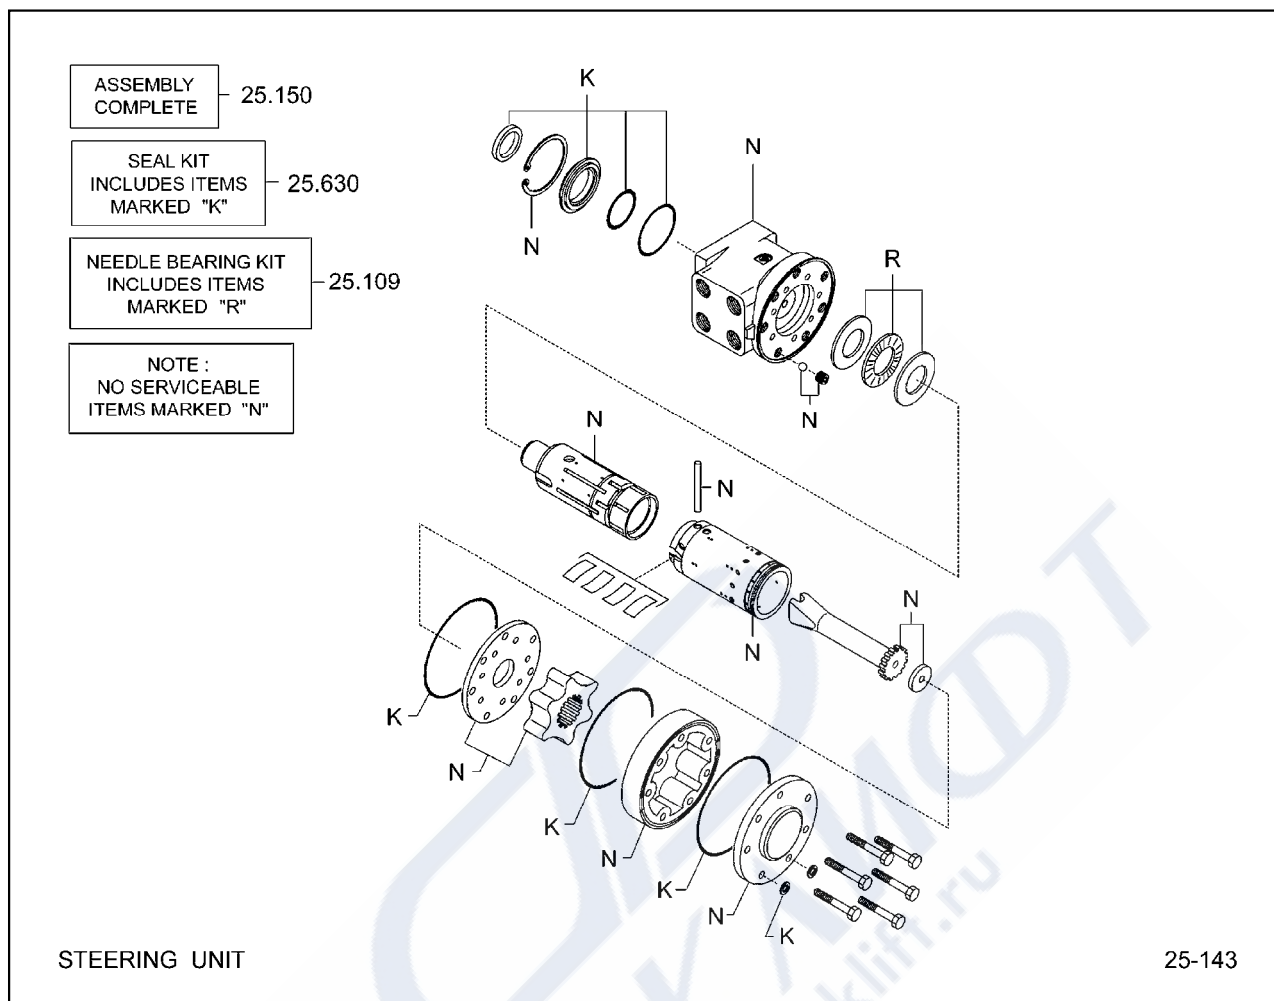 

- | | |
|--------|--------------------------------------|
| 25.109 | KIT, STEER GEAR SEAL
키트 |
| 25.150 | GEAR BOX ASSEMBLY, STEERING
기어박스 |
| 25.630 | REPAIR KIT, STEERING COLUMN
리페어키트 |

 ASSEMBLY
COMPLETE 25.030

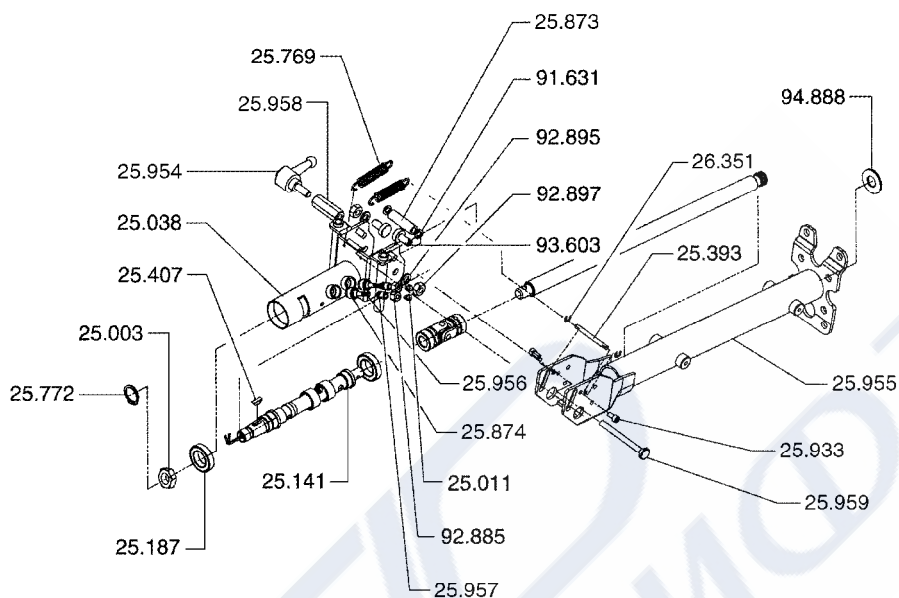


STEERING COLUMN SHAFT ASSEMBLY

25-291

25.003	NUT, HANDWHEEL 너트
25.011	FASTENER, STEERING COLUMN 패스너
25.030	SHAFT ASSEMBLY, STEERING COLUMN 샤프트
25.038	HOUSING ASSEMBLY-CUP & BUSHING, STEERING 하우징
25.141	SHAFT, STEERING GEAR 샤프트
25.187	BEARING, STEER SHAFT 베어링
25.393	PIN, STEERING LINK (STEERING ARM) 핀
25.407	KEY, STEER COLUMN SHAFT COUPLING 키
25.769	SPRING, STEERING COLUMN TILTING (LOWER) 스프링


25.772	RETAINER, STEERING COLUMN SHAFT 리테이너
25.873	BUSHING, STEER COLUMN AXIAL 부싱
25.874	BUSHING, STEER COLUMN TELESCOPING 부싱
25.933	FASTENER, STEERING COLUMN 패스너
25.954	ARM, TILT STEERING COLUMN ADJUSTOR 암
25.955	SUPPORT, STEERING COLUMN SHAFT 서포트
25.956	BRUSH, STEERING COLUMN SHAFT 브러쉬
25.957	BRUSH HOLDER, STEERING COLUMN SHAFT 브러쉬홀더
25.958	PIVOT, TILT STEERING COLUMN ADJUSTOR ARM 피벗
25.959	PIN, TILT STEERING COLUMN ADJUSTOR ARM 핀
26.351	WASHER, STEERING ARM PIN 와셔
91.631	WASHER, STEERING COLUMN UPPER BRACKET FASTENER 와셔
92.885	NUT, STEERING COLUMN UPPER BRACKET FASTENER 너트
92.895	WASHER, STEERING COLUMN SUPPORT FASTENER 와셔
92.897	NUT, STEERING COLUMN SUPPORT FASTENER 너트
93.603	FASTENER, STEERING COLUMN TILTING SPRING BALL STUD 패스너
94.888	RETAINER, STEERING COLUMN ADJUSTOR 리테이너

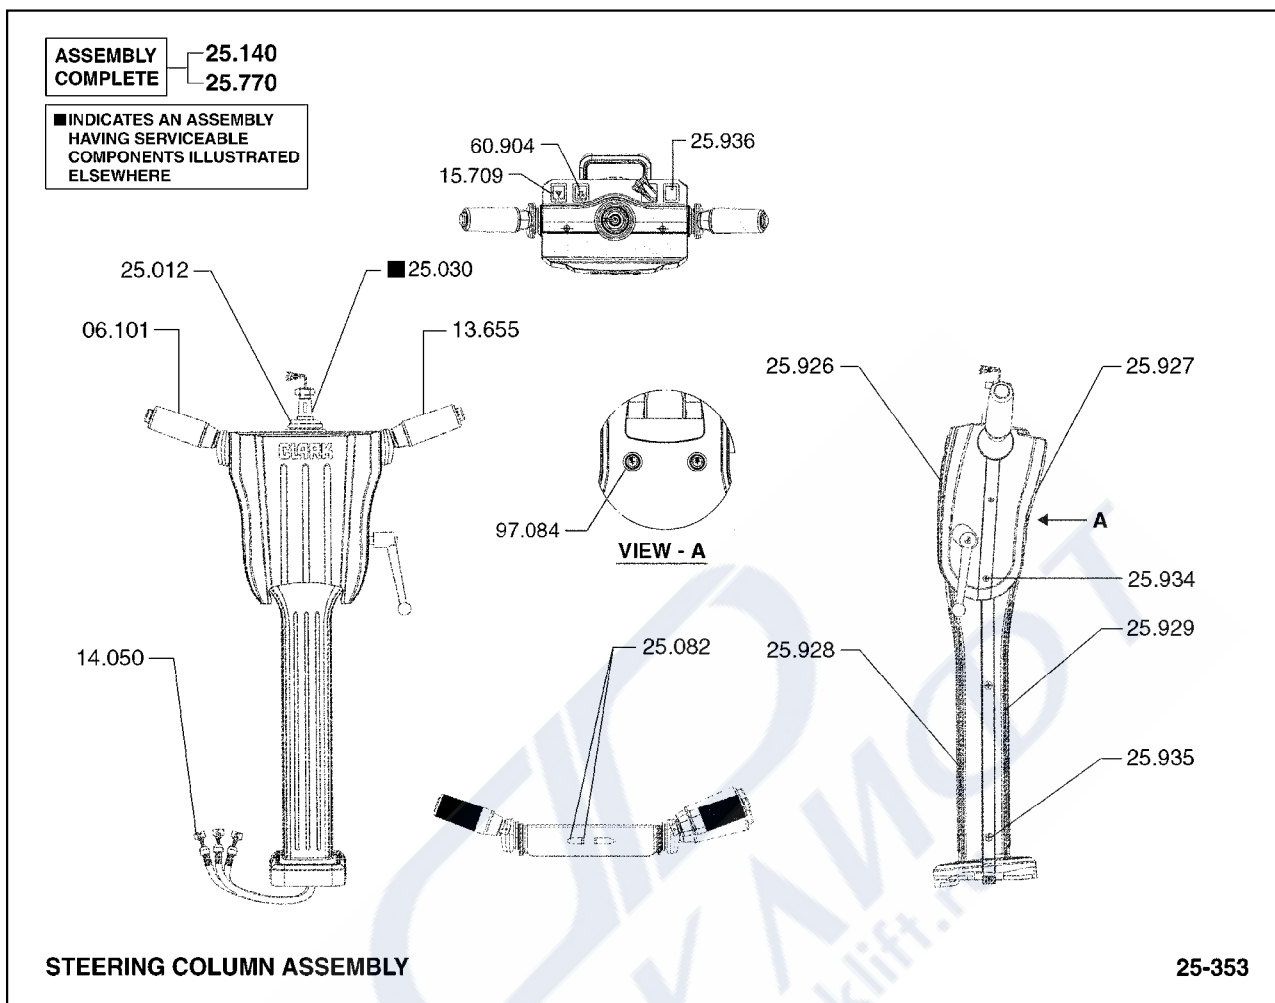 

06.101	LEVER ASSEMBLY, FORWARD & REVERSE 레버
13.655	SWITCH, TURN INDICATOR 스위치
14.050	HARNESS, CONTROL CIRCUIT WIRING 하네스
15.709	SWITCH, EMERGENCY 스위치
25.012	CUSHION, STEERING COLUMN 쿠션
25.030	SHAFT ASSEMBLY, STEERING COLUMN 샤프트
25.082	FASTENER, LEVER MOUNTING BRACKET 패스너
25.770	SHAFT & COLUMN ASSY, POWER STEERING (TILT) 샤프트& 컬럼
25.926	COVER, STEER COLUMN FRONT UPPER 커버

25.927	COVER, STEER COLUMN REAR UPPER 커버
25.928	COVER, STEER COLUMN FRONT LOWER 커버
25.929	COVER, STEER COLUMN REAR LOWER 커버
25.934	FASTENER, STEER COLUMN COVER 패스너
25.935	FASTENER, STEER COLUMN COVER 패스너
25.936	PLUG, STEER COLUMN SWITCH 플러그
60.904	SWITCH, STROBE LIGHT 스위치
97.084	FASTENER, STEER COLUMN COVER 패스너

 
■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

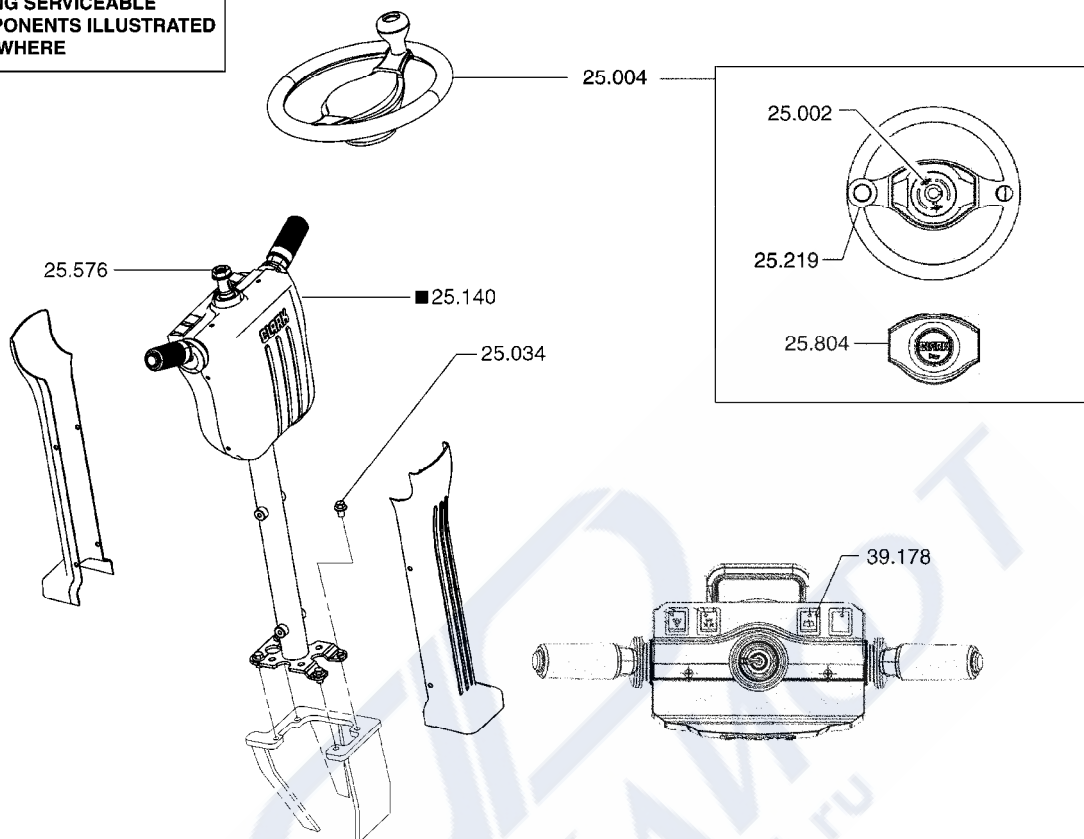

STEERING WHEEL & COLUMN MOUNTING

25-354

25.002	HORN BUTTON KIT 혼버튼키트
25.004	HAND WHEEL, STEERING GEAR 핸드휠
25.219	KNOB, STEERING HAND WHEEL SPINNER 노브
25.576	SPACER, STEERING HAND WHEEL 스페이서
25.770	SHAFT & COLUMN ASSY, POWER STEERING (TILT) 샤프트& 컬럼
25.785	FASTENER, TILT STEERING SHAFT & COLUMN ASSEMBLY 패스너
25.804	COVER, HANDLE CONTROL ASSEMBLY 커버
25.936	PLUG, STEER COLUMN SWITCH 플러그
39.178	SWITCH, WINDSHIELD WIPER 스위치

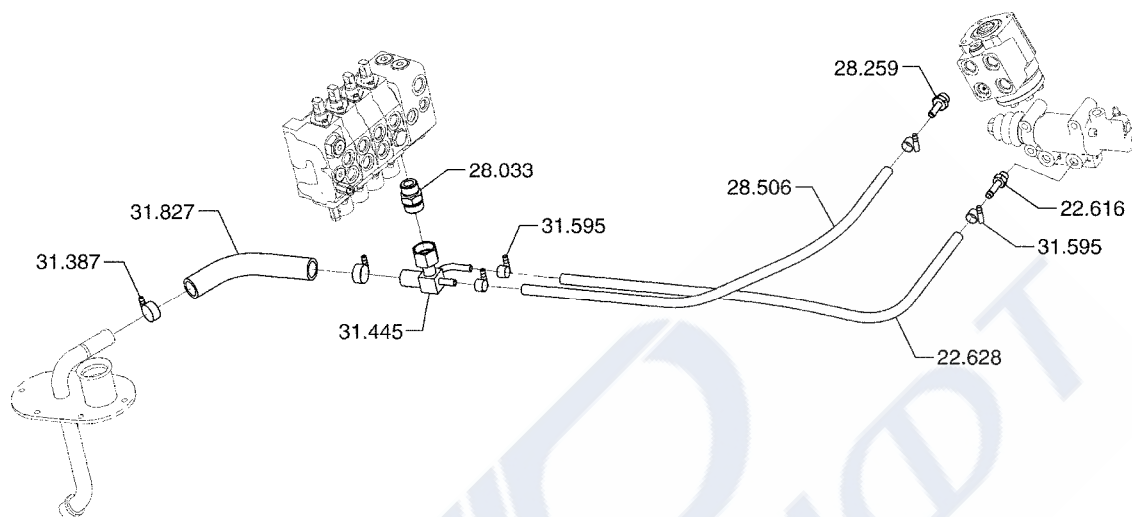 


HYDRAULIC RETURN LINES

26-157

22.616	FITTING, BRAKE ENERGIZER SUMP RETURN LINE 피팅
22.628	LINE, BRAKE LINE RETURN TO SUMP 라인
28.033	FITTING, SUMP RETURN 피팅
28.259	FITTING, SUMP RETURN LINE 피팅
28.506	LINE, SUMP RETURN 라인
31.387	CLAMP, MAIN VALVE TO SUMP LINE 클램프
31.445	FITTING, MAIN VALVE TO FILTER LINE 피팅
31.595	CLAMP, SUMP RETURN LINE FITTING 클램프
31.827	LINE, FILTER INLET 라인

 
■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

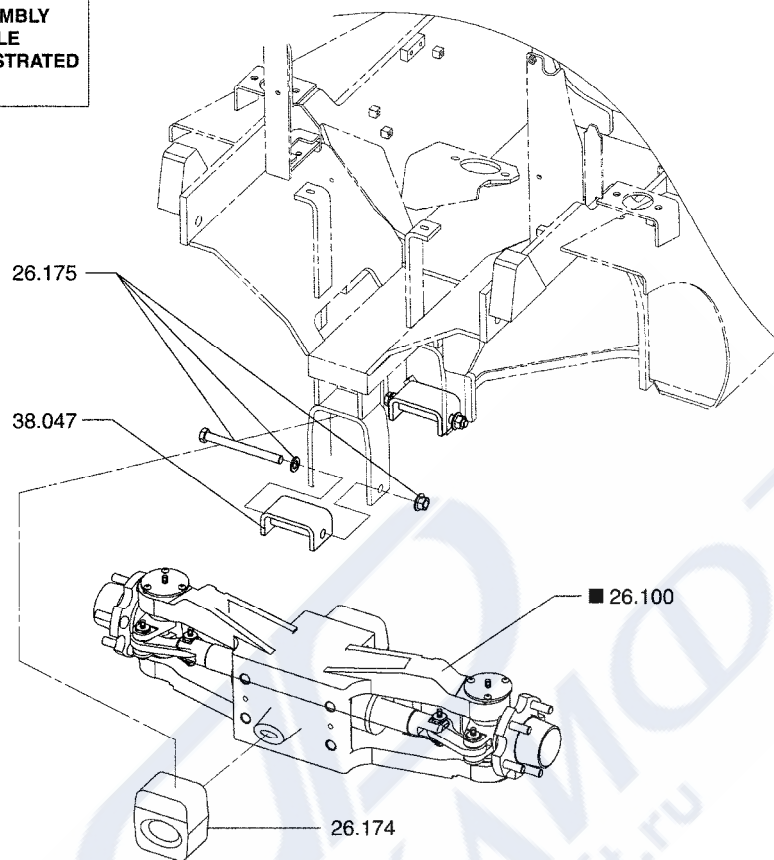


STEER AXLE MOUNTING

26-273

- | | |
|--------|---|
| 26.100 | AXLE ASSEMBLY, STEERING
스티어액슬 |
| 26.174 | SILENT BLOCK, AXLE MOUNTING (REAR)
사일런트블록 |
| 26.175 | FASTENER, SILENT BLOCK TO FRAME (REAR)
패스너 |
| 38.047 | BRACKET, STEER AXLE MOUNTING
브라켓 |

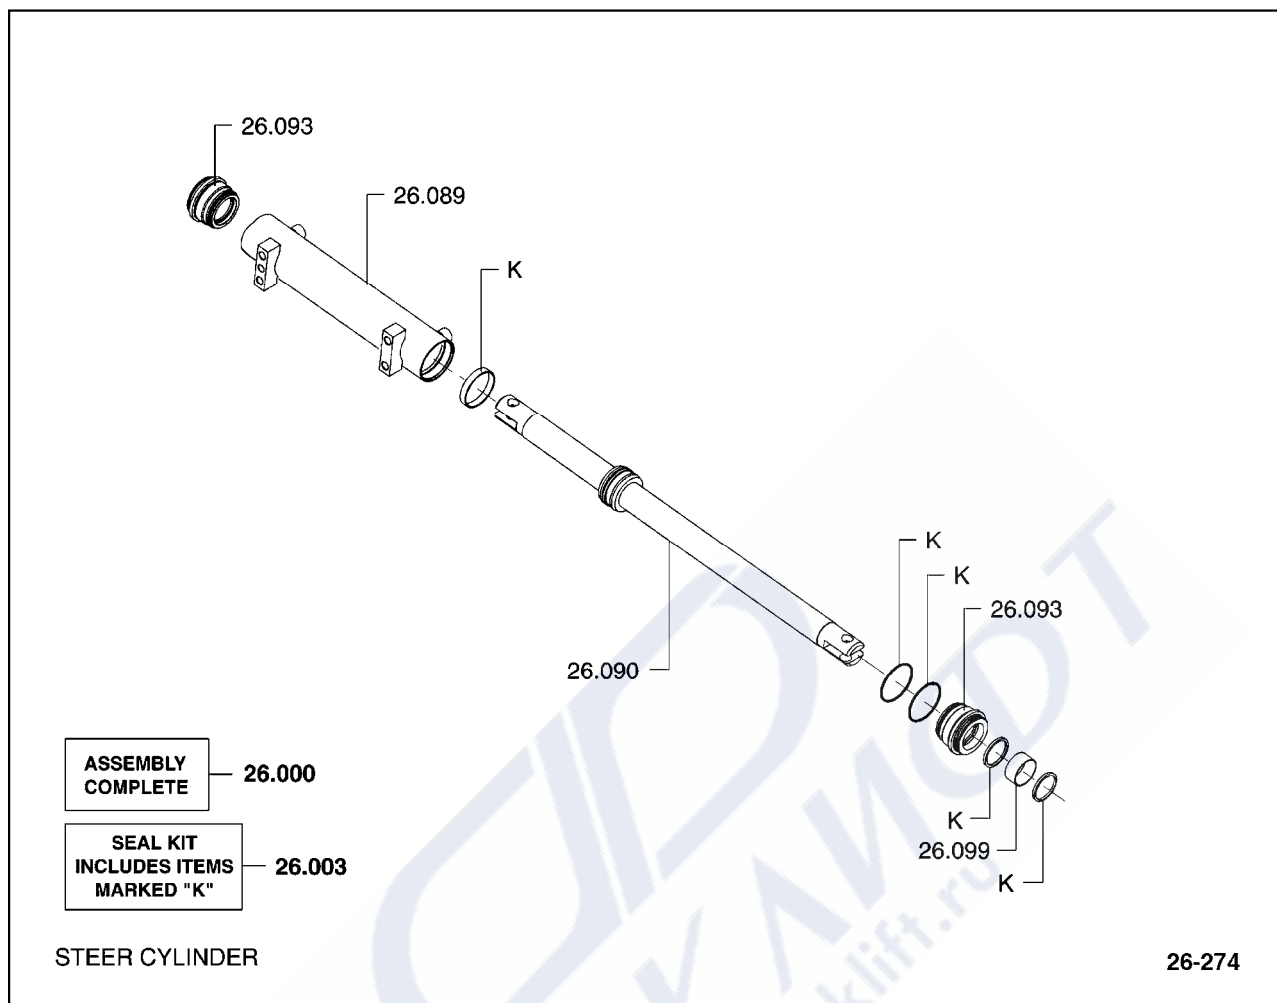 


26.000	CYLINDER ASSEMBLY, STEERING 실린더
26.003	SEAL KIT, PISTON ROD 씰키트
26.089	BARREL, STEERING CYLINDER 배럴
26.090	STEER CYLINDER PISTON 스티어실린더피스톤
26.093	GLAND, STEERING CYLINDER 그랜드
26.099	BUSHING, STEERING CYLINDER GLAND 부싱

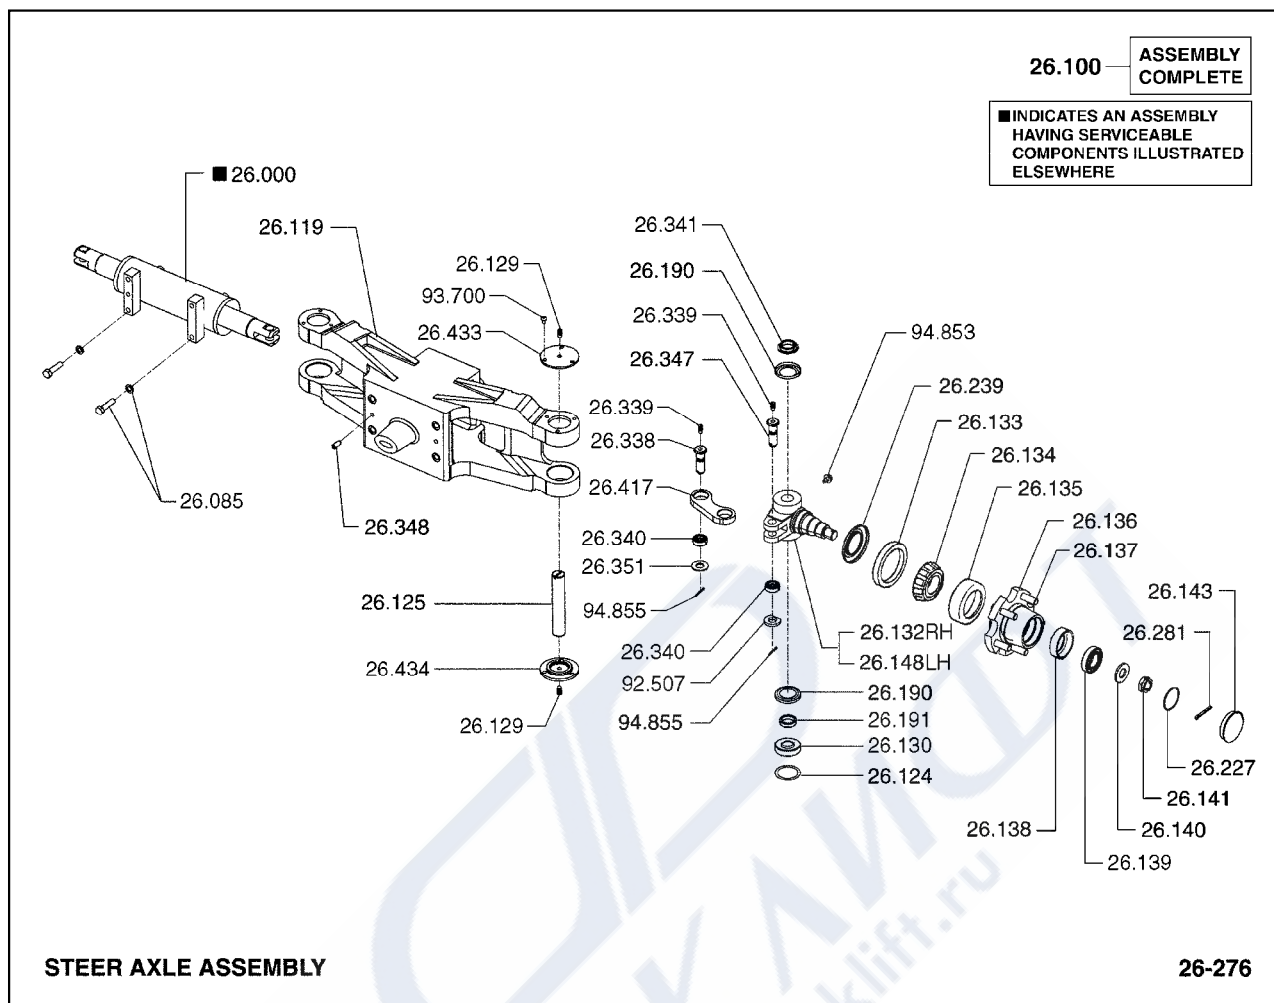 

26.000	CYLINDER ASSEMBLY, STEERING 실린더	26.139	CONE, STEER WHEEL HUB BEARING (OUTER) 콘
26.085	FASTENER, STEERING CYLINDER MOUNTING BRKT 패스너	26.140	WASHER, STEER WHEEL HUB BEARING THRUST 와셔
26.100	AXLE ASSEMBLY, STEERING 스티어액슬	26.141	FASTENER, STEER WHEEL HUB 패스너
26.119	AXLE, STEER 액슬	26.143	CAP, STEER WHEEL HUB 캡
26.124	SHIM, STEER AXLE KNUCKLE 심	26.148	KNUCKLE, STEER AXLE (LH) 너트
26.125	PIN, STEER AXLE KNUCKLE 핀	26.190	SEAL, STEER AXLE KNUCKLE OIL 씰
26.129	FITTING - LUB, STEER AXLE KNUCKLE 피팅	26.191	PLUG - EXPANSION, STEER AXLE KNUCKLE PIN 플러그
26.130	BEARING, STEER AXLE KNUCKLE PIN 베어링	26.227	SEAL, STEER AXLE FORK HOUSING 씰
26.132	KNUCKLE, STEER AXLE (RH) 너트	26.239	SEAL, STEER AXLE FORK COVER 씰
26.133	SEAL, STEER WHEEL HUB 씰	26.281	RETAINER, STEER AXLE HUB BRG KNUCKLE NUT 리테이너
26.134	CONE, STEER WHEEL HUB BEARING (INNER) 콘	26.338	PIN, STEERING ARM 핀
26.135	CUP, STEER WHEEL HUB BEARING (INNER) 컵	26.339	LUB-FITTING, STEERING ARM 윤활피팅
26.136	HUB & CUP, STEER WHEEL 허브&컵	26.340	BEARING, STEERING ARM PIN 베어링
26.137	FASTENER, STEER WHEEL 패스너	26.341	SPACER, STEER AXLE PIVOT BUSHING 스페이서
26.138	CUP, STEER WHEEL HUB BEARING (OUTER) 컵	26.347	PIN, STEER ARM 핀

26.348	LOCATOR, STEER CYLINDER 로케이터
26.351	WASHER, STEERING ARM PIN 와셔
26.417	ARM, STEERING 암
26.433	COVER, STEER AXLE KNUCKLE PIVOT (TOP) 커버
26.434	COVER, STEER AXLE KNUCKLE PIVOT (BOTTOM) 커버
92.507	WASHER, STEERING ARM FASTENER 와셔
93.700	FASTENER, STEER AXLE KNUCKLE PIN COVER 패스너
94.853	FASTENER, STEER AXLE KNUCKLE PIN 패스너
94.855	RETAINER, STEERING ARM PIN 리테이너

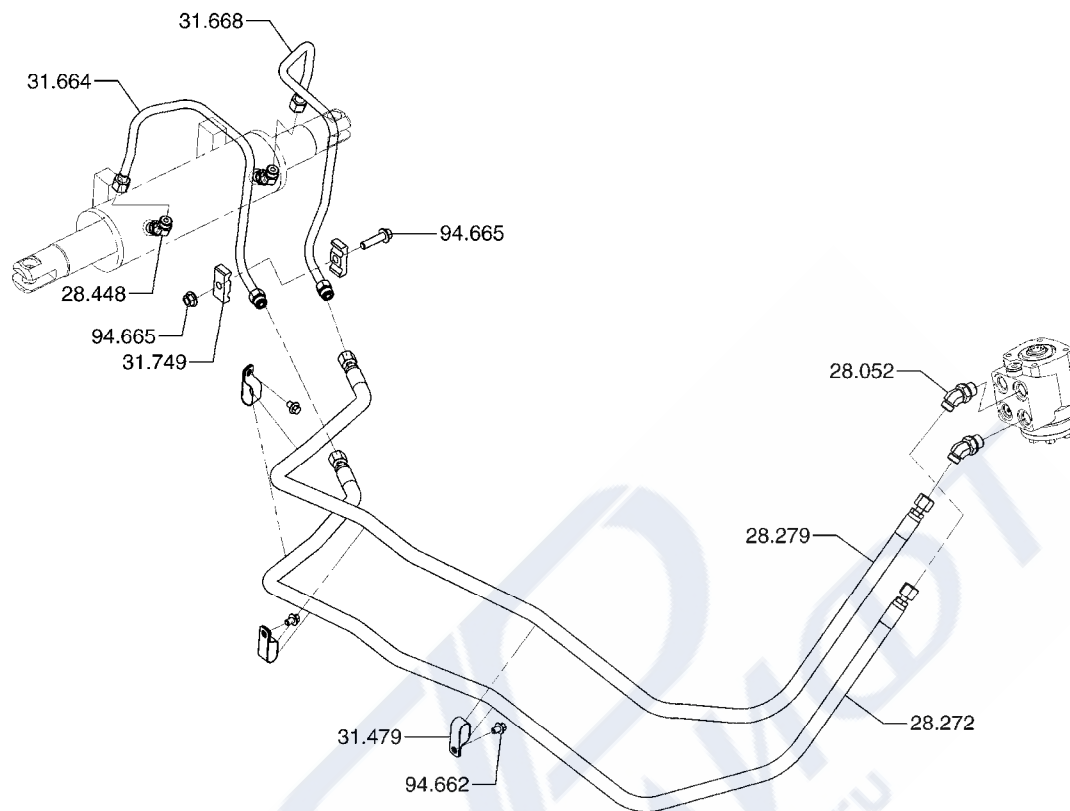 


STEERING LINES

26-277

28.052	FITTING, STEERING GEAR 피팅
28.272	LINE, STEER CYLINDER INLET 라인
28.279	LINE, STEER CYLINDER INLET 라인
28.448	FITTING, STEER CYLINDER LINE 피팅
31.479	CLAMP, STEERING LINES 클램프
31.664	LINE, STEERING CYLINDER ANCHOR PORT 라인
31.668	LINE, STEERING CYLINDER ROD PORT 라인
31.749	CLAMP, POWER STEERING LINES 클램프
94.662	FASTENER, POWER STEERING LINES CLAMP 패스너

 94.665 FASTENER, POWER STEERING LINES CLAMP
패스너



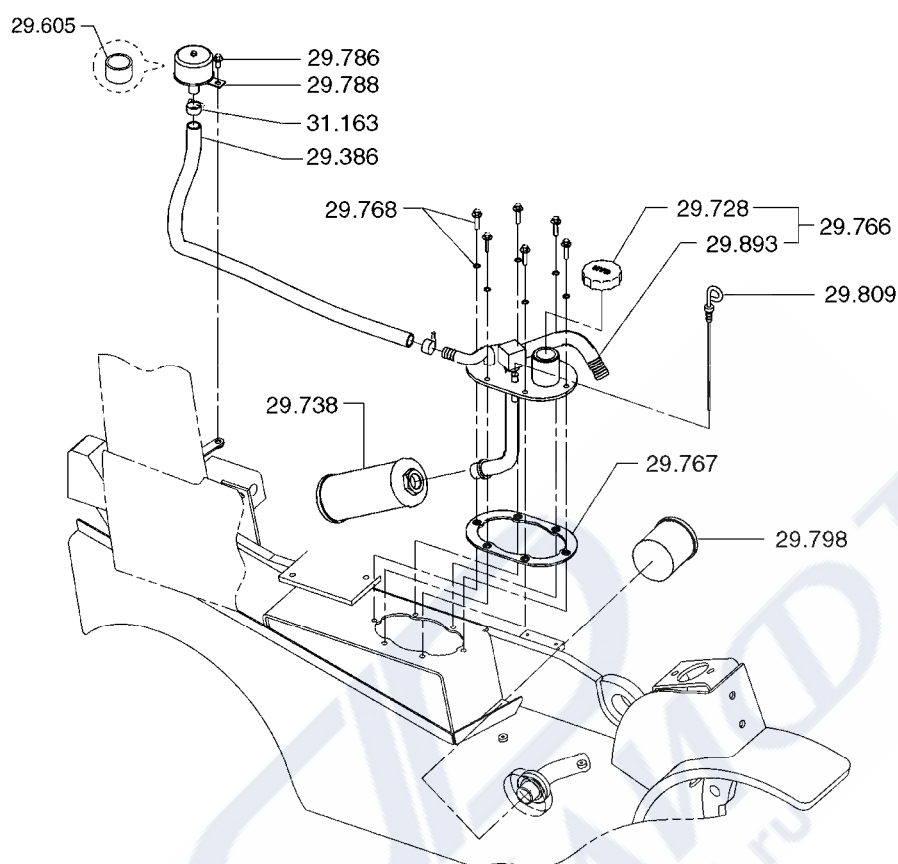


HYDRAULIC TANK & COMPONENTS MOUNTING

29-237


29.386	LINE, SUMP BREATHER 라인
29.605	FILTER, AIR BREATHER 필터
29.728	CAP, HYDRAULIC SUMP FILLER 캡
29.738	FILTER ASSEMBLY, HYDRAULIC SUMP 필터
29.766	COVER, SUMP TANK 커버
29.767	SEAL, SUMP TANK COVER 셀
29.768	FASTENER, SUMP TANK COVER 패스너
29.786	FASTENER, SUMP BREATHER 패스너
29.788	BREATHER, SUMP 브리더

29.798	SCREEN, HYDRAULIC SUMP PRE FILTER 스크린
29.809	DIPSTICK, SUMP LEVEL 딤스틱
29.893	PLATE, HYDRAULIC SUMP 플레이트
31.163	CLAMP, SUMP RETURN LINE 클램프




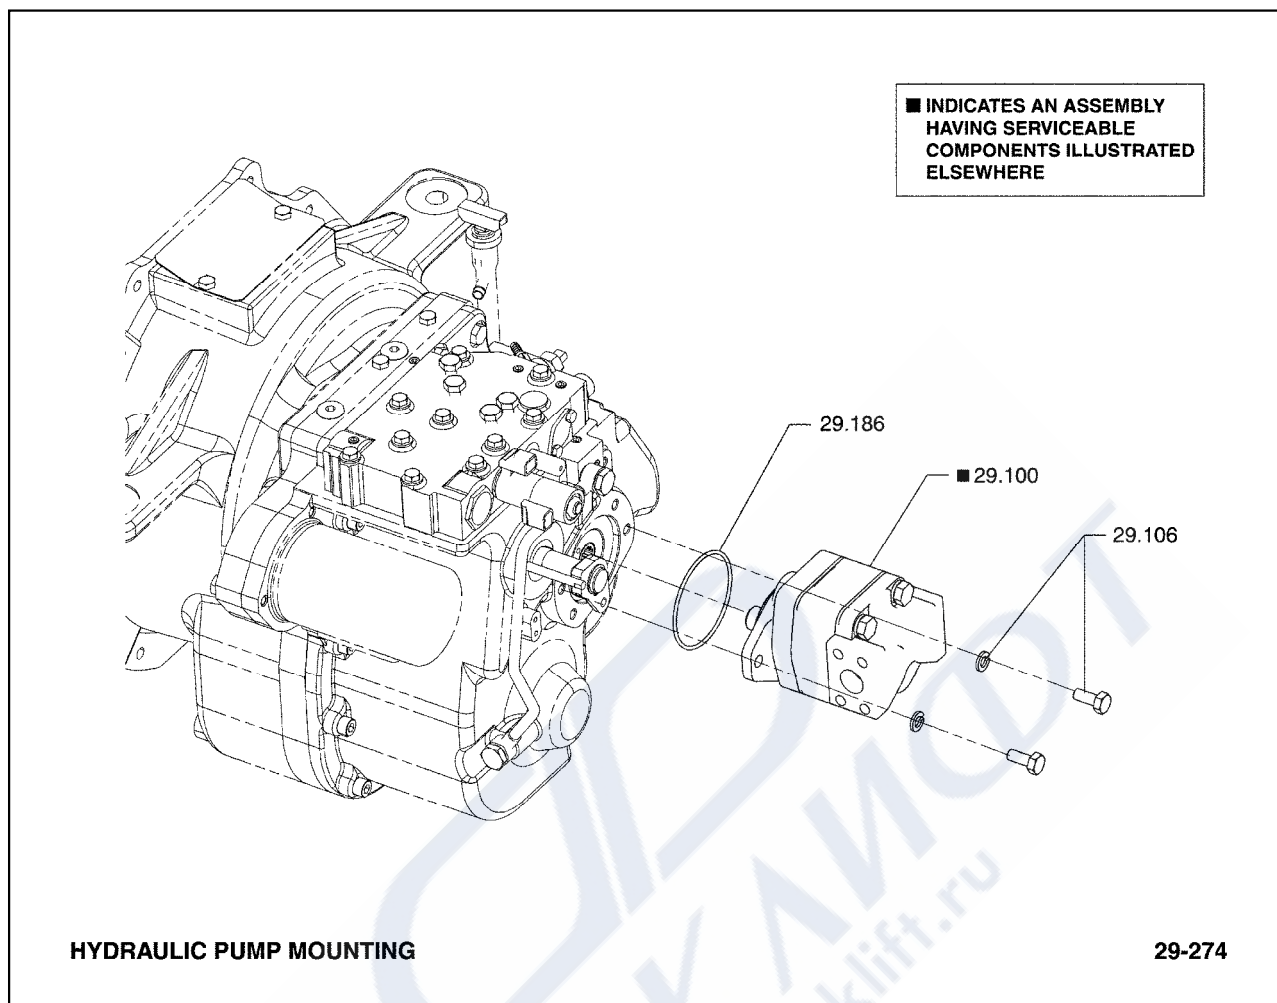 

- | | |
|--------|--------------------------------|
| 29.100 | PUMP ASSEMBLY, HYDRAULIC
펌프 |
| 29.106 | FASTENER, PUMP TO PLATE
패스너 |
| 29.186 | SEAL, PUMP SHAFT
씰 |

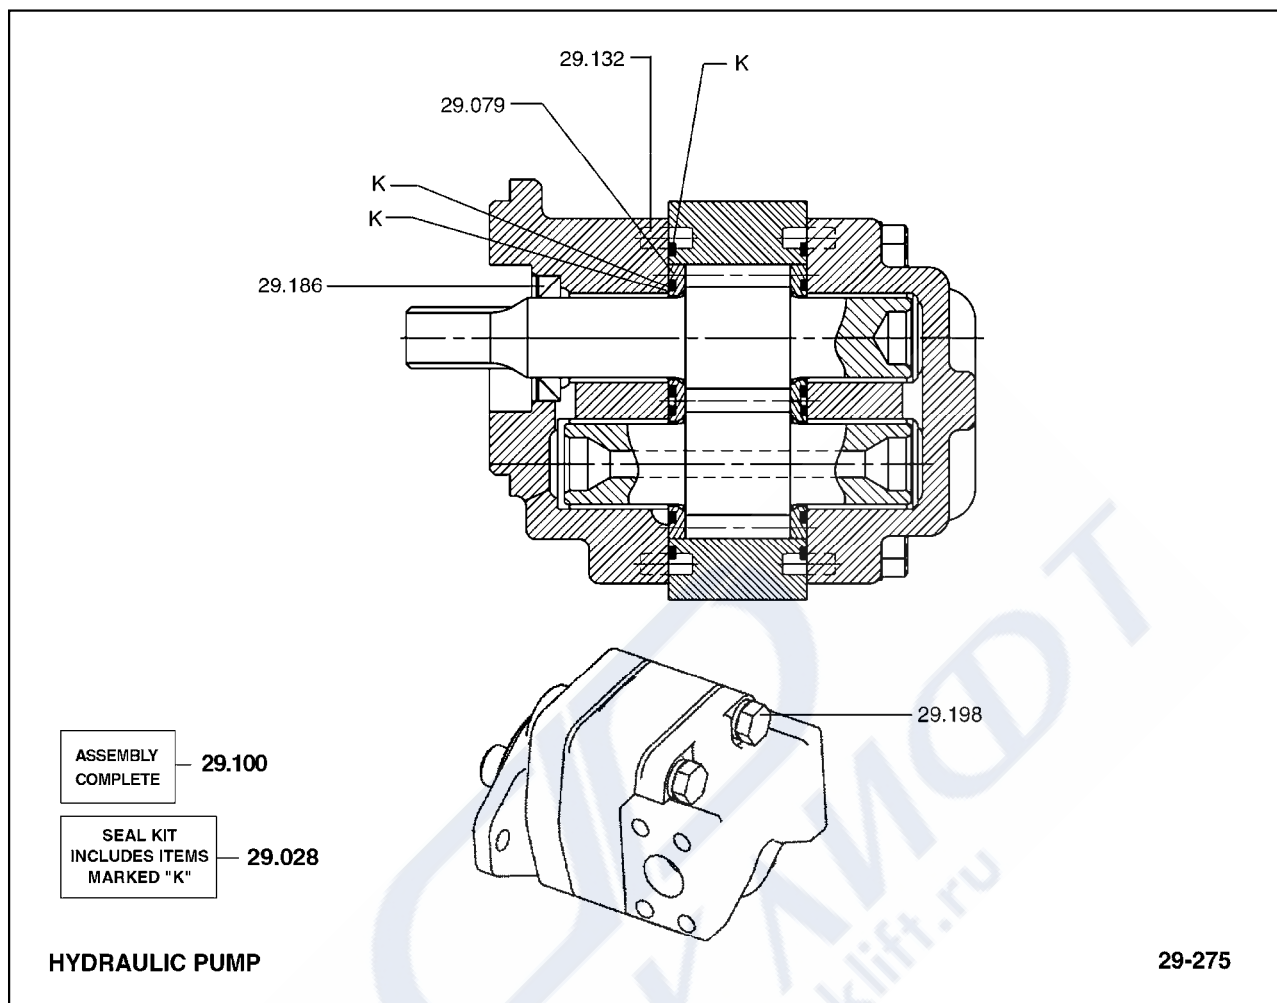 



29.028	SEAL KIT, HYDRAULIC UNIT PUMP 씰키트
29.079	PLATE, HYDRAULIC PUMP GEAR THRUST 플레이트
29.100	PUMP ASSEMBLY, HYDRAULIC 펌프
29.132	PIN, PUMP RING LOCATING 핀
29.186	SEAL, PUMP SHAFT 씰
29.198	FASTENER, PUMP HOUSING 패스너

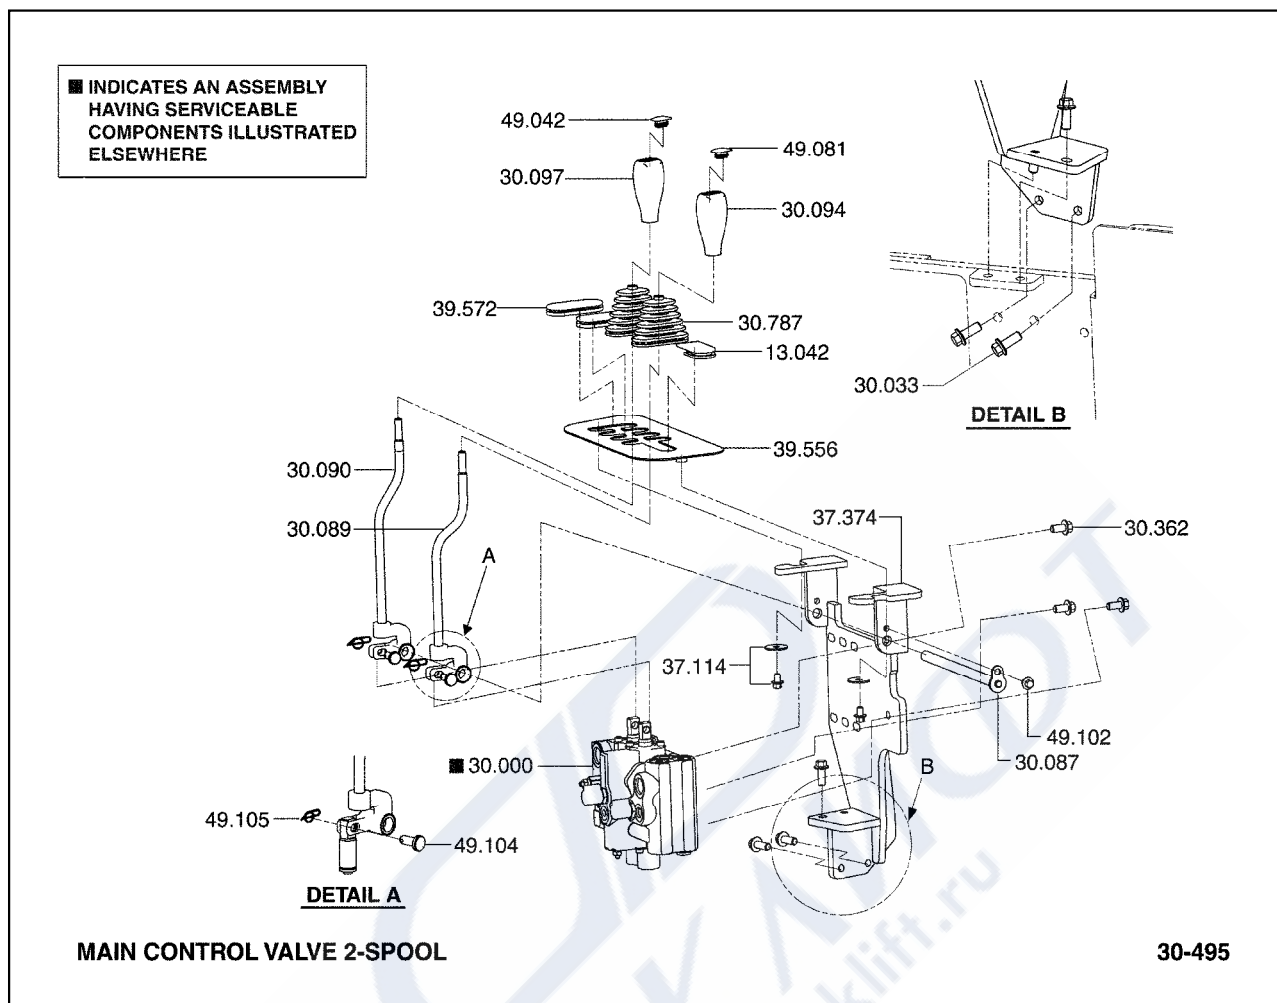 

13.042	PLUG - BUTTON, PANEL HOLE 플러그
30.000	VALVE ASSEMBLY, HYDRAULIC 밸브
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀
30.089	LEVER, LIFT CONTROL 레버
30.090	LEVER, TILT CONTROL 레버
30.094	KNOB, LIFT CONTROL LEVER 노브
30.097	KNOB, TILT CONTROL LEVER 노브
30.362	FASTENER, VALVE MOUNTING PLATE 패스너


30.787	BOOT, VALVE CONTROL LEVER 부트
37.114	FASTENER, VALVE LINKAGE ACCESS COVER 패스너
37.374	COVER, HYDRAULIC VALVE 커버
39.556	COVER, VALVE LINKAGE ACCESS 커버
39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너

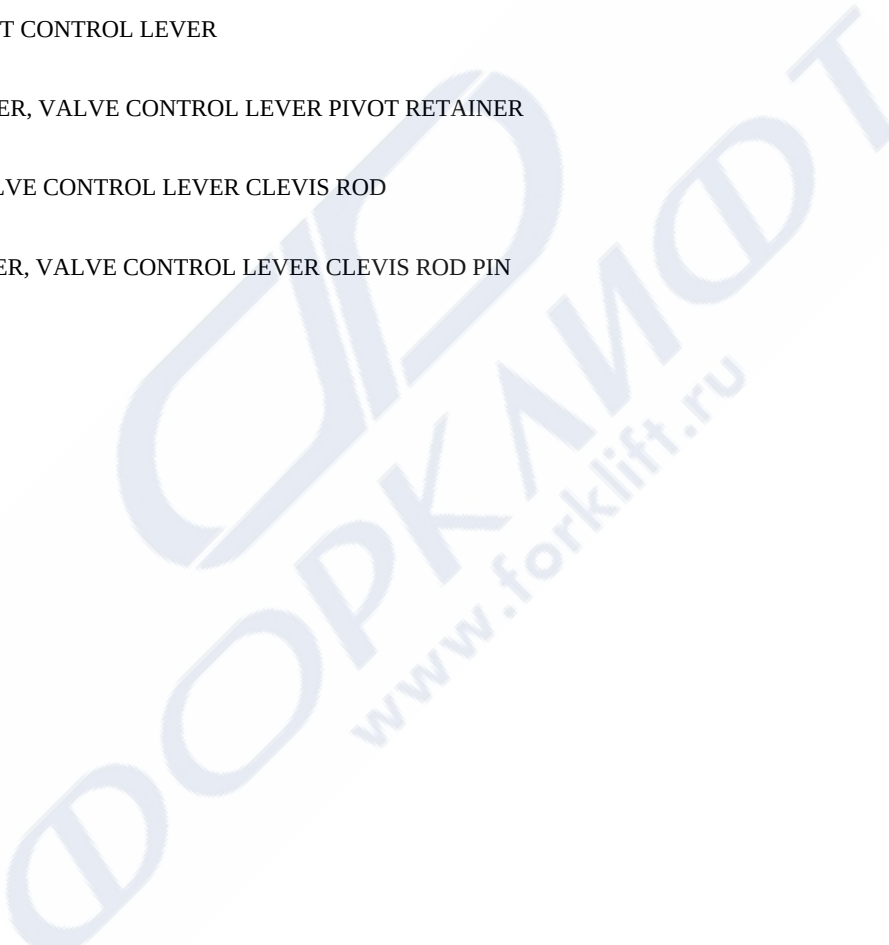 


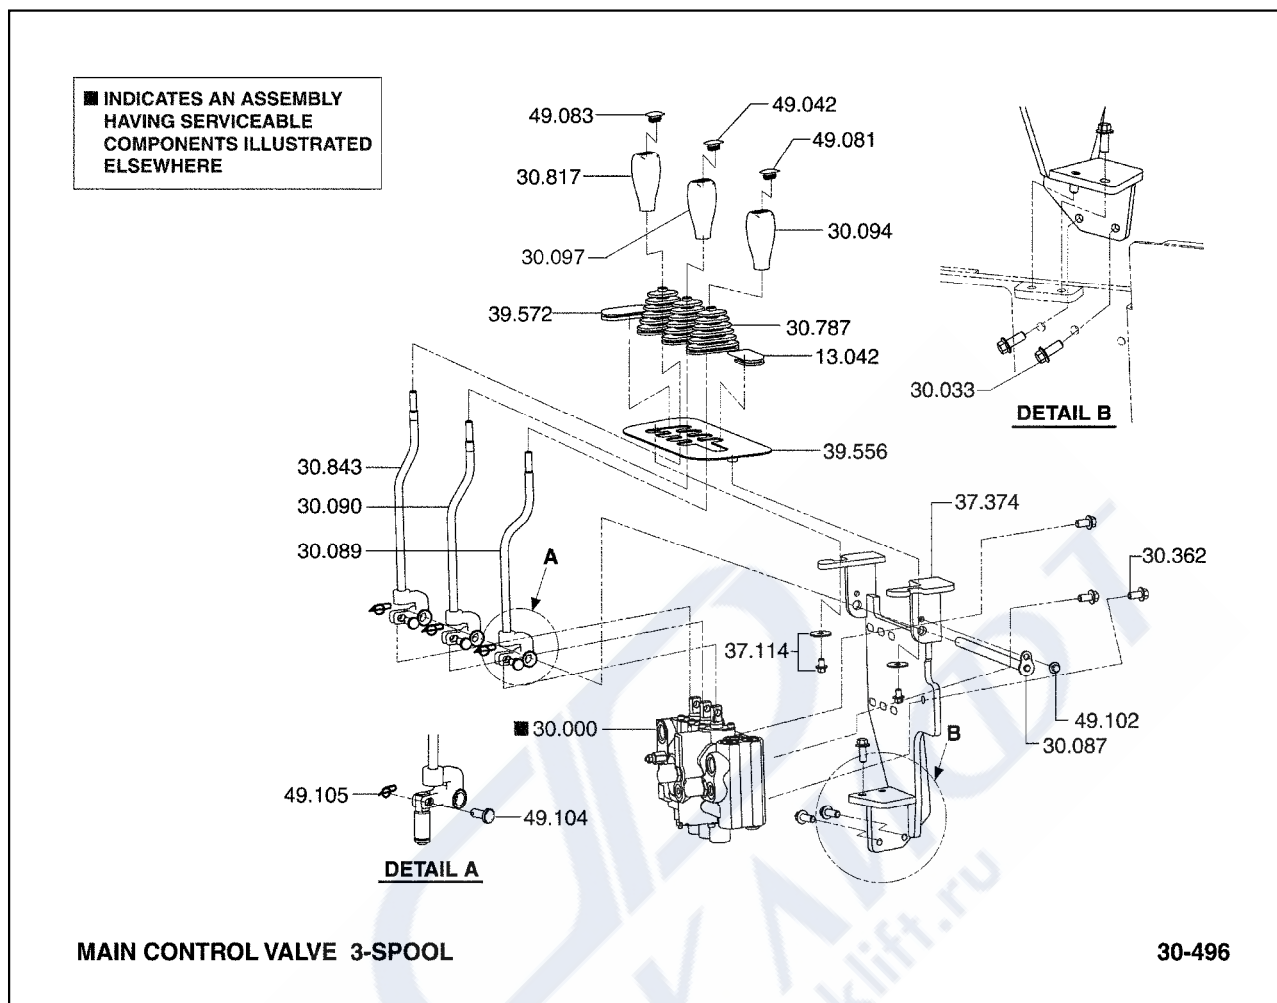 

13.042	PLUG - BUTTON, PANEL HOLE 플러그
30.000	VALVE ASSEMBLY, HYDRAULIC 밸브
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀
30.089	LEVER, LIFT CONTROL 레버
30.090	LEVER, TILT CONTROL 레버
30.094	KNOB, LIFT CONTROL LEVER 노브
30.097	KNOB, TILT CONTROL LEVER 노브
30.362	FASTENER, VALVE MOUNTING PLATE 패스너


30.787	BOOT, VALVE CONTROL LEVER 부트
30.817	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버
37.114	FASTENER, VALVE LINKAGE ACCESS COVER 패스너
37.374	COVER, HYDRAULIC VALVE 커버
39.556	COVER, VALVE LINKAGE ACCESS 커버
39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.083	CAP, VALVE CONTROL LEVER DECAL 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너

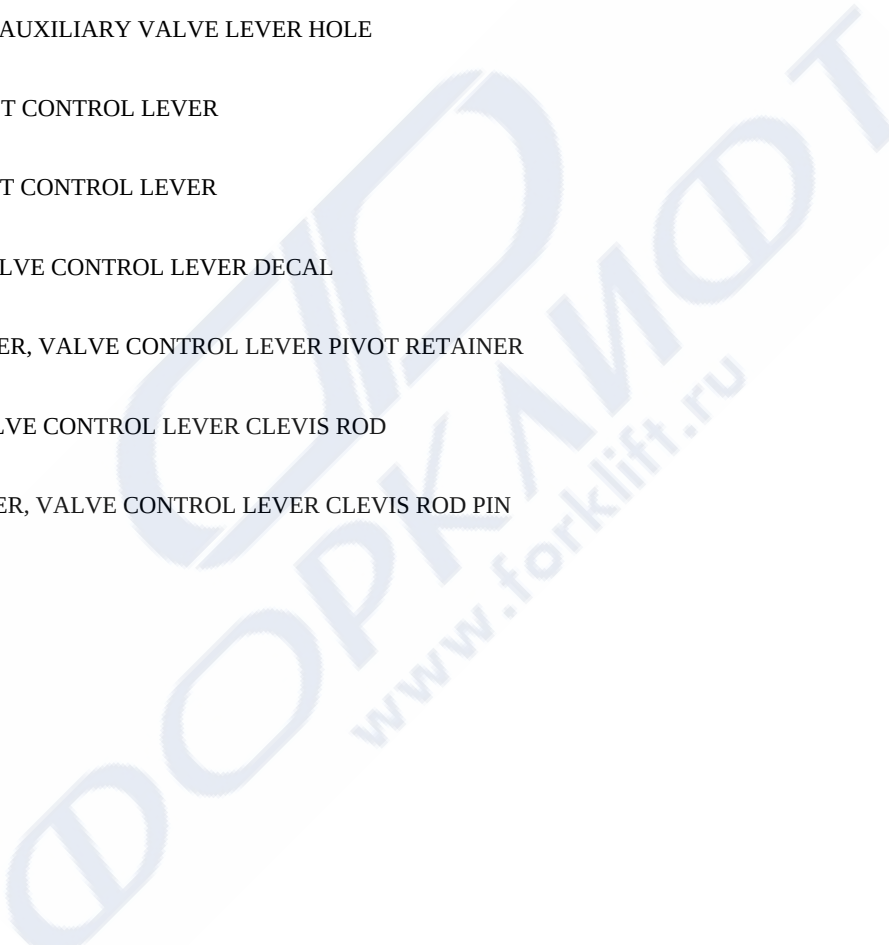 

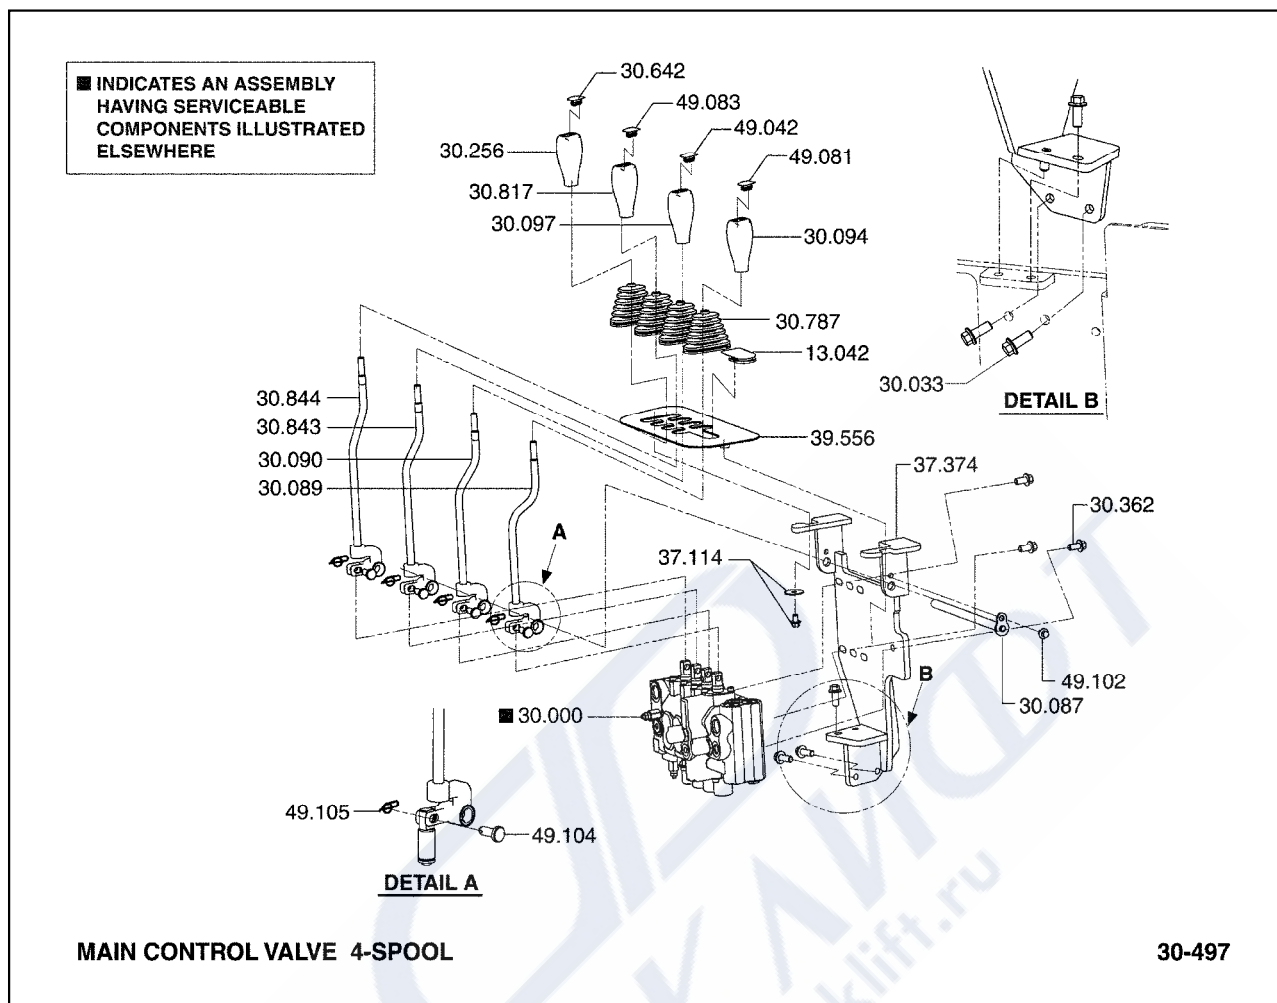 


13.042	PLUG - BUTTON, PANEL HOLE 플러그
30.000	VALVE ASSEMBLY, HYDRAULIC 밸브
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀
30.089	LEVER, LIFT CONTROL 레버
30.090	LEVER, TILT CONTROL 레버
30.094	KNOB, LIFT CONTROL LEVER 노브
30.097	KNOB, TILT CONTROL LEVER 노브
30.256	KNOB, AUXILIARY VALVE CONTROL LEVER 노브

30.362	FASTENER, VALVE MOUNTING PLATE 패스너
30.642	CAP, AUXILIARY VALVE SPOOL 캡
30.787	BOOT, VALVE CONTROL LEVER 부트
30.817	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버
30.844	LEVER, AUXILIARY VALVE CONTROL (2ND AUX) 레버
37.114	FASTENER, VALVE LINKAGE ACCESS COVER 패스너
37.374	COVER, HYDRAULIC VALVE 커버
39.556	COVER, VALVE LINKAGE ACCESS 커버
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.083	CAP, VALVE CONTROL LEVER DECAL 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너

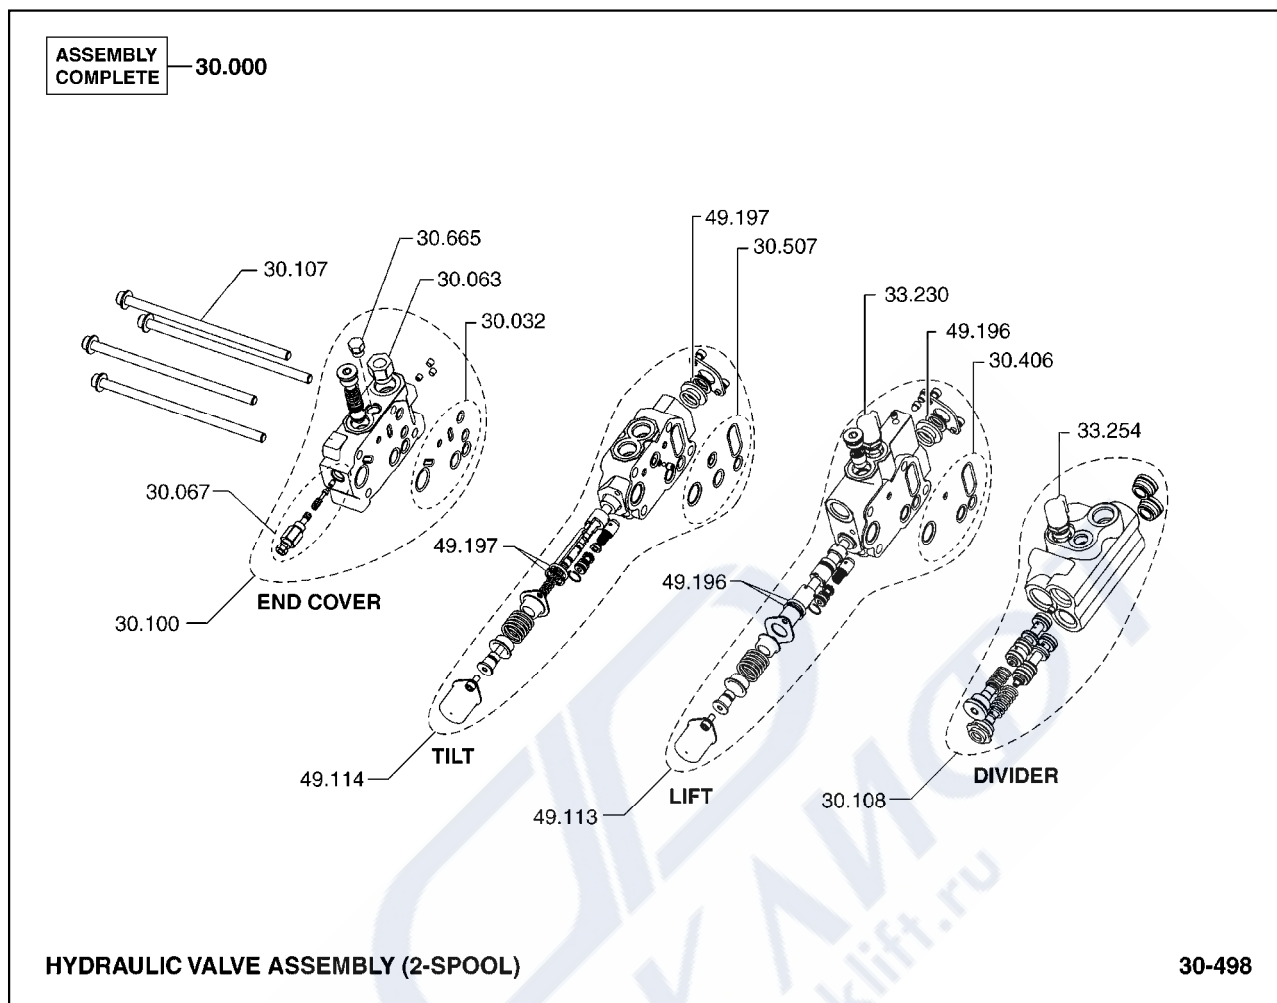 


30.000	VALVE ASSEMBLY, HYDRAULIC 밸브
30.032	SEAL KIT, HYDRAULIC VALVE SECTION (INLET) 씰키트
30.063	PLUG, INLET SECTION PRESSURE PORT 플러그
30.067	RELIEF VALVE KIT, VALVE INLET SECTION 릴리프밸브
30.100	INLET SECTION, HYDRAULIC VALVE 인렛섹션
30.107	FASTENER, VALVE THRU 패스너
30.108	OUTLET SECTION, HYDRAULIC VALVE 아웃렛섹션
30.406	SEAL KIT, HYDRAULIC VALVE (LIFT) 씰키트
30.507	SEAL KIT, HYDRAULIC VALVE (TILT) 씰키트

30.665	PLUG, INLET SECTION PRESSURE PORT 플러그
33.230	VALVE ASSEMBLY, LIFT SOLENOID 밸브
33.254	SOLENOID VALVE, DEVICE BY-PASS 솔레노이드밸브
49.113	LIFT SECTION, HYDRAULIC VALVE 리프트섹션
49.114	TILT SECTION, HYDRAULIC VALVE 틸트섹션
49.196	SPOOL SEAL KIT, LIFT SECTION 스풀씰키트
49.197	SPOOL SEAL KIT, TILT SECTION 스풀씰키트

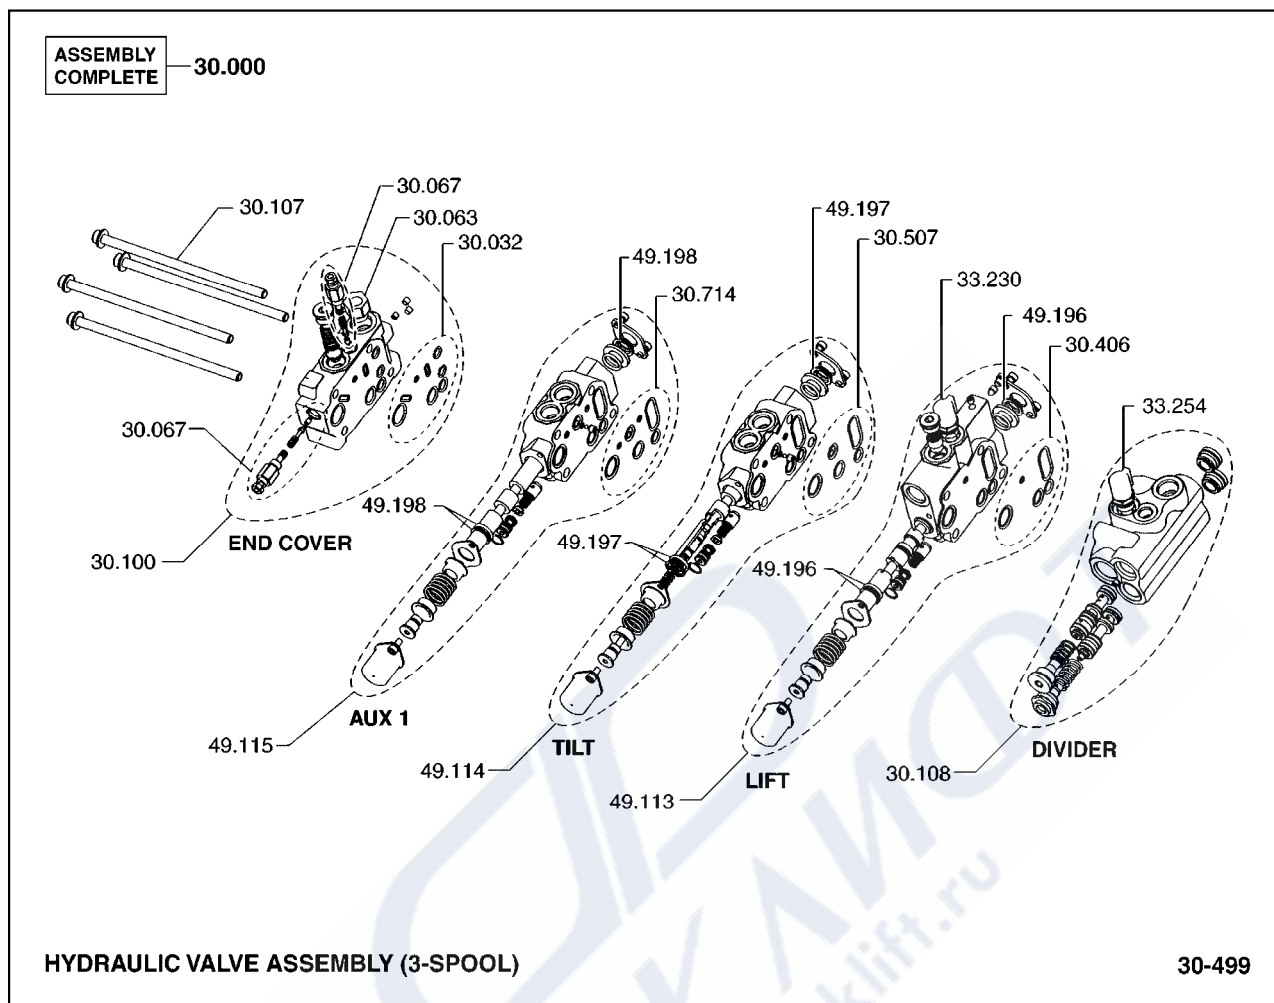 


30.000	VALVE ASSEMBLY, HYDRAULIC 밸브
30.032	SEAL KIT, HYDRAULIC VALVE SECTION (INLET) 씰키트
30.063	PLUG, INLET SECTION PRESSURE PORT 플러그
30.067	RELIEF VALVE KIT, VALVE INLET SECTION 릴리프밸브
30.100	INLET SECTION, HYDRAULIC VALVE 인렛섹션
30.107	FASTENER, VALVE THRU 패스너
30.108	OUTLET SECTION, HYDRAULIC VALVE 아웃렛섹션
30.406	SEAL KIT, HYDRAULIC VALVE (LIFT) 씰키트
30.507	SEAL KIT, HYDRAULIC VALVE (TILT) 씰키트

30.714	SEAL KIT, HYDRAULIC VALVE SECTION (AUX) 씰키트
33.230	VALVE ASSEMBLY, LIFT SOLENOID 밸브
33.254	SOLENOID VALVE, DEVICE BY-PASS 솔레노이드밸브
49.113	LIFT SECTION, HYDRAULIC VALVE 리프트섹션
49.114	TILT SECTION, HYDRAULIC VALVE 틸트섹션
49.115	AUX SECTION, HYDRAULIC VALVE 보조섹션
49.196	SPOOL SEAL KIT, LIFT SECTION 스풀씰키트
49.197	SPOOL SEAL KIT, TILT SECTION 스풀씰키트
49.198	SPOOL SEAL KIT, AUX SECTION 스풀씰키트

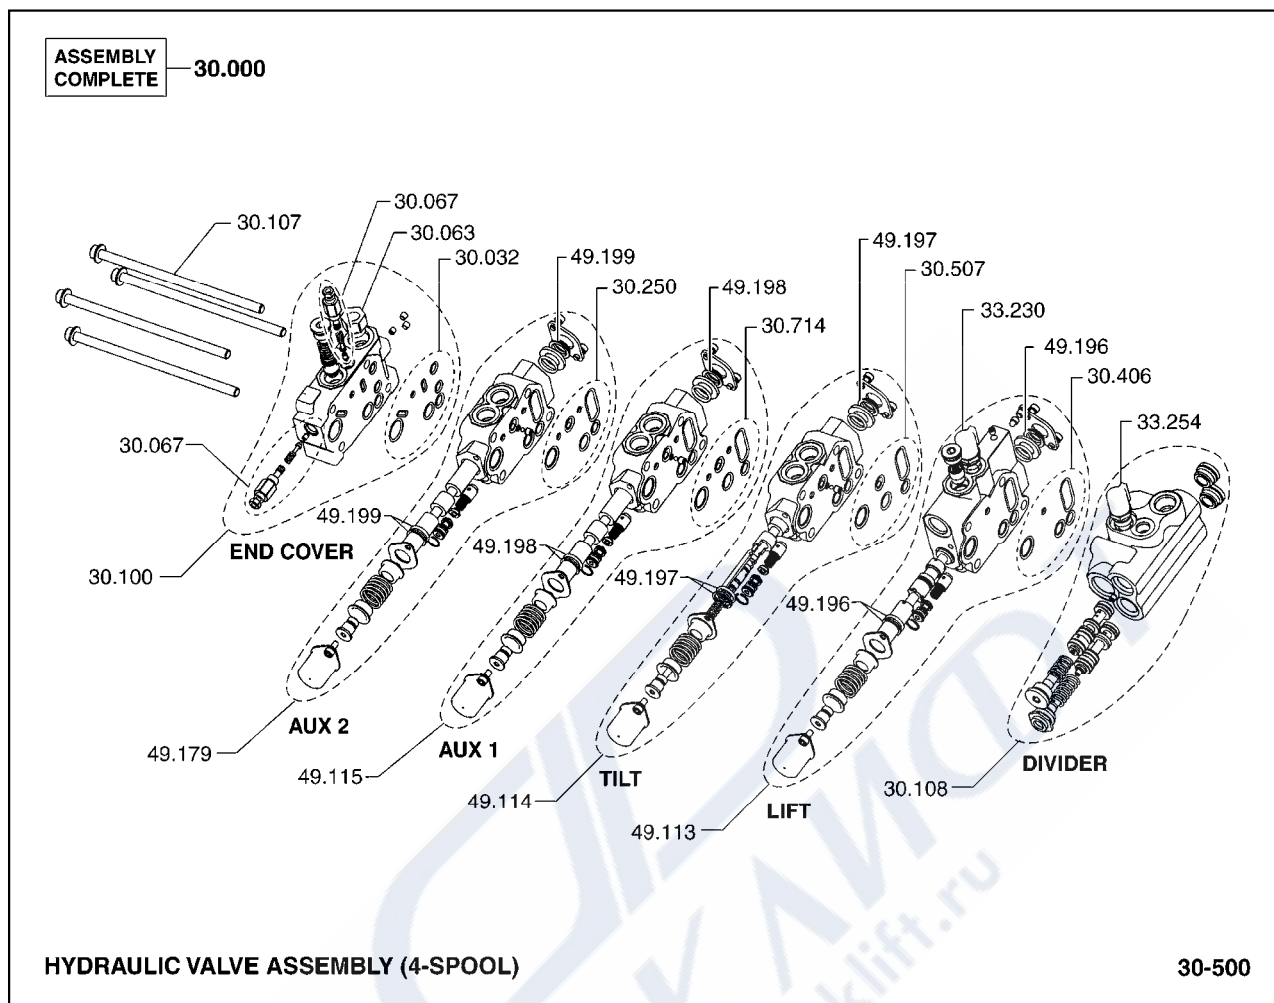 


30.000	VALVE ASSEMBLY, HYDRAULIC 밸브
30.032	SEAL KIT, HYDRAULIC VALVE SECTION (INLET) 씰키트
30.063	PLUG, INLET SECTION PRESSURE PORT 플러그
30.067	RELIEF VALVE KIT, VALVE INLET SECTION 릴리프밸브
30.100	INLET SECTION, HYDRAULIC VALVE 인렛섹션
30.107	FASTENER, VALVE THRU 패스너
30.108	OUTLET SECTION, HYDRAULIC VALVE 아웃렛섹션
30.250	SEAL KIT, HYDRAULIC VALVE SECTION (AUX) 씰키트
30.406	SEAL KIT, HYDRAULIC VALVE (LIFT) 씰키트


30.507	SEAL KIT, HYDRAULIC VALVE (TILT) 씰키트
30.714	SEAL KIT, HYDRAULIC VALVE SECTION (AUX) 씰키트
33.230	VALVE ASSEMBLY, LIFT SOLENOID 밸브
33.254	SOLENOID VALVE, DEVICE BY-PASS 솔레노이드밸브
49.113	LIFT SECTION, HYDRAULIC VALVE 리프트섹션
49.114	TILT SECTION, HYDRAULIC VALVE 틸트섹션
49.115	AUX SECTION, HYDRAULIC VALVE 보조섹션
49.179	AUX SECTION, HYDRAULIC VALVE 보조섹션
49.196	SPOOL SEAL KIT, LIFT SECTION 스풀씰키트
49.197	SPOOL SEAL KIT, TILT SECTION 스풀씰키트
49.198	SPOOL SEAL KIT, AUX SECTION 스풀씰키트
49.199	SPOOL SEAL KIT, AUX SECTION 스풀씰키트

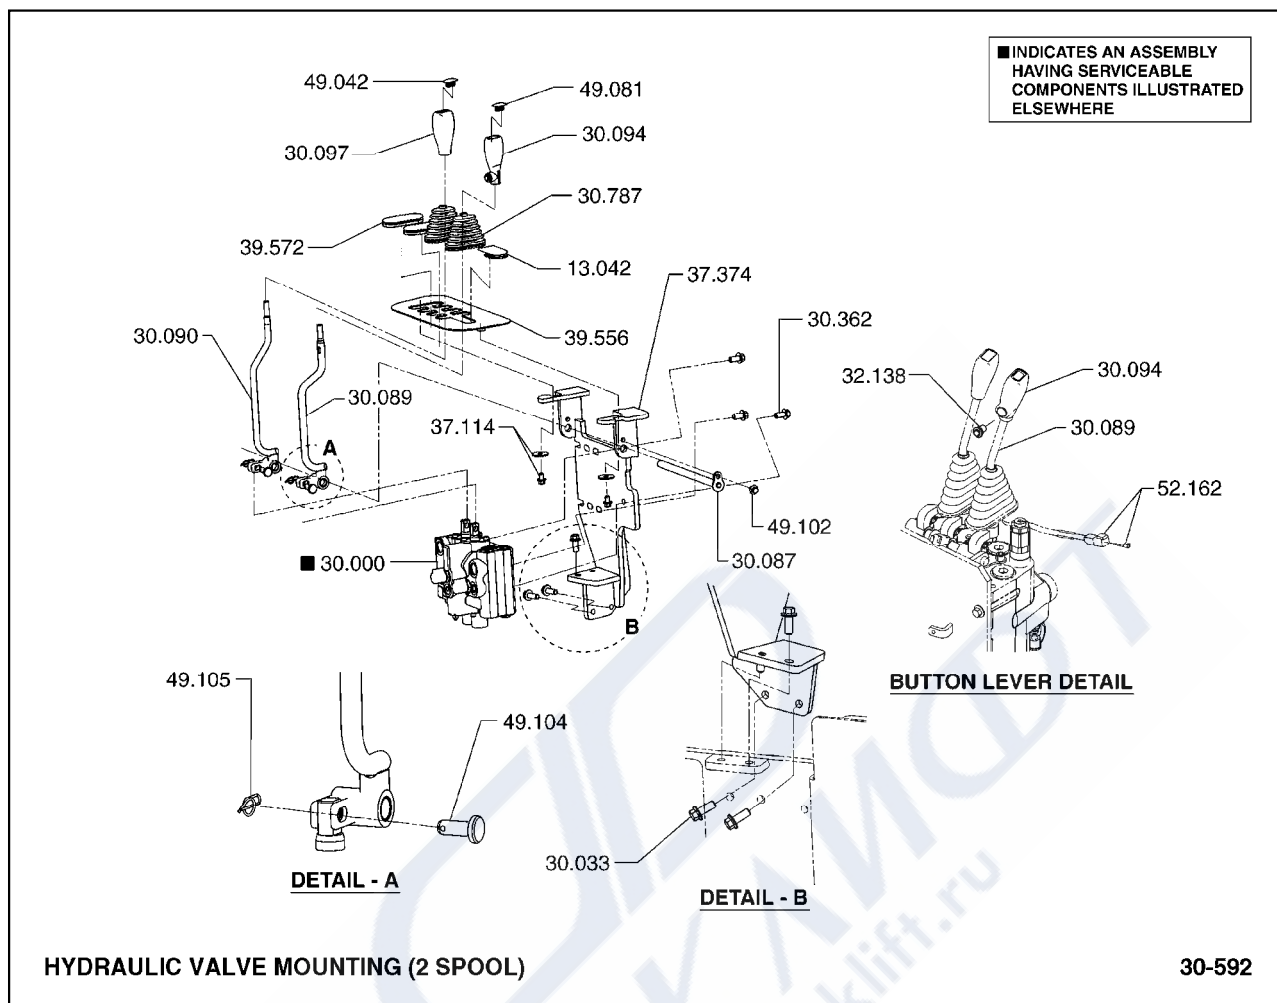 

13.042	PLUG - BUTTON, PANEL HOLE 플러그
30.000	VALVE ASSEMBLY, HYDRAULIC 밸브
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀
30.089	LEVER, LIFT CONTROL 레버
30.090	LEVER, TILT CONTROL 레버
30.094	KNOB, LIFT CONTROL LEVER 노브
30.097	KNOB, TILT CONTROL LEVER 노브
30.362	FASTENER, VALVE MOUNTING PLATE 패스너


30.787	BOOT, VALVE CONTROL LEVER 부트
32.138	SWITCH, PUSH BUTTON 스위치
37.114	FASTENER, VALVE LINKAGE ACCESS COVER 패스너
37.374	COVER, HYDRAULIC VALVE 커버
39.556	COVER, VALVE LINKAGE ACCESS 커버
39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너
52.162	CONNECTOR, AUXILIARY VALVE LEVER WIRE 커넥터

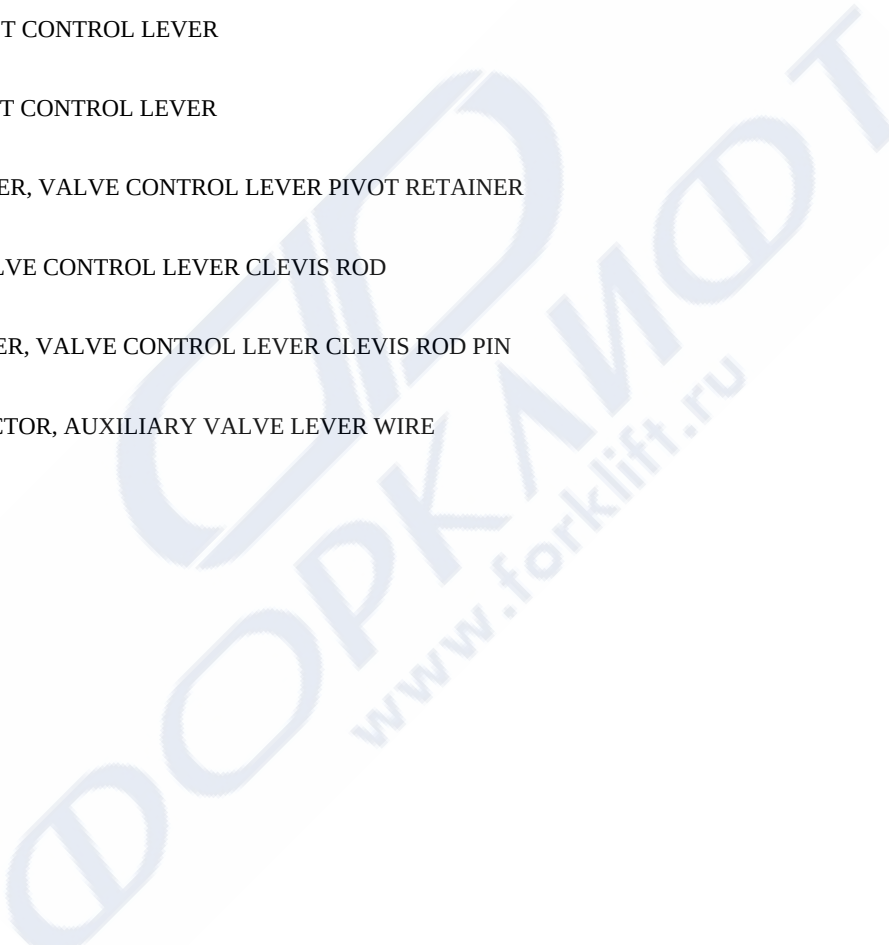 

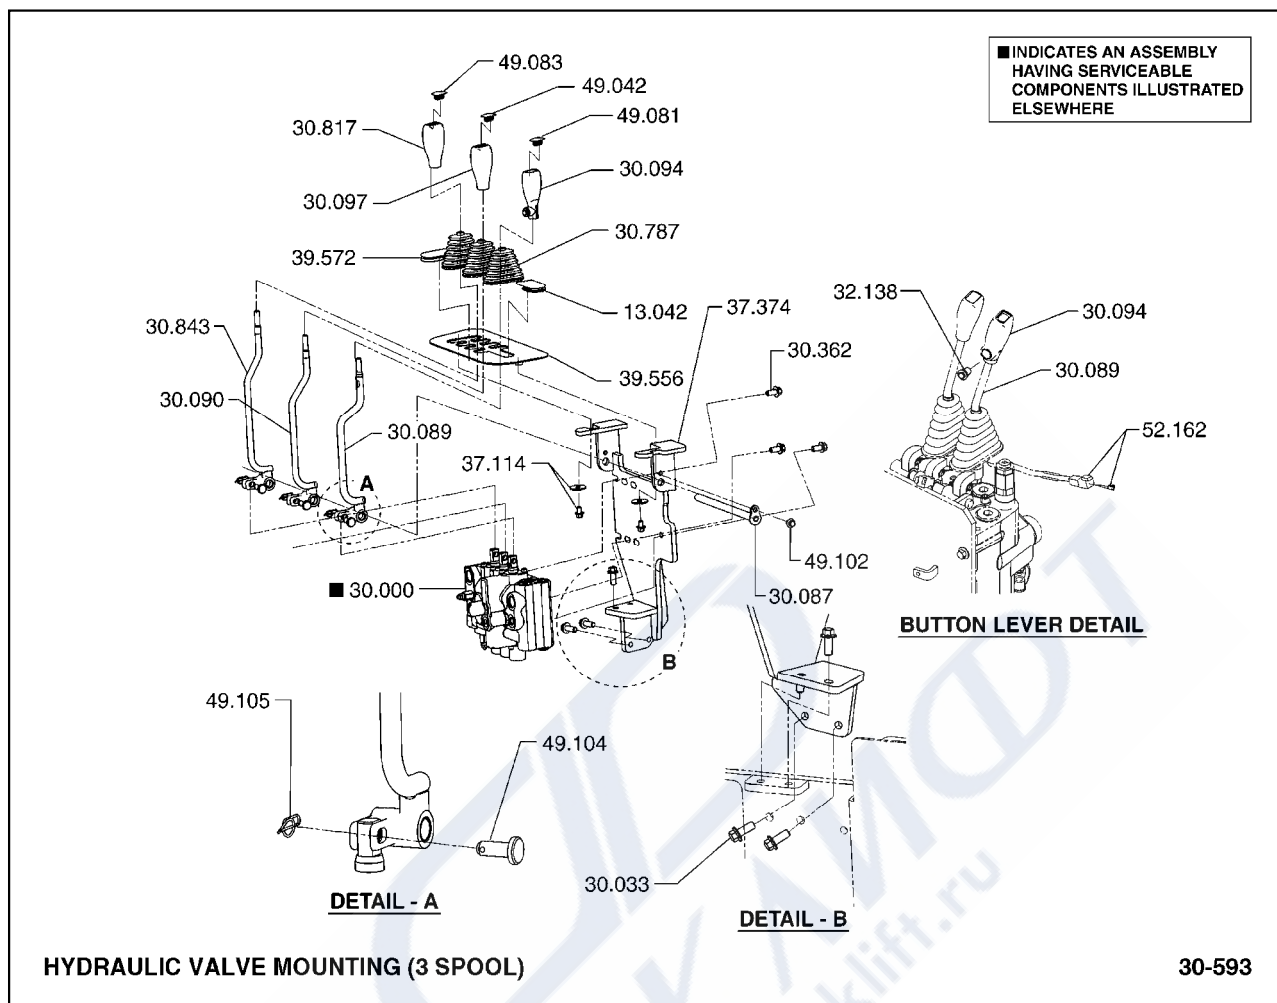 


13.042	PLUG - BUTTON, PANEL HOLE 플러그
30.000	VALVE ASSEMBLY, HYDRAULIC 밸브
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀
30.089	LEVER, LIFT CONTROL 레버
30.090	LEVER, TILT CONTROL 레버
30.094	KNOB, LIFT CONTROL LEVER 노브
30.097	KNOB, TILT CONTROL LEVER 노브
30.362	FASTENER, VALVE MOUNTING PLATE 패스너

30.787	BOOT, VALVE CONTROL LEVER 부트
30.817	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버
32.138	SWITCH, PUSH BUTTON 스위치
37.114	FASTENER, VALVE LINKAGE ACCESS COVER 패스너
37.374	COVER, HYDRAULIC VALVE 커버
39.556	COVER, VALVE LINKAGE ACCESS 커버
39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.083	CAP, VALVE CONTROL LEVER DECAL 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너
52.162	CONNECTOR, AUXILIARY VALVE LEVER WIRE 커넥터

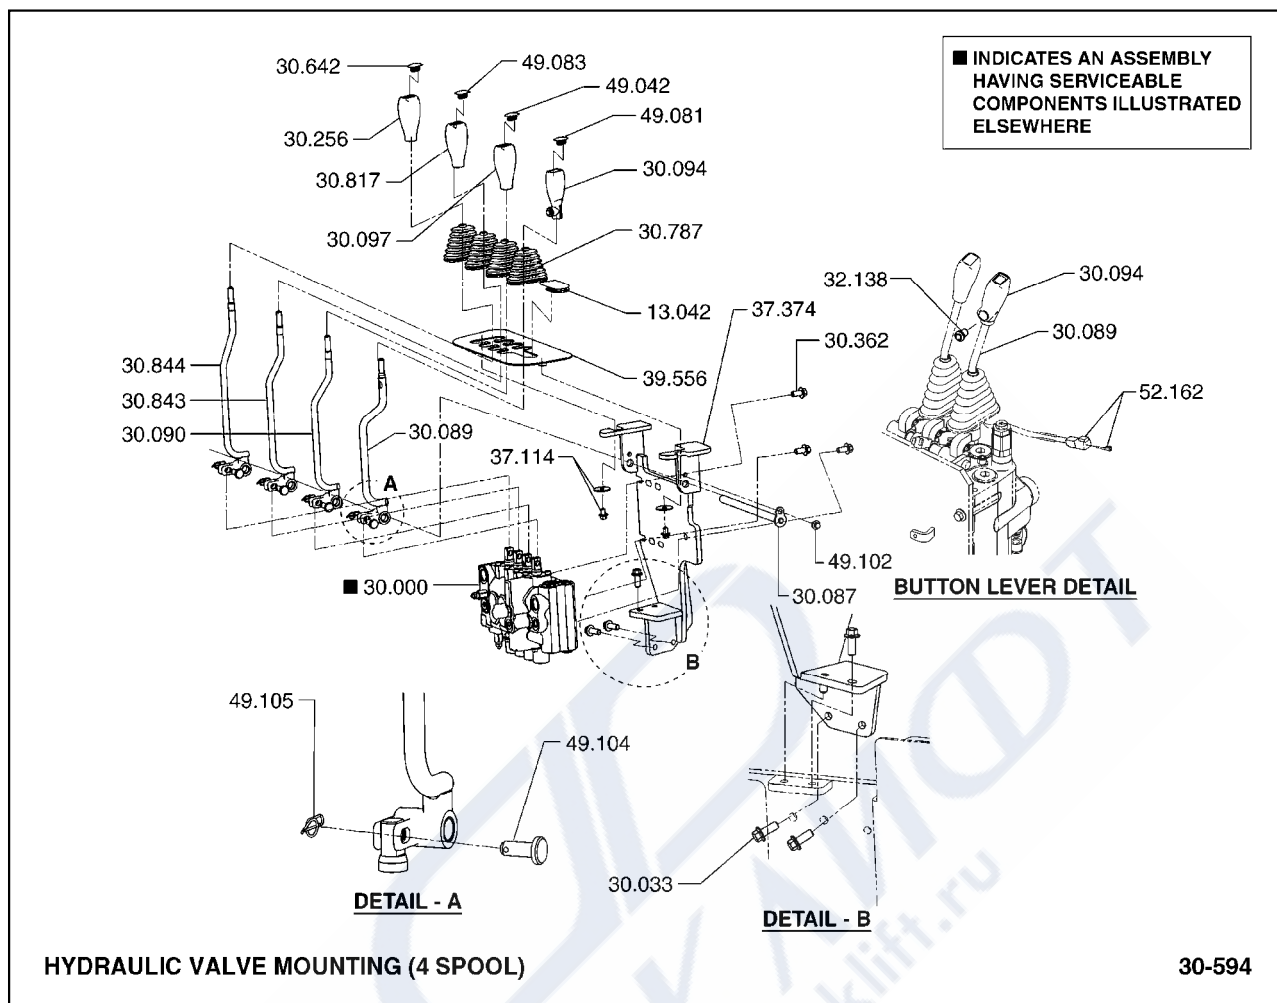 

13.042	PLUG - BUTTON, PANEL HOLE 플러그
30.000	VALVE ASSEMBLY, HYDRAULIC 밸브
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀
30.089	LEVER, LIFT CONTROL 레버
30.090	LEVER, TILT CONTROL 레버
30.094	KNOB, LIFT CONTROL LEVER 노브
30.097	KNOB, TILT CONTROL LEVER 노브
30.256	KNOB, AUXILIARY VALVE CONTROL LEVER 노브


30.362	FASTENER, VALVE MOUNTING PLATE 패스너
30.642	CAP, AUXILIARY VALVE SPOOL 캡
30.787	BOOT, VALVE CONTROL LEVER 부트
30.817	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버
30.844	LEVER, AUXILIARY VALVE CONTROL (2ND AUX) 레버
32.138	SWITCH, PUSH BUTTON 스위치
37.114	FASTENER, VALVE LINKAGE ACCESS COVER 패스너
37.374	COVER, HYDRAULIC VALVE 커버
39.556	COVER, VALVE LINKAGE ACCESS 커버
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.083	CAP, VALVE CONTROL LEVER DECAL 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너
52.162	CONNECTOR, AUXILIARY VALVE LEVER WIRE 커넥터

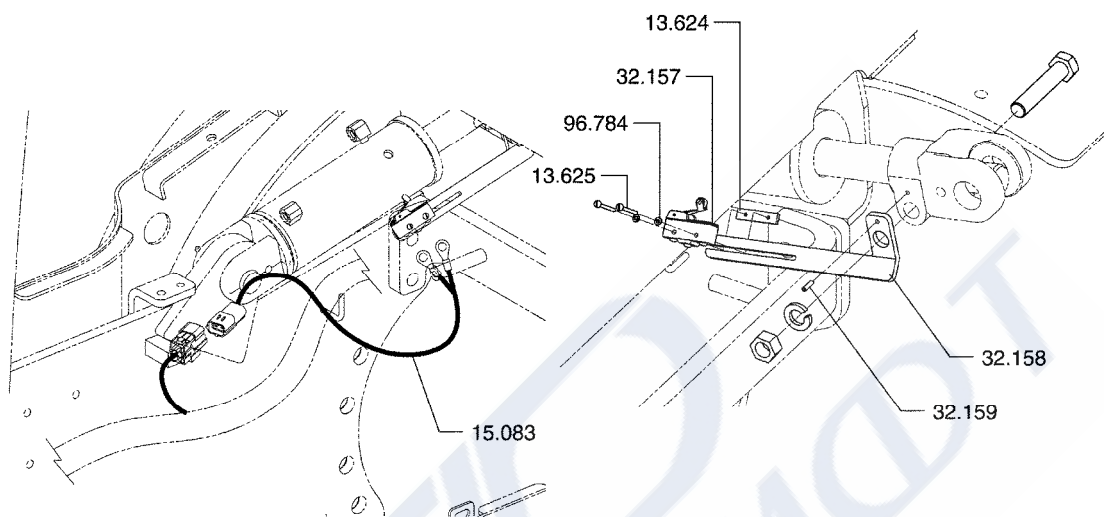 

TILT ALARM GP


31-189

13.624	BRACKET, TILT LIMIT SWITCH 브라켓
13.625	FASTENER, TILT LIMIT SWITCH 패스너
15.083	CONDUCTOR, TILT LIMIT DEVICE FEED 컨덕터
32.157	SWITCH, TILT LIMIT 스위치
32.158	BRACKET, TILT LIMIT SWITCH 브라켓
32.159	RETAINER, TILT LIMIT SWITCH BRACKET 리테이너
96.784	WASHER, TILT LIMIT SWITCH FASTENER 와셔

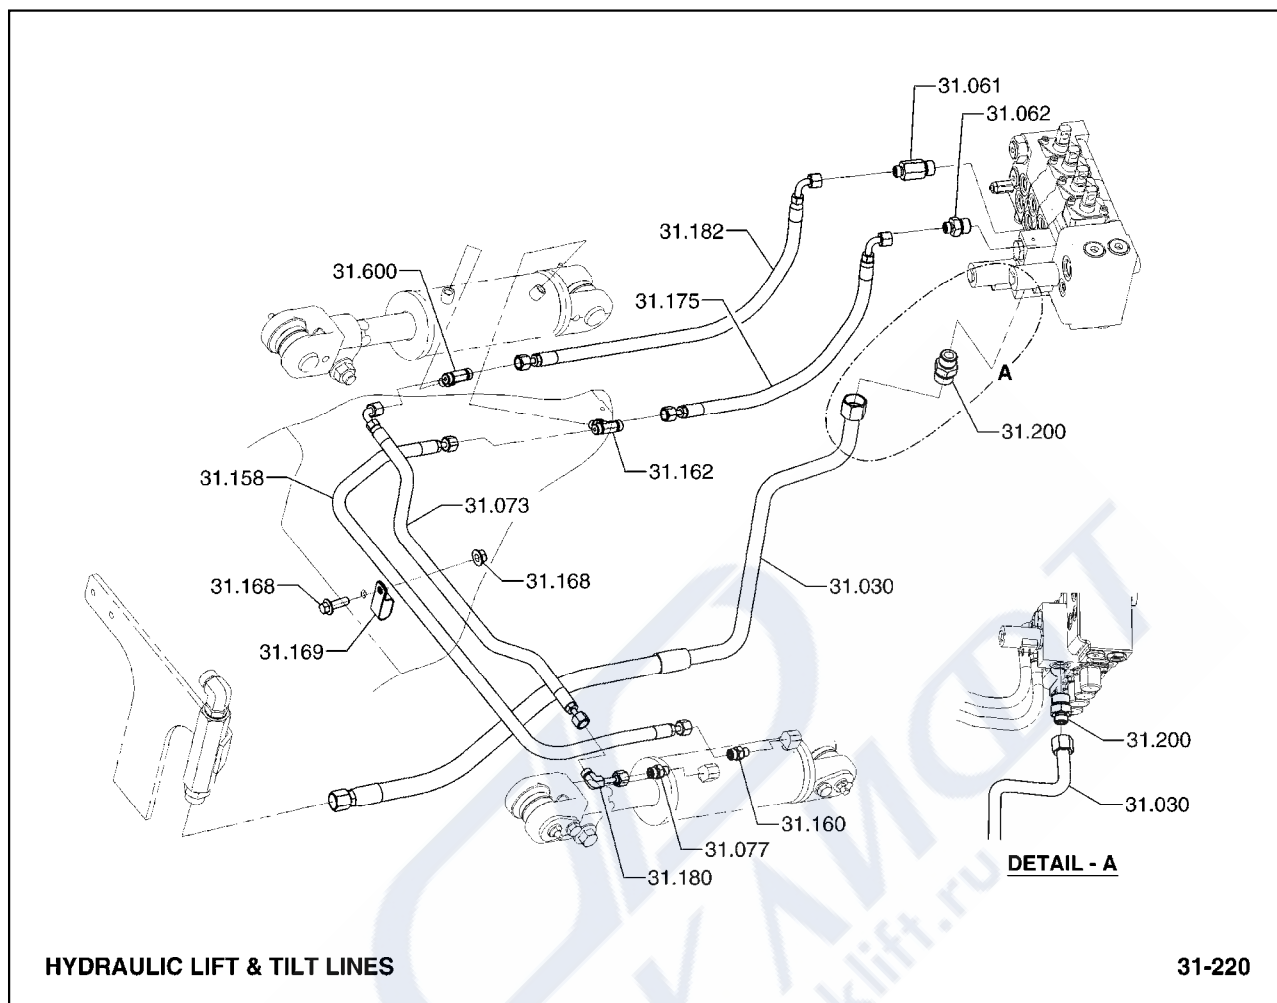 

31.030	LINE, VALVE TO LIFT CYLINDER 라인
31.061	FITTING, VALVE TILT PORT "A" 피팅
31.062	FITTING, VALVE TILT PORT "B" 피팅
31.073	LINE, LH TILT CYLINDER ROD PORT 라인
31.077	FITTING, LH TILT CYLINDER ROD PORT 피팅
31.158	LINE, LH TILT CYLINDER ANCHOR PORT 라인
31.160	FITTING, LH TILT CYLINDER ANCHOR PORT 피팅
31.162	FITTING, RH TILT CYLINDER ANCHOR PORT 피팅
31.168	FASTENER, TILT LINE CLAMP 패스너

31.169	CLAMP, TILT LINE 클램프
31.175	LINE, VALVE TILT PORT "B" 라인
31.180	FITTING, LH TILT CYLINDER ROD PORT LINE 피팅
31.182	LINE, VALVE TILT PORT "A" 라인
31.200	FITTING, MAIN VALVE LIFT PORT 피팅
31.600	FITTING, RH TILT CYLINDER ROD PORT 피팅

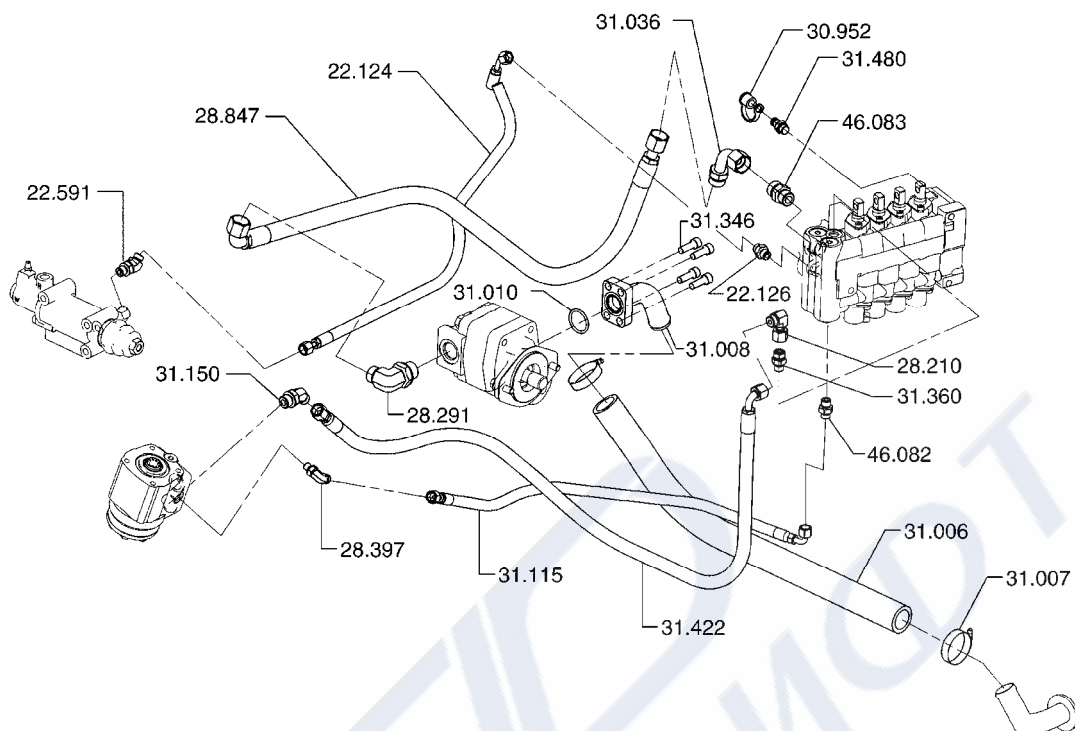 

HYDRAULIC SUPPLY LINES


31-228

22.124	LINE, BRAKE OPERATING VALVE INLET 라인
22.126	CHECK VALVE, BRAKE OPERATING VALVE INLET 체크밸브
22.591	FITTING, BRAKE BOOSTER RETURN LINE 피팅
28.210	FITTING, MAIN VALVE INLET LINE 피팅
28.291	FITTING, PUMP OUTLET 피팅
28.397	FITTING, STEERING GEAR LINE 피팅
28.847	LINE, MAIN VALVE INLET 라인
30.952	DUST CAP, PRESSURE GAUGE PORT FITTING 더스트캡
31.006	LINE, PUMP INLET 라인

31.007	CLAMP, PUMP INLET LINE 클램프
31.008	FITTING, PUMP INLET 피팅
31.010	SEAL, PUMP INLET PORT 씰
31.036	FITTING, MAIN VALVE INLET PORT 피팅
31.115	LINE, STEERING PUMP OUTLET 라인
31.150	FITTING, STEER VALVE DISCHARGE PORT 피팅
31.346	FASTENER, PUMP INLET PORT FITTING 패스너
31.360	FITTING, VALVE SUMP RETURN LINE 피팅
31.422	LINE, PUMP OUTLET (COVER END) 라인
31.480	PLUG, PRESSURE GAUGE PORT 플러그
46.082	FITTING, MAIN VALVE OUTLET 피팅
46.083	FITTING, MAIN VALVE 피팅



 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

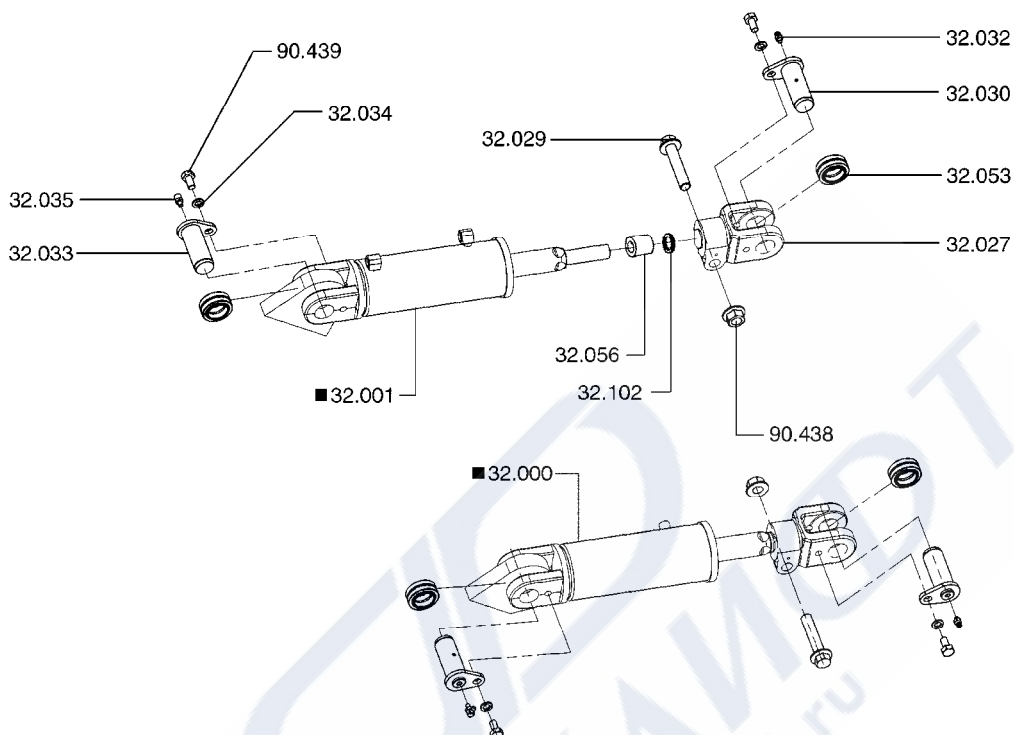


TILT CYLINDER MOUNTING

32-140


32.000	CYLINDER ASSEMBLY, TILT 실린더
32.001	TILT CYLINDER ASSEMBLY (LH) 틸트실린더
32.027	END, RH TILT CYLINDER ROD 엔드
32.029	FASTENER, TILT CYLINDER ROD END 패스너
32.030	PIN, TILT CYLINDER TO UPRIGHT 핀
32.032	FITTING, TILT CYLINDER TO UPRIGHT PIN LUB 피팅
32.033	PIN, TILT CYLINDER REAR MOUNTING RH 핀
32.034	RETAINER, TILT CYLINDER ANCHOR PIN 리테이너
32.035	FITTING, TILT CYLINDER TO FRAME PIN LUB 피팅

32.053	BEARING, TILT CYLINDER ROD END 베어링
32.056	SPACER, TILT CYLINDER ROD END 스페이서
32.102	SHIM, TILT CYLINDER STROKE ADJUSTING 심
90.438	NUT, TILT CYLINDER ROD END FASTENER 너트
90.439	BOLT, TILT CYLINDER TO FRAME PIN LOCK 볼트



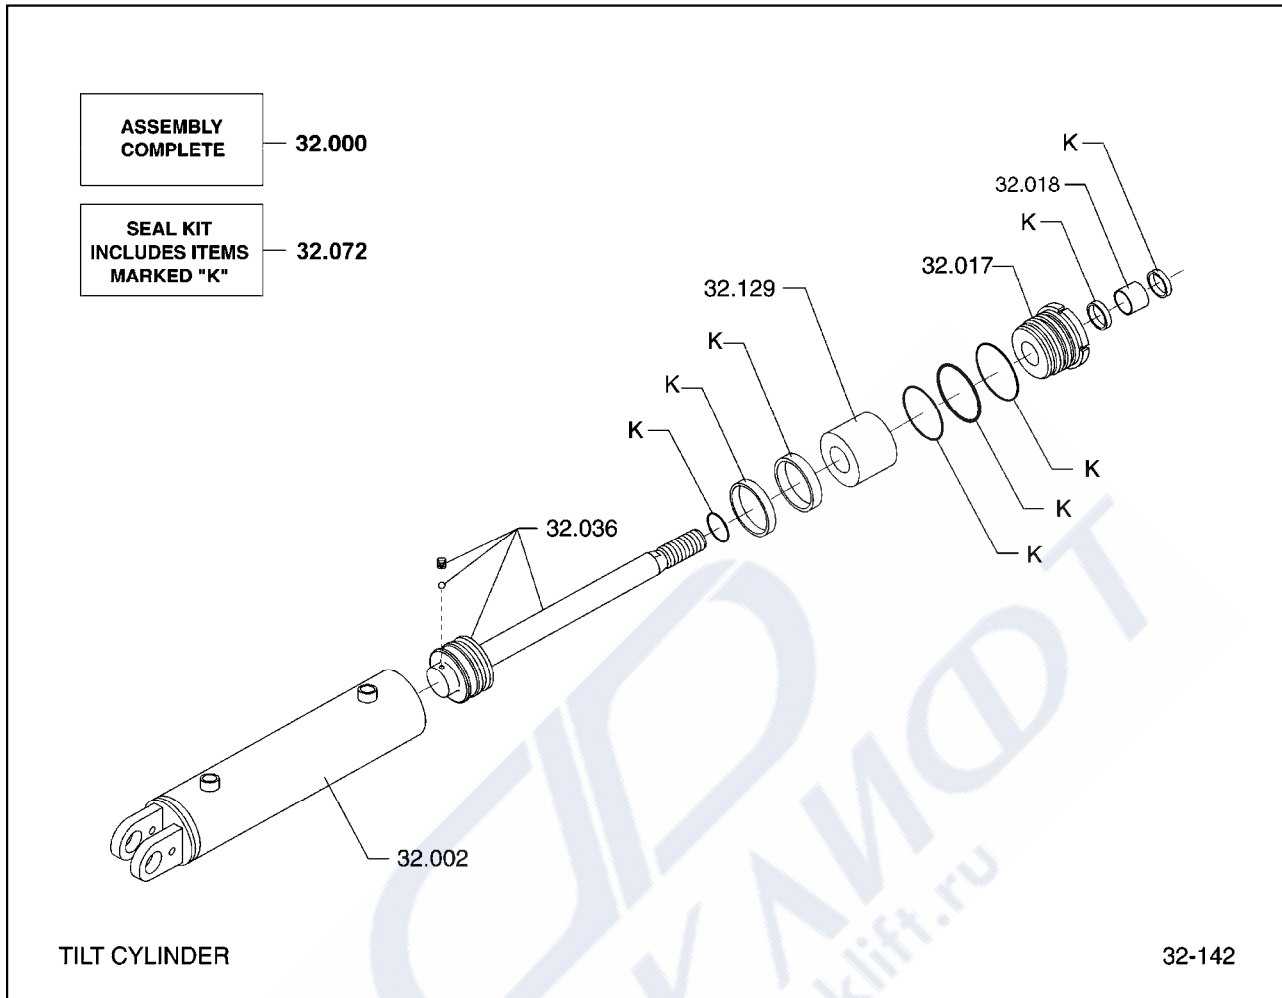 

32.000	CYLINDER ASSEMBLY, TILT 실린더
32.002	CYLINDER ASSEMBLY, WELDED 실린더
32.017	GLAND, TILT CYLINDER 그랜드
32.018	BUSHING, TILT CYLINDER GLAND 부싱
32.036	ROD & PISTON ASSEMBLY, TILT CYLINDER 로드& 피스톤
32.072	PACKING KIT, TILT CYLINDER 패킹키트
32.129	SPACER, TILT CYLINDER BARREL END 스페이서

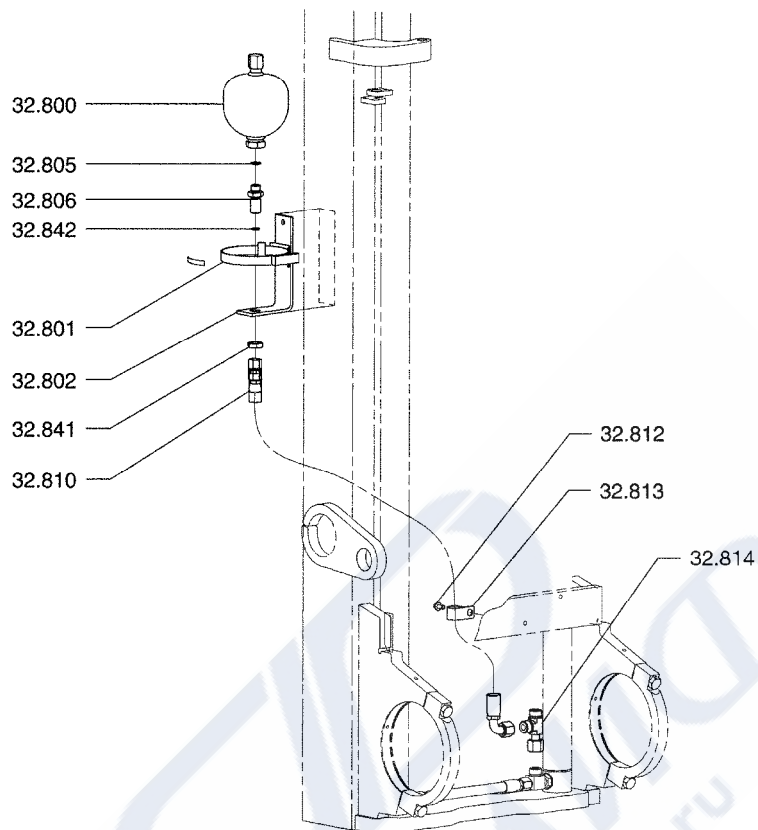 


ACCUMULATOR (STD)

32-151

32.800	ACCUMULATOR, HYDRAULIC 어큐물레이터
32.801	CLAMP, HYDRAULIC ACCUMULATOR MOUNTING 클램프
32.802	BRACKET, HYDRAULIC ACCUMULATOR 브라켓
32.805	SEAL, HYDRAULIC ACCUMULATOR CONNECTOR 씰
32.810	LINE, HYDRAULIC ACCUMULATOR 라인
32.812	CLIP, HYDRAULIC ACCUMULATOR LINE 클립
32.813	FASTENER, HYDRAULIC ACCUMULATOR LINE CLIP 패스너
32.814	FITTING, HYDRAULIC ACCUMULATOR LINE 피팅
32.841	NUT, HYDRAULIC ACCUMULATOR FITTING 너트

32.842 SEAL, HYDRAULC ACCUMULATOR FITTING
셀

 
ФОРКЛИФТ
www.forklift.ru

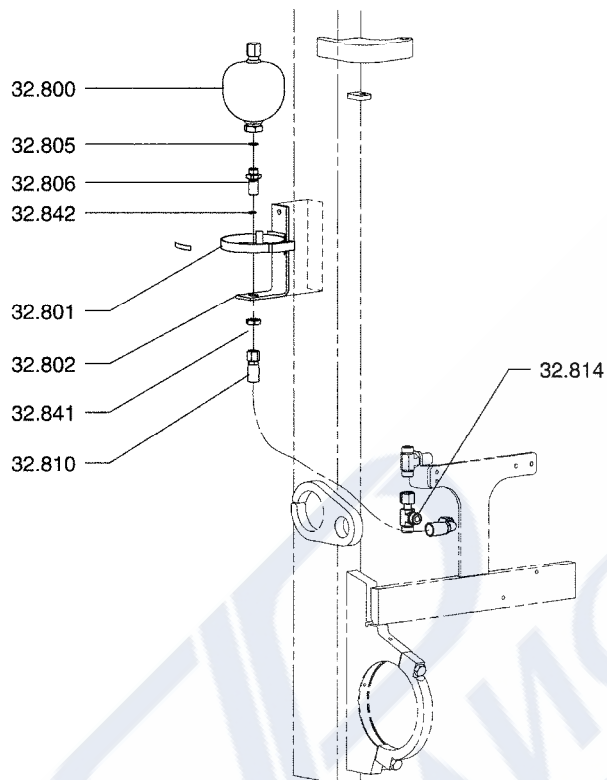

ACCUMULATOR (TSU&HILO)


32-152

32.800	ACCUMULATOR, HYDRAULIC 어큐플레이터
32.801	CLAMP, HYDRAULIC ACCUMULATOR MOUNTING 클램프
32.802	BRACKET, HYDRAULIC ACCUMULATOR 브라켓
32.805	SEAL, HYDRAULIC ACCUMULATOR CONNECTOR 씰
32.806	CONNECTOR, HYDRAULIC ACCUMULATOR 커넥터
32.810	LINE, HYDRAULIC ACCUMULATOR 라인
32.814	FITTING, HYDRAULIC ACCUMULATOR LINE 피팅
32.841	NUT, HYDRAULIC ACCUMULATOR FITTING 너트
32.842	SEAL, HYDRAULIC ACCUMULATOR FITTING 씰

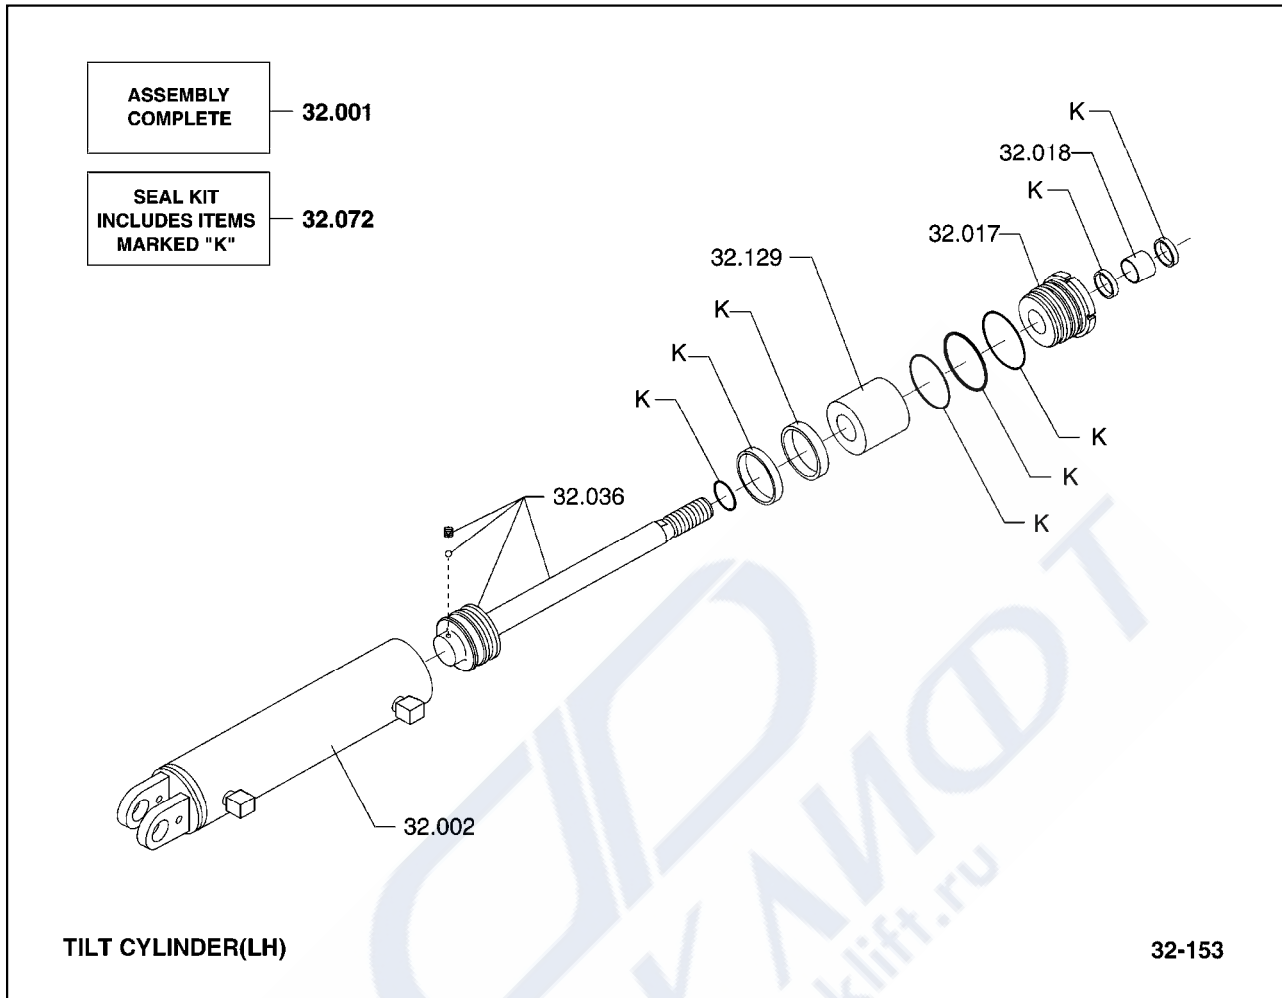 

32.001	TILT CYLINDER ASSEMBLY (LH) 틸트실린더
32.002	CYLINDER ASSEMBLY, WELDED 실린더
32.017	GLAND, TILT CYLINDER 그랜드
32.018	BUSHING, TILT CYLINDER GLAND 부싱
32.036	ROD & PISTON ASSEMBLY, TILT CYLINDER 로드& 피스톤
32.072	PACKING KIT, TILT CYLINDER 패킹키트
32.129	SPACER, TILT CYLINDER BARREL END 스페이서

 
■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

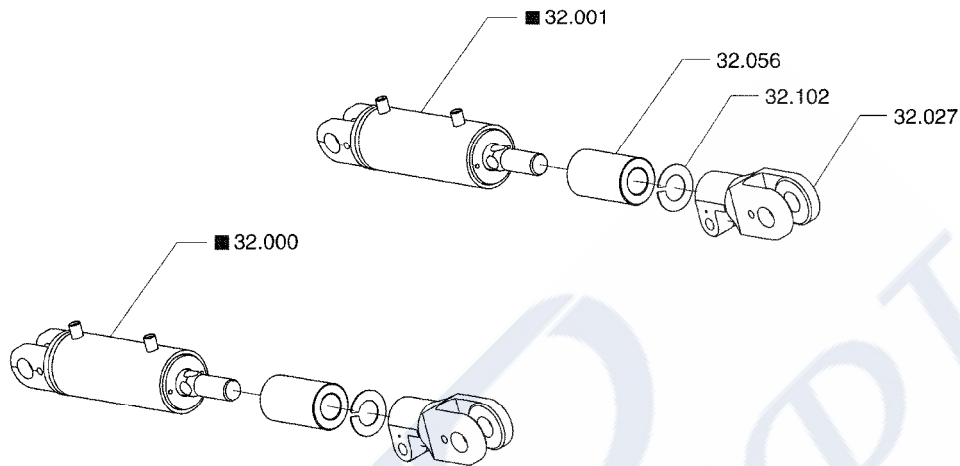


TILT AMOUNT GP

32-167


32.000	CYLINDER ASSEMBLY, TILT 실린더
32.001	TILT CYLINDER ASSEMBLY (LH) 틸트실린더
32.027	END, RH TILT CYLINDER ROD 엔드
32.056	SPACER, TILT CYLINDER ROD END 스페이서
32.102	SHIM, TILT CYLINDER STROKE ADJUSTING 심

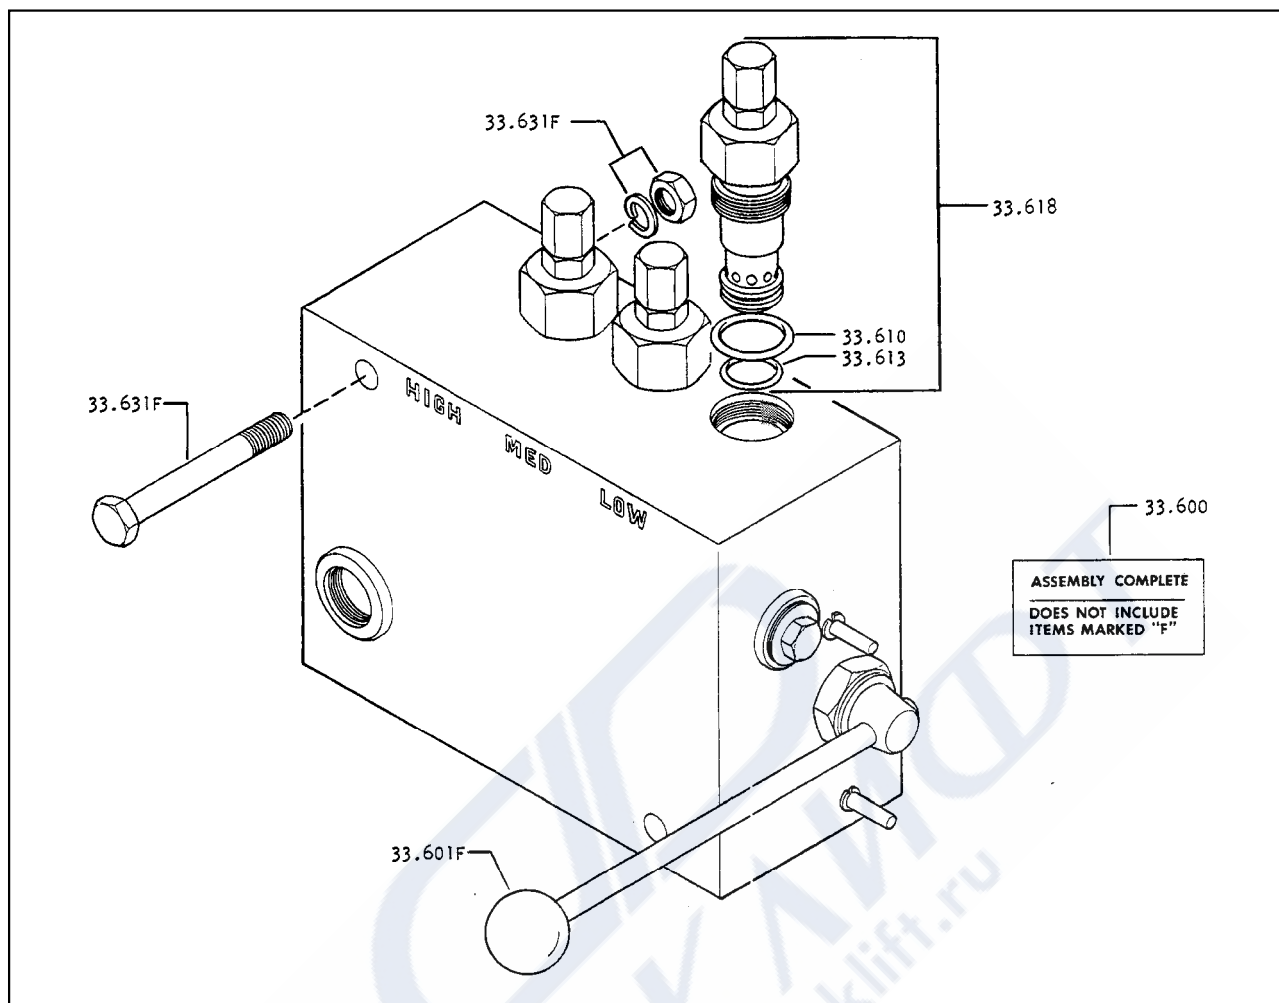 

- | | |
|--------|---|
| 33.600 | RELIEF VALVE, DEVICE VARIABLE PRESSURE
릴리프밸브 |
| 33.601 | LEVER, DEVICE VARIABLE RELIEF VALVE
레버 |
| 33.610 | SEAL, DEVICE PRESS RELIEF VAL CHECK PORT PLUG
씰 |
| 33.613 | SEAL, DEVICE RELIEF VALVE PISTON ADJ END
씰 |
| 33.618 | CARTRIDGE KIT, DEVICE VARIABLE RELIEF VALVE
카트리지키트 |
| 33.631 | FASTENER, DEVICE RELIEF VALVE
패스너 |

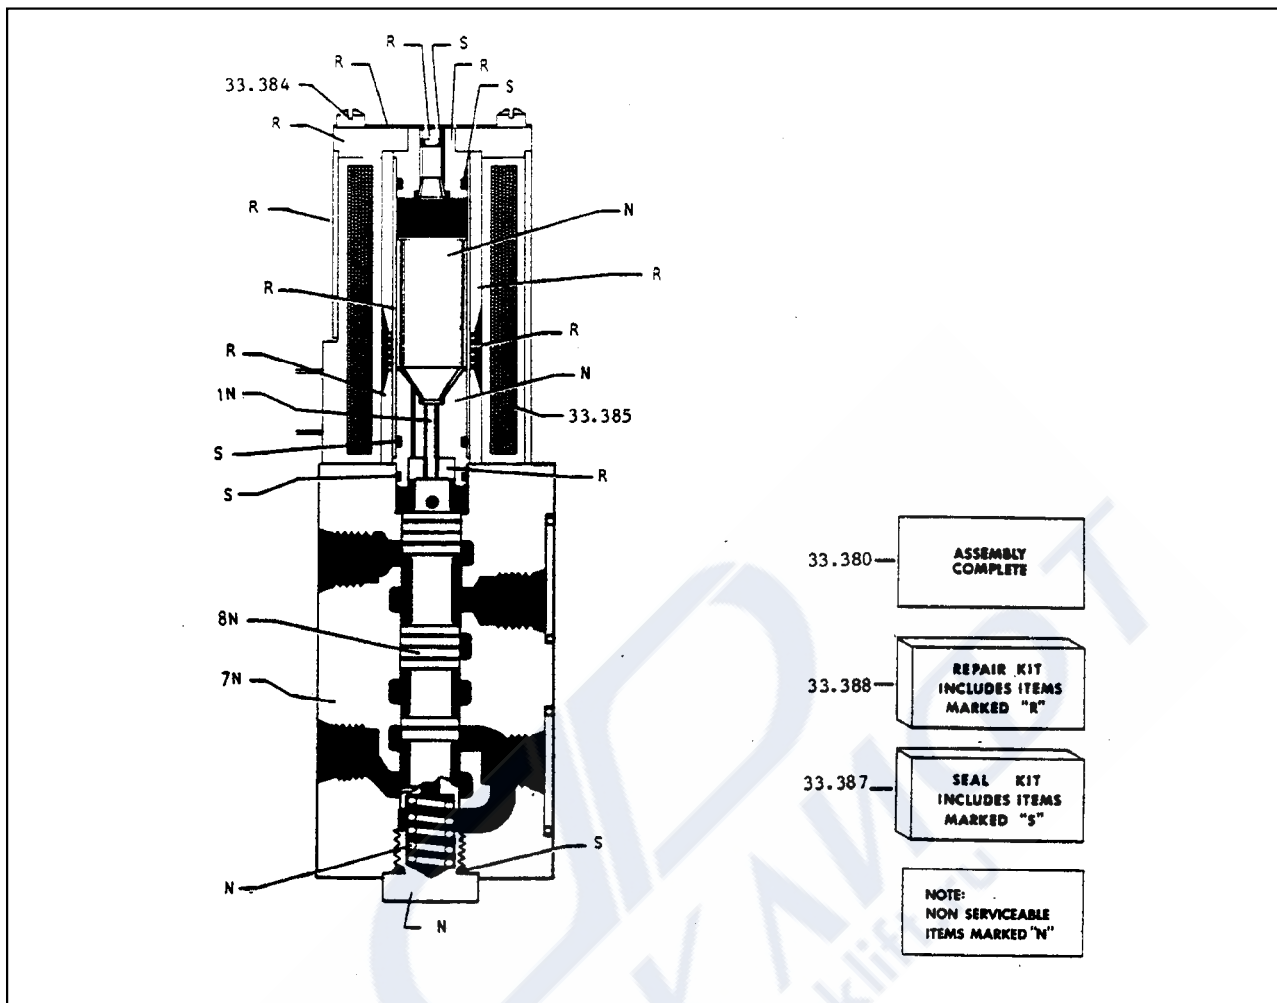 

 - 33.380 VALVE ASSEMBLY, DEVICE SELECTOR SOLENOID
밸브
- 33.384 FASTENER, DEV SELECTOR VALVE SOLENOID COIL
패스너
- 33.385 COIL, DEVICE SELECTOR VALVE SOLENOID
코일
- 33.387 SEAL KIT, DEVICE SELECTOR VALVE
씰키트
- 33.388 REPAIR KIT, DEVICE SELECTOR VALVE
리페어키트

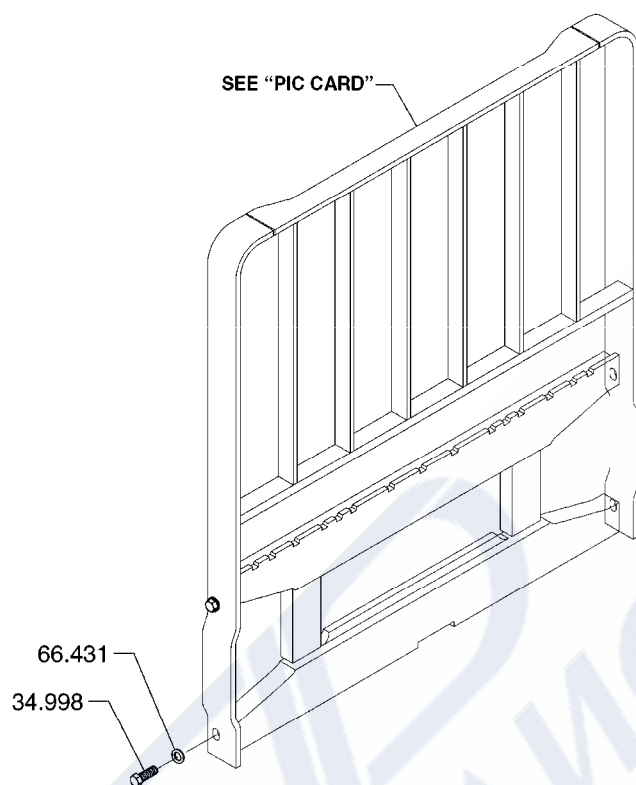


LOAD BACK REST MOUNTING


34-044

- | | |
|--------|--|
| 34.998 | FASTENER, LOAD SAFETY BACK REST
패스너 |
| 66.431 | RETAINER, LBR CAPSCREW
리테이너 |

 
ASSEMBLY
COMPLETE — 34.300

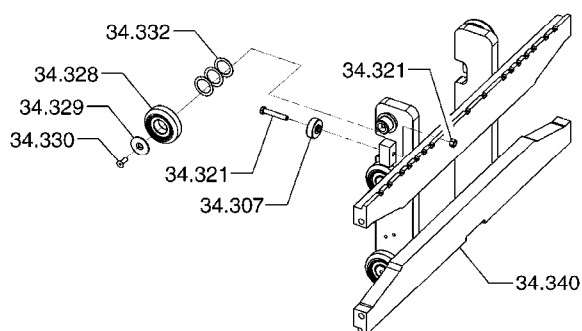


TYPE - 1

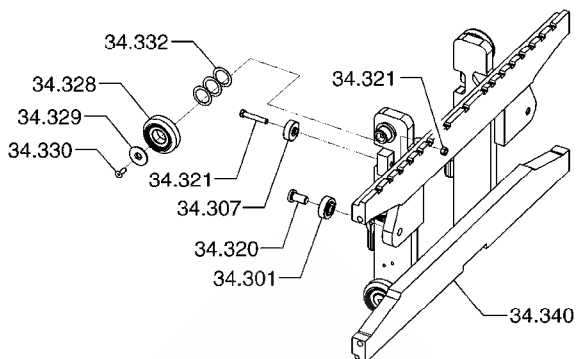 

TYPE - 2

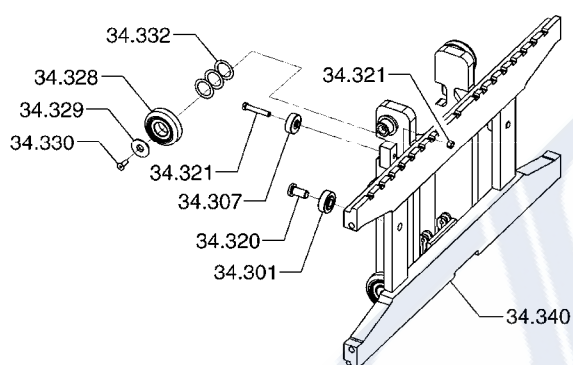 

TYPE - 3

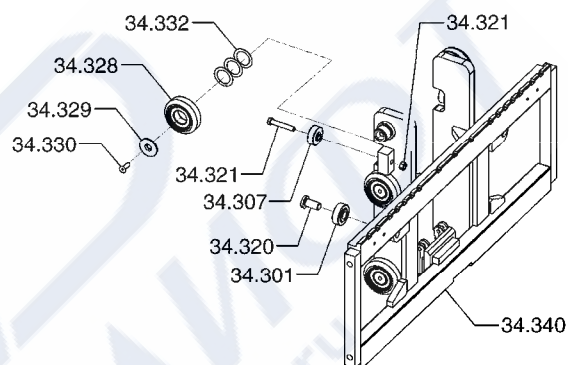 

TYPE - 4


CARRIAGE ASSEMBLY

34-103

34.300	ASSEMBLY, FORK BARS & CARRIAGE 캐리지
34.301	ROLLER, CARRIAGE OUTER THRUST 롤러
34.307	ROLLER, CARRIAGE INNER THRUST 롤러
34.320	SHAFT, CARRIAGE OUTER THRUST ROLLER 샤프트
34.321	FASTENER, CARRIAGE ROLLER SHAFT 패스너
34.328	ROLLER, CARRIAGE CAPTIVE 롤러
34.329	RETAINER, CARRIAGE CAPTIVE ROLLER 리테이너
34.330	FASTENER, CARRIAGE CAPTIVE ROLLER RETAINER 패스너
34.332	SHIM, CARRIAGE CAPTIVE ROLLER 심

 34.340 CARRIAGE WELDED ASSEMBLY
캐리지용 접물



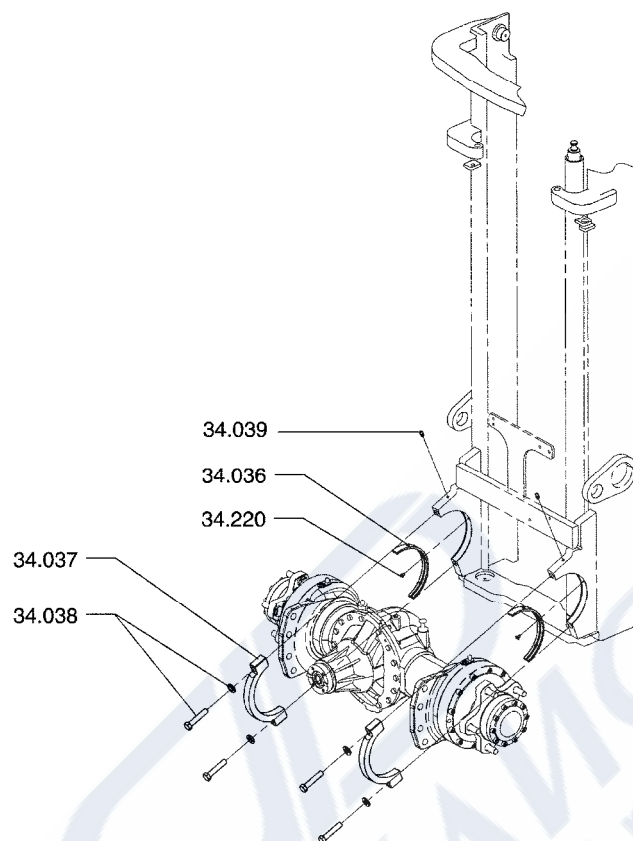

UPRIGHT MOUNTING

34-130

34.036	BUSHING, UPRIGHT TRUNNION 부싱
34.037	CAP, UPRIGHT TRUNNION 캡
34.038	FASTENER, UPRIGHT TRUNNION CAP 패스너
34.039	FITTING-LUB, UPRIGHT TRUNNION 피팅
34.220	FASTENER, UPRIGHT TRUNNION CAP DOWEL 패스너


This Carriage assembly was manufactured by the CASCADE CORPORATION and is not serviced by CLARK Material Handling Company.

CASCADE parts manuals, technical specifications and lists of worldwide distributors are available on-line at:

<http://www.cascorp.com>.

When ordering service parts, it will be necessary to provide CASCADE with the CASCADE model and serial numbers of the carriage. CASCADE will not recognize the CLARK carriage part number listed on the PIC or in PartsPRO.


34.300	CARRIAGE ASSEMBLY COMPLETE
34.340	CARRIAGE WELDED ASSEMBLY

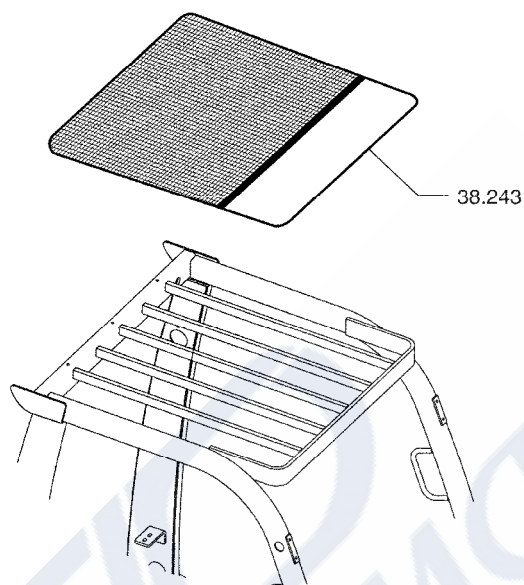 

OVERHEAD GUARD COVER


37-003

 
38.243 COVER ASSEMBLY, OVERHEAD GUARD TOP
커버

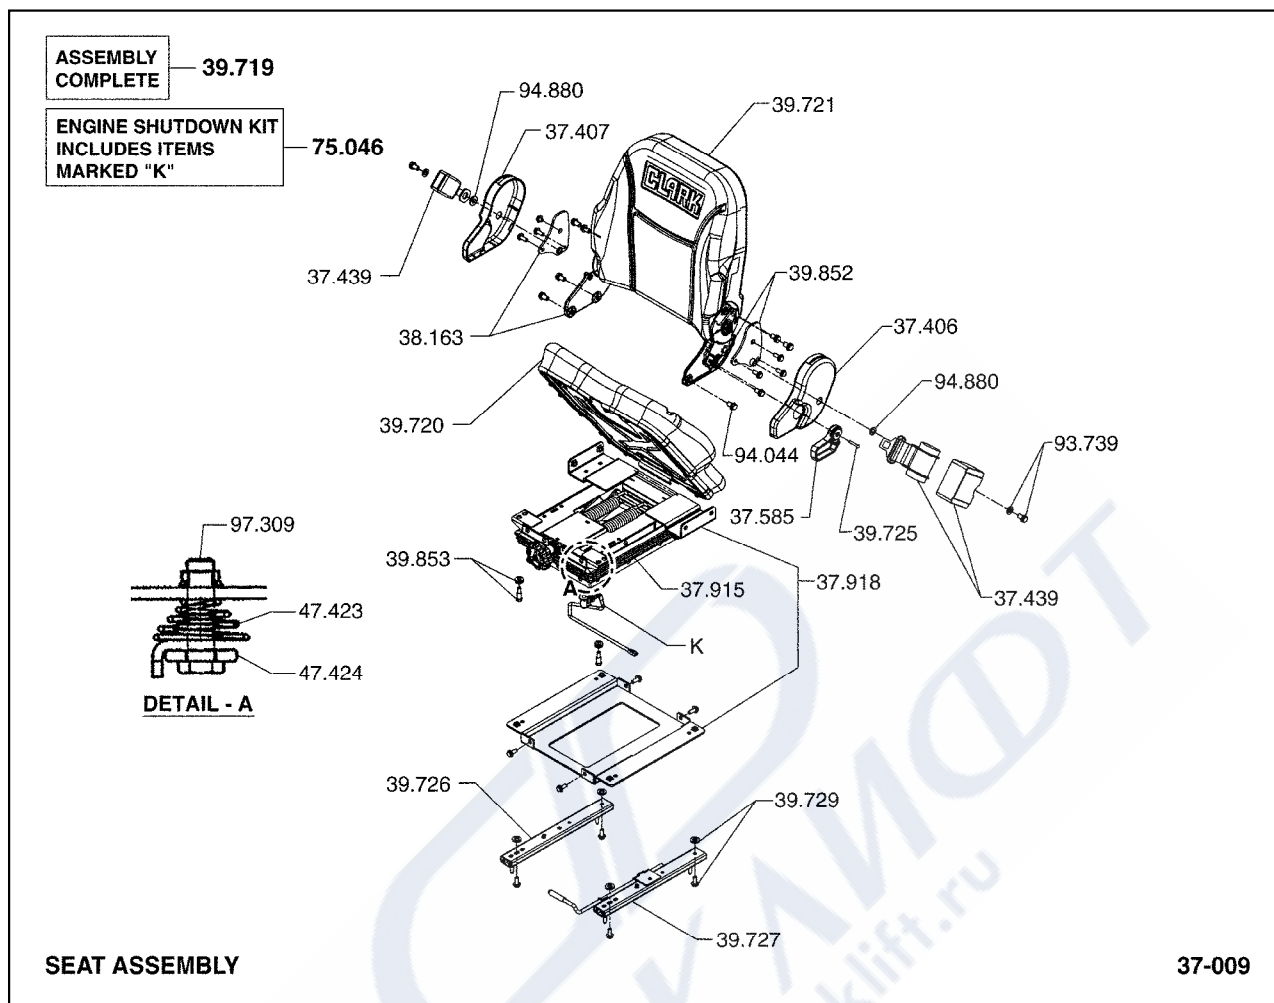

37.406	BRACKET, SEAT BACK REST COVER LH 브라켓
37.407	BRACKET, SEAT BACK REST COVER RH 브라켓
37.439	SAFETY BELT, SEAT 안전벨트
37.585	KNOB, SEAT BACK REST CUSHION ADJUSTOR 노브
37.915	SUSPENSION COVER, SEAT SUSPENSION 서스펜션커버
37.918	SUSPENSION ASSEMBLY, SEAT 서스펜션
38.163	BRACKET, SEAT SUPPORT RH 브라켓
39.719	SEAT ASSEMBLY 시트
39.720	CUSHION, SEAT 쿠션

39.721	CUSHION, SEAT BACK REST 쿠션
39.725	FASTENER, SEAT BACK REST CLIP TO FRAME 패스너
39.726	ADJUSTOR, SEAT 어드저스터
39.727	ADJUSTOR, SEAT WITH LATCH 어드저스터
39.729	FASTENER, ADJUSTOR TO SEAT SUPPORT 패스너
39.852	BRACKET, SEAT SUPPORT LH 브라켓
39.853	FASTENER, SEAT SUPPORT BRACKET 패스너
47.423	SPRING, SEAT SWITCH 스프링
47.424	GROMMET, SEAT SWITCH SPRING 그로멧
75.046	KIT, SEAT ACTUATED ENGINE SHUTDOWN 키트
93.739	FASTENER, SAFETY BELT ASSEMBLY 패스너
94.044	FASTENER, SEAT CUSHION MOUNTING PLATE 패스너
94.880	FASTENER, SEAT SUPPORT CATCH BRACKET 패스너
97.309	FASTENER, SEAT SWITCH SPRING 패스너

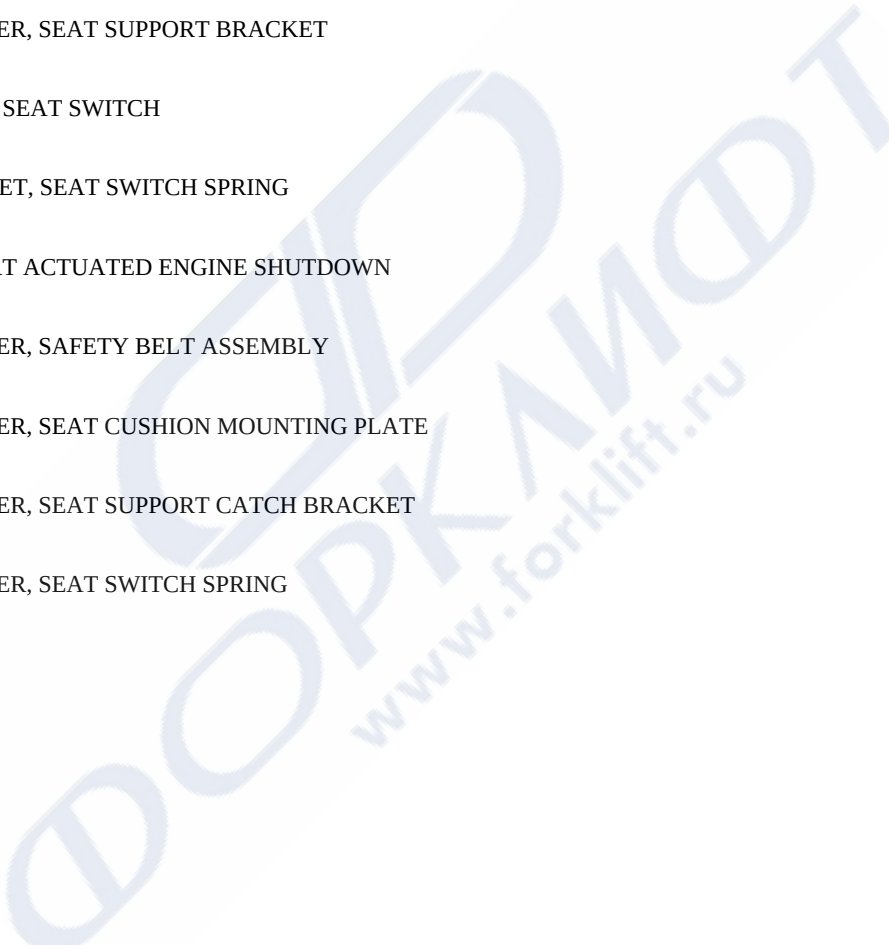 


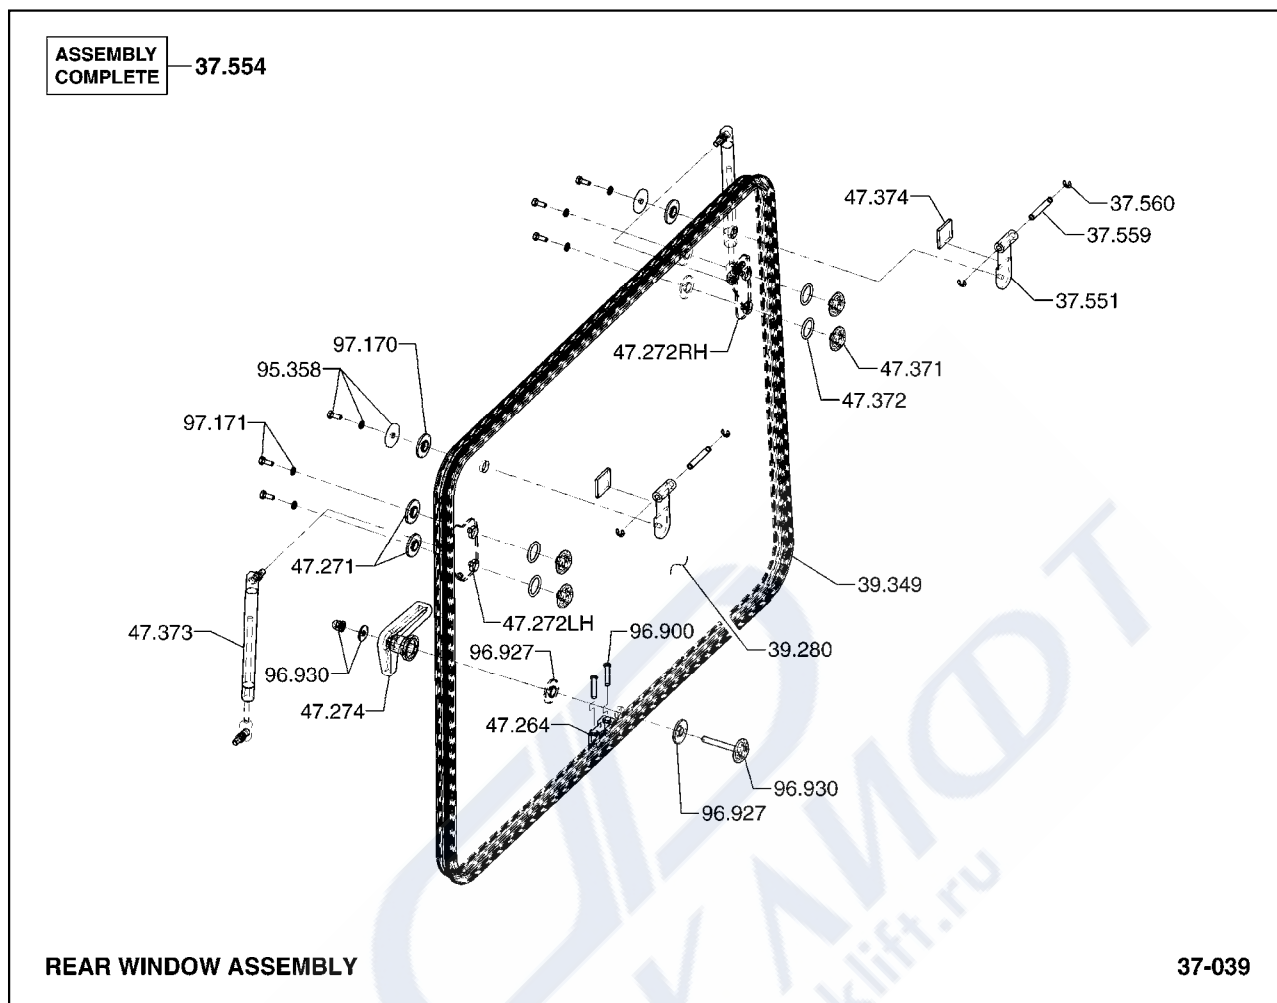 


37.551	HANGER, CAB REAR GLASS 행거
37.554	REAR GLASS COMPLETE, CABIN 리어글래스
37.559	PIN, CABIN REAR GLASS HANGER 핀
37.560	RETAINER, CAB REAR GLASS HANGER PIN 리테이너
39.280	GLASS, REAR WINDOW - MOVEABLE 글래스
39.349	WEATHERSEAL, CAB REAR WINDOW 웨더셀
47.264	GRIP, CAB REAR HANDLE 그립
47.271	RUBBER, CAB REAR GLASS GAS SPRING MOUNTING 리버
47.272	BRACKET, CAB REAR GLASS GAS SPRING MOUNTING 브라켓

47.274	HANDLE, CAB REAR GLASS 핸들
47.371	CAP, CAB REAR GLASS GAS SPRING MOUNTING FASTENER 캡
47.372	SEAL, CAB REAR GLASS GAS SPRING MOUNTING FASTENER 씰
47.373	SHOCK ABSORBER, CAB REAR GLASS 쇼브업쇼버
47.374	RUBBER, CAB REAR GLASS HANGER 러버
95.358	FASTENER, REAR GLASS HANGER 패스너
96.900	FASTENER, CAB REAR HANDLE GRIP 패스너
96.927	RUBBERWASHER, REAR GLASS HANDLE FASTENER 러버와셔
96.930	FASTENER, REAR GLASS HANDLE 패스너
97.170	RUBBERWASHER, REAR GLASS HANGER FASTENER 러버와셔
97.171	FASTENER, CAB REAR GLASS GAS SPRING MOUNTING 패스너



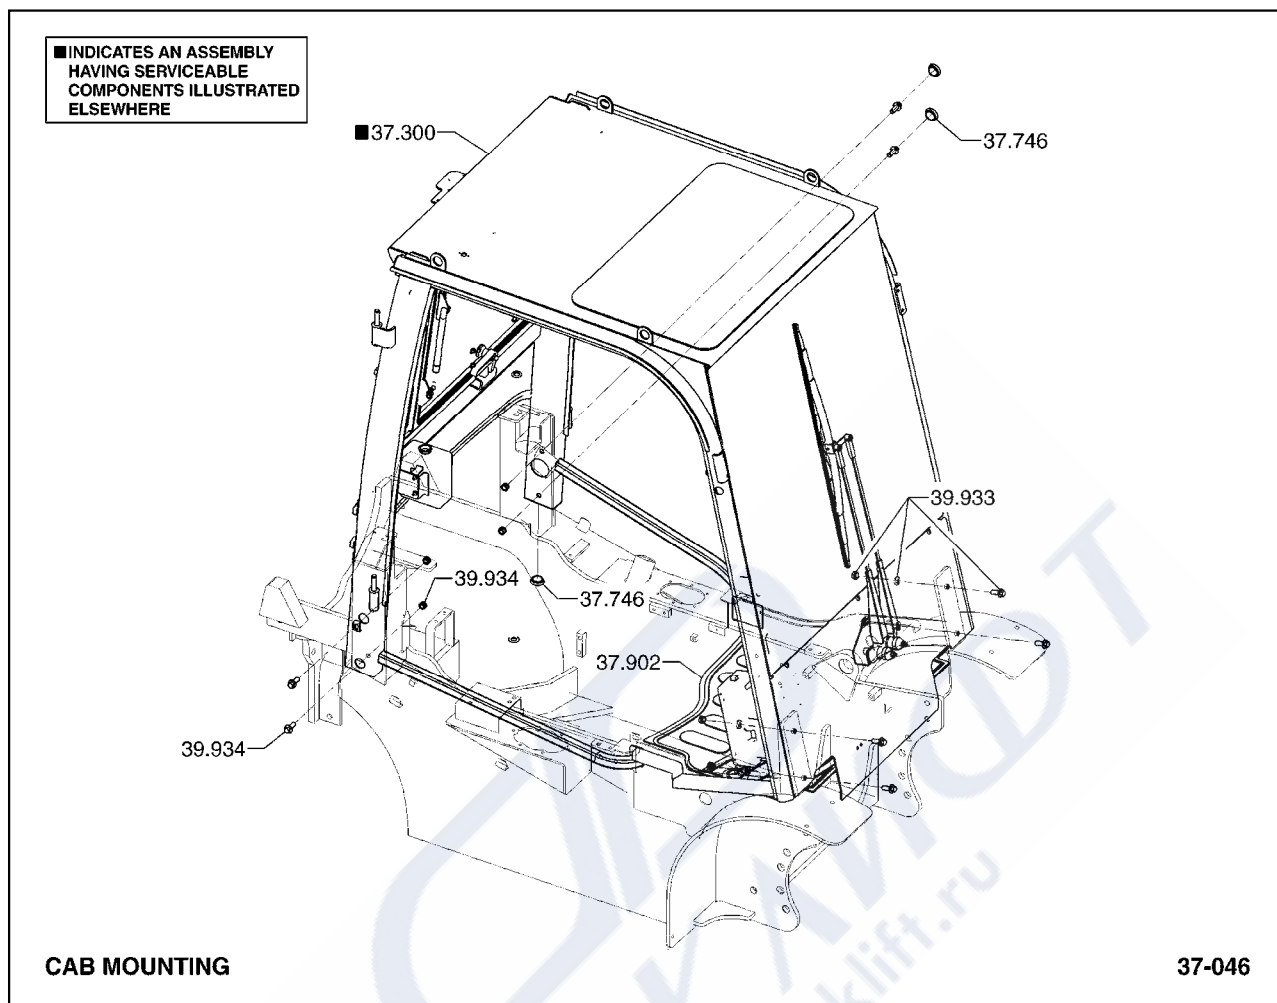 


37.300	CAB ASSEMBLY 캐빈
37.746	PLUG, DRIVER OVERHEAD GUARD 플러그
37.902	MAT, FLOORPLATE 매트
39.933	FASTENER, OVERHEAD GUARD 패스너
39.934	FASTENER, OVERHEAD GUARD 패스너

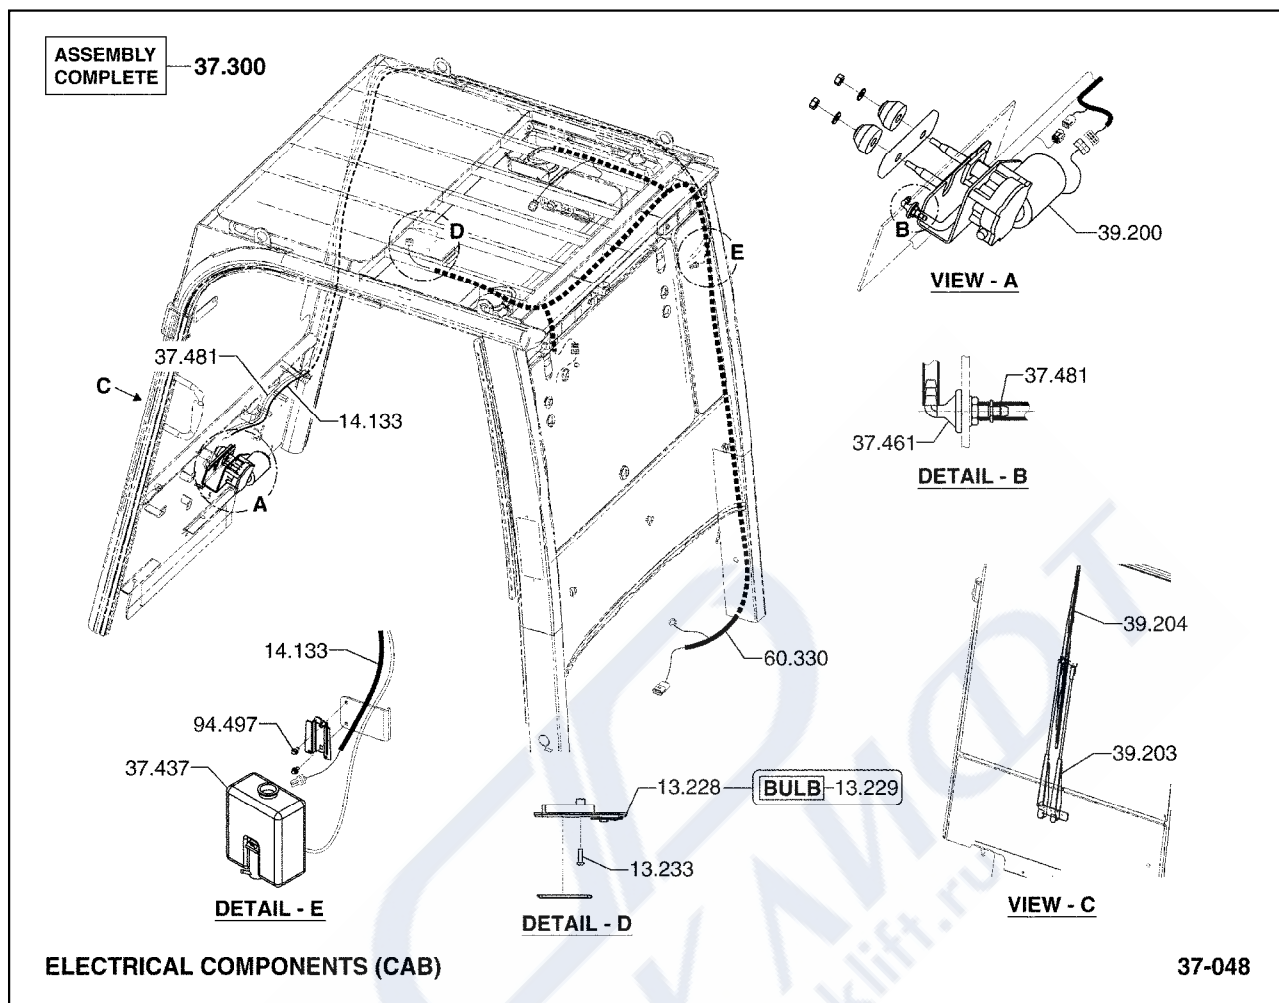 

13.228	LAMP ASSEMBLY, DOME 램프
13.229	BULB, DOME LAMP 전구
13.233	FASTENER, DOME LAMP 패스너
14.133	WIRE, WIPER MOTOR 와이어
37.300	CAB ASSEMBLY 캐빈
37.437	PUMP & TANK, WINDSHIELD WASHER 펌프& 탱크
37.461	NOZZLE, WINDSHIELD GLASS WASHER 노즐
37.481	LINE, WINDOW GLASS WASHER 라인
39.200	MOTOR, WINDSHIELD WIPER 모터


39.203	ARM, WINDSHIELD WIPER 암
39.204	BLADE, WINDSHIELD WIPER 블레이드
60.330	WIRING HARNESS, CAB 와이어하네스
94.497	FASTENER, WINDSHIELD WASHER TANK 패스너

 ФОРКЛИФТ
www.forklift.ru

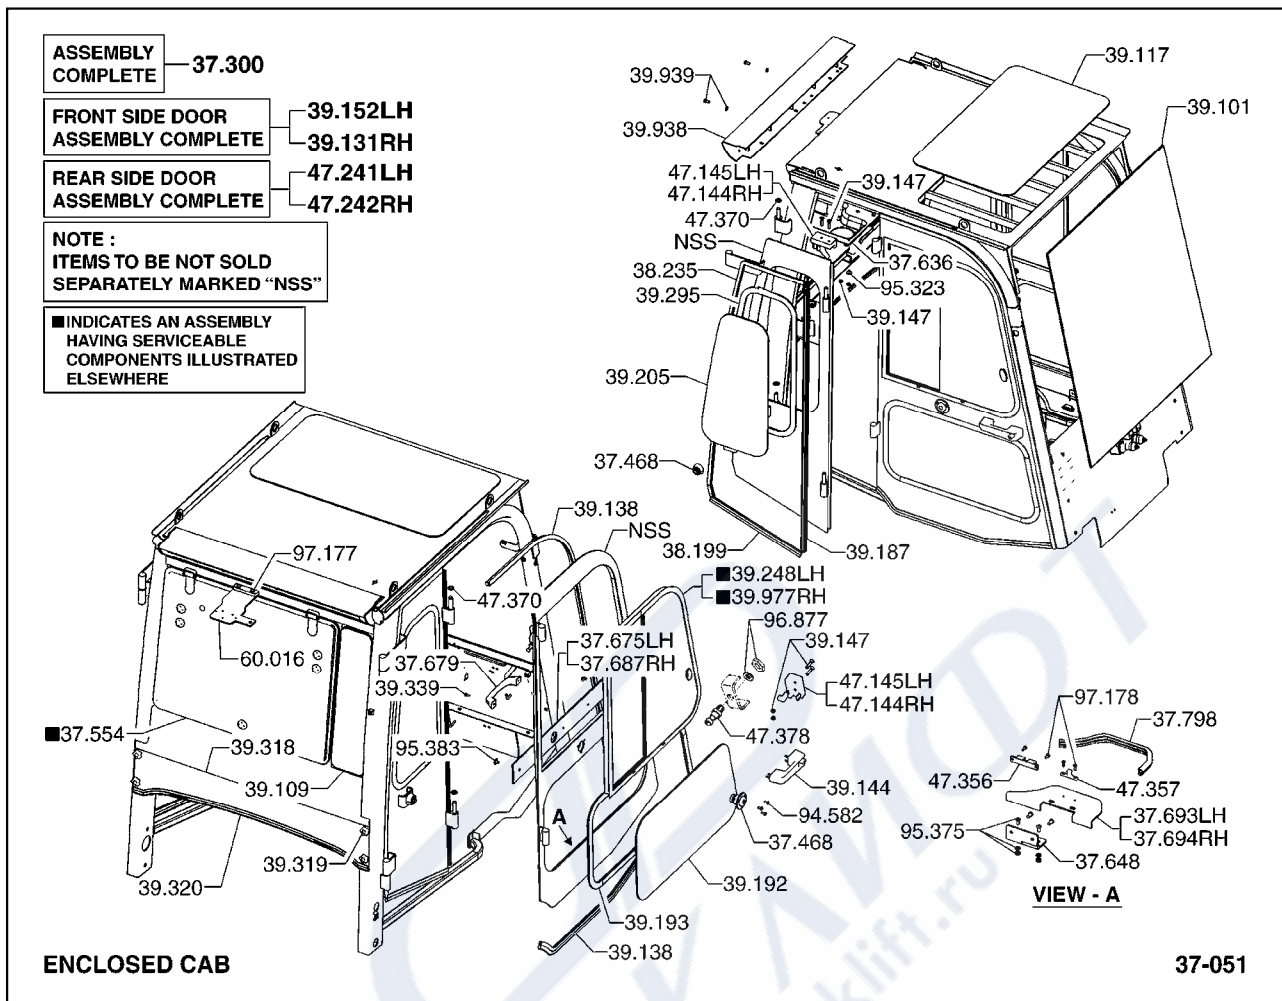


37.300	CAB ASSEMBLY 캐빈	39.117	ROOF SCREEN 루프스크린
37.468	CATCH, CAB DOOR LATCH 캐치	39.131	DOOR ASSEMBLY, RIGHT HAND 도어
37.554	REAR GLASS COMPLETE, CABIN 리어글래스	39.138	WEATHERSEAL, RIGHT HAND DOOR 웨더셀
37.636	COVERING, CAB INSIDE ROOF 커버링	39.144	HANDLE, RH DOOR OUTSIDE 핸들
37.648	SUPPORT, CAB HOLD DOWN LATCH 서포트	39.147	FASTENER, RIGHT HAND DOOR LATCH 패스너
37.675	COVER, CAB DOOR INSIDE LEFT 커버	39.152	DOOR ASSEMBLY, LEFT HAND 도어
37.679	HANDLE, RH DOOR INSIDE 핸들	39.187	SEAL, DOOR HINGE 셀
37.687	COVER, CAB DOOR INSIDE RIGHT 커버	39.192	GLASS, RIGHT HAND DOOR (LOWER) 글래스
37.693	COVER, DOOR INSIDE LATCH LH 커버	39.193	WEATHERSEAL, RH DOOR GLASS (LOWER) 웨더셀
37.694	COVER, DOOR INSIDE LATCH RH 커버	39.205	GLASS, RH DOOR REAR 글래스
37.798	SEAL, CAB DOOR INSIDE COVER 셀	39.248	WINDOW ASSEMBLY, CAB DOOR (LH) 윈도우
38.199	WEATHERSEAL, REAR DOOR (RH) 웨더셀	39.295	WEATHERSEAL, DOOR REAR GLASS 웨더셀
38.235	WEATHERSEAL, REAR DOOR 웨더셀	39.318	PANEL, REAR LOWER 판널
39.101	GLASS, WINDSHIELD 글래스	39.319	FASTENER, LOWER REAR PANEL 패스너
39.109	GLASS, REAR 글래스	39.320	SEAL STRIP, REAR PANEL LOWER 셀스트립

39.339	FASTENER, RH DOOR INSIDE HANDLE 패스너
39.938	BRACKET, OVERHEAD GUARD REAR SUPPORT 브라켓
39.939	FASTENER, OVERHEAD GUARD REAR SUPPORT BRACKET 패스너
39.977	WINDOW ASSEMBLY, CAB DOOR (RH) 윈도우
47.144	LATCH, RH DOOR INSIDE 래치
47.145	LATCH, LH DOOR INSIDE 래치
47.241	DOOR ASSY, CAB REAR (RH) 도어
47.242	DOOR ASSY, CAB REAR (LH) 도어
47.356	CATCH, CAB DOOR LOWER 캐치
47.357	CATCH, CAB DOOR LOWER 캐치
47.370	SPACER, CAB DOOR HINGE 스페이서
47.378	SUPPORT, CAB DOOR INSIDE LATCH 서포트
60.016	SUPPORT, WARNING LAMP 서포트
94.582	FASTENER, CAB DOOR LATCH CATCH 패스너
95.323	FASTENER, CAB INSIDE ROOF COVERING 패스너
95.375	FASTENER, DOOR INSIDE COVER 패스너
95.383	FASTENER, DOOR INSIDE LATCH COVER 패스너
96.877	FASTENER, DOOR INSIDE LATCH STRIKER 패스너
97.177	FASTENER, WARNING LAMP SUPPORT 패스너
97.178	FASTENER, CAB DOOR LOWER CATCH 패스너

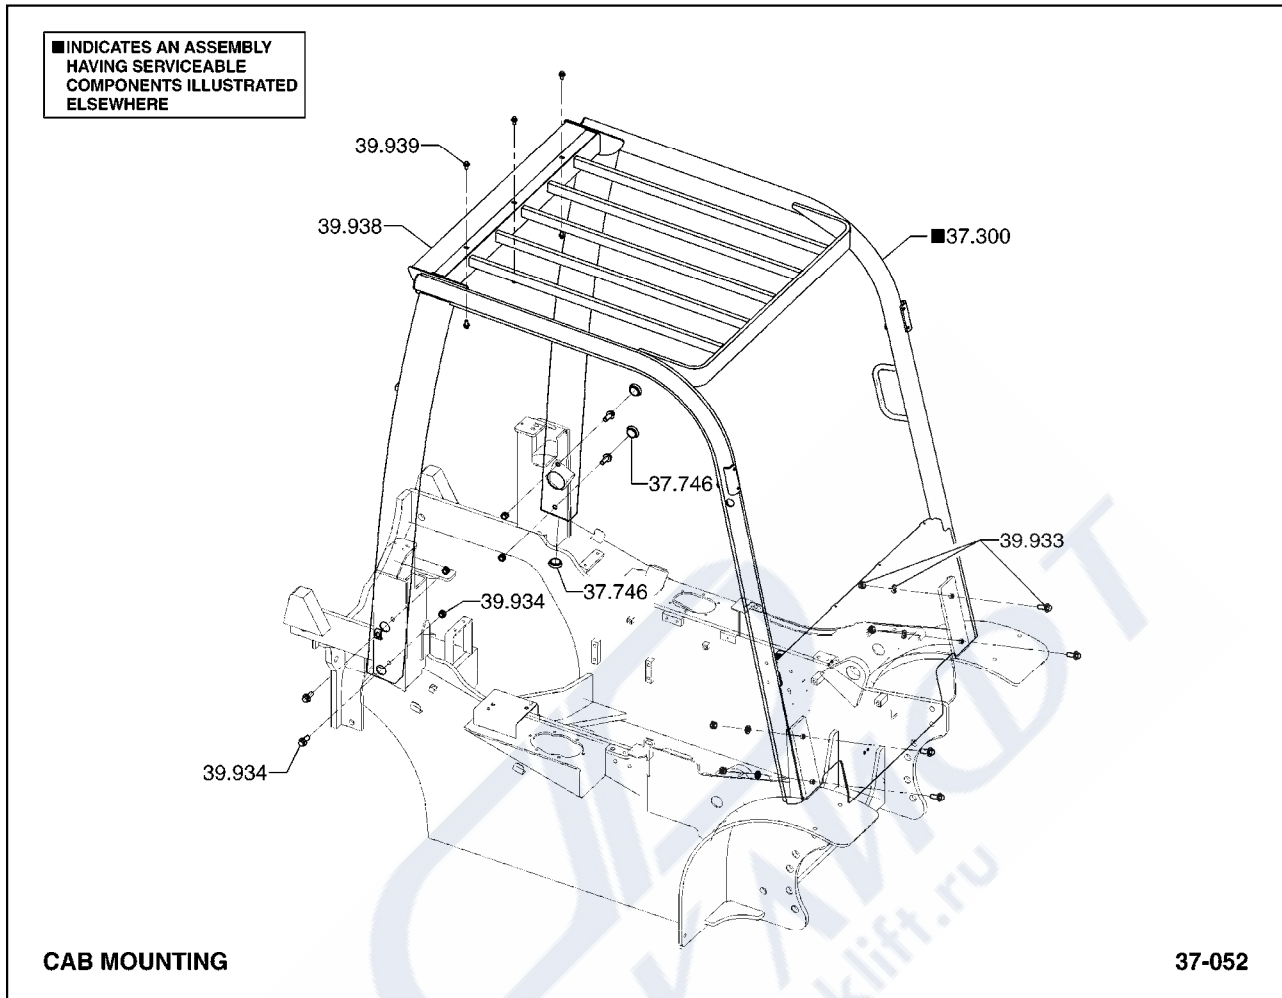 


37.300	CAB ASSEMBLY 캐빈
37.746	PLUG, DRIVER OVERHEAD GUARD 플러그
39.933	FASTENER, OVERHEAD GUARD 패스너
39.934	FASTENER, OVERHEAD GUARD 패스너
39.938	BRACKET, OVERHEAD GUARD REAR SUPPORT 브라켓
39.939	FASTENER, OVERHEAD GUARD REAR SUPPORT BRACKET 패스너

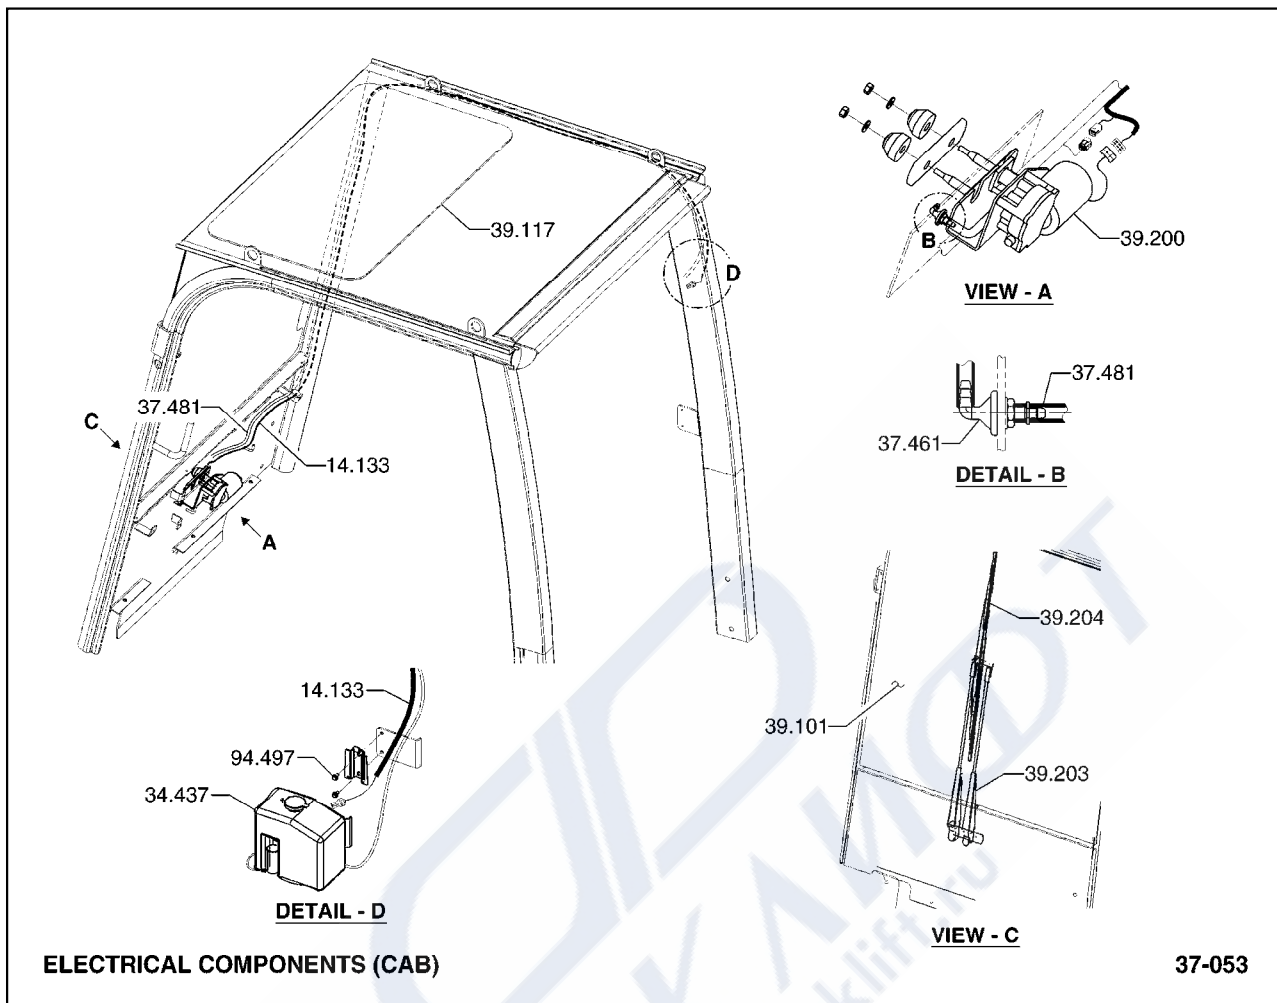 

14.133	WIRE, WIPER MOTOR 와이어
34.437	SEAL, LIFT CYLINDER BASE 씰
37.461	NOZZLE, WINDSHIELD GLASS WASHER 노즐
37.481	LINE, WINDOW GLASS WASHER 라인
39.101	GLASS, WINDSHIELD 글래스
39.117	ROOF SCREEN 루프스크린
39.200	MOTOR, WINDSHIELD WIPER 모터
39.203	ARM, WINDSHIELD WIPER 암
39.204	BLADE, WINDSHIELD WIPER 블레이드

94.497 FASTENER, WINDSHIELD WASHER TANK
패스너

 
ФОРКЛИФТ
www.forklift.ru

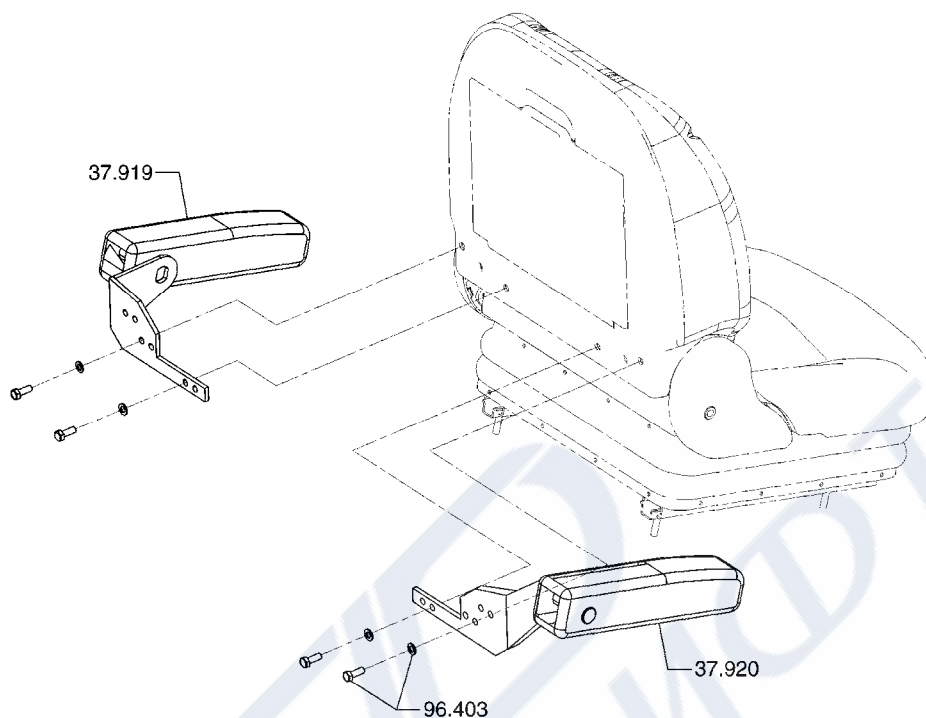


SEAT ARMREST ASSEMBLY

37-124



- | | |
|--------|---------------------------------------|
| 37.919 | ARMREST LH, SEAT
암레스트 |
| 37.920 | ARMREST RH, SEAT
암레스트 |
| 96.403 | FASTENER, SEAT ARMREST BRACKET
패스너 |

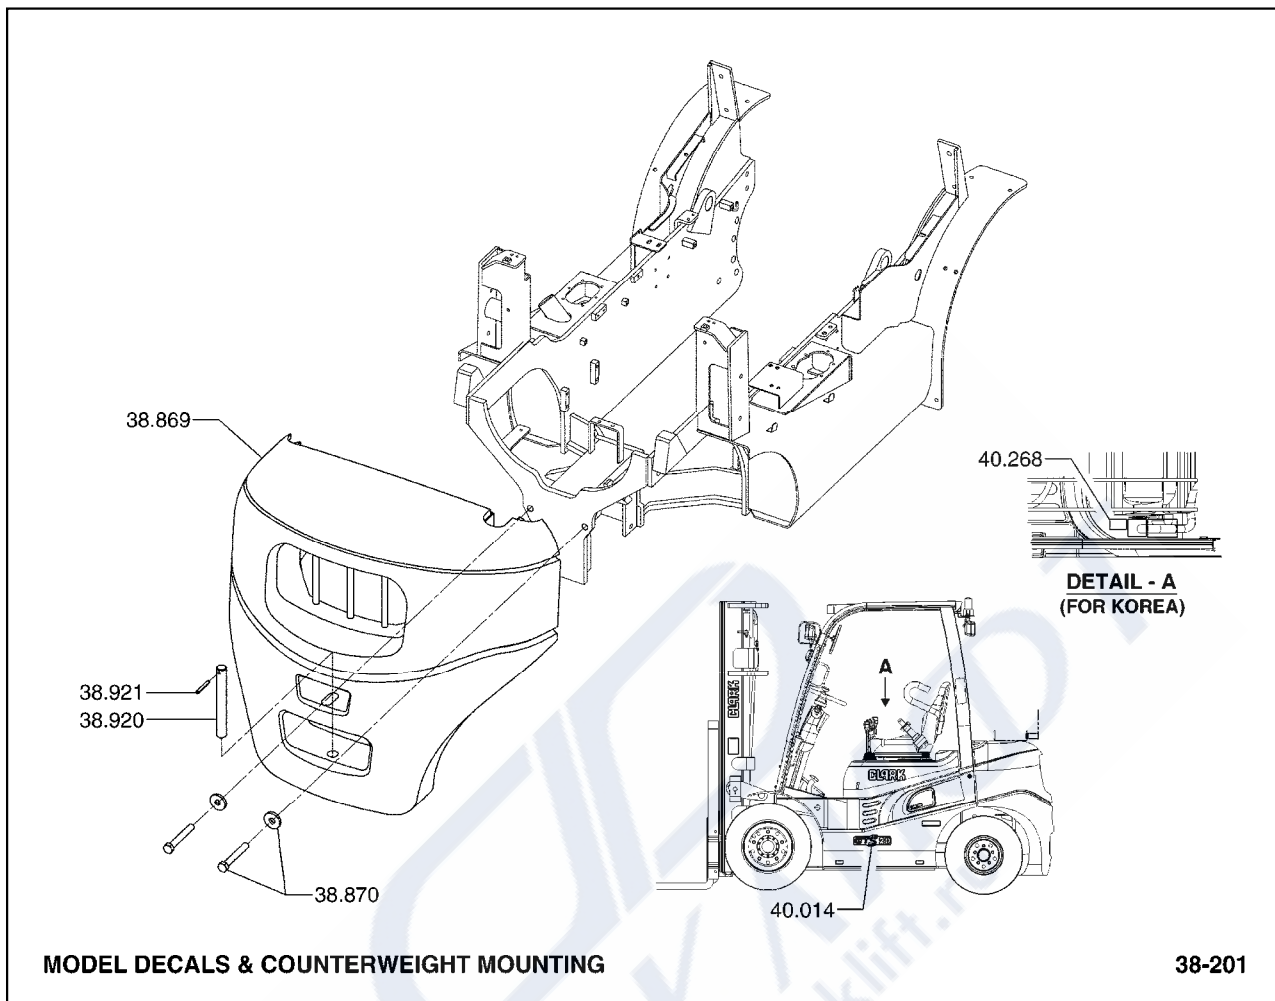 

38.869	COUNTERWEIGHT 카운터웨이트
38.870	FASTENER, COUNTERWEIGHT (LOWER) 패스너
38.920	PIN, COUPLER 핀
38.921	PIN, COUPLER PIN CROSS 핀
40.014	DECAL, MODEL NAME 데칼
40.268	DECAL, SPEC 데칼

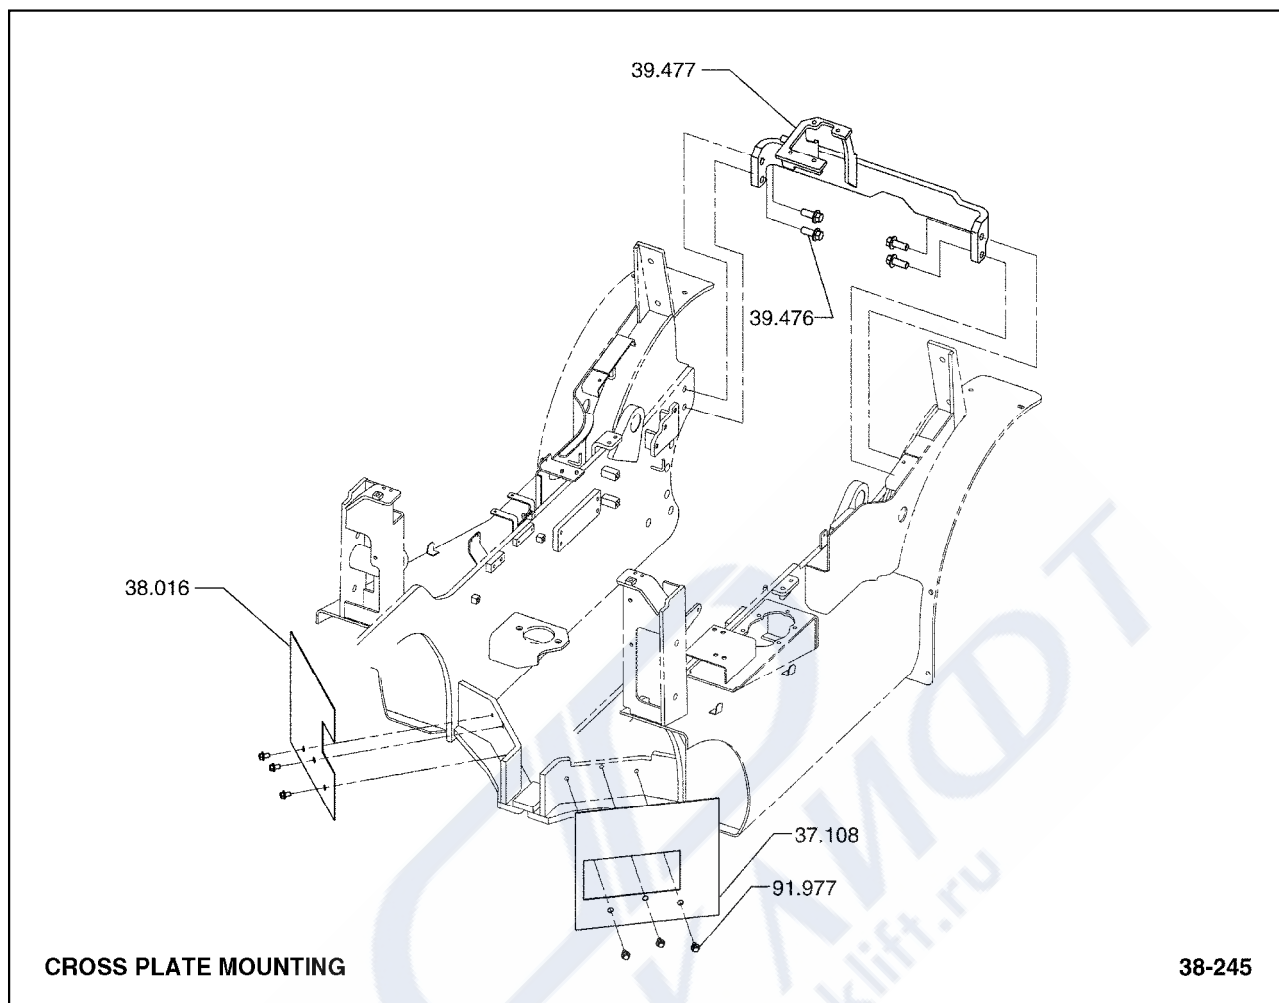 


37.108	SHIELD, RH REAR 실드
38.016	SHIELD, LH REAR 실드
39.476	FASTENER, CENTER FLOOR PLATE 패스너
39.477	PLATE, CENTER FLOOR 플레이트
91.977	FASTENER, REAR SHIELD 패스너

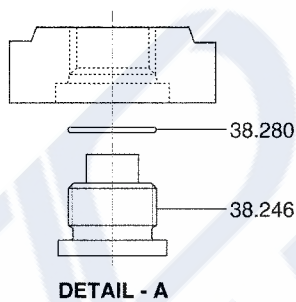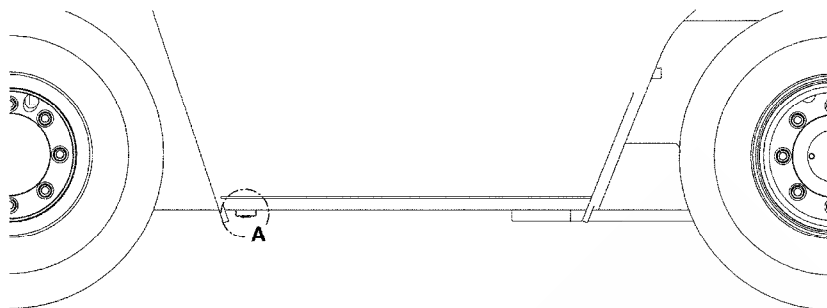  


FRAME TANK BOTTOM PLUG

38-270

- | | |
|--------|---------------------------------------|
| 38.246 | PLUG, FRAME BOTTOM MAGNETIC
플러그 |
| 38.280 | SEAL, FRAME BOTTOM MAGNETIC PLUG
씰 |

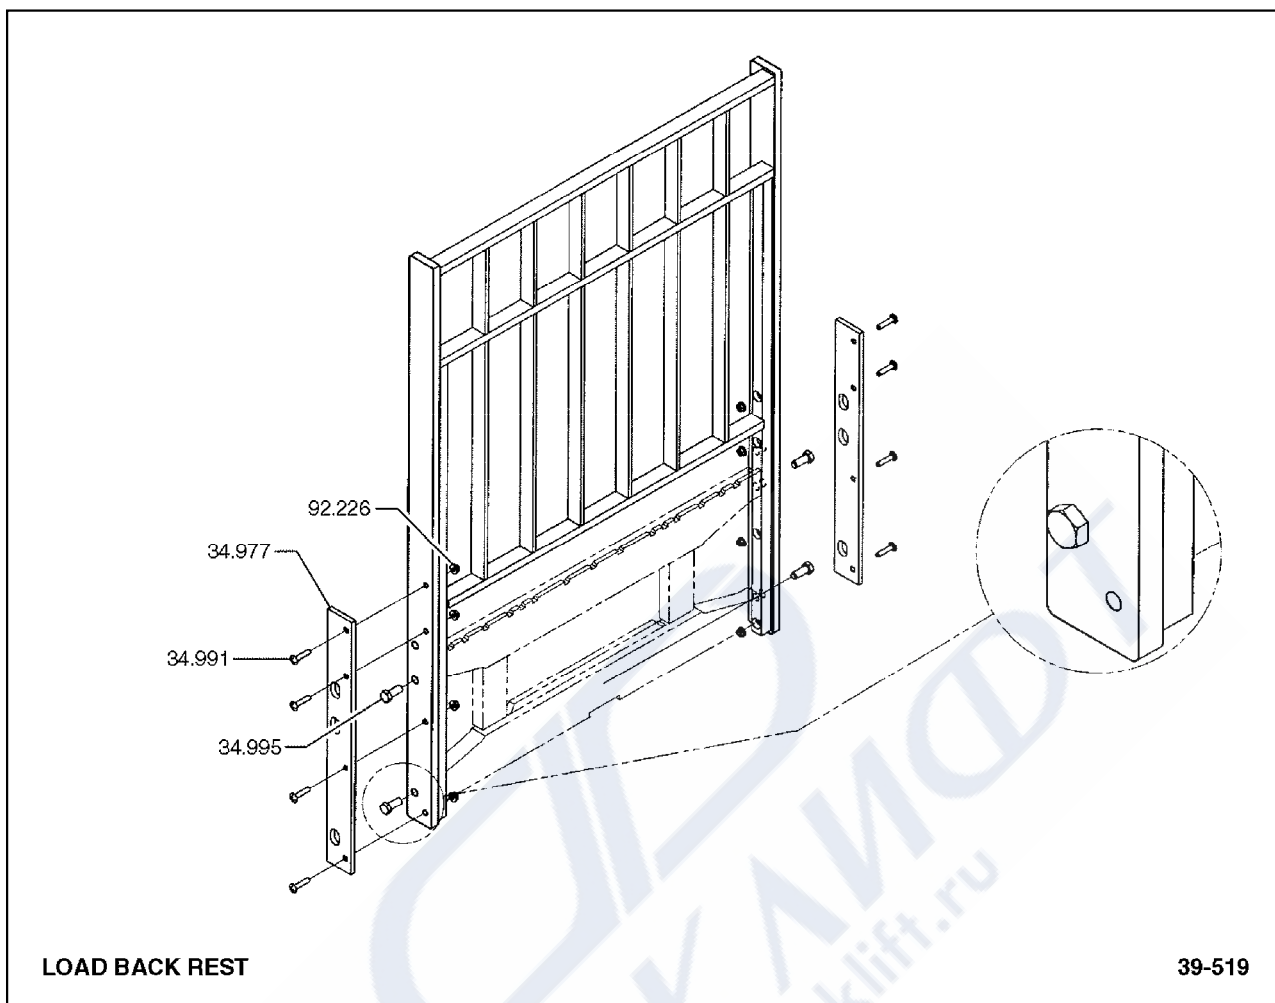 


- | | |
|--------|---|
| 34.977 | RETAINER, LOAD BACK REST TRUNNION PIN
리테이너 |
| 34.991 | FASTENER, LOAD SAFETY BACK REST EXT
패스너 |
| 34.995 | FASTENER, LOAD SAFETY BACK REST
패스너 |
| 92.226 | NUT, LOAD SAFETY BACK REST FASTENER
너트 |

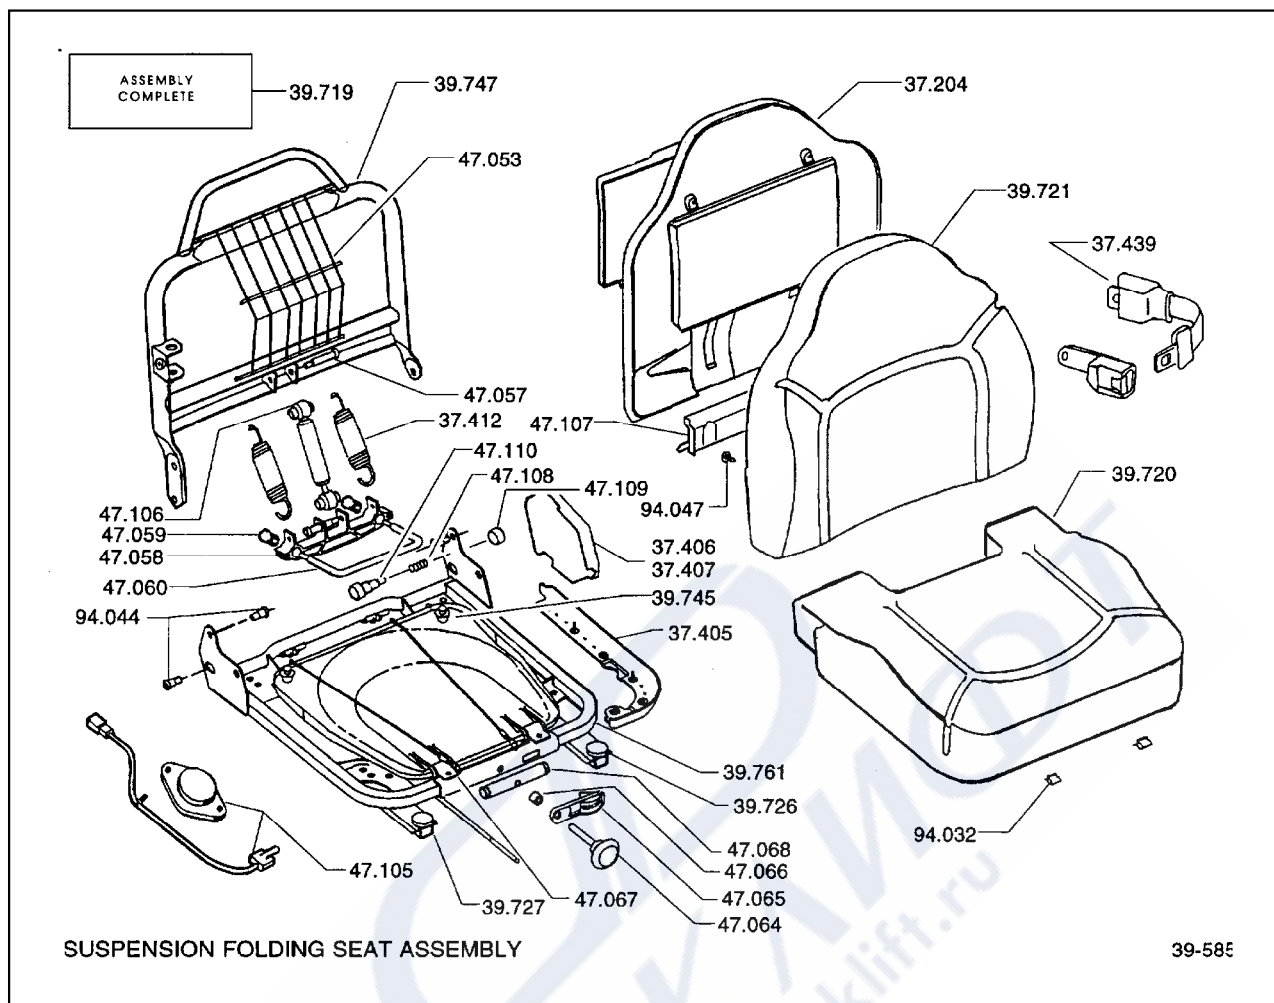 


37.204	COVER, SEAT BACK REST CUSHION 커버	47.057	PIN, BACK FRAME SHOCK 핀
37.405	TRIM, SEAT MOUNTING PLATE 트림	47.058	SADDLE SPRING, SPRING ARM 새들스프링
37.406	BRACKET, SEAT BACK REST COVER LH 브라켓	47.059	SADDLE BUSHING, SPRING ARM 새들부싱
37.407	BRACKET, SEAT BACK REST COVER RH 브라켓	47.060	SPRING ARM, SUSPENSION SEAT 스프링암
37.412	SPRING, SEAT SUSPENSION TENSION 스프링	47.064	KNOB, SEAT ASSEMBLY WEIGHT ADJUSTER 노브
37.439	SAFETY BELT, SEAT 안전벨트	47.065	WEIGHT INDICATOR ASSEMBLY 웨이트인디케이터
39.719	SEAT ASSEMBLY 시트	47.066	SPACER, SEAT ASSEMBLY WEIGHT ADJUST SCREW 스페이서
39.720	CUSHION, SEAT 쿠션	47.067	CLIP, FRONT SEAT FRAME 클립
39.721	CUSHION, SEAT BACK REST 쿠션	47.068	BAR, WEIGHT ADJUSTER 바
39.726	ADJUSTOR, SEAT 어드저스터	47.105	SWITCH KIT, SEAT 스위치키트
39.727	ADJUSTOR, SEAT WITH LATCH 어드저스터	47.106	SHOCK ABSORBER, SUSPENSION SEAT 쇼크업쇼버
39.745	BUMPER, SEAT SUPPORT 범퍼	47.107	COVER, MECHANISM 커버
39.747	PLATE, SEAT BACK REST CUSHION MOUNTING 플레이트	47.108	SPRING, SEAT ASSEMBLY PLUNGER 스프링
39.761	PLATE, SEAT CUSHION MOUNTING 플레이트	47.109	KNOB, FOLD DOWN SEAT 노브
47.053	LUMBAR FLEXOLATOR 롬바	47.110	PLUNGER, FOLD DOWN SEAT 플런저

94.032	RETAINER, SEAT FRAME 리테이너
94.044	FASTENER, SEAT CUSHION MOUNTING PLATE 패스너
94.047	FASTENER, SEAT BACK REST CUSHION 패스너



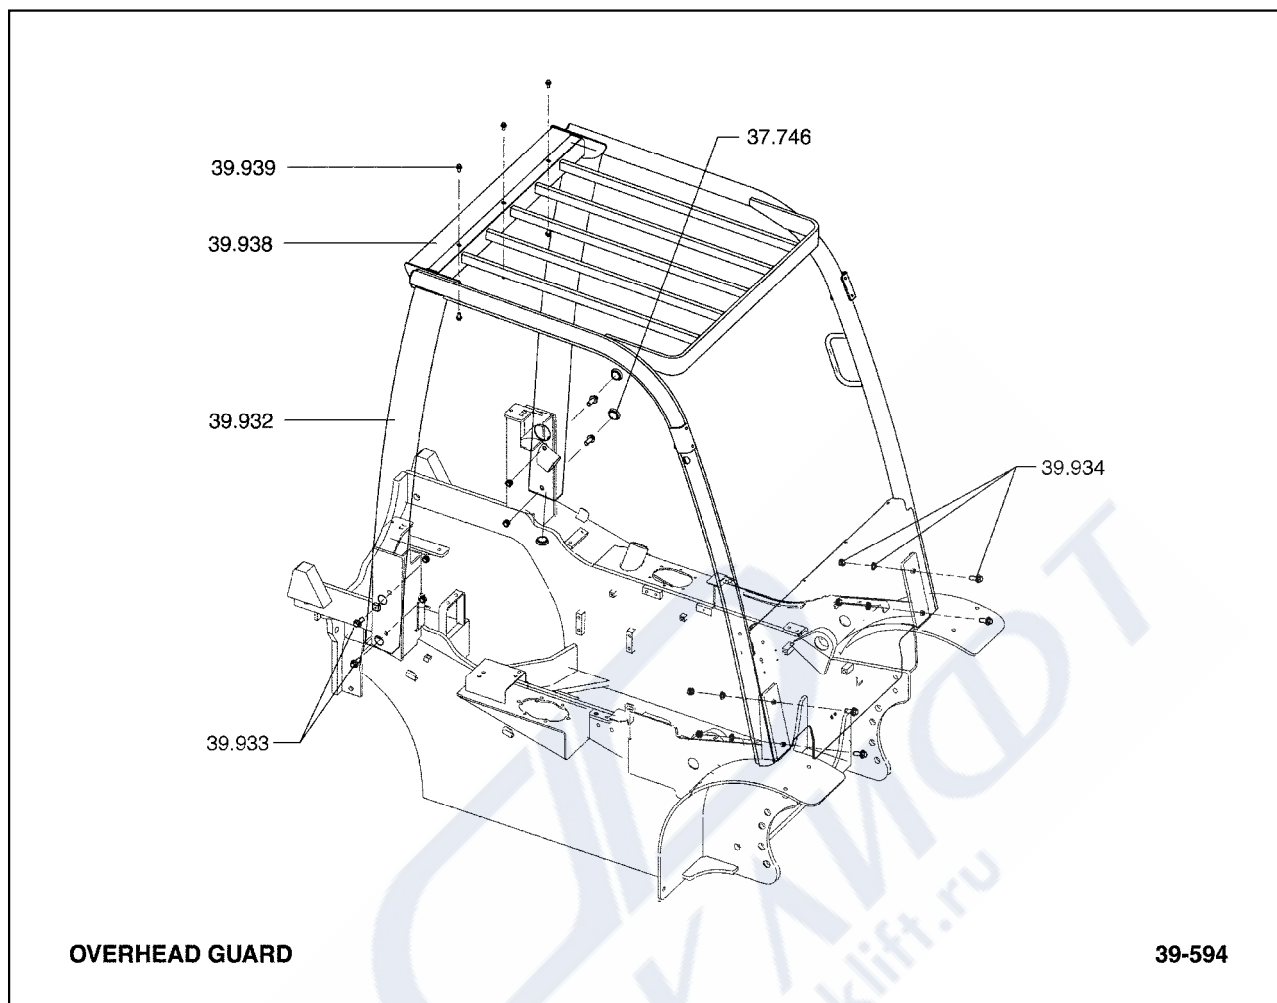 


37.746	PLUG, DRIVER OVERHEAD GUARD 플러그
39.932	GUARD, OVERHEAD 가드
39.933	FASTENER, OVERHEAD GUARD 패스너
39.934	FASTENER, OVERHEAD GUARD 패스너
39.938	BRACKET, OVERHEAD GUARD REAR SUPPORT 브라켓
39.939	FASTENER, OVERHEAD GUARD REAR SUPPORT BRACKET 패스너

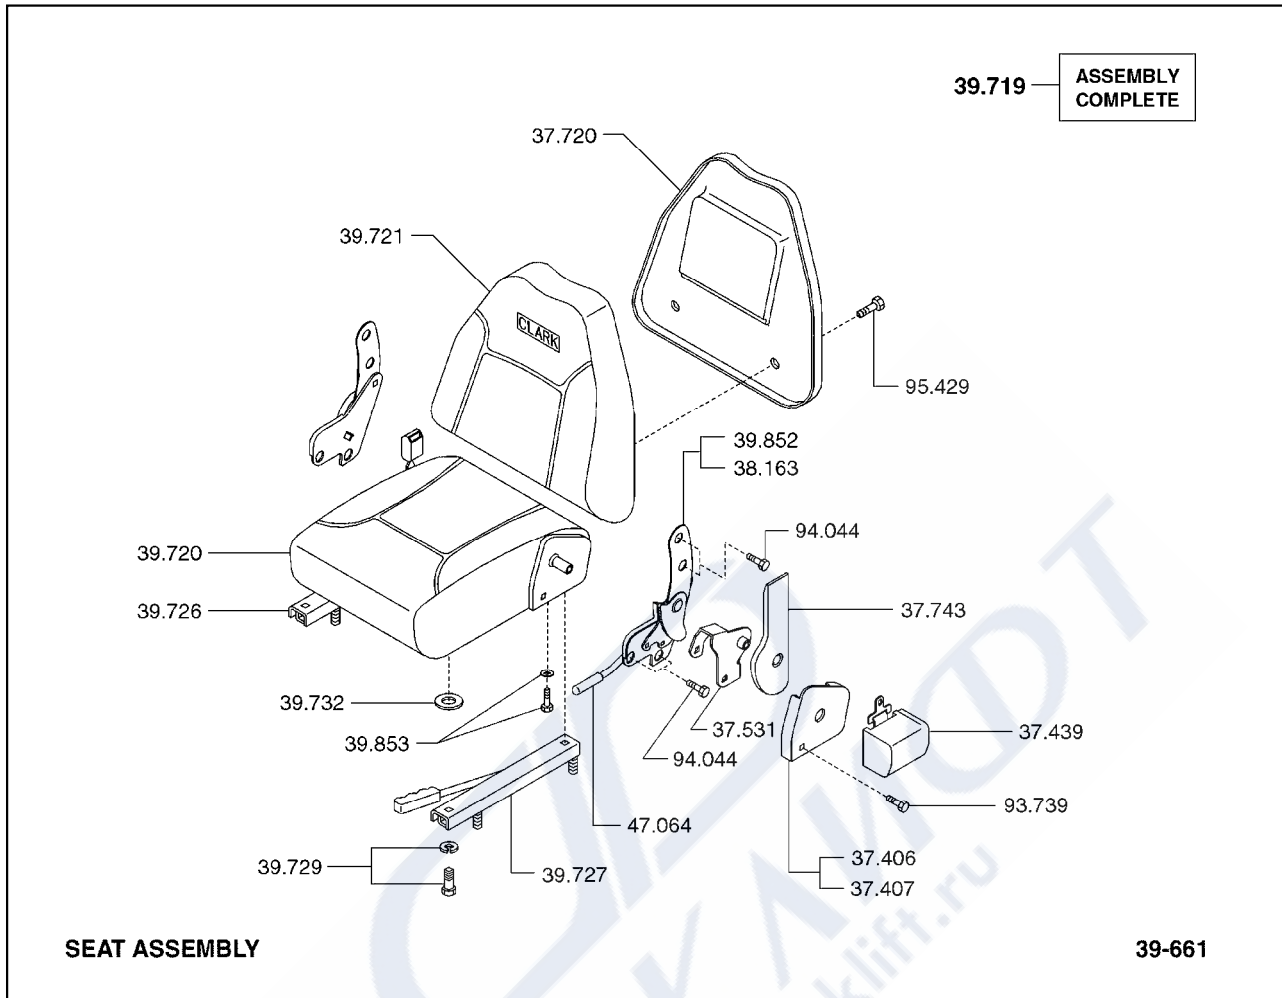 


37.406	BRACKET, SEAT BACK REST COVER LH 브라켓
37.407	BRACKET, SEAT BACK REST COVER RH 브라켓
37.439	SAFETY BELT, SEAT 안전벨트
37.531	BRACKET, SEAT SAFETY BELT MOUNTING 브라켓
37.720	COVER, OPERATOR SEAT LATERAL RESTRAINT 커버
37.743	COVER, SEAT SUPPORT LATCH 커버
38.163	BRACKET, SEAT SUPPORT RH 브라켓
39.719	SEAT ASSEMBLY 시트
39.720	CUSHION, SEAT 쿠션

39.721	CUSHION, SEAT BACK REST 쿠션
39.726	ADJUSTOR, SEAT 어드저스터
39.727	ADJUSTOR, SEAT WITH LATCH 어드저스터
39.729	FASTENER, ADJUSTOR TO SEAT SUPPORT 패스너
39.732	SPACER, SEAT FRAME TO ADJUSTOR 스페이서
39.852	BRACKET, SEAT SUPPORT LH 브라켓
39.853	FASTENER, SEAT SUPPORT BRACKET 패스너
47.064	KNOB, SEAT ASSEMBLY WEIGHT ADJUSTER 노브
93.739	FASTENER, SAFETY BELT ASSEMBLY 패스너
94.044	FASTENER, SEAT CUSHION MOUNTING PLATE 패스너
95.429	FASTENER, SEAT LATERAL RESTRAINT COVER 패스너

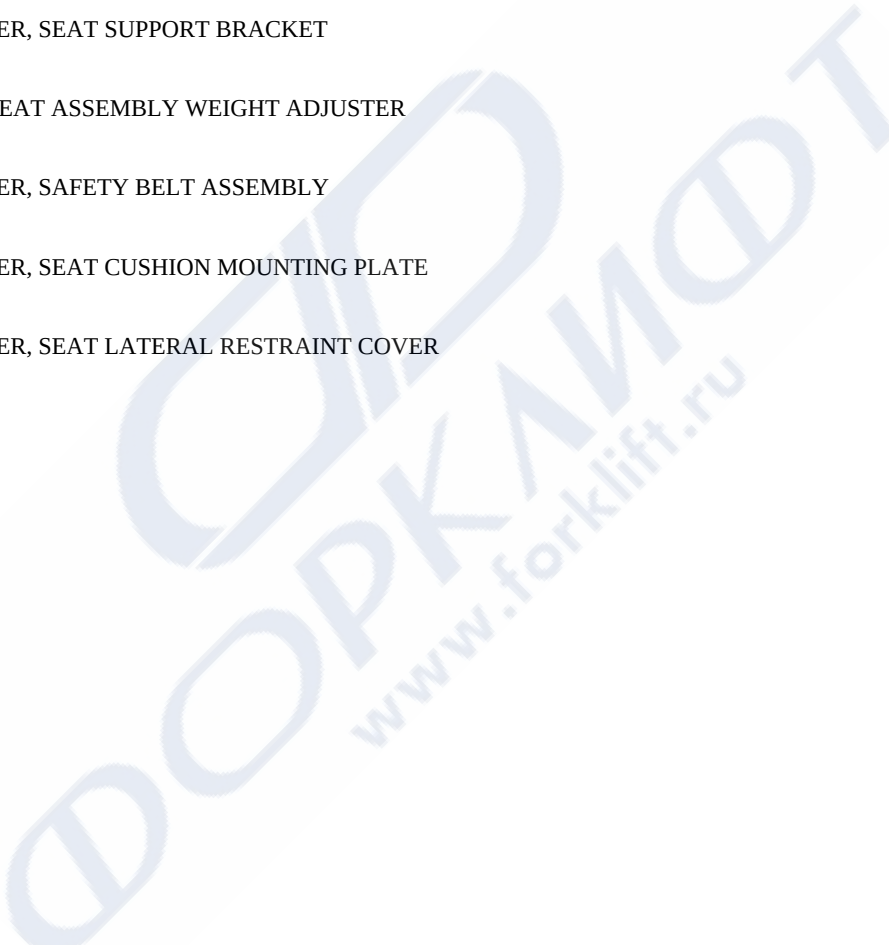 

 
■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

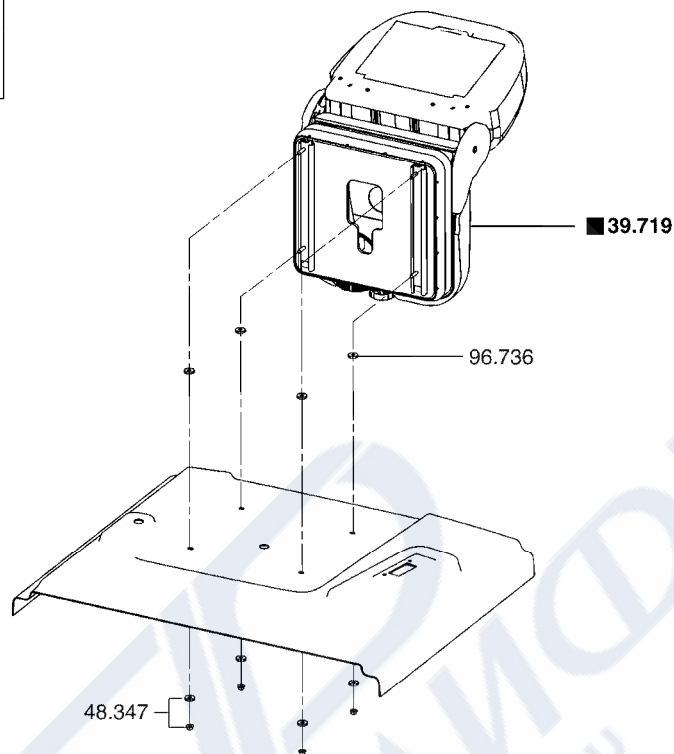

SEAT MOUNTING


39-829

39.719	SEAT ASSEMBLY 시트
48.347	FASTENER, SEAT ASSEMBLY 패스너
96.736	WASHER, SEAT ASSEMBLY FASTENER 와셔

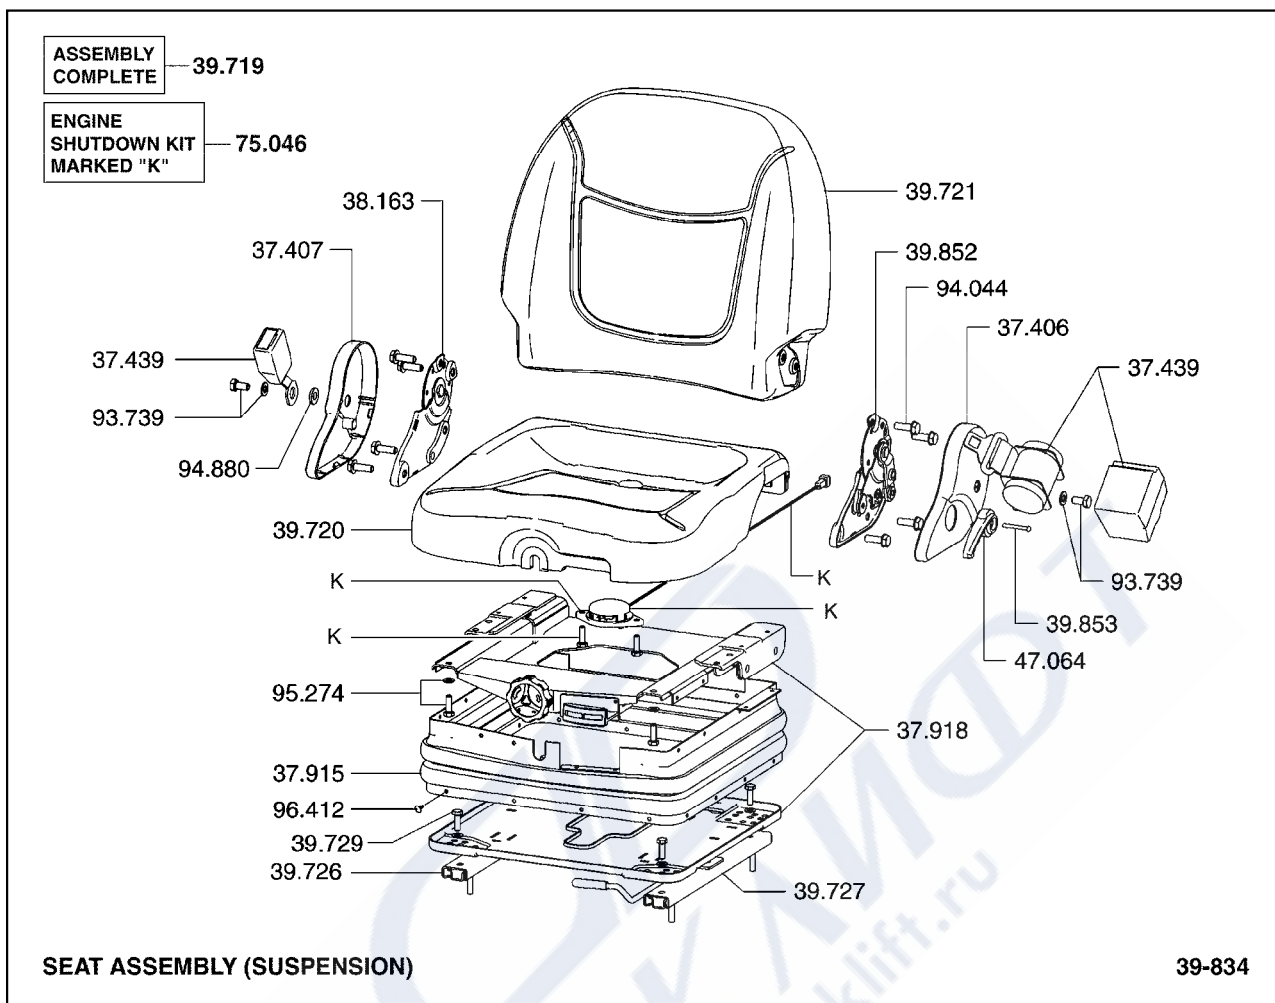 


37.406	BRACKET, SEAT BACK REST COVER LH 브라켓
37.407	BRACKET, SEAT BACK REST COVER RH 브라켓
37.439	SAFETY BELT, SEAT 안전벨트
37.915	SUSPENSION COVER, SEAT SUSPENSION 서스펜션커버
37.918	SUSPENSION ASSEMBLY, SEAT 서스펜션
38.163	BRACKET, SEAT SUPPORT RH 브라켓
39.719	SEAT ASSEMBLY 시트
39.720	CUSHION, SEAT 쿠션
39.721	CUSHION, SEAT BACK REST 쿠션

39.726	ADJUSTOR, SEAT 어드저스터
39.727	ADJUSTOR, SEAT WITH LATCH 어드저스터
39.729	FASTENER, ADJUSTOR TO SEAT SUPPORT 패스너
39.852	BRACKET, SEAT SUPPORT LH 브라켓
39.853	FASTENER, SEAT SUPPORT BRACKET 패스너
47.064	KNOB, SEAT ASSEMBLY WEIGHT ADJUSTER 노브
75.046	KIT, SEAT ACTUATED ENGINE SHUTDOWN 키트
93.739	FASTENER, SAFETY BELT ASSEMBLY 패스너
94.044	FASTENER, SEAT CUSHION MOUNTING PLATE 패스너
94.880	FASTENER, SEAT SUPPORT CATCH BRACKET 패스너
95.274	FASTENER, SEAT CUSHION SUSPENSION SUPPORT 패스너
96.412	FASTENER, SEAT SUSPENSION BACK SIDE COVER 패스너

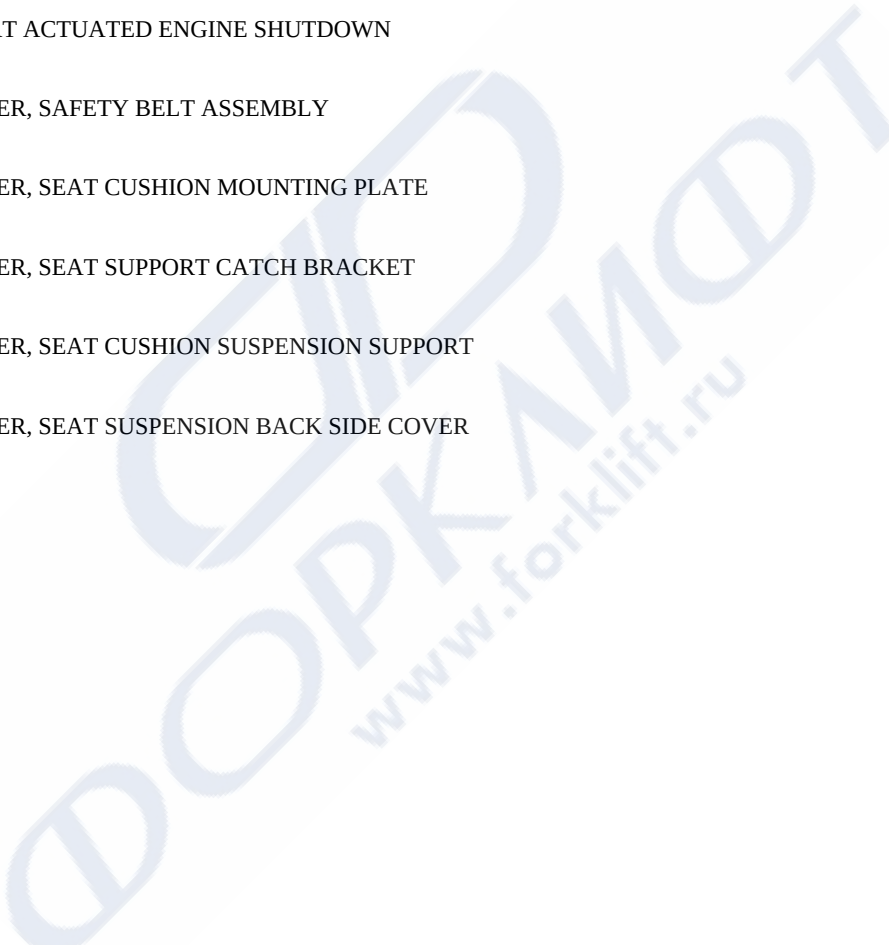 

ASSEMBLY
COMPLETE — 39.248LH
— 39.977RH

 
NOTE :
ITEMS TO BE NOT SOLD
SEPARATELY MARKED "NSS"

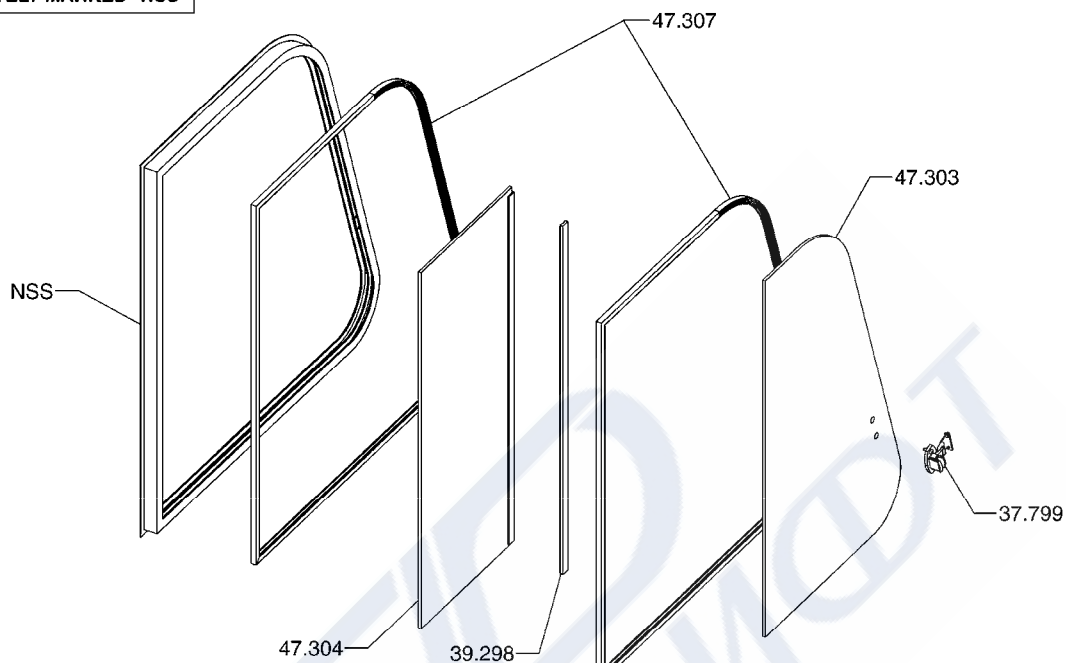


CAB DOOR SASH ASSEMBLY

39-902

37.799	LATCH, CAB DOOR WINDOW ASSEMBLY 래치
39.248	WINDOW ASSEMBLY, CAB DOOR (LH) 윈도우
39.298	CHANNEL, FRONT DOOR GLASS - FRONT 채널
39.977	WINDOW ASSEMBLY, CAB DOOR (RH) 윈도우
47.303	GLASS, CAB DOOR (FRONT) 글래스
47.304	GLASS, CAB DOOR (REAR) 글래스
47.307	CHANNEL, CAB SIDE DOOR WINDOW 채널

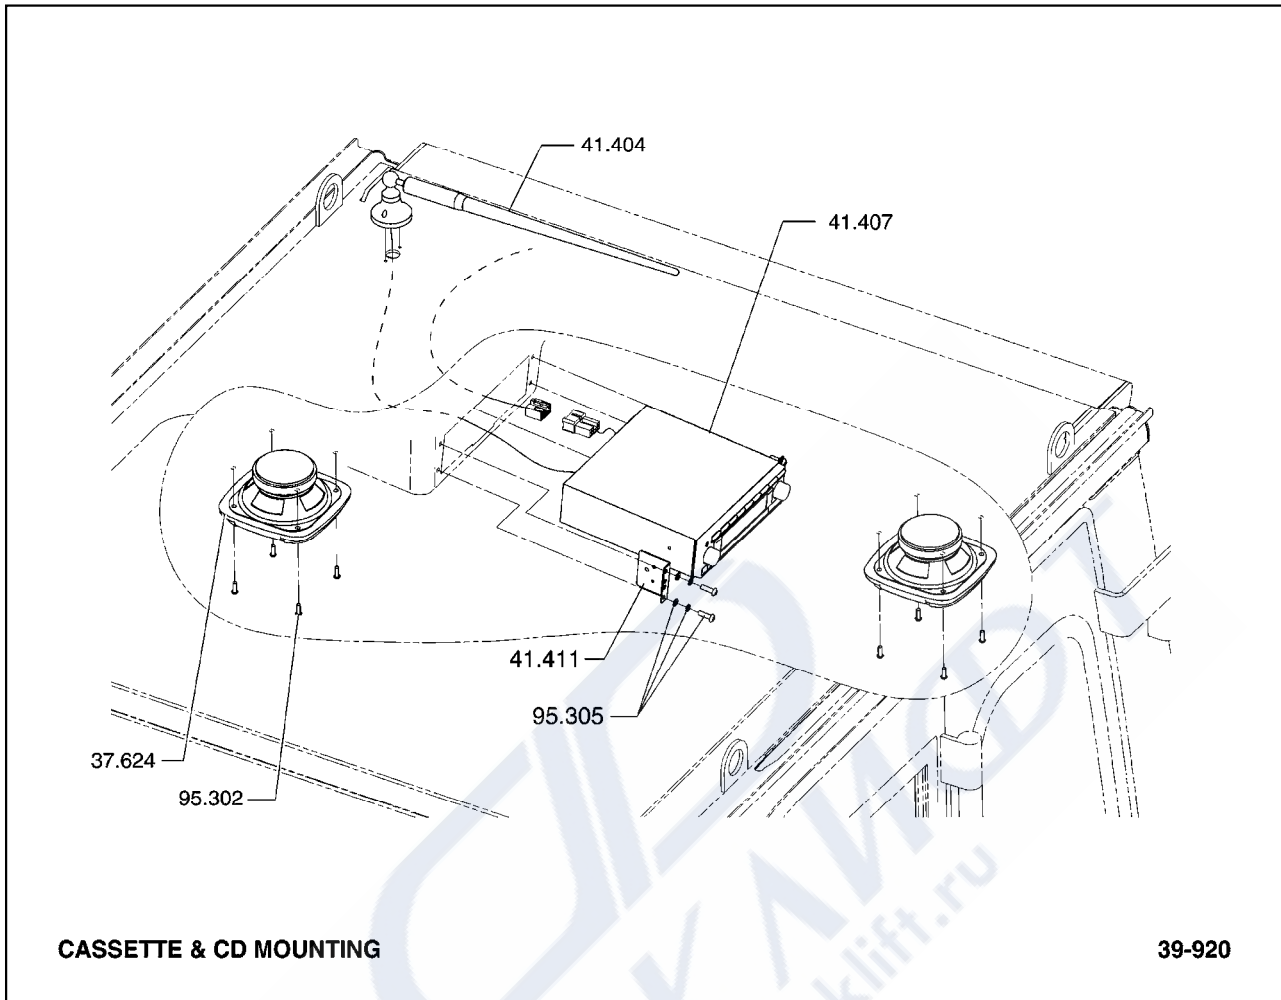 


37.624	SPEAKER, CABIN 스피커
41.404	ANTENNA, AUDIO 안테나
41.407	AUDIO 오디오
41.411	BRACKET, AUDIO AND TRANSCEIVER BOX MOUNTING 브라켓
95.302	FASTENER, LOUDSPEAKER 패스너
95.305	FASTENER, AUDIO AND TRANSCEIVER BOX TO MOUNTING BR 패스너

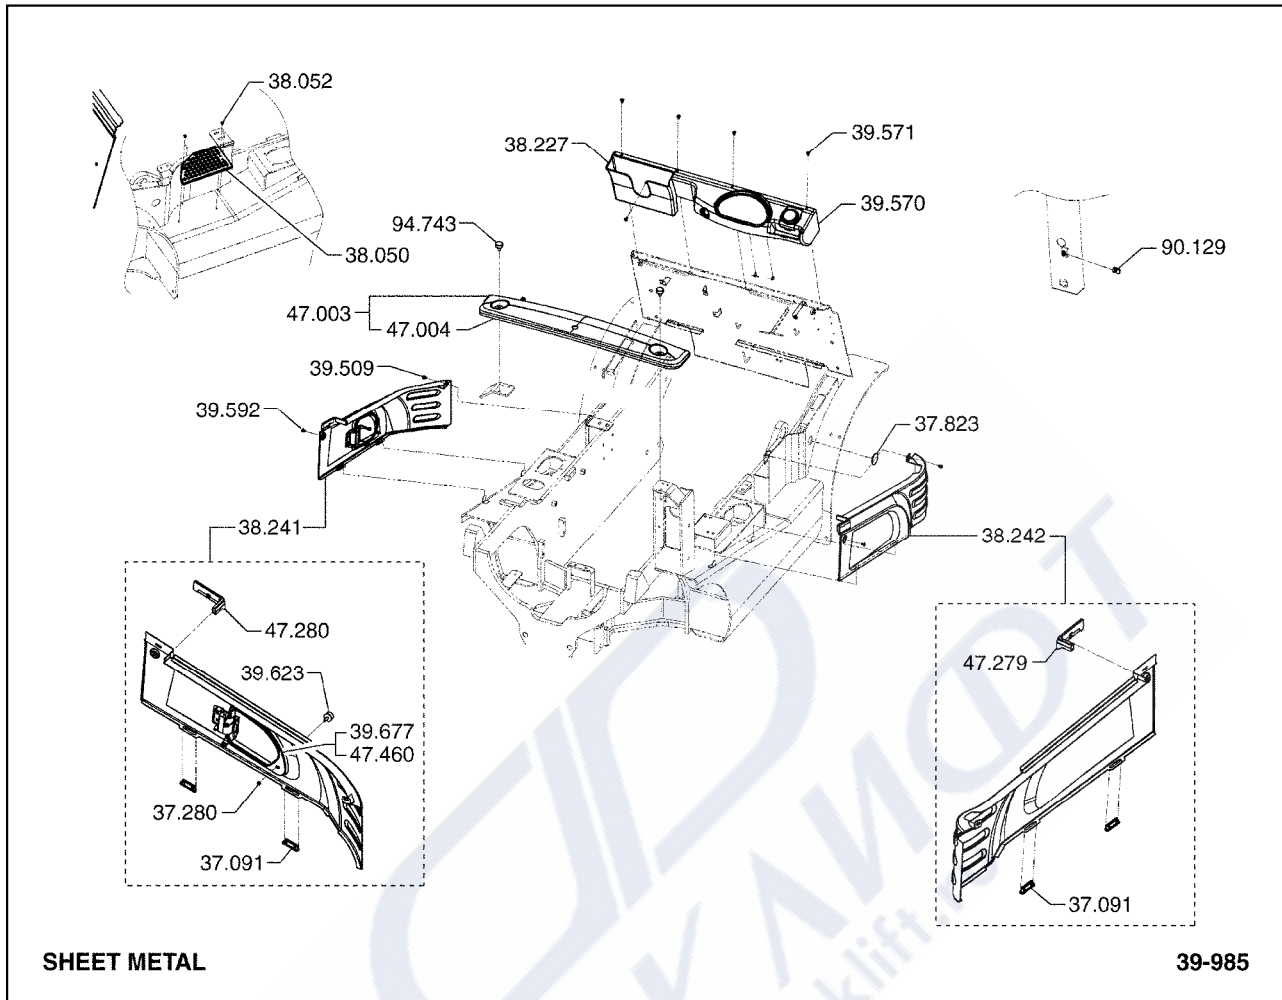 

37.091	DAMPENER, SIDE MEMBER VIBRATION 댐프너
37.280	CAPSCREW, FRAME SIDE PLATE 캡스크류
37.823	PLUG, CAB FRONT FRAME SUPPORT FASTENER PROTECTION 플러그
38.050	STEP ASSEMBLY, LH 스텝
38.052	FASTENER, STEP FRONT 패스너
38.227	POCKET, DASH PANEL 포켓
38.241	COVER ASSEMBLY, SIDE LH 커버
38.242	COVER ASSEMBLY, SIDE RH 커버
39.509	FASTENER, SIDE HOOD 패스너

39.570	COVER ASSEMBLY, DASH 커버
39.571	FASTENER, DASH COVER 패스너
39.592	FASTENER, SIDE HOOD 패스너
39.623	DAMPENER, FRAME SIDE PLATE 댐프너
39.677	DOOR, FUEL FILLER 도어
47.003	COVER, RADIATOR 커버
47.004	SEAL, RADIATOR COVER 씰
47.279	RUBBER, SIDE COVER RH 러버
47.280	RUBBER, SIDE COVER LH 러버
47.460	HINGE, FUEL FILLER DOOR 힌지
90.129	NUT, OVERHEAD GUARD REAR LEG FASTENER 너트
94.743	FASTENER, RADIATOR COVER TRIM 패스너



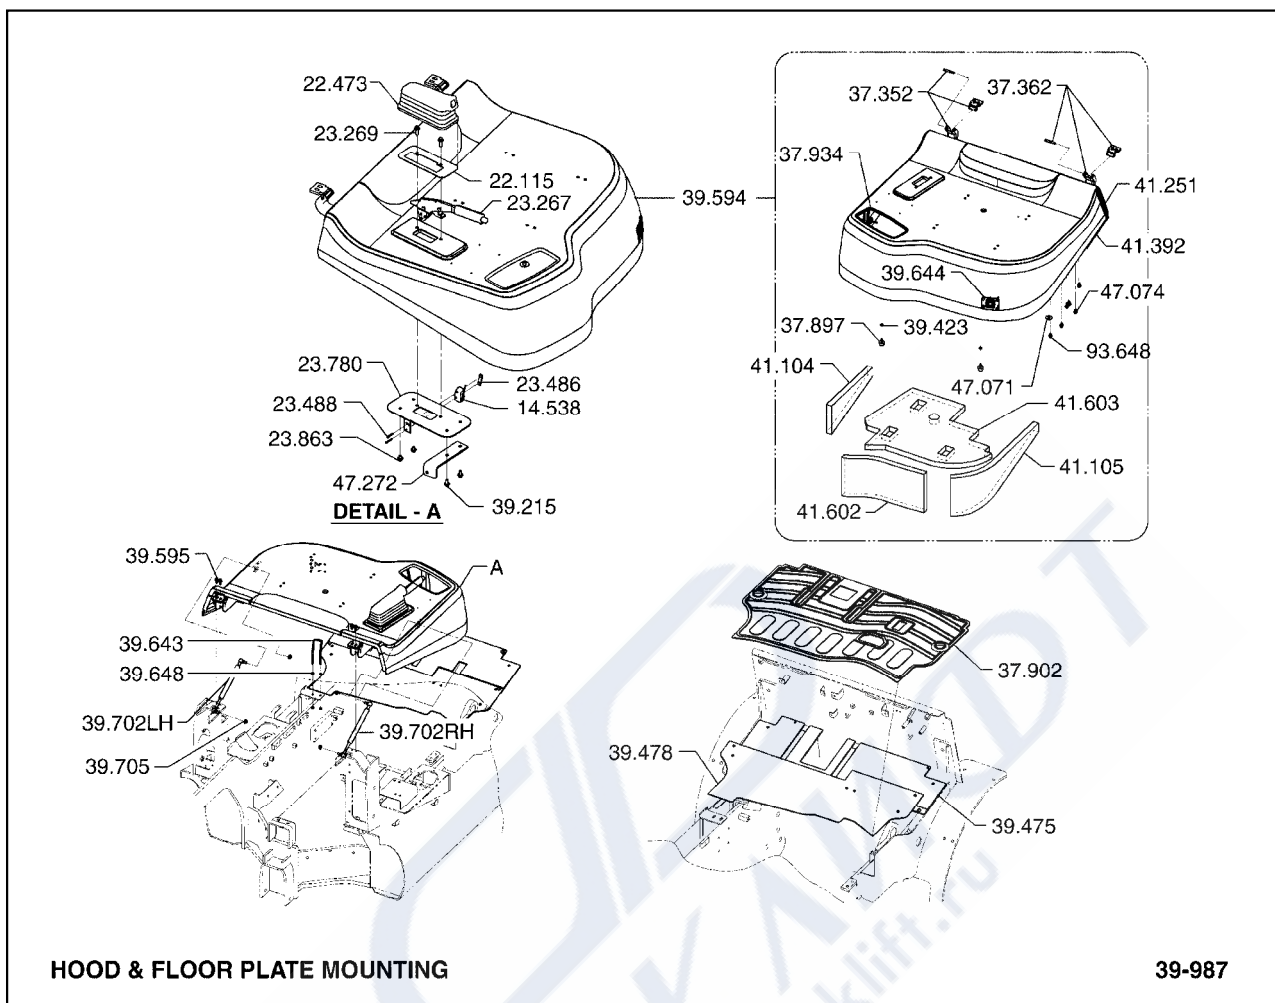 


HOOD & FLOOR PLATE MOUNTING

39-987

14.538	SWITCH, PARK BRAKE 스위치	39.423	FASTENER, TOP HOOD 패스너
22.115	SUPPORT, PARKING BRAKE LEVER MOUNTING BRACKET 서포트	39.475	PLATE, FRONT FLOOR 플레이트
22.473	COVER, HAND BRAKE LEVER 커버	39.478	PLATE, REAR FLOOR 플레이트
23.267	LEVER, PARKING BRAKE 레버	39.594	HOOD, TOP 후드
23.269	FASTENER, PARKING BRAKE LEVER 패스너	39.595	FASTENER, TOP HOOD 패스너
23.486	SIDE PLATE, PARKING BRAKE 사이드플레이트	39.643	CATCH, TOP HOOD LATCH 캐치
23.488	FASTENER, PARKING BRAKE SIDE PLATE 패스너	39.644	LATCH, TOP HOOD 래치
23.780	SUPPORT, PARKING BRAKE LINKAGE 서포트	39.648	FASTENER, TOP HOOD LATCH CATCH 패스너
23.863	FASTENER, PARKING BRAKE LEVER BRACKET 패스너	39.702	PROP, HOOD 지지대
37.352	BRACKET, TOP HOOD SPRING (RH) 브라켓	39.705	FASTENER, HOOD PROP 패스너
37.362	BRACKET, TOP HOOD SPRING (LH) 브라켓	41.104	SOUND SEAL, RH SIDE HOOD 사운드씰
37.897	BUMPER, TOP HOOD 범퍼	41.105	SOUND SEAL, LH SIDE HOOD 사운드씰
37.902	MAT, FLOORPLATE 매트	41.251	SOUND SEAL, TOP HOOD 사운드씰
37.934	SEAL, HOOD ACCESS COVER 씰	41.392	SOUND SEAL, TOP HOOD 사운드씰
39.215	FASTENER, GAS SPRING 패스너	41.602	SOUND SEAL, ENGINE HOOD 사운드씰

41.603	SOUND SEAL, ENGINE HOOD 사운드씰
47.071	FASTENER, TOP HOOD COVER 패스너
47.074	FASTENER, TOP HOOD SPRING BRACKET 패스너
47.272	BRACKET, CAB REAR GLASS GAS SPRING MOUNTING 브라켓
93.648	FASTENER, TOP HOOD SUPPORT HINGE BASE 패스너



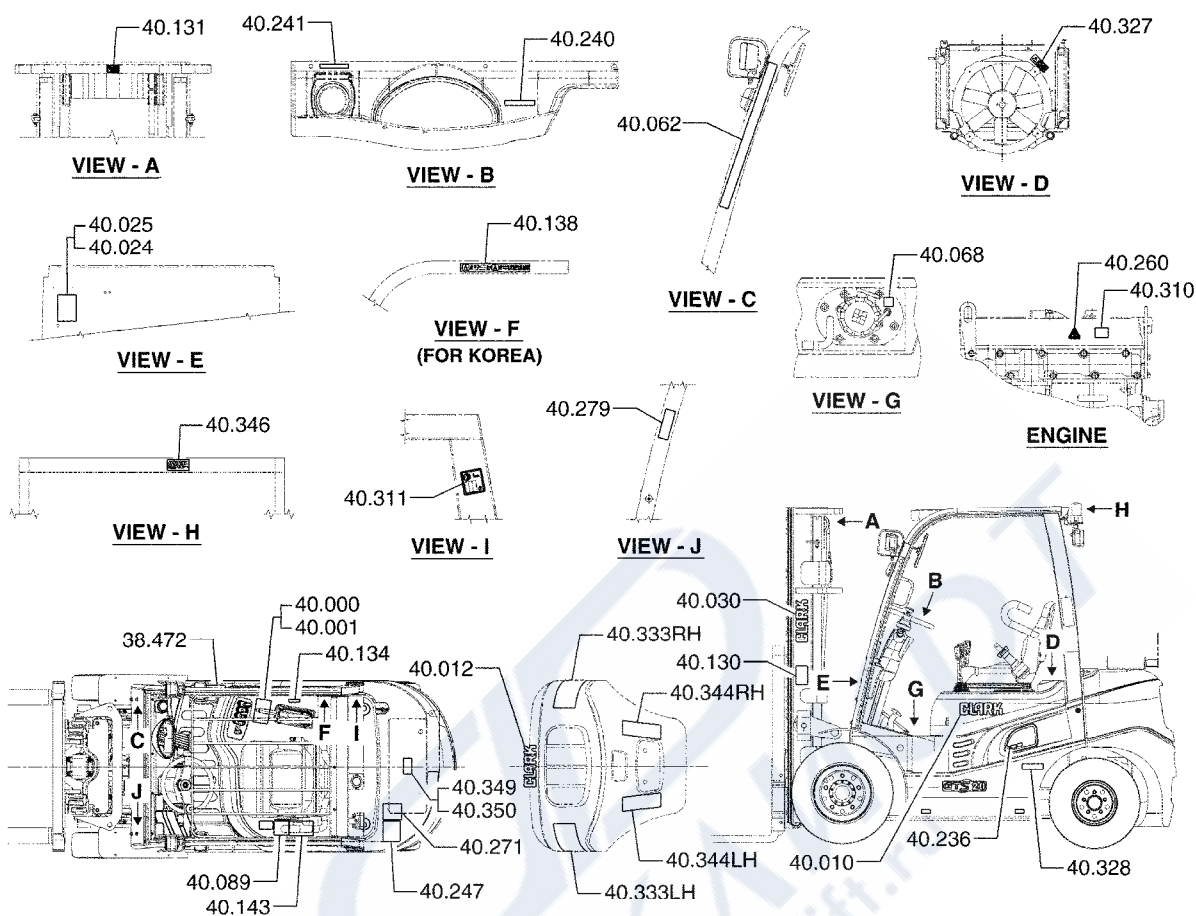 


DECALS

40-011

38.472	PAD, RH STEP NON-SKID 패드	40.143	DECAL, OPERATORS INSTRUCTIONS 데칼
40.000	PLATE, CAPACITY & SERIAL NUMBER 플레이트	40.236	DECAL, FUEL 데칼
40.001	FASTENER, CAPACITY & SERIAL PLATE 패스너	40.240	DECAL, FUEL WARNING 데칼
40.010	DECAL, CLARK 데칼	40.241	DECAL, BRAKE OIL SPEC 데칼
40.012	DECAL, CLARK LOGO-SMALL 데칼	40.247	DECAL, LPG FUEL CYL REPLACEMENT PROCEDURE 데칼
40.024	PLATE, UNDERWRITERS LABEL 플레이트	40.260	DECAL, HOT SURFACE WARNING 데칼
40.025	FASTENER, UNDERWRITERS LABEL PLATE 패스너	40.271	DECAL, LP GAS 데칼
40.030	DECAL, CLARK VERTICAL 데칼	40.279	DECAL, STARTING PROCEDURE 데칼
40.062	DECAL, DRIVERS CAUTION 데칼	40.310	DECAL, EXHAUST GAS 데칼
40.068	DECAL, HYD-SYSTEM OIL 데칼	40.311	DECAL, SOUND POWER LEVEL 데칼
40.089	PLATE, SAFETY INSTRUCTION 플레이트	40.327	DECAL, FAN WARNING 데칼
40.130	LEGEND, SAFETY 범례	40.328	DECAL, WHEEL NUT WARNING 데칼
40.131	LEGEND, SAFETY 범례	40.333	REFLECTOR, COUNTERWEIGHT 리플렉터
40.134	DECAL, OPERATORS MANUAL LOCATION 데칼	40.344	REFLECTOR, COUNTERWEIGHT LOWER 리플렉터
40.138	DECAL, SAFETY 데칼	40.346	DECAL, OVERHEAD GUARD DROP TEST 데칼


40.349	PLATE, LESS LP TANK 플레이트
40.350	FASTENER, PLATE LESS LP TANK 패스너



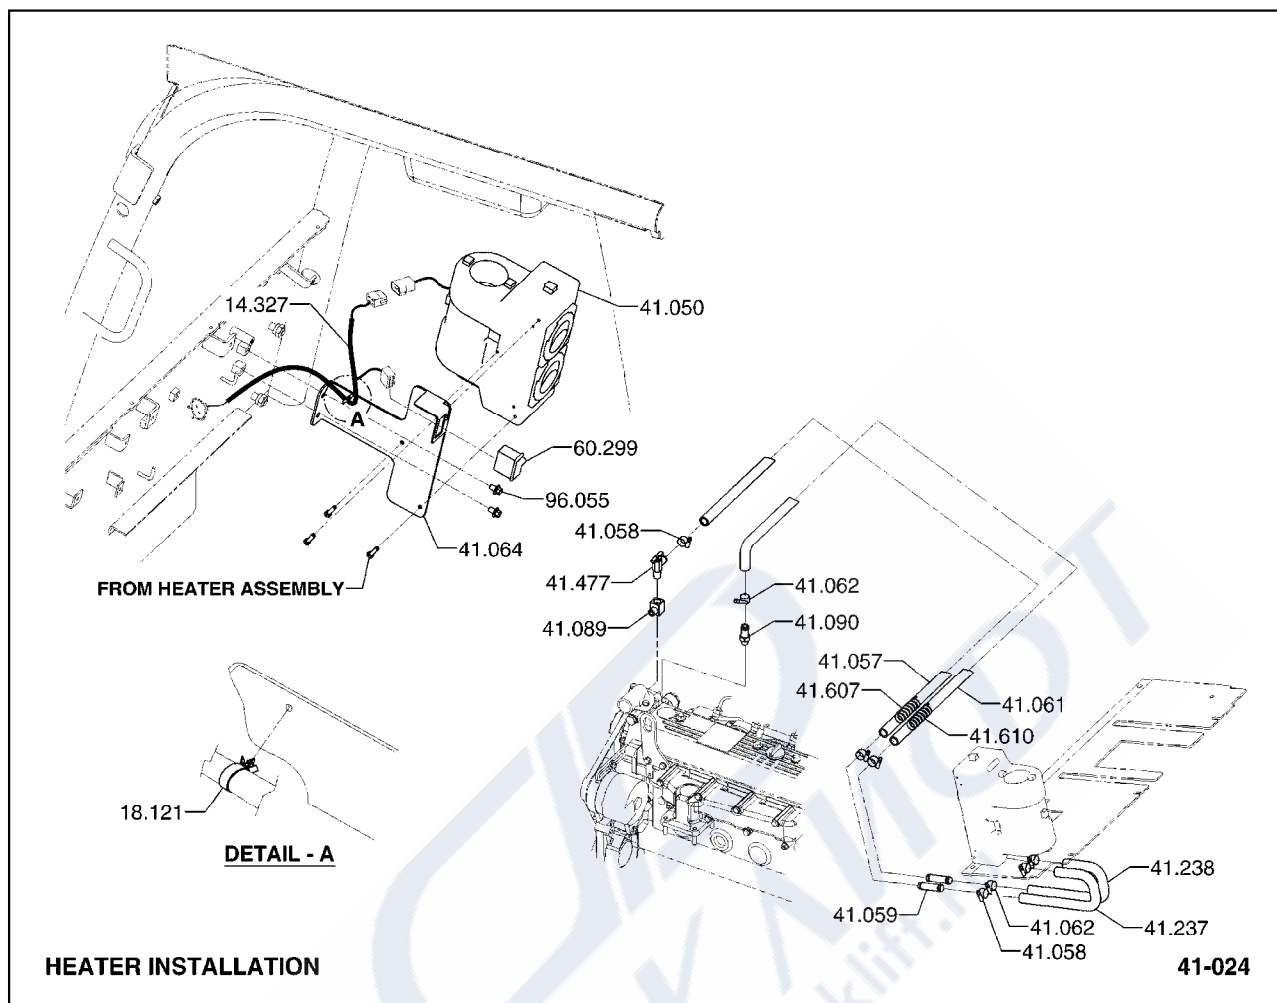 

14.327	WIRE, SWITCH HEATER CONTROL 와이어
18.121	CLIP, HEATER CONTROL WIRE 클립
41.050	HEATER ASSEMBLY 히터
41.057	LINE, HEATER INLET 라인
41.058	CLAMP, HEATER INLET LINE 클램프
41.059	FITTING, HEATER LINE (ENGINE) 피팅
41.061	LINE, HEATER OUTLET 라인
41.062	CLAMP, HEATER OUTLET LINE 클램프
41.064	BRACKET, HEATER MOUNTING 브라켓

41.089	FITTING, HEATER INLET LINE 피팅
41.090	FITTING, HEATER OUTLET LINE 피팅
41.237	LINE, HEATER INLET 라인
41.238	LINE, HEATER OUTLET 라인
41.477	VALVE, HEATER LINE 밸브
41.607	GUARD, HEATER HOSE 가드
41.610	GUARD, HEATER HOSE 가드
60.299	SWITCH, HEATER ON/OFF 스위치
96.055	FASTENER, HEATER MOUNTING BRACKET 패스너

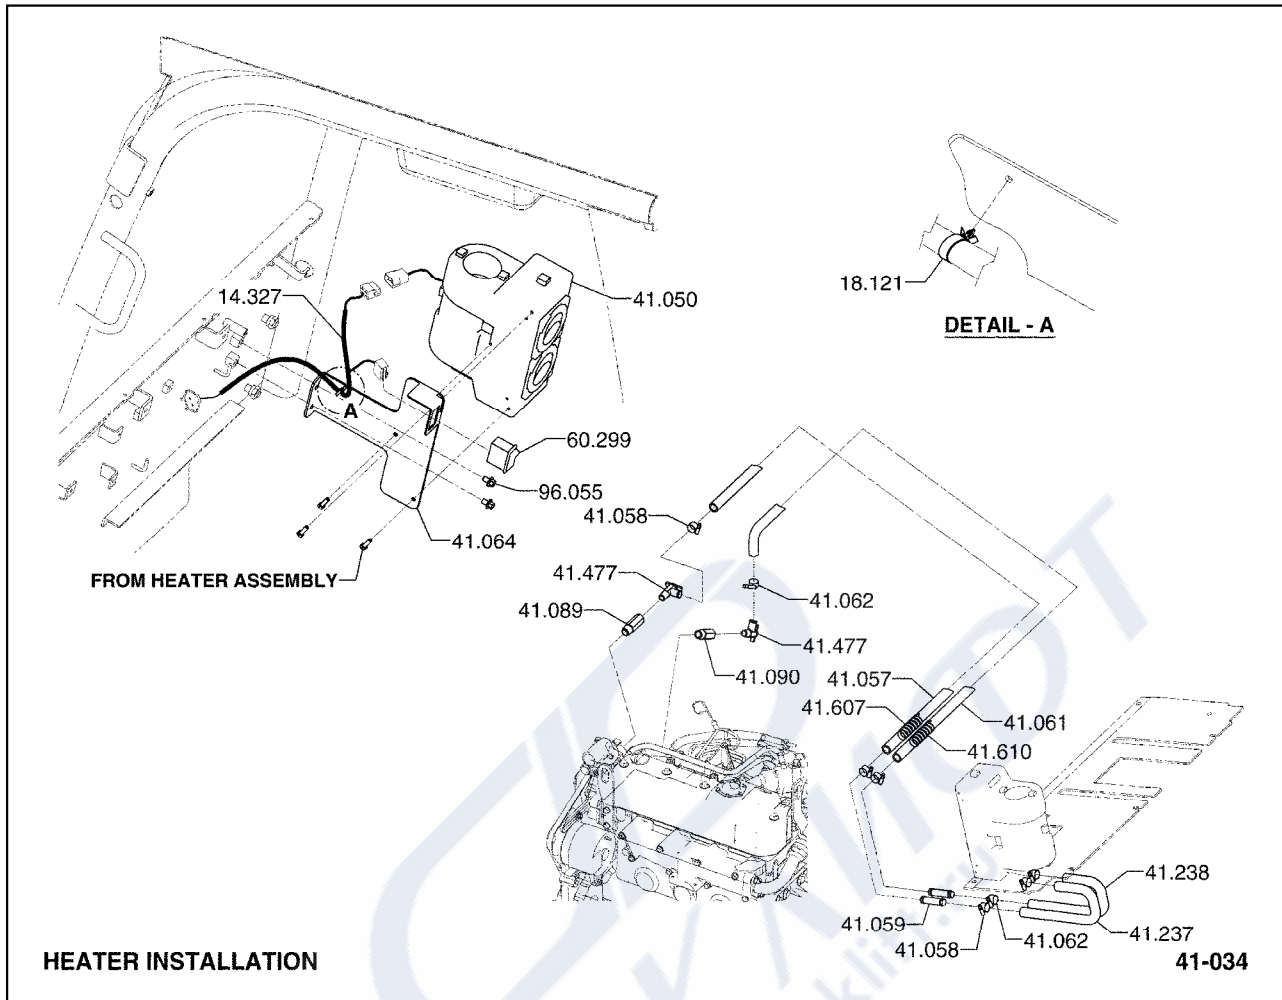 


14.327	WIRE, SWITCH HEATER CONTROL 와이어
18.121	CLIP, HEATER CONTROL WIRE 클립
41.050	HEATER ASSEMBLY 히터
41.057	LINE, HEATER INLET 라인
41.058	CLAMP, HEATER INLET LINE 클램프
41.059	FITTING, HEATER LINE (ENGINE) 피팅
41.061	LINE, HEATER OUTLET 라인
41.062	CLAMP, HEATER OUTLET LINE 클램프
41.064	BRACKET, HEATER MOUNTING 브라켓

41.089	FITTING, HEATER INLET LINE 피팅
41.090	FITTING, HEATER OUTLET LINE 피팅
41.237	LINE, HEATER INLET 라인
41.238	LINE, HEATER OUTLET 라인
41.477	VALVE, HEATER LINE 밸브
41.607	GUARD, HEATER HOSE 가드
41.610	GUARD, HEATER HOSE 가드
60.299	SWITCH, HEATER ON/OFF 스위치
96.055	FASTENER, HEATER MOUNTING BRACKET 패스너

SEAT SAFETY
WING KIT

 
37.970

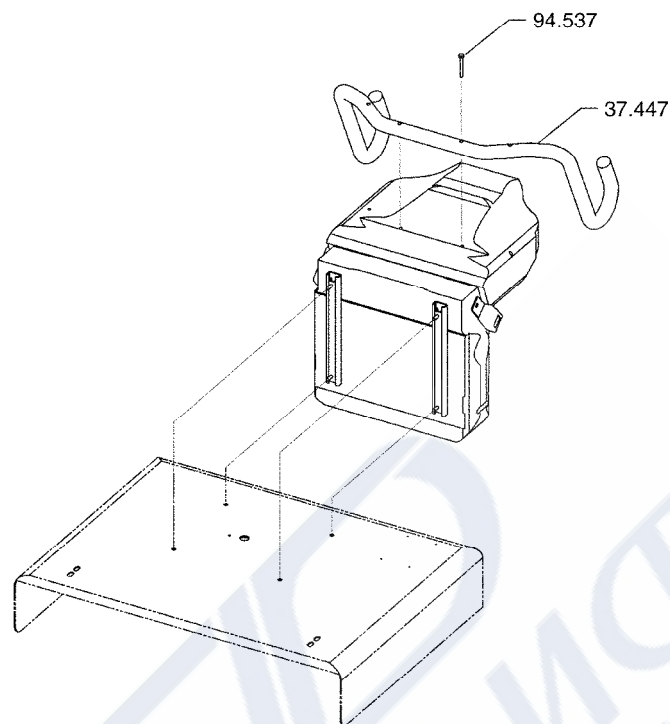

SEAT WING KIT


47-000

- | | |
|--------|--|
| 37.447 | RESTRAINT, OPERATOR SEAT LATERAL
레스트레인트 |
| 37.970 | KIT, SEAT SAFETY
키트 |
| 94.537 | FASTENER, OPERATOR SEAT LATERAL RESTRAINT
패스너 |

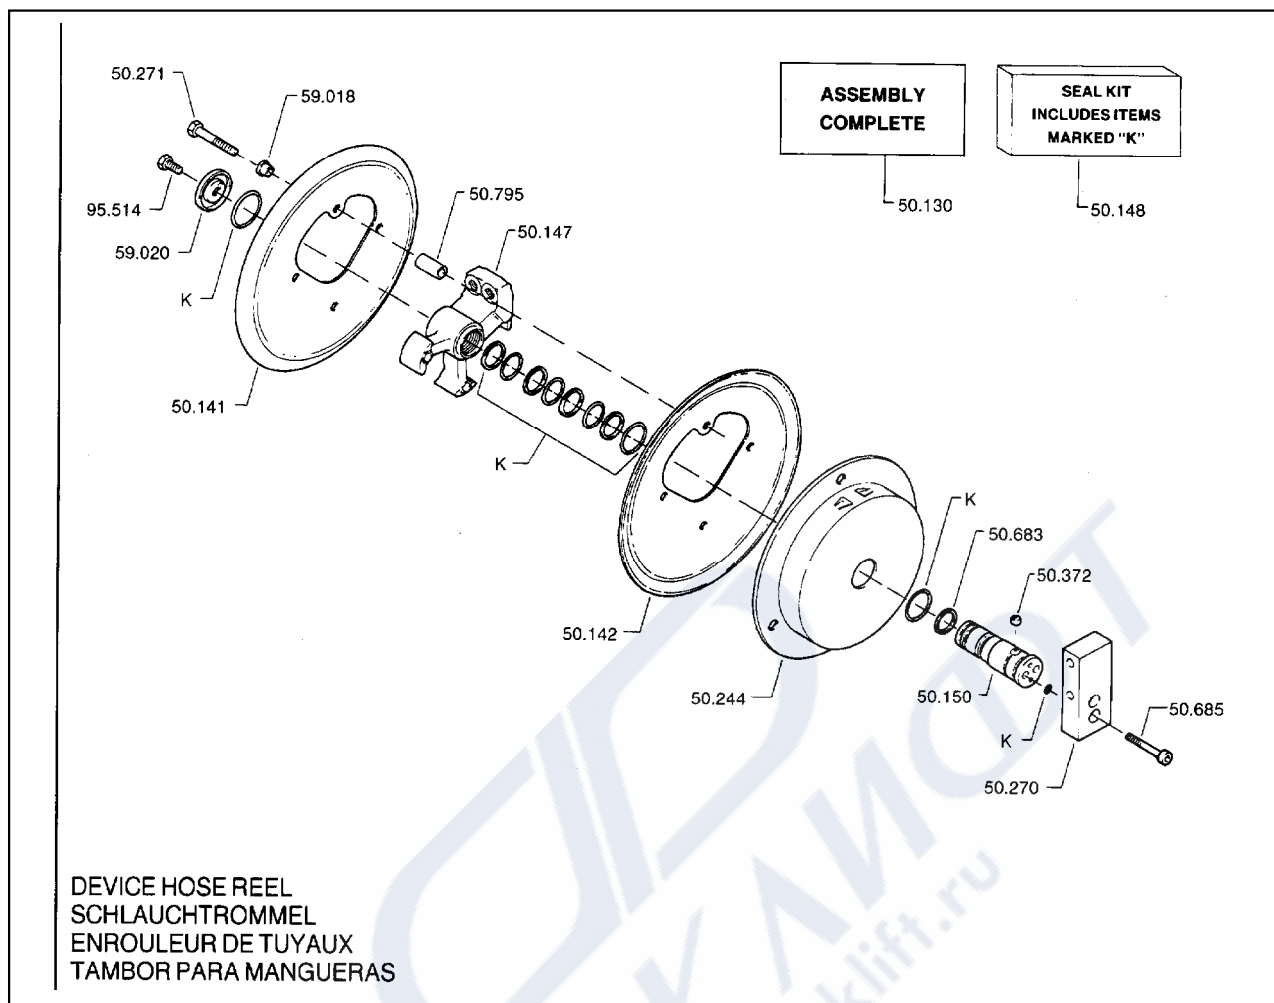 

- | | |
|--------|---|
| 50.130 | REEL ASSEMBLY, DEVICE RH HOSE
릴어셈블리 |
| 50.141 | FLANGE, DEVICE RH HOSE REEL OUTBOARD
플랜지 |
| 50.142 | FLANGE, DEVICE RH HOSE REEL CENTER
플랜지 |
| 50.147 | HUB, DEVICE RH HOSE REEL
허브 |
| 50.148 | SEAL, DEVICE RH HOSE REEL AXLE
씰 |
| 50.150 | AXLE, DEVICE RH HOSE REEL
액슬 |
| 50.244 | HOUSING ASSEMBLY, DEVICE RH HOSE REEL SPRING
하우징 |
| 50.270 | BASE, DEVICE RH HOSE REEL
베이스 |
| 50.271 | FASTENER, DEVICE RH HOSE REEL AXLE
패스너 |

50.372	DOG, DEVICE RH HOSE REEL SPRING 도그
50.683	LOCK, DEVICE HOSE REEL DOG 로크
50.685	FASTENER, DEVICE HOSE REEL BASE 패스너
50.795	SPACER, DEVICE HOSE REEL SPRING HOUSING 스페이서
59.018	GUIDE, DEVICE HOSE REEL FASTENER 가이드
59.020	CAP, DEVICE HOSE REEL AXLE 캡
95.514	FASTENER, DEVICE HOSE REEL AXLE CAP 패스너

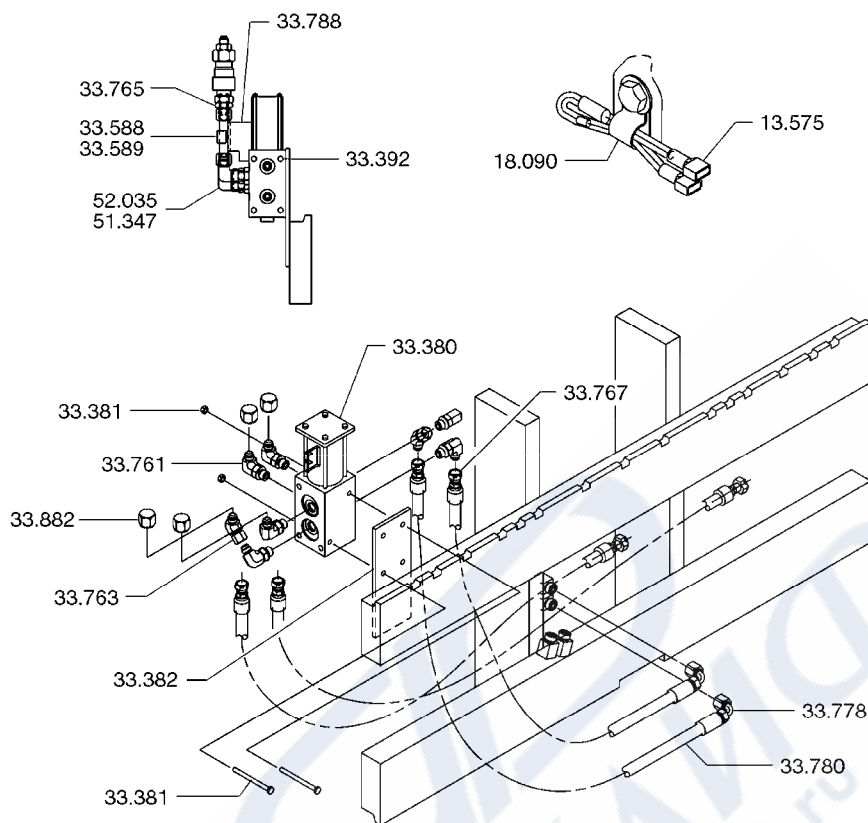 



SOLENOID VALVE

50-157


13.575	WIRE, DEV SELECTOR VALVE SWITCH FEED 와이어
18.090	CLIP, REEL WIRE HARNESS 클립
33.380	VALVE ASSEMBLY, DEVICE SELECTOR SOLENOID 밸브
33.381	FASTENER, DEVICE SELECTOR VALVE 패스너
33.382	BRACKET, DEVICE SELECTOR VALVE 브라켓
33.392	FASTENER, SECONDARY SELECTOR VALVE 패스너
33.588	CLIP, BY-PASS CLAMP LOCK VALVE 클립
33.589	FASTENER, BY-PASS CLAMP LOCK VALVE CLIP 패스너
33.761	FITTING, DEVICE SELECTOR VALVE C4 PORT 피팅

33.763	FITTING, DEVICE SELECTOR VALVE C4 PORT 피팅
33.765	LINE, DEVICE SELECTOR VALVE C4 PORT HYDRAULIC 라인
33.767	HOSE COUPLING, DEV SEL VALVE C1 PORT 호스커플링
33.778	HOSE COUPLING, DEV SEL VALVE C3 PORT 호스커플링
33.780	LINE, DEVICE SELECTOR VALVE C2 PORT HYDRAULIC 라인
33.788	BRACKET, DEVICE SEL VALVE HYDRAULIC LINE 브라켓
33.882	PLUG, DEVICE SEL VALVE "P" PORT 플러그
51.347	FITTING, SELECTOR VALVE P PORT 피팅
52.035	FITTING, SEC SEL VALVE C4 PORT LINE 피팅

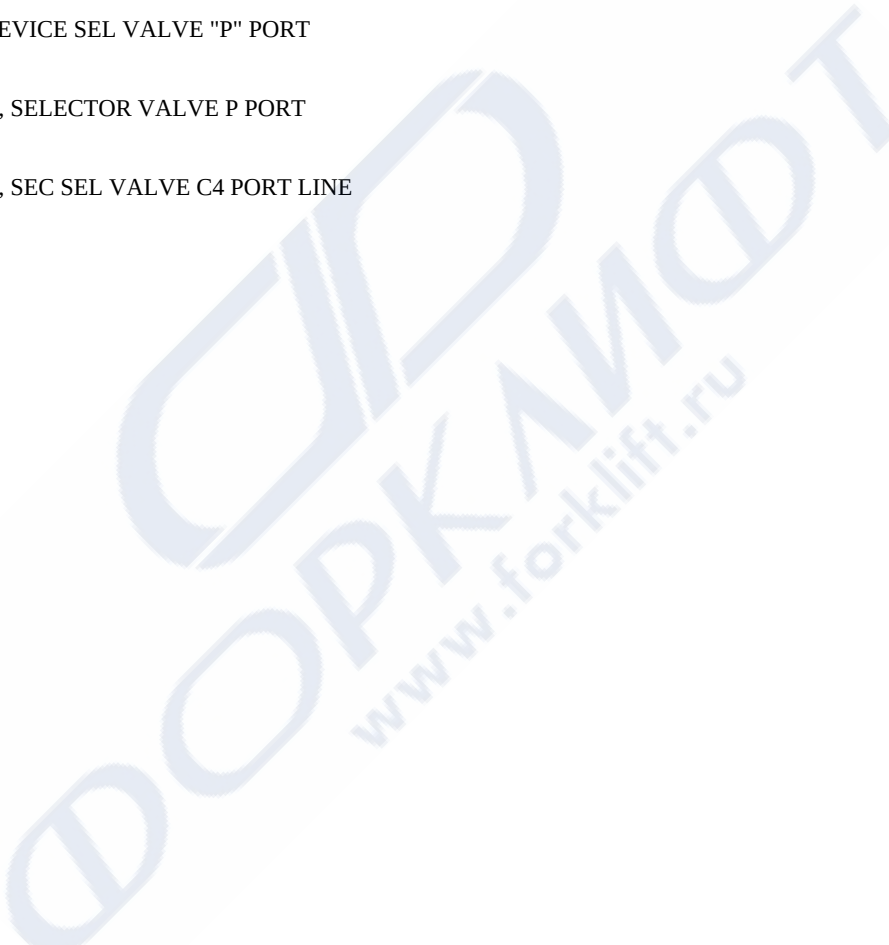 


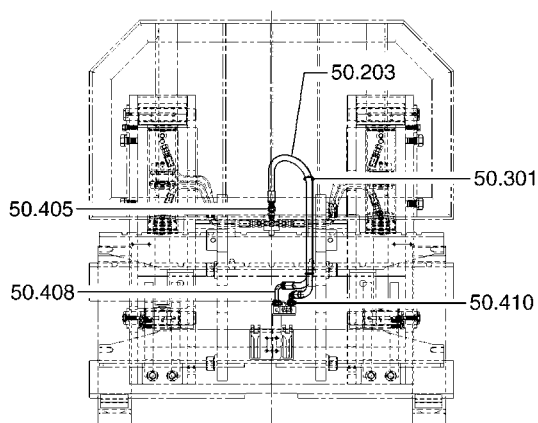 

HINGED BUCKET (HB) / FORK (HF) - BASIC

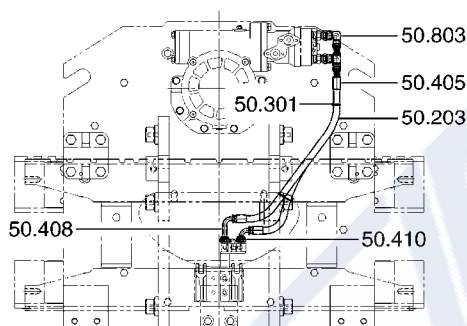 

ROTATING FORK (RF) - BASIC

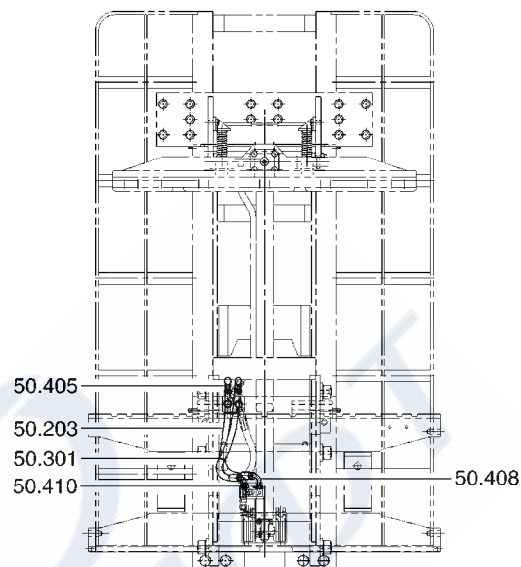 


LOAD STABILIZER (LS) - BASIC

ATTACHMENT HOSE ADAPTATION (CARRIAGE)

50-171


50.203	LINE, DEVICE HYDRAULIC (AT CARRIAGE) 라인
50.301	CLIP, DEVICE RH HOSE (AT CARRIAGE) 클립
50.405	COUPLING, DEVICE HOSE 커플링
50.408	COUPLING, DEVICE HOSE 커플링
50.410	COUPLING, DEVICE HOSE 커플링
50.803	FITTING, DEVICE HYDRAULIC LINE 피팅

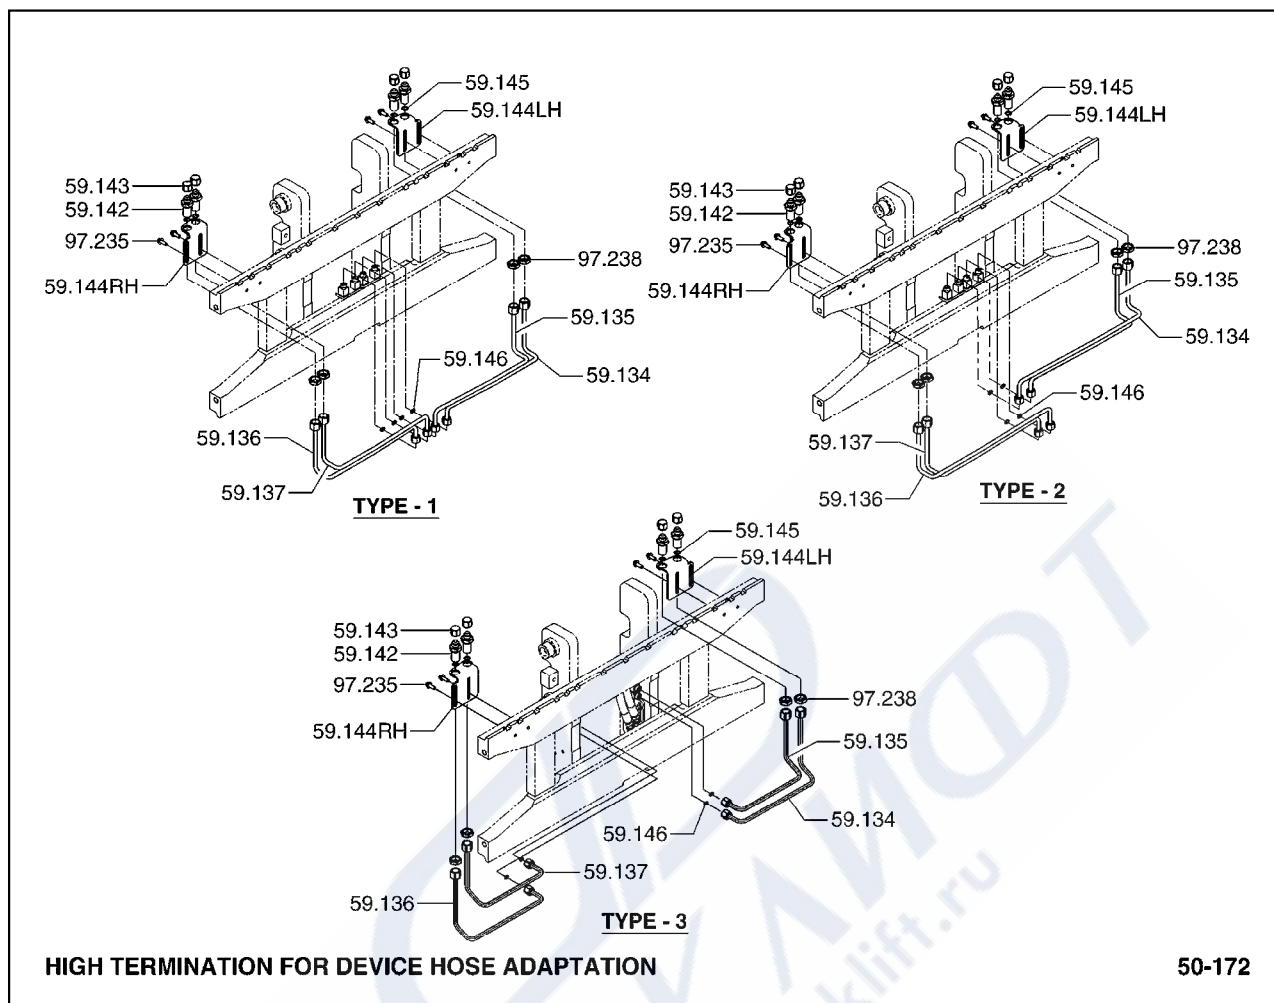 

- | | |
|--------|---|
| 59.134 | LINE, DEVICE LH LINE FOR HIGH TERMINATION
라인 |
| 59.135 | LINE, DEVICE LH LINE FOR HIGH TERMINATION
라인 |
| 59.136 | LINE, DEVICE RH LINE FOR HIGH TERMINATION
라인 |
| 59.137 | LINE, DEVICE RH LINE FOR HIGH TERMINATION
라인 |
| 59.142 | FITTING, DEVICE LINE FOR HIGH TERMINATION
피팅 |
| 59.143 | CAP, DEVICE LINE FITTING FOR HIGH TERMINATION
캡 |
| 59.144 | BRACKET, DEVICE LINE FOR HIGH TERMINATION
브라켓 |
| 59.145 | SEAL, DEVICE LINE FITTING FOR HIGH TERMINATION
셀 |
| 59.146 | SEAL, DEVICE LINE FITTING FOR HIGH TERMINATION
셀 |

97.235	FASTENER, DEVICE LINE CLAMP FOR HIGH TERMINATION 패스너
97.238	FASTENER, DEVICE LINE FITTING FOR HIGH TERMINATION 패스너




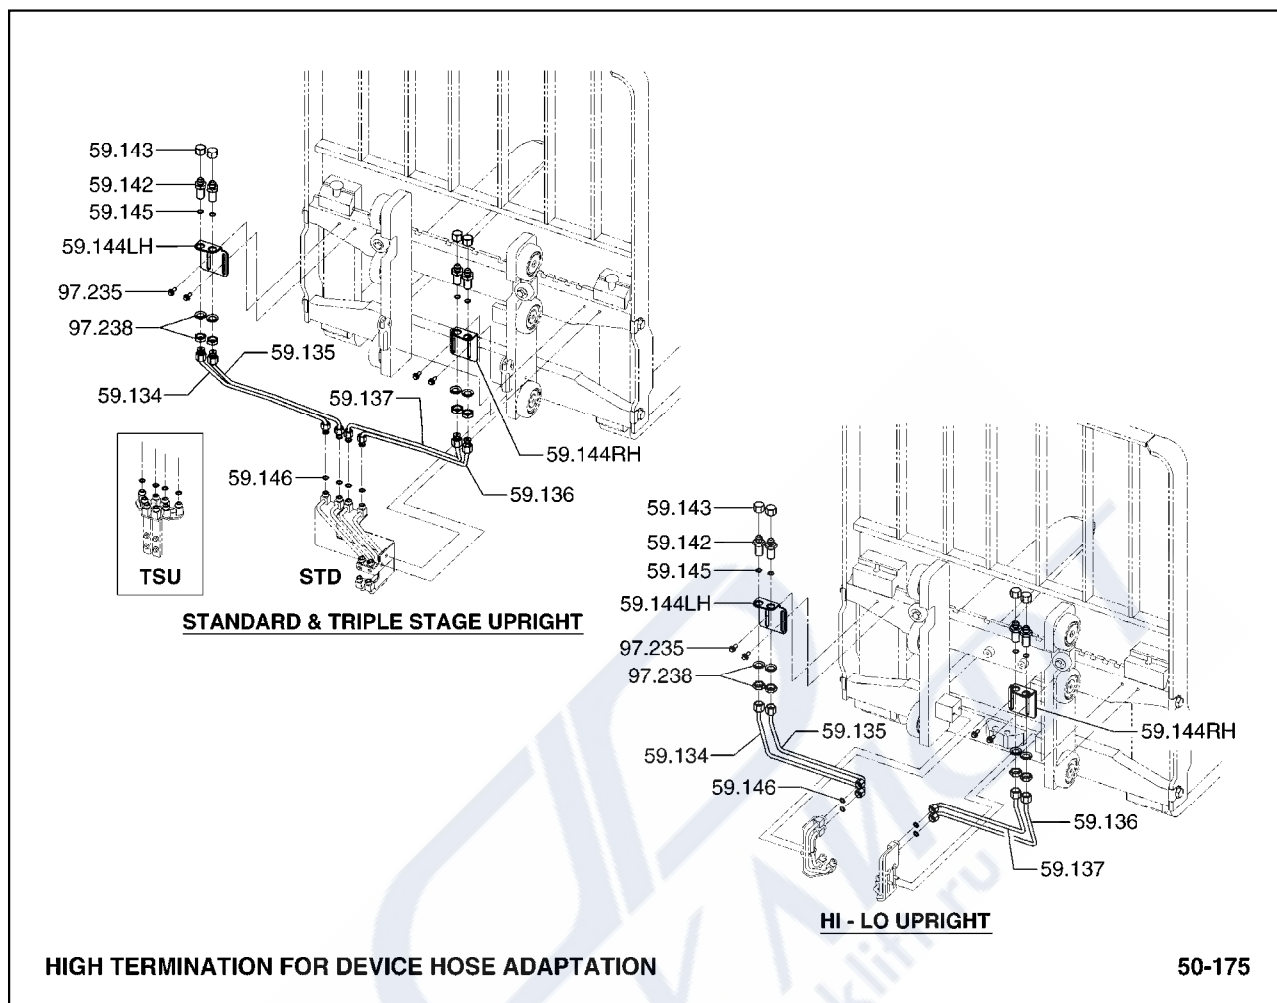 

- | | |
|--------|---|
| 59.134 | LINE, DEVICE LH LINE FOR HIGH TERMINATION
라인 |
| 59.135 | LINE, DEVICE LH LINE FOR HIGH TERMINATION
라인 |
| 59.136 | LINE, DEVICE RH LINE FOR HIGH TERMINATION
라인 |
| 59.137 | LINE, DEVICE RH LINE FOR HIGH TERMINATION
라인 |
| 59.142 | FITTING, DEVICE LINE FOR HIGH TERMINATION
피팅 |
| 59.143 | CAP, DEVICE LINE FITTING FOR HIGH TERMINATION
캡 |
| 59.144 | BRACKET, DEVICE LINE FOR HIGH TERMINATION
브라켓 |
| 59.145 | SEAL, DEVICE LINE FITTING FOR HIGH TERMINATION
셀 |
| 59.146 | SEAL, DEVICE LINE FITTING FOR HIGH TERMINATION
셀 |

97.235	FASTENER, DEVICE LINE CLAMP FOR HIGH TERMINATION 패스너
97.238	FASTENER, DEVICE LINE FITTING FOR HIGH TERMINATION 패스너



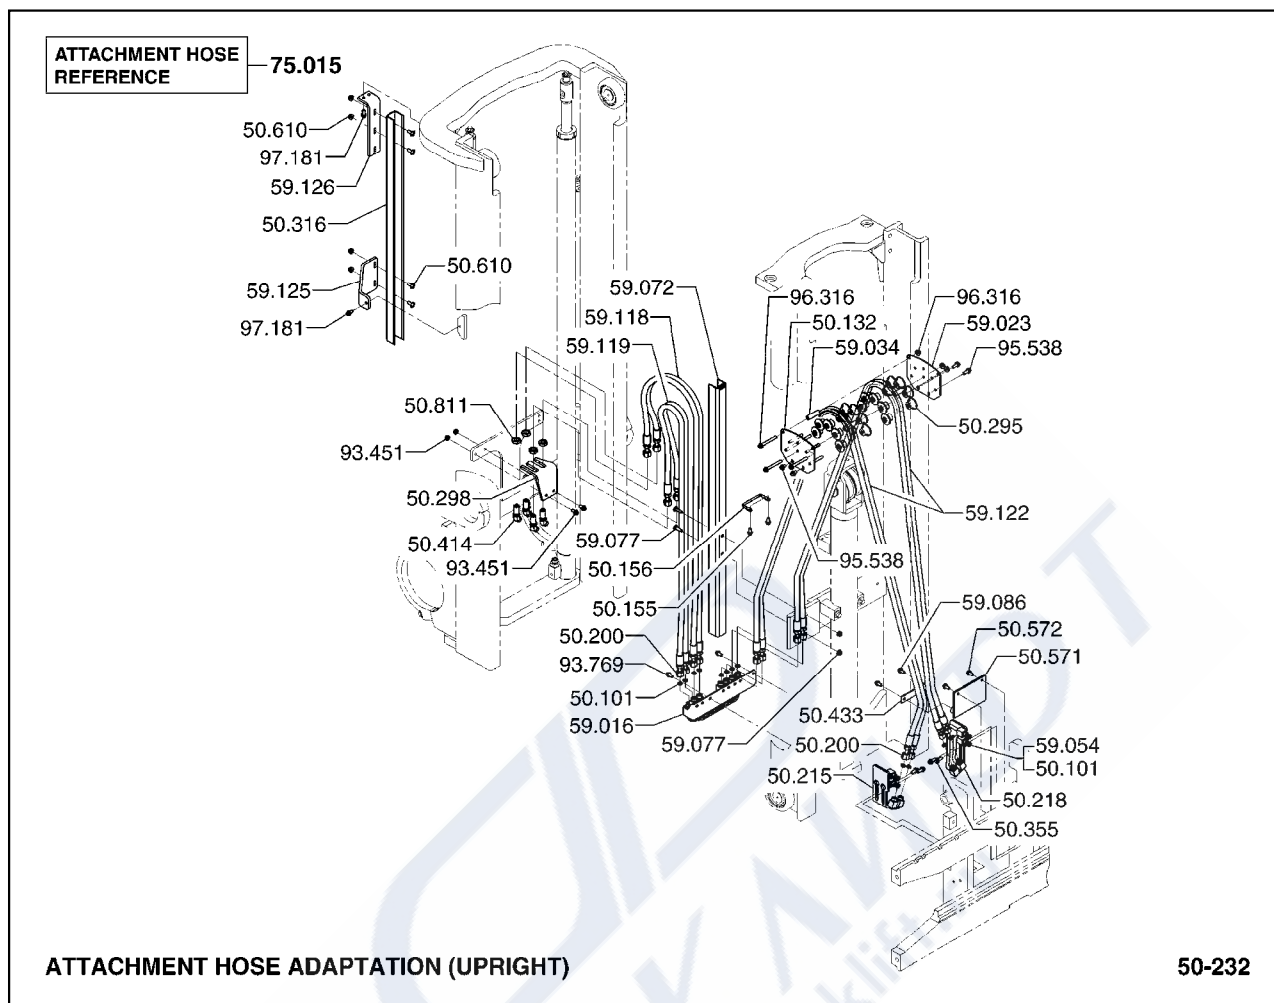 


50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 씰
50.132	BRACKET, DEVICE HOSE REEL 브라켓
50.155	FASTENER, DEVICE HOSE CLIP 패스너
50.156	CLIP, DEVICE HOSE 클립
50.200	COUPLING, DEVICE HOSE 커플링
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록
50.218	TERMINAL BLOCK, DEVICE LH HOSE 터미널블록
50.295	ROLLER, DEVICE HOSE UPPER 롤러
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.316	GUARD, DEVICE RH HOSE 가드
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅
50.433	BRACKET, DEVICE HOSE CLAMP 브라켓
50.571	BRACKET, DEVICE HOSE 브라켓
50.572	FASTENER, DEVICE HOSE BRACKET 패스너

50.610	FASTENER, DEVICE HOSE GUARD 패스너
50.811	NUT, DEVICE HOSE FITTING 너트
59.016	JUNCTION BLOCK, DEVICE HOSE 정크션 블록
59.023	BRACKET, DEVICE HOSE REEL MOUNTING 브라켓
59.034	TUBE, DEVICE HOSE REEL MOUNTING BRACKET 튜브
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.072	GUARD, DEVICE HOSE 가드
59.077	FASTENER, DEVICE HOSE GUARD 패스너
59.086	FASTENER, DEVICE HOSE CLIP BRACKET 패스너
59.118	LINE, DEVICE HYDRAULIC (OUTER RAIL) 라인
59.119	LINE, DEVICE HYDRAULIC (OUTER RAIL) 라인
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
59.125	BRACKET, DEVICE HOSE GUARD MOUNTING 브라켓
59.126	BRACKET, DEVICE HOSE GUARD MOUNTING 브라켓
75.015	MODULE, ATTACHMENT HOSE LINES 모듈

93.316	DOWEL, STEERING INTERLOCK SWITCH FASTENER 다웰
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너
93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너
95.538	FASTENER, DEVICE HOSE REEL BRACKET 패스너
96.316	FASTENER, DEVICE HOSE REEL 패스너
97.181	FASTENER, DEVICE HOSE GUARD MOUNTING BRACKET 패스너



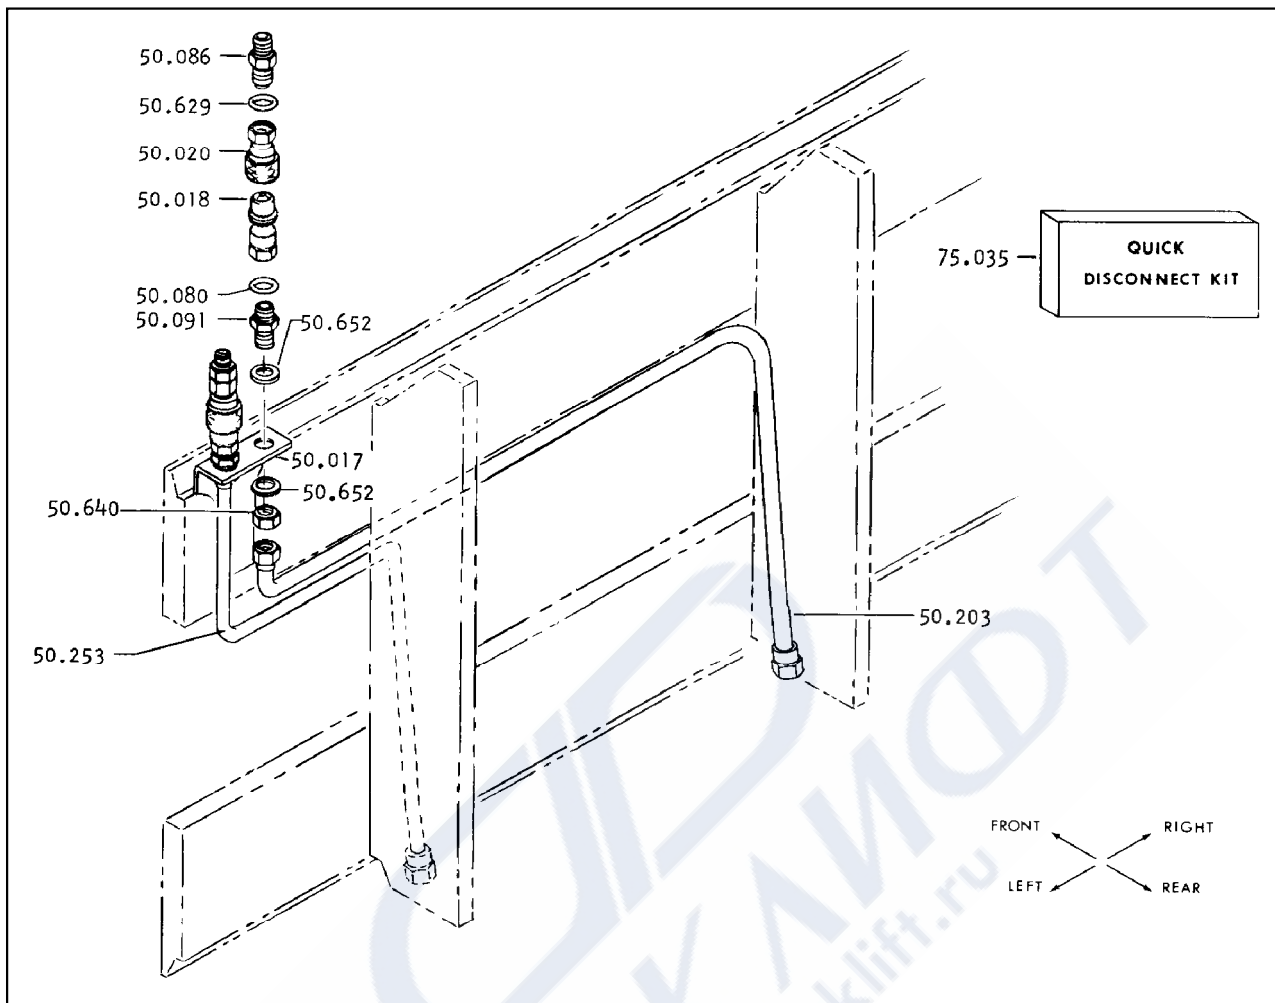 


- | | |
|--------|--|
| 50.017 | TERMINAL BRACKET, DEVICE HOSE
터미널브라켓 |
| 50.018 | DISCONNECT, DEVICE HOSE NIPPLE HALF
디스커넥트 |
| 50.020 | DISCONNECT, DEVICE HOSE SOCKET HALF
디스커넥트 |
| 50.080 | SEAL, DEVICE HOSE DISCONNECT NIPPLE RH
씰 |
| 50.086 | FITTING, DEVICE RH HYDRAULIC HOSE
피팅 |
| 50.091 | FITTING, DEVICE RH HYDRAULIC HOSE
피팅 |
| 50.203 | LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인 |
| 50.253 | LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인 |
| 50.629 | SEAL, DEVICE HOSE DISCONNECT SOCKET RH
씰 |

50.640	FASTENER, DEVICE RH HYD HOSE FITTING 패스너
50.652	SPACER, DEVICE RH HYDRAULIC HOSE FITTING 스페이서
75.035	KIT, QUICK DISCONNECT FOR DEVICE HOSE ADAPTATION 키트



 ATTACHMENT HOSE REFERENCE

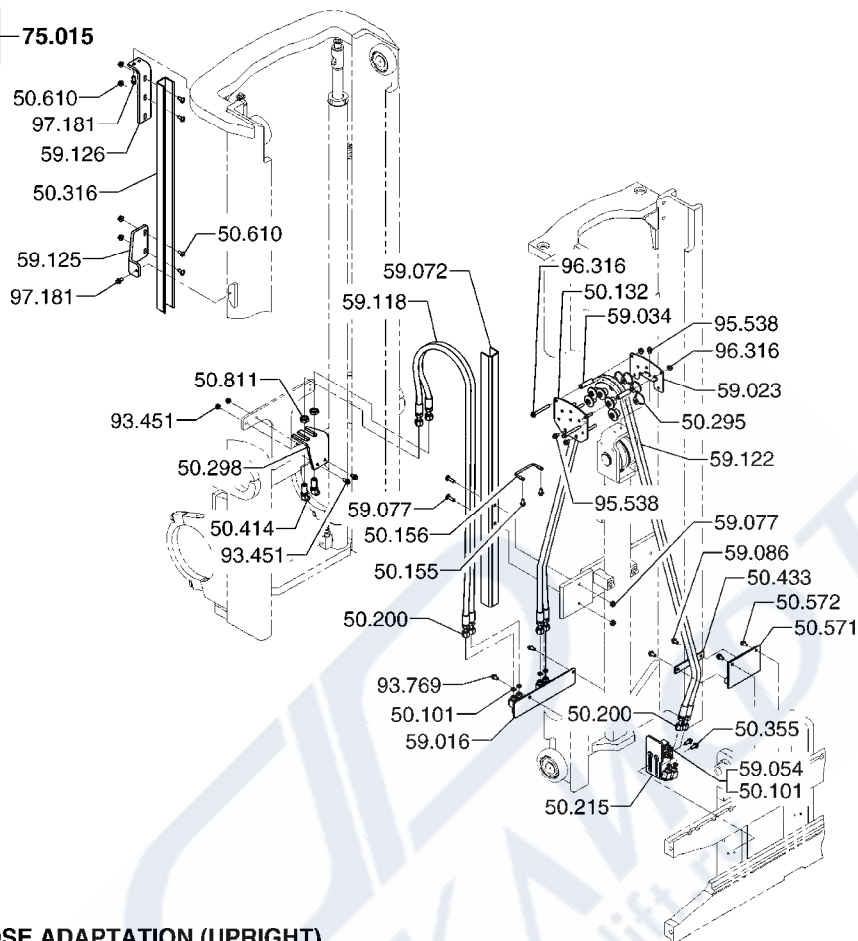


ATTACHMENT HOSE ADAPTATION (UPRIGHT)

50-269

50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 씰	50.811	NUT, DEVICE HOSE FITTING 너트
50.132	BRACKET, DEVICE HOSE REEL 브라켓	59.016	JUNCTION BLOCK, DEVICE HOSE 정크션 블록
50.155	FASTENER, DEVICE HOSE CLIP 패스너	59.023	BRACKET, DEVICE HOSE REEL MOUNTING 브라켓
50.156	CLIP, DEVICE HOSE 클립	59.034	TUBE, DEVICE HOSE REEL MOUNTING BRACKET 튜브
50.200	COUPLING, DEVICE HOSE 커플링	59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록	59.072	GUARD, DEVICE HOSE 가드
50.295	ROLLER, DEVICE HOSE UPPER 롤러	59.077	FASTENER, DEVICE HOSE GUARD 패스너
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓	59.086	FASTENER, DEVICE HOSE CLIP BRACKET 패스너
50.316	GUARD, DEVICE RH HOSE 가드	59.101	TIE STRAP, AUXILIARY FUNCTION LINES 타이스트랩
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너	59.118	LINE, DEVICE HYDRAULIC (OUTER RAIL) 라인
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅	59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
50.433	BRACKET, DEVICE HOSE CLAMP 브라켓	59.125	BRACKET, DEVICE HOSE GUARD MOUNTING 브라켓
50.571	BRACKET, DEVICE HOSE 브라켓	59.126	BRACKET, DEVICE HOSE GUARD MOUNTING 브라켓
50.572	FASTENER, DEVICE HOSE BRACKET 패스너	75.015	MODULE, ATTACHMENT HOSE LINES 모듈
50.610	FASTENER, DEVICE HOSE GUARD 패스너	93.316	DOWEL, STEERING INTERLOCK SWITCH FASTENER 다웰

93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너
93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너
95.538	FASTENER, DEVICE HOSE REEL BRACKET 패스너
96.316	FASTENER, DEVICE HOSE REEL 패스너
97.181	FASTENER, DEVICE HOSE GUARD MOUNTING BRACKET 패스너




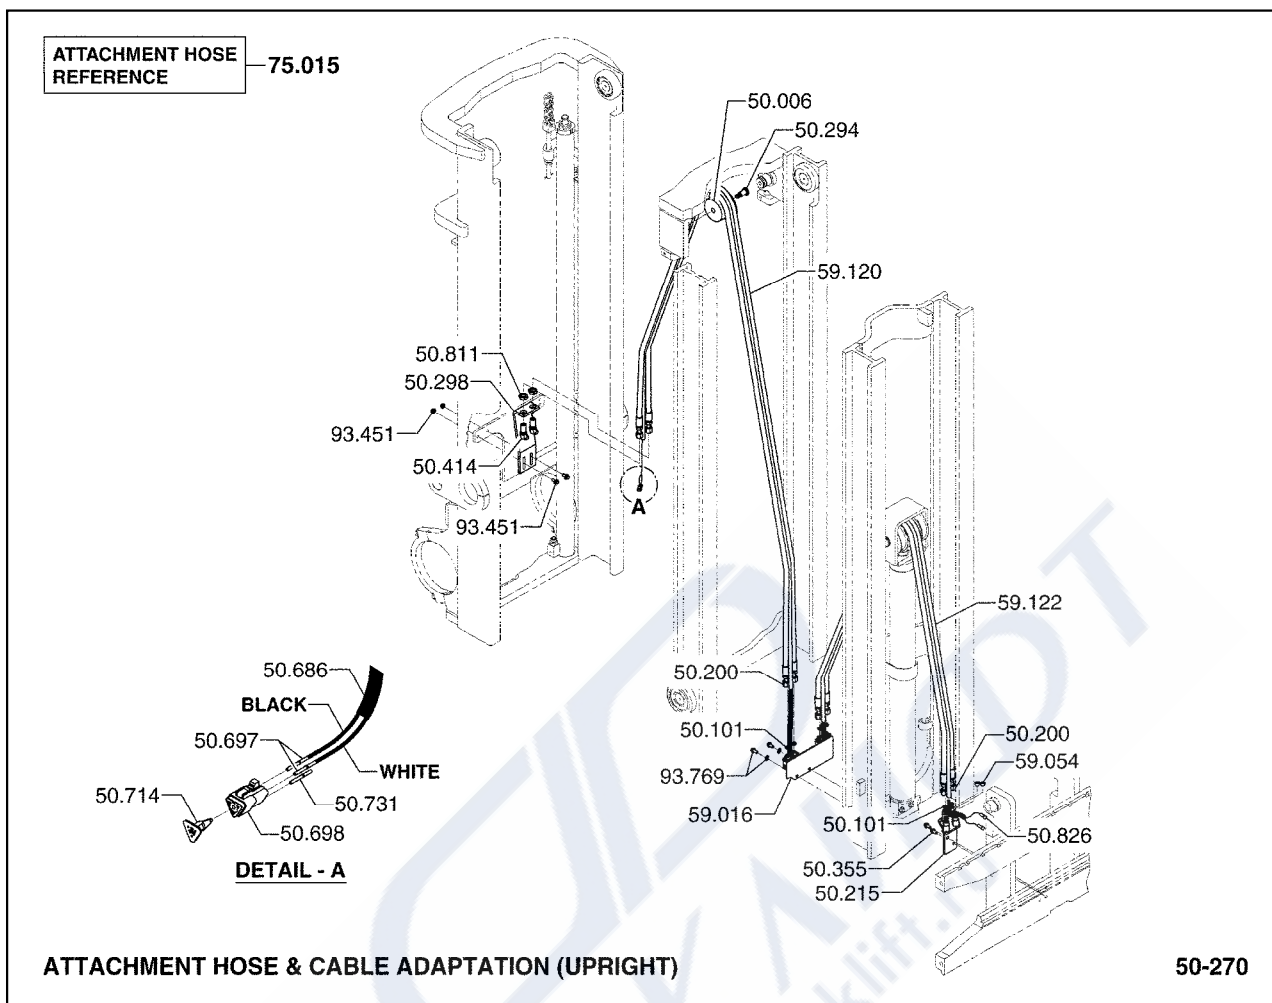 

50.006	SHEAVE, DEVICE HOSE UPPER 쉬브
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 씰
50.200	COUPLING, DEVICE HOSE 커플링
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록
50.294	PIVOT, DEVICE HOSE UPPER SHEAVE 피벗
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅
50.686	WIRE, DEVICE 와이어

50.697	CONNECTOR, DEVICE CABLE (PIN END) 커넥터
50.698	CONNECTOR, DEVICE CABLE (SOCKET END) 커넥터
50.714	LOCK, DEVICE CABLE CONNECTOR 로크
50.731	PLUG, DEVICE CABLE CONNECTOR 플러그
50.811	NUT, DEVICE HOSE FITTING 너트
50.826	TERMINAL, DEVICE CABLE 터미널
59.016	JUNCTION BLOCK, DEVICE HOSE 정크션 블록
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.120	LINE, DEVICE HYDRAULIC (INTERMEDIATE RAIL) 라인
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너
93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너

 ATTACHMENT HOSE
REFERENCE 75.015

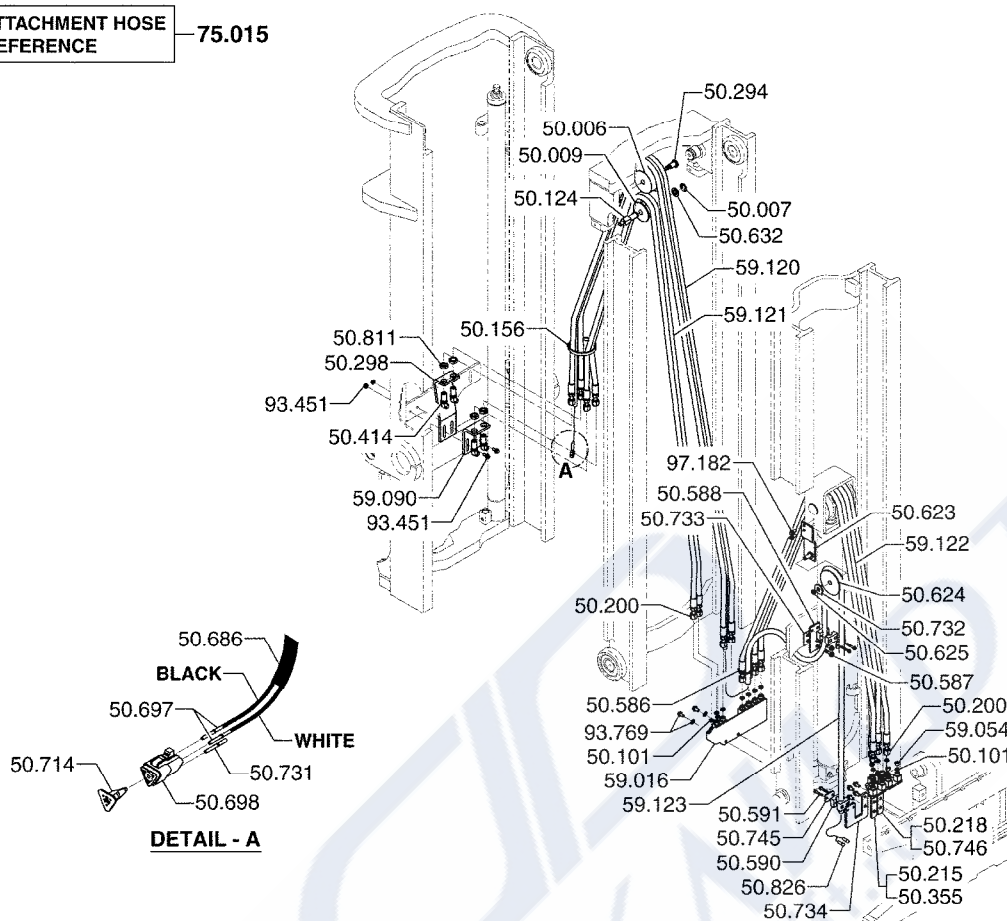


ATTACHMENT HOSE & CABLE ADAPTATION (UPRIGHT)

50-289

50.006	SHEAVE, DEVICE HOSE UPPER 쉬브	50.588	BRACKET, DEVICE CABLE CLAMP 브라켓
50.007	RETAINER, DEVICE HOSE SHEAVE 리테이너	50.590	CLAMP, DEVICE CABLE LOWER 클램프
50.009	SHEAVE, DEVICE HOSE LOWER 쉬브	50.591	FASTENER, DEVICE CABLE CLAMP LOWER 패스너
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 씰	50.623	BRACKET, DEVICE CABLE LOWER SHEAVE 브라켓
50.124	PIVOT, DEVICE HOSE LOWER RH SHEAVE 피봇	50.624	SHEAVE, DEVICE CABLE 쉬브
50.156	CLIP, DEVICE HOSE 클립	50.625	RETAINER, DEVICE CABLE LOWER SHEAVE 리테이너
50.200	COUPLING, DEVICE HOSE 커플링	50.632	SPACER, DEVICE HOSE SHEAVE 스페이서
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록	50.686	WIRE, DEVICE 와이어
50.218	TERMINAL BLOCK, DEVICE LH HOSE 터미널블록	50.697	CONNECTOR, DEVICE CABLE (PIN END) 커넥터
50.294	PIVOT, DEVICE HOSE UPPER SHEAVE 피봇	50.698	CONNECTOR, DEVICE CABLE (SOCKET END) 커넥터
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓	50.714	LOCK, DEVICE CABLE CONNECTOR 로크
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너	50.731	PLUG, DEVICE CABLE CONNECTOR 플러그
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅	50.732	SPACER, DEVICE CABLE SHEAVE 스페이서
50.586	CLIP, DEVICE CABLE 클립	50.733	SPACER, DEVICE CABLE CLAMP BRACKET 스페이서
50.587	FASTENER, DEVICE CABLE CLIP 패스너	50.734	BRACKET, DEVICE CABLE TERMINAL CLAMP 브라켓


50.745	BRACKET, DEVICE CABLE TERMINAL CLAMP MOUNTING 브라켓
50.746	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너
50.811	NUT, DEVICE HOSE FITTING 너트
50.826	TERMINAL, DEVICE CABLE 터미널
59.016	JUNCTION BLOCK, DEVICE HOSE 정크션 블록
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.090	BRACKET, DEVICE HOSE TERMINAL 브라켓
59.120	LINE, DEVICE HYDRAULIC (INTERMEDIATE RAIL) 라인
59.121	LINE, DEVICE HYDRAULIC (INTERMEDIATE RAIL) 라인
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
59.123	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너
93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너
97.182	FASTENER, DEVICE CABLE LOWER SHEAVE BRACKET 패스너

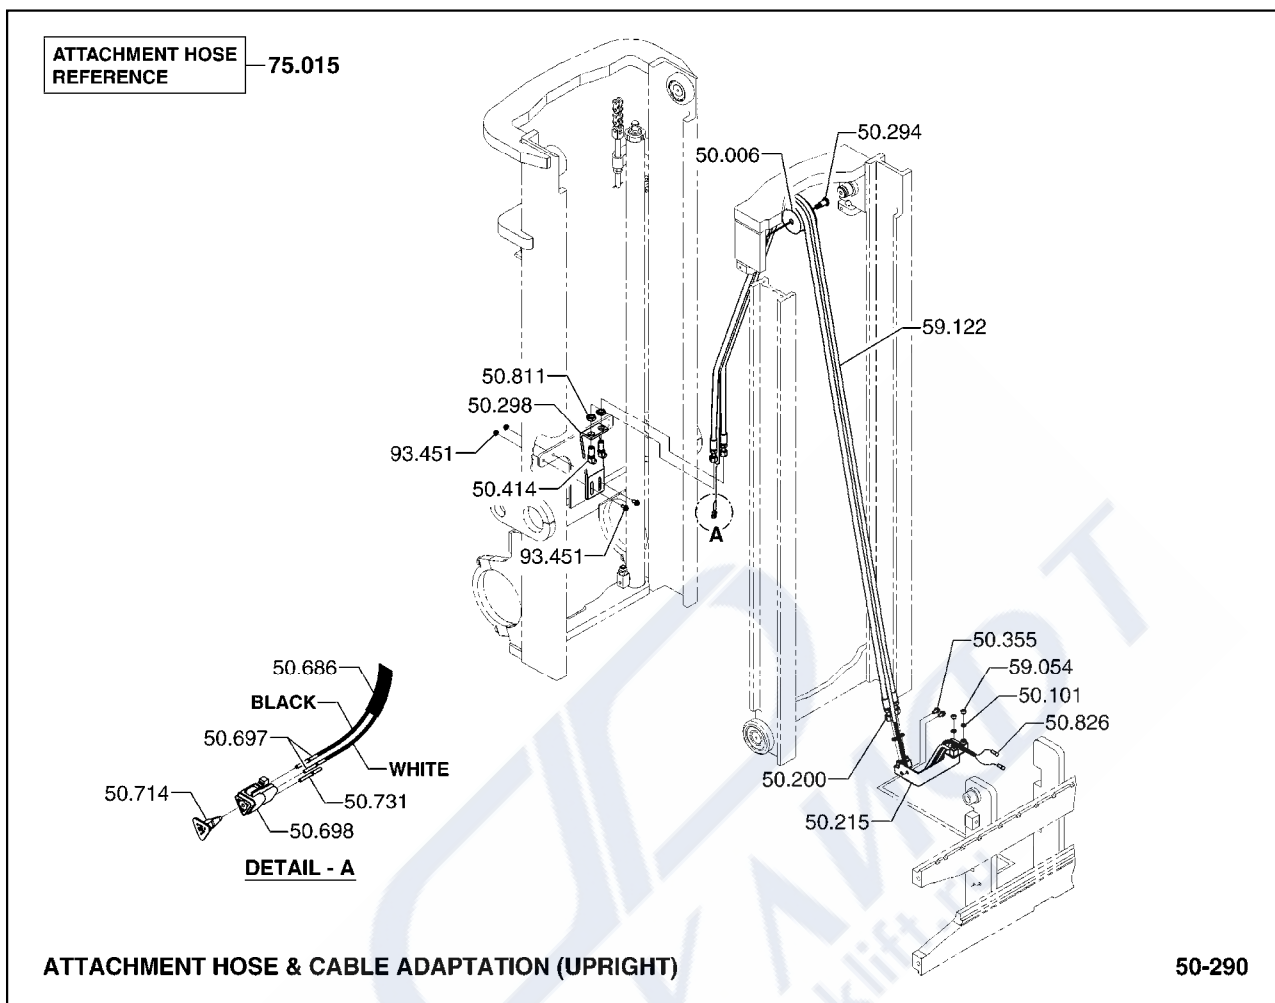 

50.006	SHEAVE, DEVICE HOSE UPPER 쉬브
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 씰
50.200	COUPLING, DEVICE HOSE 커플링
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록
50.294	PIVOT, DEVICE HOSE UPPER SHEAVE 피벗
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅
50.686	WIRE, DEVICE 와이어

50.697	CONNECTOR, DEVICE CABLE (PIN END) 커넥터
50.698	CONNECTOR, DEVICE CABLE (SOCKET END) 커넥터
50.714	LOCK, DEVICE CABLE CONNECTOR 로크
50.731	PLUG, DEVICE CABLE CONNECTOR 플러그
50.811	NUT, DEVICE HOSE FITTING 너트
50.826	TERMINAL, DEVICE CABLE 터미널
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너




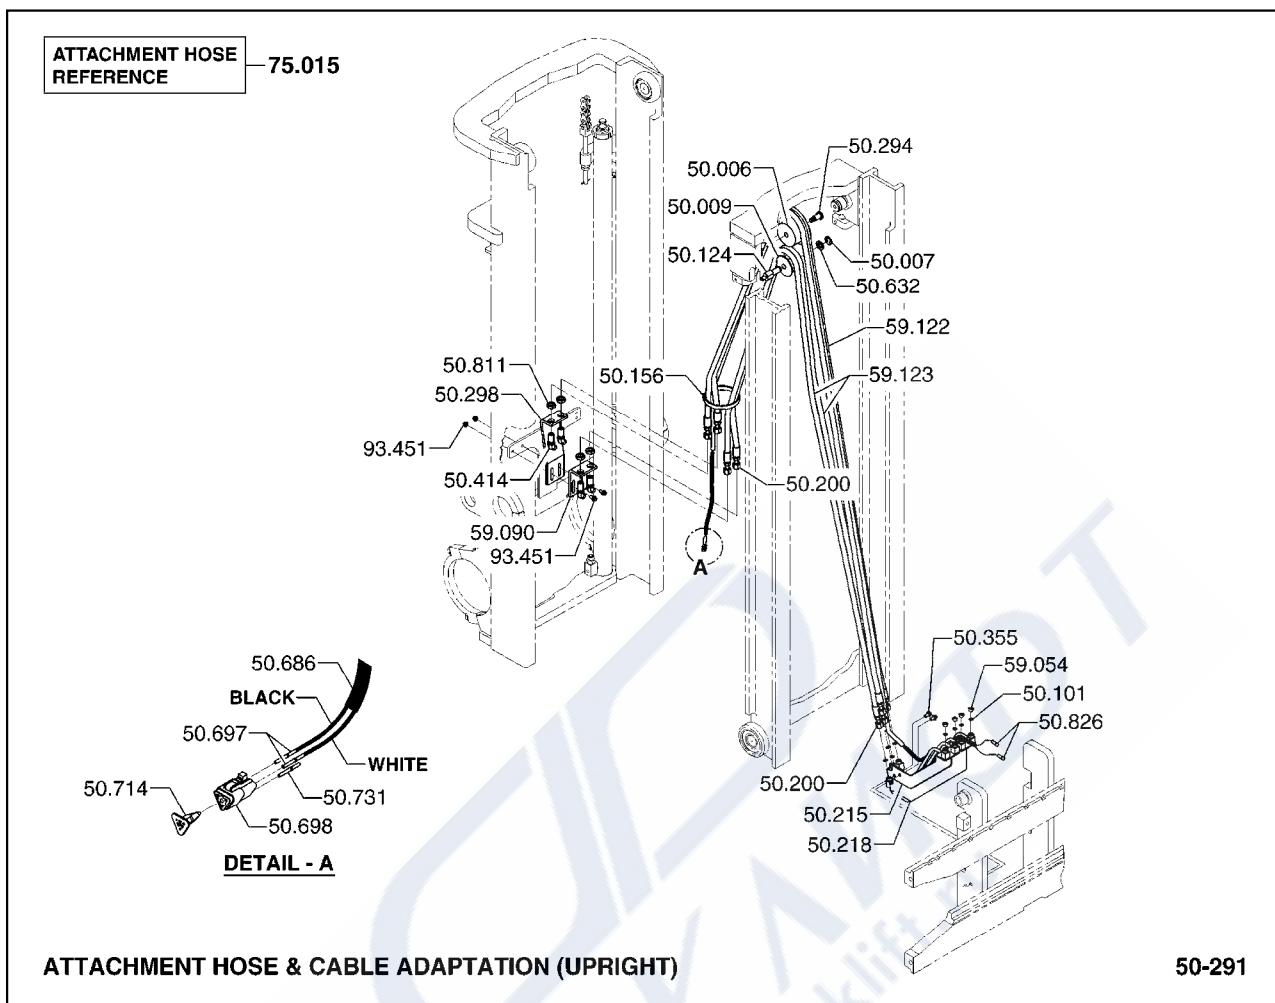 

50.006	SHEAVE, DEVICE HOSE UPPER 쉬브
50.007	RETAINER, DEVICE HOSE SHEAVE 리테이너
50.009	SHEAVE, DEVICE HOSE LOWER 쉬브
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 씰
50.124	PIVOT, DEVICE HOSE LOWER RH SHEAVE 피벗
50.156	CLIP, DEVICE HOSE 클립
50.200	COUPLING, DEVICE HOSE 커플링
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록
50.218	TERMINAL BLOCK, DEVICE LH HOSE 터미널블록

50.294	PIVOT, DEVICE HOSE UPPER SHEAVE 피벗
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅
50.632	SPACER, DEVICE HOSE SHEAVE 스페이서
50.686	WIRE, DEVICE 와이어
50.697	CONNECTOR, DEVICE CABLE (PIN END) 커넥터
50.698	CONNECTOR, DEVICE CABLE (SOCKET END) 커넥터
50.714	LOCK, DEVICE CABLE CONNECTOR 로크
50.731	PLUG, DEVICE CABLE CONNECTOR 플러그
50.811	NUT, DEVICE HOSE FITTING 너트
50.826	TERMINAL, DEVICE CABLE 터미널
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.090	BRACKET, DEVICE HOSE TERMINAL 브라켓
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
59.123	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너

 ATTACHMENT HOSE
REFERENCE 75.015

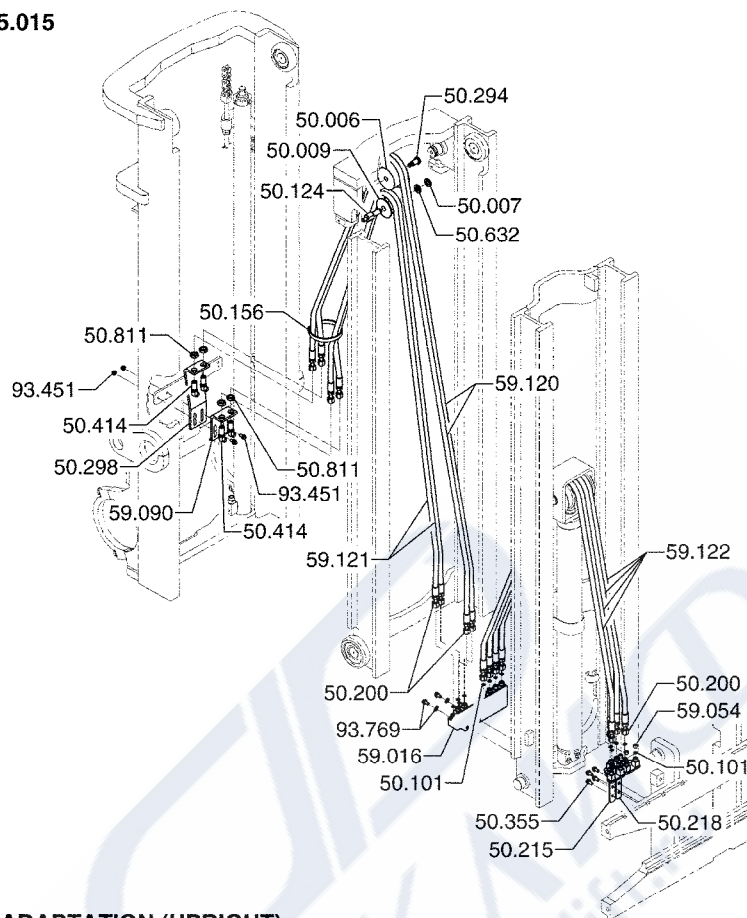


ATTACHMENT HOSE ADAPTATION (UPRIGHT)

50-407


50.006	SHEAVE, DEVICE HOSE UPPER 쉬브
50.007	RETAINER, DEVICE HOSE SHEAVE 리테이너
50.009	SHEAVE, DEVICE HOSE LOWER 쉬브
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 씰
50.124	PIVOT, DEVICE HOSE LOWER RH SHEAVE 피벗
50.156	CLIP, DEVICE HOSE 클립
50.200	COUPLING, DEVICE HOSE 커플링
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록
50.218	TERMINAL BLOCK, DEVICE LH HOSE 터미널블록

50.294	PIVOT, DEVICE HOSE UPPER SHEAVE 피벗
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅
50.632	SPACER, DEVICE HOSE SHEAVE 스페이서
50.811	NUT, DEVICE HOSE FITTING 너트
59.016	JUNCTION BLOCK, DEVICE HOSE 정크션 블록
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.090	BRACKET, DEVICE HOSE TERMINAL 브라켓
59.120	LINE, DEVICE HYDRAULIC (INTERMEDIATE RAIL) 라인
59.121	LINE, DEVICE HYDRAULIC (INTERMEDIATE RAIL) 라인
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너
93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너

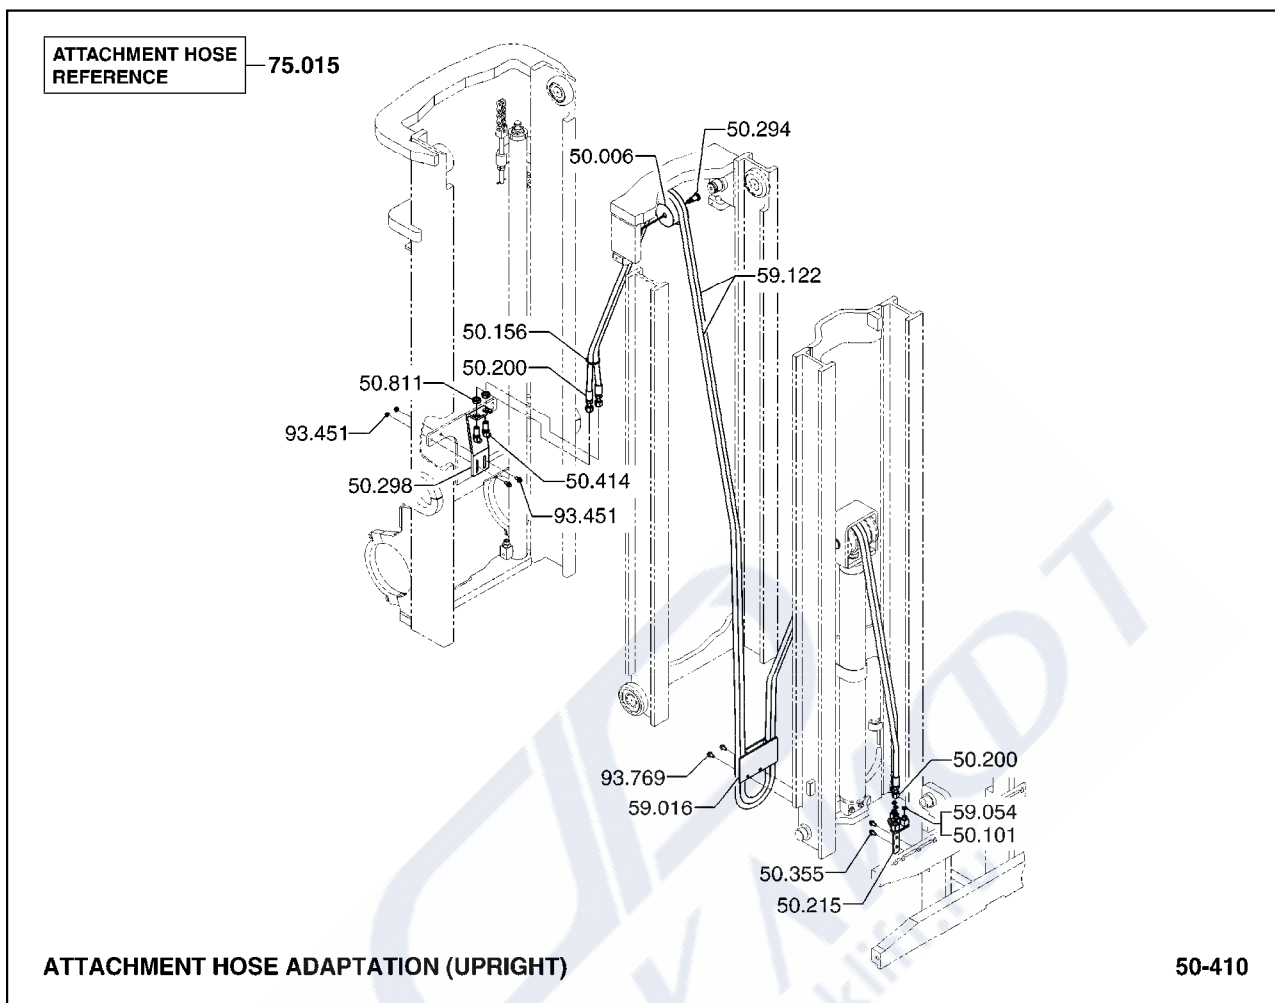 


50.006	SHEAVE, DEVICE HOSE UPPER шнёр
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING шнёр
50.156	CLIP, DEVICE HOSE шнёр
50.200	COUPLING, DEVICE HOSE шнёр
50.215	TERMINAL BLOCK, DEVICE HOSE шнёр
50.294	PIVOT, DEVICE HOSE UPPER SHEAVE шнёр
50.298	BRACKET, DEVICE HOSE TERMINAL шнёр
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK шнёр
50.414	FITTING, DEVICE HOSE CONNECTOR шнёр


50.811	NUT, DEVICE HOSE FITTING 너트
59.016	JUNCTION BLOCK, DEVICE HOSE 정크션 블록
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너
93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너

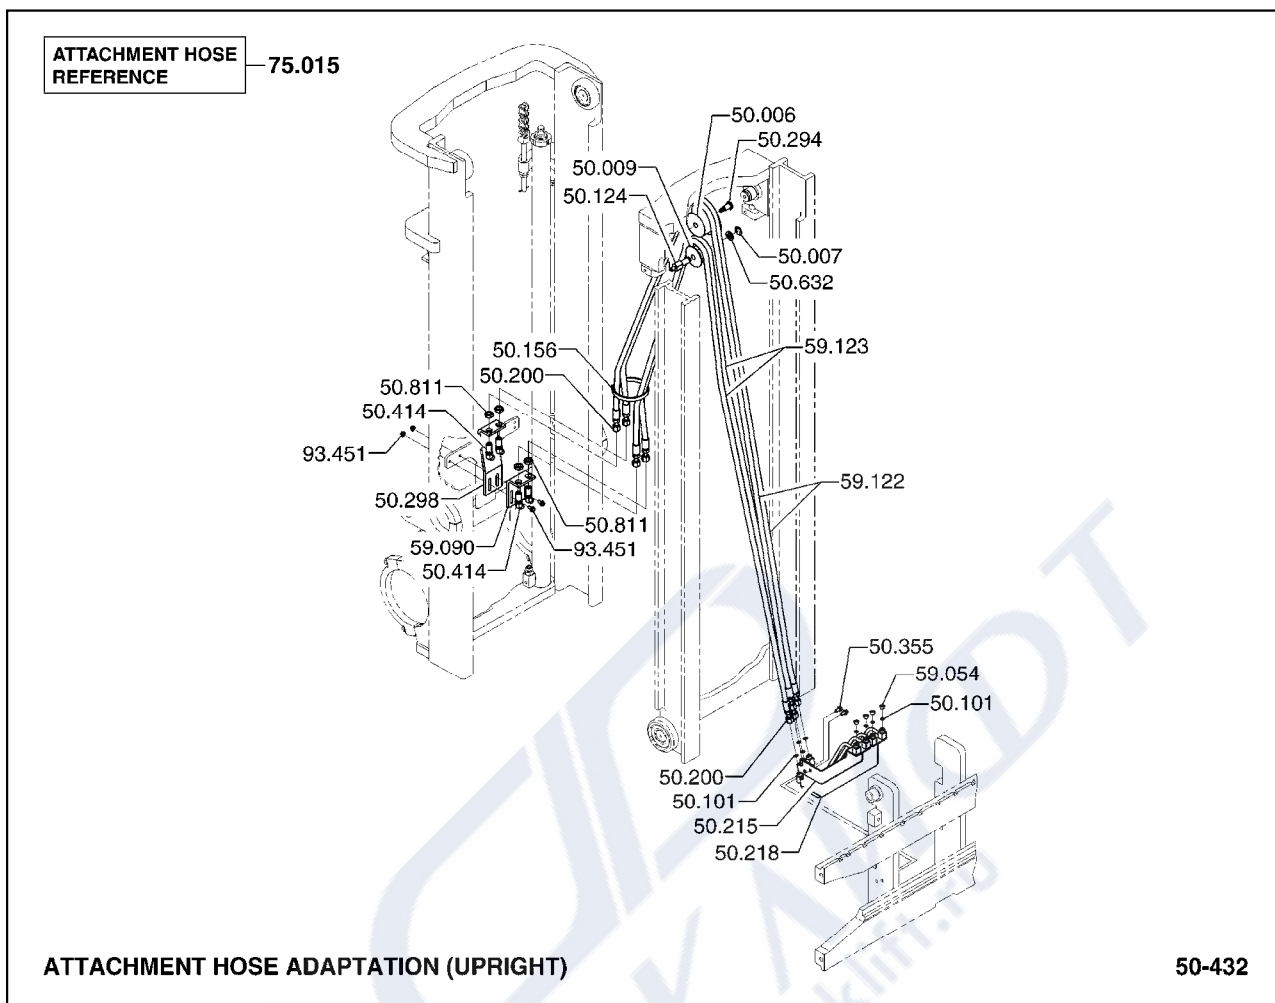 

50.006	SHEAVE, DEVICE HOSE UPPER 쉬브
50.007	RETAINER, DEVICE HOSE SHEAVE 리테이너
50.009	SHEAVE, DEVICE HOSE LOWER 쉬브
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 씰
50.124	PIVOT, DEVICE HOSE LOWER RH SHEAVE 피벗
50.156	CLIP, DEVICE HOSE 클립
50.200	COUPLING, DEVICE HOSE 커플링
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록
50.218	TERMINAL BLOCK, DEVICE LH HOSE 터미널블록


50.294	PIVOT, DEVICE HOSE UPPER SHEAVE 피벗
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅
50.632	SPACER, DEVICE HOSE SHEAVE 스페이서
50.811	NUT, DEVICE HOSE FITTING 너트
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.090	BRACKET, DEVICE HOSE TERMINAL 브라켓
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
59.123	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너

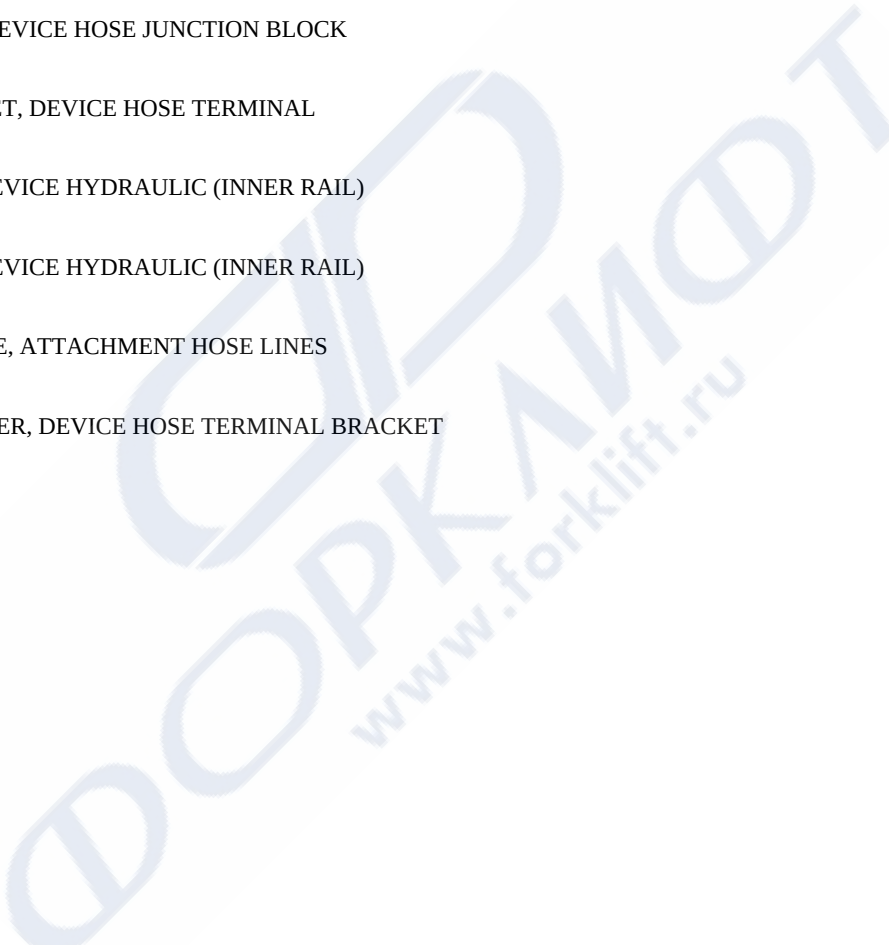 

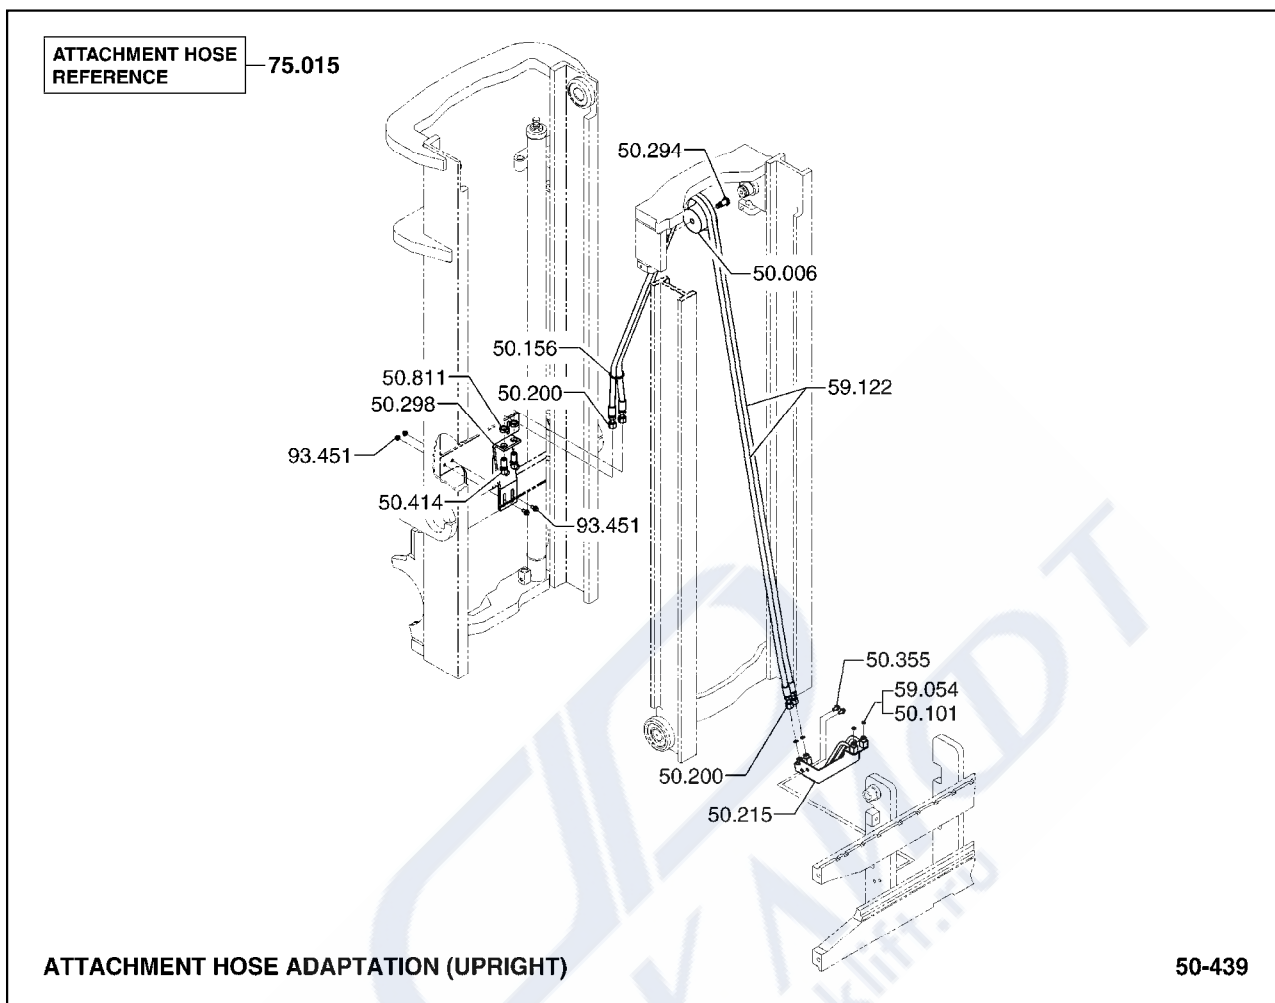 


50.006	SHEAVE, DEVICE HOSE UPPER 쉬브
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 씰
50.156	CLIP, DEVICE HOSE 클립
50.200	COUPLING, DEVICE HOSE 커플링
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록
50.294	PIVOT, DEVICE HOSE UPPER SHEAVE 피벗
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅

50.811	NUT, DEVICE HOSE FITTING 너트
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너

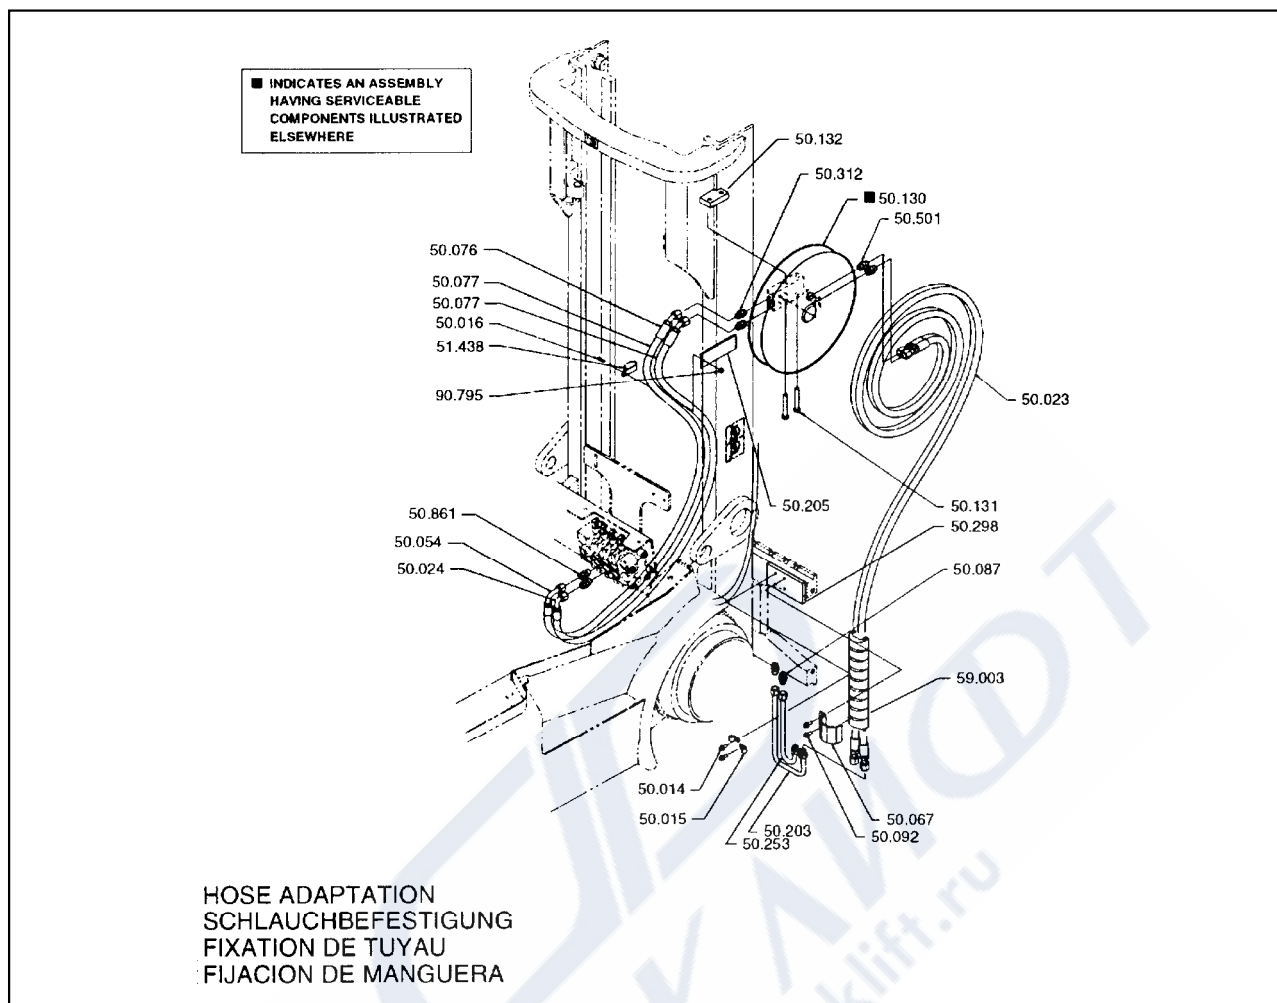 

50.014	FASTENER, DEVICE HOSE CLIP TO BRACKET RH 패스너
50.015	CLIP, DEVICE LINE TO UPRIGHT 클립
50.016	FASTENER, DEVICE LINE TO UPRIGHT CLIP 패스너
50.023	LINE, DEVICE HYDRAULIC 라인
50.024	COUPLING, DEVICE RH HOSE (VALVE END) 커플링
50.054	COUPLING, DEVICE LH HOSE (VALVE END) 커플링
50.067	CLAMP, DEVICE HOSE TO BRACKET 클램프
50.076	COUPLING, DEVICE RH HOSE (REEL INLET) 커플링
50.077	LINE, DEVICE RH HYDRAULIC (VALVE TO REEL) 라인


50.087	FITTING, DEVICE LH HYDRAULIC HOSE 피팅
50.092	FASTENER, DEVICE HOSE TO BRACKET RH CLAMP 패스너
50.130	REEL ASSEMBLY, DEVICE RH HOSE 릴어셈블리
50.131	FASTENER, DEVICE RH HOSE REEL 패스너
50.132	BRACKET, DEVICE HOSE REEL 브라켓
50.203	LINE, DEVICE HYDRAULIC (AT CARRIAGE) 라인
50.205	BRACKET, DEVICE LINE CLAMP 브라켓
50.253	LINE, DEVICE HYDRAULIC (AT CARRIAGE) 라인
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.312	FITTING, DEVICE RH HOSE REEL INLET 피팅
50.501	FITTING, DEVICE HOSE REEL OUTLET 피팅
50.861	FITTING, AUXILIARY VALVE A PORT 피팅
51.438	CLIP, DEVICE HOSE 클립
59.003	RETAINER, DEVICE HOSE 리테이너
90.795	NUT, DEVICE HOSE CLAMP FASTENER 너트

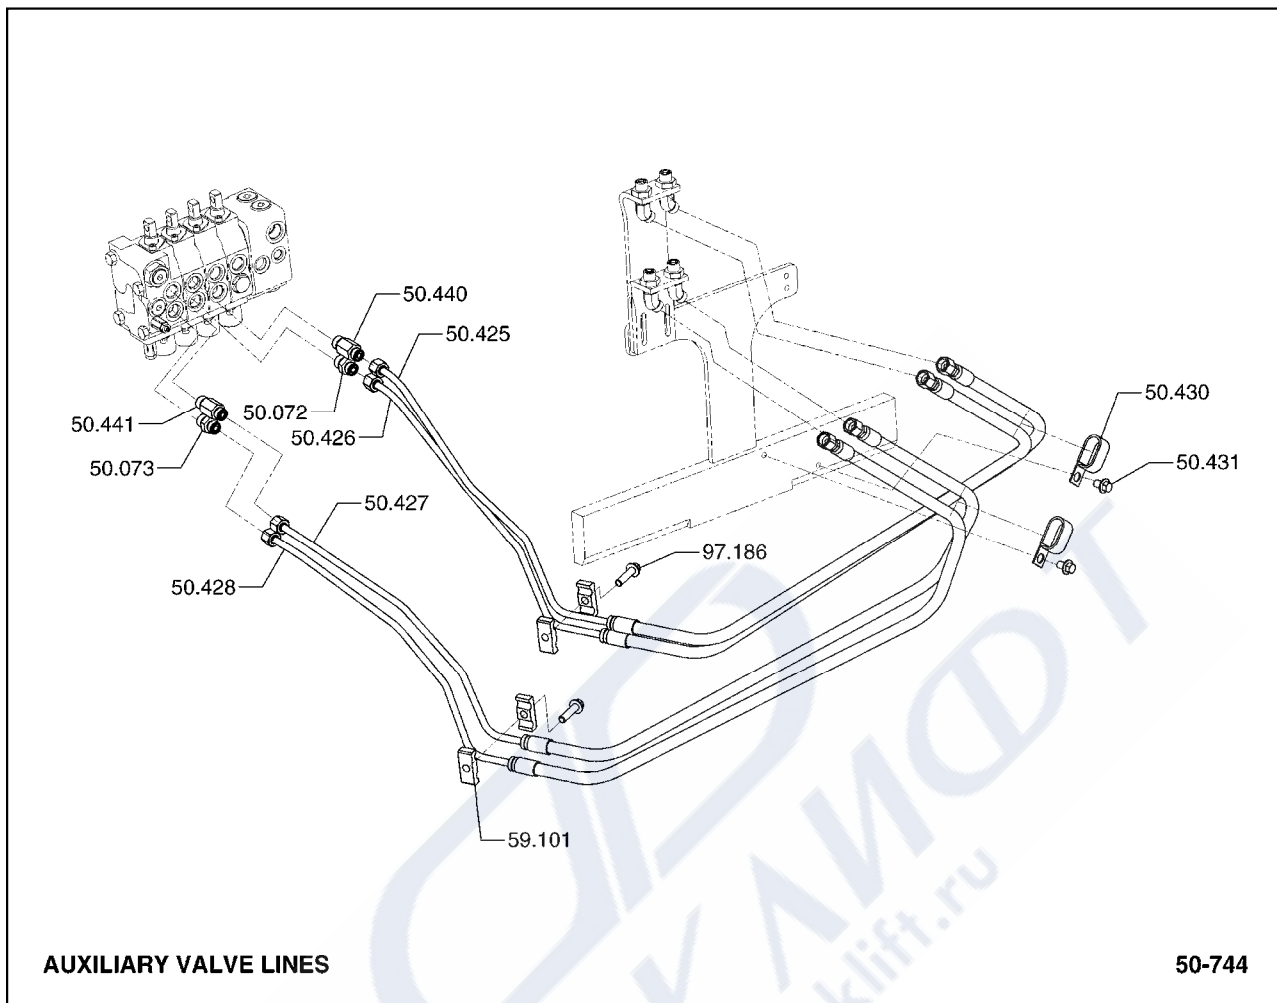 

50.072	FITTING, 1ST AUXILIARY VALVE "B" PORT 피팅
50.073	FITTING, 2ND AUXILIARY VALVE "B" PORT 피팅
50.425	LINE, 1ST AUXILIARY VALVE "A" PORT 라인
50.426	LINE, 1ST AUXILIARY VALVE "B" PORT 라인
50.427	LINE, 2ND AUXILIARY VALVE "A" PORT 라인
50.428	LINE, 2ND AUXILIARY VALVE "B" PORT 라인
50.430	CLAMP, AUXILIARY VALVE LINES 클램프
50.431	FASTENER, AUX VALVE LINES CLAMP 패스너
50.440	FITTING, 1ST AUXILIARY VALVE "A" PORT 피팅


50.441	FITTING, 2ND AUXILIARY VALVE "A" PORT 피팅
59.101	TIE STRAP, AUXILIARY FUNCTION LINES 타이스트랩
97.186	FASTENER, AUX VALVE LINES CLAMP 패스너



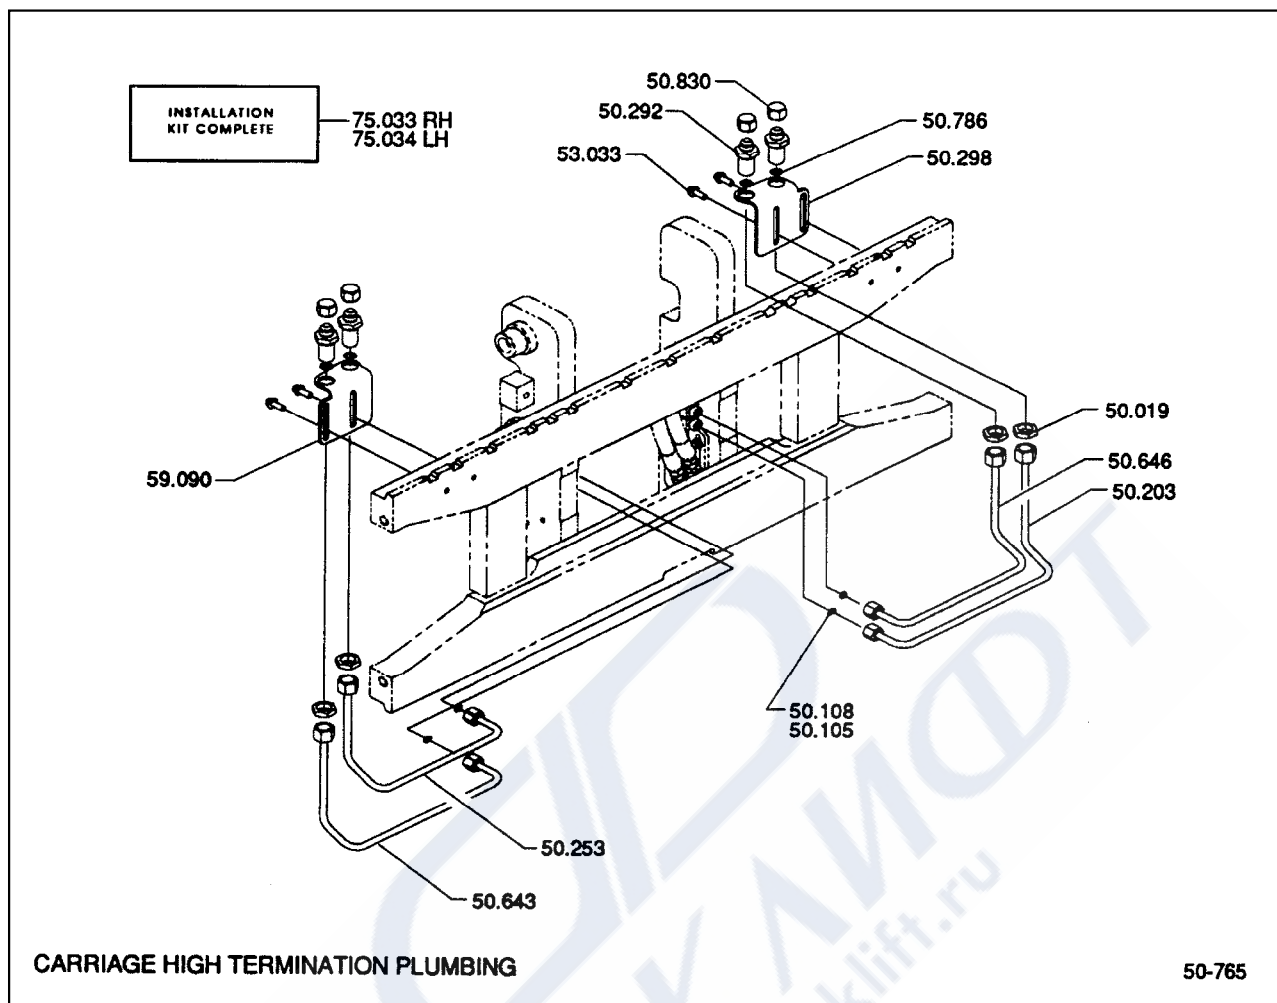 


50.019	FASTENER, DEVICE HOSE DISCONNECT 패스너
50.105	SEAL, DEVICE HOSE SWIVEL COUPLING PLUG 씰
50.108	SEAL, DEVICE HOSE SWIVEL COUPLING INLET PORT 씰
50.203	LINE, DEVICE HYDRAULIC (AT CARRIAGE) 라인
50.253	LINE, DEVICE HYDRAULIC (AT CARRIAGE) 라인
50.292	FITTING, DEVICE RH HYDRAULIC HOSE 피팅
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.643	LINE, DEVICE UPPER (AT CARRIAGE) 라인
50.646	LINE, DEVICE 라인


50.786	SEAL, DEVICE RH HOSE TERMINAL BLOCK PORT 씰
50.830	CAP, DEVICE HOSE REEL FITTING 캡
53.033	FASTENER, HOSE TERMINAL BRACKET 패스너
59.090	BRACKET, DEVICE HOSE TERMINAL 브라켓
75.033	KIT, CARRIAGE TERMINATION PIPING - RH 키트
75.034	KIT, CARRIAGE TERMINATION PIPING - LH 키트

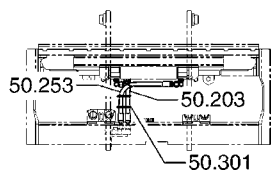 

 
**MODEL: GTX162
GEX162**
UPRIGHT: STANDARD

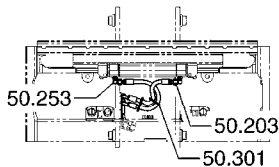

 
**MODEL: GTX162, GEX162
EPX162, CMP158
P152, TMX250, ESX250**
UPRIGHT: TRIPLE STAGE & HI-LO

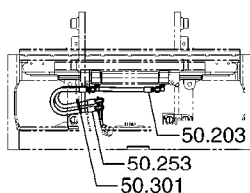

 
**MODEL: GTX162, GEX162
EPX162, CMP158
P152, TMX250, ESX250**
UPRIGHT: TRIPLE STAGE

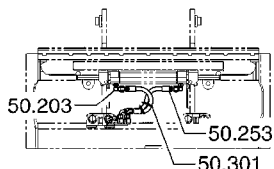

 
**MODEL: EPX162, CMP158
P152, TMX250, ESX250**
UPRIGHT: STANDARD

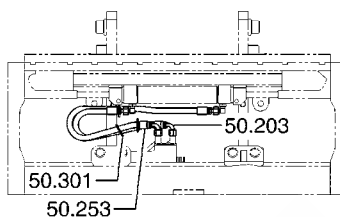

 **MODEL: EPX360, ECX360
GEX230, P232
GTS232, CQ230**
UPRIGHT: STANDARD

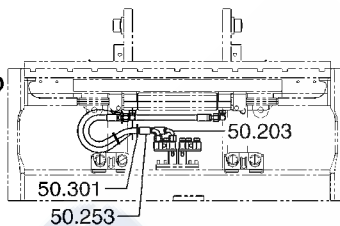

 **MODEL: EPX360, ECX360
GEX230, P232
GTS232, CQ230**
UPRIGHT: TRIPLE STAGE

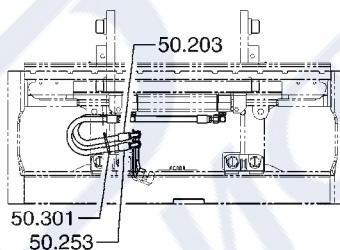


**MODEL: EPX360, ECX360
GEX230, P232
GTS232, CQ230**
UPRIGHT: HI-LO

ATTACHMENT HOSE ADAPTATION (CARRIAGE)

50-791


- | | |
|--------|--|
| 50.203 | LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인 |
| 50.253 | LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인 |
| 50.301 | CLIP, DEVICE RH HOSE (AT CARRIAGE)
클립 |

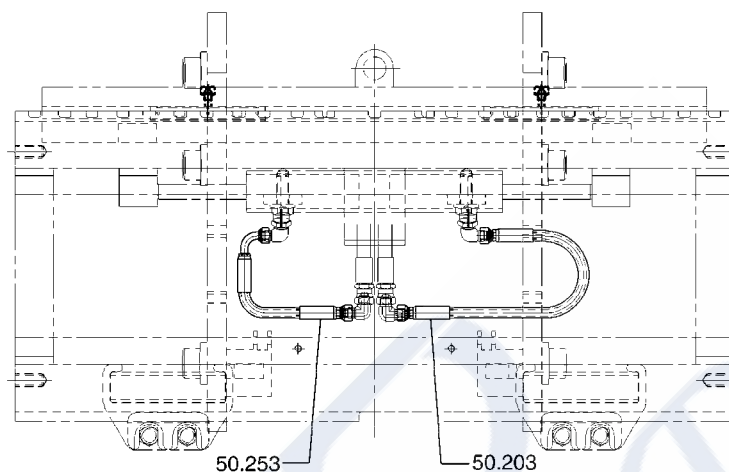 

ATTACHMENT HOSE ADAPTATION (CARRIAGE)

50-793


- | | |
|--------|--|
| 50.203 | LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인 |
| 50.253 | LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인 |

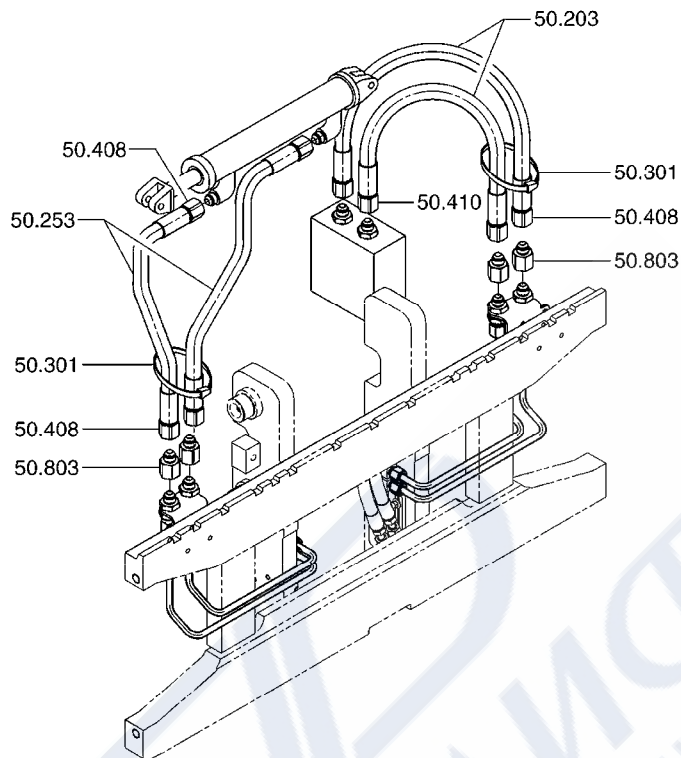 

ATTACHMENT HOSE ADAPTATION (CARRIAGE)

50-794


50.203	LINE, DEVICE HYDRAULIC (AT CARRIAGE) 라인
50.253	LINE, DEVICE HYDRAULIC (AT CARRIAGE) 라인
50.301	CLIP, DEVICE RH HOSE (AT CARRIAGE) 클립
50.408	COUPLING, DEVICE HOSE 커플링
50.410	COUPLING, DEVICE HOSE 커플링
50.803	FITTING, DEVICE HYDRAULIC LINE 피팅

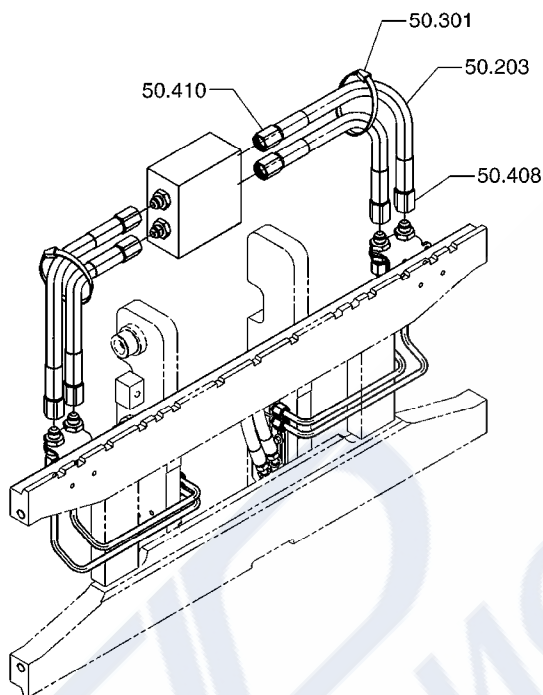 

ATTACHMENT HOSE ADAPTATION (CARRIAGE)

50-796


50.203	LINE, DEVICE HYDRAULIC (AT CARRIAGE) 라인
50.301	CLIP, DEVICE RH HOSE (AT CARRIAGE) 클립
50.408	COUPLING, DEVICE HOSE 커플링
50.410	COUPLING, DEVICE HOSE 커플링

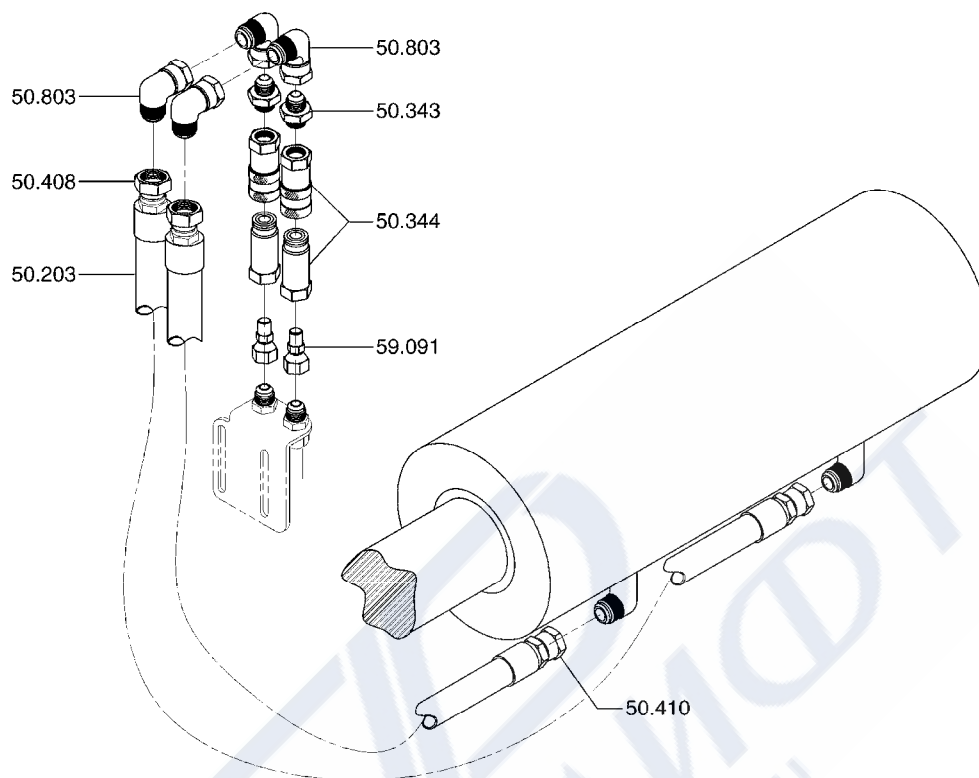 

ATTACHMENT HOSE ADAPTATION (CARRIAGE)

50-797


50.203	LINE, DEVICE HYDRAULIC (AT CARRIAGE) 라인
50.343	FITTING, DEVICE LH LINE 피팅
50.344	FITTING, DEVICE LH LINE 피팅
50.408	COUPLING, DEVICE HOSE 커플링
50.410	COUPLING, DEVICE HOSE 커플링
50.803	FITTING, DEVICE HYDRAULIC LINE 피팅
59.091	FITTING, DEVICE HYDRAULIC LINE 피팅

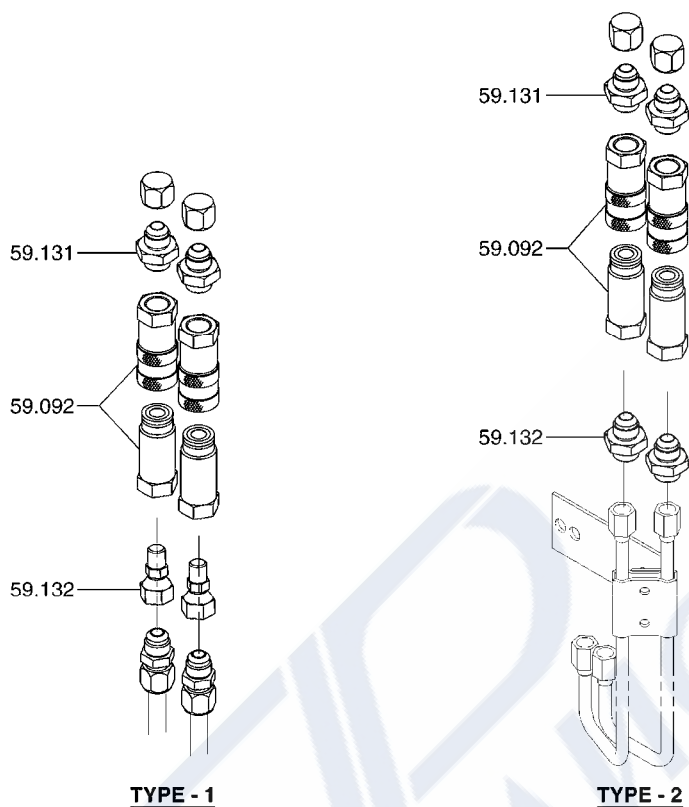 

QUICK DISCONNECT FOR DEVICE HOSE ADAPTATION

50-798


- | | |
|--------|---|
| 59.092 | QUICK DISCONNECT, DEVICE HOSE
퀵디스커넥트 |
| 59.131 | FITTING, DEVICE LINE QUICK DISCONNECT
피팅 |
| 59.132 | FITTING, DEVICE LINE QUICK DISCONNECT
피팅 |

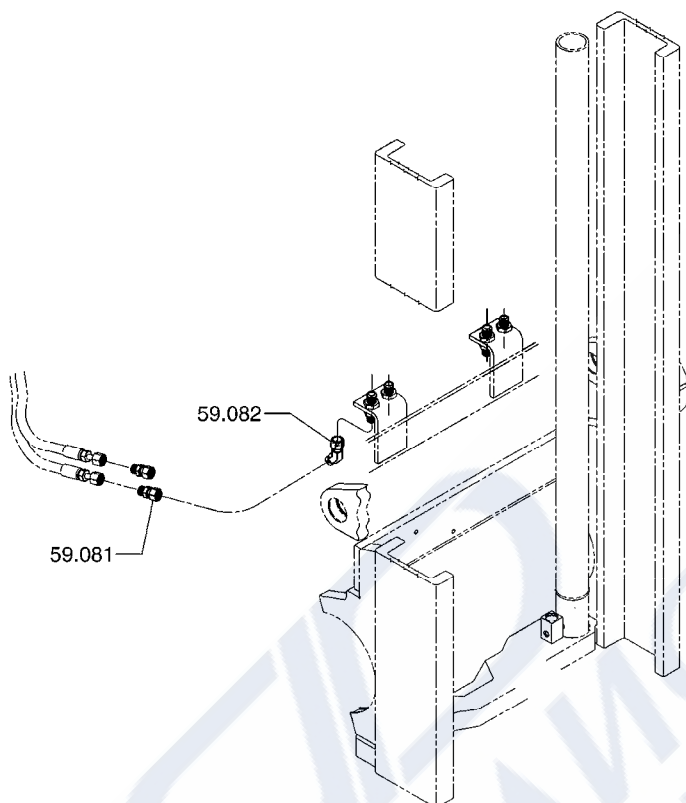 

DEVICE LINE ADAPTORS

50-819


- | | |
|--------|---|
| 59.081 | FITTING, DEVICE HOSE ADAPTOR (AT UPRIGHT)
피팅 |
| 59.082 | FITTING, DEVICE HOSE ADAPTOR (AT UPRIGHT)
피팅 |

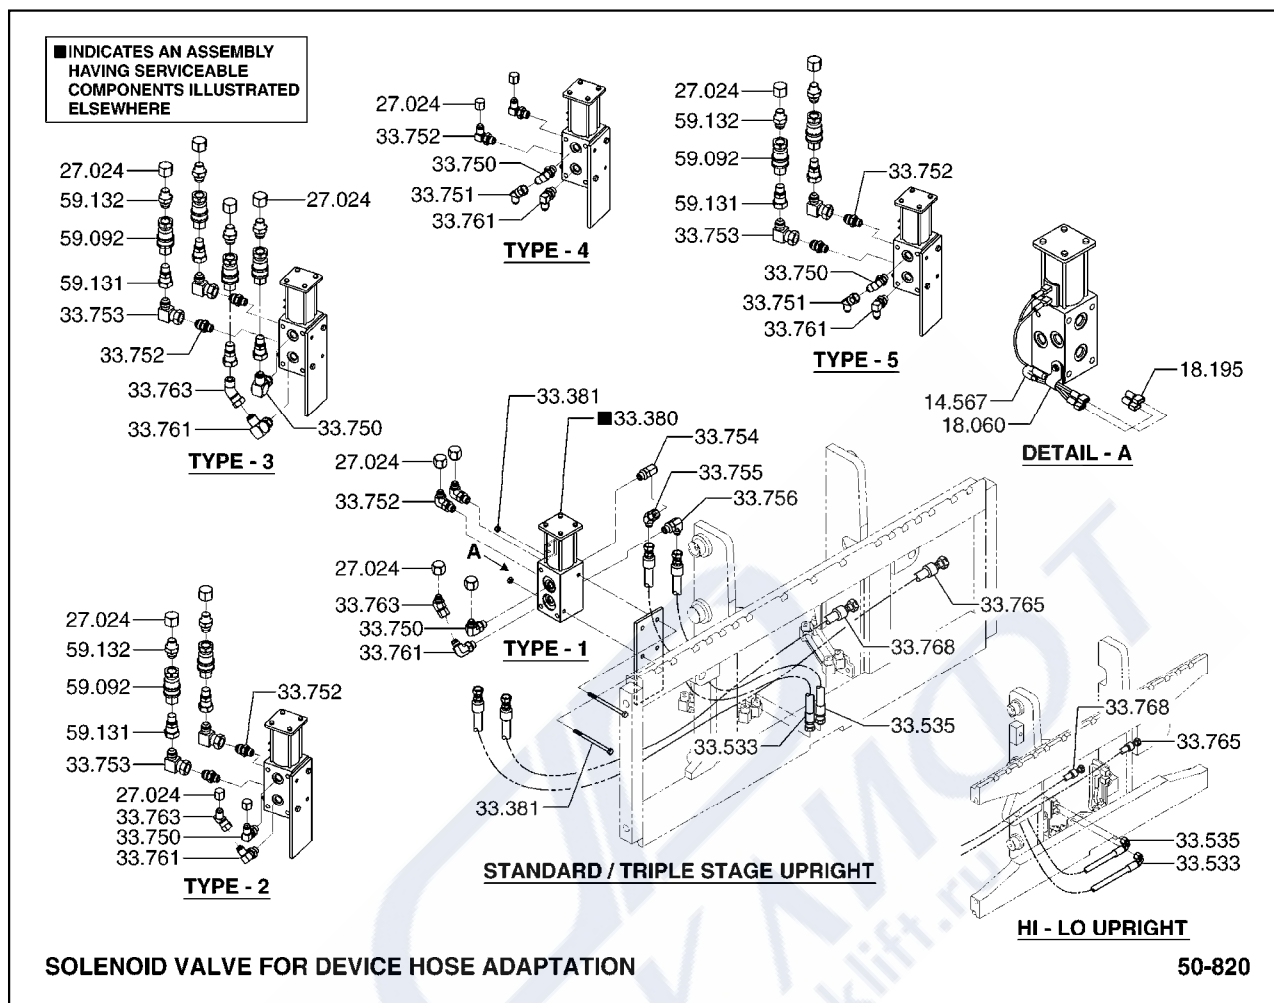 

14.567	WIRE, DEVICE SELECTOR VALVE SWITCH FEED 와이어
18.060	CLAMP, DEVICE SELECTOR VALVE CABLE 클램프
18.195	TERMINAL, DEVICE SELECTOR VALVE SWITCH FEED WIRE 터미널
27.024	PLUG, DEVICE SELECTOR VALVE OPTIONAL OUTLET PORT 플러그
33.380	VALVE ASSEMBLY, DEVICE SELECTOR SOLENOID 밸브
33.381	FASTENER, DEVICE SELECTOR VALVE 패스너
33.533	LINE, DEVICE SELECTOR VALVE "P" PORT HYDRAULIC 라인
33.535	LINE, DEVICE SELECTOR VALVE "R" PORT HYDRAULIC 라인
33.750	FITTING, DEVICE SELECTOR VALVE C1 PORT 피팅


33.751	FITTING, DEVICE SELECTOR VALVE C1 PORT 피팅
33.752	FITTING, DEVICE SELECTOR VALVE C2 PORT 피팅
33.753	FITTING, DEVICE SELECTOR VALVE C2 PORT 피팅
33.754	FITTING, DEVICE SELECTOR VALVE "P" PORT 피팅
33.755	FITTING, DEVICE SELECTOR VALVE "P" PORT 피팅
33.756	FITTING, DEVICE SELECTOR VALVE "R" PORT 피팅
33.761	FITTING, DEVICE SELECTOR VALVE C4 PORT 피팅
33.763	FITTING, DEVICE SELECTOR VALVE C4 PORT 피팅
33.765	LINE, DEVICE SELECTOR VALVE C4 PORT HYDRAULIC 라인
33.768	LINE, DEVICE SELECTOR VALVE C1 PORT HYDRAULIC 라인
59.092	QUICK DISCONNECT, DEVICE HOSE 퀵디स्क넥트
59.131	FITTING, DEVICE LINE QUICK DISCONNECT 피팅
59.132	FITTING, DEVICE LINE QUICK DISCONNECT 피팅



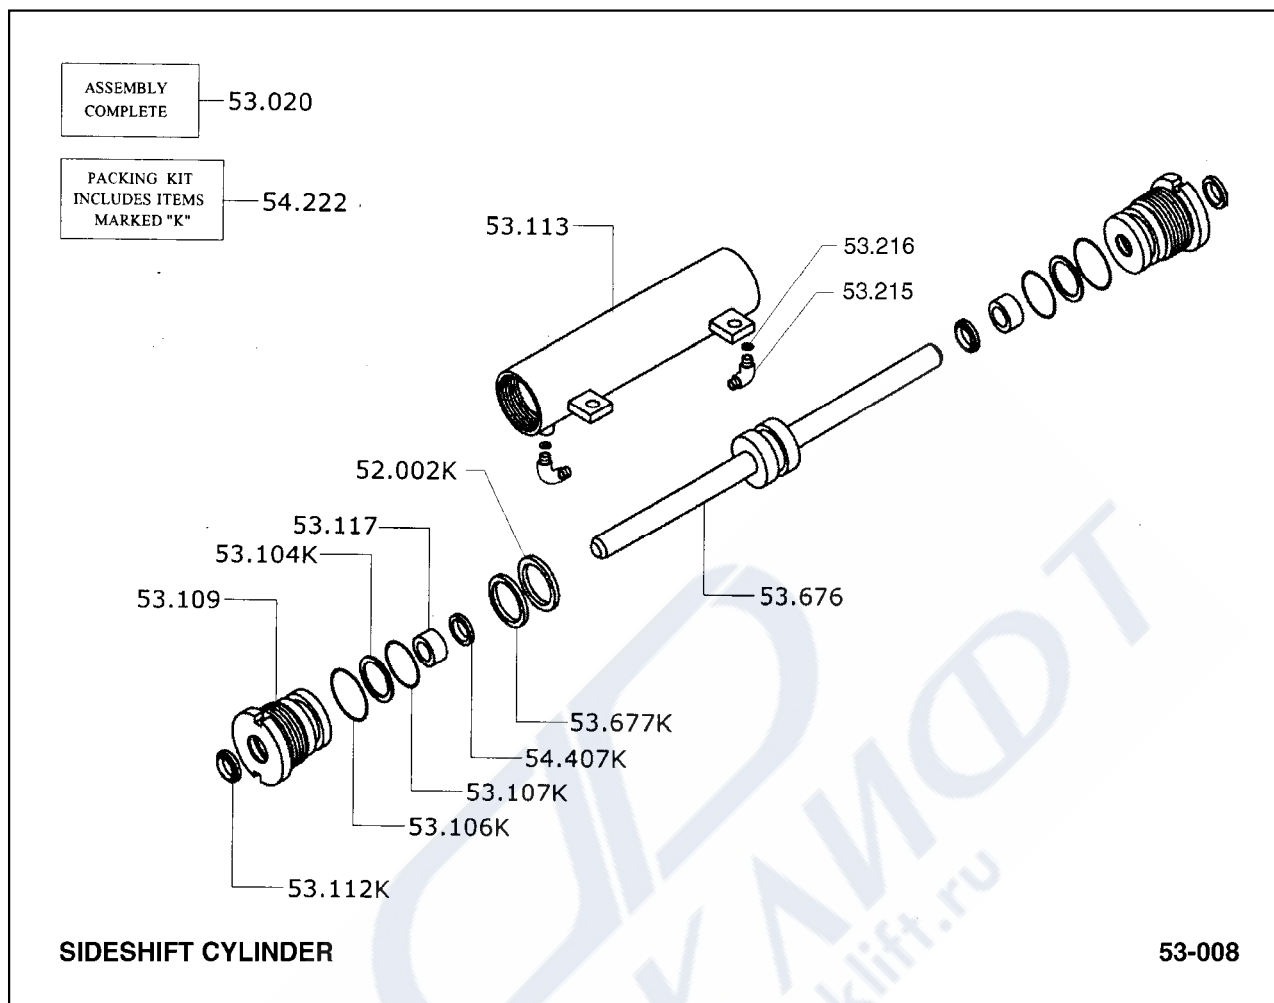 


52.002	RING, CLAMP SIDE SHIFT LIMIT CYL PISTON WEAR 링
53.020	CYLINDER ASSEMBLY, SIDE SHIFTER 실린더
53.104	RING, SIDE SHIFTER CYL PISTON PACKING BACK-UP 링
53.106	SEAL, SIDE SHIFTER CYLINDER GLAND 씰
53.107	RING, SIDE SHIFT CYL GLAND SEAL BACK-UP 링
53.109	GLAND, SIDE SHIFTER CYLINDER 그랜드
53.112	WIPER, SIDE SHIFTER CYLINDER PISTON ROD 와이퍼
53.113	CYLINDER ASSEMBLY, WELDED SIDE SHIFTER 실린더
53.117	BUSHING, SIDE SHIFTER CYLINDER GLAND 부싱

53.215	FITTING, SIDE SHIFTER CYLINDER ROD PORT 피팅
53.216	SEAL, SIDE SHIFTER CYLINDER ROD PORT FITTING 씰
53.676	ROD, SIDE SHIFTER CYLINDER PISTON 로드
53.677	SEAL, SIDE SHIFTER CYLINDER PISTON 씰
54.222	PACKING KIT, SIDE SHIFTER CYLINDER 패킹키트
54.407	SEAL, SIDE SHIFTER CYLINDER PORT ROD 씰

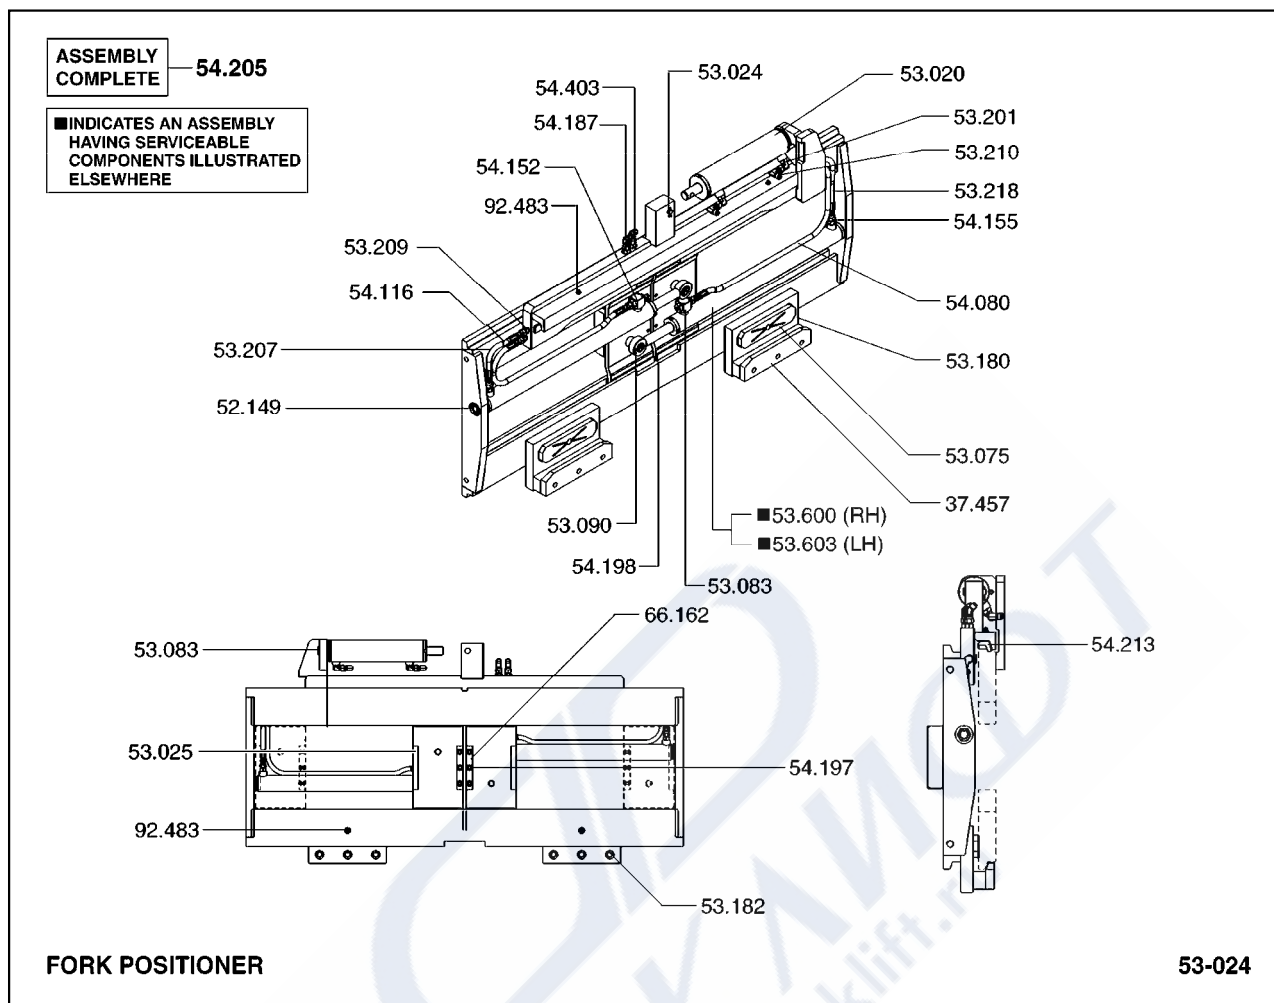 



37.457	HOOK, CAB CLOTHING HANGER 후크	53.600	CYLINDER ASSEMBLY, INBOARD RH FORK 실린더
52.149	NUT, SIDE SHIFT CYLINDER ANCHOR PORT LINE FITTING 너트	53.603	CYLINDER ASSEMBLY, INBOARD LH FORK 실린더
53.020	CYLINDER ASSEMBLY, SIDE SHIFTER 실린더	54.080	LINE, SIDE SHIFT CYLINDER ANCHOR PORT 라인
53.024	ANCHOR, SIDE SHIFTER CYLINDER BASE 앵커	54.116	LINE, SIDE SHIFT CYLINDER ROD PORT 라인
53.025	GUIDE, SIDE SHIFTER MOVABLE FRAME LOWER 가이드	54.152	FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT LINE 피팅
53.075	BEARING, SIDE SHIFTER (LOWER) 베어링	54.155	FITTING, SIDE SHIFTER CYLINDER ROD PORT LINE 피팅
53.083	FASTENER, SIDE SHIFTER CYLINDER ANCHOR 패스너	54.187	FITTING, SIDE SHIFTER ANCHOR PORT LINE 피팅
53.090	FASTENER, SIDE SHIFTER MOVABLE FRAME 패스너	54.197	FASTENER, SIDE SHIFTING BASE PLATE TO ARM 패스너
53.180	SPACER, SIDE SHIFTER BEARING 스페이서	54.198	BEARING, SIDE SHIFTER BASE PLATE ARM 베어링
53.182	FASTENER, SIDE SHIFTER HANGER 패스너	54.205	ATTACHMENT, FORK POSITIONER 어태치먼트
53.201	FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT 피팅	54.213	BEARING, SIDE SHIFTER (UPPER) 베어링
53.207	LINE, SIDE SHIFTER CYLINDER ANCHOR PORT 라인	54.403	FITTING-LUB, SIDE SHIFTER BASE PLATE ARM 피팅
53.209	FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT LINE 피팅	66.162	STOP, CARRIAGE TRAVEL 스톱
53.210	FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT LINE 피팅	92.483	NIPPLE, LUBRICATION 니플
53.218	LINE, SIDE SHIFTER CYLINDER ROD PORT 라인		

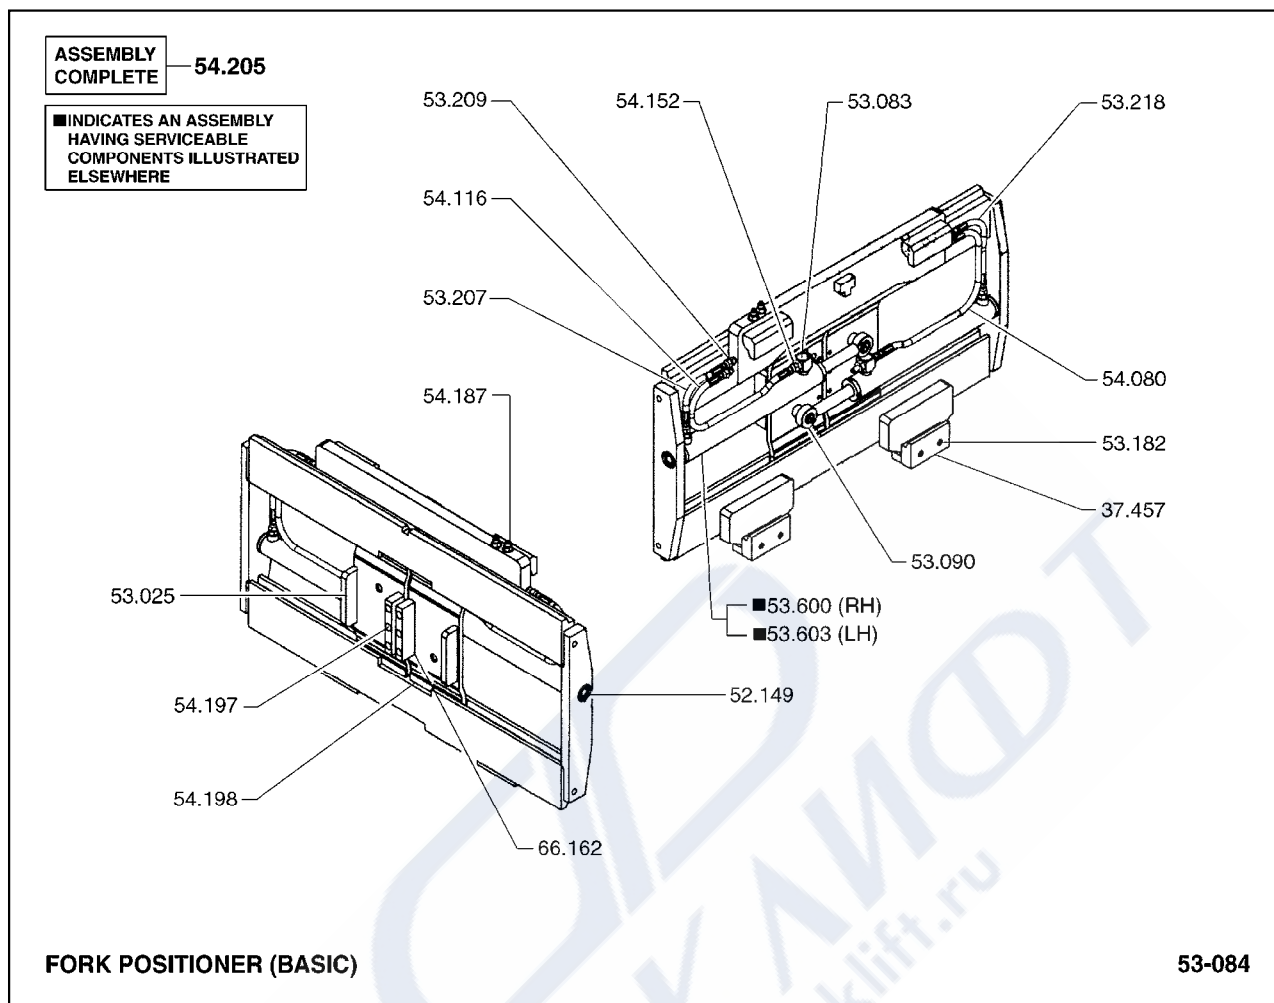 


37.457	HOOK, CAB CLOTHING HANGER 후크
52.149	NUT, SIDE SHIFTER CYLINDER ANCHOR PORT LINE FITTING 너트
53.025	GUIDE, SIDE SHIFTER MOVABLE FRAME LOWER 가이드
53.083	FASTENER, SIDE SHIFTER CYLINDER ANCHOR 패스너
53.090	FASTENER, SIDE SHIFTER MOVABLE FRAME 패스너
53.182	FASTENER, SIDE SHIFTER HANGER 패스너
53.207	LINE, SIDE SHIFTER CYLINDER ANCHOR PORT 라인
53.209	FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT LINE 피팅
53.218	LINE, SIDE SHIFTER CYLINDER ROD PORT 라인

53.600	CYLINDER ASSEMBLY, INBOARD RH FORK 실린더
53.603	CYLINDER ASSEMBLY, INBOARD LH FORK 실린더
54.080	LINE, SIDE SHIFT CYLINDER ANCHOR PORT 라인
54.116	LINE, SIDE SHIFT CYLINDER ROD PORT 라인
54.152	FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT LINE 피팅
54.187	FITTING, SIDE SHIFTER ANCHOR PORT LINE 피팅
54.197	FASTENER, SIDE SHIFTING BASE PLATE TO ARM 패스너
54.198	BEARING, SIDE SHIFTER BASE PLATE ARM 베어링
54.205	ATTACHMENT, FORK POSITIONER 어태치먼트
66.162	STOP, CARRIAGE TRAVEL 스톱

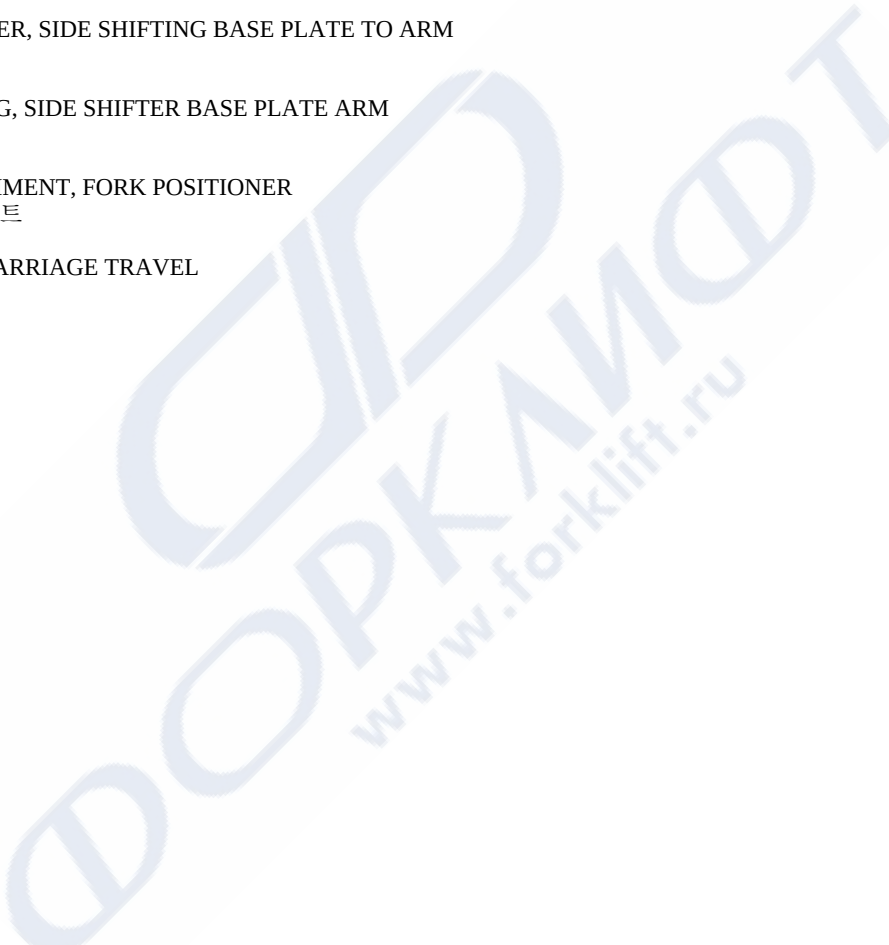 

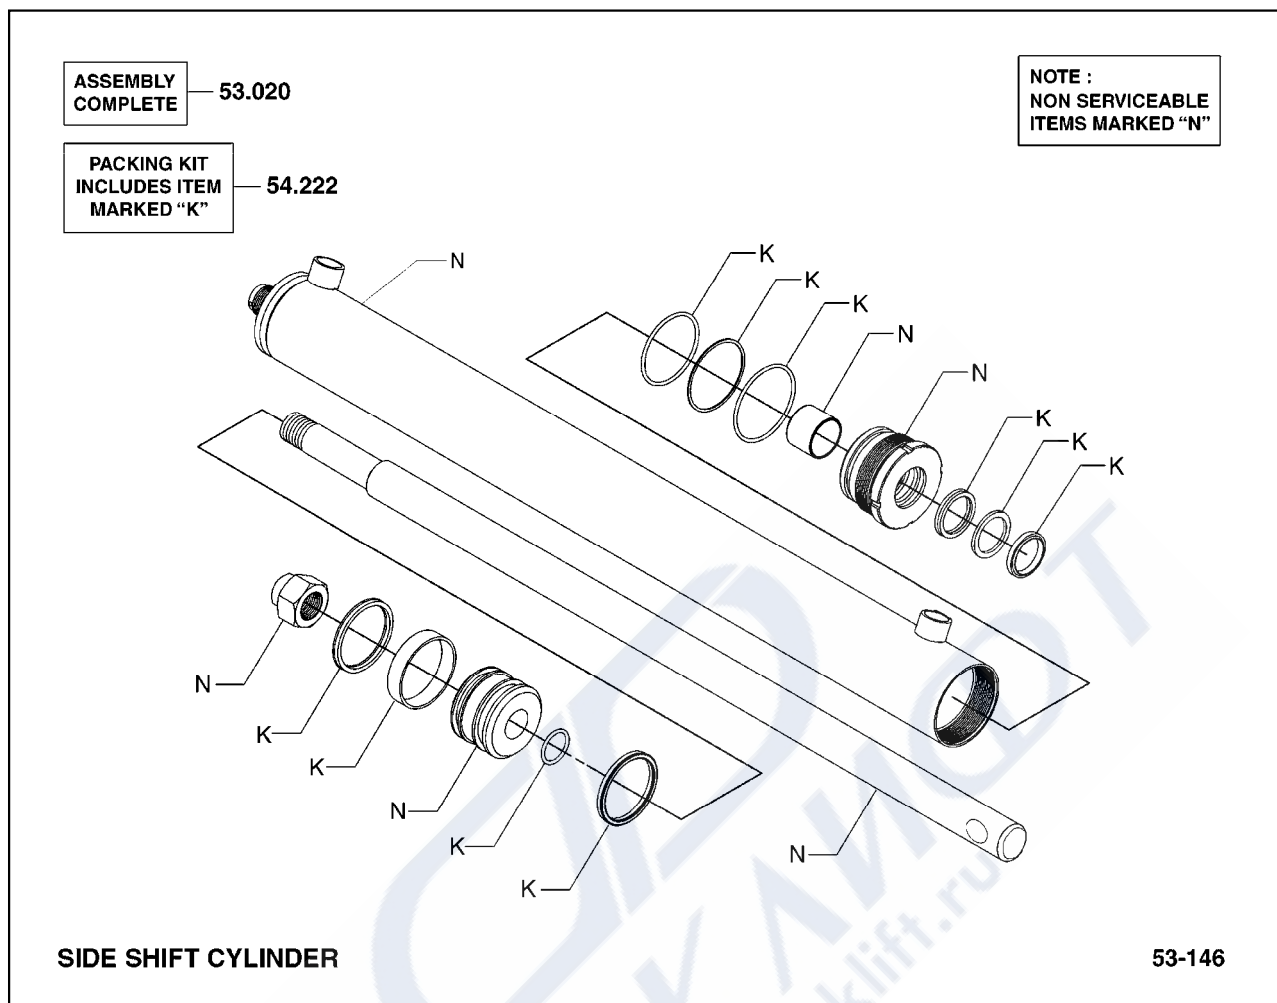 

 - 53.020 CYLINDER ASSEMBLY, SIDE SHIFTER
실린더
- 54.222 PACKING KIT, SIDE SHIFTER CYLINDER
패킹키트

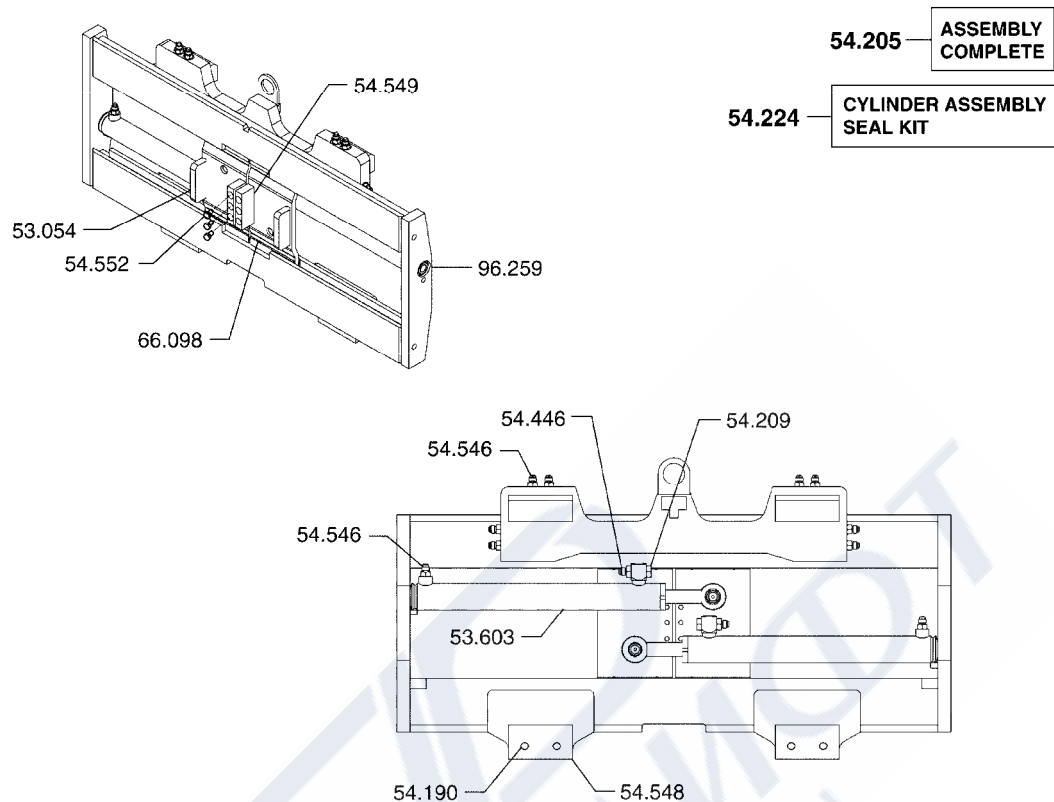


FORK POSITIONER

53-164

53.054	GUIDE, FORK 가이드
53.603	CYLINDER ASSEMBLY, INBOARD LH FORK 실린더
54.190	FASTENER, FORK HANGER SUPPORT 패스너
54.205	ATTACHMENT, FORK POSITIONER 어태치먼트
54.209	PLUG, FORK CYLINDER FLOW DIVIDER 플러그
54.224	PACKING KIT, LH FORK CYLINDER 패킹키트
54.446	FITTING - LUB, FORK POSITIONER 피팅
54.546	FITTING - LUB, FORK POSITIONER 피팅
54.548	HOOK, FORK POSITIONER HANGER 후크


54.549	STOP, FORK POSITIONER CYLINDER 스톱
54.552	FASTENER, FORK POSITIONER CYLINDER STOP 패스너
66.098	BEARING, FORK HORIZONTAL THRUST ROLLER 베어링
96.259	FASTENER, FORK CYLINDER ANCHOR END PIN RETAINER 패스너



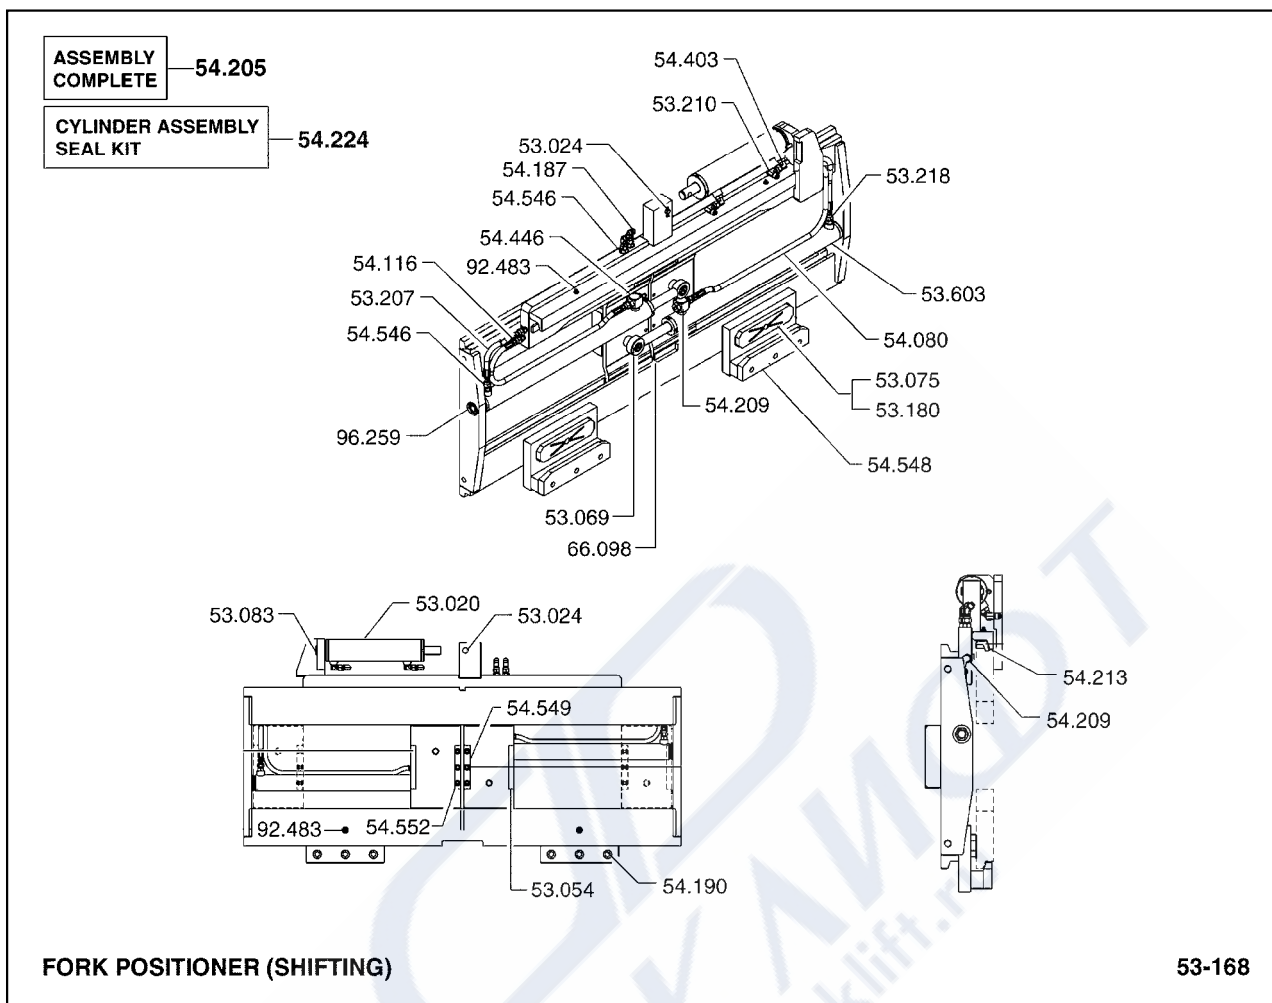 


- | | |
|--------|---|
| 53.020 | CYLINDER ASSEMBLY, SIDE SHIFTER
실린더 |
| 53.024 | ANCHOR, SIDE SHIFTER CYLINDER BASE
앵커 |
| 53.054 | GUIDE, FORK
가이드 |
| 53.069 | FASTENER, FORK CYLINDER ROD END
패스너 |
| 53.075 | BEARING, SIDE SHIFTER (LOWER)
베어링 |
| 53.083 | FASTENER, SIDE SHIFTER CYLINDER ANCHOR
패스너 |
| 53.180 | SPACER, SIDE SHIFTER BEARING
스페이서 |
| 53.207 | LINE, SIDE SHIFTER CYLINDER ANCHOR PORT
라인 |
| 53.210 | FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT LINE
피팅 |


53.218	LINE, SIDE SHIFTER CYLINDER ROD PORT 라인
53.603	CYLINDER ASSEMBLY, INBOARD LH FORK 실린더
54.080	LINE, SIDE SHIFT CYLINDER ANCHOR PORT 라인
54.116	LINE, SIDE SHIFT CYLINDER ROD PORT 라인
54.187	FITTING, SIDE SHIFTER ANCHOR PORT LINE 피팅
54.190	FASTENER, FORK HANGER SUPPORT 패스너
54.205	ATTACHMENT, FORK POSITIONER 어태치먼트
54.209	PLUG, FORK CYLINDER FLOW DIVIDER 플러그
54.213	BEARING, SIDE SHIFTER (UPPER) 베어링
54.224	PACKING KIT, LH FORK CYLINDER 패킹키트
54.403	FITTING-LUB, SIDE SHIFTER BASE PLATE ARM 피팅
54.446	FITTING - LUB, FORK POSITIONER 피팅
54.546	FITTING - LUB, FORK POSITIONER 피팅
54.548	HOOK, FORK POSITIONER HANGER 후크
54.549	STOP, FORK POSITIONER CYLINDER 스톱
54.552	FASTENER, FORK POSITIONER CYLINDER STOP 패스너
66.098	BEARING, FORK HORIZONTAL THRUST ROLLER 베어링
92.483	NIPPLE, LUBRICATION 니플
96.259	FASTENER, FORK CYLINDER ANCHOR END PIN RETAINER 패스너

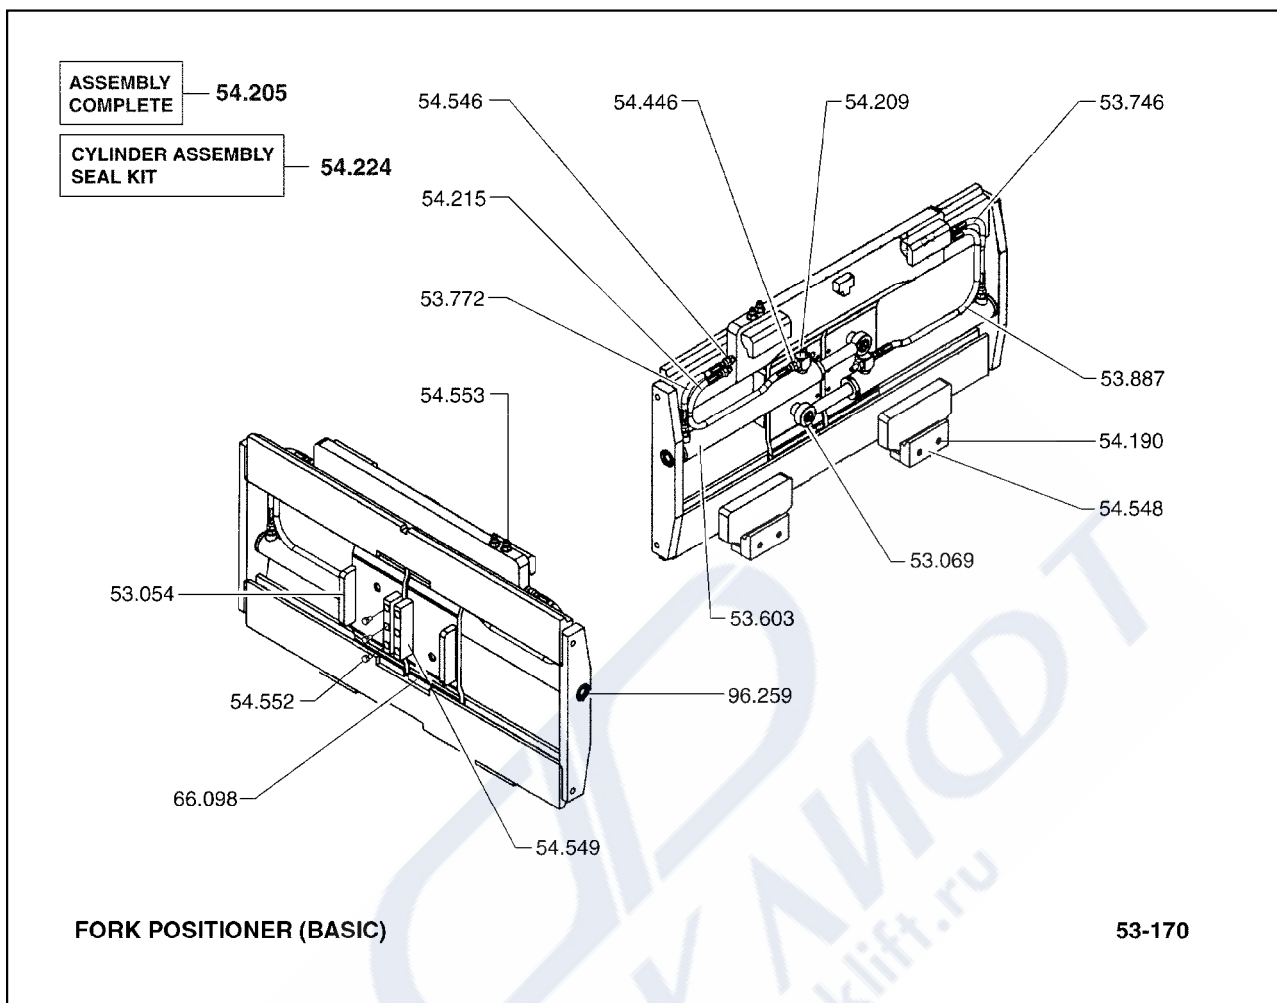 

53.054	GUIDE, FORK 가이드
53.069	FASTENER, FORK CYLINDER ROD END 패스너
53.603	CYLINDER ASSEMBLY, INBOARD LH FORK 실린더
53.746	LINE, FORK CYLINDER ROD END 라인
53.772	LINE, FORK CYLINDER ANCHOR END 라인
53.887	LINE, FORK CYLINDER ANCHOR END 라인
54.190	FASTENER, FORK HANGER SUPPORT 패스너
54.205	ATTACHMENT, FORK POSITIONER 어태치먼트
54.209	PLUG, FORK CYLINDER FLOW DIVIDER 플러그

54.215	LINE, FORK CYLINDER ROD END 라인
54.224	PACKING KIT, LH FORK CYLINDER 패킹키트
54.446	FITTING - LUB, FORK POSITIONER 피팅
54.546	FITTING - LUB, FORK POSITIONER 피팅
54.548	HOOK, FORK POSITIONER HANGER 후크
54.549	STOP, FORK POSITIONER CYLINDER 스톱
54.552	FASTENER, FORK POSITIONER CYLINDER STOP 패스너
54.553	FITTING - LUB, FORK POSITIONER 피팅
66.098	BEARING, FORK HORIZONTAL THRUST ROLLER 베어링
96.259	FASTENER, FORK CYLINDER ANCHOR END PIN RETAINER 패스너

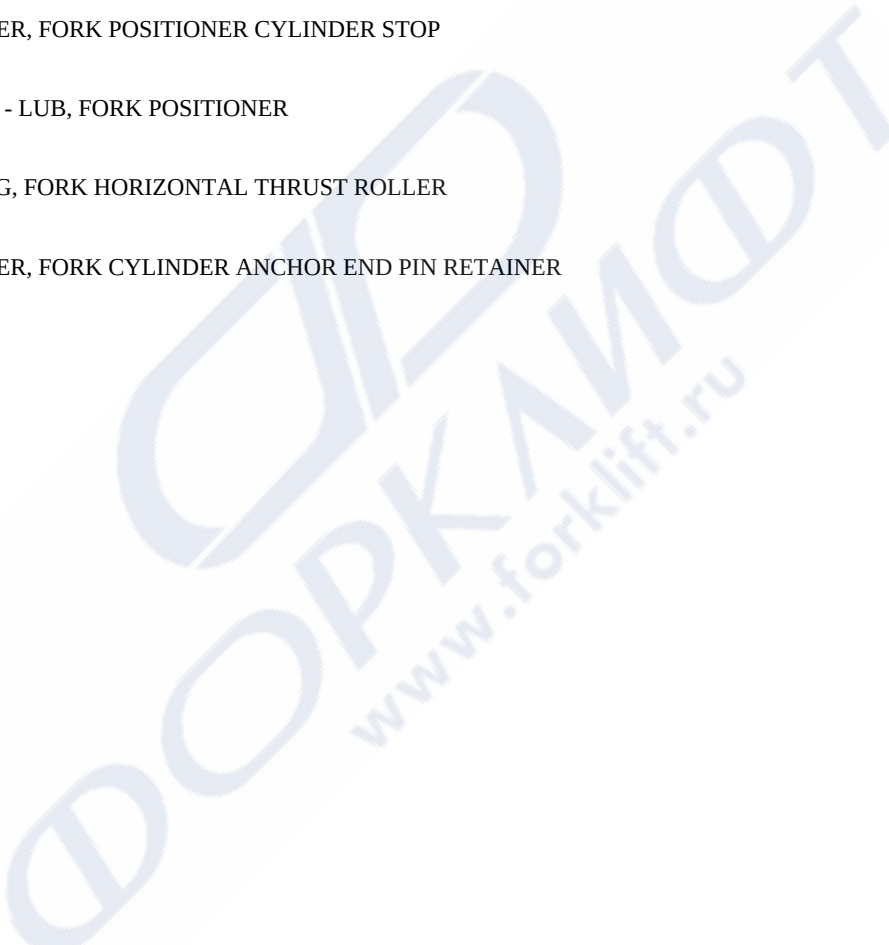 

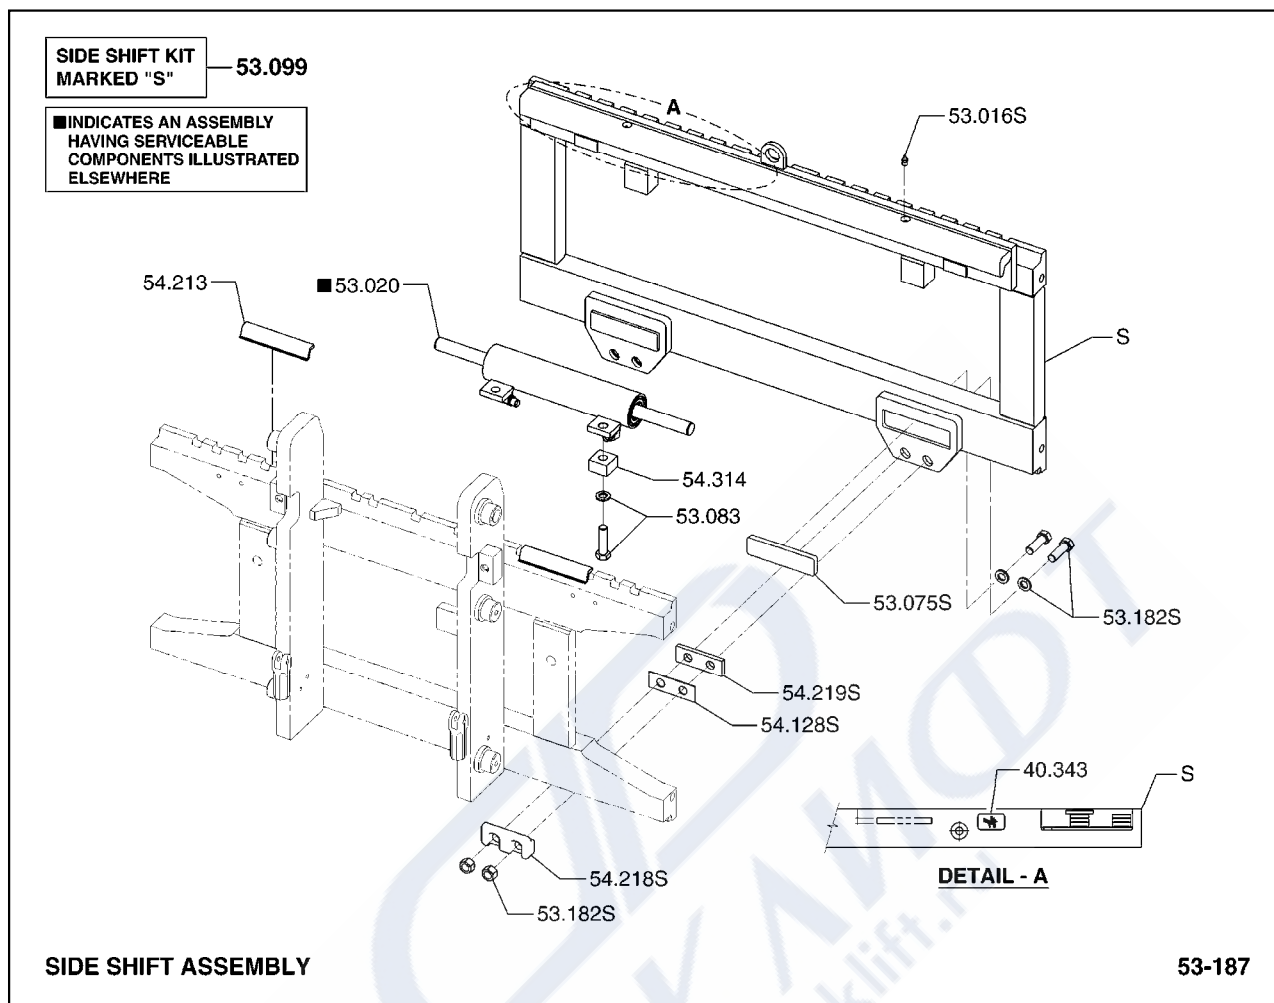 


40.343	DECAL, ATTACHMENT SAFETY 데칼
53.016	FITTING-LUB, SIDE SHIFTER MOVABLE FRAME SUPPORT SH 피팅
53.020	CYLINDER ASSEMBLY, SIDE SHIFTER 실린더
53.075	BEARING, SIDE SHIFTER (LOWER) 베어링
53.083	FASTENER, SIDE SHIFTER CYLINDER ANCHOR 패스너
53.099	SIDE SHIFTER, DEVICE 사이드쉬프트
53.182	FASTENER, SIDE SHIFTER HANGER 패스너
54.128	SPACER, SIDE SHIFTER MOVEABLE FRAME BEARING 스페이서
54.213	BEARING, SIDE SHIFTER (UPPER) 베어링

54.218	HOOK, SIDE SHIFTER HANGER 후크
54.219	SPACER, SIDE SHIFTING BASE PLATE HANGER 스페이서
54.314	SPACER, SIDE SHIFTER CYLINDER REAR 스페이서



ASSEMBLY
COMPLETE — 53.020

 PACKING KIT
INCLUDES ITEMS
MARKED "K" — 54.222

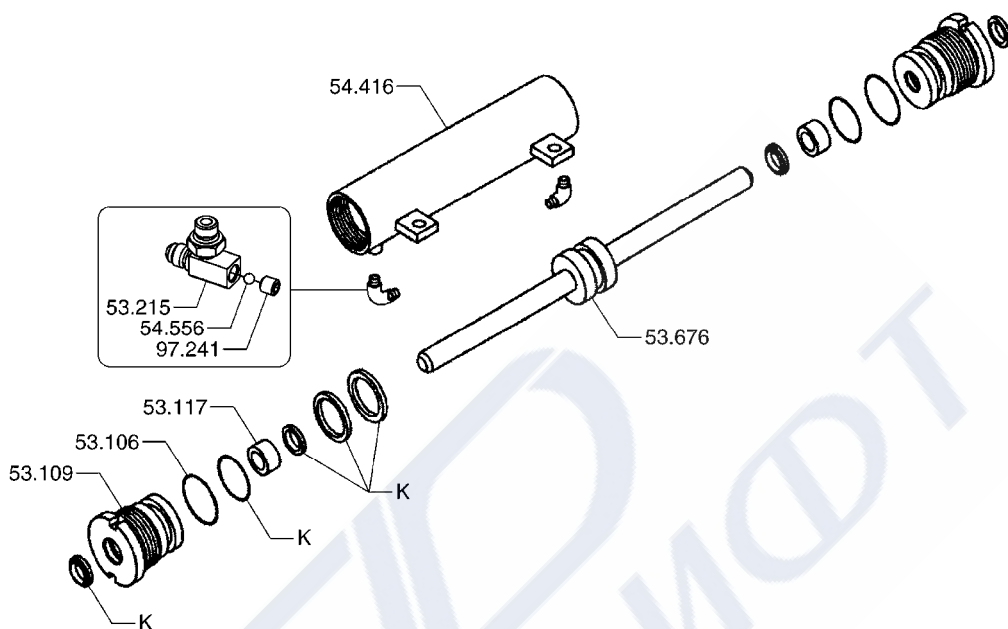


SIDESHIFT CYLINDER

53-198

53.020	CYLINDER ASSEMBLY, SIDE SHIFTER 실린더
53.109	GLAND, SIDE SHIFTER CYLINDER 그랜드
53.110	RETAINER, SIDE SHIFTER CYLINDER GLAND 리테이너
53.117	BUSHING, SIDE SHIFTER CYLINDER GLAND 부싱
53.215	FITTING, SIDE SHIFTER CYLINDER ROD PORT 피팅
53.676	ROD, SIDE SHIFTER CYLINDER PISTON 로드
54.222	PACKING KIT, SIDE SHIFTER CYLINDER 패킹키트
54.416	BARREL, SIDE SHIFT CYLINDER 배럴
54.556	BALL, SIDE SHIFTER CYLINDER ROD PORT 볼

 97.241 SET SCREW, SIDE SHIFTER CYLINDER ROD PORT
세트스크류




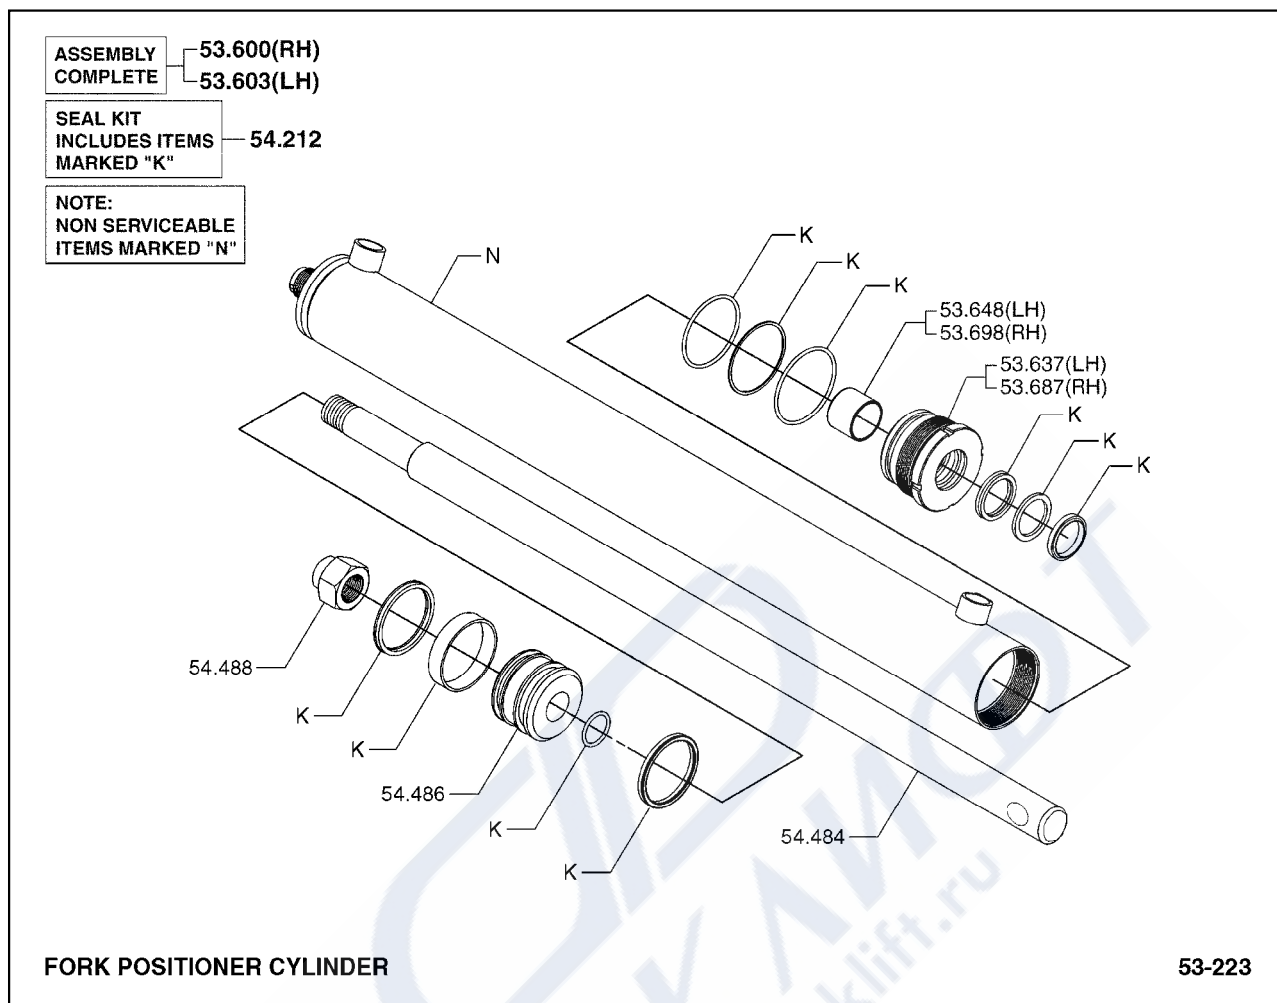

53.600	CYLINDER ASSEMBLY, INBOARD RH FORK 실린더
53.603	CYLINDER ASSEMBLY, INBOARD LH FORK 실린더
53.637	GLAND, INBOARD LH FORK CYLINDER 그랜드
53.648	BUSHING, LH FORK CYLINDER GLAND 부싱
53.687	GLAND, INBOARD RH FORK CYLINDER 그랜드
53.698	BUSHING, RH FORK CYLINDER GLAND 부싱
54.212	SEAL KIT, FORK CYLINDER 씰키트
54.484	ROD, FORK CYLINDER PISTON 로드
54.486	PISTON, FORK CYLINDER 피스톤

 54.488 NUT, FORK CYLINDER PISTON
너트




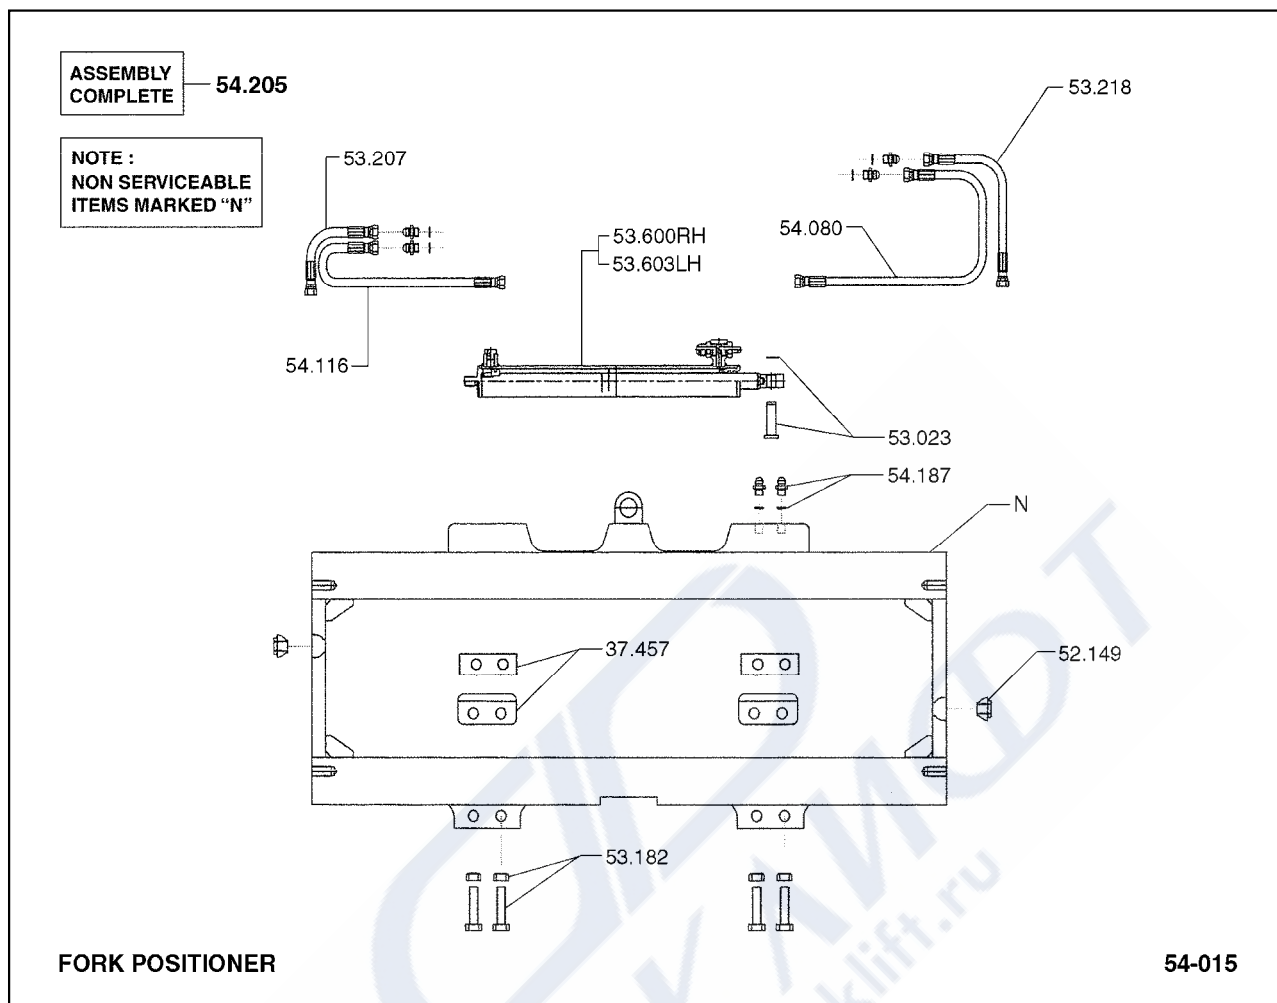


- | | |
|--------|---|
| 52.149 | NUT, SIDE SHIFT CYLINDER ANCHOR PORT LINE FITTING
너트 |
| 53.023 | ANCHOR, SIDE SHIFTER CYLINDER ROD END
앵커 |
| 53.182 | FASTENER, SIDE SHIFTER HANGER
패스너 |
| 53.207 | LINE, SIDE SHIFTER CYLINDER ANCHOR PORT
라인 |
| 53.218 | LINE, SIDE SHIFTER CYLINDER ROD PORT
라인 |
| 53.600 | CYLINDER ASSEMBLY, INBOARD RH FORK
실린더 |
| 53.603 | CYLINDER ASSEMBLY, INBOARD LH FORK
실린더 |
| 54.080 | LINE, SIDE SHIFT CYLINDER ANCHOR PORT
라인 |
| 54.116 | LINE, SIDE SHIFT CYLINDER ROD PORT
라인 |

54.187	FITTING, SIDE SHIFTER ANCHOR PORT LINE 피팅
54.205	ATTACHMENT, FORK POSITIONER 어태치먼트




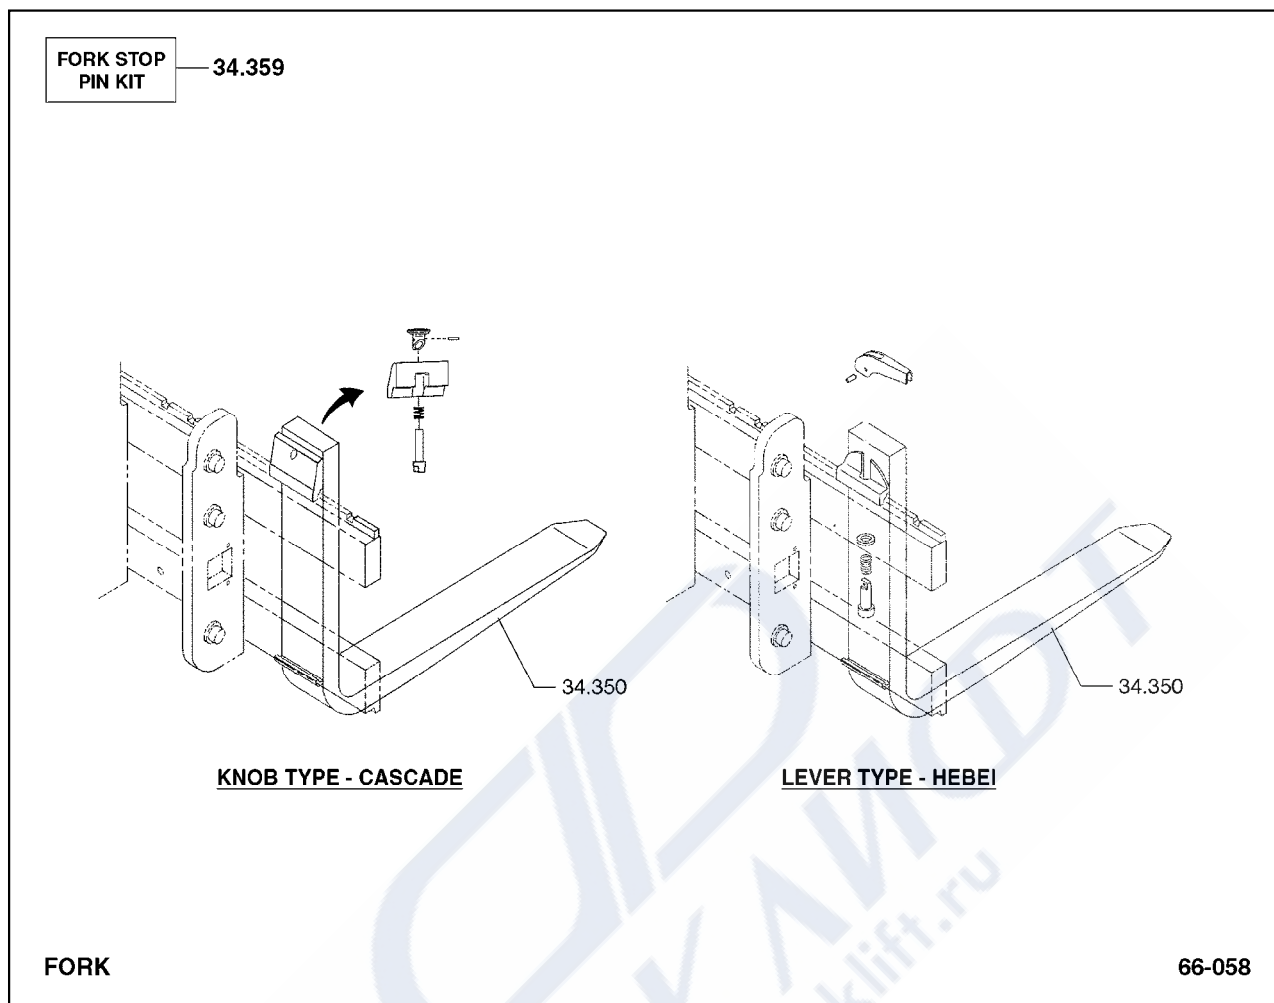 

 
- 34.350 FORK ASSEMBLY
포크
- 34.359 KIT, FORK STOP PIN (CAPTIVE)
키트

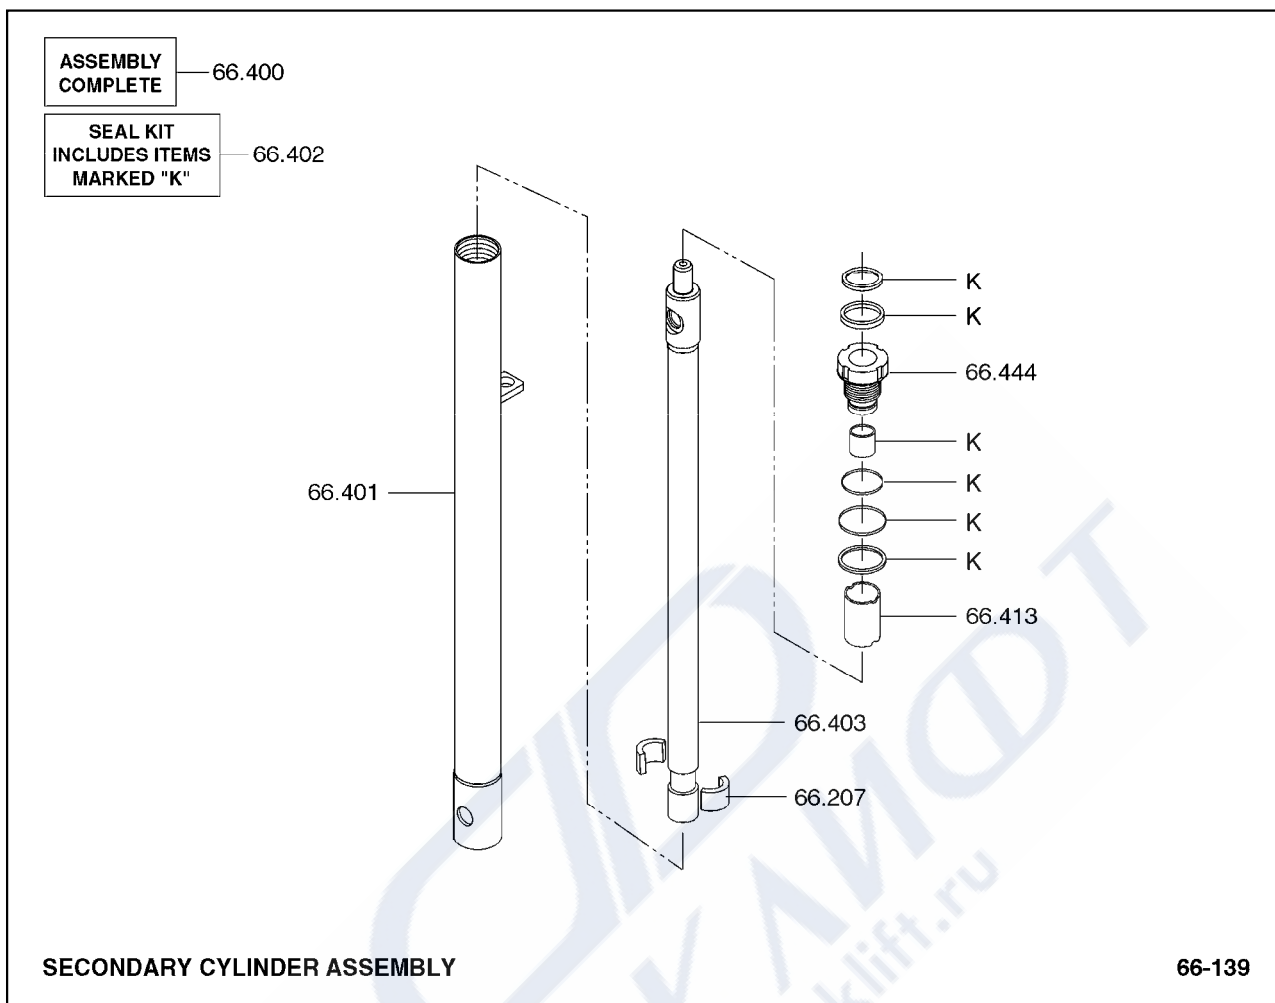

66.207	PISTON, FINAL LIFT CYLINDER 피스톤
66.400	CYLINDER ASSEMBLY, FINAL LIFT 실린더
66.401	BARREL, FINAL LIFT CYLINDER 배럴
66.402	PACKING KIT, FINAL LIFT CYLINDER 패킹키트
66.403	PISTON ROD, FINAL LIFT CYLINDER 피스톤로드
66.413	SPACER, FINAL LIFT CYLINDER PISTON ROD 스페이서
66.444	GLAND, FINAL LIFT CYLINDER 그랜드

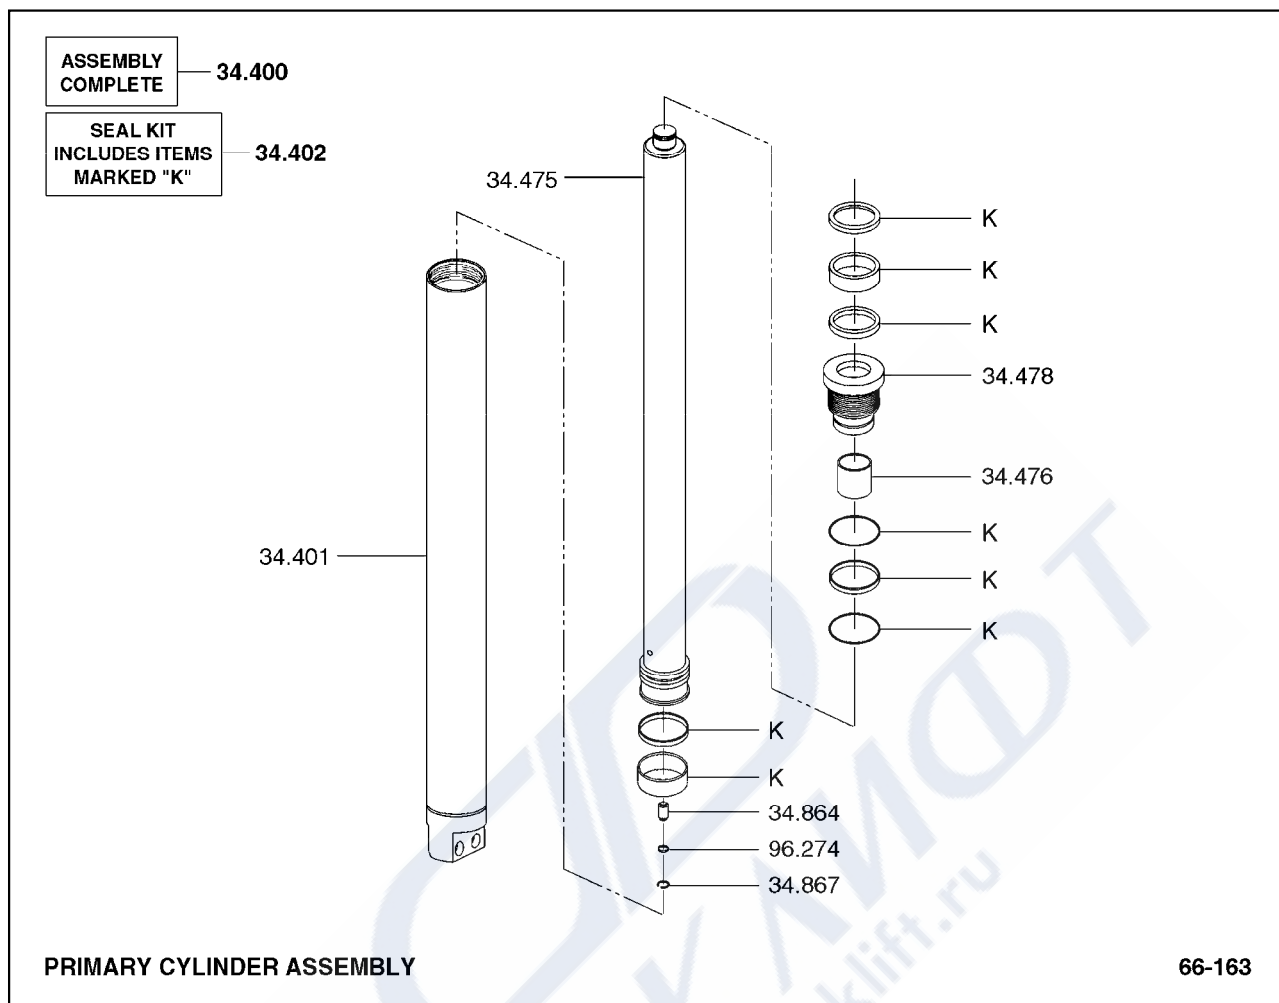 


34.400	CYLINDER ASSEMBLY, LIFT 실린더
34.401	BARREL, LIFT CYLINDER 배럴
34.402	SEAL & PACKING KIT, LIFT CYLINDER 씰& 팩킹키트
34.475	ROD, LIFT CYLINDER 로드
34.476	BEARING, LIFT CYLINDER ROD 베어링
34.478	GLAND, LIFT CYLINDER 그랜드
34.864	CHECK VALVE, LIFT CYLINDER 체크밸브
34.867	RETAINER, LIFT CYLINDER CHECK VALVE 리테이너
96.274	WASHER, LIFT CYLINDER CHECK VALVE 워셔

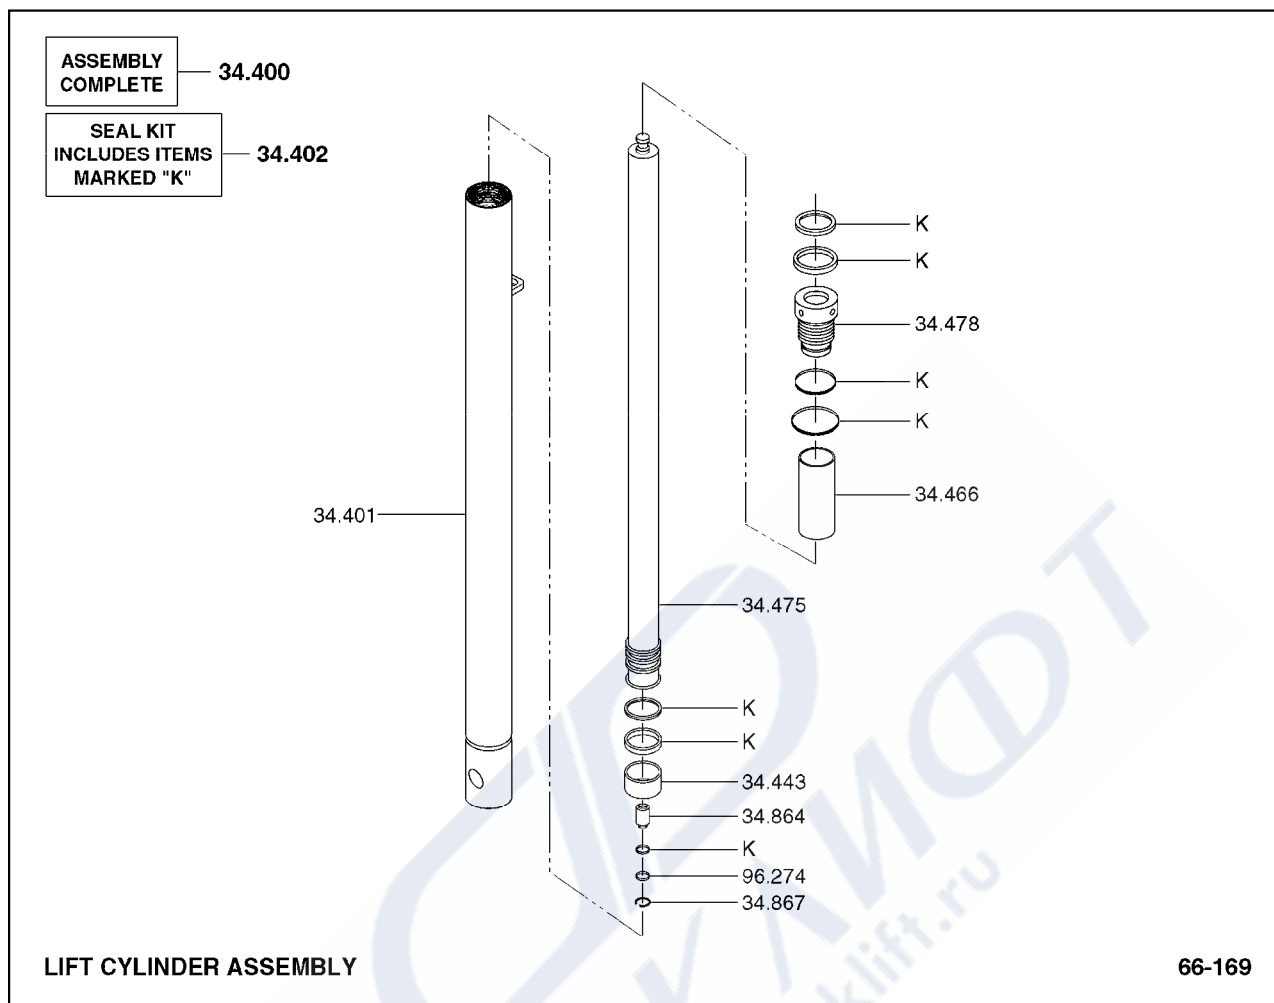 

34.400	CYLINDER ASSEMBLY, LIFT 실린더
34.401	BARREL, LIFT CYLINDER 배럴
34.402	SEAL & PACKING KIT, LIFT CYLINDER 씰& 팩킹키트
34.443	RING, LIFT CYLINDER PISTON WEAR 링
34.466	SPACER, LIFT CYLINDER FEED TUBE 스페이서
34.475	ROD, LIFT CYLINDER 로드
34.478	GLAND, LIFT CYLINDER 그랜드
34.864	CHECK VALVE, LIFT CYLINDER 체크밸브
34.867	RETAINER, LIFT CYLINDER CHECK VALVE 리테이너

96.274 WASHER, LIFT CYLINDER CHECK VALVE
 옥셔

 
ФОРКЛИФТ
www.forklift.ru

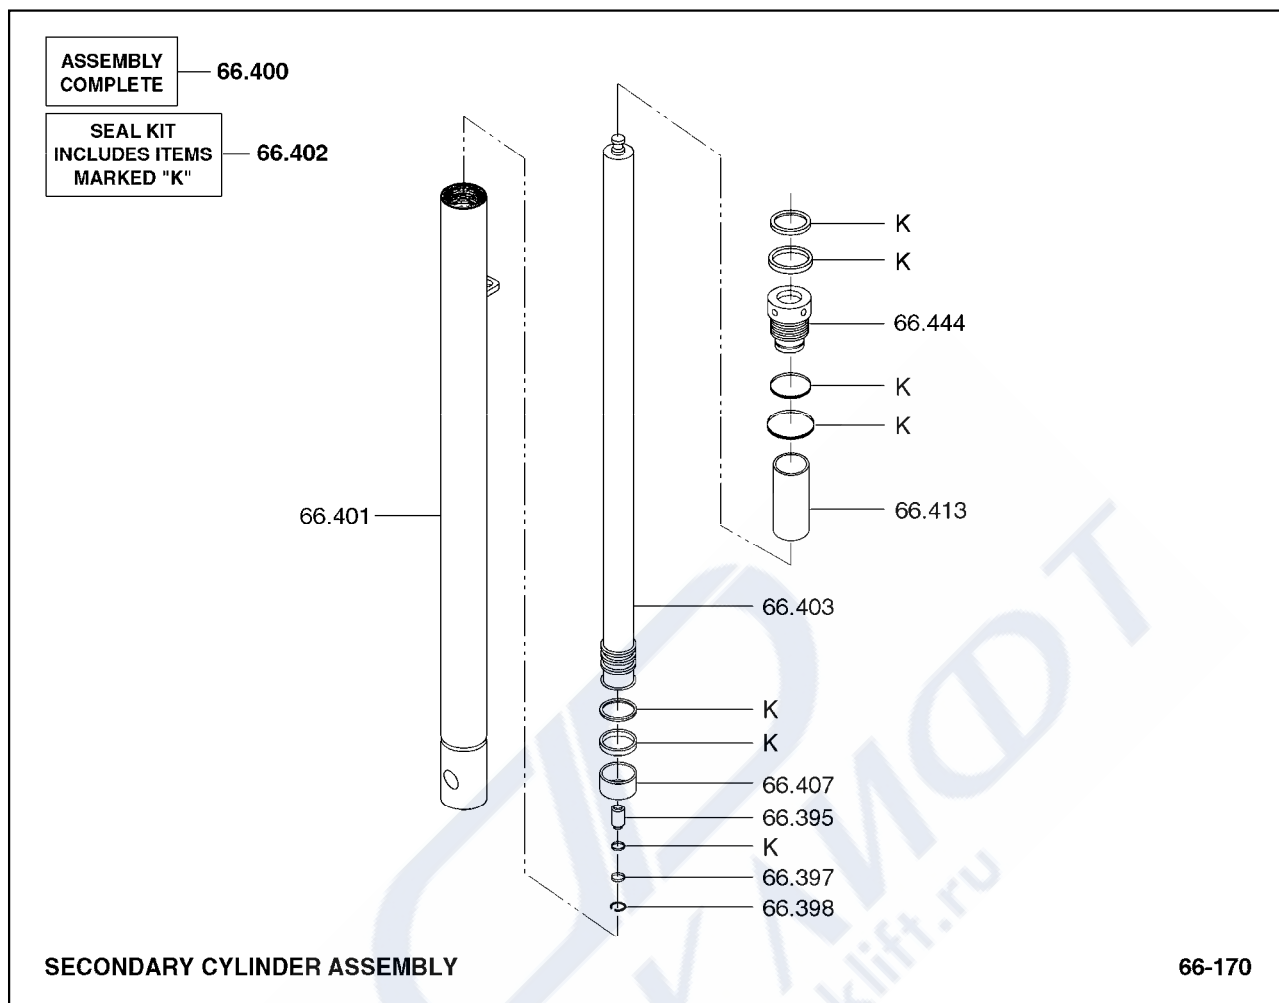

66.395	CHECK VALVE, FINAL LIFT CYLINDER 체크밸브
66.397	WASHER, FINAL LIFT CYLINDER CHECK VALVE 와셔
66.398	SNAP RING, FINAL LIFT CYLINDER CHECK VALVE 스냅링
66.400	CYLINDER ASSEMBLY, FINAL LIFT 실린더
66.401	BARREL, FINAL LIFT CYLINDER 배럴
66.402	PACKING KIT, FINAL LIFT CYLINDER 패킹키트
66.403	PISTON ROD, FINAL LIFT CYLINDER 피스톤로드
66.407	WEAR RING, FINAL LIFT CYLINDER PISTON 웨어링
66.413	SPACER, FINAL LIFT CYLINDER PISTON ROD 스페이서

 66.444 GLAND, FINAL LIFT CYLINDER
 그로드




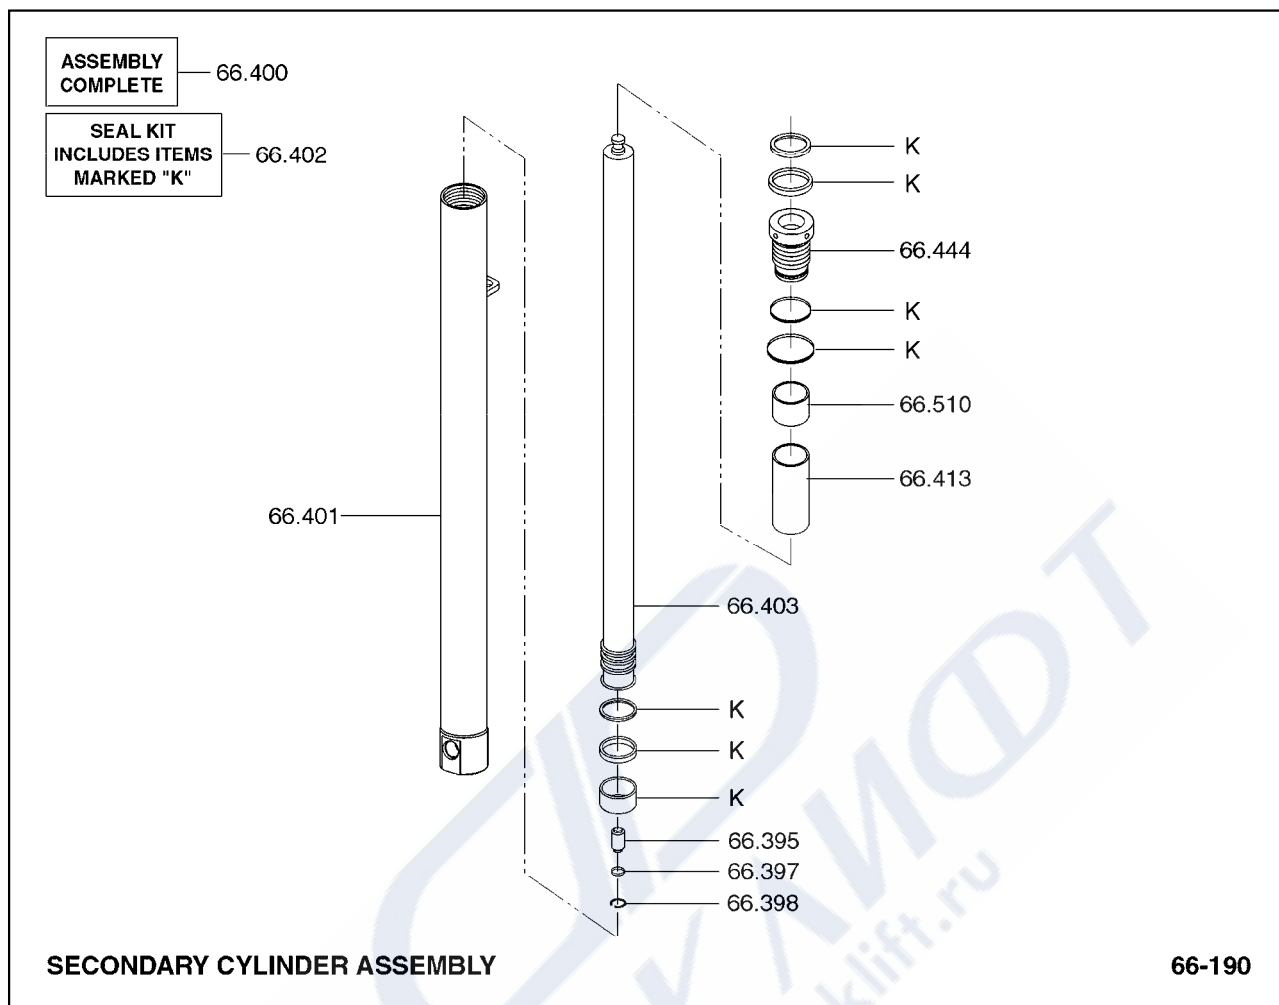

66.395	CHECK VALVE, FINAL LIFT CYLINDER 체크밸브
66.397	WASHER, FINAL LIFT CYLINDER CHECK VALVE 와셔
66.398	SNAP RING, FINAL LIFT CYLINDER CHECK VALVE 스냅링
66.400	CYLINDER ASSEMBLY, FINAL LIFT 실린더
66.401	BARREL, FINAL LIFT CYLINDER 배럴
66.402	PACKING KIT, FINAL LIFT CYLINDER 패킹키트
66.403	PISTON ROD, FINAL LIFT CYLINDER 피스톤로드
66.413	SPACER, FINAL LIFT CYLINDER PISTON ROD 스페이서
66.444	GLAND, FINAL LIFT CYLINDER 그랜드

 66.510 BEARING, FINAL LIFT CYLINDER ROD
베어링




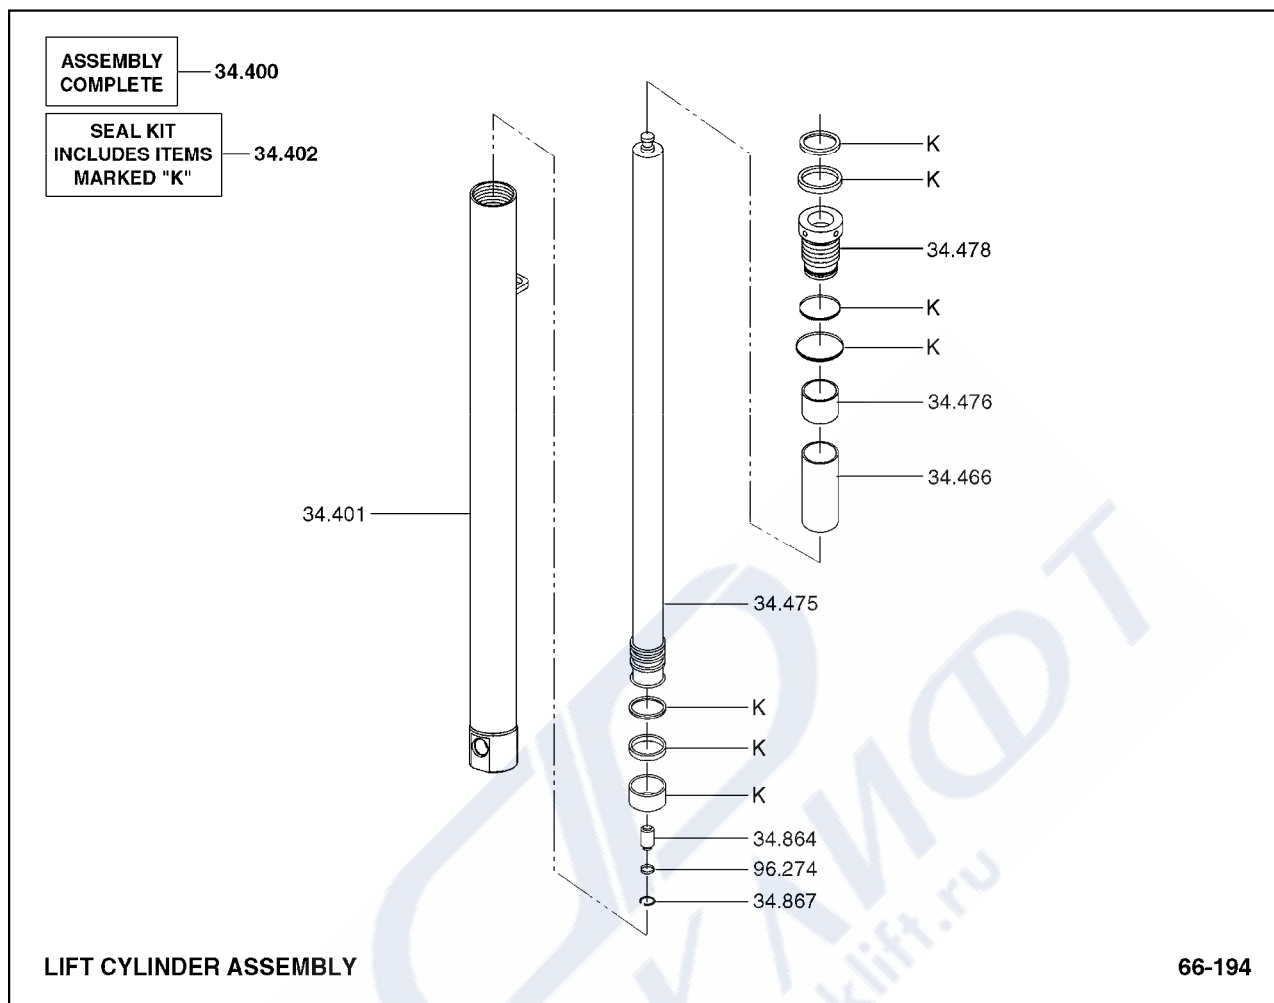

34.400	CYLINDER ASSEMBLY, LIFT 실린더
34.401	BARREL, LIFT CYLINDER 배럴
34.402	SEAL & PACKING KIT, LIFT CYLINDER 씰& 팩킹키트
34.466	SPACER, LIFT CYLINDER FEED TUBE 스페이서
34.475	ROD, LIFT CYLINDER 로드
34.476	BEARING, LIFT CYLINDER ROD 베어링
34.478	GLAND, LIFT CYLINDER 그랜드
34.864	CHECK VALVE, LIFT CYLINDER 체크밸브
34.867	RETAINER, LIFT CYLINDER CHECK VALVE 리테이너

96.274 WASHER, LIFT CYLINDER CHECK VALVE
 옥셔

 
ФОРКЛИФТ
www.forklift.ru

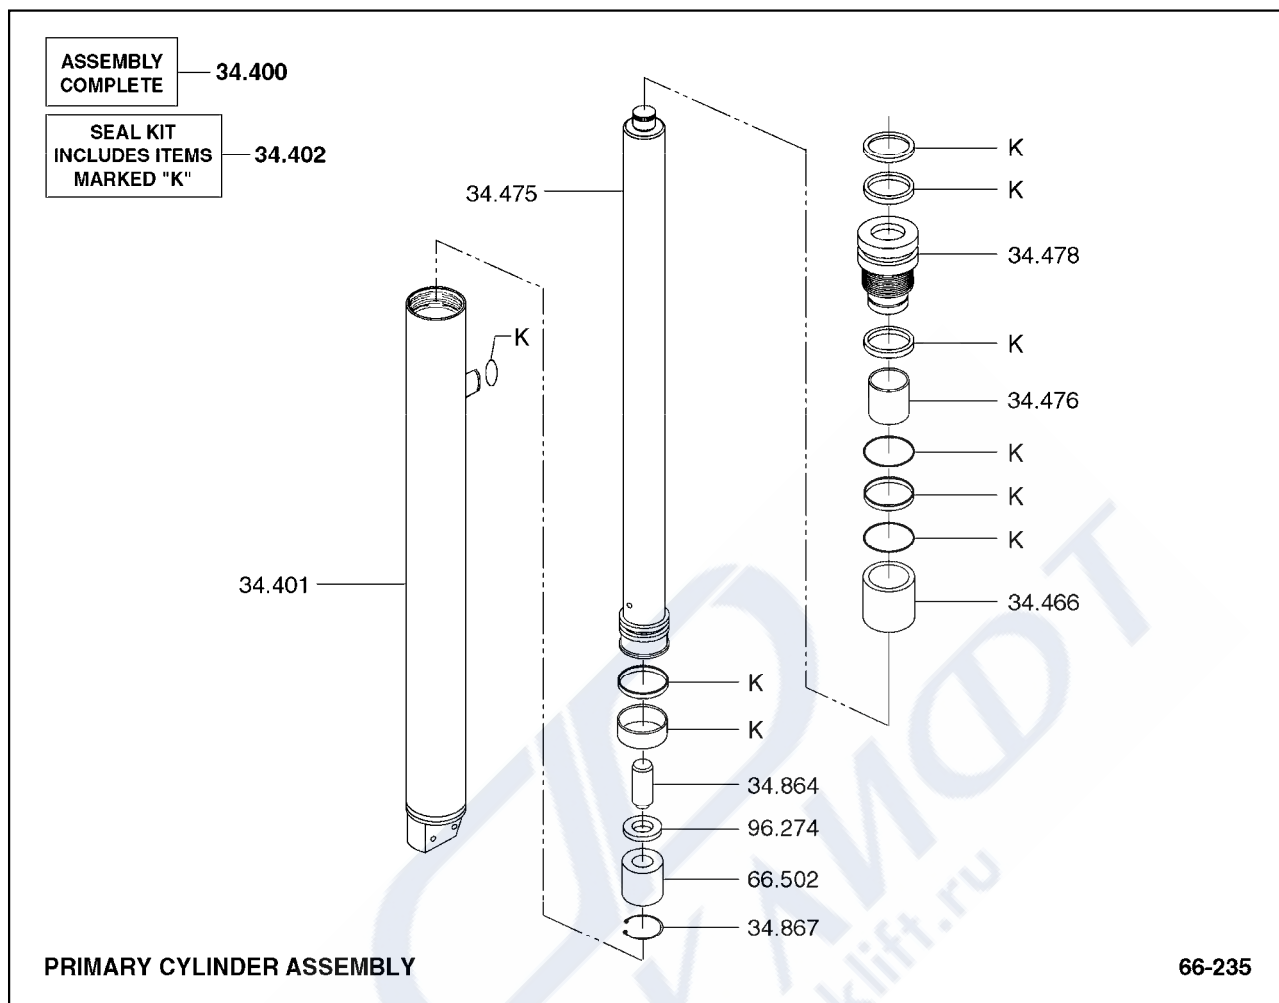

34.400	CYLINDER ASSEMBLY, LIFT 실린더
34.401	BARREL, LIFT CYLINDER 배럴
34.402	SEAL & PACKING KIT, LIFT CYLINDER 씰& 팩킹키트
34.466	SPACER, LIFT CYLINDER FEED TUBE 스페이서
34.475	ROD, LIFT CYLINDER 로드
34.476	BEARING, LIFT CYLINDER ROD 베어링
34.478	GLAND, LIFT CYLINDER 그랜드
34.864	CHECK VALVE, LIFT CYLINDER 체크밸브
34.867	RETAINER, LIFT CYLINDER CHECK VALVE 리테이너

66.502	CUSHION, LIFT CYLINDER 쿠션
96.274	WASHER, LIFT CYLINDER CHECK VALVE 옥셔




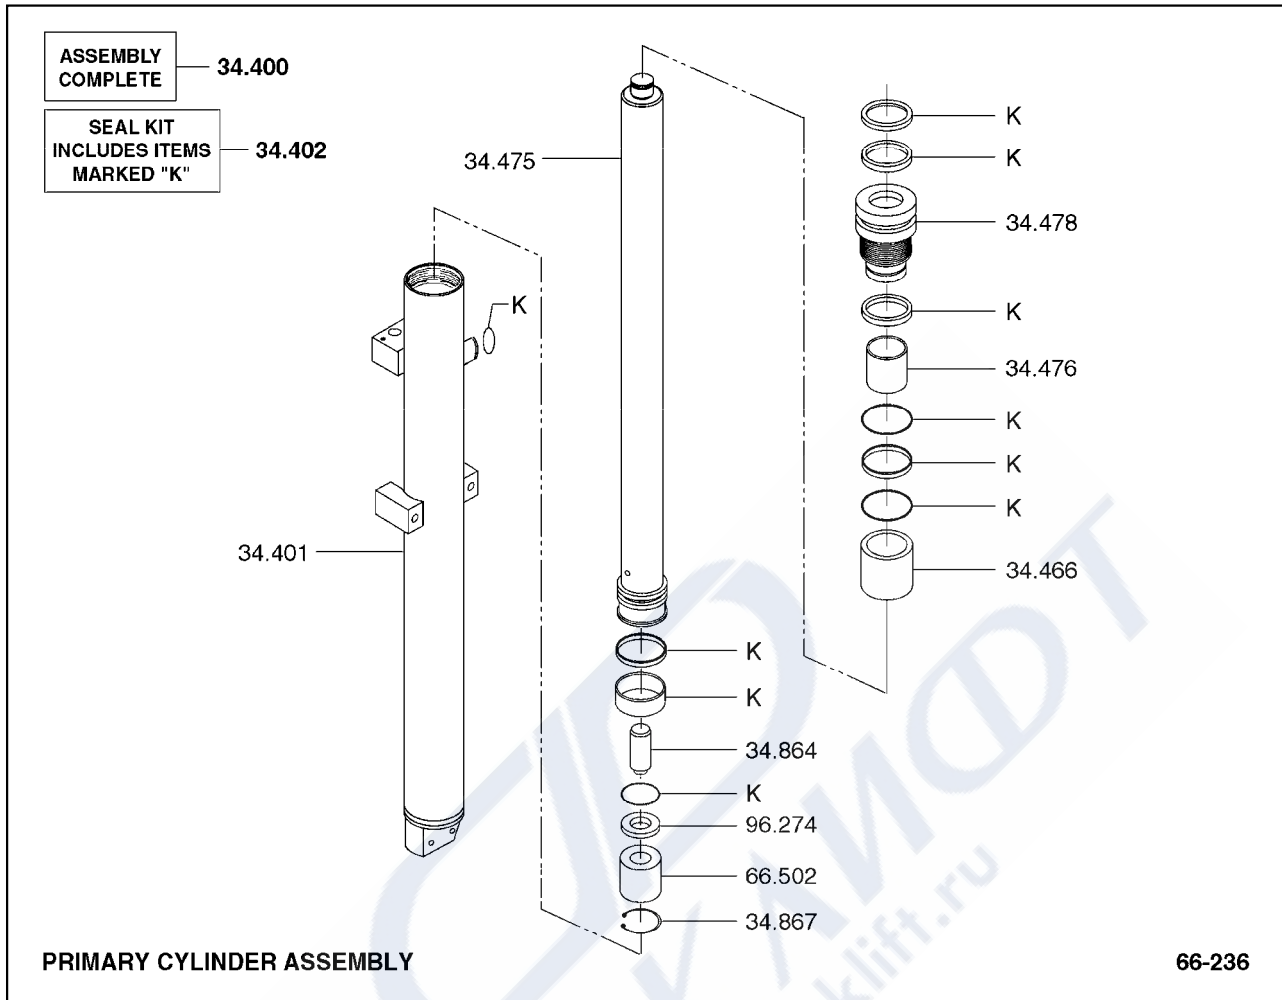 

34.400	CYLINDER ASSEMBLY, LIFT 실린더
34.401	BARREL, LIFT CYLINDER 배럴
34.402	SEAL & PACKING KIT, LIFT CYLINDER 씰& 팩킹키트
34.466	SPACER, LIFT CYLINDER FEED TUBE 스페이서
34.475	ROD, LIFT CYLINDER 로드
34.476	BEARING, LIFT CYLINDER ROD 베어링
34.478	GLAND, LIFT CYLINDER 그랜드
34.864	CHECK VALVE, LIFT CYLINDER 체크밸브
34.867	RETAINER, LIFT CYLINDER CHECK VALVE 리테이너

66.502	CUSHION, LIFT CYLINDER 쿠션
96.274	WASHER, LIFT CYLINDER CHECK VALVE 옥셔




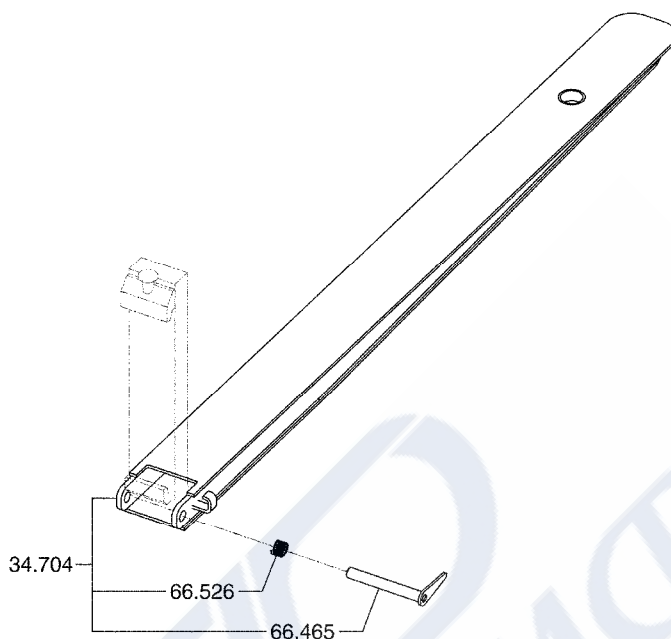 

EXTENSION FORK

66-245


34.704	EXTENSION, FORK ASSEMBLY COMPLETE 익스텐션
66.465	PIN, EXTENSION FORK 핀
66.526	FASTENER, EXTENSION FORK PIN 패스너

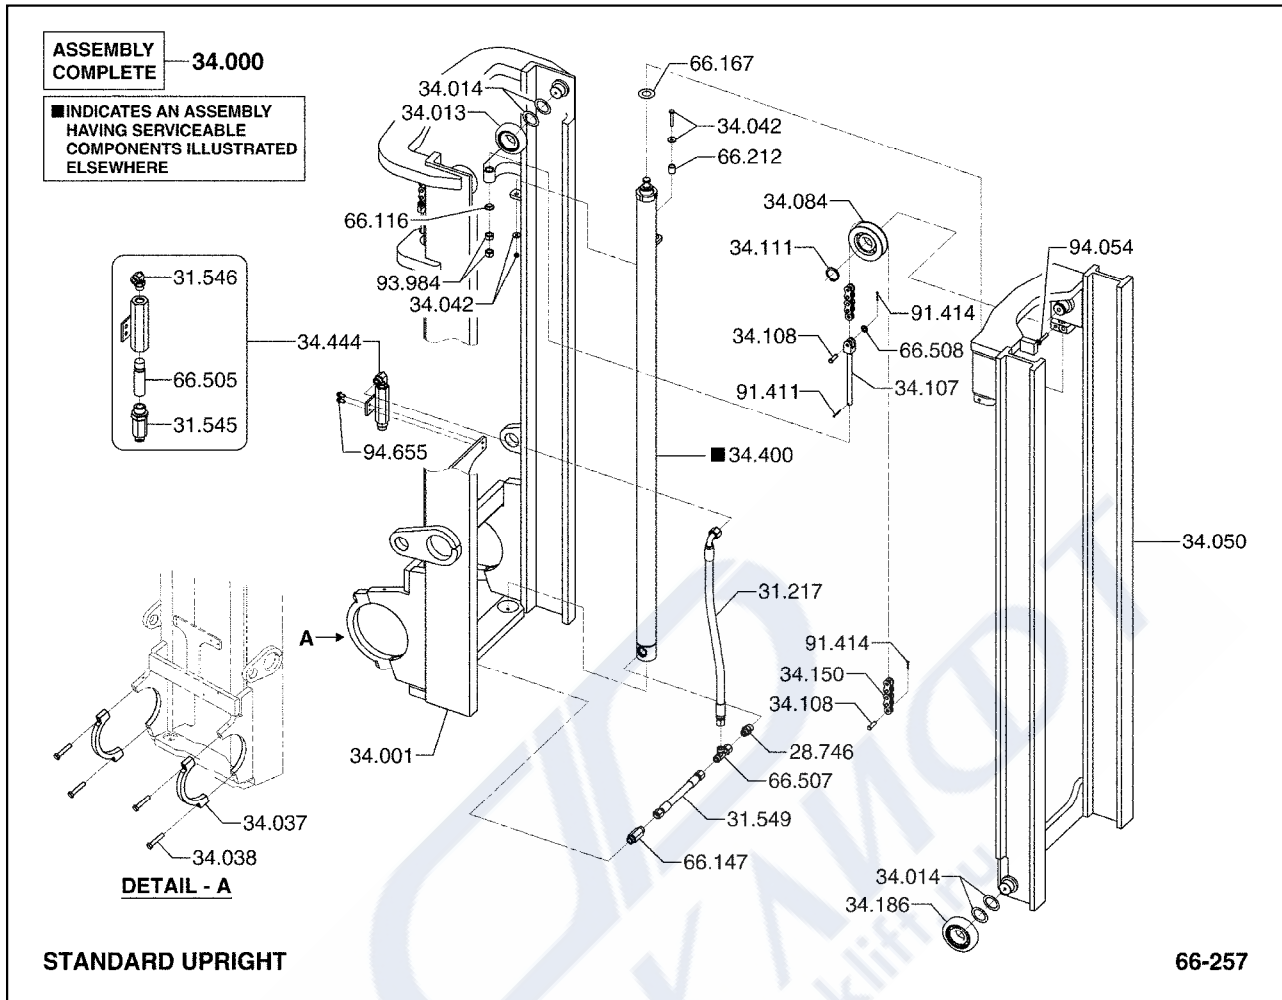 

28.746	FITTING, LIFT CYLINDER LINE 피팅	34.108	FASTENER, LIFT CHAIN TO ANCHOR 패스너
31.217	LINE, LIFT CYLINDER INLET FITTING 라인	34.111	FASTENER, CHAIN SHEAVE SHAFT (CARRIER) 패스너
31.545	FITTING, LIFT CYL FLOW CONTROL VALVE INLET 피팅	34.150	CHAIN, UPRIGHT RAIL LIFT 체인
31.546	FITTING, LIFT CYL FLOW CONTROL VALVE OUTLET 피팅	34.186	ROLLER, UPRIGHT 롤러
31.549	LINE, LIFT CYL FLOW CONTROL VALVE INLET 라인	34.400	CYLINDER ASSEMBLY, LIFT 실린더
34.000	UPRIGHT & LIFT CYL ASSEMBLY 마스트& 실린더	34.444	VALVE ASSEMBLY, LIFT CYLINDER FLOW CONTROL 밸브
34.001	OUTER RAIL WELDER ASSEMBLY, UPRIGHT 아우터레일	66.116	SPACER, LIFT CHAIN ANCHOR 스페이서
34.013	ROLLER, UPRIGHT 롤러	66.147	VALVE, FINAL LIFT CYLINDER PORT FLOW CONTROL 밸브
34.014	SHIM, UPRIGHT ROLLER 심	66.167	SHIM, LIFT CYLINDER UPPER 심
34.037	CAP, UPRIGHT TRUNNION 캡	66.212	SPACER, LIFT CYLINDER FASTENER 스페이서
34.038	FASTENER, UPRIGHT TRUNNION CAP 패스너	66.505	CARTRIDGE, LIFT CYLINDER FLOW CONTROL VALVE 카트리지
34.042	FASTENER, LIFT CYLINDER (UPPER) 패스너	66.507	TEE, LIFT CYLINDER LINE 티
34.050	INNER RAIL WELDED ASSEMBLY, UPRIGHT 인너레일	66.508	SPACER, LIFT CHAIN ANCHOR FASTENER 스페이서
34.084	SHEAVE, LIFT CHAIN 쉬브	91.411	RETAINER, LIFT CHAIN TO ANCHOR FASTENER 리테이너
34.107	ANCHOR, LIFT CHAIN 앵커	91.414	RETAINER, LIFT CHAIN TO ANCHOR FASTENER 리테이너

93.984	FASTENER, LIFT CHAIN ANCHOR 패스너
94.054	FASTENER, LIFT CYLINDER (UPPER) 패스너
94.655	FASTENER, LIFT CYLINDER LINE JUNCTION BLOCK 패스너




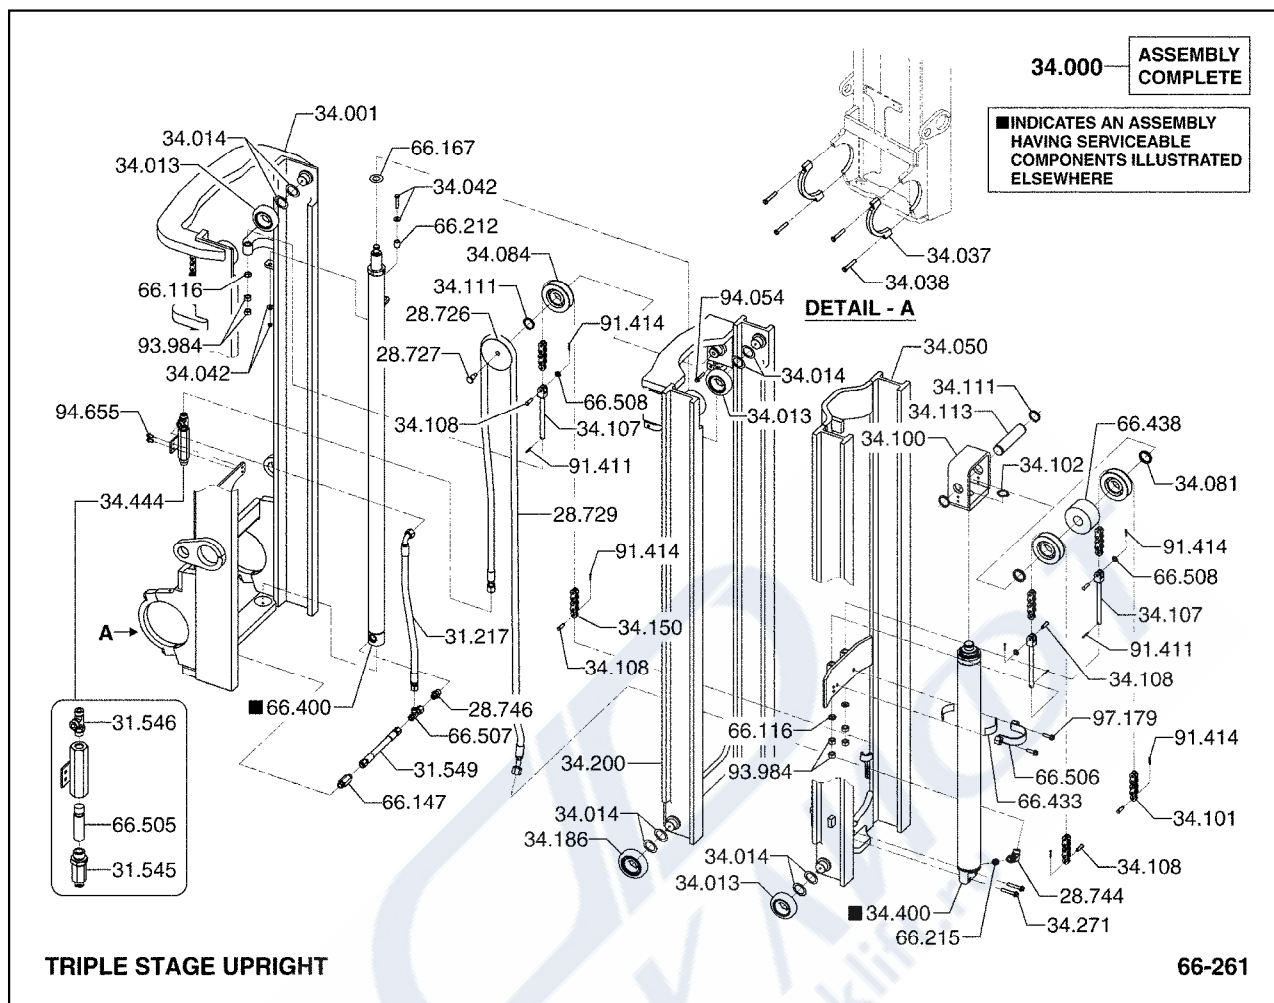 

28.726	SHEAVE, LIFT CYLINDER HOSE 쉬브	34.042	FASTENER, LIFT CYLINDER (UPPER) 패스너
28.727	PIVOT, LIFT CYLINDER HOSE SHEAVE 피봇	34.050	INNER RAIL WELDED ASSEMBLY, UPRIGHT 인너레일
28.729	LINE, LIFT CYLINDER 라인	34.081	SPACER, LIFT CHAIN SHEAVE CARRIER 스페이서
28.744	FITTING, LIFT CYLINDER LINE 피팅	34.084	SHEAVE, LIFT CHAIN 쉬브
28.746	FITTING, LIFT CYLINDER LINE 피팅	34.100	CARRIER, LIFT CYLINDER CHAIN SHEAVE 캐리어
31.217	LINE, LIFT CYLINDER INLET FITTING 라인	34.101	CHAIN, LIFT 체인
31.545	FITTING, LIFT CYL FLOW CONTROL VALVE INLET 피팅	34.102	FASTENER, SHEAVE CARRIER 패스너
31.546	FITTING, LIFT CYL FLOW CONTROL VALVE OUTLET 피팅	34.107	ANCHOR, LIFT CHAIN 앵커
31.549	LINE, LIFT CYL FLOW CONTROL VALVE INLET 라인	34.108	FASTENER, LIFT CHAIN TO ANCHOR 패스너
34.000	UPRIGHT & LIFT CYL ASSEMBLY 마스트& 실린더	34.111	FASTENER, CHAIN SHEAVE SHAFT (CARRIER) 패스너
34.001	OUTER RAIL WELDER ASSEMBLY, UPRIGHT 아우터레일	34.113	SHAFT, LIFT CHAIN SHEAVE (CARRIER) 샤프트
34.013	ROLLER, UPRIGHT 롤러	34.150	CHAIN, UPRIGHT RAIL LIFT 체인
34.014	SHIM, UPRIGHT ROLLER 심	34.186	ROLLER, UPRIGHT 롤러
34.037	CAP, UPRIGHT TRUNNION 캡	34.200	INTERMEDIATE RAIL WELDED ASSEMBLY, UPRIGHT 인터레일
34.038	FASTENER, UPRIGHT TRUNNION CAP 패스너	34.271	FASTENER, LIFT CYLINDER LOWER 패스너

34.400	CYLINDER ASSEMBLY, LIFT 실린더
34.444	VALVE ASSEMBLY, LIFT CYLINDER FLOW CONTROL 밸브
66.116	SPACER, LIFT CHAIN ANCHOR 스페이서
66.147	VALVE, FINAL LIFT CYLINDER PORT FLOW CONTROL 밸브
66.167	SHIM, LIFT CYLINDER UPPER 심
66.212	SPACER, LIFT CYLINDER FASTENER 스페이서
66.215	VALVE, LIFT CYLINDER PORT FLOW CONTROL 밸브
66.400	CYLINDER ASSEMBLY, FINAL LIFT 실린더
66.433	SHIM, CYLINDER MOUNT 심
66.438	SHEAVE, HOSE 쉬브
66.505	CARTRIDGE, LIFT CYLINDER FLOW CONTROL VALVE 카트리지
66.506	CLAMP, LIFT CYLINDER 클램프
66.507	TEE, LIFT CYLINDER LINE 티
66.508	SPACER, LIFT CHAIN ANCHOR FASTENER 스페이서
91.411	RETAINER, LIFT CHAIN TO ANCHOR FASTENER 리테이너
91.414	RETAINER, LIFT CHAIN TO ANCHOR FASTENER 리테이너
93.984	FASTENER, LIFT CHAIN ANCHOR 패스너
94.054	FASTENER, LIFT CYLINDER (UPPER) 패스너
94.655	FASTENER, LIFT CYLINDER LINE JUNCTION BLOCK 패스너
97.179	FASTENER, LIFT CYLINDER CLAMP 패스너



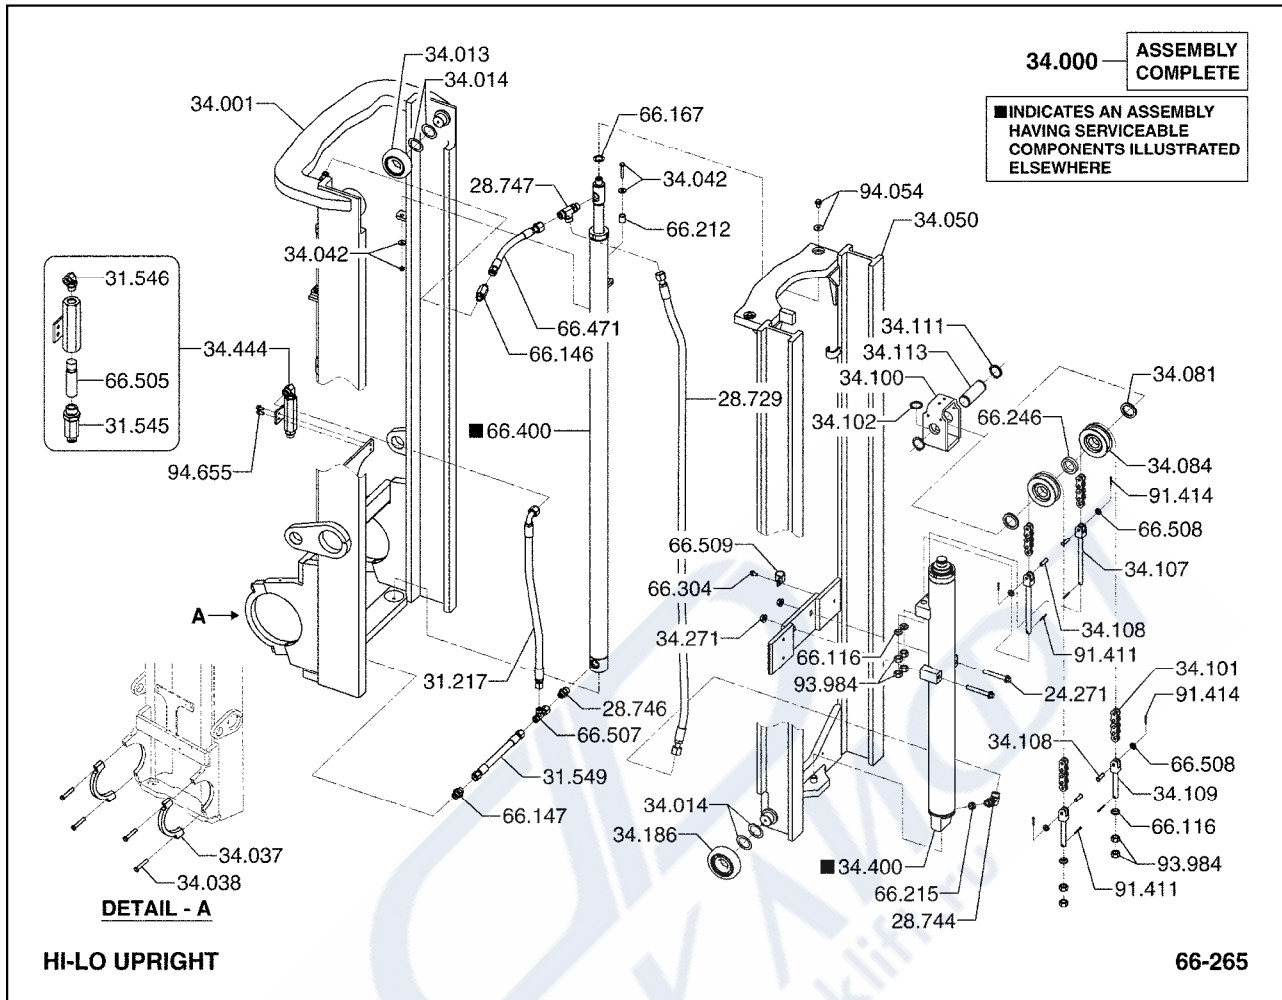 


24.271	PLUG, AIR COMPRESSOR CYLINDER HEAD 플러그
28.729	LINE, LIFT CYLINDER 라인
28.744	FITTING, LIFT CYLINDER LINE 피팅
28.746	FITTING, LIFT CYLINDER LINE 피팅
28.747	FITTING, LIFT CYLINDER LINE 피팅
31.217	LINE, LIFT CYLINDER INLET FITTING 라인
31.545	FITTING, LIFT CYL FLOW CONTROL VALVE INLET 피팅
31.546	FITTING, LIFT CYL FLOW CONTROL VALVE OUTLET 피팅
31.549	LINE, LIFT CYL FLOW CONTROL VALVE INLET 라인
34.000	UPRIGHT & LIFT CYL ASSEMBLY 마스트& 실린더
34.001	OUTER RAIL WELDER ASSEMBLY, UPRIGHT 아우터레일
34.013	ROLLER, UPRIGHT 롤러
34.014	SHIM, UPRIGHT ROLLER 심
34.037	CAP, UPRIGHT TRUNNION 캡
34.038	FASTENER, UPRIGHT TRUNNION CAP 패스너


34.042	FASTENER, LIFT CYLINDER (UPPER) 패스너
34.050	INNER RAIL WELDED ASSEMBLY, UPRIGHT 인너레일
34.081	SPACER, LIFT CHAIN SHEAVE CARRIER 스페이서
34.084	SHEAVE, LIFT CHAIN 쉬브
34.100	CARRIER, LIFT CYLINDER CHAIN SHEAVE 캐리어
34.101	CHAIN, LIFT 체인
34.102	FASTENER, SHEAVE CARRIER 패스너
34.107	ANCHOR, LIFT CHAIN 앵커
34.108	FASTENER, LIFT CHAIN TO ANCHOR 패스너
34.109	ANCHOR, LIFT CHAIN CARRIAGE END 앵커
34.111	FASTENER, CHAIN SHEAVE SHAFT (CARRIER) 패스너
34.113	SHAFT, LIFT CHAIN SHEAVE (CARRIER) 샤프트
34.186	ROLLER, UPRIGHT 롤러
34.271	FASTENER, LIFT CYLINDER LOWER 패스너
34.400	CYLINDER ASSEMBLY, LIFT 실린더

34.444	VALVE ASSEMBLY, LIFT CYLINDER FLOW CONTROL 밸브
66.116	SPACER, LIFT CHAIN ANCHOR 스페이서
66.146	VALVE, LIFT CYLINDER PORT FLOW CONTROL 밸브
66.147	VALVE, FINAL LIFT CYLINDER PORT FLOW CONTROL 밸브
66.167	SHIM, LIFT CYLINDER UPPER 심
66.212	SPACER, LIFT CYLINDER FASTENER 스페이서
66.215	VALVE, LIFT CYLINDER PORT FLOW CONTROL 밸브
66.246	SPACER, LIFT CHAIN SHEAVE 스페이서
66.304	FASTENER, LIFT CYLINDER LINE CLAMP 패스너
66.400	CYLINDER ASSEMBLY, FINAL LIFT 실린더
66.471	LINE, LIFT CYLINDER FEED 라인
66.505	CARTRIDGE, LIFT CYLINDER FLOW CONTROL VALVE 카트리지
66.507	TEE, LIFT CYLINDER LINE 티
66.508	SPACER, LIFT CHAIN ANCHOR FASTENER 스페이서
66.509	CLAMP, LIFT CYLINDER LINE 클램프
91.411	RETAINER, LIFT CHAIN TO ANCHOR FASTENER 리테이너
91.414	RETAINER, LIFT CHAIN TO ANCHOR FASTENER 리테이너
93.984	FASTENER, LIFT CHAIN ANCHOR 패스너
94.054	FASTENER, LIFT CYLINDER (UPPER) 패스너
94.655	FASTENER, LIFT CYLINDER LINE JUNCTION BLOCK 패스너




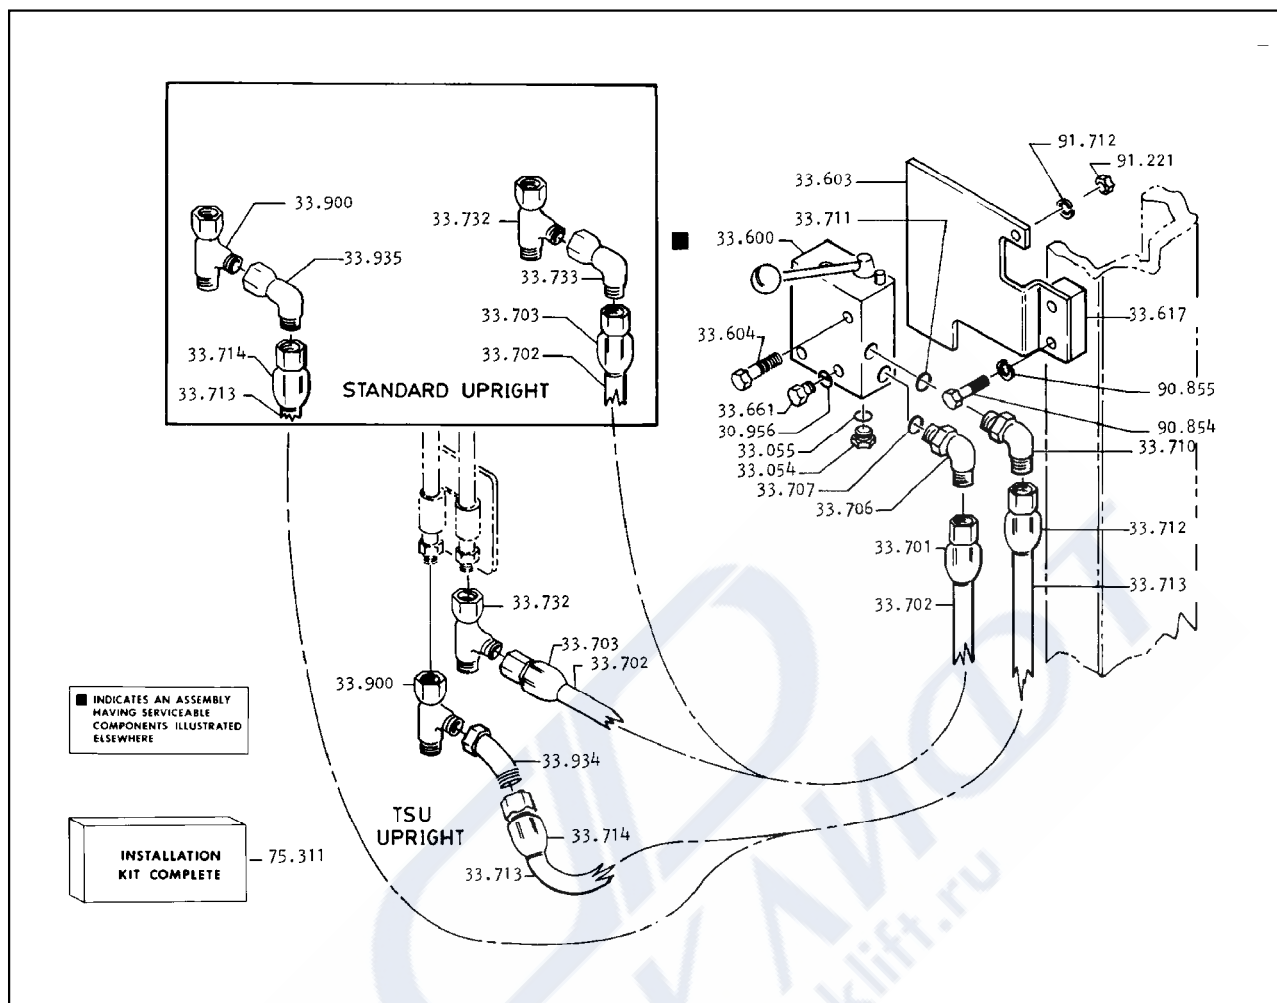 


30.956	SEAL, RELIEF VALVE PLUG 씰	33.712	COUPLING, DEVICE RELIEF VALVE DISCHARGE HOSE 커플링
33.054	PLUG, RELIEF VALVE PORT 플러그	33.713	LINE, DEVICE RELIEF VALVE DISCHARGE 라인
33.055	SEAL, RELIEF VALVE PORT PLUG 씰	33.714	COUPLING, DEVICE RELIEF VALVE DISCHARGE LINE 커플링
33.600	RELIEF VALVE, DEVICE VARIABLE PRESSURE 릴리프밸브	33.732	FITTING, DEVICE RELIEF VALVE INLET 피팅
33.603	BRACKET, DEVICE CARIABLE RELIEF VALVE 브라켓	33.733	FITTING, DEVICE RELIEF VALVE INLET 피팅
33.604	FASTENER, DEVICE VARIABLE RELIEF VALVE 패스너	33.900	FITTING, DEVICE RELIEF VALVE DISCHARGE LINE 피팅
33.617	SPACER, DEV VARIABLE RELIEF VAL BRKT 스페이서	33.934	FITTING, DEVICE RELIEF VALVE DISCHARGE LINE 피팅
33.661	FITTING, DEVICE RELIEF VALVE OUTLET PORT 피팅	33.934	FITTING, DEVICE RELIEF VALVE DISCHARGE LINE 피팅
33.701	COUPLING, DEVICE RELIEF VALVE INLET LINE 커플링	33.935	FITTING, DEVICE RELIEF VALVE DISCHARGE LINE 피팅
33.702	LINE, DEVICE RELIEF VALVE INLET 라인	75.311	KIT, RELIEF VALVE INSTALLATION 키트
33.703	COUPLING, DEVICE RELIEF VALVE INLET LINE 커플링	90.854	BOLT, DEVICE MOUNTING BRACKET FASTENER 볼트
33.706	FITTING, DEVICE RELIEF VALVE INLET PORT 피팅	90.855	LOCKWASHER, DEVICE MOUNTING BRACKET FASTENER 로크와셔
33.707	SEAL, DEVICE RELIEF VALVE INLET PORT FITTING 씰	91.221	NUT, DEV VARIABLE RELIEF VALVE FASTENER 너트
33.710	FITTING, DEVICE RELIEF VALVE DISCHARGE PORT 피팅	91.712	LOCKWASHER, DEVICE RELIEF VALVE FASTENER 로크와셔
33.711	SEAL, DEVICE RELIEF VALVE DISCHARGE PORT FTG 씰		

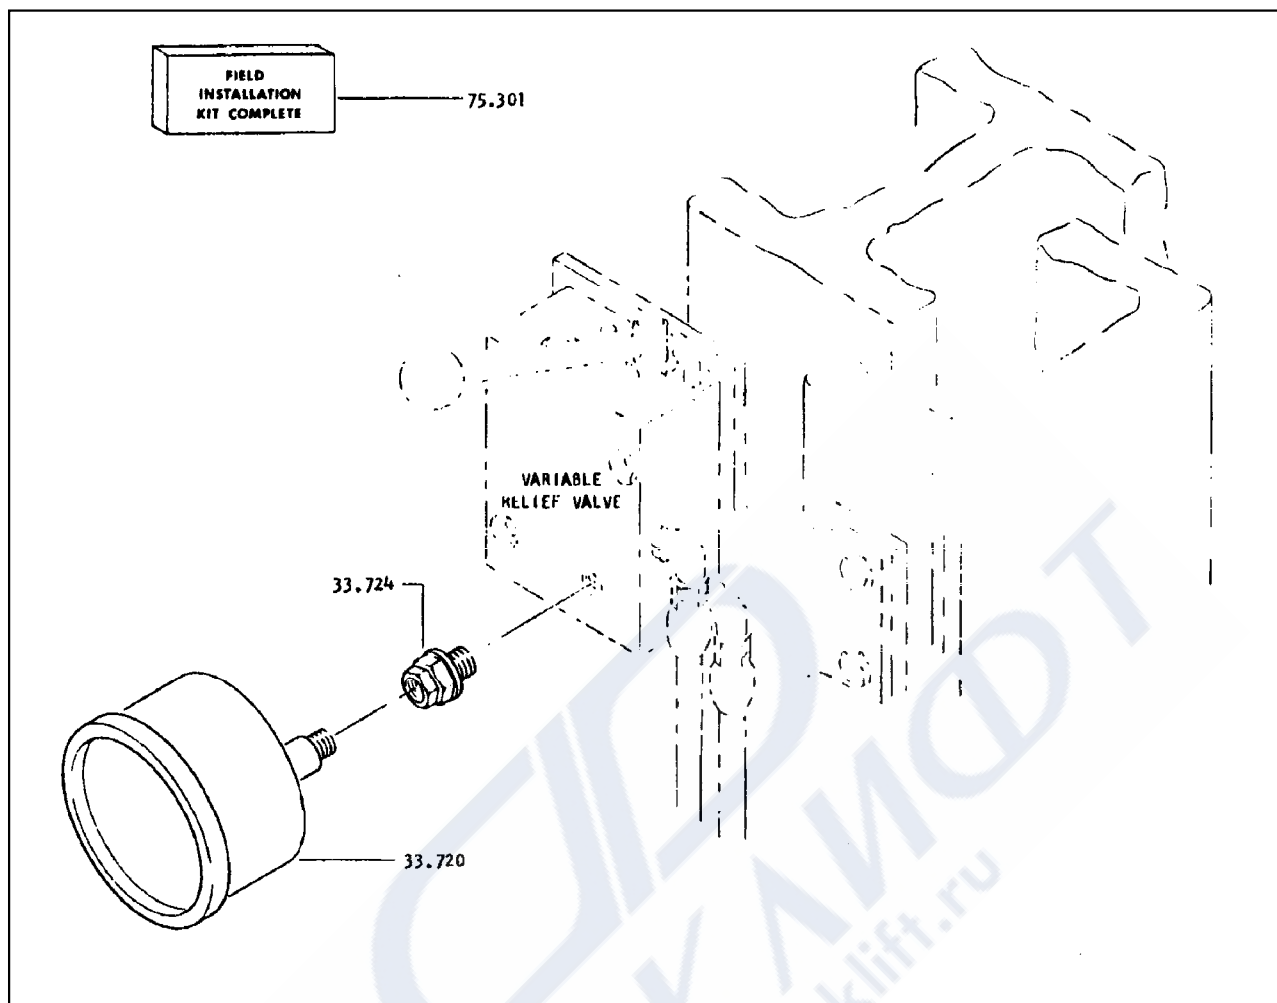 

- | | |
|--------|--|
| 33.720 | GAUGE, DEVICE HYDRAULIC PRESSURE
게이지 |
| 33.724 | FITTING, DEVICE HYD PRESSURE GAUGE
피팅 |
| 75.301 | DEVICE, HYDRAULIC PRESSURE GAUGE
디바이스 |

  
ENGINE
SHUTDOWN KIT 75.046

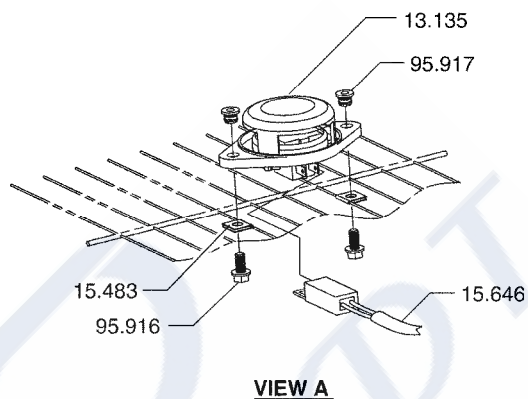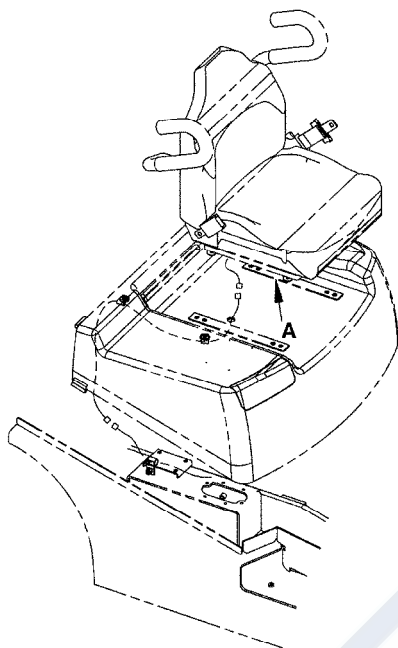

SEAT OPERATED BRAKE SWITCH


75-001

13.135	SWITCH, SEAT SAFETY 스위치
15.483	CLAMP, SEAT SWITCH INSTALLATION CABLE 클램프
15.646	HARNESS, ENGINE DISCONNECT 하네스
75.046	KIT, SEAT ACTUATED ENGINE SHUTDOWN 키트
95.916	FASTENER, SEAT SWITCH 패스너
95.917	NUT, SEAT SWITCH FASTENER 너트

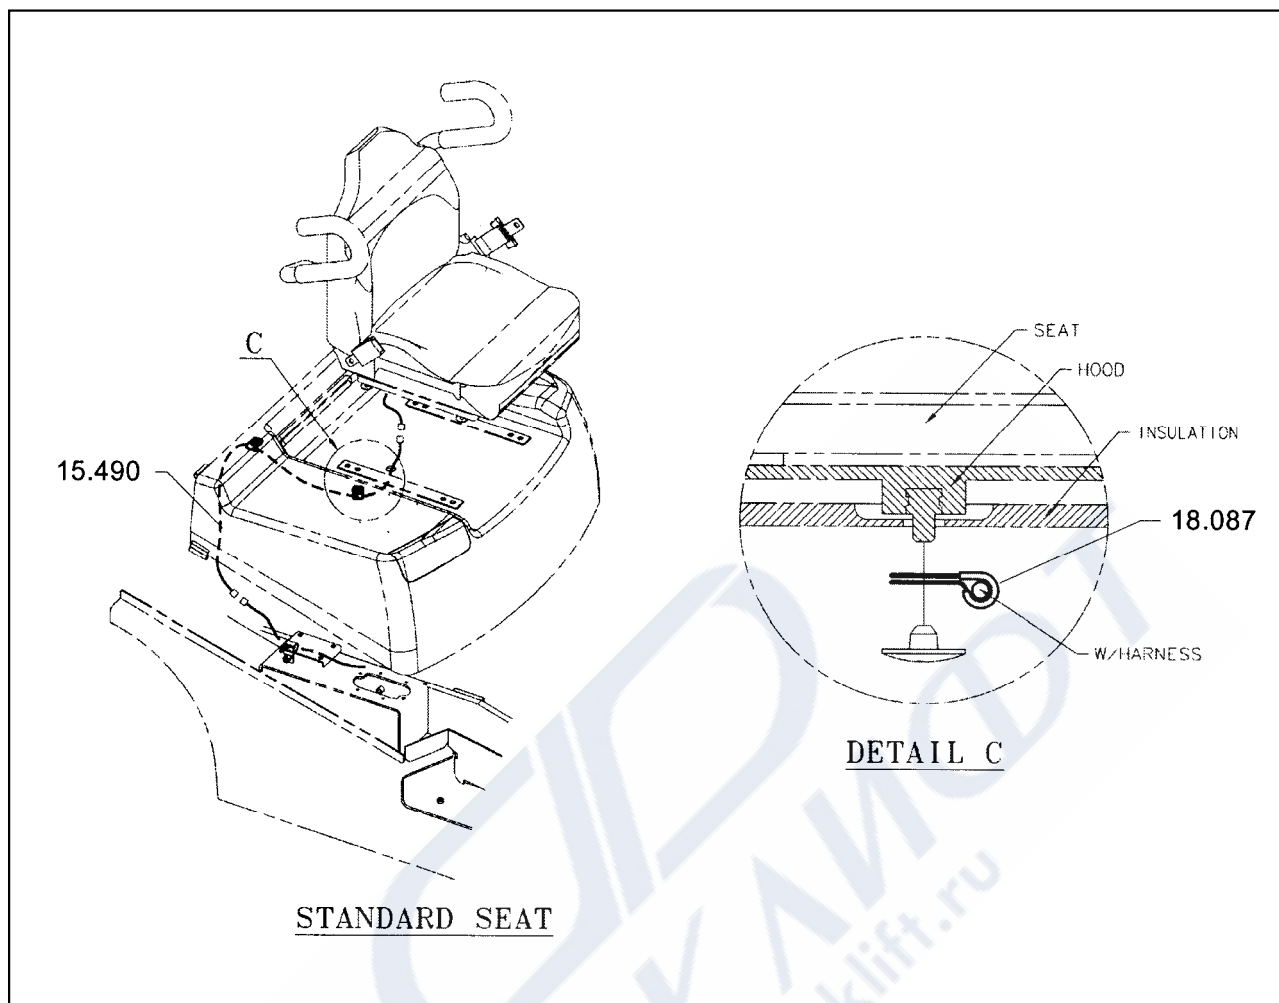 


15.490 HARNESS, SEAT ACTUATED ENGINE SHUTDOWN WIRING
하네스

 18.087 CLIP, SEAT SAFETY SWITCH WIRE
클립

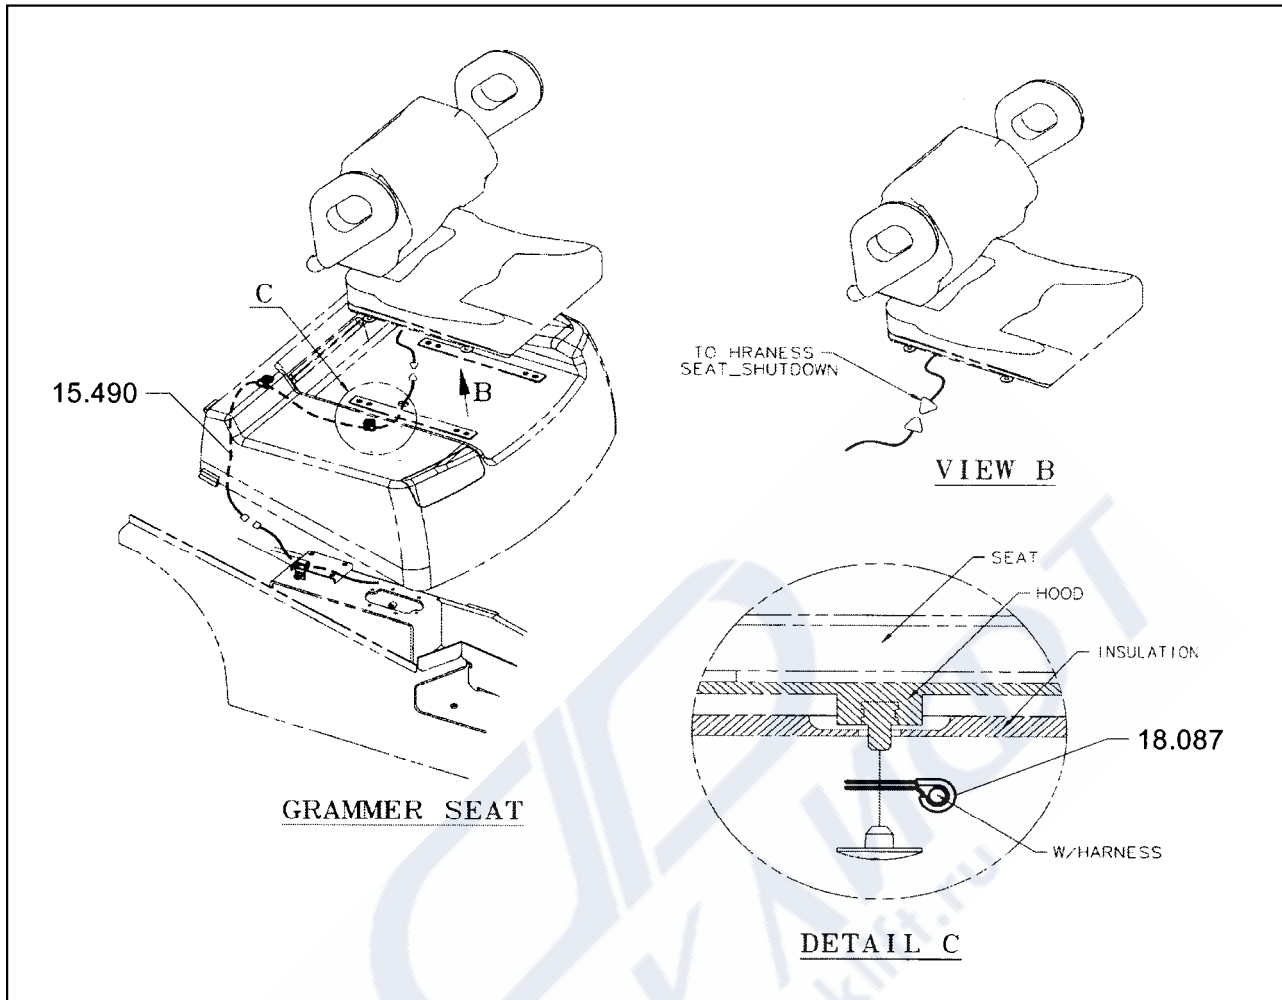

15.490 HARNESS, SEAT ACTUATED ENGINE SHUTDOWN WIRING
하네스

 18.087 CLIP, SEAT SAFETY SWITCH WIRE
클립

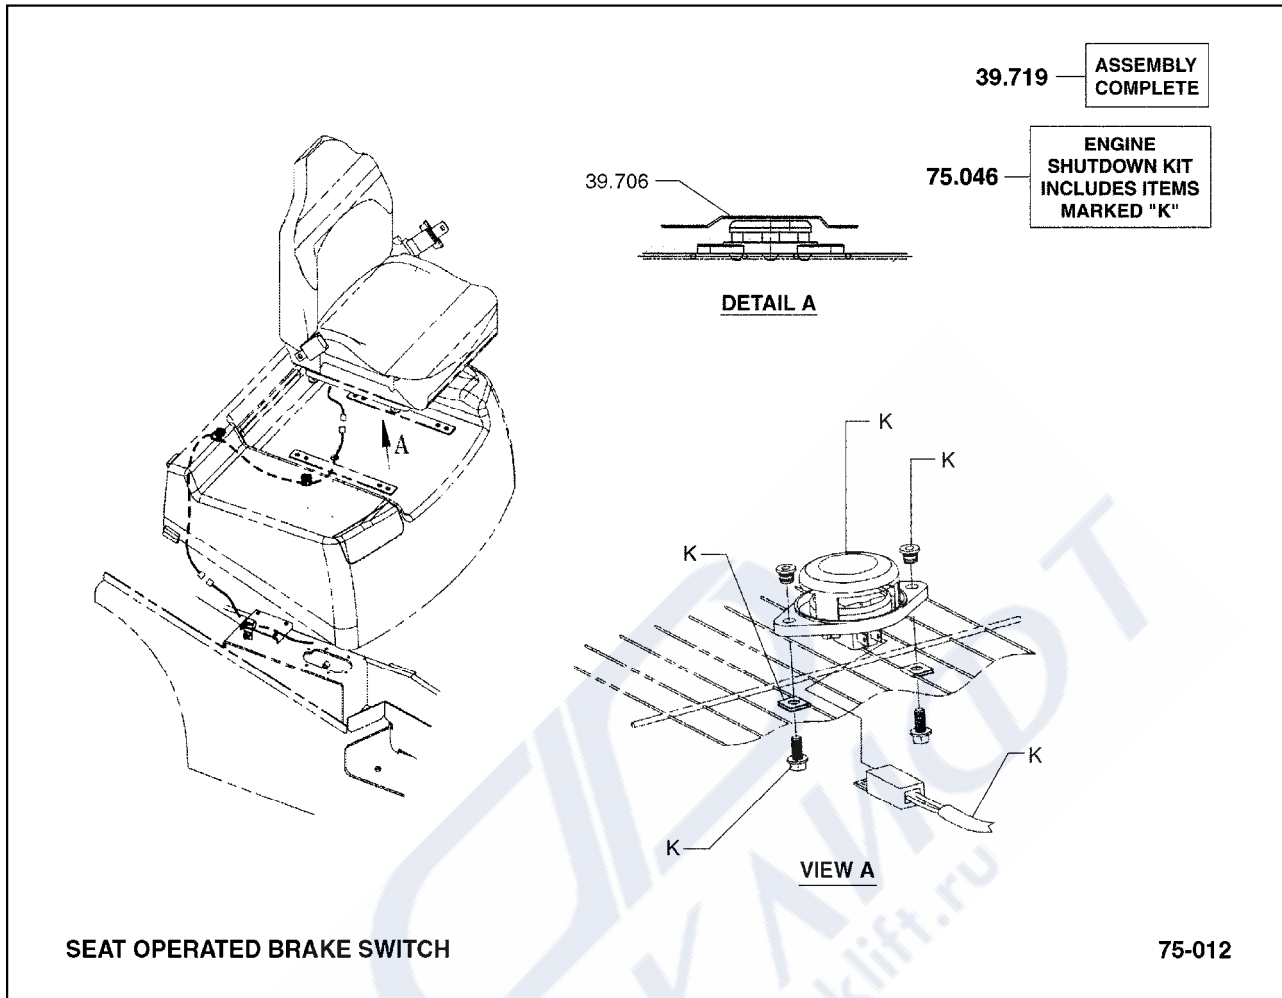

39.706	SUPPORT, SEAT 서포트
39.719	SEAT ASSEMBLY 시트
75.046	KIT, SEAT ACTUATED ENGINE SHUTDOWN 키트