

부품 매뉴얼

PARTS MANUAL

CBX 20/40
(카고)

 
FBX 20/40
(플랫베드)

TRX 60/80
(트랜스포트)

SERIAL NUMBER : CBX246 - XXXX - 9928 FL
FBX246 - XXXX - 9930 FL
TRX246 - XXXX - 9929 FL

부품 청구시 항상 장비의 SERIAL NO. 도
함께 알려 주십시오.

ALWAYS GIVE TRUCK SERIAL NUMBER
WHEN ORDERING PARTS.

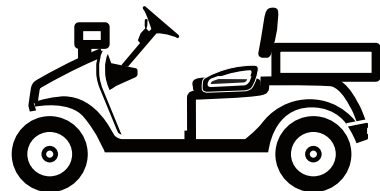

Part No : 8114331
2013. 12



(본사) 경기도 부천시 오정구 오정동 202-1 ☎ (032) 680-6300
(공장) 클라크 미국공장 (렉싱턴 소재)




CBX (카고)

Lot No ; 9928




02-436	ACCELERATOR CONTROL MOUNTING 악셀레이터 컨트롤 마운팅
12-040	BATTERY CHARGER 배터리 충전기
12-199	BATTERY INSTALLATION 배터리 조립그림
13-366	ELECTRICAL COMPONENTS MOUNTING 전기장치 구성품 마운팅
13-400	LIGHTS 라이트
14-870	WIRING HARNESS 와이어링 하네스
16-182	DRIVE MOTOR ASSEMBLY 드라이브 모터 어셈블리
16-183	DRIVE MOTOR MOUNTING 드라이브 모터 어셈블리
20-282	DIFFERENTIAL & DRIVE AXLE 디퍼렌셜& 드라이브 액슬
20-286	SUSPENSION SYSTEM, REAR 서스펜션 시스템 (리어)
22-108	BRAKE ASSEMBLY 브레이크 어셈블리
22-224	TIRE & WHEEL MOUNTING 타이어& 휠 마운팅
23-524	BRAKE PDEAL & LINKAGE 브레이크 페달& 링크케이지
23-563	BRAKE MOUNTING 브레이크 마운팅
25-379	STEERING GEAR MOUNTING 스티어링 기어 마운팅
26-223	STEER AXLE MOUNTING 스티어링 액슬 마운팅
26-227	STEER AXLE 스티어링 액슬
48-002	CARGO BOX 카고 박스
48-003	BODY, FRONT HALF 바디 프론트 하프
48-004	BODY, REAR HALF 바디 리어 하프
48-010	SEAT MOUNTING 시트 마운팅
48-013	FLOOR BOARD AND DASH ASSEMBLY 플로어 보드& 대시 어셈블리
48-052	GLOVE BOX 글러브 박스
48-054	WINDSHIELD MOUNTING 윈드실드 마운팅
48-056	SIDE MIRRORS 사이드 미러
48-057	REAR VIEW MIRROR MOUNTING 후방미러 마운팅
HO 12-040A	BATTERY CHARGER 배터리 충전기
HO 13-400A	LIGHTS 라이트
HO 48-002B	CARGO BOX 카고 박스
HO 48-052A	GLOVE BOX 글러브 박스
HO 48-054A	WINDSHIELD MOUNTING 윈드실드 마운팅
HO 48-056A	SIDE MIRRORS 사이드 미러
HO 48-057A	REAR VIEW MIRROR MOUNTING 후방미러 마운팅

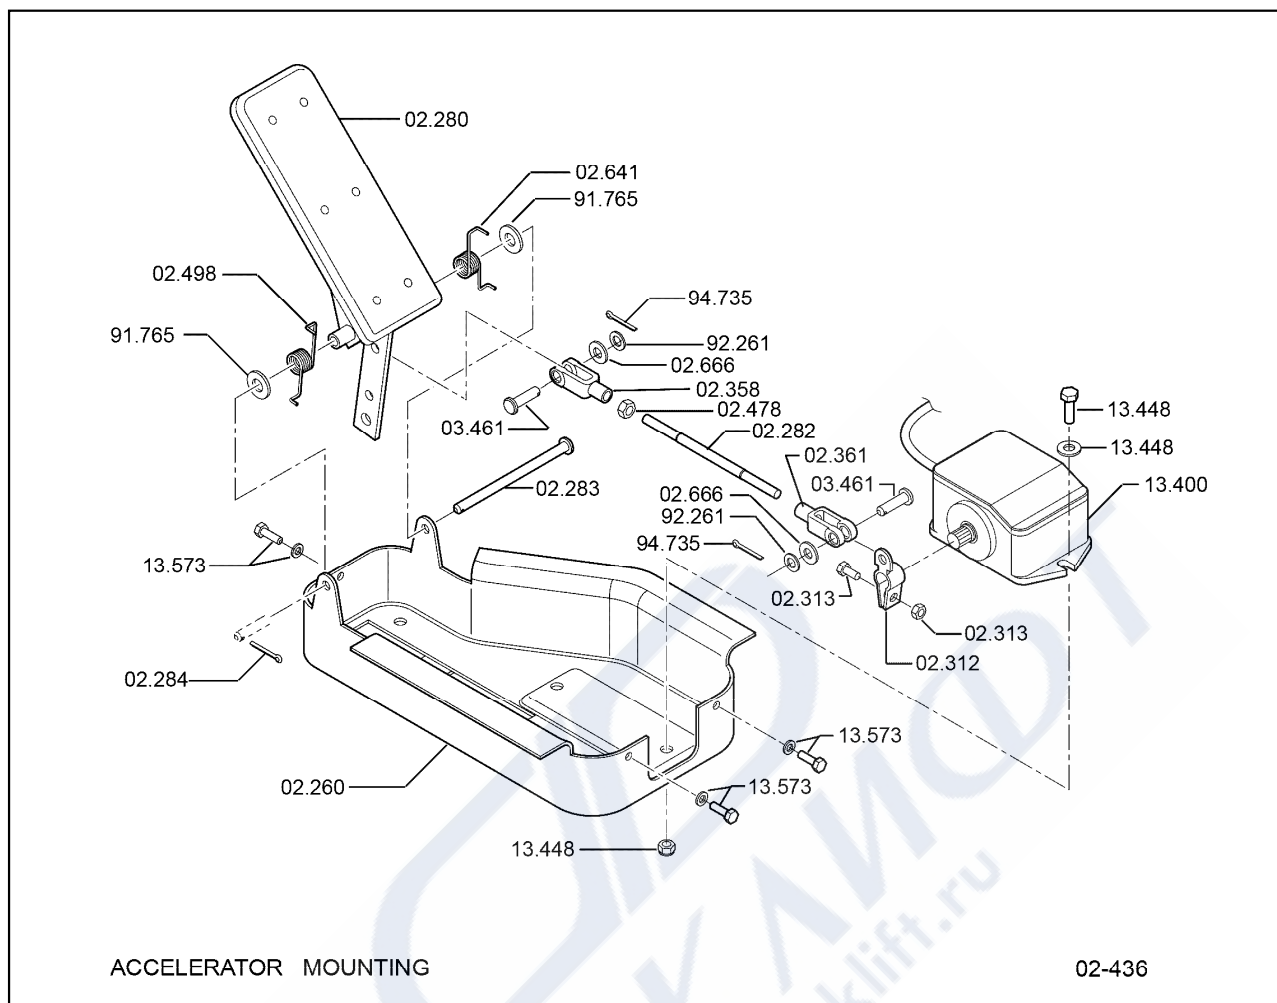 

- | | |
|--------|--|
| 02.260 | BRACKET, ACCELERATOR LINKAGE MOUNTING
브라켓 |
| 02.280 | PEDAL, ACCELERATOR
페달 |
| 02.282 | ROD, ACCELERATOR PUSH
로드 |
| 02.283 | PIN, ACCELERATOR PEDAL TO BRACKET PIVOT
핀 |
| 02.284 | FASTENER, PEDAL TO BRACKET PIVOT PIN
패스너 |
| 02.312 | LEVER, ACCELERATOR LINKAGE
레버 |
| 02.313 | FASTENER, ACCELERATOR LINKAGE LEVER
패스너 |
| 02.358 | CLEVIS, ACCELERATOR ROD PEDAL END
클레비스 |
| 02.361 | CLEVIS, ACCELERATOR ROD LINK END
클레비스 |

02.478	NUT, ACCELERATOR CONTROL ROD 너트
02.498	SPRING, ACCELERATOR RETURN 스프링
02.641	SPRING, ACCELERATOR RETURN 스프링
02.666	SPACER, ACCELERATOR LEVER ROD 스페이서
03.461	PIN, ACCELERATOR CONTROL ROD END 핀
13.400	CONTROL ASSEMBLY, ACCELERATING 컨트롤
13.448	FASTENER, ACCELERATING CONTROL ASSEMBLY 패스너
13.573	FASTENER, ACCELERATOR CONTROL ASSY MOUNTING BRACKE 패스너
91.765	WASHER, ACCELERATOR PIN RETAINER 와셔
92.261	WASHER, ACCELERATOR CONTROL ROD END FASTENER 와셔
94.735	RETAINER, ACCELERATOR CONTROL ROD END PIN 리테이너



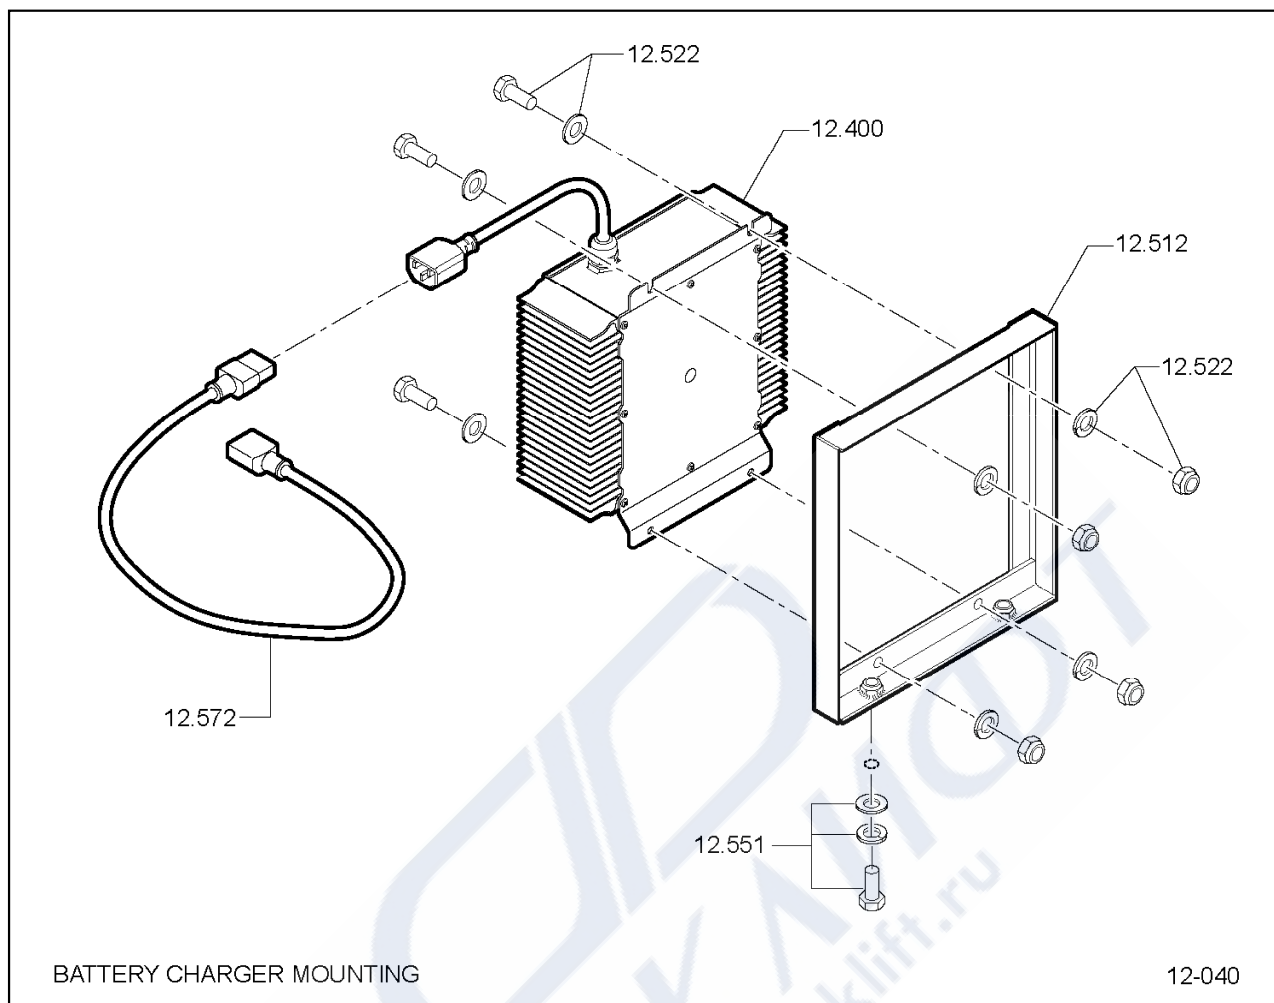 

12.400 BATTERY CHARGE ASSEMBLY
배터리

12.512

*

12.522

 
*

12.551

*

12.572

*

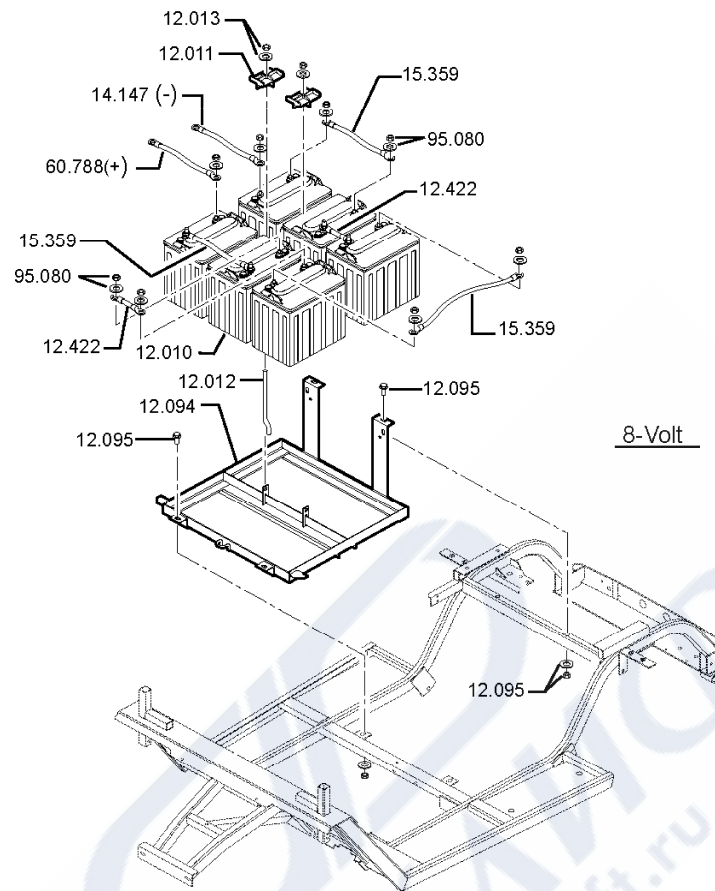


BATTERY INSTALLATION

12-199

12.010	BATTERY 배터리
12.011	CLAMP, BATTERY HOLD DOWN 클램프
12.012	STUD, BATTERY HOLD DOWN 스터드
12.013	FASTENER, BATTERY HOLD DOWN (AT CLAMP) 패스너
12.094	BRACKET, BATTERY SUPPORT 브라켓
12.095	FASTENER, BATTERY SUPPORT BRACKET 패스너
12.422	CABLE, BATTERY TO BATTERY 케이블
14.147	CABLE, BATTERY NEGATIVE 케이블
15.359	CABLE, BATTERY TO BATTERY 케이블


60.788	CABLE, BATTERY POSTIVE 케이블
95.080	FASTENER, BATTERY CABLE 패스너




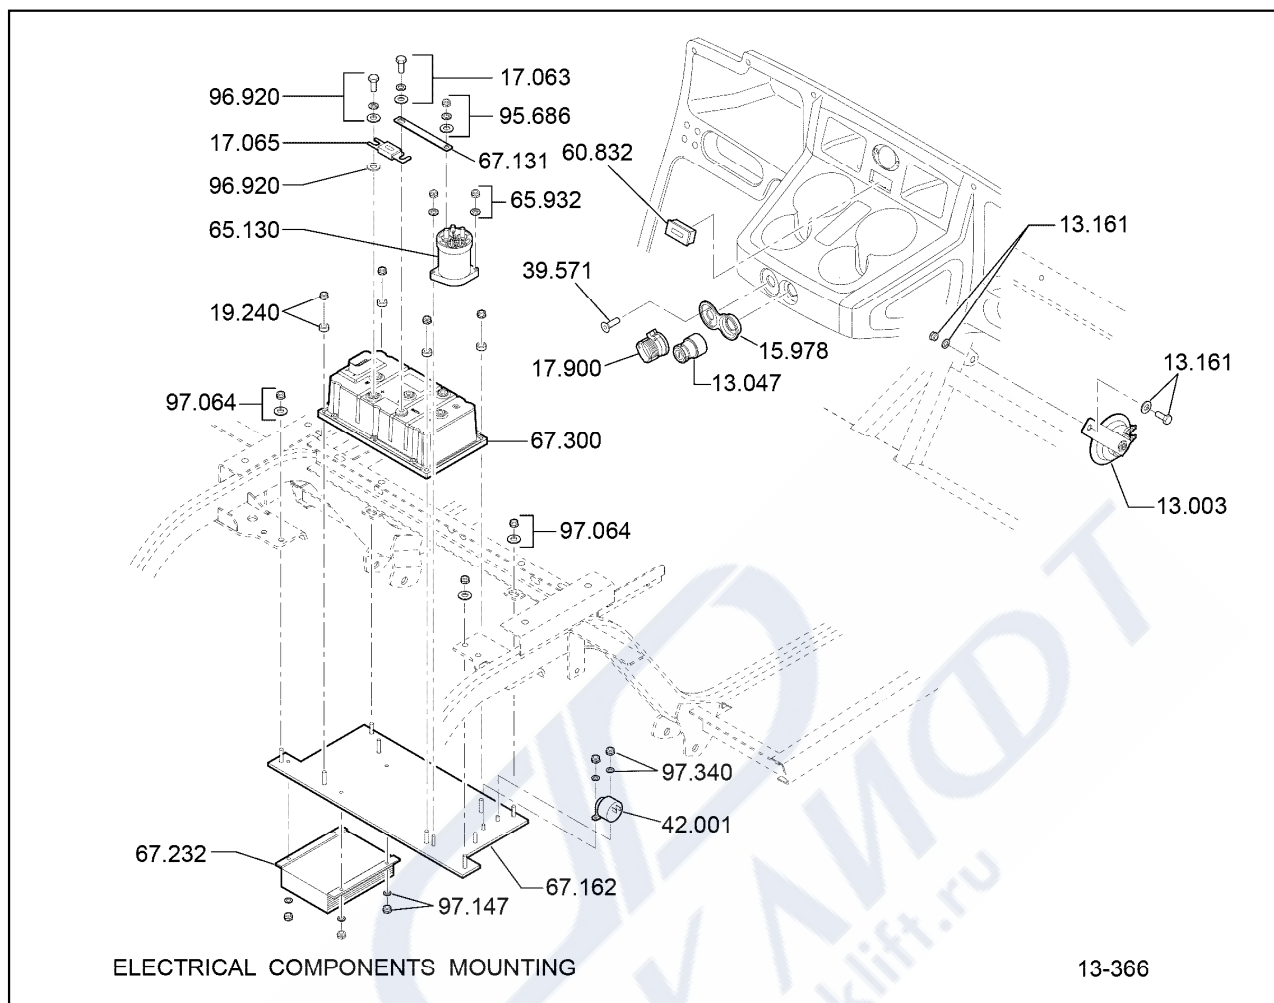 

13.003	HORN 호른
13.047	SWITCH, CIRCUIT LOCKING 스위치
13.161	FASTENER, HORN MOUNTING BRACKET 패스너
15.978	BEZEL, DASH PANEL 배젤
17.063	FASTENER, CONTROL PANEL FUSE TERMINAL 패스너
17.065	FUSE, CONTROL PANEL 퓨즈
17.900	SWITCH, DIRECTION CONTROL 스위치
19.240	FASTENER, CONTROL PANEL MOUNTING 패스너
39.571	FASTENER, DASH COVER 패스너

42.001	WARNING DEVICE, AUDIBLE (AIR OPER) 경고장치
60.832	GAGE, BDI 게이지
65.130	CONTACTOR ASSEMBLY, LINE 컨택터
65.932	FASTENER, LINE CONTACTOR 패스너
67.131	CONDUCTOR, POWER BASE #4 REC 컨덕터
67.162	PLATE, CONTROL PANEL MOUNTING 플레이트
67.232	CONVERTER DC TO DC FOR ACCESSORY 컨버터
67.300	CONTROLLER, TRACTION 컨트롤러
95.686	FASTENER, CONTROL PANEL LEAD 패스너
96.920	FASTENER, FUSE MOUNTING 패스너
97.064	FASTENER, CONTROLLER BRACKET MOUNTING 패스너
97.147	FASTENER, DC-DC CONVERTER FOR ACCESSORY 패스너
97.340	FASTENER, REVERSE ALARM 패스너

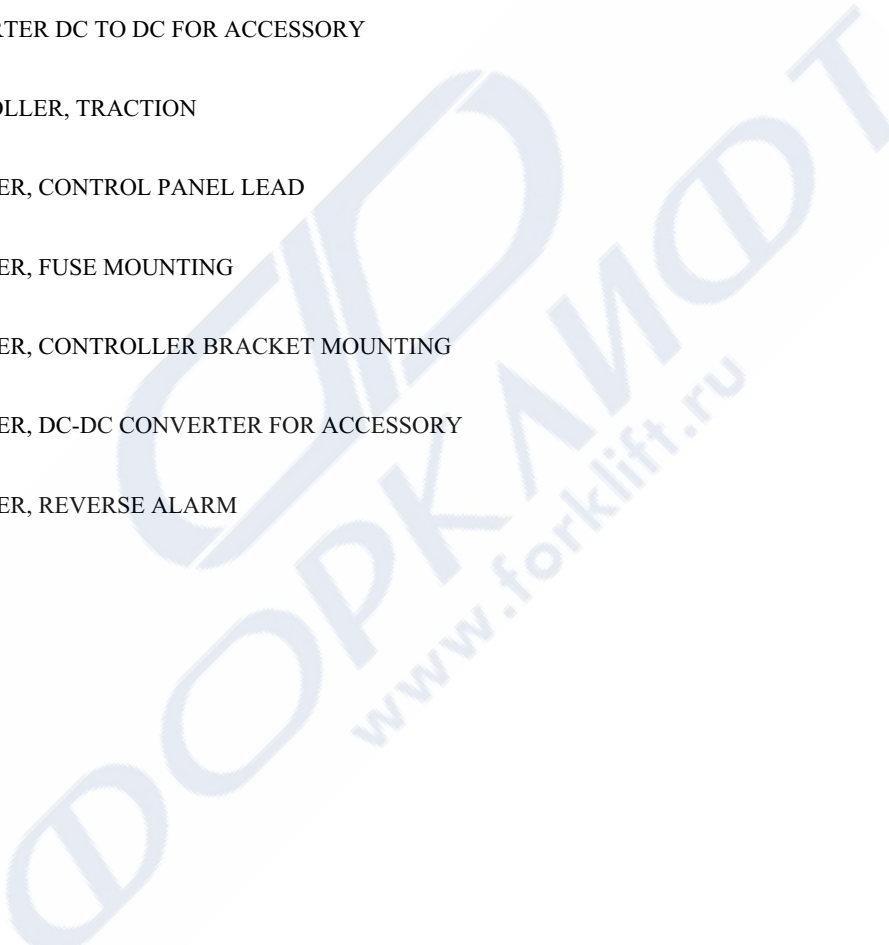 

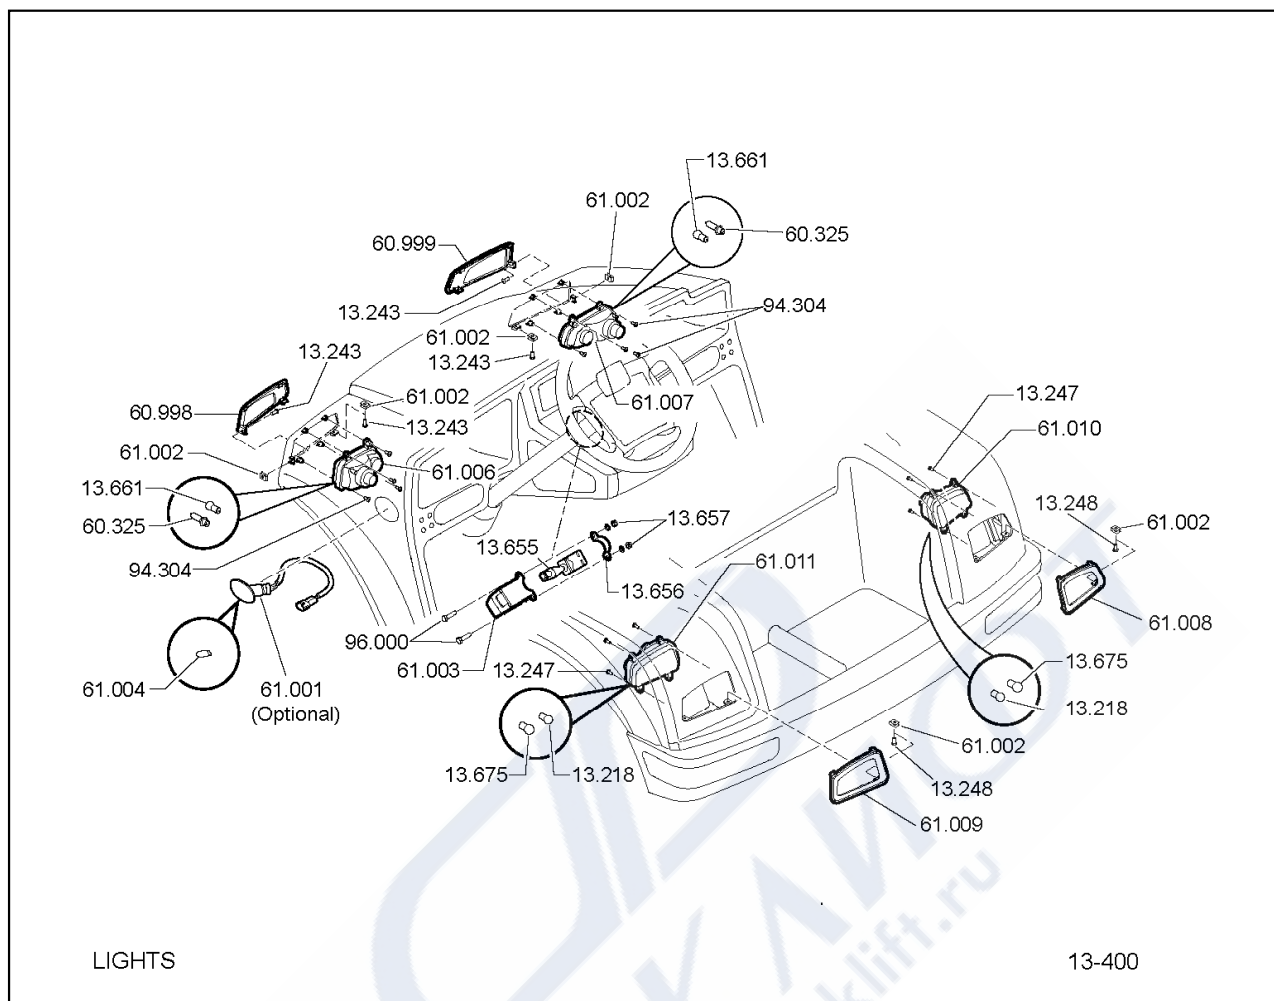 


LIGHTS

13-400

- | | |
|--------|--|
| 13.218 | BULB, STOP & TAIL LAMP
전구 |
| 13.243 | FASTENER, HEAD LAMP BRACKET
패스너 |
| 13.247 | FASTENER, TAIL LAMP ASSEMBLY
패스너 |
| 13.248 | FASTENER, TAIL LAMP HOUSING
패스너 |
| 13.655 | SWITCH, TURN INDICATOR
스위치 |
| 13.656 | BRACKET, TURN INDICATOR SWITCH
브라켓 |
| 13.657 | FASTENER, TURN INDICATOR SWITCH BRACKET
패스너 |
| 13.661 | BULB, TURN SIGNAL LIGHT
전구 |
| 13.675 | BULB, TURN LIGHT
전구 |


60.325	BULB, HEADLAMP 전구
60.998	BEZEL, HEADLAMP LH 배젤
60.999	BEZEL, HEADLAMP RH 배젤
61.001	LIGHT, SIDE MARKER 라이트
61.002	FASTENER, SPEED NUT 패스너
61.003	HOUSING, TURN INDICATOR SWITCH 하우징
61.004	BULB, SIDE MARKER LIGHT 전구
61.006	HEADLAMP LH 헤드램프
61.007	HEADLAMP, RH 헤드램프
61.008	BEZEL, TAILLAMP RH 배젤
61.009	BEZEL, TAILLAMP LH 배젤
61.010	TAILLAMP RH 테일램프
61.011	TAILLAMP, LH 테일램프
94.304	FASTENER, HEADLAMP 패스너
96.000	FASTENER, TURN INDICATOR SWITCH 패스너

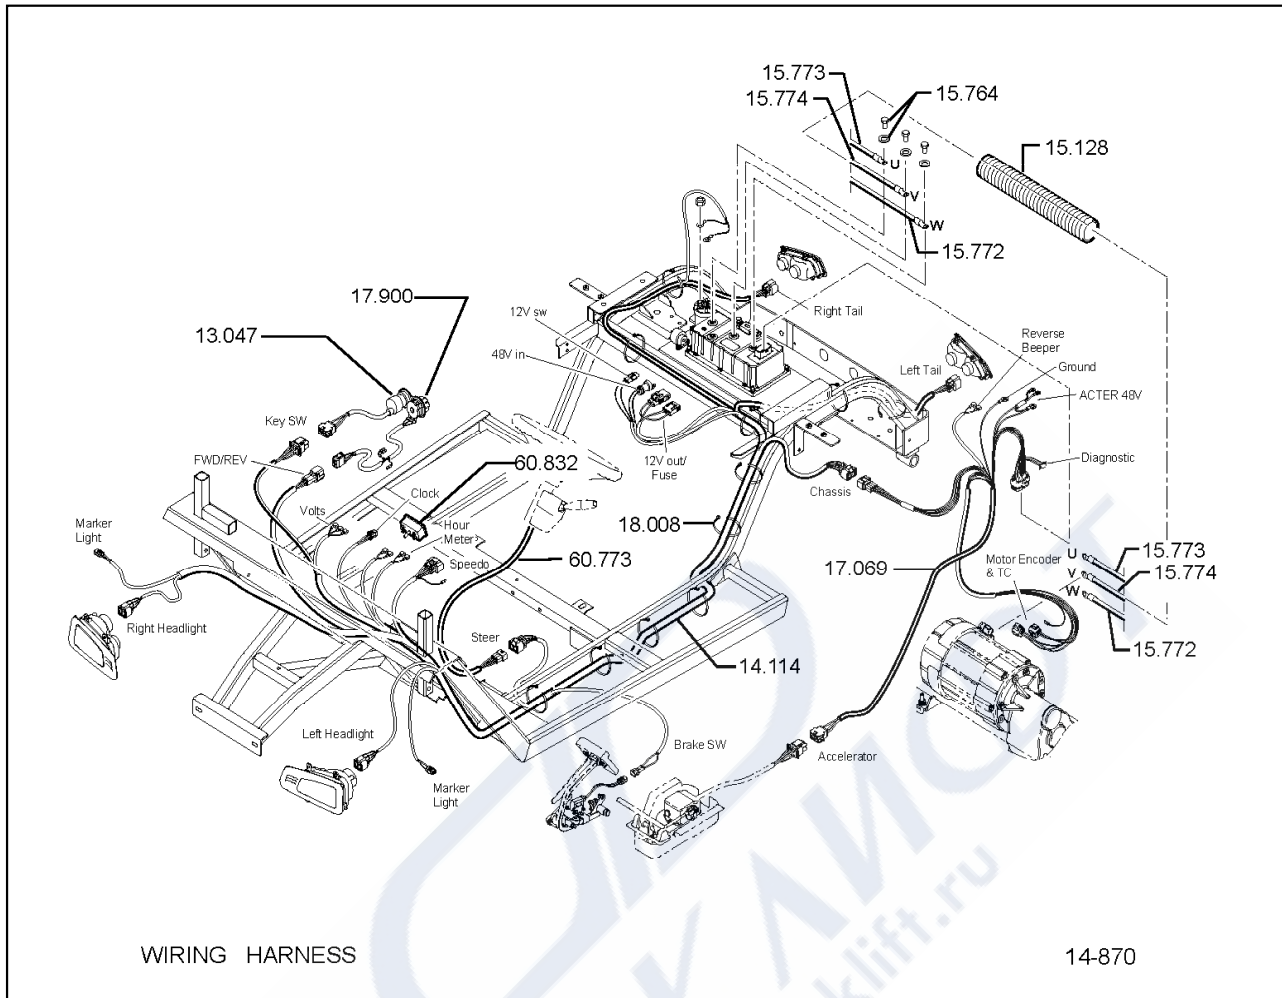 

13.047	SWITCH, CIRCUIT LOCKING 스위치
14.114	HARNESS, MACHINE WIRING 하네스
15.128	LOOM, BATTERY CABLE 룸
15.764	FASTENER, CABLE MOUNTING 패스너
15.772	CABLE, DRIVE MOTOR (TMVR TO TCWR) 케이블
15.773	CABLE, DRIVE MOTOR (TMUL TO TCUL) 케이블
15.774	CABLE, DRIVE MOTOR (TMVL TO TCVL) 케이블
17.069	HARNESS, CONTROL PANEL 하네스
17.900	SWITCH, DIRECTION CONTROL 스위치

18.008	CLIP, WIRING HARNESS 클립
60.773	HARNESS, TURN SIGNAL 하네스
60.832	GAGE, BDI 게이지

 ФОРКЛИФТ
www.forklift.ru

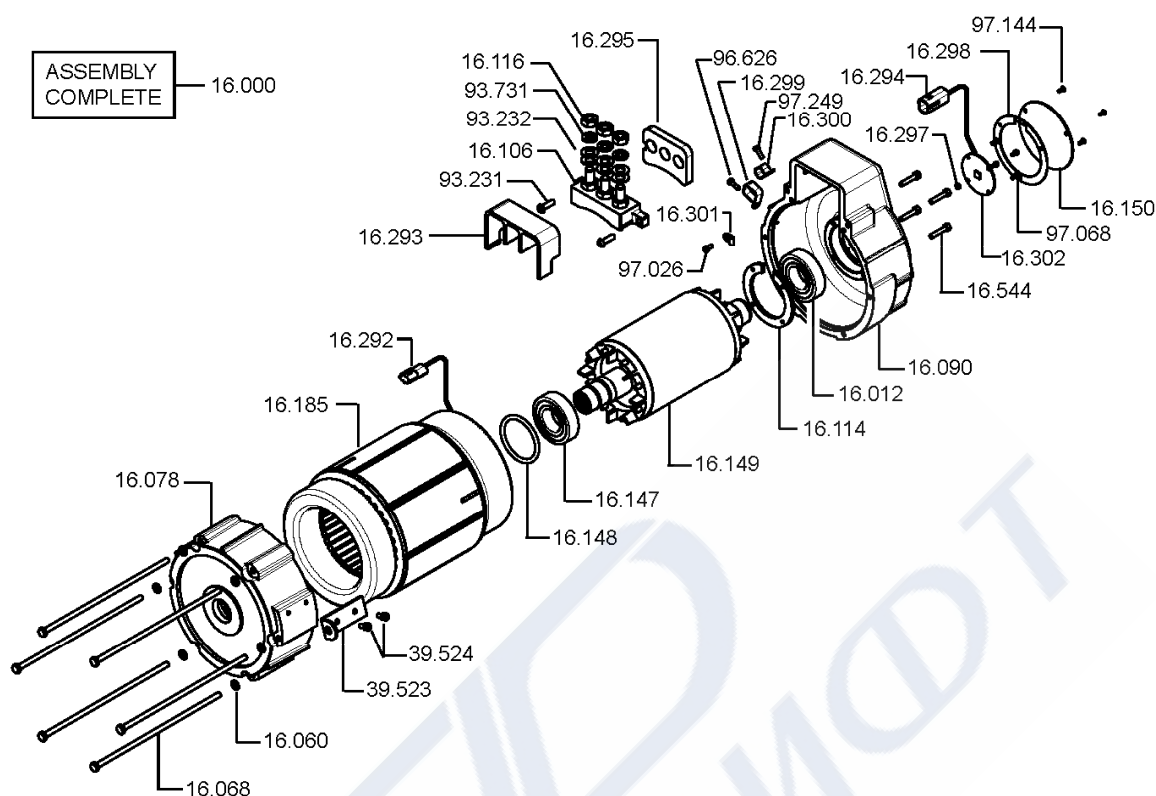

DRIVE MOTOR


16-182

16.000	MOTOR ASSEMBLY, DRIVE 모터	16.293	COVER, DRIVE MOTOR TERMINAL BLOCK 커버
16.012	BEARING, DRIVE MOTOR END 베어링	16.294	CONNECTOR, DRIVE MOTOR SPEED SENSOR 커넥터
16.060	WASHER, DRIVE END THRUST 와셔	16.295	INSULATOR, DRIVE MOTOR TERMINAL MOUNTING 절연체
16.068	FASTENER, DRIVE MOTOR END FRAME 패스너	16.297	MAGNET, DRIVE MOTOR SPEED SENSOR 마그넷
16.078	FRAME, DRIVE MOTOR DRIVE END 프레임	16.298	GASKET, DRIVE MOTOR END PLATE 가스켓
16.090	COVER, DRIVE MOTOR COMMUTATOR END 커버	16.299	CLAMP, DRIVE MOTOR SPEED SENSOR WIRING 클램프
16.106	TERMINAL BLOCK, DRIVE MOTOR 터미널블록	16.300	CLAMP, DRIVE MOTOR WIRING CONNECTOR 클램프
16.114	WASHER, DRIVE MOTOR DRIVE END THRUST 와셔	16.301	CLAMP, DRIVE MOTOR CABLE 클램프
16.116	FASTENER, DRIVE MOTOR TERMINAL 패스너	16.302	SPEED SENSOR, DRIVE MOTOR 스피드센서
16.147	SENSOR BEARING, DRIVE MOTOR ROTOR 센서베어링	16.544	FASTENER, COMMUTATOR END BEARING COVER 패스너
16.148	RING, DRIVE MOTOR ROTOR BEARING 링	39.523	BRACKET, DRIVE MOTOR SHIELD MOUNTING 브라켓
16.149	ROTOR, DRIVE MOTOR 로터	39.524	FASTENER, DRIVE MOTOR SHIELD 패스너
16.150	COVER, DRIVE MOTOR ROTOR END 커버	93.231	FASTENER, DRIVE MOTOR TERMINAL BLOCK 패스너
16.185	STATOR ASSY, DRIVE MOTOR 스테이터	93.232	WASHER, DRIVE MOTOR TERMINAL BLOCK FASTENER 와셔
16.292	CONNECTOR, DRIVE MOTOR THERMAL SENSOR 커넥터	93.731	NUT, DRIVE MOTOR FASTENER 너트

96.626	FASTENER, WIRING HARNESS CLAMP 패스너
97.026	FASTENER, CABLE BRACKET 패스너
97.068	FASTENER, DRIVE MOTOR SPEED SENSOR 패스너
97.144	FASTENER, DRIVE MOTOR ROTOR SENSOR PLATE COVER 패스너
97.249	FASTENER, SPEED SENSOR BRKT. 패스너



 
■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

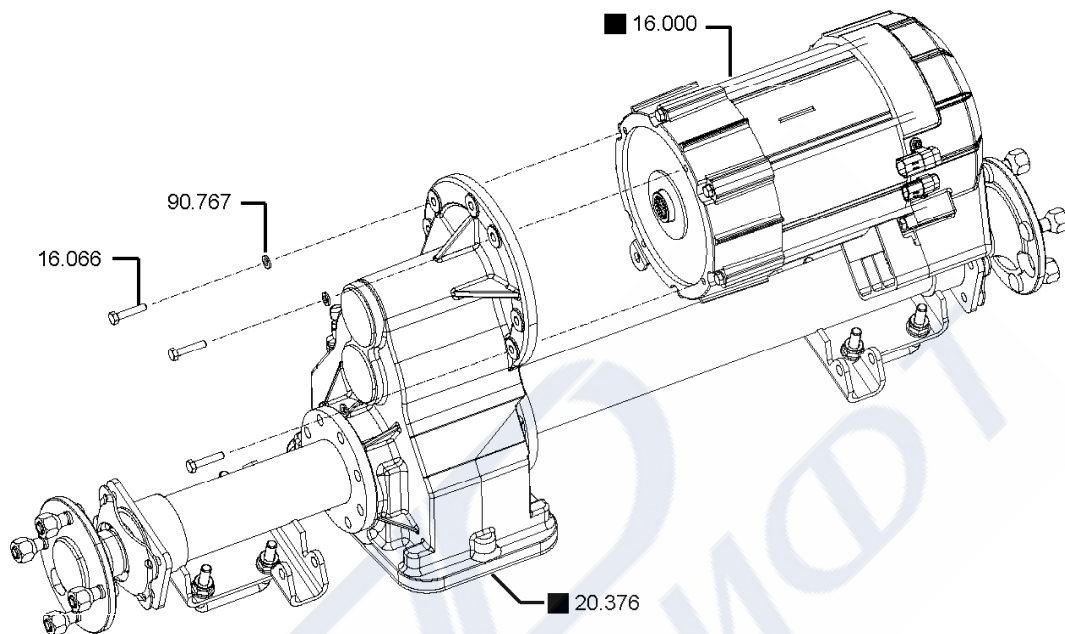

DRIVE MOTOR MOUNTING


16-183

16.000	MOTOR ASSEMBLY, DRIVE 모터
16.066	FASTENER, DRIVE MOTOR 패스너
20.376	AXLE ASSEMBLY, DRIVE 드라이브액슬
90.767	LOCKWASHER, DRIVE MOTOR FASTENER 로크와셔

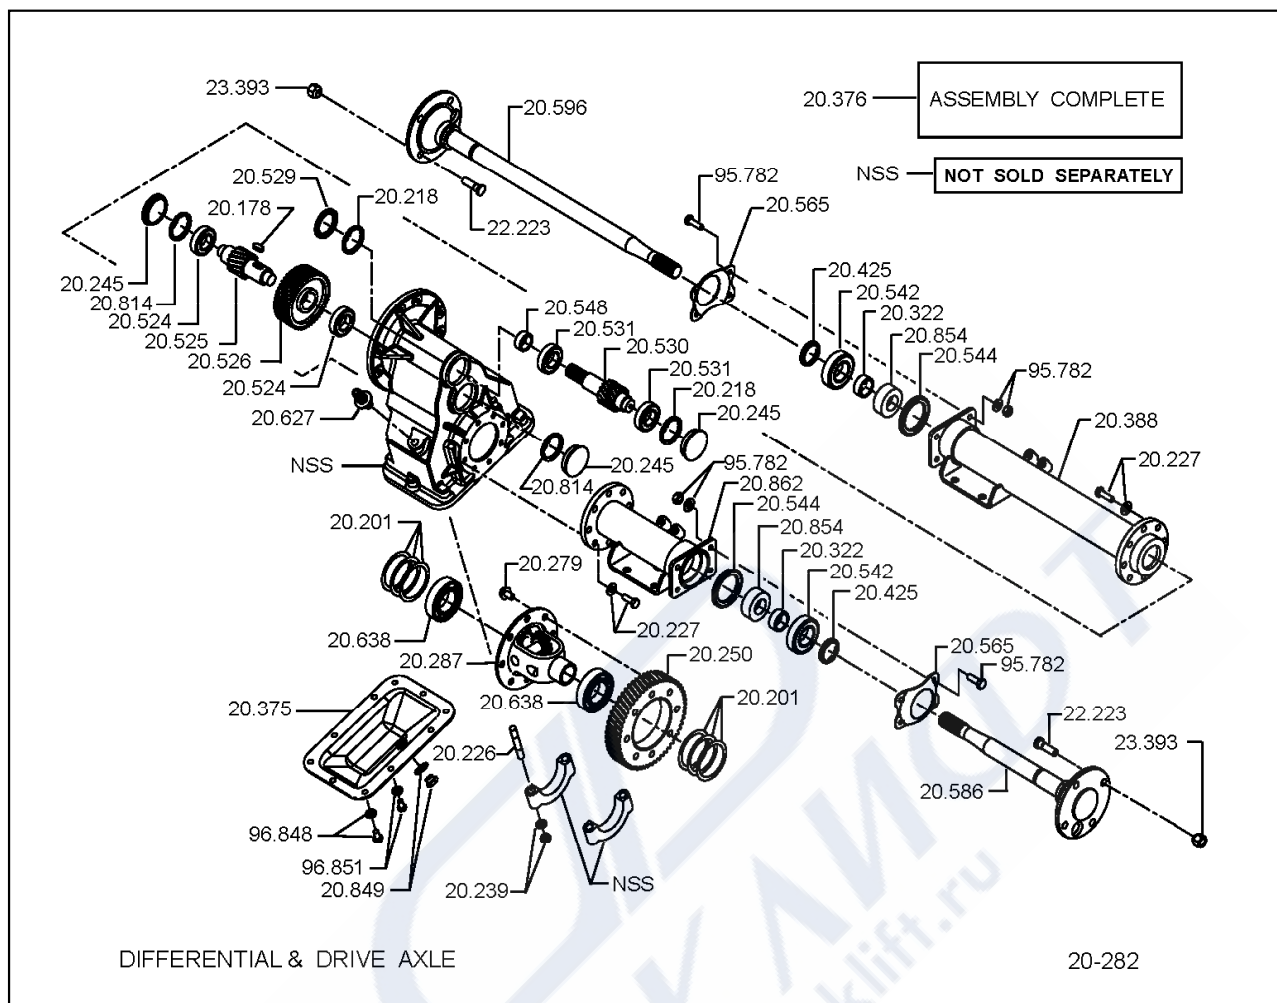 

20.178	KEY, INPUT SHAFT 키	20.524	BEARING, DRIVE AXLE INTERMEDIATE GEAR SHAFT 베어링
20.201	SHIM, DIFF BRG CARRIER TO AXLE HOUSING 심	20.525	SHAFT, DRIVE AXLE INTERMEDIATE GEAR 샤프트
20.218	RETAINER, DRIVE AXLE INPUT GEAR SHAFT BEARING IN 리테이너	20.526	GEAR, DRIVE AXLE INTERMEDIATE 기어
20.226	LOCATOR, DIFFERENTIAL PINION BEARING CARRIER 로케이터	20.529	SEAL, DRIVE AXLE INPUT GEAR SHAFT 씰
20.227	FASTENER, THICK FLANGE TO AXLE HOUSING 패스너	20.530	SHAFT, DRIVE AXLE INPUT GEAR 샤프트
20.239	FASTENER, DIFFERENTIAL PINION BEARING CARRIER 패스너	20.531	BEARING, DRIVE AXLE INPUT GEAR 베어링
20.245	COVER, DIFFERENTIAL ACCESS HOLE 커버	20.542	BEARING, DRIVE AXLE SHAFT 베어링
20.250	GEAR, DIFFERENTIAL DRIVEN 기어	20.544	SEAL, DRIVE AXLE SHAFT 씰
20.279	FASTENER, DIFFERENTIAL CASE TO RING GEAR 패스너	20.548	SLEEVE, DRIVE AXLE SHAFT 슬리브
20.287	CASE & GEAR ASSEMBLY, DIFFERENTIAL 케이스 & 기어	20.565	RETAINER, DRIVE AXLE SHAFT BEARING 리테이너
20.322	SPACER, DRIVE AXLE SHAFT BEARING 스페이서	20.586	SHAFT, DRIVE AXLE 샤프트
20.375	COVER, DIFFERENTIAL HOUSING INSPECTION 커버	20.596	SHAFT, DRIVE AXLE (LH) 샤프트
20.376	AXLE ASSEMBLY, DRIVE 드라이브 액슬	20.627	VENT, DIFFERENTIAL & AXLE 벤트
20.388	HOUSING, DRIVE AXLE (LH) 하우징	20.638	BEARING, RING GEAR SHAFT OUTBOARD 베어링
20.425	SPACER, AXLE SHAFT 스페이서	20.814	RETAINER, DRIVE AXLE INTERMEDIATE GEAR BEARING 리테이너


20.849	PLUG, DRIVE AXLE HOUSING 플러그
20.854	SLEEVE, AXLE SHAFT 슬리브
20.862	HOUSING, DRIVE AXLE (RH) 하우징
22.223	FASTENER, DRIVE WHEEL 패스너
23.393	FASTENER, DRIVE WHEEL 패스너
95.782	FASTENER, DRIVE AXLE SHAFT BEARING RETAINER 패스너
96.848	FASTENER, INSPECTION PLATE 패스너
96.851	FASTENER, INSPECTION PLATE 패스너

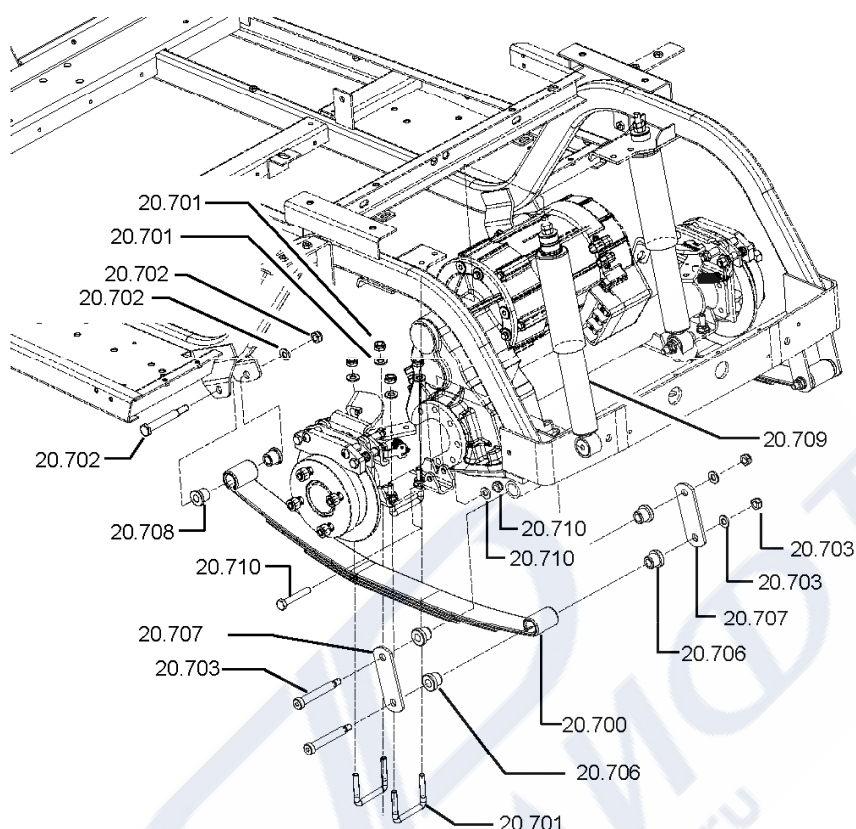 

SUSPENSION SYSTEM REAR


20-286


- | | |
|--------|---|
| 20.700 | SPRING ASSEMBLY, DRIVE AXLE SUSPENSION
스프링 |
| 20.701 | FASTENER, DRIVE AXLE SUSPENSION SPRING - AXLE
패스너 |
| 20.702 | FASTENER, DRIVE AXLE SUSPENSION SPRING (FRAME FRONT)
패스너 |
| 20.703 | FASTENER, DRIVE AXLE SUSPENSION SPRING (FRAME REAR)
패스너 |
| 20.706 | BEARING, DRIVE AXLE SUSPENSION SPRING
베어링 |
| 20.707 | SHACKLE, DRIVE AXLE SUSPENSION MOUNTING
샤클 |
| 20.708 | BEARING, DRIVE AXLE SUSPENSION SPRING MOUNTING (FRONT)
베어링 |
| 20.709 | SHOCK ABSORBER, REAR AXLE
쇼브업쇼버 |
| 20.710 | FASTENER, REAR AXLE SHOCK ABSORBER
패스너 |

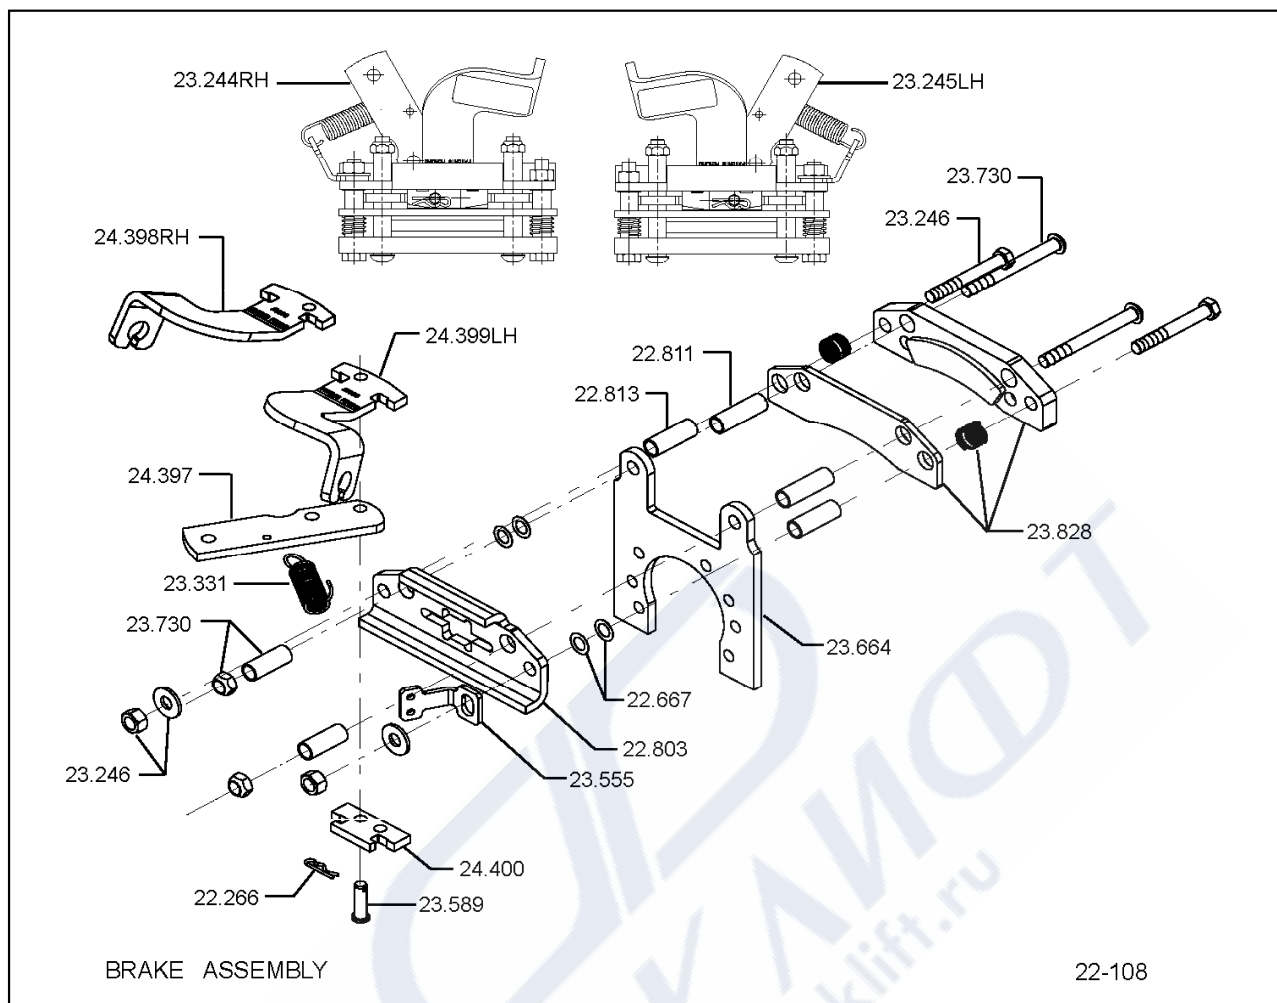 

- | | |
|--------|--|
| 22.266 | RETAINER, BRAKE CABLE CLEVIS PIN
리테이너 |
| 22.667 | SHIM, BRAKE
심 |
| 22.803 | SPACER PLATE, BRAKE ASSEMBLY
스페이서플레이트 |
| 22.811 | BUSHING, BRAKE ASSEMBLY
부싱 |
| 22.813 | SLEEVE, BRAKE
슬리브 |
| 23.244 | BRAKE ASSEMBLY, RH DRIVE WHEEL
브레이크 |
| 23.245 | BRAKE ASSEMBLY, LH DRIVE WHEEL
브레이크 |
| 23.246 | FASTENER, BRAKE ASSEMBLY
패스너 |
| 23.331 | SPRING, BRAKE ACTUATING
스프링 |

23.555	ANCHOR, BRAKE ACTUATING SPRING 앵커
23.589	RETAINER, BRAKE ACTUATING LEVER 리테이너
23.664	PLATE, BRAKE SHOE RETAINER 플레이트
23.730	FASTENER, BRAKE ASSEMBLY 패스너
23.828	KIT, BRAKE LINING 키트
24.397	LEVER, BRAKE CAM 레버
24.398	PLATE, BRAKE CABLE ACTURATOR RH 플레이트
24.399	PLATE, BRAKE CABLE ACTURATOR LH 플레이트
24.400	PLATE, BRAKE ACTURATOR 플레이트

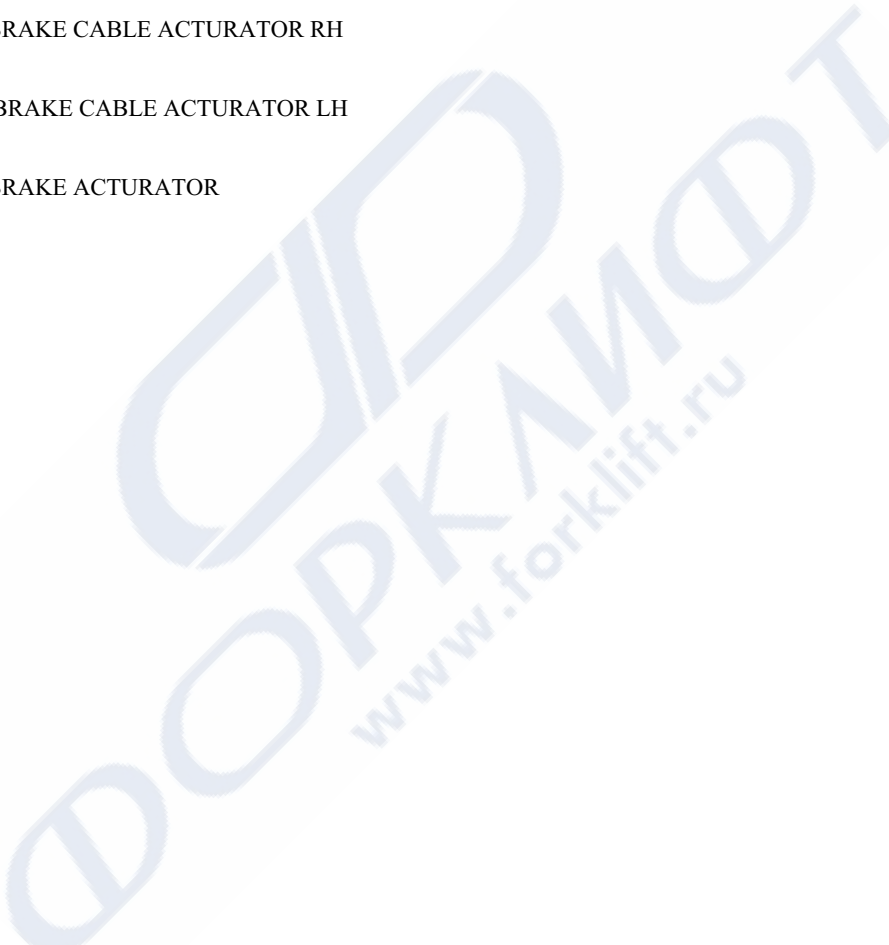 


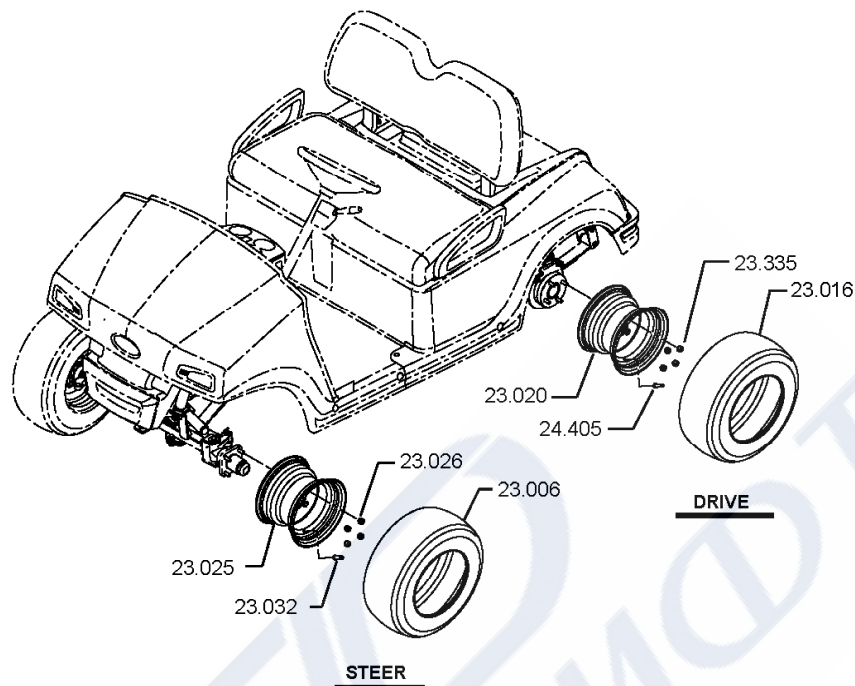 

TIRE & WHEEL MOUNTING

22-224

23.006	TIRE, STEER WHEEL 타이어
23.016	TIRE, DRIVE WHEEL 타이어
23.020	WHEEL ASSEMBLY, DRIVE 휠
23.025	WHEEL ASSEMBLY, STEER 휠
23.026	FASTENER, STEER WHEEL 패스너
23.032	VALVE STEM - TUBELESS STEER WHEEL 밸브스텝
23.335	FASTENER, DRIVE WHEEL 패스너
24.405	VALVE STEM, TUBELESS DRIVE WHEEL 밸브스텝

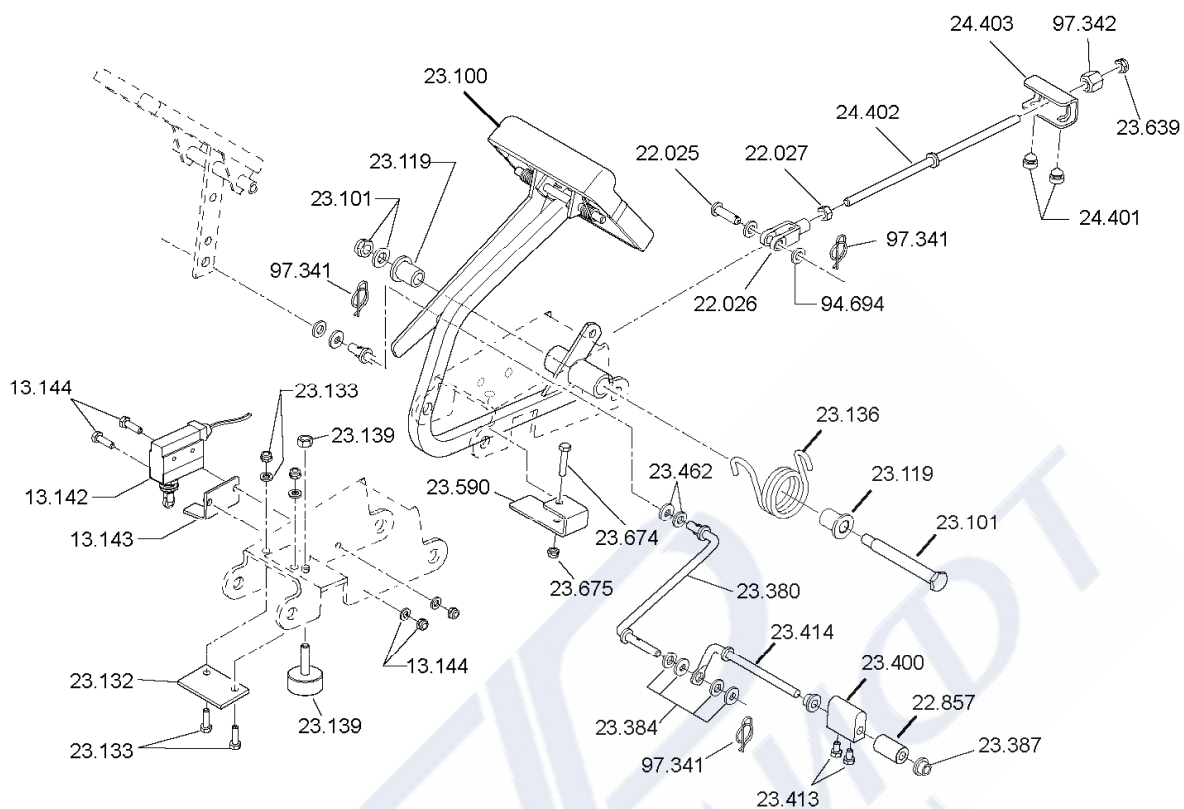 


BRAKE PEDAL & LINKAGE

23-524

13.114	SWITCH, UPRIGHT CONTROL (LIFT) 스위치	23.380	LINK, PARKING BRAKE 링크
13.142	SWITCH, BRAKE INTERLOCK 스위치	23.384	FASTENER, PARKING BRAKE LINK 패스너
13.143	BRACKET, BRAKE INTERLOCK SWITCH 브라켓	23.387	RETAINER, PARKING BRAKE BELLCRANK 리테이너
13.144	FASTENER, BRAKE INTERLOCK SWITCH BRACKET 패스너	23.400	CAM, PARKING BRAKE 캠
22.025	PIN, BRAKE PEDAL LINKAGE 핀	23.413	FASTENER, PARKING BRAKE CAM 패스너
22.026	ROD END, BRAKE PEDAL LINKAGE 로드엔드	23.414	LINK, PARKING BRAKE CAM ACTUATING 링크
22.027	LOCK, BRAKE PEDAL LINKAGE ROD END 로크	23.462	FASTENER, PARKING BRAKE LINK 패스너
22.857	SPACER, PARKING BRAKE PEDAL CAM MOUNTING 스페이서	23.590	BRACKET, BRAKE ACTUATOR MOUNTING (RH) 브라켓
23.100	PEDAL, BRAKE 페달	23.639	FASTENER, PARKING BRAKE CABLE ANCHOR 패스너
23.101	SHAFT, BRAKE PEDAL 샤프트	23.674	FASTENER, BRAKE PEDAL ACTUATOR 패스너
23.119	BEARING, BRAKE PEDAL 베어링	23.675	FASTENER, BRAKE PEDAL ACTUATOR 패스너
23.132	BRACKET, BRAKE LOCK UNIT MOUNTING 브라켓	24.401	RUBBER PLUG, BRAKE MTG BKT. 러버플러그
23.133	FASTENER, BRAKE LOCK UNIT ATTACHING 패스너	24.402	ROD, BRAKE ACTUATING 로드
23.136	SPRING, BRAKE PEDAL RETURN 스프링	24.403	ANCHOR, BRAKE CABLE 앵커
23.139	STOP, BRAKE PEDAL 스톱	94.694	WASHER, BRAKE PEDAL LINKAGE ROD END PIN 와셔

97.341	COTTER, BRAKE LINK ROD 커터
97.342	FASTENER, BRAKE ADJUSTMENT 패스너




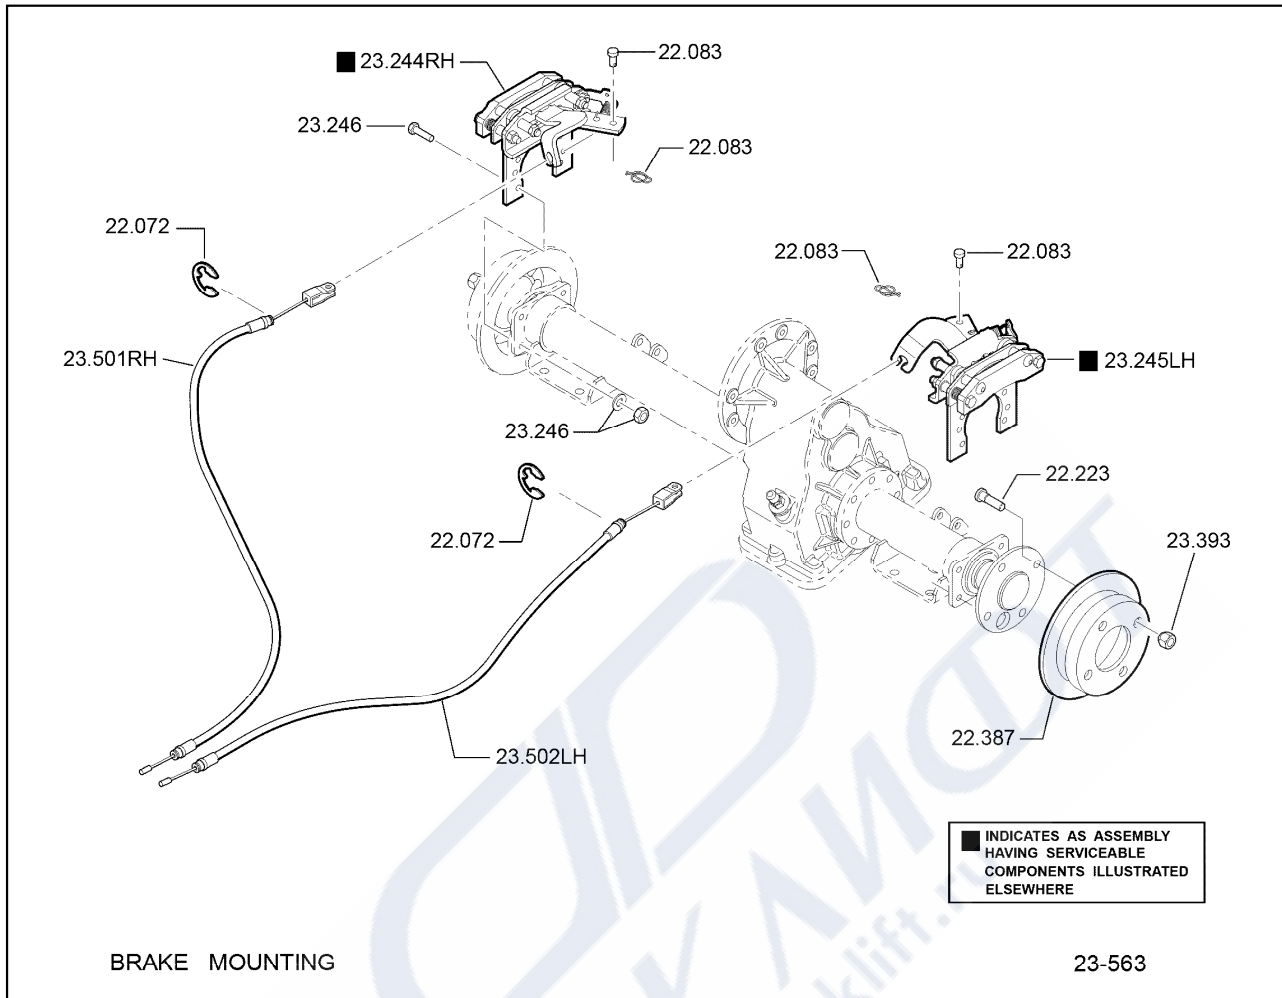 

22.072	FASTENER, BRAKE LINE CLIP 패스너
22.083	FASTENER, BRAKE CABLE BRACKET (BRAKE END) 패스너
22.223	FASTENER, DRIVE WHEEL 패스너
22.387	HUB, BRAKE DISC 허브
23.244	BRAKE ASSEMBLY, RH DRIVE WHEEL 브레이크
23.245	BRAKE ASSEMBLY, LH DRIVE WHEEL 브레이크
23.246	FASTENER, BRAKE ASSEMBLY 패스너
23.393	FASTENER, DRIVE WHEEL 패스너
23.501	TOGGLE ASSEMBLY, PARKING BRAKE 토글

 
23.502 SPACER, PARKING BRAKE LINKAGE TOGGLE
스페이서



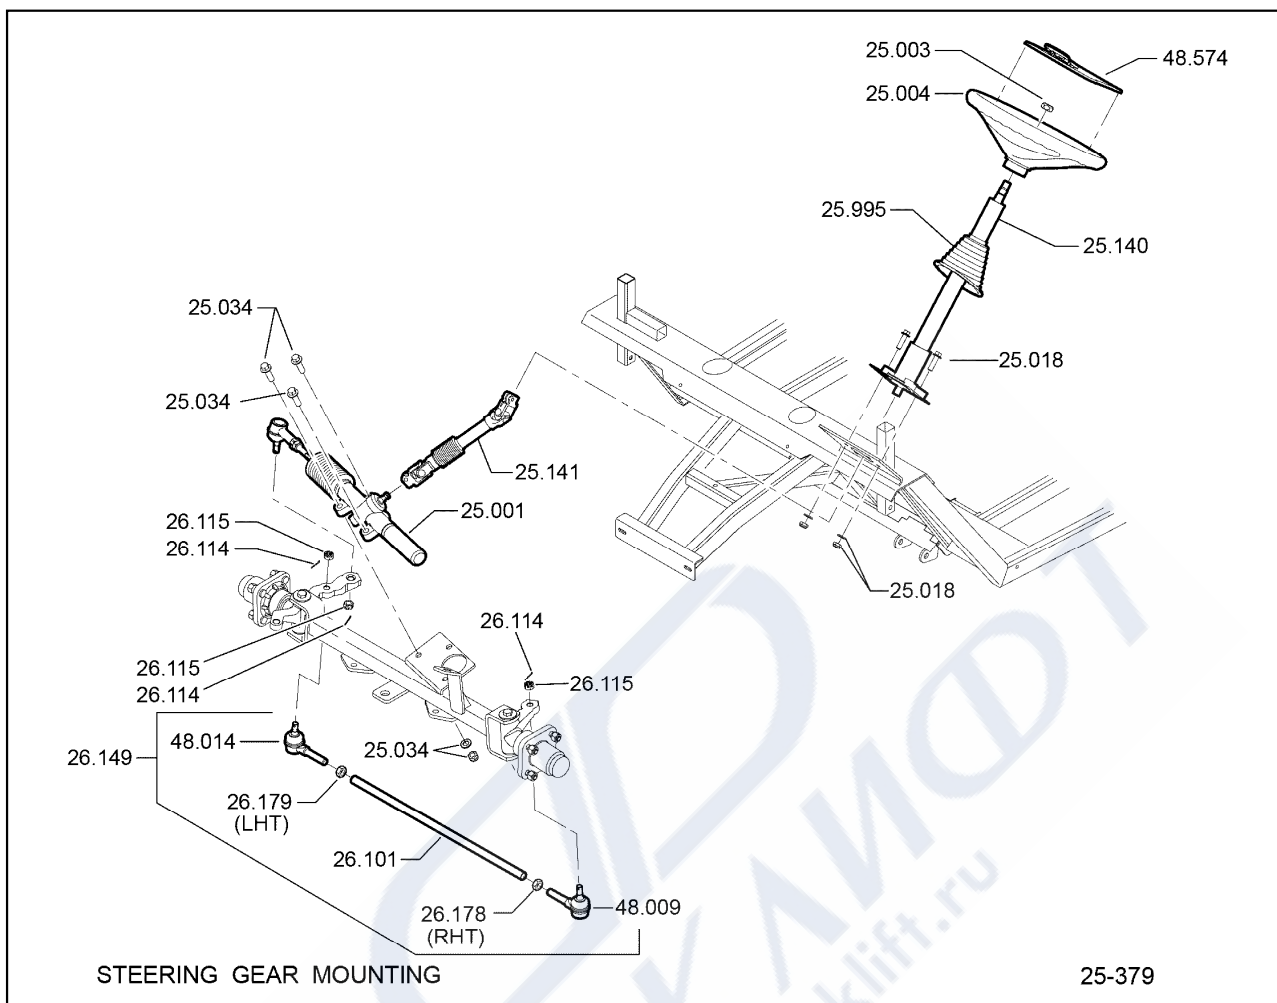


25.001	GEAR ASSEMBLY, STEERING (GREASED) 기어어셈블리
25.003	NUT, HANDWHEEL 너트
25.004	HAND WHEEL, STEERING GEAR 핸드휠
25.018	FASTENER, COLUMN JACKET 패스너
25.034	FASTENER, STEERING GEAR ATTACHING 패스너
25.140	SHAFT & COLUMN ASSEMBLY, POWER STEERING 샤프트& 컬럼
25.141	SHAFT, STEERING GEAR 샤프트
25.995	BOOT, STEERING SHAFT 부트
26.101	ROD, TIE 로드

26.114	COTTER, STEER AXLE TIE ROD END 커터
26.115	NUT, STEER AXLE TIE ROD END 너트
26.149	TIE ROD ASSEMBLY, STEER AXLE RH 타이로드
26.178	NUT, TIE ROD END LOCK 너트
26.179	NUT, TIE ROD END LOCK 너트
48.009	ROD END ASSEMBLY, LH THREAD FRONT TIE 로드엔드
48.014	ROD END ASSEMBLY, RH THREAD FRONT TIE 로드엔드
48.574	COVER, HANDWHEEL *

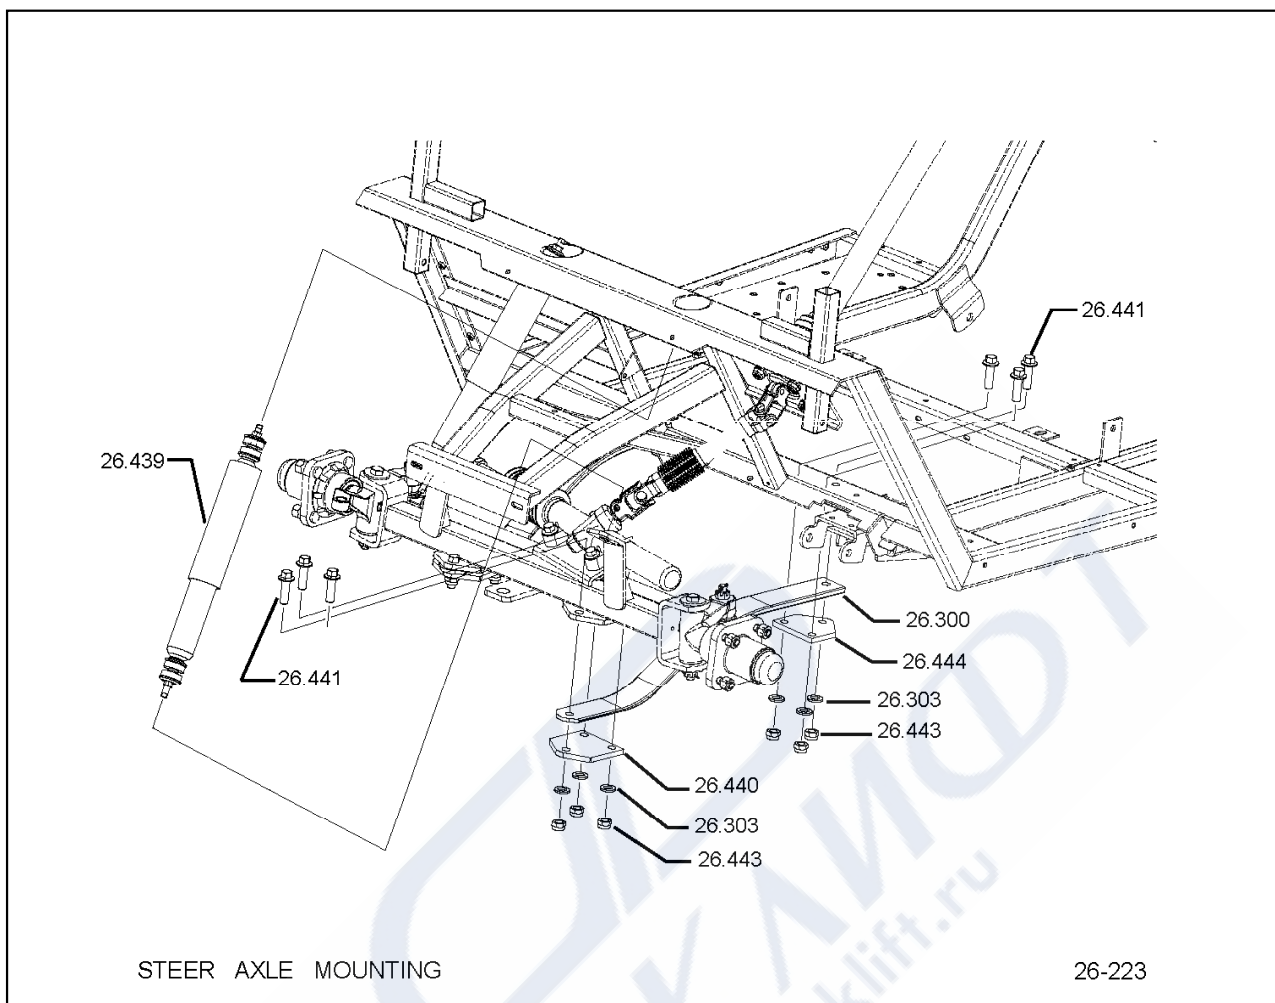 


26.300	SPRING ASSEMBLY, STEER AXLE SUSPENSION 스프링
26.303	FASTENER, STEER AXLE SUSPENSION SPRING (AXLE) 패스너
26.439	SHOCK ABSORBER, FRONT 쇼크업쇼버
26.440	*
26.441	FASTENER, STEER AXLE SUSPENSION SPRING PLATE 패스너
26.443	NUT, STEER AXLE SUSPENSION SPRING PLATE 너트
26.444	PLATE, STEER AXLE SUSPENSION SPRING 플레이트

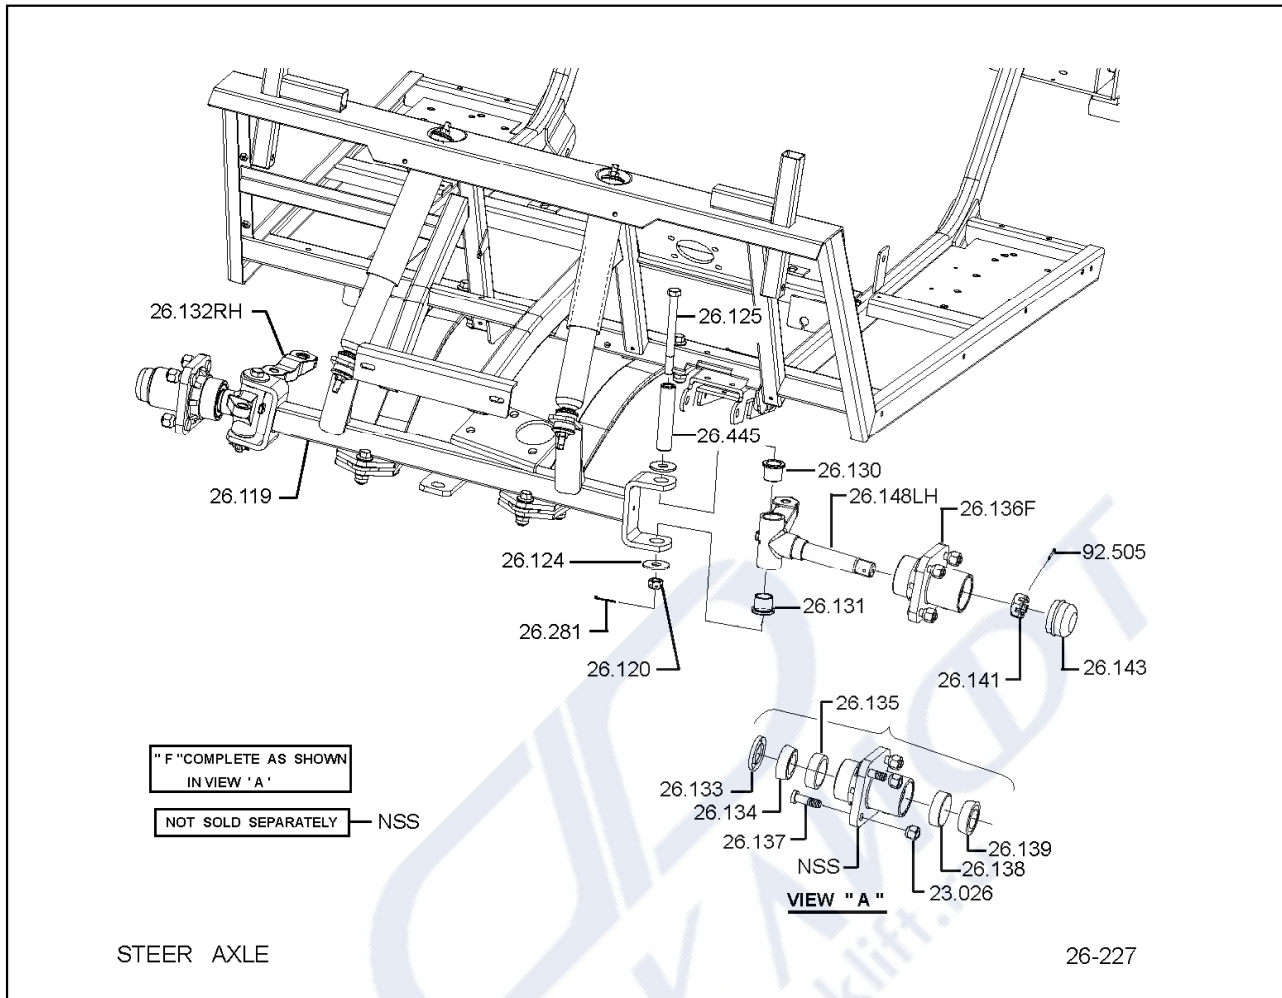 

23.026	FASTENER, STEER WHEEL 패스너
26.119	AXLE, STEER 액슬
26.120	FASTENER, STEER AXLE SPIDER PIN 패스너
26.124	SHIM, STEER AXLE KNUCKLE 심
26.125	PIN, STEER AXLE KNUCKLE 핀
26.130	BEARING, STEER AXLE KNUCKLE PIN 베어링
26.131	BEARING, STEER AXLE KNUCKLE PIN LOWER 베어링
26.132	KNUCKLE, STEER AXLE (RH) 너트
26.133	SEAL, STEER WHEEL HUB 셀


26.134	CONE, STEER WHEEL HUB BEARING (INNER) 콘
26.135	CUP, STEER WHEEL HUB BEARING (INNER) 컵
26.136	HUB & CUP, STEER WHEEL 허브& 컵
26.137	FASTENER, STEER WHEEL 패스너
26.138	CUP, STEER WHEEL HUB BEARING (OUTER) 컵
26.139	CONE, STEER WHEEL HUB BEARING (OUTER) 콘
26.141	FASTENER, STEER WHEEL HUB 패스너
26.143	CAP, STEER WHEEL HUB 캡
26.148	KNUCKLE, STEER AXLE (LH) 너트
26.281	RETAINER, STEER AXLE HUB BRG KNUCKLE NUT 리테이너
26.445	SLEEVE, STEER AXLE KNUCKLE 슬리브
92.505	COTTER, STEER WHEEL HUB FASTENER 커터



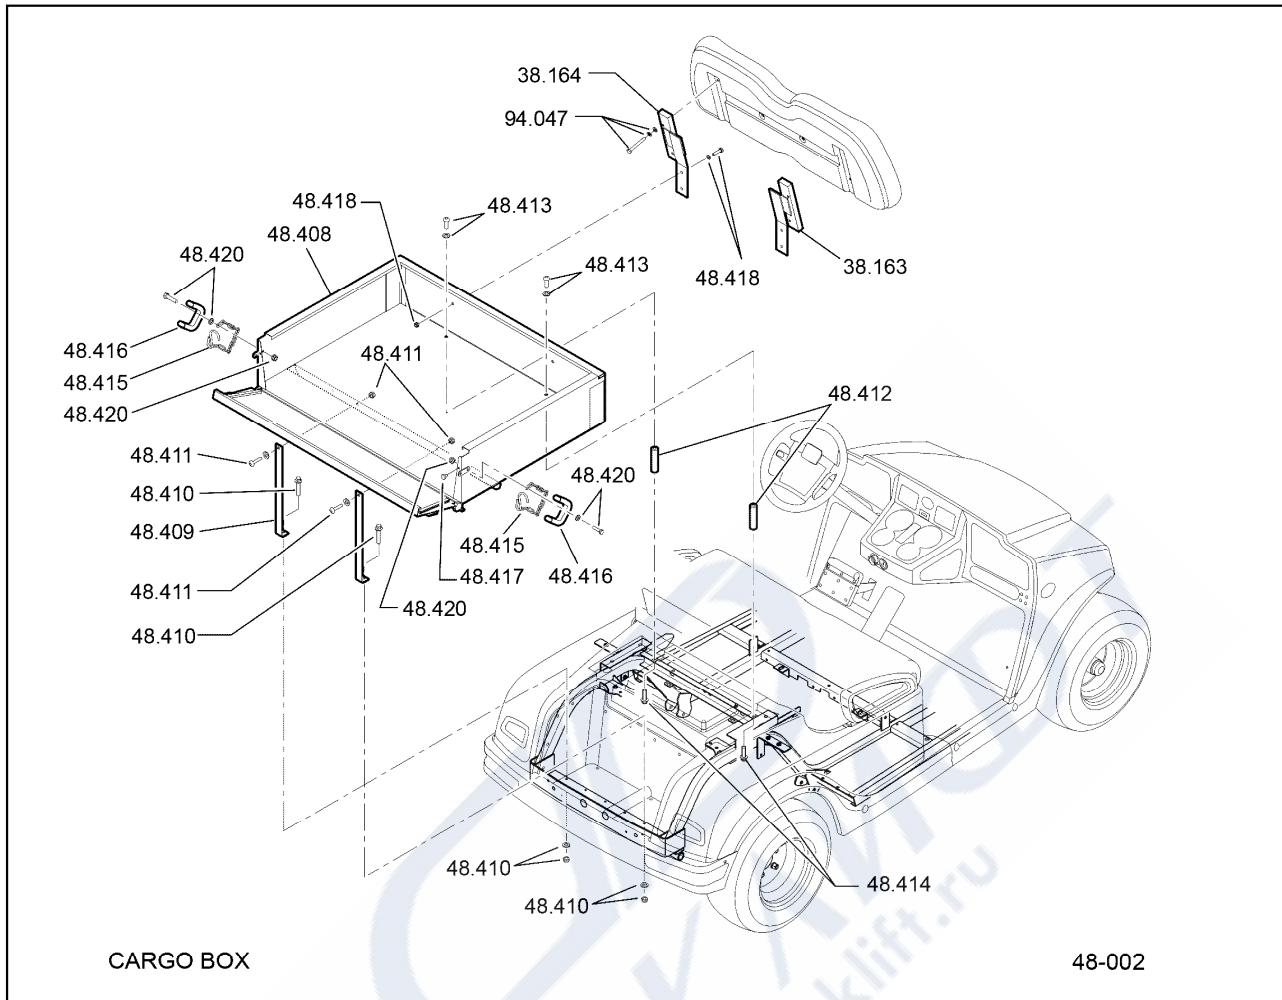 


38.163	BRACKET, SEAT SUPPORT RH 브라켓
38.164	BRACKET, SEAT SUPPORT LH 브라켓
48.408	CARGO BOX, BURDEN CARRIER 카고박스
48.409	BRACKET, CARGO BOX SUPPORT 브라켓
48.410	FASTENER, BURDEN CARRIER CARGO BOX 패스너
48.411	FASTENER, BURDEN CARRIER CARGO BASKET 패스너
48.412	SUPPORT, BURDEN CARRIER CARGO BOX 서포트
48.413	FASTENER, BURDEN CARRIER CARGO BOX 패스너
48.414	CHAIN, CARGO BOX TAILGATE 체인

48.415	CHAIN, CARGO BOX TAILGATE 체인
48.416	SLEEVE, CARGO BOX TAILGATE CHAIN 슬리브
48.417	BUMPER, CARGO BOX TAILGATE 범퍼
48.418	FASTENER, CARGO BOX TAILGATE 패스너
48.420	FASTENER, CARGO BOX TAILGATE CHAIN 패스너
94.047	FASTENER, SEAT BACK REST CUSHION 패스너

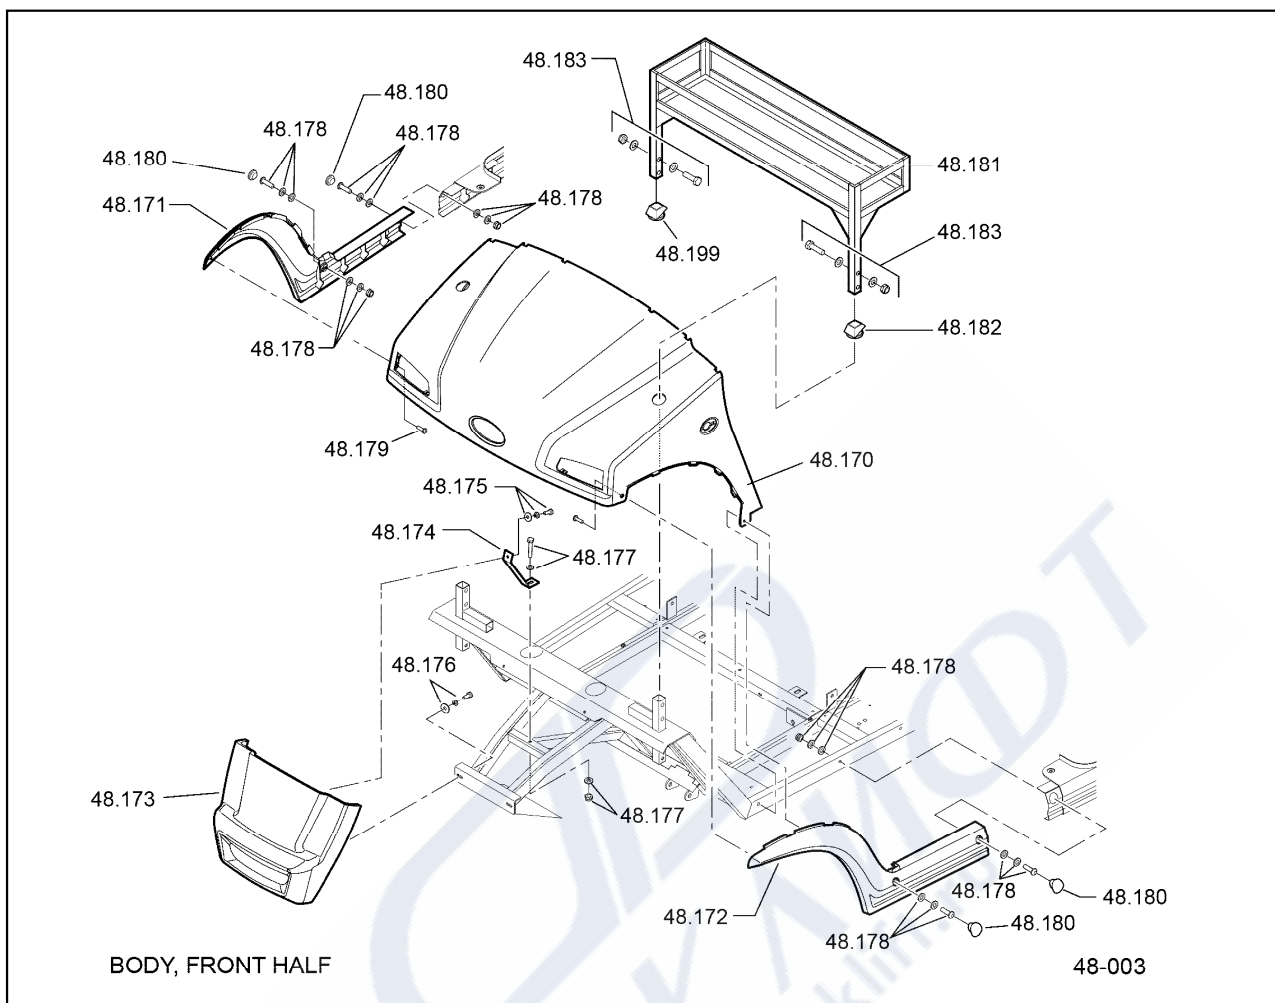 

- 48.170 FRONT BODY, BURDEN CARRIER
프런트바디
- 48.171 TRIM, BURDEN CARRIER PASSENGER SIDE
트림
- 48.172 TRIM, BURDEN CARRIER DRIVERS SIDE
트림
- 48.173 FRONT BUMPER, BURDEN CARRIER
프런트범퍼
- 48.174 BRACKET, BURDEN CARRIER FRONT BUMPER MOUNTING
브라켓
- 48.175 FASTENER, BURDEN CARRIER FRONT BUMPER BRACKET
패스너
- 48.176 FASTENER, BURDEN CARRIER FRONT BUMPER
패스너
- 48.177 FASTENER, BURDEN CARRIER FRONT BUMPER BRACKET
패스너
- 48.178 FASTENER, BURDEN CARRIER TRIM
패스너

48.179	FASTENER, BURDEN CARRIER TRIM 패스너
48.180	PLUG, BURDEN CARRIER TRIM 플러그
48.181	BASKET, BURDEN CARRIER 바스켓
48.182	GROMMET, BURDEN CARRIER BASKET 그로멧
48.183	FASTENER, BURDEN CARRIER BASKET 패스너
48.199	GROMMET, BURDEN CARRIER BASKET 그로멧

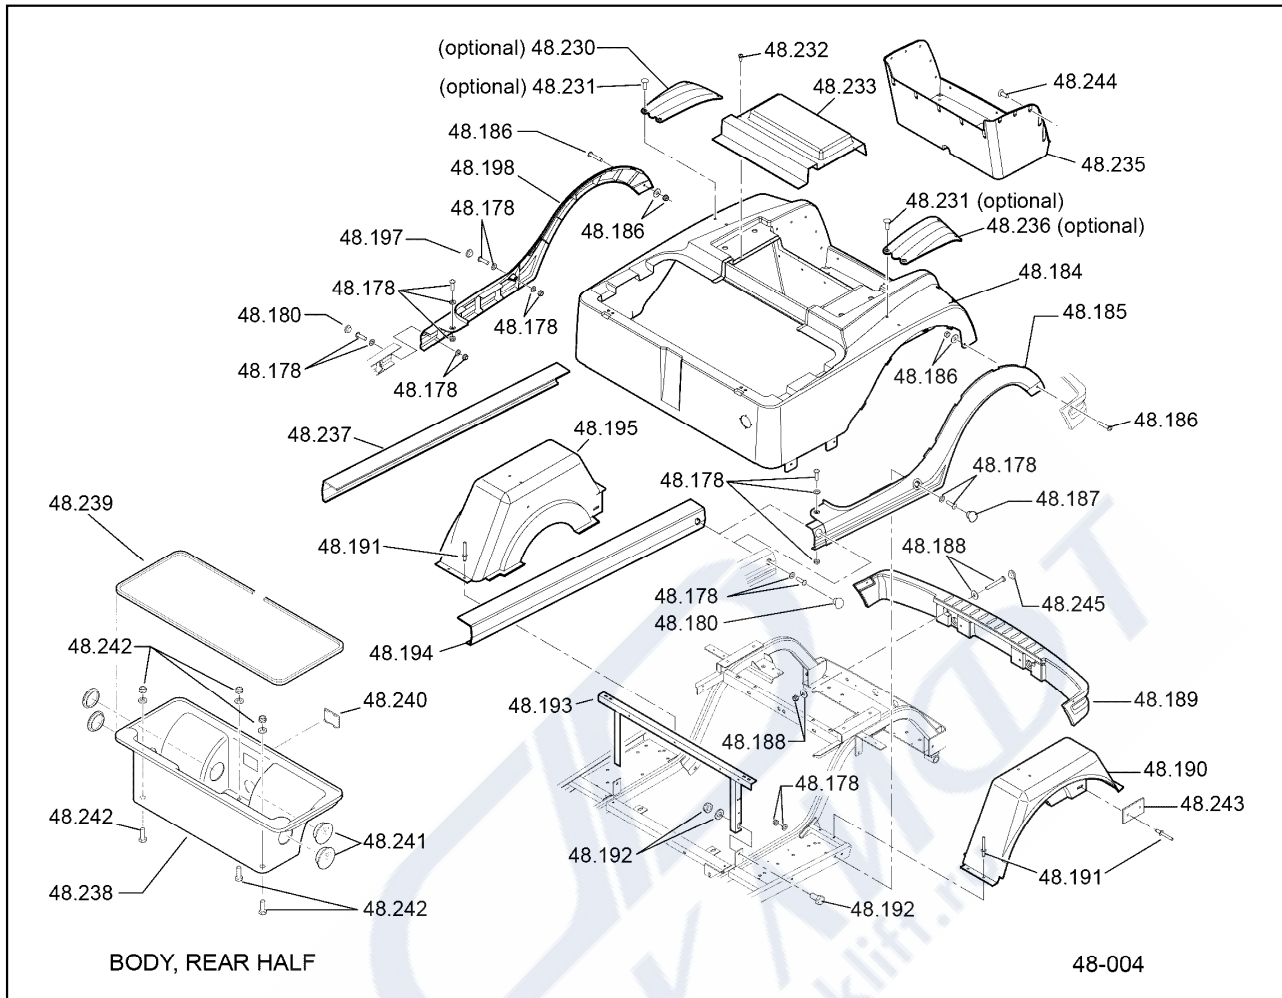 

48.178 FASTENER, BURDEN CARRIER TRIM
패스너

48.180 PLUG, BURDEN CARRIER TRIM
플러그

48.184 REAR BODY, BURDEN CARRIER
리어바디

48.185 REAR TRIM, BURDEN CARRIER DRIVERS SIDE
리어트림

48.186 FASTENER, BURDEN CARRIER TRIM
패스너

48.187 PLUG, SIDE TRIM FASTENER DRIVERS SIDE
플러그

48.188 FASTENER, BURDEN CARRIER TRIM
패스너

48.189 REAR BUMPER, BURDEN CARRIER
리어범퍼

48.190 INNER FENDER, BURDEN CARRIER DRIVERS SIDE
인너펜더

48.191 RIVET, BURDEN CARRIER INNER FENDER
리벳

48.192 FASTENER, BURDEN CARRIER REAR BODY SUPPORT
패스너

48.193 SUPPORT, BURDEN CARRIER REAR BODY
서포트

48.194 TRIM, BURDEN CARRIER
트림

48.195 INNER FENDER, BURDEN CARRIER PASSENGER SIDE
인너펜더

48.197 PLUG, SIDE TRIM FASTNER, PASSENGER SIDE
플러그

48.198 REAR TRIM, BURDEN CARRIER PASSENGER SIDE
리어트림

48.230 STEP, BURDEN CARRIER PASSENGER SIDE
스텝

48.231 FASTENER, BURDEN CARRIER STEP
패스너

48.232 FASTENER, BURDEN CARRIER CONTROLLER COVER
패스너

48.233 COVER, BURDEN CARRIER CONTROLLER ACCESS
커버

48.235 LINER, BURDEN CARRIER BAG WELL
라이너

48.236 STEP, BURDEN CARRIER DRIVERS SIDE
스텝

48.237 TRIM, BURDEN CARRIER PASSENGER SIDE
트림

48.238 PEDESTAL, BURDEN CARRIER
받침대

48.239 EDGE TRIM, BURDEN CARRIER PEDASTAL
모서리트림

48.240 COVER, BURDEN CARRIER PEDASTAL
커버

48.241 VENT, BURDEN CARRIER PEDASTAL
벤트

 
48.242 FASTENER, BURDEN CARRIER PEDASTAL
패스너

48.243 PLATE, BURDEN CARRIER FENDER MOUNTING
플레이트

48.244 FASTENER, BURDEN CARRIER BAG WELL LINER
패스너

48.245 PLUG, REAR BUMPER
플러그


ФОРКЛИФТ
www.forklift.ru

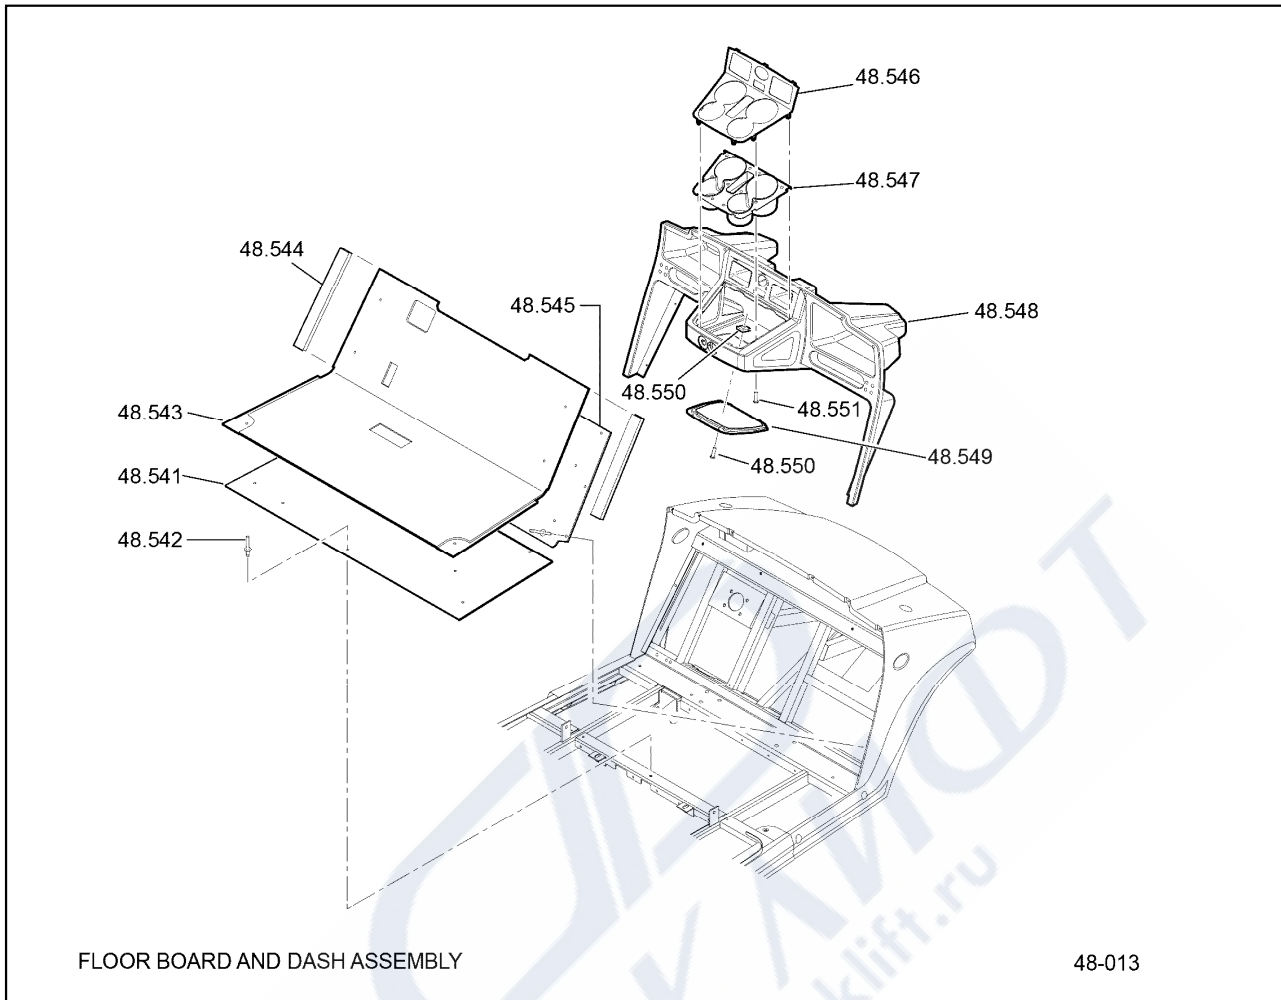


- 48.541 FLOORPLATE, BURDEN CARRIER
플로어플레이트
- 48.542 FASTENER, BURDEN CARRIER FLOORPLATE
패스너
- 48.543 FLOORMAT, BURDEN CARRIER
플로어매트
- 48.544 SIDE TRIM, BURDEN CARRIER FLOORMAT
사J絹樣?
- 48.545 PLATE, BURDEN CARRIER FRONT FLOOR
플레이트
- 48.546 COVER, BURDEN CARRIER CUP HOLDER
커버
- 48.547 CUP HOLDER, BURDEN CARRIER
컵홀더
- 48.548 DASH ASSEMBLY, BURDEN CARRIER
대시어셈블리
- 48.549 COVER, BURDEN CARRIER DASH ASSEMBLY
커버

48.550	FASTENER, BURDEN CARRIER DASH COVER 패스너
48.551	FASTENER, BURDEN CARRIER CUP HOLDER TRIM 패스너



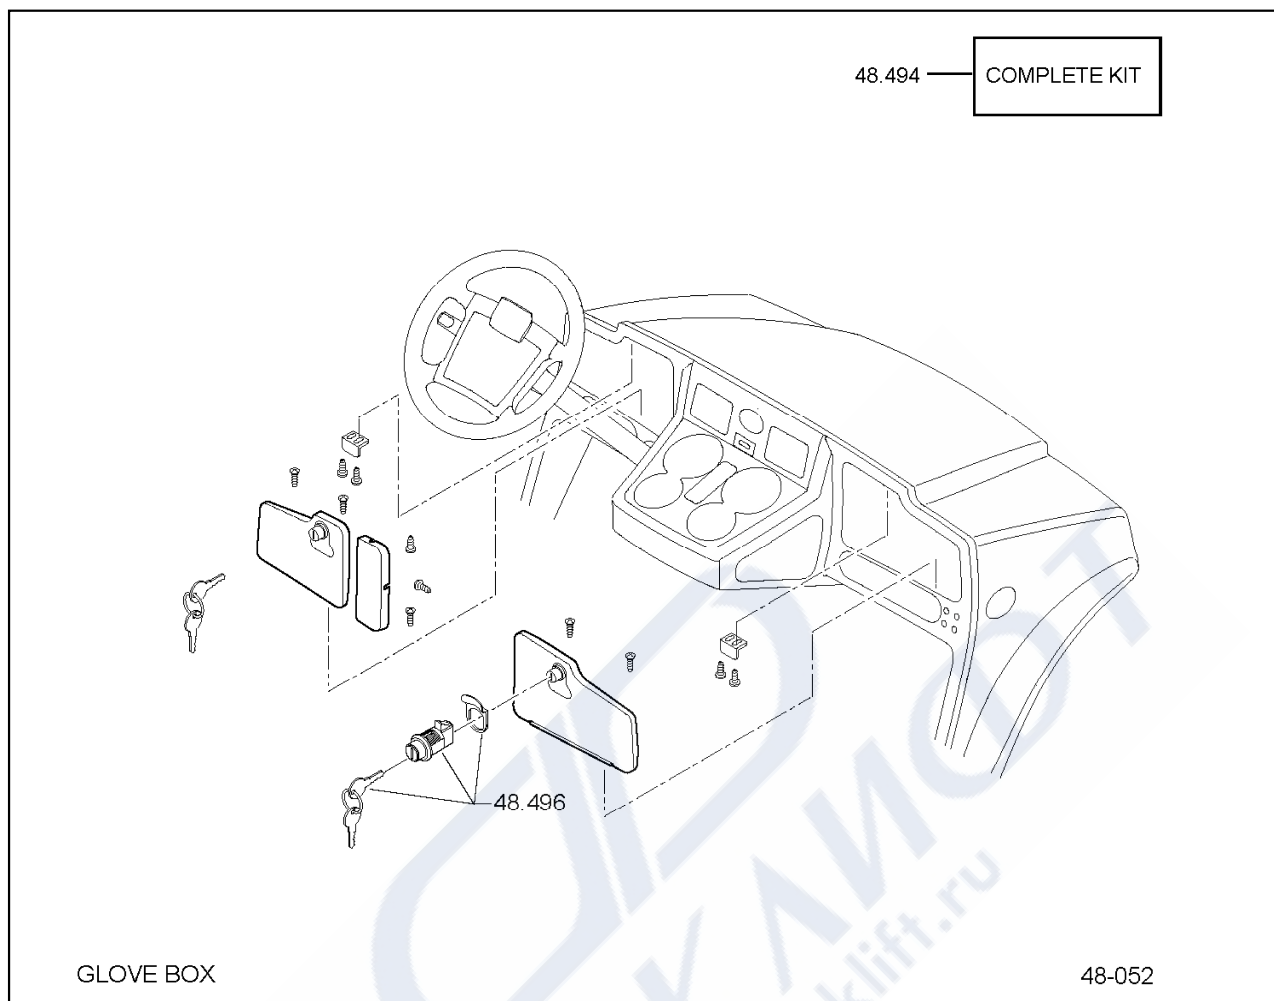 


 - 48.494 KIT, BURDEN CARRIER GLOVE BOX
키트
- 48.496 LOCK ASSEMBLY, BURDEN CARRIER GLOVE BOX
로크어셈블리

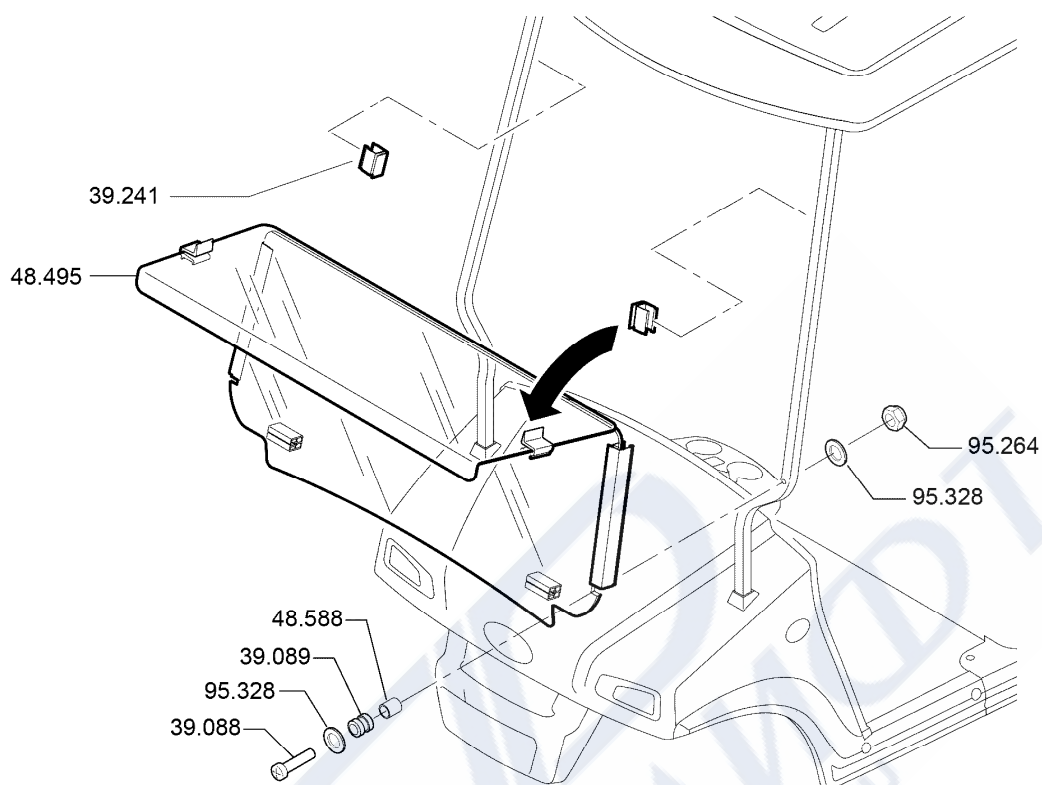


WINDSHIELD, FOLD DOWN

 
48-054

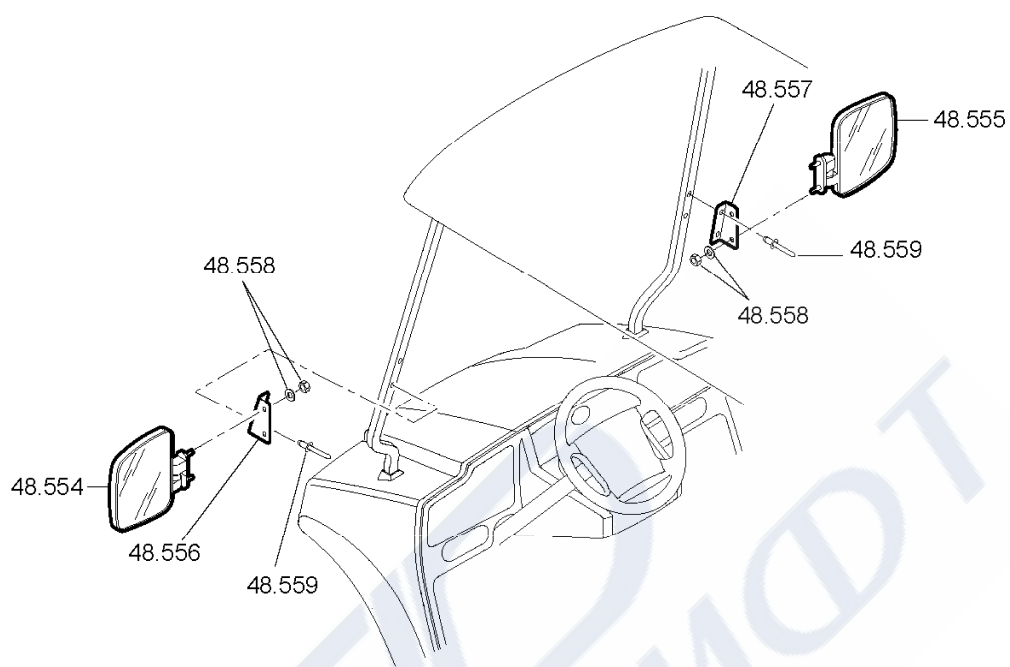

SIDE MIRRORS

  48-056

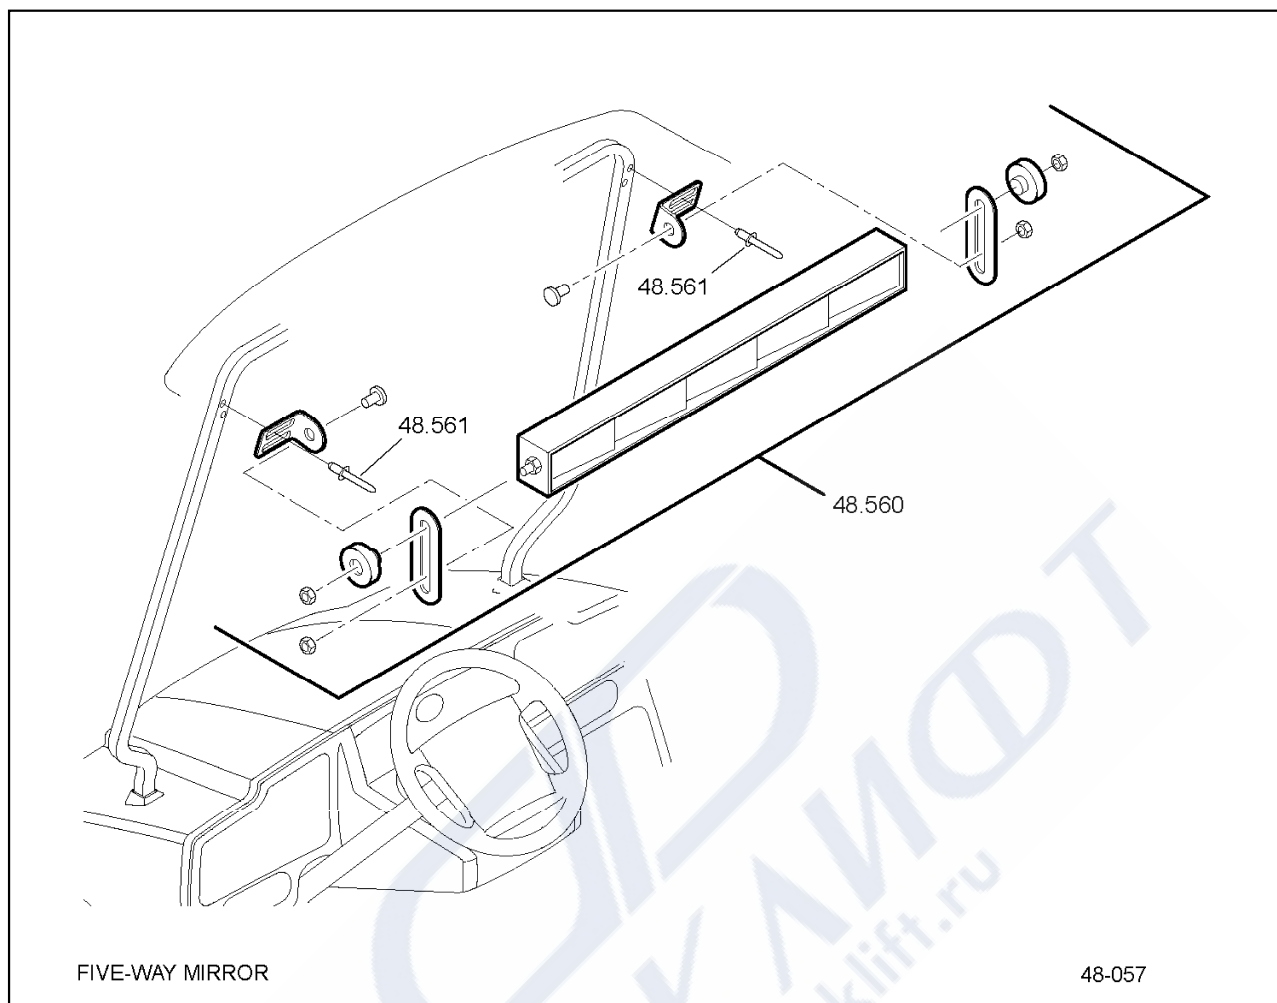


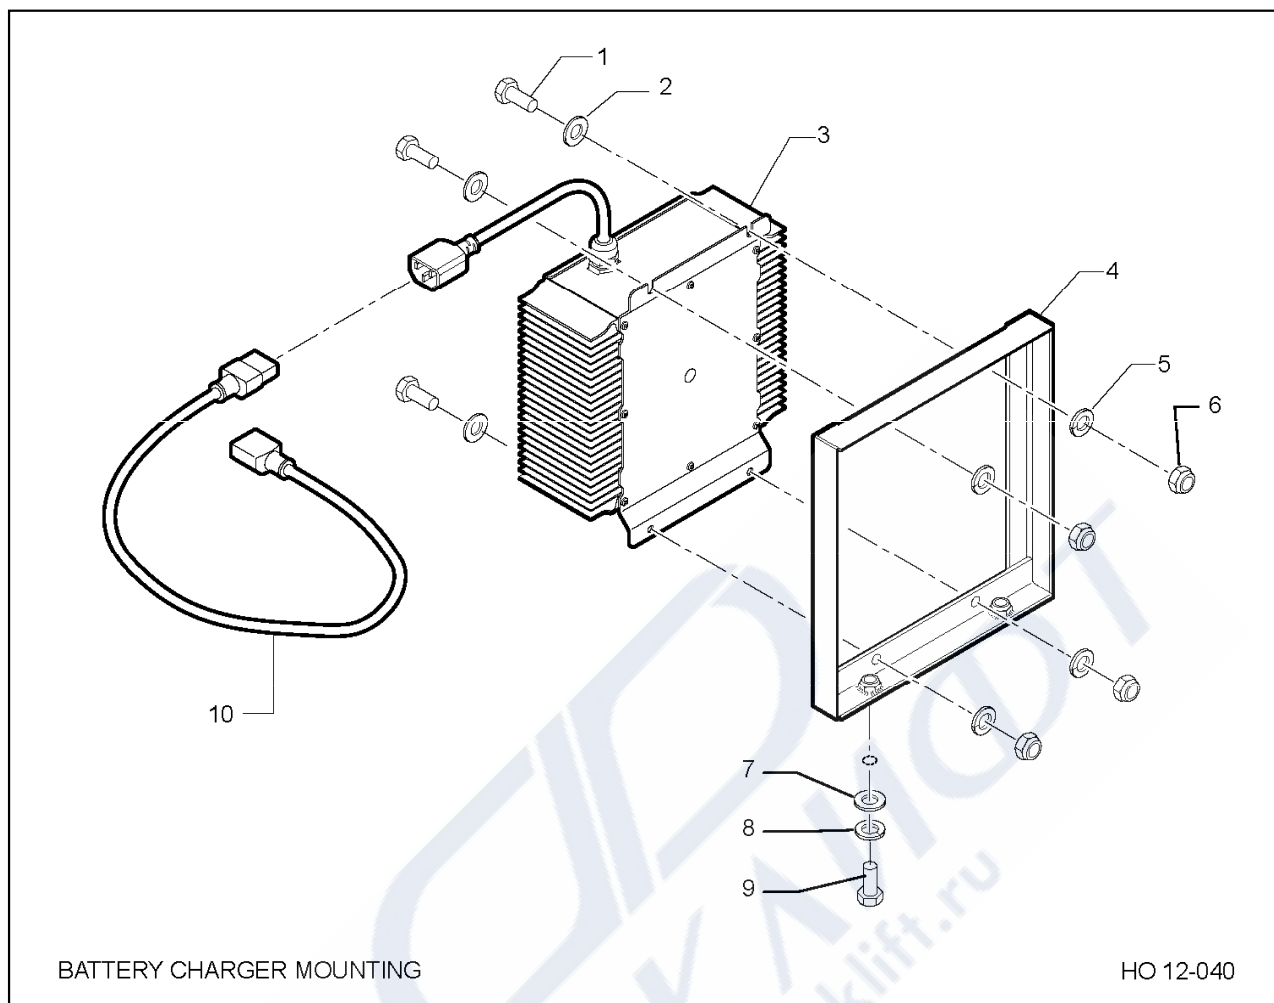

1	01CM00616	CAPSCREW 캡스크류	4
2	01EM00060	WASHER-PLAIN 와셔-플레인	4
3	2829527	BATTERY CHARGER 배터리 충전기	1
4	2829528	BRACKET 브라켓	1
5	17EM00060	WASHER-PLAIN 와셔-플레인	4
6	40DM00006	NUT-FLANGED 너트-플랜지	4
7	01EM00080	WASHER-PLAIN 와셔-플레인	2
8	06EM00080	WASHER-LOCK 와셔-로크	2
9	01CM00830	CAPSCREW 캡스크류	2

10	2829524	CORD - A.C. POWER 코드 - AC 파워	1
10	2829898	CORD - A.C. POWER 코드 - AC 파워	1
10	2829899	CORD - A.C. POWER 코드 - AC 파워	1



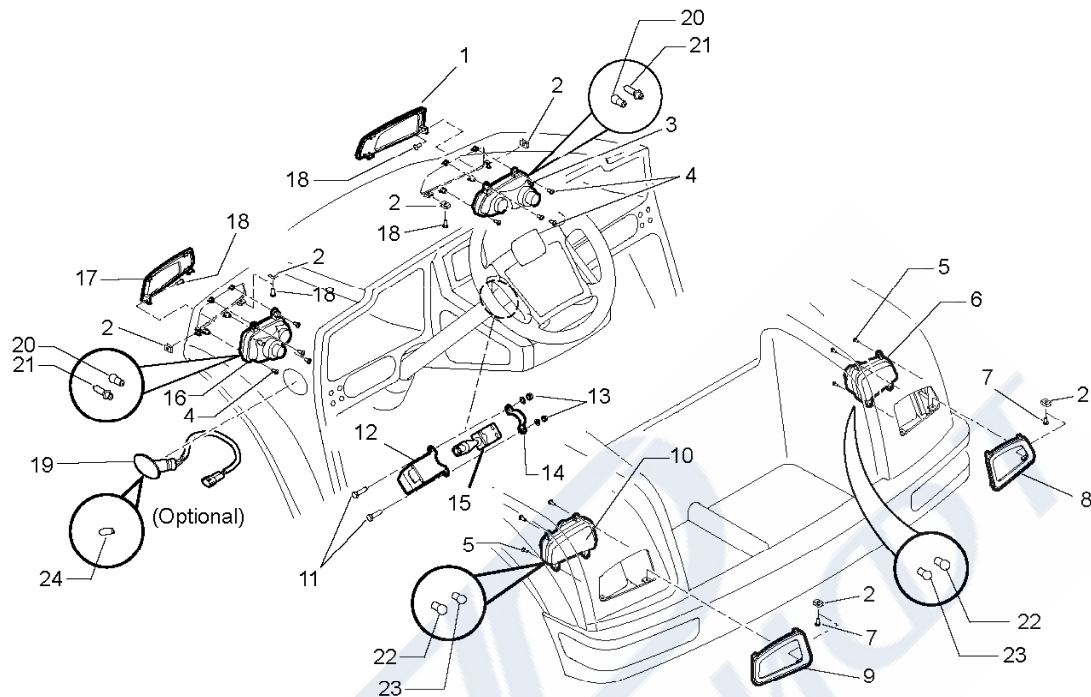 


LIGHTS

HO 13-400A

- | | |
|----|---|
| 1. | CAP, CRANKCASE BEARING
캡 |
| 2. | * |
| 3. | * |
| 4. | * |
| 5. | * |
| 6. | * |
| 7. | BALANCER, ENGINE CRANKSHAFT HARMONIC
발란서 |
| 8. | COVER, DRAIN PORT
커버 |
| 9. | GASKET, DRAIN PORT COVER
가스켓 |

HO 13-400A (1)

-
- | | |
|-----|--|
| 10. | SHORT ENGINE ASSEMBLY
숏엔진 |
| 11. | CRANKCASE
크랭크케이스 |
| 12. | SHORT BLOCK ASSEMBLY (R)
숏블록 |
| 13. | NUT, CRANKCASE VENTILATION LINE ADAPTOR
너트 |
| 13. | NUT, CRANKCASE VENTILATION LINE ADAPTOR
너트 |
| 14. | ADAPTOR, CRANKCASE VENTILATION LINE
어댑터 |
| 15. | SUPPORT, ENGINE FRONT
서포트 |
| 16. | BUSHING, ENGINE FRONT SUPPORT DAMPENER
부싱 |
| 17. | BRACKET, ENGINE FRONT SUPPORT
브라켓 |
| 18. | BEARING, ENGINE FRONT SUPPORT BRACKET
베어링 |
| 19. | FASTENER, ENGINE FRONT SUPPORT BRACKET
패스너 |
| 20. | COVER, CRANKCASE ACCESS HOLE
커버 |
| 21. | BUSHING, ENGINE REAR DAMPENER RH
부싱 |
| 22. | BUSHING, ENGINE DAMPENER LH
부싱 |
| 23. | FASTENER, ENGINE FRONT VIBRATION DAMPENER
패스너 |
| 24. | LINE, CRANKCASE VENTILATION
라인 |
-

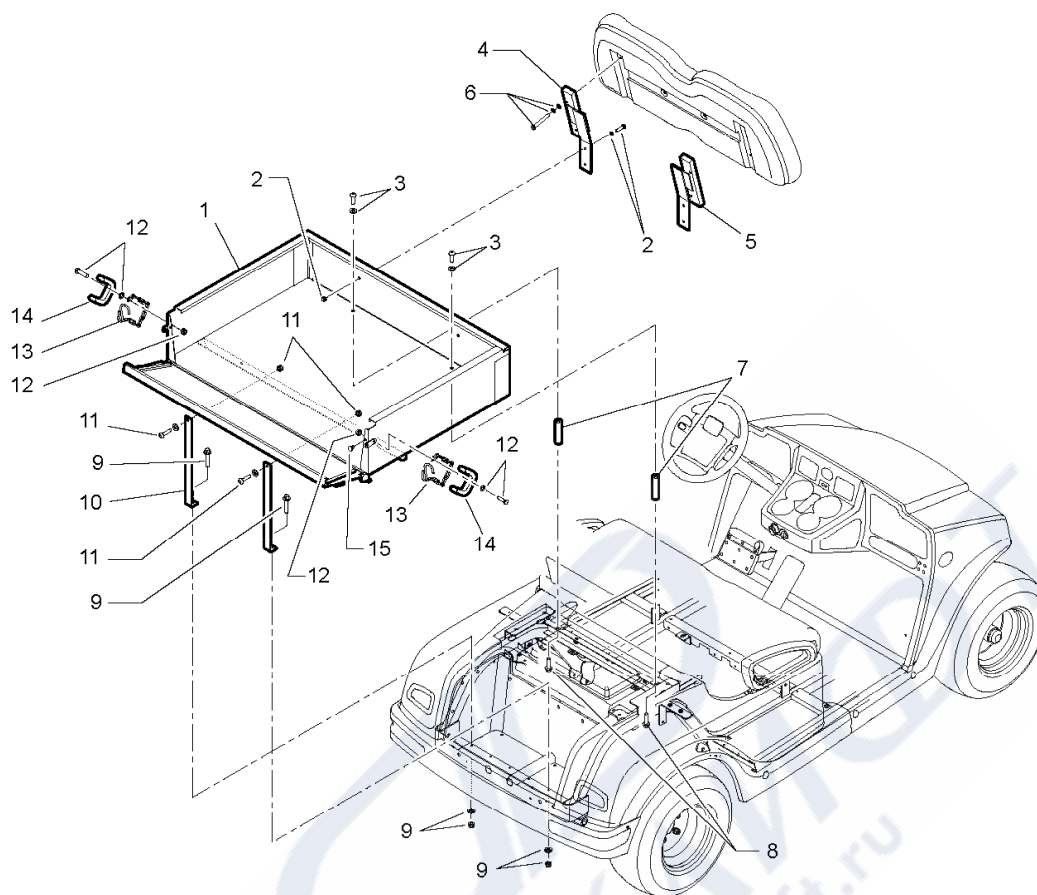 


CARGO BOX

HO 48-002A


1.	CAP, CRANKCASE BEARING 캡	9.	GASKET, DRAIN PORT COVER 가스켓
2.	*	10.	SHORT ENGINE ASSEMBLY 숏엔진
2.	*	11.	CRANKCASE 크랭크케이스
2.	*	11.	CRANKCASE 크랭크케이스
3.	*	11.	CRANKCASE 크랭크케이스
3.	*	12.	SHORT BLOCK ASSEMBLY (R) 숏블록
4.	*	12.	SHORT BLOCK ASSEMBLY (R) 숏블록
5.	*	12.	SHORT BLOCK ASSEMBLY (R) 숏블록
6.	*	13.	NUT, CRANKCASE VENTILATION LINE ADAPTOR 너트
6.	*	14.	ADAPTOR, CRANKCASE VENTILATION LINE 어댑터
6.	*	15.	SUPPORT, ENGINE FRONT 서포트
7.	BALANCER, ENGINE CRANKSHAFT HARMONIC 발란서	.	PRODUCTION ENGINE ASSEMBLY 엔진
8.	COVER, DRAIN PORT 커버	.	PRODUCTION ENGINE ASSEMBLY 엔진
9.	GASKET, DRAIN PORT COVER 가스켓	.	PRODUCTION ENGINE ASSEMBLY 엔진
9.	GASKET, DRAIN PORT COVER 가스켓	.	PRODUCTION ENGINE ASSEMBLY 엔진

 HO 48-002B (1)

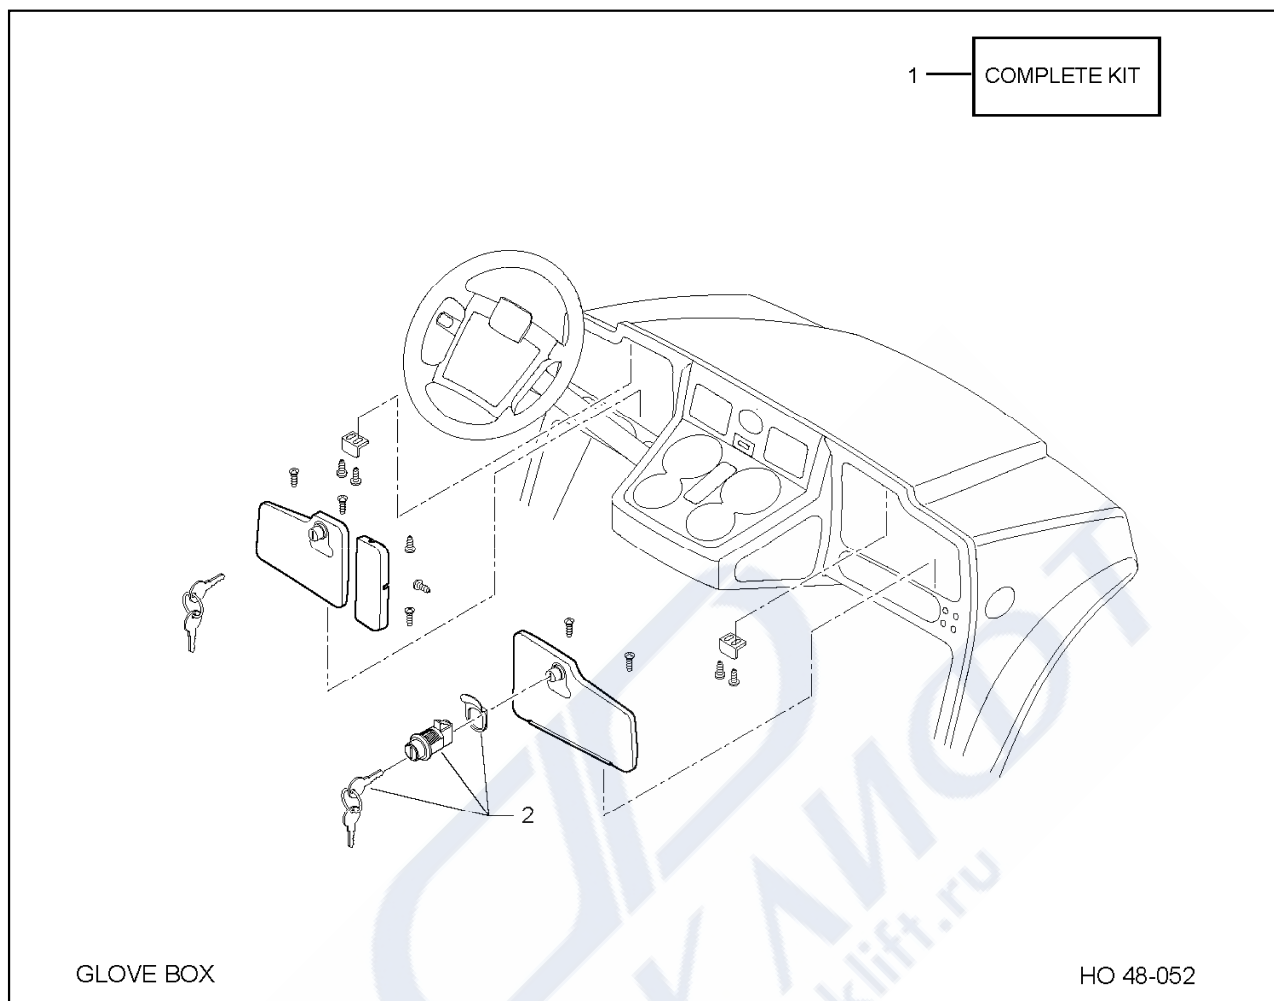

1. CAP, CRANKCASE BEARING
캡

 
2. *

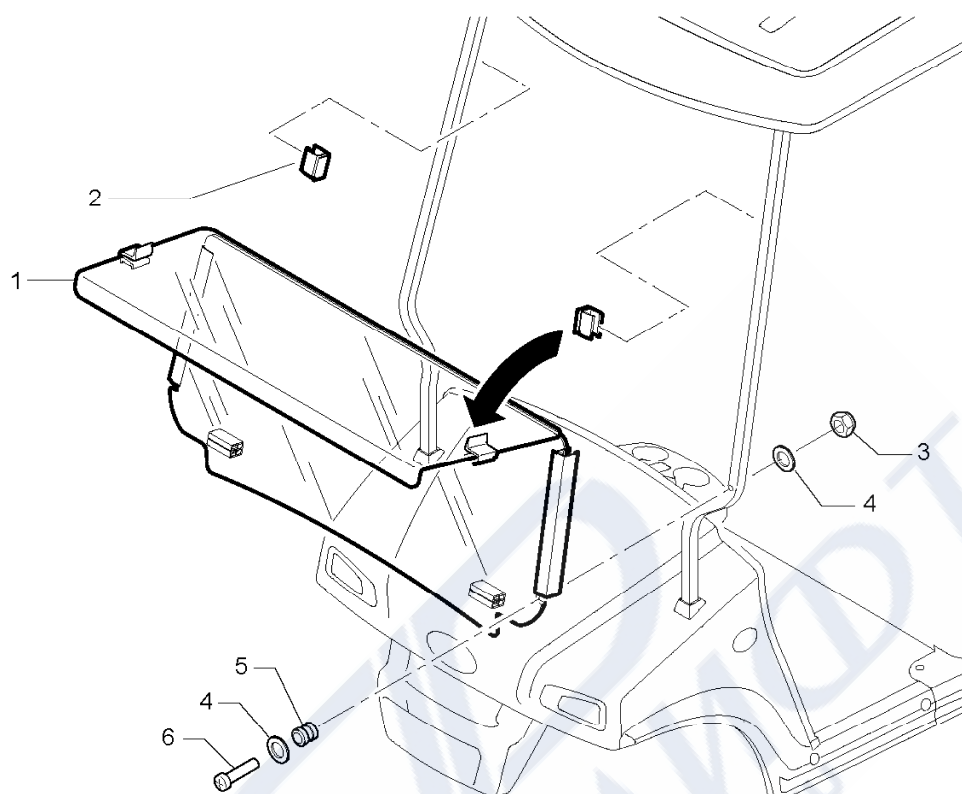

WINDSHIELD, FOLD DOWN

HO 48-054

 
HO 48-054A (1)

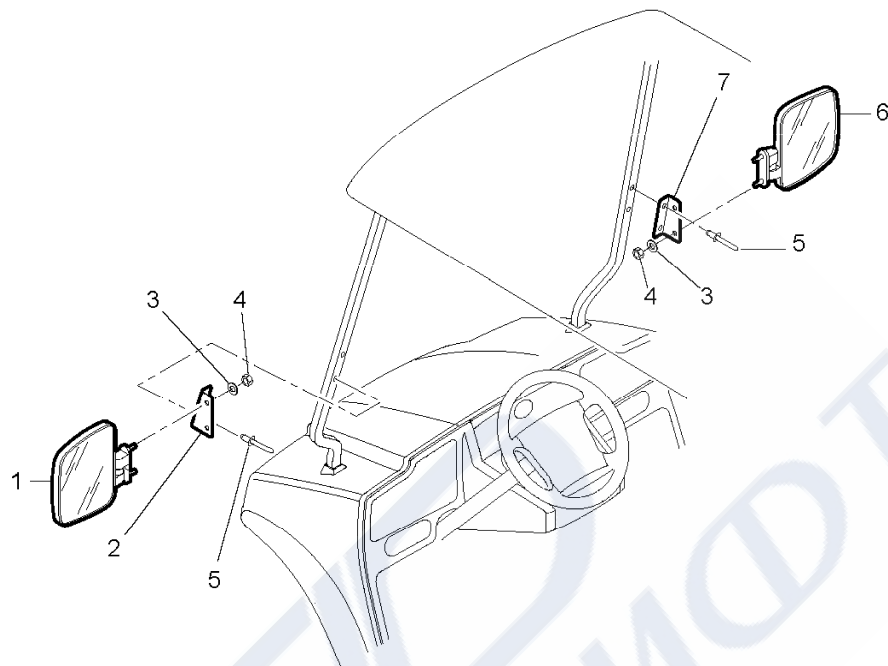

SIDE MIRRORS

HO 48-056A

1	2829795	MIRROR ASSEMBLY 미러 어셈블리	1
2	936584	BRACKET (LH) 브라켓 (좌측)	1
3	01EM00060	WASHER-PLAIN 와셔-플레인	4
4	40DM00006	NUT-FLANGED 너트-플랜지	4
5	2829763	POP RIVIT 리벳 콤팩트	4
6	2829796	MIRROR ASSEMBLY 미러 어셈블리	1
7	936585	BRACKET (RH) 브라켓 (우측)	1

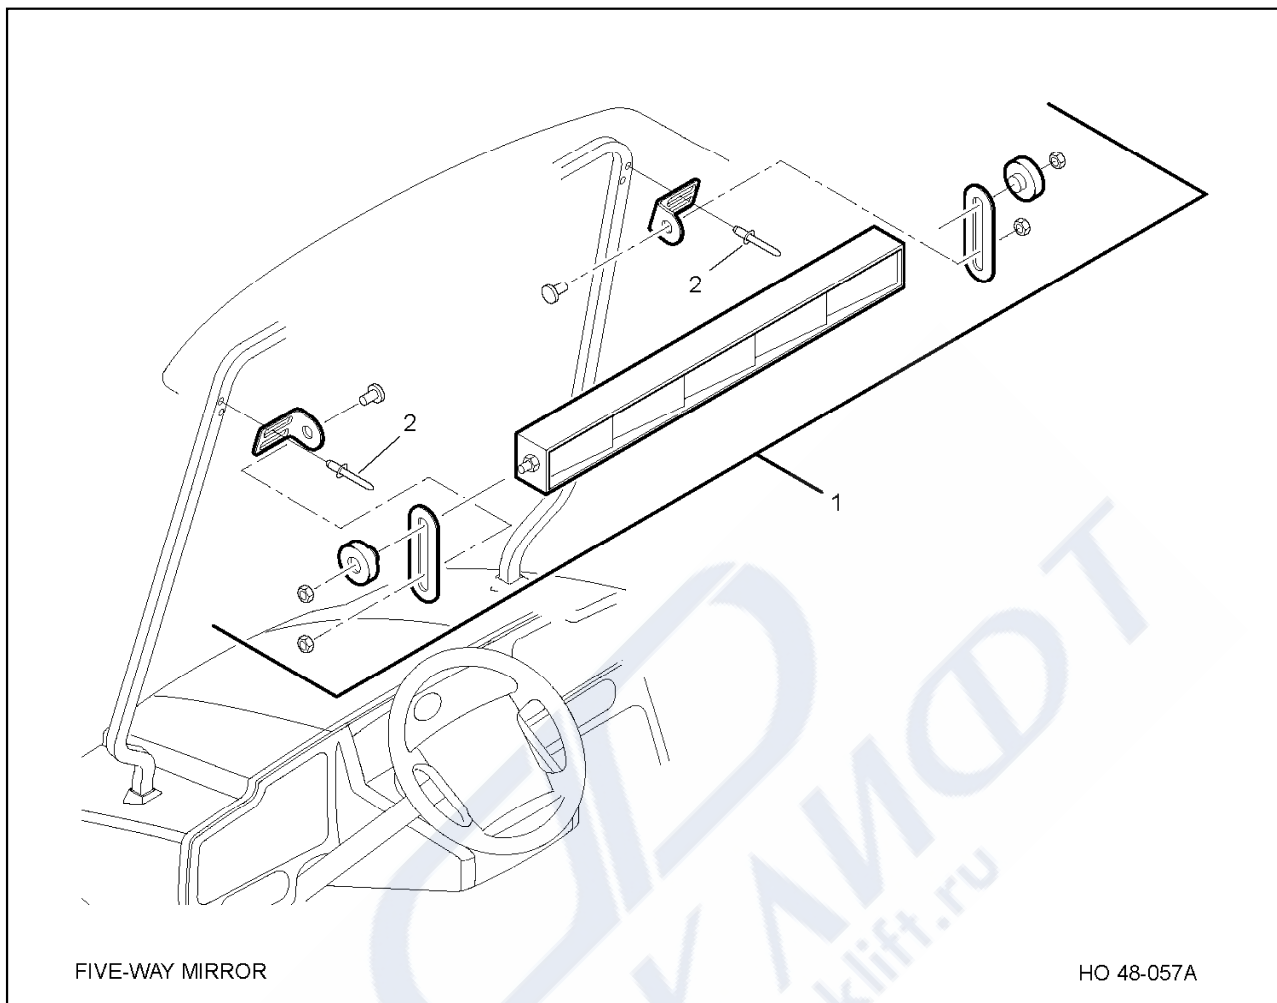 


1	2829798	REAR VIEW MIRROR 후방 미러	1
2	2829763	POP RIVIT 리벳 팝	4

FBX (플랫베드)

Lot No ; 9930




02-436	ACCELERATOR CONTROL MOUNTING 악셀레이터 컨트롤 마운팅
12-040	BATTERY CHARGER 배터리 충전기
12-140	ELECTRICAL ASSEMBLIES MOUNTING 전기장치 어셈블리 마운팅
12-199	BATTERY INSTALLATION 배터리 조립그룹
13-366	ELECTRICAL COMPONENTS MOUNTING 전기장치 구성품 마운팅
13-400	LIGHTS 라이트
16-182	DRIVE MOTOR ASSEMBLY 드라이브 모터 어셈블리
16-183	DRIVE MOTOR MOUNTING 드라이브 모터 어셈블리
20-282	DIFFERENTIAL & DRIVE AXLE 디퍼렌셜& 드라이브 액슬
20-286	SUSPENSION SYSTEM, REAR 서스펜션 시스템 (리어)
22-108	BRAKE ASSEMBLY 브레이크 어셈블리
22-224	TIRE & WHEEL MOUNTING 타이어& 휠 마운팅
23-524	BRAKE PDEAL & LINKAGE 브레이크 페달& 링크케이지
23-563	BRAKE MOUNTING 브레이크 마운팅
25-379	STEERING GEAR MOUNTING 스티어링 기어 마운팅
26-223	STEER AXLE MOUNTING 스티어링 액슬 마운팅
26-227	STEER AXLE 스티어링 액슬
48-003	BODY, FRONT HALF 바디 프론트 하프
48-013	FLOOR BOARD AND DASH ASSEMBLY 플로어 보드& 대시 어셈블리
48-018	FLATBED BODY AND DECK *
48-052	GLOVE BOX 글러브 박스
48-054	WINDSHIELD MOUNTING 윈드실드 마운팅
48-056	SIDE MIRRORS 사이드 미러
48-057	REAR VIEW MIRROR MOUNTING 후방미러 마운팅
HO 12-040A	BATTERY CHARGER 배터리 충전기
HO 13-400A	LIGHTS 라이트
HO 48-052A	GLOVE BOX 글러브 박스
HO 48-054A	WINDSHIELD MOUNTING 윈드실드 마운팅
HO 48-056A	SIDE MIRRORS 사이드 미러
HO 48-057A	REAR VIEW MIRROR MOUNTING 후방미러 마운팅

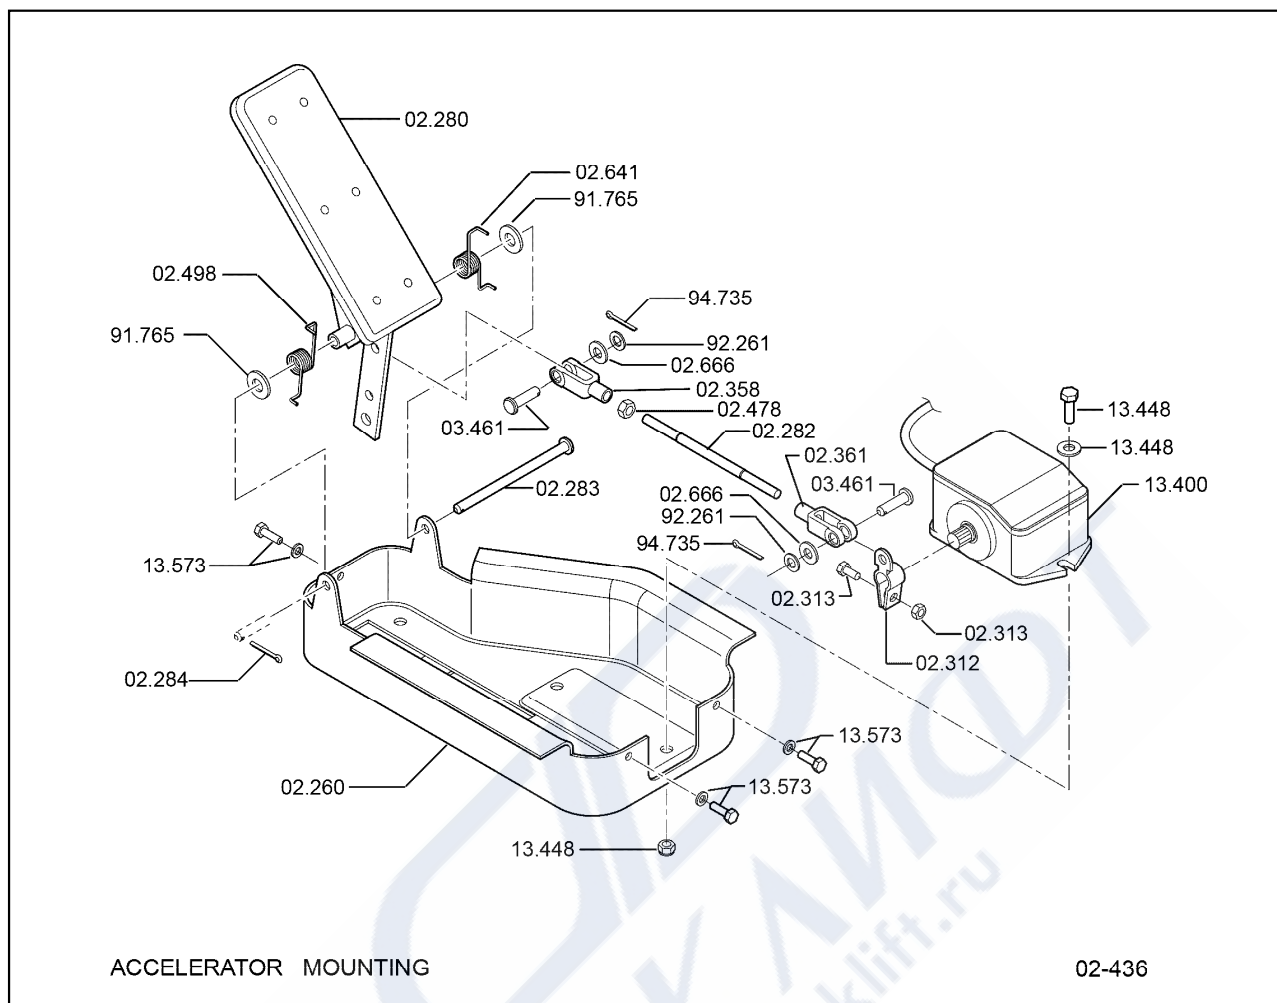 


02.260	BRACKET, ACCELERATOR LINKAGE MOUNTING 브라켓
02.280	PEDAL, ACCELERATOR 페달
02.282	ROD, ACCELERATOR PUSH 로드
02.283	PIN, ACCELERATOR PEDAL TO BRACKET PIVOT 핀
02.284	FASTENER, PEDAL TO BRACKET PIVOT PIN 패스너
02.312	LEVER, ACCELERATOR LINKAGE 레버
02.313	FASTENER, ACCELERATOR LINKAGE LEVER 패스너
02.358	CLEVIS, ACCELERATOR ROD PEDAL END 클레비스
02.361	CLEVIS, ACCELERATOR ROD LINK END 클레비스

02.478	NUT, ACCELERATOR CONTROL ROD 너트
02.498	SPRING, ACCELERATOR RETURN 스프링
02.641	SPRING, ACCELERATOR RETURN 스프링
02.666	SPACER, ACCELERATOR LEVER ROD 스페이서
03.461	PIN, ACCELERATOR CONTROL ROD END 핀
13.400	CONTROL ASSEMBLY, ACCELERATING 컨트롤
13.448	FASTENER, ACCELERATING CONTROL ASSEMBLY 패스너
13.573	FASTENER, ACCELERATOR CONTROL ASSY MOUNTING BRACKE 패스너
91.765	WASHER, ACCELERATOR PIN RETAINER 와셔
92.261	WASHER, ACCELERATOR CONTROL ROD END FASTENER 와셔
94.735	RETAINER, ACCELERATOR CONTROL ROD END PIN 리테이너



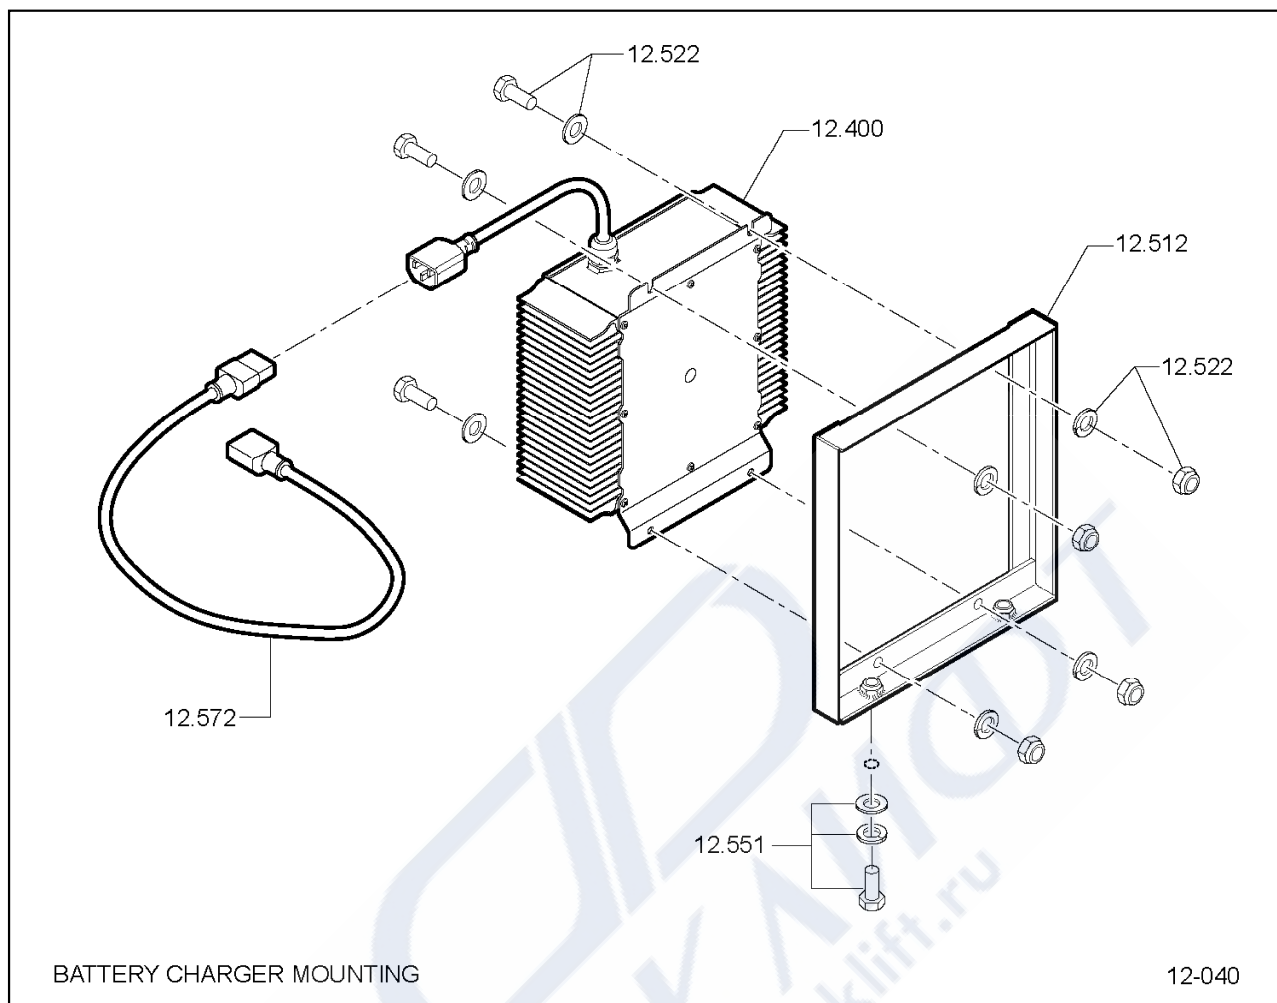 


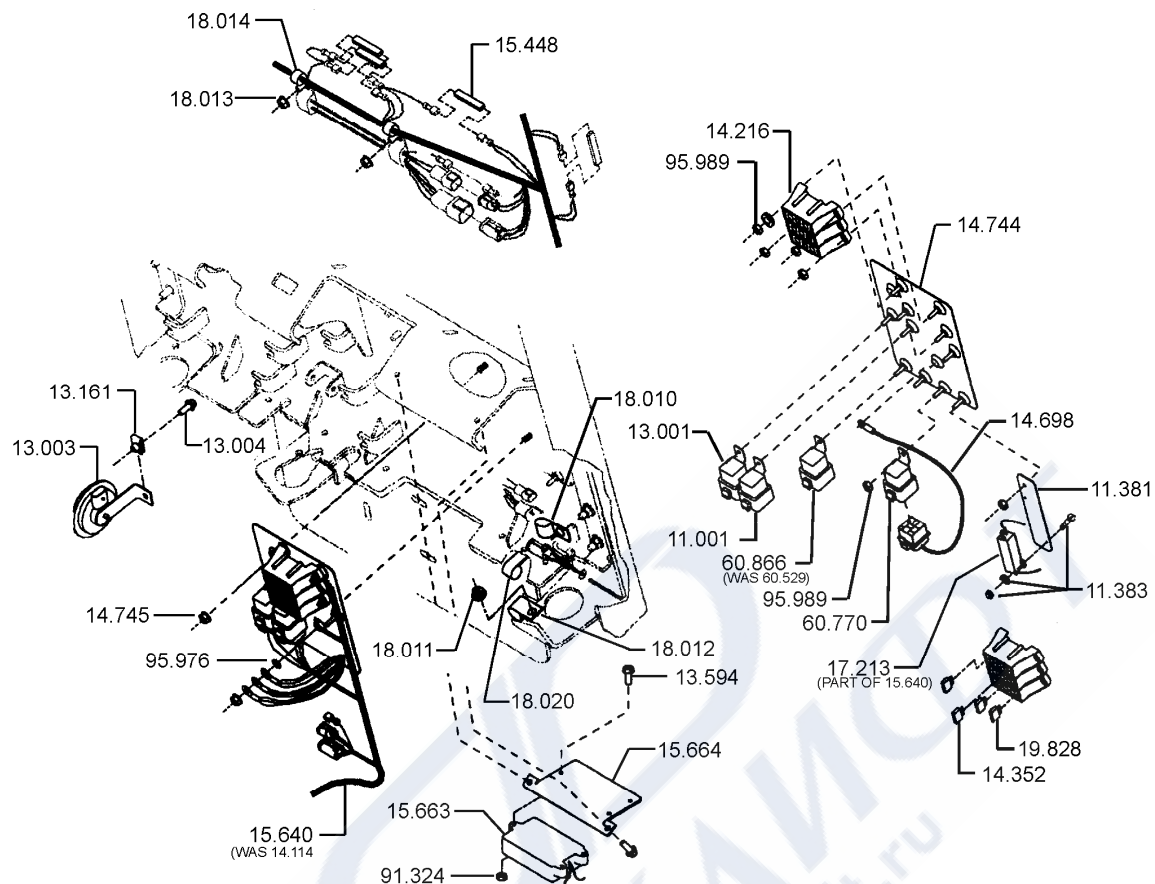 

ELECTRICAL ASSEMBLIES MOUNTING

12-140

11.001	RELAY, STARTER 릴레이	15.663	CONTROL UNIT, IGNITION 컨트롤유닛
11.381	BRACKET, RESISTOR MOUNTING 브라켓	15.664	BRACKET, IGNITION CONTROL UNIT 브라켓
11.383	FASTENER, RESISTOR BRACKET 패스너	17.213	RESISTOR 레지스터
13.001	RELAY, HORN 릴레이	18.010	CLIP, HARNESS 클립
13.003	HORN 혼	18.011	FASTENER, HARNESS CLIP 패스너
13.004	FASTENER, HORN MOUNTING BRACKET 패스너	18.012	CLIP, WIRE HARNESS 클립
13.161	FASTENER, HORN MOUNTING BRACKET 패스너	18.013	FASTENER, HARNESS CLIP 패스너
13.594	FASTENER, ACCELERATING CONTROL SWITCH SUPPORT 패스너	18.014	CLIP, HARNESS 클립
14.216	BLOCK, TERMINAL CONNECTIONS (FUSE BLOCK) 블록	18.020	CLIP, HARNESS 클립
14.352	FUSE, CONTROL CIRCUIT 퓨즈	19.828	FUSE, CONTROL CIRCUIT 퓨즈
14.698	HARNESS, TIME DELAY RELAY 하네스	60.770	RELAY, TIME DELAY 릴레이
14.744	BRACKET, FUSE HOLDER MOUNTING 브라켓	60.866	RELAY, GLOW PLUG 릴레이
14.745	FASTENER, FUSE HOLDER MOUNTING BRACKET 패스너	91.324	NUT, STARTER RELAY FASTENER 너트
15.448	DIODE, HARNESS 다이오드	95.976	WASHER, HARNESS TO BRACKET FASTENER 와셔
15.640	WIRING HARNESS, MACHINE COWL 와이어하네스	95.989	FASTENER, RELAY MOUNTING 패스너

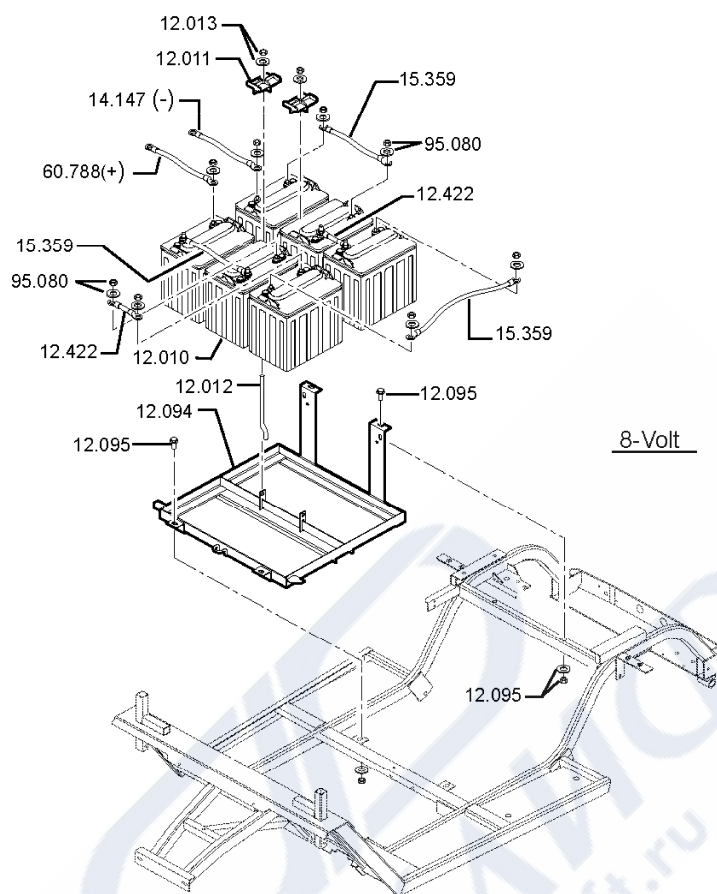 


BATTERY INSTALLATION

12-199

12.010	BATTERY 배터리
12.011	CLAMP, BATTERY HOLD DOWN 클램프
12.012	STUD, BATTERY HOLD DOWN 스터드
12.013	FASTENER, BATTERY HOLD DOWN (AT CLAMP) 패스너
12.094	BRACKET, BATTERY SUPPORT 브라켓
12.095	FASTENER, BATTERY SUPPORT BRACKET 패스너
12.422	CABLE, BATTERY TO BATTERY 케이블
14.147	CABLE, BATTERY NEGATIVE 케이블
15.359	CABLE, BATTERY TO BATTERY 케이블


60.788	CABLE, BATTERY POSTIVE 케이블
95.080	FASTENER, BATTERY CABLE 패스너




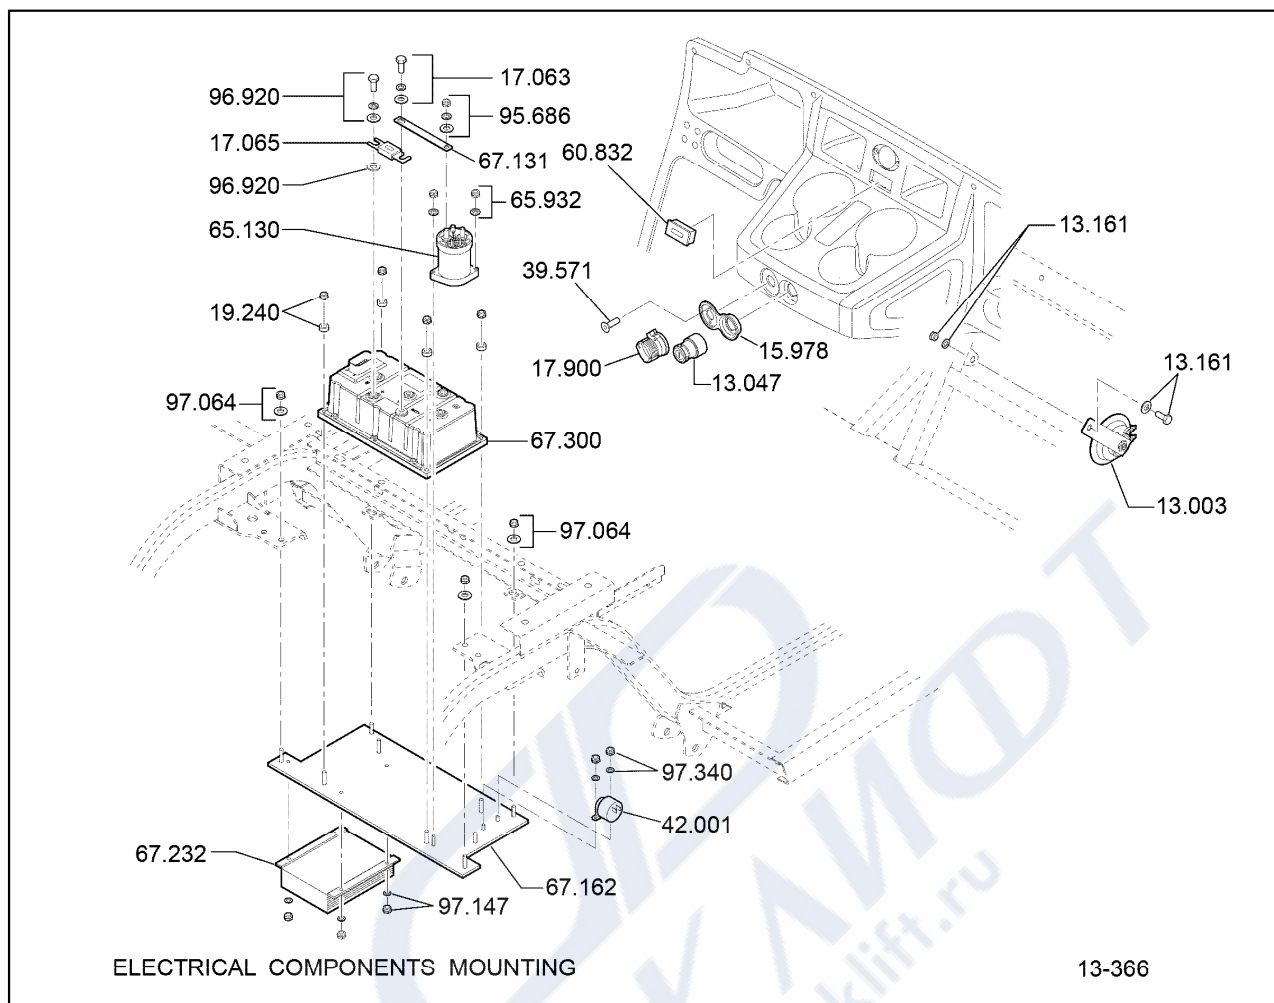 

13.003	HORN 호른
13.047	SWITCH, CIRCUIT LOCKING 스위치
13.161	FASTENER, HORN MOUNTING BRACKET 패스너
15.978	BEZEL, DASH PANEL 배젤
17.063	FASTENER, CONTROL PANEL FUSE TERMINAL 패스너
17.065	FUSE, CONTROL PANEL 퓨즈
17.900	SWITCH, DIRECTION CONTROL 스위치
19.240	FASTENER, CONTROL PANEL MOUNTING 패스너
39.571	FASTENER, DASH COVER 패스너

42.001	WARNING DEVICE, AUDIBLE (AIR OPER) 경고장치
60.832	GAGE, BDI 게이지
65.130	CONTACTOR ASSEMBLY, LINE 컨택터
65.932	FASTENER, LINE CONTACTOR 패스너
67.131	CONDUCTOR, POWER BASE #4 REC 컨덕터
67.162	PLATE, CONTROL PANEL MOUNTING 플레이트
67.232	CONVERTER DC TO DC FOR ACCESSORY 컨버터
67.300	CONTROLLER, TRACTION 컨트롤러
95.686	FASTENER, CONTROL PANEL LEAD 패스너
96.920	FASTENER, FUSE MOUNTING 패스너
97.064	FASTENER, CONTROLLER BRACKET MOUNTING 패스너
97.147	FASTENER, DC-DC CONVERTER FOR ACCESSORY 패스너
97.340	FASTENER, REVERSE ALARM 패스너

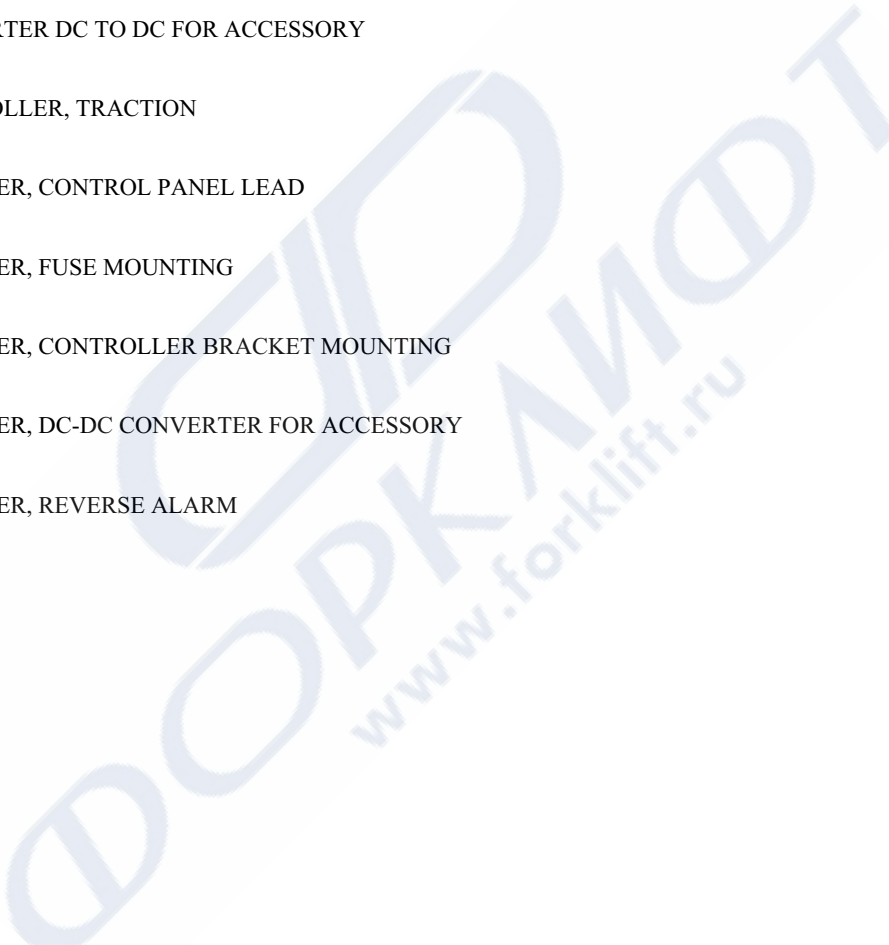 

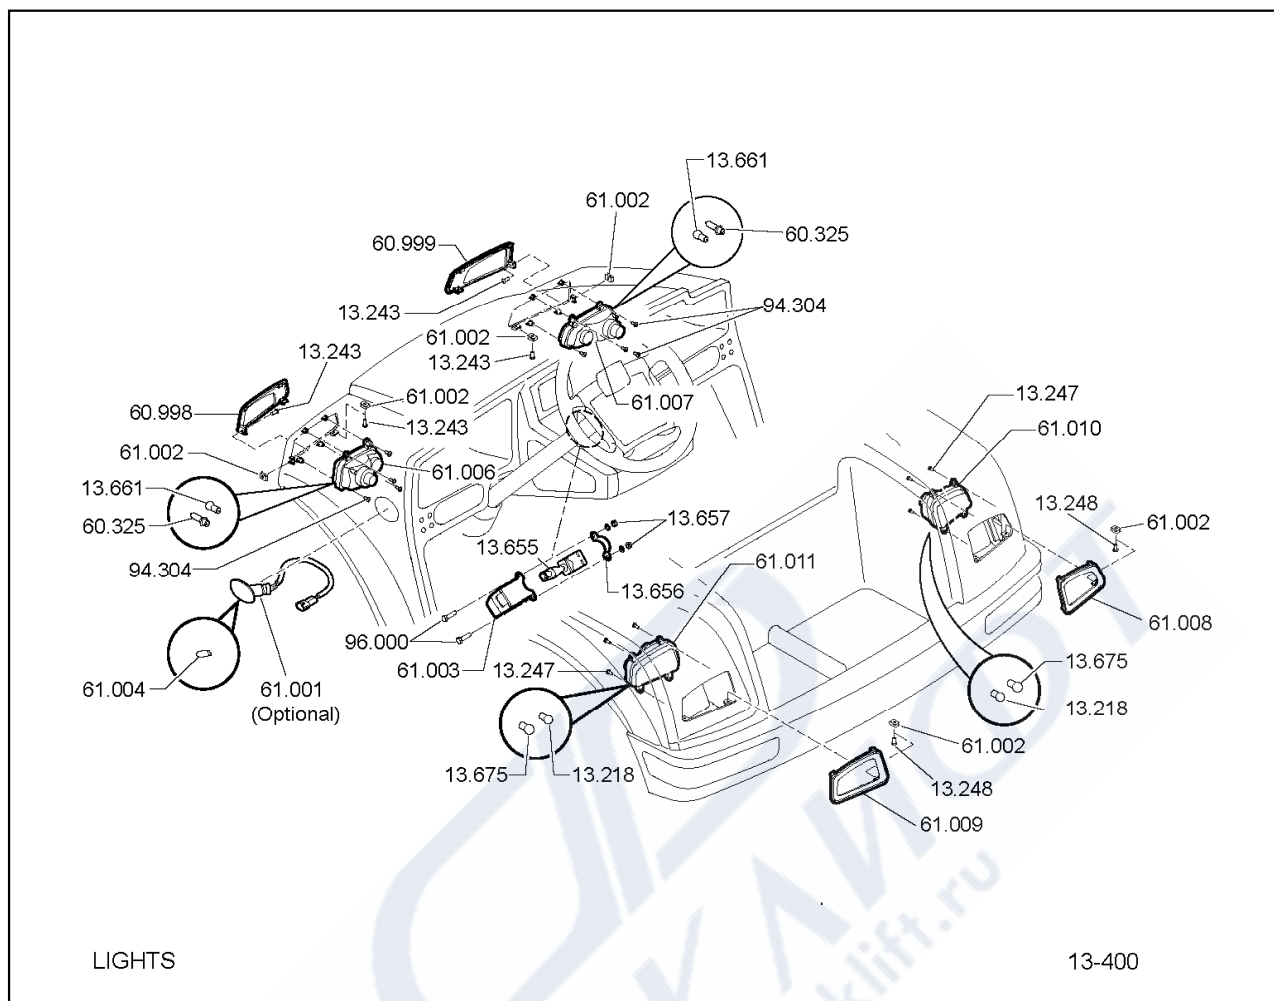 


LIGHTS

13-400

- | | |
|--------|--|
| 13.218 | BULB, STOP & TAIL LAMP
전구 |
| 13.243 | FASTENER, HEAD LAMP BRACKET
패스너 |
| 13.247 | FASTENER, TAIL LAMP ASSEMBLY
패스너 |
| 13.248 | FASTENER, TAIL LAMP HOUSING
패스너 |
| 13.655 | SWITCH, TURN INDICATOR
스위치 |
| 13.656 | BRACKET, TURN INDICATOR SWITCH
브라켓 |
| 13.657 | FASTENER, TURN INDICATOR SWITCH BRACKET
패스너 |
| 13.661 | BULB, TURN SIGNAL LIGHT
전구 |
| 13.675 | BULB, TURN LIGHT
전구 |

60.325	BULB, HEADLAMP 전구
60.998	BEZEL, HEADLAMP LH 배젤
60.999	BEZEL, HEADLAMP RH 배젤
61.001	LIGHT, SIDE MARKER 라이트
61.002	FASTENER, SPEED NUT 패스너
61.003	HOUSING, TURN INDICATOR SWITCH 하우징
61.004	BULB, SIDE MARKER LIGHT 전구
61.006	HEADLAMP LH 헤드램프
61.007	HEADLAMP, RH 헤드램프
61.008	BEZEL, TAILLAMP RH 배젤
61.009	BEZEL, TAILLAMP LH 배젤
61.010	TAILLAMP RH 테일램프
61.011	TAILLAMP, LH 테일램프
94.304	FASTENER, HEADLAMP 패스너
96.000	FASTENER, TURN INDICATOR SWITCH 패스너

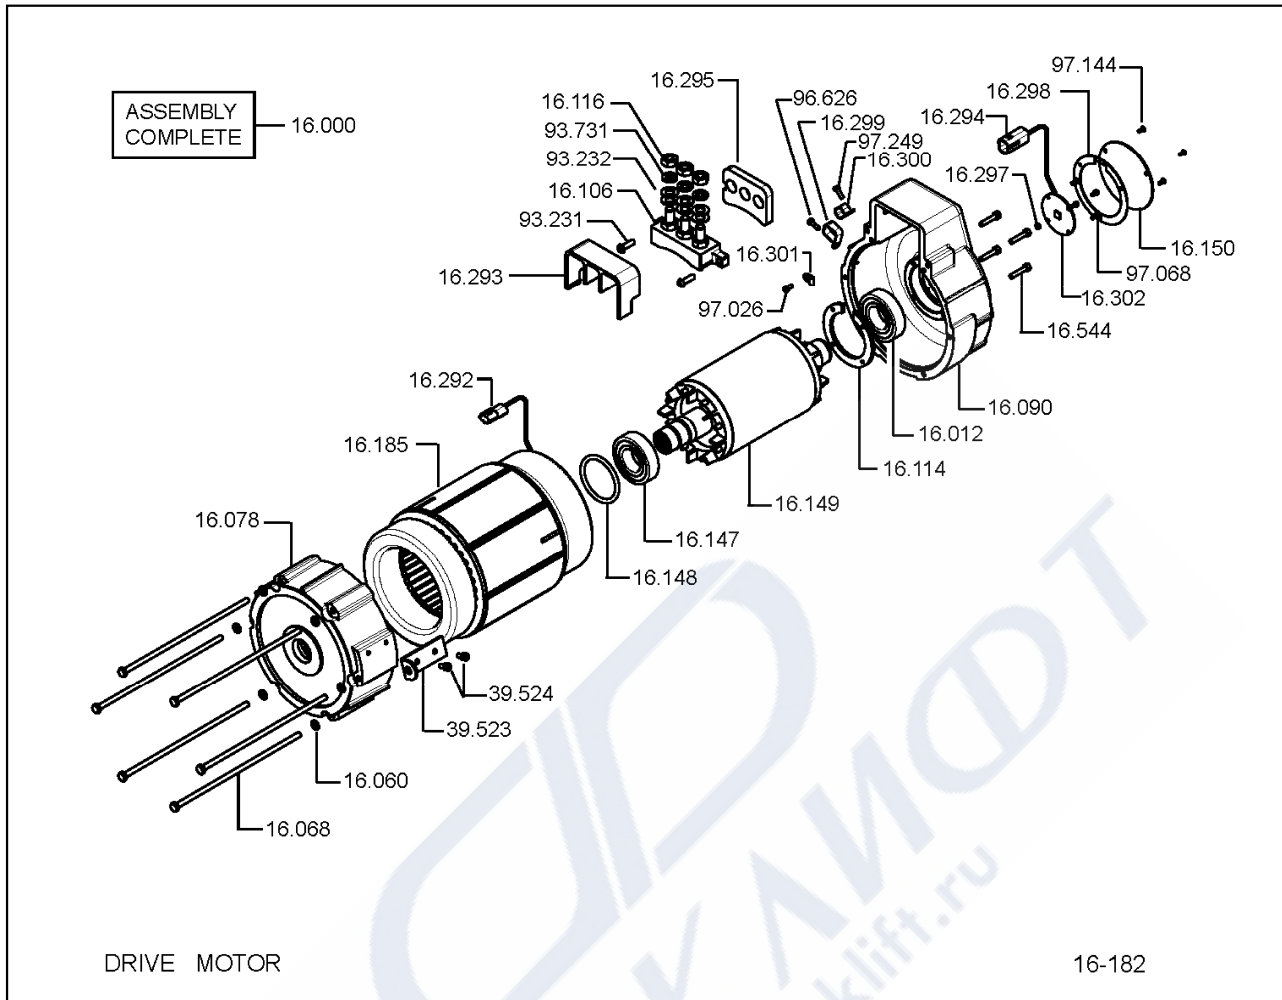 


16.000	MOTOR ASSEMBLY, DRIVE 모터	16.293	COVER, DRIVE MOTOR TERMINAL BLOCK 커버
16.012	BEARING, DRIVE MOTOR END 베어링	16.294	CONNECTOR, DRIVE MOTOR SPEED SENSOR 커넥터
16.060	WASHER, DRIVE END THRUST 와셔	16.295	INSULATOR, DRIVE MOTOR TERMINAL MOUNTING 절연체
16.068	FASTENER, DRIVE MOTOR END FRAME 패스너	16.297	MAGNET, DRIVE MOTOR SPEED SENSOR 마그넷
16.078	FRAME, DRIVE MOTOR DRIVE END 프레임	16.298	GASKET, DRIVE MOTOR END PLATE 가스켓
16.090	COVER, DRIVE MOTOR COMMUTATOR END 커버	16.299	CLAMP, DRIVE MOTOR SPEED SENSOR WIRING 클램프
16.106	TERMINAL BLOCK, DRIVE MOTOR 터미널블록	16.300	CLAMP, DRIVE MOTOR WIRING CONNECTOR 클램프
16.114	WASHER, DRIVE MOTOR DRIVE END THRUST 와셔	16.301	CLAMP, DRIVE MOTOR CABLE 클램프
16.116	FASTENER, DRIVE MOTOR TERMINAL 패스너	16.302	SPEED SENSOR, DRIVE MOTOR 스피드센서
16.147	SENSOR BEARING, DRIVE MOTOR ROTOR 센서베어링	16.544	FASTENER, COMMUTATOR END BEARING COVER 패스너
16.148	RING, DRIVE MOTOR ROTOR BEARING 링	39.523	BRACKET, DRIVE MOTOR SHIELD MOUNTING 브라켓
16.149	ROTOR, DRIVE MOTOR 로터	39.524	FASTENER, DRIVE MOTOR SHIELD 패스너
16.150	COVER, DRIVE MOTOR ROTOR END 커버	93.231	FASTENER, DRIVE MOTOR TERMINAL BLOCK 패스너
16.185	STATOR ASSY, DRIVE MOTOR 스테이터	93.232	WASHER, DRIVE MOTOR TERMINAL BLOCK FASTENER 와셔
16.292	CONNECTOR, DRIVE MOTOR THERMAL SENSOR 커넥터	93.731	NUT, DRIVE MOTOR FASTENER 너트

96.626	FASTENER, WIRING HARNESS CLAMP 패스너
97.026	FASTENER, CABLE BRACKET 패스너
97.068	FASTENER, DRIVE MOTOR SPEED SENSOR 패스너
97.144	FASTENER, DRIVE MOTOR ROTOR SENSOR PLATE COVER 패스너
97.249	FASTENER, SPEED SENSOR BRKT. 패스너



 
■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

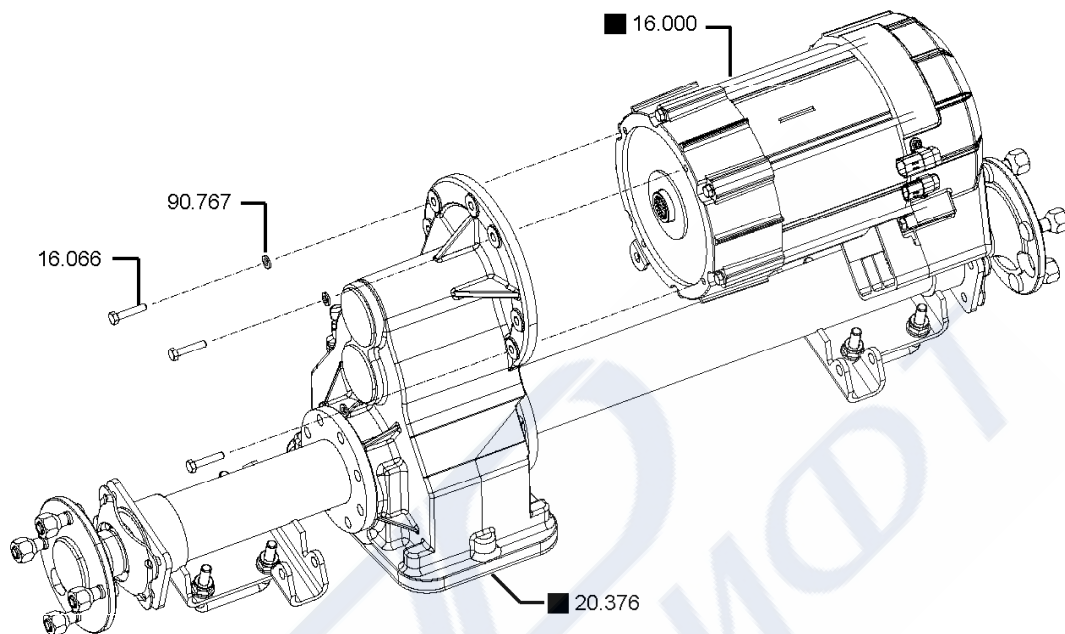

DRIVE MOTOR MOUNTING


16-183

16.000	MOTOR ASSEMBLY, DRIVE 모터
16.066	FASTENER, DRIVE MOTOR 패스너
20.376	AXLE ASSEMBLY, DRIVE 드라이브액슬
90.767	LOCKWASHER, DRIVE MOTOR FASTENER 로크와셔

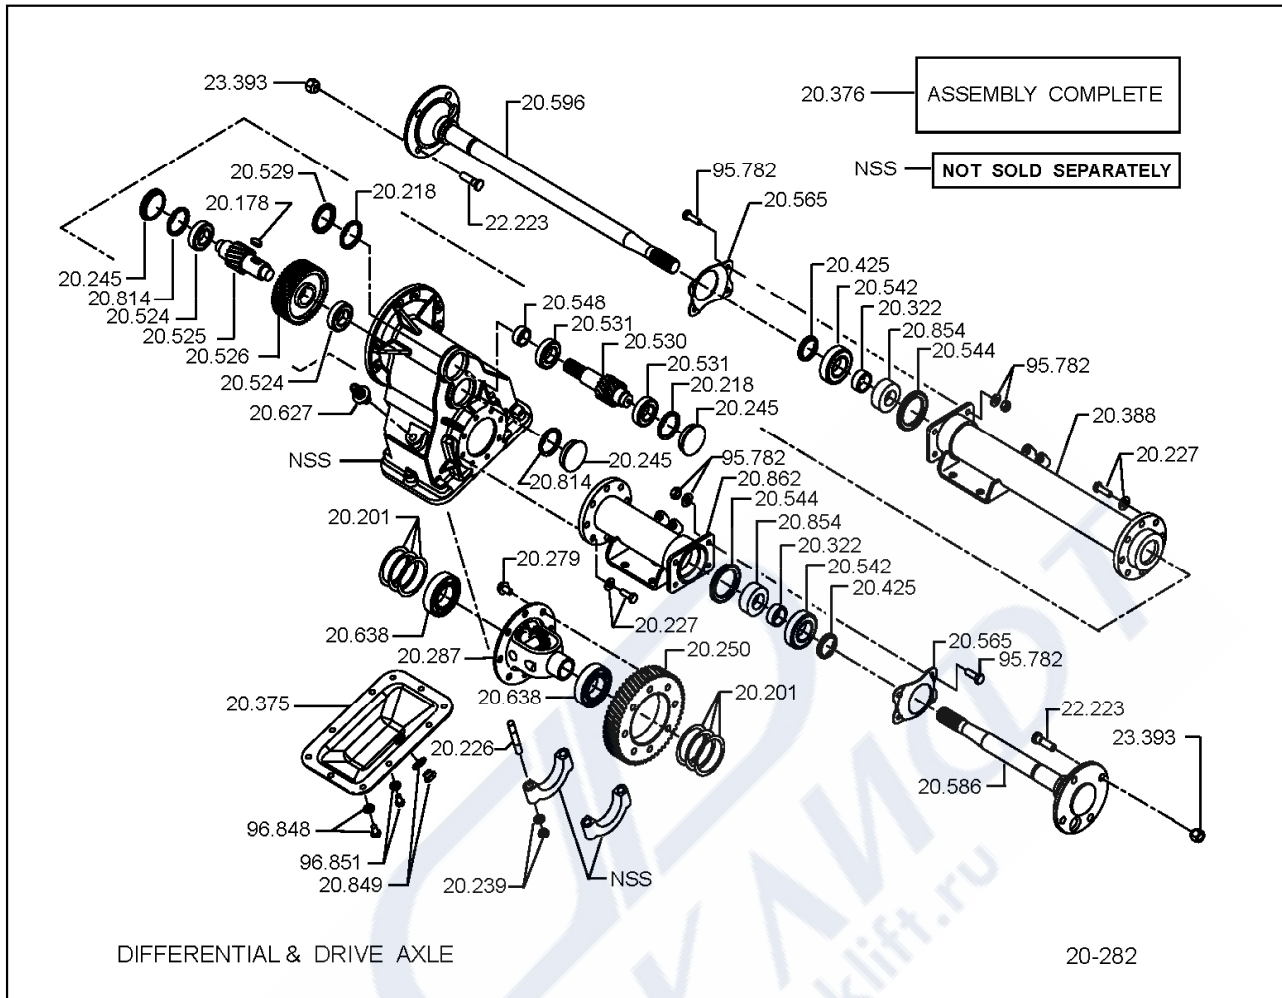 

20.178	KEY, INPUT SHAFT 키	20.524	BEARING, DRIVE AXLE INTERMEDIATE GEAR SHAFT 베어링
20.201	SHIM, DIFF BRG CARRIER TO AXLE HOUSING 심	20.525	SHAFT, DRIVE AXLE INTERMEDIATE GEAR 샤프트
20.218	RETAINER, DRIVE AXLE INPUT GEAR SHAFT BEARING IN 리테이너	20.526	GEAR, DRIVE AXLE INTERMEDIATE 기어
20.226	LOCATOR, DIFFERENTIAL PINION BEARING CARRIER 로케이터	20.529	SEAL, DRIVE AXLE INPUT GEAR SHAFT 씰
20.227	FASTENER, THICK FLANGE TO AXLE HOUSING 패스너	20.530	SHAFT, DRIVE AXLE INPUT GEAR 샤프트
20.239	FASTENER, DIFFERENTIAL PINION BEARING CARRIER 패스너	20.531	BEARING, DRIVE AXLE INPUT GEAR 베어링
20.245	COVER, DIFFERENTIAL ACCESS HOLE 커버	20.542	BEARING, DRIVE AXLE SHAFT 베어링
20.250	GEAR, DIFFERENTIAL DRIVEN 기어	20.544	SEAL, DRIVE AXLE SHAFT 씰
20.279	FASTENER, DIFFERENTIAL CASE TO RING GEAR 패스너	20.548	SLEEVE, DRIVE AXLE SHAFT 슬리브
20.287	CASE & GEAR ASSEMBLY, DIFFERENTIAL 케이스 & 기어	20.565	RETAINER, DRIVE AXLE SHAFT BEARING 리테이너
20.322	SPACER, DRIVE AXLE SHAFT BEARING 스페이서	20.586	SHAFT, DRIVE AXLE 샤프트
20.375	COVER, DIFFERENTIAL HOUSING INSPECTION 커버	20.596	SHAFT, DRIVE AXLE (LH) 샤프트
20.376	AXLE ASSEMBLY, DRIVE 드라이브 액슬	20.627	VENT, DIFFERENTIAL & AXLE 벤트
20.388	HOUSING, DRIVE AXLE (LH) 하우징	20.638	BEARING, RING GEAR SHAFT OUTBOARD 베어링
20.425	SPACER, AXLE SHAFT 스페이서	20.814	RETAINER, DRIVE AXLE INTERMEDIATE GEAR BEARING 리테이너


20.849	PLUG, DRIVE AXLE HOUSING 플러그
20.854	SLEEVE, AXLE SHAFT 슬리브
20.862	HOUSING, DRIVE AXLE (RH) 하우징
22.223	FASTENER, DRIVE WHEEL 패스너
23.393	FASTENER, DRIVE WHEEL 패스너
95.782	FASTENER, DRIVE AXLE SHAFT BEARING RETAINER 패스너
96.848	FASTENER, INSPECTION PLATE 패스너
96.851	FASTENER, INSPECTION PLATE 패스너

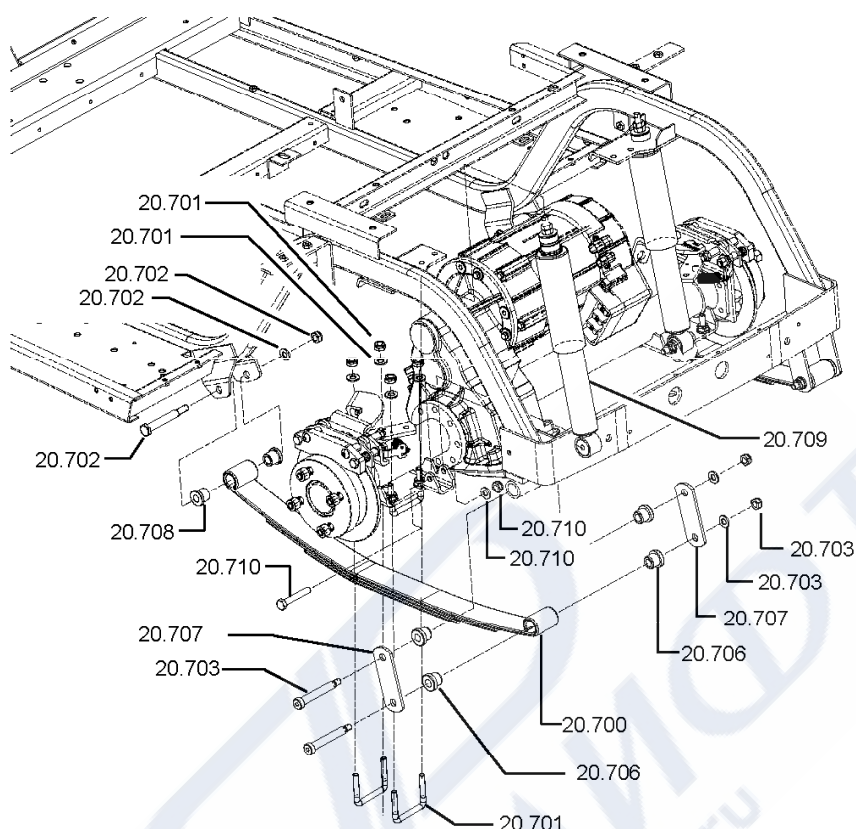 

SUSPENSION SYSTEM REAR


20-286


- | | |
|--------|---|
| 20.700 | SPRING ASSEMBLY, DRIVE AXLE SUSPENSION
스프링 |
| 20.701 | FASTENER, DRIVE AXLE SUSPENSION SPRING - AXLE
패스너 |
| 20.702 | FASTENER, DRIVE AXLE SUSPENSION SPRING (FRAME FRONT)
패스너 |
| 20.703 | FASTENER, DRIVE AXLE SUSPENSION SPRING (FRAME REAR)
패스너 |
| 20.706 | BEARING, DRIVE AXLE SUSPENSION SPRING
베어링 |
| 20.707 | SHACKLE, DRIVE AXLE SUSPENSION MOUNTING
샤클 |
| 20.708 | BEARING, DRIVE AXLE SUSPENSION SPRING MOUNTING (FRONT)
베어링 |
| 20.709 | SHOCK ABSORBER, REAR AXLE
쇼브업쇼버 |
| 20.710 | FASTENER, REAR AXLE SHOCK ABSORBER
패스너 |

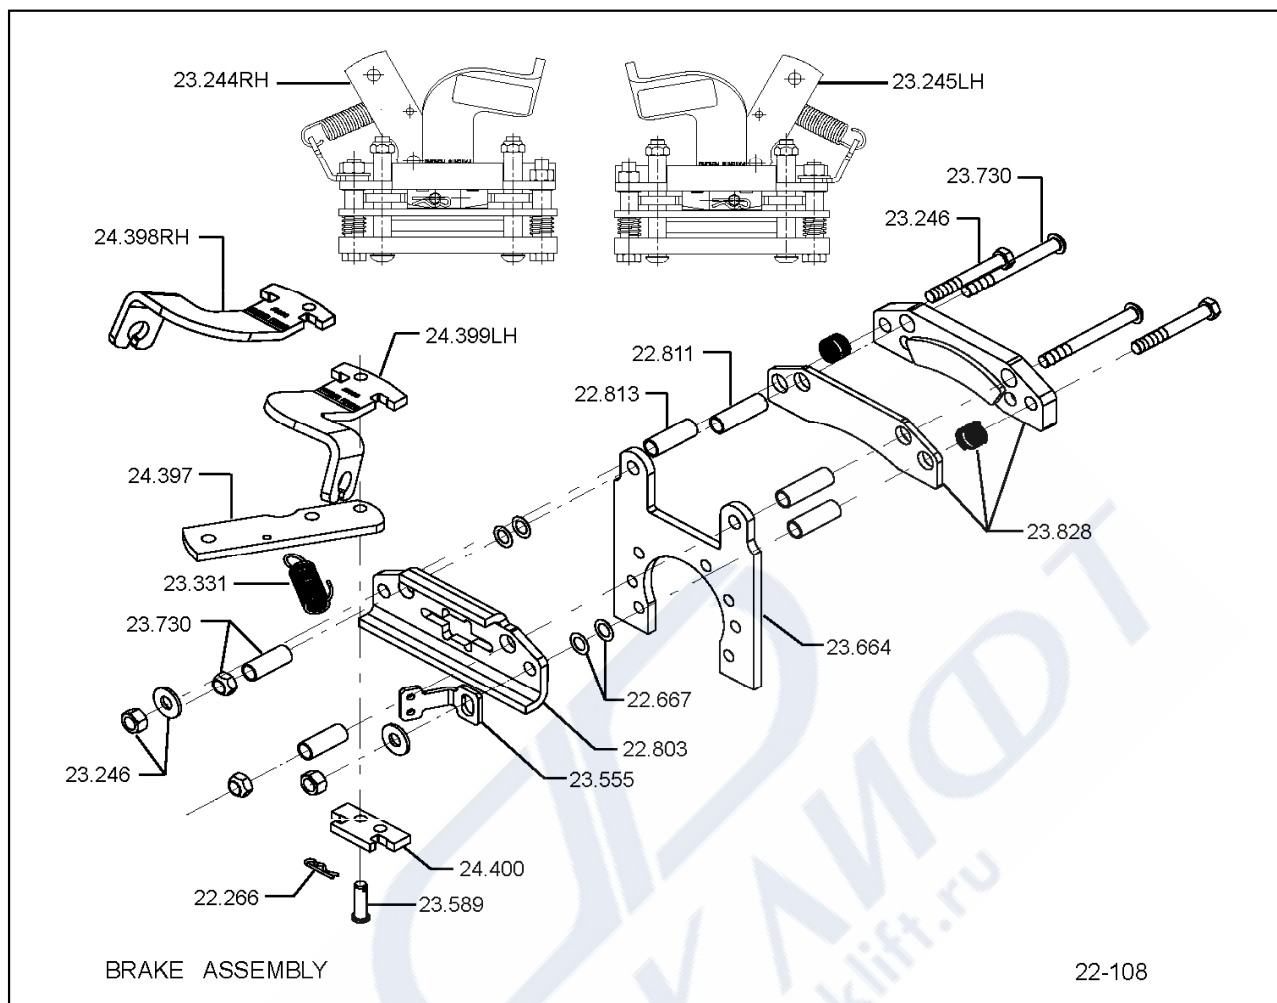 

- | | |
|--------|--|
| 22.266 | RETAINER, BRAKE CABLE CLEVIS PIN
리테이너 |
| 22.667 | SHIM, BRAKE
심 |
| 22.803 | SPACER PLATE, BRAKE ASSEMBLY
스페이서플레이트 |
| 22.811 | BUSHING, BRAKE ASSEMBLY
부싱 |
| 22.813 | SLEEVE, BRAKE
슬리브 |
| 23.244 | BRAKE ASSEMBLY, RH DRIVE WHEEL
브레이크 |
| 23.245 | BRAKE ASSEMBLY, LH DRIVE WHEEL
브레이크 |
| 23.246 | FASTENER, BRAKE ASSEMBLY
패스너 |
| 23.331 | SPRING, BRAKE ACTUATING
스프링 |

23.555	ANCHOR, BRAKE ACTUATING SPRING 앵커
23.589	RETAINER, BRAKE ACTUATING LEVER 리테이너
23.664	PLATE, BRAKE SHOE RETAINER 플레이트
23.730	FASTENER, BRAKE ASSEMBLY 패스너
23.828	KIT, BRAKE LINING 키트
24.397	LEVER, BRAKE CAM 레버
24.398	PLATE, BRAKE CABLE ACTURATOR RH 플레이트
24.399	PLATE, BRAKE CABLE ACTURATOR LH 플레이트
24.400	PLATE, BRAKE ACTURATOR 플레이트

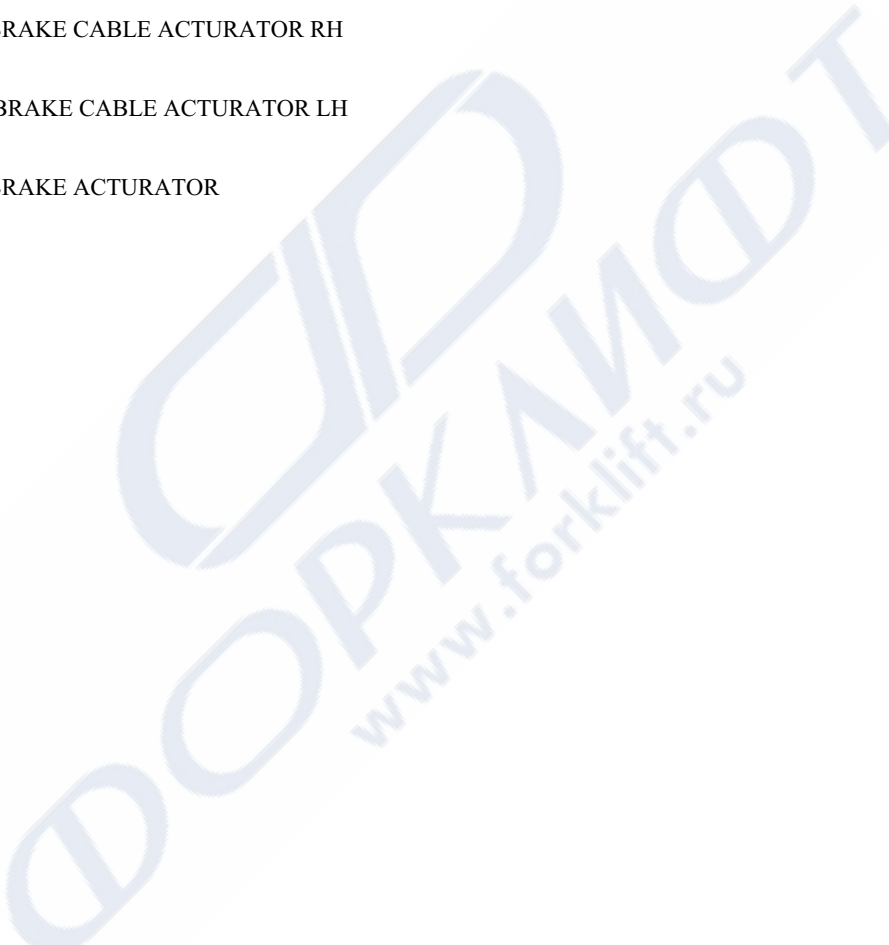 


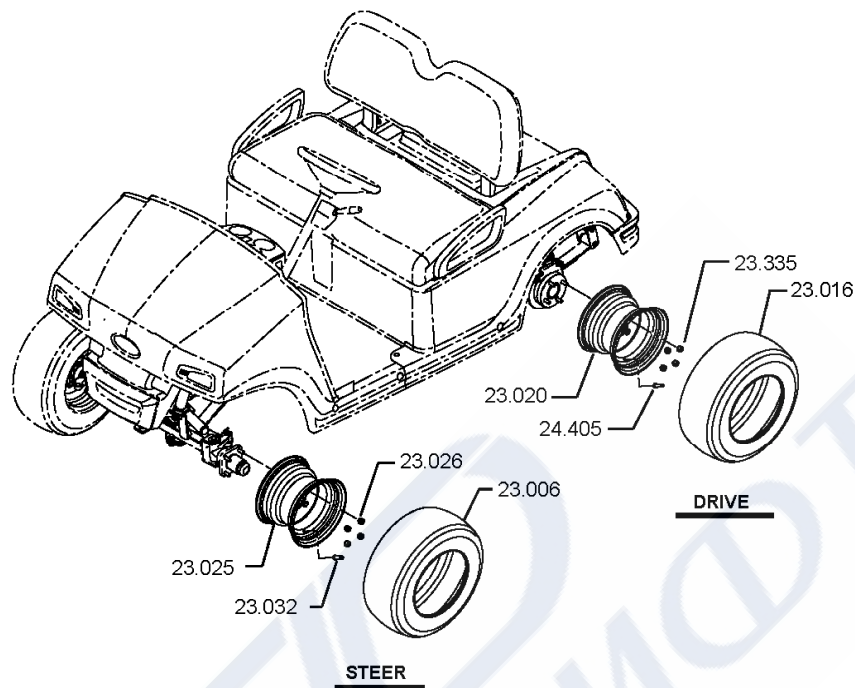 

TIRE & WHEEL MOUNTING

22-224

23.006	TIRE, STEER WHEEL 타이어
23.016	TIRE, DRIVE WHEEL 타이어
23.020	WHEEL ASSEMBLY, DRIVE 휠
23.025	WHEEL ASSEMBLY, STEER 휠
23.026	FASTENER, STEER WHEEL 패스너
23.032	VALVE STEM - TUBELESS STEER WHEEL 밸브스텝
23.335	FASTENER, DRIVE WHEEL 패스너
24.405	VALVE STEM, TUBELESS DRIVE WHEEL 밸브스텝

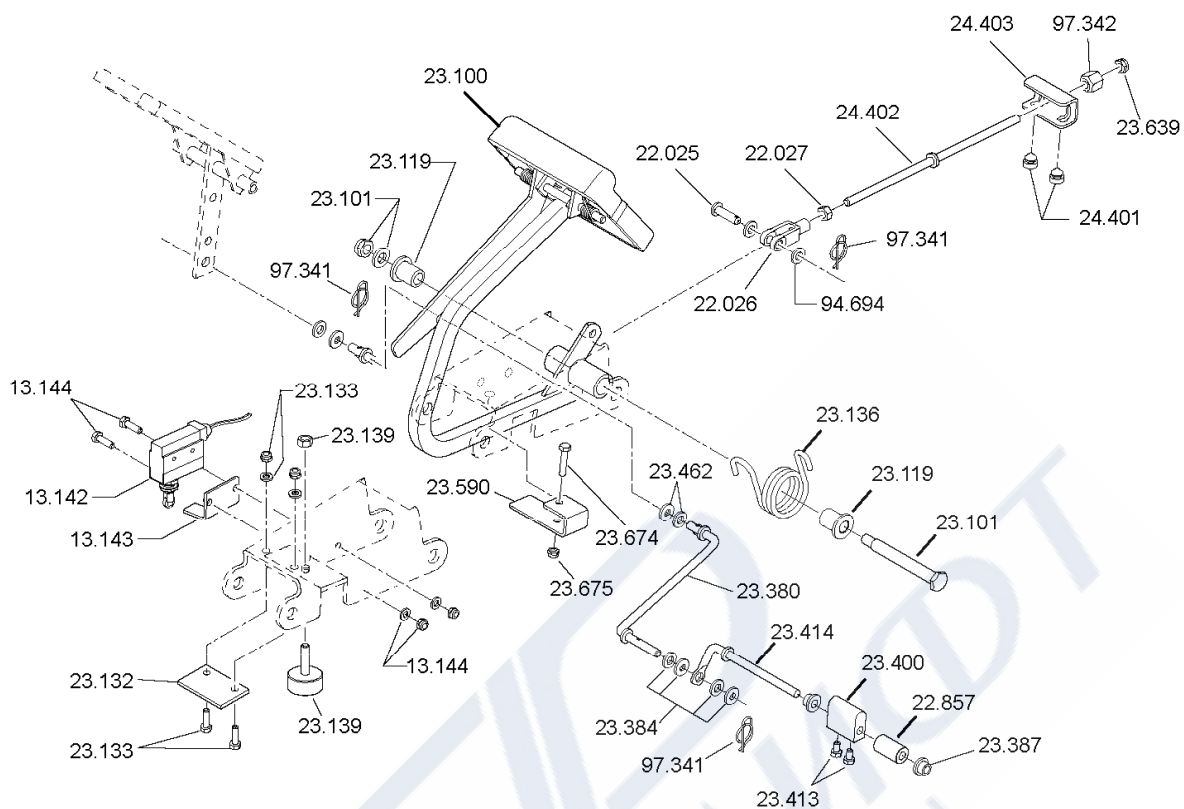 


BRAKE PEDAL & LINKAGE

23-524

13.114	SWITCH, UPRIGHT CONTROL (LIFT) 스위치	23.380	LINK, PARKING BRAKE 링크
13.142	SWITCH, BRAKE INTERLOCK 스위치	23.384	FASTENER, PARKING BRAKE LINK 패스너
13.143	BRACKET, BRAKE INTERLOCK SWITCH 브라켓	23.387	RETAINER, PARKING BRAKE BELLCRANK 리테이너
13.144	FASTENER, BRAKE INTERLOCK SWITCH BRACKET 패스너	23.400	CAM, PARKING BRAKE 캠
22.025	PIN, BRAKE PEDAL LINKAGE 핀	23.413	FASTENER, PARKING BRAKE CAM 패스너
22.026	ROD END, BRAKE PEDAL LINKAGE 로드엔드	23.414	LINK, PARKING BRAKE CAM ACTUATING 링크
22.027	LOCK, BRAKE PEDAL LINKAGE ROD END 로크	23.462	FASTENER, PARKING BRAKE LINK 패스너
22.857	SPACER, PARKING BRAKE PEDAL CAM MOUNTING 스페이서	23.590	BRACKET, BRAKE ACTUATOR MOUNTING (RH) 브라켓
23.100	PEDAL, BRAKE 페달	23.639	FASTENER, PARKING BRAKE CABLE ANCHOR 패스너
23.101	SHAFT, BRAKE PEDAL 샤프트	23.674	FASTENER, BRAKE PEDAL ACTUATOR 패스너
23.119	BEARING, BRAKE PEDAL 베어링	23.675	FASTENER, BRAKE PEDAL ACTUATOR 패스너
23.132	BRACKET, BRAKE LOCK UNIT MOUNTING 브라켓	24.401	RUBBER PLUG, BRAKE MTG BKT. 러버플러그
23.133	FASTENER, BRAKE LOCK UNIT ATTACHING 패스너	24.402	ROD, BRAKE ACTUATING 로드
23.136	SPRING, BRAKE PEDAL RETURN 스프링	24.403	ANCHOR, BRAKE CABLE 앵커
23.139	STOP, BRAKE PEDAL 스톱	94.694	WASHER, BRAKE PEDAL LINKAGE ROD END PIN 와셔

97.341	COTTER, BRAKE LINK ROD 커터
97.342	FASTENER, BRAKE ADJUSTMENT 패스너




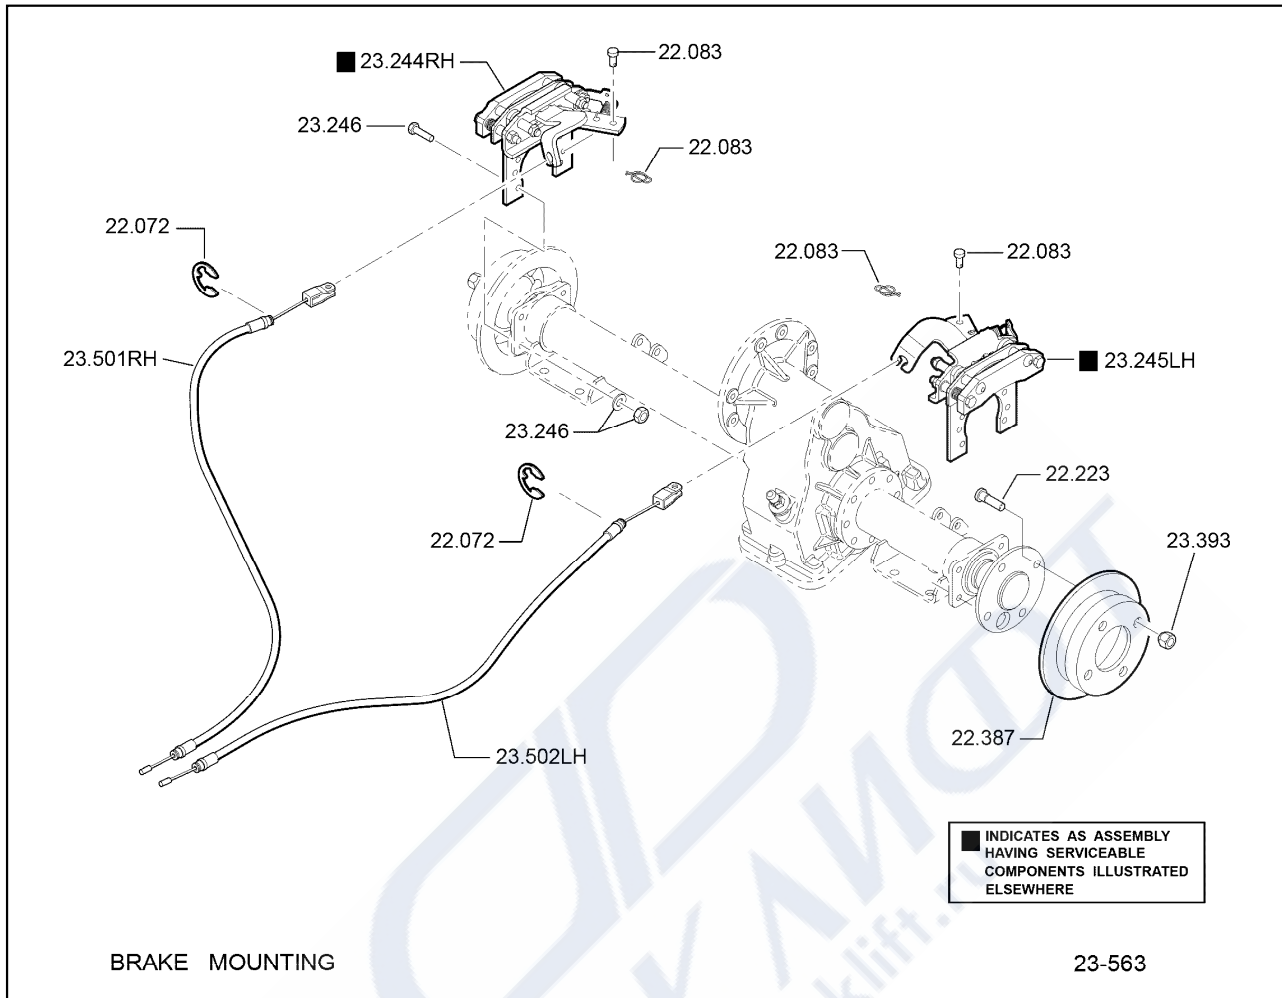 

22.072	FASTENER, BRAKE LINE CLIP 패스너
22.083	FASTENER, BRAKE CABLE BRACKET (BRAKE END) 패스너
22.223	FASTENER, DRIVE WHEEL 패스너
22.387	HUB, BRAKE DISC 허브
23.244	BRAKE ASSEMBLY, RH DRIVE WHEEL 브레이크
23.245	BRAKE ASSEMBLY, LH DRIVE WHEEL 브레이크
23.246	FASTENER, BRAKE ASSEMBLY 패스너
23.393	FASTENER, DRIVE WHEEL 패스너
23.501	TOGGLE ASSEMBLY, PARKING BRAKE 토글

 
23.502 SPACER, PARKING BRAKE LINKAGE TOGGLE
스페이서



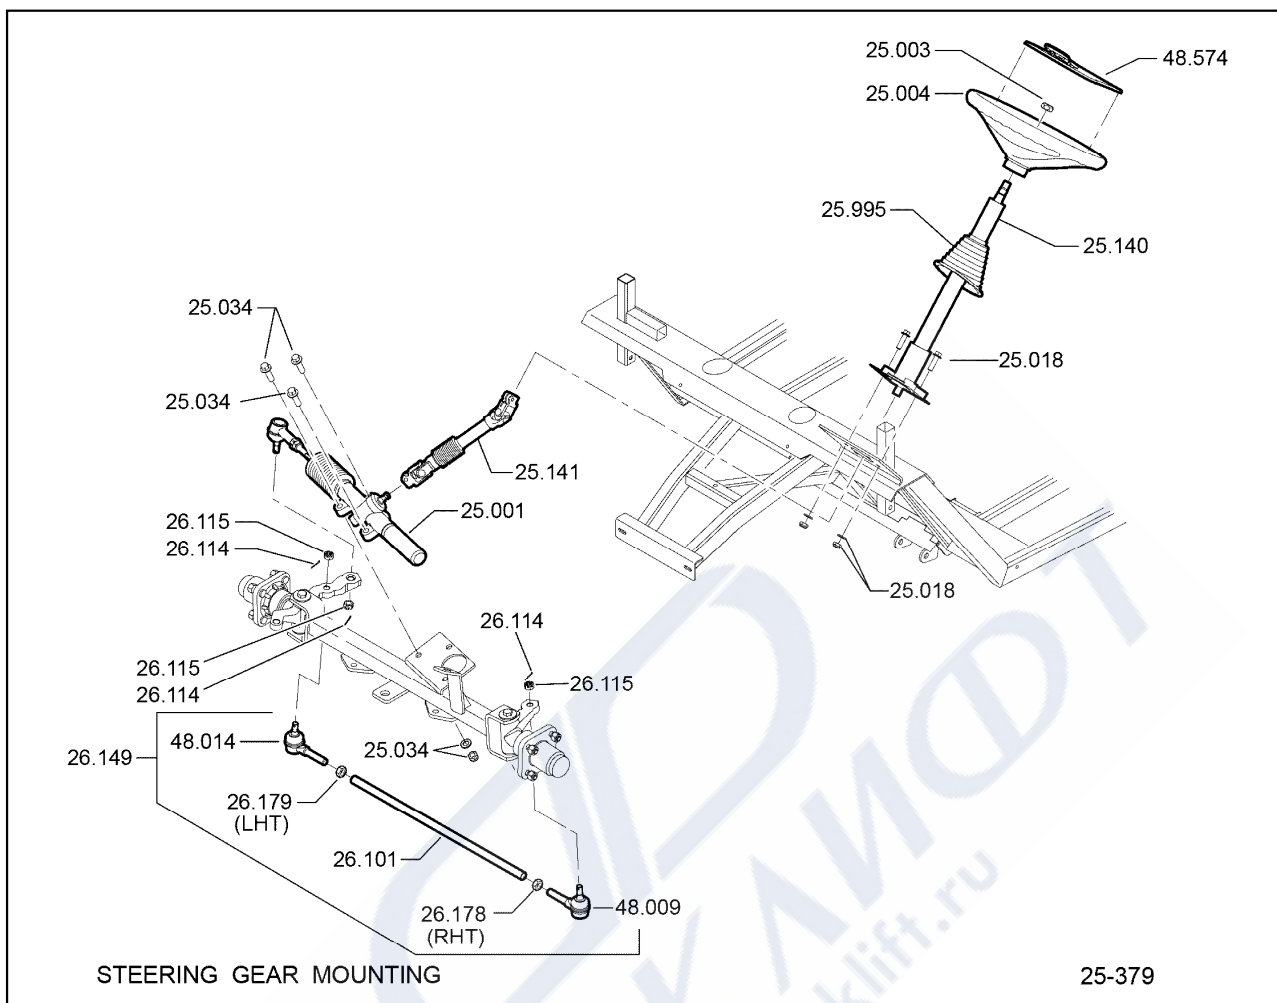


25.001	GEAR ASSEMBLY, STEERING (GREASED) 기어어셈블리
25.003	NUT, HANDWHEEL 너트
25.004	HAND WHEEL, STEERING GEAR 핸드휠
25.018	FASTENER, COLUMN JACKET 패스너
25.034	FASTENER, STEERING GEAR ATTACHING 패스너
25.140	SHAFT & COLUMN ASSEMBLY, POWER STEERING 샤프트& 컬럼
25.141	SHAFT, STEERING GEAR 샤프트
25.995	BOOT, STEERING SHAFT 부트
26.101	ROD, TIE 로드

26.114	COTTER, STEER AXLE TIE ROD END 커터
26.115	NUT, STEER AXLE TIE ROD END 너트
26.149	TIE ROD ASSEMBLY, STEER AXLE RH 타이로드
26.178	NUT, TIE ROD END LOCK 너트
26.179	NUT, TIE ROD END LOCK 너트
48.009	ROD END ASSEMBLY, LH THREAD FRONT TIE 로드엔드
48.014	ROD END ASSEMBLY, RH THREAD FRONT TIE 로드엔드
48.574	COVER, HANDWHEEL *

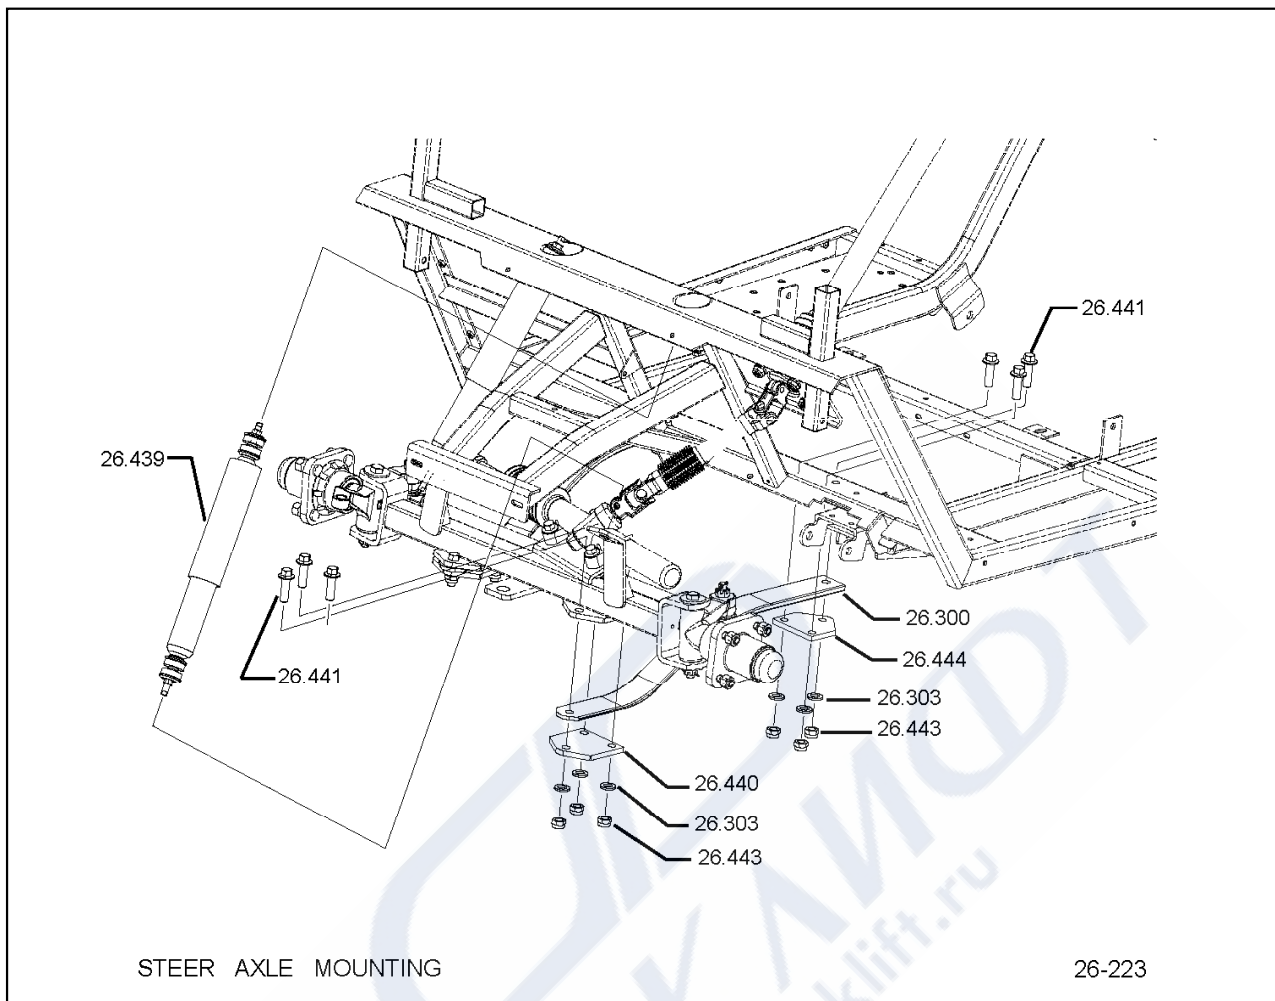 


- | | |
|--------|--|
| 26.300 | SPRING ASSEMBLY, STEER AXLE SUSPENSION
스프링 |
| 26.303 | FASTENER, STEER AXLE SUSPENSION SPRING (AXLE)
패스너 |
| 26.439 | SHOCK ABSORBER, FRONT
쇼크업쇼버 |
| 26.440 | * |
| 26.441 | FASTENER, STEER AXLE SUSPENSION SPRING PLATE
패스너 |
| 26.443 | NUT, STEER AXLE SUSPENSION SPRING PLATE
너트 |
| 26.444 | PLATE, STEER AXLE SUSPENSION SPRING
플레이트 |

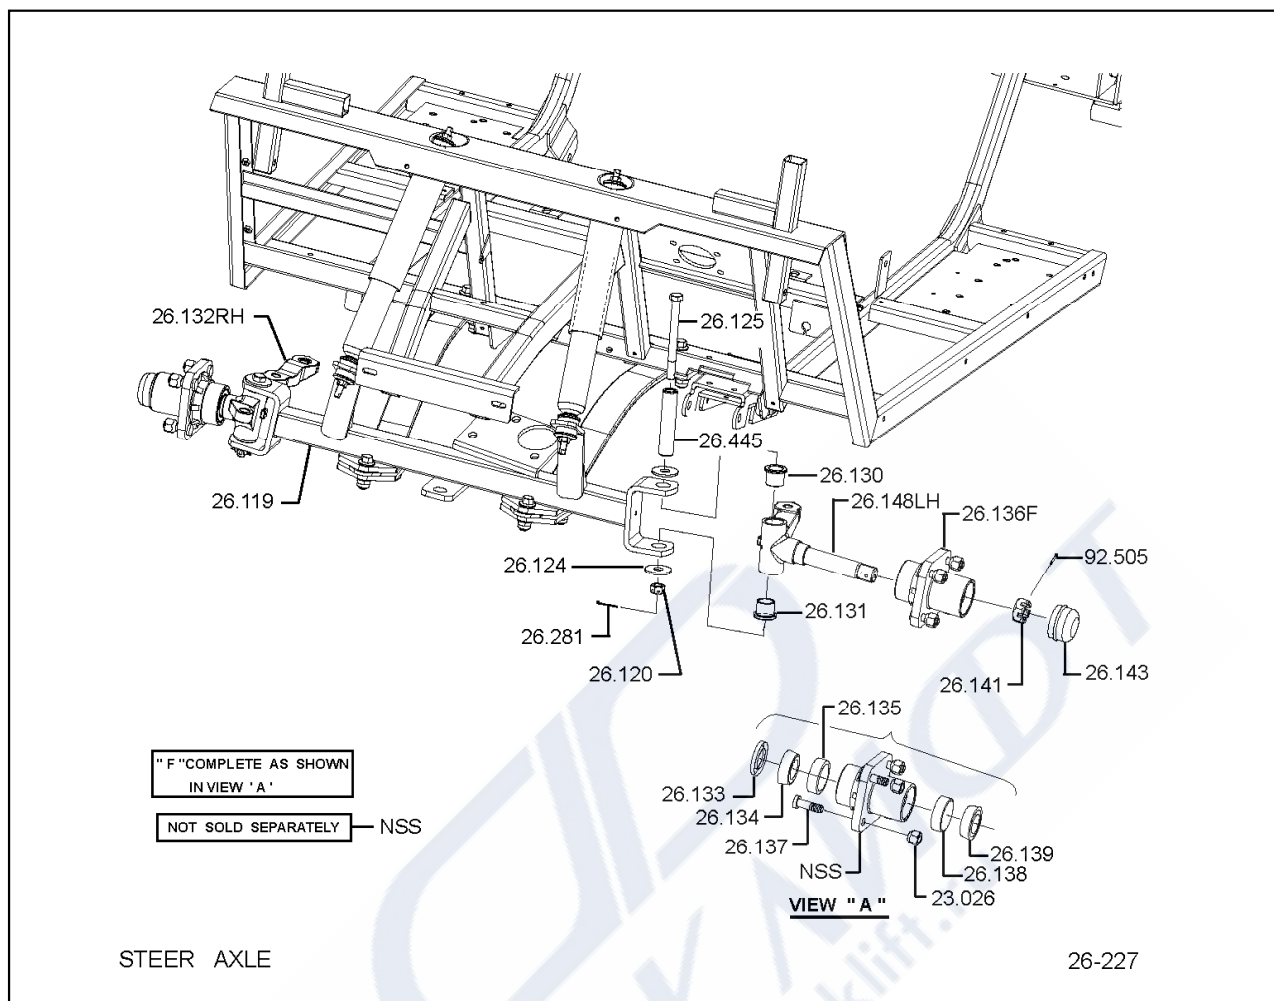 

23.026	FASTENER, STEER WHEEL 패스너
26.119	AXLE, STEER 액슬
26.120	FASTENER, STEER AXLE SPIDER PIN 패스너
26.124	SHIM, STEER AXLE KNUCKLE 심
26.125	PIN, STEER AXLE KNUCKLE 핀
26.130	BEARING, STEER AXLE KNUCKLE PIN 베어링
26.131	BEARING, STEER AXLE KNUCKLE PIN LOWER 베어링
26.132	KNUCKLE, STEER AXLE (RH) 너트
26.133	SEAL, STEER WHEEL HUB 셀


26.134	CONE, STEER WHEEL HUB BEARING (INNER) 콘
26.135	CUP, STEER WHEEL HUB BEARING (INNER) 컵
26.136	HUB & CUP, STEER WHEEL 허브& 컵
26.137	FASTENER, STEER WHEEL 패스너
26.138	CUP, STEER WHEEL HUB BEARING (OUTER) 컵
26.139	CONE, STEER WHEEL HUB BEARING (OUTER) 콘
26.141	FASTENER, STEER WHEEL HUB 패스너
26.143	CAP, STEER WHEEL HUB 캡
26.148	KNUCKLE, STEER AXLE (LH) 너트
26.281	RETAINER, STEER AXLE HUB BRG KNUCKLE NUT 리테이너
26.445	SLEEVE, STEER AXLE KNUCKLE 슬리브
92.505	COTTER, STEER WHEEL HUB FASTENER 커터



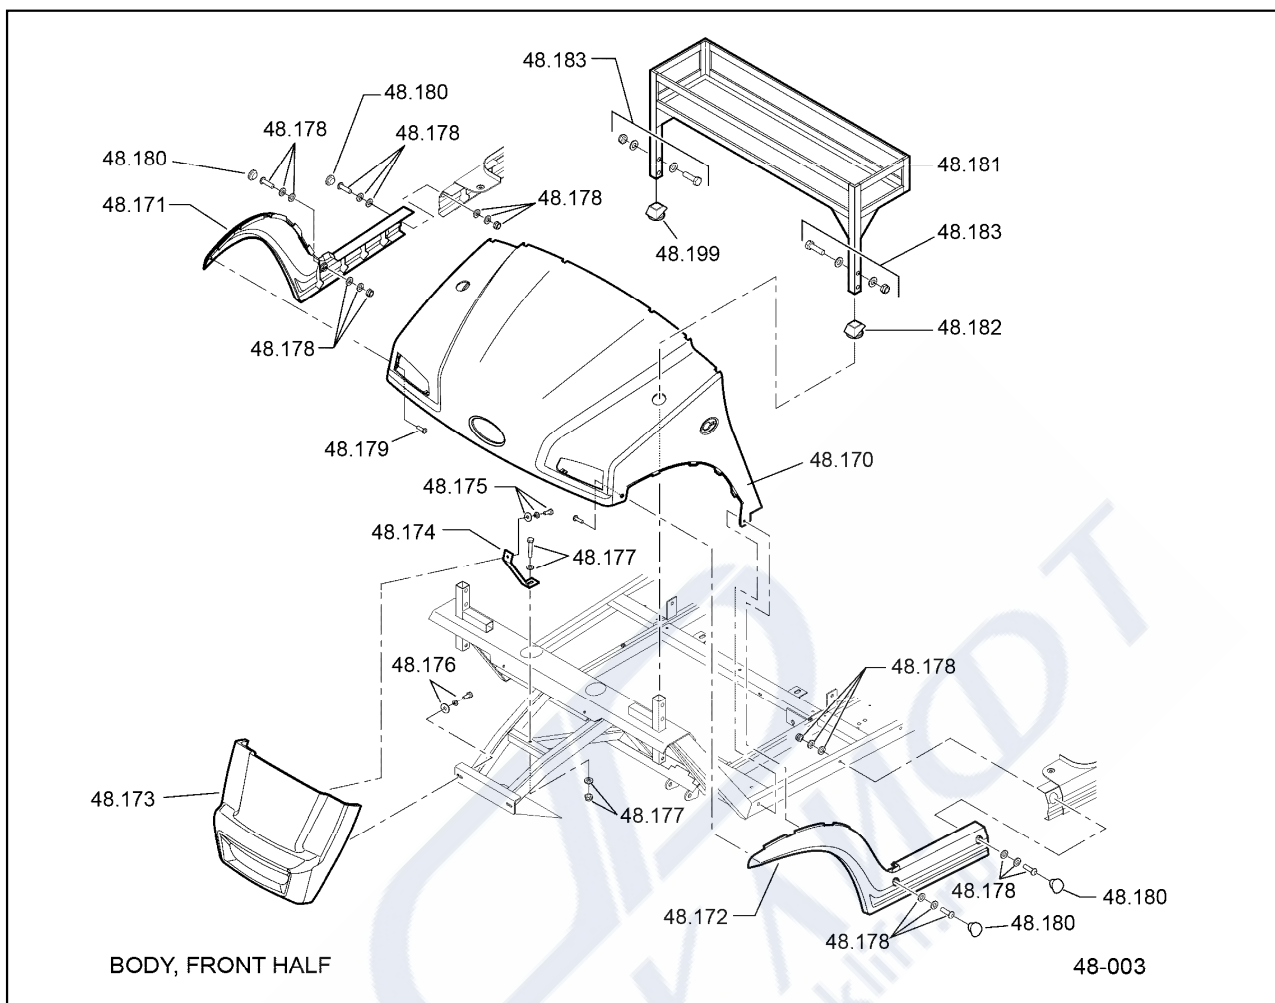 

- 48.170 FRONT BODY, BURDEN CARRIER
프런트바디
- 48.171 TRIM, BURDEN CARRIER PASSENGER SIDE
트림
- 48.172 TRIM, BURDEN CARRIER DRIVERS SIDE
트림
- 48.173 FRONT BUMPER, BURDEN CARRIER
프런트범퍼
- 48.174 BRACKET, BURDEN CARRIER FRONT BUMPER MOUNTING
브라켓
- 48.175 FASTENER, BURDEN CARRIER FRONT BUMPER BRACKET
패스너
- 48.176 FASTENER, BURDEN CARRIER FRONT BUMPER
패스너
- 48.177 FASTENER, BURDEN CARRIER FRONT BUMPER BRACKET
패스너
- 48.178 FASTENER, BURDEN CARRIER TRIM
패스너


48.179	FASTENER, BURDEN CARRIER TRIM 패스너
48.180	PLUG, BURDEN CARRIER TRIM 플러그
48.181	BASKET, BURDEN CARRIER 바스켓
48.182	GROMMET, BURDEN CARRIER BASKET 그로멧
48.183	FASTENER, BURDEN CARRIER BASKET 패스너
48.199	GROMMET, BURDEN CARRIER BASKET 그로멧

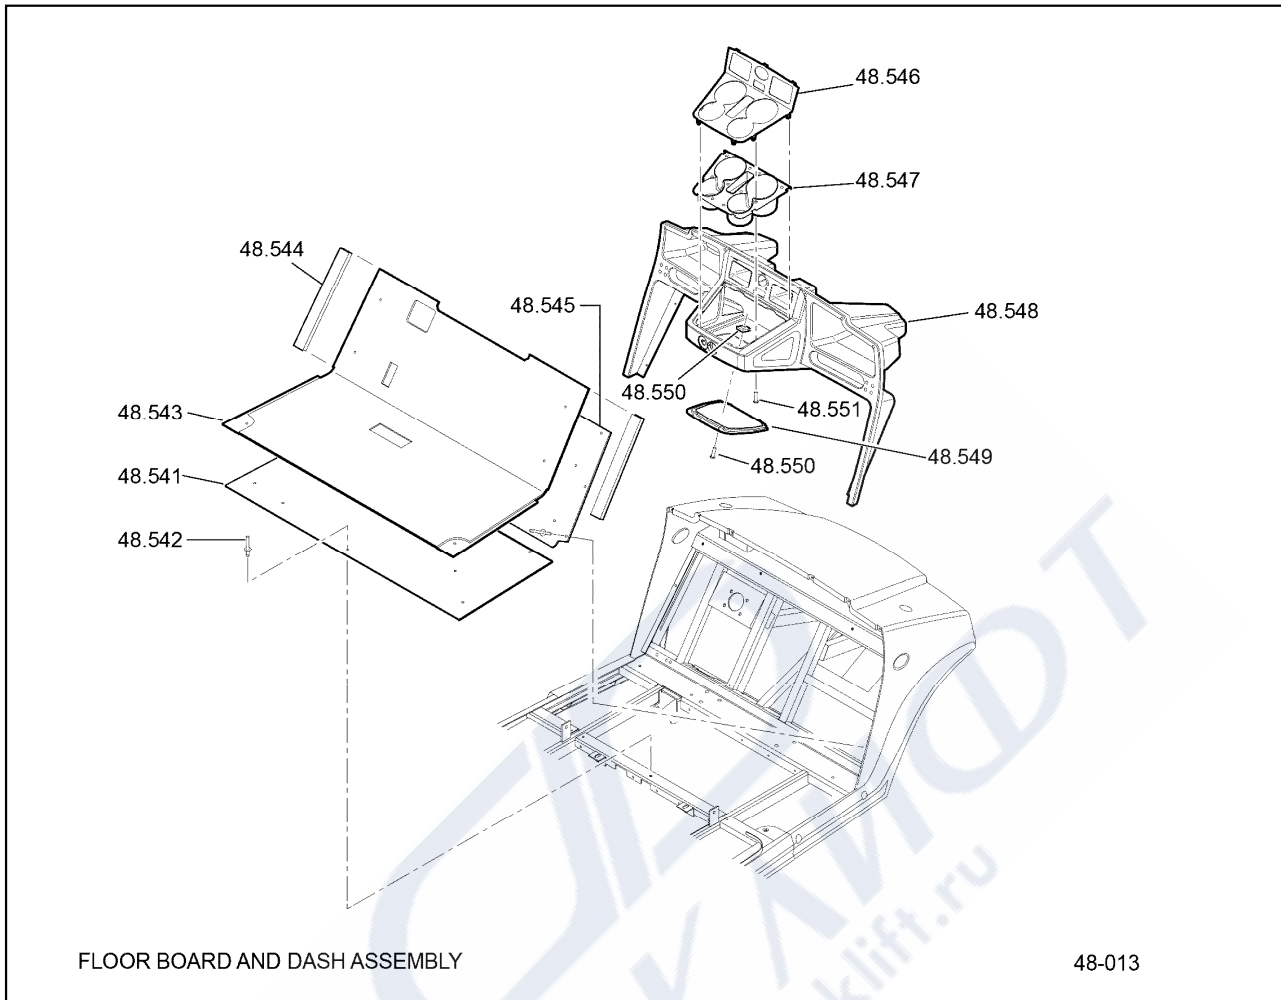 

- 48.541 FLOORPLATE, BURDEN CARRIER
플로어플레이트
- 48.542 FASTENER, BURDEN CARRIER FLOORPLATE
패스너
- 48.543 FLOORMAT, BURDEN CARRIER
플로어매트
- 48.544 SIDE TRIM, BURDEN CARRIER FLOORMAT
사J絹樣?
- 48.545 PLATE, BURDEN CARRIER FRONT FLOOR
플레이트
- 48.546 COVER, BURDEN CARRIER CUP HOLDER
커버
- 48.547 CUP HOLDER, BURDEN CARRIER
컵홀더
- 48.548 DASH ASSEMBLY, BURDEN CARRIER
대시어셈블리
- 48.549 COVER, BURDEN CARRIER DASH ASSEMBLY
커버

48.550	FASTENER, BURDEN CARRIER DASH COVER 패스너
48.551	FASTENER, BURDEN CARRIER CUP HOLDER TRIM 패스너




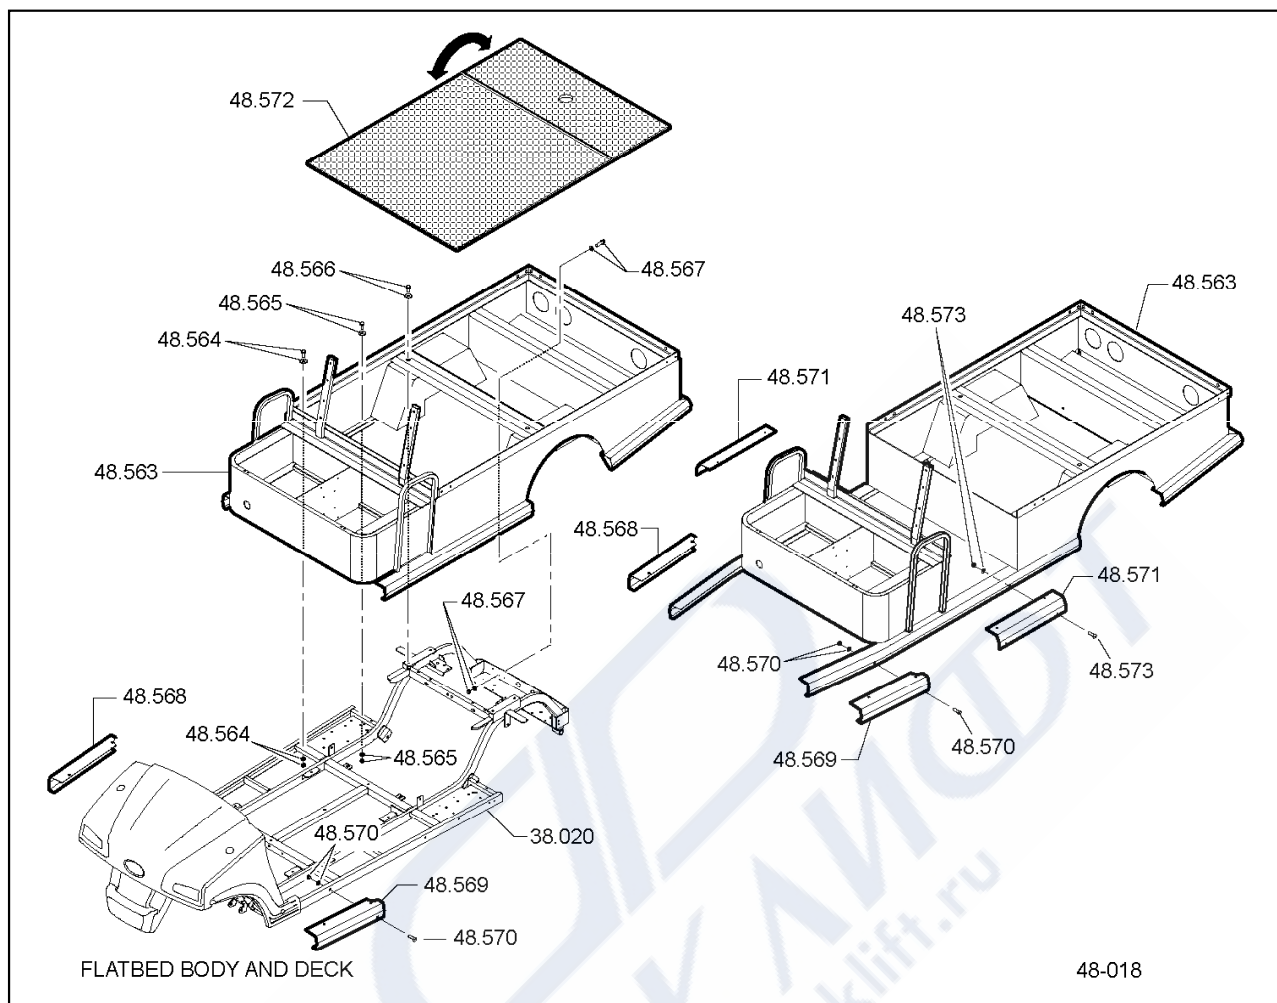 


38.020	FRAME ASSEMBLY 프레임
48.563	BODY, BURDEN CARRIER FLATBED *
48.564	FASTENER, FLATBED BODY TO FRAME *
48.565	FASTENER, FLATBED BODY TO FRAME *
48.566	FASTENER, FLATBED BODY TO FRAME *
48.567	FASTENER, FLATBED BODY TO FRAME *
48.568	TRIM, FLATBED PASSENGER SIDE *
48.569	TRIM, FLATBED DRIVERS SIDE *
48.570	FASTENER, FLATBED SIDE TRIM *

48.571	TRIM, FLATBED SIDE *
48.572	BED, FLATBED CARGO AREA *
48.573	FASTENER, FLATBED SIDE TRIM *



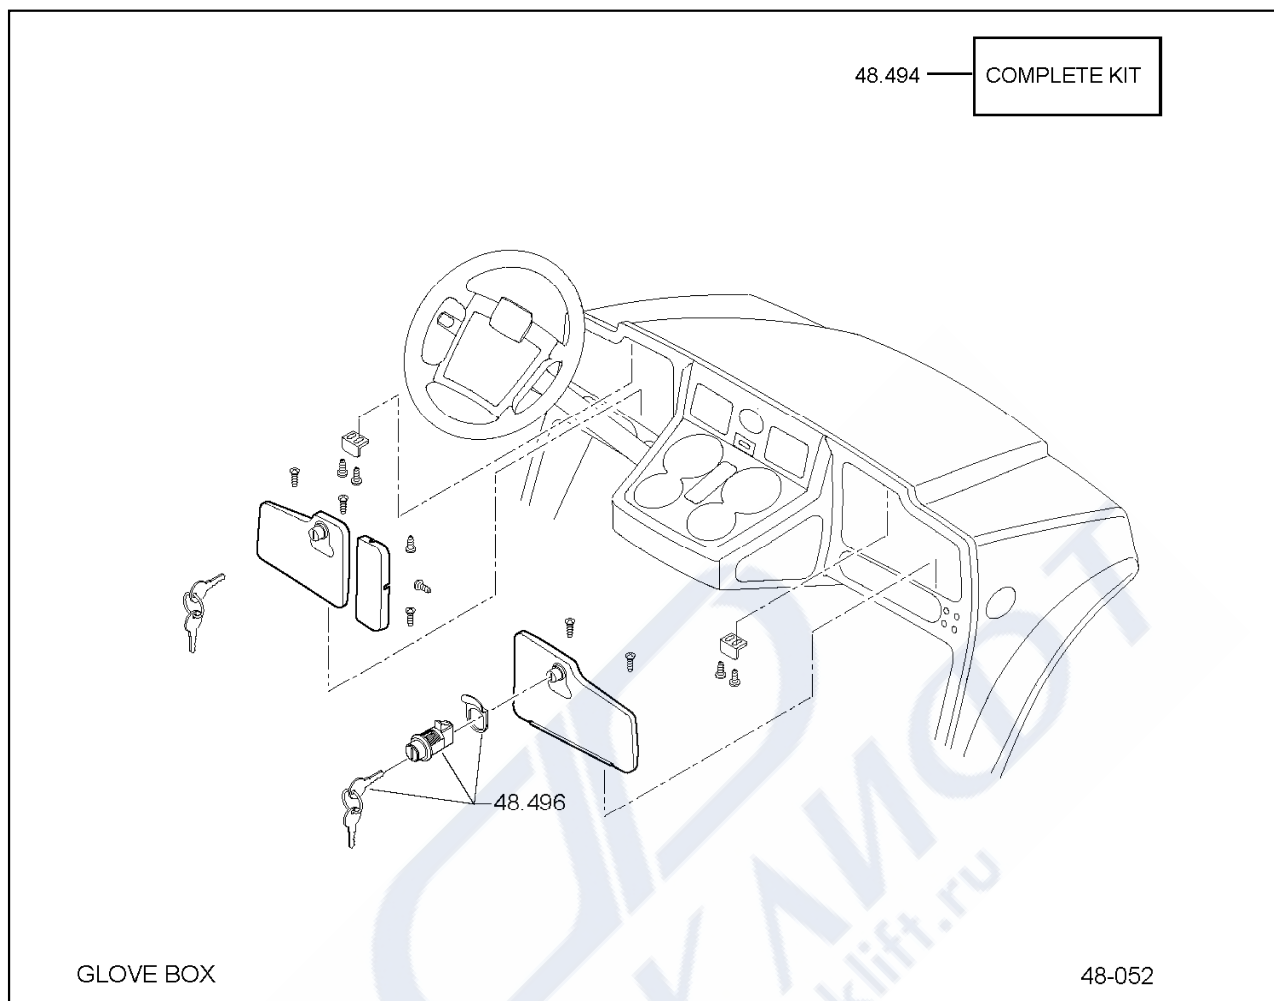 


 - 48.494 KIT, BURDEN CARRIER GLOVE BOX
키트
- 48.496 LOCK ASSEMBLY, BURDEN CARRIER GLOVE BOX
로크어셈블리

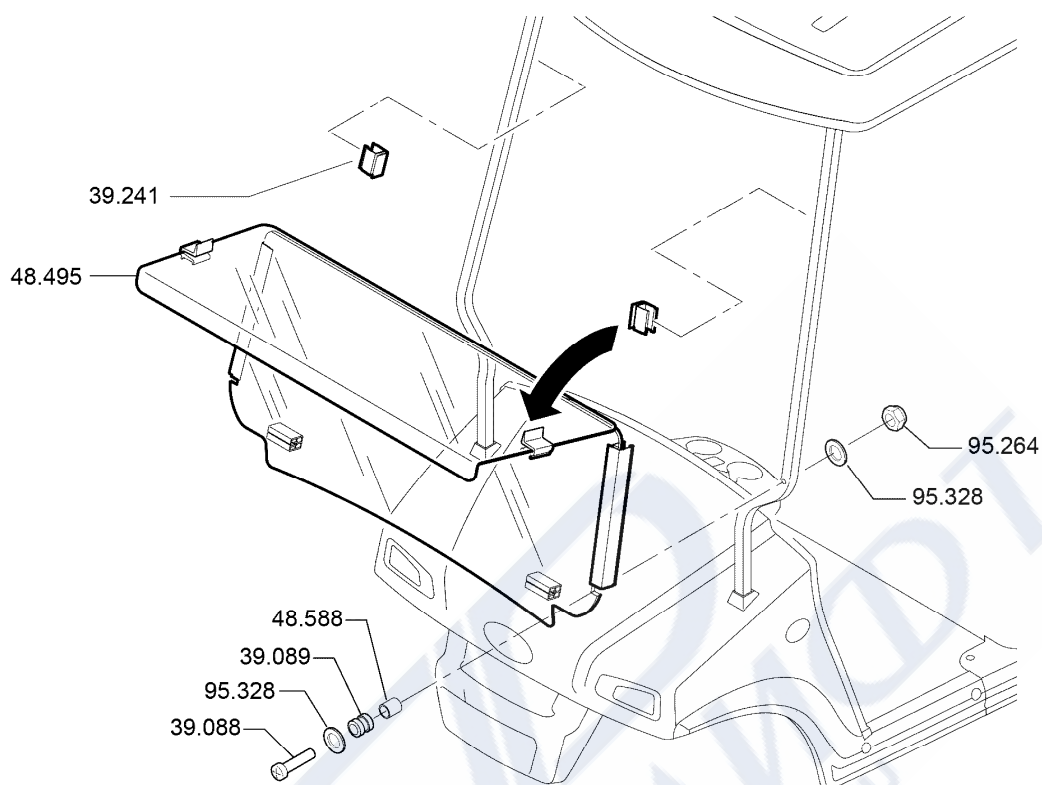

WINDSHIELD, FOLD DOWN

 
48-054

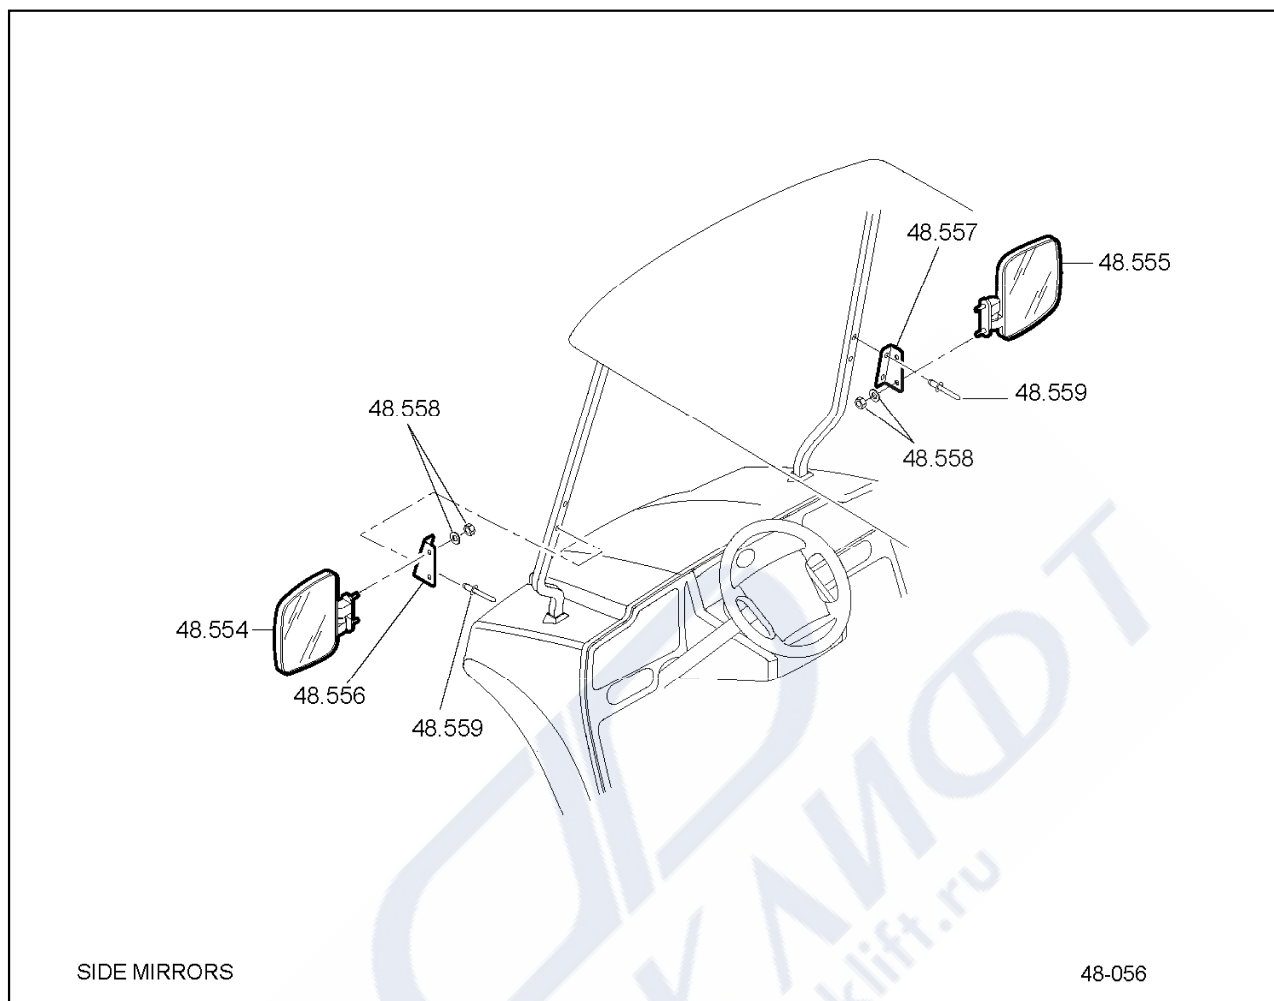


SIDE MIRRORS

48-056

- | | |
|--------|---|
| 48.554 | MIRROR, DRIVERS SIDE VIEW
미러 |
| 48.555 | MIRROR, PASSENGERS SIDE VIEW
미러 |
| 48.556 | BRACKET, DRIVERS SIDE VIEW MIRROR
브라켓 |
| 48.557 | BRACKET, PASSENGERS SIDE VIEW MIRROR
브라켓 |
| 48.558 | FASTENER, SIDE VIEW MIRROR
패스너 |
| 48.559 | FASTENER, SIDE VIEW MIRROR BRACKET
패스너 |

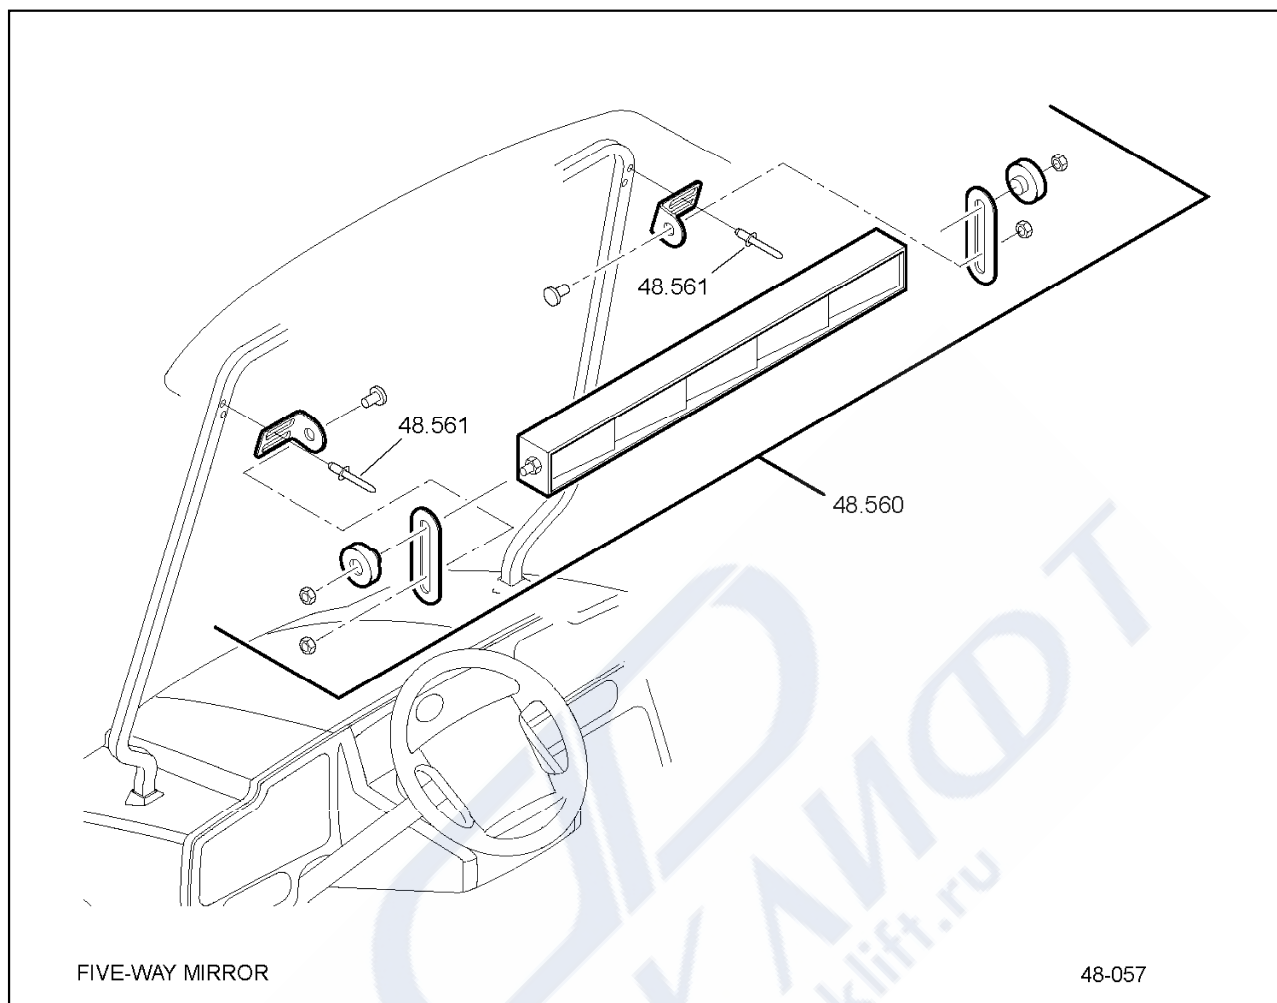 


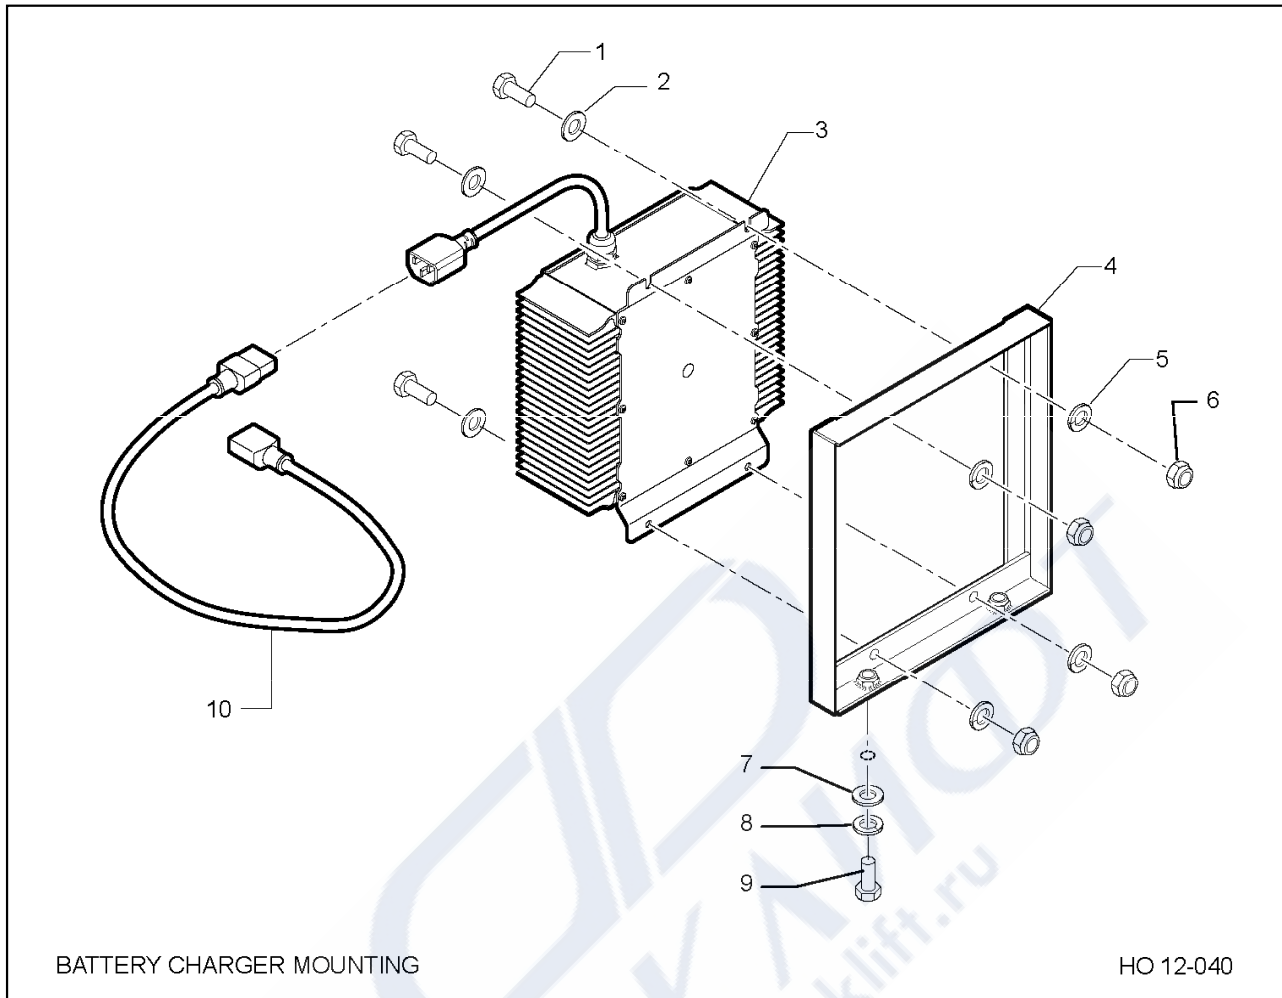 

1	01CM00616	CAPSCREW 캡스크류	4
2	01EM00060	WASHER-PLAIN 와셔-플레인	4
3	2829527	BATTERY CHARGER 배터리 충전기	1
4	2829528	BRACKET 브라켓	1
5	17EM00060	WASHER-PLAIN 와셔-플레인	4
6	40DM00006	NUT-FLANGED 너트-플랜지	4
7	01EM00080	WASHER-PLAIN 와셔-플레인	2
8	06EM00080	WASHER-LOCK 와셔-로크	2
9	01CM00830	CAPSCREW 캡스크류	2

10	2829524	CORD - A.C. POWER 코드 - AC 파워	1
10	2829898	CORD - A.C. POWER 코드 - AC 파워	1
10	2829899	CORD - A.C. POWER 코드 - AC 파워	1

 ФОРКЛИФТ
www.forklift.ru

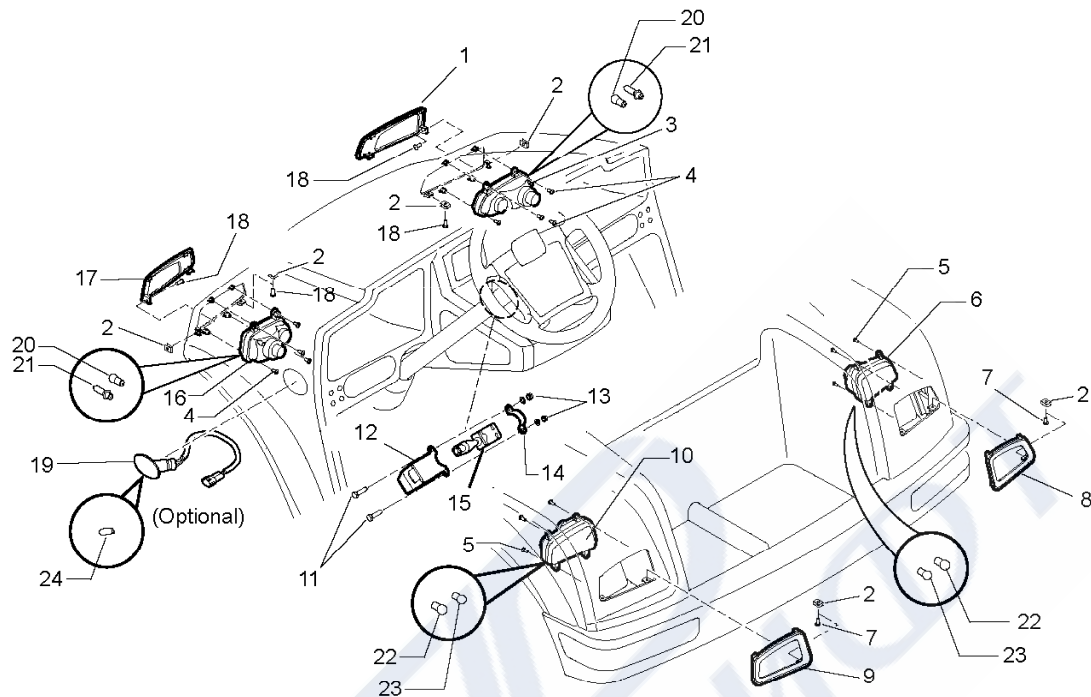


LIGHTS

HO 13-400A

- | | |
|----|---|
| 1. | CAP, CRANKCASE BEARING
캡 |
| 2. | * |
| 3. | * |
| 4. | * |
| 5. | * |
| 6. | * |
| 7. | BALANCER, ENGINE CRANKSHAFT HARMONIC
발란서 |
| 8. | COVER, DRAIN PORT
커버 |
| 9. | GASKET, DRAIN PORT COVER
가스켓 |


HO 13-400A (1)

-
- | | |
|-----|--|
| 10. | SHORT ENGINE ASSEMBLY
숏엔진 |
| 11. | CRANKCASE
크랭크케이스 |
| 12. | SHORT BLOCK ASSEMBLY (R)
숏블록 |
| 13. | NUT, CRANKCASE VENTILATION LINE ADAPTOR
너트 |
| 13. | NUT, CRANKCASE VENTILATION LINE ADAPTOR
너트 |
| 14. | ADAPTOR, CRANKCASE VENTILATION LINE
어댑터 |
| 15. | SUPPORT, ENGINE FRONT
서포트 |
| 16. | BUSHING, ENGINE FRONT SUPPORT DAMPENER
부싱 |
| 17. | BRACKET, ENGINE FRONT SUPPORT
브라켓 |
| 18. | BEARING, ENGINE FRONT SUPPORT BRACKET
베어링 |
| 19. | FASTENER, ENGINE FRONT SUPPORT BRACKET
패스너 |
| 20. | COVER, CRANKCASE ACCESS HOLE
커버 |
| 21. | BUSHING, ENGINE REAR DAMPENER RH
부싱 |
| 22. | BUSHING, ENGINE DAMPENER LH
부싱 |
| 23. | FASTENER, ENGINE FRONT VIBRATION DAMPENER
패스너 |
| 24. | LINE, CRANKCASE VENTILATION
라인 |
-

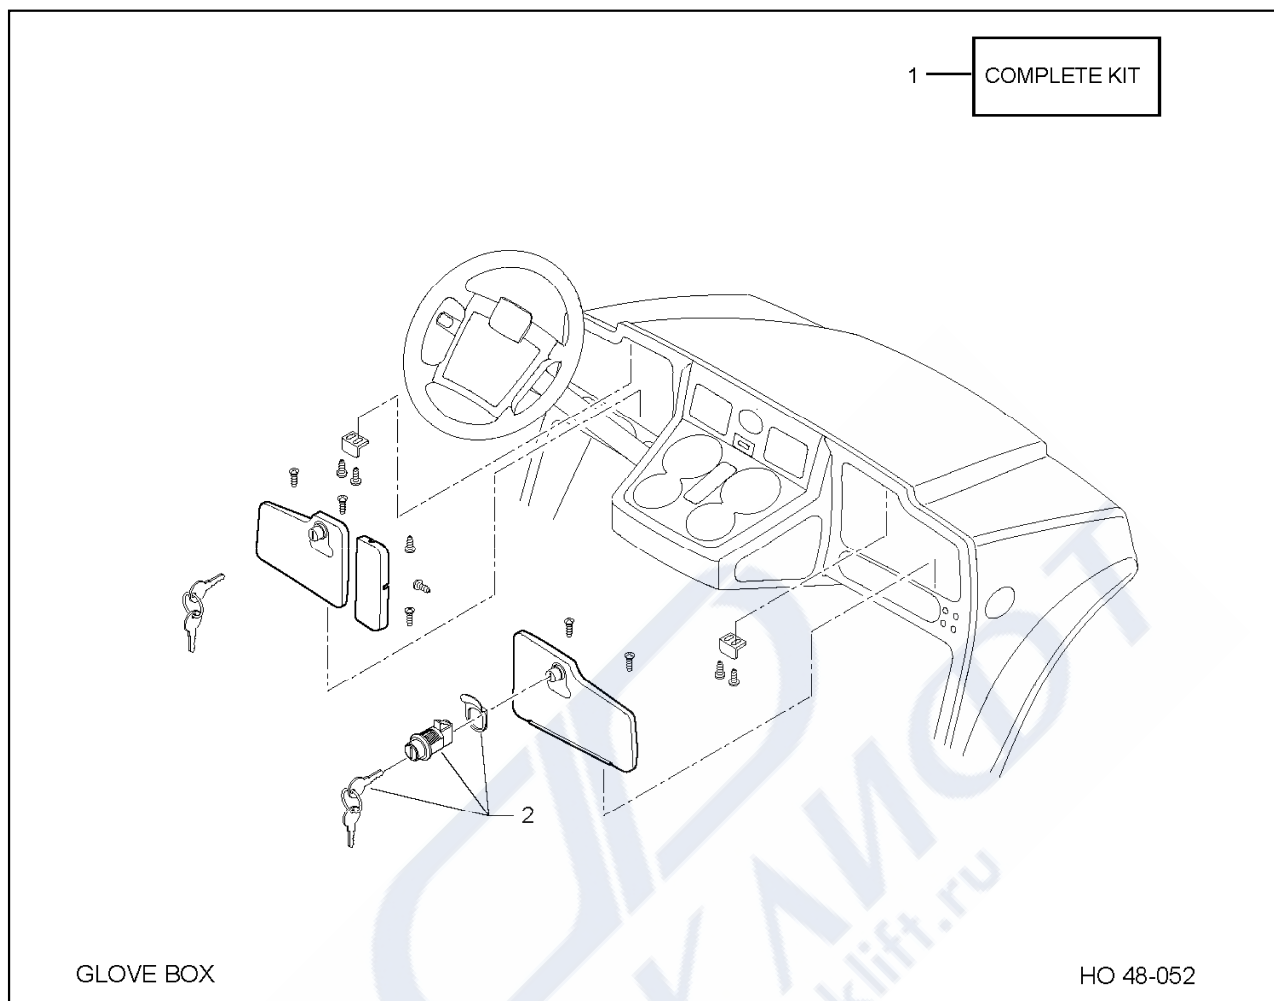 

1. CAP, CRANKCASE BEARING
캡

 
2. *

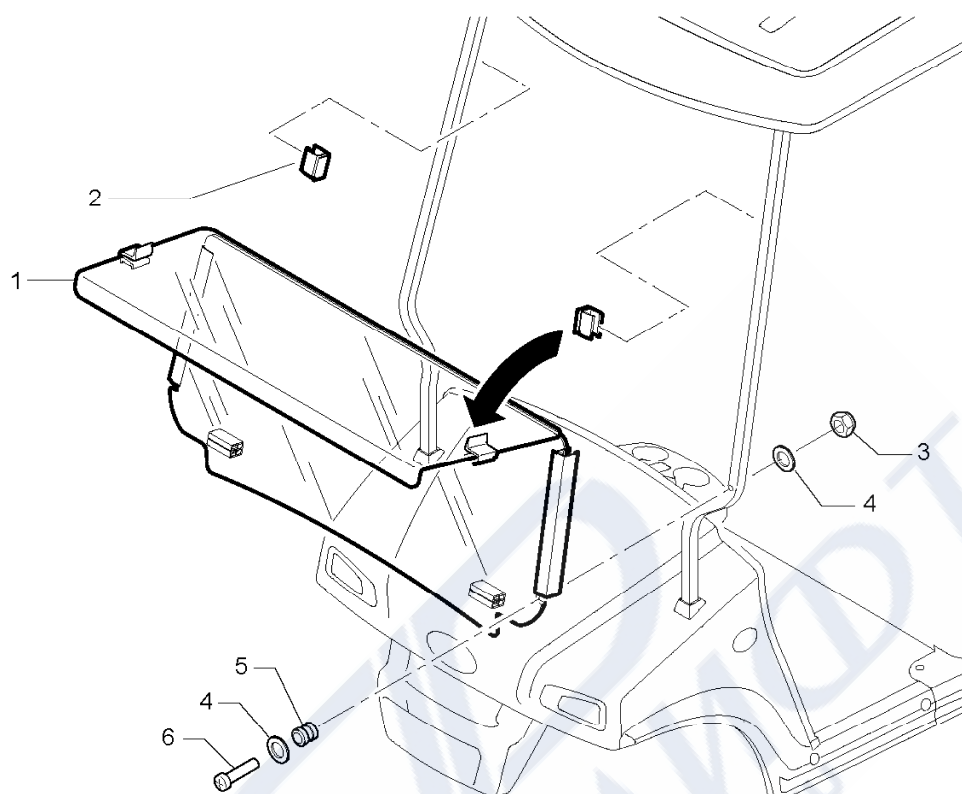

WINDSHIELD, FOLD DOWN

HO 48-054

 
HO 48-054A (1)

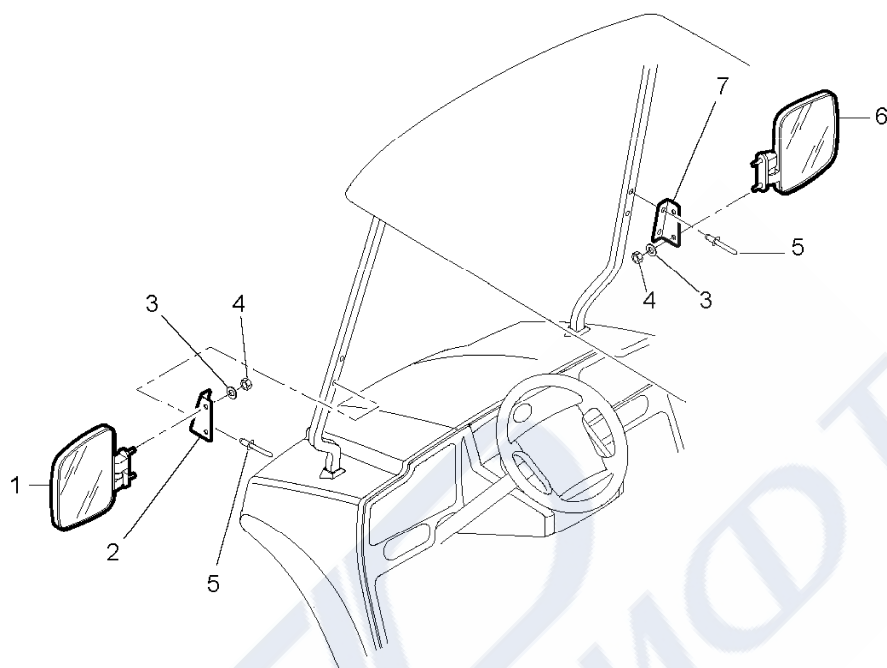

SIDE MIRRORS

HO 48-056A

- | | |
|----|---|
| 1. | CAP, CRANKCASE BEARING
캡 |
| 2. | * |
| 3. | * |
| 4. | * |
| 5. | * |
| 6. | * |
| 7. | BALANCER, ENGINE CRANKSHAFT HARMONIC
발란서 |

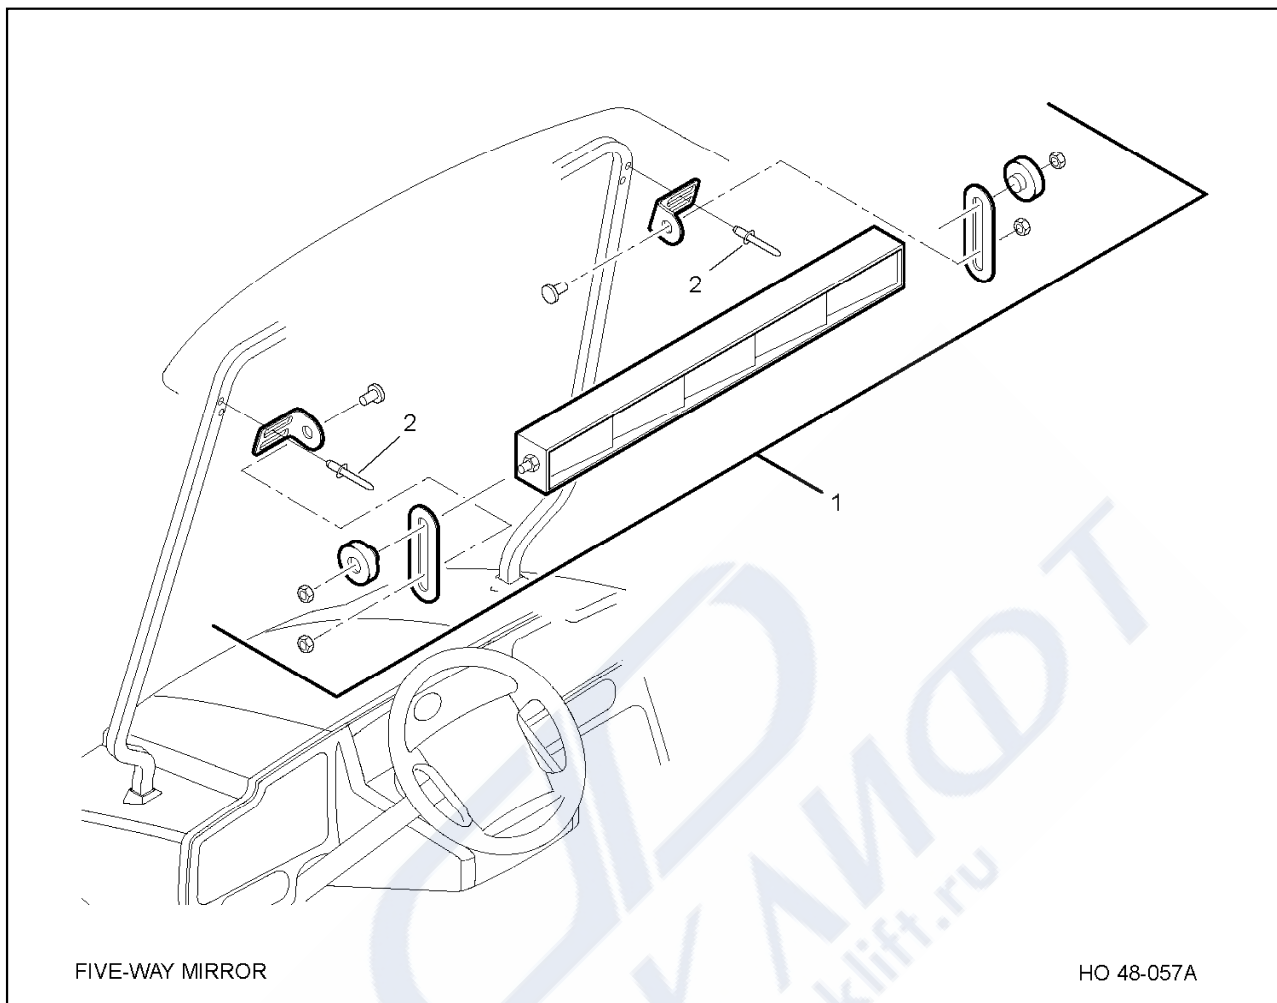 


1	2829798	REAR VIEW MIRROR 후방 미러	1
2	2829763	POP RIVIT 리벳 팝	4

TRX (트랜스포트)

Lot No ; 9929


02-436	ACCELERATOR CONTROL MOUNTING 악셀레이터 컨트롤 마운팅
12-040	BATTERY CHARGER 배터리 충전기
12-199	BATTERY INSTALLATION 배터리 조립그림
12-269	BATTERY MOUNTING 배터리 마운팅
13-366	ELECTRICAL COMPONENTS MOUNTING 전기장치 구성품 마운팅
13-400	LIGHTS 라이트
14-870	WIRING HARNESS 와이어링 하네스
16-182	DRIVE MOTOR ASSEMBLY 드라이브 모터 어셈블리
16-183	DRIVE MOTOR MOUNTING 드라이브 모터 어셈블리
20-282	DIFFERENTIAL & DRIVE AXLE 디퍼렌셜& 드라이브 액슬
20-286	SUSPENSION SYSTEM, REAR 서스펜션 시스템 (리어)
22-108	BRAKE ASSEMBLY 브레이크 어셈블리
22-224	TIRE & WHEEL MOUNTING 타이어& 휠 마운팅
23-524	BRAKE PDEAL & LINKAGE 브레이크 페달& 링크케이지
23-563	BRAKE MOUNTING 브레이크 마운팅
25-379	STEERING GEAR MOUNTING 스티어링 기어 마운팅
26-223	STEER AXLE MOUNTING 스티어링 액슬 마운팅
26-227	STEER AXLE 스티어링 액슬
48-003	BODY, FRONT HALF 바디 프론트 하프
48-004	BODY, REAR HALF 바디 리어 하프
48-010	SEAT MOUNTING 시트 마운팅
48-011	FLIP FLOP SEAT MOUNTING 플립 플롭 시트 마운팅
48-013	FLOOR BOARD AND DASH ASSEMBLY 플로어 보드& 대시 어셈블리
48-052	GLOVE BOX 글러브 박스
48-054	WINDSHIELD MOUNTING 윈드실드 마운팅
48-056	SIDE MIRRORS 사이드 미러
HO 12-040A	BATTERY CHARGER 배터리 충전기
HO 12-269A	BATTERY MOUNTING 배터리 마운팅
HO 13-400A	LIGHTS 라이트
HO 48-052A	GLOVE BOX 글러브 박스
HO 48-054A	WINDSHIELD MOUNTING 윈드실드 마운팅
HO 48-056A	SIDE MIRRORS 사이드 미러

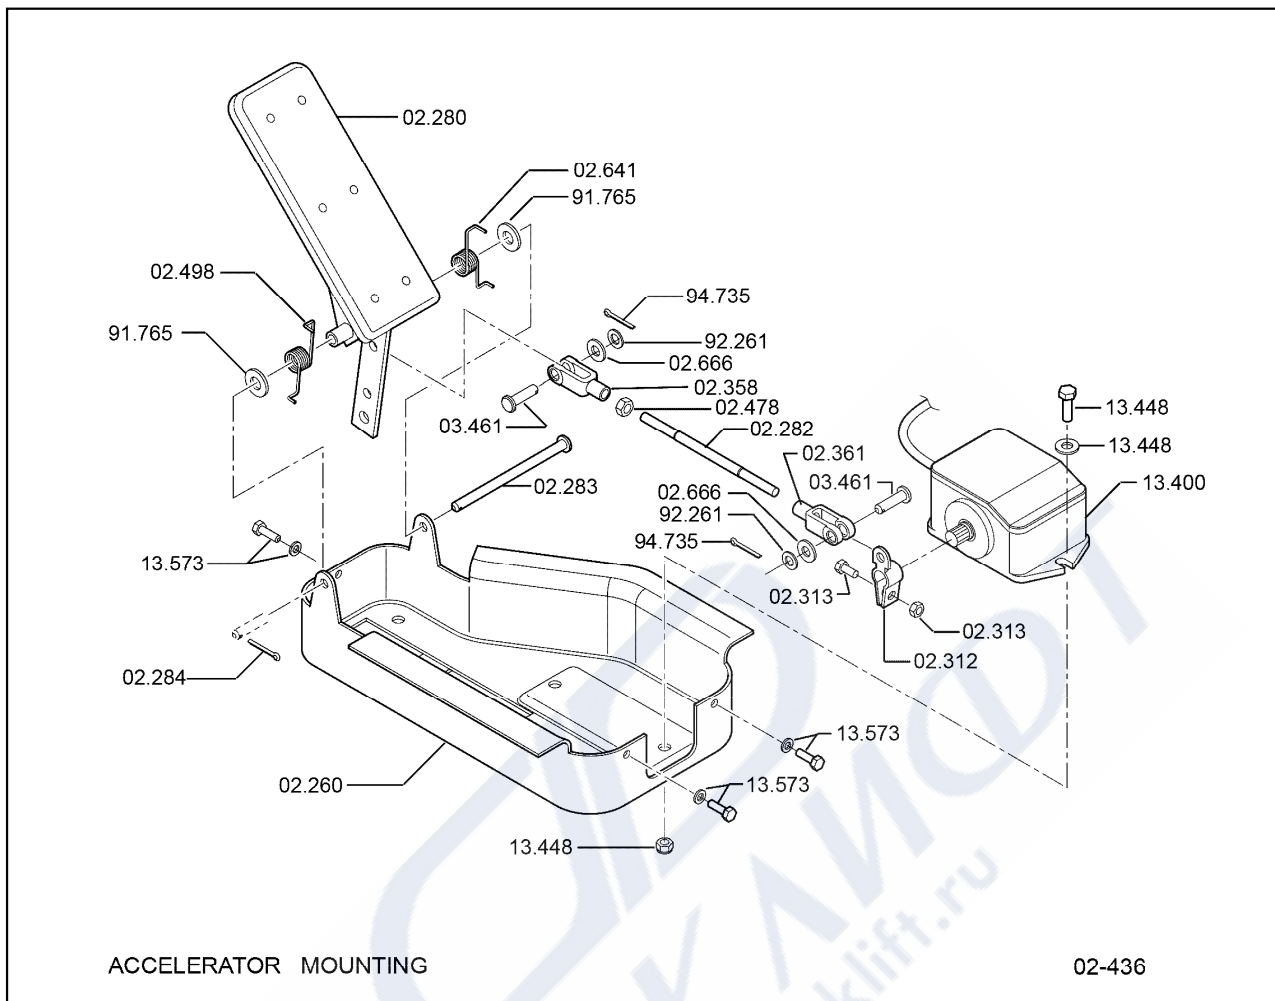 

02.260	BRACKET, ACCELERATOR LINKAGE MOUNTING 브라켓
02.280	PEDAL, ACCELERATOR 페달
02.282	ROD, ACCELERATOR PUSH 로드
02.283	PIN, ACCELERATOR PEDAL TO BRACKET PIVOT 핀
02.284	FASTENER, PEDAL TO BRACKET PIVOT PIN 패스너
02.312	LEVER, ACCELERATOR LINKAGE 레버
02.313	FASTENER, ACCELERATOR LINKAGE LEVER 패스너
02.358	CLEVIS, ACCELERATOR ROD PEDAL END 클레비스
02.361	CLEVIS, ACCELERATOR ROD LINK END 클레비스

02.478	NUT, ACCELERATOR CONTROL ROD 너트
02.498	SPRING, ACCELERATOR RETURN 스프링
02.641	SPRING, ACCELERATOR RETURN 스프링
02.666	SPACER, ACCELERATOR LEVER ROD 스페이서
03.461	PIN, ACCELERATOR CONTROL ROD END 핀
13.400	CONTROL ASSEMBLY, ACCELERATING 컨트롤
13.448	FASTENER, ACCELERATING CONTROL ASSEMBLY 패스너
13.573	FASTENER, ACCELERATOR CONTROL ASSY MOUNTING BRACKE 패스너
91.765	WASHER, ACCELERATOR PIN RETAINER 와셔
92.261	WASHER, ACCELERATOR CONTROL ROD END FASTENER 와셔
94.735	RETAINER, ACCELERATOR CONTROL ROD END PIN 리테이너



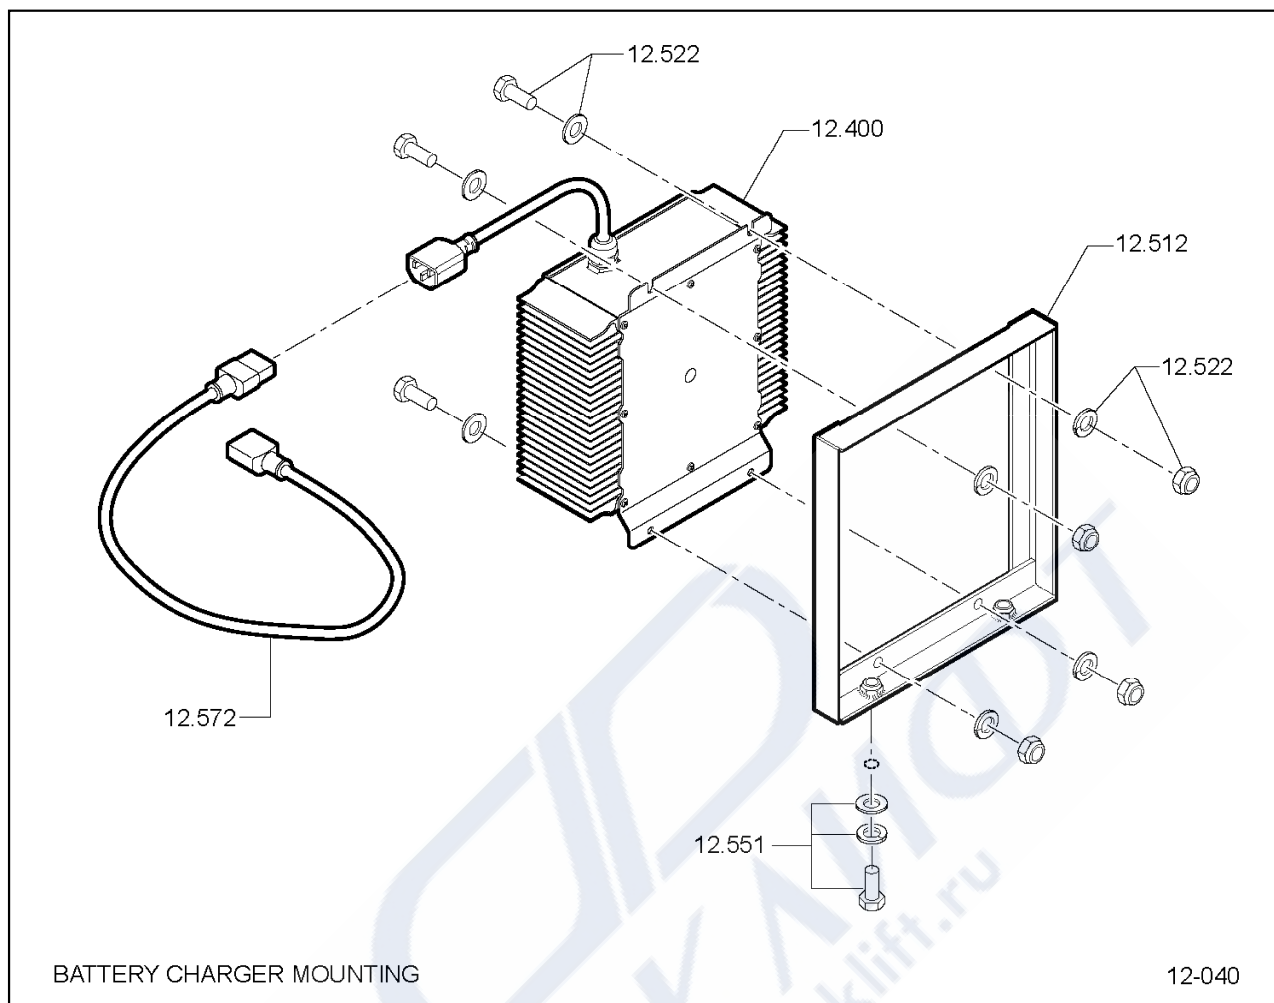 

12.400 BATTERY CHARGE ASSEMBLY
배터리

12.512

*

12.522

 
*

12.551

*

12.572

*

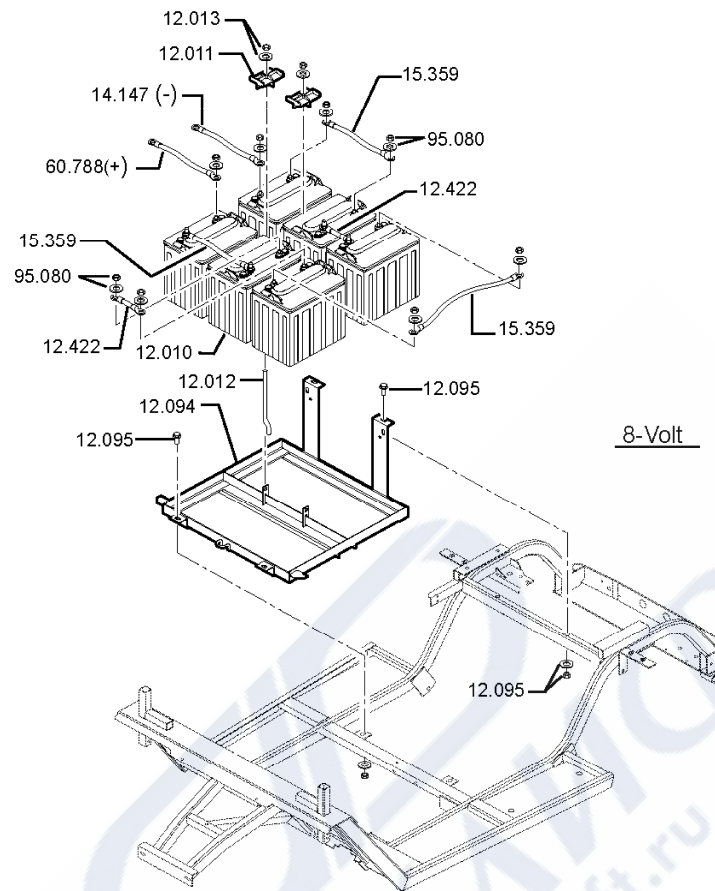


BATTERY INSTALLATION

12-199

12.010	BATTERY 배터리
12.011	CLAMP, BATTERY HOLD DOWN 클램프
12.012	STUD, BATTERY HOLD DOWN 스터드
12.013	FASTENER, BATTERY HOLD DOWN (AT CLAMP) 패스너
12.094	BRACKET, BATTERY SUPPORT 브라켓
12.095	FASTENER, BATTERY SUPPORT BRACKET 패스너
12.422	CABLE, BATTERY TO BATTERY 케이블
14.147	CABLE, BATTERY NEGATIVE 케이블
15.359	CABLE, BATTERY TO BATTERY 케이블


60.788	CABLE, BATTERY POSTIVE 케이블
95.080	FASTENER, BATTERY CABLE 패스너



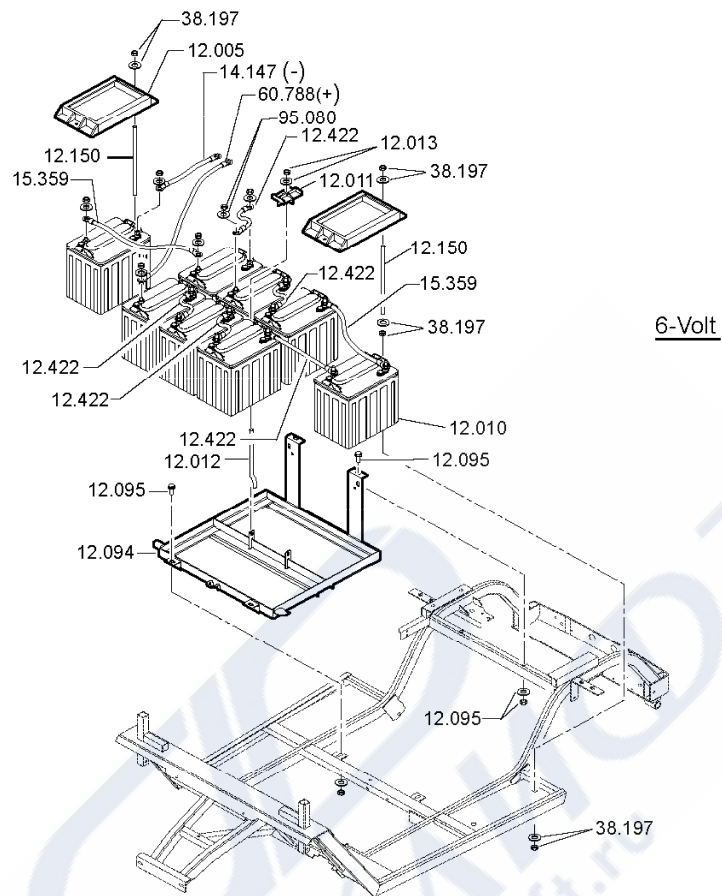 


BATTERY INSTALLATION

 12-269

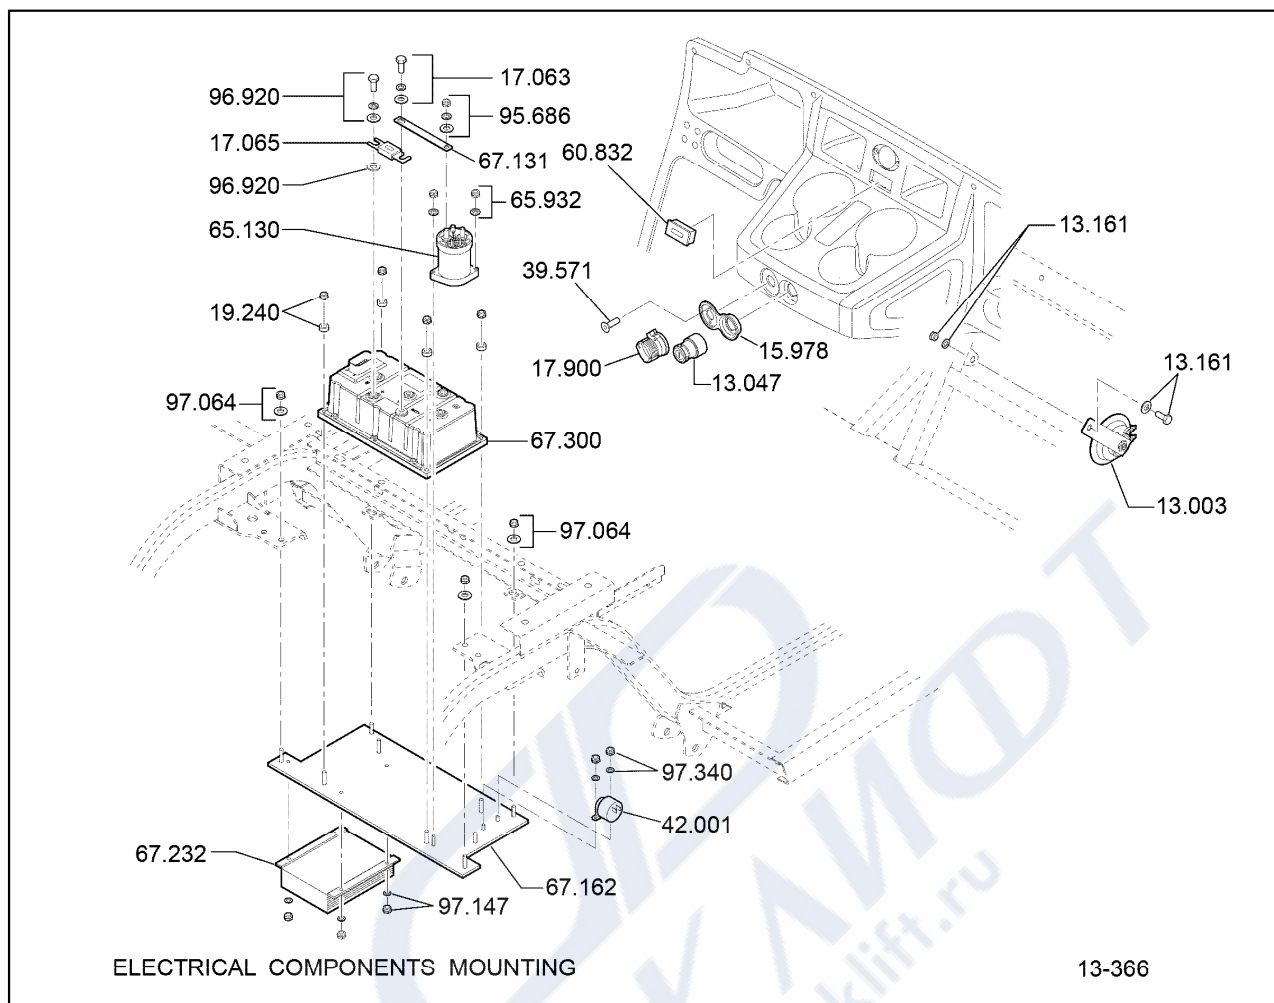

13.003	HORN 호른
13.047	SWITCH, CIRCUIT LOCKING 스위치
13.161	FASTENER, HORN MOUNTING BRACKET 패스너
15.978	BEZEL, DASH PANEL 배젤
17.063	FASTENER, CONTROL PANEL FUSE TERMINAL 패스너
17.065	FUSE, CONTROL PANEL 퓨즈
17.900	SWITCH, DIRECTION CONTROL 스위치
19.240	FASTENER, CONTROL PANEL MOUNTING 패스너
39.571	FASTENER, DASH COVER 패스너

42.001	WARNING DEVICE, AUDIBLE (AIR OPER) 경고장치
60.832	GAGE, BDI 게이지
65.130	CONTACTOR ASSEMBLY, LINE 컨택터
65.932	FASTENER, LINE CONTACTOR 패스너
67.131	CONDUCTOR, POWER BASE #4 REC 컨덕터
67.162	PLATE, CONTROL PANEL MOUNTING 플레이트
67.232	CONVERTER DC TO DC FOR ACCESSORY 컨버터
67.300	CONTROLLER, TRACTION 컨트롤러
95.686	FASTENER, CONTROL PANEL LEAD 패스너
96.920	FASTENER, FUSE MOUNTING 패스너
97.064	FASTENER, CONTROLLER BRACKET MOUNTING 패스너
97.147	FASTENER, DC-DC CONVERTER FOR ACCESSORY 패스너
97.340	FASTENER, REVERSE ALARM 패스너

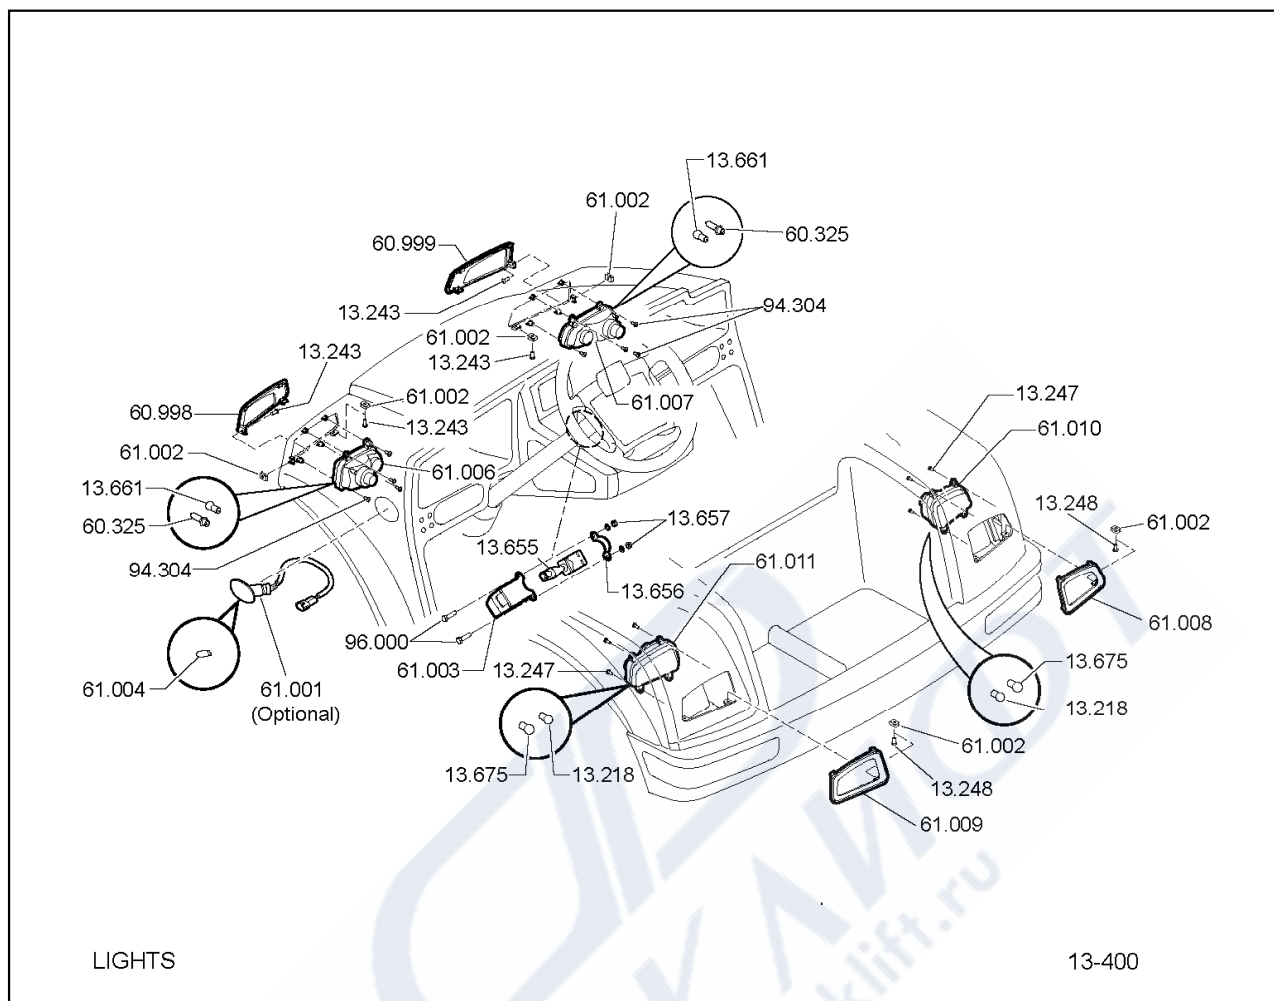 


LIGHTS

13-400

- | | |
|--------|--|
| 13.218 | BULB, STOP & TAIL LAMP
전구 |
| 13.243 | FASTENER, HEAD LAMP BRACKET
패스너 |
| 13.247 | FASTENER, TAIL LAMP ASSEMBLY
패스너 |
| 13.248 | FASTENER, TAIL LAMP HOUSING
패스너 |
| 13.655 | SWITCH, TURN INDICATOR
스위치 |
| 13.656 | BRACKET, TURN INDICATOR SWITCH
브라켓 |
| 13.657 | FASTENER, TURN INDICATOR SWITCH BRACKET
패스너 |
| 13.661 | BULB, TURN SIGNAL LIGHT
전구 |
| 13.675 | BULB, TURN LIGHT
전구 |


60.325	BULB, HEADLAMP 전구
60.998	BEZEL, HEADLAMP LH 배젤
60.999	BEZEL, HEADLAMP RH 배젤
61.001	LIGHT, SIDE MARKER 라이트
61.002	FASTENER, SPEED NUT 패스너
61.003	HOUSING, TURN INDICATOR SWITCH 하우징
61.004	BULB, SIDE MARKER LIGHT 전구
61.006	HEADLAMP LH 헤드램프
61.007	HEADLAMP, RH 헤드램프
61.008	BEZEL, TAILLAMP RH 배젤
61.009	BEZEL, TAILLAMP LH 배젤
61.010	TAILLAMP RH 테일램프
61.011	TAILLAMP, LH 테일램프
94.304	FASTENER, HEADLAMP 패스너
96.000	FASTENER, TURN INDICATOR SWITCH 패스너

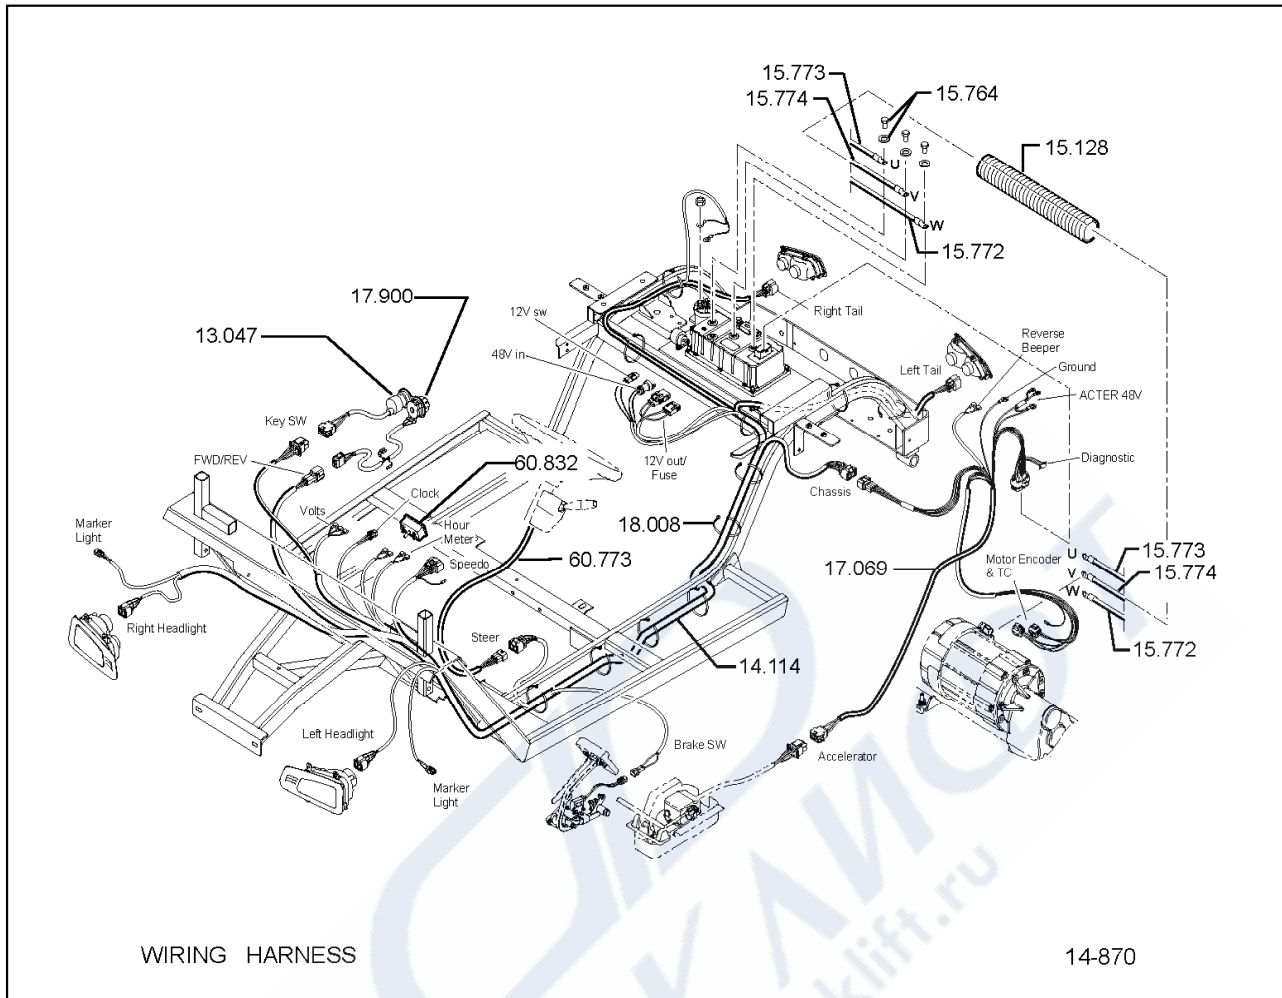 

13.047	SWITCH, CIRCUIT LOCKING 스위치
14.114	HARNESS, MACHINE WIRING 하네스
15.128	LOOM, BATTERY CABLE 룸
15.764	FASTENER, CABLE MOUNTING 패스너
15.772	CABLE, DRIVE MOTOR (TMVR TO TCWR) 케이블
15.773	CABLE, DRIVE MOTOR (TMUL TO TCUL) 케이블
15.774	CABLE, DRIVE MOTOR (TMVL TO TCVL) 케이블
17.069	HARNESS, CONTROL PANEL 하네스
17.900	SWITCH, DIRECTION CONTROL 스위치

18.008	CLIP, WIRING HARNESS 클립
60.773	HARNESS, TURN SIGNAL 하네스
60.832	GAGE, BDI 게이지

 ФОРКЛИФТ
www.forklift.ru

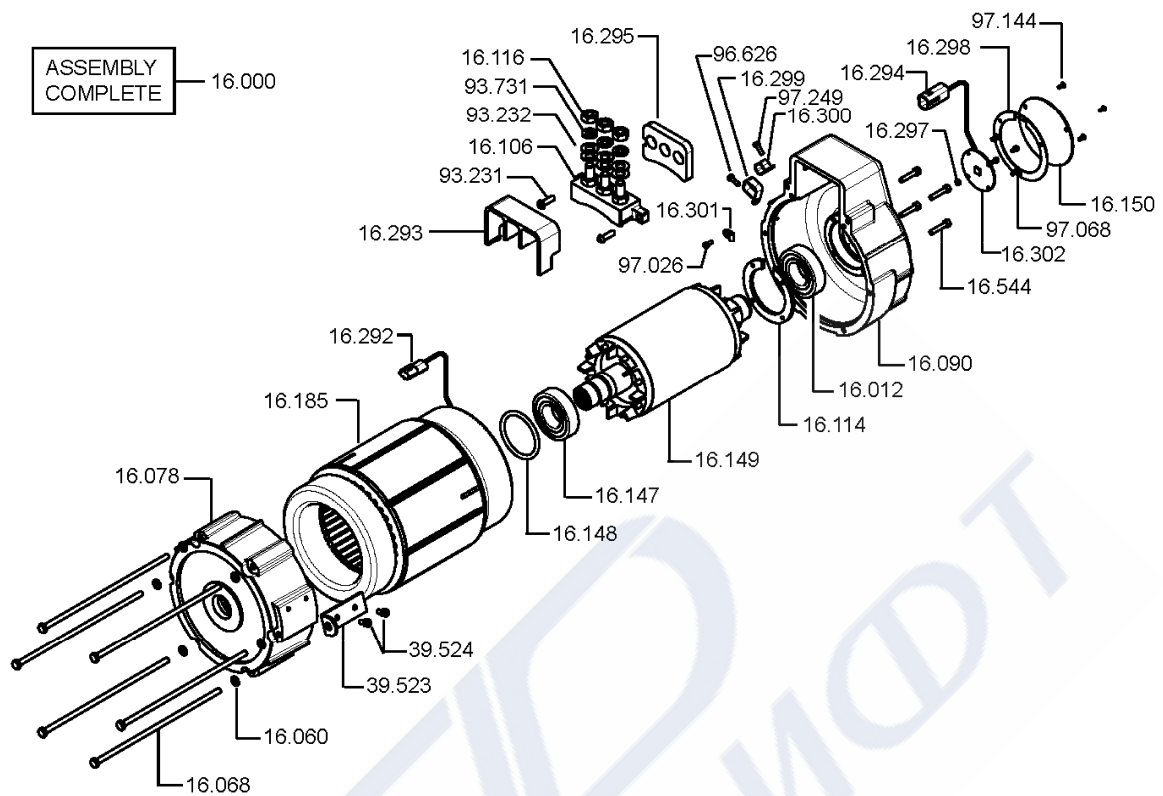

DRIVE MOTOR


16-182

16.000	MOTOR ASSEMBLY, DRIVE 모터	16.293	COVER, DRIVE MOTOR TERMINAL BLOCK 커버
16.012	BEARING, DRIVE MOTOR END 베어링	16.294	CONNECTOR, DRIVE MOTOR SPEED SENSOR 커넥터
16.060	WASHER, DRIVE END THRUST 와셔	16.295	INSULATOR, DRIVE MOTOR TERMINAL MOUNTING 절연체
16.068	FASTENER, DRIVE MOTOR END FRAME 패스너	16.297	MAGNET, DRIVE MOTOR SPEED SENSOR 마그넷
16.078	FRAME, DRIVE MOTOR DRIVE END 프레임	16.298	GASKET, DRIVE MOTOR END PLATE 가스켓
16.090	COVER, DRIVE MOTOR COMMUTATOR END 커버	16.299	CLAMP, DRIVE MOTOR SPEED SENSOR WIRING 클램프
16.106	TERMINAL BLOCK, DRIVE MOTOR 터미널블록	16.300	CLAMP, DRIVE MOTOR WIRING CONNECTOR 클램프
16.114	WASHER, DRIVE MOTOR DRIVE END THRUST 와셔	16.301	CLAMP, DRIVE MOTOR CABLE 클램프
16.116	FASTENER, DRIVE MOTOR TERMINAL 패스너	16.302	SPEED SENSOR, DRIVE MOTOR 스피드센서
16.147	SENSOR BEARING, DRIVE MOTOR ROTOR 센서베어링	16.544	FASTENER, COMMUTATOR END BEARING COVER 패스너
16.148	RING, DRIVE MOTOR ROTOR BEARING 링	39.523	BRACKET, DRIVE MOTOR SHIELD MOUNTING 브라켓
16.149	ROTOR, DRIVE MOTOR 로터	39.524	FASTENER, DRIVE MOTOR SHIELD 패스너
16.150	COVER, DRIVE MOTOR ROTOR END 커버	93.231	FASTENER, DRIVE MOTOR TERMINAL BLOCK 패스너
16.185	STATOR ASSY, DRIVE MOTOR 스테이터	93.232	WASHER, DRIVE MOTOR TERMINAL BLOCK FASTENER 와셔
16.292	CONNECTOR, DRIVE MOTOR THERMAL SENSOR 커넥터	93.731	NUT, DRIVE MOTOR FASTENER 너트

96.626	FASTENER, WIRING HARNESS CLAMP 패스너
97.026	FASTENER, CABLE BRACKET 패스너
97.068	FASTENER, DRIVE MOTOR SPEED SENSOR 패스너
97.144	FASTENER, DRIVE MOTOR ROTOR SENSOR PLATE COVER 패스너
97.249	FASTENER, SPEED SENSOR BRKT. 패스너



 
■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

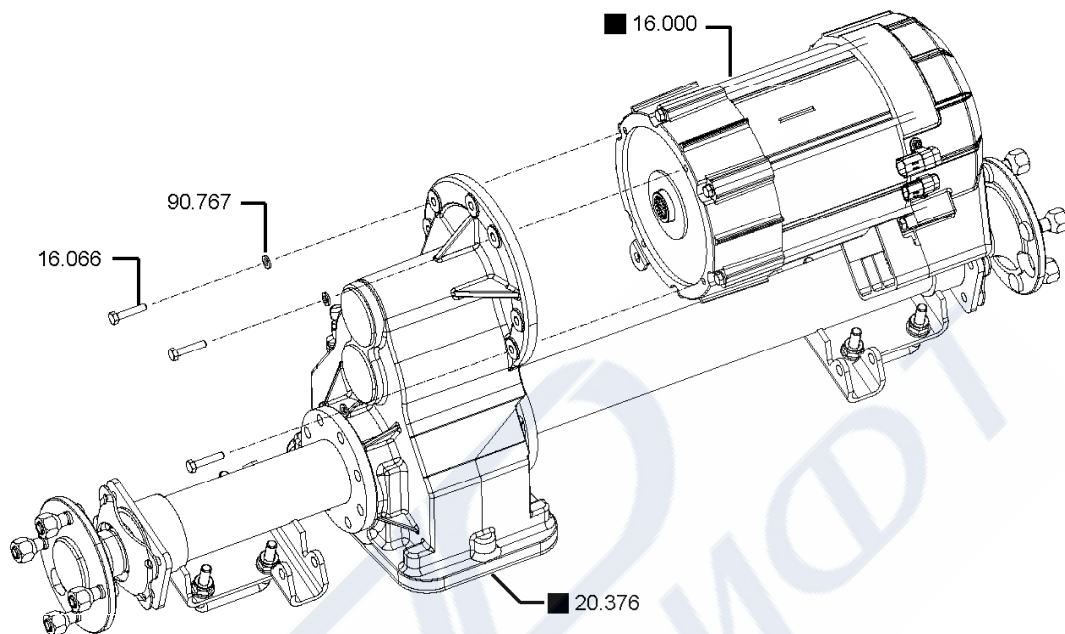

DRIVE MOTOR MOUNTING


16-183

16.000	MOTOR ASSEMBLY, DRIVE 모터
16.066	FASTENER, DRIVE MOTOR 패스너
20.376	AXLE ASSEMBLY, DRIVE 드라이브액슬
90.767	LOCKWASHER, DRIVE MOTOR FASTENER 로크와셔

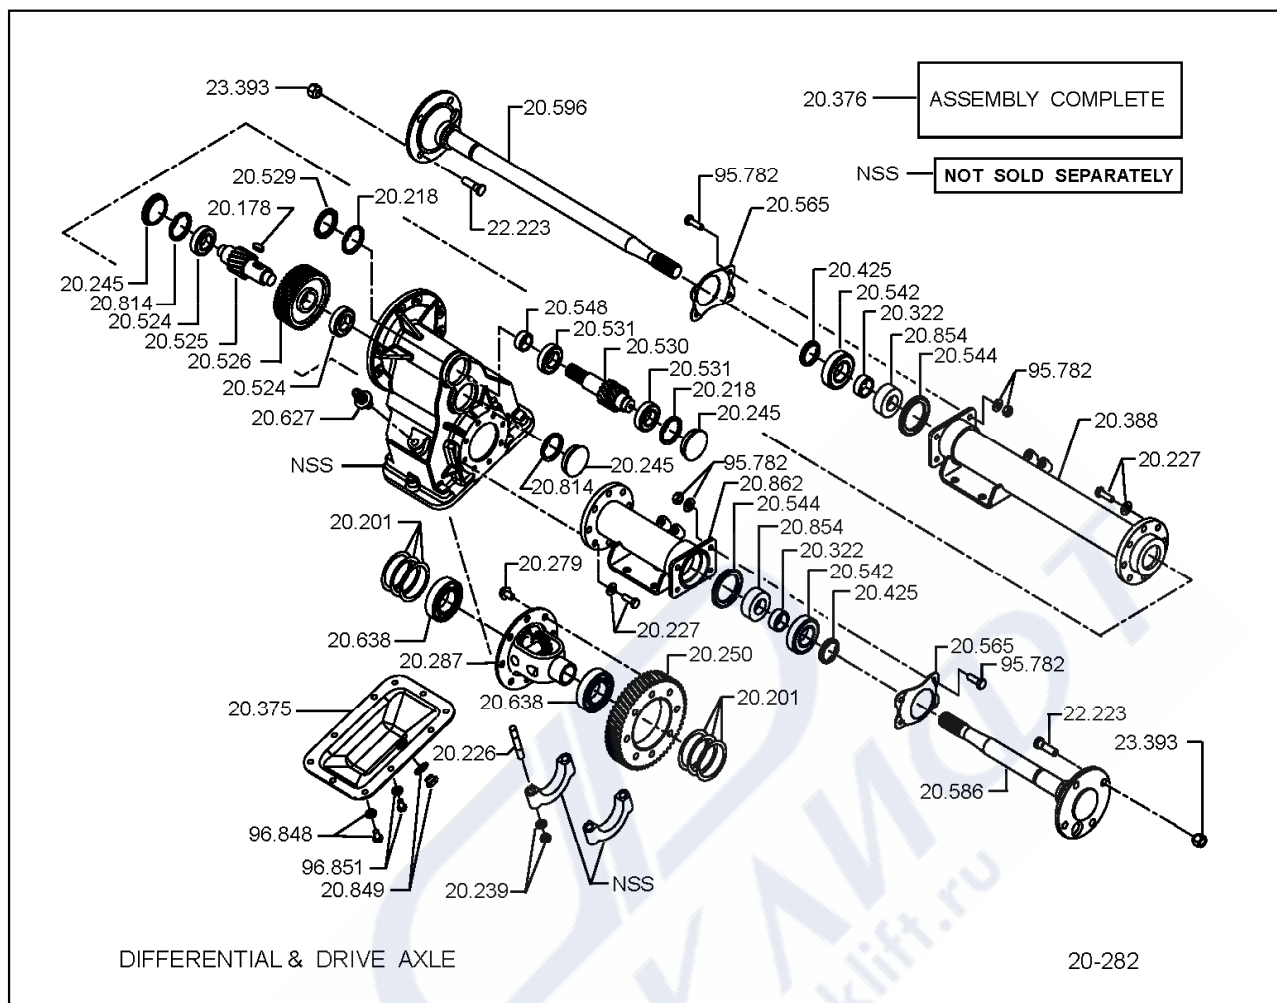 

20.178	KEY, INPUT SHAFT 키	20.524	BEARING, DRIVE AXLE INTERMEDIATE GEAR SHAFT 베어링
20.201	SHIM, DIFF BRG CARRIER TO AXLE HOUSING 심	20.525	SHAFT, DRIVE AXLE INTERMEDIATE GEAR 샤프트
20.218	RETAINER, DRIVE AXLE INPUT GEAR SHAFT BEARING IN 리테이너	20.526	GEAR, DRIVE AXLE INTERMEDIATE 기어
20.226	LOCATOR, DIFFERENTIAL PINION BEARING CARRIER 로케이터	20.529	SEAL, DRIVE AXLE INPUT GEAR SHAFT 씰
20.227	FASTENER, THICK FLANGE TO AXLE HOUSING 패스너	20.530	SHAFT, DRIVE AXLE INPUT GEAR 샤프트
20.239	FASTENER, DIFFERENTIAL PINION BEARING CARRIER 패스너	20.531	BEARING, DRIVE AXLE INPUT GEAR 베어링
20.245	COVER, DIFFERENTIAL ACCESS HOLE 커버	20.542	BEARING, DRIVE AXLE SHAFT 베어링
20.250	GEAR, DIFFERENTIAL DRIVEN 기어	20.544	SEAL, DRIVE AXLE SHAFT 씰
20.279	FASTENER, DIFFERENTIAL CASE TO RING GEAR 패스너	20.548	SLEEVE, DRIVE AXLE SHAFT 슬리브
20.287	CASE & GEAR ASSEMBLY, DIFFERENTIAL 케이스 & 기어	20.565	RETAINER, DRIVE AXLE SHAFT BEARING 리테이너
20.322	SPACER, DRIVE AXLE SHAFT BEARING 스페이서	20.586	SHAFT, DRIVE AXLE 샤프트
20.375	COVER, DIFFERENTIAL HOUSING INSPECTION 커버	20.596	SHAFT, DRIVE AXLE (LH) 샤프트
20.376	AXLE ASSEMBLY, DRIVE 드라이브 액슬	20.627	VENT, DIFFERENTIAL & AXLE 벤트
20.388	HOUSING, DRIVE AXLE (LH) 하우징	20.638	BEARING, RING GEAR SHAFT OUTBOARD 베어링
20.425	SPACER, AXLE SHAFT 스페이서	20.814	RETAINER, DRIVE AXLE INTERMEDIATE GEAR BEARING 리테이너


20.849	PLUG, DRIVE AXLE HOUSING 플러그
20.854	SLEEVE, AXLE SHAFT 슬리브
20.862	HOUSING, DRIVE AXLE (RH) 하우징
22.223	FASTENER, DRIVE WHEEL 패스너
23.393	FASTENER, DRIVE WHEEL 패스너
95.782	FASTENER, DRIVE AXLE SHAFT BEARING RETAINER 패스너
96.848	FASTENER, INSPECTION PLATE 패스너
96.851	FASTENER, INSPECTION PLATE 패스너

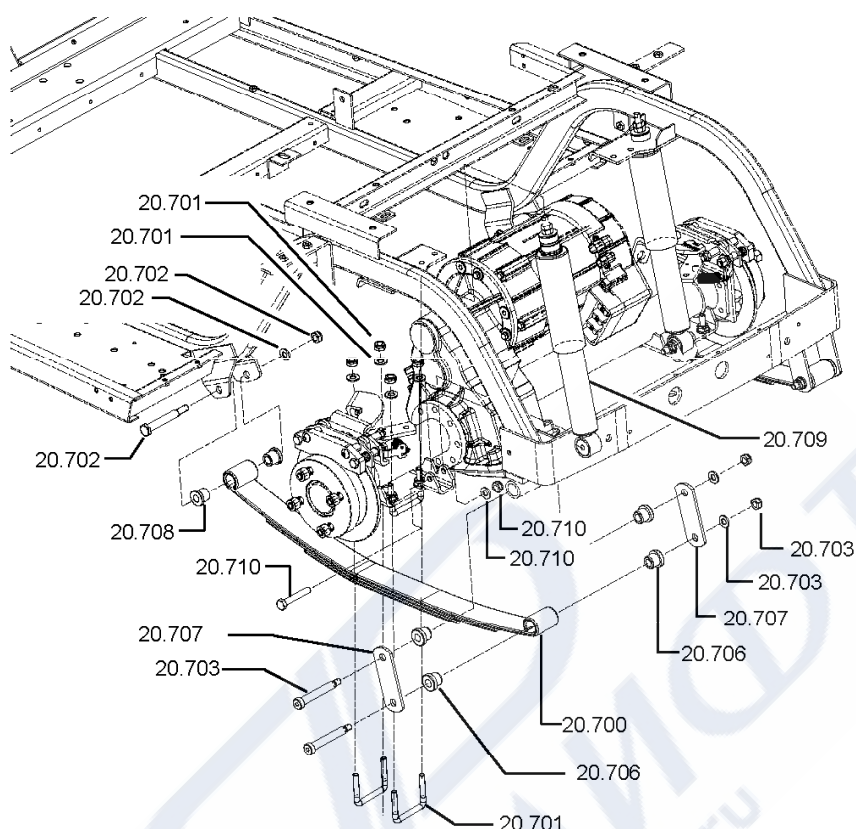 

SUSPENSION SYSTEM REAR


20-286


- | | |
|--------|---|
| 20.700 | SPRING ASSEMBLY, DRIVE AXLE SUSPENSION
스프링 |
| 20.701 | FASTENER, DRIVE AXLE SUSPENSION SPRING - AXLE
패스너 |
| 20.702 | FASTENER, DRIVE AXLE SUSPENSION SPRING (FRAME FRONT)
패스너 |
| 20.703 | FASTENER, DRIVE AXLE SUSPENSION SPRING (FRAME REAR)
패스너 |
| 20.706 | BEARING, DRIVE AXLE SUSPENSION SPRING
베어링 |
| 20.707 | SHACKLE, DRIVE AXLE SUSPENSION MOUNTING
샤클 |
| 20.708 | BEARING, DRIVE AXLE SUSPENSION SPRING MOUNTING (FRONT)
베어링 |
| 20.709 | SHOCK ABSORBER, REAR AXLE
쇼브업쇼버 |
| 20.710 | FASTENER, REAR AXLE SHOCK ABSORBER
패스너 |

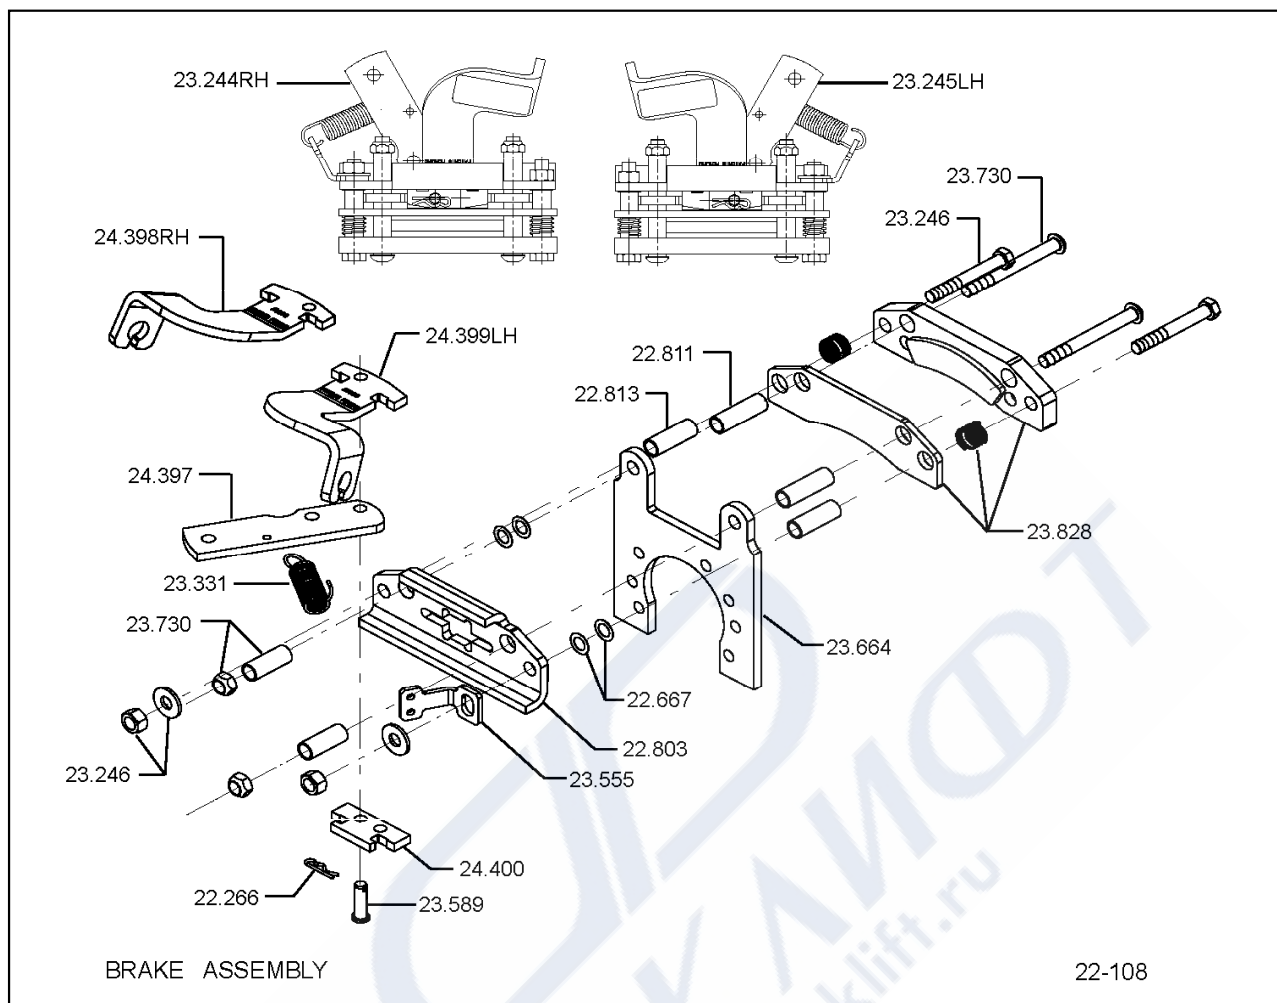 

- | | |
|--------|--|
| 22.266 | RETAINER, BRAKE CABLE CLEVIS PIN
리테이너 |
| 22.667 | SHIM, BRAKE
심 |
| 22.803 | SPACER PLATE, BRAKE ASSEMBLY
스페이서플레이트 |
| 22.811 | BUSHING, BRAKE ASSEMBLY
부싱 |
| 22.813 | SLEEVE, BRAKE
슬리브 |
| 23.244 | BRAKE ASSEMBLY, RH DRIVE WHEEL
브레이크 |
| 23.245 | BRAKE ASSEMBLY, LH DRIVE WHEEL
브레이크 |
| 23.246 | FASTENER, BRAKE ASSEMBLY
패스너 |
| 23.331 | SPRING, BRAKE ACTUATING
스프링 |

23.555	ANCHOR, BRAKE ACTUATING SPRING 앵커
23.589	RETAINER, BRAKE ACTUATING LEVER 리테이너
23.664	PLATE, BRAKE SHOE RETAINER 플레이트
23.730	FASTENER, BRAKE ASSEMBLY 패스너
23.828	KIT, BRAKE LINING 키트
24.397	LEVER, BRAKE CAM 레버
24.398	PLATE, BRAKE CABLE ACTURATOR RH 플레이트
24.399	PLATE, BRAKE CABLE ACTURATOR LH 플레이트
24.400	PLATE, BRAKE ACTURATOR 플레이트

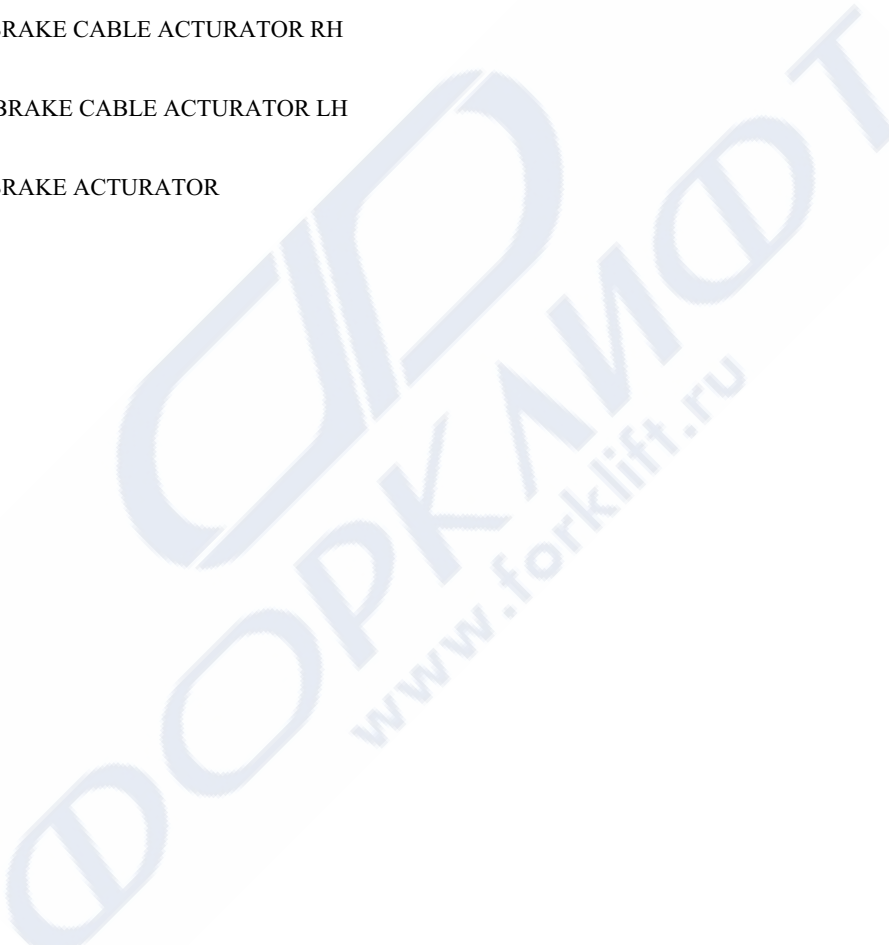 


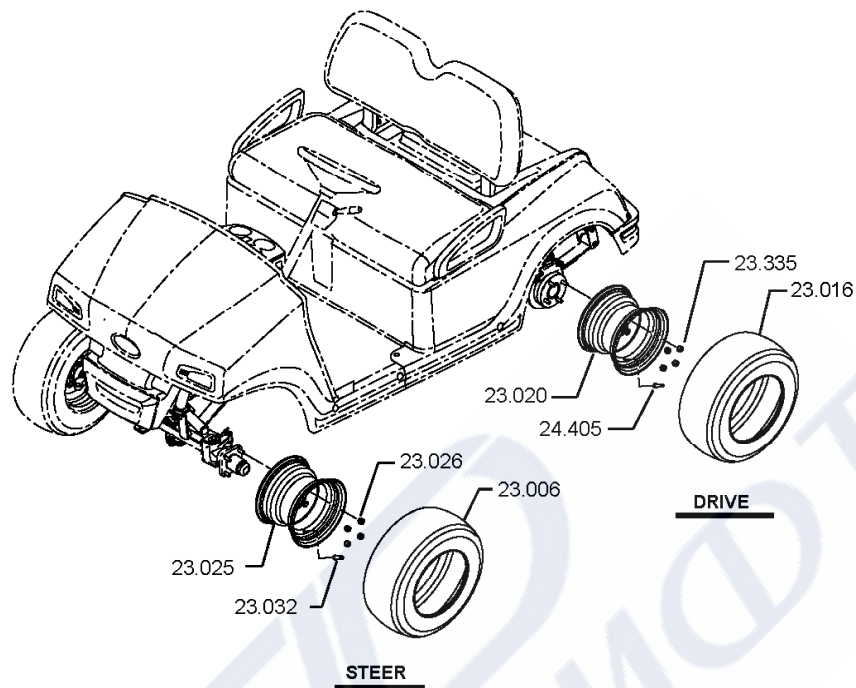 

TIRE & WHEEL MOUNTING

22-224


23.006	TIRE, STEER WHEEL 타이어
23.016	TIRE, DRIVE WHEEL 타이어
23.020	WHEEL ASSEMBLY, DRIVE 휠
23.025	WHEEL ASSEMBLY, STEER 휠
23.026	FASTENER, STEER WHEEL 패스너
23.032	VALVE STEM - TUBELESS STEER WHEEL 밸브스텝
23.335	FASTENER, DRIVE WHEEL 패스너
24.405	VALVE STEM, TUBELESS DRIVE WHEEL 밸브스텝

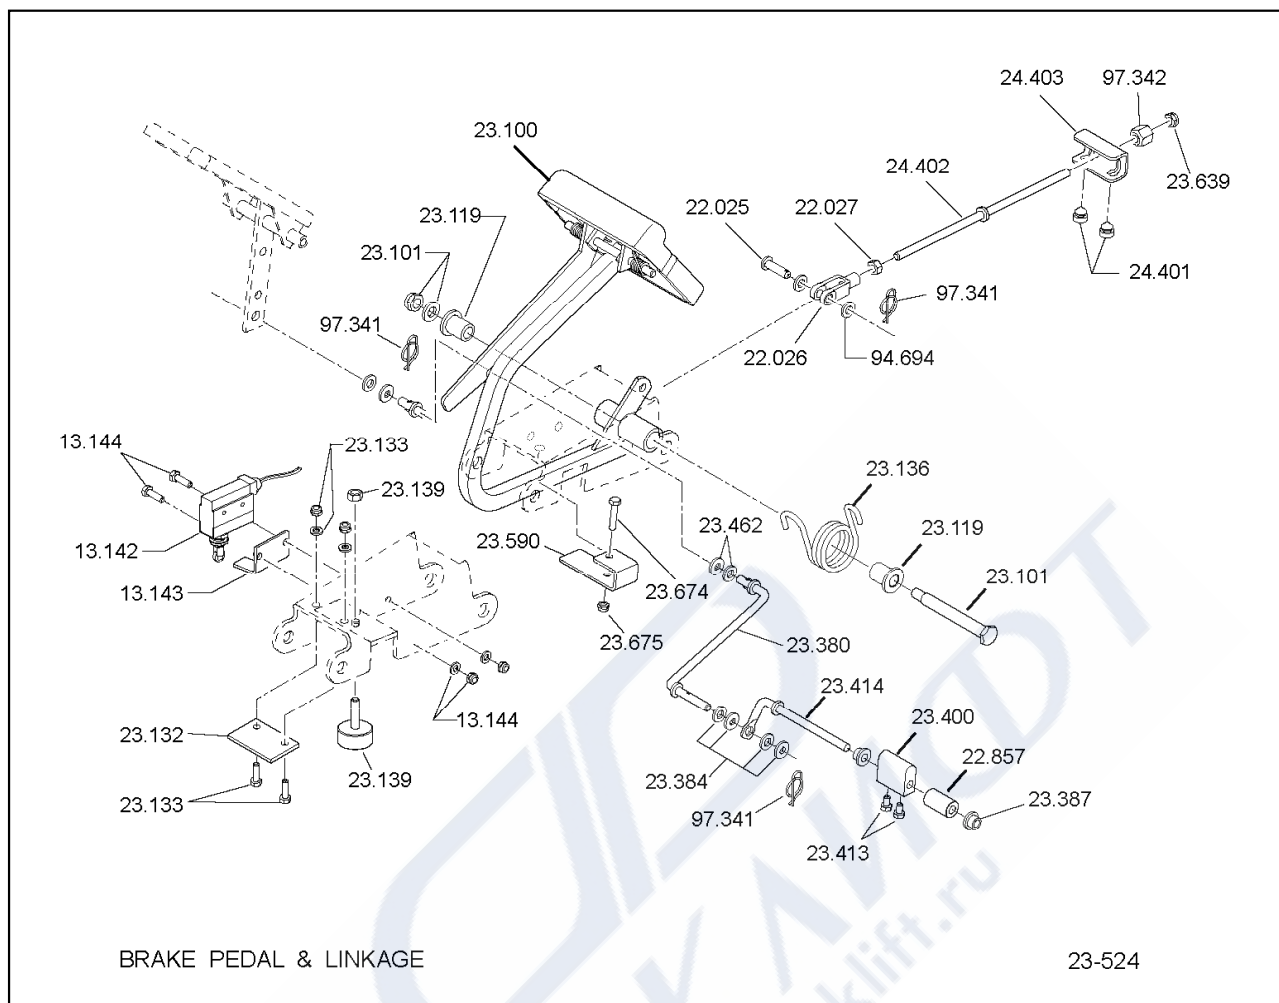 

13.114	SWITCH, UPRIGHT CONTROL (LIFT) 스위치	23.380	LINK, PARKING BRAKE 링크
13.142	SWITCH, BRAKE INTERLOCK 스위치	23.384	FASTENER, PARKING BRAKE LINK 패스너
13.143	BRACKET, BRAKE INTERLOCK SWITCH 브라켓	23.387	RETAINER, PARKING BRAKE BELLCRANK 리테이너
13.144	FASTENER, BRAKE INTERLOCK SWITCH BRACKET 패스너	23.400	CAM, PARKING BRAKE 캠
22.025	PIN, BRAKE PEDAL LINKAGE 핀	23.413	FASTENER, PARKING BRAKE CAM 패스너
22.026	ROD END, BRAKE PEDAL LINKAGE 로드엔드	23.414	LINK, PARKING BRAKE CAM ACTUATING 링크
22.027	LOCK, BRAKE PEDAL LINKAGE ROD END 로크	23.462	FASTENER, PARKING BRAKE LINK 패스너
22.857	SPACER, PARKING BRAKE PEDAL CAM MOUNTING 스페이서	23.590	BRACKET, BRAKE ACTUATOR MOUNTING (RH) 브라켓
23.100	PEDAL, BRAKE 페달	23.639	FASTENER, PARKING BRAKE CABLE ANCHOR 패스너
23.101	SHAFT, BRAKE PEDAL 샤프트	23.674	FASTENER, BRAKE PEDAL ACTUATOR 패스너
23.119	BEARING, BRAKE PEDAL 베어링	23.675	FASTENER, BRAKE PEDAL ACTUATOR 패스너
23.132	BRACKET, BRAKE LOCK UNIT MOUNTING 브라켓	24.401	RUBBER PLUG, BRAKE MTG BKT. 러버플러그
23.133	FASTENER, BRAKE LOCK UNIT ATTACHING 패스너	24.402	ROD, BRAKE ACTUATING 로드
23.136	SPRING, BRAKE PEDAL RETURN 스프링	24.403	ANCHOR, BRAKE CABLE 앵커
23.139	STOP, BRAKE PEDAL 스톱	94.694	WASHER, BRAKE PEDAL LINKAGE ROD END PIN 와셔

97.341	COTTER, BRAKE LINK ROD 커터
97.342	FASTENER, BRAKE ADJUSTMENT 패스너




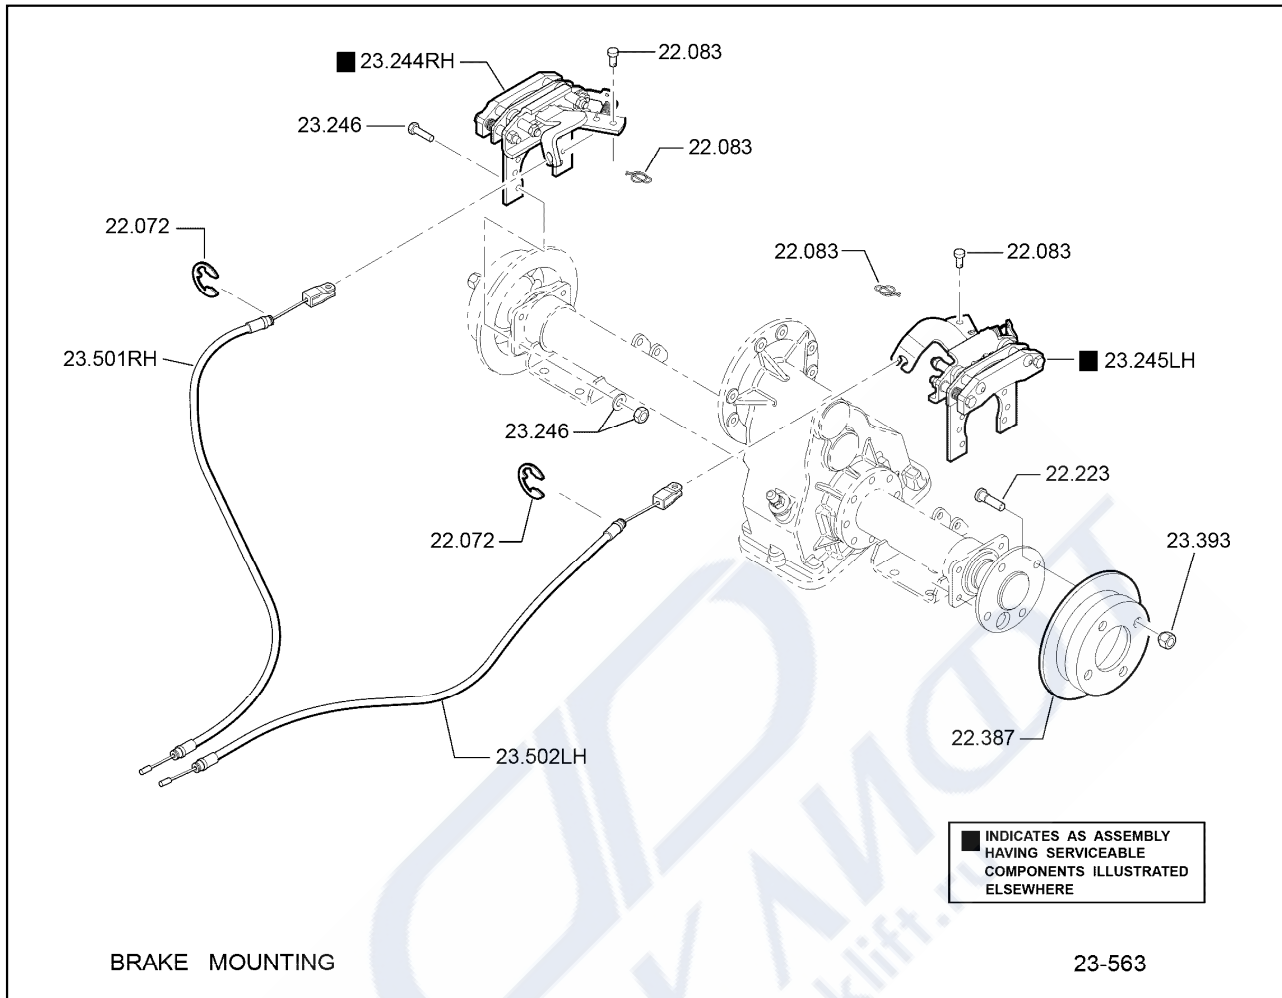 

22.072	FASTENER, BRAKE LINE CLIP 패스너
22.083	FASTENER, BRAKE CABLE BRACKET (BRAKE END) 패스너
22.223	FASTENER, DRIVE WHEEL 패스너
22.387	HUB, BRAKE DISC 허브
23.244	BRAKE ASSEMBLY, RH DRIVE WHEEL 브레이크
23.245	BRAKE ASSEMBLY, LH DRIVE WHEEL 브레이크
23.246	FASTENER, BRAKE ASSEMBLY 패스너
23.393	FASTENER, DRIVE WHEEL 패스너
23.501	TOGGLE ASSEMBLY, PARKING BRAKE 토글

 
23.502 SPACER, PARKING BRAKE LINKAGE TOGGLE
스페이서



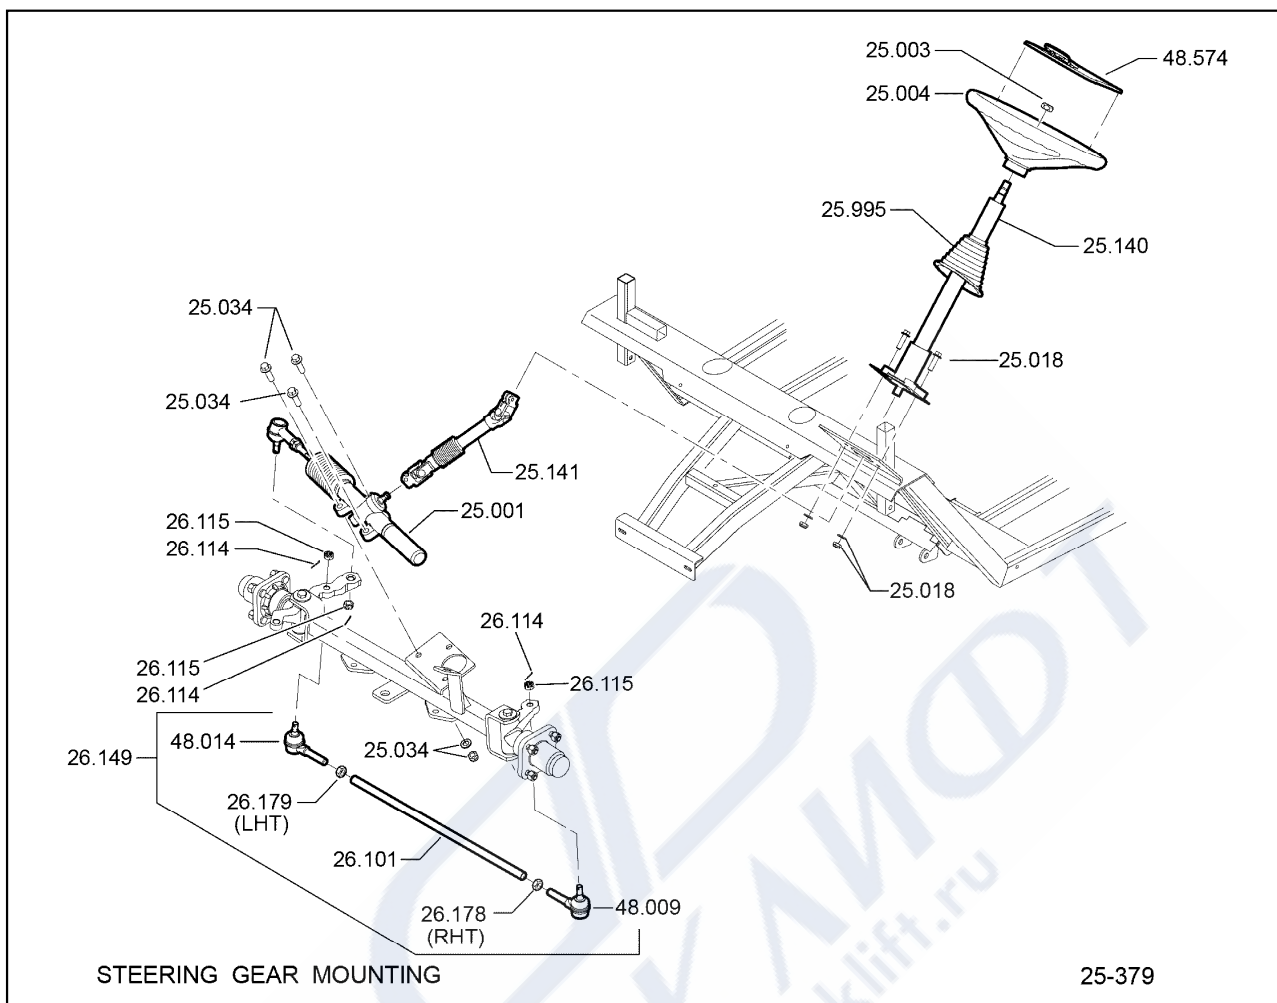


- | | |
|--------|--|
| 25.001 | GEAR ASSEMBLY, STEERING (GREASED)
기어어셈블리 |
| 25.003 | NUT, HANDWHEEL
너트 |
| 25.004 | HAND WHEEL, STEERING GEAR
핸드휠 |
| 25.018 | FASTENER, COLUMN JACKET
패스너 |
| 25.034 | FASTENER, STEERING GEAR ATTACHING
패스너 |
| 25.140 | SHAFT & COLUMN ASSEMBLY, POWER STEERING
샤프트& 컬럼 |
| 25.141 | SHAFT, STEERING GEAR
샤프트 |
| 25.995 | BOOT, STEERING SHAFT
부트 |
| 26.101 | ROD, TIE
로드 |

26.114	COTTER, STEER AXLE TIE ROD END 커터
26.115	NUT, STEER AXLE TIE ROD END 너트
26.149	TIE ROD ASSEMBLY, STEER AXLE RH 타이로드
26.178	NUT, TIE ROD END LOCK 너트
26.179	NUT, TIE ROD END LOCK 너트
48.009	ROD END ASSEMBLY, LH THREAD FRONT TIE 로드엔드
48.014	ROD END ASSEMBLY, RH THREAD FRONT TIE 로드엔드
48.574	COVER, HANDWHEEL *

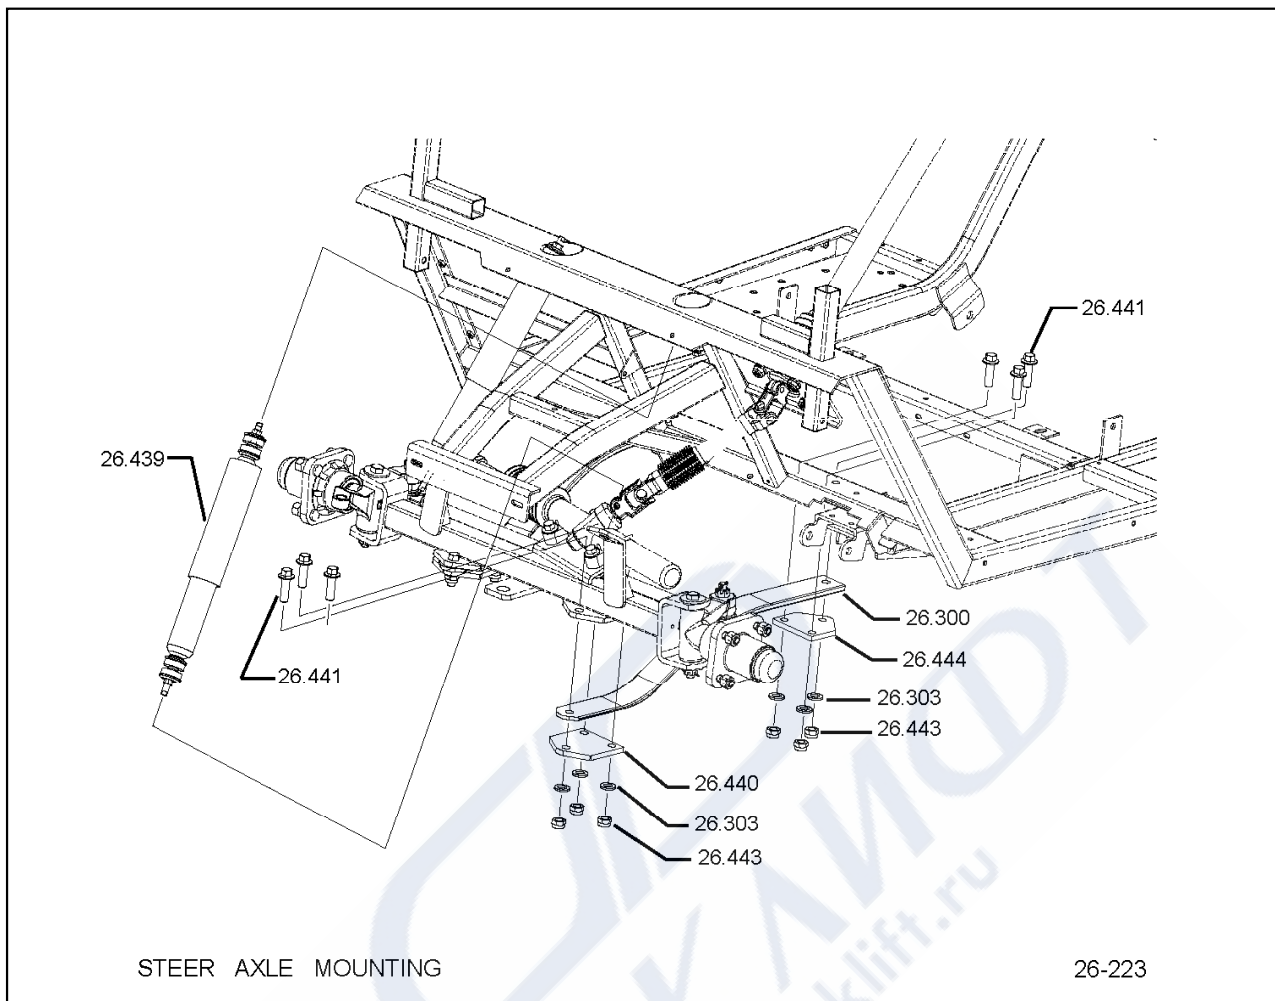 


- | | |
|--------|--|
| 26.300 | SPRING ASSEMBLY, STEER AXLE SUSPENSION
스프링 |
| 26.303 | FASTENER, STEER AXLE SUSPENSION SPRING (AXLE)
패스너 |
| 26.439 | SHOCK ABSORBER, FRONT
쇼크업쇼버 |
| 26.440 | * |
| 26.441 | FASTENER, STEER AXLE SUSPENSION SPRING PLATE
패스너 |
| 26.443 | NUT, STEER AXLE SUSPENSION SPRING PLATE
너트 |
| 26.444 | PLATE, STEER AXLE SUSPENSION SPRING
플레이트 |

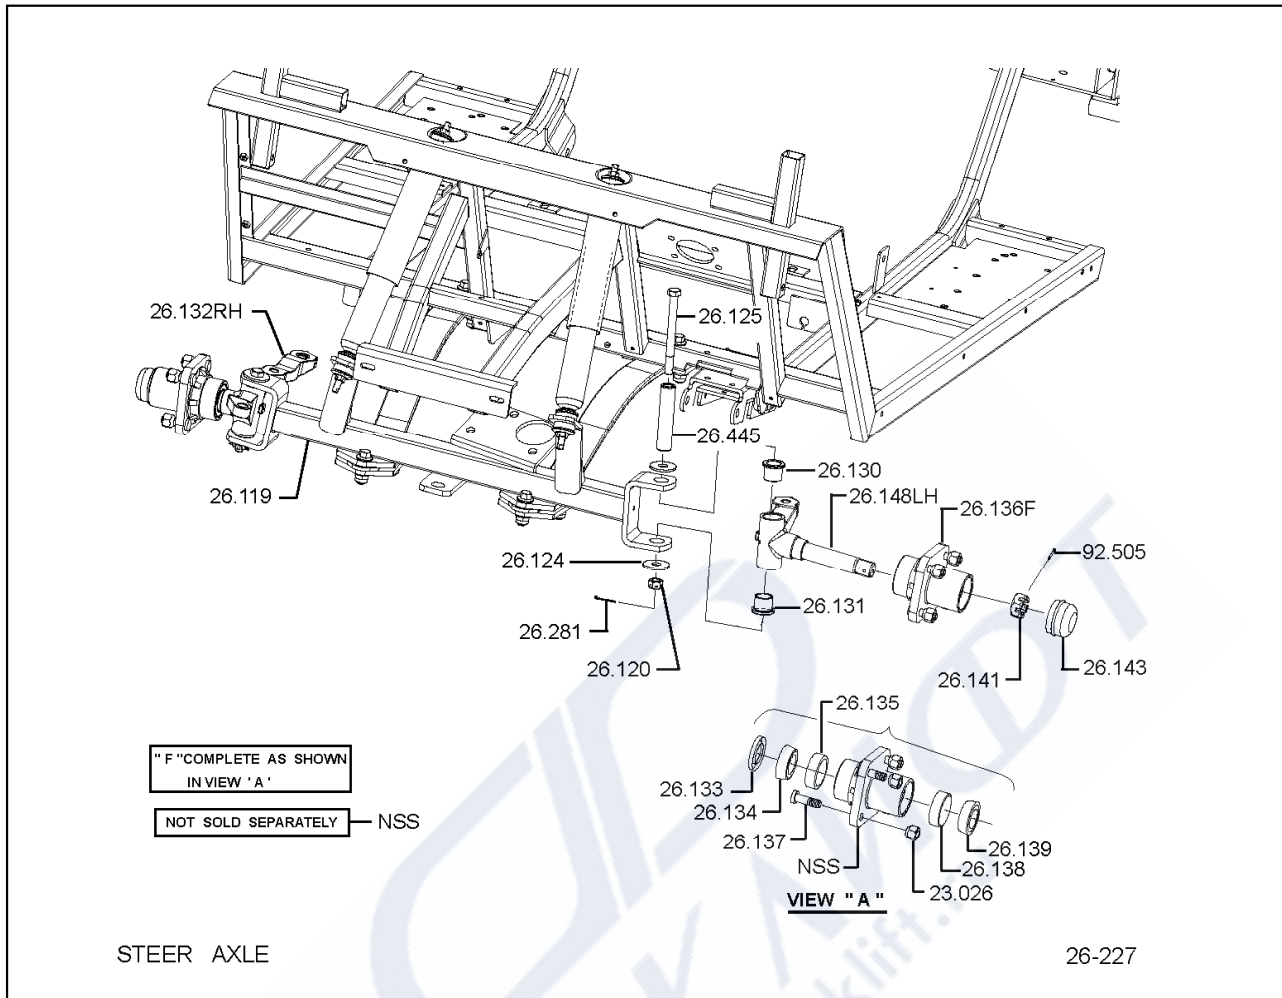 

23.026	FASTENER, STEER WHEEL 패스너
26.119	AXLE, STEER 액슬
26.120	FASTENER, STEER AXLE SPIDER PIN 패스너
26.124	SHIM, STEER AXLE KNUCKLE 심
26.125	PIN, STEER AXLE KNUCKLE 핀
26.130	BEARING, STEER AXLE KNUCKLE PIN 베어링
26.131	BEARING, STEER AXLE KNUCKLE PIN LOWER 베어링
26.132	KNUCKLE, STEER AXLE (RH) 너트
26.133	SEAL, STEER WHEEL HUB 셀


26.134	CONE, STEER WHEEL HUB BEARING (INNER) 콘
26.135	CUP, STEER WHEEL HUB BEARING (INNER) 컵
26.136	HUB & CUP, STEER WHEEL 허브& 컵
26.137	FASTENER, STEER WHEEL 패스너
26.138	CUP, STEER WHEEL HUB BEARING (OUTER) 컵
26.139	CONE, STEER WHEEL HUB BEARING (OUTER) 콘
26.141	FASTENER, STEER WHEEL HUB 패스너
26.143	CAP, STEER WHEEL HUB 캡
26.148	KNUCKLE, STEER AXLE (LH) 너트
26.281	RETAINER, STEER AXLE HUB BRG KNUCKLE NUT 리테이너
26.445	SLEEVE, STEER AXLE KNUCKLE 슬리브
92.505	COTTER, STEER WHEEL HUB FASTENER 커터



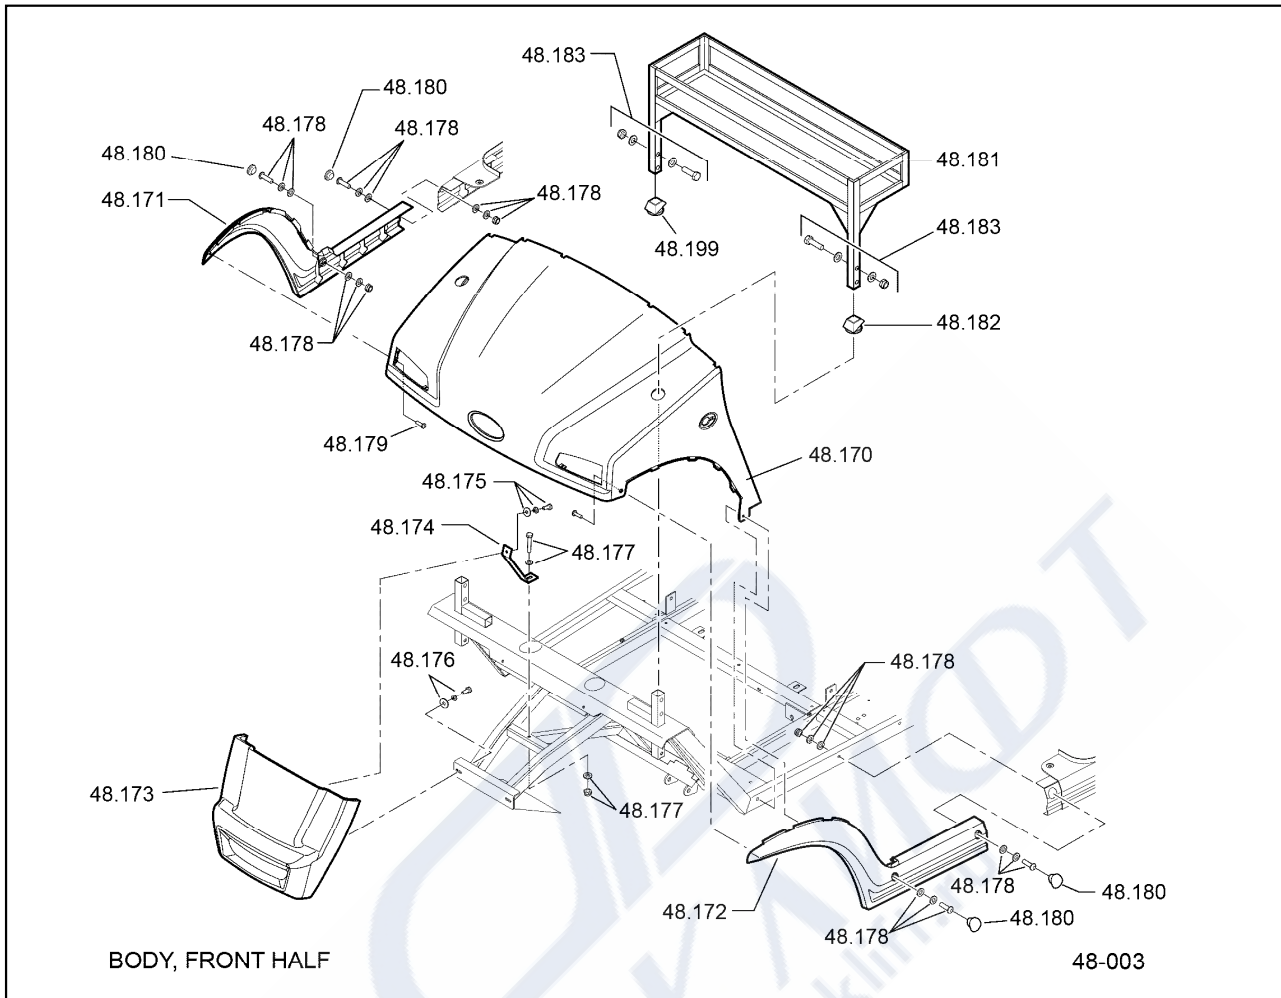 

- | | |
|--------|--|
| 48.170 | FRONT BODY, BURDEN CARRIER
프런트바디 |
| 48.171 | TRIM, BURDEN CARRIER PASSENGER SIDE
트림 |
| 48.172 | TRIM, BURDEN CARRIER DRIVERS SIDE
트림 |
| 48.173 | FRONT BUMPER, BURDEN CARRIER
프런트범퍼 |
| 48.174 | BRACKET, BURDEN CARRIER FRONT BUMPER MOUNTING
브라켓 |
| 48.175 | FASTENER, BURDEN CARRIER FRONT BUMPER BRACKET
패스너 |
| 48.176 | FASTENER, BURDEN CARRIER FRONT BUMPER
패스너 |
| 48.177 | FASTENER, BURDEN CARRIER FRONT BUMPER BRACKET
패스너 |
| 48.178 | FASTENER, BURDEN CARRIER TRIM
패스너 |

48.179	FASTENER, BURDEN CARRIER TRIM 패스너
48.180	PLUG, BURDEN CARRIER TRIM 플러그
48.181	BASKET, BURDEN CARRIER 바스켓
48.182	GROMMET, BURDEN CARRIER BASKET 그로멧
48.183	FASTENER, BURDEN CARRIER BASKET 패스너
48.199	GROMMET, BURDEN CARRIER BASKET 그로멧

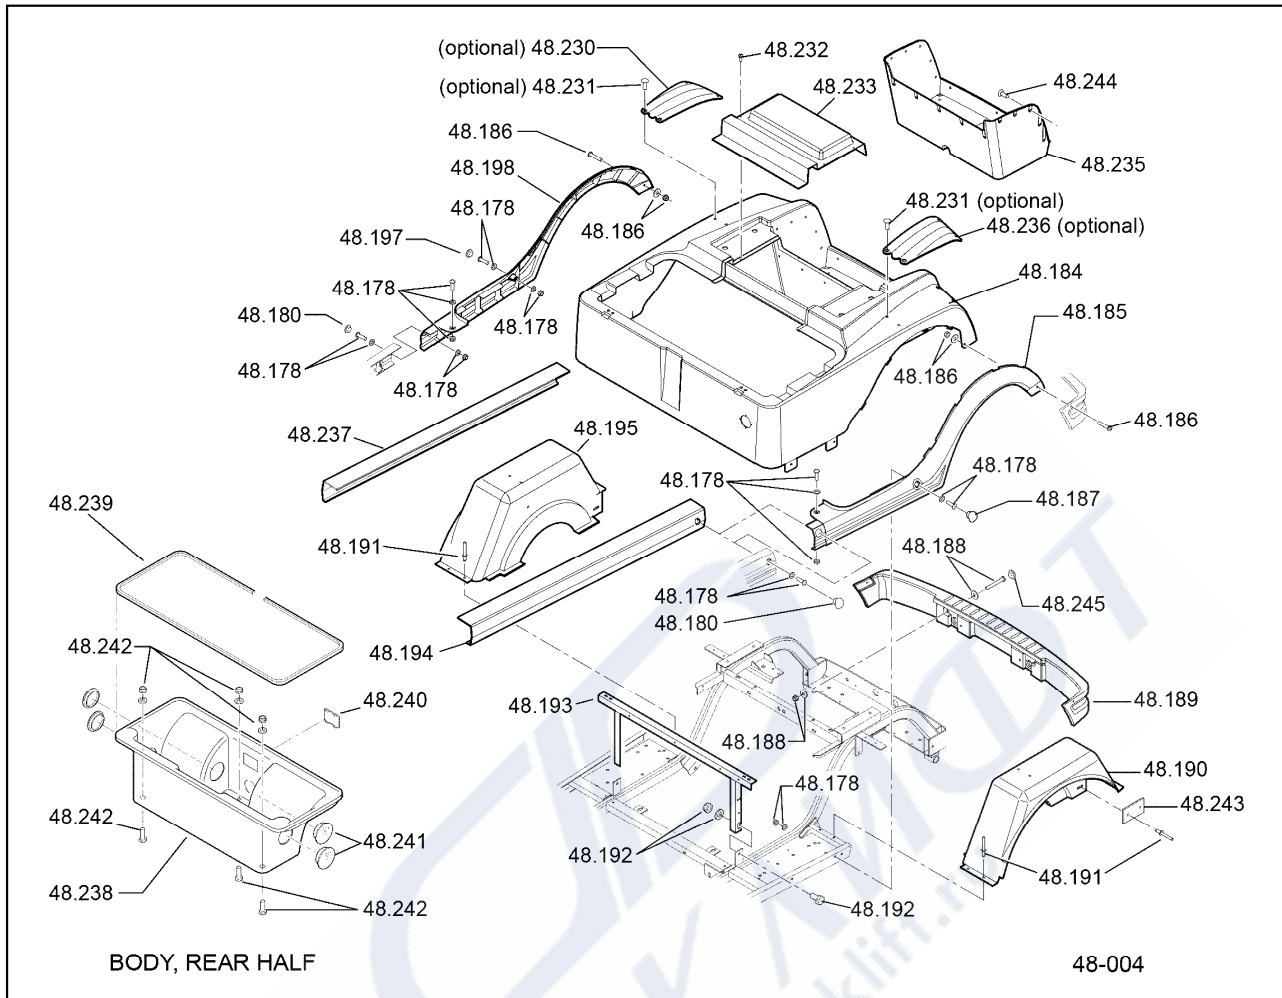 

48.178 FASTENER, BURDEN CARRIER TRIM
패스너

48.180 PLUG, BURDEN CARRIER TRIM
플러그

48.184 REAR BODY, BURDEN CARRIER
리어바디

48.185 REAR TRIM, BURDEN CARRIER DRIVERS SIDE
리어트림

48.186 FASTENER, BURDEN CARRIER TRIM
패스너

48.187 PLUG, SIDE TRIM FASTENER DRIVERS SIDE
플러그

48.188 FASTENER, BURDEN CARRIER TRIM
패스너

48.189 REAR BUMPER, BURDEN CARRIER
리어범퍼

48.190 INNER FENDER, BURDEN CARRIER DRIVERS SIDE
인너펜더

48.191 RIVET, BURDEN CARRIER INNER FENDER
리벳

48.192 FASTENER, BURDEN CARRIER REAR BODY SUPPORT
패스너

48.193 SUPPORT, BURDEN CARRIER REAR BODY
서포트

48.194 TRIM, BURDEN CARRIER
트림

48.195 INNER FENDER, BURDEN CARRIER PASSENGER SIDE
인너펜더

48.197 PLUG, SIDE TRIM FASTNER, PASSENGER SIDE
플러그

48.198 REAR TRIM, BURDEN CARRIER PASSENGER SIDE
리어트림

48.230 STEP, BURDEN CARRIER PASSENGER SIDE
스텝

48.231 FASTENER, BURDEN CARRIER STEP
패스너

48.232 FASTENER, BURDEN CARRIER CONTROLLER COVER
패스너

48.233 COVER, BURDEN CARRIER CONTROLLER ACCESS
커버

48.235 LINER, BURDEN CARRIER BAG WELL
라이너

48.236 STEP, BURDEN CARRIER DRIVERS SIDE
스텝

48.237 TRIM, BURDEN CARRIER PASSENGER SIDE
트림

48.238 PEDESTAL, BURDEN CARRIER
받침대

48.239 EDGE TRIM, BURDEN CARRIER PEDASTAL
모서리트림

48.240 COVER, BURDEN CARRIER PEDASTAL
커버

48.241 VENT, BURDEN CARRIER PEDASTAL
벤트

 
48.242 FASTENER, BURDEN CARRIER PEDASTAL
패스너

48.243 PLATE, BURDEN CARRIER FENDER MOUNTING
플레이트

48.244 FASTENER, BURDEN CARRIER BAG WELL LINER
패스너


48.245 PLUG, REAR BUMPER
플러그

ФОРКЛИФТ
www.forklift.ru

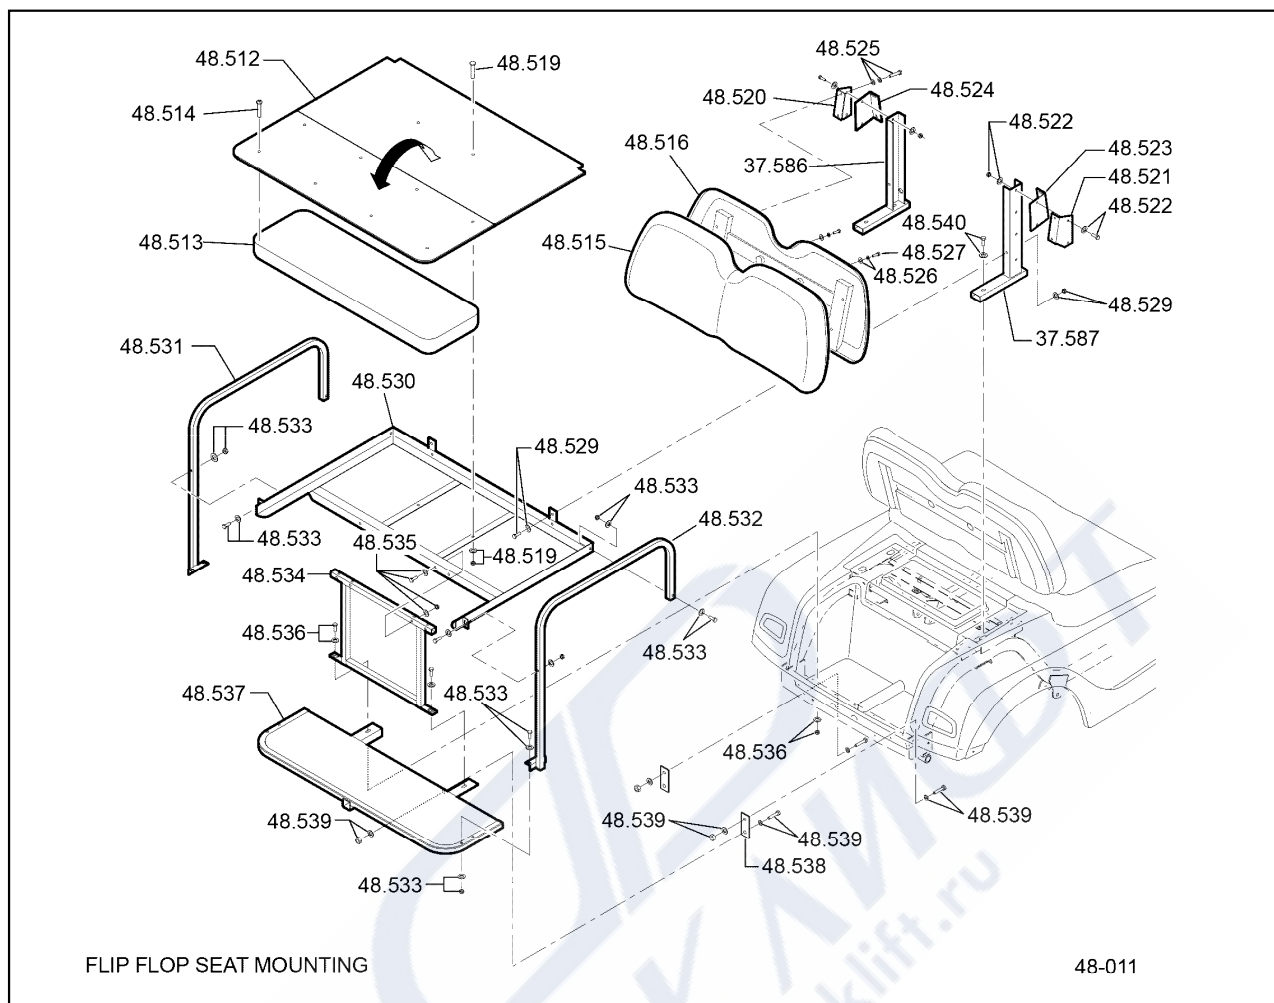

- 37.586 SUPPORT, SEAT CUSHION SUSPENSION LH
서포트
- 37.587 SUPPORT, SEAT CUSHION SUSPENSION RH
서포트
- 48.512 SEAT DECK, FLIP FLOP SEAT
시트데크
- 48.513 CUSHION, FLIP FLOP SEAT
쿠션
- 48.514 FASTENER, FLIP FLOP SEAT CUSHION
패스너
- 48.515 CUSHION, FLIP FLOP SEAT BACK REST
쿠션
- 48.516 COVER, FLIP FLOP SEAT BACK REST CUSHION
커버
- 48.519 FASTENER, SEAT DECK TO FRAME
패스너
- 48.520 BRACKET, SEAT BACK REAT TO SUPPORT LH
브라켓


48.521	BRACKET, SEAT BACK REST TO SUPPORT RH 브라켓
48.522	FASTENER, SEAT BACK REST 패스너
48.523	BRACKET, SEAT BACK REST CUSHION RH 브라켓
48.524	BRACKET, SEAT BACK REAT CUSHION LH 브라켓
48.525	FASTENER, SEAT SUPPORT 패스너
48.526	WASHER, SEAT BACK REST COVER FASTENER 와셔
48.527	FASTENER, SEAT BACK REST CUSHION COVER 패스너
48.529	FASTENER, FLIP FLOP SEAT FRAME TO SUPPORT 패스너
48.530	FRAME, FLIP FLOP SEAT 프레임
48.531	ARMREST, FLIP FLOP SEAT DRIVERS SIDE 암레스트
48.532	ARMREST, FLIP FLOP SEAT PASSENGER SIDE 암레스트
48.533	FASTENER, ARMREST TO FRAME 패스너
48.534	BRACKET, VERTICAL FLIP FLOP SEAT DECK SUPPORT 브라켓
48.535	FASTERER, SEAT DECK SUPPORT TO FRAME 패스너
48.536	FASTENER, VERTICAL DECK BRACKET 패스너
48.537	REAR FLOOR DECK, BURDEN CARRIER 리어플로어데크
48.538	BRACKET, REAR FLOOR DECK MOUNTING 브라켓
48.539	FASTENER, REAR FLOOR DECK 패스너
48.540	FASTENER, SEAT BRACKET TO FRAME 패스너

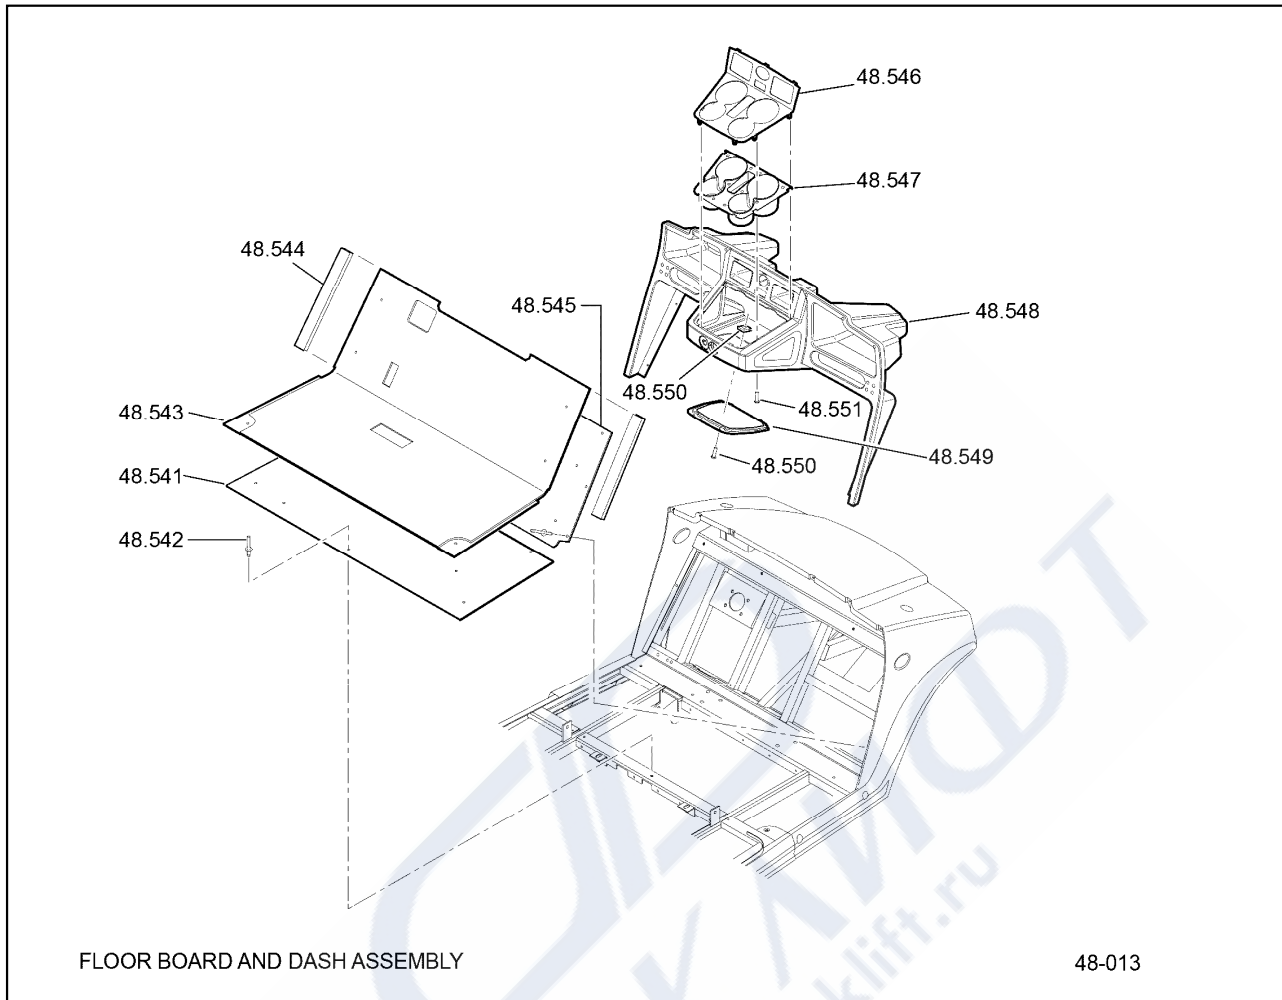 


- 48.541 FLOORPLATE, BURDEN CARRIER
플로어플레이트
- 48.542 FASTENER, BURDEN CARRIER FLOORPLATE
패스너
- 48.543 FLOORMAT, BURDEN CARRIER
플로어매트
- 48.544 SIDE TRIM, BURDEN CARRIER FLOORMAT
사J絹様?
- 48.545 PLATE, BURDEN CARRIER FRONT FLOOR
플레이트
- 48.546 COVER, BURDEN CARRIER CUP HOLDER
커버
- 48.547 CUP HOLDER, BURDEN CARRIER
컵홀더
- 48.548 DASH ASSEMBLY, BURDEN CARRIER
대시어셈블리
- 48.549 COVER, BURDEN CARRIER DASH ASSEMBLY
커버


48.550	FASTENER, BURDEN CARRIER DASH COVER 패스너
48.551	FASTENER, BURDEN CARRIER CUP HOLDER TRIM 패스너



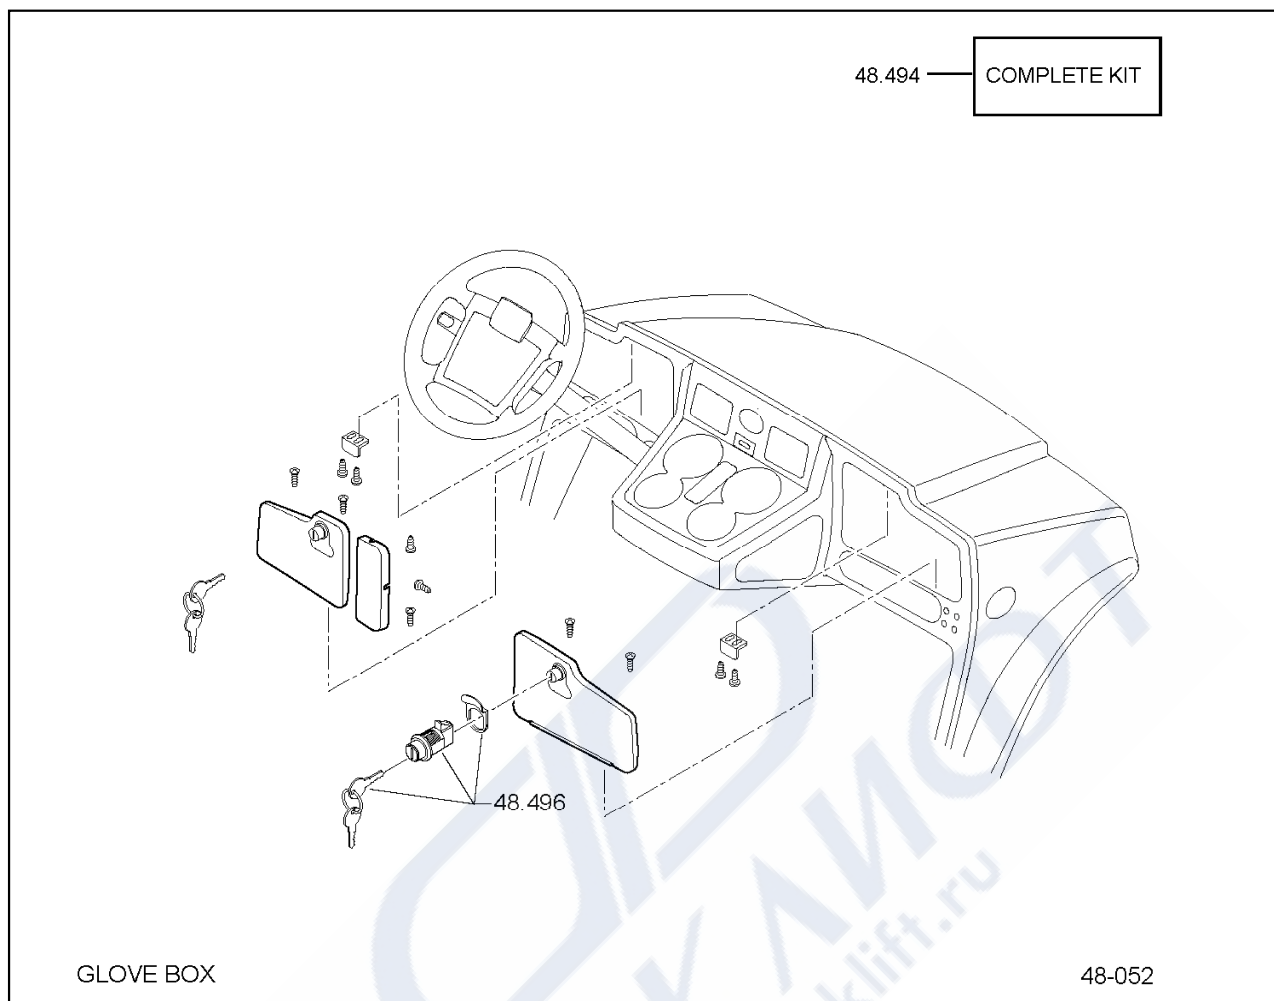 

  
- 48.494 KIT, BURDEN CARRIER GLOVE BOX
키트
- 48.496 LOCK ASSEMBLY, BURDEN CARRIER GLOVE BOX
로크어셈블리

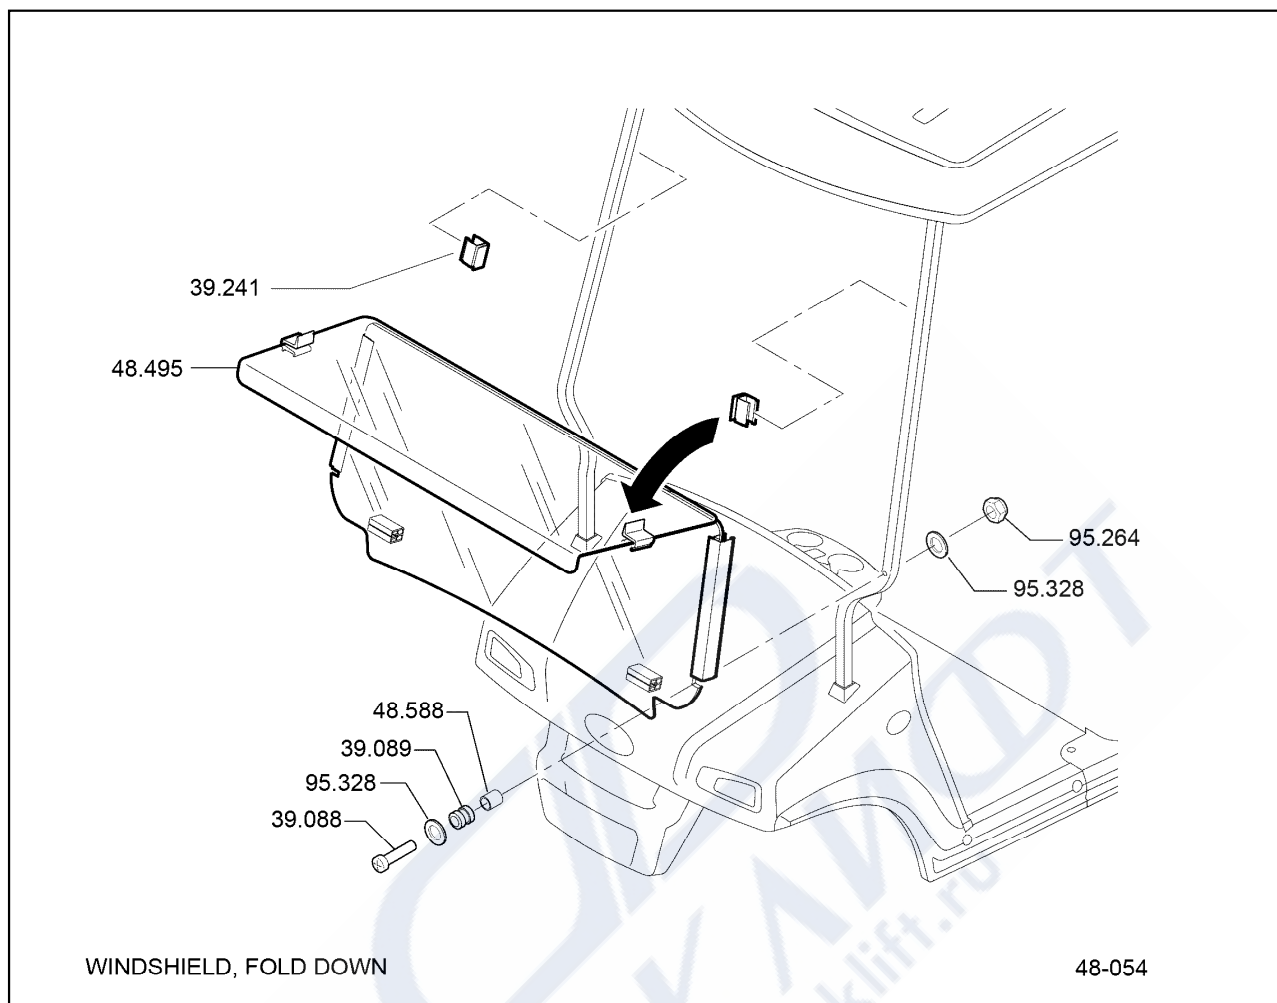

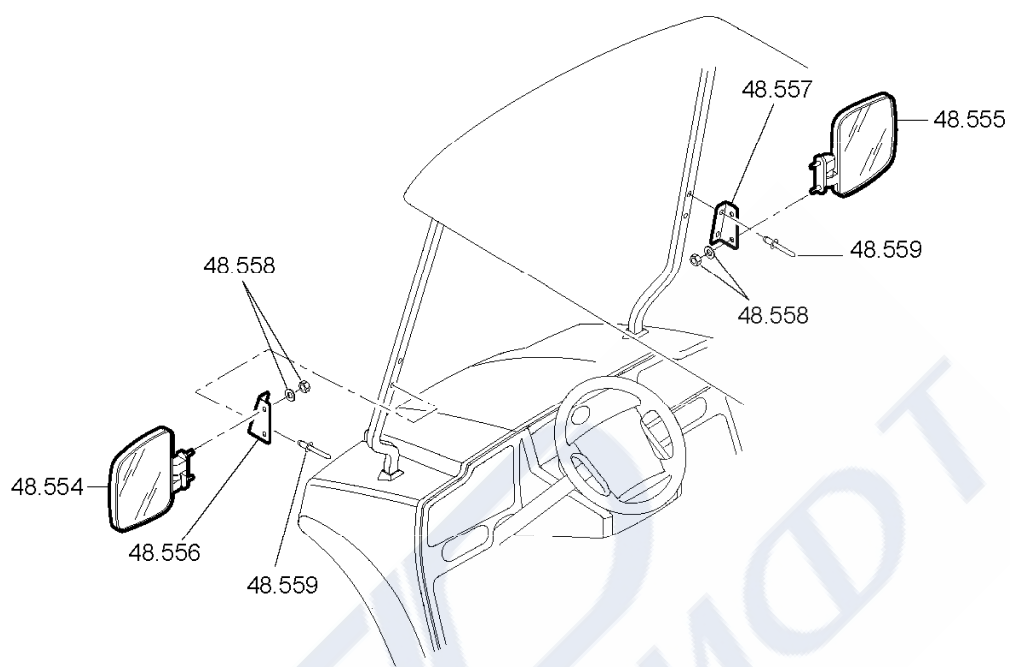

SIDE MIRRORS

 
48-056

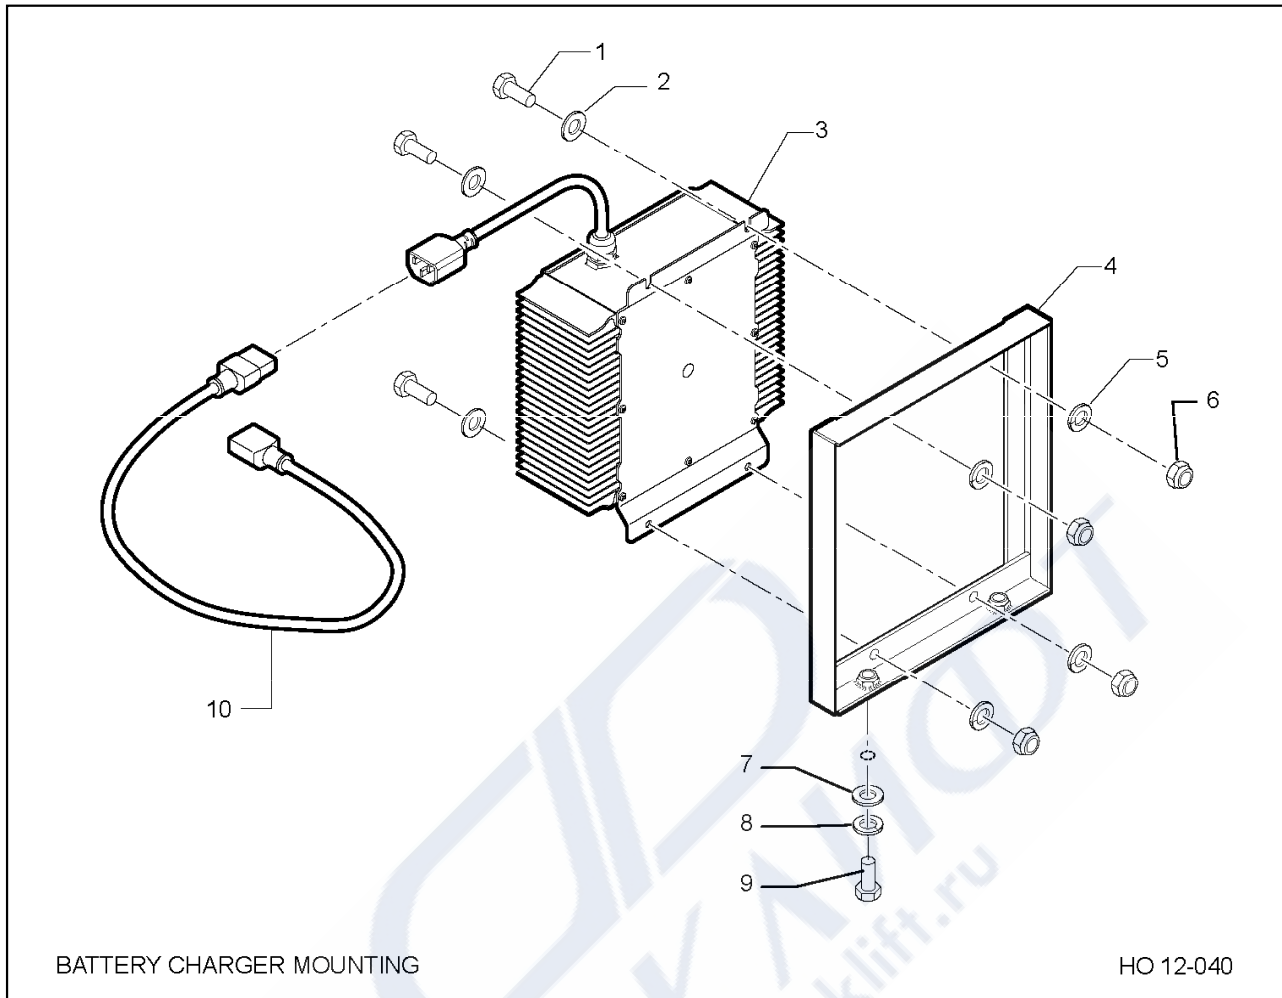


1	01CM00616	CAPSCREW 캡스크류	4
2	01EM00060	WASHER-PLAIN 와셔-플레인	4
3	2829527	BATTERY CHARGER 배터리 충전기	1
4	2829528	BRACKET 브라켓	1
5	17EM00060	WASHER-PLAIN 와셔-플레인	4
6	40DM00006	NUT-FLANGED 너트-플랜지	4
7	01EM00080	WASHER-PLAIN 와셔-플레인	2
8	06EM00080	WASHER-LOCK 와셔-로크	2
9	01CM00830	CAPSCREW 캡스크류	2


10	2829524	CORD - A.C. POWER 코드 - AC 파워	1
10	2829898	CORD - A.C. POWER 코드 - AC 파워	1
10	2829899	CORD - A.C. POWER 코드 - AC 파워	1



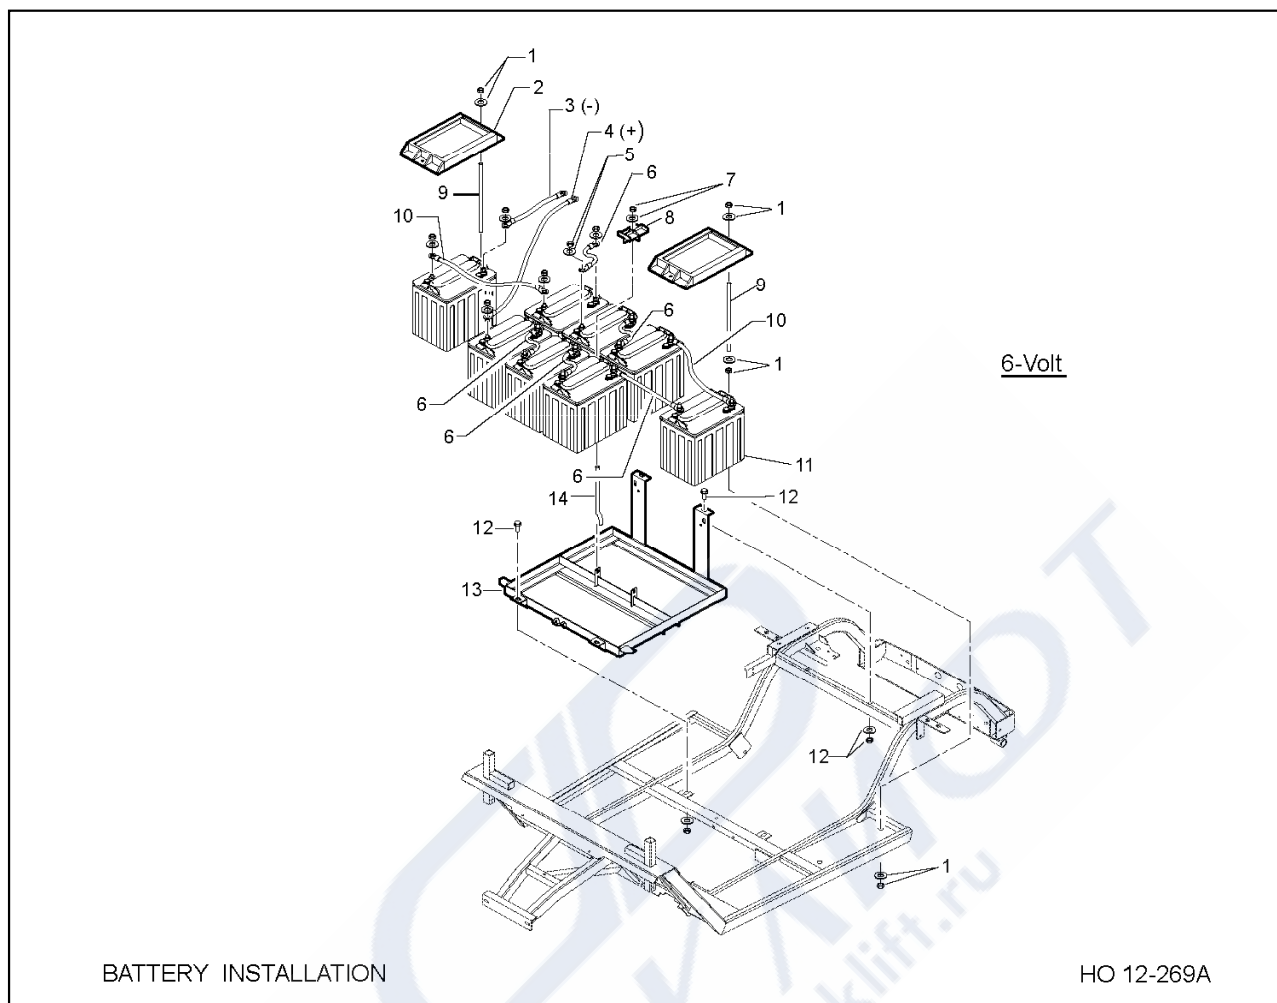 

- | | |
|----|-----------------------------|
| 1. | CAP, CRANKCASE BEARING
캡 |
| 1. | CAP, CRANKCASE BEARING
캡 |
| 2. | * |
| 3. | * |
| 4. | * |
| 5. | * |
| 5. | * |
| 5. | * |
| 6. | * |

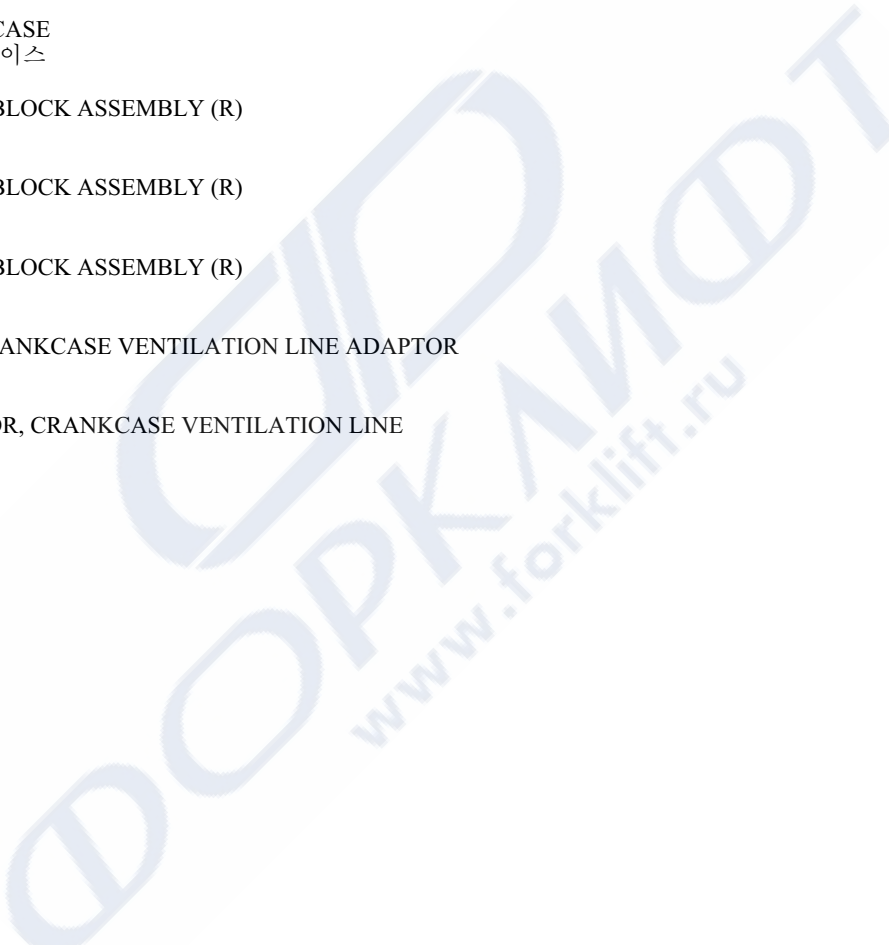 -
- | | |
|-----|---|
| 7. | BALANCER, ENGINE CRANKSHAFT HARMONIC
발란서 |
| 7. | BALANCER, ENGINE CRANKSHAFT HARMONIC
발란서 |
| 7. | BALANCER, ENGINE CRANKSHAFT HARMONIC
발란서 |
| 8. | COVER, DRAIN PORT
커버 |
| 9. | GASKET, DRAIN PORT COVER
가스켓 |
| 10. | SHORT ENGINE ASSEMBLY
숏엔진 |
| 11. | CRANKCASE
크랭크케이스 |
| 12. | SHORT BLOCK ASSEMBLY (R)
숏블록 |
| 12. | SHORT BLOCK ASSEMBLY (R)
숏블록 |
| 12. | SHORT BLOCK ASSEMBLY (R)
숏블록 |
| 13. | NUT, CRANKCASE VENTILATION LINE ADAPTOR
너트 |
| 14. | ADAPTOR, CRANKCASE VENTILATION LINE
어댑터 |
- 

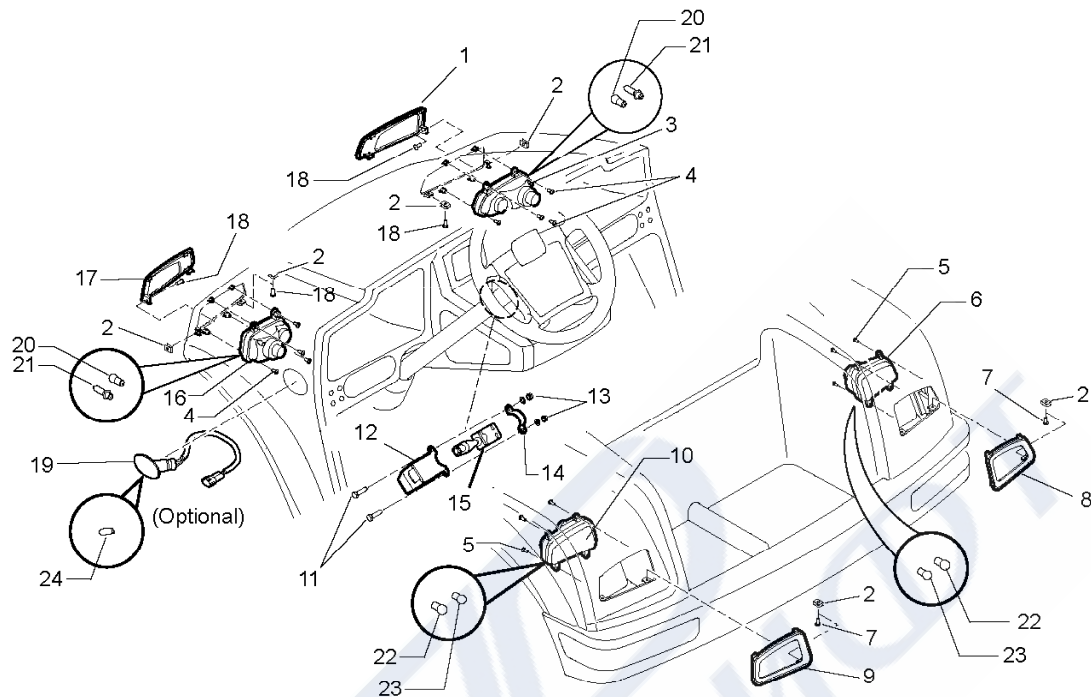 


LIGHTS

HO 13-400A

1. CAP, CRANKCASE BEARING
캡
2. *
3. *
4. *
5. *
6. *
7. BALANCER, ENGINE CRANKSHAFT HARMONIC
발란서
8. COVER, DRAIN PORT
커버
9. GASKET, DRAIN PORT COVER
가스켓


HO 13-400A (1)

-
- | | |
|-----|--|
| 10. | SHORT ENGINE ASSEMBLY
숏엔진 |
| 11. | CRANKCASE
크랭크케이스 |
| 12. | SHORT BLOCK ASSEMBLY (R)
숏블록 |
| 13. | NUT, CRANKCASE VENTILATION LINE ADAPTOR
너트 |
| 13. | NUT, CRANKCASE VENTILATION LINE ADAPTOR
너트 |
| 14. | ADAPTOR, CRANKCASE VENTILATION LINE
어댑터 |
| 15. | SUPPORT, ENGINE FRONT
서포트 |
| 16. | BUSHING, ENGINE FRONT SUPPORT DAMPENER
부싱 |
| 17. | BRACKET, ENGINE FRONT SUPPORT
브라켓 |
| 18. | BEARING, ENGINE FRONT SUPPORT BRACKET
베어링 |
| 19. | FASTENER, ENGINE FRONT SUPPORT BRACKET
패스너 |
| 20. | COVER, CRANKCASE ACCESS HOLE
커버 |
| 21. | BUSHING, ENGINE REAR DAMPENER RH
부싱 |
| 22. | BUSHING, ENGINE DAMPENER LH
부싱 |
| 23. | FASTENER, ENGINE FRONT VIBRATION DAMPENER
패스너 |
| 24. | LINE, CRANKCASE VENTILATION
라인 |
-

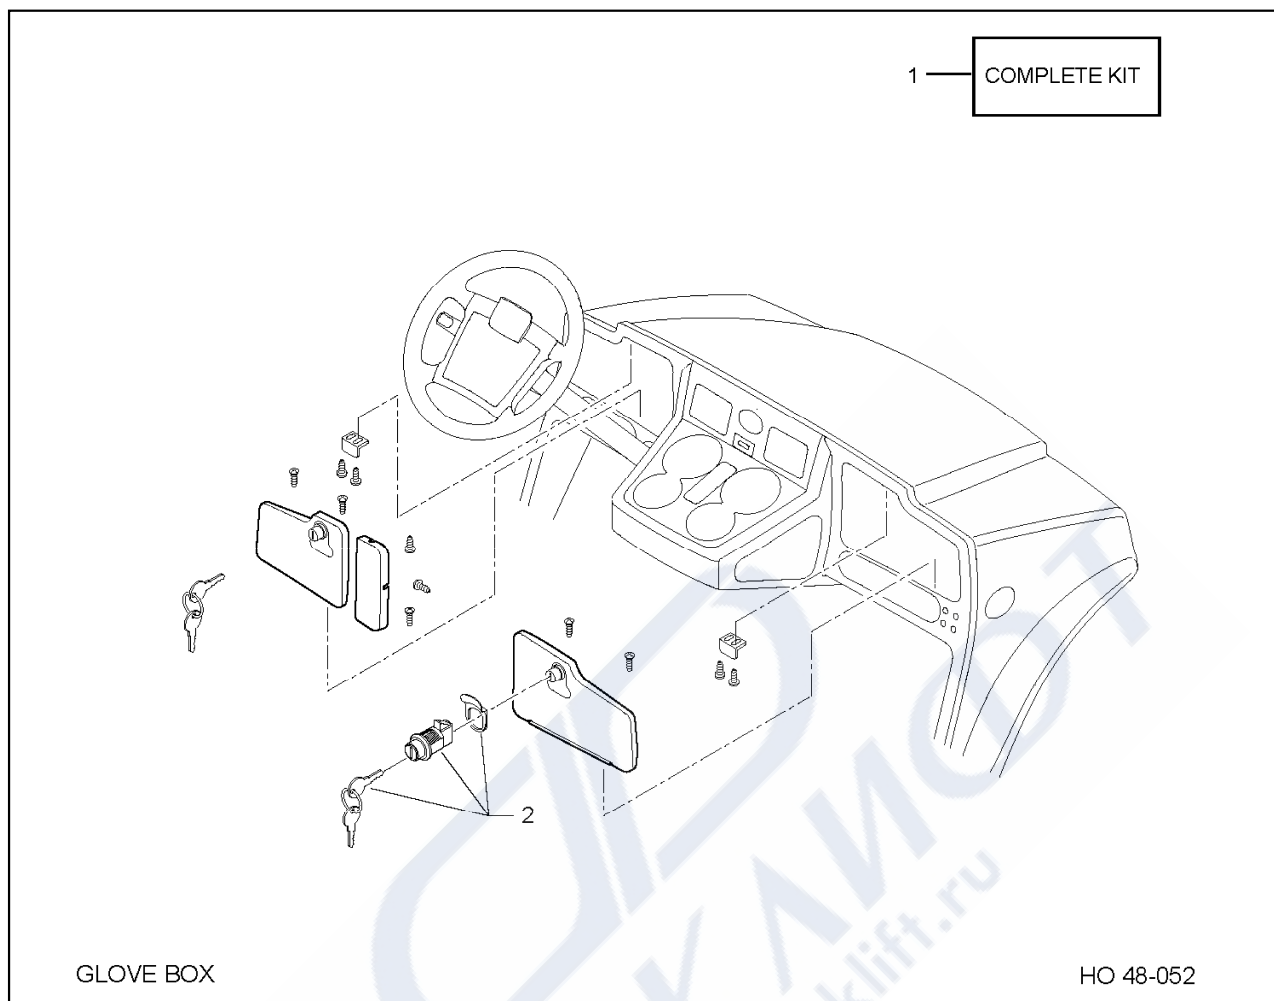 

1. CAP, CRANKCASE BEARING
캡

 
2. *

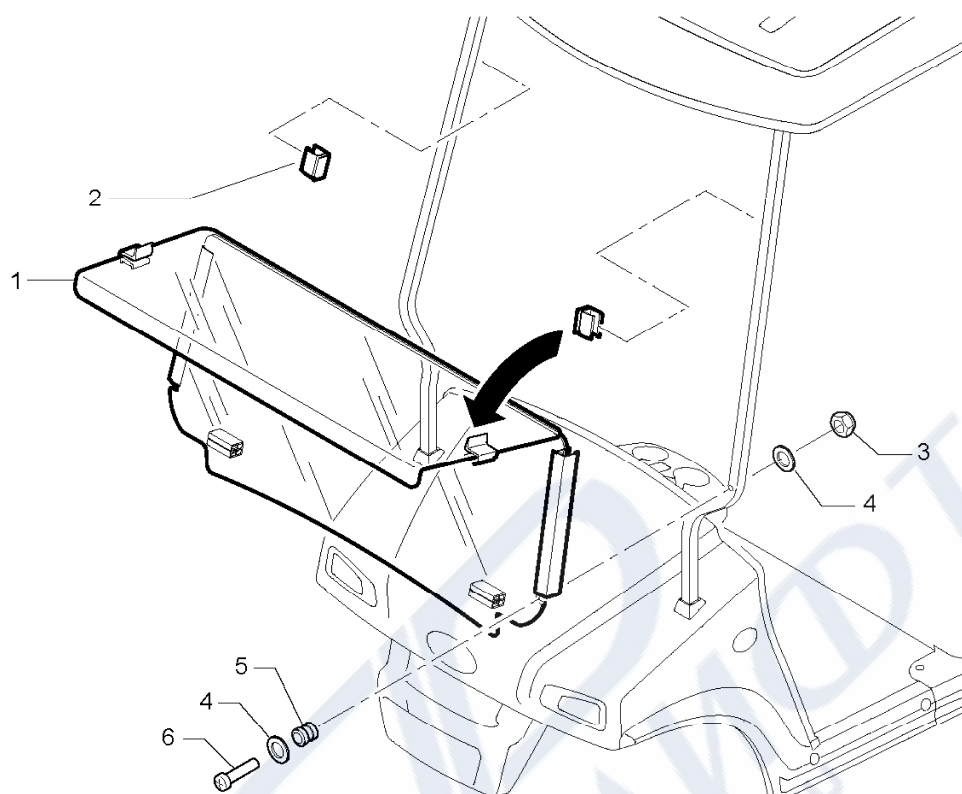

WINDSHIELD, FOLD DOWN

HO 48-054

 HO 48-054A (1)

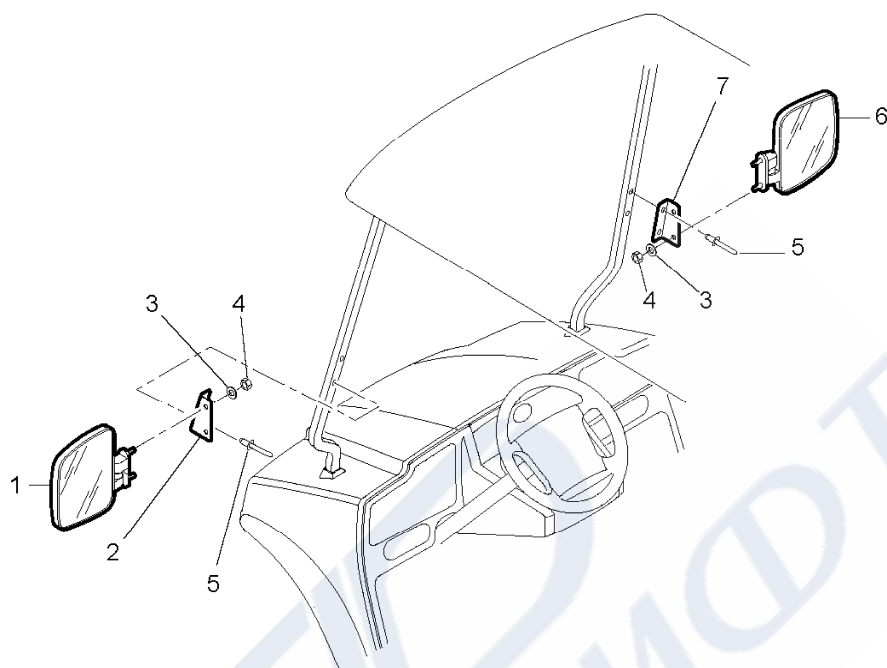

SIDE MIRRORS

HO 48-056A

1	2829795	MIRROR ASSEMBLY 미러 어셈블리	1
2	936584	BRACKET (LH) 브라켓 (좌측)	1
3	01EM00060	WASHER-PLAIN 와셔-플레인	4
4	40DM00006	NUT-FLANGED 너트-플랜지	4
5	2829763	POP RIVIT 리벳 콤팩트	4
6	2829796	MIRROR ASSEMBLY 미러 어셈블리	1
7	936585	BRACKET (RH) 브라켓 (우측)	1