

부품 매뉴얼 PARTS MANUAL

 
CQ 20/25/30 D

TRUCK MODEL : CQ20-30D

SERIAL NUMBER : CQ230D - XXXX - 8285 CNF (Tier2)

부품 청구시 항상 장비의 SERIAL NO. 도
함께 알려 주십시오.

ALWAYS GIVE TRUCK SERIAL NUMBER
WHEN ORDERING PARTS.

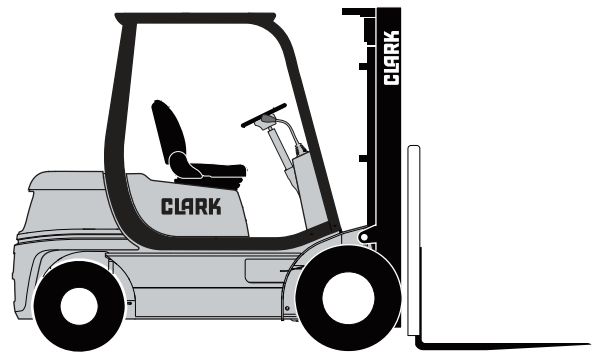

Publication Date : Dec. 2013




(Head office) 202-1 Ojung-Dong, Ojung-Gu,
Bucheon-city, Kyunggi-do, Korea
(Factory) No.18 Huaihedong Road,
Huangdao Economic & Technical Development Area,
Qingdao Shandong Province, China




00-104	SHORT BLOCK AND ENGINE GASKET SETS 쇼트 블록& 엔진 가스켓 세트	07-054	TRANSMISSION FASTENERS 트랜스미션 패스너
00-123	ENGINE SUB-ASSEMBLY MOUNTING 엔진 서브 어셈블리 마운팅	10-054	TRANSMISSION COOLING LINES 트랜스미션 쿨링 라인
00-224	CRANKSHAFT 크랭크 축	11-093	DISTRIBUTOR 디스트리뷰터
00-254	CAMSHAFT 캠 축	11-169	CRANKING MOTOR ASSEMBLY 크랭킹 모터
00-382	GOVERNOR 가버너	12-082	ALTERNATOR MOUNTING PARTS 알터네이터 마운팅
00-507	ENGINE BALANCER 엔진 발란서	12-092	ELECTRICAL ASSEMBLIES MOUNTING 전기장치 어셈블리 마운팅
00-563	ENGINE SUB-ASSEMBLY MOUNTING 엔진 서브 어셈블리 마운팅	12-243	ALTERNATOR ASSEMBLY 알터네이터 어셈블리
00-617	ENGINE MOUNT 엔진 마운트	13-058	REVERSER SWITCH 후진 스위치
00-729	FRONT END COVER 프론트 엔드 커버	13-212	HEADLAMP ASSEMBLY 헤드램프 어셈블리
00-758	CRANKCASE HEAD 크랭크케이스 헤드	13-282	STOP & TAIL LAMP 스톱& 테일 램프
00-806	CRANKCASE 크랭크케이스	14-692	WIRING 와이어링
01-033	OIL PAN 오일 팬	14-752	WIRING 와이어링
01-064	OIL PUMP 오일 펌프	20-124	AXLE ADAPTOR & DIFFERENTIAL 액슬 어댑터 & 디퍼렌셜
01-158	FAN & DRIVE 팬 & 드라이브	20-412	AXLE END & BRAKE ASSEMBLY 액슬 엔드& 브레이크 어셈블리
01-651	COOLING SYSTEM 쿨링 시스템	20-413	AXLE END & BRAKE ASSEMBLY 액슬 엔드& 브레이크 어셈블리
02-041	MANIFOLD 매니폴드	23-145	BRAKE MASTER CYLINDER 브레이크 마스터 실린더
02-092	EXHAUST SYSTEM 배기 시스템	23-658	HYDRAULIC BRAKE LINES 유압 브레이크 라인
02-106	AIR CLEANER 에어 크리너	23-746	BRAKE PEDAL & LINKAGE 브레이크 페달& 링크이지
02-222	ACCELERATION PEDAL AND LINKAGE 악셀레이터 페달& 링크이지	23-839	DRIVE WHEEL & TIRE MOUNTING 드라이브 휠& 타이어 마운팅
02-382	FUEL TANK 연료 탱크	23-840	STEER WHEEL AND TIRE 스티어링 휠& 타이어
02-725	AIR CLEANER 에어 크리너	23-844	DRIVE WHEEL AND TIRE 드라이브 휠& 타이어
02-942	FUEL LINE 연료 라인	23-848	STEER WHEEL & TIRE 스티어링 휠& 타이어
03-231	CARBURETOR 기화기	23-934	PARKING BRAKE LINKAGE 파킹 브레이크 링크이지
06-084	TRANSMISSION CONTROL COVER 트랜스미션 컨트롤 커버	25-023	STEERING GEAR MOUNTING 스티어링 기어 마운팅
06-086	TRANSMISSION CONTROL COVER 트랜스미션 컨트롤 커버	25-319	STEERING GEAR 스티어링 기어
06-090	TRANSMISSION ACCUMULATOR 트랜스미션 어큐뮬레이터	25-335	STEERING GEAR 스티어링 기어
06-429	DIRECTIONAL CONTROL LINKAGE 방향 컨트롤 링크이지	26-335	STEER AXLE MOUNTING 스티어링 액슬 마운팅
06-430	DIRECTIONAL CONTROL LINKAGE 방향 컨트롤 링크이지	26-536	POWER STEERING LINES 파워 스티어링 라인
06-573	HYDRATORK TRANSMISSION 하이드로토크 트랜스미션	26-812	STEERING AXLE 스티어링 액슬
06-574	HYDRATORK TRANSMISSION 하이드로토크 트랜스미션	26-855	STEERING CYLINDER 스티어링 실린더
06-575	TRANSMISSION CLUTCH PACKS 트랜스미션 클러치 팩	26-858	POWER STEERING CYLINDER 파워 스티어링 실린더
06-578	HYDRATORK TRANSMISSION 하이드로토크 트랜스미션	29-008	HYDRAULIC PUMP 유압 펌프
06-579	HYDRATORK TRANSMISSION 하이드로토크 트랜스미션	29-076	HYDRAULIC PUMP MOUNTING 유압 펌프 마운팅
06-585	HYDRATORK TRANSMISSION 하이드로토크 트랜스미션	29-158	HYDRAULIC SUMP & FILTER 유압 쉘& 필터
06-586	TRANSMISSION CLUTCH PACKS 트랜스미션 클러치 팩	29-304	HYDRAULIC OIL FILTER 유압 오일 필터
07-024	TRANSMISSION MOUNTING 트랜스미션 마운팅	30-443	HYDRAULIC VALVE 유압 밸브

30-449	HYDRAULIC VALVE 유압 밸브
30-732	VALVE CONTROL LINKAGE 밸브 컨트롤 링커이지
31-550	HYDRAULIC LIFT & TILT LINES 유압 리프트& 틸트 라인
31-662	MAIN HYDRAULIC LINES 메인 유압 라인
32-022	TILT CYLINDER 틸트 실린더
32-082	TILT CYLINDER MOUNTING 틸트 실린더 마운팅
32-094	TILT CYLINDER MOUNTING 틸트 실린더 마운팅
33-008	FLOW CONTROL VALVE 플로우 컨트롤 밸브
34-374	LIFT CYLINDER 리프트 실린더
34-716	UPRIGHT MOUNTING 마스트 마운팅
34-746	LOAD SAFETY RACK 로드 안전 랙
34-929	LIFT CARRIAGE ASSEMBLY 리프트 캐리지 어셈블리
38-190	FRAME & COUNTERWEIGHT 프레임& 카운터웨이트
39-181	SEAT MOUNTING 시트 마운팅
39-184	SEAT ASSEMBLY 시트 어셈블리
39-319	SHEET METAL 시트 메탈
39-322	TOP HOOD & MOUNTING 상부 후드& 어셈블리
39-323	SHEET METAL 시트 메탈
39-529	OVERHEAD GUARD 오버헤드가드
39-736	INSTRUMENT PANEL 계기판
40-192	DATA PLATES & DECALS 사양판 및 데칼
50-714	COWL PLUMBING 카울 기관
50-719	HOSE ADAPTATION 호스 어댑션
50-757	KISSEN KIT INSTALLATION KISSEN 키트 조립그림
66-215	TRIPLE STAGE UPRIGHT 3단 마스트
66-316	LIFT CHAIN 리프트 체인
66-425	LIFT CYLINDER PIPING 리프트 실린더 파이핑
66-603	FINAL LIFT CYLINDER 파이널 리프트 실린더
75-(02)162	AIR CLEANER LINE 에어 크리너 라인
75-(13)000	HEAD LAMP INSTALLATION 헤드램프 조립그림
75-(13)450	STOP AND TAIL LAMP 스톱& 테일 램프
75-(13)597	CHASSIS_KIT 샤시 키트
75-(30)084	1 LEVER/1FUNCTION FOR 2 HOSE INTERNALS 1레버 / 1기능 (2호스)
75-(30)222	AUXILIARY VALVE LEVER 보조 밸브 레버

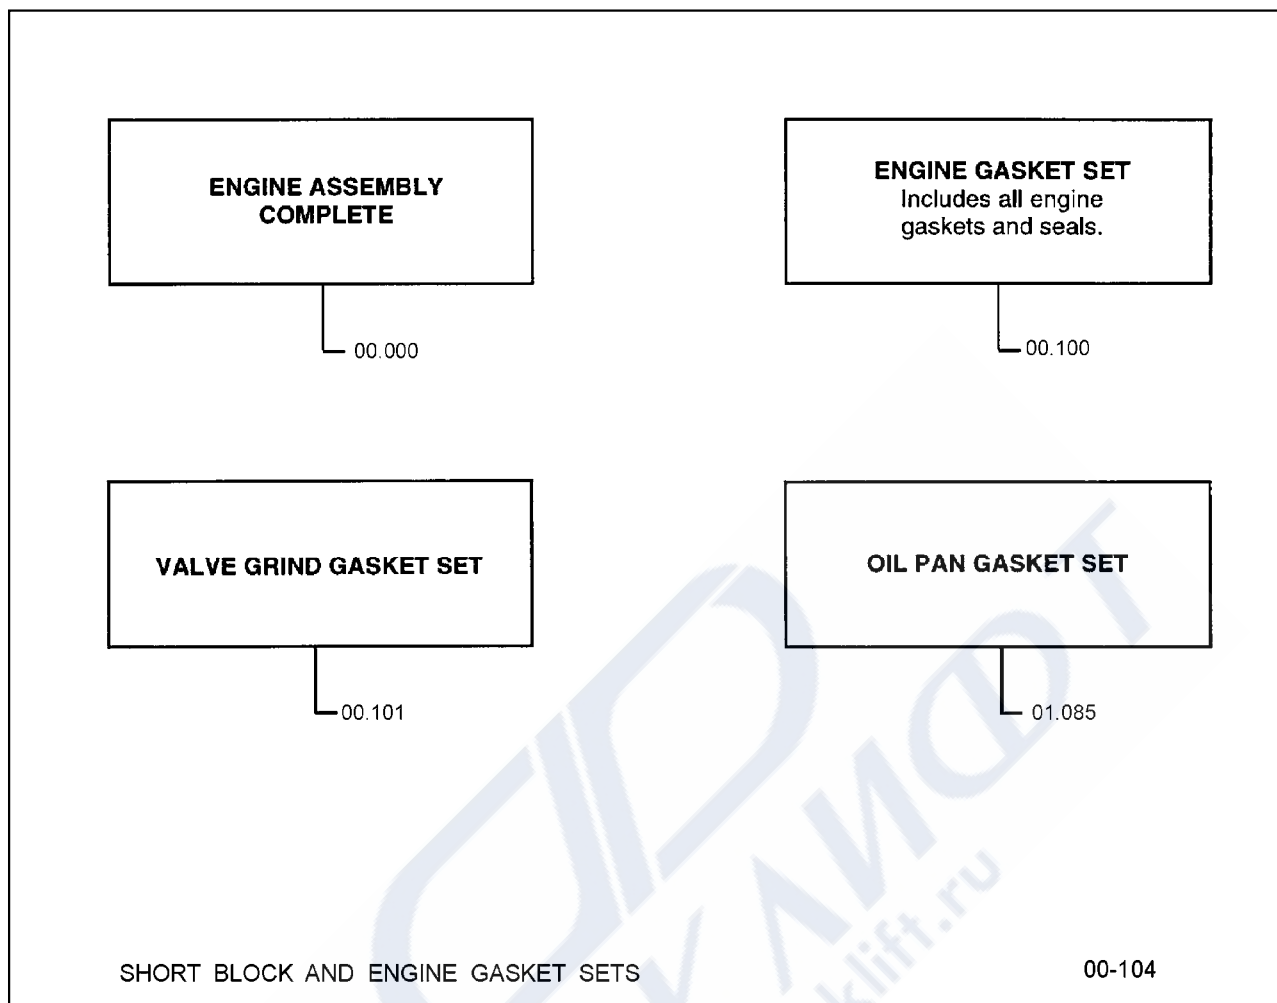 

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.100	GASKET KIT, ENGINE OVERHAUL 가스켓키트
00.101	VALVE GRIND GASKET KIT (TOP SET) 밸브가스켓키트
01.085	GASKET, CRANKCASE OIL PAN (ENGINE SET) 가스켓

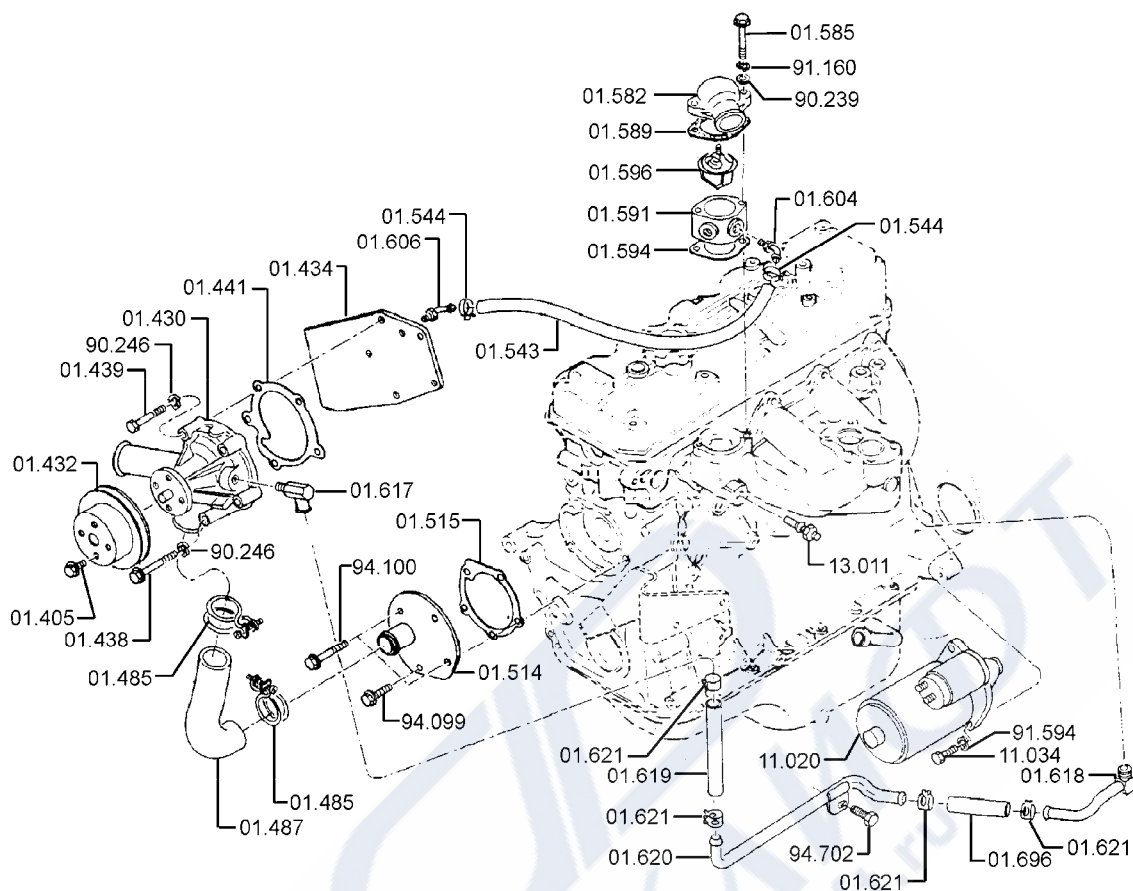 


ENGINE SUB-ASSEMBLY MOUNTING

00-123


01.405	FASTENER, FAN BLADE 패스너	01.589	GASKET, WATER OUTLET ELBOW 가스켓
01.430	PUMP ASSEMBLY, ENGINE WATER 펌프	01.591	HOUSING, ENGINE THERMOSTAT 하우징
01.432	PULLEY, WATER PUMP 풀리	01.594	GASKET, ENGINE THERMOSTAT HOUSING ATT 가스켓
01.434	COVER, WATER PUMP 커버	01.596	THERMOSTAT, ENGINE 서모스탯
01.438	FASTENER, WATER PUMP 패스너	01.604	FITTING, WATER OUTLET ELBOW 피팅
01.439	FASTENER, WATER PUMP 패스너	01.606	FITTING, THERMO BYPASS AT WTR PUMP 피팅
01.441	GASKET, ENGINE WATER PUMP ATTACHING 가스켓	01.617	FITTING, WATER PUMP BLEEDER LINE 피팅
01.485	CLAMP, ENGINE WATER PUMP DISCHARGE HOSE 클램프	01.618	FITTING, WATER PUMP BLEEDER LINE 피팅
01.487	HOSE, ENGINE WATER PUMP DISCHARGE 호스	01.619	LINE, WATER PUMP BLEEDER 라인
01.514	FLANGE, ENGINE WATER PUMP DISCHARGE 플랜지	01.620	FITTING, WATER PUMP BLEEDER LINE 피팅
01.515	GASKET, ENGINE WATER PUMP DISCHARGE FLANGE 가스켓	01.621	CLAMP, WATER PUMP BLEEDER LINE 클램프
01.543	LINE, ENGINE THERMO BY PASS 라인	01.696	LINE, WATER PUMP BLEEDER 라인
01.544	CLAMP, ENGINE THERMOSTAT BY-PASS 클램프	11.020	MOTOR ASSEMBLY, STARTING 모터
01.582	ELBOW, WATER OUTLET 엘보우	11.034	FASTENER, STARTING MOTOR 패스너
01.585	FASTENER, WATER OUTLET ELBOW-REAR 패스너	13.011	CONTROL, ENGINE TEMPERATURE INDICATOR 컨트롤


90.239	WASHER, WATER OUTLET ELBOW FASTENER 와셔
90.246	LOCKWASHER, WATER PUMP FASTENER 로크와셔
91.160	LOCKWASHER, WATER OUTLET ELBOW FASTENER 로크와셔
91.594	LOCKWASHER, STARTER FASTENER 로크와셔
94.099	FASTENER, WATER PUMP DISCHARGE FLANGE 패스너
94.100	FASTENER, WATER PUMP DISCHARGE FLANGE 패스너
94.702	FASTENER, WATER PUMP BLEEDER LINE CLIP 패스너

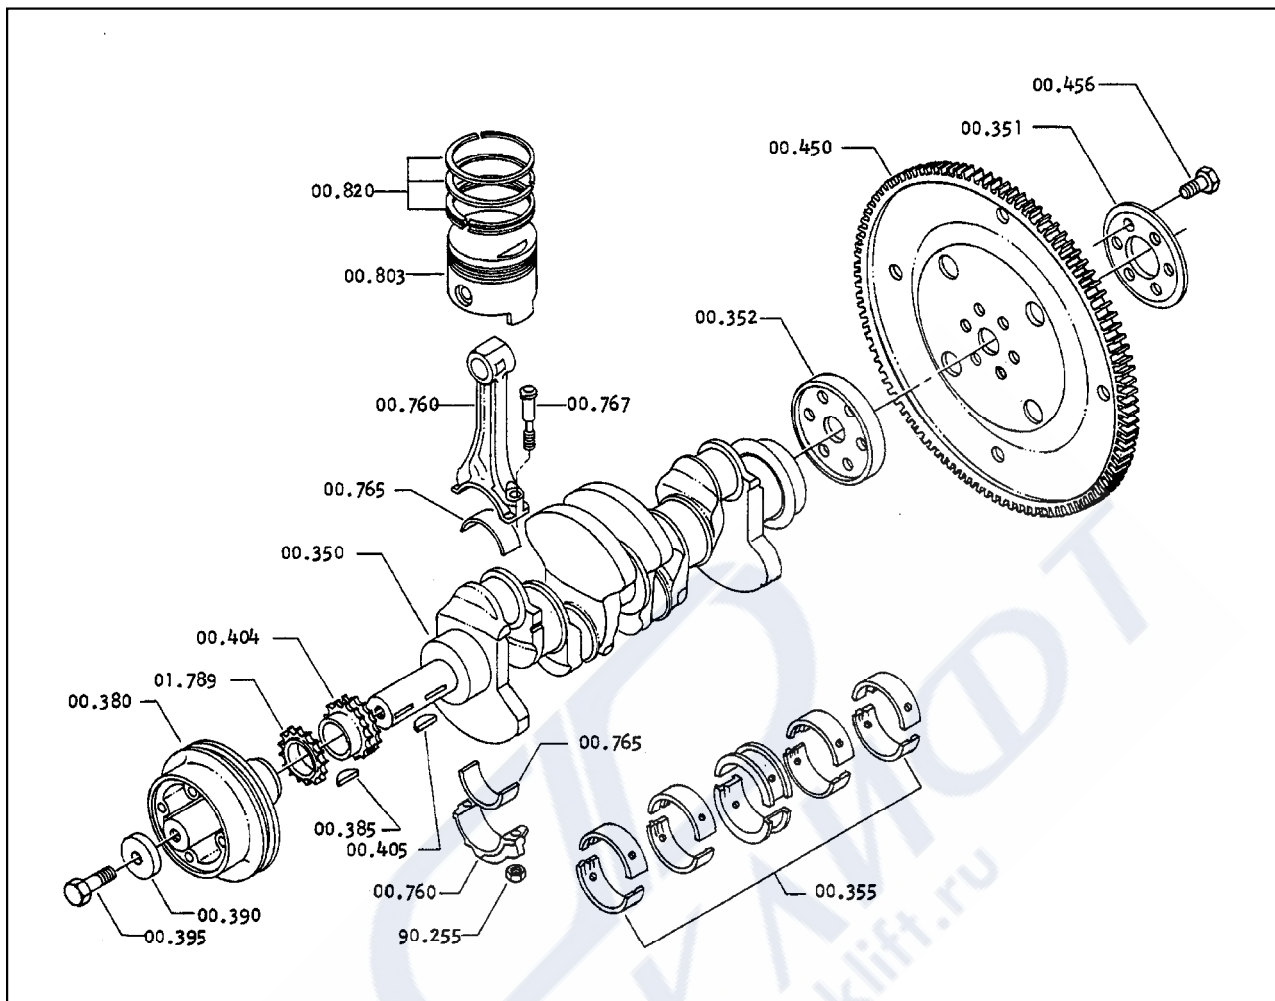 

- | | |
|--------|---|
| 00.350 | CRANKSHAFT
크랭크샤프트 |
| 00.351 | PLATE, FLYWHEEL REINFORCING
플레이트 |
| 00.352 | ADAPTOR, FLYWHEEL MOUNTING
어댑터 |
| 00.355 | BEARING, MAIN JOURNAL (ENGINE SET)
베어링 |
| 00.380 | PULLEY, CRANKSHAFT
폴리 |
| 00.385 | KEY, CRANKSHAFT PULLEY
키 |
| 00.390 | WASHER, CRANKSHAFT PULLEY
와셔 |
| 00.395 | FASTENER, CRANKSHAFT PULLEY
패스너 |
| 00.404 | GEAR, CRANKSHAFT TIMING
기어 |

00.405	KEY, CRANKSHAFT TIMING GEAR 키
00.450	FLYWHEEL 플라이휠
00.456	FASTENER, CRANKSHAFT TO FLYWHEEL 패스너
00.760	ROD ASSEMBLY, CONNECTING 로드
00.765	BEARING, CONNECTING ROD 베어링
00.767	FASTENER, CONNECTING ROD BEARING CAP 패스너
00.803	PISTON (ONE CYLINDER) 피스톤& 핀
00.820	PISTON RING 피스톤링
01.789	GEAR, OIL PUMP DRIVE 기어
90.255	NUT, CONNECTING ROD BEARING CAP FASTENER 너트

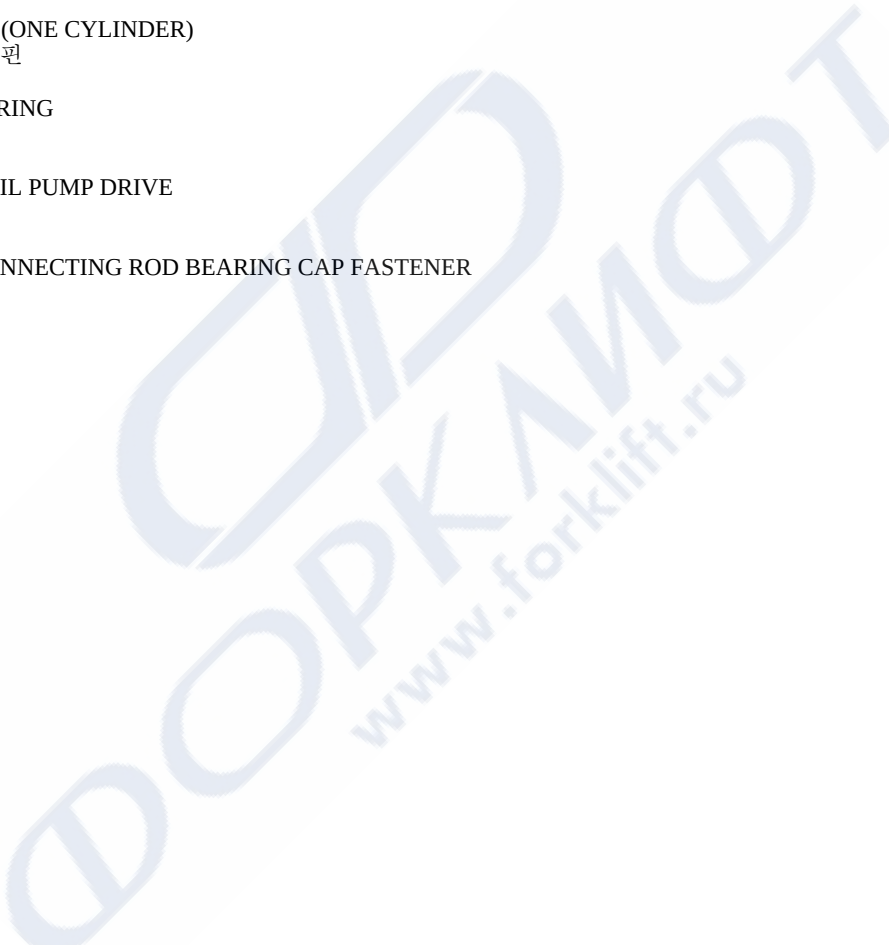 

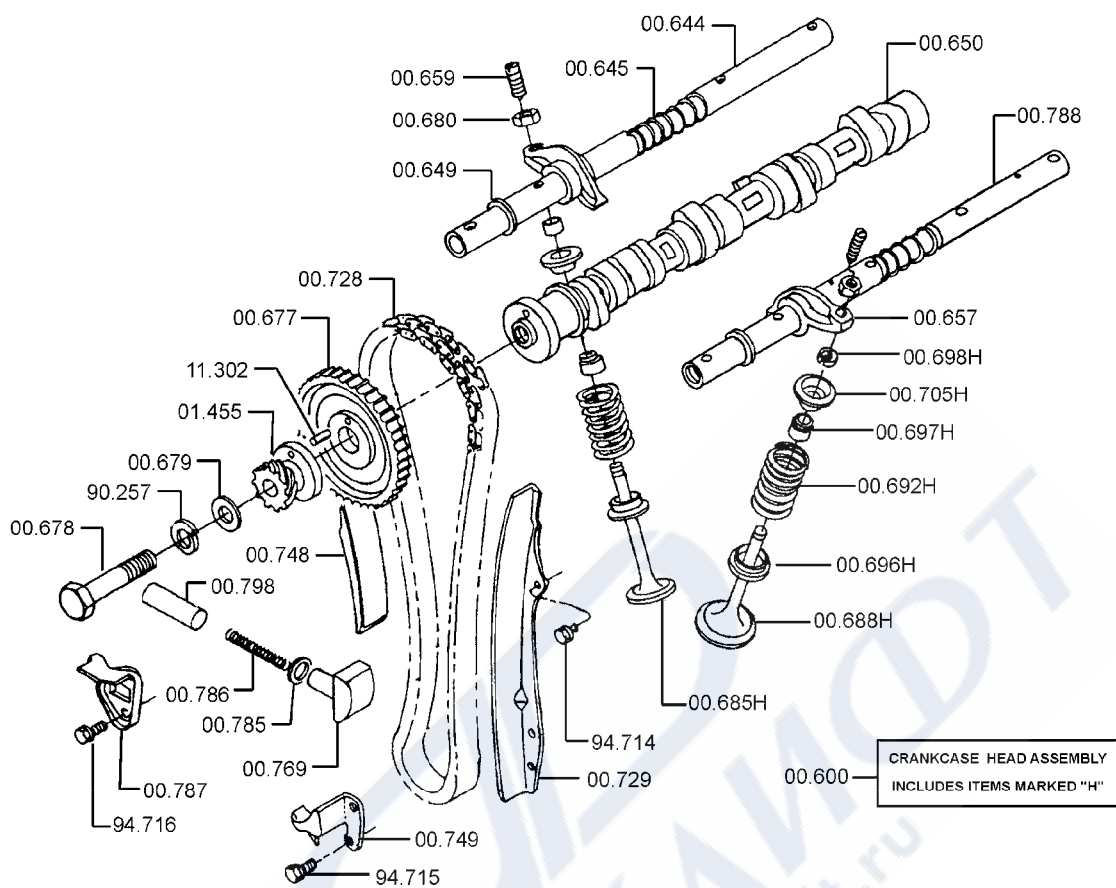 


CAMSHAFT

00-254

00.600	HEAD ASSEMBLY, CRANKCASE 헤드	00.697	SEAL, ENGINE VALVE 씰
00.644	PIVOT, ENGINE ROCKER ARM 피봇	00.698	LOCK, EXHAUST VALVE SPRING SEAT 로크
00.645	SPRING, ENGINE ROCKER ARM 스프링	00.705	SEAT, EXHAUST VALVE SPRING 시트
00.649	WASHER, ENGINE ROCKER ARM PIVOT 와셔	00.728	CHAIN, CAMSHAFT TIMING 체인
00.650	CAMSHAFT 캠샤프트	00.729	GUIDE, CAMSHAFT TIMING CHAIN 가이드
00.657	ROCKER ARM ASSEMBLY, ENGINE VALVE 로커	00.748	GUIDE, CAMSHAFT TIMING CHAIN 가이드
00.659	ADJUSTOR, ENGINE VALVE 어드저스터	00.749	RETAINER, CAMSHAFT TIMING CHAIN 리테이너
00.677	GEAR, CAMSHAFT TIMING 기어	00.769	TENSIONER, CAMSHAFT TIMING CHAIN 텐셔너
00.678	FASTENER, TIMING GEAR TO CAMSHAFT 패스너	00.785	SEAT, CAMSHAFT TIMING CHAIN TENSIONER 시트
00.679	WASHER, CAM GEAR NUT 와셔	00.786	SPRING, CAMSHAFT TIMING CHAIN TENSIONER 스프링
00.680	LOCK, ENGINE VALVE ADJUSTOR 로크	00.787	RETAINER, CAMSHAFT TIMING GEAR 리테이너
00.685	VALVE, EXHAUST 밸브	00.788	PIVOT, ENGINE ROCKER ARM (RH) 피봇
00.688	VALVE, INTAKE 밸브	00.798	DAMPENER, CAMSHAFT TIMING CHAIN TENSIONER SPRING 댐프너
00.692	SPRING, ENGINE EXHAUST VALVE 스프링	01.455	GEAR, DISTRIBUTOR DRIVE 기어
00.696	PILOT, ENGINE VALVE SPRING 파일롯	11.302	PIN, DISTRIBUTOR GEAR 핀


90.257	LOCKWASHER, TIMING GEAR TO CAMSHAFT FASTENER 로크와셔
94.714	FASTENER, CAMSHAFT TIMING CHAIN GUIDE 패스너
94.715	FASTENER, CAMSHAFT TIMING CHAIN RETAINER 패스너
94.716	FASTENER, CAMSHAFT TIMING GEAR RETAINER 패스너



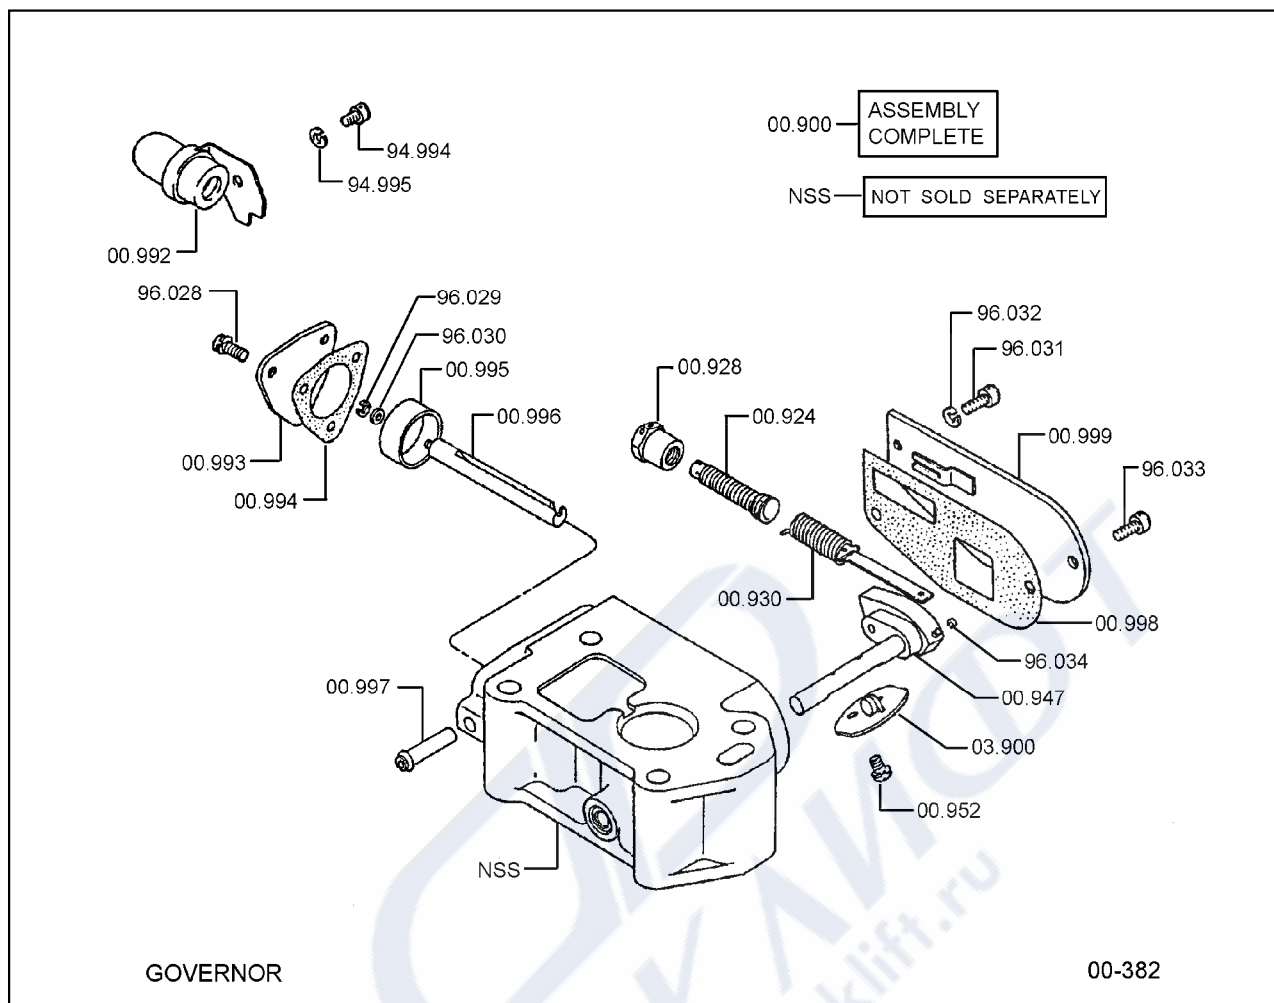 

00.900	GOVERNOR ASSEMBLY , ENGINE 거버너
00.924	ADJUSTOR, GOVERNOR SPRING 어드저스터
00.928	FASTENER, GOVERNOR ADJUSTING LEVER 패스너
00.930	SPRING, GOVERNOR 스프링
00.947	LEVER & SHAFT, GOVERNOR 레버& 샤프트
00.952	FASTENER, GOVERNOR THROTTLE 패스너
00.992	CAP, ENGINE GOVERNOR SEAL (SPEED ADJUSTMENT) 캡
00.993	COVER, GOVERNOR ACCESS 커버
00.994	GASKET,GOVERNOR ACCESS COVER 가스켓

00.995	PISTON,GOVERNOR STABILIZER 피스톤
00.996	SHAFT, GOVERNOR STABILIZER PISTON 샤프트
00.997	FITTING,GOVERNOR FUEL 피팅
00.998	GASKET, GOVERNOR ACCESS COVER 가스켓
00.999	COVER, GOVERNOR ACCESS 커버
03.900	THROTTLE PLATE, ENGINE GOVERNOR 스로틀
94.994	FASTENER, ENGINE GOVERNOR SPEED ADJUSTING SEAL CAP 패스너
94.995	LOCKWASHER,ENGINE GOVERNOR SPEED ADJUSTING SEAL CA 로크와셔
96.028	FASTENER, GOVERNOR ACCESS COVER 패스너
96.029	FASTENER, GOVERNOR STABILIZER PISTON 패스너
96.030	WASHER, GOVERNOR STABILIZER PISTON 와셔
96.031	FASTENER, GOVERNOR ACCESS COVER 패스너
96.032	LOCKWASHER, GOVERNOR ACCESS COVER FASTENER 로크와셔
96.033	FASTENER, GOVERNOR ACCESS COVER 패스너
96.034	FASTENER, GOVERNOR SPRING 패스너

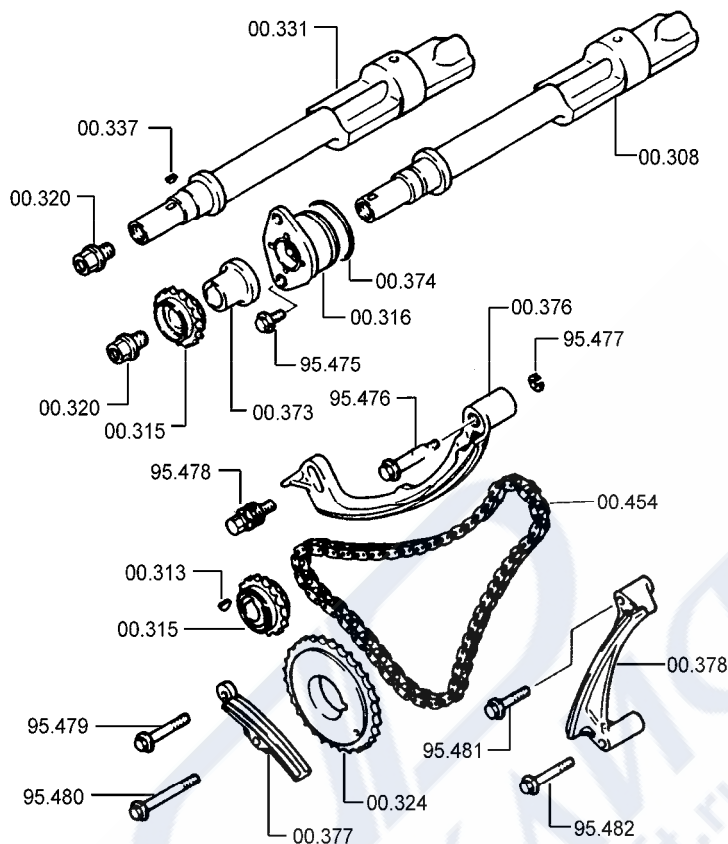 


ENGINE BALANCER

00-507


- 00.308 WEIGHT, ENGINE BALANCER
밸런서웨이트
- 00.313 KEY, BALANCER WEIGHT GEAR
키
- 00.315 GEAR, BALANCER WEIGHT DRIVEN
기어
- 00.316 RETAINER, BALANCER WEIGHT GEARS
리테이너
- 00.320 FASTENER, ENGINE BALANCER DRIVE GEAR
패스너
- 00.324 GEAR, BALANCER WEIGHT DRIVE
기어
- 00.331 WEIGHT, ENGINE BALANCER
밸런서웨이트
- 00.337 KEY, ENGINE BALANCER WEIGHT TO SHAFT
키
- 00.373 SPACER, ENGINE BALANCER WEIGHT DRIVEN GEAR
스페이서

00.374	SEAL, ENGINE BALANCER WEIGHT RETAINER 씰
00.376	GUIDE, ENGINE BALANCER DRIVE CHAIN 가이드
00.377	GUIDE, ENGINE BALANCER DRIVE CHAIN 가이드
00.378	GUIDE, ENGINE BALANCER DRIVE CHAIN 가이드
00.454	CHAIN,ENGINE BALANCER DRIVE 체인
95.475	FASTENER, ENGINE BALANCER WEIGHT RETAINER 패스너
95.476	FASTENER, ENGINE BALANCER WEIGHT DRIVE CHAIN GUIDE 패스너
95.477	LOCKWASHER, ENGINE BALANCER WEIGHT DRIVE CHAIN GUI 로크와셔
95.478	FASTENER, ENGINE BALANCER WEIGHT DRIVE CHAIN GUIDE 패스너
95.479	FASTENER, ENGINE BALANCER WEIGHT DRIVE CHAIN GUIDE 패스너
95.480	FASTENER, ENGINE BALANCER WEIGHT DRIVE CHAIN GUIDE 패스너
95.481	FASTENER, ENGINE BALANCER WEIGHT DRIVE CHAIN GUIDE 패스너
95.482	FASTENER, ENGINE BALANCER WEIGHT DRIVE CHAIN GUIDE 패스너

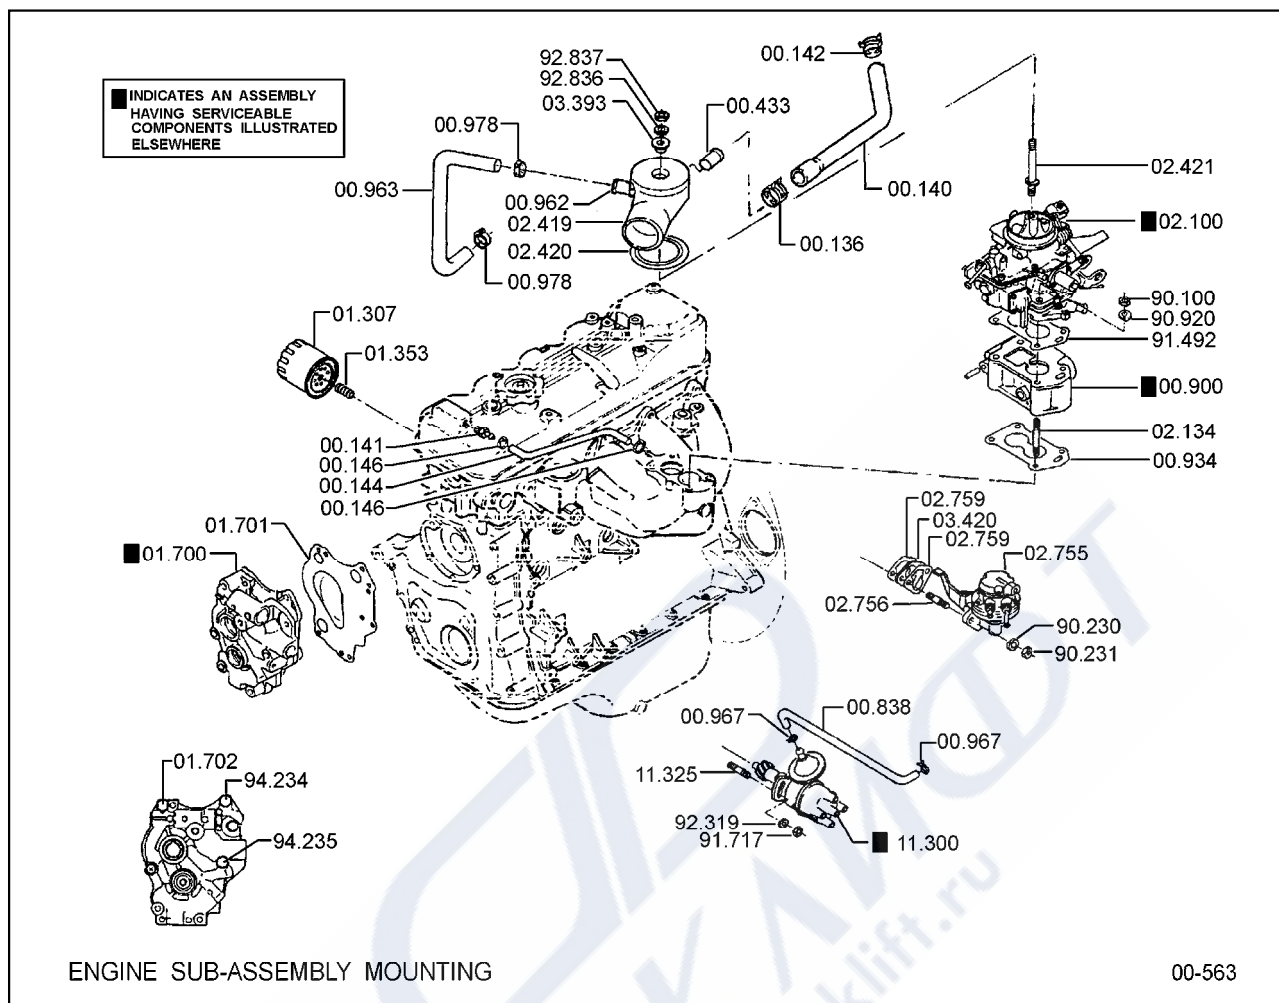 


00.136	CLIP, CRANKCASE VENT TUBE 클립	01.353	FITTING, BLOCK TO OIL FILTER 피팅
00.140	LINE, CRANKCASE VENT TUBE 라인	01.700	OIL PUMP ASSEMBLY 오일펌프
00.141	CONNECTOR, CRANKCASE VENT TUBE 커넥터	01.701	GASKET, OIL PUMP ATTACHING 가스켓
00.142	CLAMP, CRANKCASE VENT TUBE HOSE 클램프	01.702	FASTENER, OIL PUMP 패스너
00.144	LINE, CRANKCASE VENT TUBE VALVE 라인	02.100	CARBURETOR ASSEMBLY 기화기
00.146	CLAMP, CRANKCASE VENT TUBE VALVE LINE 클램프	02.134	FASTENER, CARBURETOR 패스너
00.433	FITTING, CRANKCASE BREATHER LINE 피팅	02.419	ADAPTOR, ENGINE AIR INTAKE 어댑터
00.838	LINE, DISTRIBUTOR VACUUM 라인	02.420	GASKET, ENGINE AIR INTAKE ADAPTOR 가스켓
00.862	FASTENER, FLYWHEEL HOUSING TO CRANKCASE 패스너	02.421	FASTENER, ENGINE AIR INTAKE ADAPTOR 패스너
00.900	GOVERNOR ASSEMBLY, ENGINE 거버너	02.755	PUMP, FUEL 펌프
00.934	GASKET, GOVERNOR ATTACHING 가스켓	02.756	FASTENER, FUEL PUMP ATTACHING 패스너
00.963	LINE, GOVERNOR VACUUM 라인	02.759	GASKET, FUEL PUMP ATTACHING 가스켓
00.967	CLAMP, DISTRIBUTOR VACUUM LINE 클램프	03.393	SEAL, ENGINE AIR INTAKE ADAPTOR FASTENER 씰
00.978	CLAMP, GOVERNOR VACUUM LINE 클램프	03.420	SPACER, FUEL PUMP MOUNTING 스페이서
01.307	CARTRIDGE & GASKET, ENGINE OIL FILTER 카트리지와 가스켓	11.300	DISTRIBUTOR ASSEMBLY 디스트리뷰터

11.325	FASTENER, DISTRIBUTOR CLAMPING ARM 패스너
90.100	LOCKWASHER, STEERING GEAR ACCESS COVER FASTENER 로크와셔
90.230	LOCKWASHER, FUEL PUMP ATTACHING FASTENER 로크와셔
90.231	NUT, FUEL PUMP ATTACHING FASTENER 너트
90.920	NUT, CARBURETOR MOUNTING FASTENER 너트
91.492	LOCKWASHER, CARBURETOR MOUNTING FASTENER 로크와셔
91.717	NUT, DISTRIBUTOR FASTENER 너트
92.319	WASHER, DISTRIBUTOR MOUNTING CLAMP FASTENER 와셔
92.836	WASHER, ENGINE AIR INTAKE ADAPTOR FASTENER 와셔
92.837	NUT, ENGINE AIR INTAKE ADAPTOR FASTENER 너트
94.234	FASTENER, OIL PUMP ASSEMBLY 패스너
94.235	FASTENER, OIL PUMP ASSEMBLY 패스너

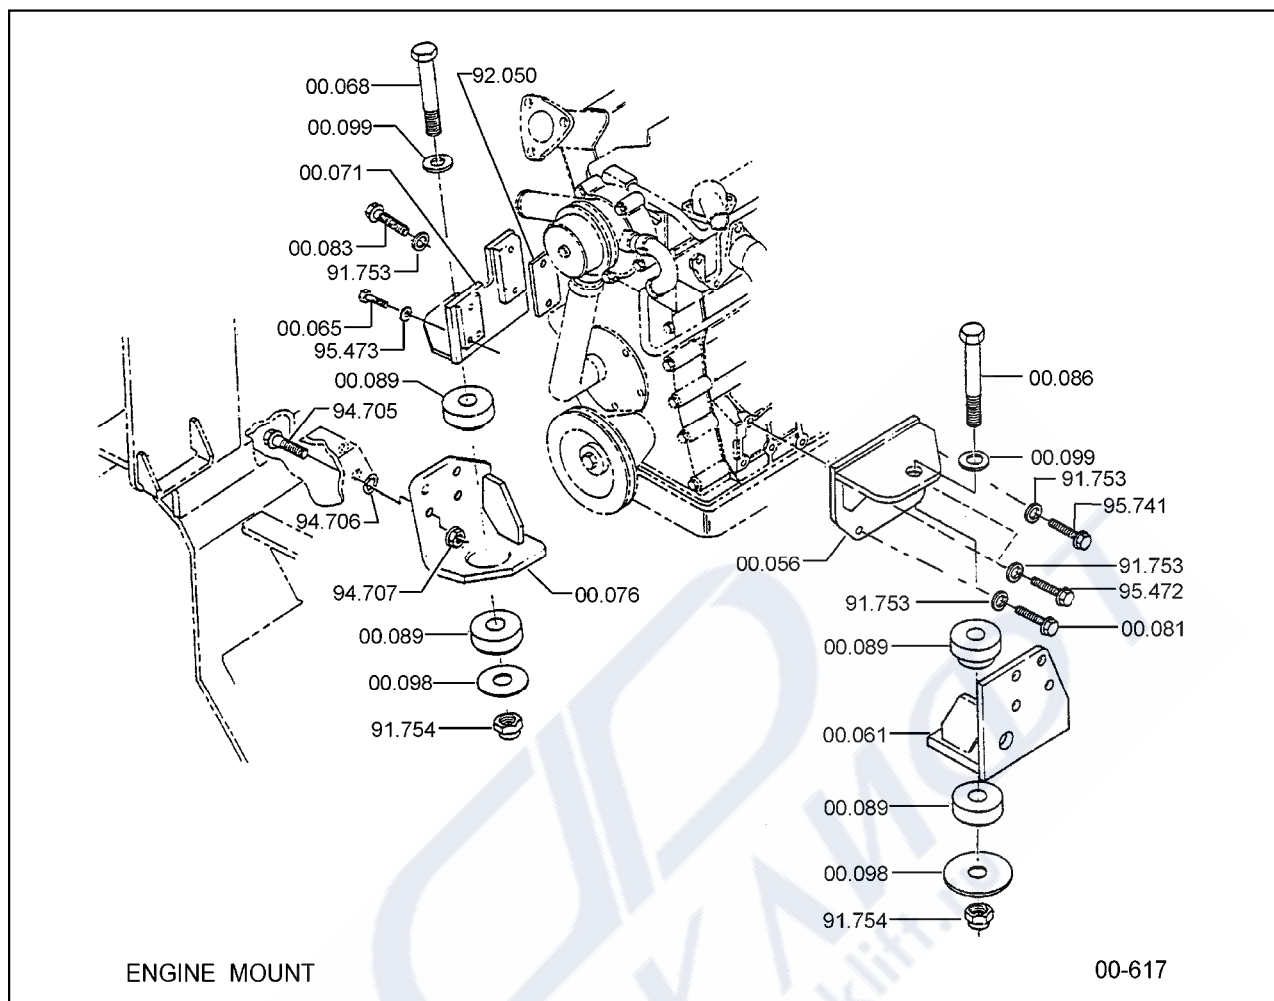 


00.056	MOUNT, ENGINE RH 마운트
00.061	BRACKET, ENGINE MOUNTING 브라켓
00.065	FASTENER, ENGINE MOUNT 패스너
00.068	FASTENER, LH ENGINE MOUNT 패스너
00.071	MOUNT, ENGINE LH 마운트
00.076	BRACKET, ENGINE MOUNTING 브라켓
00.081	FASTENER, ENGINE MOUNT (RH) 패스너
00.083	FASTENER, ENGINE MOUNT (LH) 패스너
00.086	FASTENER, RH ENGINE MOUNT 패스너

00.089	DAMPENER, LH ENGINE MOUNT VIBRATION 댐프너
00.098	WASHER, ENGINE MOUNTING TO FRAME RH 와셔
00.099	WASHER, ENGINE MOUNTING TO FRAME RH (LOWER) 와셔
91.753	WASHER, ENGINE MOUNT FASTENER 와셔
91.754	NUT, ENGINE MOUNT FASTENER 너트
92.050	SPACER, ENGINE MOUNTING FASTENER 스페이서
94.705	FASTENER, ENGINE MOUNTING BRACKET 패스너
94.706	RETAINER, ENGINE MOUNTING BRACKET FASTENER 리테이너
94.707	NUT, ENGINE MOUNTING BRACKET FASTENER 너트
95.472	FASTENER, ENGINE MOUNT 패스너
95.473	WASHER, ENGINE MOUNT FASTENER 와셔
95.741	NUT, RADIATOR OVERFLOW LINE CLAMP FASTENER 너트

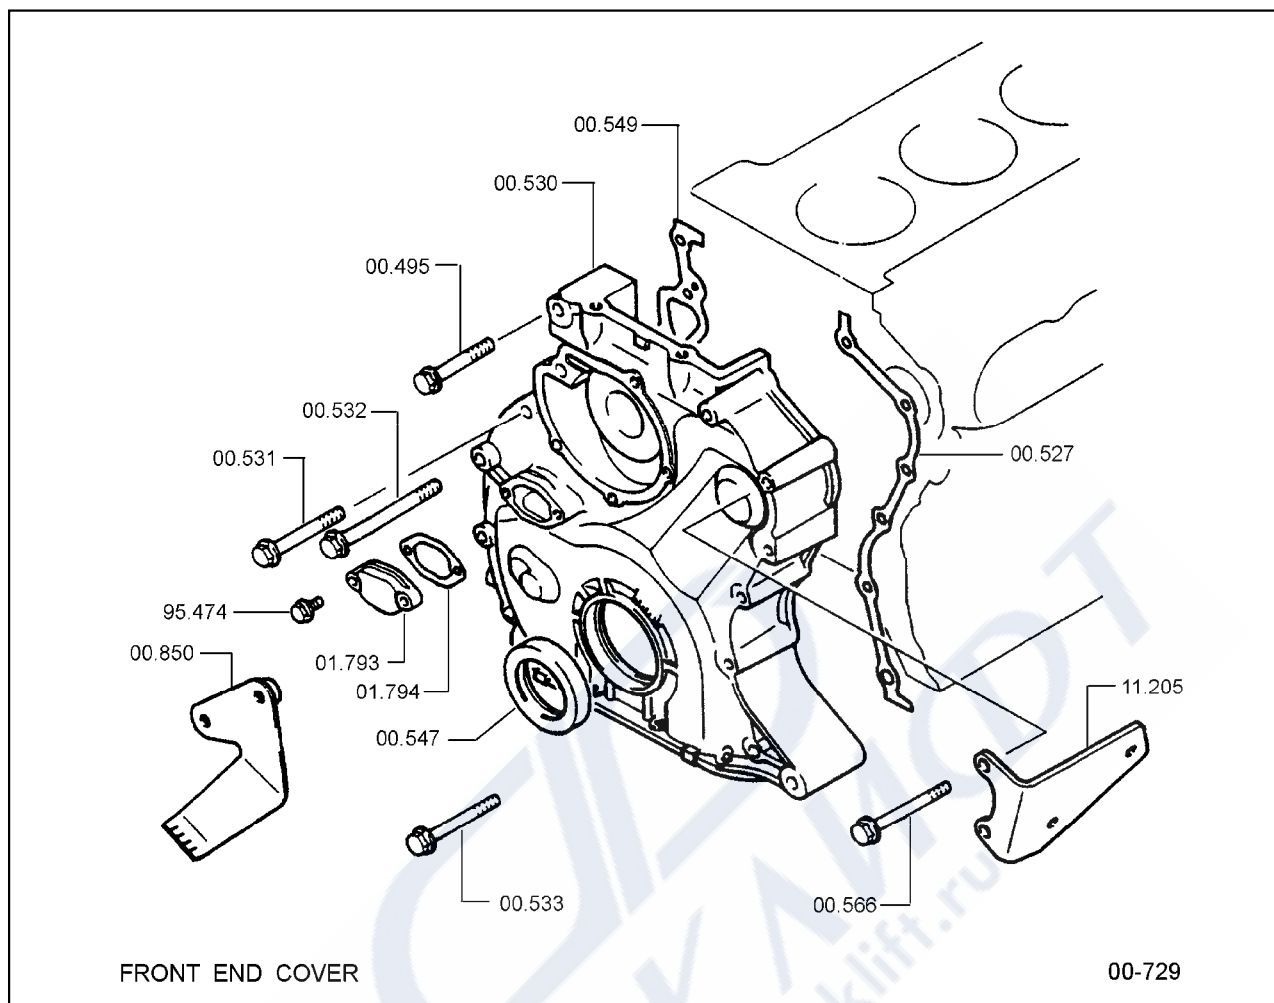 

00.495	FASTENER, ENGINE FRONT GEAR COVER 패스너
00.527	GASKET, ENGINE FRONT GEAR COVER 가스켓
00.530	COVER, ENGINE FRONT GEAR 커버
00.531	FASTENER, ENGINE FRONT GEAR COVER 패스너
00.532	FASTENER, ENGINE FRONT GEAR COVER 패스너
00.533	FASTENER, ENGINE FRONT GEAR COVER 패스너
00.547	SEAL, ENGINE FRONT GEAR COVER 셀
00.549	GASKET, ENGINE FRONT GEAR COVER SEAL 가스켓
00.566	FASTENER, ENGINE FRONT GEAR COVER 패스너

00.850	SCREW, FLYWHEEL TIMING POINTER 스크류
01.793	COVER, ENGINE OIL PUMP DRIVE CHAIN ACCESS HOLE 커버
01.794	GASKET, ENGINE OIL PUMP DRIVE CHAIN ACCESS HOLE CO 가스켓
11.205	BRACKET, COIL MOUNTING 브라켓
95.474	FASTENER, ENGINE OIL PUMP DRIVE CHAIN ACCESS HOLE 패스너

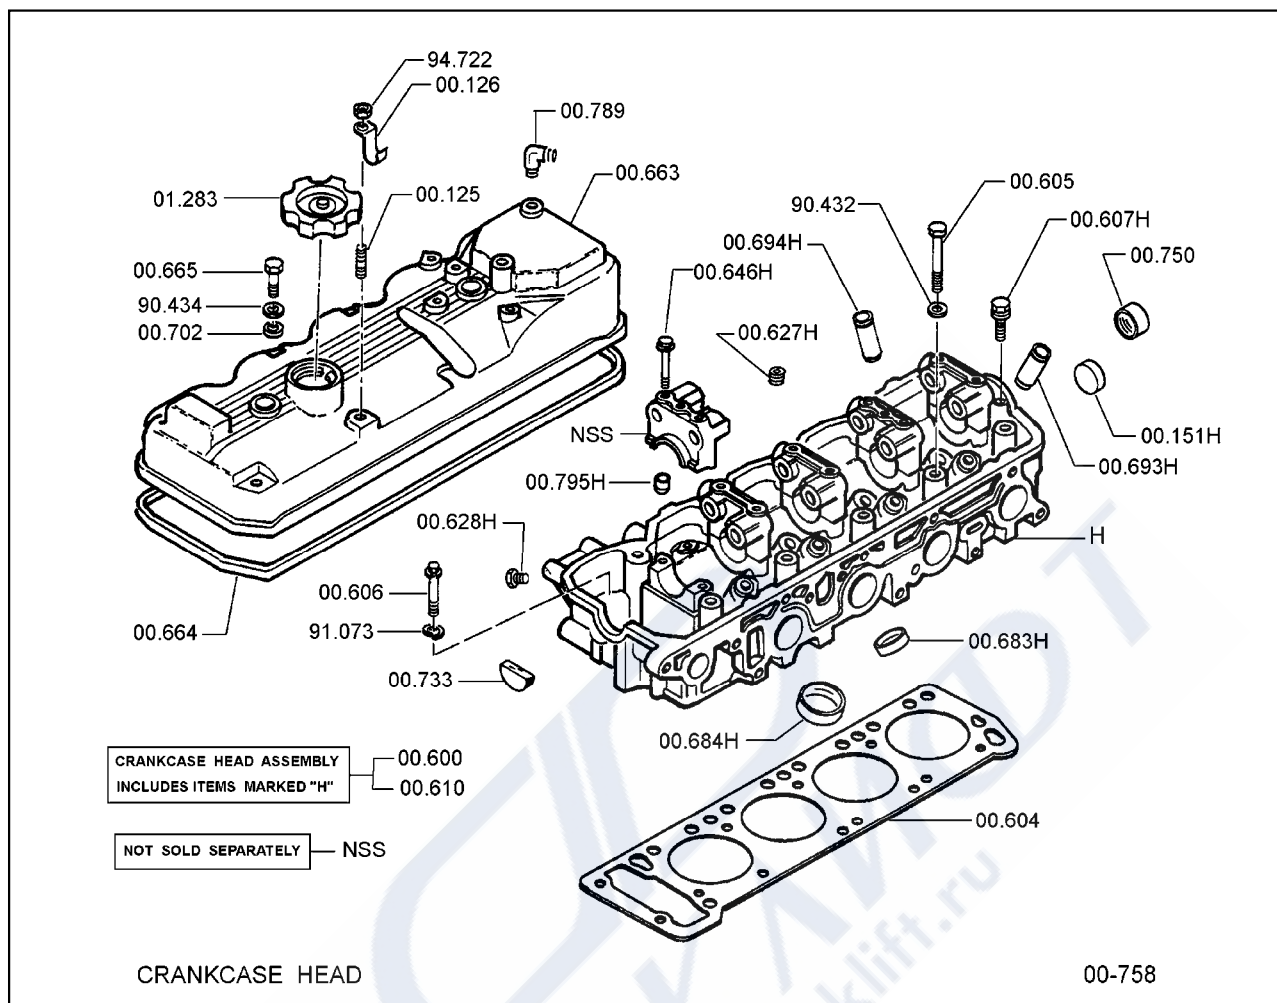 

00.125 FASTENER, CRANKCASE VENT LINE CLIP
패스너

00.126 CLIP, CRANKCASE VENT LINE
클립

00.151 PLUG, CRANKCASE HEAD REAR
플러그

00.600 HEAD ASSEMBLY, CRANKCASE
헤드

00.604 GASKET, CRANKCASE HEAD
가스켓

00.605 FASTENER, CRANKCASE HEAD
패스너

00.606 FASTENER, CRANKCASE HEAD
패스너

00.607 FASTENER, CRANKCASE HEAD
패스너

00.610 HEAD, CRANKCASE
헤드

00.627 PLUG, CRANKCASE HEAD
플러그

00.628 PLUG, CRANKCASE HEAD
플러그

00.646 FASTENER, ENGINE ROCKER ARM PIVOT SUPPORT
패스너

00.663 COVER, ROCKER ARM
커버

00.664 GASKET, ROCKER ARM COVER
가스켓

00.665 FASTENER, ROCKER ARM COVER
패스너

00.683 SEAT, EXHAUST VALVE INSERT
시트

00.684 SEAT, INTAKE VALVE INSERT
시트

00.693 GUIDE, INTAKE VALVE
가이드

00.694 GUIDE, EXHAUST VALVE
가이드

00.702 SEAL, ROCKER ARM COVER FASTENER
씰

00.733 PLUG, CRANKCASE HEAD END COVER
플러그

00.750 PLUG, CRANKCASE HEAD
플러그

00.789 PLUG, ROCKER ARM COVER
플러그

00.795 DOWEL, RING ROCKER ARM PIVOT SUPPORT FASTENER
다웰

 
01.283 CAP, CRANKCASE OIL FILLER
캡

90.432 WASHER, CRANKCASE HEAD FASTENER
와셔


90.434 WASHER, ROCKER ARM COVER FASTENER
와셔

91.073 LOCKWASHER, CRANKCASE HEAD FASTENER
로크와셔

94.722 NUT, CRANKCASE VENT LINE CLIP FASTENER
너트

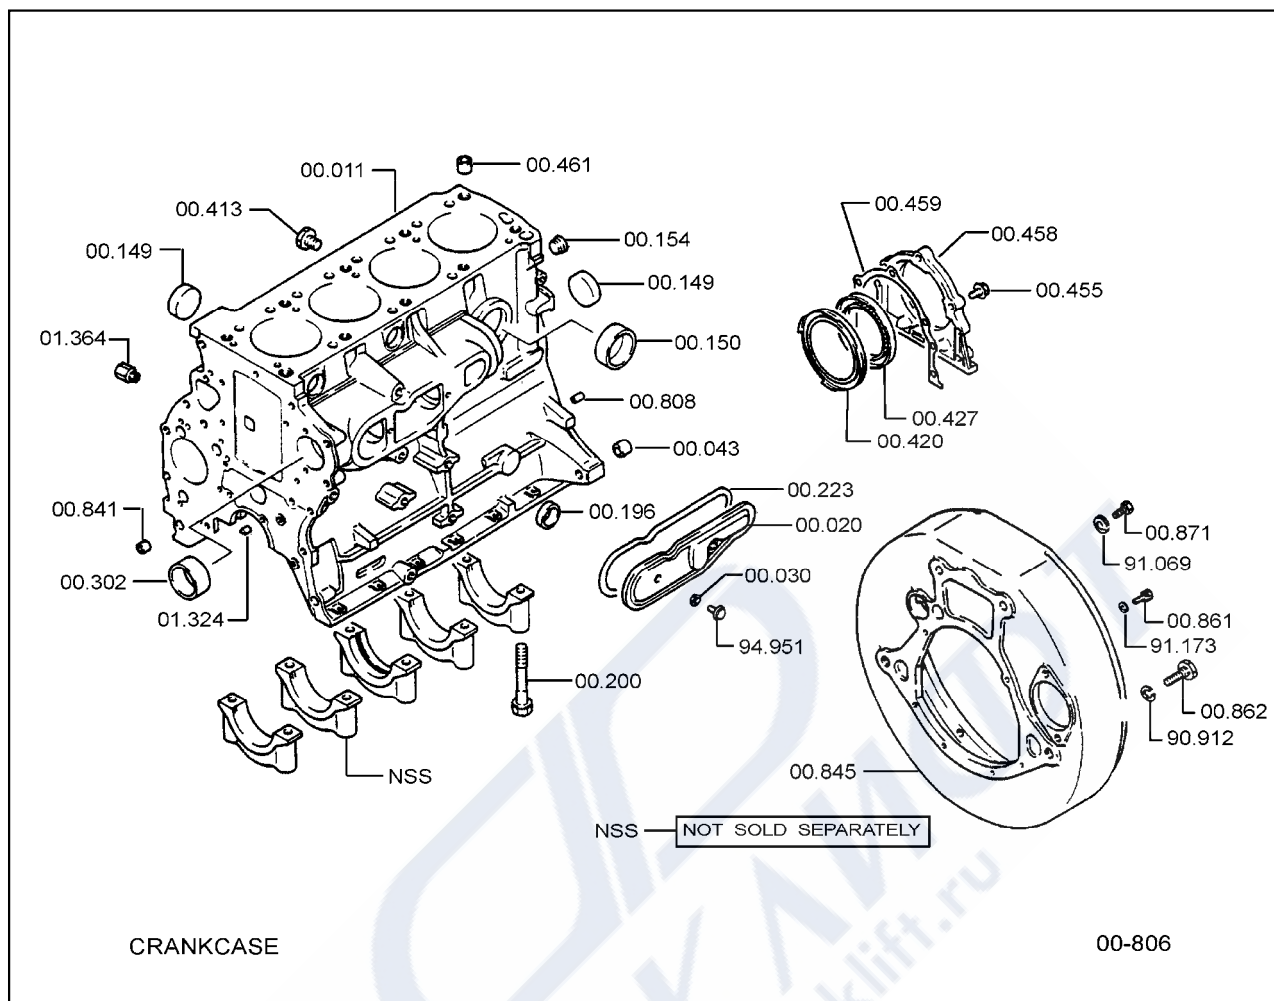


00.011	CRANKCASE 크랭크케이스	00.458	HOUSING, REAR OIL SEAL 하우징
00.020	COVER, CRANKCASE ACCESS HOLE 커버	00.459	GASKET, REAR OIL SEAL HOUSING 가스켓
00.030	SEAL, CRANKCASE ACCESS HOLE COVER FASTENER 씰	00.461	DOWEL, CRANKCASE HEAD 다웰
00.043	BUSHING, ENGINE REAR SUPPORT BRACKET 부싱	00.808	DOWEL RING, CRANKCASE REAR ADAPTOR PLATE 다웰링
00.149	PLUG - EXPANSION, CRANKCASE SIDE 플러그	00.841	DOWEL RING, ENGINE FRONT GEAR COVER 다웰링
00.150	PLUG - EXPANSION, CRANKCASE CORE 플러그	00.845	HOUSING, FLYWHEEL 하우징
00.154	PLUG - EXPANSION, CRANKCASE END 플러그	00.861	FASTENER, FLYWHEEL HOUSING TO CRANKCASE 패스너
00.196	PLUG-EXPANSION, CRANKCASE SIDE 플러그	00.862	FASTENER, FLYWHEEL HOUSING TO CRANKCASE 패스너
00.200	FASTENER, CRANKSHAFT BEARING NO. 1 CAP 패스너	00.871	FASTENER, FLYWHEEL HOUSING 패스너
00.223	GASKET, CRANKCASE ACCESS MOUNTING HOLE COVER 가스켓	01.324	FITTING-BODY, MAIN OIL GALLEY OUTLET 피팅
00.302	BEARING, BALANCER WEIGHT REAR 베어링	01.364	FITTING, OIL PRESSURE GAUGE LINE 피팅
00.413	PLUG & WASHER, CRANKCASE 플러그& 와셔	90.912	LOCKWASHER, FLYWHEEL HSG FASTENER 로크와셔
00.420	GUARD, REAR BEARING OIL 가드	91.069	WASHER, ENGINE REAR PLATE FASTENER 와셔
00.427	SEAL, CRANKCASE REAR OIL 씰	91.173	LOCKWASHER, FLYWHEEL HSG FASTENER 로크와셔
00.455	FASTENER, REAR OIL SEAL HOUSING 패스너	94.951	FASTENER, CRANKCASE ACCESS MOUNTING HOLE COVER 패스너

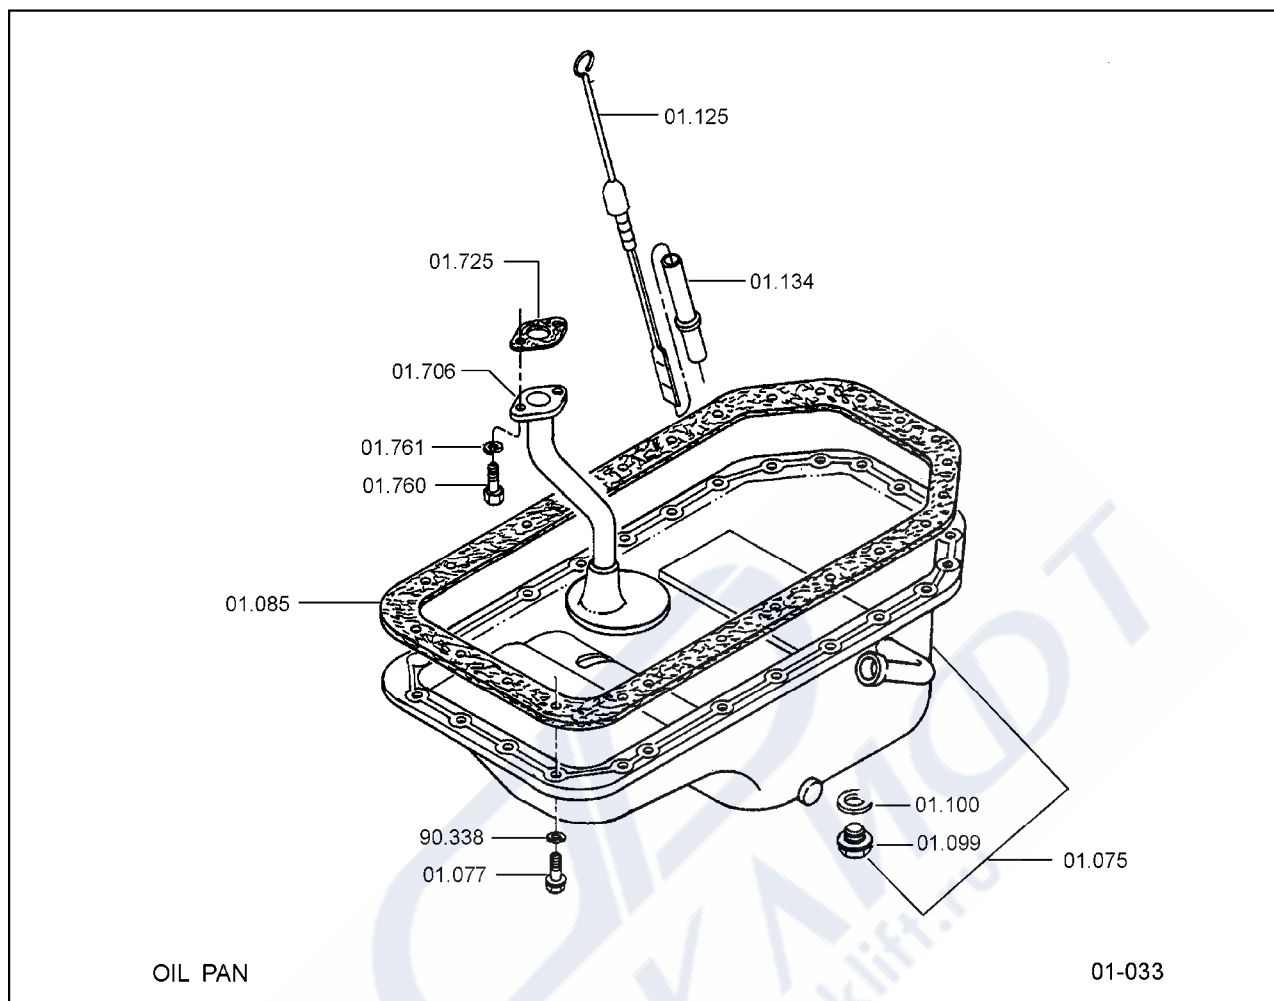 


- | | |
|--------|---|
| 01.075 | PAN, CRANKCASE OIL
팬 |
| 01.077 | FASTENER, OIL PAN TO CRANKCASE
패스너 |
| 01.085 | GASKET, CRANKCASE OIL PAN (ENGINE SET)
가스켓 |
| 01.099 | PLUG, CRANKCASE OIL PAN DRAIN
플러그 |
| 01.100 | GASKET, CRANKCASE OIL PAN DRAIN PLUG
가스켓 |
| 01.125 | DIPSTICK, CRANKCASE OIL LEVEL
딤스틱 |
| 01.134 | ADAPTOR, CRANKCASE OIL LEVEL DIPSTICK
어댑터 |
| 01.706 | STRAINER, OIL PUMP OIL
스트레이너 |
| 01.725 | GASKET, OIL STRAINER FRAME
가스켓 |

01.760	BOLT, OIL PUMP STRAINER FASTENER 볼트
01.761	LOCKWASHER, OIL PUMP STRAINER FASTENER 로크와셔
90.338	LOCKWASHER, CRANKCASE OIL PAN FASTENER 로크와셔

 
ФОРКЛИФТ
www.forklift.ru

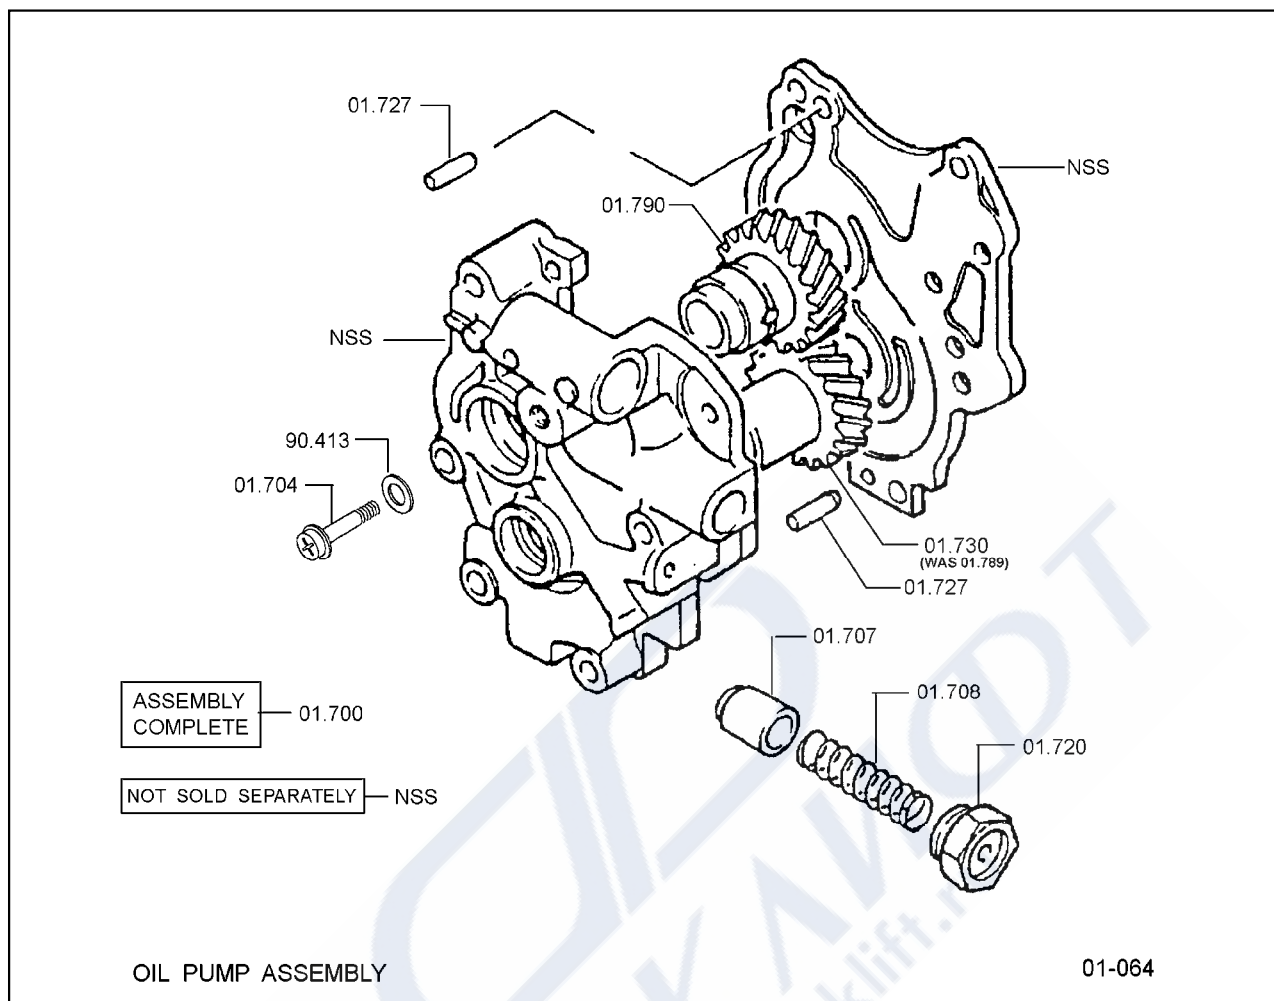

01.700	OIL PUMP ASSEMBLY 오일펌프
01.704	FASTENER, OIL PUMP COVER 패스너
01.707	PISTON, OIL PRESSURE REGULATING 피스톤
01.708	SPRING, OIL PRESSURE REGULATING 스프링
01.720	CAP, OIL PRESSURE REGULATING 캡
01.727	DOWEL, OIL PUMP BODY 다월
01.730	GEAR, OIL PUMP DRIVE IDLER 기어
01.790	GEAR, OIL PUMP DRIVEN 기어
90.413	LOCKWASHER, OIL PUMP COVER FASTENER 로크와셔

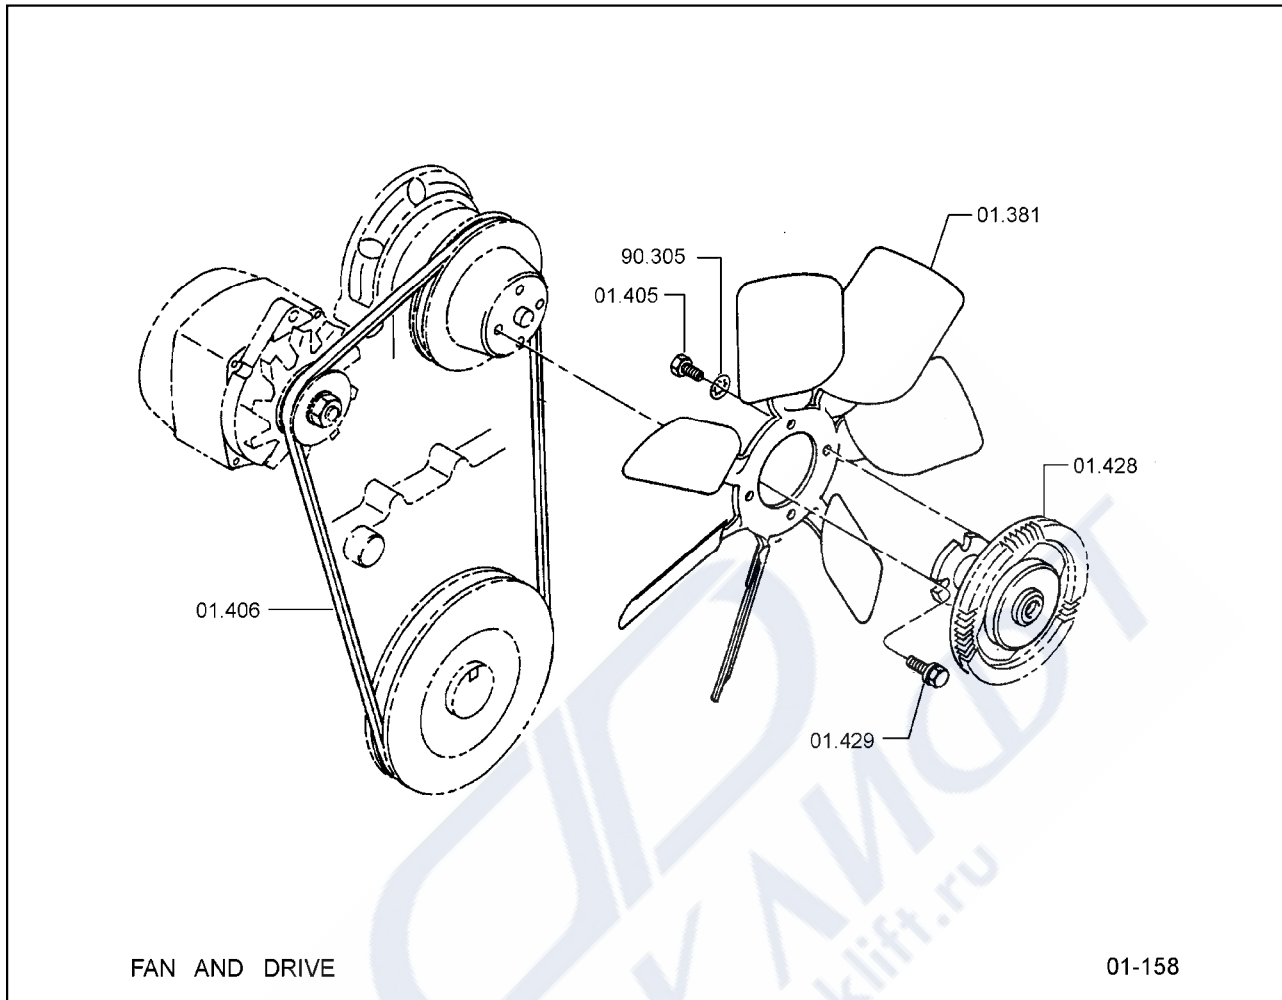 


01.381	BLADE, FAN 블레이드
01.405	FASTENER, FAN BLADE 패스너
01.406	BELT, FAN 벨트
01.428	FAN CONTROL, SELF COUPLING 팬컨트롤
01.429	FASTENER, FAN CONTROL 패스너
90.305	LOCKWASHER, FAN BLADE FASTENER 로크와셔

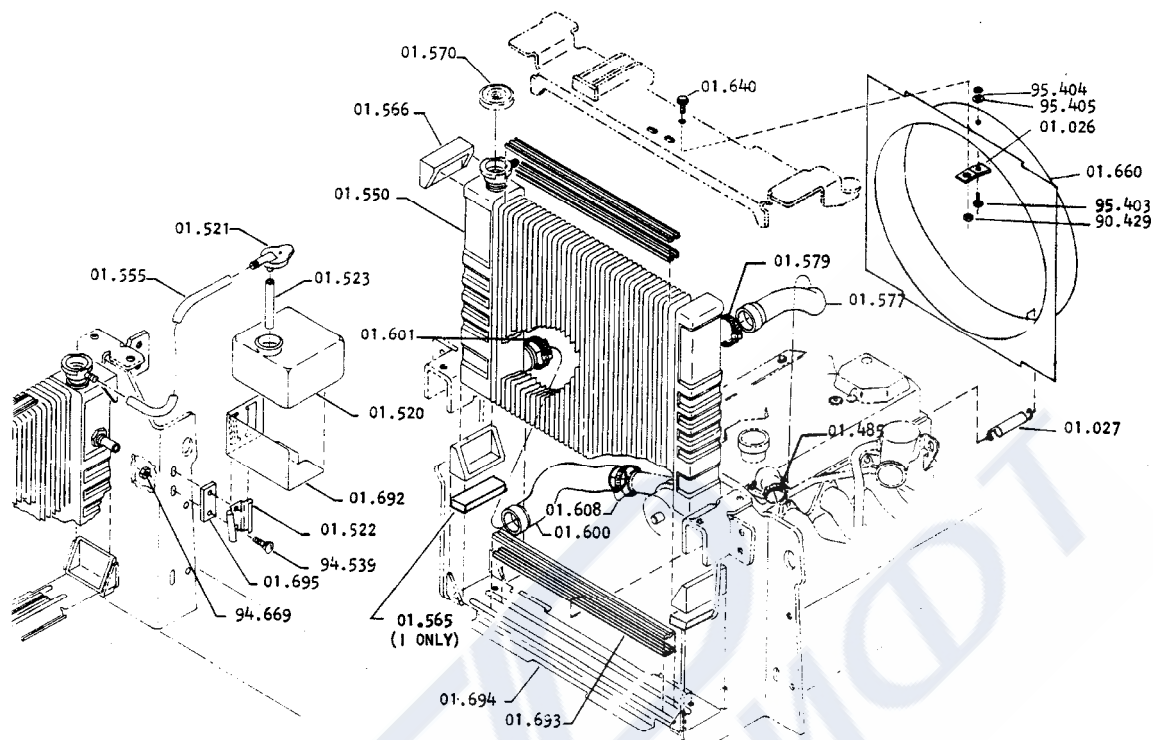 

COOLING SYSTEM


01.026	BRACKET, RADIATOR SHROUD 브라켓	01.601	CLAMP, RADIATOR LOWER HOSE 클램프
01.027	RETAINER, RADIATOR SHROUD 리테이너	01.608	CLAMP, ENGINE WATER PUMP INLET HOSE 클램프
01.485	CLAMP, ENGINE WATER PUMP DISCHARGE HOSE 클램프	01.640	FASTENER, RADIATOR SHROUD EXTENTION 패스너
01.520	COMPENSATION TANK, COOLING SYSTEM 보상기	01.660	SHROUD, RADIATOR 슈라우드
01.521	COVER, COMPENSATION TANK 커버	01.692	SUPPORT, COOLING SYSTEM COMPENSATION TANK 서포트
01.522	BRACKET, COMPENSATION TANK 브라켓	01.693	DAMPENER, RADIATOR VIBRATION 댐퍼너
01.523	LINE, COOLING SYSTEM COMPENSATION TANK 라인	01.694	SUPPORT, RADIATOR 서포트
01.550	RADIATOR 라디에이터	01.695	SPACER, COMPENSATION TANK BRACKET 스페이스
01.555	LINE, RADIATOR OVERFLOW 라인	90.429	NUT, RADIATOR SHROUD EXTENTION FASTENER 너트
01.565	SPACER, RADIATOR MOUNTING 스페이스	94.539	FASTENER, COMPENSATION TANK BRACKET 패스너
01.566	PAD, RADIATOR MOUNTING 패드	94.669	NUT, COMPENSATION TANK FASTENER 너트
01.570	CAP, RADIATOR 캡	95.403	FASTENER, RADIATOR SHROUD BRACKET 패스너
01.577	HOSE, RADIATOR UPPER 호스	95.404	NUT, RADIATOR SHROUD BRACKET FASTENER 너트
01.579	CLAMP, RADIATOR UPPER HOSE 클램프	95.405	LOCKWASHER, RADIATOR SHROUD BRACKET FASTENER 로크와셔
01.600	HOSE, RADIATOR LOWER 호스		

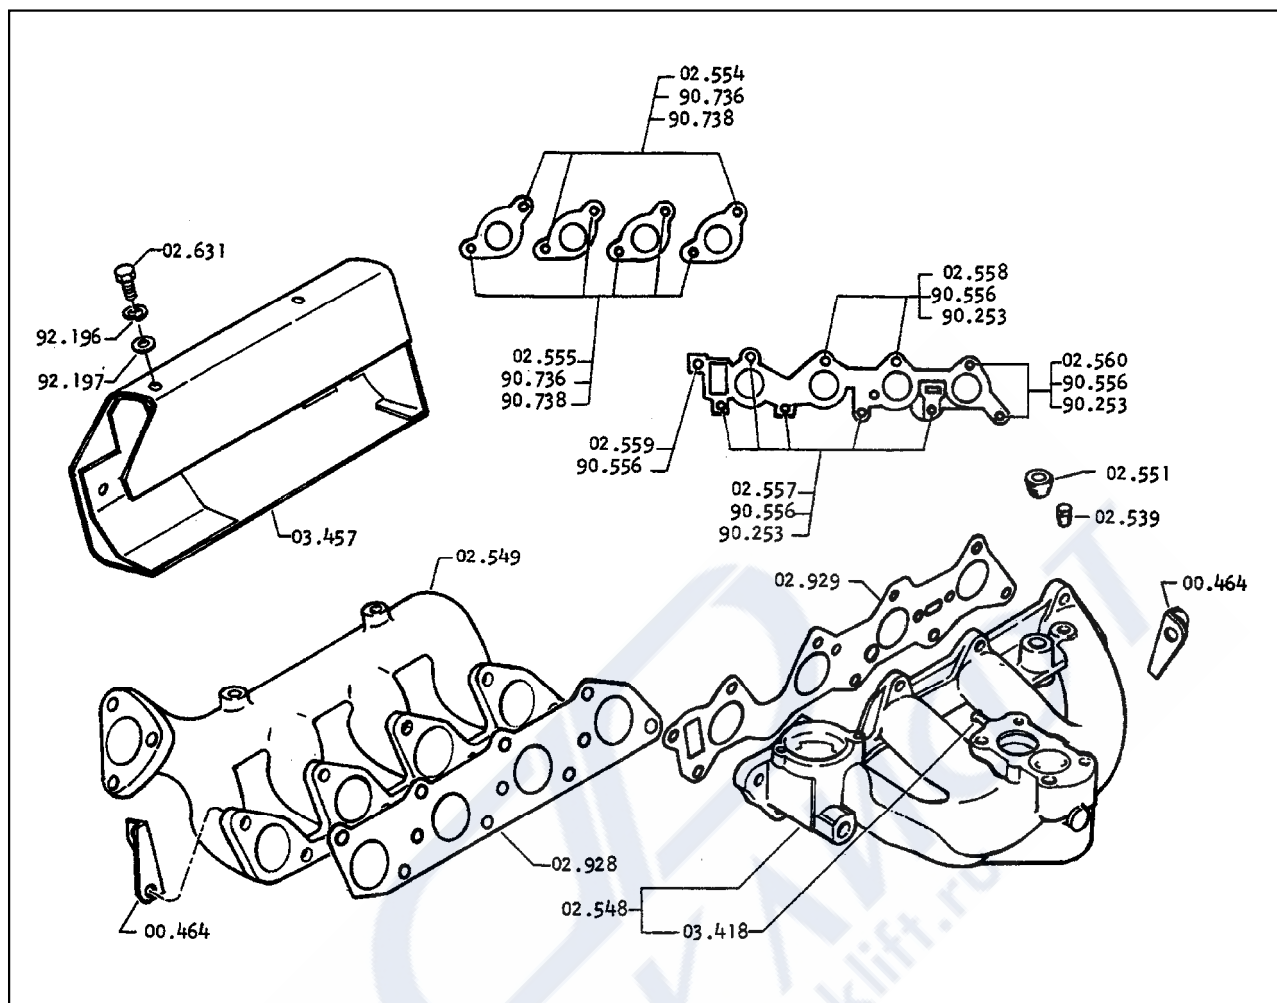 

- | | |
|--------|--|
| 00.464 | BRACKET, ENGINE LIFTING
브라켓 |
| 02.539 | PLUG - PIPE, MANIFOLD
플러그 |
| 02.548 | MANIFOLD, INTAKE
매니폴드 |
| 02.549 | MANIFOLD, EXHAUST
매니폴드 |
| 02.551 | PLUG - PIPE, MANIFOLD
플러그 |
| 02.554 | FASTENER, MANIFOLD TO CRANKCASE
패스너 |
| 02.555 | FASTENER, MANIFOLD TO CRANKCASE
패스너 |
| 02.557 | FASTENER, MANIFOLD TO CRANKCASE
패스너 |
| 02.558 | FASTENER, MANIFOLD TO CRANKCASE
패스너 |


02.559	FASTENER, MANIFOLD TO CRANKCASE 패스너
02.560	FASTENER, MANIFOLD TO CRANKCASE 패스너
02.631	FASTENER, HEAT SHIELD 패스너
02.928	GASKET, EXHAUST MANIFOLD 가스켓
02.929	GASKET, INTAKE MANIFOLD 가스켓
03.418	FITTING, INTAKE MANIFOLD VACUUM PORT 피팅
03.457	SHIELD, MANIFOLD HEAT 실드
90.253	NUT, MANIFOLD FASTENER 너트
90.556	LOCKWASHER, MANIFOLD FASTENER 로크와셔
90.736	WASHER, MANIFOLD FASTENER 와셔
90.738	NUT, MANIFOLD FASTENER 너트
92.196	LOCKWASHER, HEAT SHIELD FASTENER 로크와셔
92.197	WASHER, HEAT SHIELD FASTENER 와셔



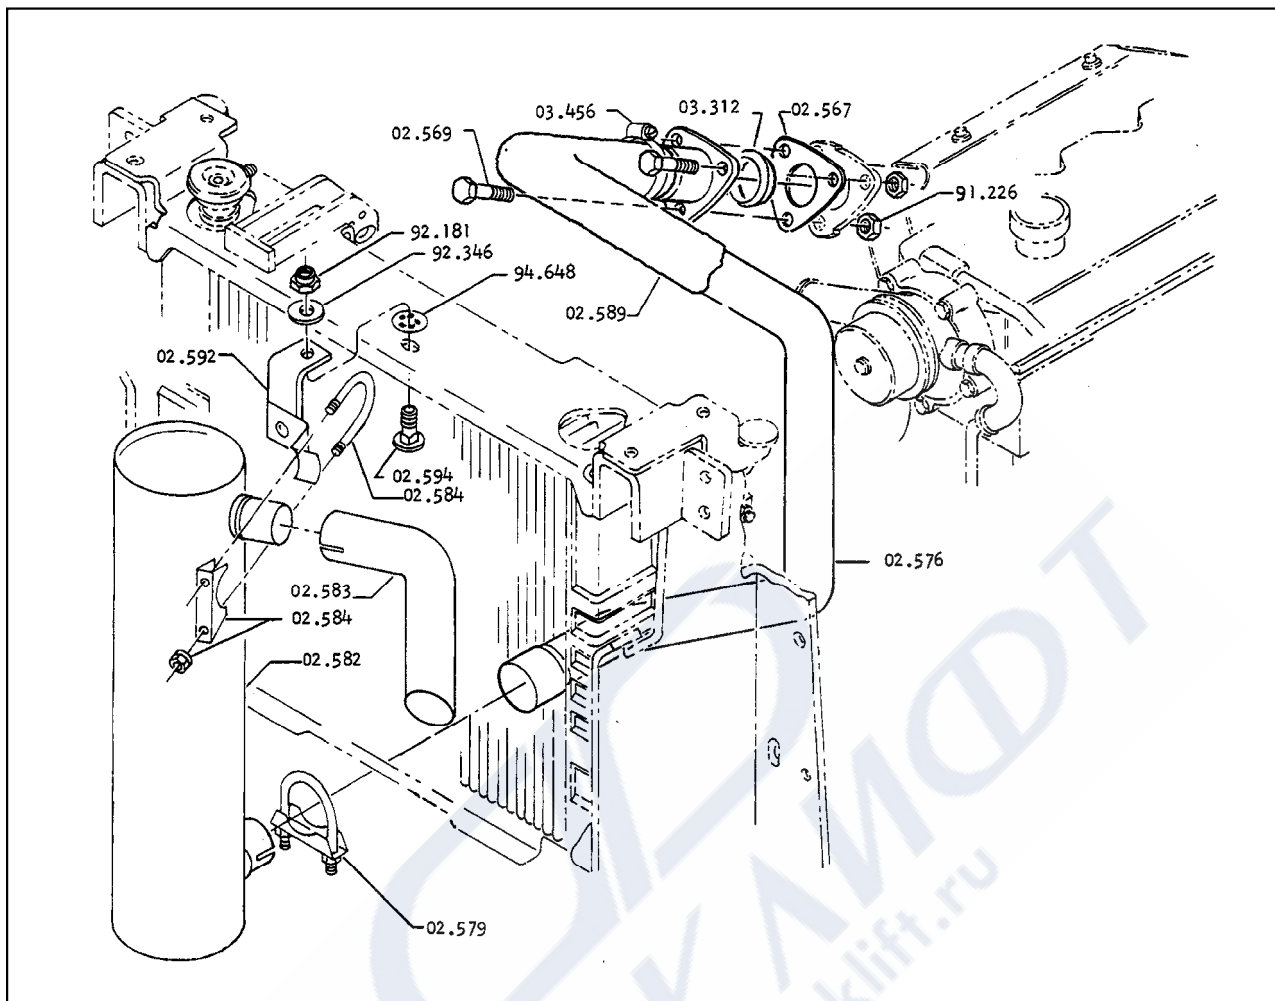 

- | | |
|--------|--|
| 02.567 | GASKET, EXHAUST PIPE FLANGE TO MANIFOLD
가스켓 |
| 02.569 | FASTENER, EXHAUST PIPE FLANGE TO MANIFOLD
패스너 |
| 02.576 | PIPE, EXHAUST
파이프 |
| 02.579 | CLAMP, EXHAUST PIPE TO MUFFLER
클램프 |
| 02.582 | MUFFLER
머플러 |
| 02.583 | PIPE, TAIL
파이프 |
| 02.584 | CLAMP, TAIL PIPE TO MUFFLER
클램프 |
| 02.589 | SHIELD, HEAT (AT MANIFOLD)
실드 |
| 02.592 | BRACKET, TAIL PIPE MOUNTING
브라켓 |


02.594	FASTENER, TAIL PIPE MOUNTING BRACKET 패스너
03.312	SEAL, EXHAUST FLANGE 씰
03.456	CLAMP, EXHAUST PIPE HEAT SHIELD 클램프
91.226	NUT, EXH PIPE FLANGE TO MFLD FASTENER 너트
92.181	NUT, TAIL PIPE MOUNTING BRACKET FASTENER 너트
92.346	WASHER, TAIL PIPE MOUNTING BRACKET FASTENER 와셔
94.648	RETAINER, TAIL PIPE MOUNTING BRACKET FASTENER 리테이너

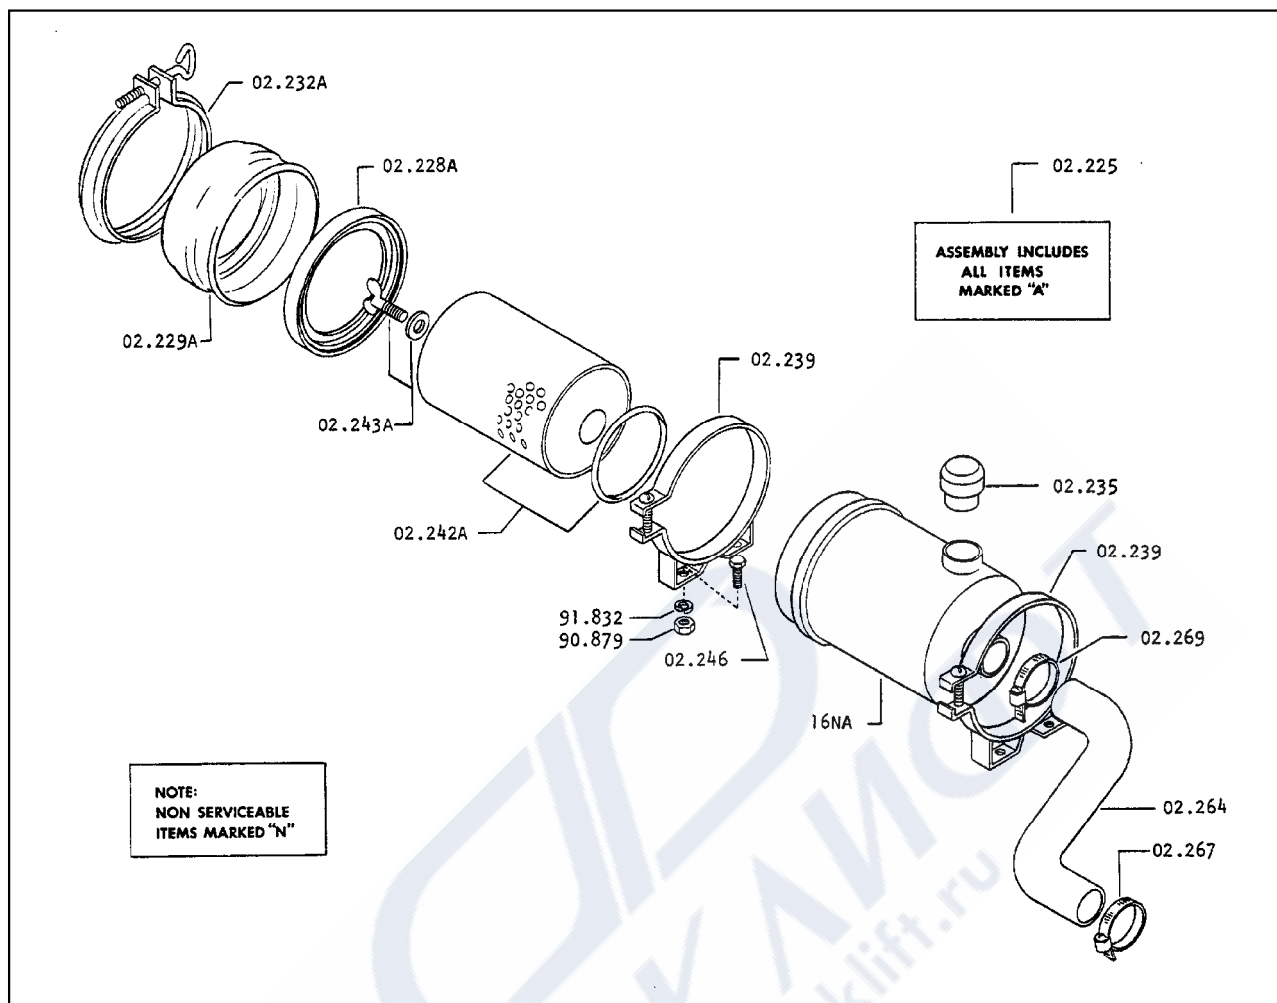 

- | | |
|--------|---|
| 02.225 | CLEANER ASSEMBLY, ENGINE INTAKE AIR
에어클리너 |
| 02.228 | BAFFLE, ENGINE INTAKE AIR CLEANER
배플 |
| 02.229 | CUP, ENGINE INTAKE AIR CLEANER
컵 |
| 02.232 | CLAMP, INTAKE AIR CLEANER
클램프 |
| 02.235 | CAP, ENGINE INTAKE AIR CLEANER INLET
캡 |
| 02.239 | BAND, ENGINE INTAKE AIR CLEANER
밴드 |
| 02.242 | ELEMENT & GASKET, ENGINE INTAKE AIR CLEANER
엘리먼트 & 가스켓 |
| 02.243 | FASTENER, ENGINE INTAKE AIR CLEANER ELEMENT
패스너 |
| 02.246 | FASTENER, ENGINE INTAKE AIR CLEANER ATTACHING
패스너 |

02.264	TUBE, MAIN AIR CLEANER OUTLET 튜브
02.267	CLAMP, MAIN AIR CLEANER OUTLET HOSE 클램프
02.269	CLAMP, MAIN AIR CLEANER OUTLET HOSE 클램프
90.879	NUT, ENGINE INTAKE AIR CLEANER ATTACH FASTENER 너트
91.832	WASHER, ENGINE INTAKE AIR CLEANER ATTACHING FASTEN 와셔




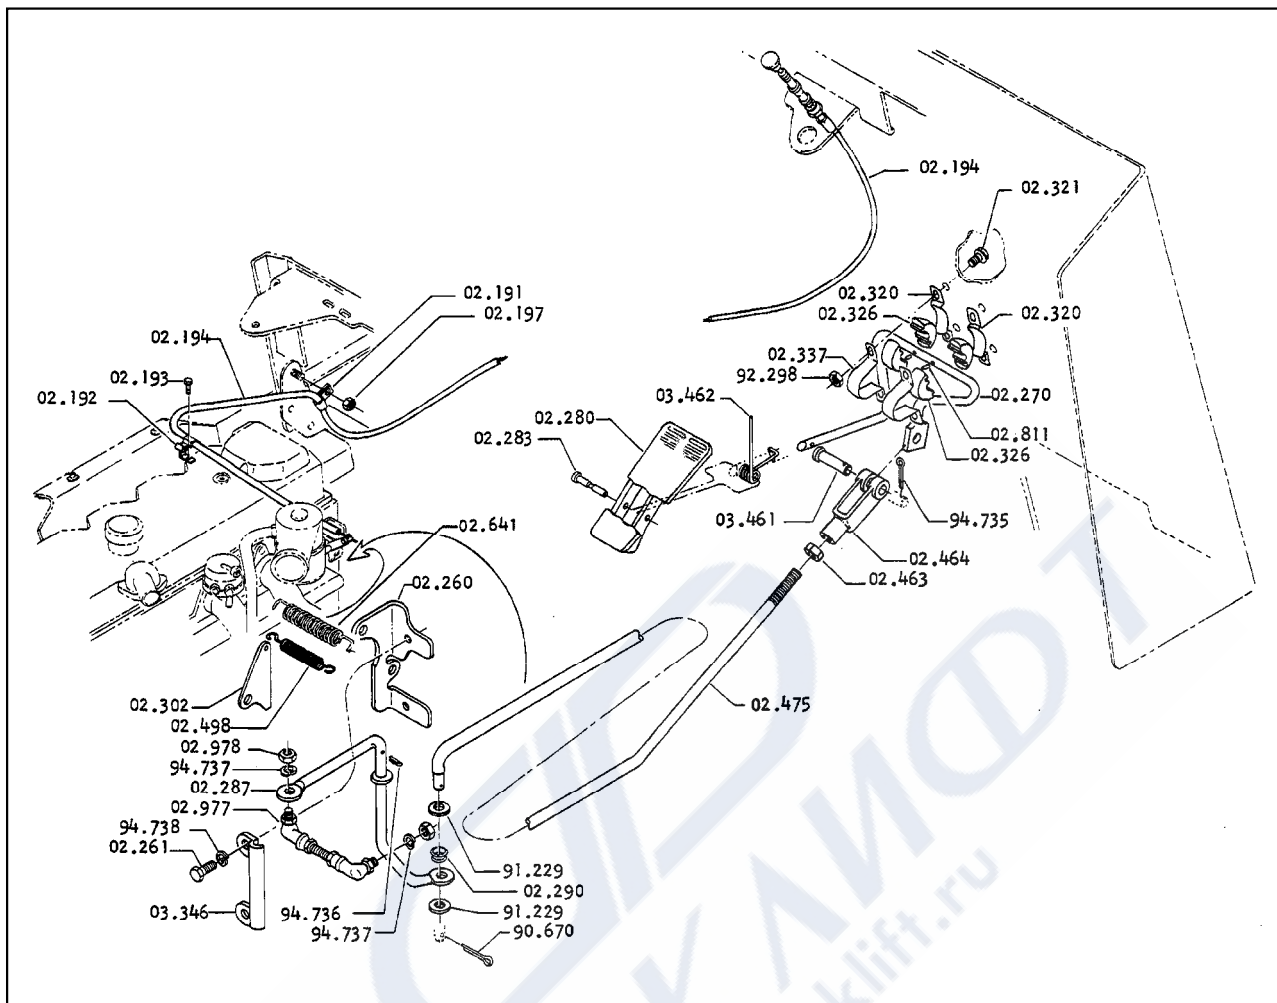 

02.191	CLIP, CHOKE CABLE 클립	02.326	BEARING, ACCELERATOR LEVER 베어링
02.192	CLIP, CHOKE CABLE 클립	02.337	BRACKET, ACCELERATOR LEVER MOUNTING 브라켓
02.193	FASTENER, CHOKE CABLE CLIP 패스너	02.463	NUT, ACCELERATOR CONTROL ROD CLEVIS 너트
02.194	CONTROL, CHOKE 컨트롤	02.464	ROD END, ACCELERATOR CONTROL ROD 로드엔드
02.197	FASTENER, CHOKE CABLE CLAMP 패스너	02.475	ROD, ACCELERATOR CONTROL 로드
02.260	BRACKET, ACCELERATOR LINKAGE MOUNTING 브라켓	02.498	SPRING, ACCELERATOR RETURN 스프링
02.261	FASTENER, ACCELERATOR LINKAGE MOUNTING BRACKET 패스너	02.641	SPRING, ACCELERATOR RETURN 스프링
02.270	LEVER, ACCELERATOR 레버	02.811	RETAINER, ACCELERATOR LEVER 리테이너
02.280	PEDAL, ACCELERATOR 페달	02.977	ARM, ACCELERATOR LINKAGE 암
02.283	PIN, ACCELERATOR PEDAL TO BRACKET PIVOT 핀	02.978	FASTENER, ACCELERATOR LINKAGE ARM 패스너
02.287	BELLCRANK, ACCELERATOR 벨크랭크	03.346	BRACKET, ACCELERATOR LINKAGE 브라켓
02.290	BUSHING, ACCELERATOR BELLCRANK 부싱	03.461	PIN, ACCELERATOR CONTROL ROD END 핀
02.302	BRACKET, ACCELERATOR RETURN SPRING 브라켓	03.462	SPRING, ACCELERATOR PEDAL RETURN 스프링
02.320	BRACKET, ACCELERATOR LEVER ATTACHING 브라켓	90.670	RETAINER, ACCELERATOR CONTROL ROD 리테이너
02.321	FASTENER, ACCELERATOR LEVER BRACKET 패스너	91.229	WASHER, ACCELERATOR CONTROL ROD RETAINER 와셔

92.298	NUT, ACCELERATOR LEVER ATTACHING BRACKET FASTENER 너트
94.735	RETAINER, ACCELERATOR CONTROL ROD END PIN 리테이너
94.736	RETAINER, ACCELERATOR BELLCRANK 리테이너
94.737	LOCKWASHER, ACCELERATOR LINKAGE ARM FASTENER 로크와셔
94.738	LOCKWASHER, ACCELERATOR LINKAGE BRACKET FASTENER 로크와셔




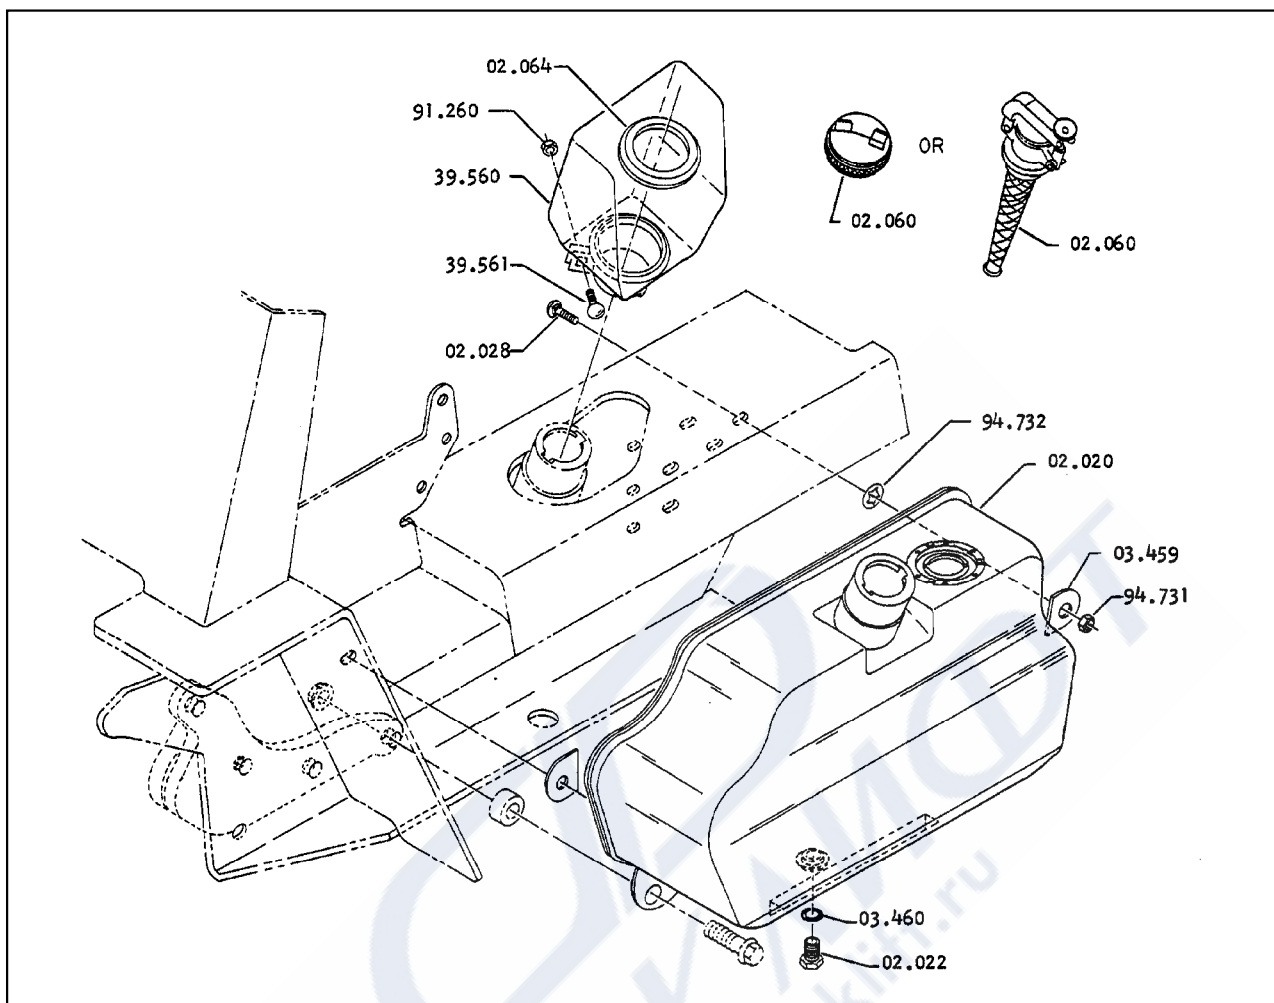 


02.020	TANK, FUEL 탱크
02.022	PLUG, FUEL TANK DRAIN 플러그
02.028	FASTENER, FUEL TANK MOUNTING 패스너
02.060	CAP, FUEL TANK 캡
02.064	SEAL, GAS TANK FILLER NECK 셀
03.459	CLIP, FUEL TANK MOUNTING 클립
03.460	SEAL, FUEL TANK DRAIN PLUG 셀
39.560	WELL, GAS TANK FILLER 웰
39.561	FASTENER, FUEL TANK FILLER WELL CONT'D 패스너

91.260	NUT, FUEL TANK FILLER WELL FASTENER 너트
94.731	NUT, FUEL TANK MOUNTING FASTENER 너트
94.732	RETAINER, FUEL TANK MOUNTING FASTENER 리테이너



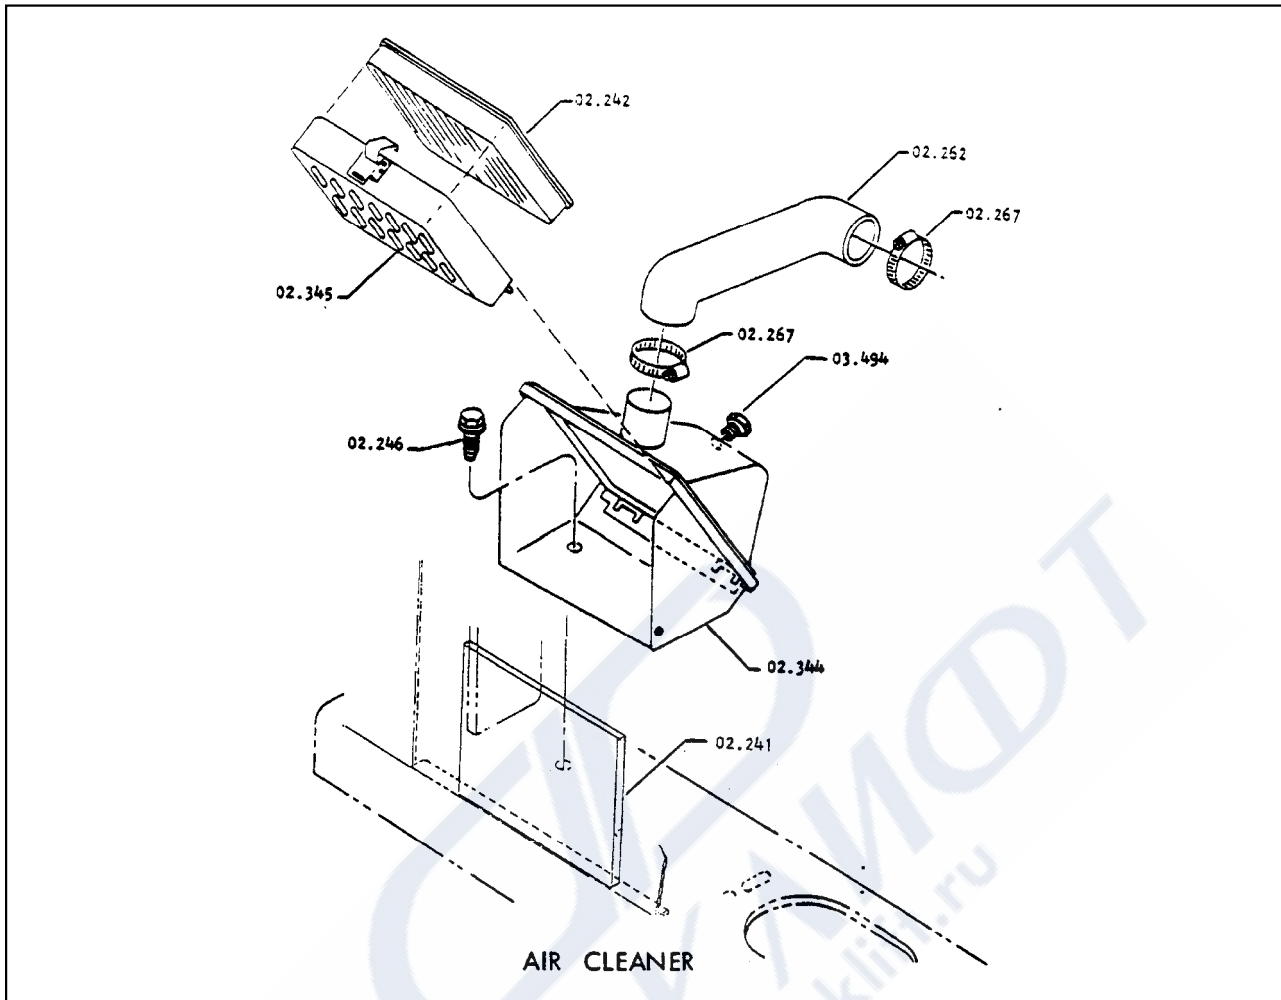 


- | | |
|--------|--|
| 02.241 | SEAL, ENGINE INTAKE AIR CLEANER COVER
씰 |
| 02.242 | ELEMENT & GASKET, ENGINE INTAKE AIR CLEANER
엘리먼트& 가스켓 |
| 02.246 | FASTENER, ENGINE INTAKE AIR CLEANER ATTACHING
패스너 |
| 02.262 | HOSE, MAIN AIR CLEANER OUTLET
호스 |
| 02.267 | CLAMP, MAIN AIR CLEANER OUTLET HOSE
클램프 |
| 02.344 | BODY, ENGINE INTAKE AIR CLEANER OUTLET
바디 |
| 02.345 | COVER, ENGINE INTAKE AIR CLEANER
커버 |
| 03.494 | PLUG, ENGINE INTAKE AIR CLEANER HOUSING
플러그 |

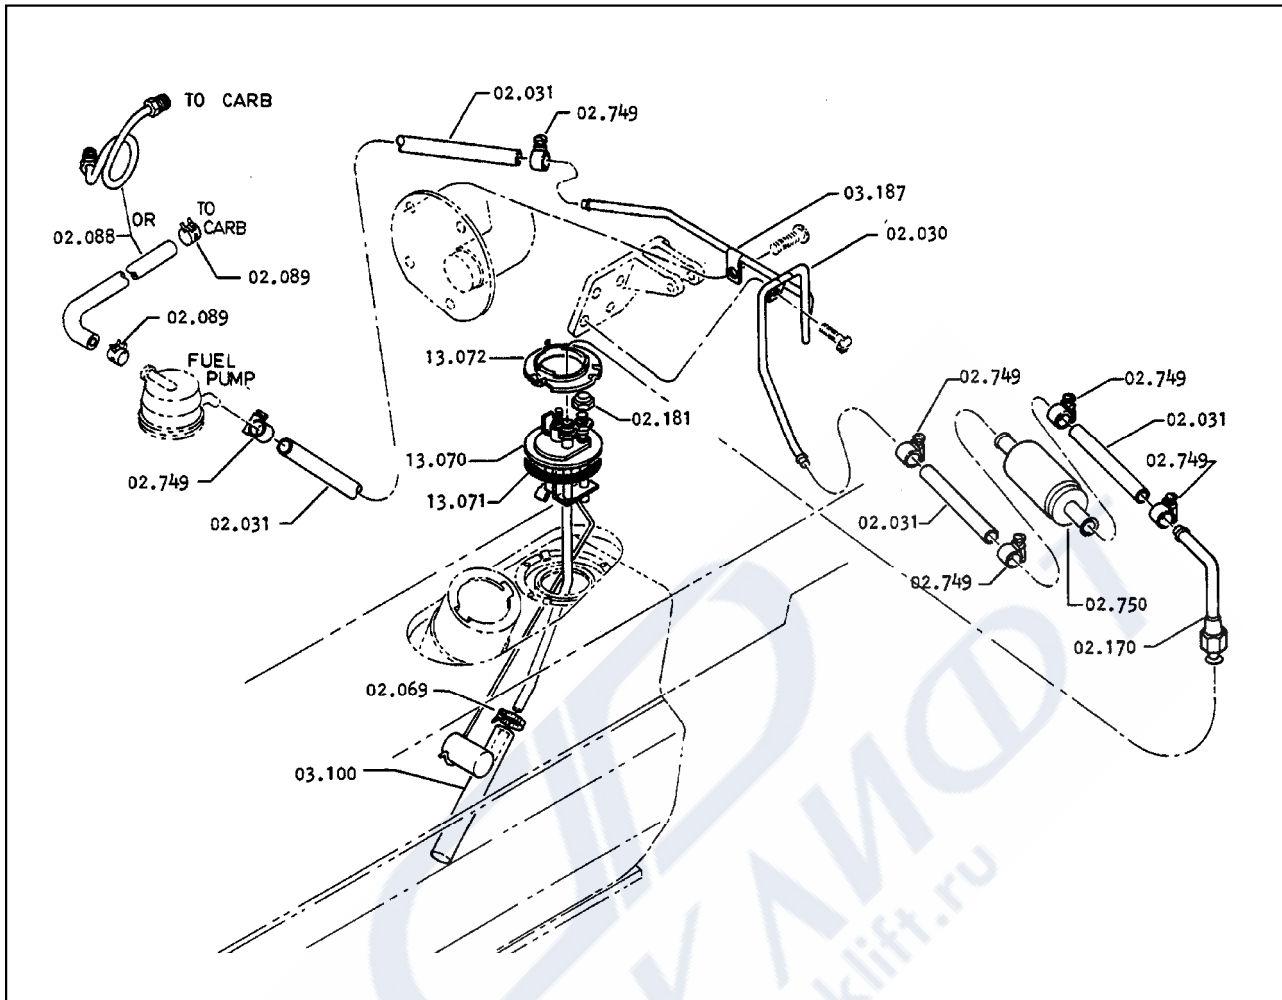 

- | | |
|--------|-----------------------------------|
| 02.030 | LINE, FUEL TANK TO FUEL PUMP 라인 |
| 02.031 | LINE, TANK TO FUEL PUMP 라인 |
| 02.069 | CLAMP, FUEL TANK FILLER HOSE 클램프 |
| 02.088 | LINE, CARBURETOR INLET 라인 |
| 02.089 | CLAMP, CARBURETOR INLET LINE 클램프 |
| 02.170 | LINE, FUEL TANK OUTLET 라인 |
| 02.181 | FITTING, FUEL RETURN LINE 피팅 |
| 02.749 | CLAMP, TANK TO FUEL PUMP LINE 클램프 |
| 02.750 | FILTER ASSEMBLY, FUEL 필터 |

03.100	STRAINER ASSEMBLY, FUEL 스트레이너
03.187	CLIP, FUEL LINE 클립
13.070	SENDER, FUEL GAUGE 센더
13.071	GASKET, FUEL GAUGE SENDER 가스켓
13.072	FASTENER, FUEL GAUGE SENDER 패스너




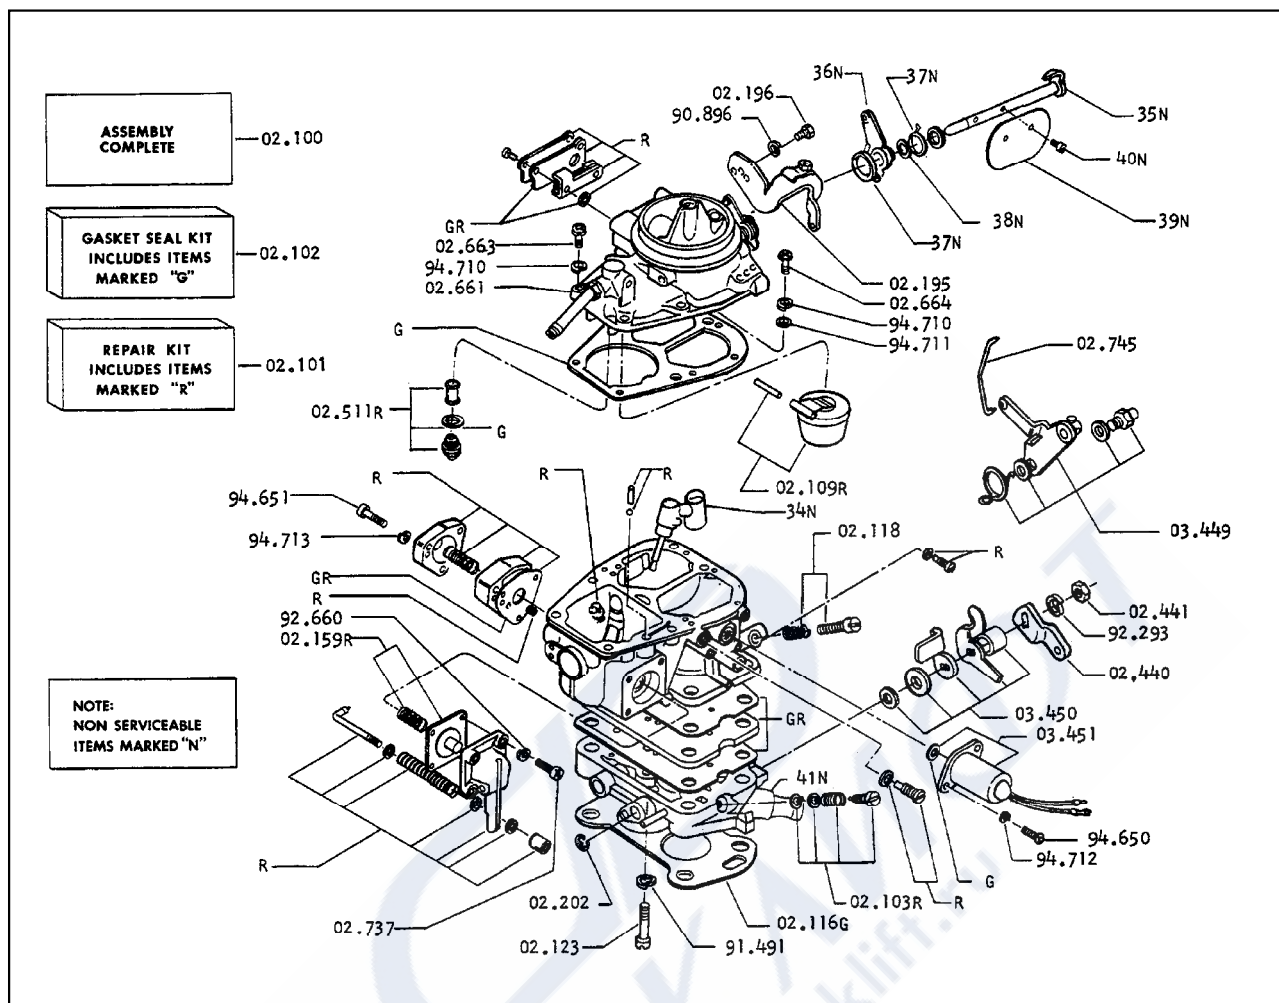 

02.100	CARBURETOR ASSEMBLY 기화기	02.661	COVER, BOWL ASSEMBLY 커버
02.101	REPAIR KIT, CARBURETOR 리페어키트	02.663	FASTENER, CARBURETOR COVER 패스너
02.102	GASKET KIT, CARBURETOR 가스켓키트	02.664	FASTENER, CARBURETOR COVER 패스너
02.103	SCREW, CARBURETOR IDLE ADJUST 스크류	02.737	FASTENER, ACCELERATOR PUMP LEVER 패스너
02.109	FLOAT ASSEMBLY 플로트	02.745	ROD, AIR SHUTTER CONTROL 로드
02.116	GASKET, CARBURETOR MOUNTING 가스켓	03.449	KIT, CHOKE CONTROL LINKAGE LEVER 키트
02.118	SCREW, THROTTLE STOP 스크류	03.450	KIT, THROTTLE CONTROL LINKAGE LEVER 키트
02.123	FASTENER, CARBURETOR INTAKE TO BOWL 패스너	03.451	SOLENOID, IDLE CIRCUIT CONTROL 솔레노이드
02.159	ROD & PISTON ASSEMBLY, PUMP 로드 & 피스톤	90.896	LOCKWASHER, CHOKE CONTROL FAST 로크와셔
02.195	BRACKET, CHOKE CABLE MOUNTING 브라켓	91.491	LOCKWASHER, BOWL TO THROTTLE FASTENER 로크와셔
02.196	FASTENER, CHOKE CABLE MOUNTING BRACKET 패스너	92.293	LOCKWASHER, THROTTLE LEVER FASTENER 로크와셔
02.202	RETAINER, CARBURETOR THROTTLE SHAFT SEAL 리테이너	92.660	LOCKWASHER, CARBURETOR ACCELERATING PUMP COVER F 로크와셔
02.400	FITTING, LPG HYDROSTATIC VALVE 피팅	94.650	FASTENER, IDLE CIRCUIT CONTROL SOLENOID 패스너
02.441	FASTENER, THROTTLE LEVER 패스너	94.651	FASTENER, ENRICHMENT VALVE 패스너
02.511	VALVE & SEAT ASSEMBLY 밸브 & 시트	94.710	LOCKWASHER, CARBURETOR COVER FASTENER 로크와셔


94.711	WASHER, CARBURETOR COVER FASTENER 와셔
94.712	LOCKWASHER, IDLE CIRCUIT CONTROL SOLENOID FASTEN 로크와셔
94.713	LOCKWASHER, ENRICHMENT VALVE FASTENER 로크와셔



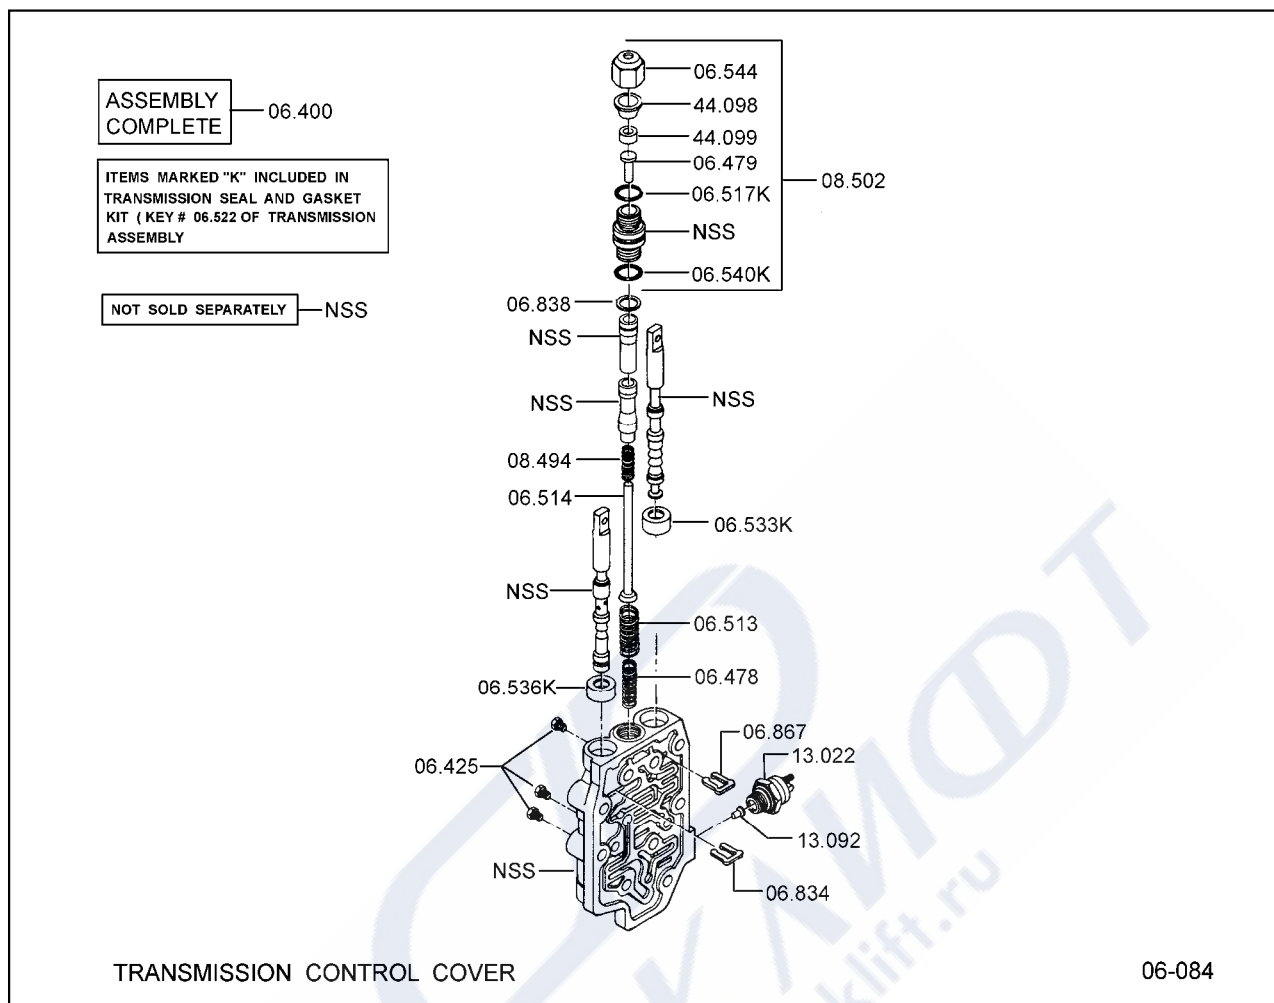 

01.022	PIN, OIL PUMP DRIVE GEAR FASTENER 핀
06.400	CONTROL COVER & VALVE ASSEMBLY 컨트롤커버& 밸브
06.425	PLUG, CONTROL COVER OIL PASSAGE 플러그
06.478	SPRING, INCHING PISTON RETURN 스프링
06.479	PISTON, INCHING 피스톤
06.513	SPRING, INCHING VALVE 스프링
06.514	ROD, INCHING VALVE 로드
06.517	SEAL, INCHING VALVE PISTON PORT FITTING 씼
06.522	SEAL AND GASKET KIT, TRANSMISSION 씼& 가스켓


06.533	SEAL, HI & LO SELECTOR VALVE 씰
06.536	SEAL, DIRECTIONAL SELECTOR VALVE 씰
06.540	SEAL, INCHING PISTON HOUSING 씰
06.544	HOUSING, INCHING PISTON 하우징
06.834	STOP, DIRECTION SELECTOR VALVE 스톱
06.838	STOP, INCHING VALVE 스톱
06.867	STOP, SPEED SELECTOR VALVE 스톱
08.494	SPRING, INCHING SPOOL RETURN 스프링
08.502	ACTUATOR ASSEMBLY, INCHING VALVE 액추에이터
13.092	ACTUATOR, NEUTRAL STARTING SWITCH 액추에이터
44.098	CUP, INCHING PISTON 컵
44.099	STOP, INCHING PISTON CUP 스톱

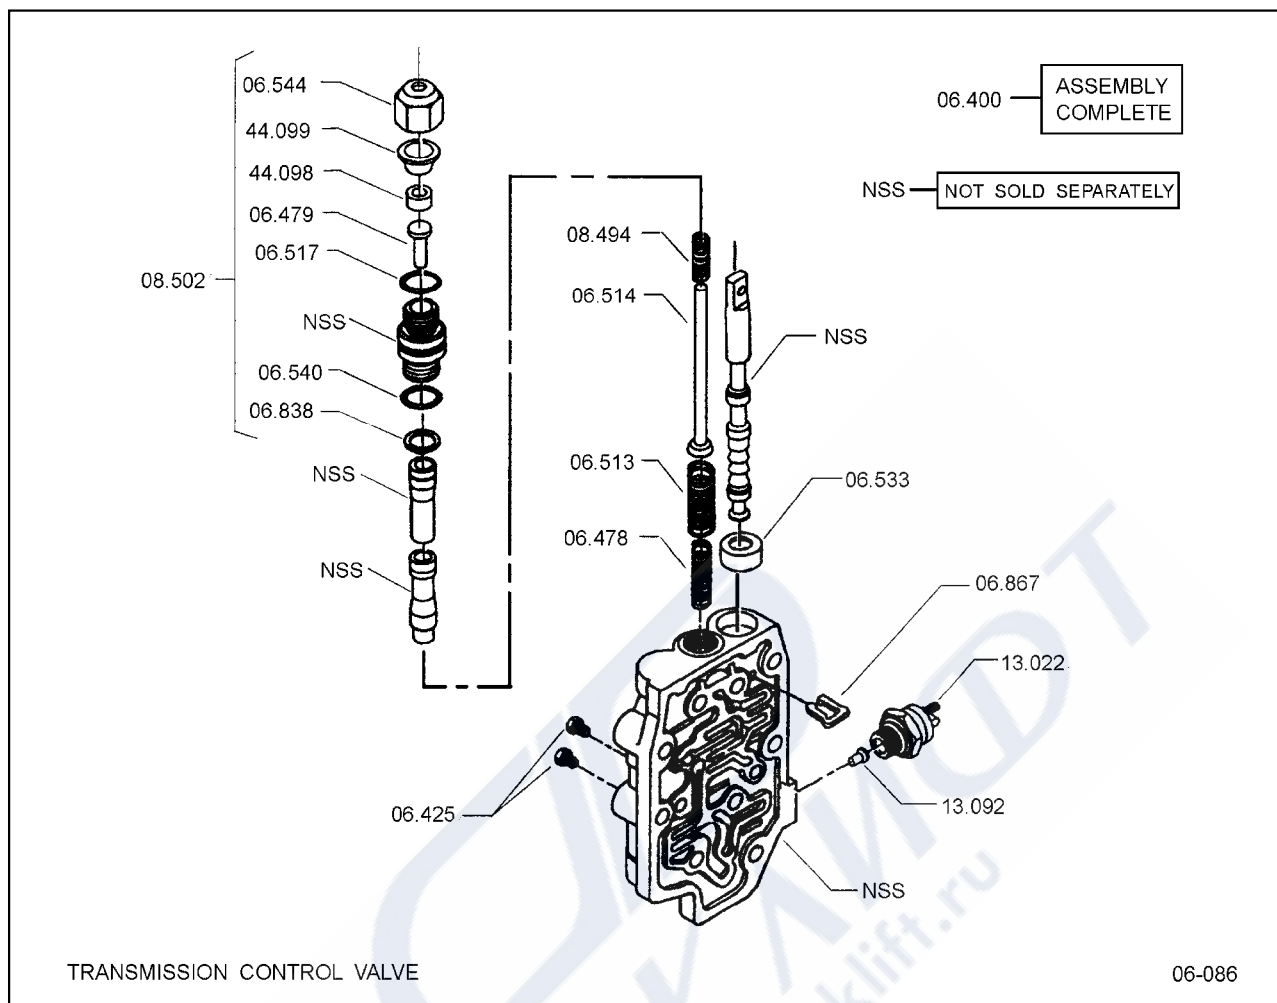 

- | | |
|--------|--|
| 06.400 | CONTROL COVER & VALVE ASSEMBLY
컨트롤커버& 밸브 |
| 06.425 | PLUG, CONTROL COVER OIL PASSAGE
플러그 |
| 06.478 | SPRING, INCHING PISTON RETURN
스프링 |
| 06.479 | PISTON, INCHING
피스톤 |
| 06.513 | SPRING, INCHING VALVE
스프링 |
| 06.514 | ROD, INCHING VALVE
로드 |
| 06.517 | SEAL, INCHING VALVE PISTON PORT FITTING
씰 |
| 06.533 | SEAL, HI & LO SELECTOR VALVE
씰 |
| 06.540 | SEAL, INCHING PISTON HOUSING
씰 |

06.544	HOUSING, INCHING PISTON 하우징
06.838	STOP, INCHING VALVE 스톱
06.867	STOP, SPEED SELECTOR VALVE 스톱
08.494	SPRING, INCHING SPOOL RETURN 스프링
08.502	ACTUATOR ASSEMBLY, INCHING VALVE 액추에이터
13.022	SWITCH, NEUTRAL STARTING 스위치
13.092	ACTUATOR, NEUTRAL STARTING SWITCH 액추에이터
44.098	CUP, INCHING PISTON 컵
44.099	STOP, INCHING PISTON CUP 스톱




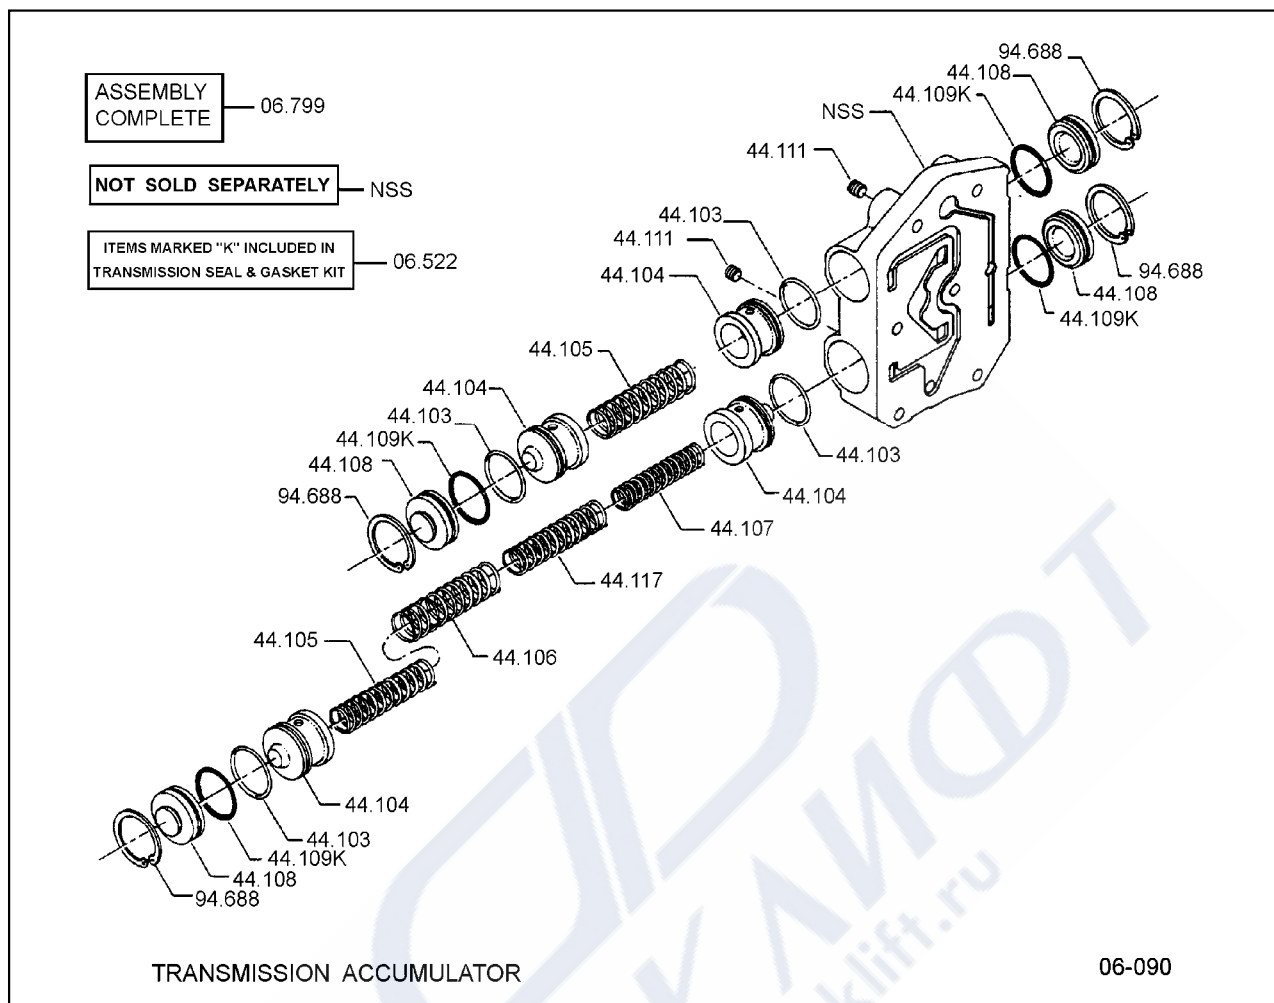 


- | | |
|--------|--|
| 06.522 | SEAL AND GASKET KIT, TRANSMISSION
씰& 가스켓 |
| 06.799 | ACCUMULATOR, TRANSMISSION CONTROL
어큐물레이터 |
| 44.103 | PISTON RING, TRANSMISSION ACCUMULATOR
피스톤링 |
| 44.104 | PISTON, TRANSMISSION ACCUMULATOR
피스톤 |
| 44.105 | SPRING, TRANSMISSION ACCUMULATOR OUTER
스프링 |
| 44.106 | SPRING, TRANSMISSION ACCUMULATOR MIDDLE
스프링 |
| 44.107 | SPRING, TRANSMISSION ACCUMULATOR INNER
스프링 |
| 44.108 | PLUG, TRANSMISSION ACCUMULATOR BORE
플러그 |
| 44.109 | SEAL, TRANSMISSION ACCUMULATOR BORE PLUG
씰 |

44.111	PLUG, TRANSMISSION ACCUMULATOR HOUSING 플러그
44.117	SPRING, TRANSMISSION CONTROL ACCUMULATOR MIDDLE IN 스프링
94.688	RETAINER, TRANSMISSION ACCUMULATOR BORE PLUG 리테이너



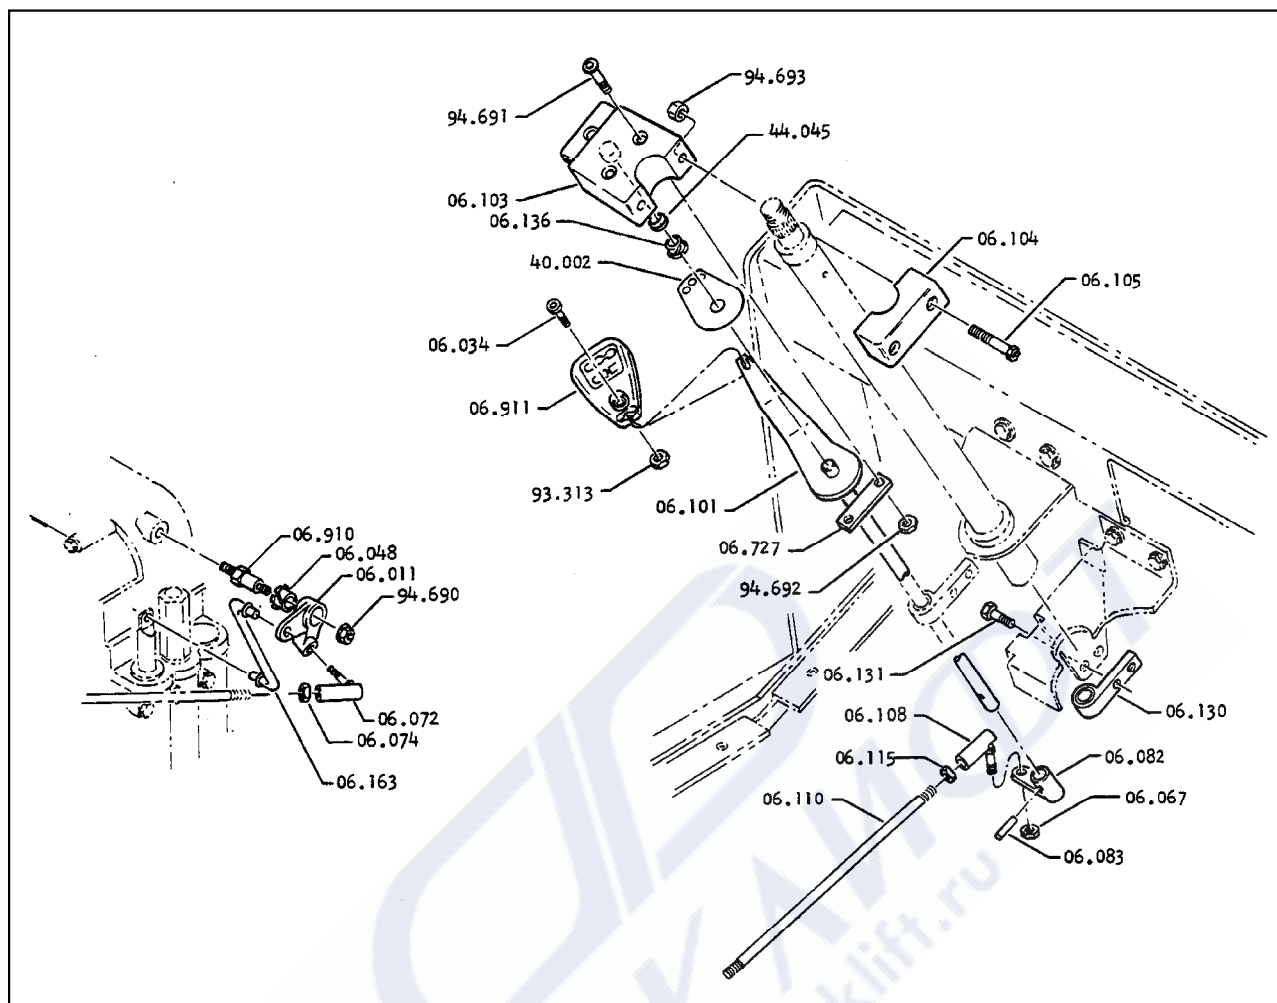 


06.011	BELLCRANK, DIRECTION CONTROL 벨크랭크	06.130	BRACKET, FORWARD & REVERSE LEVER 브라켓
06.034	SLEEVE, SHIFT LEVER KNOB 슬리브	06.131	FASTENER, FORWARD & REVERSE LEVER BRACKET 패스너
06.048	BEARING, BELLCRANK PIVOT 베어링	06.136	BEARING, DIRECTION CONTROL LINKAGE BRACKET 베어링
06.067	FASTENER, FORWARD & REVERSE ROD BALL JOINT (RH) 패스너	06.163	LINK, FORWARD & REVERSE LINKAGE PIVOT 링크
06.072	BALL JOINT, FORWARD & REVERSE ROD (LH) 볼조인트	06.727	RETAINER, DIRECTIONAL CONTROL LEVER 리테이너
06.074	NUT, FORWARD & REVERSE ROD BALL JOINT LOCKING (L) 너트	06.910	PIVOT, DIRECTIONAL CONTROL BELLCRANK 피봇
06.082	LEVER, FORWARD & REVERSE ROD 레버	06.911	KNOB, DIRECTIONAL SELECTOR 노브
06.083	FASTENER, FORWARD & REVERSE ROD LEVER CLAMPING 패스너	40.002	LEGEND, SHIFT PATTERN 범례
06.101	LEVER ASSEMBLY, FORWARD & REVERSE 레버	44.045	DAMPENER, DIFFECTIONAL CONTROL LEVER VIBRATION 댐프너
06.103	BRACKET, CONTROL LINKAGE STEERING COLUMN 브라켓	93.313	NUT, DIRECTION CONTROL LEVER KNOB FASTENER 너트
06.104	CAP, CONTROL LINKAGE BRACKET 캡	94.690	NUT, DIRECTIONAL CONTROL BELLCRANK 너트
06.105	FASTENER, CONTROL LINKAGE BRACKET CAP 패스너	94.691	FASTENER, DIRECTIONAL CONTROL LEVER RETAINER 패스너
06.108	BALL JOINT, FORWARD & REVERSE ROD RH 볼조인트	94.692	NUT, DIRECTIONAL CONTROL LEVER RETAINER FASTENER 너트
06.110	ROD, DIRECTION SELECTOR 로드	94.693	NUT, DIRECTIONAL CONTROL LINKAGE BRACKET CAP FAS 너트
06.115	NUT, DIRECTION SELECTOR ROD 너트		

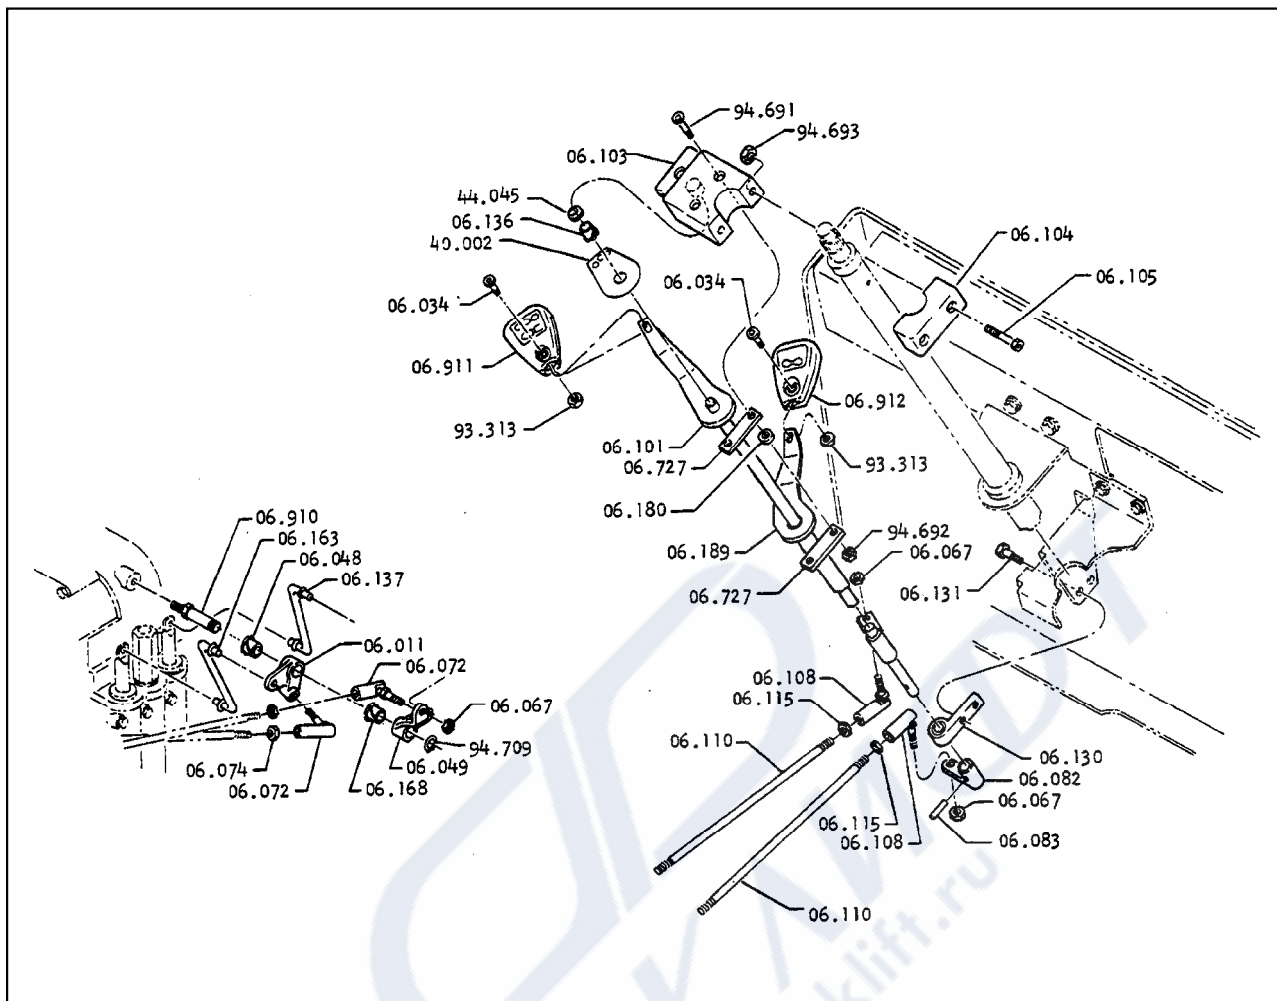 

06.011	BELLCRANK, DIRECTION CONTROL 벨크랭크	06.115	NUT, DIRECTION SELECTOR ROD 너트
06.034	SLEEVE, SHIFT LEVER KNOB 슬리브	06.130	BRACKET, FORWARD & REVERSE LEVER 브라켓
06.048	BEARING, BELLCRANK PIVOT 베어링	06.131	FASTENER, FORWARD & REVERSE LEVER BRACKET 패스너
06.049	BELLCRANK, SPEED SELECTOR 벨크랭크	06.136	BEARING, DIRECTION CONTROL LINKAGE BRACKET 베어링
06.067	FASTENER, FORWARD & REVERSE ROD BALL JOINT (RH) 패스너	06.137	LINK, SPEED SELECTOR LEVER 링크
06.072	BALL JOINT, FORWARD & REVERSE ROD (LH) 볼조인트	06.163	LINK, FORWARD & REVERSE LINKAGE PIVOT 링크
06.074	NUT, FORWARD & REVERSE ROD BALL JOINT LOCKING (L) 너트	06.168	BEARING, SPEED SELECTOR LINKAGE PIVOT 베어링
06.082	LEVER, FORWARD & REVERSE ROD 레버	06.180	SPACER, FORWARD & REVERSE LEVER BRACKET 스페이서
06.083	FASTENER, FORWARD & REVERSE ROD LEVER CLAMPING 패스너	06.189	LEVER, SPEED CONTROL 레버
06.101	LEVER ASSEMBLY, FORWARD & REVERSE 레버	06.727	RETAINER, DIRECTIONAL CONTROL LEVER 리테이너
06.103	BRACKET, CONTROL LINKAGE STEERING COLUMN 브라켓	06.910	PIVOT, DIRECTIONAL CONTROL BELLCRANK 피봇
06.104	CAP, CONTROL LINKAGE BRACKET 캡	06.911	KNOB, DIRECTIONAL SELECTOR 노브
06.105	FASTENER, CONTROL LINKAGE BRACKET CAP 패스너	06.912	KNOB, SPEED SELECTOR 노브
06.108	BALL JOINT, FORWARD & REVERSE ROD RH 볼조인트	40.002	LEGEND, SHIFT PATTERN 범례
06.110	ROD, DIRECTION SELECTOR 로드	44.045	DAMPENER, DIFFECTIONAL CONTROL LEVER VIBRATION 댐퍼

93.313	NUT, DIRECTION CONTROL LEVER KNOB FASTENER 너트
94.691	FASTENER, DIRECTIONAL CONTROL LEVER RETAINER 패스너
94.692	NUT, DIRECTIONAL CONTROL LEVER RETAINER FASTENER 너트
94.693	NUT, DIRECTIONAL CONTROL LINKAGE BRACKET CAP FAS 너트
94.709	RETAINER, DIRECTIONAL CONTROL LINKAGE BELLCRANK 리테이너




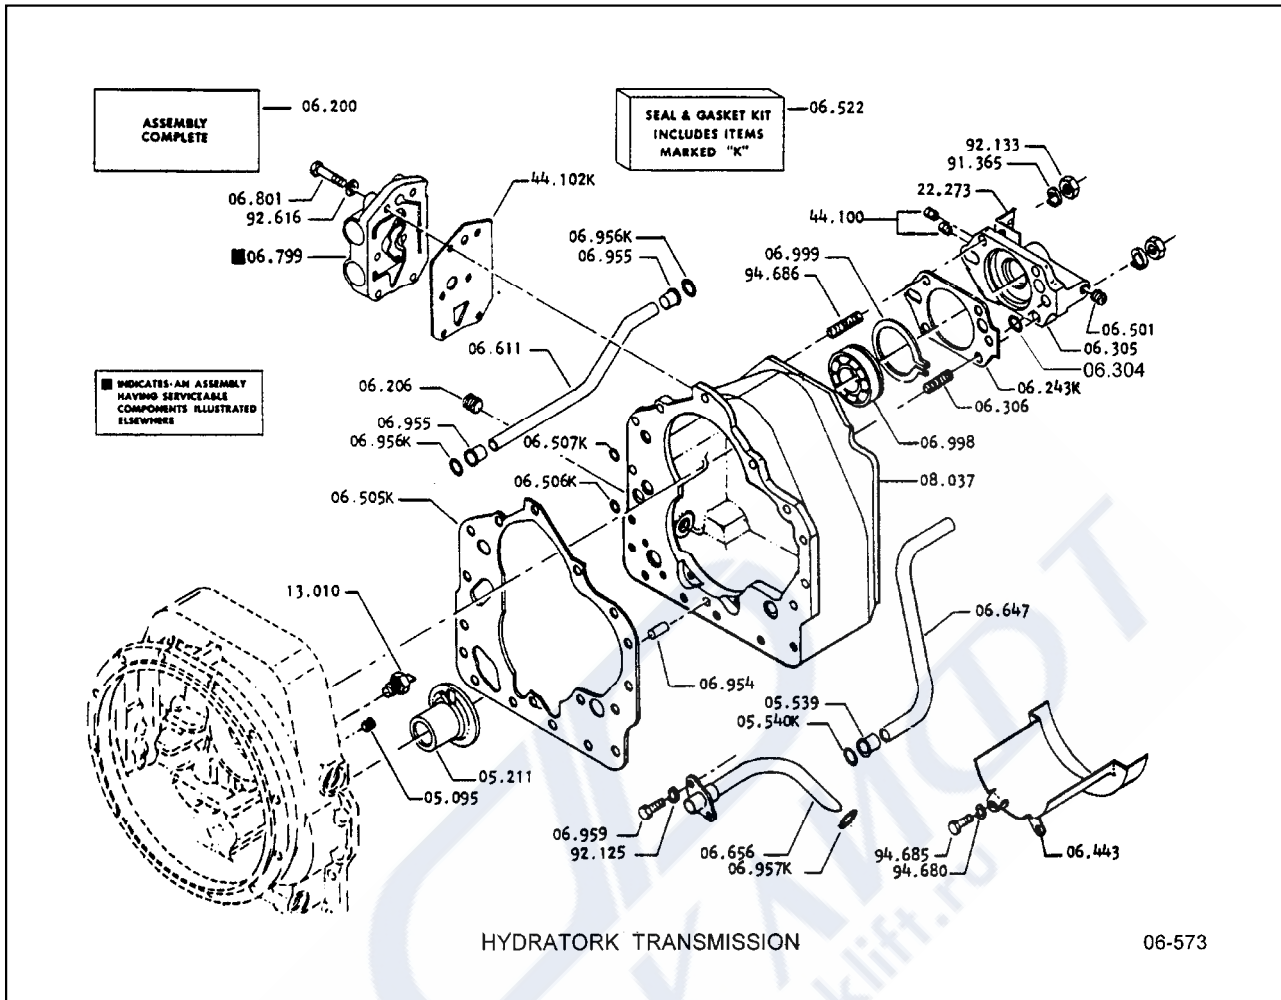 

05.095	PLUG, CONVERTER HOUSING OIL PASSAGE 플러그
05.211	SLEEVE, REVERSE SECOND CLUTCH SHAFT 슬리브
05.539	SLEEVE, TRANSMISSION LUBRICATION LINE 슬리브
05.540	SEAL, TRANSMISSION LUB LINE 씰
06.200	TRANSMISSION ASSEMBLY 트랜스미션
06.206	PLUG, DRAIN 플러그
06.243	GASKET, FORWARD CLUTCH COVER 가스켓
06.304	SEAL, FORWARD CLUTCH BEARING CAP 씰
06.305	CAP, FORWARD CLUTCH BEARING 캡
06.306	FASTENER, FORWARD CLUTCH BEARING CAP 패스너
06.443	BAFFLE, TRANSMISSION OIL 배플
06.501	PLUG, FORWARD CLUTCH BEARING CAP 플러그
06.505	SEAL, CONVERTER HOUSING TO CASE-OUTER 씰
06.506	SEAL, CONVERTER HOUSING TO CASE-INNER 씰
06.507	OIL SEAL, CONVERTER HOUSING TO CASE OIL PASSAGE 오일씰


06.522	SEAL AND GASKET KIT, TRANSMISSION 씰 & 가스켓
06.611	TUBE, TRANSMISSION "LOW" OIL 튜브
06.647	LINE, TRANSMISSION LUBRICATION 라인
06.656	LINE, TRANS VALVE PRESS PUMP INLET 라인
06.799	ACCUMULATOR, TRANSMISSION CONTROL 어큐레이터
06.801	FASTENER, TRANSMISSION ACCUMULATOR BRACKET 패스너
06.954	DOWEL, TRANSMISSION CASE TO CONVERTER 다웰
06.955	SLEEVE, LOW CLUTCH OIL LINE 슬리브
06.956	SEAL, LOW CLUTCH OIL LINE 씰
06.957	SEAL, PUMP INLET LINE 씰
06.959	FASTENER, PUMP INLET LINE RETAINER 패스너
06.998	BEARING, LOWER CLUTCH SHAFT 베어링
06.999	RING, LOWER CLUTCH SHAFT BEARING RETAINER 링
08.037	CASE, TRANSMISSION 케이스
13.010	CONTROL, CONVERTOR TEMPERATURE INDICATOR 컨트롤

22.273	ANCHOR, PARKING BRAKE RELEASE SPRING 앵커
44.100	PLUG, FORWARD CLUTCH BEARING CAP 플러그
44.102	GASKET, TRANSMISSION ACCUMULATOR ATTACHING 가스켓
91.365	LOCKWASHER, FWD CLUTCH SHAFT BRG CAP FAST 로크와셔
92.125	LOCKWASHER, TRANSMISSION PUMP INLET LINE FASTENE 로크와셔
92.133	NUT, CLUTCH BEARING CAP FASTENER 너트
92.616	LOCKWASHER, ACCUMULATOR HOUSING FASTENER 로크와셔
94.680	LOCKWASHER, TRANSMISSION CASE OIL BAFFLE FASTENE 로크와셔
94.685	FASTENER, TRANSMISSION CASE OIL BAFFLE 패스너
94.686	FASTENER, FORWARD CLUTCH BEARING CAP 패스너

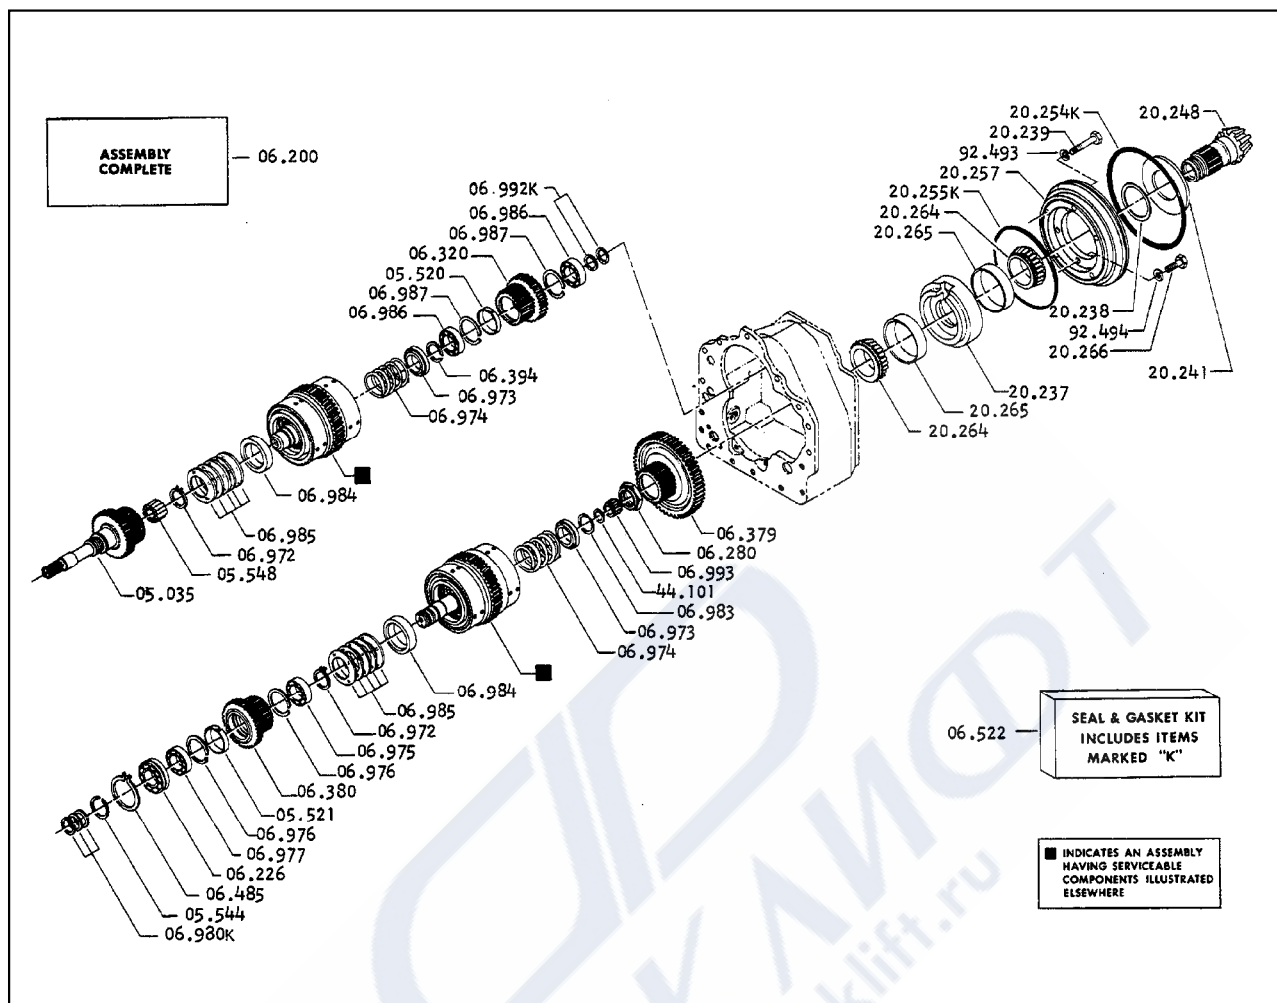 

05.035	SHAFT, CONVERTER TURBINE 샤프트	06.973	RETAINER, CLUTCH RELEASE SPRING 리테이너
05.520	SPACER, FORWARD GEAR BEARING 스페이서	06.974	SPRING, CLUTCH RELEASE 스프링
05.521	SPACER, REVERSE GEAR BEARING 스페이서	06.975	BEARING, REVERSE CLUTCH HUB (AXLE END) 베어링
05.544	RING, REVERSE CLUTCH SHAFT BEARING LOCATING 링	06.976	RING, REVERSE CLUTCH HUB BEARING LOCATING 링
05.548	BEARING, FORWARD CLUTCH SHAFT PILOT 베어링	06.977	BEARING, REVERSE CLUTCH HUB (ENGINE END) 베어링
06.200	TRANSMISSION ASSEMBLY 트랜스미션	06.983	RING, CLUTCH RELEASE SPRING RETAINER 링
06.226	BEARING, REVERSE SHAFT INNER 베어링	06.984	RETAINER, CLUTCH RELEASE SPRING 리테이너
06.280	FASTENER, OUTPUT SHAFT FLANGE 패스너	06.985	SPRING, CLUTCH RELEASE 스프링
06.320	HUB, FORWARD CLUTCH DISC 허브	06.986	BEARING, FORWARD CLUTCH HUB (AXLE END) 베어링
06.379	HUB, 1ST & 3RD CLUTCH DISC 허브	06.987	RING, FORWARD CLUTCH HUB BEARING LOCATING 링
06.380	HUB, REVERSE CLUTCH DISC 허브	06.992	SEAL, CLUTCH SHAFT OIL 씰
06.394	RING-RETAINING, FORWARD CLUTCH BRG INNER 링	06.993	BEARING, CLUTCH SHAFT PILOT 베어링
06.485	RETAINER, REVERSE SHAFT INNER BEARING 리테이너	20.237	RETAINER, DIFFERENTIAL PINION BEARING 리테이너
06.522	SEAL & GASKET KIT, TRANSMISSION 씰 & 가스킷	20.238	SHIM KIT, DIFFERENTIAL PINION BEARING CAGE 삼
06.972	RING, CLUTCH RELEASE SPRING RETAINER 링	20.239	FASTENER, DIFFERENTIAL PINION BEARING CARRIER 패스너

20.241	WASHER, DIFFERENTIAL PINION INNER BEARING THRUST 와셔
20.248	RING GEAR & PINION SET, DIFFERENTIAL 링
20.254	SEAL, DIFFERENTIAL BEARING CARRIER 씰
20.255	SEAL, DIFFERENTIAL BEARING CARRIER 씰
20.257	BEARING CARRIER, DIFFERENTIAL 베어링캐리어
20.264	CONE, DIFFERENTIAL BEARING 콘
20.265	CUP, DIFFERENTIAL BEARING 컵
20.266	FASTENER, DIFF PINION BEARING RETAINER 패스너
44.101	THRUST WASHER, CLUTCH SHAFT PILOT BEARING 스러스트와셔
92.493	LOCKWASHER, DIFFERENTIAL PINION BEARING CARRIER 로크와셔
92.494	LOCKWASHER, DIFFERENTIAL PINION BEARING FASTENER 로크와셔

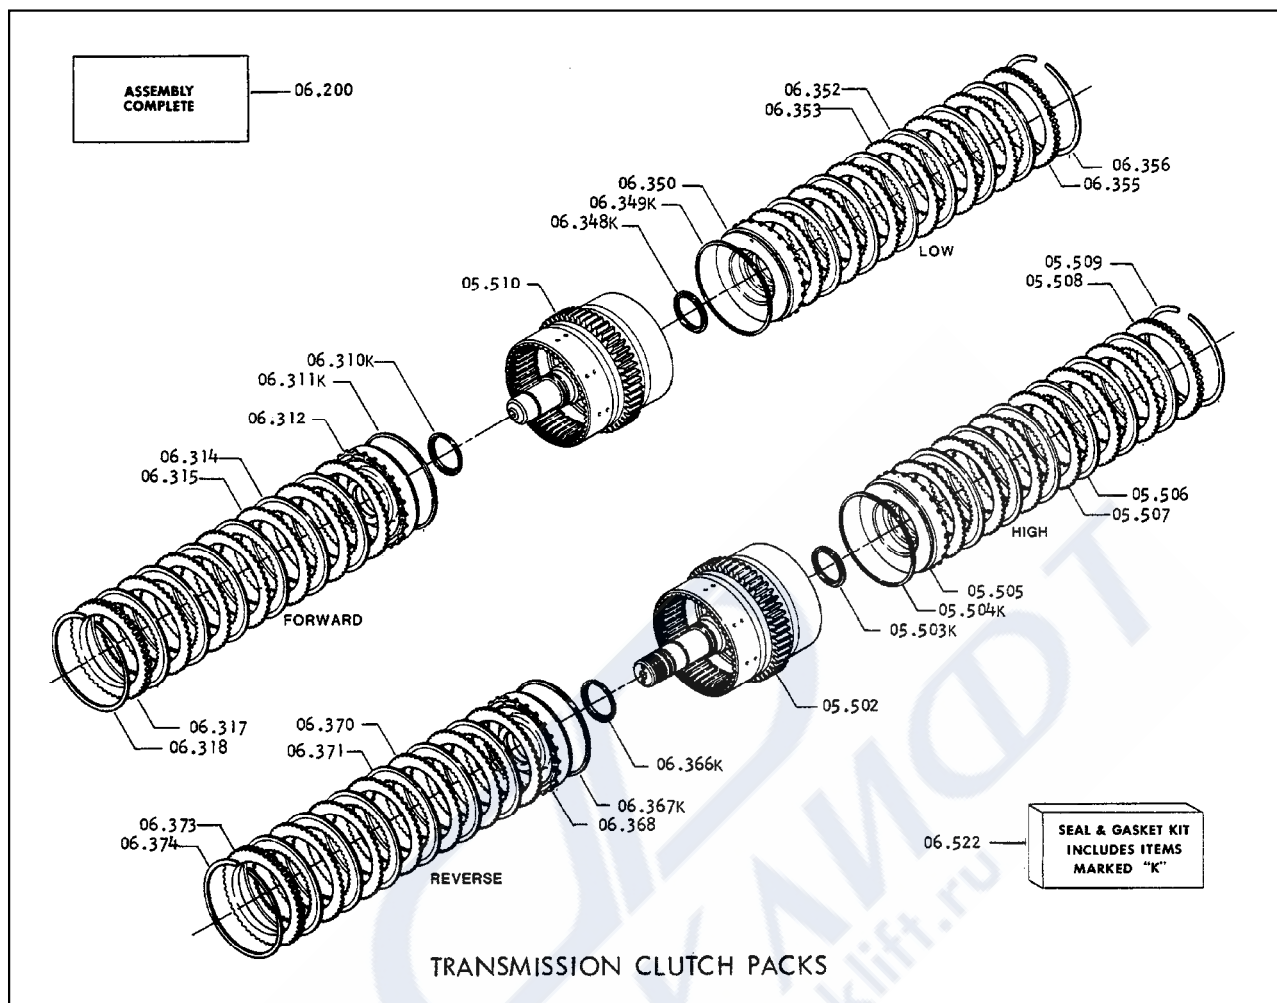 


05.502	HUB & DRUM ASSEMBLY REV & 3RD CLUTCH 허브& 드럼
05.503	SEAL, 3RD CLUTCH PISTON-INNER 씰
05.504	SEAL, 3RD CLUTCH PISTON-OUTER 씰
05.505	PISTON, 3RD CLUTCH 피스톤
05.506	DISC, 3RD CLUTCH-INNER 디스크
05.507	DISC, 3RD CLUTCH-OUTER 디스크
05.508	PLATE, 3RD CLUTCH DISC END 플레이트
05.509	RING, 3RD CLUTCH DISC END PLATE RET 링
05.510	HUB & DRUM ASSEMBLY, FORWARD & 2ND CLUTCH 허브& 드럼
06.200	TRANSMISSION ASSEMBLY 트랜스미션
06.310	SEAL, FORWARD CLUTCH PISTON INNER 씰
06.311	SEAL, FORWARD CLUTCH PISTON OUTER 씰
06.312	PISTON, FORWARD CLUTCH 피스톤
06.314	DISC, FORWARD CLUTCH INNER 디스크
06.315	DISC, FORWARD CLUTCH OUTER 디스크

06.317	PLATE, FORWARD CLUTCH DISC END 플레이트
06.318	RING, FORWARD CLUTCH DISC END PLATE RET 링
06.348	SEAL, 1ST & 3RD CLUTCH PISTON INNER 씰
06.349	SEAL, 1ST & 3RD CLUTCH PISTON OUTER 씰
06.350	PISTON, 1ST & 3RD CLUTCH 피스톤
06.352	DISC, 1ST & 3RD CLUTCH INNER 디스크
06.353	DISC, 1ST & 3RD CLUTCH OUTER 디스크
06.355	PLATE, 1ST & 3RD CLUTCH DISC END 플레이트
06.356	RING, 1ST & 3RD CLUTCH DISC END PLATE RET 링
06.366	SEAL, REVERSE CLUTCH PISTON INNER 씰
06.367	SEAL, REVERSE CLUTCH PISTON OUTER 씰
06.368	PISTON, REVERSE CLUTCH 피스톤
06.370	DISC, REVERSE CLUTCH INNER 디스크
06.371	DISC, REVERSE CLUTCH OUTER 디스크
06.373	PLATE, REVERSE CLUTCH DISC END 플레이트


06.374	RING, REVERSE CLUTCH DISC END PLATE RET 링
06.522	SEAL AND GASKET KIT, TRANSMISSION 씰& 가스켓

 ФОРКЛИФТ
www.forklift.ru

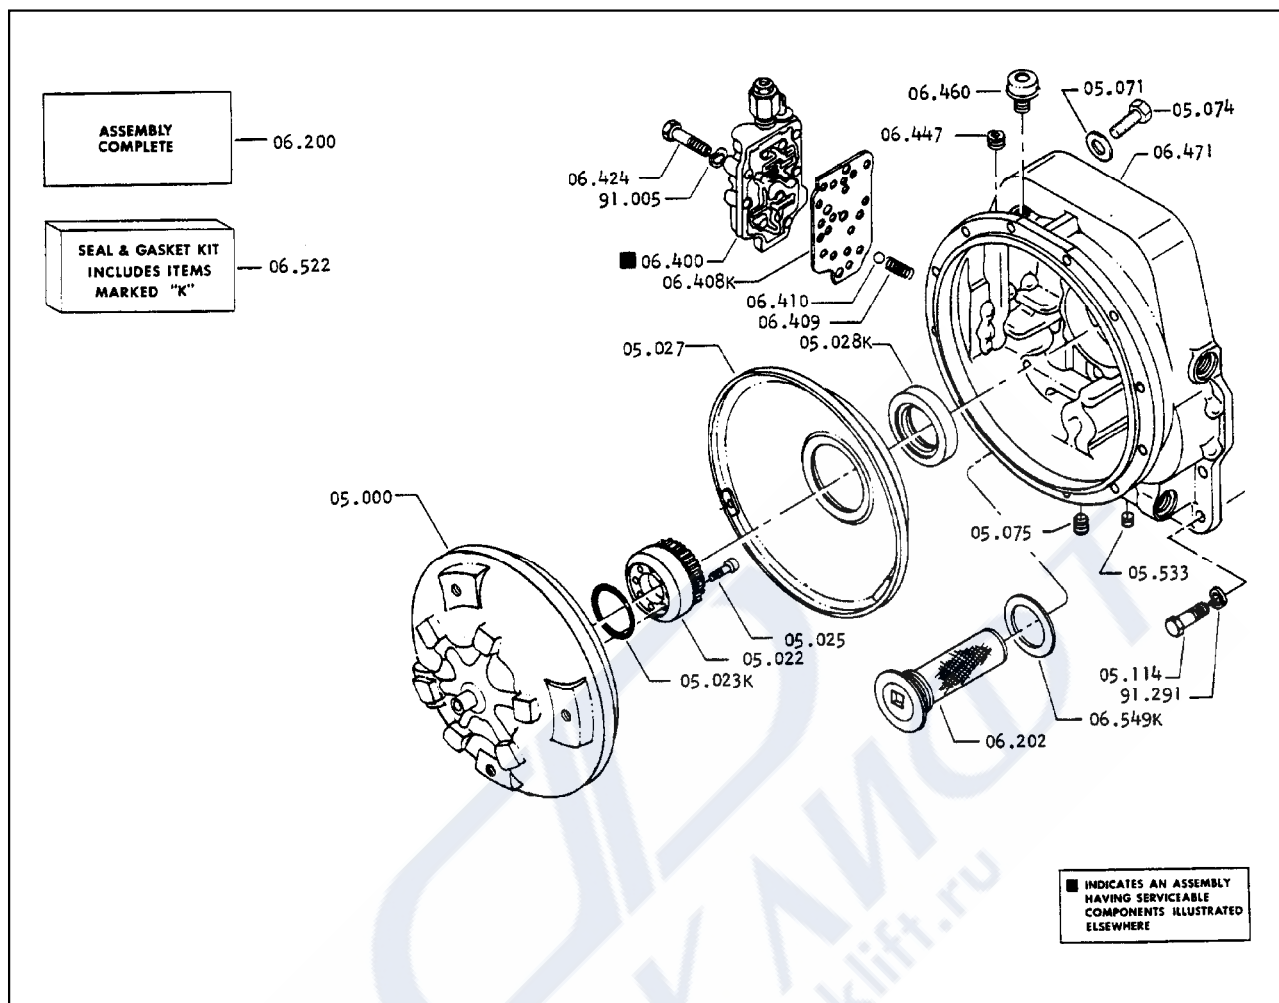


- | | |
|--------|--|
| 05.000 | CONVERTER ASSEMBLY, TORQUE
컨버터 |
| 05.022 | HUB, CONVERTER IMPELLER
허브 |
| 05.023 | SEAL, CONVERTER IMPELLER HUB
씰 |
| 05.025 | FASTENER, IMPELLER TO HUB
패스너 |
| 05.027 | BAFFLE, TORQUE CONVERTER OIL
배플 |
| 05.028 | SEAL, CONVERTER OIL BAFFLE
씰 |
| 05.071 | GASKET, HOUSING HOLE COVER
가스켓 |
| 05.074 | PLUG, HOUSING DRAIN
플러그 |
| 05.075 | PLUG, CONVERTER HOUSING DRAIN (FRONT)
플러그 |

05.114	FASTENER, CONVERTER TO CASE 패스너
05.533	PLUG, CONVERTER HOUSING 플러그
06.200	TRANSMISSION ASSEMBLY 트랜스미션
06.202	STRAINER, TRANSMISSION SUMP 스트레이너
06.400	CONTROL COVER & VALVE ASSEMBLY 컨트롤커버& 밸브
06.408	GASKET, CONTROL COVER ATTACHING 가스켓
06.409	SPRING, SELECTOR VALVE DETENT 스프링
06.410	DETENT, TRANSMISSION SEL VALVE CONTROL LEVER 디텐트
06.424	FASTENER, CONTROL COVER 패스너
06.447	PLUG, TRANSMISSION CASE 플러그
06.460	VENT, TRANSMISSION CASE 벤트
06.471	HOUSING, CONVERTER 하우징
06.522	SEAL AND GASKET KIT, TRANSMISSION 씰& 가스켓
06.549	GASKET, TRANSMISSION SUMP STRAINER 가스켓
91.005	LOCKWASHER, CONTROL COVER FASTENER 로크와셔
91.291	LOCKWASHER, CONVERTER TO CASE FASTENER 로크와셔

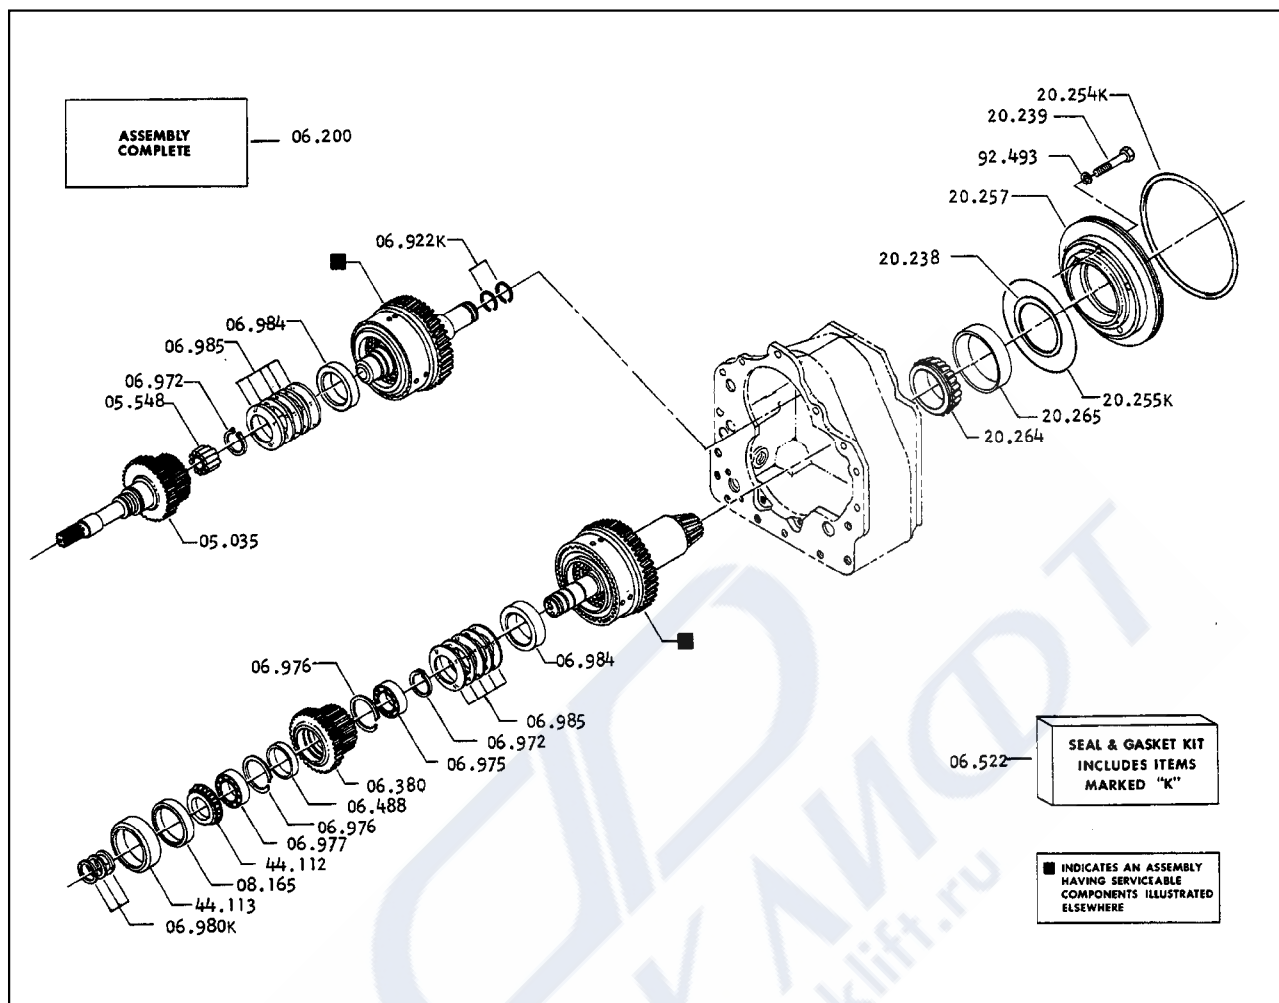 


05.035	SHAFT, CONVERTER TURBINE 샤프트
05.548	BEARING, FORWARD CLUTCH SHAFT PILOT 베어링
06.200	TRANSMISSION ASSEMBLY 트랜스미션
06.380	HUB, REVERSE CLUTCH DISC 허브
06.488	SPACER, REVERSE CLUTCH SHAFT 스페이서
06.522	SEAL AND GASKET KIT, TRANSMISSION 셀& 가스켓
06.972	RING, CLUTCH RELEASE SPRING RETAINER 링
06.975	BEARING, REVERSE CLUTCH HUB (AXLE END) 베어링
06.976	RING, REVERSE CLUTCH HUB BEARING LOCATING 링

06.977	BEARING, REVERSE CLUTCH HUB (ENGINE END) 베어링
06.980	SEAL, CLUTCH SHAFT OIL 씰
06.984	RETAINER, CLUTCH RELEASE SPRING 리테이너
06.985	SPRING, CLUTCH RELEASE 스프링
06.992	SEAL, CLUTCH SHAFT OIL 씰
08.165	CUP, OUTPUT SHAFT FRONT BEARING 컵
20.238	SHIM KIT, DIFFERENTIAL PINION BEARING CAGE 심
20.239	FASTENER, DIFFERENTIAL PINION BEARING CARRIER 패스너
20.254	SEAL, DIFFERENTIAL BEARING CARRIER 씰
20.255	SEAL, DIFFERENTIAL BEARING CARRIER 씰
20.257	BEARING CARRIER, DIFFERENTIAL 베어링캐리어
20.264	CONE, DIFFERENTIAL BEARING 콘
20.265	CUP, DIFFERENTIAL BEARING 컵
44.112	CONE, TRANSMISSION OUTPUT SHAFT FRONT BEARING 콘
44.113	RACE, TRANSMISSION OUTPUT SHAFT FRONT BEARING 레이스
92.493	LOCKWASHER, DIFFERENTIAL PINION BEARING CARRIER FA 로크와셔

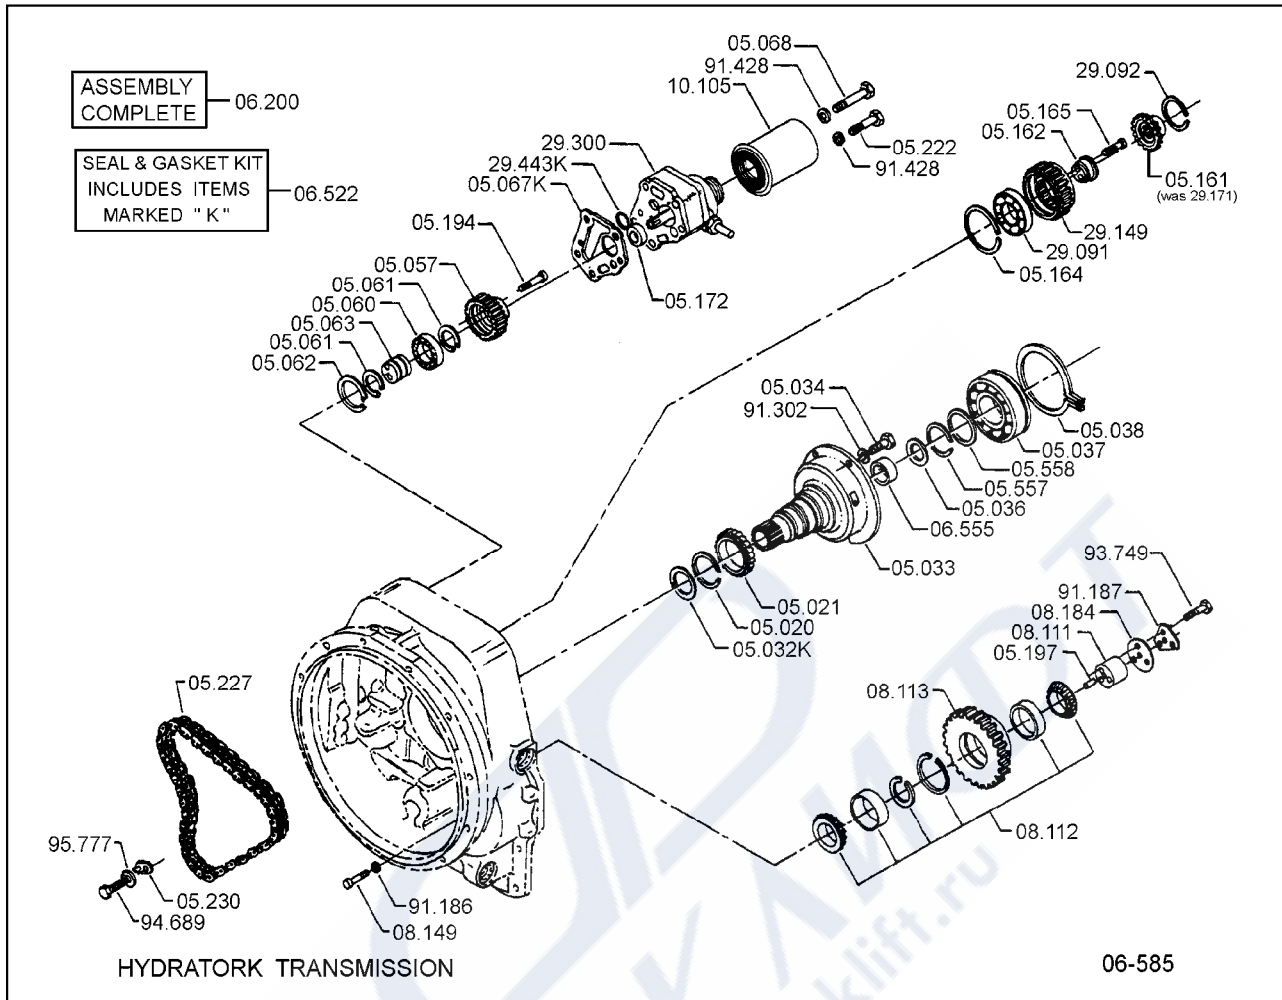 


05.020	RING-RETAINING, IMPELLER HUB BEARING 링	05.161	GEAR, PUMP DRIVE 기어
05.021	BEARING, IMPELLER HUB 베어링	05.162	SPINDLE, PUMP DRIVE GEAR BEARING 스핀들
05.032	SEAL, STATOR SUPPORT (PISTON RING) 씰	05.164	RETAINER, PUMP DRIVE GEAR BEARING 리테이너
05.033	STATOR SUPPORT ASSEMBLY, CONVERTER 스테이더	05.165	FASTENER, PUMP GEAR BEARING SPINDLE 패스너
05.034	FASTENER, STATOR SUPPORT 패스너	05.172	SEAL, CONVERTER PUMP SHAFT 씰
05.036	SEAL, TURBINE SHAFT 씰	05.194	CAPSCREW, PUMP DRIVE BEARING SHAFT SPACER 캡스크류
05.037	BEARING, TURBINE SHAFT 베어링	05.197	LOCATOR, TRANSMISSION REVERSE IDLER SHAFT 로케이터
05.038	RING-RETAINING, TURBINE SHAFT BEARING 링	05.222	CAPSCREW, CONVERTOR PUMP MOUNTING 캡스크류
05.057	GEAR, PUMP DRIVE 기어	05.227	CHAIN, HYDRAULIC PUMP DRIVE 체인
05.060	BEARING, PUMP SHAFT (REAR) 베어링	05.230	TUBE, HYDRAULIC PUMP DRIVE CHAIN LUBE 튜브
05.061	RING-RETAINING, BEARING LOCATING 링	05.557	RETAINER, CONVERTER TURBINE SHAFT BEARING LOCATOR 리테이너
05.062	RING-RETAINING, PUMP SHAFT BEARING 링	05.558	RING, CONVERTER TURBINE SHAFT BEARING LOCATOR 링
05.063	SHAFT, PUMP DRIVE 샤프트	06.200	TRANSMISSION ASSEMBLY 트랜스미션
05.067	GASKET, CONVERTER PUMP 가스켓	06.522	SEAL & GASKET KIT, TRANSMISSION 씰& 가스켓
05.068	FASTENER, CONVERTER CHARGING PUMP 패스너	06.555	BEARING, TRANSMISSION STATOR SUPPORT 베어링

08.111	SHAFT, REVERSE IDLER 샤프트
08.112	BEARING, TRANSMISSION REVERSE IDLER GEAR 베어링
08.113	GEAR, REVERSE IDLER 기어
08.149	FASTENER, TRANSMISSION REVERSE IDLER SHAFT 패스너
08.184	WASHER, REVERSE IDLER GEAR THRUST 와셔
10.105	ELEMENT & GASKET, OIL FILTER 엘리먼트& 가스켓
29.091	BEARING, HYDRAULIC PUMP DRIVE GEAR 베어링
29.092	RETAINER, HYDRAULIC PUMP DRIVE GEAR 리테이너
29.149	GEAR, HYDRAULIC PUMP DRIVE 기어
29.300	PUMP ASSEMBLY, CONVERTER CHARGING 펌프
29.443	SEAL, CONVERTER PUMP OUTLET PORT 씰
91.186	LOCKWASHER, REV IDLER SHAFT FASTENER 로크와셔
91.187	LOCK PLATE, REV IDLER SHAFT FASTENER 로크플레이트
91.302	LOCKWASHER, STATOR FASTENER 로크와셔
91.428	LOCKWASHER, CONVERTER CHARGING PUMP FAST 로크와셔
93.749	FASTENER, TRANSMISSION REV IDLER GEAR BEARING RE 패스너
94.689	FASTENER, HYDRAULIC PUMP DRIVE CHAIN LUBE TUBE 패스너
95.777	LOCKWASHER, PUMP DRIVE CHAIN LUBE TUBE FAST 로크와셔

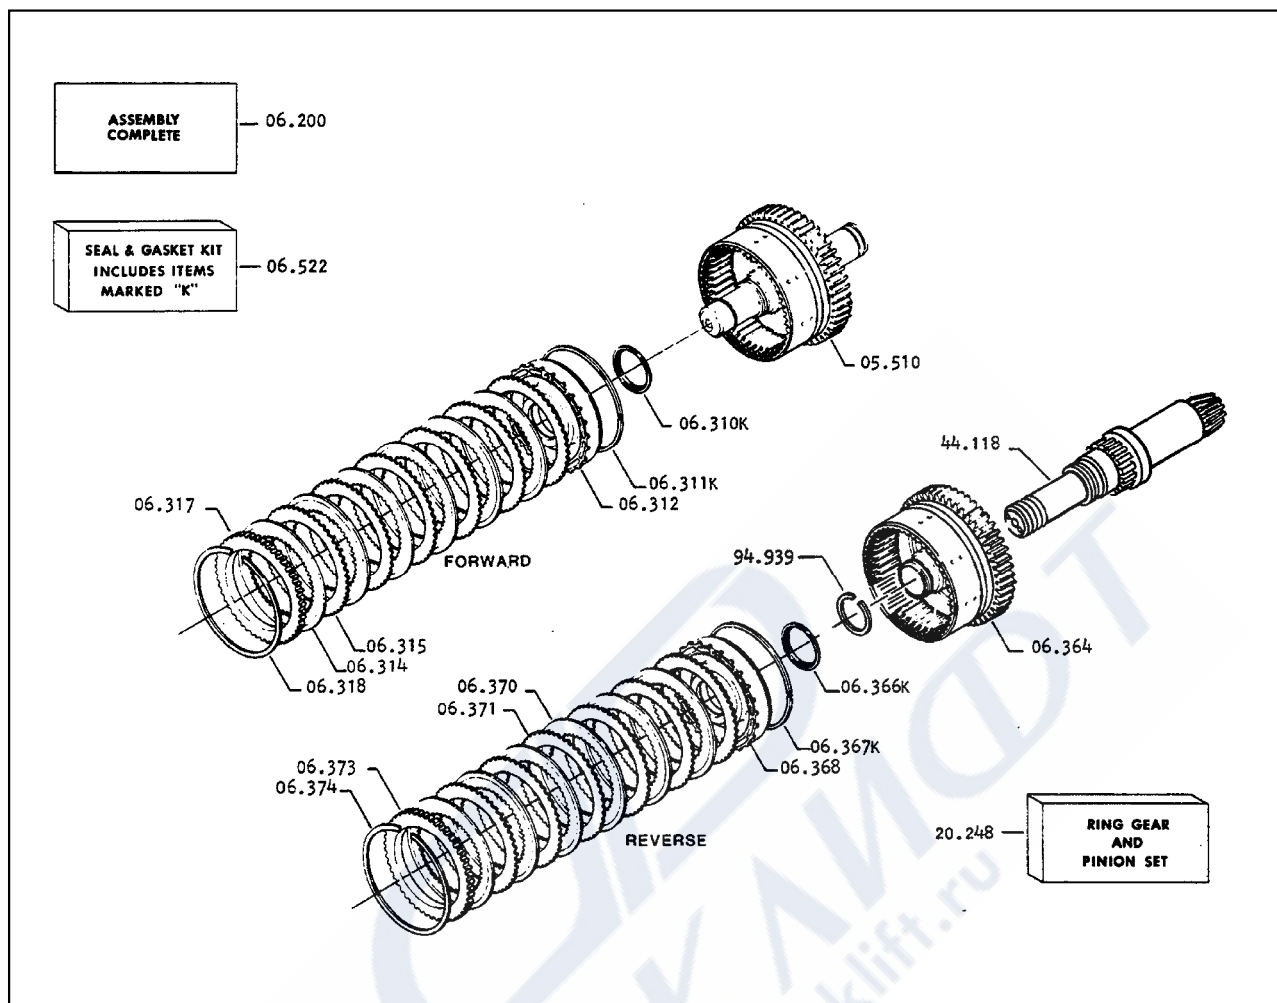 

05.510	HUB & DRUM ASSEMBLY, FORWARD & 2ND CLUTCH 허브& 드럼
06.200	TRANSMISSION ASSEMBLY 트랜스미션
06.310	SEAL, FORWARD CLUCH PISTON INNER 씰
06.311	SEAL, FORWARD CLUTCH PISTON OUTER 씰
06.312	PISTON, FORWARD CLUTCH 피스톤
06.314	DISC, FORWARD CLUTCH INNER 디스크
06.315	DISC, FORWARD CLUTCH OUTER 디스크
06.317	PLATE, FORWARD CLUTCH DISC END 플레이트
06.318	RING, FORWARD CLUTCH DISC END PLATE RET 링

06.364	HUB & DRUM ASSEMBLY, REVERSE CLUTCH 히브& 드럼
06.366	SEAL, REVERSE CLUTCH PISTON INNER 씼
06.367	SEAL, REVERSE CLUTCH PISTON OUTER 씼
06.368	PISTON, REVERSE CLUTCH 피스톤
06.370	DISC, REVERSE CLUTCH INNER 디스크
06.371	DISC, REVERSE CLUTCH OUTER 디스크
06.373	PLATE, REVERSE CLUTCH DISC END 플레이트
06.374	RING, REVERSE CLUTCH DISC END PLATE RET 링
06.522	SEAL AND GASKET KIT, TRANSMISSION 씼& 가스켓
20.248	RING GEAR & PINION SET, DIFFERENTIAL 링
44.118	SHAFT ASSEMBLY, REVERSE CLUTCH & PINION 샤프트
94.939	RETAINER, REVERSE CLUTCH & PINION SHAFT ASSEMBLY 리테이너

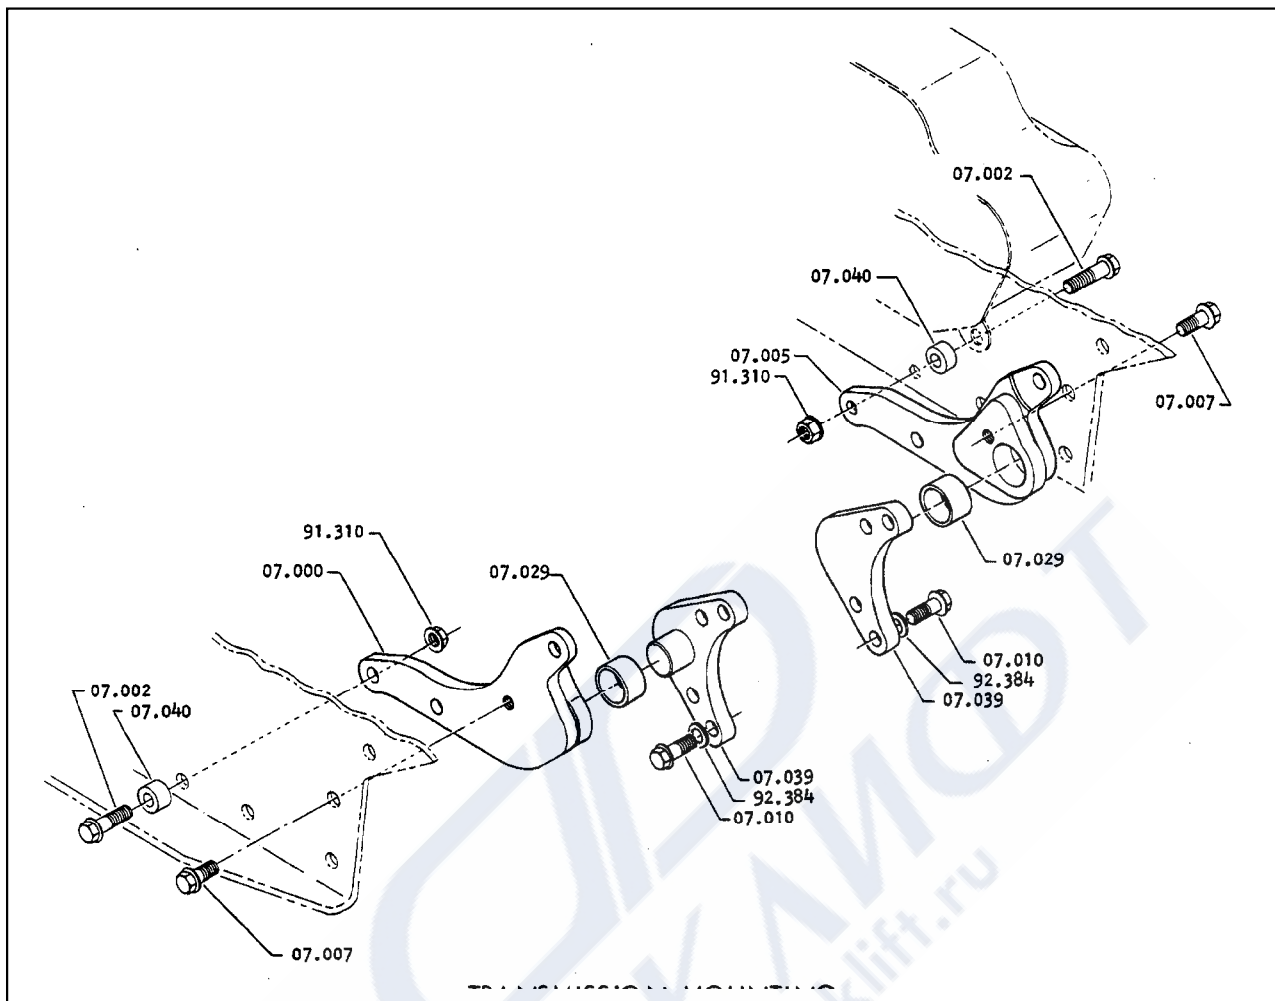 


07.000	BRACKET, TRANSMISSION MOUNTING (RH) 브라켓
07.002	FASTENER, TRANSMISSION MOUNTING BRACKET RH 패스너
07.005	BRACKET, TRANSMISSION MOUNTING LH 브라켓
07.007	FASTENER, TRANSMISSION MOUNTING BRACKET LH 패스너
07.010	FASTENER, TRANSMISSION MOUNTING BRACKET RH 패스너
07.029	BUSHING, TRANSMISSION MOUNTING BRACKET 부싱
07.039	BRACKET, TRANSMISSION MOUNTING 브라켓
07.040	SPACER, TRANSMISSION MOUNTING BRACKET FASTENER 스페이서
91.310	NUT, TRANS MOUNTING BRACKET FASTENER (LH) 너트


92.384

WASHER, TRANSMISSION MOUNTING BRACKET TO FRAME FAS
와셔

 ФОРКЛИФТ
www.forklift.ru

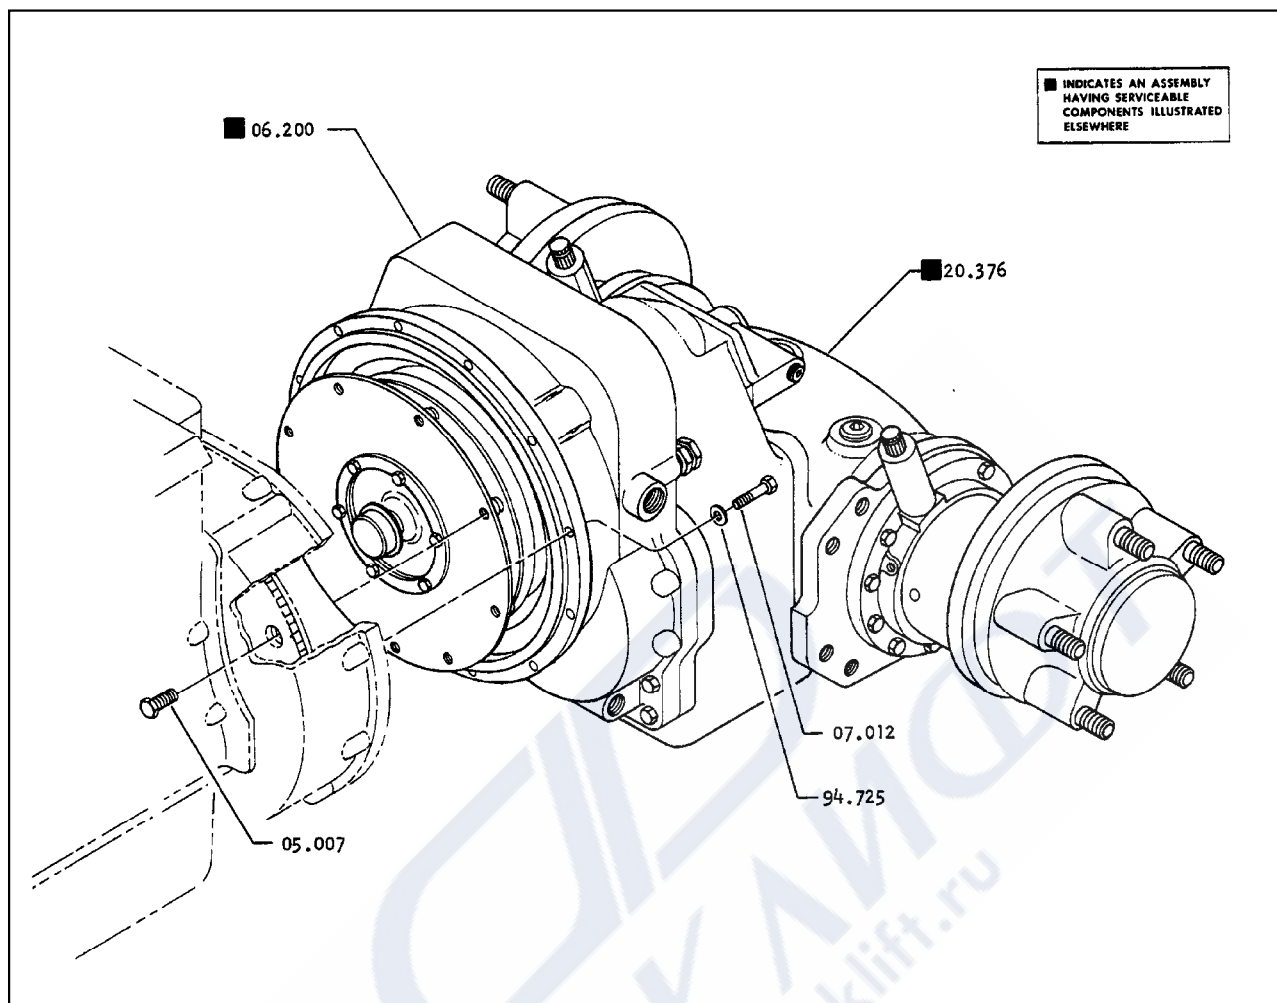


05.007	FASTENER, CONVERTER TO FLYWHEEL 패스너
06.200	TRANSMISSION ASSEMBLY 트랜스미션
07.012	FASTENER, TRANSMISSION TO ENGINE 패스너
20.376	AXLE ASSEMBLY, DRIVE 드라이브액슬
94.725	WASHER, TRANSMISSION FASTENER 와셔

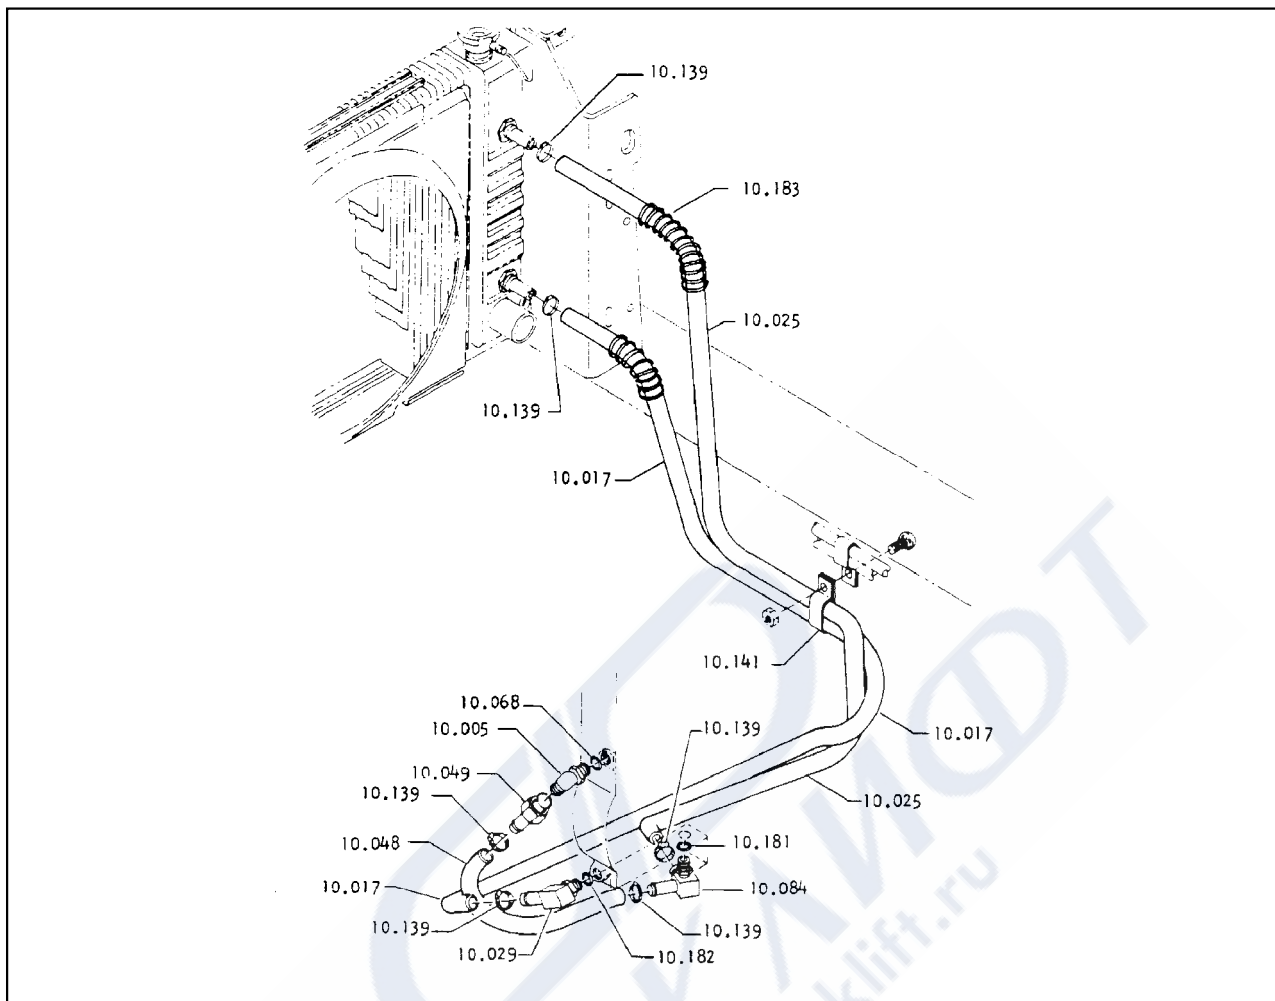 

- | | |
|--------|---|
| 10.005 | FITTING, CONVERTOR CHARGING PUMP OUTLET
피팅 |
| 10.017 | LINE, COOLER OUTLET
라인 |
| 10.025 | LINE, TRANSMISSION TO COOLER INLET
라인 |
| 10.029 | FITTING, TRANSMISSION COOLING LINE
피팅 |
| 10.048 | LINE, CONVERTOR PUMP OUTLET
라인 |
| 10.049 | FITTING, CONVERTOR PUMP OUTLET LINE
피팅 |
| 10.068 | SEAL, CONVERTOR PUMP OUTLET PORT
셀 |
| 10.084 | FITTING, COOLER INLET LINE
피팅 |
| 10.139 | CLAMP, COOLER LINE
클램프 |


10.141	CLAMP, COOLER LINE 클램프
10.181	SEAL, TRANSMISSION COOLER INLET LINE FITTING 씰
10.182	SEAL, TRANSMISSION COOLER OUTLET LINE FITTING 씰
10.183	GUARD, TRANSMISSION COOLING LINE 가드



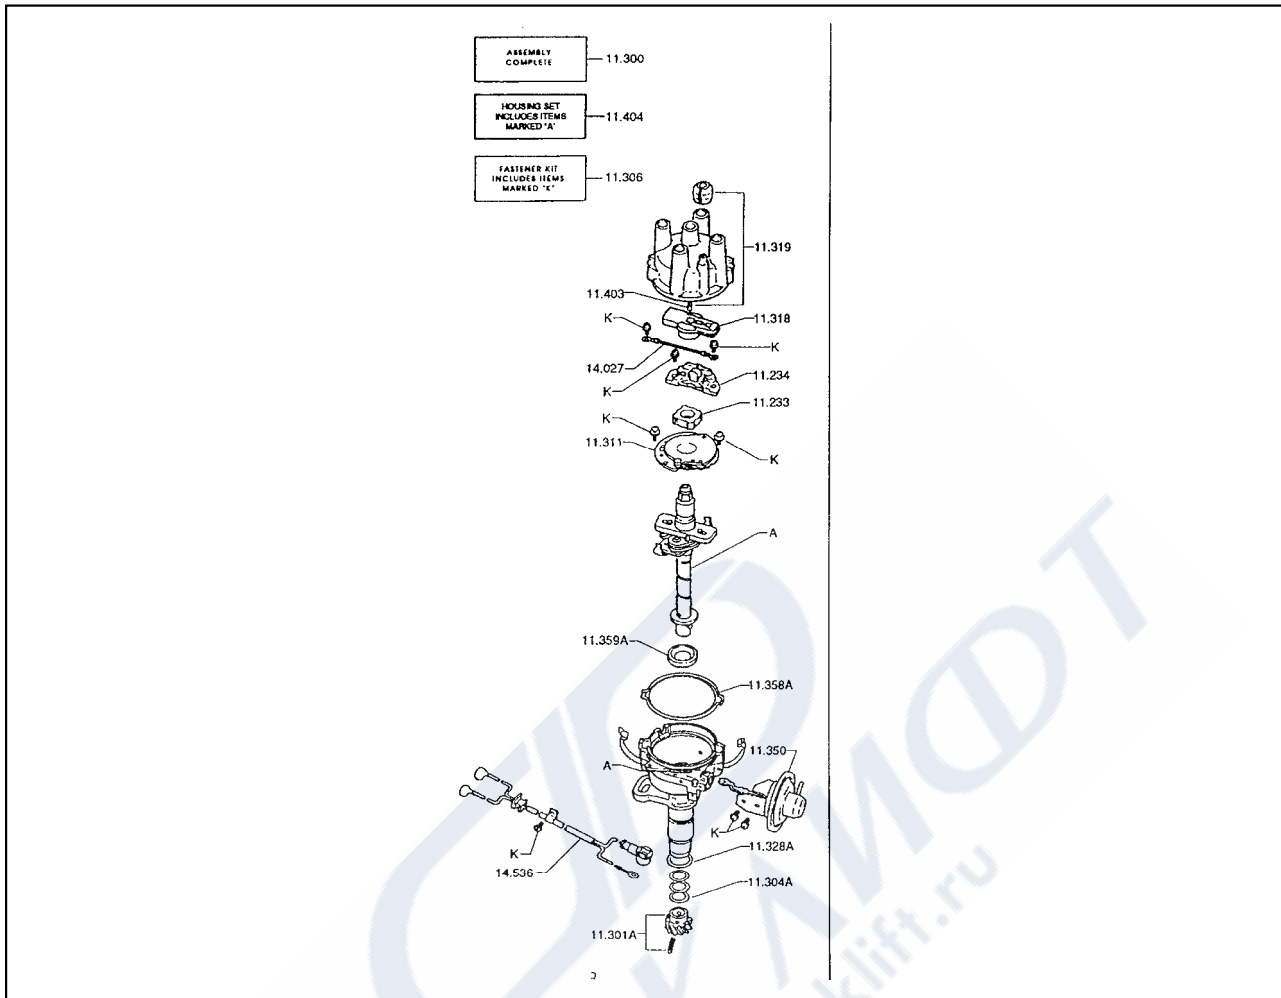 


- | | |
|--------|---|
| 11.233 | INDUCTOR, DISTRIBUTOR ELECTRONIC TIMER
인덕터 |
| 11.234 | RELUCTOR, DISTRIBUTOR ELECTRONIC TIMER
릴럭터 |
| 11.300 | DISTRIBUTOR ASSEMBLY
디스트리뷰터 |
| 11.301 | GEAR, DISTRIBUTOR
기어 |
| 11.304 | WASHER, DISTRIBUTOR GEAR
와셔 |
| 11.306 | FASTENER, DISTRIBUTOR BREAKER PLATE
패스너 |
| 11.311 | PLATE, DISTRIBUTOR BREAKER
플레이트 |
| 11.318 | ROTOR, DISTRIBUTOR
로터 |
| 11.319 | CAP, DISTRIBUTOR
캡 |

11.328	SEAL, DISTRIBUTOR HOUSING 씰
11.350	ASSEMBLY, DISTRIBUTOR VACUUM ADVANCE 진공어드밴스
11.358	SEAL, DISTRIBUTOR CAP 씰
11.359	SEAL, DISTRIBUTOR HOUSING COVER 씰
11.403	CARBON, DISTRIBUTOR CAP 카본
11.404	HOUSING SET, DISTRIBUTOR 하우징세트
14.027	WIRE, COIL TO DISTRIBUTOR PRIMARY 와이어
14.536	WIRE, IGNITION COIL PRIMARY FEED 와이어

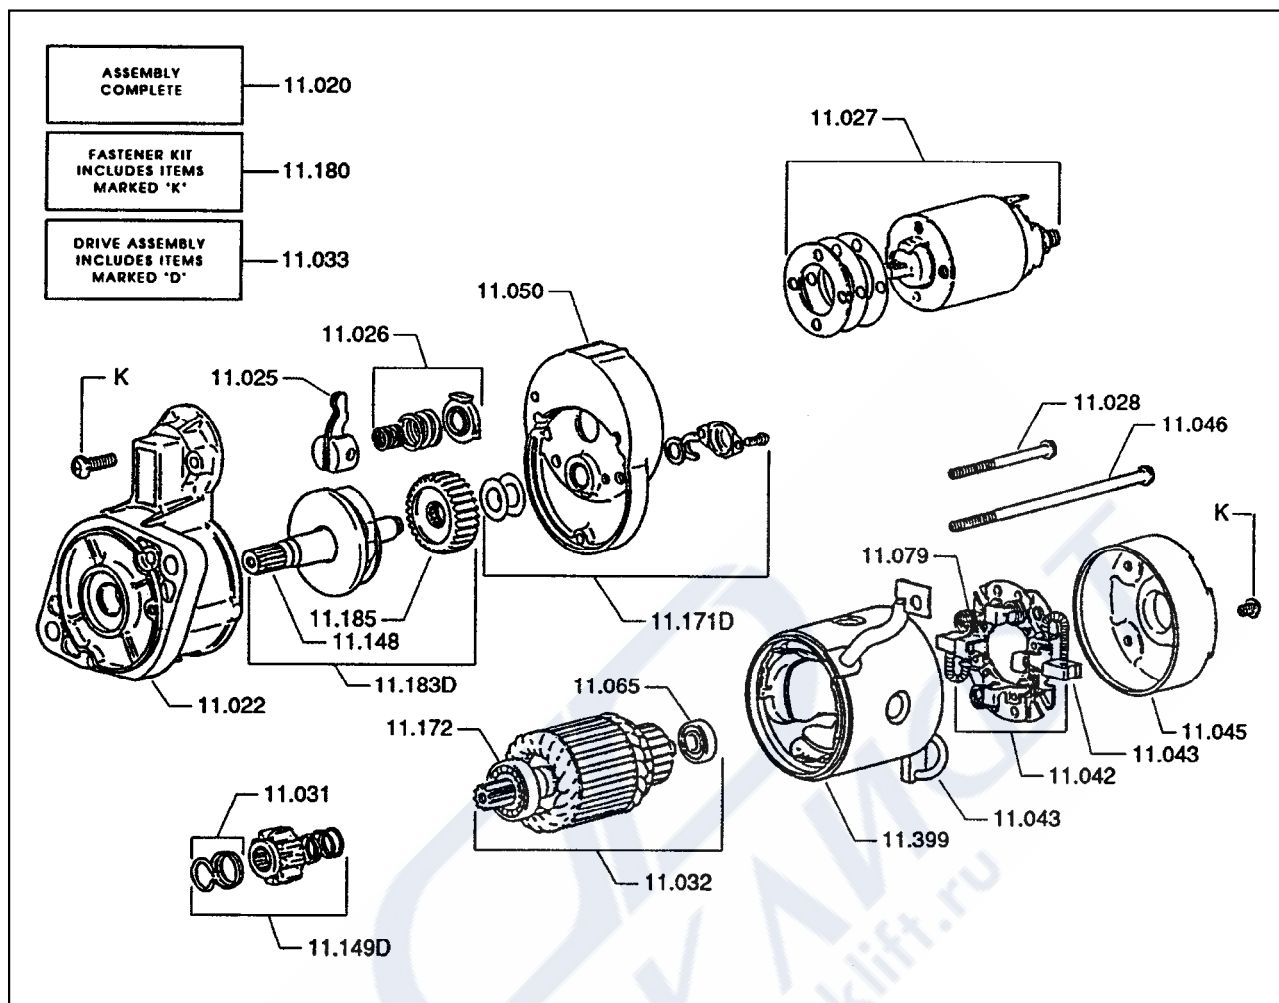 


11.020	MOTOR ASSEMBLY, STARTING 모터
11.022	HOUSING & BUSHING, DRIVE END 하우징 & 부싱
11.025	LEVER, DRIVE SHIFT FORK 레버
11.026	SPRING, SOLENOID PLUNGER 스프링
11.027	SWITCH, SOLENOID 스위치
11.028	FASTENER, SOLENOID SWITCH 패스너
11.031	COLLAR, PINION STOP 칼라
11.032	ARMATURE, STARTING MOTOR 아마추어
11.033	DRIVE ASSEMBLY, STARTING MOTOR 드라이브

11.042	BRUSH HOLDER & BRUSH (KIT) 브러쉬홀더
11.043	BRUSH SET, STARTING MOTOR 브러쉬셋
11.045	FRAME, COMMUTATOR END 프레임
11.046	FASTENER, THRU 패스너
11.050	PLATE, STARTING MOTOR CENTER BEARING 플레이트
11.065	BEARING, COMMUTATOR END FRAME 베어링
11.079	SPRING, BRUSH 스프링
11.148	PINION, CRANKING MOTOR DRIVE 피니언
11.149	DRIVE END SET, CRANKING MOTOR 드라이브엔드
11.171	SEAL, CRANKING MOTOR CENTER BEARING 씰
11.172	BEARING, CRANKING MOTOR CENTER 베어링
11.180	KIT, CRANKING MOTOR ARMATURE SHAFT 키트
11.183	KIT, CRANKING MOTOR DRIVE PINION 키트
11.185	GEAR, PINION SHAFT DRIVE 기어
11.399	HOUSING ASSEMBLY, CRANKING MOTOR 하우징

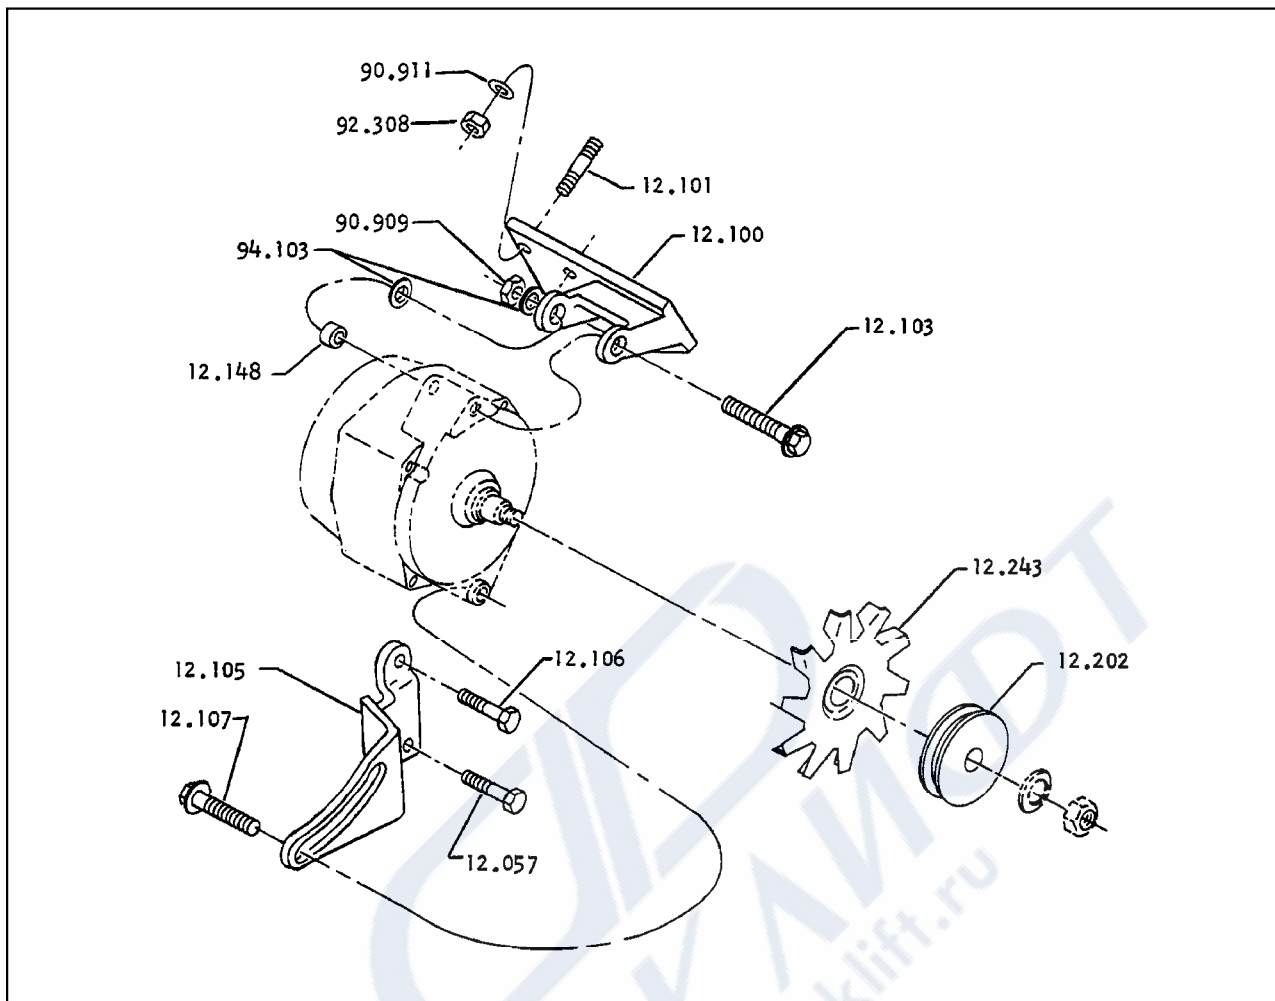 


12.057	FASTENER, ADJUSTING STRAP MOUNTING 패스너
12.100	BRACKET, ALTERNATOR MOUNTING 브라켓
12.101	FASTENER, ALTERNATOR BRACKET 패스너
12.103	FASTENER, ALTERNATOR TO BRACKET 패스너
12.105	STRAP, ALTERNATOR ADJUSTING 스트랩
12.106	FASTENER, ADJUSTING STRAP MOUNTING 패스너
12.107	FASTENER, ADJUSTING STRAP TO ALTERNATOR 패스너
12.148	SPACER, ALTERNATOR MOUNTING 스페이서
12.202	PULLEY, ALTERNATOR 폴리


12.243	FAN, ALTERNATOR 팬
90.909	NUT, ALT TO BRACKET FASTENER 너트
90.911	LOCKWASHER, ALT MOUNTING BRACKET FASTENER 로크와셔
92.308	NUT, ALTERNATOR MOUNTING BRACKET FASTENER 너트
94.103	WASHER, ALTERNATOR TO BRACKET FASTENER 와셔

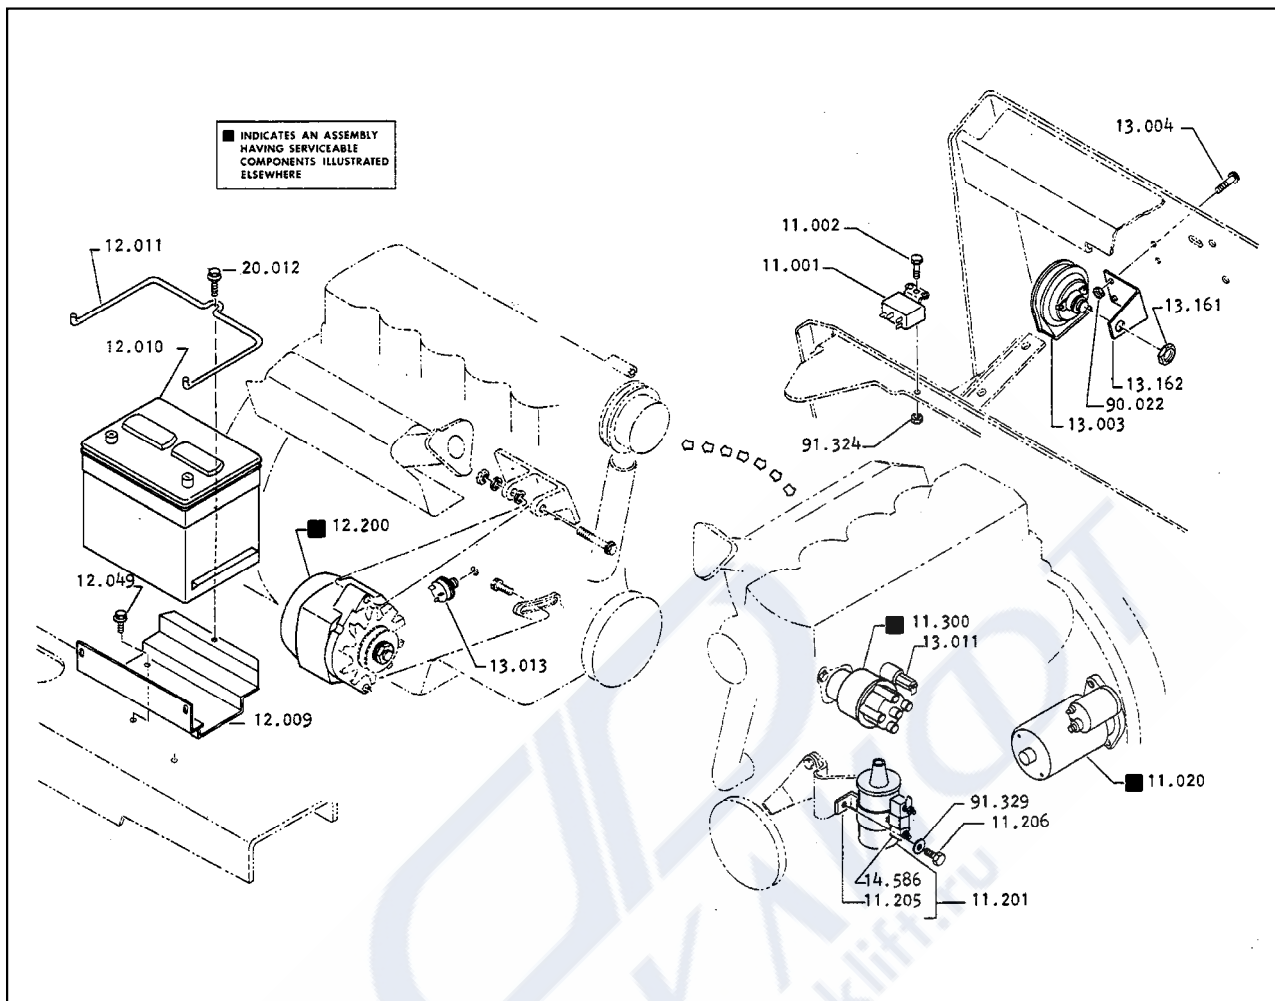 

- | | |
|--------|--|
| 11.001 | RELAY, STARTER
릴레이 |
| 11.002 | FASTENER, STARTER RELAY
패스너 |
| 11.020 | MOTOR ASSEMBLY, STARTING
모터 |
| 11.201 | COIL, IGNITION
코일 |
| 11.205 | BRACKET, COIL MOUNTING
브라켓 |
| 11.206 | FASTENER, COIL MOUNTING BRACKET
패스너 |
| 11.300 | DISTRIBUTOR ASSEMBLY
디스트리뷰터 |
| 12.009 | SUPPORT, BATTERY
서포트 |
| 12.010 | BATTERY
배터리 |

12.011	CLAMP, BATTERY HOLD DOWN 클램프
12.049	FASTENER, BATTERY SUPPORT 패스너
12.200	ALTERNATOR ASSEMBLY 알터네이터
13.003	HORN 혼
13.004	FASTENER, HORN MOUNTING BRACKET 패스너
13.011	CONTROL, ENGINE TEMPERATURE INDICATOR 컨트롤
13.013	CONTROL, ENGINE OIL PRESSURE INDICATOR 컨트롤
13.161	FASTENER, HORN MOUNTING BRACKET 패스너
13.162	BRACKET, HORN MOUNTING 브라켓
14.586	RESISTOR, IGNITION COIL 레지스터
20.012	RING-RETAINING, D/U REDUCTION GEAR BRG 링
90.022	NUT, HORN MOUNTING BRACKET FASTENER 너트
91.324	NUT, STARTER RELAY FASTENER 너트
91.329	WASHER, COIL MOUNTING FASTENER 와셔

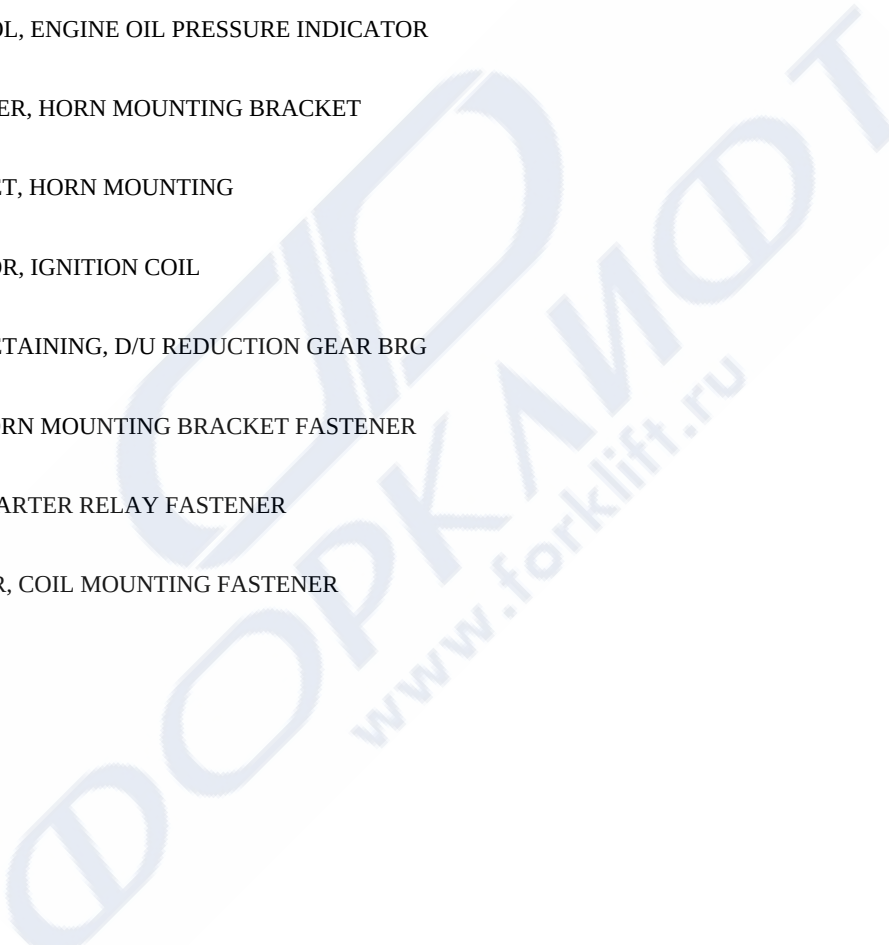 


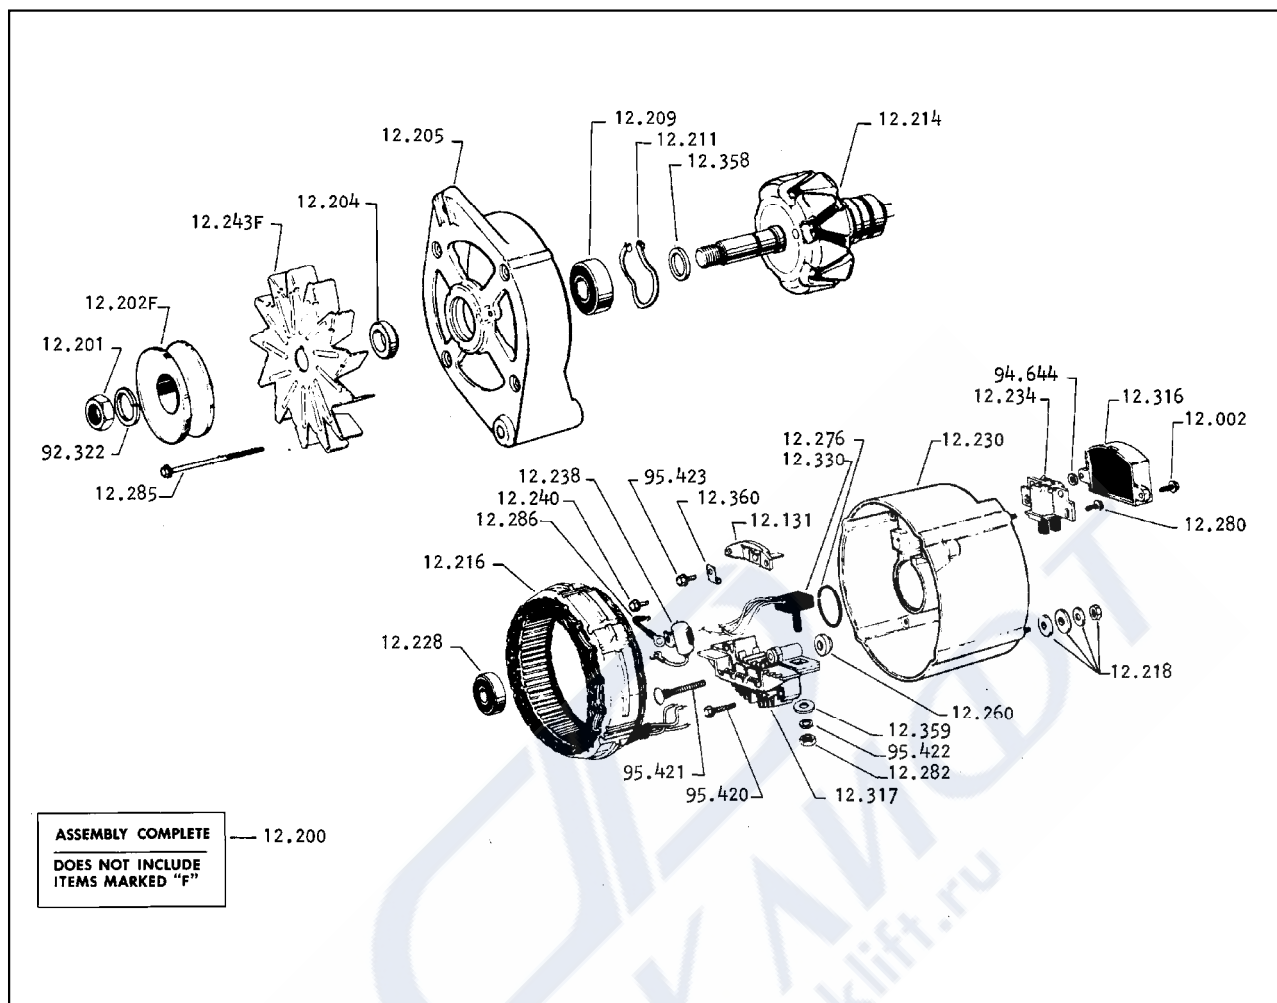 


12.002	FASTENER, VOLTAGE REGULATOR 패스너	12.238	CAPACITOR, ALTERNATOR 캐패시터
12.131	TERMINAL SET, ALTERNATOR 터미널 세트	12.240	FASTENER, CAPACITOR BRACKET 패스너
12.200	ALTERNATOR ASSEMBLY 알터네이터	12.243	FAN, ALTERNATOR 팬
12.201	FASTENER, ALTERNATOR PULLEY TO SHAFT 패스너	12.260	INSULATOR, RECTIFIER MOUNTING 절연체
12.202	PULLEY, ALTERNATOR 풀리	12.276	RETAINER, SLIP RING FRAME END BEARING 리테이너
12.204	COLLAR, ALTERNATOR DRIVE END 칼라	12.280	FASTENER, ALTERNATOR BRUSH KIT 패스너
12.205	FRAME, ALTERNATOR DRIVE END 프레임	12.282	FASTENER, ALTERNATOR ISOLATION DIODE ASSEMBLY 패스너
12.209	BEARING, ALTERNATOR DRIVE END 베어링	12.285	FASTENER, THROUGH 패스너
12.211	RETAINER, ALTERNATOR DRIVE END BEARING 리테이너	12.286	TERMINAL, ALTERNATOR STATOR LEAD 터미널
12.214	ROTOR ASSEMBLY, ALTERNATOR 로터	12.316	REGULATOR, ALTERNATOR VOLTAGE OUTPUT 레귤레이터
12.216	STATOR ASSEMBLY, ALTERNATOR 스테이터	12.317	RECTIFIER ASSEMBLY, ALTERNATOR 정류기
12.218	TERMINAL PACKAGE, BATTERY 터미널 패키지	12.330	DIODE, ALTERNATOR FIELD CURRENT 다이오드
12.228	BEARING, ALTERNATOR SLIP RING FRAME END 베어링	12.358	SPACER, ALTERNATOR ROTOR 스페이서
12.230	FRAME, ALTERNATOR SLIP RING END 프레임	12.359	INSULATOR, ALTERNATOR DIODE TRIO 절연체
12.234	BRUSH HOLDER, ALTERNATOR 브러쉬홀더	12.360	CLIP, ALTERNATOR DIODE TRIO LEAD 클립

92.322	LOCKWASHER, ALTERNATOR PULLEY FASTENER 로크와셔
94.644	WASHER, BRUSH HOLDER HOUSING FASTENER 와셔
95.420	FASTENER, ALTERNATOR RECTIFIER 패스너
95.421	FASTENER, ALTERNATOR RECTIFIER 패스너
95.422	LOCKWASHER, ALTERNATOR DIODE TRIO FASTENER 로크와셔
95.423	FASTENER, ALTERNATOR REGULATOR TERMINAL 패스너




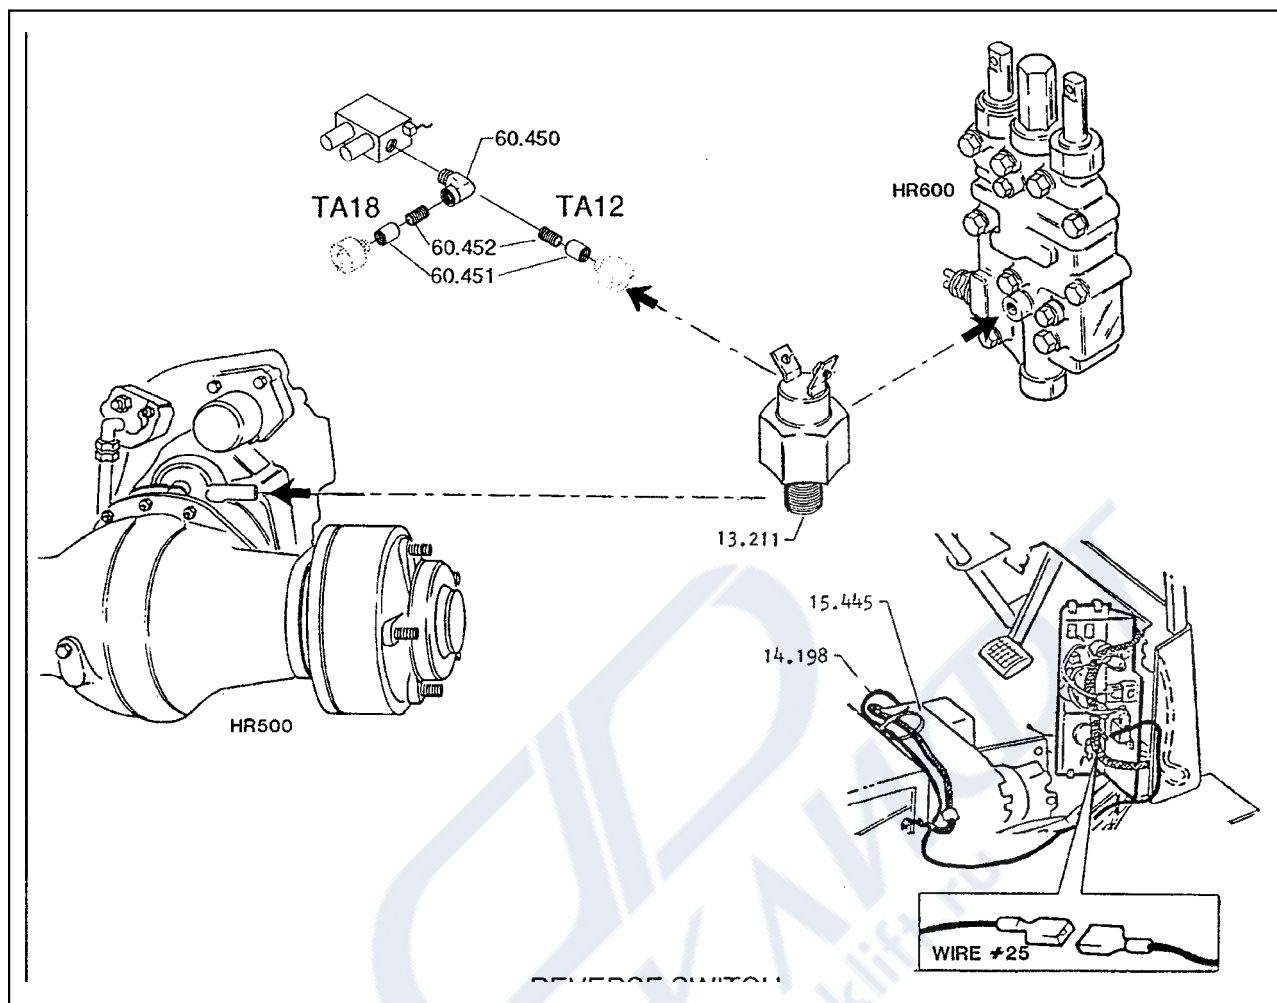 

- | | |
|--------|--|
| 13.211 | SWITCH, BACK-UP LIGHT
스위치 |
| 14.198 | WIRE, TRANSMISSION PRESSURE SWITCH
와이어 |
| 15.445 | TIE WRAP, BACK-UP SWITCH WIRING HARNESS
타이랩 |
| 60.450 | FITTING, BACK-UP SWITCH TO TRANSMISSION CONTROL CO
피팅 |
| 60.451 | FITTING, BACK-UP SWITCH
피팅 |
| 60.452 | ADAPTOR, BACK-UP SWITCH FITTING
어댑터 |

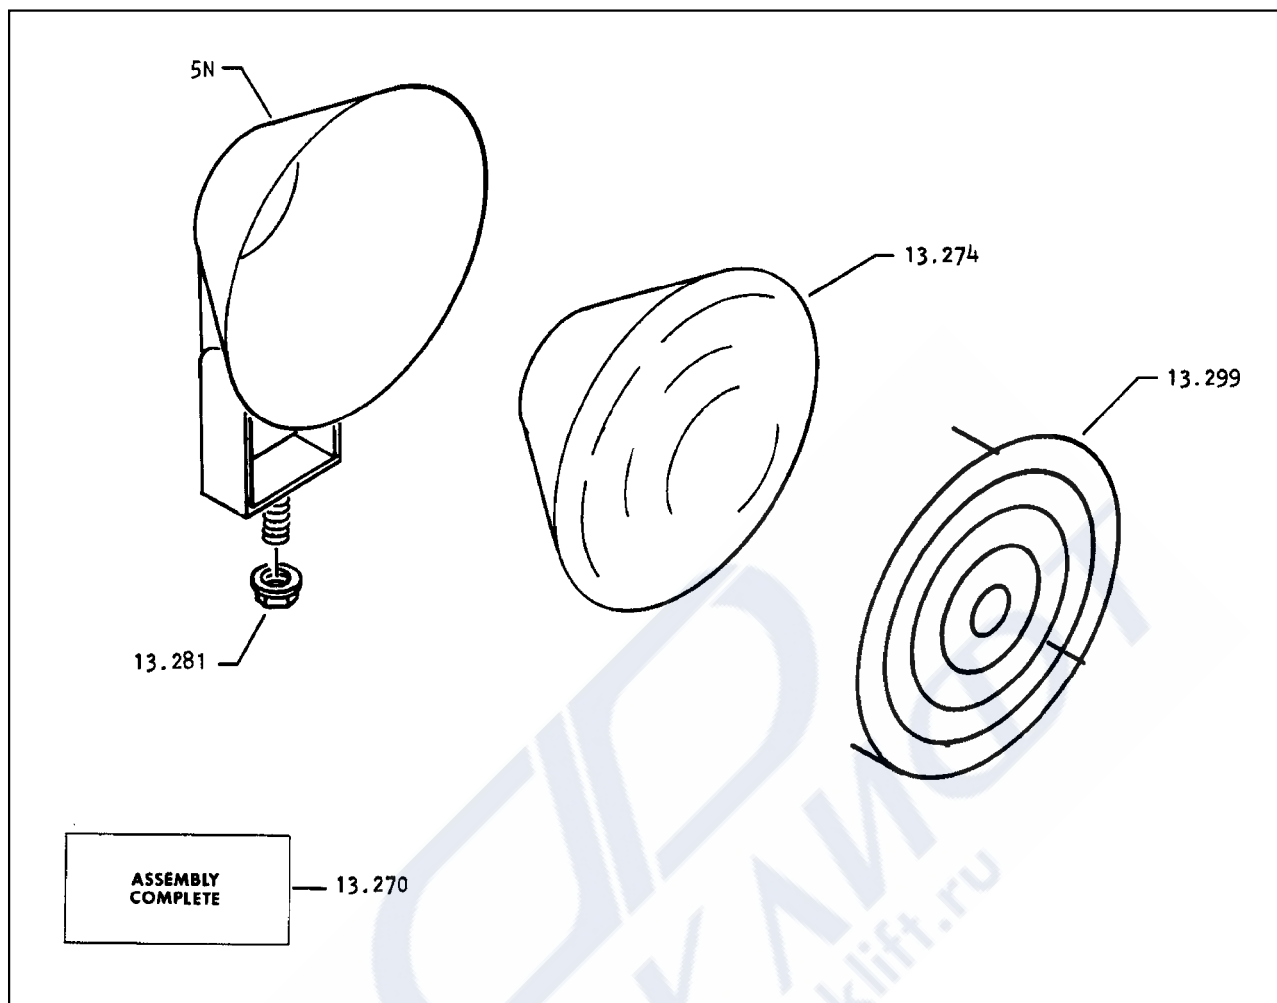 


13.270	HEADLAMP, ADJUSTABLE 헤드램프
13.274	BULB, ADJUSTABLE HEADLAMP 전구
13.281	FASTENER, ADJ HEADLAMP SWIVEL 패스너
13.299	GUARD, HEADLIGHT 가드

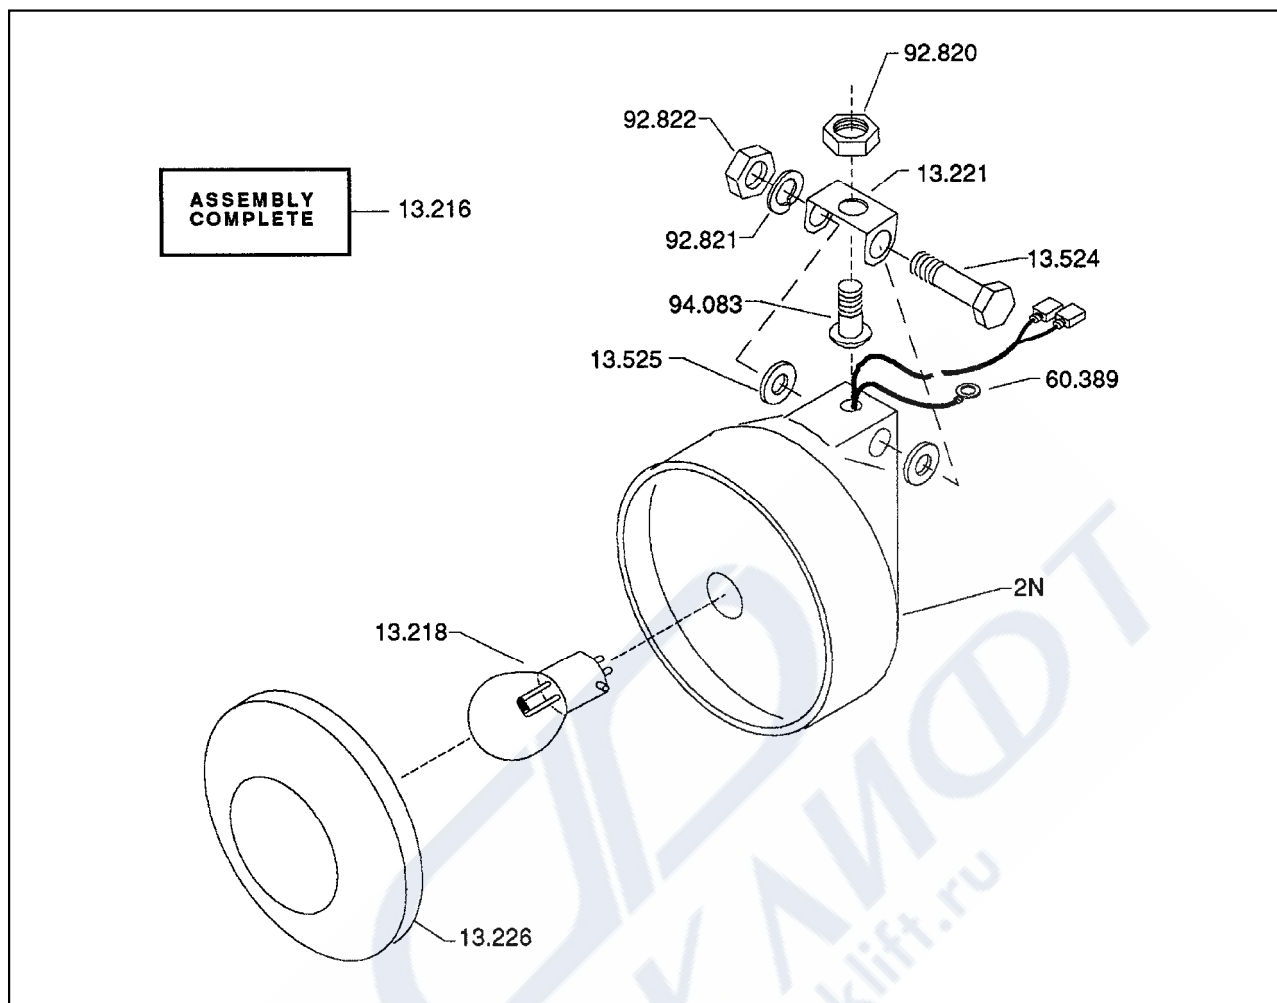 

13.216	LAMP ASSEMBLY, COMBINATION STOP & TAIL 램프
13.218	BULB, STOP & TAIL LAMP 전구
13.221	BRACKET, COMB STOP & TAIL LAMP ASSY MTG 브라켓
13.226	LENS, STOP & TAIL LAMP 렌즈
13.524	FASTENER, STOPLIGHT GUARD 패스너
13.525	SPACER, STOP & TAIL LAMP PLATE 스페이서
60.389	RING TERMINAL, STOP AND TAIL LIGHT 링
92.820	NUT, STOP AND TAIL LAMP WIRE CLIP FASTENER 너트
92.821	LOCKWASHER, STOP AND TAIL LAMP GUARD FASTENER 로크와셔

92.822	NUT, STOP AND TAIL LAMP GUARD FASTENER 너트
94.083	FASTENER, STOP AND TAIL LAMP MOUNTING BRACKET 패스너




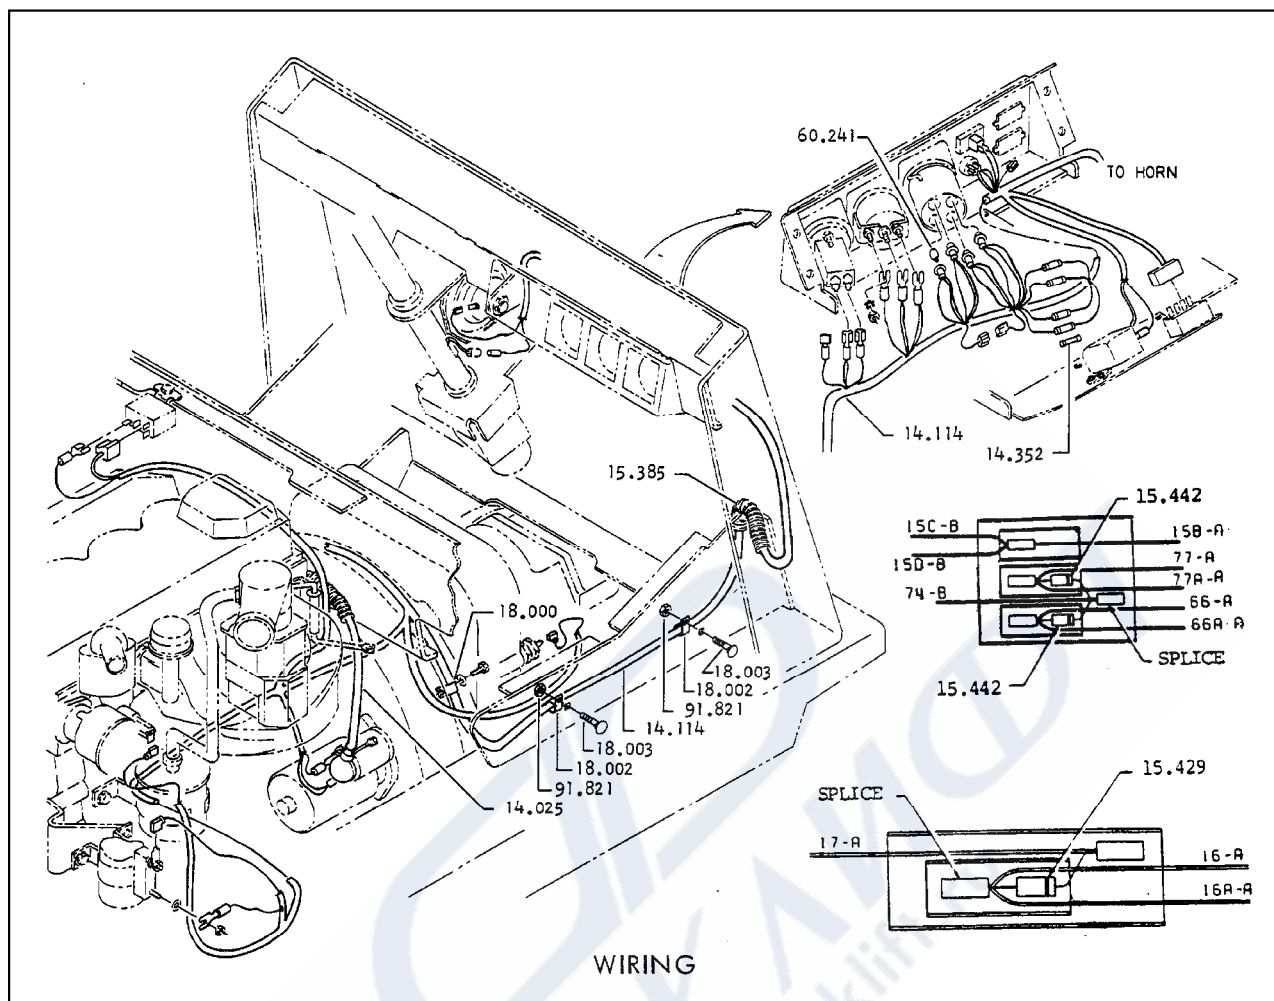 

14.025	CABLE, BATTERY TO STARTER 케이블
14.114	HARNESS, MACHINE WIRING 하네스
14.352	FUSE, CONTROL CIRCUIT 퓨즈
15.385	SHIELD, MACHINE WIRING HARNESS 실드
15.429	DIODE, WIRING HARNESS BLOCKING 다이오드
15.442	DIODE, WIRING HARNESS BLOCKING 다이오드
18.000	CLIP, WIRING HARNESS 클립
18.002	CLIP, WIRING HARNESS 클립
18.003	FASTENER, WIRING HARNESS CLIP 패스너

60.241	BULB, WARNING INDICATOR 전구
91.821	NUT, HARNESS CLIP FASTENER 너트




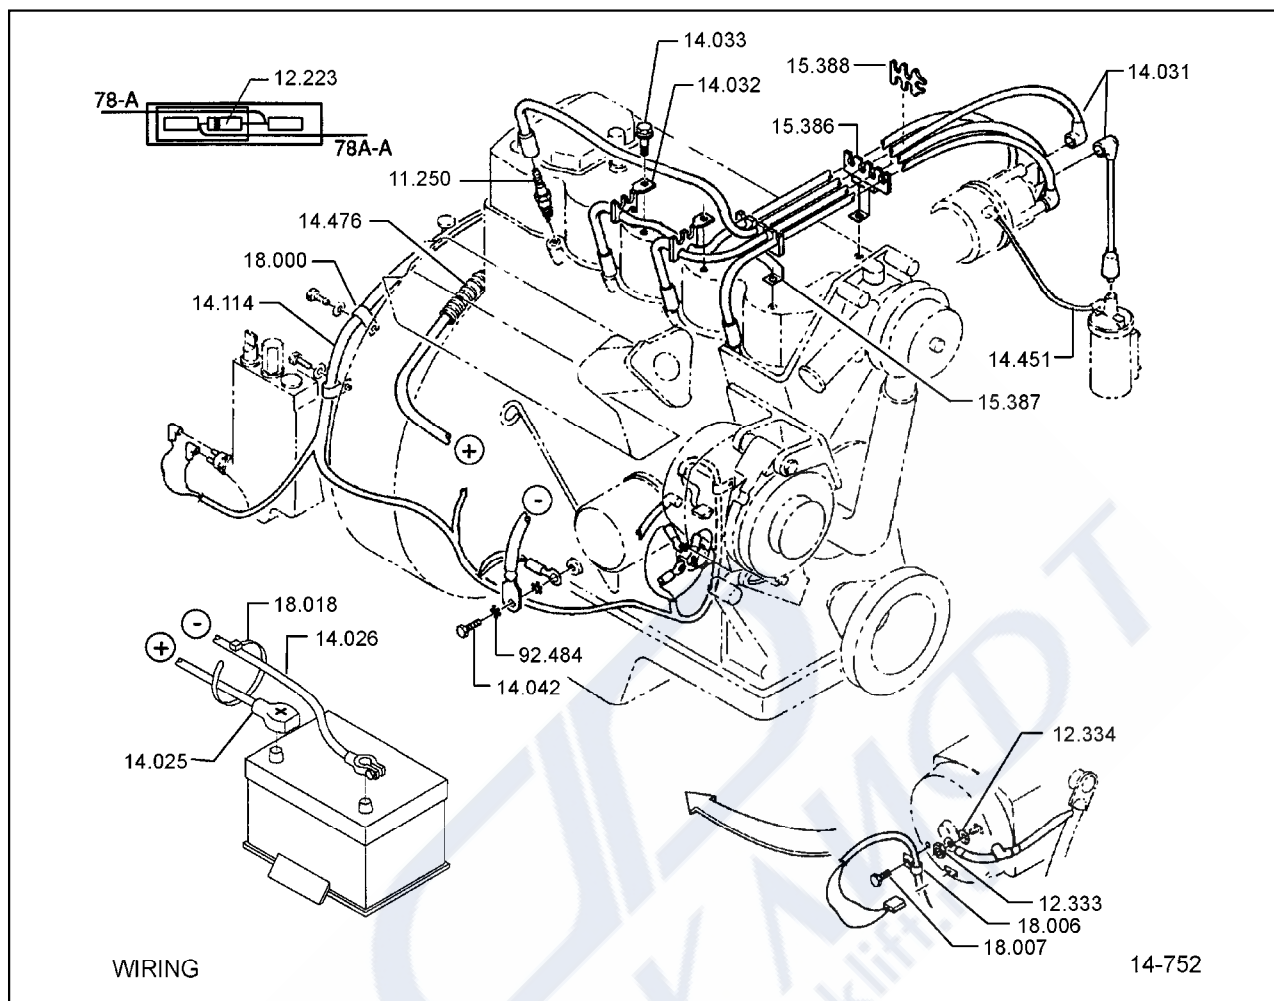 

- | | |
|--------|---|
| 11.250 | SPARK PLUG
스파크 |
| 12.223 | DIODE, ALTERNATOR NEGATIVE
다이오드 |
| 12.333 | NUT, ALTERNATOR BATTERY TERMINAL
너트 |
| 12.334 | LOCKWASHER, ALTERNATOR BATTERY TERMINAL
로크와셔 |
| 14.025 | CABLE, BATTERY TO STARTER
케이블 |
| 14.026 | CABLE, BATTERY GROUND
케이블 |
| 14.031 | KIT, HIGH TENSION WIRES & BOOTS
키트 |
| 14.032 | BRACKET, SPARK PLUG WIRE
브라켓 |
| 14.033 | FASTENER, WIRE BRACKET ATTACHING
패스너 |

14.042	FASTENER, BATTERY GROUND CABLE 패스너
14.114	HARNESS, MACHINE WIRING 하네스
14.451	WIRE, COIL GROUND 와이어
14.476	SHIELD, BATTERY CABLE 실드
15.386	BRACKET, SPARK PLUG WIRES 브라켓
15.387	BRACKET, SPARK PLUG WIRES 브라켓
15.388	CLIP, SPARK PLUG WIRES 클립
18.000	CLIP, WIRING HARNESS 클립
18.006	CLIP, WIRING HARNESS 클립
18.007	FASTENER, HARNESS CLIP 패스너
18.018	STRAP, BATTERY CABLE 스트랩
92.484	LOCKWASHER, BATTERY GROUND CABLE FASTENER 로크와셔




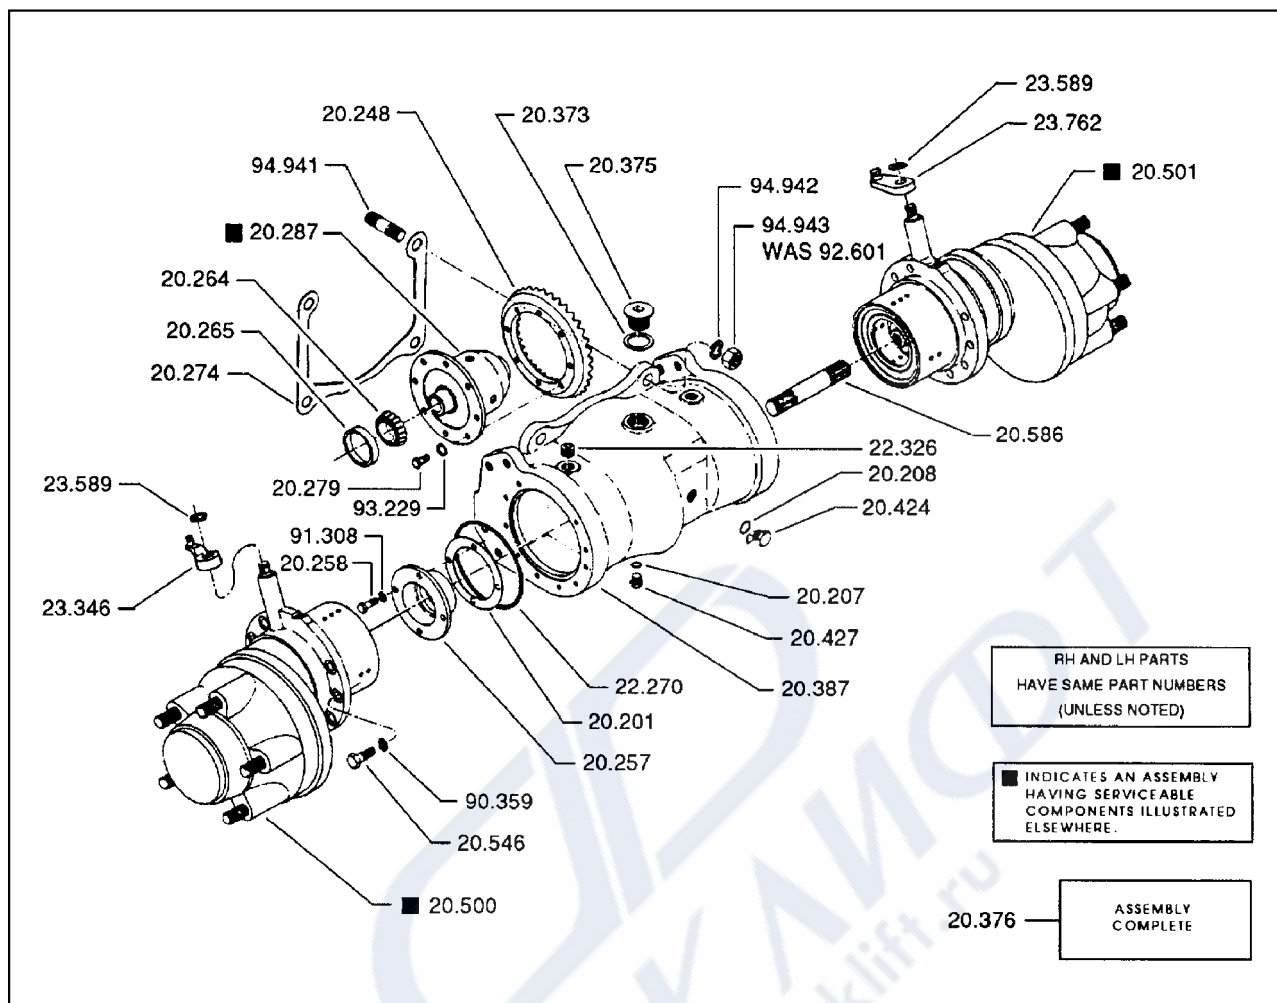 

20.201	SHIM, DIFF BRG CARRIER TO AXLE HOUSING 심	20.424	PLUG, DIFFERENTIAL & AXLE HOUSING FILLER 플러그
20.207	SEAL, DIFFERENTIAL & AXLE HOUSING DRAIN PLUG 씰	20.427	PLUG, DIFFERENTIAL & AXLE HOUSING DRAIN 플러그
20.208	SEAL, DIFFERENTIAL & AXLE HOUSING FILLER PLUG 씰	20.500	AXLE END ASSEMBLY, DRIVE RH 액슬엔드
20.248	RING GEAR & PINION SET, DIFFERENTIAL 링	20.501	AXLE END ASSEMBLY, DRIVE LH 액슬엔드
20.257	BEARING CARRIER, DIFFERENTIAL 베어링캐리어	20.546	FASTENER, DRIVE AXLE END 패스너
20.258	FASTENER, DIFFERENTIAL BRG CARRIER HSG 패스너	20.586	SHAFT, DRIVE AXLE 샤프트
20.264	CONE, DIFFERENTIAL BEARING 콘	22.270	SEAL, DRIVE AXLE END HOUSING 씰
20.265	CUP, DIFFERENTIAL BEARING 컵	22.326	PLUG, BRAKE LINING INSPECTION 플러그
20.274	SHIM KIT, DIFFERENTIAL HOUSING 심	23.346	ARM, PARKING BRAKE 암
20.279	FASTENER, DIFFERENTIAL CASE TO RING GEAR 패스너	23.589	RETAINER, BRAKE ACTUATING LEVER 리테이너
20.287	CASE & GEAR ASSEMBLY, DIFFERENTIAL 케이스& 기어	23.762	ARM, PARKING BRAKE OPERATING 암
20.373	GASKET, DIFFERENTIAL HOUSING INSPECTION COVER 가스켓	90.359	LOCKWASHER, DRIVE AXLE END FASTENER 로크와셔
20.375	COVER, DIFFERENTIAL HOUSING INSPECTION 커버	91.308	LOCKWASHER, BEARING CARRIER FASTENER 로크와셔
20.376	AXLE ASSEMBLY, DRIVE 드라이브액슬	92.601	NUT, DIFFERENTIAL PINION BEARING CARRIER FASTENER 너트
20.387	HOUSING, DIFFERENTIAL & AXLE 하우징	93.229	WASHER, DIFFERENTIAL CASE TO RING GEAR FASTENER 와셔


94.941	FASTENER, TRANSMISSION TO DRIVE AXLE 패스너
94.942	LOCKWASHER, TRANSMISSION TO DRIVE AXLE FASTENER 로크와셔
94.943	NUT, TRANSMISSION TO DRIVE AXLE FASTENER 너트



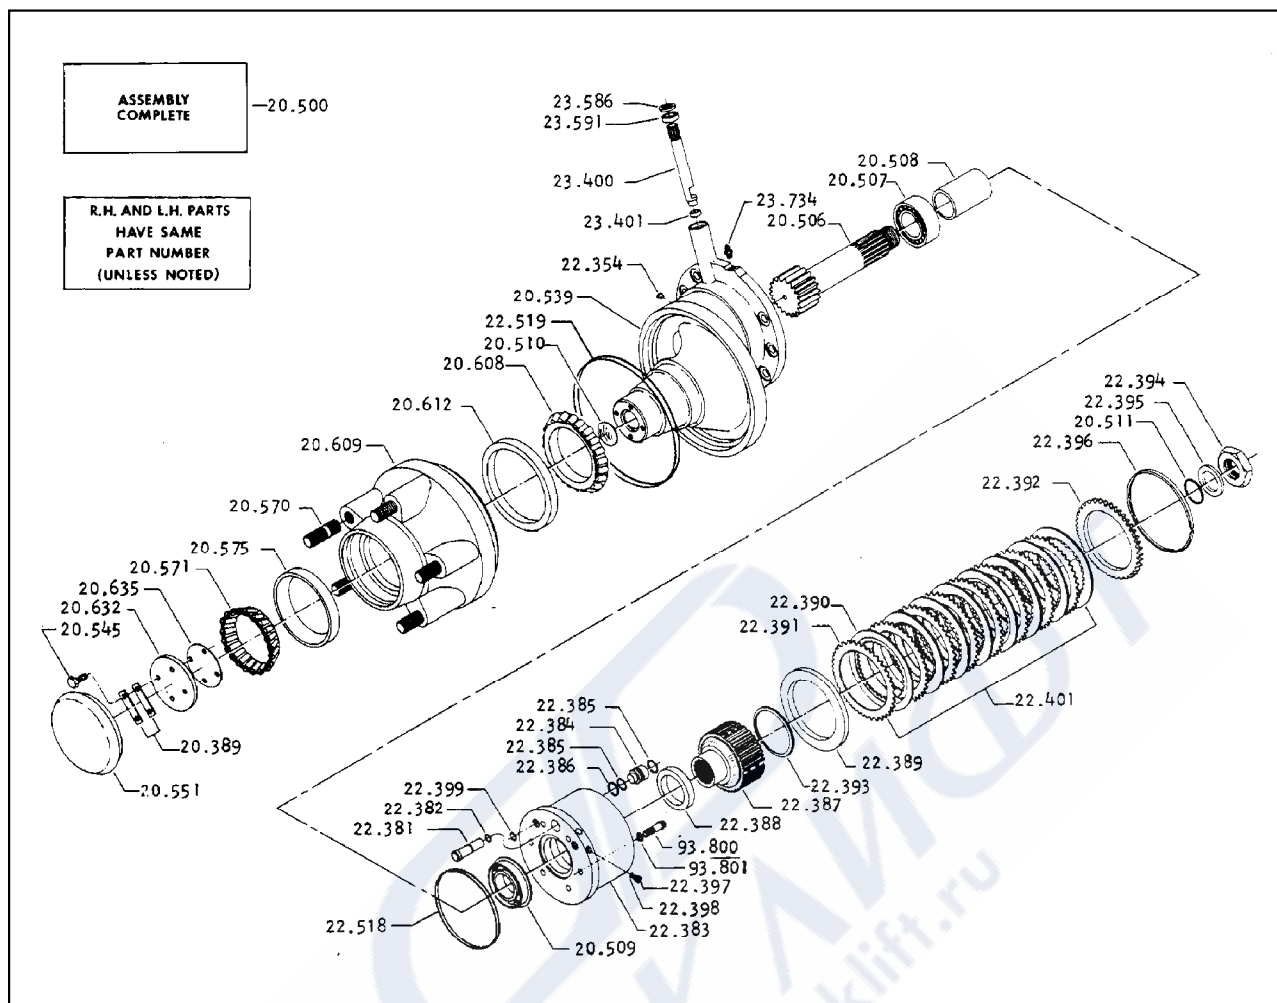 


20.389	LOCK, DRIVE AXLE HUB BEARING NUT 로크	20.609	HUB, DRIVE AXLE INTERNAL GEAR 허브
20.500	AXLE END ASSEMBLY, DRIVE RH 액슬엔드	20.612	CUP, DRIVE AXLE HUB INNER BEARING 컵
20.506	PINION SHAFT, INTERNAL GEAR HUB 피니언샤프트	20.632	RETAINER, DRIVE AXLE INTERNAL GEAR HUB 리테이너
20.507	BEARING, INTERNAL GEAR HUB PINION SHAFT - OUTBOA 베어링	20.635	SHIM, DRIVE AXLE INTERNAL GEAR HUB RETAINER 심
20.508	SPACER, INTERNAL GEAR HUB PINION SHAFT BEARING 스페이서	22.354	SEAL, SERVICE BRAKE INLET PORT FITTING 씰
20.509	BEARING, INTERNAL GEAR HUB PINION SHAFT - INBOAR 베어링	22.381	PUSH ROD, PARKING BRAKE ACTUATING 푸시로드
20.510	EXPANSION PLUG, INTERNAL GEAR HUB 플러그	22.382	SEAL, PARKING BRAKE ACTUATING PUSH ROD 씰
20.511	SEAL, INTERNAL GEAR HUB PINION SHAFT 씰	22.383	HOUSING, BRAKE DISC 하우징
20.539	SUPPORT, DRIVE AXLE SPINDLE (RH) 서포트	22.384	PUSH ROD, SERVICE BRAKE ACTUATING 푸시로드
20.545	FASTENER, DRIVE AXLE HUB BEARING 패스너	22.385	SEAL, SERVICE BRAKE PUSH ROD 씰
20.551	CAP, DRIVE AXLE HUB 캡	22.386	WEAR RING, SERVICE BRAKE PUSH ROD 웨어링
20.570	FASTENER, DRIVE WHEEL MOUNTING 패스너	22.387	HUB, BRAKE DISC 허브
20.571	CONE, DRIVE AXLE HUB OUTER BEARING 콘	22.388	SEAL, BRAKE DISC HUB 씰
20.575	CUP, DRIVE AXLE HUB OUTER BEARING 컵	22.389	PISTON, BRAKE DISC 피스톤
20.608	CONE, DRIVE AXLE HUB INNER BEARING 콘	22.390	DISC, BRAKE - INNER 디스크

22.391	DISC, BRAKE - OUTER 디스크
22.392	PLATE, BRAKE DISC END 플레이트
22.393	BAFFLE, BRAKE DISC HUB OIL 배플
22.394	FASTENER, BRAKE DISC HUB 패스너
22.395	WASHER, BRAKE DISC HUB FASTENER 와셔
22.396	RETAINER, BRAKE DISC 리테이너
22.397	PLUG, BRAKE DISC HOUSING 플러그
22.398	SEAL, BRAKE DISC HOUSING PLUG 씰
22.399	SEAL, BRAKE DISC HOUSING ORIFICE 씰
22.401	DISC KIT, BRAKE 디스크키트
22.518	SEAL, BRAKE DISC HOUSING 씰
22.519	SEAL, DRIVE AXLE WHEEL HOUSING 씰
23.400	CAM, PARKING BRAKE 캠
23.401	BEARING, PARKING BRAKE CAM 베어링
23.586	SEAL, BRAKE CAM SHAFT 씰
23.591	BEARING, BRAKE CAM SHAFT OUTBOARD (RH) 베어링
23.734	SCREW, BRAKE CYLINDER BLEEDER (RH) 스크류
93.800	FASTENER, BRAKE DISC HOUSING 패스너
93.801	LOCKWASHER, BRAKE DISC HOUSING FASTENER 로크와셔

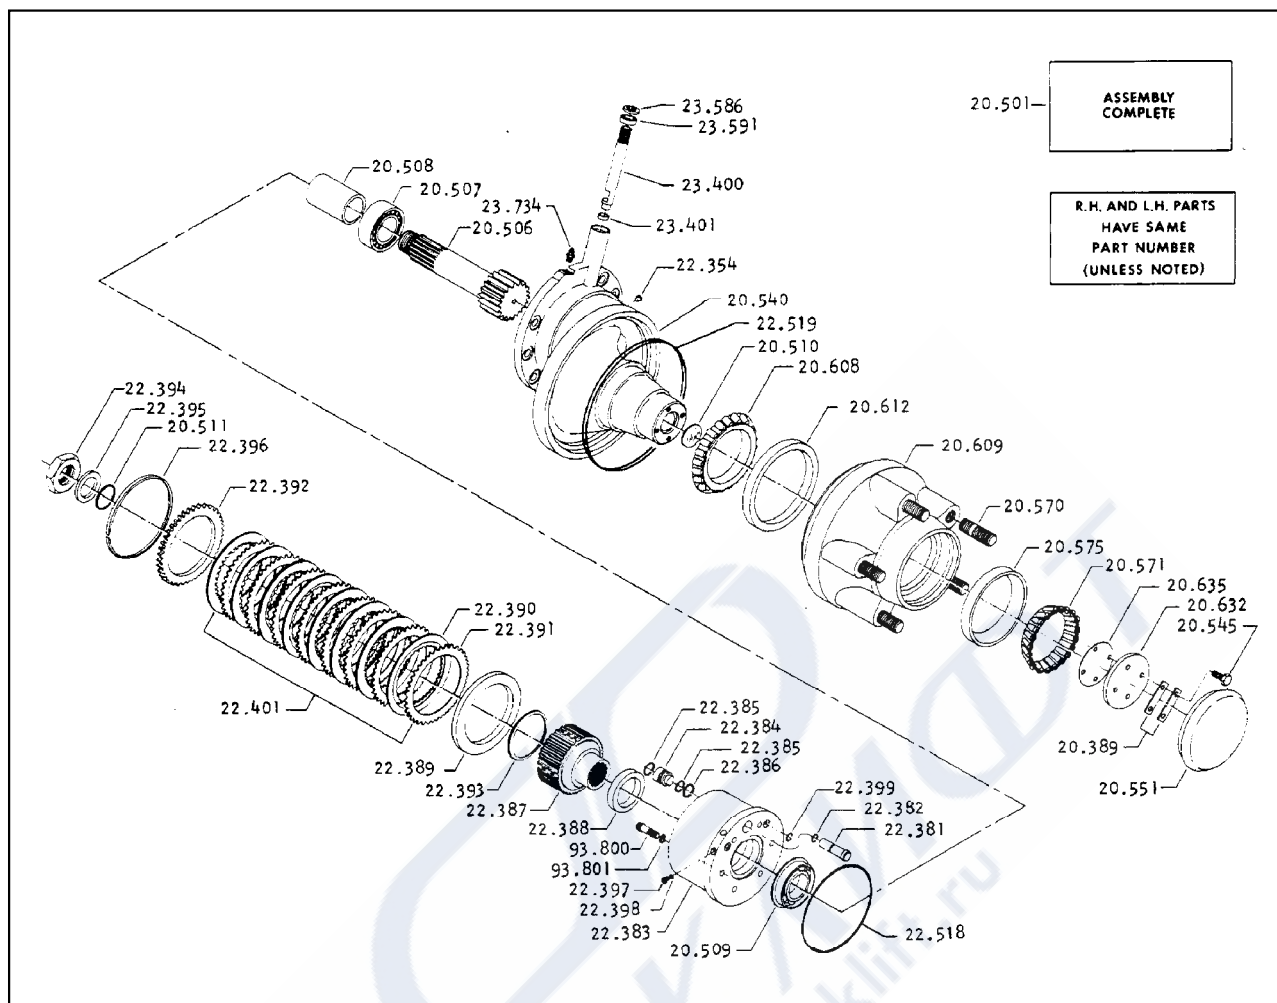 


20.389	LOCK, DRIVE AXLE HUB BEARING NUT 로크	20.609	HUB, DRIVE AXLE INTERNAL GEAR 허브
20.501	AXLE END ASSEMBLY, DRIVE LH 액슬엔드	20.612	CUP, DRIVE AXLE HUB INNER BEARING 컵
20.506	PINION SHAFT, INTERNAL GEAR HUB 피니언샤프트	20.632	RETAINER, DRIVE AXLE INTERNAL GEAR HUB 리테이너
20.507	BEARING, INTERNAL GEAR HUB PINION SHAFT - OUTBOA 베어링	20.635	SHIM, DRIVE AXLE INTERNAL GEAR HUB RETAINER 심
20.508	SPACER, INTERNAL GEAR HUB PINION SHAFT BEARING 스페이서	22.354	SEAL, SERVICE BRAKE INLET PORT FITTING 씰
20.509	BEARING, INTERNAL GEAR HUB PINION SHAFT - INBOAR 베어링	22.381	PUSH ROD, PARKING BRAKE ACTUATING 푸시로드
20.510	EXPANSION PLUG, INTERNAL GEAR HUB 플러그	22.382	SEAL, PARKING BRAKE ACTUATING PUSH ROD 씰
20.511	SEAL, INTERNAL GEAR HUB PINION SHAFT 씰	22.383	HOUSING, BRAKE DISC 하우징
20.540	SUPPORT, DRIVE AXLE SPINDLE (LH) 서포트	22.384	PUSH ROD, SERVICE BRAKE ACTUATING 푸시로드
20.545	FASTENER, DRIVE AXLE HUB BEARING 패스너	22.385	SEAL, SERVICE BRAKE PUSH ROD 씰
20.551	CAP, DRIVE AXLE HUB 캡	22.386	WEAR RING, SERVICE BRAKE PUSH ROD 웨어링
20.570	FASTENER, DRIVE WHEEL MOUNTING 패스너	22.387	HUB, BRAKE DISC 허브
20.571	CONE, DRIVE AXLE HUB OUTER BEARING 콘	22.388	SEAL, BRAKE DISC HUB 씰
20.575	CUP, DRIVE AXLE HUB OUTER BEARING 컵	22.389	PISTON, BRAKE DISC 피스톤
20.608	CONE, DRIVE AXLE HUB INNER BEARING 콘	22.390	DISC, BRAKE - INNER 디스크

22.391	DISC, BRAKE - OUTER 디스크
22.392	PLATE, BRAKE DISC END 플레이트
22.393	BAFFLE, BRAKE DISC HUB OIL 배플
22.394	FASTENER, BRAKE DISC HUB 패스너
22.395	WASHER, BRAKE DISC HUB FASTENER 와셔
22.396	RETAINER, BRAKE DISC 리테이너
22.397	PLUG, BRAKE DISC HOUSING 플러그
22.398	SEAL, BRAKE DISC HOUSING PLUG 씰
22.399	SEAL, BRAKE DISC HOUSING ORIFICE 씰
22.401	DISC KIT, BRAKE 디스크키트
22.518	SEAL, BRAKE DISC HOUSING 씰
22.519	SEAL, DRIVE AXLE WHEEL HOUSING 씰
23.400	CAM, PARKING BRAKE 캠
23.401	BEARING, PARKING BRAKE CAM 베어링
23.586	SEAL, BRAKE CAM SHAFT 씰
23.591	BEARING, BRAKE CAM SHAFT OUTBOARD (RH) 베어링
23.734	SCREW, BRAKE CYLINDER BLEEDER (RH) 스크류
93.800	FASTENER, BRAKE DISC HOUSING 패스너
93.801	LOCKWASHER, BRAKE DISC HOUSING FASTENER 로크와셔

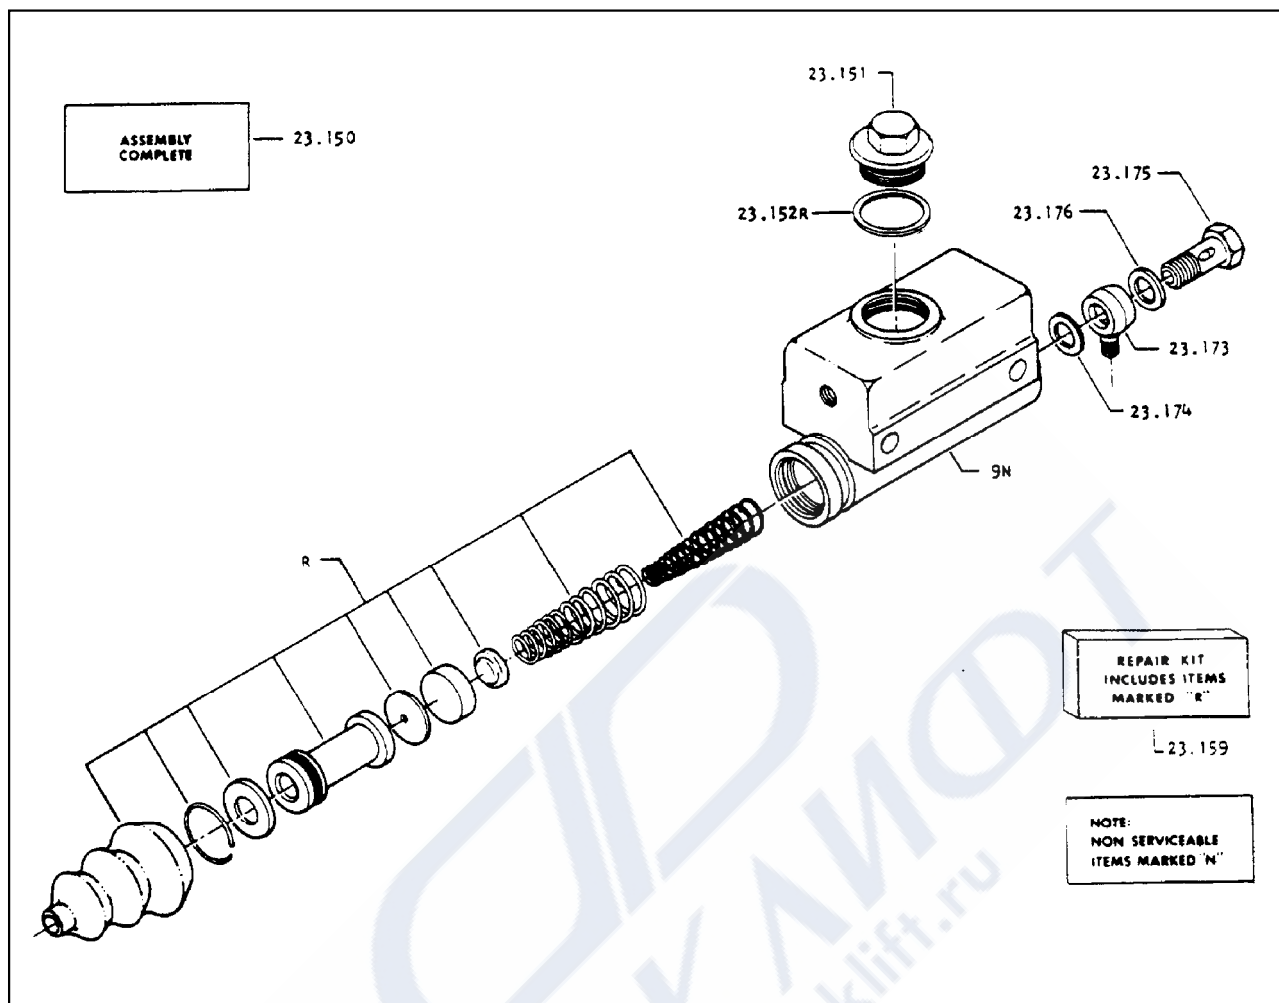 


- | | |
|--------|--|
| 23.150 | CYLINDER ASSEMBLY, BRAKE MASTER COMPLETE
실린더 |
| 23.151 | CAP, MASTER CYLINDER FILLER
캡 |
| 23.152 | GASKET, MASTER CYLINDER FILLER CAP
가스켓 |
| 23.159 | REPAIR KIT, MASTER CYLINDER
리페어키트 |
| 23.173 | FITTING, BRAKE MASTER CYLINDER OUTLET
피팅 |
| 23.174 | GASKET, BRAKE MASTER CYLINDER OUTLET FITTING
가스켓 |
| 23.175 | BOLT, BRAKE MASTER CYLINDER OUTLET FITTING
볼트 |
| 23.176 | GASKET, BRAKE MASTER CYLINDER OUTLET FTG BOLT
가스켓 |

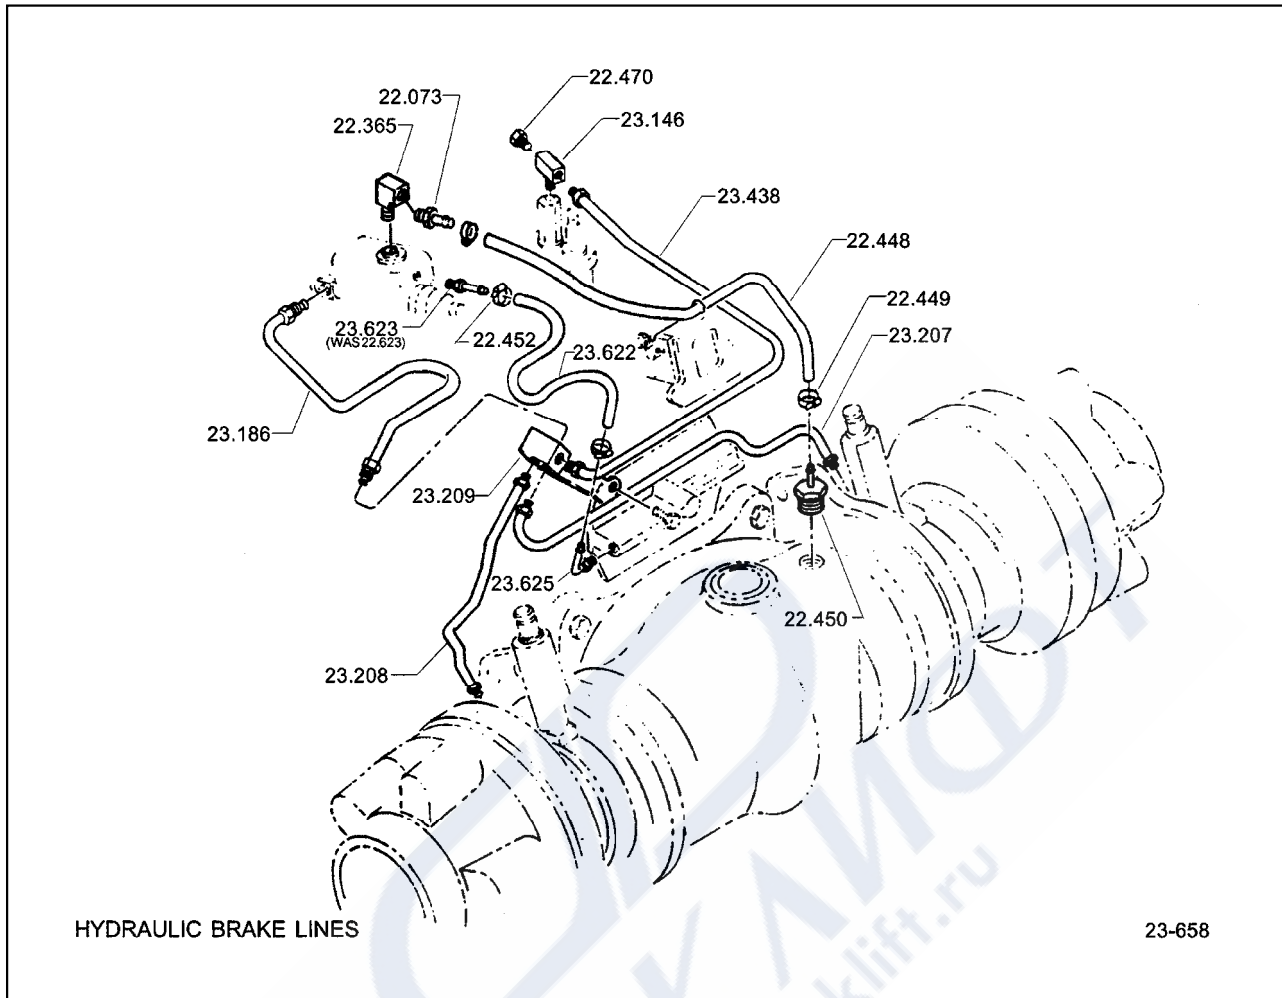 


22.073	FITTING, BRAKE LINE 피팅
22.365	FITTING, BRAKE MASTER CYLINDER DISCHARGE PORT 피팅
22.448	LINE, BRAKE MASTER CYLINDER FILLER RETURN 라인
22.449	CLAMP, BRAKE MASTER CYLINDER FILLER RETURN LINE 클램프
22.450	FITTING, BRAKE MASTER CYLINDER FILLER RETURN LINE 피팅
22.452	CLAMP, BRAKE MASTER CYLINDER FILLER LINE 클램프
22.470	PLUG, INCHING VALVE INLET FITTING 플러그
23.146	FITTING, INCHING VALVE INLET 피팅
23.186	LINE, BRAKE MASTER CYLINDER OUTLET 라인

23.207	LINE, LH DRIVE WHEEL BRAKE CYLINDER TO TEE 라인
23.208	LINE, RH DRIVE WHEEL BRAKE CYLINDER TO TEE 라인
23.209	TEE, BRAKE LINE W/INTEGRAL MOUNT 티
23.438	LINE, INCHING VALVE INLET 라인
23.622	LINE, MASTER CYLINDER FILLER 라인
23.623	FITTING, MASTER CYLINDER FILLER LINE 피팅
23.625	FITTING, MASTER CYLINDER FILLER LINE 피팅

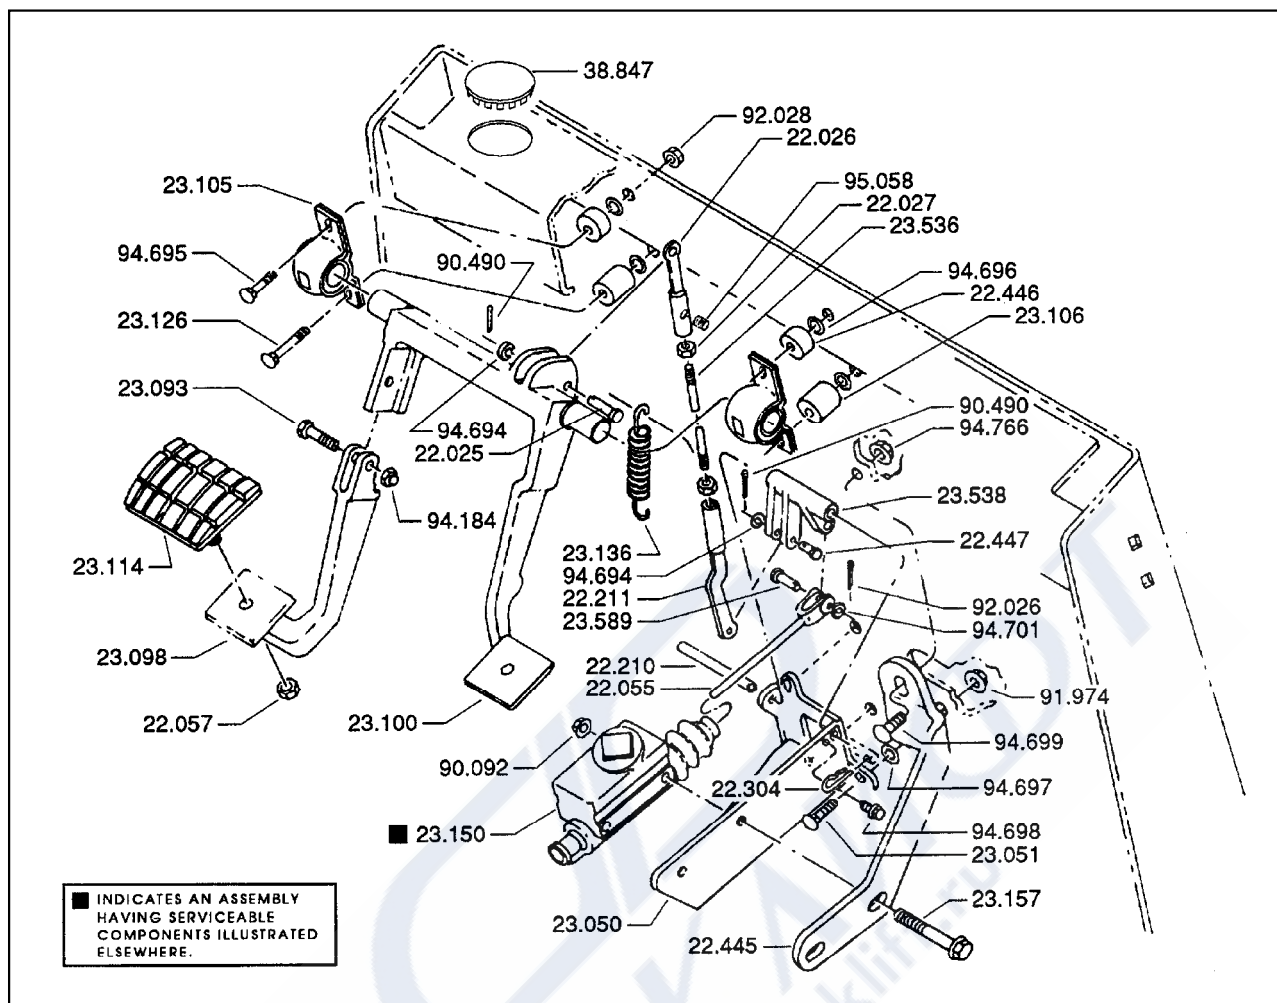 


22.025	PIN, BRAKE PEDAL LINKAGE 핀	23.100	PEDAL, BRAKE 페달
22.026	ROD END, BRAKE PEDAL LINKAGE 로드엔드	23.105	BEARING, BRAKE PEDAL 베어링
22.027	LOCK, BRAKE PEDAL LINKAGE ROD END 로크	23.106	SPACER, BRAKE PEDAL BEARING 스페이서
22.055	ROD, MASTER CYLINDER ACTUATING 로드	23.114	PAD & FASTENER, BRAKE PEDAL 패드& 패스너
22.057	FASTENER, BRAKE PEDAL PAD 패스너	23.126	FASTENER, BRAKE PEDAL SHAFT BEARING 패스너
22.210	PIN, BRAKE LINKAGE PIVOT LEVER 핀	23.136	SPRING, BRAKE PEDAL RETURN 스프링
22.211	ROD END, BRAKE PEDAL LINK 로드엔드	23.150	CYLINDER ASSEMBLY, BRAKE MASTER COMPLETE 실린더
22.304	RETAINER, BRAKE LINKAGE PIVOT ARM PIN 리테이너	23.157	FASTENER, BRAKE MASTER CYLINDER ATTACHING 패스너
22.445	BRACKET, BRAKE MASTER CYLINDER SUPPORT 브라켓	23.536	ROD, BRAKE PEDAL 로드
22.446	SPACER, BRAKE PEDAL PIVOT BEARING 스페이서	23.538	ARM, BRAKE LINKAGE PIVOT 암
22.447	PIN, BRAKE PEDAL LINKAGE ROD END 핀	23.589	RETAINER, BRAKE ACTUATING LEVER 리테이너
23.050	BRACKET, MASTER CYLINDER MOUNTING 브라켓	38.847	PLUG - BUTTON, MASTER CYLINDER ACCESS HOLE 플러그
23.051	FASTENER, MASTER CYLINDER MOUNTING BRACKET 패스너	90.092	NUT, BRAKE MASTER CYL ATTACHING FASTENER 너트
23.093	FASTENER, AUX BRAKE PEDAL 패스너	90.490	RETAINER, BRAKE PEDAL LINKAGE PIN 리테이너
23.098	PEDAL, AUX BRAKE 페달	91.974	NUT, BRAKE MASTER CYLINDER MOUNTING BRACKET FAST 너트


92.026	RETAINER, BRAKE MASTER CYLINDER ACTUATING ROD PI 리테이너
92.028	NUT, BRAKE PEDAL SHAFT PILLOW BLOCK FASTENER 너트
94.184	NUT, AUXILIARY BRAKE PEDAL FASTENER 너트
94.694	WASHER, BRAKE PEDAL LINKAGE ROD END PIN 와셔
94.695	FASTENER, BRAKE PEDAL PIVOT BEARING 패스너
94.696	RETAINER, BRAKE PEDAL PIVOT BEARING FASTENER 리테이너
94.697	RETAINER, BRAKE MASTER CYLINDER BRACKET FASTENER 리테이너
94.698	FASTENER, BRAKE LINKAGE PIVOT ARM PIN RETAINER 패스너
94.699	FASTENER, BRAKE MASTER CYLINDER SUPPORT BRACKET 패스너
94.701	WASHER, BRAKE MASTER CYLINDER ACTUATING ROD PIN 와셔
94.766	NUT, BRAKE MASTER CYLINDER SUPPORT BRACKET FASTE 너트
95.058	LOCK, BRAKE PEDAL LINKAGE ROD END 로크

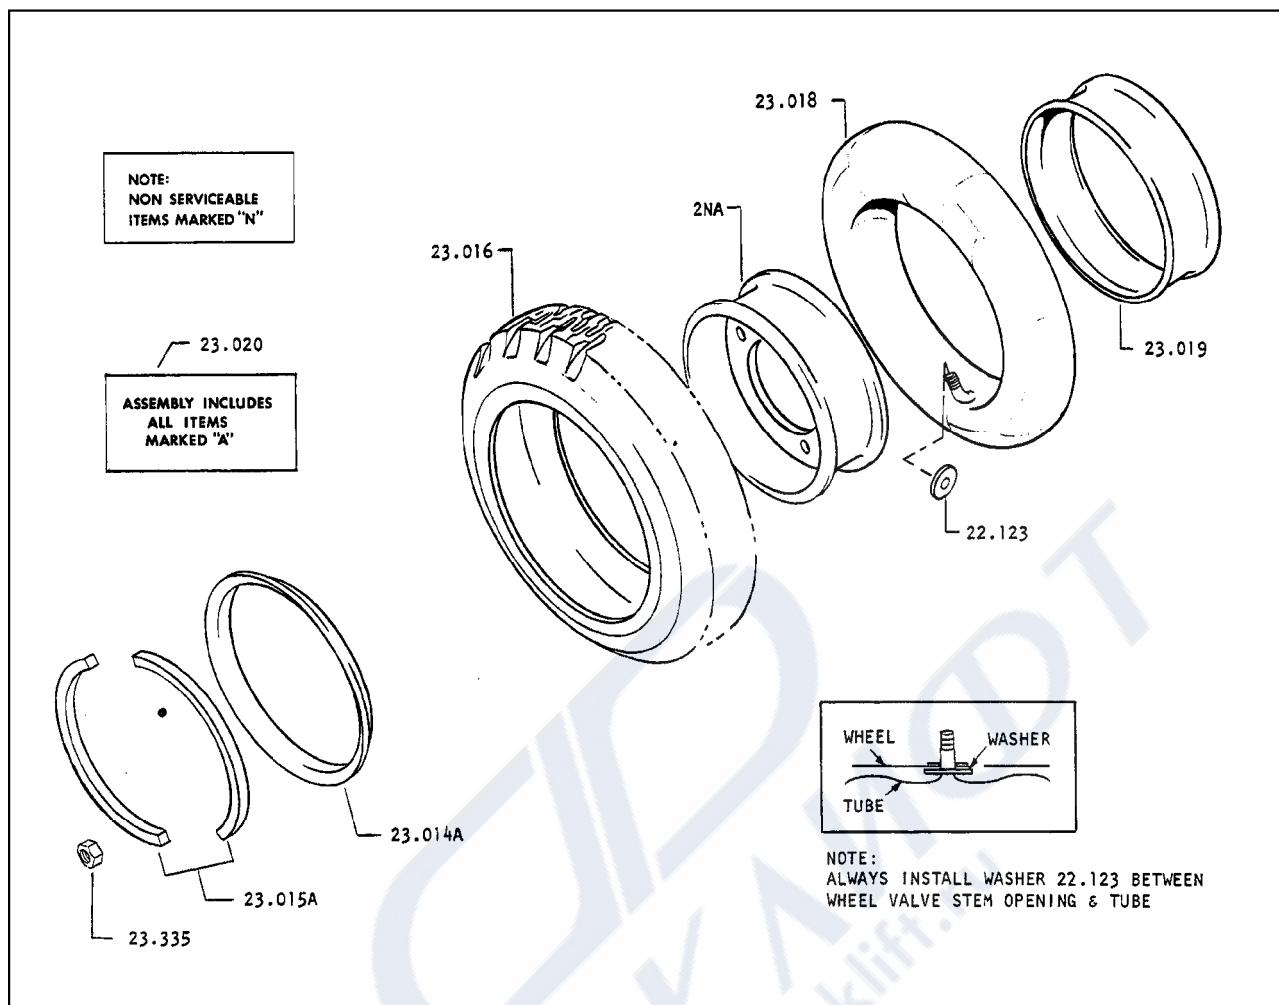 


22.123	PROTECTOR, TUBE ANTI-EXTRUSTION 보호장치
23.014	RING, DRIVE WHEEL SOLID SIDE 링
23.015	RING, DRIVE WHEEL SPLIT LOCK 링
23.016	TIRE, DRIVE WHEEL 타이어
23.018	TUBE, DRIVE WHEEL 튜브
23.019	FLAP, DRIVE WHEEL TUBE 플랩
23.020	WHEEL ASSEMBLY, DRIVE 휠
23.335	FASTENER, DRIVE WHEEL 패스너

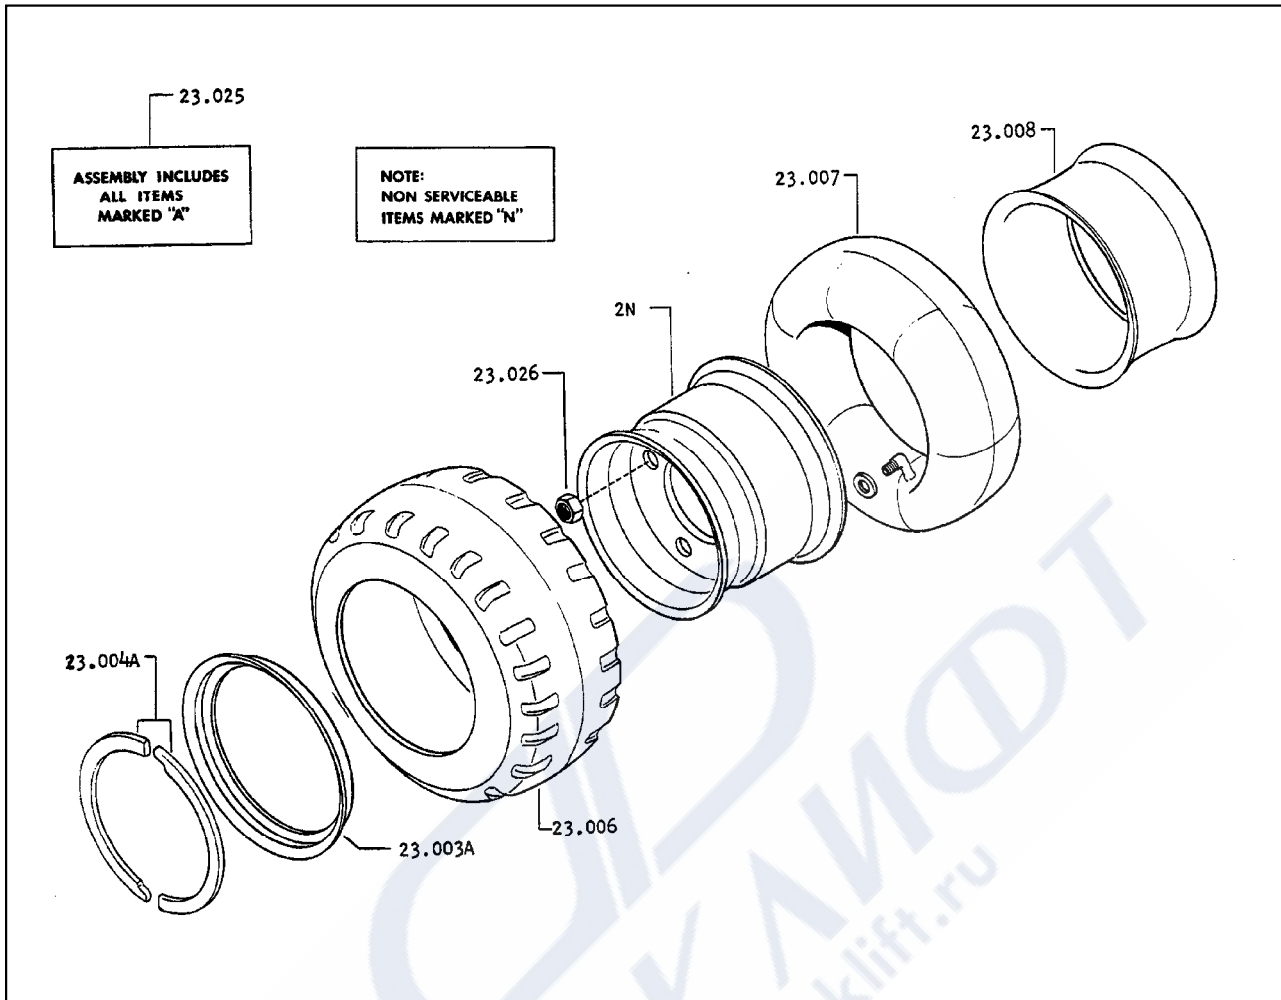 


23.003	RING, STEER WHEEL SOLID SIDE 링
23.004	RING, STEER WHEEL SPILT LOCK 링
23.006	TIRE, STEER WHEEL 타이어
23.007	TUBE, STEER WHEEL 튜브
23.008	FLAP, STEER WHEEL 플랩
23.025	WHEEL ASSEMBLY, STEER 휠
23.026	FASTENER, STEER WHEEL 패스너

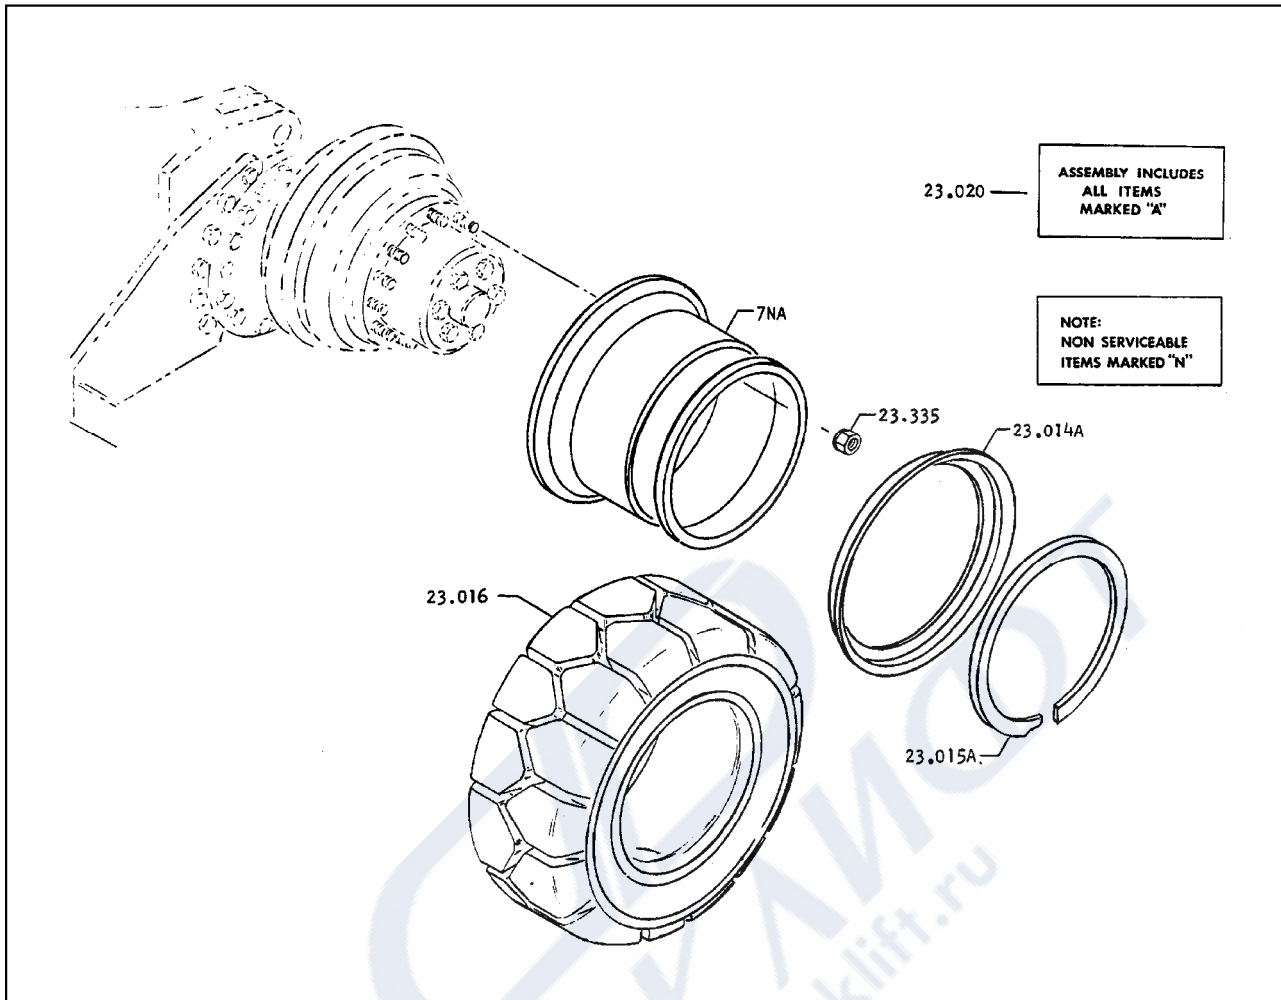 

23.014	RING, DRIVE WHEEL SOLID SIDE 링
23.015	RING, DRIVE WHEEL SPLIT LOCK 링
23.016	TIRE, DRIVE WHEEL 타이어
23.020	WHEEL ASSEMBLY, DRIVE 휠
23.335	FASTENER, DRIVE WHEEL 패스너

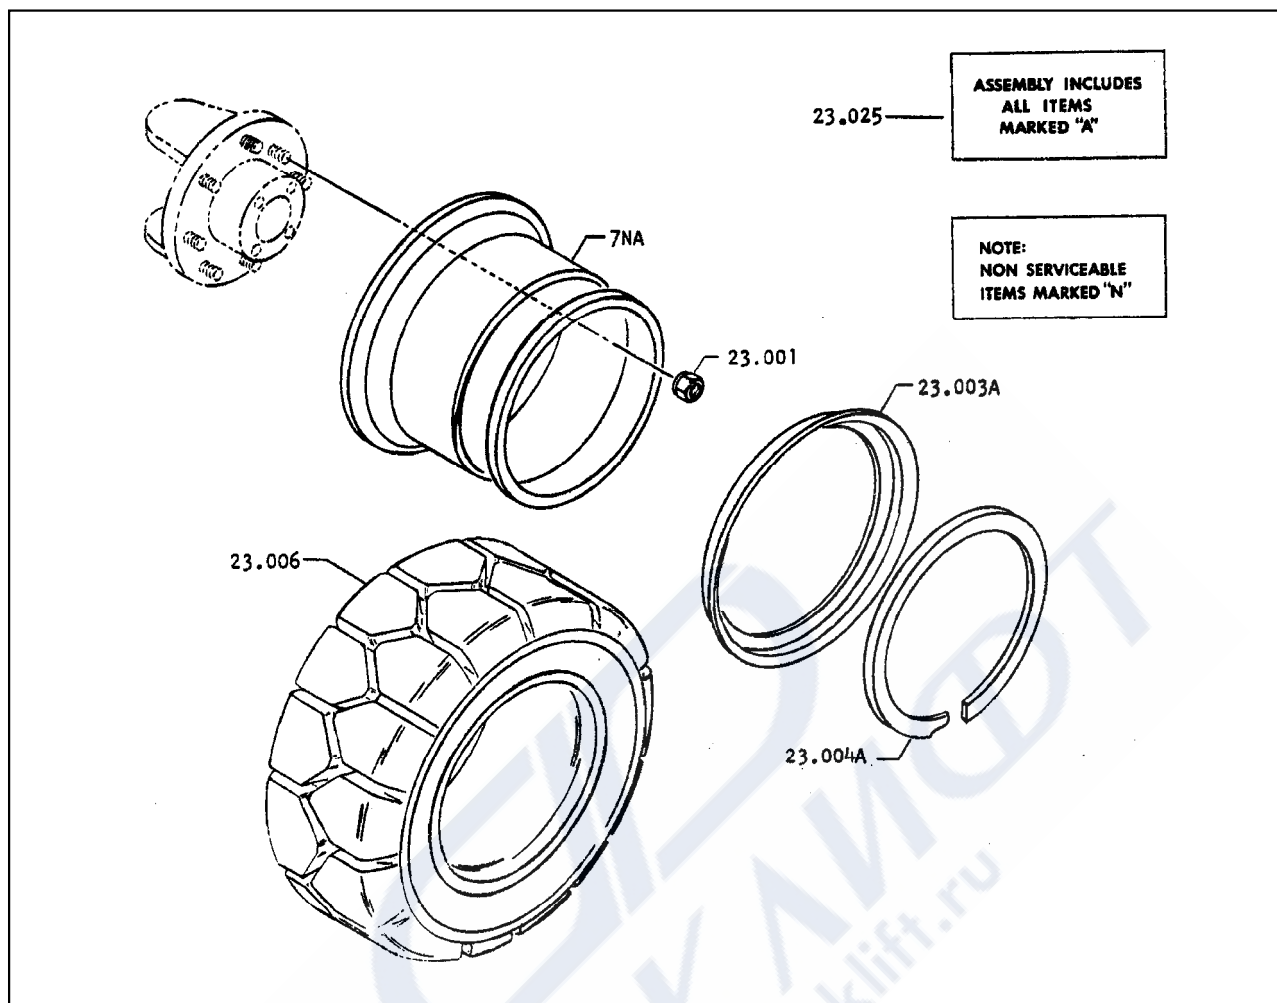 



23.001	NUT, STEER WHEEL RIM CLAMP 너트
23.003	RING, STEER WHEEL SOLID SIDE 링
23.004	RING, STEER WHEEL SPILT LOCK 링
23.006	TIRE, STEER WHEEL 타이어
23.025	WHEEL ASSEMBLY, STEER 휠

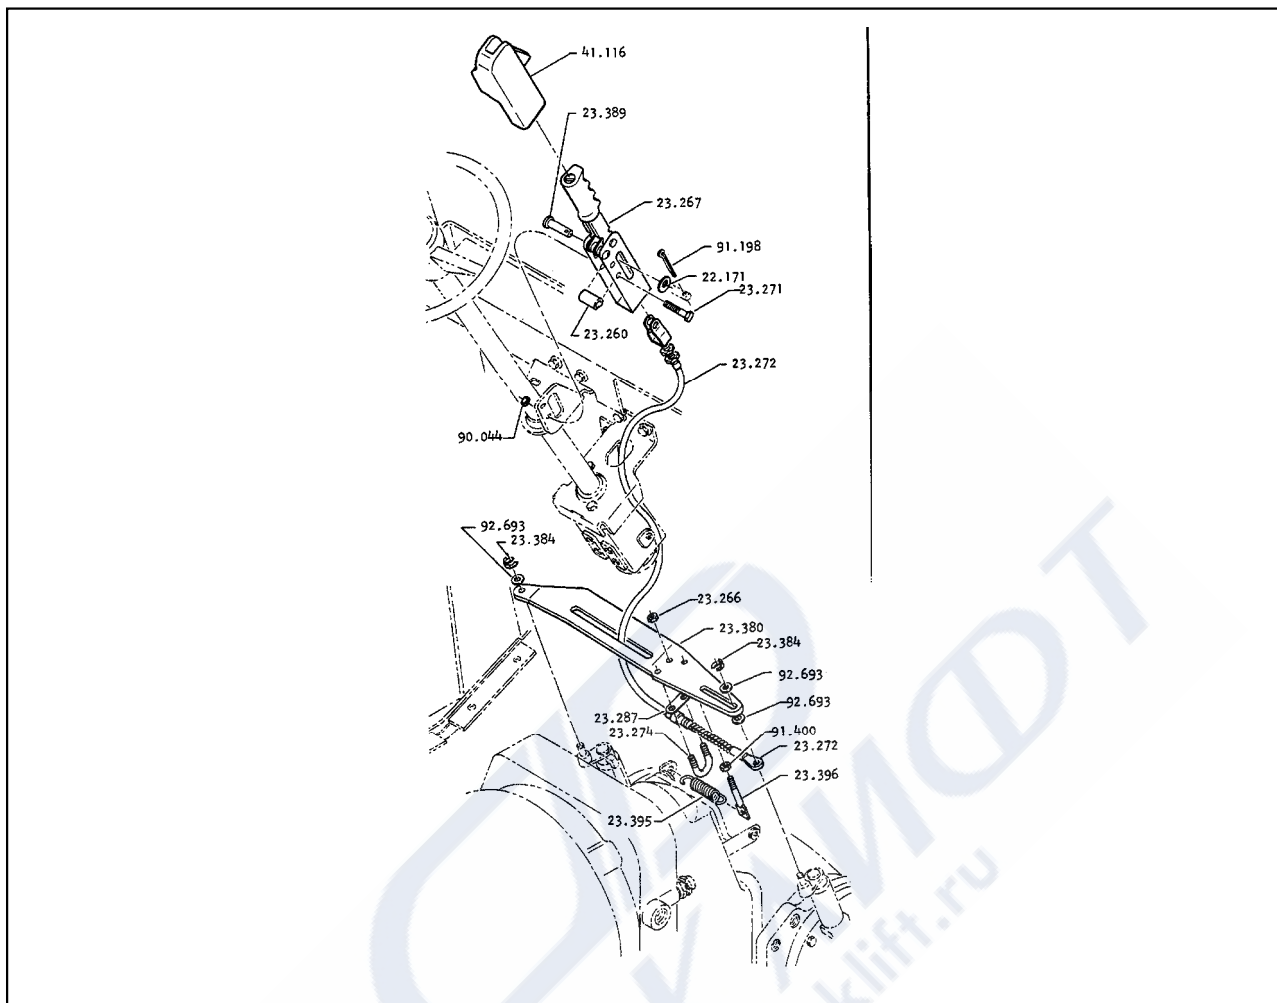 

- | | |
|--------|--|
| 22.171 | WASHER, PARKING BRAKE CABLE END CLEVIS PIN
와셔 |
| 23.260 | SPACER, PARKING BRAKE LEVER
스페이서 |
| 23.266 | FASTENER, PARKING BRAKE CABLE CLAMP
패스너 |
| 23.267 | LEVER, PARKING BRAKE
레버 |
| 23.271 | FASTENER, PARKING BRAKE LEVER
패스너 |
| 23.272 | CABLE, PARKING BRAKE
케이블 |
| 23.274 | CLAMP, PARKING BRAKE CABLE
클램프 |
| 23.287 | BRACKET, PARKING BRAKE CABLE
브라켓 |
| 23.380 | LINK, PARKING BRAKE
링크 |


23.384	FASTENER, PARKING BRAKE LINK 패스너
23.389	RETAINER, PARKING BRAKE CABLE 리테이너
23.395	SPRING, PARKING BRAKE LEVER RETURN 스프링
23.396	ANCHOR, PARKING BRAKE LEVER RETURN SPRING 앵커
41.116	COVER, PARKING BRAKE LEVER 커버
90.044	NUT, PARKING BRAKE LEVER FASTENER 너트
91.198	RETAINER, PARKING BRAKE CABLE END CLEVIS PIN 리테이너
91.400	NUT, PARKING BRAKE RETURN SPRING RET 너트
92.693	WASHER, PARKING BRAKE LINK FASTENER 와셔

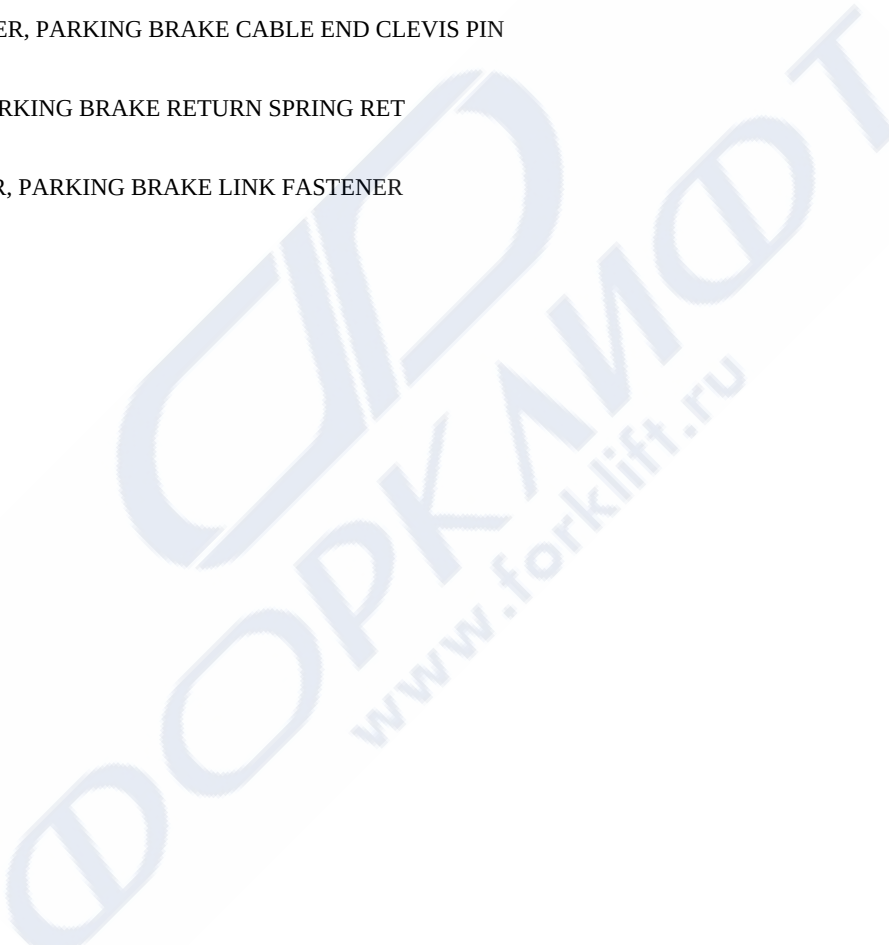 

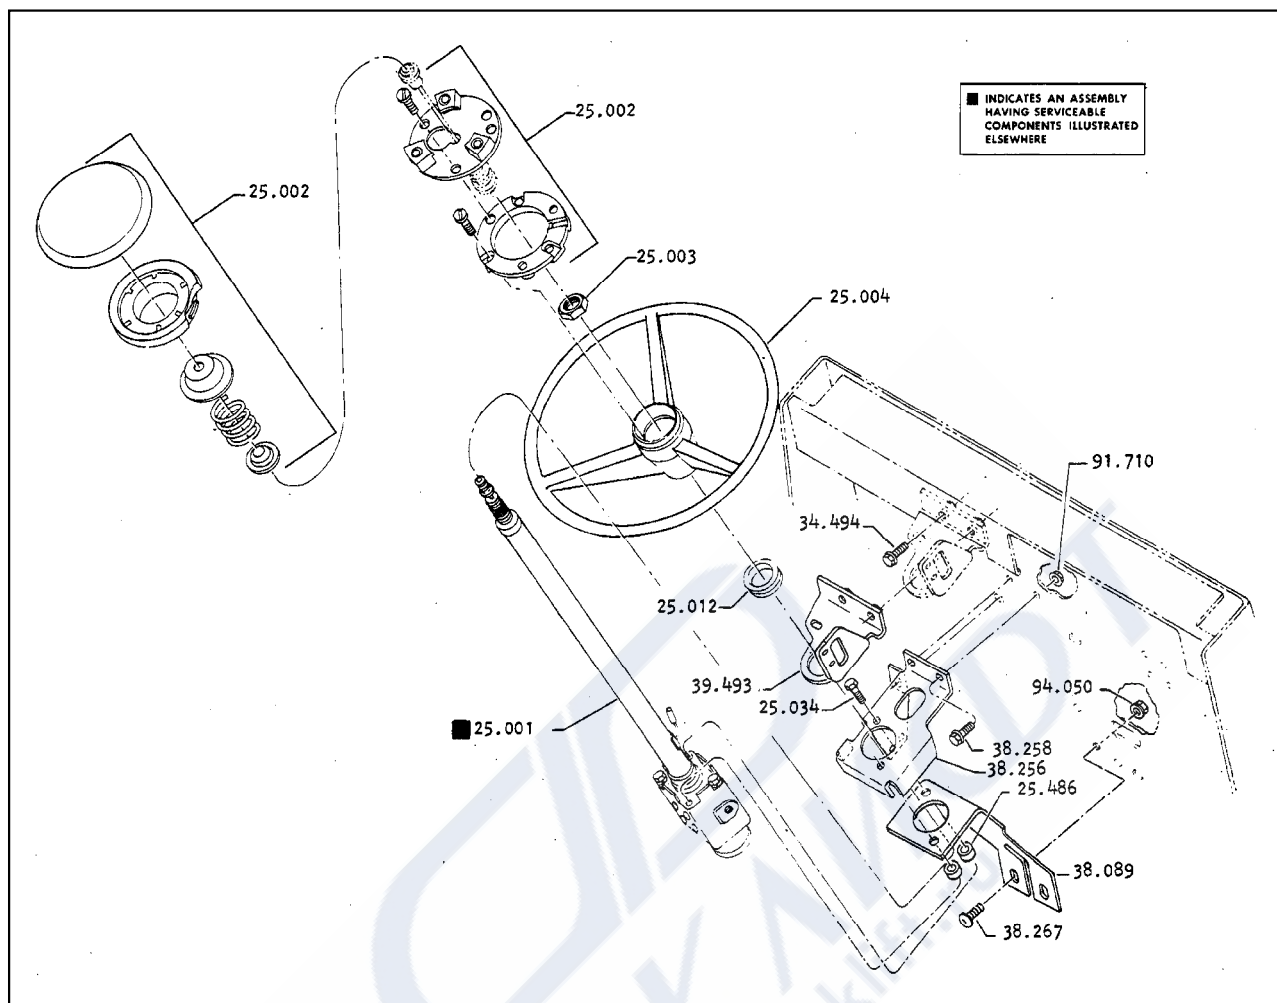 


- | | |
|--------|---|
| 25.001 | GEAR ASSEMBLY, STEERING (GREASED)
기어어셈블리 |
| 25.002 | HORN BUTTON KIT
혼버튼키트 |
| 25.003 | NUT, HANDWHEEL
너트 |
| 25.004 | HAND WHEEL, STEERING GEAR
핸드휠 |
| 25.012 | CUSHION, STEERING COLUMN
쿠션 |
| 25.034 | FASTENER, STEERING GEAR ATTACHING
패스너 |
| 25.486 | SPACER, STEERING GEAR MOUNTING
스페이서 |
| 34.494 | SPACER, LIFT CYLINDER ROD PACKING
스페이서 |
| 38.089 | BRACKET, STEERING GEAR MOUNTING
브라켓 |


38.256	BRACKET, STEERING GEAR MOUNTING 브라켓
38.258	FASTENER, STEERING GEAR BRACKET ATTACHING 패스너
38.267	FASTENER, STEERING GEAR BRACKET 패스너
39.493	BRACKET, STEERING COLUMN UPPER 브라켓
91.710	NUT, STEER GEAR MOUNTING BRACKET FASTENER 너트
94.050	NUT, STEERING GEAR MOUNTING BRACKET FASTENER 너트

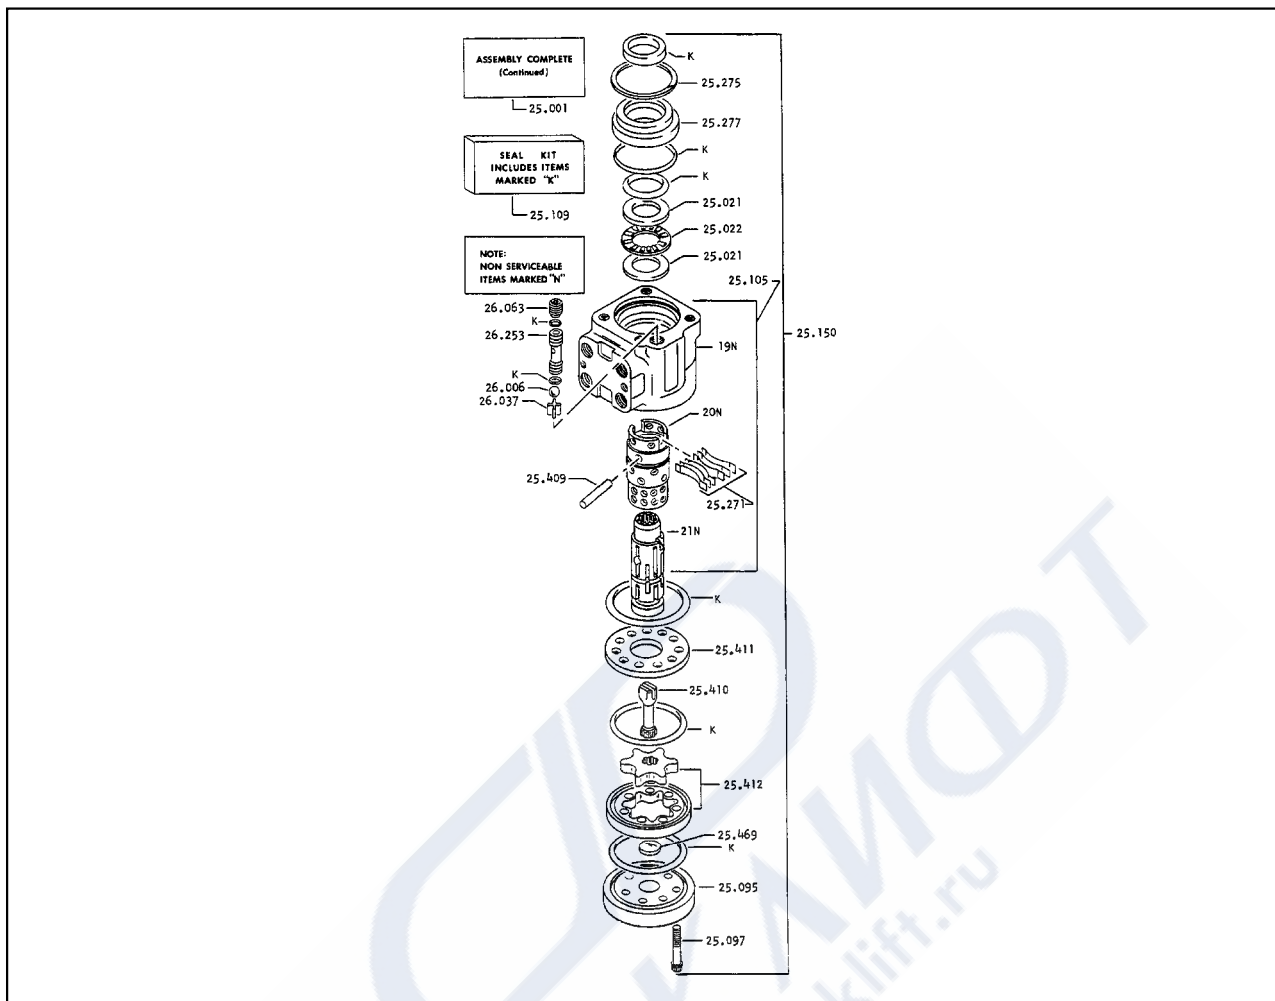 


25.001	GEAR ASSEMBLY, STEERING (GREASED) 기어어셈블리
25.021	CUP, WORM THRUST BEARING UPPER 컵
25.022	BEARING, STEER GEAR SPOOL 베어링
25.095	COVER, END 커버
25.097	FASTENER, END COVER 패스너
25.105	VALVE ASSEMBLY, STEERING GEAR 밸브
25.109	KIT, STEER GEAR SEAL 키트
25.150	GEAR BOX ASSEMBLY, STEERING 기어박스
25.271	SPRING, STEERING GEAR VALVE CENTERING 스프링

25.275	FASTENER, STEER GEAR VALVE CONTROL END CAP 패스너
25.277	COVER, STEERING GEAR VALVE CONTROL END 커버
25.409	TRUNNION, STEER GEAR PUMP DRIVE 트러니언
25.410	SHAFT, STEER GEAR PUMP DRIVE 샤프트
25.411	WEAR PLATE, STEER GEAR PUMP 웨어플레이트
25.412	PUMP CARTRIDGE, STEER GEAR 펌프카트리지
25.469	SPACER, STEER GEAR PUMP DRIVE SHAFT 스페이서
26.006	BALL, CHECK VALVE 볼
26.037	RETAINER, STEER GEAR CHECK VALVE 리테이너
26.063	PLUG, CHECK VALVE CHANNEL 플러그
26.253	SEAT, STEER GEAR CHECK VALVE 시트

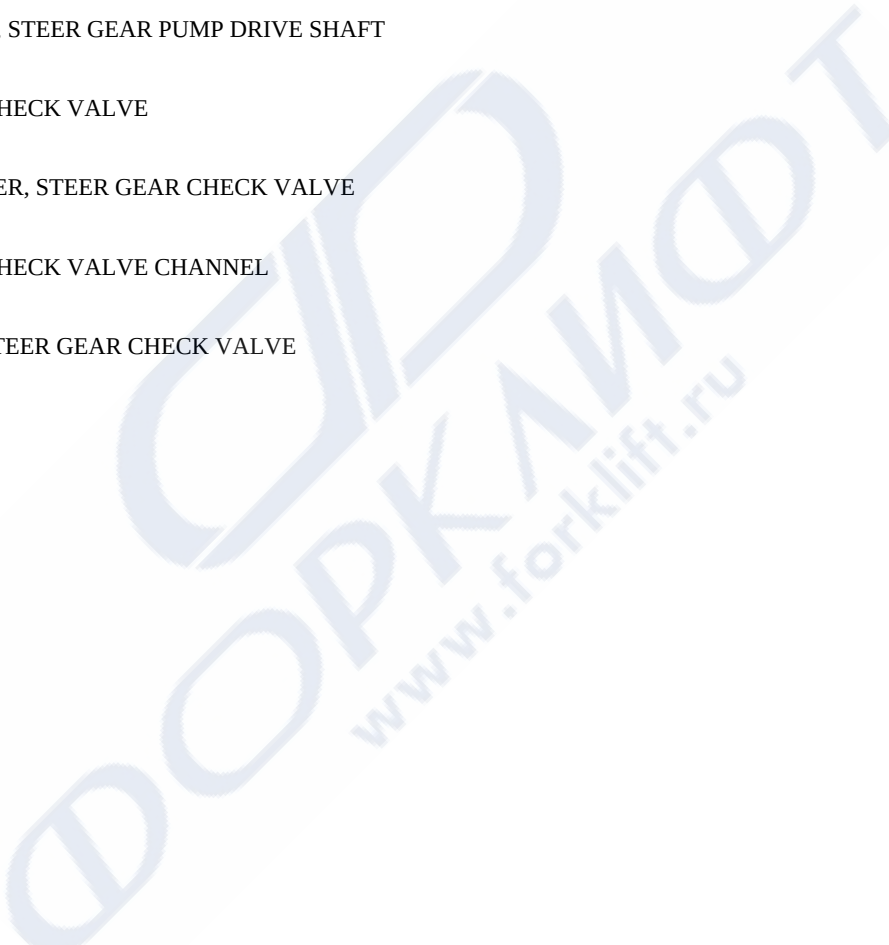 


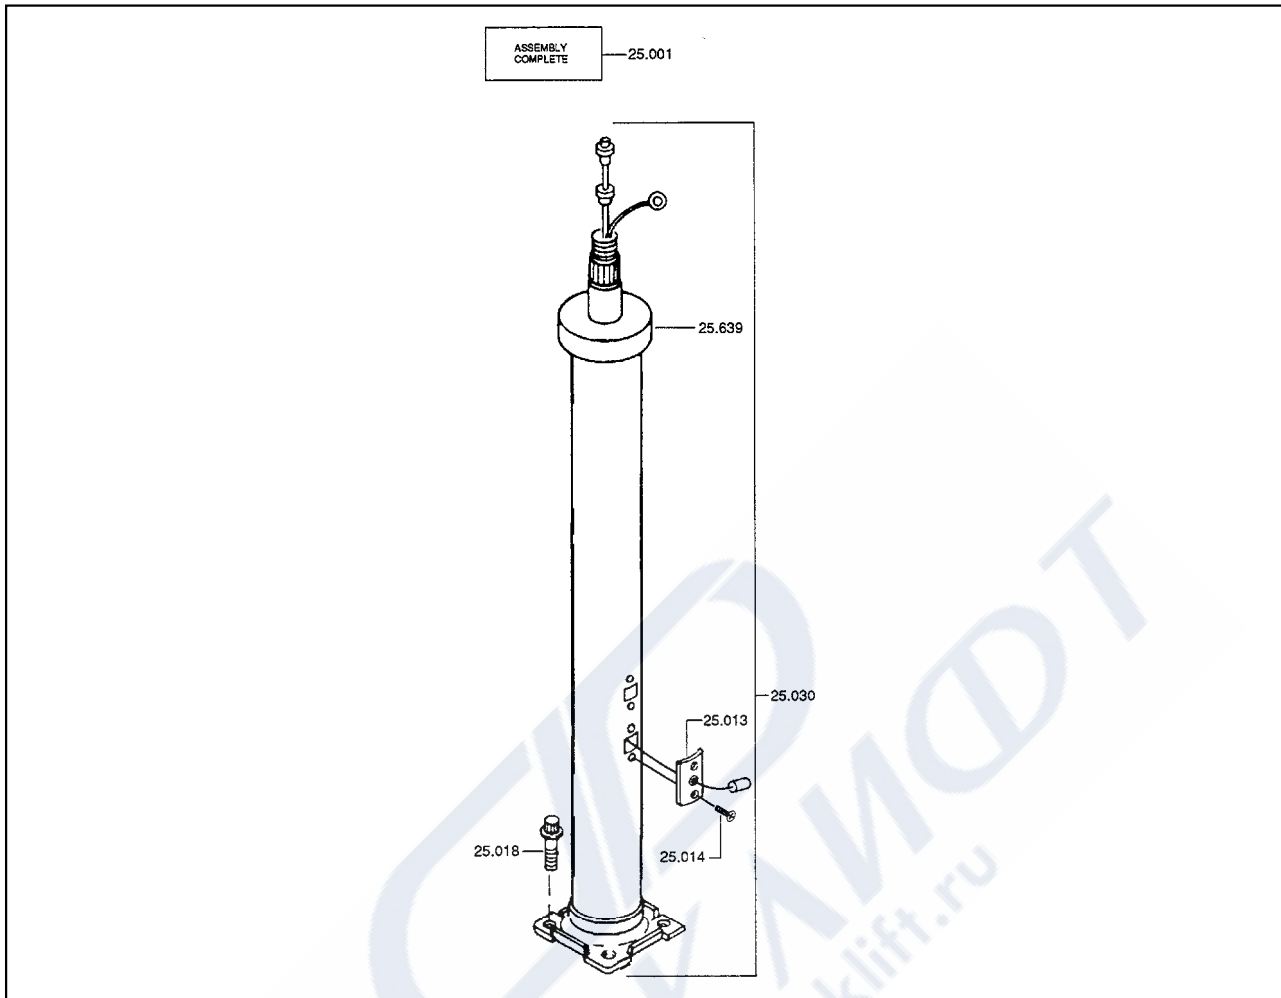 

- | | |
|--------|---|
| 25.001 | GEAR ASSEMBLY, STEERING (GREASED)
기어어셈블리 |
| 25.013 | CONNECTOR ASSEMBLY, HORN
커넥터 |
| 25.014 | FASTENER, HORN CONNECTOR
패스너 |
| 25.018 | FASTENER, COLUMN JACKET
패스너 |
| 25.030 | SHAFT ASSEMBLY, STEERING COLUMN
샤프트 |
| 25.639 | CAP, STEERING GEAR SHAFT-OUTER
캡 |

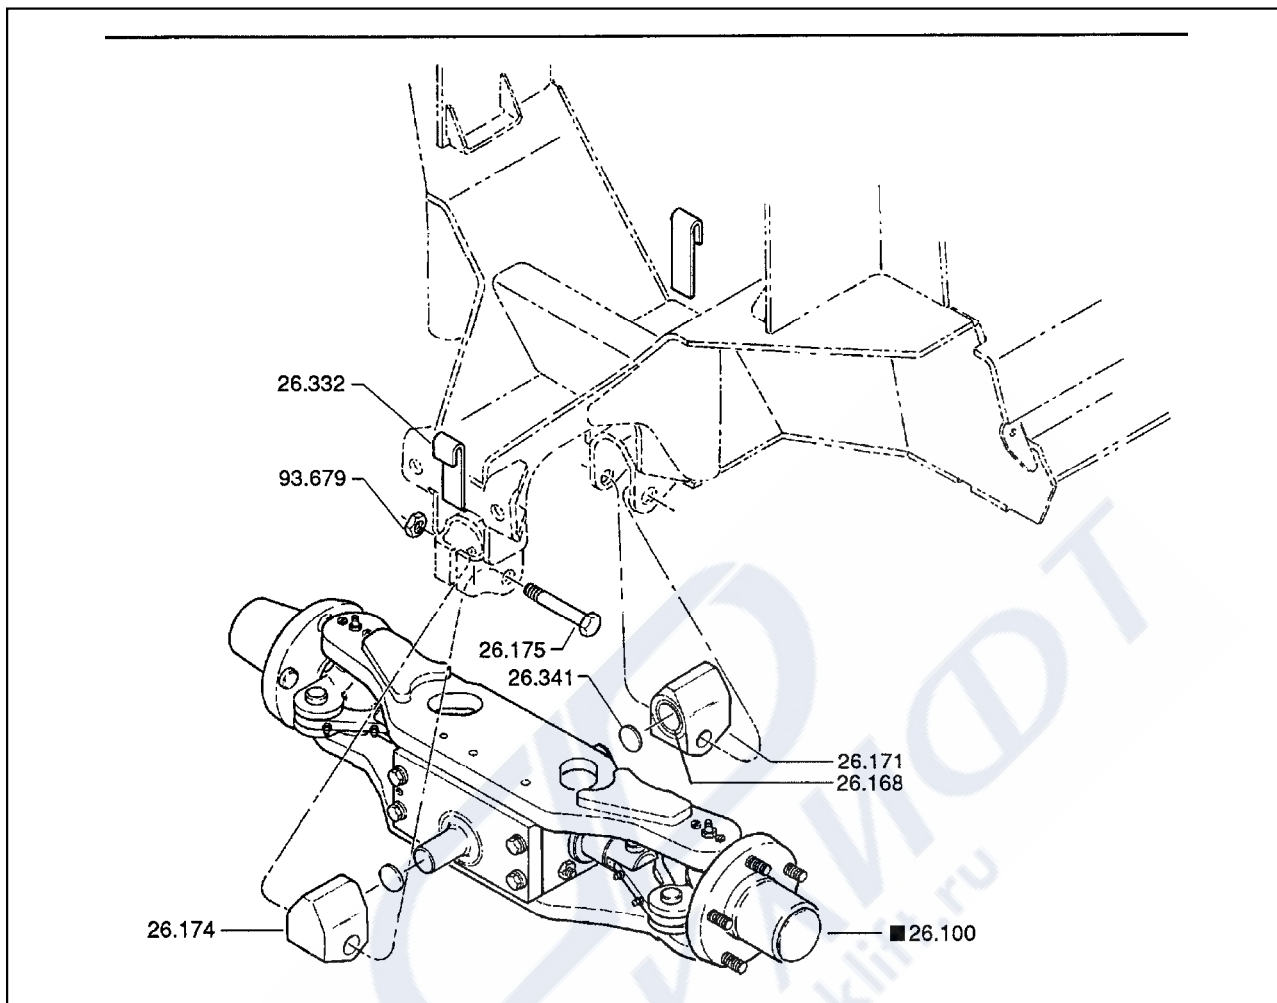 


 - 26.100 AXLE ASSEMBLY, STEERING
 스티어액슬
- 26.168 BUSHING, STEER AXLE PIVOT
 부싱
- 26.171 SILENT BLOCK, AXLE MOUNTING (FRONT)
 사일런트블록
- 26.174 SILENT BLOCK, AXLE MOUNTING (REAR)
 사일런트블록
- 26.175 FASTENER, SILENT BLOCK TO FRAME (REAR)
 패스너
- 26.332 SHIM, STEER AXLE SILENT BLOCK
 심
- 26.341 SPACER, STEER AXLE PIVOT BUSHING
 스페이서
- 93.679 NUT, STEER AXLE SILENT BLOCK FASTENER
 너트

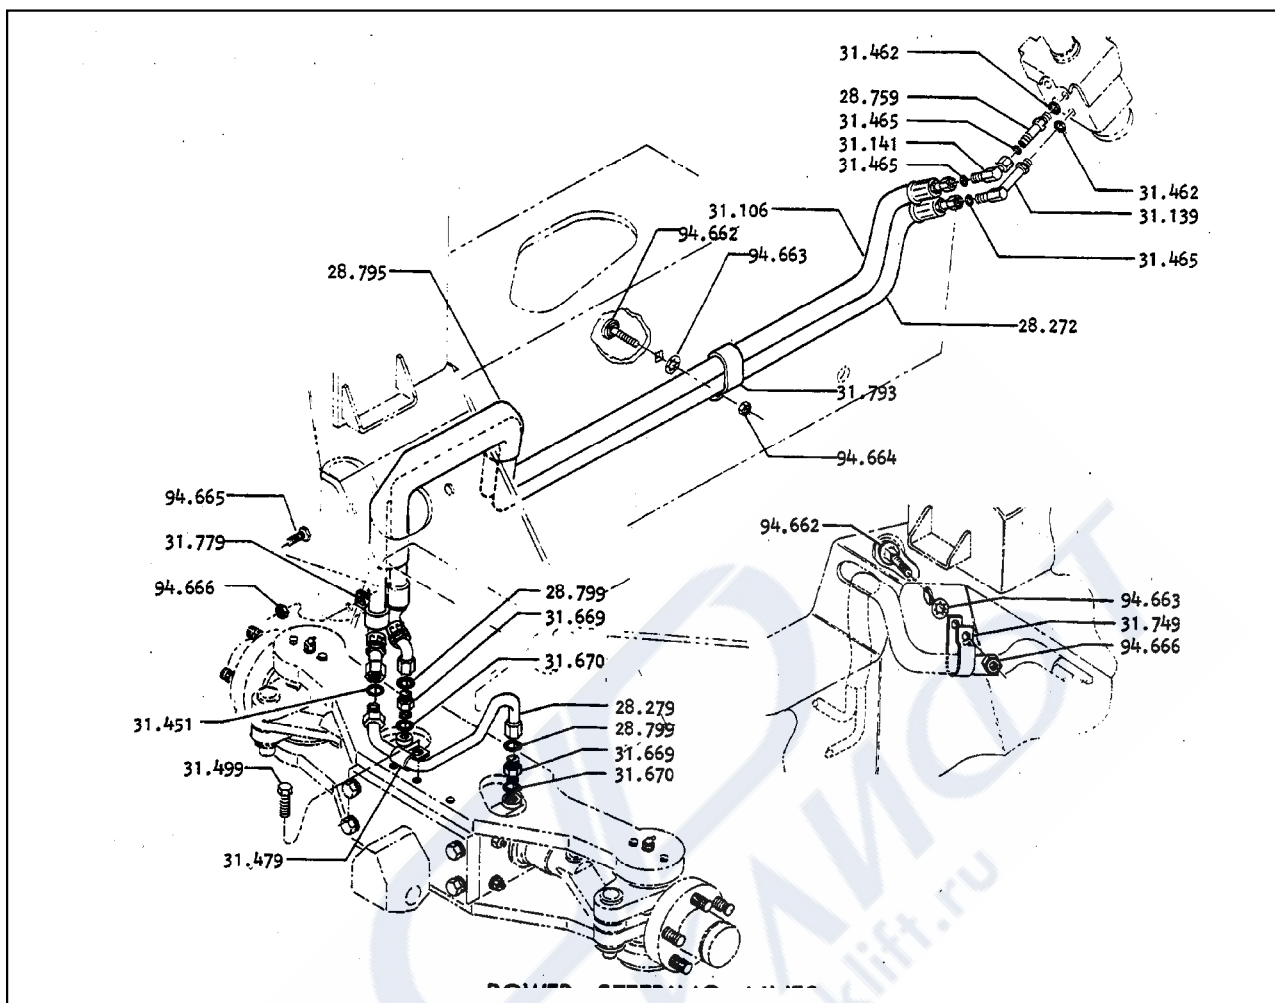

28.272	LINE, STEER CYLINDER INLET 라인
28.279	LINE, STEER CYLINDER INLET 라인
28.759	FITTING, STEER VALVE OUTLET PORT 피팅
28.795	PROTECTOR, POWER STEERING LINES 보호장치
28.799	SEAL, STEER VALVE OUTLET PORT FITTING 셀
31.106	LINE, STEERING CYLINDER 라인
31.139	FITTING, STEER VALVE OUTLET UPPER PORT 피팅
31.141	FITTING, STEER VALVE OUTLET UPPER LINE 피팅
31.451	SEAL, STEERING CYLINDER PORT 셀


31.452	*
31.462	SEAL, STEER VALVE OUTLET PORT 씰
31.465	SEAL, STEER VALVE OUTLET PORT 씰
31.479	CLAMP, STEERING LINES 클램프
31.499	FASTENER, PRESSURE LINE CLIP 패스너
31.669	FITTING, STEERING CYLINDER ROD PORT 피팅
31.670	SEAL, STEERING CYLINDER ROD PORT 씰
31.749	CLAMP, POWER STEERING LINES 클램프
31.779	CLAMP, POWER STEERING LINES 클램프
31.793	CLAMP, POWER STEERING LINES 클램프
94.662	FASTENER, POWER STEERING LINES CLAMP 패스너
94.663	RETAINER, POWER STEERING LINES CLAMP FASTENER 리테이너
94.664	NUT, POWER STEERING LINES CLAMP FASTENER 너트
94.665	FASTENER, POWER STEERING LINES CLAMP 패스너
94.666	NUT, POWER STEERING LINES CLAMP FASTENER 너트

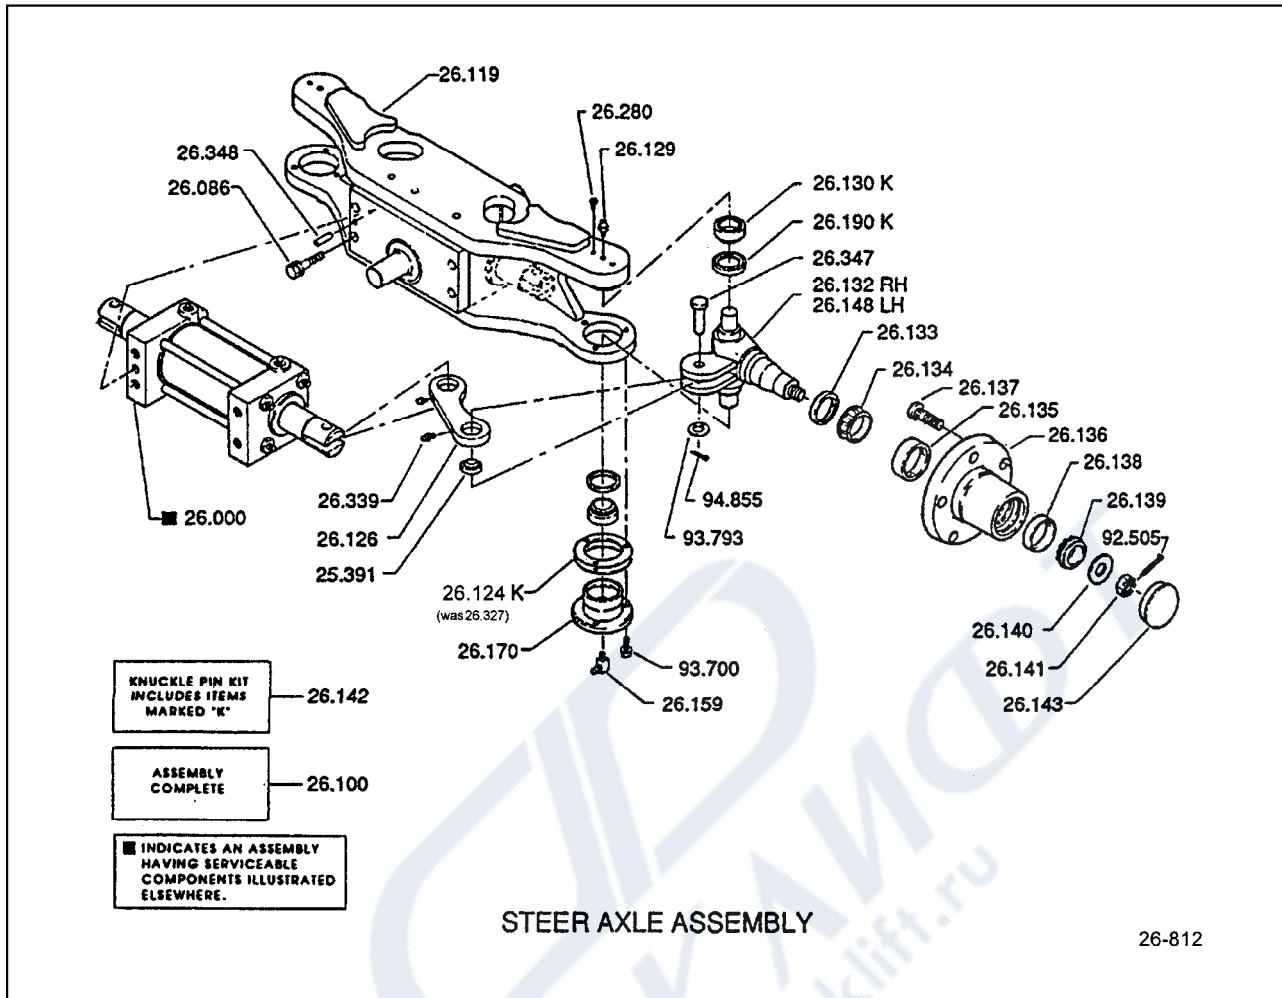 

25.391	BEARING, STEERING ARM 베어링	26.138	CUP, STEER WHEEL HUB BEARING (OUTER) 컵
26.000	CYLINDER ASSEMBLY, STEERING 실린더	26.139	CONE, STEER WHEEL HUB BEARING (OUTER) 콘
26.086	FASTENER, STEERING CYLINDER ANCHOR END 패스너	26.140	WASHER, STEER WHEEL HUB BEARING THRUST 와셔
26.100	AXLE ASSEMBLY, STEERING 스티어액슬	26.141	FASTENER, STEER WHEEL HUB 패스너
26.119	AXLE, STEER 액슬	26.142	PIN KIT, STEER AXLE KNUCKLE 핀키트
26.124	SHIM, STEER AXLE KNUCKLE 심	26.143	CAP, STEER WHEEL HUB 캡
26.126	ARM, RH STEERING 암	26.148	KNUCKLE, STEER AXLE (LH) 너트
26.129	FITTING - LUB, STEER AXLE KNUCKLE 피팅	26.159	FITTING - LUB, STEERING AXLE KNUCKLE LOWER 피팅
26.130	BEARING, STEER AXLE KNUCKLE PIN 베어링	26.170	PLUG - EXPANSION, STEER AXLE KNUCKLE PIN 플러그
26.132	KNUCKLE, STEER AXLE (RH) 너트	26.190	SEAL, STEER AXLE KNUCKLE OIL 씰
26.133	SEAL, STEER WHEEL HUB 씰	26.280	PLUG, STEER AXLE KNUCKLE PIN 플러그
26.134	CONE, STEER WHEEL HUB BEARING (INNER) 콘	26.339	LUB-FITTING, STEERING ARM 윤활피팅
26.135	CUP, STEER WHEEL HUB BEARING (INNER) 컵	26.347	PIN, STEER ARM 핀
26.136	HUB & CUP, STEER WHEEL 허브& 컵	26.348	LOCATOR, STEER CYLINDER 로케이터
26.137	FASTENER, STEER WHEEL 패스너	92.505	COTTER, STEER WHEEL HUB FASTENER 커터

93.700	FASTENER, STEER AXLE KNUCKLE PIN COVER 패스너
93.793	WASHER, STEERING ARM PIVOT FASTENER 와셔
94.855	RETAINER, STEERING ARM PIN 리테이너

 
ФОРКЛИФТ
www.forklift.ru

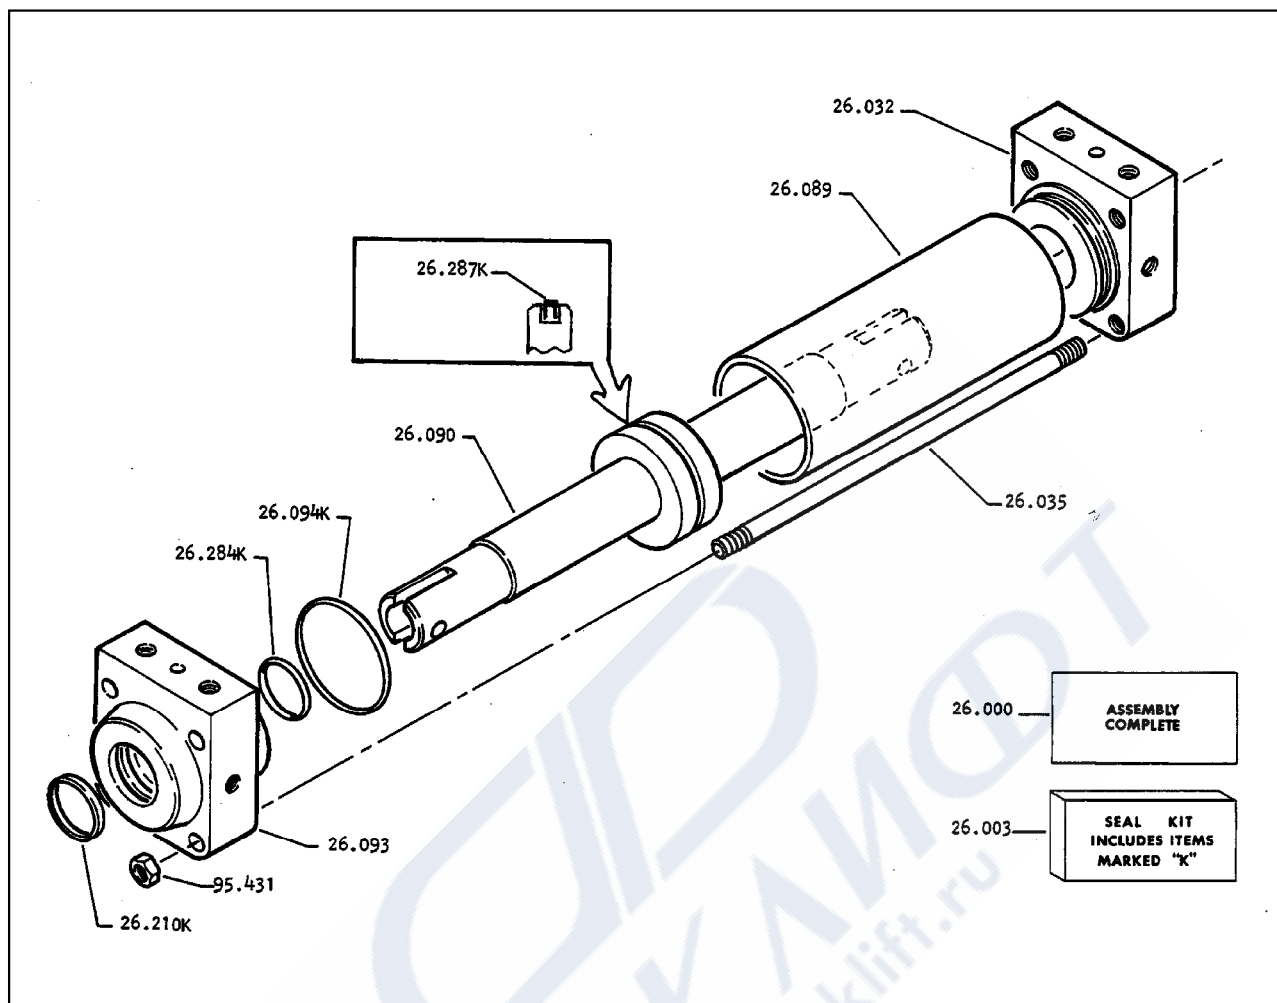

26.000	CYLINDER ASSEMBLY, STEERING 실린더
26.003	SEAL KIT, PISTON ROD 씰키트
26.032	HOUSING, CYLINDER PORT END 하우징
26.035	FASTENER, THRU 패스너
26.089	BARREL, STEERING CYLINDER 배럴
26.090	STEER CYLINDER PISTON 스티어실린더피스톤
26.093	GLAND, STEERING CYLINDER 그랜드
26.094	SEAL, STEERING CYLINDER GLAND 씰
26.210	WIPER, STEERING CYLINDER ROD 와이퍼

26.284	U-CUP, STEERING CYLINDER GLAND U컵
26.287	SEAL, STEERING CYLINDER PISTON 씰
95.431	NUT, STEERING CYLINDER THRU FASTENER 너트




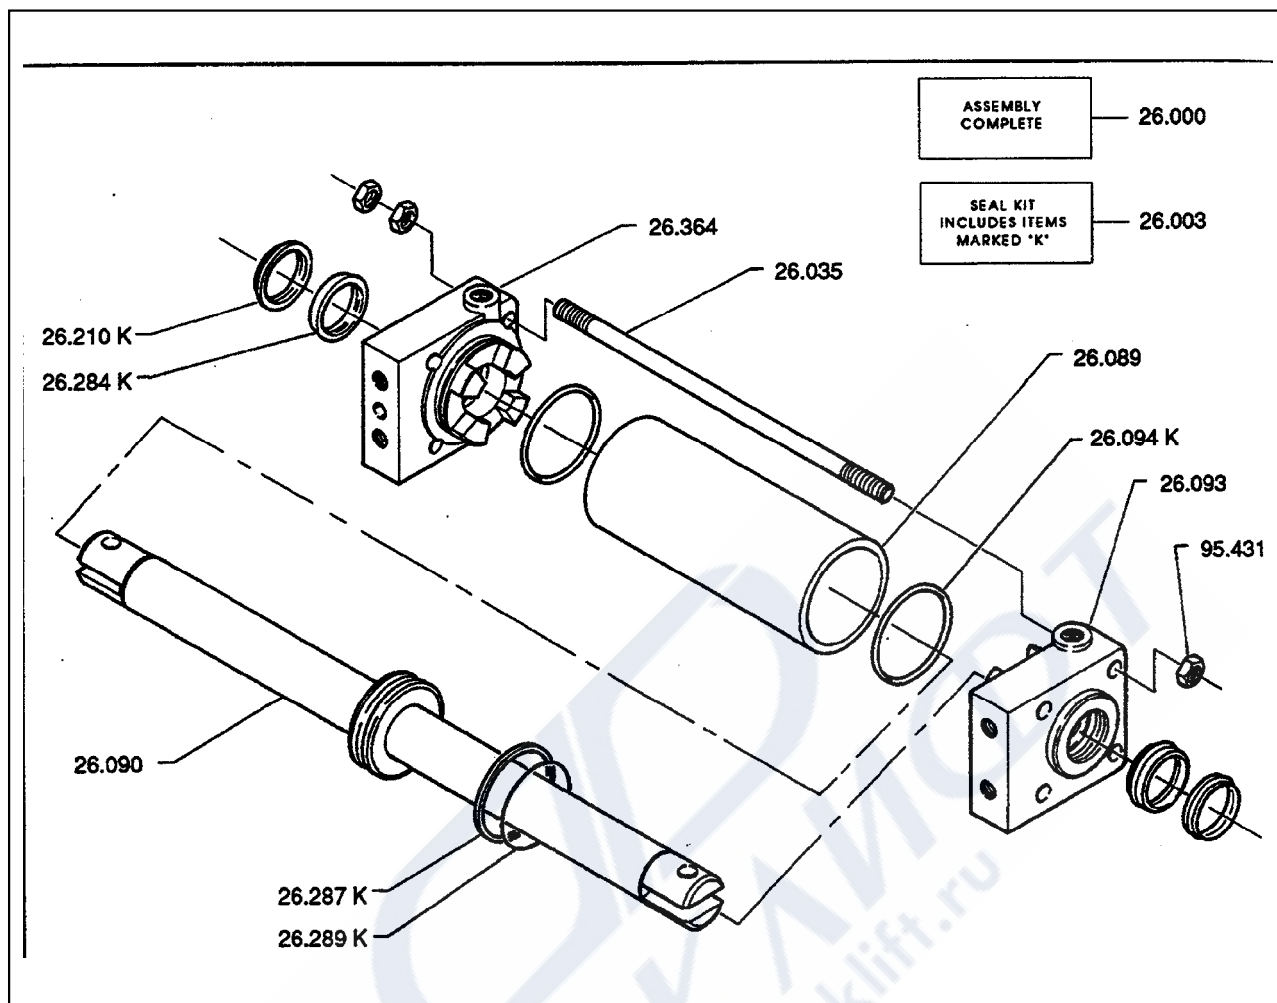 

26.000	CYLINDER ASSEMBLY, STEERING 실린더
26.003	SEAL KIT, PISTON ROD 씰키트
26.035	FASTENER, THRU 패스너
26.089	BARREL, STEERING CYLINDER 배럴
26.090	STEER CYLINDER PISTON 스티어실린더피스톤
26.093	GLAND, STEERING CYLINDER 그랜드
26.094	SEAL, STEERING CYLINDER GLAND 씰
26.210	WIPER, STEERING CYLINDER ROD 와이퍼
26.284	U-CUP, STEERING CYLINDER GLAND U컵

26.287	SEAL, STEERING CYLINDER PISTON 씰
26.289	EXPANDER, STEERING CYLINDER PISTON SEAL 익스팬더
26.384	*
95.431	NUT, STEERING CYLINDER THRU FASTENER 너트




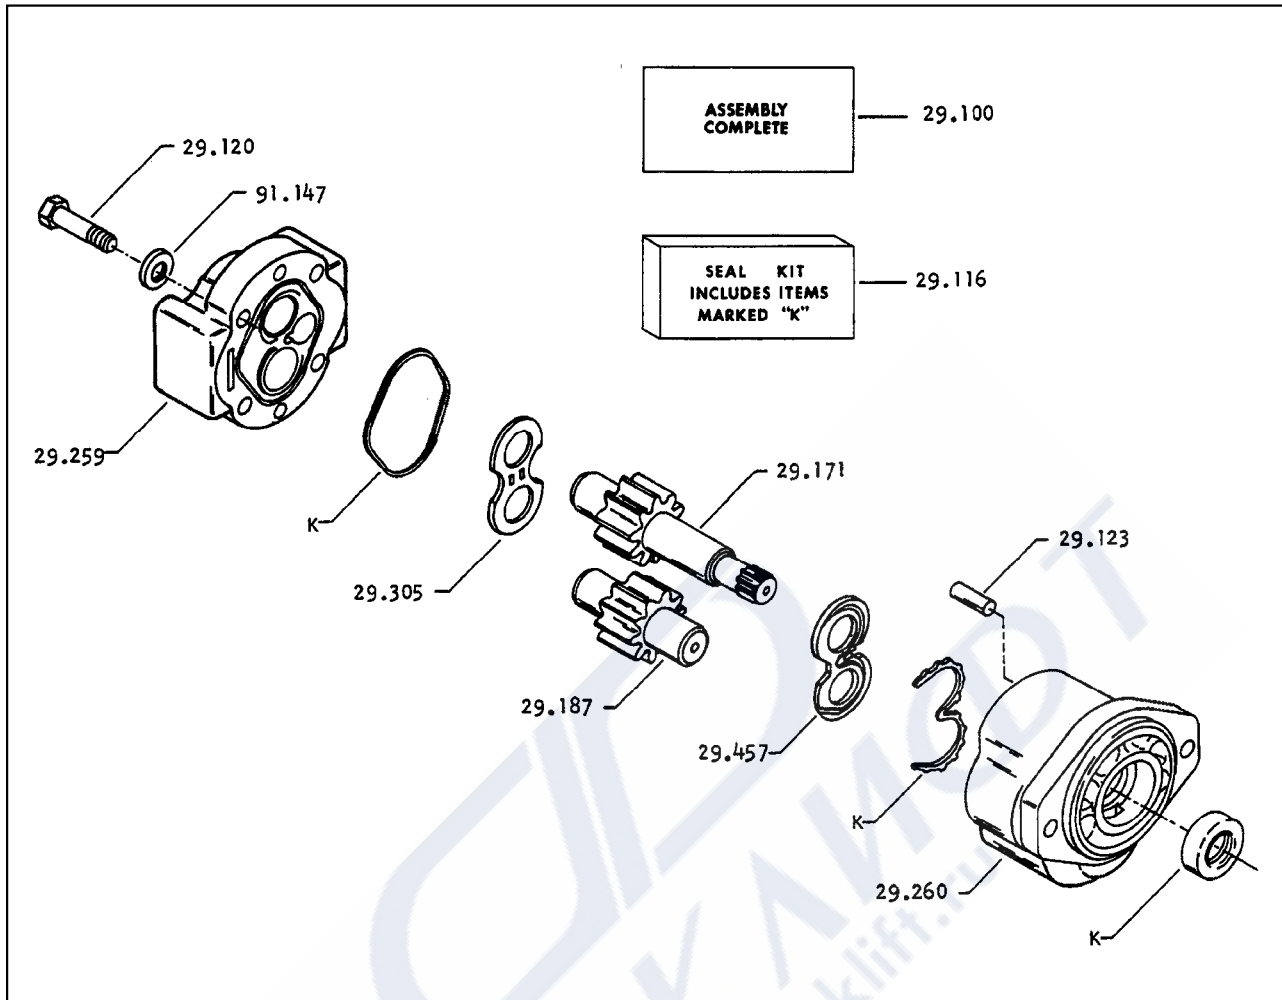 


29.100	PUMP ASSEMBLY, HYDRAULIC 펌프
29.116	SEAL KIT, PUMP SHAFT 씰키트
29.120	FASTENER, PUMP COVER TO ADAPTOR 패스너
29.123	PIN, COVER DOWEL 핀
29.171	GEAR, PUMP DRIVE 기어
29.187	GEAR, PUMP IDLER 기어
29.259	COVER ASSEMBLY, PUMP (OUTLET) 커버
29.260	COVER ASSEMBLY, PUMP (SHAFT END) 커버
29.305	PLATE KIT, PUMP THRUST 플레이트키트

29.457	WEAR PLATE, HYDRAULIC PUMP 웨어플레이트
91.147	WASHER, PUMP HOUSING FASTENER 와셔



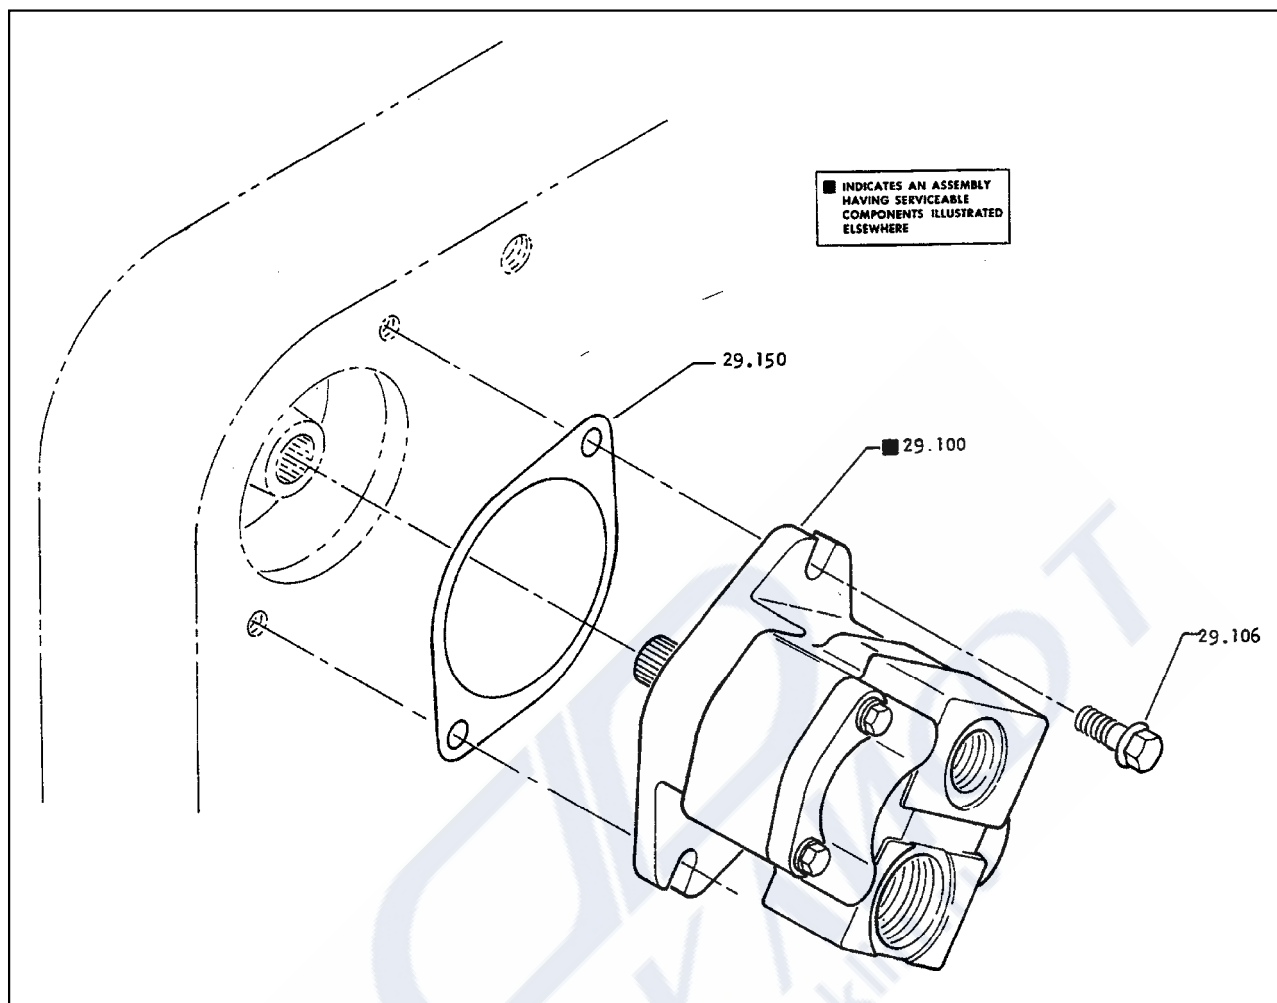 


- | | |
|--------|--|
| 29.100 | PUMP ASSEMBLY, HYDRAULIC
펌프 |
| 29.106 | FASTENER, PUMP TO PLATE
패스너 |
| 29.150 | GASKET, HYDRAULIC PUMP MOUNTING
가스켓 |

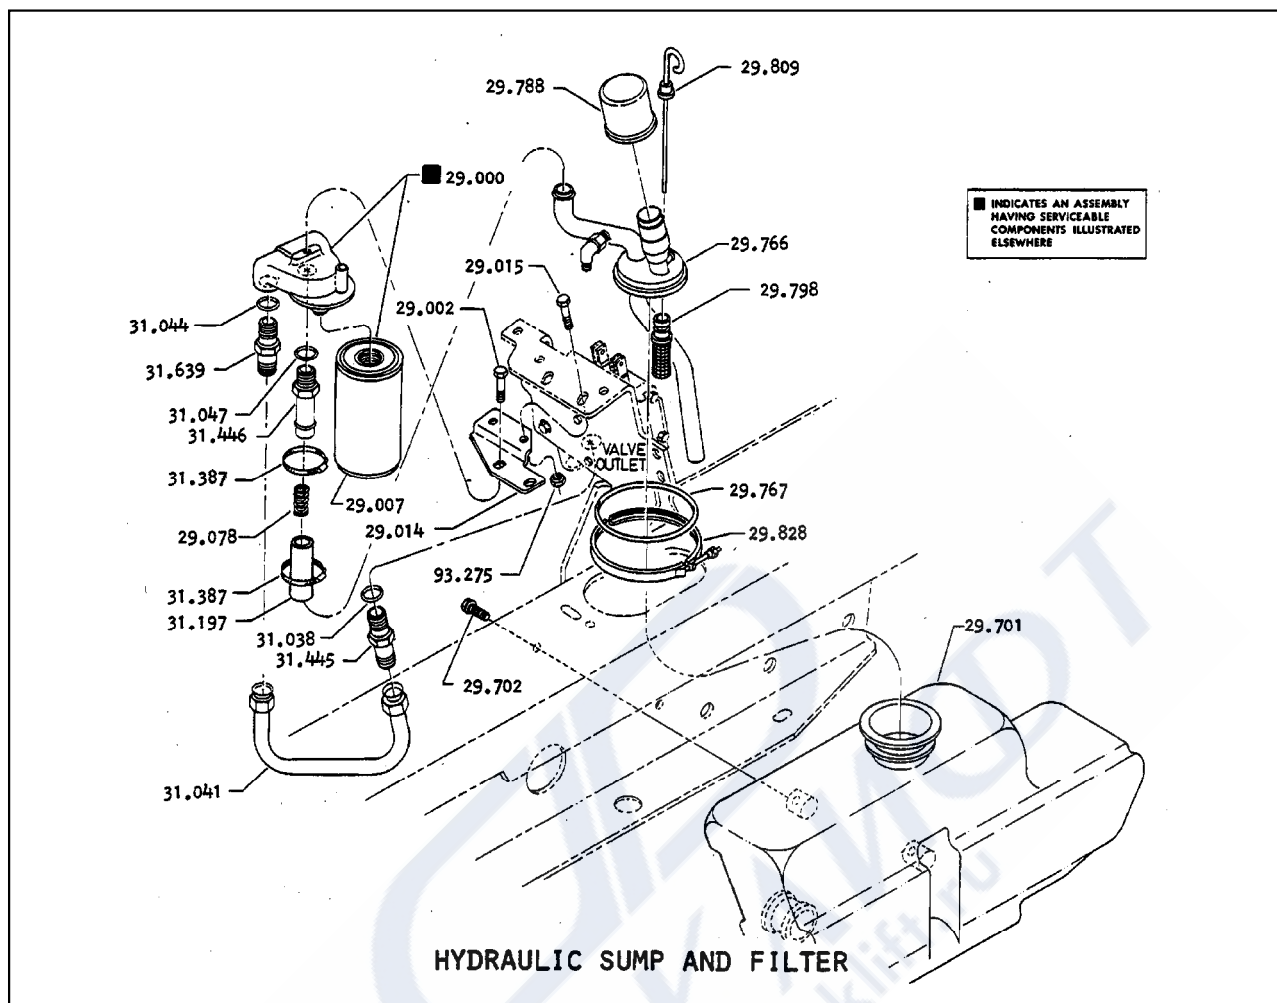 


29.000	FILTER, HYDRAULIC OIL 필터
29.002	FASTENER, HYDRAULIC OIL FILTER 패스너
29.007	CARTRIDGE, HYDRAULIC OIL FILTER 카트리지
29.014	BRACKET, HYDRAULIC OIL FILTER MOUNTING 브라켓
29.015	FASTENER, HYDRAULIC OIL FILTER MTG BRACKET 패스너
29.078	SPRING, FILTER DISCHARGE LINE 스프링
29.701	TANK, SUMP 탱크
29.702	FASTENER, SUMP TANK 패스너
29.766	COVER, SUMP TANK 커버

29.767	SEAL, SUMP TANK COVER 씰
29.788	BREATHER, SUMP 브리더
29.798	SCREEN, HYDRAULIC SUMP PRE FILTER 스크린
29.809	DIPSTICK, SUMP LEVEL 딤스틱
29.828	CLAMP, HYDRAULIC SUMP FILTER PICK-UP LINE 클램프
31.038	SEAL, MAIN VALVE TO FILTER LINE PORT 씰
31.041	LINE, VALVE DISCHARGE 라인
31.044	SEAL, FILTER INLET PORT 씰
31.047	SEAL, FILTER OUTLET PORT 씰
31.197	LINE, MAIN VALVE TO SUMP RETURN 라인
31.387	CLAMP, MAIN VALVE TO SUMP LINE 클램프
31.445	FITTING, MAIN VALVE TO FILTER LINE 피팅
31.446	FITTING, FILTER OUTLET PORT 피팅
31.639	FITTING, FILTER INLET PORT 피팅
93.275	NUT, HYDRAULIC OIL FILTER MOUNTING BRACKET FASTENE 너트

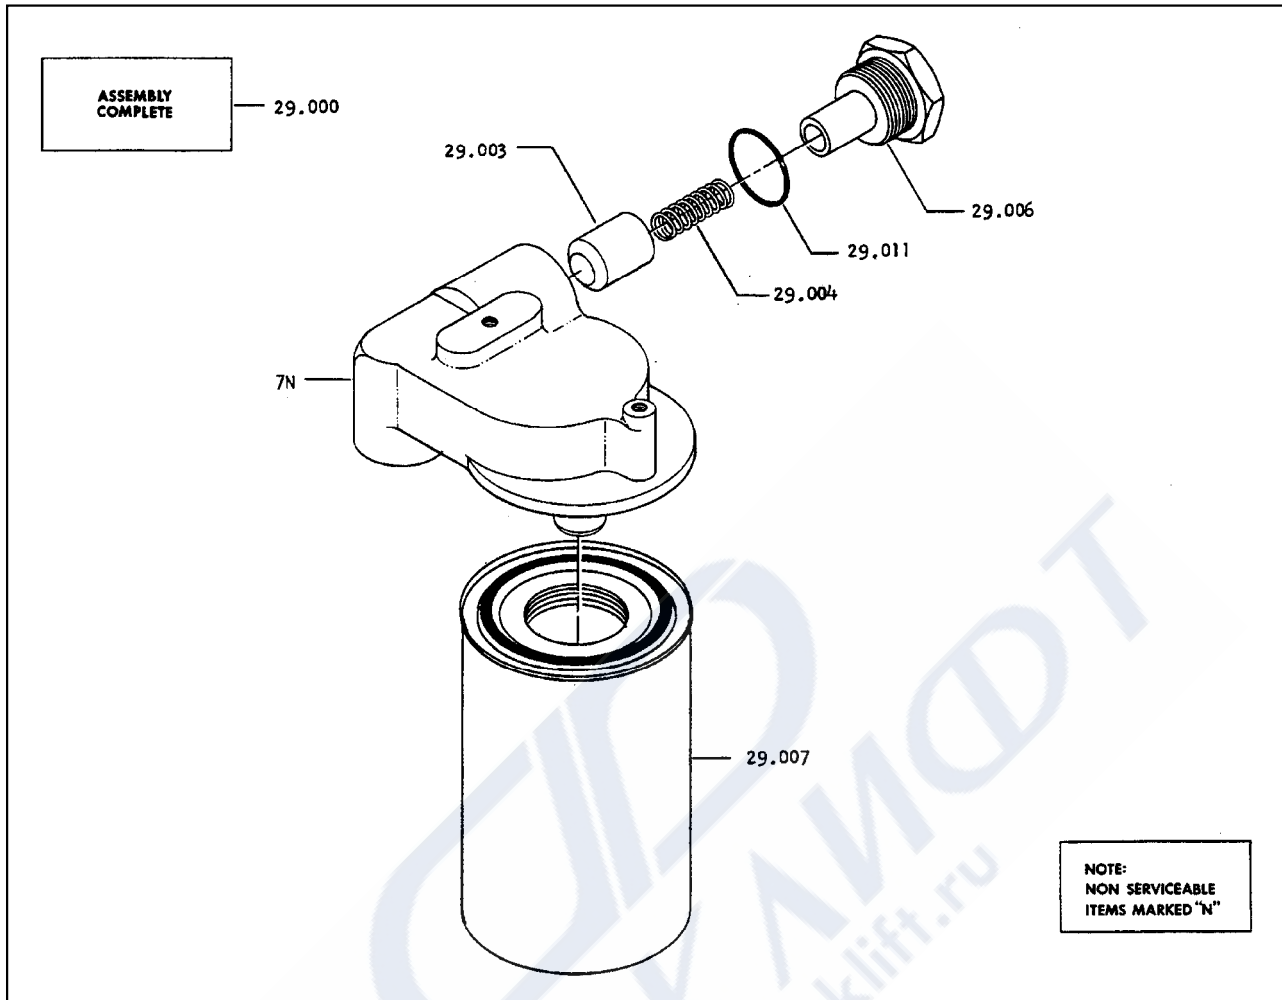 


29.000	FILTER, HYDRAULIC OIL 필터
29.003	VALVE, HYDRAULIC OIL FILTER RELIEF 밸브
29.004	SPRING, HYDRAULIC OIL FILTER VALVE 스프링
29.006	RETAINER, OIL FILTER RELIEF VALVE 리테이너
29.007	CARTRIDGE, HYDRAULIC OIL FILTER 카트리지
29.011	SEAL, OIL FILTER RELIEF VALVE 셀

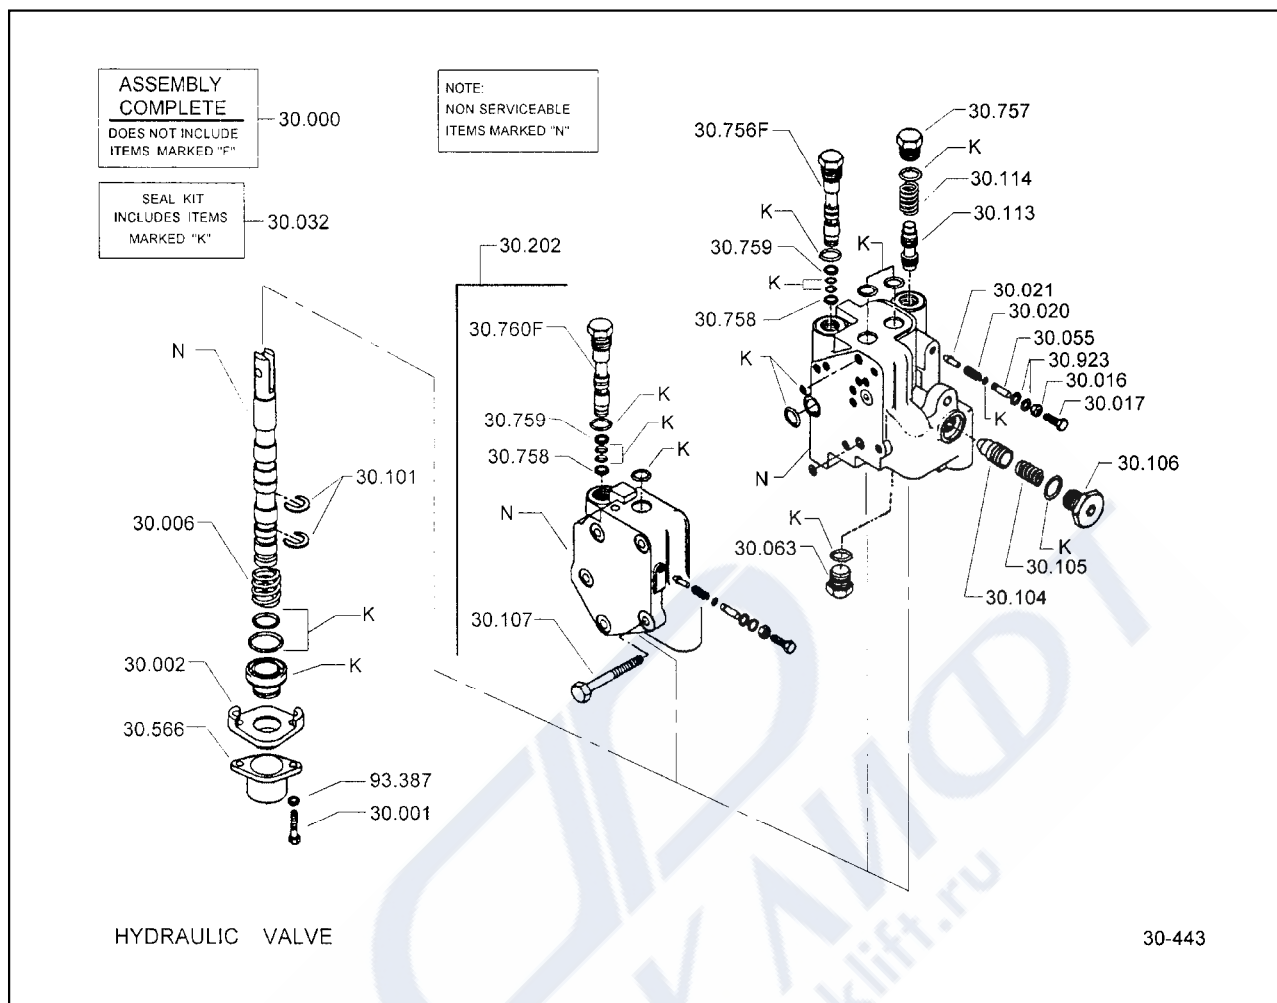 


- | | |
|--------|--|
| 30.000 | VALVE ASSEMBLY, HYDRAULIC
밸브 |
| 30.001 | FASTENER, SPRING COVER
패스너 |
| 30.002 | COVER, SPOOL CENTERING SPRING
커버 |
| 30.006 | SPRING, VALVE SPOOL CENTERING
스프링 |
| 30.016 | NUT, POPPET ADJUSTING SCREW LOCK
너트 |
| 30.017 | SCREW, POPPET ADJUSTING
스크류 |
| 30.020 | SPRING, RELIEF VALVE ASSEMBLY
스프링 |
| 30.021 | POPPET, RELIEF
포펫 |
| 30.032 | SEAL KIT, HYDRAULIC VALVE SECTION (INLET)
씰키트 |


30.055	PLUNGER, POPPET 플런저
30.063	PLUG, INLET SECTION PRESSURE PORT 플러그
30.101	RETAINER, SPOOL CENTERING SPRING 리테이너
30.104	BALL, VALVE INLET SECTION CHECK VALVE 볼
30.105	SPRING, VALVE INLET SECTION CHECK VALVE 스프링
30.106	PLUG, INLET SECTION CHECK VALVE 플러그
30.107	FASTENER, VALVE THRU 패스너
30.113	BALL, VALVE OUTLET SECTION CHECK VALVE 볼
30.114	SPRING, VALVE OUTLET SECTION CHECK VALVE 스프링
30.202	VALVE SECTION, 1ST AUXILIARY 밸브
30.566	DUST SHIELD, HYDRAULIC VALVE SPOOL 더스트실드
30.756	FLOW CONTROL, HYDRAULIC VALVE TILT SECTION 플로우컨트롤
30.757	PLUG, HYDRAULIC VALVE CHECK VALVE 플러그
30.758	BACK-UP RING, HYDRAULIC VALVE FLOW CONTROL CARTRID 백업링
30.759	BACK-UP RING, HYDRAULIC VALVE FLOW CONTROL CARTRID 백업링
30.760	FLOW CONTROL, HYDRAULIC VALVE AUX SECTION (1ST AUX 플로우컨트롤
30.923	SHIM, RELIEF VALVE ASSEMBLY SPRING 심
93.387	WASHER, HYDRAULIC VALVE SPOOL CENTERING SPRING COV 와셔

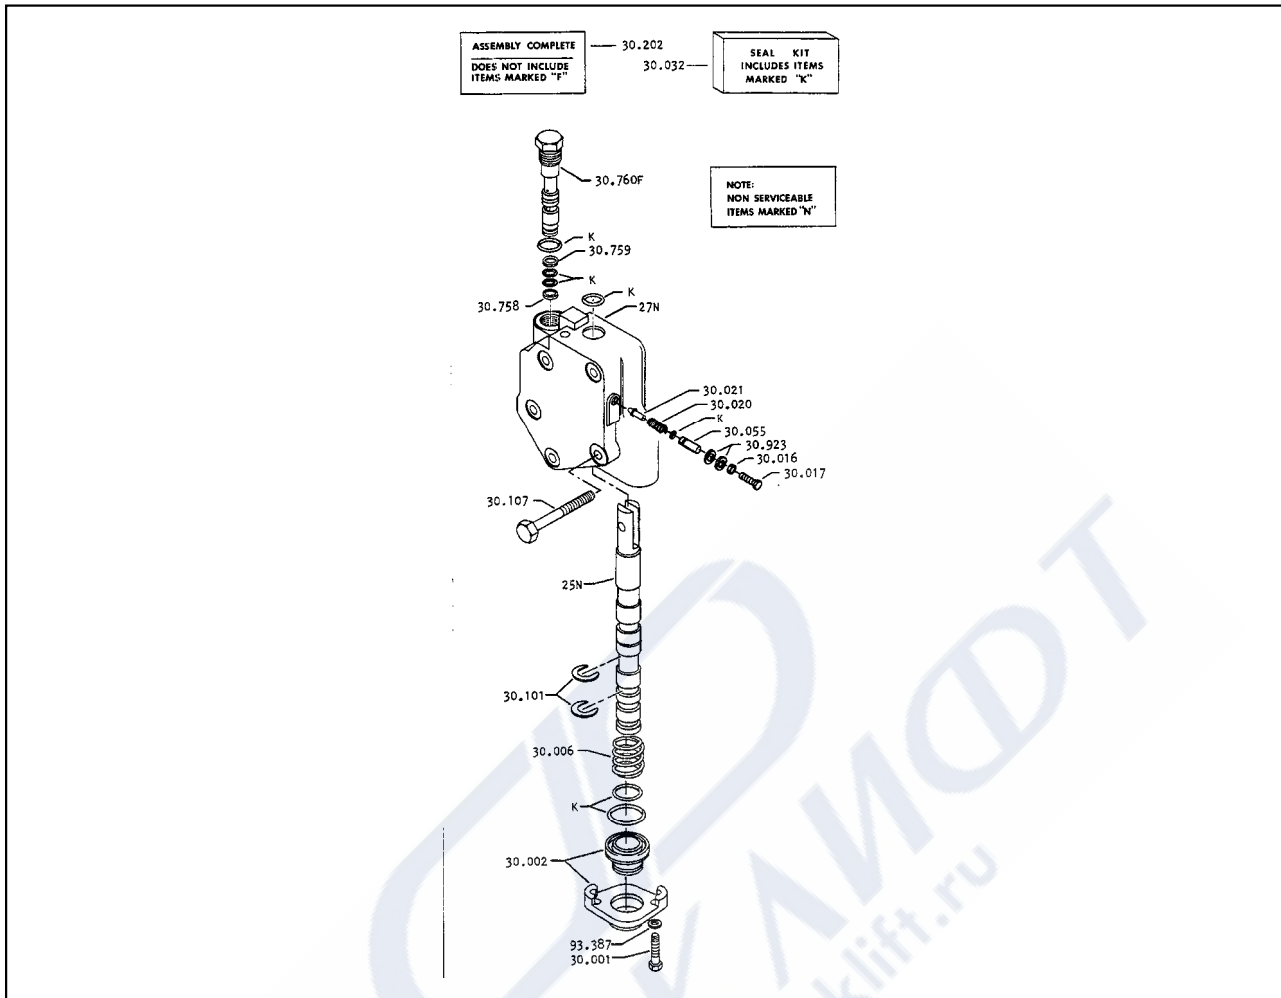 

30.001	FASTENER, SPRING COVER 패스너
30.002	COVER, SPOOL CENTERING SPRING 커버
30.006	SPRING, VALVE SPOOL CENTERING 스프링
30.016	NUT, POPPET ADJUSTING SCREW LOCK 너트
30.017	SCREW, POPPET ADJUSTING 스크류
30.020	SPRING, RELIEF VALVE ASSEMBLY 스프링
30.021	POPPET, RELIEF 포펫
30.032	SEAL KIT, HYDRAULIC VALVE SECTION (INLET) 셀킷
30.055	PLUNGER, POPPET 플런저


30.101	RETAINER, SPOOL CENTERING SPRING 리테이너
30.107	FASTENER, VALVE THRU 패스너
30.202	VALVE SECTION, 1ST AUXILIARY 밸브
30.758	BACK-UP RING, HYDRAULIC VALVE FLOW CONTROL CARTRID 백업링
30.759	BACK-UP RING, HYDRAULIC VALVE FLOW CONTROL CARTRID 백업링
30.760	FLOW CONTROL, HYDRAULIC VALVE AUX SECTION (1ST AUX 플로우컨트롤
30.923	SHIM, RELIEF VALVE ASSEMBLY SPRING 심
93.387	WASHER, HYDRAULIC VALVE SPOOL CENTERING SPRING COV 와셔

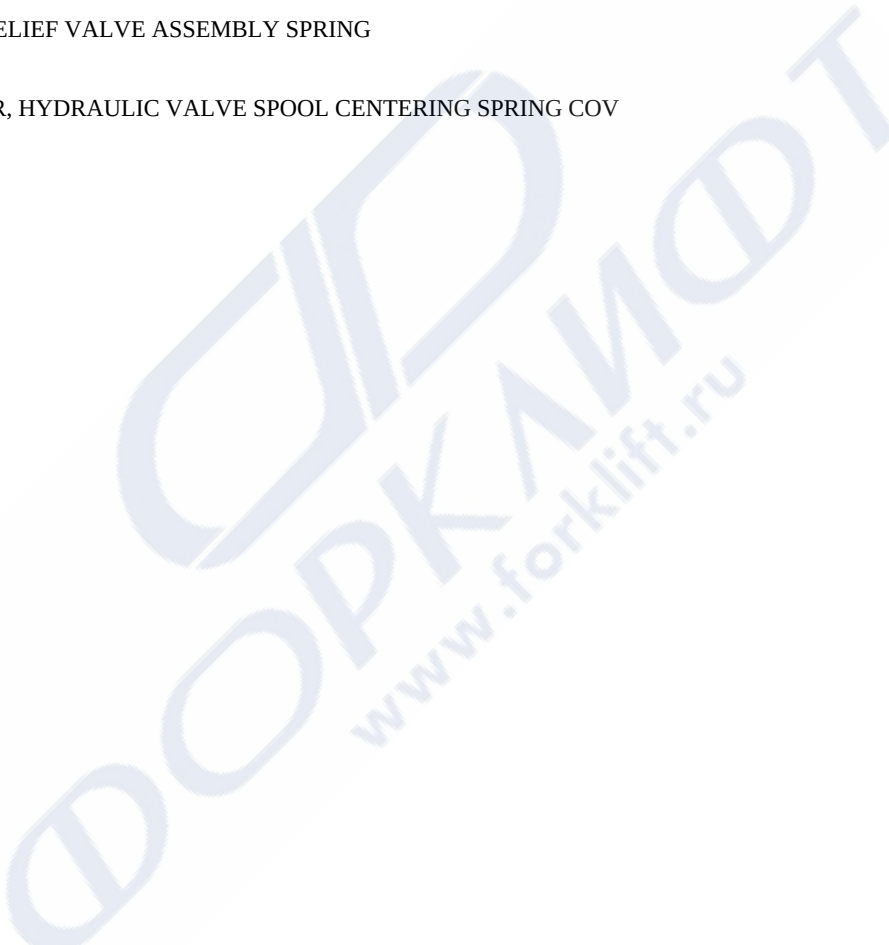 

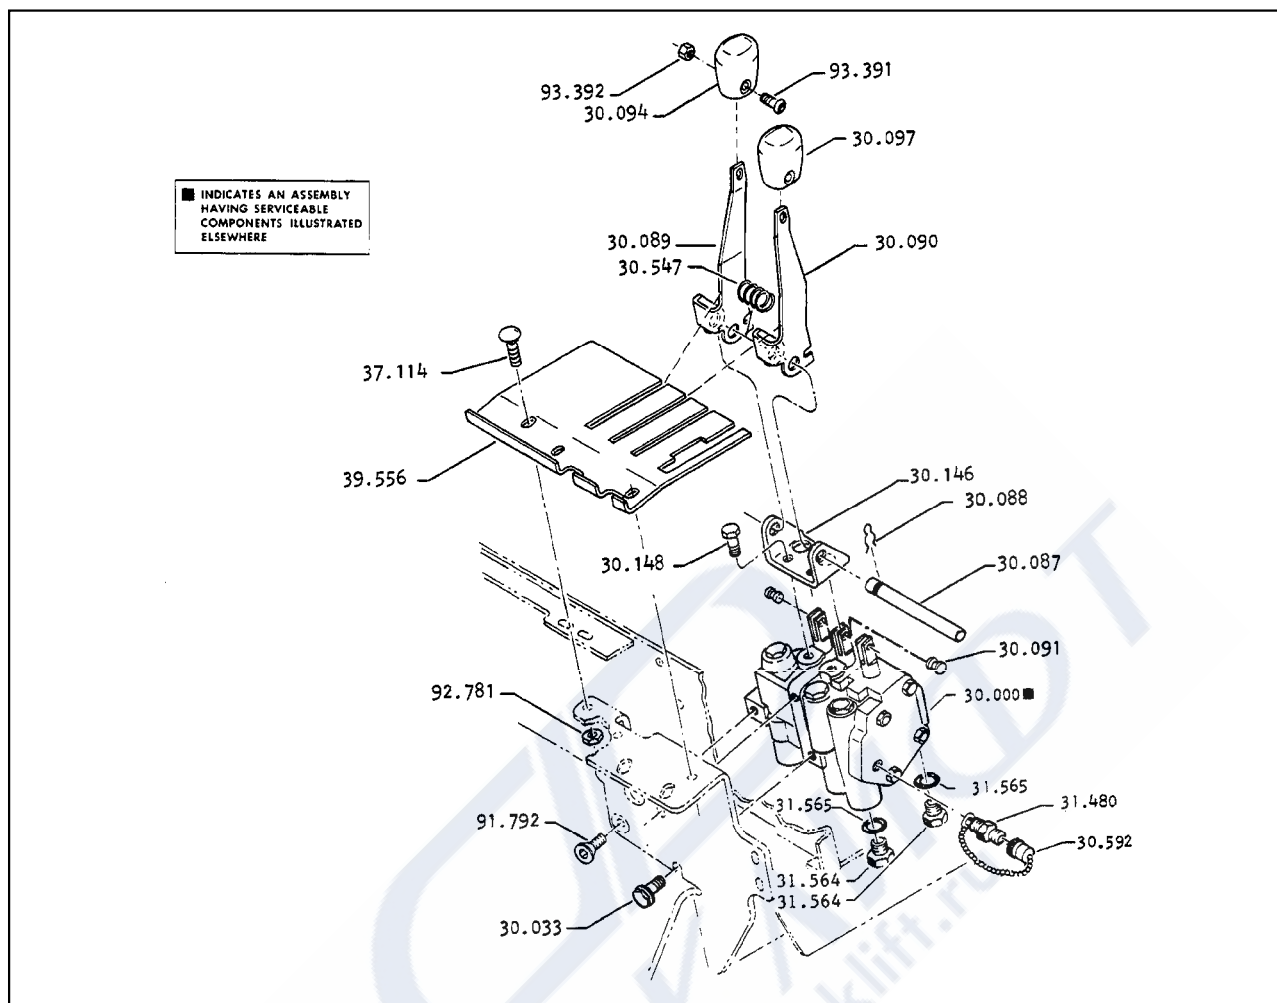 


30.000	VALVE ASSEMBLY, HYDRAULIC 밸브
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀
30.088	FASTENER, VALVE CONTROL LEVER PIVOT PIN 패스너
30.089	LEVER, LIFT CONTROL 레버
30.090	LEVER, TILT CONTROL 레버
30.091	FASTENER, CLEVIS TO TILT VALVE SPOOL 패스너
30.094	KNOB, LIFT CONTROL LEVER 노브
30.097	KNOB, TILT CONTROL LEVER 노브

30.146	BRACKET, CONTROL LINKAGE LOWER 브라켓
30.148	FASTENER, CONTROL LINKAGE BRACKET 패스너
30.547	SPRING, LIFT CONTROL LEVER 스프링
30.564	FITTING, VALVE PORT "B" 피팅
30.592	RETAINER, 1ST AUXILIARY VALVE ROD LEVER 리테이너
31.480	PLUG, PRESSURE GAUGE PORT 플러그
31.564	PLUG, AUXILIARY VALVE PRESSURE PORTS 플러그
31.565	SEAL, AUXILIARY VALVE DISCHARGE PORT 씰
37.114	FASTENER, VALVE LINKAGE ACCESS COVER 패스너
39.556	COVER, VALVE LINKAGE ACCESS 커버
91.792	BOLT, HYDRAULIC VALVE MOUNTING 볼트
92.781	NUT, HYDRAULIC VALVE ACCESS COVER FASTENER 너트
93.391	FASTENER, VALVE CONTROL LEVER KNOB 패스너
93.392	NUT, VALVE CONTROL LEVER KNOB FASTENER 너트

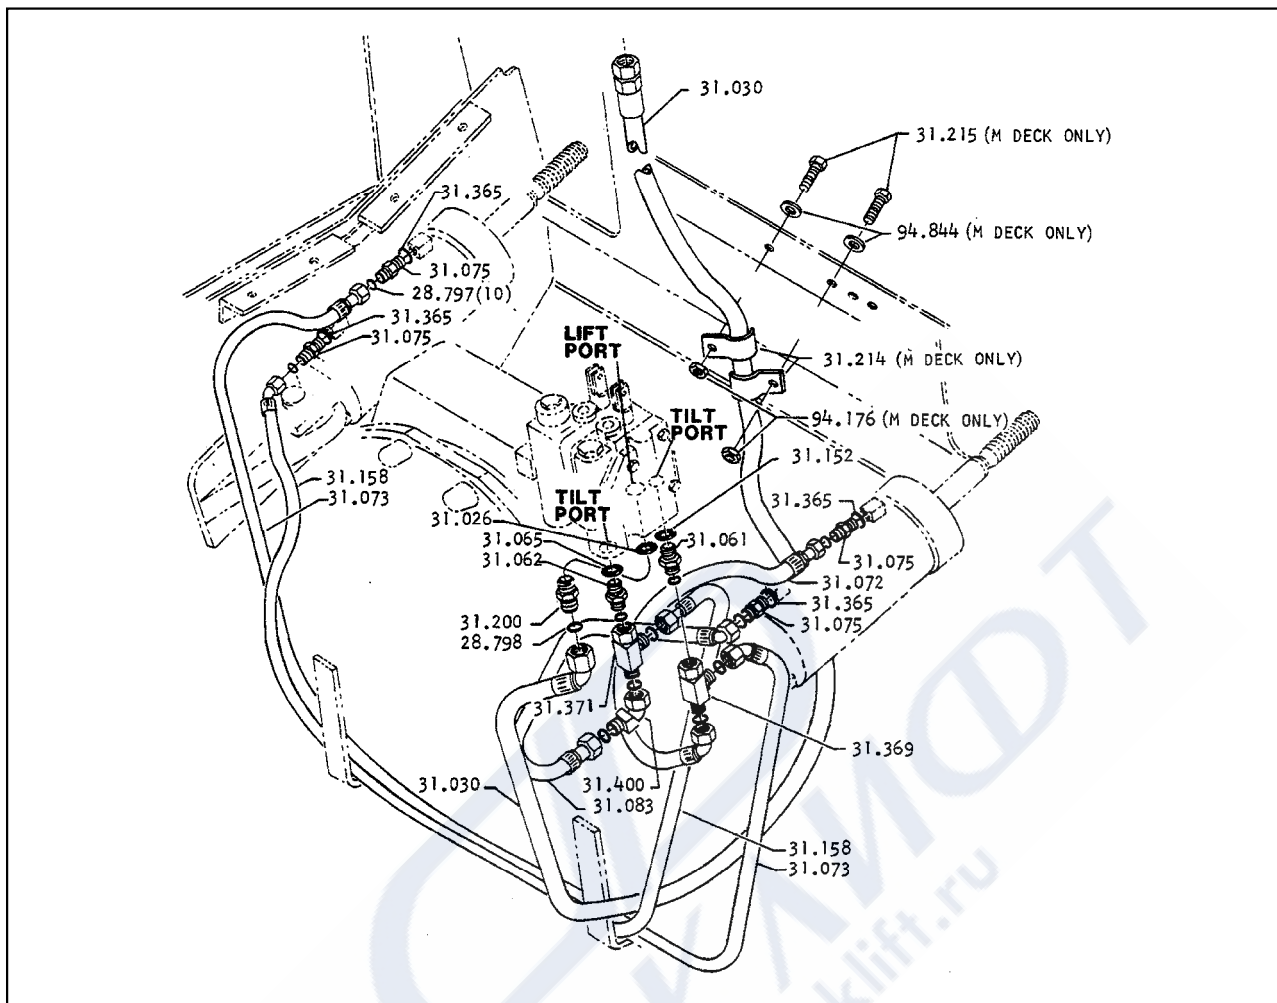 

- | | |
|--------|--|
| 28.797 | SEAL, MAIN VALVE TILT PORT LINE FITTING
씰 |
| 28.798 | SEAL, MAIN VALVE LIFT PORT LINE FITTING
씰 |
| 31.026 | SEAL, MAIN VALVE LOWER (LIFT) PORT
씰 |
| 31.030 | LINE, VALVE TO LIFT CYLINDER
라인 |
| 31.061 | FITTING, VALVE TILT PORT "A"
피팅 |
| 31.062 | FITTING, VALVE TILT PORT "B"
피팅 |
| 31.065 | SEAL, VALVE TILT PORT "B"
씰 |
| 31.072 | LINE, RH TILT CYLINDER ROD PORT
라인 |
| 31.073 | LINE, LH TILT CYLINDER ROD PORT
라인 |


31.075	FITTING, RH TILT CYLINDER ROD PORT 피팅
31.083	LINE, RH TILT CYLINDER ANCHOR PORT 라인
31.152	SEAL, TILT VALVE PORT A FITTING 씰
31.158	LINE, LH TILT CYLINDER ANCHOR PORT 라인
31.200	FITTING, MAIN VALVE LIFT PORT 피팅
31.214	CLAMP, LIFT LINE 클램프
31.215	FASTENER, LIFT LINE CLAMP 패스너
31.365	SEAL, RH TILT CYLINDER ROD PORT 씰
31.369	FITTING, VALVE TILT PORT "A" LINE 피팅
31.371	FITTING, VALVE TILT PORT "B" LINE 피팅
31.400	FITTING, VALVE TILT PORT "B" LINE 피팅
94.176	NUT, LIFT CYLINDER HOSE CLAMP FASTENER 너트
94.844	WASHER, LIFT CYLINDER LINE CLAMP FASTENER 와셔

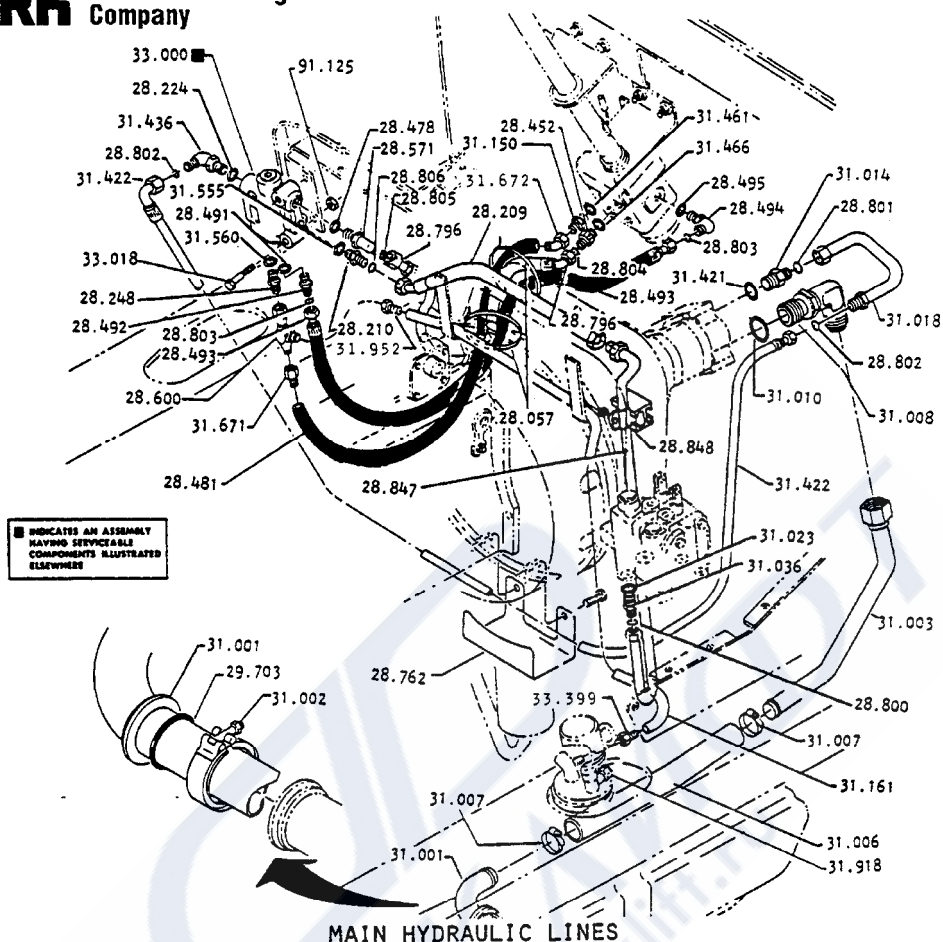 CLARK Material Handling Company


28.057	CLIP, STEERING GEAR LINE 클립	28.762	PROTECTOR, HYDRAULIC LINE 보호장치
28.209	LINE, MAIN VALVE INLET 라인	28.796	LINE, STEER VALVE INLET 라인
28.210	FITTING, MAIN VALVE INLET LINE 피팅	28.800	SEAL, MAIN VALVE INLET PORT FITTING 씰
28.224	SEAL, FLOW CONTROL VALVE INLET PORT 씰	28.801	SEAL, HYD PUMP OUTLET PORT FITTING 씰
28.248	FITTING, FLOW CONTROL VALVE OUTLET PORT 피팅	28.802	SEAL, HYDRAULIC PUMP OUTLET LINE 씰
28.452	CHECK VALVE, POWER STEERING LINE 체크밸브	28.803	SEAL, HYDRAULIC PRESSURE SENSING LINE FITTING 씰
28.478	SEAL, FLOW CONTROL OUTLET PORT 씰	28.804	SEAL, STEER VALVE INLET PORT FITTING 씰
28.481	LINE, FLOW CONTROL OUTLET 라인	28.805	SEAL, FLOW CONTROL VALVE OUTLET PORT FITTING 씰
28.491	SEAL, PRESSURE SENSING LINE FITTING 씰	28.806	SEAL, MAIN VALVE INLET LINE FITTING 씰
28.492	FITTING, PRESSURE SENSING LINE 피팅	28.847	LINE, MAIN VALVE INLET 라인
28.493	LINE, PRESSURE SENSING 라인	28.848	CLAMP, MAIN VALVE INLET LINE 클램프
28.494	FITTING, PRESSURE SENSING LINE 피팅	29.703	SEAL, SUMP TANK 씰
28.495	SEAL, PRESSURE SENSING LINE FITTING 씰	31.001	LINE, SUMP OUTLET 라인
28.571	FITTING, STEER VALVE INLET LINE 피팅	31.002	CLAMP, SUMP OUTLET LINE 클램프
28.600	FITTING, FLOW CONTROL VALVE OUTLET PORT 피팅	31.006	LINE, PUMP INLET 라인

31.007	CLAMP, PUMP INLET LINE 클램프
31.008	FITTING, PUMP INLET 피팅
31.010	SEAL, PUMP INLET PORT 씰
31.014	FITTING, PUMP OUTLET 피팅
31.018	LINE, PUMP OUTLET 라인
31.023	SEAL, VALVE INLET PORT 씰
31.036	FITTING, MAIN VALVE INLET PORT 피팅
31.150	FITTING, STEER VALVE DISCHARGE PORT 피팅
31.161	LINE, POWER STEERING SUMP RETURN 라인
31.421	SEAL, PUMP OUTLET PORT FITTING 씰
31.422	LINE, PUMP OUTLET (COVER END) 라인
31.436	FITTING, PUMP OUTLET LINE 피팅
31.461	SEAL, STEER VALVE DISCHARGE PORT 씰
31.466	SEAL, POWER STEERING INLET PORT FTG 씰
31.555	SEAL, FLOW CONTROL VALVE HIGH PRESS OUTLET 씰
31.560	SEAL, FLOW CONTROL VALVE DISCHARGE PORT 씰
31.671	COUPLING, STEER VALVE SUMP RETURN LINE 커플링
31.672	COUPLING, STEER VALVE SUMP RETURN LINE 커플링
31.918	FITTING, SUMP RETURN PORT 피팅
31.952	COUPLING, SUMP RETURN LINE 커플링
33.000	VALVE ASSEMBLY, FLOW CONTROL 밸브
33.018	FASTENER, FLOW VALVE 패스너
33.599	FITTING, REMOTE CONTROL VALVE DISCHARGE LINE 피팅
91.125	NUT, FLOW CONTROL 너트




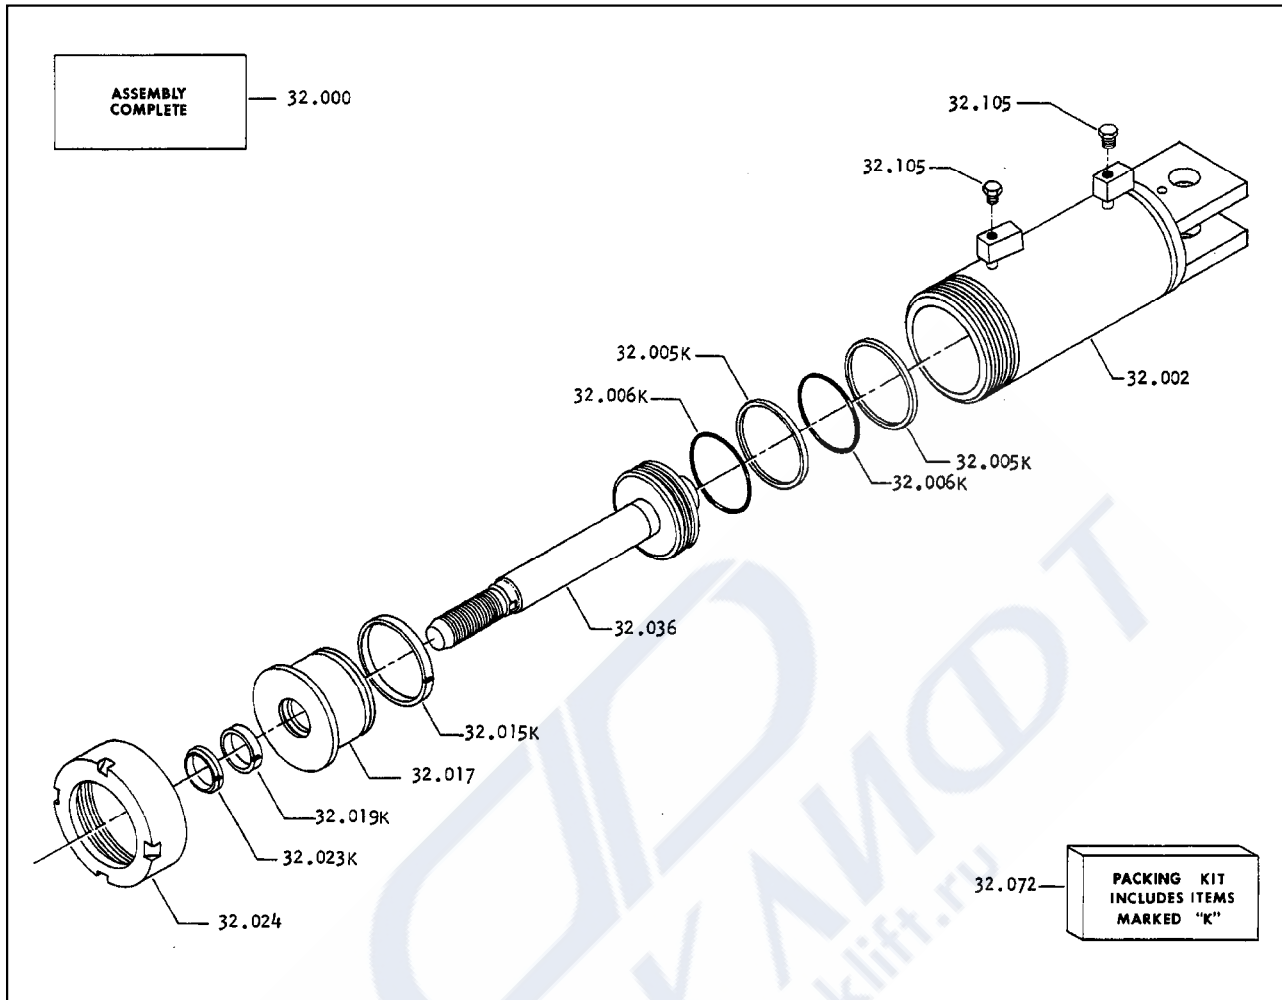 

32.000	CYLINDER ASSEMBLY, TILT 실린더
32.002	CYLINDER ASSEMBLY, WELDED 실린더
32.005	U-CUP, TILT CYLINDER PISTON U컵
32.006	RING, TILT CYLINDER PISTON U-CUP BACK UP 링
32.015	SEAL, TILT CYLINDER GLAND 셀
32.017	GLAND, TILT CYLINDER 그랜드
32.019	PACKING, TILT CYLINDER GLAND 패킹
32.023	WIPER, TILT CYLINDER ROD 와이퍼
32.024	NUT, TILT CYLINDER GLAND 너트


32.036	ROD & PISTON ASSEMBLY, TILT CYLINDER 로드& 피스톤
32.072	PACKING KIT, TILT CYLINDER 패킹키트
32.105	PLUG, TILT CYLINDER PORT FITTING 플러그




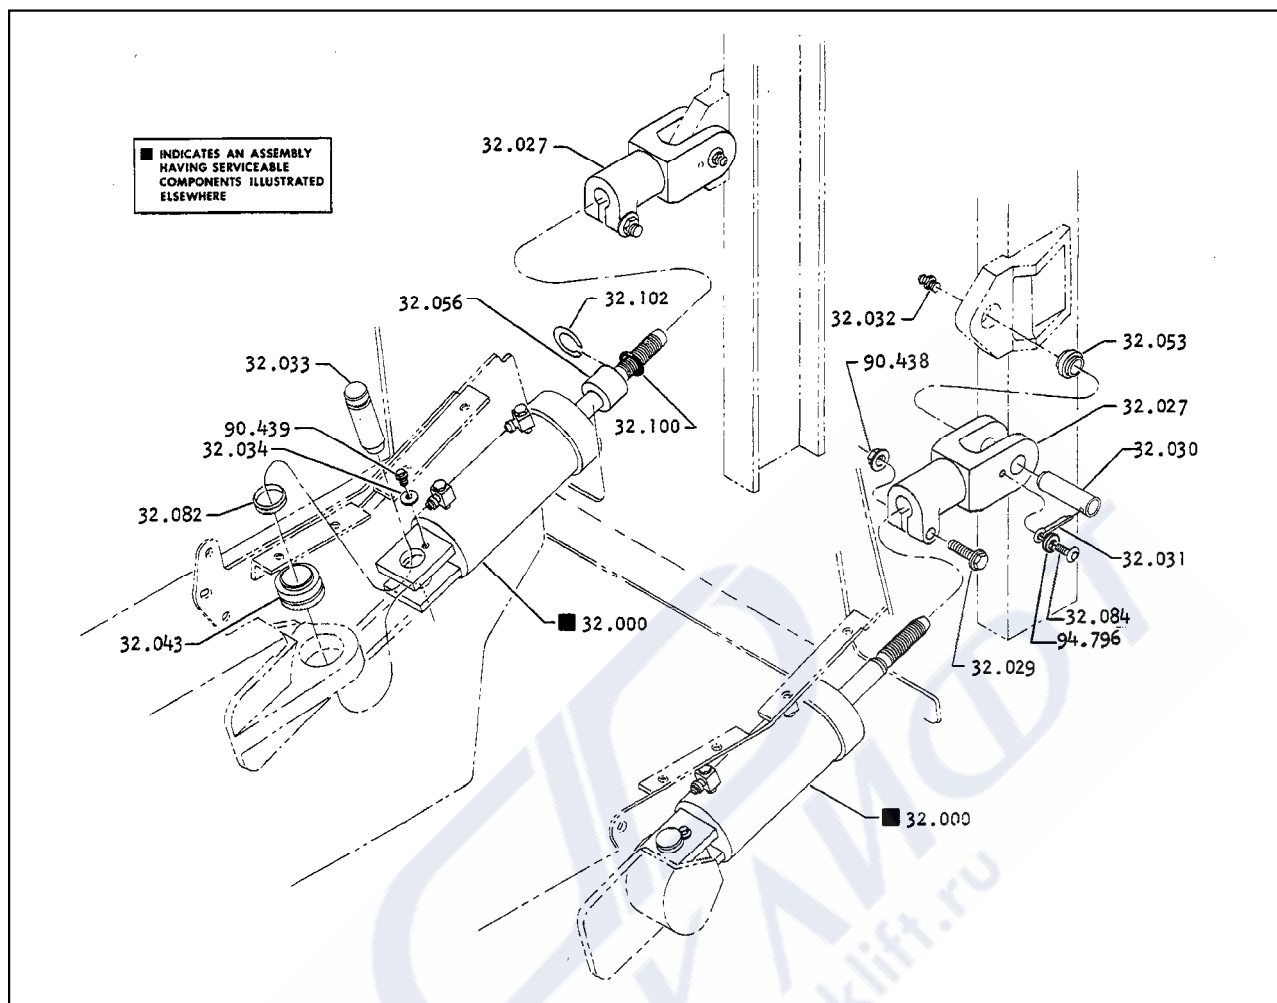 

32.000	CYLINDER ASSEMBLY, TILT 실린더
32.027	END, RH TILT CYLINDER ROD 엔드
32.029	FASTENER, TILT CYLINDER ROD END 패스너
32.030	PIN, TILT CYLINDER TO UPRIGHT 핀
32.031	RETAINER, TILT CYLINDER PIN 리테이너
32.032	FITTING, TILT CYLINDER TO UPRIGHT PIN LUB 피팅
32.033	PIN, TILT CYLINDER REAR MOUNTING RH 핀
32.034	RETAINER, TILT CYLINDER ANCHOR PIN 리테이너
32.043	BEARING, TILT CYLINDER FRAME MOUNTING 베어링

32.053	BEARING, TILT CYLINDER ROD END 베어링
32.056	SPACER, TILT CYLINDER ROD END 스페이서
32.082	SPACER, TILT CYLINDER ANCHOR BEARING (RH) 스페이서
32.084	CAPSCREW, TILT CYLINDER ROD END PIN RETAINER 캡스크류
32.100	DAMPENER, TILT CYLINDER PISTON ROD 댐프너
32.102	SHIM, TILT CYLINDER STROKE ADJUSTING 심
90.438	NUT, TILT CYLINDER ROD END FASTENER 너트
90.439	BOLT, TILT CYLINDER TO FRAME PIN LOCK 볼트
94.796	WASHER, TILT CYLINDER ROD END PIN RETAINER FASTENER 와셔

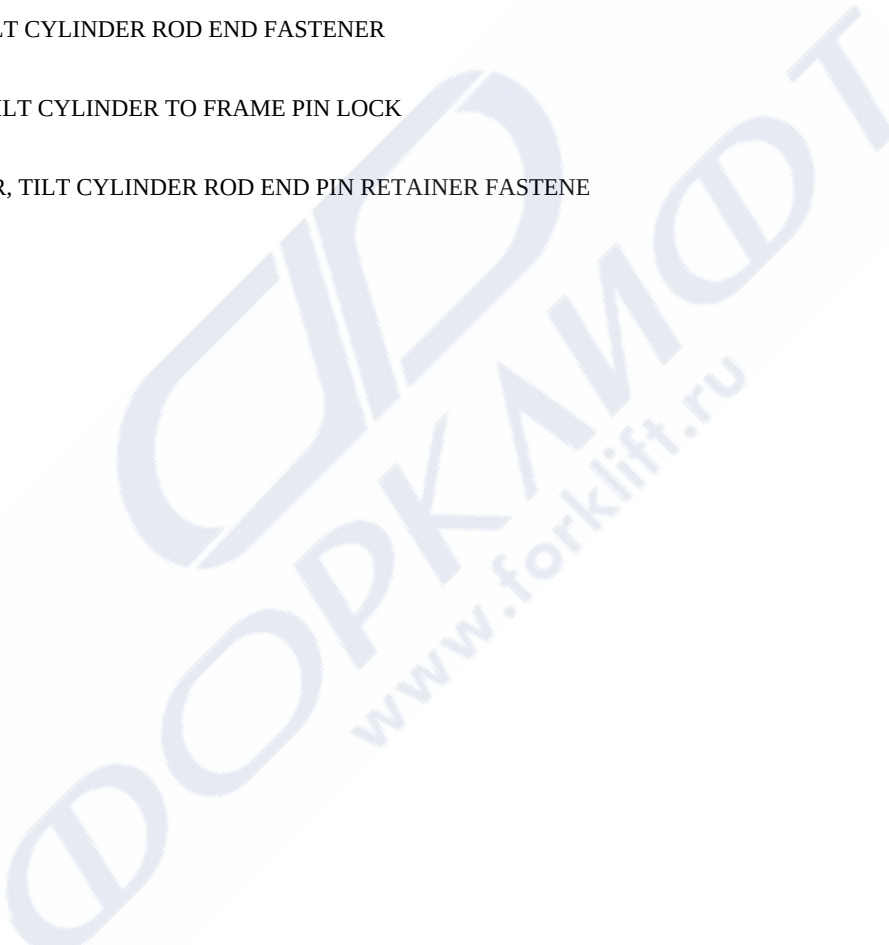 


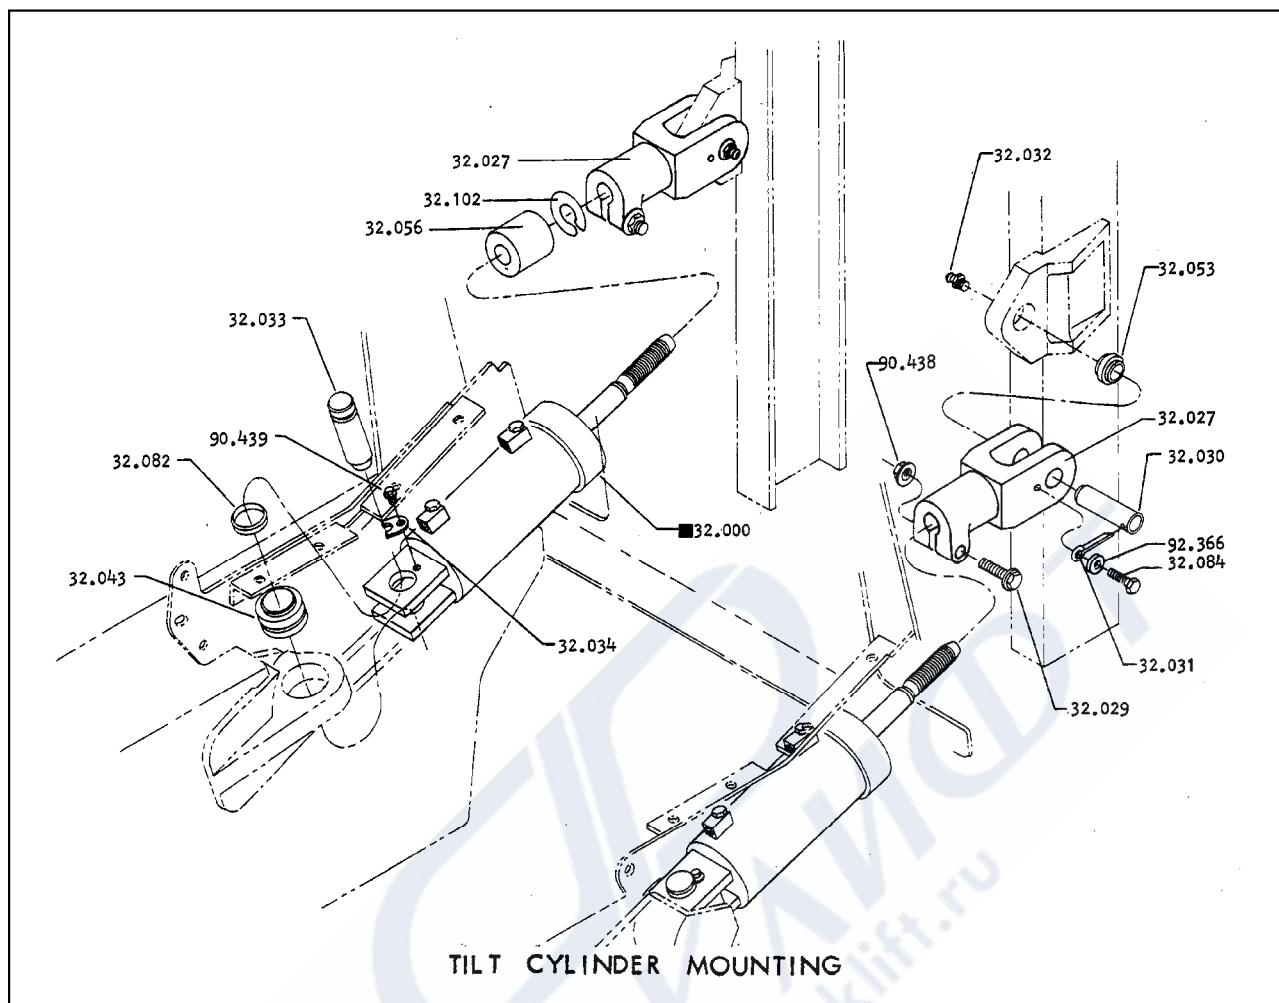 


32.000	CYLINDER ASSEMBLY, TILT 실린더
32.027	END, RH TILT CYLINDER ROD 엔드
32.029	FASTENER, TILT CYLINDER ROD END 패스너
32.030	PIN, TILT CYLINDER TO UPRIGHT 핀
32.031	RETAINER, TILT CYLINDER PIN 리테이너
32.032	FITTING, TILT CYLINDER TO UPRIGHT PIN LUB 피팅
32.033	PIN, TILT CYLINDER REAR MOUNTING RH 핀
32.034	RETAINER, TILT CYLINDER ANCHOR PIN 리테이너
32.043	BEARING, TILT CYLINDER FRAME MOUNTING 베어링

32.053	BEARING, TILT CYLINDER ROD END 베어링
32.056	SPACER, TILT CYLINDER ROD END 스페이서
32.082	SPACER, TILT CYLINDER ANCHOR BEARING (RH) 스페이서
32.084	CAPSCREW, TILT CYLINDER ROD END PIN RETAINER 캡스크류
32.102	SHIM, TILT CYLINDER STROKE ADJUSTING 심
90.438	NUT, TILT CYLINDER ROD END FASTENER 너트
90.439	BOLT, TILT CYLINDER TO FRAME PIN LOCK 볼트
92.366	WASHER, TILT CYLINDER ROD END FASTENER 와셔



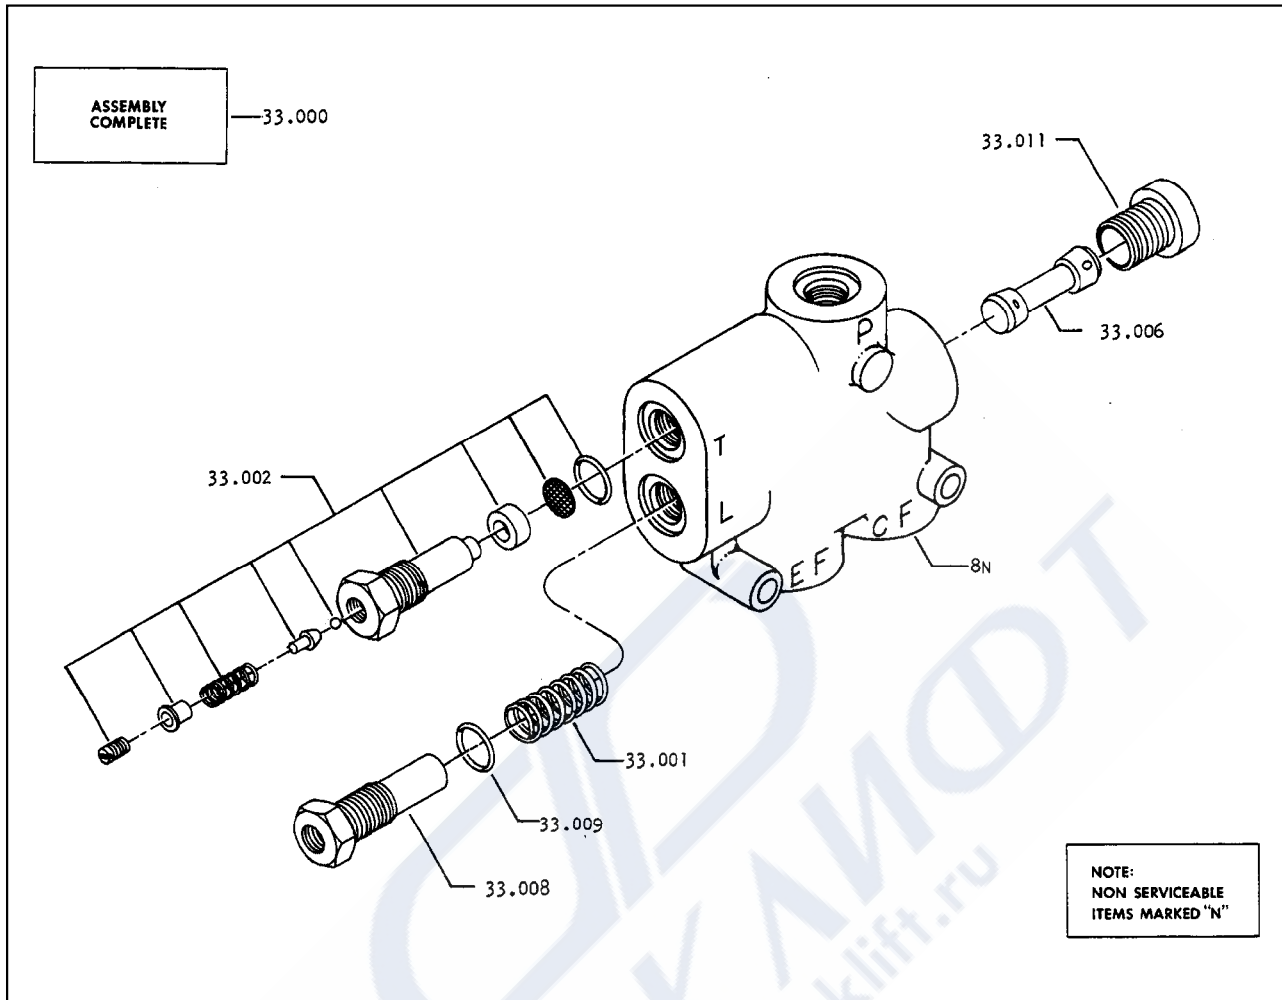 


33.000	VALVE ASSEMBLY, FLOW CONTROL 밸브
33.001	SPRING, FLOW CONTROL VALVE 스프링
33.002	VALVE SUB-ASSEMBLY, FLOW CONTROL 밸브서브
33.006	PISTON, FLOW VALVE PISTON 피스톤
33.008	PLUG, FLOW VALVE 플러그
33.009	SEAL KIT, FLOW VALVE 셀킷
33.011	PLUG, FLOW VALVE PORT 플러그

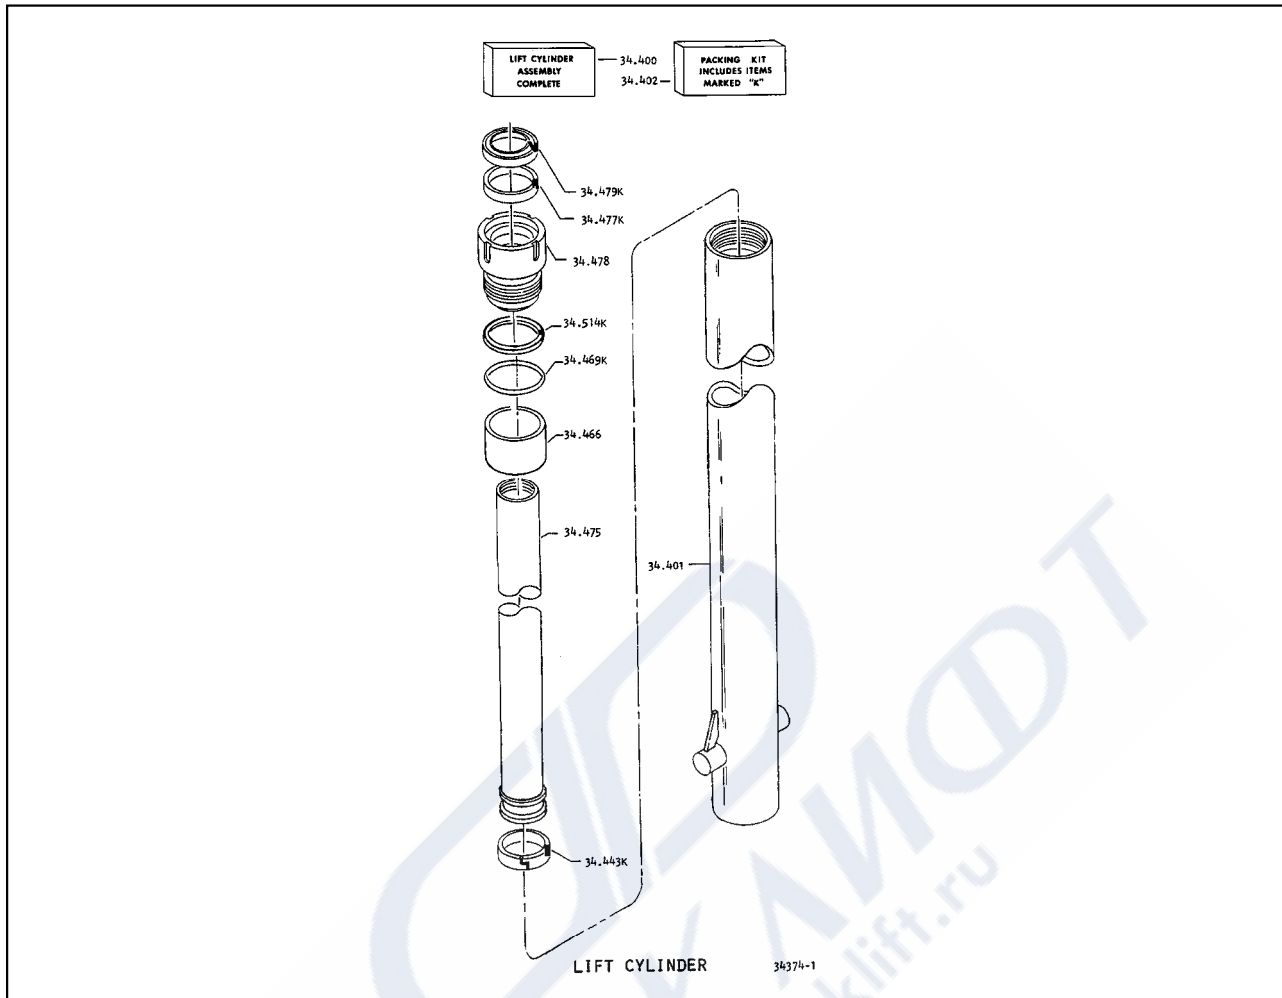 


34.400	CYLINDER ASSEMBLY, LIFT 실린더
34.401	BARREL, LIFT CYLINDER 배럴
34.402	SEAL & PACKING KIT, LIFT CYLINDER 씰& 팩킹키트
34.443	RING, LIFT CYLINDER PISTON WEAR 링
34.466	SPACER, LIFT CYLINDER FEED TUBE 스페이서
34.469	SEAL, LIFT CYLINDER GLAND 씰
34.475	ROD, LIFT CYLINDER 로드
34.477	PACKING, LIFT CYLINDER FEED TUBE 패킹
34.478	GLAND, LIFT CYLINDER 그랜드

34.479	WIPER, LIFT CYLINDER FEED TUBE 와이퍼
34.514	BACK-UP RING, LIFT CYLINDER GLAND SEAL 백업링




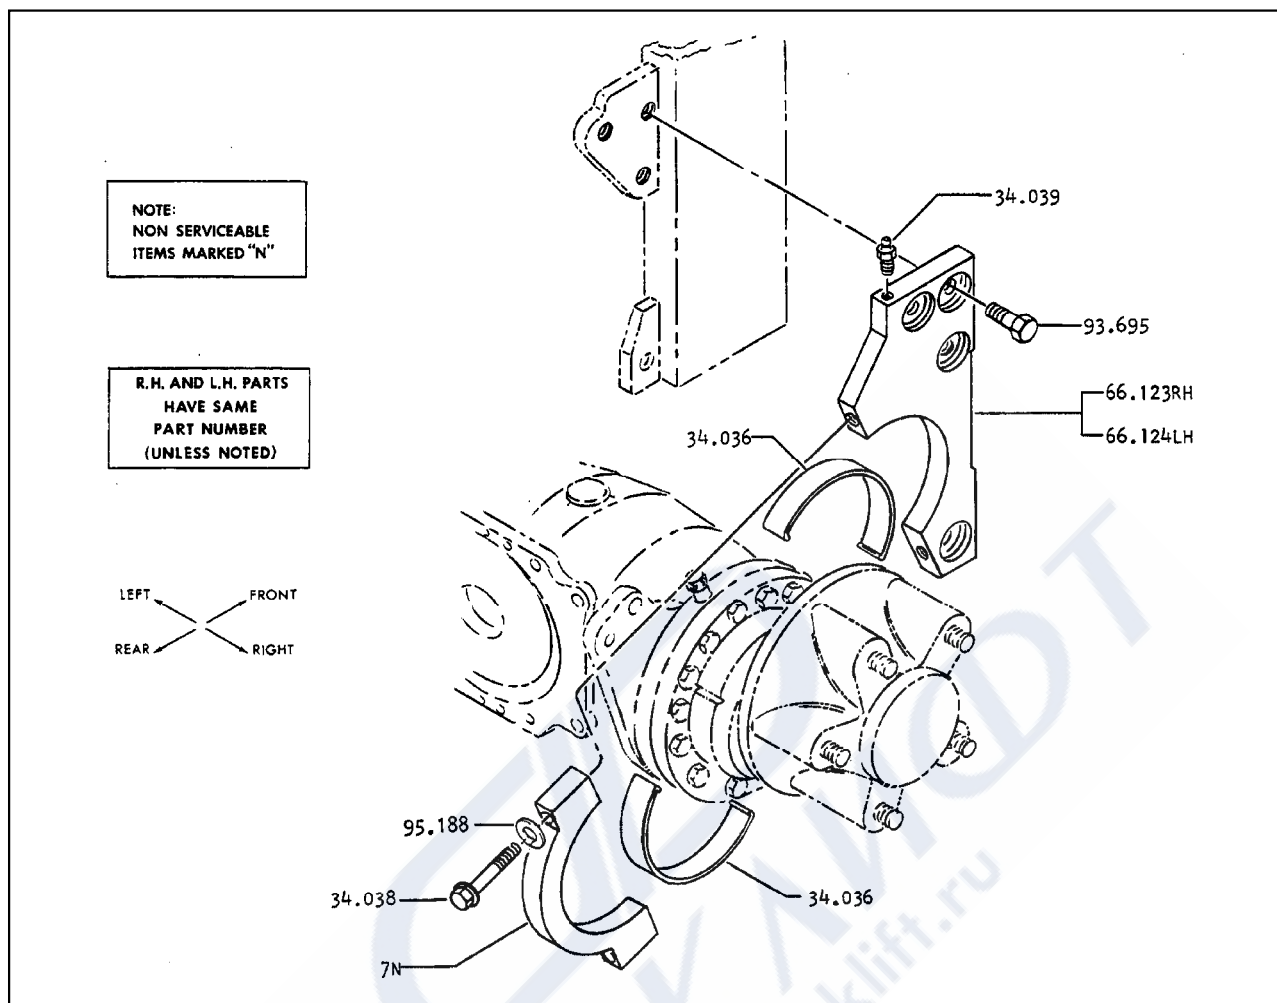 

34.036	BUSHING, UPRIGHT TRUNNION 부싱
34.038	FASTENER, UPRIGHT TRUNNION CAP 패스너
34.039	FITTING-LUB, UPRIGHT TRUNNION 피팅
66.123	TRUNNION, UPRIGHT RH 트러니언
66.124	TRUNNION, UPRIGHT LH 트러니언
93.695	FASTENER, UPRIGHT TRUNNION 패스너
95.188	WASHER, UPRIGHT SUPPORT LOCK FASTENER 와셔

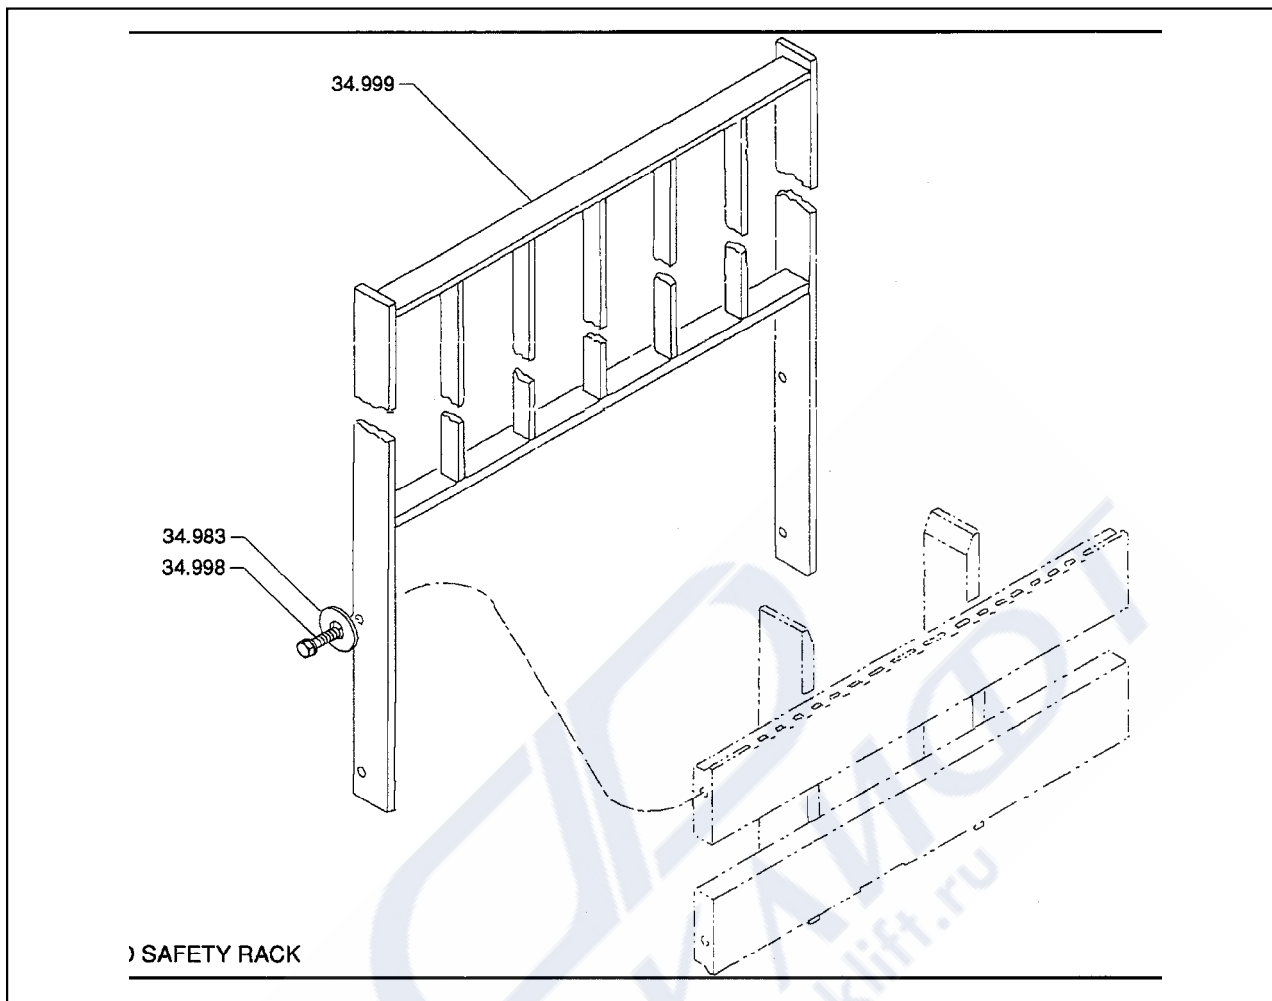 


- | | |
|--------|---|
| 34.983 | WASHER, LOAD SAFETY BACK REST
와셔 |
| 34.998 | FASTENER, LOAD SAFETY BACK REST
패스너 |
| 34.999 | BACK REST, LOAD SAFETY-COMPLETE
백레스트 |

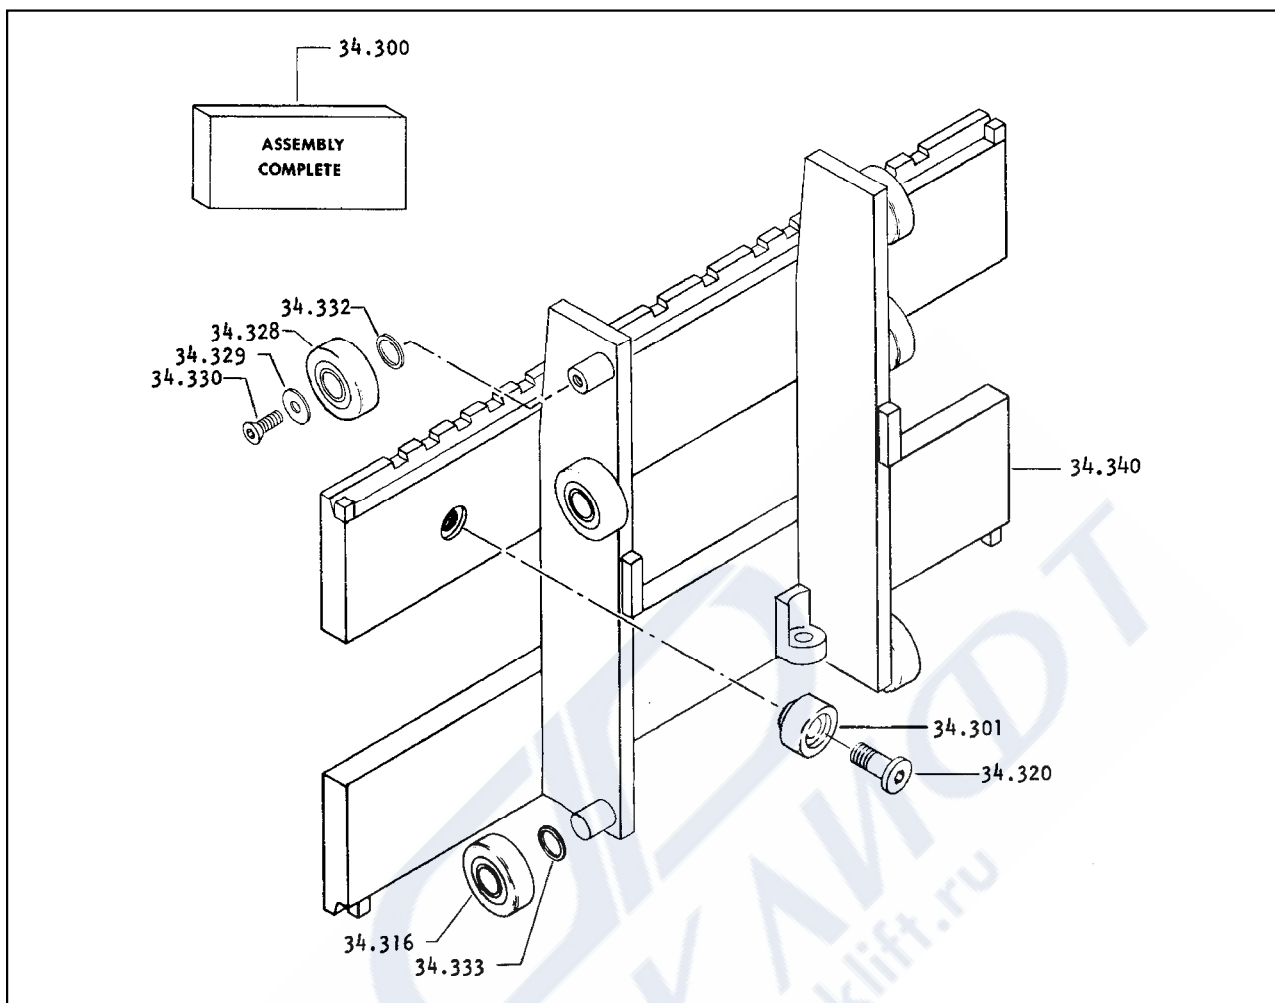 


34.300	ASSEMBLY, FORK BARS & CARRIAGE 캐리지
34.301	ROLLER, CARRIAGE OUTER THRUST 롤러
34.316	ROLLER, CARRIAGE 롤러
34.320	SHAFT, CARRIAGE OUTER THRUST ROLLER 샤프트
34.328	ROLLER, CARRIAGE CAPTIVE 롤러
34.329	RETAINER, CARRIAGE CAPTIVE ROLLER 리테이너
34.330	FASTENER, CARRIAGE CAPTIVE ROLLER RETAINER 패스너
34.332	SHIM, CARRIAGE CAPTIVE ROLLER 심
34.333	SHIM, CARRIAGE ROLLER 심

 34.340 CARRIAGE WELDED ASSEMBLY
캐리지용 접물



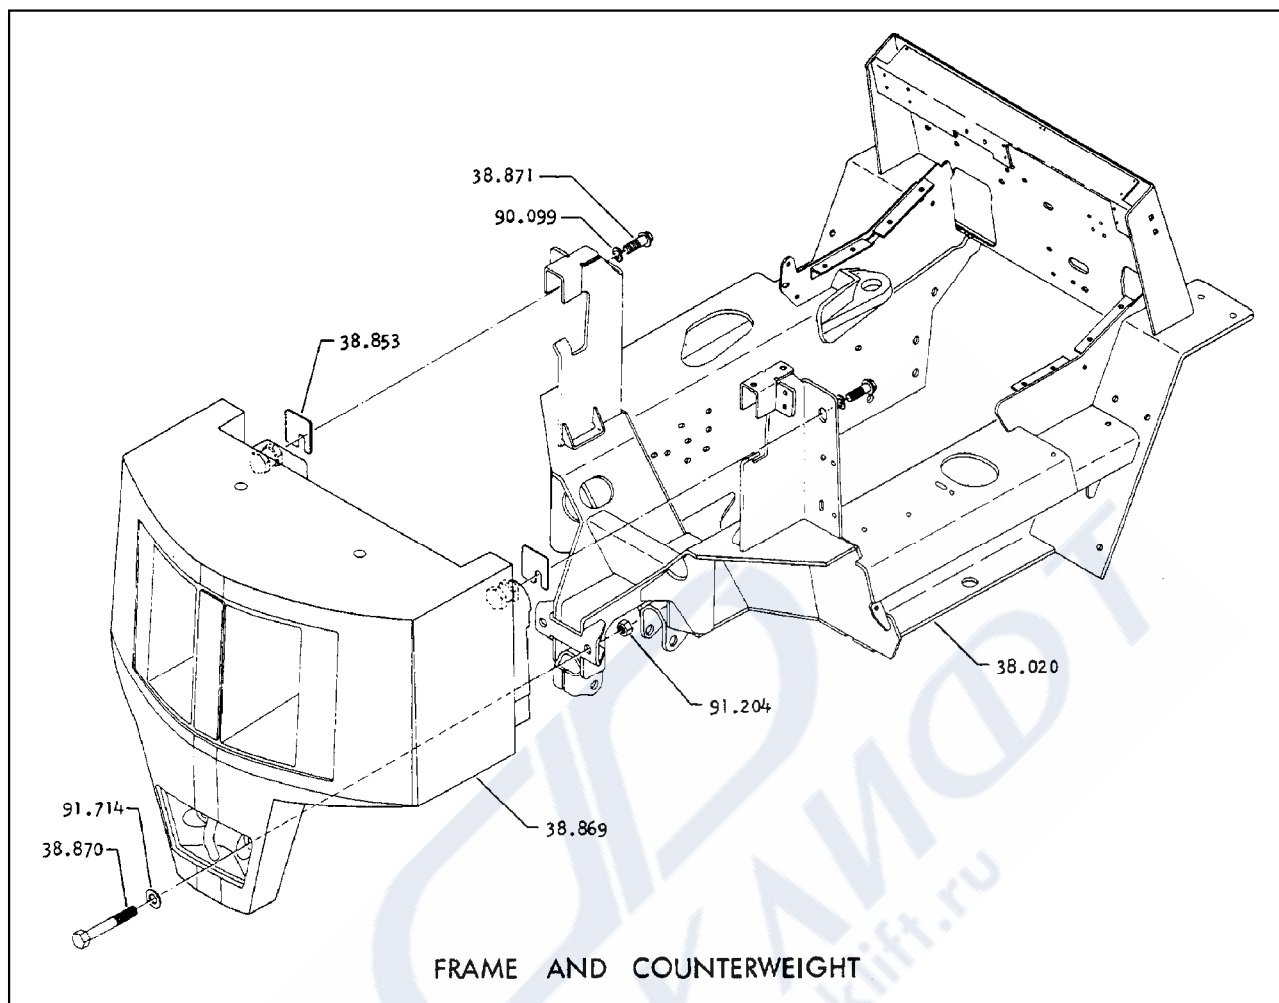


38.020	FRAME ASSEMBLY 프레임
38.853	SHIM, COUNTERWEIGHT 심
38.869	COUNTERWEIGHT 카운터웨이트
38.870	FASTENER, COUNTERWEIGHT (LOWER) 패스너
38.871	FASTENER, COUNTERWEIGHT (UPPER) CONTINUED 패스너
90.099	LOCKWASHER, COUNTERWEIGHT TO FRAME FASTENER 로크와셔
91.204	NUT, COUNTERWEIGHT TO FRAME FASTENER 너트
91.714	WASHER, COUNTERWEIGHT FASTENER 와셔

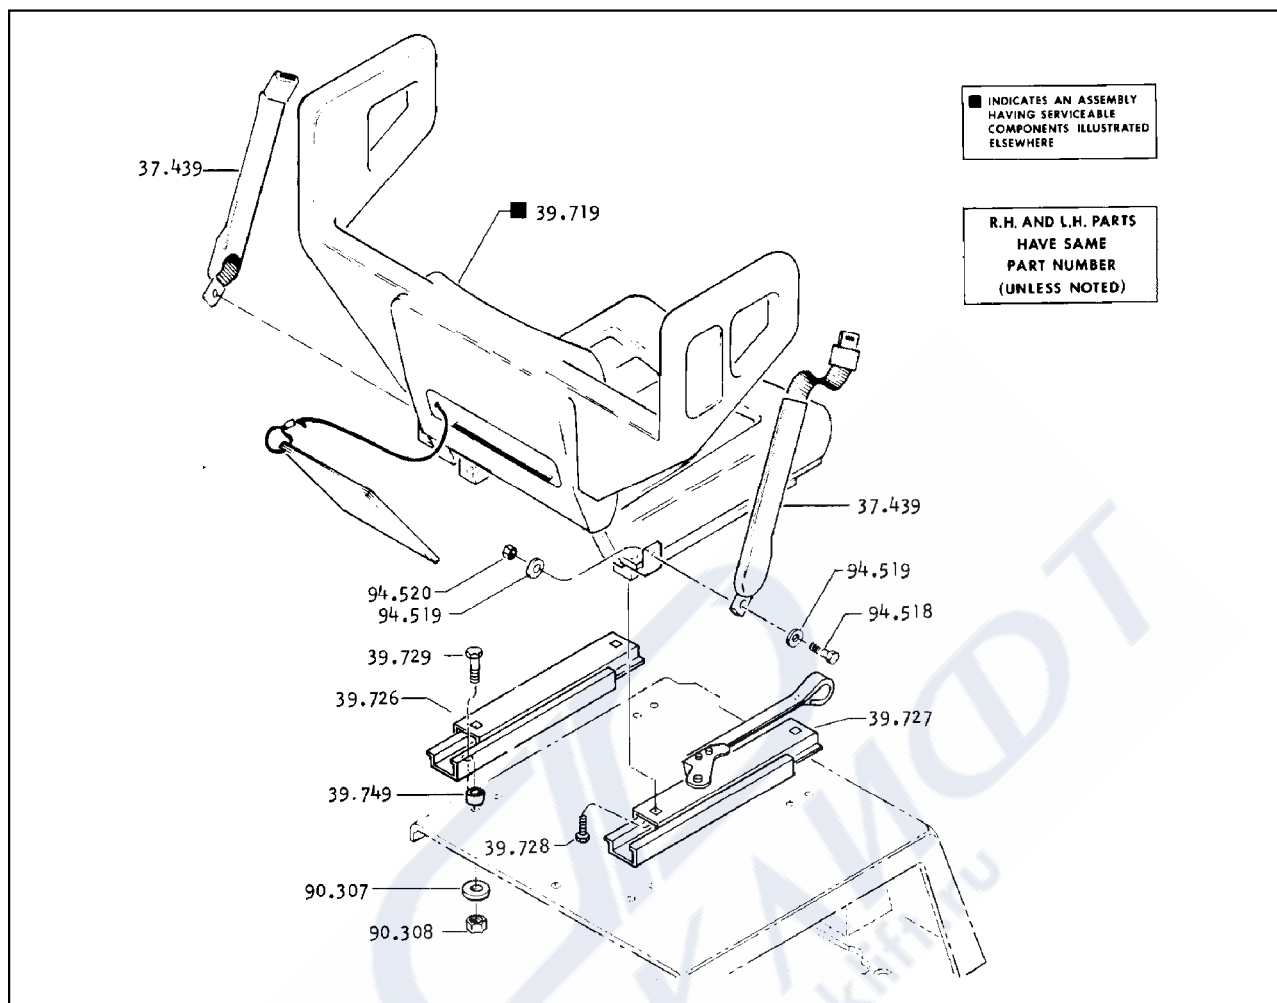 

37.439	SAFETY BELT, SEAT 안전벨트
39.719	SEAT ASSEMBLY 시트
39.726	ADJUSTOR, SEAT 어드저스터
39.727	ADJUSTOR, SEAT WITH LATCH 어드저스터
39.728	FASTENER, SEAT FRAME TO ADJUSTOR 패스너
39.729	FASTENER, ADJUSTOR TO SEAT SUPPORT 패스너
39.749	SPACER, ADJUSTOR TO SEAT SUPPORT FRONT 스페이서
90.307	LOCKWASHER, ADJUSTOR TO SEAT SUPPORT FASTENER 로크와셔
90.308	NUT, ADJUSTOR TO SEAT SUPPORT FASTENER 너트

94.518	FASTENER, SEAT SAFETY BELT 패스너
94.519	WASHER, SEAT SAFETY BELT FASTENER 와셔
94.520	NUT, SEAT SAFETY BELT FASTENER 너트

 
ФОРКЛИФТ
www.forklift.ru

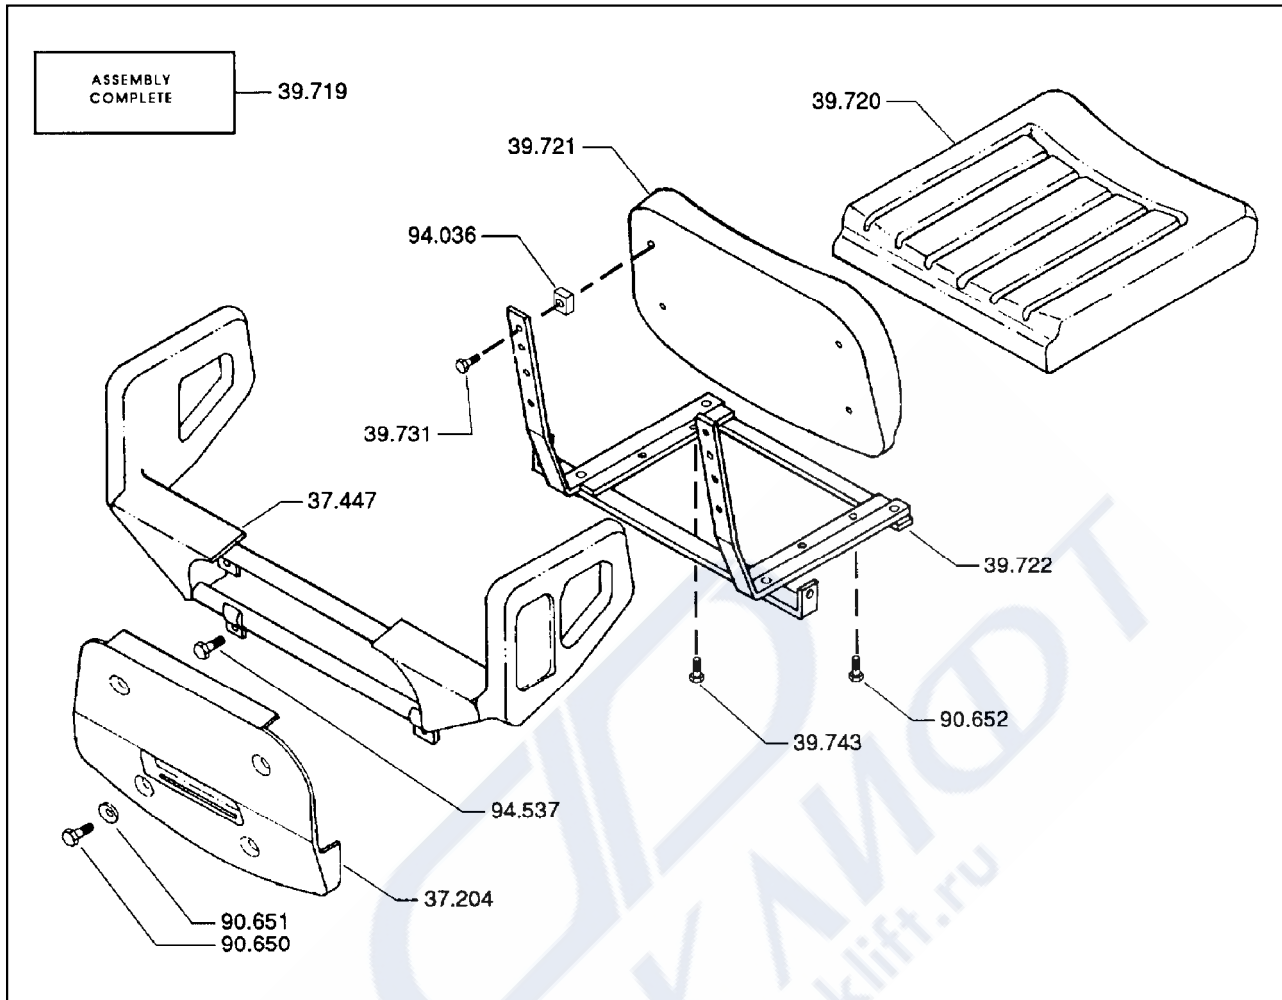

37.204	COVER, SEAT BACK REST CUSHION 커버
37.447	RESTRAINT, OPERATOR SEAT LATERAL 레스트레인트
39.719	SEAT ASSEMBLY 시트
39.720	CUSHION, SEAT 쿠션
39.721	CUSHION, SEAT BACK REST 쿠션
39.722	FRAME ASSEMBLY, SEAT 프레임
39.731	FASTENER, BACK REST CUSHION TO SEAT FRAME 패스너
39.743	FASTENER, SEAT CUSHION 패스너
90.650	BOLT, SEAT BACK REST CUSHION COVER 볼트

90.651	WASHER, SEAT BACK REST CUSHION COVER FASTENER 와셔
90.652	BOLT, LITERATURE TRAY 볼트
94.036	SPACER, SEAT BACK REST COVER FASTENER 스페이서
94.537	FASTENER, OPERATOR SEAT LATERAL RESTRAINT 패스너




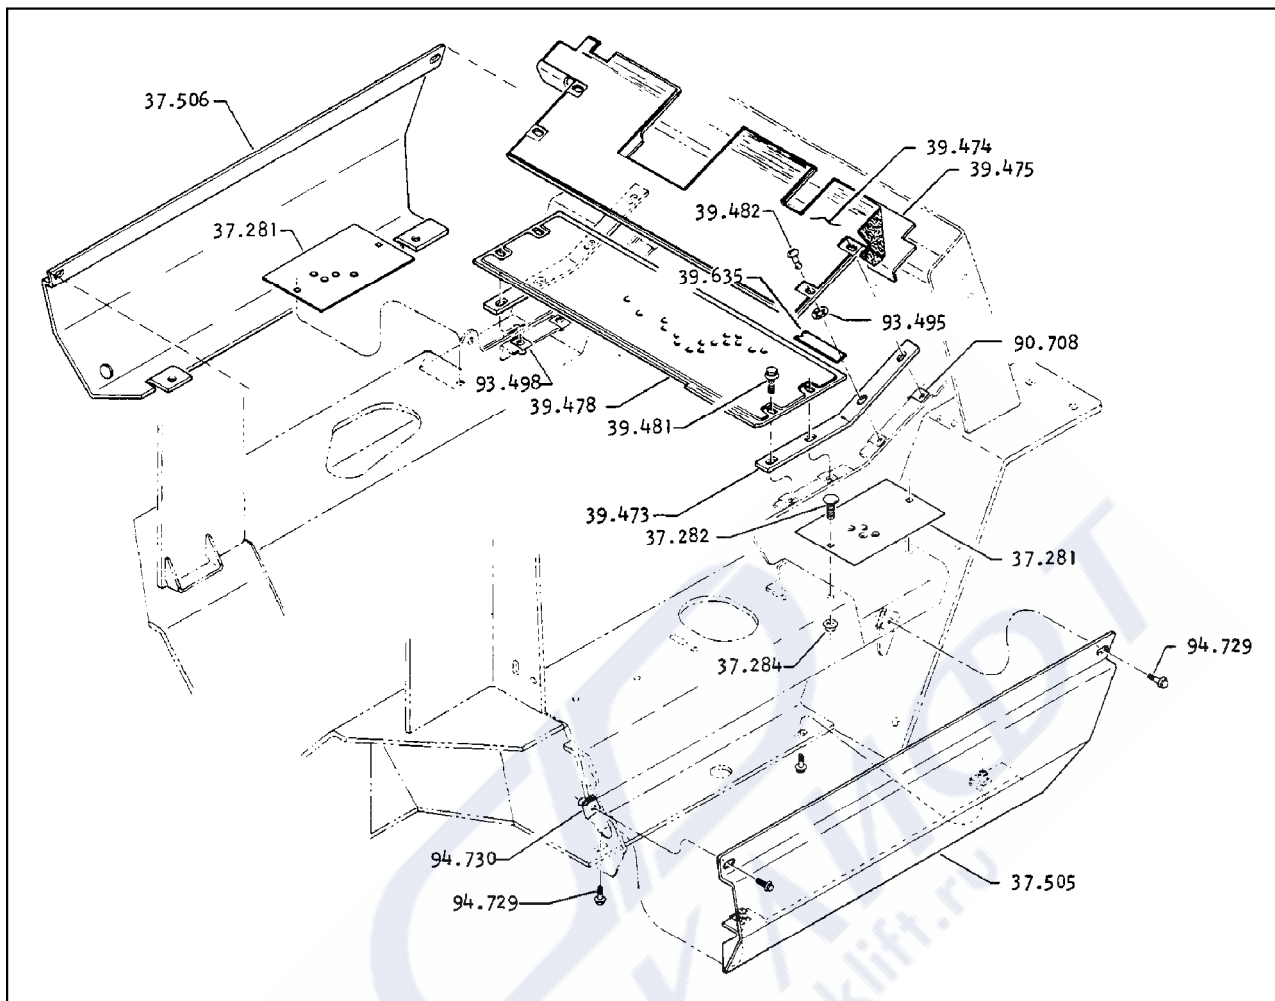 

37.281	STEP, SIDE FRAME 스텝
37.282	BOLT, SIDE FRAME STEP 볼트
37.284	NUT, SIDE FRAME STEP FASTENER 너트
37.505	DOOR, FRAME SIDE COMPARTMENT 도어
37.506	DOOR, FRAME SIDE COMPARTMENT 도어
39.473	DAMPENER, FLOOR PLATE 댐프너
39.474	PAD, FLOOR BOARD NON-SLIP 패드
39.475	PLATE, FRONT FLOOR 플레이트
39.478	PLATE, REAR FLOOR 플레이트

39.481	FASTENER, REAR FLOOR PLATE 패스너
39.482	FASTENER, FRONT FLOOR PLATE 패스너
39.635	DAMPENER, REAR DECK COVER VIBRATION 댐프너
90.708	NUT, FRONT FLOOR PLATE FASTENER 너트
93.495	RETAINER, FRONT FLOOR PLATE FASTENER 리테이너
93.498	NUT, REAR FLOOR PLATE FASTENER 너트
94.729	FASTENER, FRAME SIDE COMPARTMENT DOOR 패스너
94.730	NUT, FRAME SIDE COMPARTMENT DOOR FASTENER 너트




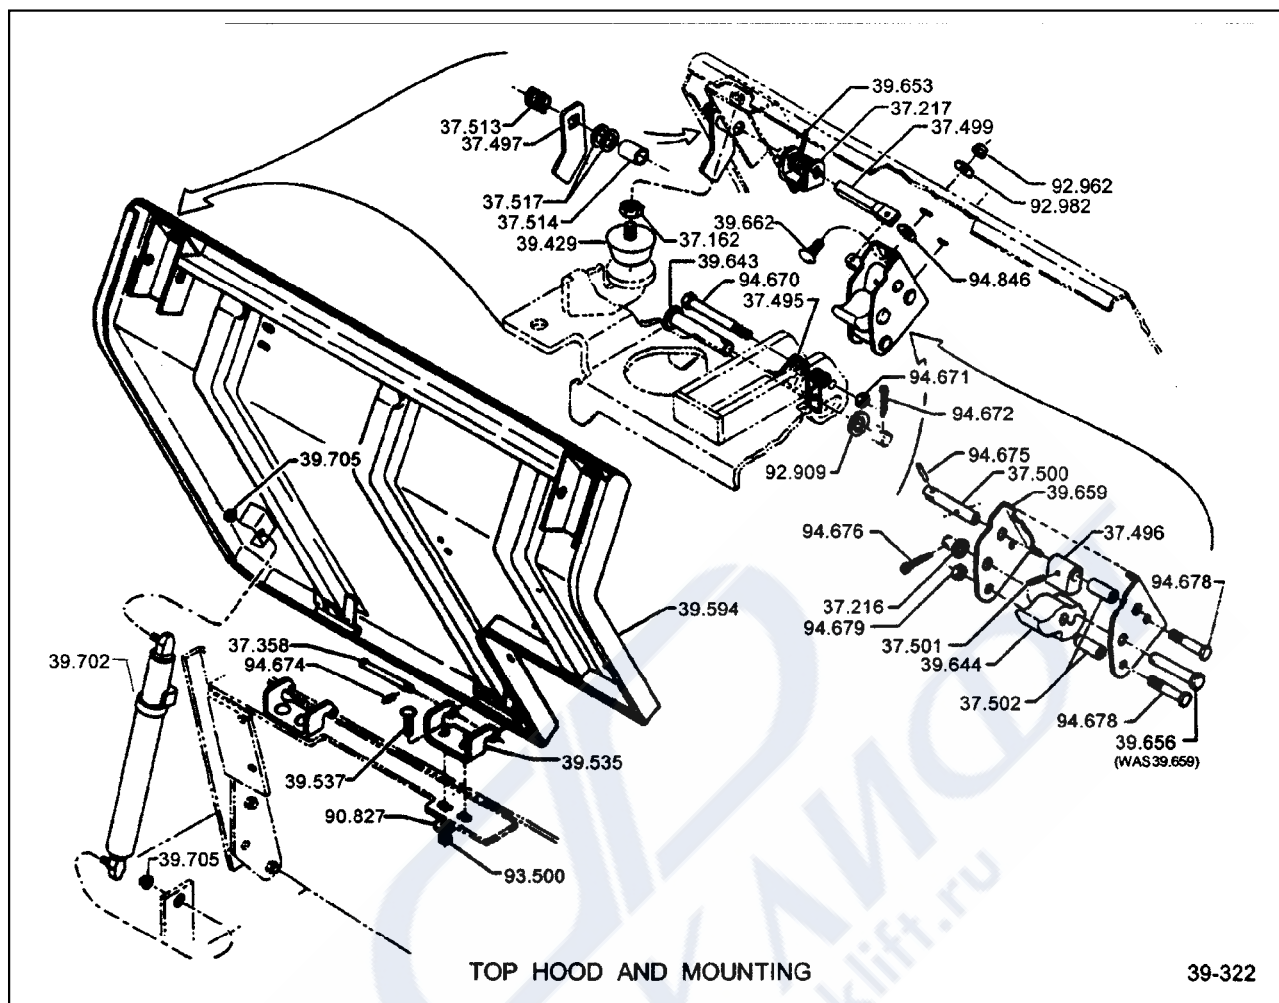 

37.162	FASTENER, HOOD VIBRATION DAMPENER 패스너
37.216	WASHER, TOP HOOD LATCH RETAINER 와셔
37.217	RETAINER, TOP HOOD LATCH SPRING 리테이너
37.358	PIVOT, TOP HOOD 피봇
37.495	SPRING, TOP HOOD LATCH CATCH 스프링
37.496	LOCK, TOP HOOD LATCH 로크
37.497	HANDLE, TOP HOOD LATCH 핸들
37.499	LINK, TOP HOOD LATCH HANDLE 링크
37.500	SHAFT, TOP HOOD LATCH LOCK 샤프트
37.501	PIN, TOP HOOD LATCH LOCK 핀
37.502	SPACER, TOP HOOD LATCH BRACKET 스페이서
37.513	SPRING, TOP HOOD LATCH HANDLE 스프링
37.514	SPACER, TOP HOOD LATCH HANDLE 스페이서
37.517	SPACER, TOP HOOD LATCH HANDLE 스페이서
39.429	DAMPENER, TOP HOOD VIBRATION 댐퍼


39.535	BRACKET, TOP HOOD MOUNTING 브라켓
39.537	FASTENER, TOP HOOD MOUNTING BRACKET 패스너
39.594	HOOD, TOP 후드
39.643	CATCH, TOP HOOD LATCH 캐치
39.644	LATCH, TOP HOOD 래치
39.653	SPRING, TOP HOOD LATCH 스프링
39.656	PIN, TOP HOOD LATCH TO BRACKET 핀
39.659	BRACKET, TOP HOOD LATCH 브라켓
39.662	FASTENER, TOP HOOD LATCH BRACKET 패스너
39.702	PROP, HOOD 지지대
39.705	FASTENER, HOOD PROP 패스너
90.827	WASHER, TOP HOOD MOUNTING BRACKET FASTENER 와셔
92.909	WASHER, TOP HOOD LATCH CATCH FASTENER 와셔
92.962	NUT, TOP HOOD LATCH FASTENER 너트
92.982	WASHER, TOP HOOD LATCH FASTENER 와셔

93.500	NUT, TOP HOOD MOUNTING BRACKET FASTENER 너트
94.670	RETAINER, TOP HOOD LATCH CATCH SPRING 리테이너
94.671	NUT, TOP HOOD LATCH CATCH SPRING RETAINER 너트
94.672	RETAINER, TOP HOOD LATCH CATCH 리테이너
94.674	RETAINER, TOP HOOD PIVOT 리테이너
94.675	RETAINER, TOP HOOD LATCH HANDLE LINK 리테이너
94.676	RETAINER, TOP HOOD LATCH PIN 리테이너
94.678	FASTENER, TOP HOOD LATCH BRACKET SPACER 패스너
94.679	NUT, TOP HOOD LATCH BRACKET SPACER FASTENER 너트
94.846	WASHER, TOP HOOD LATCH BRACKET FASTENER 와셔

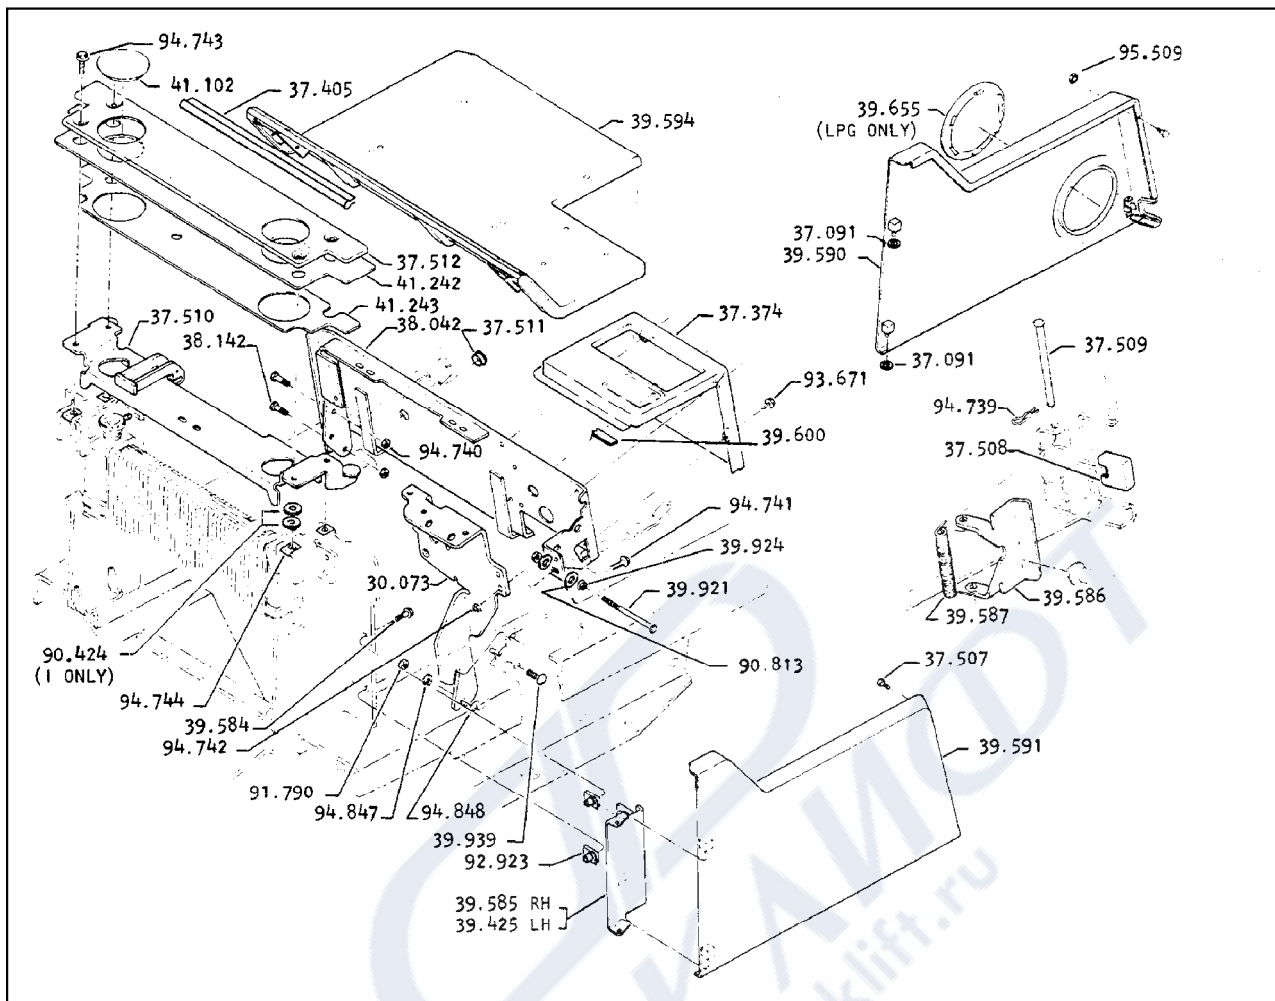 


30.073	BRACKET, HYDRAULIC VALVE MOUNTING 브라켓	39.586	LATCH, SIDE HOOD 래치
37.091	DAMPENER, SIDE MEMBER VIBRATION 댐프너	39.587	SPRING, SIDE HOOD LATCH 스프링
37.374	COVER, HYDRAULIC VALVE 커버	39.590	HOOD, LH SIDE 후드
37.405	TRIM, SEAT MOUNTING PLATE 트림	39.591	HOOD, RH SIDE 후드
37.507	BUMPER, SIDE HOOD 범퍼	39.594	HOOD, TOP 후드
37.508	BUMPER, SIDE HOOD LATCH 범퍼	39.600	DAMPENER, HOOD VIBRATION 댐프너
37.509	PIN, SIDE HOOD LATCH 핀	39.655	PLUG, FUEL TANK FILLER HOLE 플러그
37.510	SUPPORT, RADIATOR UPPER 서포트	39.921	CATCH, SIDE HOOD LATCH 캐치
37.511	PLUG, FIREWALL 플러그	39.924	FASTENER, SIDE HOOD LATCH CATCH 패스너
37.512	TRIM, RADIATOR COVER 트림	39.939	FASTENER, OVERHEAD GUARD REAR SUPPORT BRACKET 패스너
38.042	FIRE WALL 방화벽	41.102	SOUND SEAL, RADIATOR FILLER OPENING 사운드씰
38.142	FASTENER, FIREWALL 패스너	41.242	SOUND SEAL, ENGINE COMPARTMENT 사운드씰
39.425	BRACKET, SIDE HOOD PIVOT (LH) 브라켓	41.243	PLATE, ENGINE COMPARTMENT SOUND SEAL 플레이트
39.584	FASTENER, SIDE HOOD PIVOT BRACKET 패스너	90.424	WASHER, RADIATOR MOUNTING FASTENER 와셔
39.585	BRACKET, SIDE HOOD PIVOT 브라켓	90.813	WASHER, SIDE HOOD LATCH CATCH FASTENER 와셔

91.790	NUT, HYDRAULIC VALVE MOUNTING BRACKET FASTENER 너트
92.923	NUT, SIDE HOOD PIVOT BRACKET FASTENER 너트
93.671	FASTENER, HYDRAULIC VALVE COVER 패스너
94.739	RETAINER, SIDE HOOD LATCH PIN 리테이너
94.740	NUT, FIREWALL FASTENER 너트
94.741	FASTENER, FIREWALL 패스너
94.742	NUT, FIREWALL FASTENER 너트
94.743	FASTENER, RADIATOR COVER TRIM 패스너
94.744	NUT, RADIATOR COVER TRIM FASTENER 너트
94.847	WASHER, HYDRAULIC VALVE MOUNTING BRACKET FASTENER 와셔
94.848	RETAINER, HYDRAULIC VALVE MOUNTING BRACKET FASTENER 리테이너
95.509	FASTENER, SIDE HOOD BUMPER 패스너

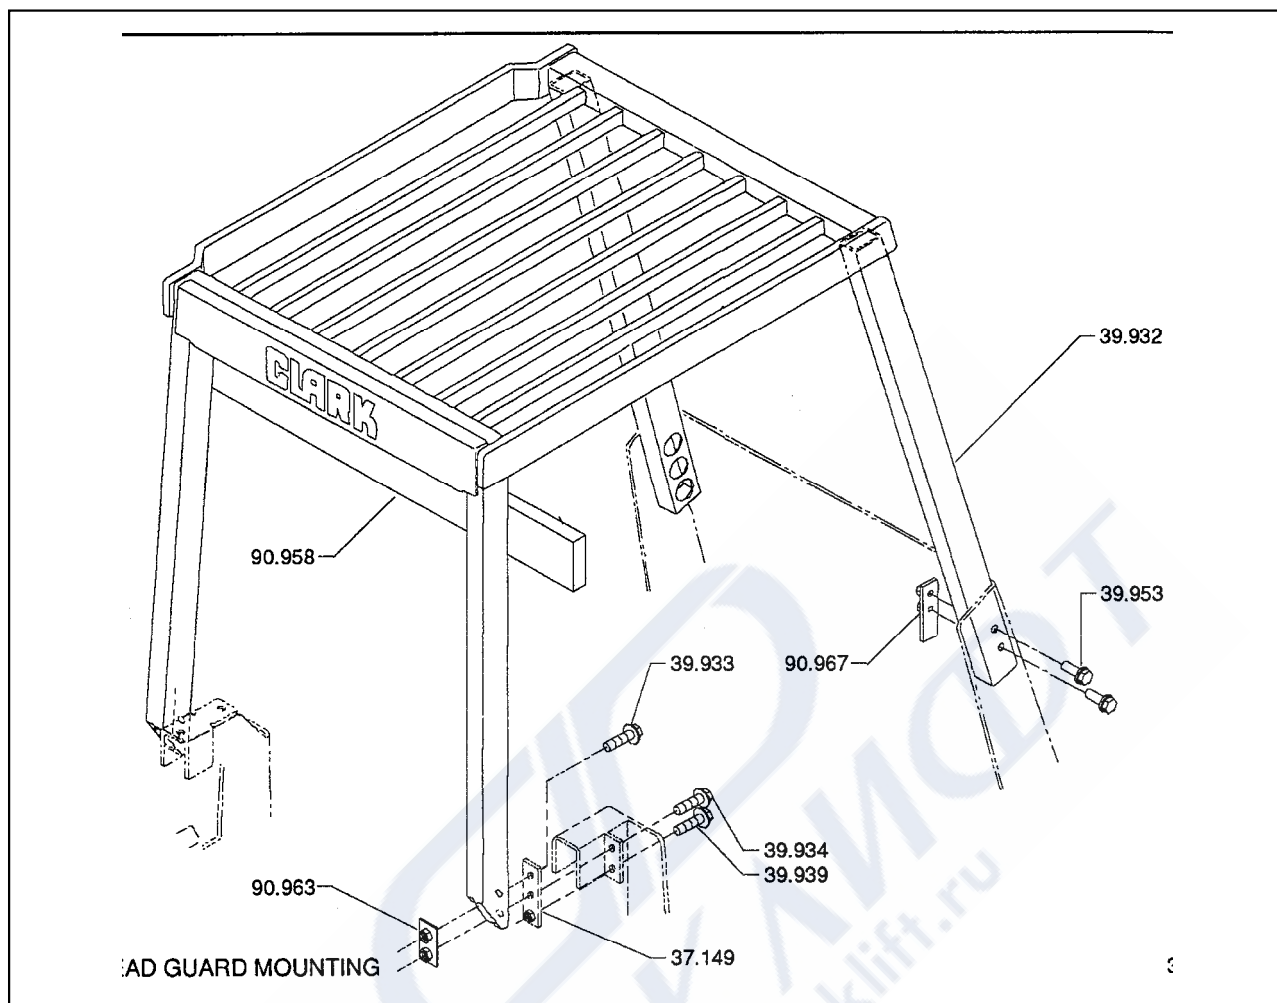 


- | | |
|--------|--|
| 37.149 | SPACER, OVERHEAD GUARD REAR SUPPORT
스페이서 |
| 39.932 | GUARD, OVERHEAD
가드 |
| 39.933 | FASTENER, OVERHEAD GUARD
패스너 |
| 39.934 | FASTENER, OVERHEAD GUARD
패스너 |
| 39.939 | FASTENER, OVERHEAD GUARD REAR SUPPORT BRACKET
패스너 |
| 39.953 | FASTENER, OVERHEAD GUARD (FRONT LEGS)
패스너 |
| 90.958 | LOCKWASHER, ACCELERATOR LEVER ATTACH BRKT FAST
로크와셔 |
| 90.963 | NUT, OVERHEAD GUARD FASTENER (REAR LEG)
너트 |
| 90.967 | NUT, OVERHEAD GUARD FRONT LEG FASTENER
너트 |

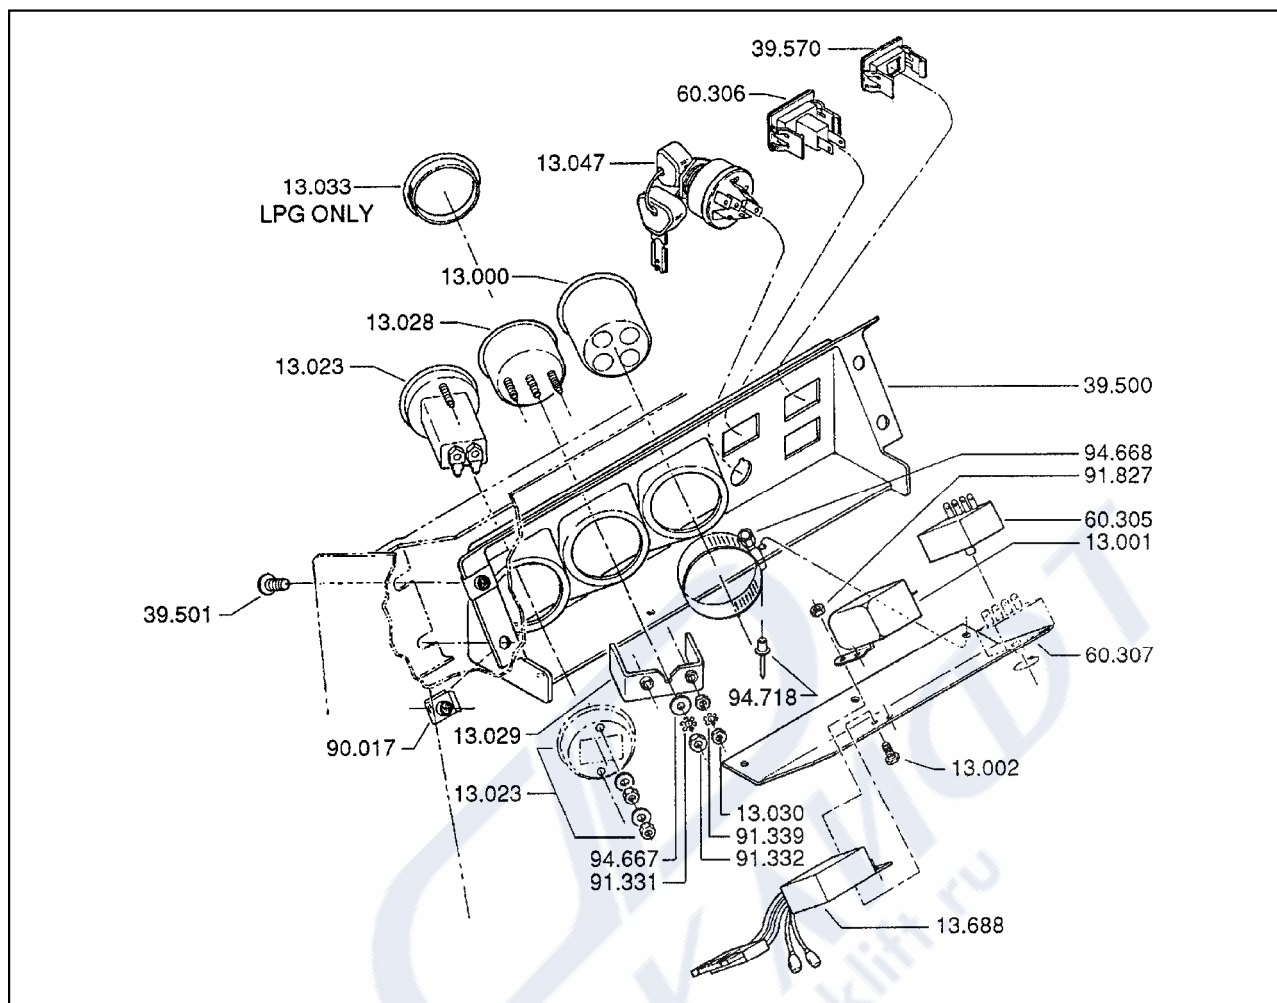 


- | | |
|--------|---|
| 13.000 | PANEL, INSTRUMENT CLUSTER
판넬 |
| 13.001 | RELAY, HORN
릴레이 |
| 13.002 | FASTENER, HORN RELAY
패스너 |
| 13.023 | METER, TRUCK HOUR
미터 |
| 13.028 | GAUGE, FUEL
게이지 |
| 13.029 | FASTENER, FUEL GAUGE ATTACHING
패스너 |
| 13.030 | FASTENER, FUEL GAUGE SENDER STUD
패스너 |
| 13.033 | PLUG - BUTTON PANEL HOLE
플러그 |
| 13.047 | SWITCH, CIRCUIT LOCKING
스위치 |


13.688	RELAY, ENGINE CONDITION SIGNAL 릴레이
39.500	PANEL, INSTRUMENT 판넬
39.501	FASTENER, INSTRUMENT PANEL 패스너
39.570	COVER ASSEMBLY, DASH 커버
60.305	ALARM, DRIVER SEAT BELT FASTENER AUDIBLE 알람
60.306	LIGHT, DRIVER SEAT BELT FASTENER 라이트
60.307	BRACKET, HORN RELAY MOUNTING 브라켓
90.017	NUT, INSTRUMENT PANEL FASTENER 너트
91.331	LOCKWASHER, FUEL GAUGE ATTACHING FASTENER 로크와셔
91.332	NUT, FUEL GAUGE ATTACHING FASTENER 너트
91.339	LOCKWASHER, FUEL GAUGE SENDER STUD FASTENER 로크와셔
91.827	NUT, HORN RELAY FASTENER 너트
94.667	WASHER, FUEL GAUGE ATTACHING FASTENER 와셔
94.668	RETAINER, INSTRUMENT PANEL SIGNAL CLUSTER 리테이너
94.718	FASTENER, HORN RELAY MOUNTING BRACKET 패스너

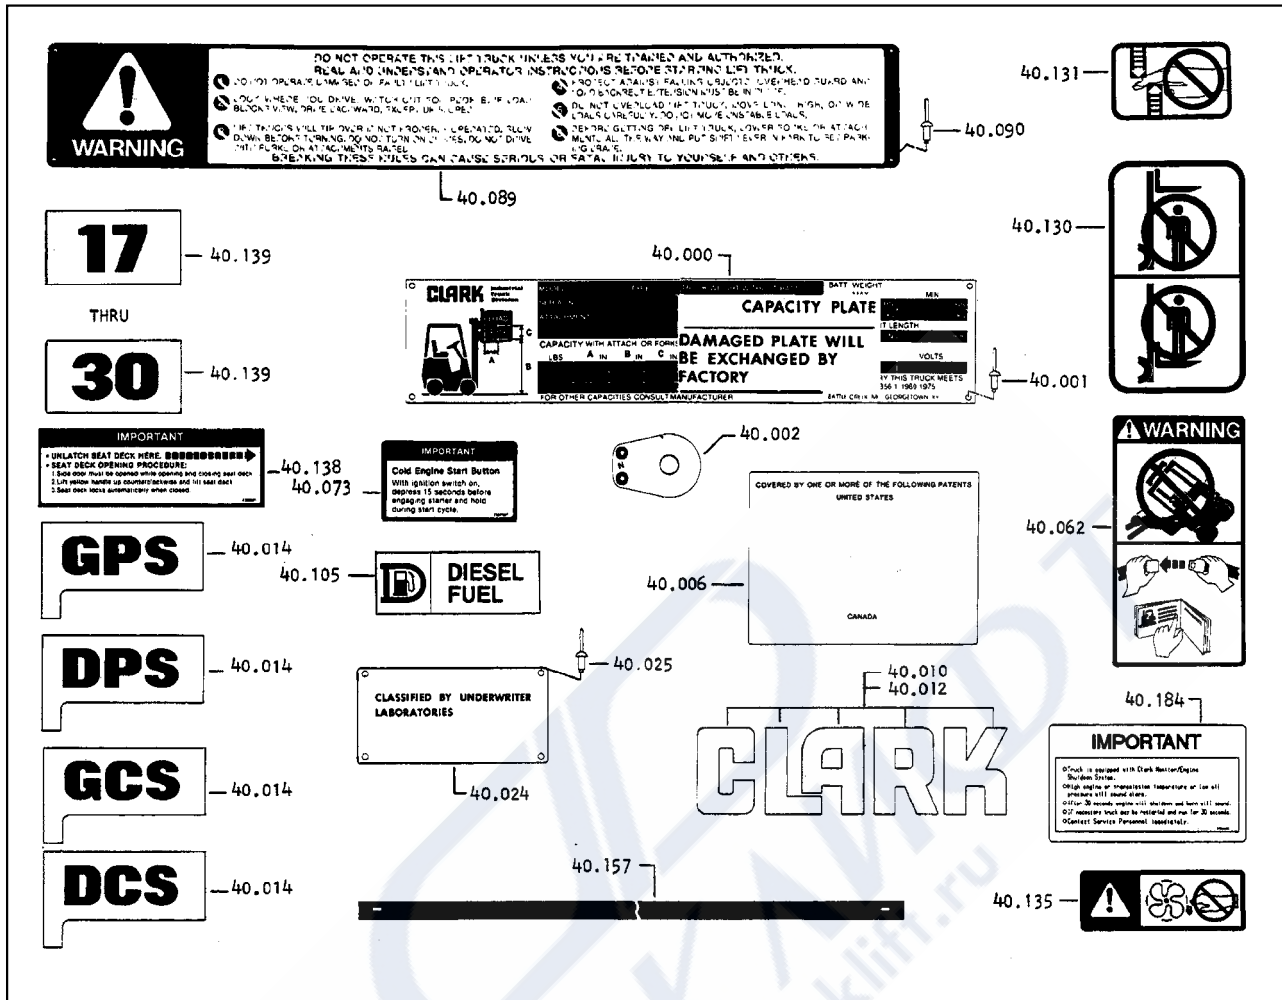 

- 40.000 PLATE, CAPACITY & SERIAL NUMBER
플레이트
- 40.001 FASTENER, CAPACITY & SERIAL PLATE
패스너
- 40.002 LEGEND, SHIFT PATTERN
범례
- 40.006 LEGEND, PATENT
범례
- 40.010 DECAL, CLARK
데칼
- 40.012 DECAL, CLARK LOGO-SMALL
데칼
- 40.014 DECAL, MODEL NAME
데칼
- 40.024 PLATE, UNDERWRITERS LABEL
플레이트
- 40.025 FASTENER, UNDERWRITERS LABEL PLATE
패스너

40.062	DECAL, DRIVERS CAUTION 데칼
40.073	LEGEND, COLD START INSTRUCTION 범례
40.089	PLATE, SAFETY INSTRUCTION 플레이트
40.090	FASTENER, SAFETY INSTRUCTION PLATE 패스너
40.105	DECAL, DIESEL FUEL 데칼
40.130	LEGEND, SAFETY 범례
40.131	LEGEND, SAFETY 범례
40.135	LEGEND, FAN WARNING 범례
40.138	DECAL, SAFETY 데칼
40.139	DECAL, MODEL DESIGNATION 데칼
40.157	DECAL, TRIM 데칼
40.184	DECAL, ENGINE SHUTDOWN 데칼

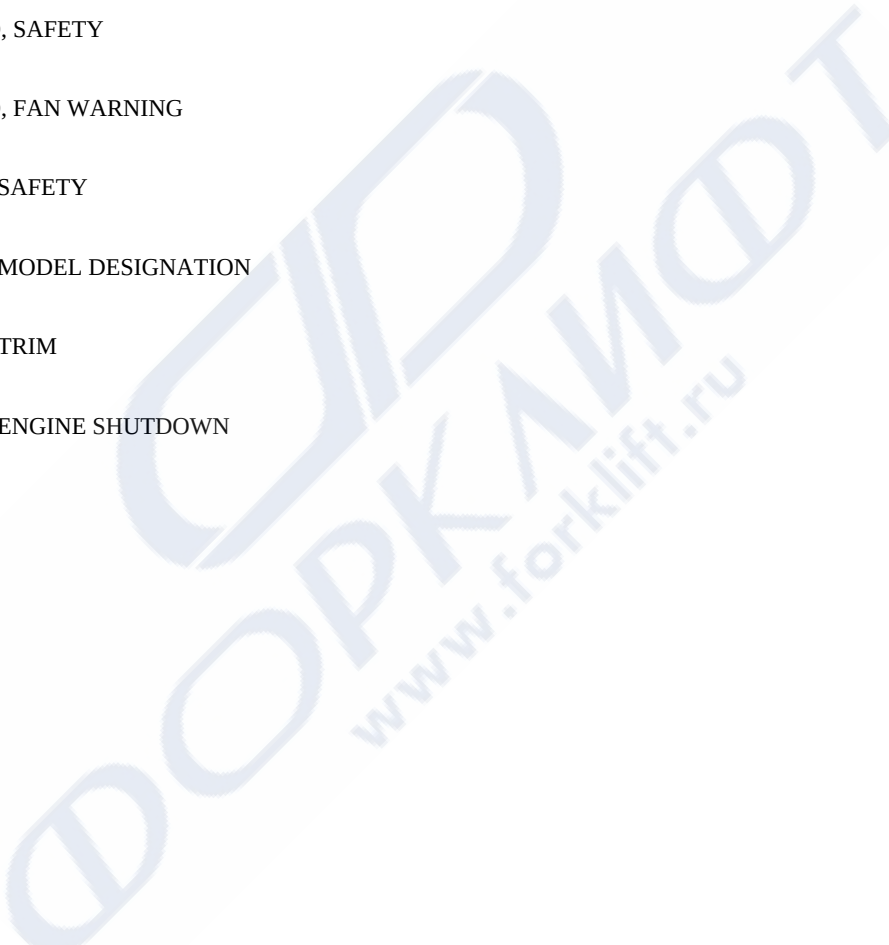 


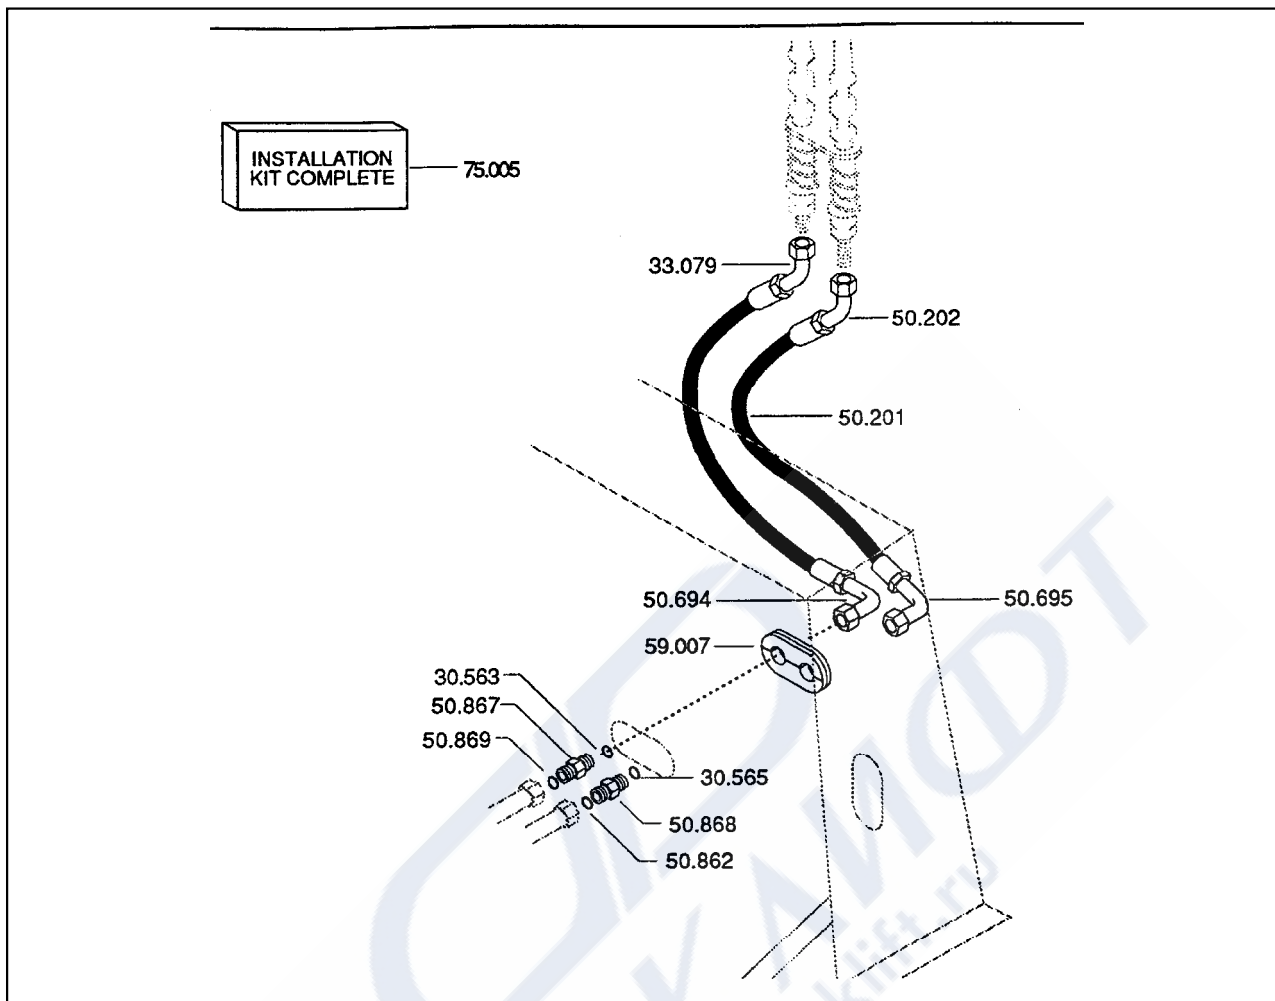 

30.563	SEAL, VALVE PORT "A" FITTING 씰
30.565	SEAL, VALVE PORT "B" FITTING 씰
33.079	COUPLING, DEVICE LH HOSE 커플링
50.201	LINE, DEVICE 라인
50.202	COUPLING, DEVICE HOSE 커플링
50.694	COUPLING, 1ST AUXILIARY VALVE "B" PORT LINE 커플링
50.695	COUPLING, 1ST AUXILIARY VALVE "A" PORT LINE 커플링
50.862	SEAL, AUXILIARY VALVE A PORT 씰
50.867	FITTING, AUXILIARY VALVE B PORT LINE 피팅

50.868	FITTING, AUXILIARY VALVE A PORT LINE 피팅
50.869	SEAL, AUXILIARY VALVE B PORT 셀
59.007	GROMMET, VALVE AUXILIARY LINES 그로멧
75.005	KIT, COWL PLUMBING 키트




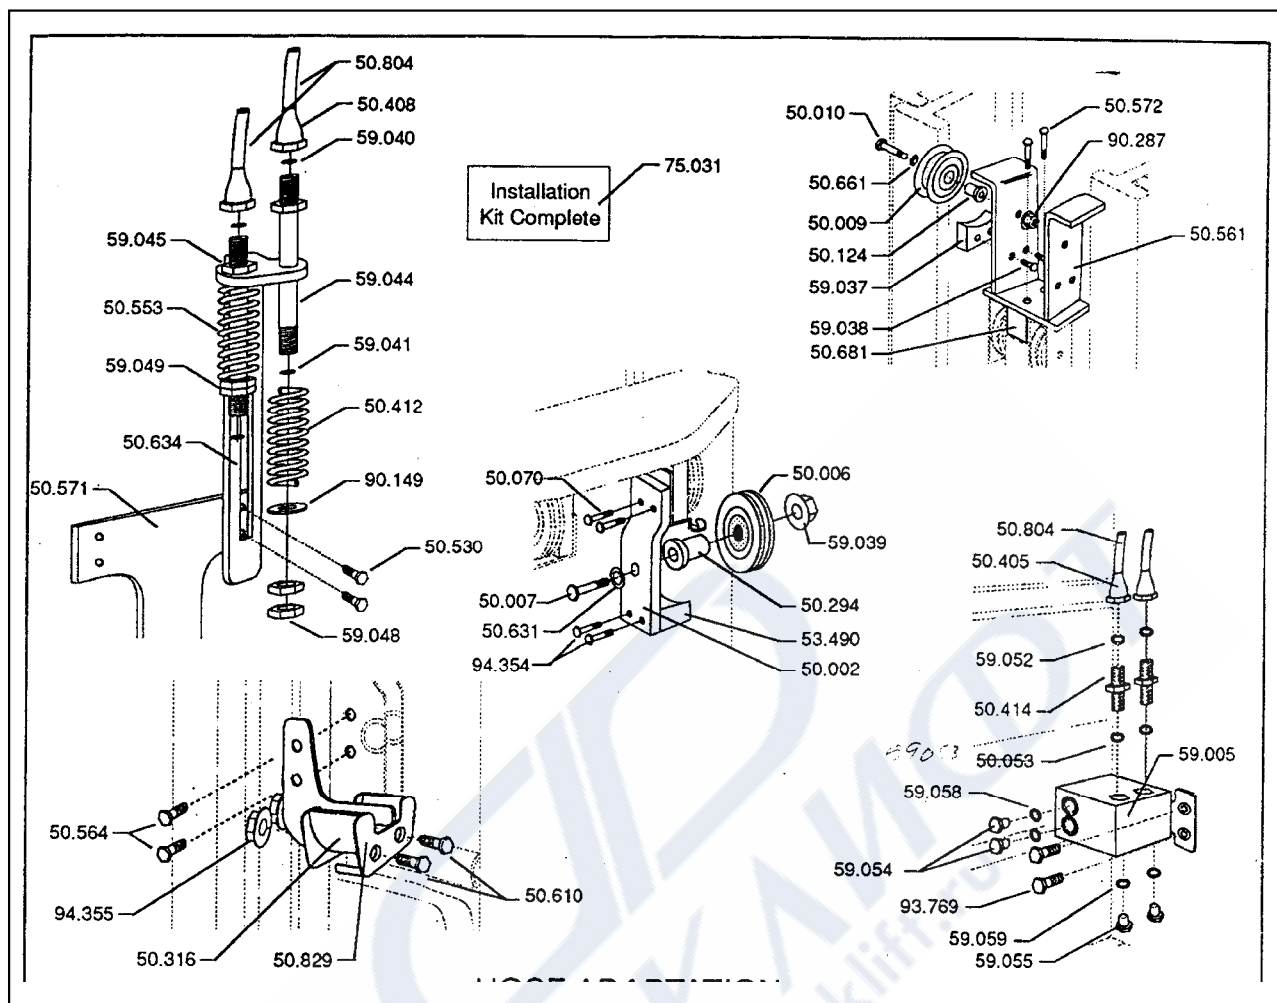 


50.002	BRACKET, DEVICE HOSE UPPER SHEAVE RH 브라켓
50.006	SHEAVE, DEVICE HOSE UPPER 쉬브
50.007	RETAINER, DEVICE HOSE SHEAVE 리테이너
50.009	SHEAVE, DEVICE HOSE LOWER 쉬브
50.010	RETAINER, DEVICE HOSE LOWER SHEAVE 리테이너
50.070	FASTENER, DEVICE HOSE UPPER SHEAVE BRKT 패스너
50.124	PIVOT, DEVICE HOSE LOWER RH SHEAVE 피봇
50.294	PIVOT, DEVICE HOSE UPPER SHEAVE 피봇
50.316	GUARD, DEVICE RH HOSE 가드
50.405	COUPLING, DEVICE HOSE 커플링
50.408	COUPLING, DEVICE HOSE 커플링
50.412	SPRING, DEVICE HOSE TENSIONER 스프링
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅
50.530	FASTENER, DEVICE HOSE INNER GUIDE 패스너
50.553	SPRING, DEVICE HOSE TENSIONING 스프링

50.561	BRACKET, DEVICE HOSE LOWER SHEAVE 브라켓
50.564	FASTENER, DEVICE HOSE LOWER GUIDE 패스너
50.571	BRACKET, DEVICE HOSE 브라켓
50.572	FASTENER, DEVICE HOSE BRACKET 패스너
50.610	FASTENER, DEVICE HOSE GUARD 패스너
50.631	SPACER, DEVICE HOSE SHEAVE 스페이서
50.634	BRACKET, DEVICE HOSE MOUNTING 브라켓
50.661	SPACER, DEVICE HOSE LOWER RH SHEAVE 스페이서
50.681	SPACER, DEVICE HOSE LOWER SHEAVE 스페이서
50.804	LINE, DEVICE HYDRAULIC 라인
50.829	BRACKET, DEVICE HOSE GUIDE MOUNTING 브라켓
53.490	GUARD, DEVICE HOSE 가드
59.005	JUNCTION BLOCK, DEVICE LINE 정크션 블록
59.037	GUARD, HOSE ADAPTATION HOSE 가드
59.038	FASTENER, HS ADAPT HOSE GUARD 패스너


59.039	NUT, DEV HOSE UPPER SHEAVE RETAINER 너트
59.040	SEAL, HS ADAPT COMPENSATOR TUBE 씰
59.041	SEAL, HS ADAPT COMPENSATOR TUBE 씰
59.044	COMPENSATOR TUBE, HOSE ADAPTATION 보상기
59.045	COMPENSATOR TUBE, HOSE ADAPTATION 보상기
59.048	NUT, HS ADAPT COMPENSATOR TUBE RETAINING 너트
59.049	NUT, HS ADAPT COMPENSATOR TUBE RETAINING 너트
59.052	SEAL, DEVICE HOSE CONNECTOR FITTING 씰
59.053	SEAL, DEVICE HOSE CONNECTOR FITTING 씰
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.055	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.058	SEAL, DEVICE HOSE JUNCTION BLOCK PLUG 씰
59.059	SEAL, DEVICE HOSE JUNCTION BLOCK PLUG 씰
75.031	KIT, HOSE ADAPTATION INSTALLATION 키트
90.149	WASHER, DEVICE HOSE TENSIONER SPRING RETAINER 와셔
90.287	NUT, DEVICE HOSE LOWER SHEAVE FASTENER 너트
93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너
94.354	FASTENER, DEVICE HOSE GUARD 패스너
94.355	NUT, DEVICE HOSE GUARD FASTENER 너트

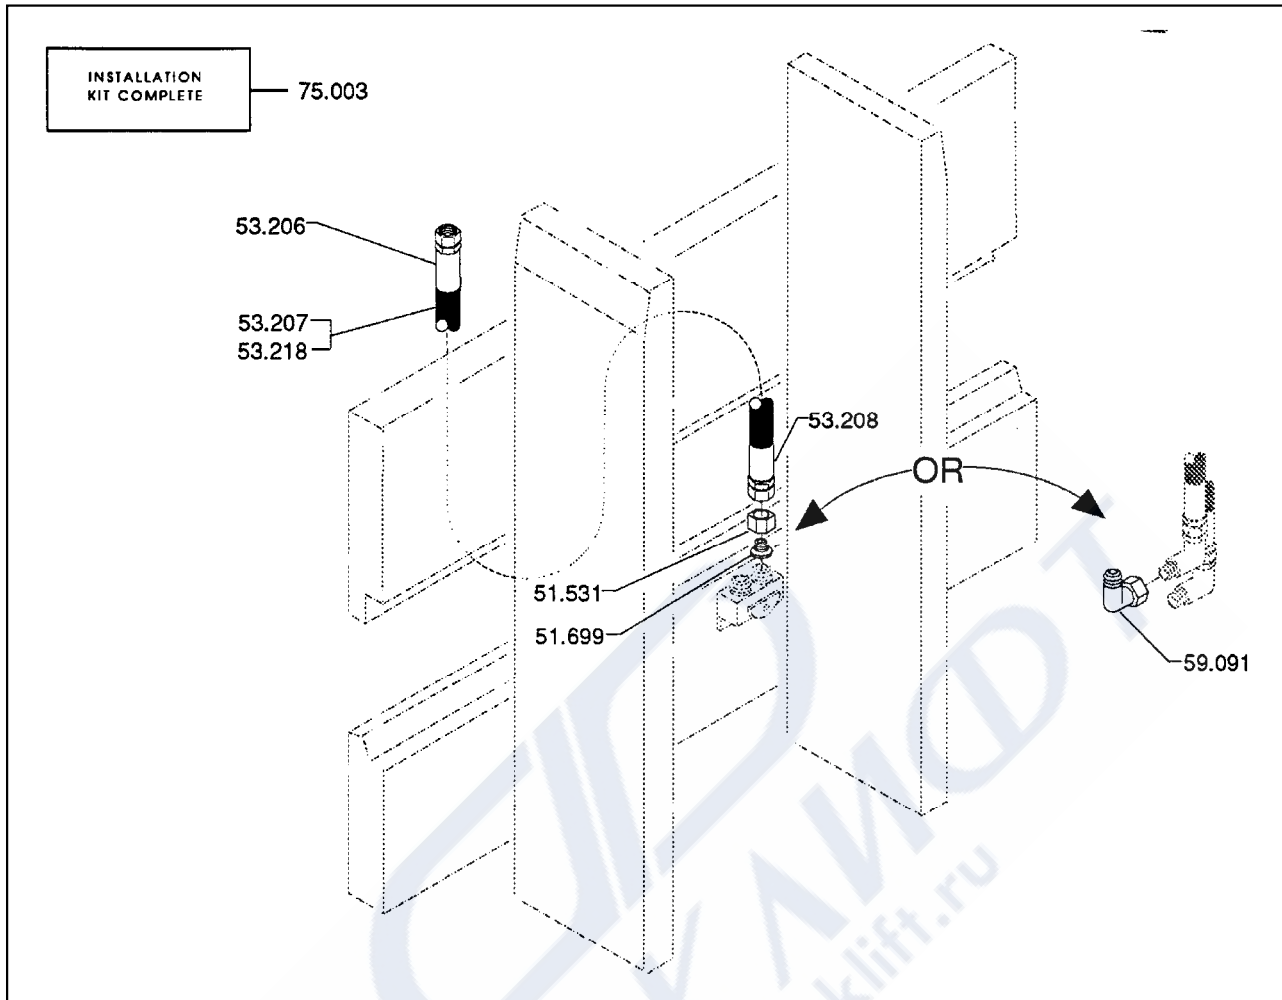 

51.531	FITTING, DEVICE OUTBOARD LH HYDRAULIC HOSE 피팅
51.699	FITTING, DEVICE OUTBOARD RH HYDRAULIC LINE 피팅
53.206	COUPLING, SIDE SHIFTER CYLINDER ANCHOR PORT HOSE 커플링
53.207	LINE, SIDE SHIFTER CYLINDER ANCHOR PORT 라인
53.208	COUPLING, SIDE SHIFTER CYLINDER ANCHOR PORT HOSE 커플링
53.218	LINE, SIDE SHIFTER CYLINDER ROD PORT 라인
59.091	FITTING, DEVICE HYDRAULIC LINE 피팅
75.003	KIT, CARRIAGE SIDE THRUST ROLLERS 키트

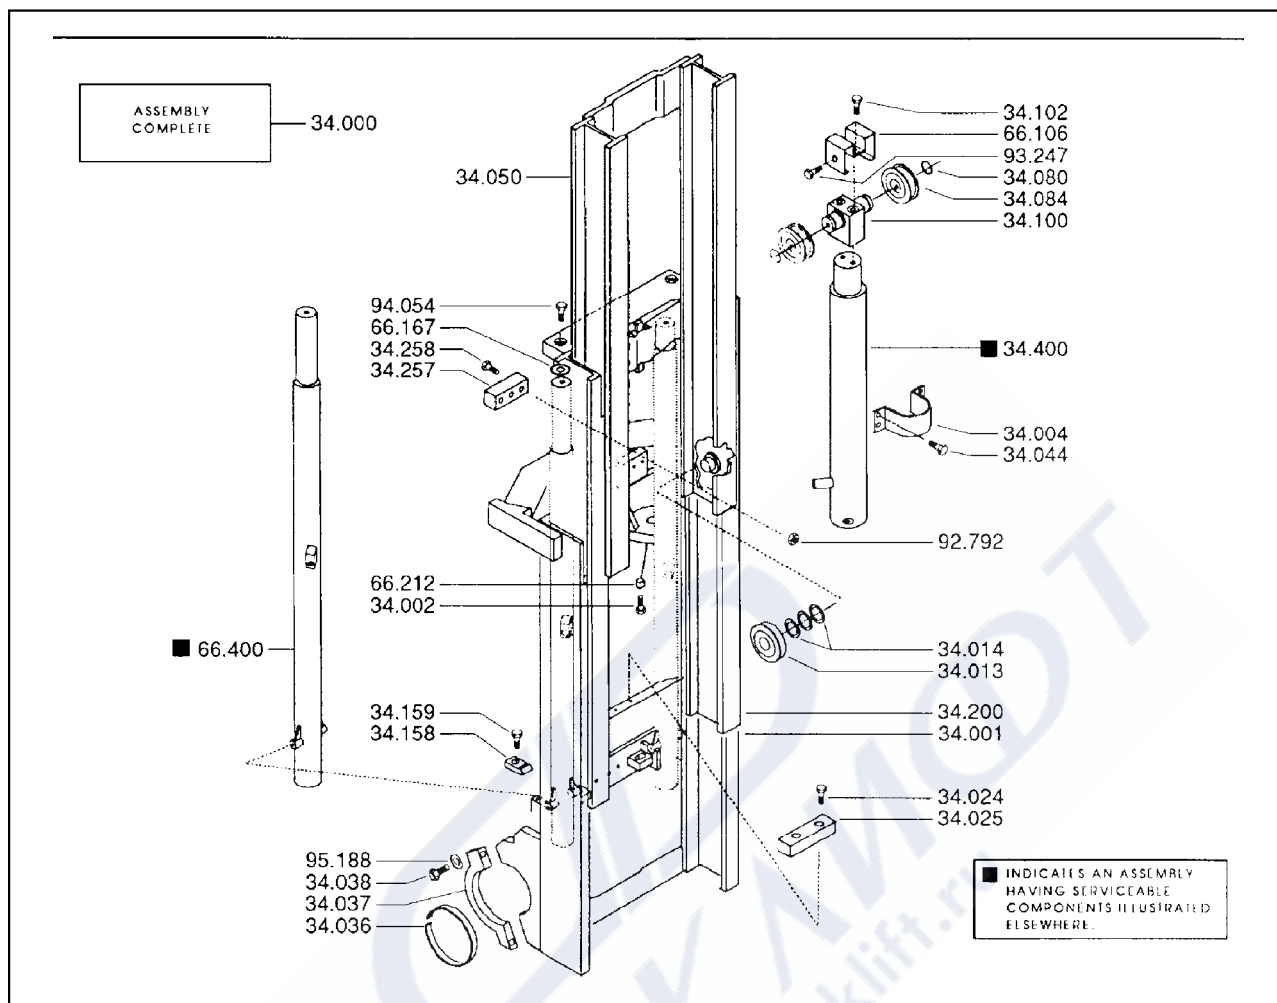 



34.000	UPRIGHT & LIFT CYL ASSEMBLY 마스트& 실린더	34.100	CARRIER, LIFT CYLINDER CHAIN SHEAVE 캐리어
34.001	OUTER RAIL WELDER ASSEMBLY, UPRIGHT 아우터레일	34.102	FASTENER, SHEAVE CARRIER 패스너
34.002	FASTENER, LIFT CYLINDER TO SUPPORT 패스너	34.158	RETAINER, LIFT CYLINDER 리테이너
34.004	BRACKET, CYLINDER RETAINING 브라켓	34.159	FASTENER, LIFT CYLINDER RETAINER & CAP 패스너
34.013	ROLLER, UPRIGHT 롤러	34.200	INTERMEDIATE RAIL WELDED ASSEMBLY, UPRIGHT 인터레일
34.014	SHIM, UPRIGHT ROLLER 심	34.257	STOP BLOCK, OUTER RAIL 스톱블록
34.024	FASTENER, OUTER RAIL STOP BLOCK PAD 패스너	34.258	FASTENER, OUTER RAIL STOP BLOCK 패스너
34.025	PAD, OUTER RAIL STOP BLOCK 패드	34.400	CYLINDER ASSEMBLY, LIFT 실린더
34.036	BUSHING, UPRIGHT TRUNNION 부싱	66.106	GUARD, LIFT CHAIN SHEAVE SAFETY LH 가드
34.037	CAP, UPRIGHT TRUNNION 캡	66.167	SHIM, LIFT CYLINDER UPPER 심
34.038	FASTENER, UPRIGHT TRUNNION CAP 패스너	66.212	SPACER, LIFT CYLINDER FASTENER 스페이서
34.044	FASTENER, LIFT CYLINDER UPPER ANCHOR 패스너	66.400	CYLINDER ASSEMBLY, FINAL LIFT 실린더
34.050	INNER RAIL WELDED ASSEMBLY, UPRIGHT 인너레일	92.792	NUT, OUTER RAIL STOP BLOCK FASTENER 너트
34.080	FASTENER, LIFT CHAIN SHEAVE 패스너	93.247	FASTENER, LIFT CHAIN SHEAVE SAFETY GUARD 패스너
34.084	SHEAVE, LIFT CHAIN 쉬브	94.054	FASTENER, LIFT CYLINDER (UPPER) 패스너

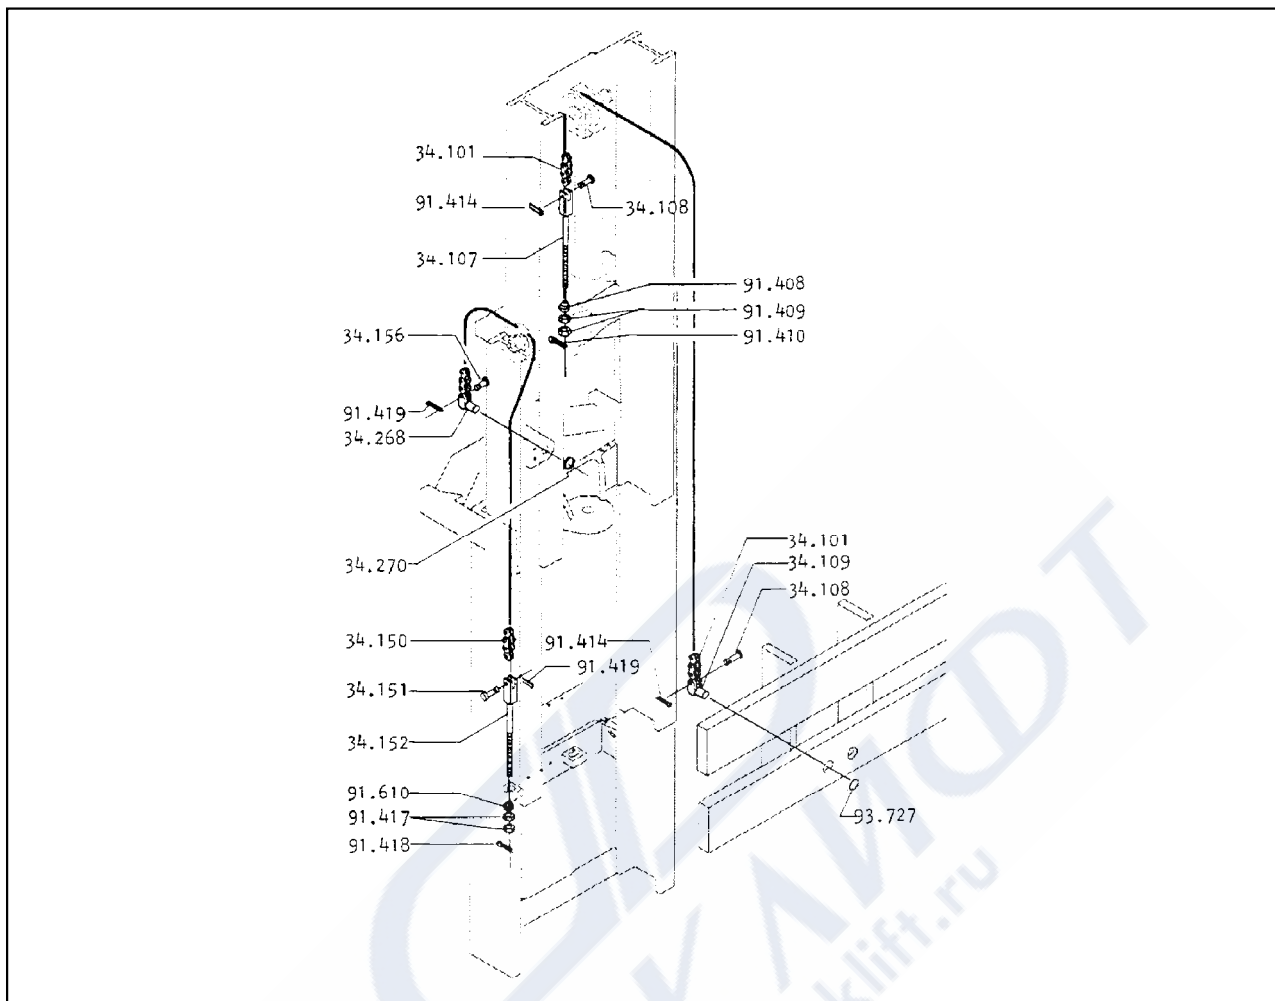 

34.101	CHAIN, LIFT 체인
34.107	ANCHOR, LIFT CHAIN 앵커
34.108	FASTENER, LIFT CHAIN TO ANCHOR 패스너
34.109	ANCHOR, LIFT CHAIN CARRIAGE END 앵커
34.150	CHAIN, UPRIGHT RAIL LIFT 체인
34.151	FASTENER, RAIL LIFT CHAIN TO RAIL 패스너
34.152	ANCHOR, RAIL LIFT CHAIN 앵커
34.156	FASTENER, RAIL CHAIN TO ANCHOR 패스너
34.268	ANCHOR, RAIL CHAIN RH 앵커


34.270	FASTENER, RAIL CHAIN ANCHOR 패스너
91.408	NUT-SPHERICAL, LIFT CHAIN FASTENER (CYL END) 너트
91.409	NUT, LIFT CHAIN FASTENER (CYLINDER END) 너트
91.410	RETAINER, LIFT CHAIN FASTENER (CYLINDER END) 리테이너
91.414	RETAINER, LIFT CHAIN TO ANCHOR FASTENER 리테이너
91.417	NUT, RAIL LIFT CHAIN FAST (CYL END) 너트
91.418	RETAINER, RAIL LIFT CHAIN FASTENER (CYL END) 리테이너
91.419	RETAINER, RAIL CHAIN TO ANCHOR FASTENER 리테이너
91.610	NUT, RAIL LIFT CHAIN ANCHOR FASTENER (CYLINDER END) 너트
93.727	RETAINER, LIFT CHAIN ANCHOR 리테이너

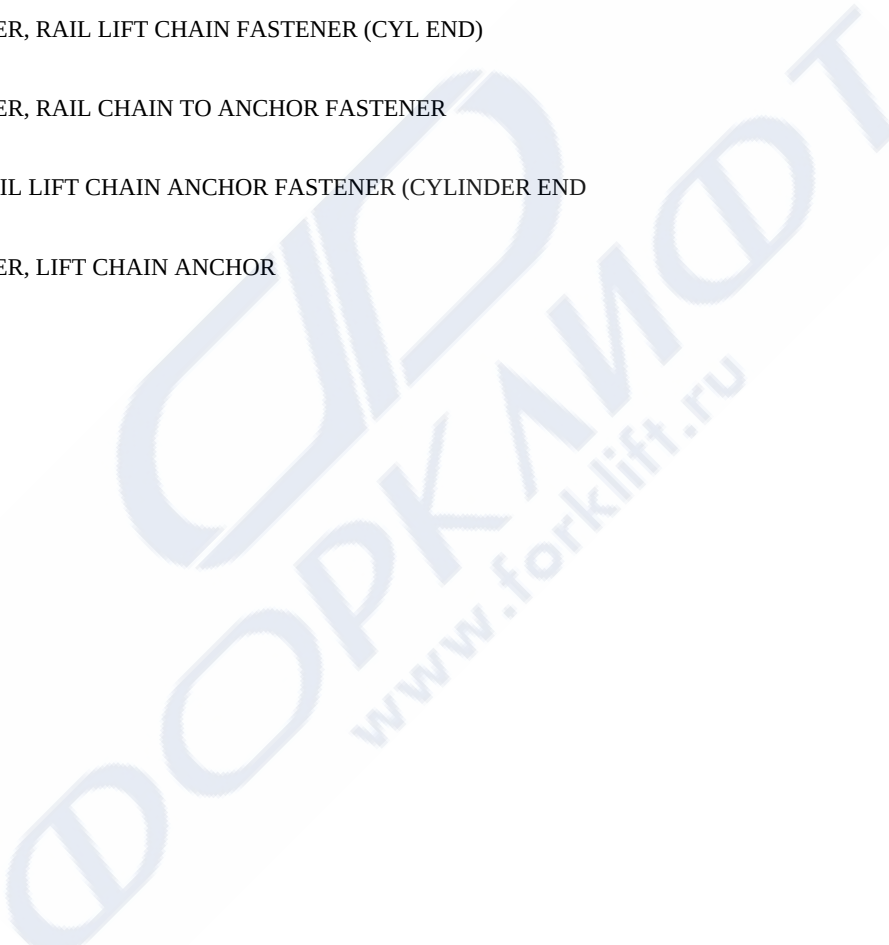 

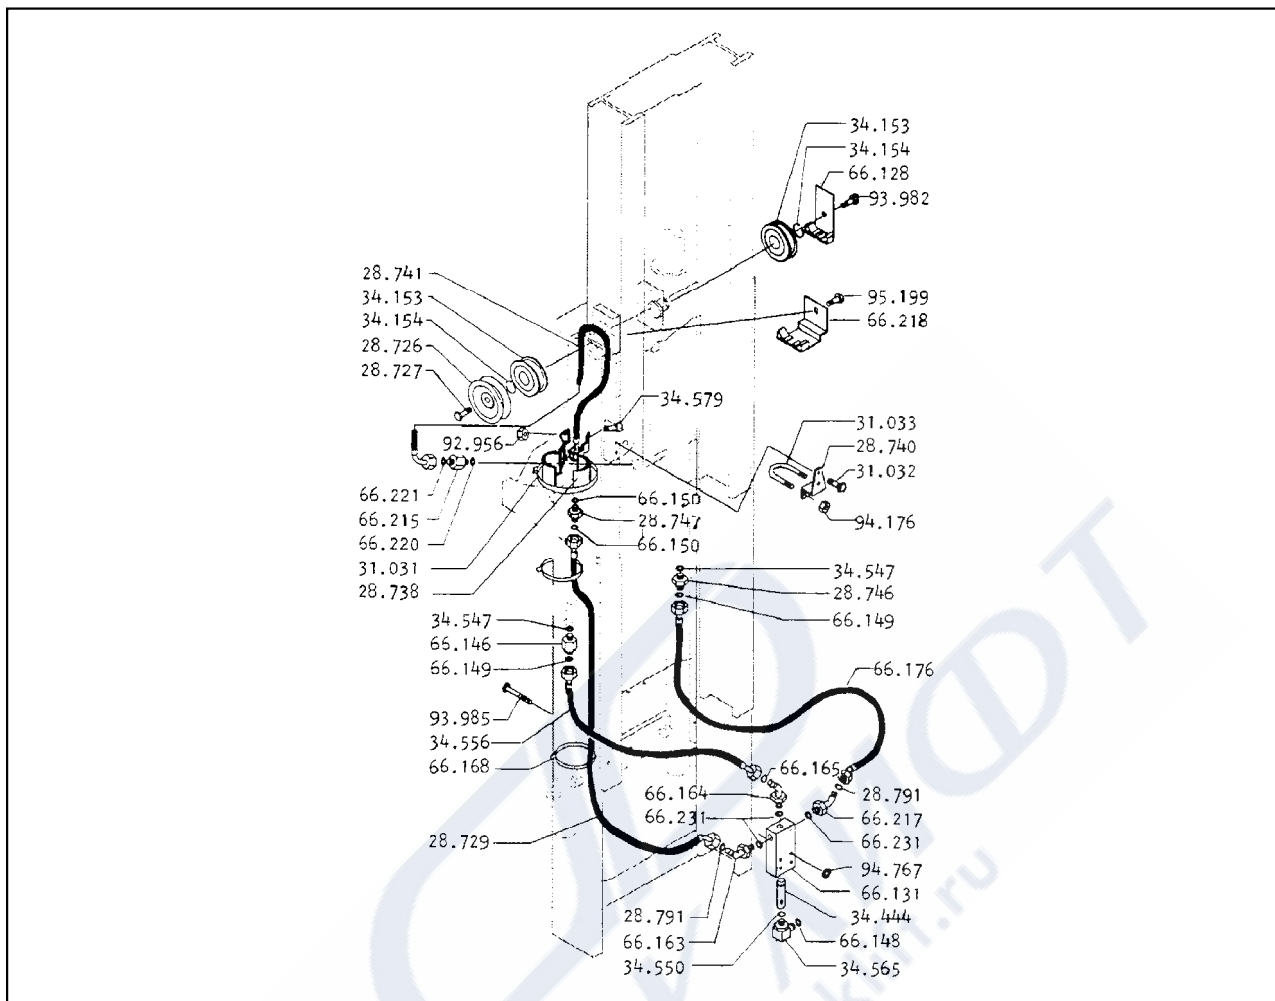 

28.726	SHEAVE, LIFT CYLINDER HOSE 쉬브	34.547	SEAL, LIFT CYLINDER INLET PORT 씰
28.727	PIVOT, LIFT CYLINDER HOSE SHEAVE 피봇	34.550	SEAL, FLOW CONTROL VALVE INLET PORT 씰
28.729	LINE, LIFT CYLINDER 라인	34.556	LINE, FLOW CONTROL VALVE PRESSURE 라인
28.738	BRACKET, LIFT CYLINDER HOSE 브라켓	34.565	FITTING, LIFT CYLINDER FLOW CONTROL VALVE INLET 피팅
28.740	BRACKET, LIFT CYLINDER HOSE MOUNTING 브라켓	34.579	FASTENER, LIFT CYLINDER PRESSURE LINE SUPPORT 패스너
28.741	LINE ASSY, LIFT CYLINDER 라인	66.128	GUARD, LIFT CHAIN 가드
28.746	FITTING, LIFT CYLINDER LINE 피팅	66.131	MANIFOLD, LIFT CYLINDER FLOW CONTROL VALVE 매니폴드
28.747	FITTING, LIFT CYLINDER LINE 피팅	66.146	VALVE, LIFT CYLINDER PORT FLOW CONTROL 밸브
28.791	SEAL, FINAL LIFT CYLINDER LINE FITTING 씰	66.148	SEAL, LIFT CYLINDER PRESSURE LINE 씰
31.031	BRACKET, LIFT CYLINDER LINE SUPPORT 브라켓	66.149	SEAL, LIFT CYLINDER LINE FITTING 씰
31.032	FASTENER, LIFT CYLINDER LINE SUPPORT BRACKET 패스너	66.150	SEAL, LIFT CYLINDER LINE FITTING 씰
31.033	CLAMP, LIFT CYLINDER LINE TO SUPPORT 클램프	66.164	FITTING, LIFT CYLINDER FLOW CONTROL VALVE MANIFOLD 피팅
34.153	SHEAVE, UPRIGHT RAIL CHAIN 쉬브	66.165	SEAL, L/CYL FLOW CONTROL VALVE MANIFOLD PORT FIT 씰
34.154	RETAINER, UPRIGHT RAIL CHAIN SHEAVE 리테이너	66.168	TIE STRAP, LIFT CYLINDER INLET LINE 타이스트랩
34.444	VALVE ASSEMBLY, LIFT CYLINDER FLOW CONTROL 밸브	66.176	LINE, FREE LIFT CYLINDER PRESSURE 라인

66.215	VALVE, LIFT CYLINDER PORT FLOW CONTROL 밸브
66.217	FITTING, FLOW CONTROL VALVE MANIFOLD PORT 피팅
66.218	BRACKET, LIFT LINE SHEAVE 브라켓
66.220	SEAL, LIFT CYLINDE INLET PORT 씰
66.221	SEAL, LIFT CYLINDER LINE FITTING 씰
66.231	SEAL, FLOW CONTROL VALVE MANIFOLD PORT FITTING 씰
92.956	NUT, LIFT CYLINDER HOSE BRACKET SUPPORT 너트
93.982	FASTENER, LIFT CHAIN GUARD 패스너
93.985	FASTENER, LIFT CYLINDER FLOW CONTROL VALVE MANIF 패스너
94.176	NUT, LIFT CYLINDER HOSE CLAMP FASTENER 너트
94.767	NUT, LIFT CYLINDER FLOW CONTROL VALVE MANIFOLD F 너트
95.199	FASTENER, LIFT LINE SHEAVE 패스너

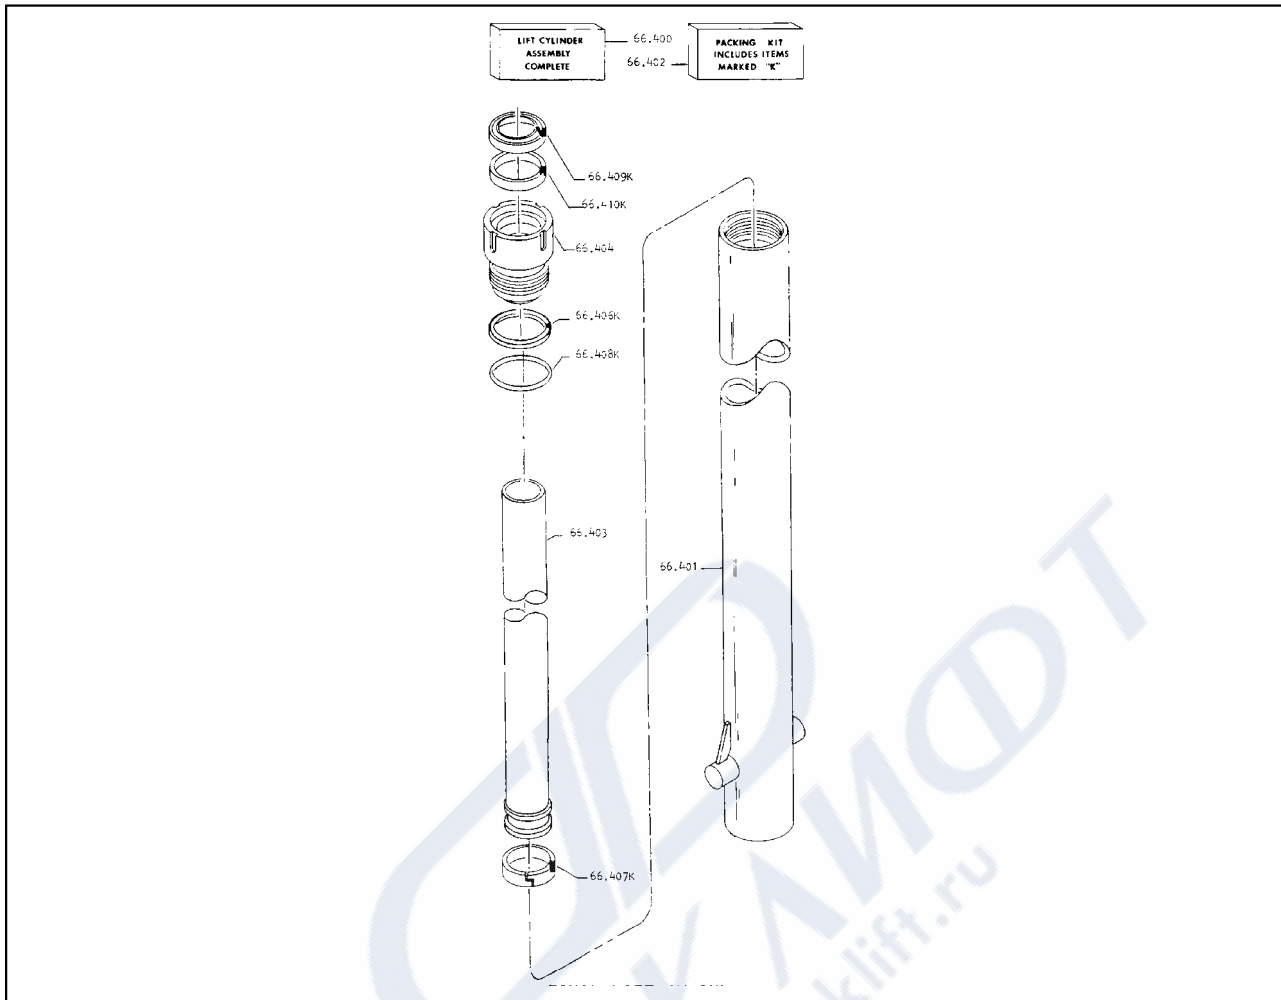 

- | | |
|--------|---|
| 66.400 | CYLINDER ASSEMBLY, FINAL LIFT
실린더 |
| 66.401 | BARREL, FINAL LIFT CYLINDER
배럴 |
| 66.402 | PACKING KIT, FINAL LIFT CYLINDER
패킹키트 |
| 66.403 | PISTON ROD, FINAL LIFT CYLINDER
피스톤로드 |
| 66.404 | CAP, FINAL LIFT CYLINDER GLAND
캡 |
| 66.406 | BACK-UP RING, FINAL LIFT CYLINDER PISTON PACKING
백업링 |
| 66.407 | WEAR RING, FINAL LIFT CYLINDER PISTON
웨어링 |
| 66.408 | SEAL, FINAL LIFT CYLINDER GLAND CAP
씰 |
| 66.409 | WIPER, FINAL LIFT CYLINDER PISTON ROD
와이퍼 |


66.410 SEAL, FINAL LIFT CYLINDER PISTON ROD
셀

ФОРКЛИФТ
www.forklift.ru


75-(02)162 (1)

37.512	TRIM, RADIATOR COVER 트림
39.932	GUARD, OVERHEAD 가드
75.421	KIT, AIR CLEANER COMPLETE 키트
90.879	NUT, ENGINE INTAKE AIR CLEANER ATTACH FASTENER 너트
91.832	WASHER, ENGINE INTAKE AIR CLEANER ATTACHING FAST 와셔
95.965	WASHER, AIR CLEANER TUBE MOUNTING CLAMP FASTENER 와셔



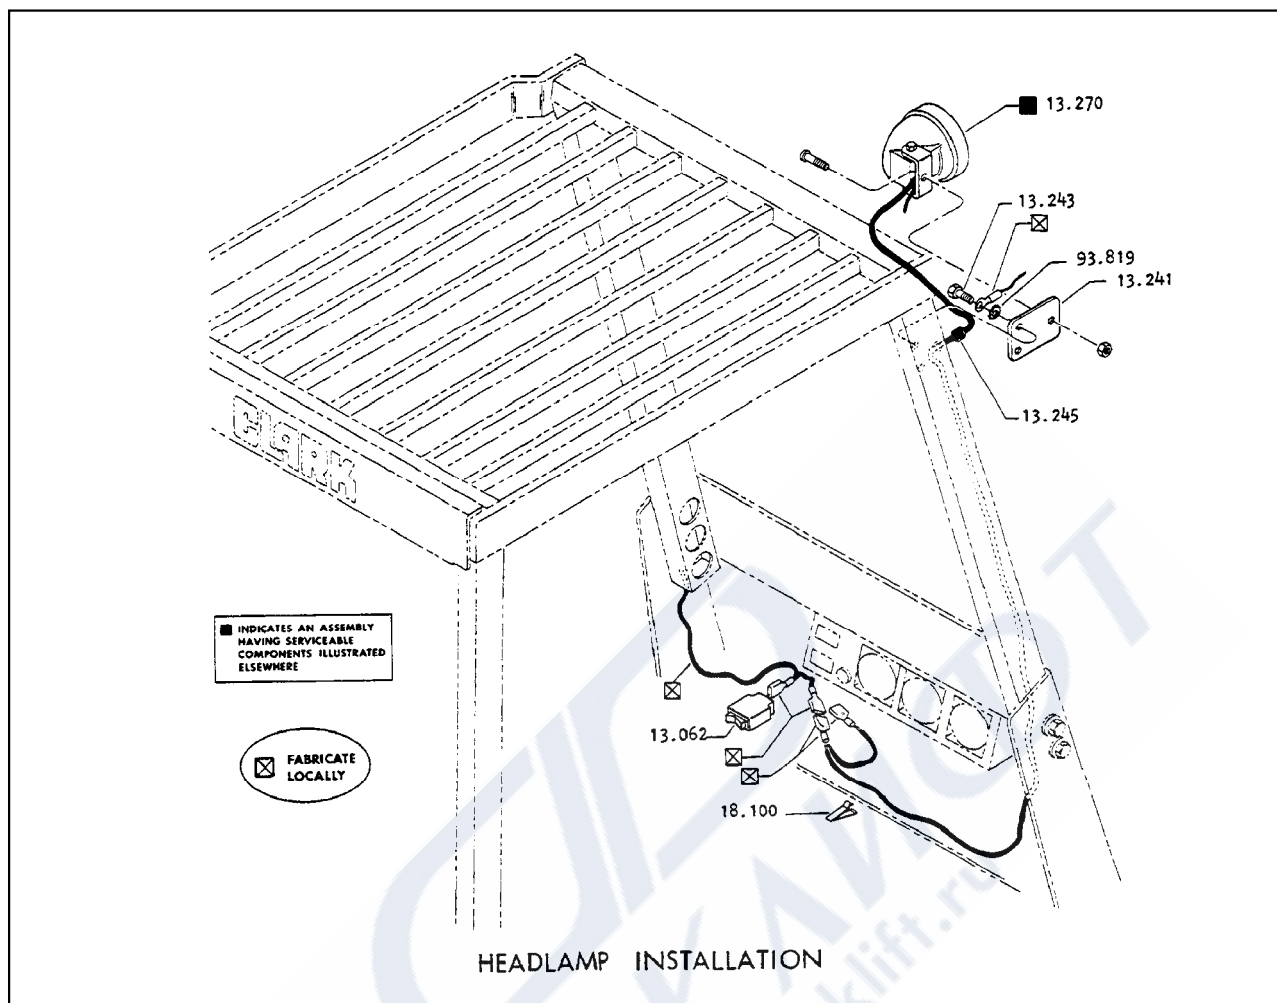 



13.062	SWITCH, LIGHT 스위치
13.241	BRACKET, HEAD LAMP 브라켓
13.243	FASTENER, HEAD LAMP BRACKET 패스너
13.245	INSULATOR, HEAD LAMP WIRE THRU HOOD 절연체
13.270	HEADLAMP, ADJUSTABLE 헤드램프
18.100	CLIP, HEAD LIGHT WIRE 클립
93.819	LOCKWASHER, HEADLIGHT MOUNTING BRACKET FASTENER 로크와셔

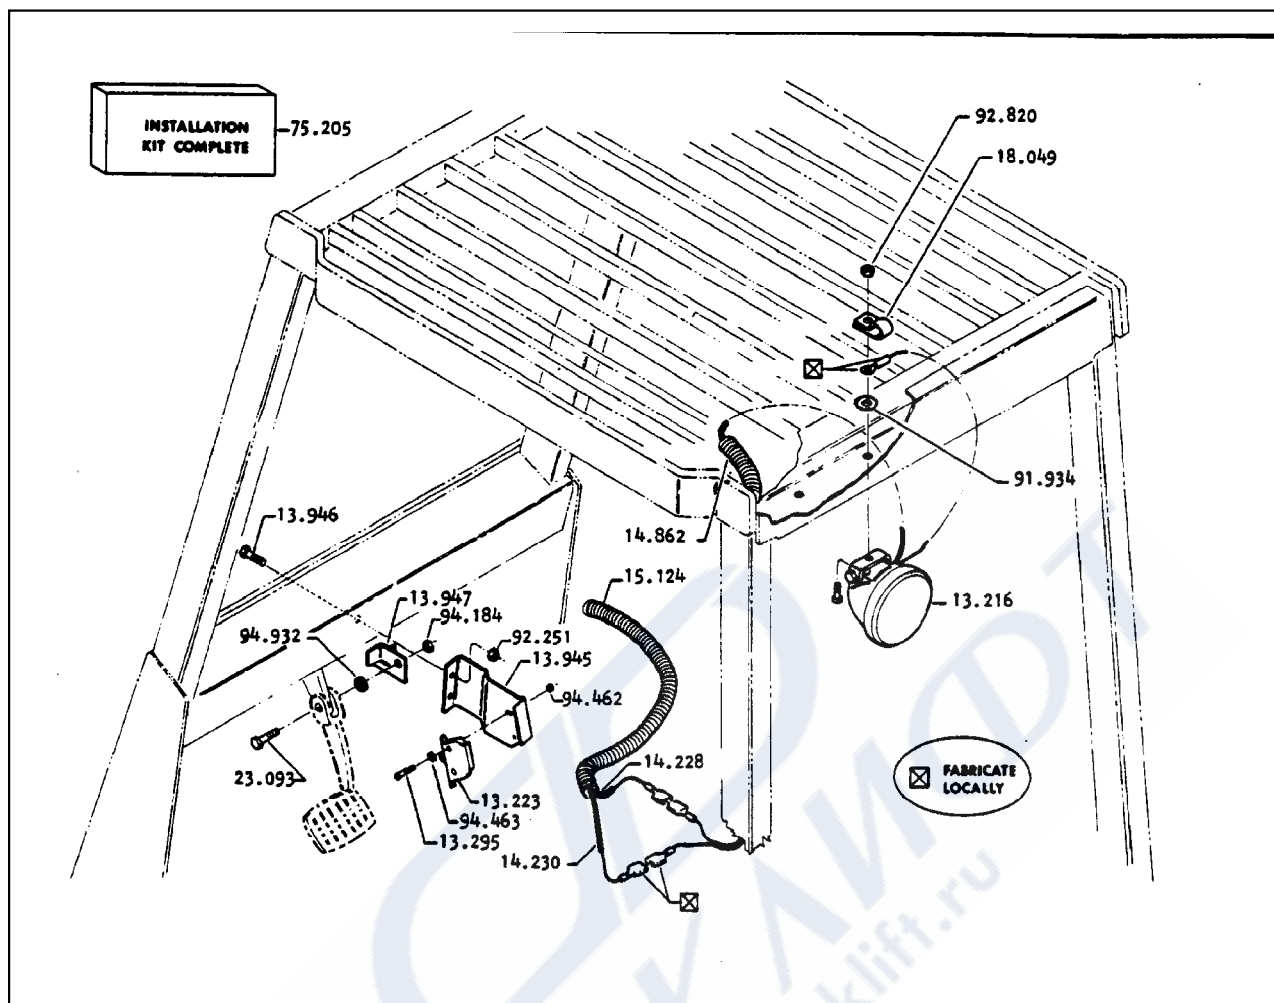 

- | | |
|--------|--|
| 13.216 | LAMP ASSEMBLY, COMBINATION STOP & TAIL
램프 |
| 13.223 | SWITCH, STOP LIGHT
스위치 |
| 13.295 | FASTENER, STOP LIGHT SWITCH
패스너 |
| 13.945 | BRACKET, STOP LAMP SWITCH MOUNTING
브라켓 |
| 13.946 | FASTENER, STOP LAMP SWITCH MOUNTING BRACKET
패스너 |
| 13.947 | ACTUATOR, STOP LAMP SWITCH
액추에이터 |
| 14.228 | WIRE, STOP LIGHT
와이어 |
| 14.230 | WIRE, STOP LIGHT
와이어 |
| 14.862 | PROTECTOR, WARNING LAMP CONDUCTOR
보호장치 |


15.124	PROTECTOR, WARNING LAMP CONDUCTOR 보호장치
18.049	CLIP, TAIL LAMP WIRE 클립
23.093	FASTENER, AUX BRAKE PEDAL 패스너
75.205	STOP LIGHT OR TAIL LIGHT INSTALLATION 스톱라이트
91.934	LOCKWASHER, STOP & TAIL LAMP ASSEMBLY FASTENER 로크와셔
92.251	NUT, STOP & TAIL LAMP MOUNTING BRACKET FASTENER 너트
92.820	NUT, STOP AND TAIL LAMP WIRE CLIP FASTENER 너트
94.184	NUT, AUXILIARY BRAKE PEDAL FASTENER 너트
94.462	NUT, STOP LIGHT SWITCH FASTENER 너트
94.463	WASHER, STOP LIGHT SWITCH FASTENER 와셔
94.932	WASHER, AUXILIARY BRAKE PEDAL FASTENER 와셔

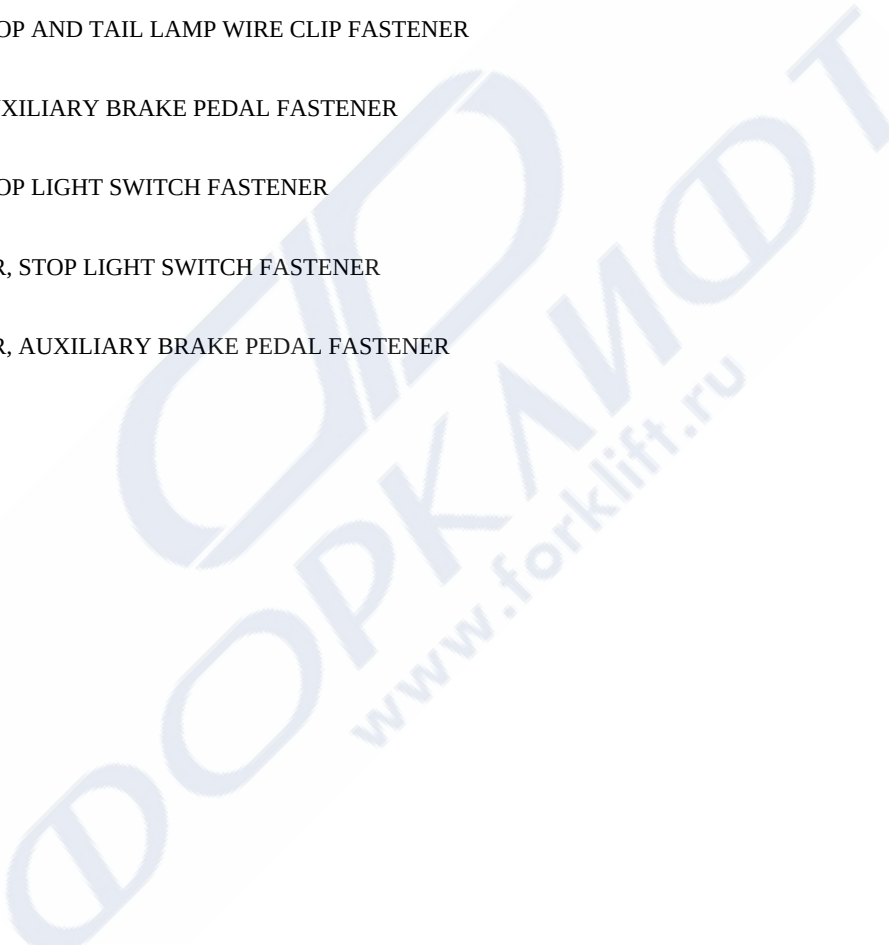 

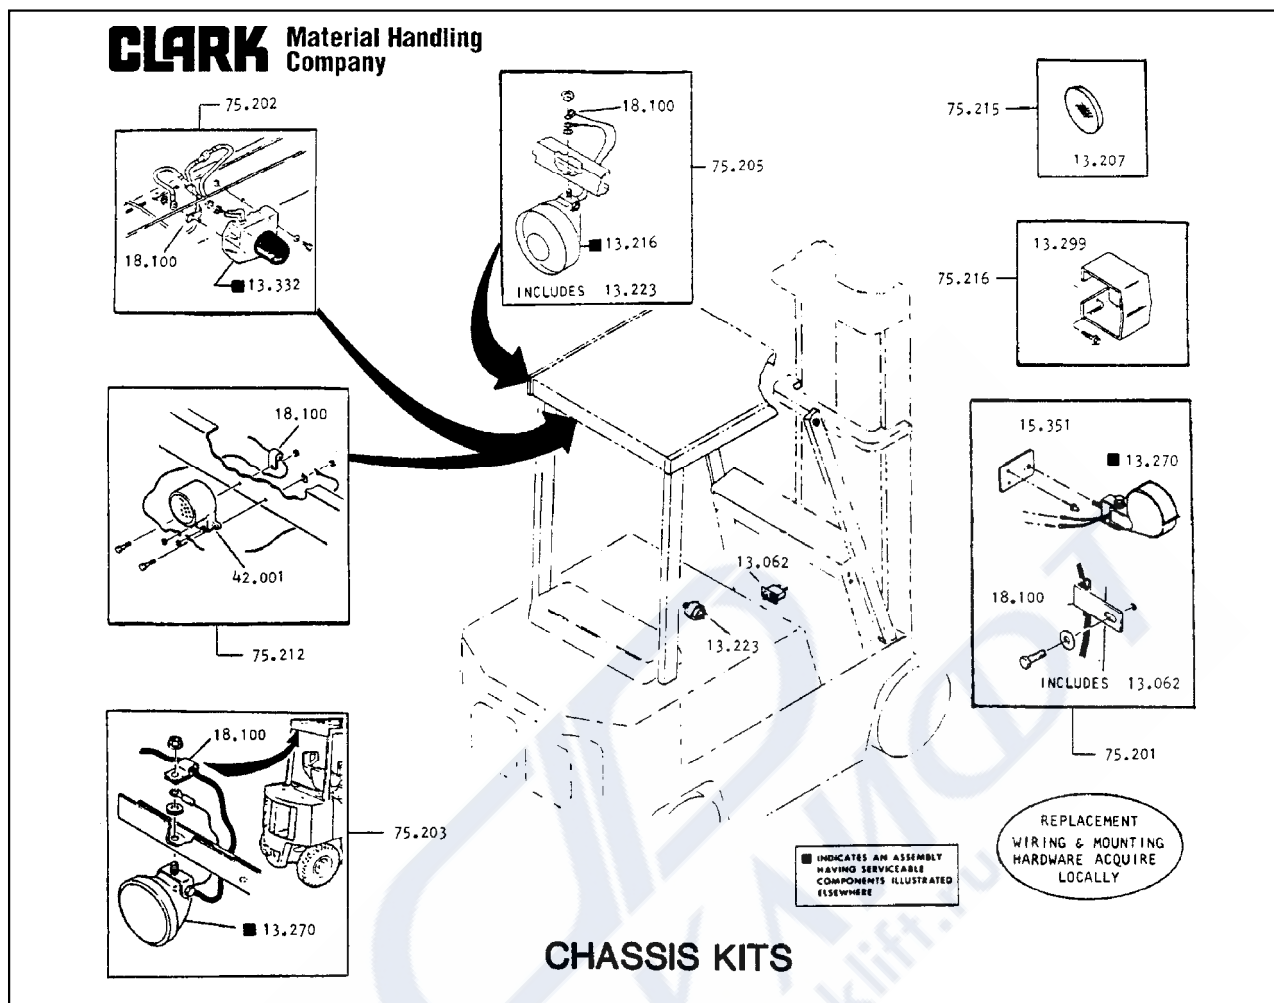 


13.062	SWITCH, LIGHT 스위치
13.207	LENS, GASKET, LAMP ASSEMBLY 렌즈
13.216	LAMP ASSEMBLY, COMBINATION STOP & TAIL 램프
13.223	SWITCH, STOP LIGHT 스위치
13.270	HEADLAMP, ADJUSTABLE 헤드램프
13.299	GUARD, HEADLIGHT 가드
13.332	ASSEMBLY, WARNING LIGHT 경고등
15.351	BRACKET, HEADLAMP MOUNTING (LH) 브라켓
18.100	CLIP, HEAD LIGHT WIRE 클립

42.001	WARNING DEVICE, AUDIBLE (AIR OPER) 경고장치
75.201	ADJUSTABLE HEADLAMP INSTALLATION 헤드램프
75.202	WARNING LIGHT INSTALLATION KIT 경고등
75.203	BACK-UP LAMP INSTALLATION 백업램프
75.205	STOP LIGHT OR TAIL LIGHT INSTALLATION 스톱라이트
75.212	KIT, BACK-UP WARNING DEVICE 키트
75.215	KIT, LAMP PROTECTIVE COVER INSTALLATION 키트
75.216	KIT, LAMP GUARD INSTALLATION 키트

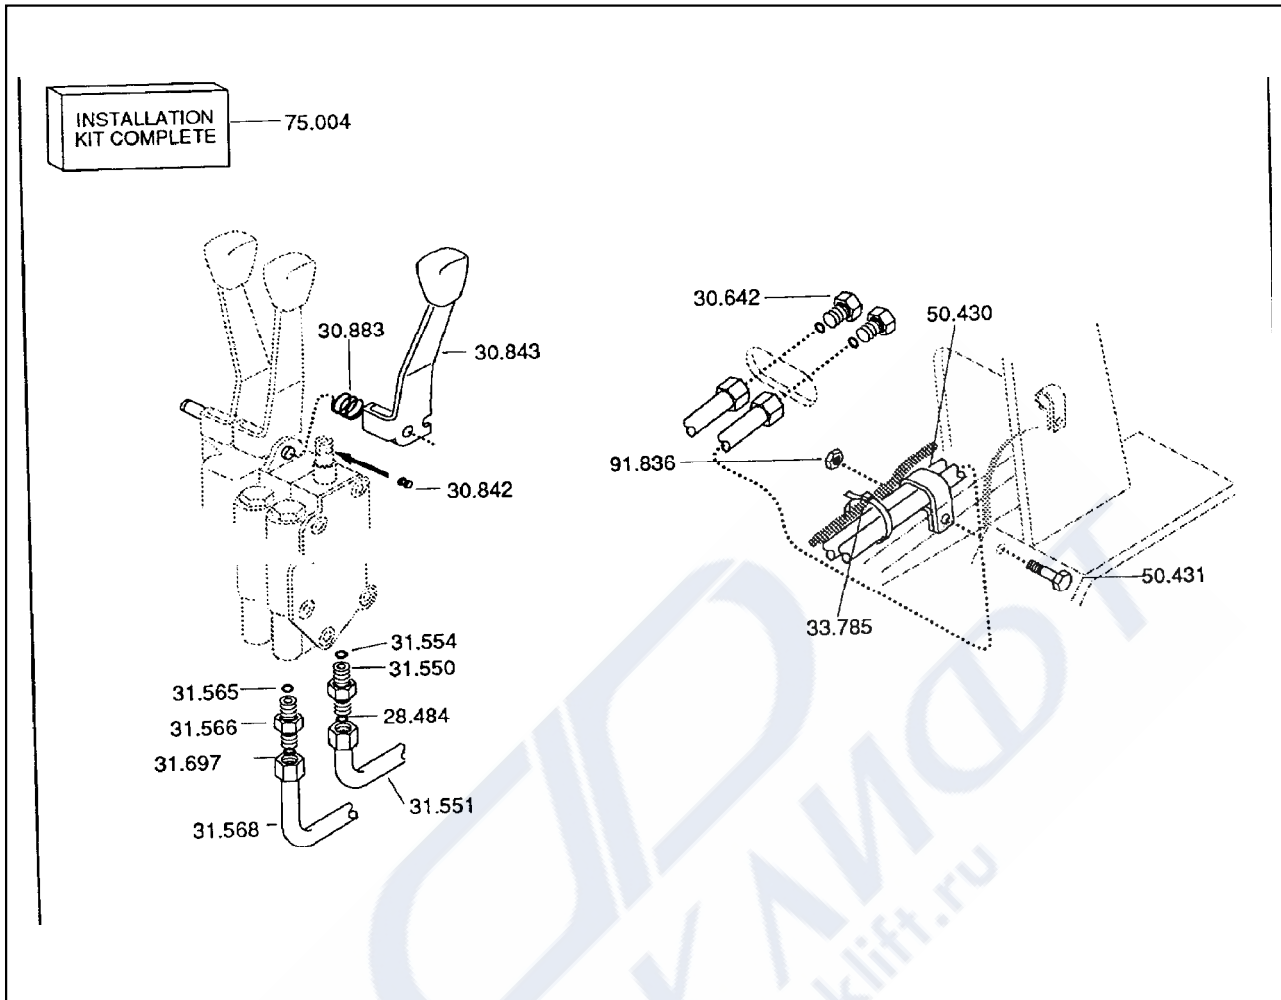 

- | | |
|--------|--|
| 28.484 | SEAL, AUXILIARY VALVE INLET FITTING
씰 |
| 30.642 | CAP, AUXILIARY VALVE SPOOL
캡 |
| 30.842 | FASTENER, LEVER TO LINK
패스너 |
| 30.843 | LEVER, AUXILIARY VALVE CONTROL (1ST AUX)
레버 |
| 30.883 | SPRING, AUXILIARY VALVE LEVER RH
스프링 |
| 31.550 | FITTING, AUXILIARY VALVE INLET PORT
피팅 |
| 31.551 | LINE, AUXILIARY VALVE INLET
라인 |
| 31.554 | SEAL, AUXILIARY VALVE INLET PORT FITTING
씰 |
| 31.565 | SEAL, AUXILIARY VALVE DISCHARGE PORT
씰 |

31.566	FITTING, AUXILIARY VALVE DISCHARGE PORT 피팅
31.568	LINE, AUXILIARY VALVE DISCHARGE 라인
31.697	SEAL, AUXILIARY VALVE OUTLET PORT 씰
33.785	STRAP, DEVICE SELECTOR VALVE HYDRAULIC LINE 스트랩
50.430	CLAMP, AUXILIARY VALVE LINES 클램프
50.431	FASTENER, AUX VALVE LINES CLAMP 패스너
75.004	KIT, AUXILIARY VALVE PLUMBING 키트
91.836	NUT, AUXILIARY VALVE LINES CLAMP FASTENER 너트

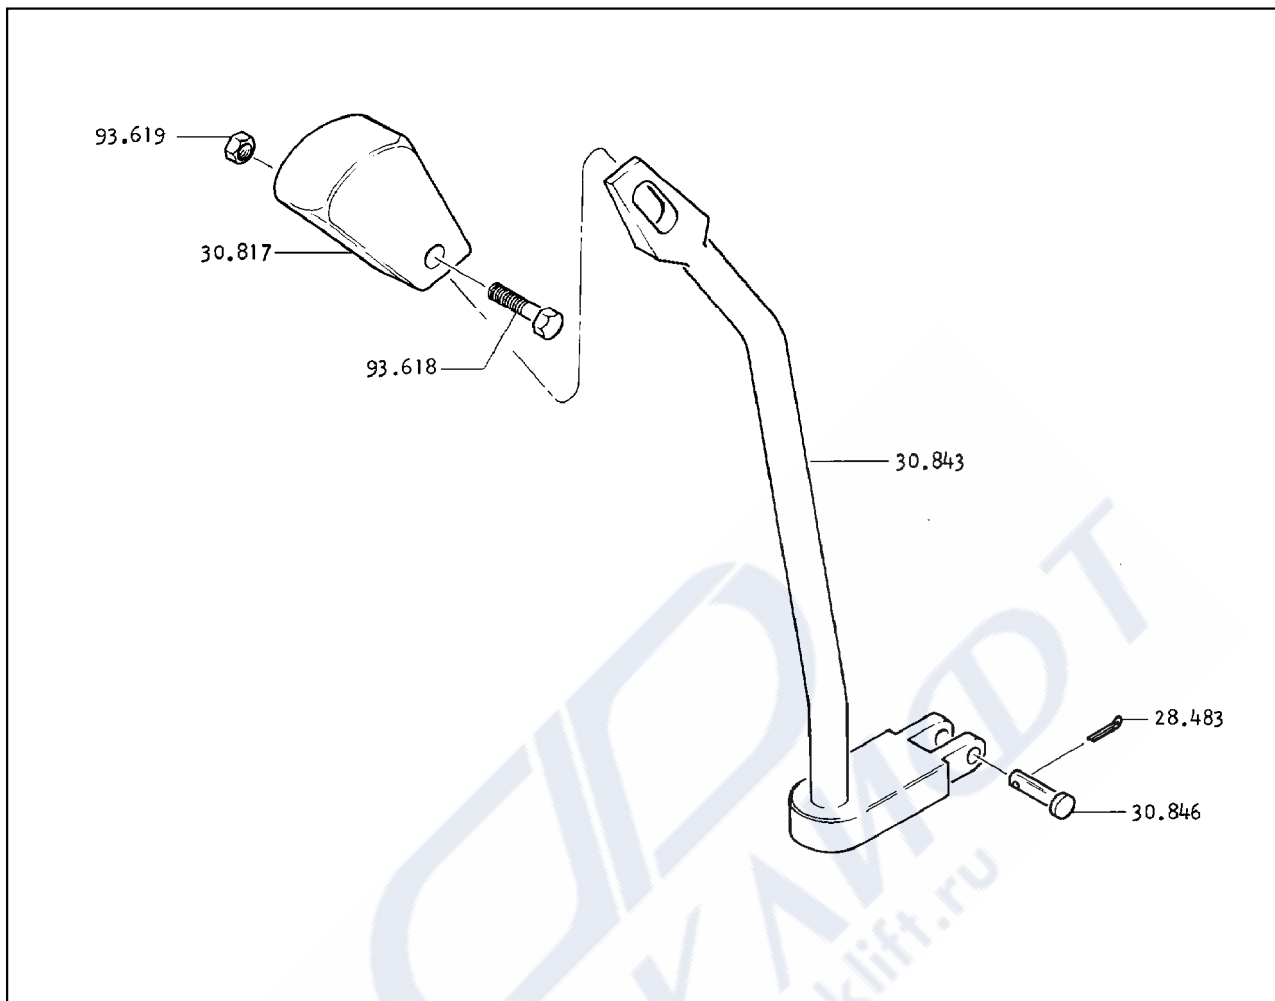 

- | | |
|--------|--|
| 28.483 | RETAINER, LEVER TO AUX VALVE SPOOL FASTENER
리테이너 |
| 30.817 | KNOB, AUXILIARY VALVE CONTROL LEVER
노브 |
| 30.843 | LEVER, AUXILIARY VALVE CONTROL (1ST AUX)
레버 |
| 30.846 | FASTENER, LEVER TO VALVE
패스너 |
| 93.618 | FASTENER, AUXILIARY VALVE CONTROL LEVER KNOB
패스너 |
| 93.619 | NUT, AUXILIARY VALVE CONTROL LEVER KNOB FASTENER
너트 |