

부품 매뉴얼 PARTS MANUAL

 
CQ 20/25/30 L

TRUCK MODEL : CQ20-30L

SERIAL NUMBER : CQ230L - XXXX - 8284 CNF (MMC)

부품 청구시 항상 장비의 SERIAL NO. 도
함께 알려 주십시오.

ALWAYS GIVE TRUCK SERIAL NUMBER
WHEN ORDERING PARTS.

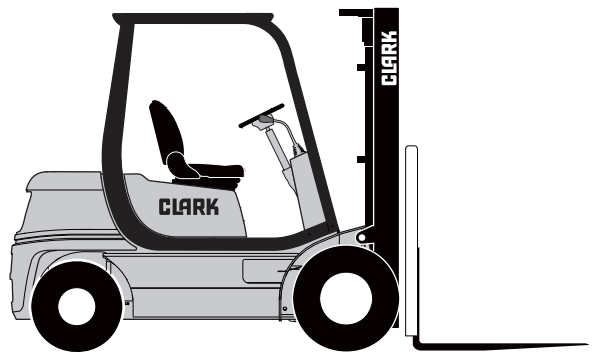

Publication Date : Dec. 2013



(Head office) 202-1 Ojung-Dong, Ojung-Gu,
Bucheon-city, Kyunggi-do, Korea
(Factory) No.18 Huaihedong Road,
Huangdao Economic & Technical Development Area,
Qingdao Shandong Province, China




00-094	SHORT BLOCK AND ENGINE GASKET SETS 숏 블록& 엔진 가스켓 세트	13-146	STROBE LIGHT 경광등
00-248	CRANKSHAFT 크랭크 축	13-162	STROBE LIGHT MOUNTING 경광등 마운팅
00-395	GOVERNOR 가버너	13-228	BACK-UP ALARM INSTALLATION 백-업 알람 조립그룹
00-511	ENGINE BALANCER ASSEMBLY 엔진 발란서 어셈블리	13-238	CLUSTER GROUP 클러스터 그룹
00-586	ENGINE SUB-ASSEMBLY MOUNTING 엔진 서브 어셈블리 마운팅	13-240	KEY SWITCH GROUP 키스위치 그룹
00-594	ENGINE SUB-ASSEMBLY MOUNTING 엔진 서브 어셈블리 마운팅	14-083	ELECTRICAL WIRING 전기장치 와이어링
00-742	ROCKER COVER 로커 커버	14-369	ELECTRICAL COMPONENTS 전기장치 구성품
00-743	OIL PAN 오일 팬	14-438	STATIC STRAP 스태틱 스트랩
00-776	CYLINDER HEAD (GAS/LP) 실린더 헤드 - 가솔린 LPG	20-084	DIFFERENTIAL & CARRIER 디퍼렌셜& 캐리어
00-781	ENGINE MOUNTING 엔진 마운팅	20-423	DRIVE AXLE 드라이브 액슬
00-818	CRANKCASE 크랭크케이스	20-424	DIFFERENTIAL & CARRIER 디퍼렌셜& 캐리어
00-861	CAMSHAFT 캠샤프트	22-013	DRIVE WHEEL & TIRE MOUNTING 드라이브휠& 타이어 마운팅
01-276	COOLING SYSTEM 쿨링 시스템	22-014	STEER WHEEL & TIRE MOUNTING 스티어휠& 타이어 마운팅
01-506	OIL PUMP 오일 펌프	22-024	DRIVE WHEEL & TIRE (SOLID TYPE) 드라이브 휠& 타이어 (솔리드 타입)
01-901	FAN MOUNTING 팬 마운팅	22-026	DRIVE WHEEL & TIRE (SOLID TYPE) 드라이브 휠& 타이어 (솔리드 타입)
02-457	ACCELERATOR LINKAGE 악셀레이터 링크이지	22-027	STEER WHEEL & TIRE (SOLID TYPE) 스티어 휠& 타이어 (솔리드 타입)
03-157	MANIFOLD 매니폴드	22-033	DUAL DRIVE WHEEL & TIRE MOUNTING 듀얼 드라이브 휠& 타이어 마운팅
03-158	EXHAUST MANIFOLD 배기 기관	22-041	DRIVE WHEEL AND TIRE 드라이브 휠& 타이어
03-350	FUEL LOCK-OFF VALVE 연료 잠금 밸브	22-043	DRIVE WHEEL AND TIRE 드라이브 휠& 타이어
03-529	FUEL SYSTEM 연료 시스템	22-044	STEER WHEEL & TIRE 스티어링 휠& 타이어
03-581	SWITCH INSTALLATION 스위치 조립그룹	22-135	BRAKE ASSEMBLY RH 브레이크 어셈블리 - 우
03-693	INTAKE SYSTEM 흡기 시스템 (듀얼)	22-136	BRAKE ASSEMBLY LH 브레이크 어셈블리 - 좌
03-699	EXHAUST SYSTEM 배기 시스템	23-214	INCHING MASTER CYLINDER 인칭 마스터 실린더
03-702	LPG TANK MOUNTING LPG 탱크 마운팅	23-418	BRAKE & INCHING LINES 브레이크& 인칭라인
06-068	HYDRATORK TRANSMISSION 하이드로토크 트랜스미션	23-420	PARKING BRAKE MOUNTING 주차 브레이크 마운팅
06-114	CONTROL VALVE ASSEMBLY 컨트롤 밸브 어셈블리	23-467	BRAKE LINES 브레이크 라인
06-603	HYDRATORK TRANSMISSION 하이드로토크 트랜스미션	25-044	STEERING COLUMN MOUNTING 스티어링 컬럼 마운팅
06-608	TRANSMISSION CLUTCH PACKS 트랜스미션 클러치 팩	26-182	STEERING AXLE 스티어링 액슬
07-045	TRANSAXLE MOUNTING 트랜스악슬 마운팅	26-240	STEERING CYLINDER 스티어링 실린더
10-072	TRANS COOLING LINES 트랜스미션 쿨링 라인	26-280	HYDRAULIC STEERING LINES 유압 스티어링 라인
11-040	DISTRIBUTOR 디스트리뷰터	26-342	STEER AXLE MOUNTING 스티어링 액슬 마운팅
11-099	CRANKING MOTOR ASSEMBLY 크랭킹 모터	29-178	HYDRAULIC PUMP ASSEMBLY 유압 펌프 어셈블리
11-205	IGNITION SYSTEM 점화 시스템	29-215	HYDRAULIC TANK & COMPONENTS MOUNTING 유압탱크& 구성품 마운팅
12-030	ALTERNATOR ASSEMBLY 알터네이터 어셈블리	29-576	HYDRAULIC PUMP MOUNTING 유압 펌프 마운팅
12-031	BATTERY MOUNTING 배터리 마운팅	30-512	HYDRAULIC CONTROL VALVE-2 SPOOL 유압 컨트롤 밸브 - 2 스톱
13-035	INSTRUMENT PANEL 계기판	30-513	HYDRAULIC CONTROL VALVE-3 SPOOL 유압 컨트롤 밸브 - 3 스톱

30-514	HYDRAULIC CONTROL VALVE-4 SPOOL 유압 컨트롤 밸브 - 4 스톨	40-289	MODEL & SPECIFICATION DECALS 모델& 사양 데칼
30-614	HYDRAULIC VALVE MOUNTING 유압 밸브 마운팅	41-011	STORAGE CONSOLE 저장 콘솔
31-136	TILT LIMIT WITH OVERRIDE 틸트 제어해제	47-000	SEAT WING KIT 시트윙 키트
31-200	HYDRAULIC RETURN LINES 유압 리턴 라인	47-006	ENGINE SHUTDOWN CONTROL GROUP 엔진 섷다운 컨트롤 그룹
31-201	AUX. VALVE PLUMBING 보조 밸브 기관	50-171	ATTACHMENT HOSE ADAPTATION (CARRIAGE) 어태치 호스 적용 (캐리지)
31-202	AUX. VALVE PLUMBING 보조 밸브 기관	50-172	HIGH TERMINATION FOR DEVICE HOSE ADAPTATION 하이 터미네이션 (디바이스 호스 적용)
31-367	HYDRAULIC LIFT & TILT LINES 유압 리프트& 틸트 라인	50-232	ATTACHMENT HOSE ADAPTATION (UPRIGHT) 어태치 호스 적용 (마스트)
31-841	HYDRAULIC SUPPLY LINES 유압 공급 라인	50-269	ATTACHMENT HOSE ADAPTATION (UPRIGHT) 어태치 호스 적용 (마스트)
32-139	TILT CYLINDER 틸트 실린더	50-270	ATTACHMENT HOSE & CABLE ADAPTATION (UPRIGHT) 어태치 호스& 케이블 적용 (마스트)
32-142	TILT CYLINDER 틸트 실린더	50-284	ATTACHMENT HOSE ADAPTATION (CARRIAGE) 어태치 호스 적용 (캐리지)
32-144	ACCUMULATOR 어큐뮬레이터	50-289	ATTACHMENT HOSE & CABLE ADAPTATION (UPRIGHT) 어태치 호스& 케이블 적용 (마스트)
32-153	TILT CYLINDER 틸트 실린더	50-290	ATTACHMENT HOSE & CABLE ADAPTATION (UPRIGHT) 어태치 호스& 케이블 적용 (마스트)
32-157	TILT CYLINDER MOUNTING 틸트 실린더 마운팅	50-291	ATTACHMENT HOSE & CABLE ADAPTATION (UPRIGHT) 어태치 호스& 케이블 적용 (마스트)
32-167	TILT AMOUNT GROUP 틸트 어마운트 그룹	50-407	ATTACHMENT HOSE ADAPTATION (UPRIGHT) 어태치 호스 적용 (마스트)
33-069	RELIEF VALVE ASSEMBLY 릴리프 밸브 어셈블리	50-410	ATTACHMENT HOSE ADAPTATION (UPRIGHT) 어태치 호스 적용 (마스트)
33-130	SELECTOR SOLENOID VALVE 셀렉터 솔레노이드 밸브	50-432	ATTACHMENT HOSE ADAPTATION (UPRIGHT) 어태치 호스 적용 (마스트)
34-044	LOAD BACK REST MOUNTING 로드 백 레스트 마운팅	50-439	ATTACHMENT HOSE ADAPTATION (UPRIGHT) 어태치 호스 적용 (마스트)
34-134	LIFT CARRIAGE ASSEMBLY 리프트 캐리지 어셈블리	50-791	ATTACHMENT HOSE ADAPTATION (CARRIAGE) 어태치 호스 적용 (캐리지)
34-209	CARRIAGE ASSEMBLY 캐리지 어셈블리	50-794	ATTACHMENT HOSE ADAPTATION (CARRIAGE) 어태치 호스 적용 (캐리지)
34-998	LIFT CARRIAGE ASSEMBLY 리프트 캐리지 어셈블리	50-796	ATTACHMENT HOSE ADAPTATION (CARRIAGE) 어태치 호스 적용 (캐리지)
37-118	HOOD MOUNTING 후드 마운팅	50-797	ATTACHMENT HOSE ADAPTATION (CARRIAGE) 어태치 호스 적용 (캐리지)
37-124	SEAT ARMREST ASSEMBLY 시트 암레스트 어셈블리	53-008	SIDESHIFT CYLINDER 사이드 쉬프트 실린더
38-113	COUNTERWEIGHT MOUNTING 카운터웨이트 조립그룹	53-024	FORK POSITIONER 포크 포지셔너
38-270	FRAME TANK BOTTOM PLUG 프레임 탱크 하단 플러그	53-084	FORK POSITIONER 포크 포지셔너
39-104	E SEAT ASSEMBLY 시트 어셈블리	53-146	F/P SIDESHIFT CYLINDER 포크포지셔너 사이드 쉬프트 실린더
39-147	E SEAT ASSEMBLY 시트 어셈블리	53-164	FORK POSITIONER 포크 포지셔너
39-519	LOAD BACK REST 로드 백 레스트	53-168	FORK POSITIONER (SHIFTING) 포크 포지셔너 (쉬프트 타입)
39-569	SEAT MOUNTING 시트 마운팅	53-170	FORK POSITIONER (BASIC) 포크 포지셔너 (기본)
39-585	SEAT ASSEMBLY (SUSPENSION) 시트 어셈블리	53-187	SIDE SHIFT ASSEMBLY 사이드 쉬프트 어셈블리
39-661	SEAT ASSEMBLY 시트 어셈블리	53-198	SIDESHIFT CYLINDER 사이드 쉬프트 실린더
39-771	SEAT MOUNTING 시트 마운팅	53-223	FORK POSITIONER CYLINDER 포크 포지셔너 실린더
39-834	SEAT ASSEMBLY (SUSPENSION) 시트 어셈블리	66-018	UPRIGHT MOUNTING 마스트 마운팅
39-912	FLOOR PLATE MOUNTING 플로어 플레이트 마운팅	66-058	FORK 포크
39-988	OVERHEAD GUARD MOUNTING 오버헤드가드 마운팅	66-999	EXTENTION FORK 익스텐션 포크
40-260	TRUCK FLUIDS 트럭 윤활유	75-(33)014	VARIABLE RELIEF VALVE INSTALLATION 가변 릴리프 밸브 조립그룹
40-288	DECALS 데칼	75-(33)045	DEVICE HYDRAULIC PRESSURE GAUGE INSTALLATION 디바이스 유압 압력게이지 조립그룹


75-(33)130 SOLENOID VALVE
솔레노이드 밸브

75-012 SEAT OPERATED BRAKE SWITCH
시트 조작 브레이크 스위치

 ФОРКЛИФТ
www.forklift.ru

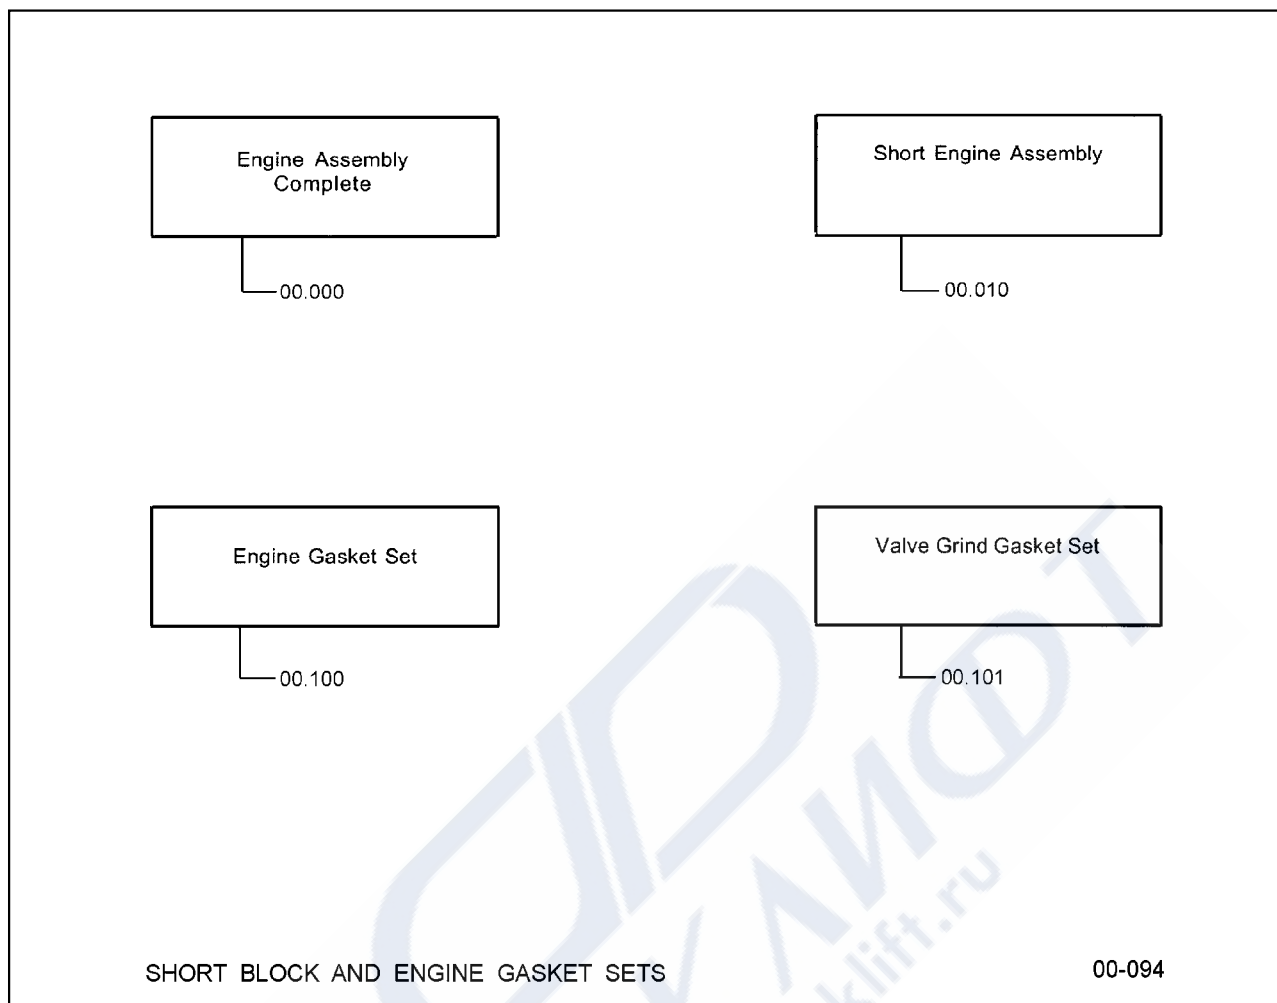



00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.010	SHORT ENGINE ASSEMBLY 숏엔진
00.100	GASKET KIT, ENGINE OVERHAUL 가스켓키트
00.101	VALVE GRIND GASKET KIT (TOP SET) 밸브가스켓키트

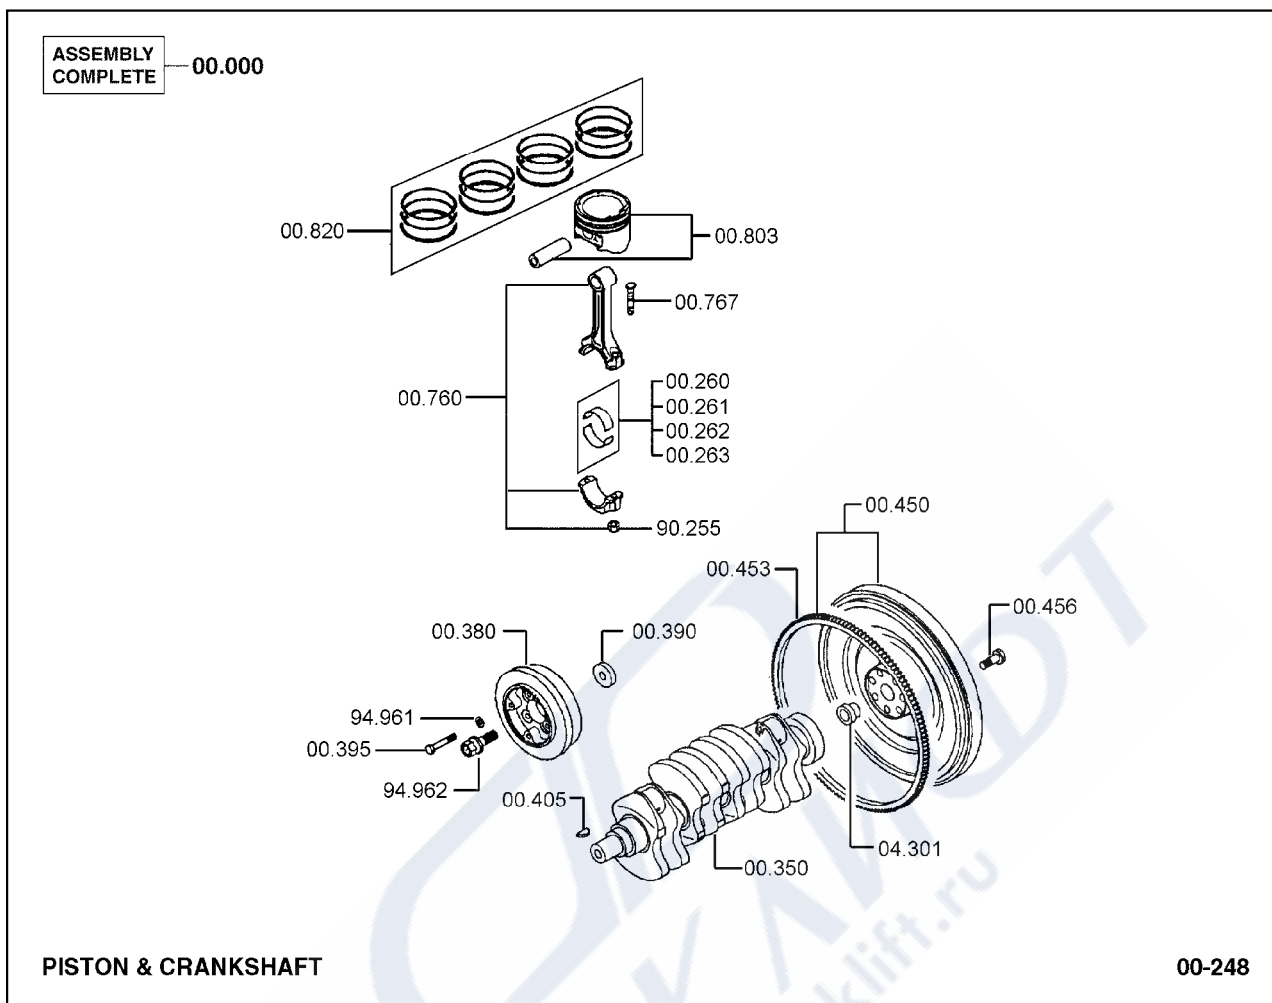 

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.260	BEARING, CONNECTING ROD (CYL. #1) 베어링
00.261	BEARING, CONNECTING ROD (CYL. #2) 베어링
00.262	BEARING, CONNECTING ROD (CYL. #3) 베어링
00.263	BEARING, CONNECTING ROD (CYL. #4) 베어링
00.350	CRANKSHAFT 크랭크샤프트
00.380	PULLEY, CRANKSHAFT 폴리
00.390	WASHER, CRANKSHAFT PULLEY 와셔
00.395	FASTENER, CRANKSHAFT PULLEY 패스너


00.405	KEY, CRANKSHAFT TIMING GEAR 키
00.450	FLYWHEEL 플라이휠
00.453	GEAR, FLYWHEEL RING 기어
00.456	FASTENER, CRANKSHAFT TO FLYWHEEL 패스너
00.760	ROD ASSEMBLY, CONNECTING 로드
00.767	FASTENER, CONNECTING ROD BEARING CAP 패스너
00.803	PISTON (ONE CYLINDER) 피스톤& 핀
00.820	PISTON RING 피스톤링
04.301	BEARING, PILOT (IN FLYWHEEL) 베어링
90.255	NUT, CONNECTING ROD BEARING CAP FASTENER 너트
94.961	LOCKWASHER, CRANKSHAFT ACCESS DRIVE PULLEY FASTENE 로크와셔
94.962	FASTENER, CRANKSHAFT PULLEY SPACER 패스너

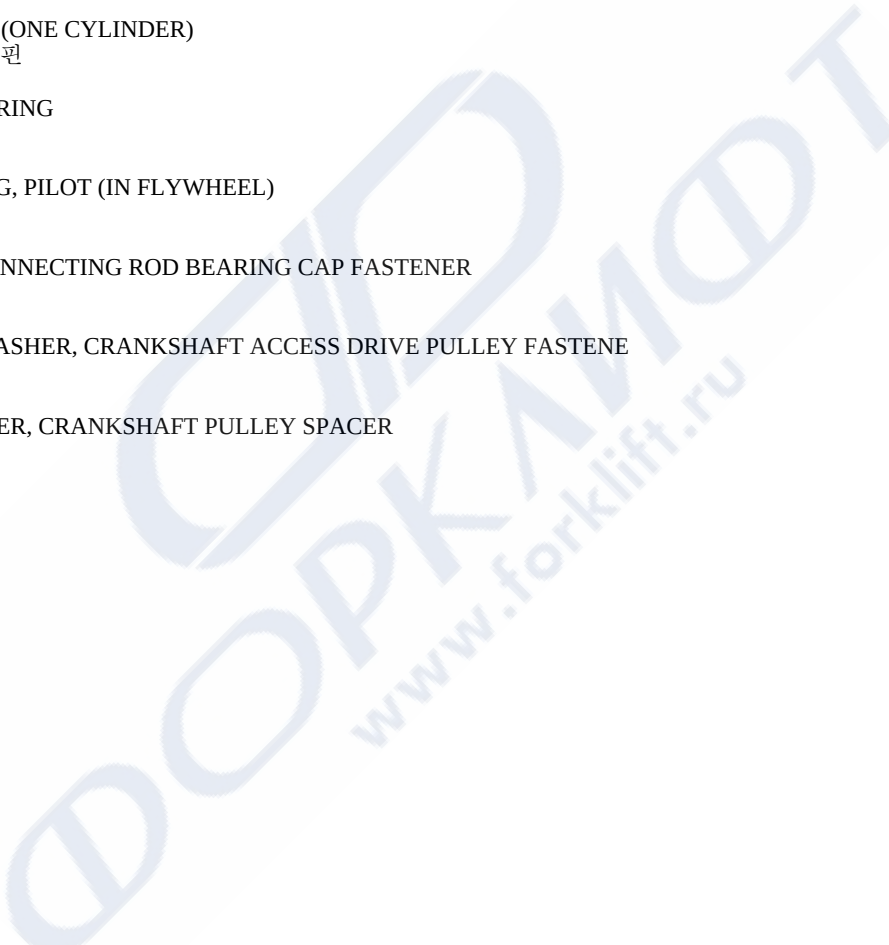 

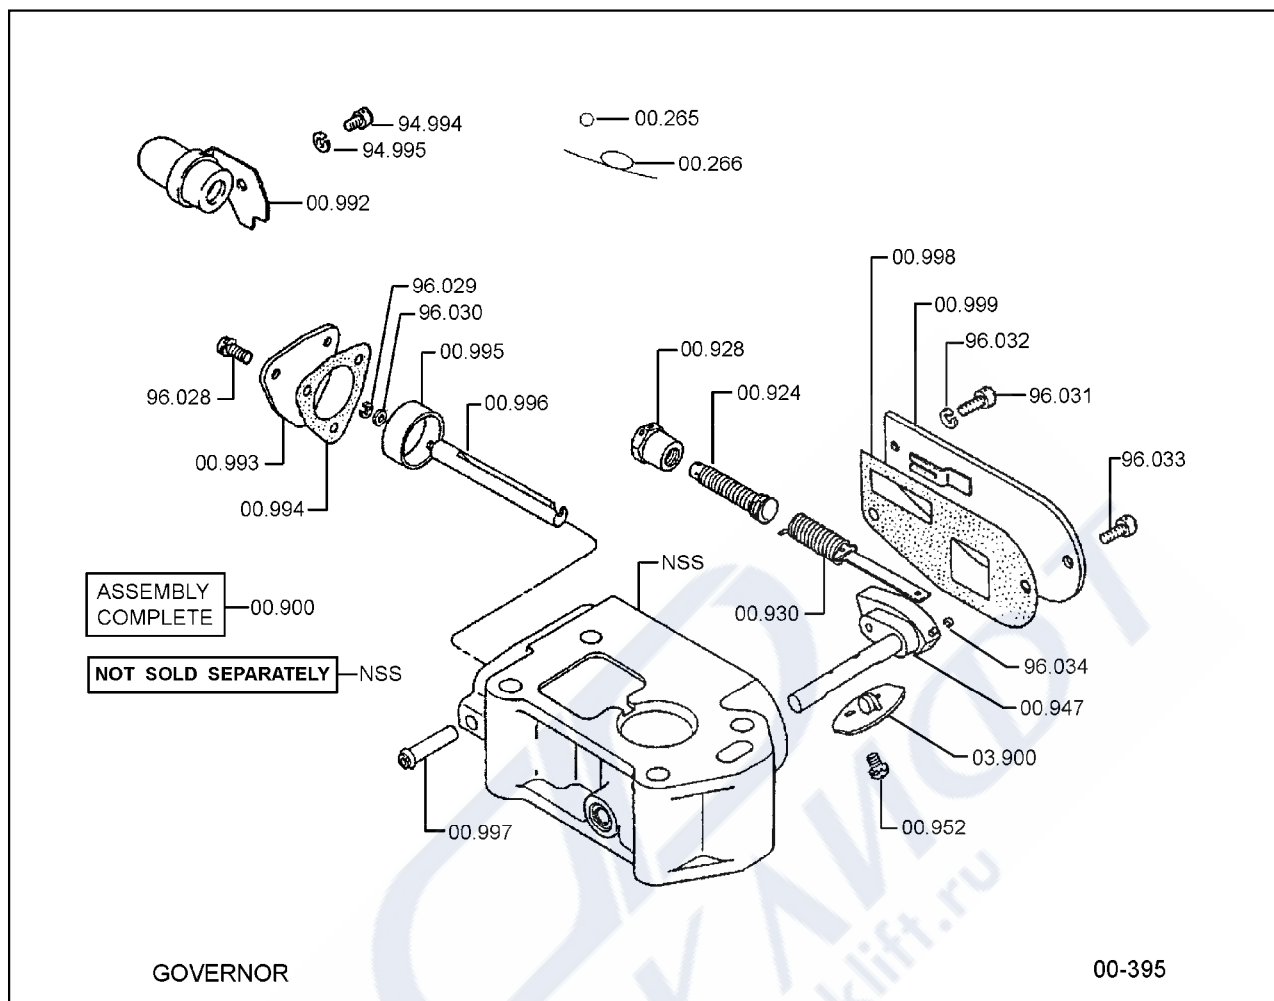 

00.265	BALL, ENGINE GOVERNOR LOCKWIRE 볼
00.266	LOCKWIRE, ENGINE GOVERNOR 로크와이어
00.900	GOVERNOR ASSEMBLY , ENGINE 거버너
00.924	ADJUSTOR, GOVERNOR SPRING 어드저스터
00.928	FASTENER, GOVERNOR ADJUSTING LEVER 패스너
00.930	SPRING, GOVERNOR 스프링
00.947	LEVER & SHAFT, GOVERNOR 레버& 샤프트
00.952	FASTENER, GOVERNOR THROTTLE 패스너
00.992	CAP, ENGINE GOVERNOR SEAL (SPEED ADJUSTMENT) 캡


00.993	COVER, GOVERNOR ACCESS 커버
00.994	GASKET, GOVERNOR ACCESS COVER 가스켓
00.995	PISTON, GOVERNOR STABILIZER 피스톤
00.996	SHAFT, GOVERNOR STABILIZER PISTON 샤프트
00.997	FITTING, GOVERNOR FUEL 피팅
00.998	GASKET, GOVERNOR ACCESS COVER 가스켓
00.999	COVER, GOVERNOR ACCESS 커버
03.900	THROTTLE PLATE, ENGINE GOVERNOR 스로틀
94.994	FASTENER, ENGINE GOVERNOR SPEED ADJUSTING SEAL CAP 패스너
94.995	LOCKWASHER, ENGINE GOVERNOR SPEED ADJUSTING SEAL CA 로크와셔
96.028	FASTENER, GOVERNOR ACCESS COVER 패스너
96.029	FASTENER, GOVERNOR STABILIZER PISTON 패스너
96.030	WASHER, GOVERNOR STABILIZER PISTON 와셔
96.031	FASTENER, GOVERNOR ACCESS COVER 패스너
96.032	LOCKWASHER, GOVERNOR ACCESS COVER FASTENER 로크와셔
96.033	FASTENER, GOVERNOR ACCESS COVER 패스너
96.034	FASTENER, GOVERNOR SPRING 패스너

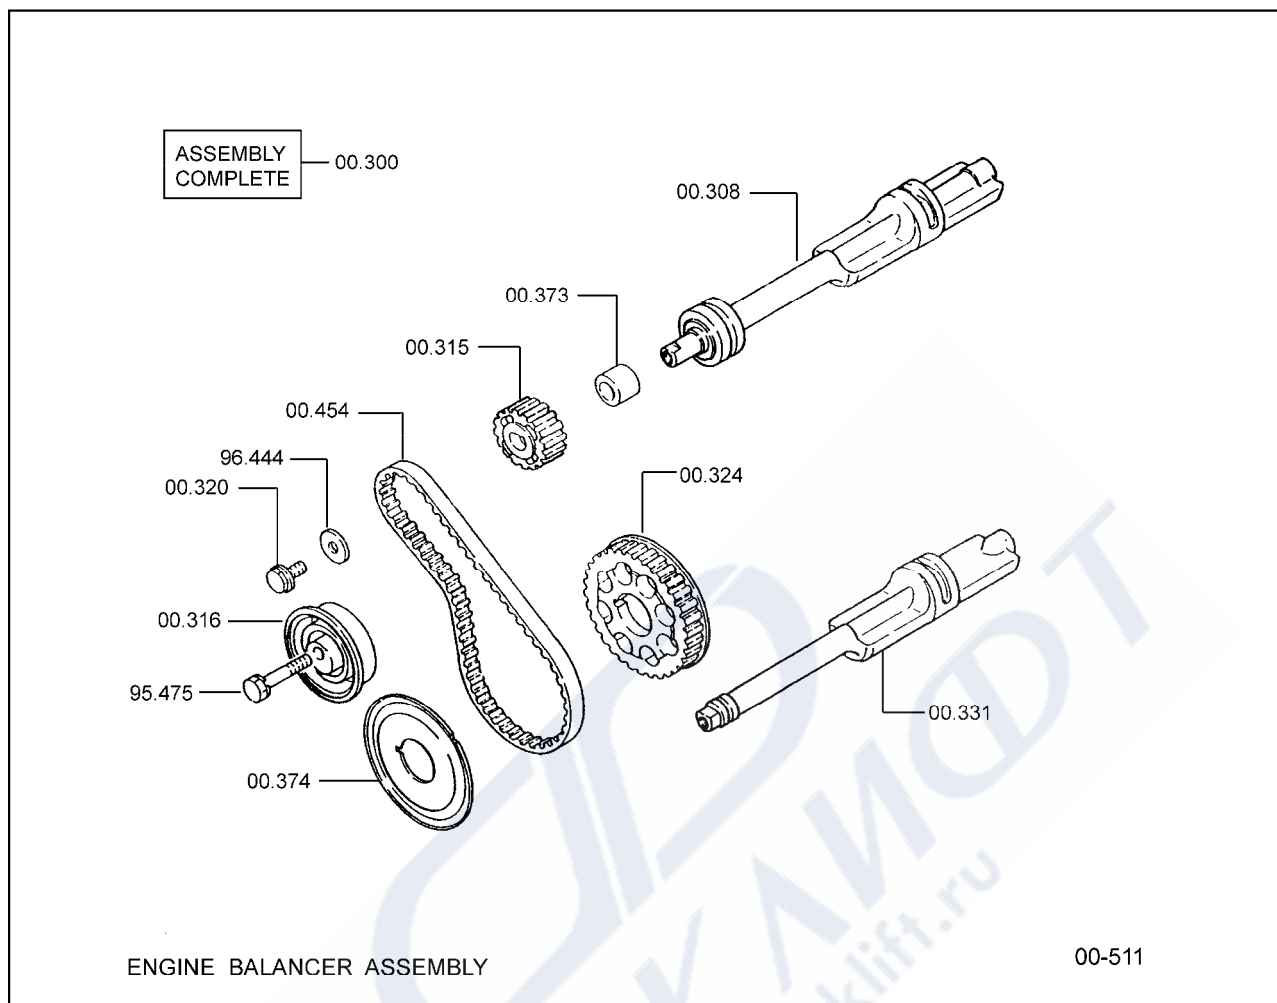 

00.300	BALANCER ASSEMBLY, ENGINE 밸런스어셈블리
00.308	WEIGHT, ENGINE BALANCER 밸런스어웨이트
00.315	GEAR, BALANCER WEIGHT DRIVEN 기어
00.316	RETAINER, BALANCER WEIGHT GEARS 리테이너
00.320	FASTENER, ENGINE BALANCER DRIVE GEAR 패스너
00.324	GEAR, BALANCER WEIGHT DRIVE 기어
00.331	WEIGHT, ENGINE BALANCER 밸런스어웨이트
00.373	SPACER, ENGINE BALANCER WEIGHT DRIVEN GEAR 스페이서
00.374	SEAL, ENGINE BALANCER WEIGHT RETAINER 씰

00.454	CHAIN,ENGINE BALANCER DRIVE 체인
95.475	FASTENER, ENGINE BALANCER WEIGHT RETAINER 패스너
96.444	WASHER, BALANCER DRIVEN GEAR 와셔




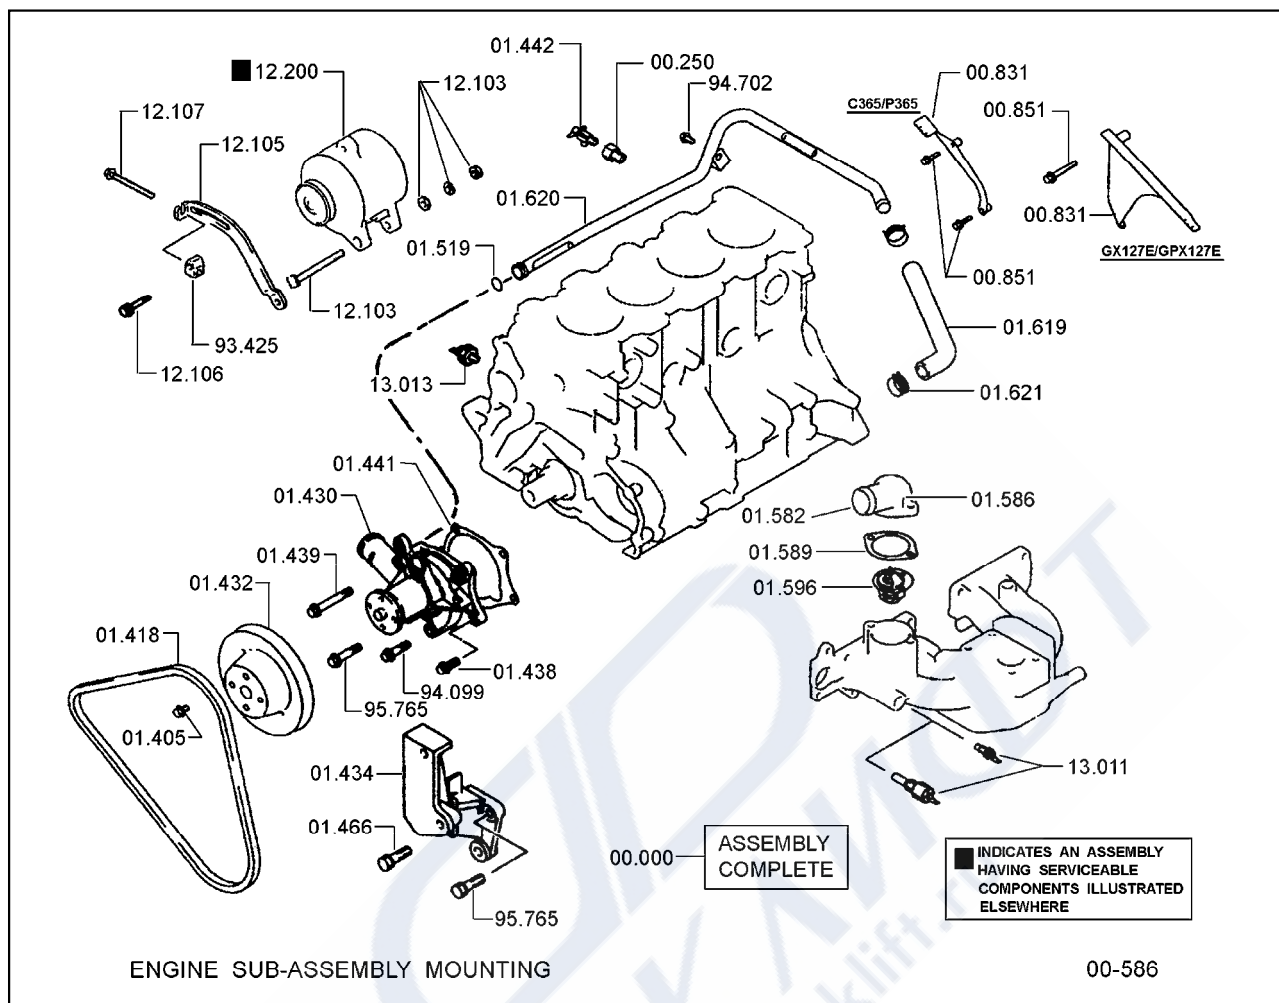 

00.000	PRODUCTION ENGINE ASSEMBLY 엔진	01.582	ELBOW, WATER OUTLET 엘보우
00.250	FITTING, WATER PUMP 피팅	01.586	FASTENER, WATER OUTLET ELBOW - FANSIDE 패스너
00.831	TIMING INDICATOR PLATE 타이밍플레이트	01.589	GASKET, WATER OUTLET ELBOW 가스켓
00.851	FASTENER, ENGINE TIMING POINTER 패스너	01.596	THERMOSTAT, ENGINE 서모스탯
01.405	FASTENER, FAN BLADE 패스너	01.619	LINE, WATER PUMP BLEEDER 라인
01.418	BELT, WATER PUMP 벨트	01.620	FITTING, WATER PUMP BLEEDER LINE 피팅
01.430	PUMP ASSEMBLY, ENGINE WATER 펌프	01.621	CLAMP, WATER PUMP BLEEDER LINE 클램프
01.432	PULLEY, WATER PUMP 풀리	12.103	FASTENER, ALTERNATOR TO BRACKET 패스너
01.434	COVER, WATER PUMP 커버	12.105	STRAP, ALTERNATOR ADJUSTING 스트랩
01.438	FASTENER, WATER PUMP 패스너	12.106	FASTENER, ADJUSTING STRAP MOUNTING 패스너
01.439	FASTENER, WATER PUMP 패스너	12.107	FASTENER, ADJUSTING STRAP TO ALTERNATOR 패스너
01.441	GASKET, ENGINE WATER PUMP ATTACHING 가스켓	12.200	ALTERNATOR ASSEMBLY 알터네이터
01.442	DRAIN COCK, ENGINE WATER PUMP 드레인콕	13.011	CONTROL, ENGINE TEMPERATURE INDICATOR 컨트롤
01.466	FASTENER, WATER PUMP COVER 패스너	13.013	CONTROL, ENGINE OIL PRESSURE INDICATOR 컨트롤
01.519	SEAL, WATER PUMP BLEEDER LINE FITTING 씰	94.099	FASTENER, WATER PUMP DISCHARGE FLANGE 패스너


94.702	FASTENER, WATER PUMP BLEEDER LINE CLIP 패스너
95.425	NUT, CONTROL PANEL CAPACITOR MOUNTING 너트
95.765	FASTENER, WATER PUMP 패스너




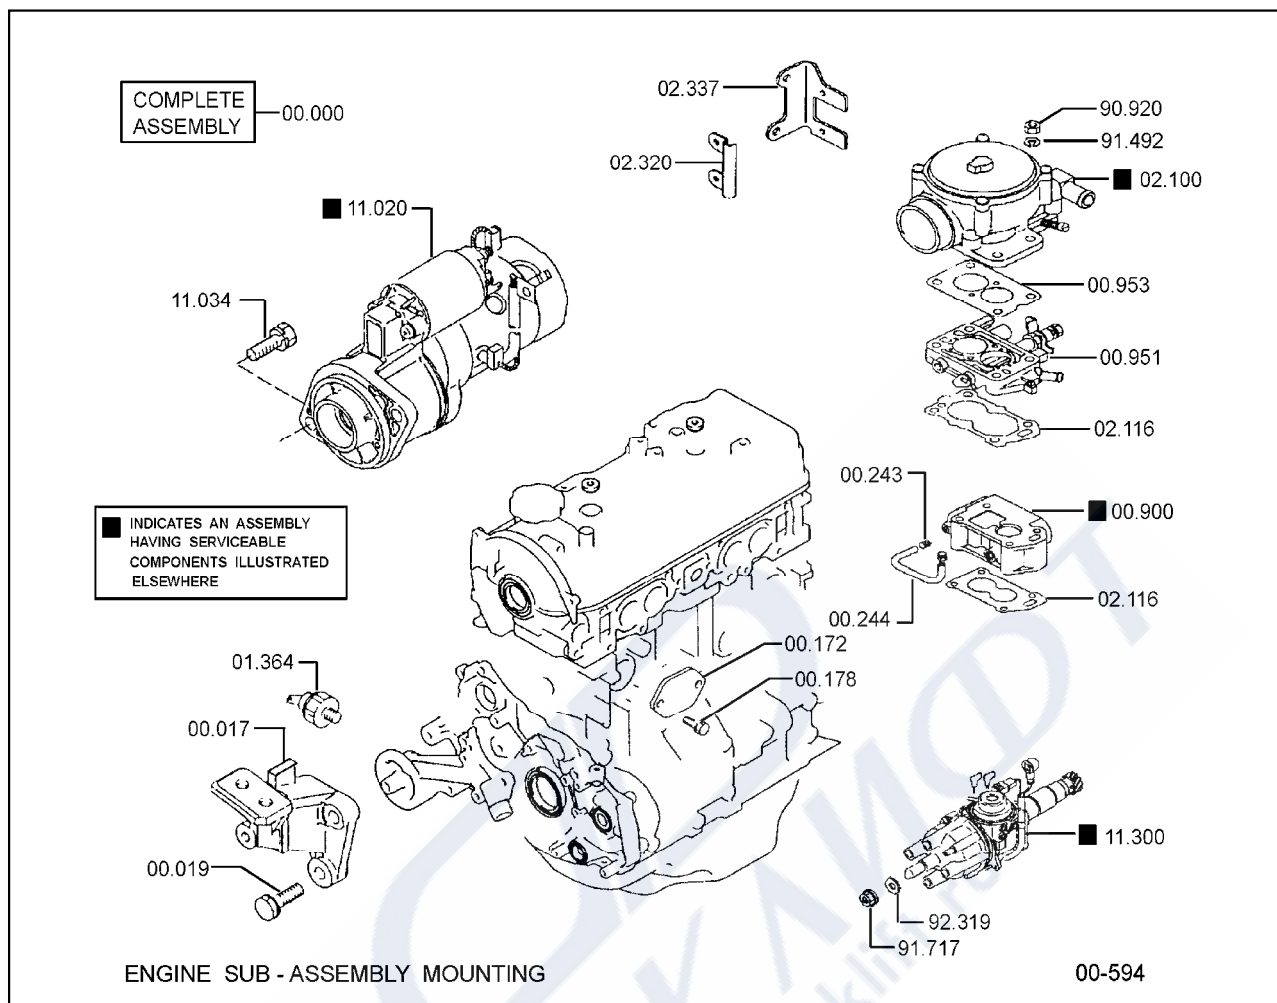 

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.017	BRACKET, ENGINE FRONT SUPPORT 브라켓
00.019	FASTENER, ENGINE FRONT SUPPORT BRACKET 패스너
00.172	COVER, CRANKCASE FUEL PUMP HOLE 커버
00.178	FASTENER, CRANKCASE FUEL PUMP HOLE COVER 패스너
00.243	CLAMP, ENGINE AIR GOVERNOR VENT LINE 클램프
00.244	LINE, ENGINE AIR GOVERNOR VENTILATION 라인
00.900	GOVERNOR ASSEMBLY , ENGINE 거버너
00.951	THROTTLE ASSEMBLY, GOVERNOR 스로틀


00.953	GASKET, GOVERNOR THROTTLE MOUNTING 가스켓
01.364	FITTING, OIL PRESSURE GAUGE LINE 피팅
02.100	CARBURETOR ASSEMBLY 기화기
02.116	GASKET, CARBURETOR MOUNTING 가스켓
02.320	BRACKET, ACCELERATOR LEVER ATTACHING 브라켓
02.337	BRACKET, ACCELERATOR LEVER MOUNTING 브라켓
11.020	MOTOR ASSEMBLY, STARTING 모터
11.034	FASTENER, STARTING MOTOR 패스너
11.300	DISTRIBUTOR ASSEMBLY 디스트리뷰터
90.920	NUT, CARBURETOR MOUNTING FASTENER 너트
91.492	LOCKWASHER, CARBURETOR MOUNTING FASTENER 로크와셔
91.717	NUT, DISTRIBUTOR FASTENER 너트
92.319	WASHER, DISTRIBUTOR MOUNTING CLAMP FASTENER 와셔

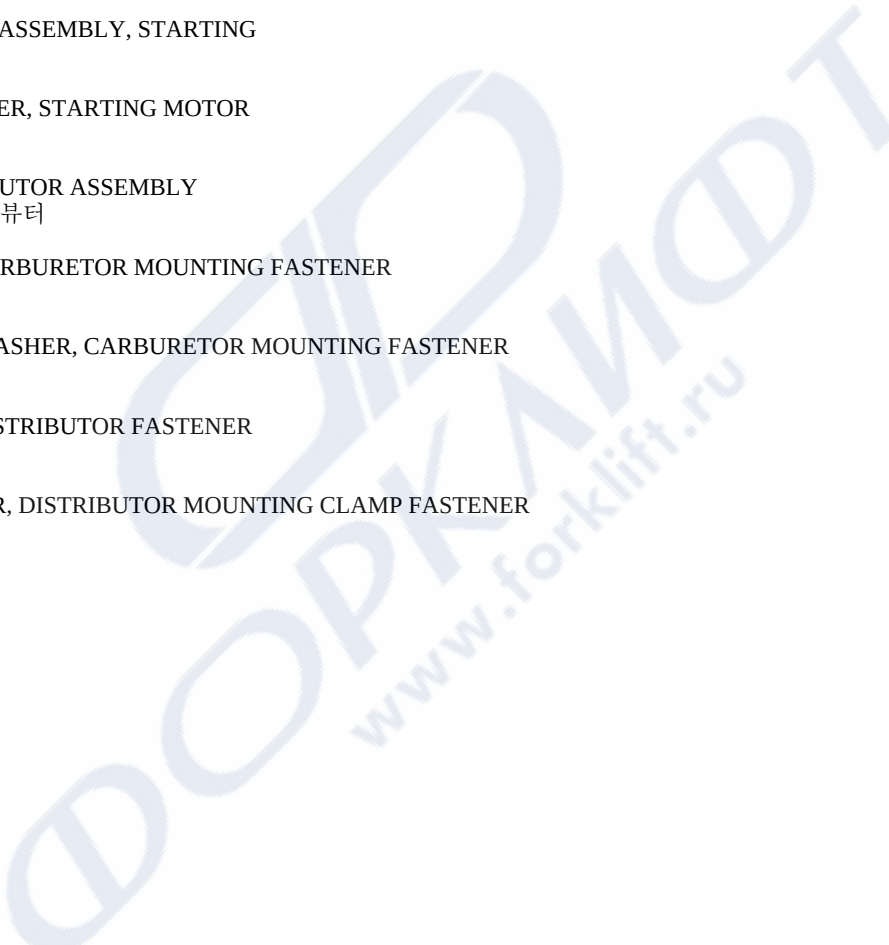 

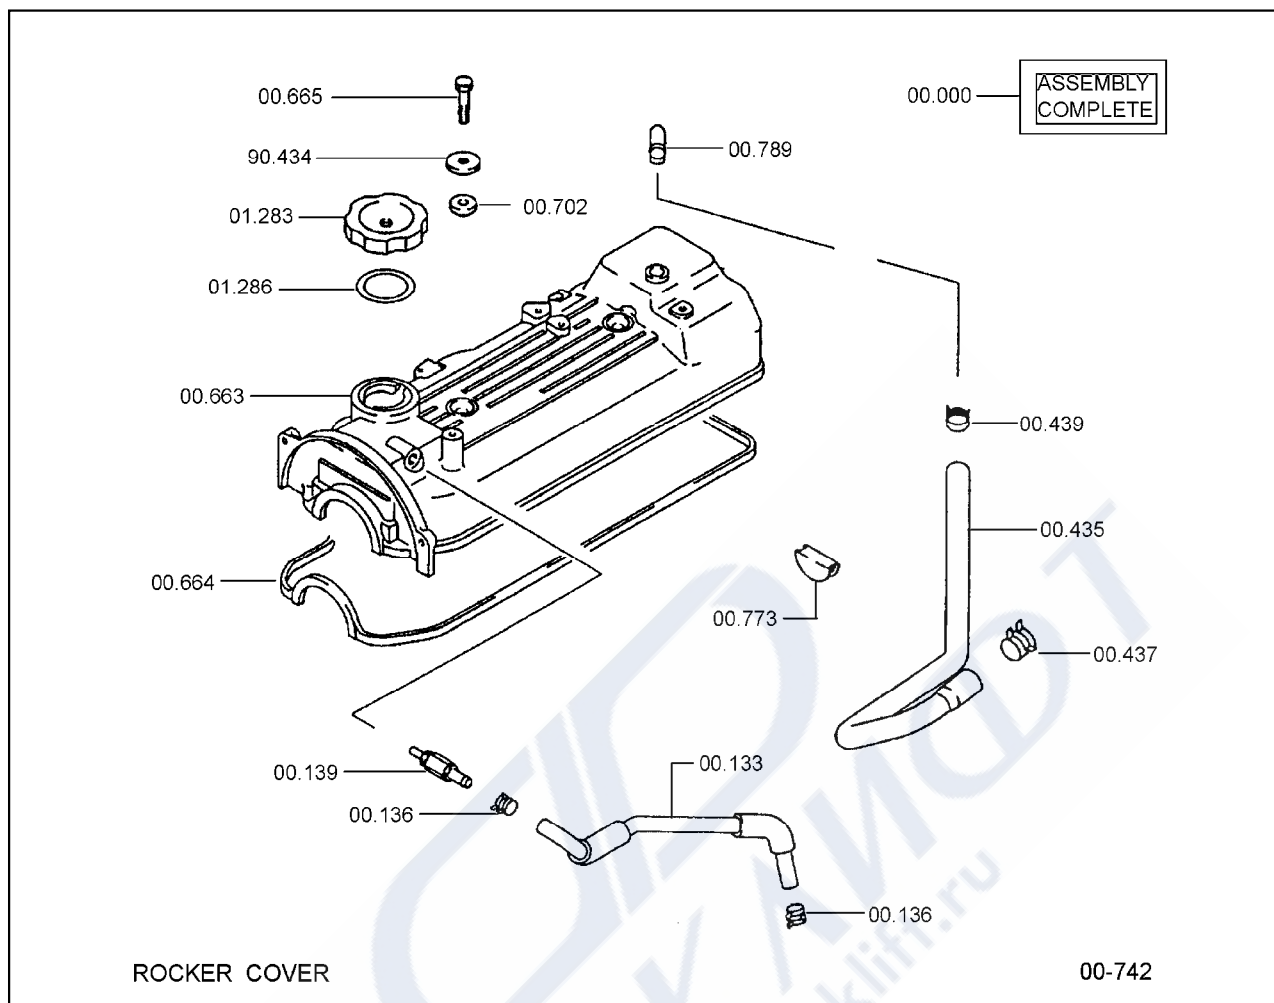 


00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.133	TUBE, CRANKCASE VENT 튜브
00.136	CLIP, CRANKCASE VENT TUBE 클립
00.139	VALVE, CRANKCASE VENT TUBE 밸브
00.435	LINE, CRANKCASE BREATHER 라인
00.437	CLAMP, CRANKCASE BREATHER LINE 클램프
00.439	CLAMP, CRANKCASE VENT LINE 클램프
00.663	COVER, ROCKER ARM 커버
00.664	GASKET, ROCKER ARM COVER 가스켓

00.665	FASTENER, ROCKER ARM COVER 패스너
00.702	SEAL, ROCKER ARM COVER FASTENER 씰
00.733	PLUG, CRANKCASE HEAD END COVER 플러그
00.789	PLUG, ROCKER ARM COVER 플러그
01.283	CAP, CRANKCASE OIL FILLER 캡
01.286	GASKET, OIL FILLER CAP 가스켓
90.434	WASHER, ROCKER ARM COVER FASTENER 와셔

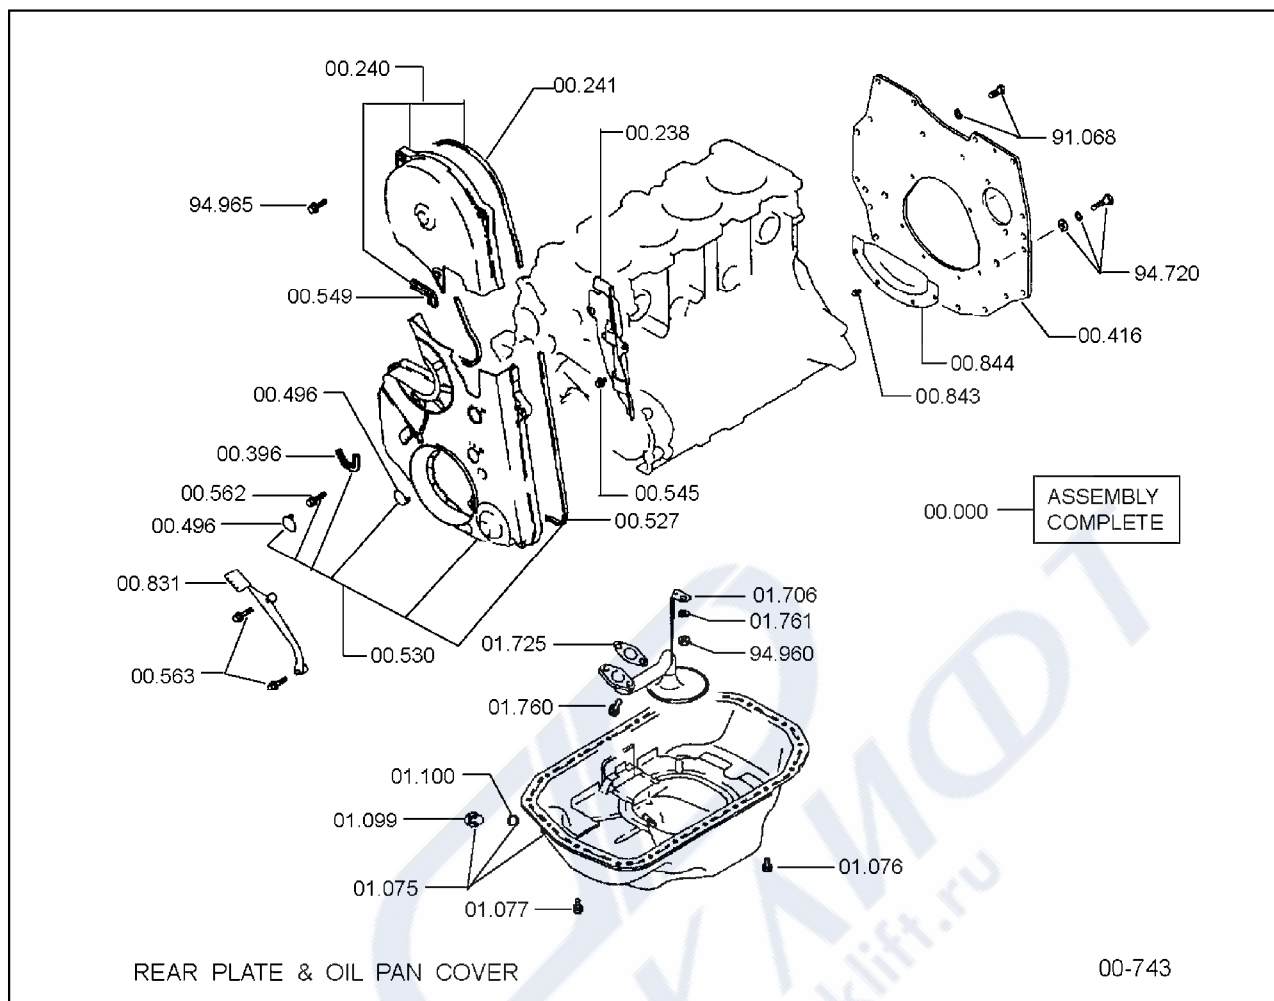 


00.000	PRODUCTION ENGINE ASSEMBLY 엔진	00.844	SHIELD, FLYWHEEL HOUSING DUST 실드
00.238	COVER, TIMING BELT UNDER LOWER 커버	01.075	PAN, CRANKCASE OIL 팬
00.240	COVER, TIMING BELT FRONT UPPER 커버	01.076	FASTENER, CRANKCASE OIL PAN 패스너
00.241	GASKET, TIMING BELT FRONT UPPER COVER 가스켓	01.077	FASTENER, OIL PAN TO CRANKCASE 패스너
00.396	SEAL, ENGINE FRONT GEAR COVER GASKET 씰	01.099	PLUG, CRANKCASE OIL PAN DRAIN 플러그
00.416	PLATE, ENGINE REAR 플레이트	01.100	GASKET, CRANKCASE OIL PAN DRAIN PLUG 가스켓
00.496	PLUG, ENGINE FRONT GEAR COVER 플러그	01.706	STRAINER, OIL PUMP OIL 스트레이너
00.527	GASKET, ENGINE FRONT GEAR COVER 가스켓	01.725	GASKET, OIL STRAINER FRAME 가스켓
00.530	COVER, ENGINE FRONT GEAR 커버	01.760	BOLT, OIL PUMP STRAINER FASTENER 볼트
00.545	FASTENER, ENGINE FRONT GEAR COVER 패스너	01.761	LOCKWASHER, OIL PUMP STRAINER FASTENER 로크와셔
00.549	GASKET, ENGINE FRONT GEAR COVER SEAL 가스켓	91.068	BOLT, ENGINE REAR PLATE 볼트
00.562	FASTENER, ENGINE FRONT GEAR COVER 패스너	94.720	FASTENER, ENGINE REAR PLATE 패스너
00.563	FASTENER, ENGINE FRONT GEAR COVER 패스너	94.960	NUT, OIL PUMP STRAINER FASTENER 너트
00.831	TIMING INDICATOR PLATE 타이밍 플레이트	94.965	FASTENER, TIMING BELT FRONT UPPER COVER 패스너
00.843	FASTENER, FLYWHEEL HOUSING DUST SHIELD 패스너		

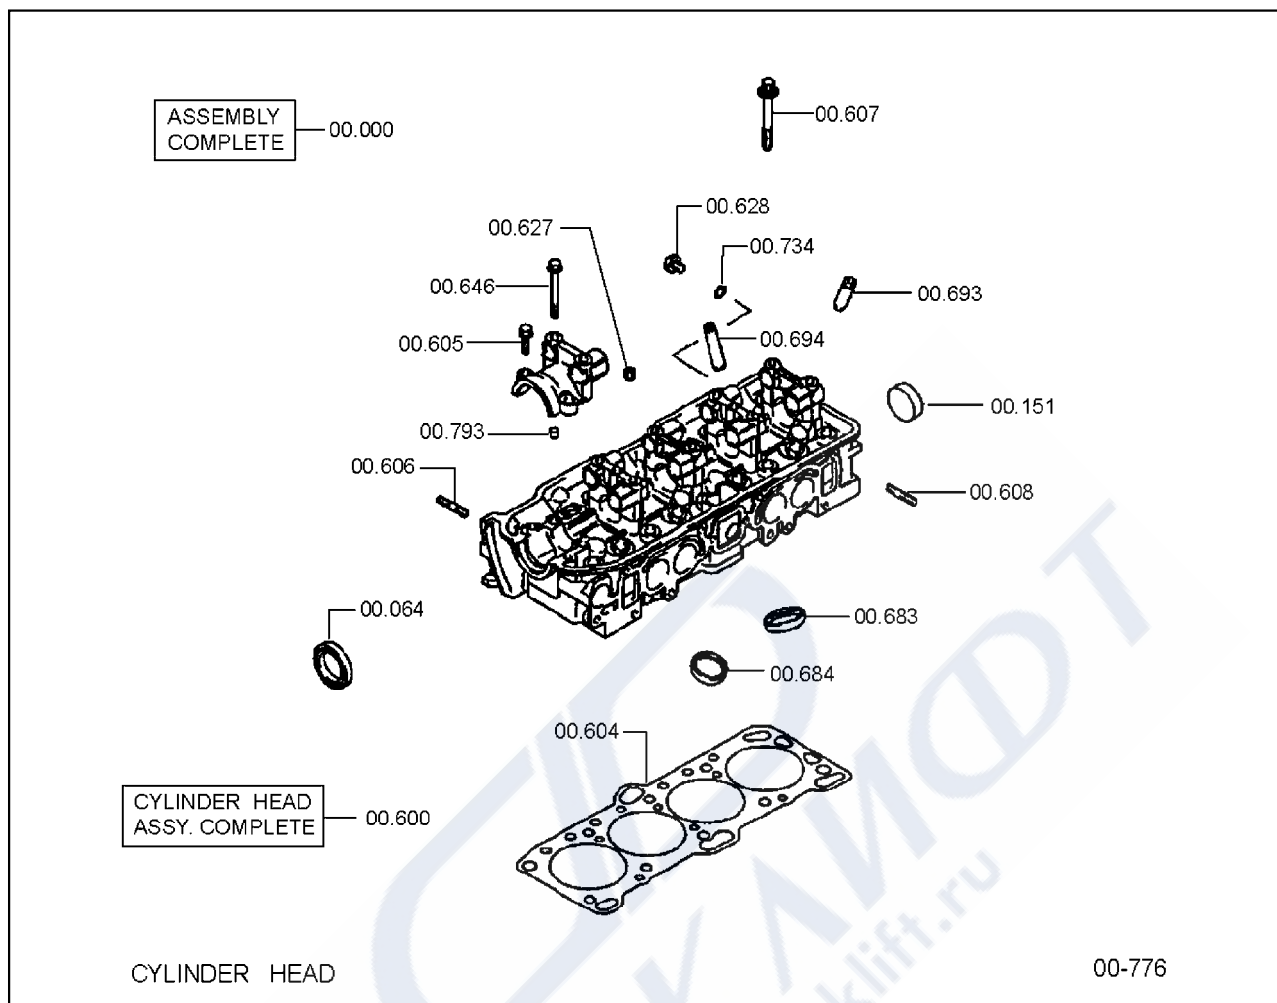 


00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.064	SEAL, CAMSHAFT OIL 씰
00.151	PLUG, CRANKCASE HEAD REAR 플러그
00.600	HEAD ASSEMBLY, CRANKCASE 헤드
00.604	GASKET, CRANKCASE HEAD 가스켓
00.605	FASTENER, CRANKCASE HEAD 패스너
00.606	FASTENER, CRANKCASE HEAD 패스너
00.607	FASTENER, CRANKCASE HEAD 패스너
00.608	FASTENER, CRANKCASE HEAD 패스너

00.627	PLUG, CRANKCASE HEAD 플러그
00.628	PLUG, CRANKCASE HEAD 플러그
00.646	FASTENER, ENGINE ROCKER ARM PIVOT SUPPORT 패스너
00.683	SEAT, EXHAUST VALVE INSERT 시트
00.684	SEAT, INTAKE VALVE INSERT 시트
00.693	GUIDE, INTAKE VALVE 가이드
00.694	GUIDE, EXHAUST VALVE 가이드
00.734	SEAL, CRANKCASE HEAD PLUG 씰
00.793	BUSHING, ENGINE LOCKER ARM PIVOT SUPPORT 부싱

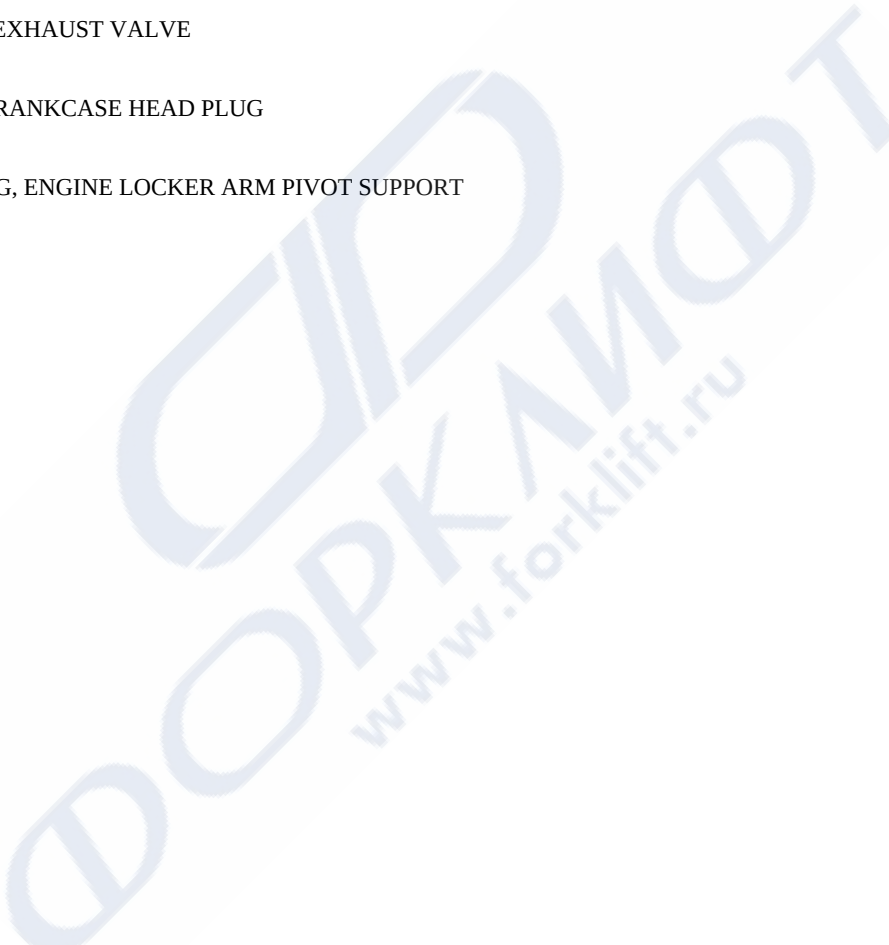 

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

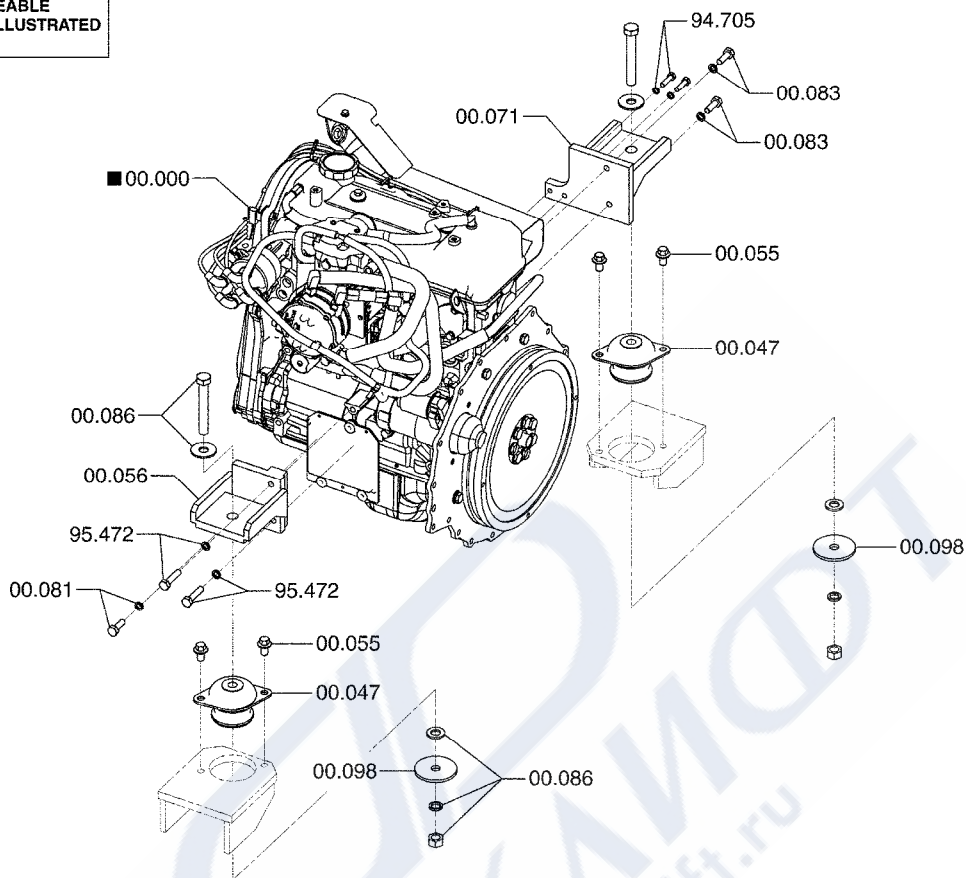


ENGINE MOUNTING

00-781

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.047	DAMPENER, ENGINE FRONT VIBRATION 댐프너
00.055	FASTENER, ENGINE FRONT VIBRATION DAMPENER 패스너
00.056	MOUNT, ENGINE RH 마운트
00.071	MOUNT, ENGINE LH 마운트
00.081	FASTENER, ENGINE MOUNT (RH) 패스너
00.083	FASTENER, ENGINE MOUNT (LH) 패스너
00.086	FASTENER, RH ENGINE MOUNT 패스너
00.098	WASHER, ENGINE MOUNTING TO FRAME RH 와셔

94.705	FASTENER, ENGINE MOUNTING BRACKET 패스너
95.472	FASTENER, ENGINE MOUNT 패스너




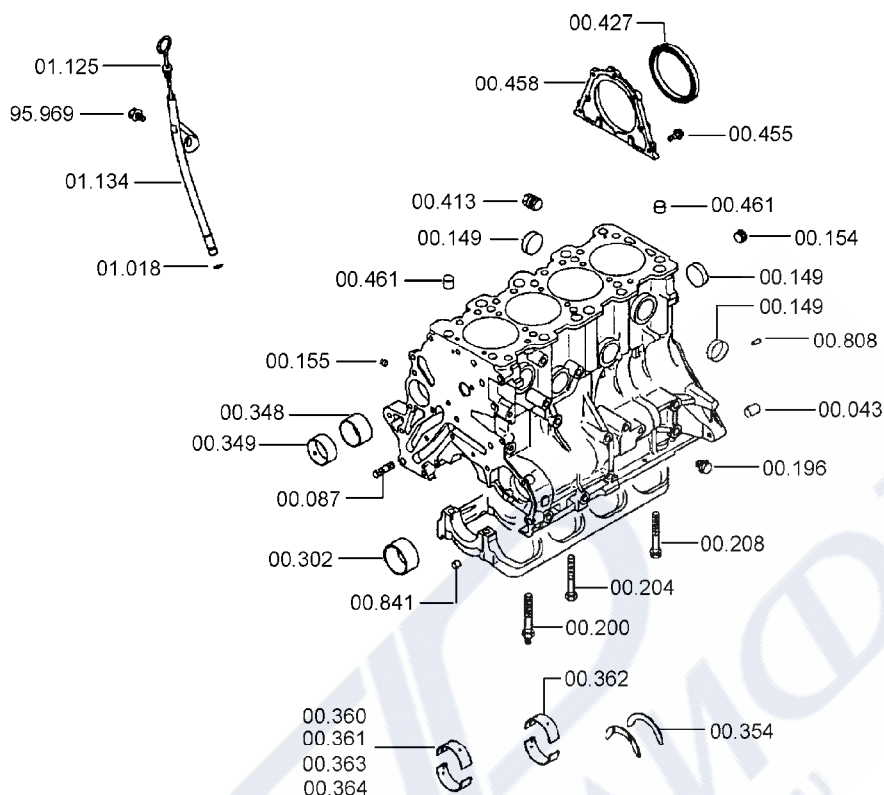 


CYLINDER BLOCK

00-818

00.043	BUSHING, ENGINE REAR SUPPORT BRACKET 부싱	00.362	BEARING, NO. 3 MAIN JOURNAL 베어링
00.087	STUD, ENGINE FRONT SUPPORT 스터드	00.363	BEARING, NO. 4 MAIN JOURNAL 베어링
00.149	PLUG - EXPANSION, CRANKCASE SIDE 플러그	00.364	BEARING, NO. 5 MAIN JOURNAL 베어링
00.154	PLUG - EXPANSION, CRANKCASE END 플러그	00.413	PLUG & WASHER, CRANKCASE 플러그&와셔
00.155	PLUG - EXPANSION, CRANKCASE END 플러그	00.427	SEAL, CRANKCASE REAR OIL 씰
00.196	PLUG-EXPANSION, CRANKCASE SIDE 플러그	00.455	FASTENER, REAR OIL SEAL HOUSING 패스너
00.200	FASTENER, CRANKSHAFT BEARING NO. 1 CAP 패스너	00.458	HOUSING, REAR OIL SEAL 하우징
00.204	FASTENER, CRANKSHAFT BEARING NO. 2 CAP 패스너	00.461	DOWEL, CRANKCASE HEAD 다웰
00.208	FASTENER, CRANKSHAFT BEARING NO. 3 CAP 패스너	00.808	DOWEL RING, CRANKCASE REAR ADAPTOR PLATE 다웰링
00.302	BEARING, BALANCER WEIGHT REAR 베어링	00.841	DOWEL RING, ENGINE FRONT GEAR COVER 다웰링
00.348	BEARING, ENGINE BALANCER SHAFT REAR 베어링	01.018	SEAL, OIL LEVEL DIPSTICK ADAPTOR 씰
00.349	BEARING, ENGINE BALANCER SHAFT FRONT 베어링	01.125	DIPSTICK, CRANKCASE OIL LEVEL 답스틱
00.354	WASHER, CRANKSHAFT THRUST 와셔	01.134	ADAPTOR, CRANKCASE OIL LEVEL DIPSTICK 어답터
00.360	BEARING, NO. 1 MAIN JOURNAL 베어링	95.969	FASTENER, ENGINE OIL LEVEL CONTROL 패스너
00.361	BEARING, NO. 2 MAIN JOURNAL 베어링		

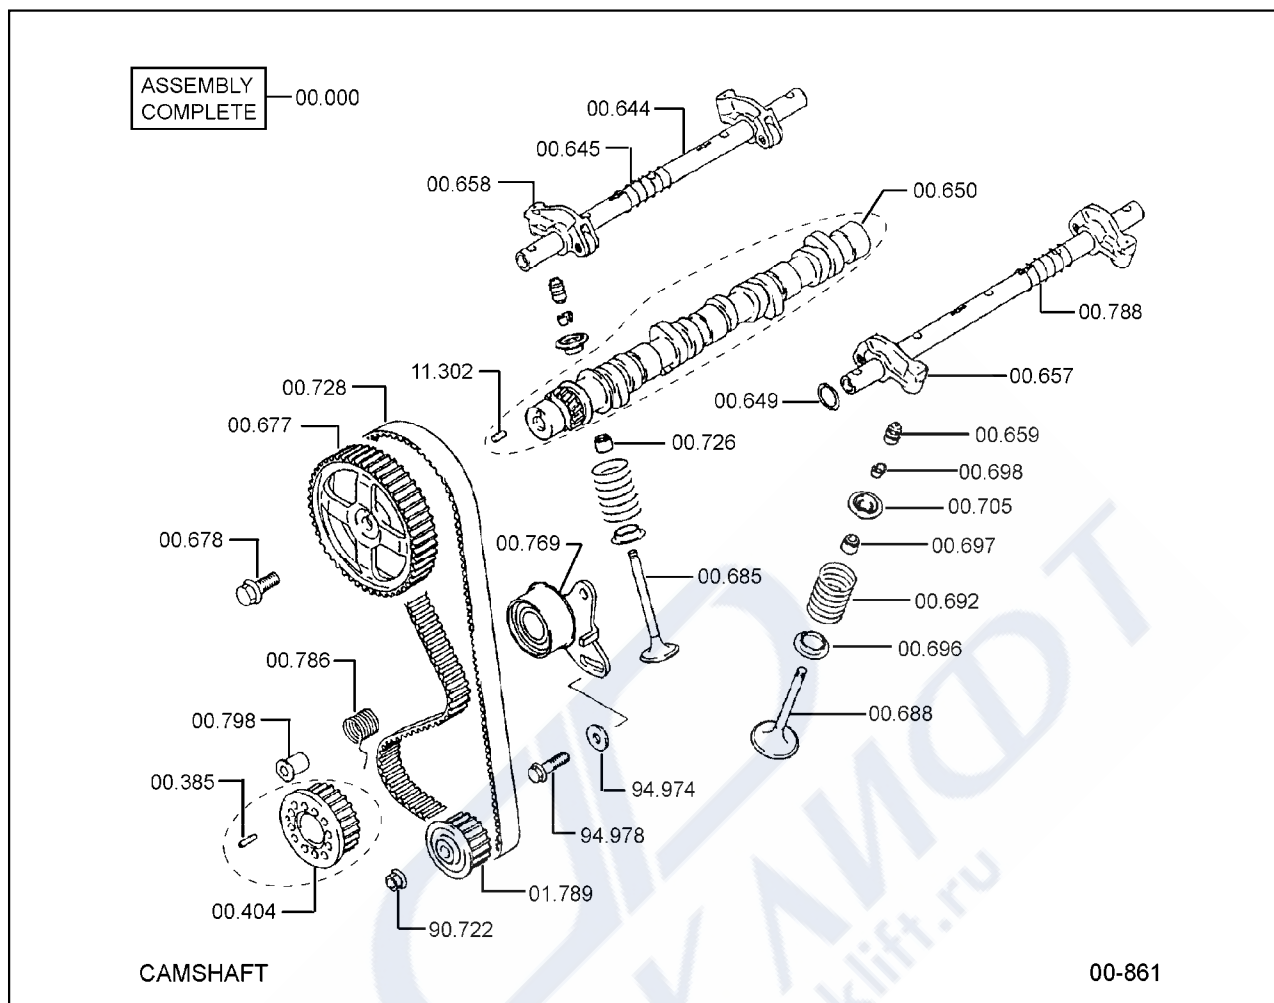 


00.000	PRODUCTION ENGINE ASSEMBLY 엔진	00.696	PILOT, ENGINE VALVE SPRING 파일럿
00.385	KEY, CRANKSHAFT PULLEY 키	00.697	SEAL, ENGINE VALVE 씰
00.404	GEAR, CRANKSHAFT TIMING 기어	00.698	LOCK, EXHAUST VALVE SPRING SEAT 로크
00.644	PIVOT, ENGINE ROCKER ARM 피봇	00.705	SEAT, EXHAUST VALVE SPRING 시트
00.645	SPRING, ENGINE ROCKER ARM 스프링	00.726	SEAL, ENGINE VALVE 씰
00.649	WASHER, ENGINE ROCKER ARM PIVOT 와셔	00.728	CHAIN, CAMSHAFT TIMING 체인
00.650	CAMSHAFT 캠샤프트	00.769	TENSIONER, CAMSHAFT TIMING CHAIN 텐서너
00.657	ROCKER ARM ASSEMBLY, ENGINE VALVE 로커	00.786	SPRING, CAMSHAFT TIMING CHAIN TENSIONER 스프링
00.658	ROCKER ARM ASSEMBLY, ENGINE VALVE 로커	00.788	PIVOT, ENGINE ROCKER ARM (RH) 피봇
00.659	ADJUSTOR, ENGINE VALVE 어드저스터	00.798	DAMPENER, CAMSHAFT TIMING CHAIN TENSIONER SPRING 댐프너
00.677	GEAR, CAMSHAFT TIMING 기어	01.789	GEAR, OIL PUMP DRIVE 기어
00.678	FASTENER, TIMING GEAR TO CAMSHAFT 패스너	11.302	PIN, DISTRIBUTOR GEAR 핀
00.685	VALVE, EXHAUST 밸브	90.722	NUT, OIL PUMP FASTENER 너트
00.688	VALVE, INTAKE 밸브	94.974	WASHER, CAMSHAFT TIMING BELT TENSIONER FASTENER 와셔
00.692	SPRING, ENGINE EXHAUST VALVE 스프링	94.978	FASTENER, CAMSHAFT TIMING BELT TENSIONER 패스너

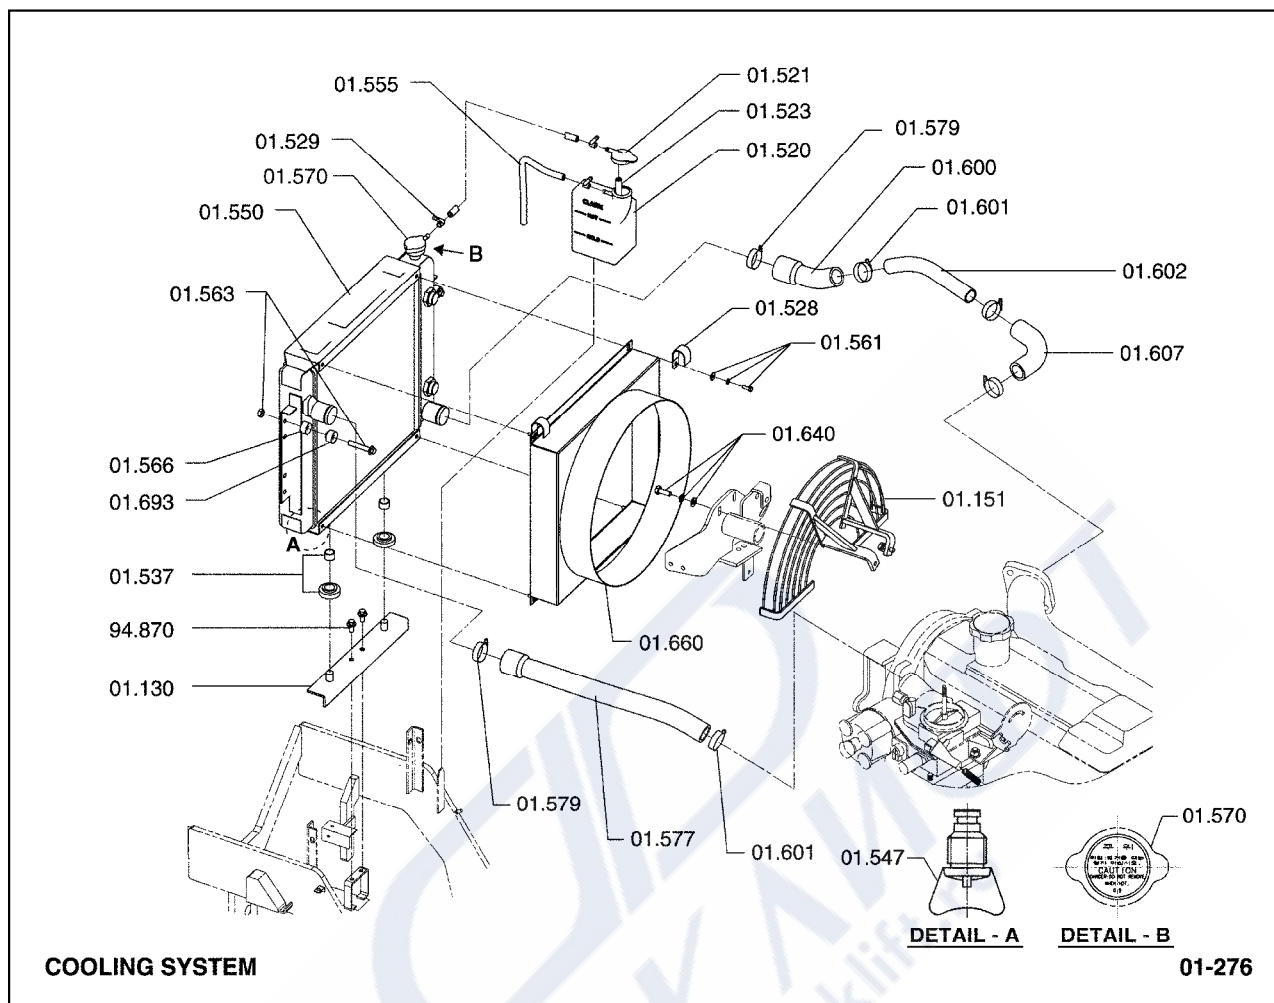 

01.130	BRACKET, RADIATOR 브라켓
01.151	GUARD, RADIATOR FAN 가드
01.520	COMPENSATION TANK, COOLING SYSTEM 보상기
01.521	COVER, COMPENSATION TANK 커버
01.523	LINE, COOLING SYSTEM COMPENSATION TANK 라인
01.528	CLIP, RADIATOR OVERFLOW LINE 클립
01.529	CLAMP, RADIATOR OVERFLOW LINE 클램프
01.537	PAD, RADIATOR MOUNTING LOWER 패드
01.547	DRAIN COCK, RADIATOR 드레인콕


01.550	RADIATOR 라디에이터
01.555	LINE, RADIATOR OVERFLOW 라인
01.561	FASTENER, RADIATOR MOUNTING 패스너
01.563	FASTENER, RADIATOR MOUNTING BRACKET 패스너
01.566	PAD, RADIATOR MOUNTING 패드
01.570	CAP, RADIATOR 캡
01.577	HOSE, RADIATOR UPPER 호스
01.579	CLAMP, RADIATOR UPPER HOSE 클램프
01.600	HOSE, RADIATOR LOWER 호스
01.601	CLAMP, RADIATOR LOWER HOSE 클램프
01.602	TUBE, RADIATOR LOWER 튜브
01.607	HOSE, ENGINE WATER PUMP INLET 호스
01.640	FASTENER, RADIATOR SHROUD EXTENTION 패스너
01.660	SHROUD, RADIATOR 슈라우드
01.693	DAMPENER, RADIATOR VIBRATION 댐프너
94.870	FASTENER, RADIATOR MOUNTING BRACKET 패스너

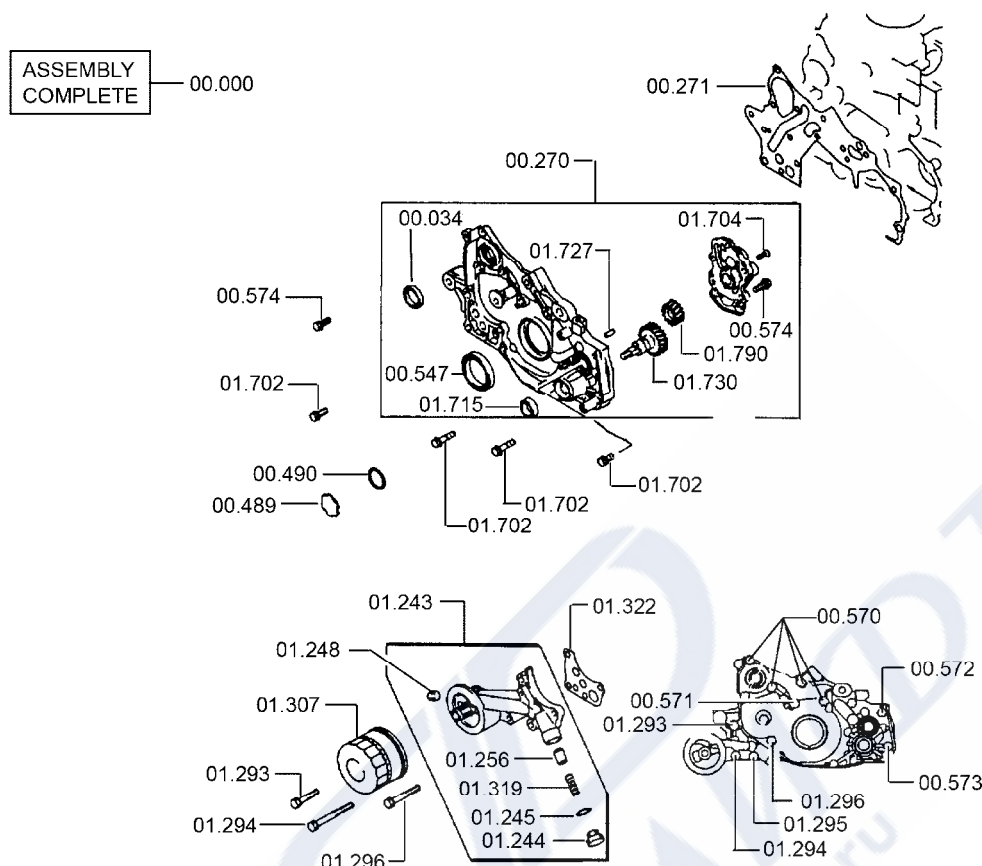 

OIL PUMP & OIL FILTER


01-506

00.000	PRODUCTION ENGINE ASSEMBLY 엔진	01.248	PLUG, ENGINE OIL FILTER ADAPTOR 플러그
00.034	SEAL, ENGINE BALANCER SHAFT FRONT OIL 씰	01.256	SEAT, ENGINE OIL FILTER SPRING 시트
00.270	CASE AND OIL PUMP, ENGINE FRONT END 오일펌프케이스	01.293	FASTENER, ENGINE OIL FILTER ATTACHING 패스너
00.271	GASKET, ENG FRONT END CASE AND OIL PUMP ASSY 가스켓	01.294	FITTING, ENGINE OIL FILTER OUTLET 피팅
00.489	PLUG, ENGINE FRONT GEAR COVER 플러그	01.295	FASTENER, ENGINE OIL FILTER ATTACHING 패스너
00.490	SEAL, ENGINE FRONT GEAR COVER PLUG 씰	01.296	FASTENER, ENGINE OIL FILTER ATTACHING 패스너
00.547	SEAL, ENGINE FRONT GEAR COVER 씰	01.307	CARTRIDGE & GASKET, ENGINE OIL FILTER 카트리지와 가스켓
00.570	FASTENER, BACKING PLATE 패스너	01.319	SPRING, ENGINE OIL FILTER 스프링
00.571	FASTENER, BACKING PLATE 패스너	01.322	GASKET, ENGINE OIL FILTER ADAPTOR 가스켓
00.572	FASTENER, BACKING PLATE 패스너	01.702	FASTENER, OIL PUMP 패스너
00.573	FASTENER, BACKING PLATE 패스너	01.704	FASTENER, OIL PUMP COVER 패스너
00.574	FASTENER, BACKING PLATE 패스너	01.715	GASKET, OIL PUMP COVER 가스켓
01.243	BASE, ENGINE OIL FILTER 베이스	01.727	DOWEL, OIL PUMP BODY 다웰
01.244	PLUG, ENGINE OIL FILTER BASE 플러그	01.730	GEAR, OIL PUMP DRIVE IDLER 기어
01.245	GASKET, ENGINE OIL FILTER BASE PLUG 가스켓	01.790	GEAR, OIL PUMP DRIVEN 기어

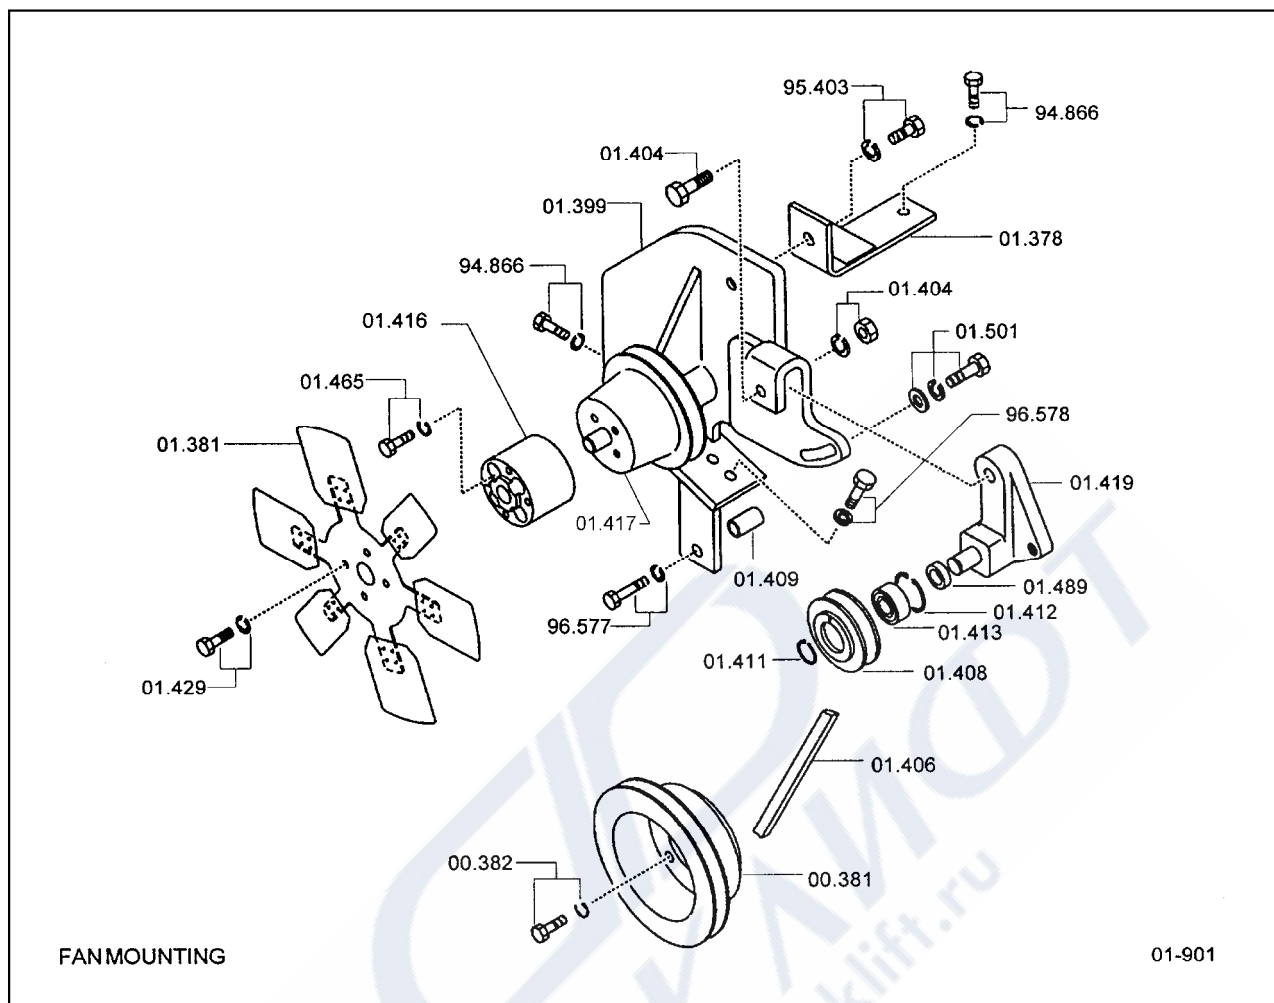 

- | | |
|--------|--|
| 00.381 | PULLEY, CRANKSHAFT ACCESSORY DRIVE
풀리 |
| 00.382 | FASTENER, CRANKSHAFT ACCESS DR PULLEY
패스너 |
| 01.378 | BRACE, FAN BRACKET
브레이스 |
| 01.381 | BLADE, FAN
블레이드 |
| 01.399 | BRACKET, FAN MOUNTING
브라켓 |
| 01.404 | FASTENER, FAN BRACKET
패스너 |
| 01.406 | BELT, FAN
벨트 |
| 01.408 | SHEAVE ASSEMBLY, IDLER
쉬브 |
| 01.409 | SPACER, IDLER ADJUSTMENT
스페이서 |

01.411	RETAINER, IDLER SHEAVE 리테이너
01.412	RETAINER, IDLER SHEAVE BEARING 리테이너
01.413	BEARING, BELT IDLER SHEAVE 베어링
01.416	SPACER, FAN BLADE 스페이서
01.417	PULLEY, FAN 폴리
01.419	BRACKET, IDLER SHEAVE 브라켓
01.429	FASTENER, FAN CONTROL 패스너
01.465	FASTENER, FAN BLADE SPACER 패스너
01.489	SHIM, WATER PUMP PULLEY FASTENER 심
01.501	PIVOT, FAN DRIVE IDLER SHEAVE BRACKET 피벗
94.866	FASTENER, FAN BLADE MOUNTING BRACKET GUIDE 패스너
95.403	FASTENER, RADIATOR SHROUD BRACKET 패스너
96.577	FASTENER, FAN MOUNTING BRACKET 패스너
96.578	FASTENER, FAN MOUNTING BRACKET 패스너

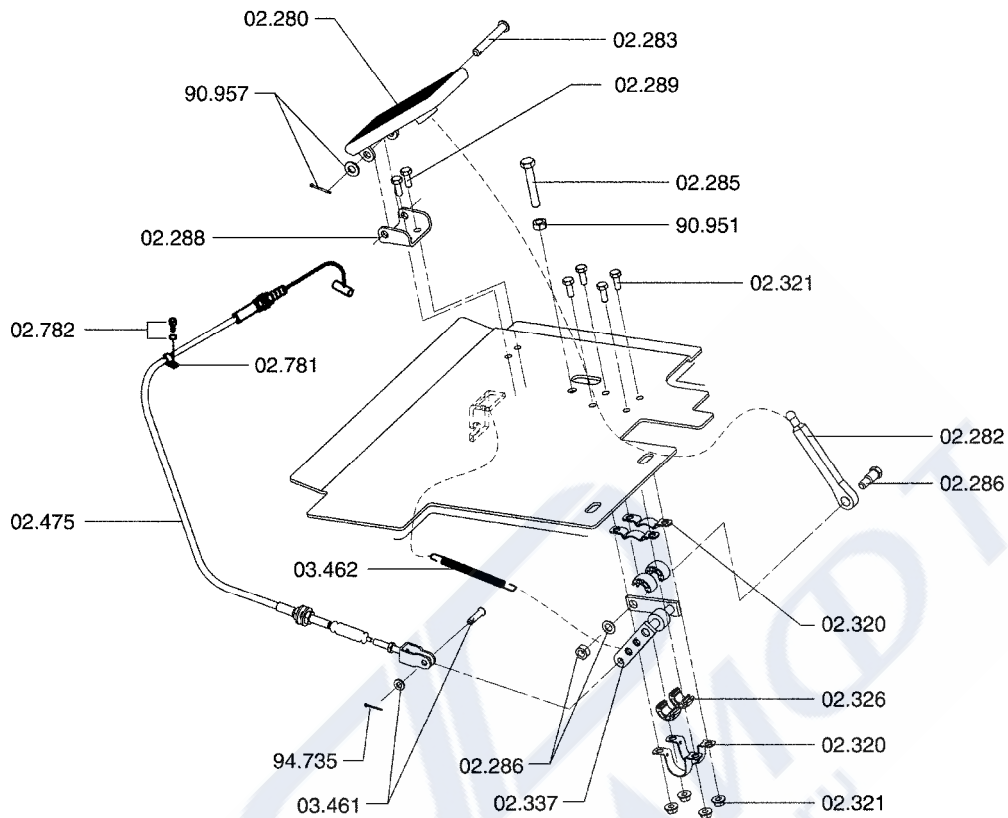 


ACCELERATOR LINKAGE

02-457

02.280	PEDAL, ACCELERATOR 페달
02.282	ROD, ACCELERATOR PUSH 로드
02.283	PIN, ACCELERATOR PEDAL TO BRACKET PIVOT 핀
02.285	STOP, ACCELERATOR PEDAL LINKAGE 스톱
02.286	FASTENER, PUSH ROD 패스너
02.288	BRACKET, ACCELERATOR PEDAL ATTACHING 브라켓
02.289	FASTENER, ACCELERATOR PEDAL BRACKET ATTACHING 패스너
02.320	BRACKET, ACCELERATOR LEVER ATTACHING 브라켓
02.321	FASTENER, ACCELERATOR LEVER BRACKET 패스너

02.326	BEARING, ACCELERATOR LEVER 베어링
02.337	BRACKET, ACCELERATOR LEVER MOUNTING 브라켓
02.475	ROD, ACCELERATOR CONTROL 로드
02.781	CLIP, ACCELERATOR CABLE TO BRACKET 클립
02.782	FASTENER, BRACKET CLIP 패스너
03.461	PIN, ACCELERATOR CONTROL ROD END 핀
03.462	SPRING, ACCELERATOR PEDAL RETURN 스프링
90.951	RETAINER, ACCELERATOR PEDAL STOP 리테이너
90.957	RETAINER, ACCELERATOR LINKAGE LEVER PIN 리테이너
94.735	RETAINER, ACCELERATOR CONTROL ROD END PIN 리테이너




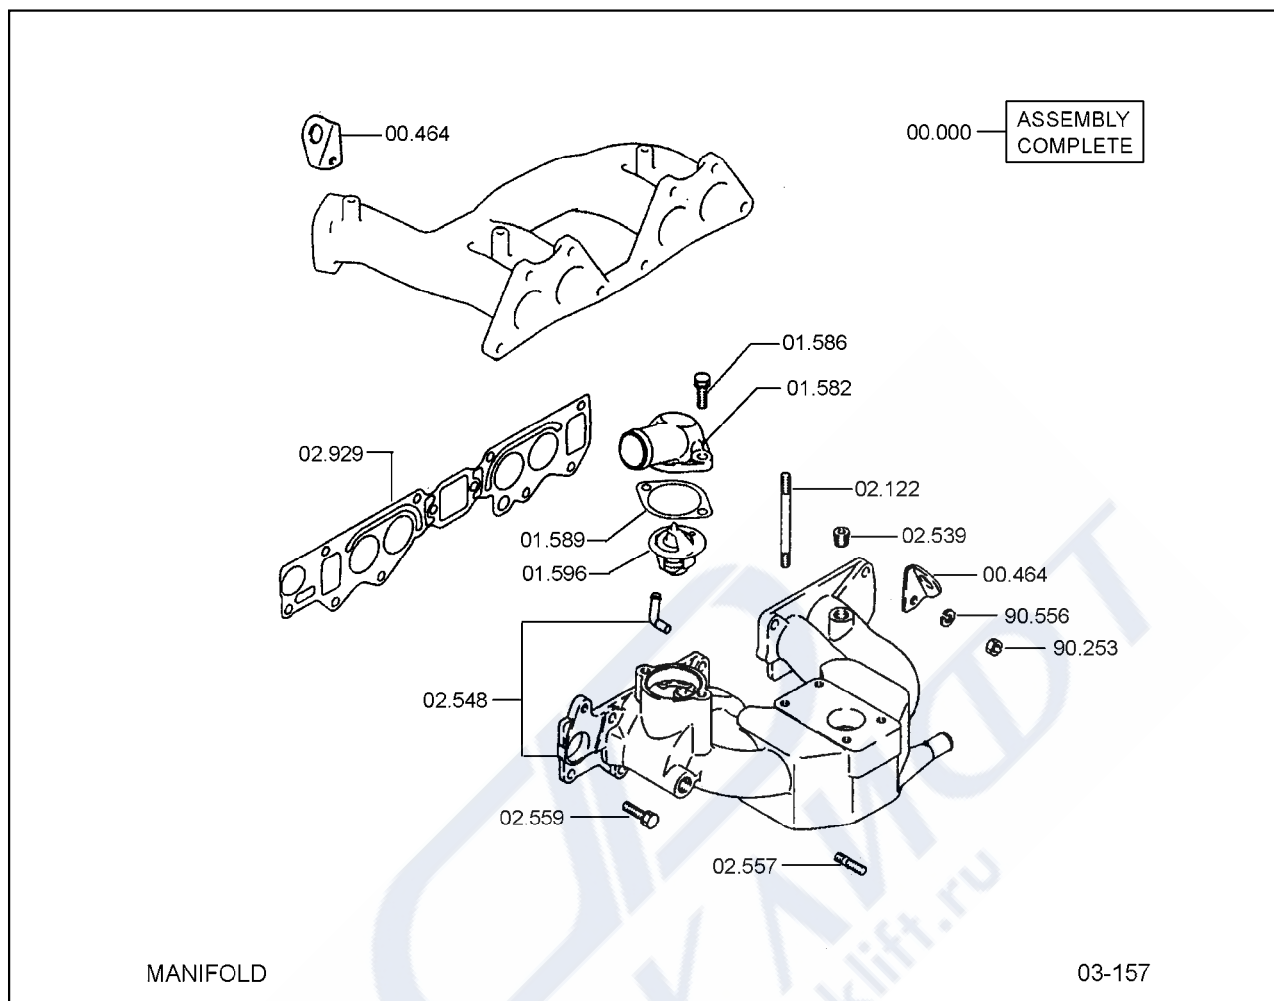 


00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.464	BRACKET, ENGINE LIFTING 브라켓
01.582	ELBOW, WATER OUTLET 엘보우
01.586	FASTENER, WATER OUTLET ELBOW - FANSIDE 패스너
01.589	GASKET, WATER OUTLET ELBOW 가스켓
01.596	THERMOSTAT, ENGINE 서모스탯
02.122	FASTENER, CARBURETOR 패스너
02.539	PLUG - PIPE, MANIFOLD 플러그
02.548	MANIFOLD, INTAKE 매니폴드

02.557	FASTENER, MANIFOLD TO CRANKCASE 패스너
02.559	FASTENER, MANIFOLD TO CRANKCASE 패스너
02.929	GASKET, INTAKE MANIFOLD 가스켓
90.253	NUT, MANIFOLD FASTENER 너트
90.556	LOCKWASHER, MANIFOLD FASTENER 로크와셔



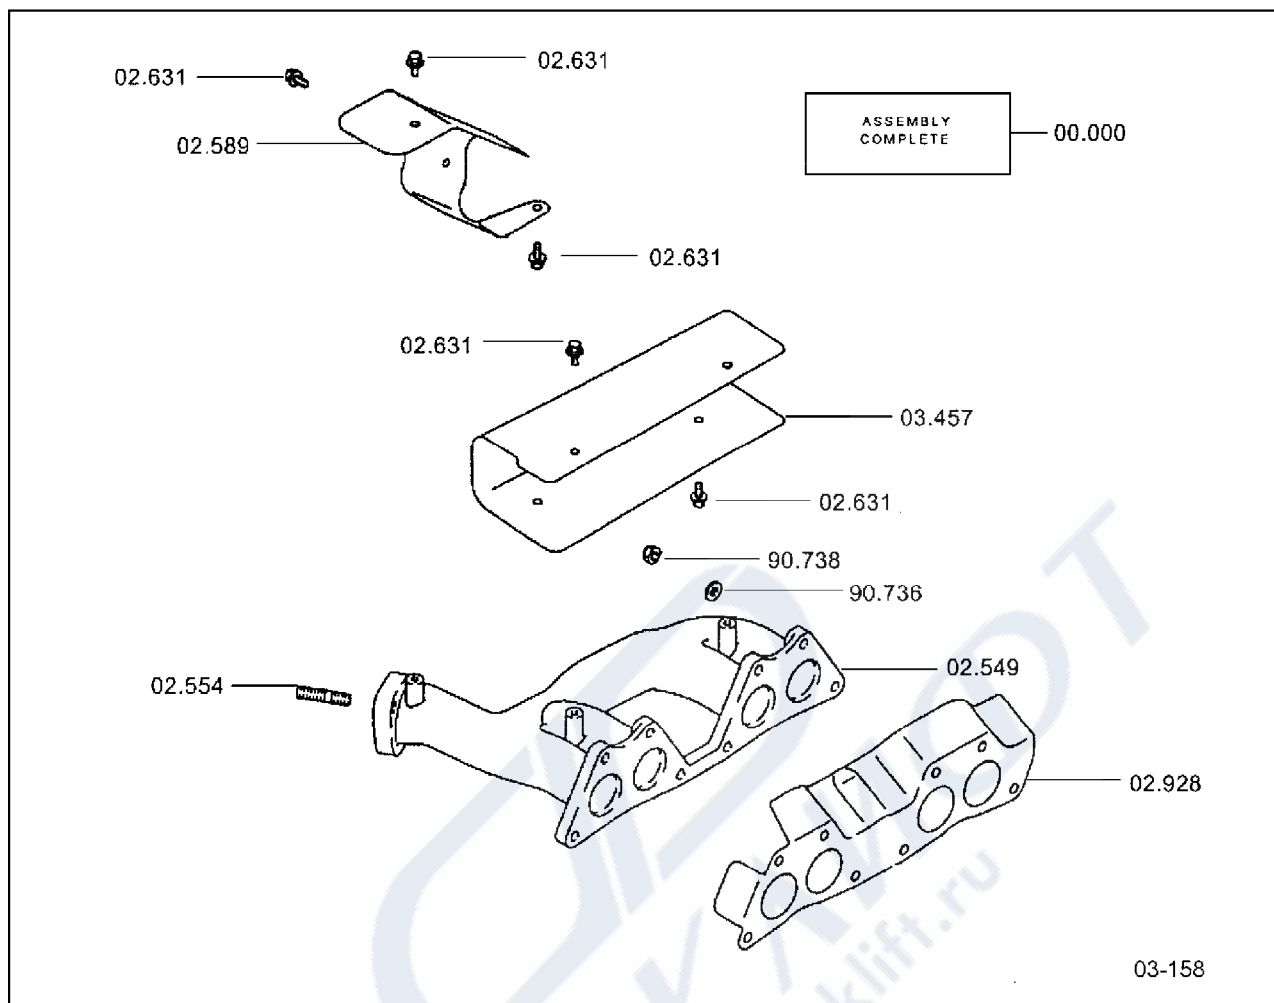 



00.000	PRODUCTION ENGINE ASSEMBLY 엔진
02.549	MANIFOLD, EXHAUST 매니폴드
02.554	FASTENER, MANIFOLD TO CRANKCASE 패스너
02.589	SHIELD, HEAT (AT MANIFOLD) 실드
02.631	FASTENER, HEAT SHIELD 패스너
02.928	GASKET, EXHAUST MANIFOLD 가스켓
03.457	SHIELD, MANIFOLD HEAT 실드
90.736	WASHER, MANIFOLD FASTENER 와셔
90.738	NUT, MANIFOLD FASTENER 너트

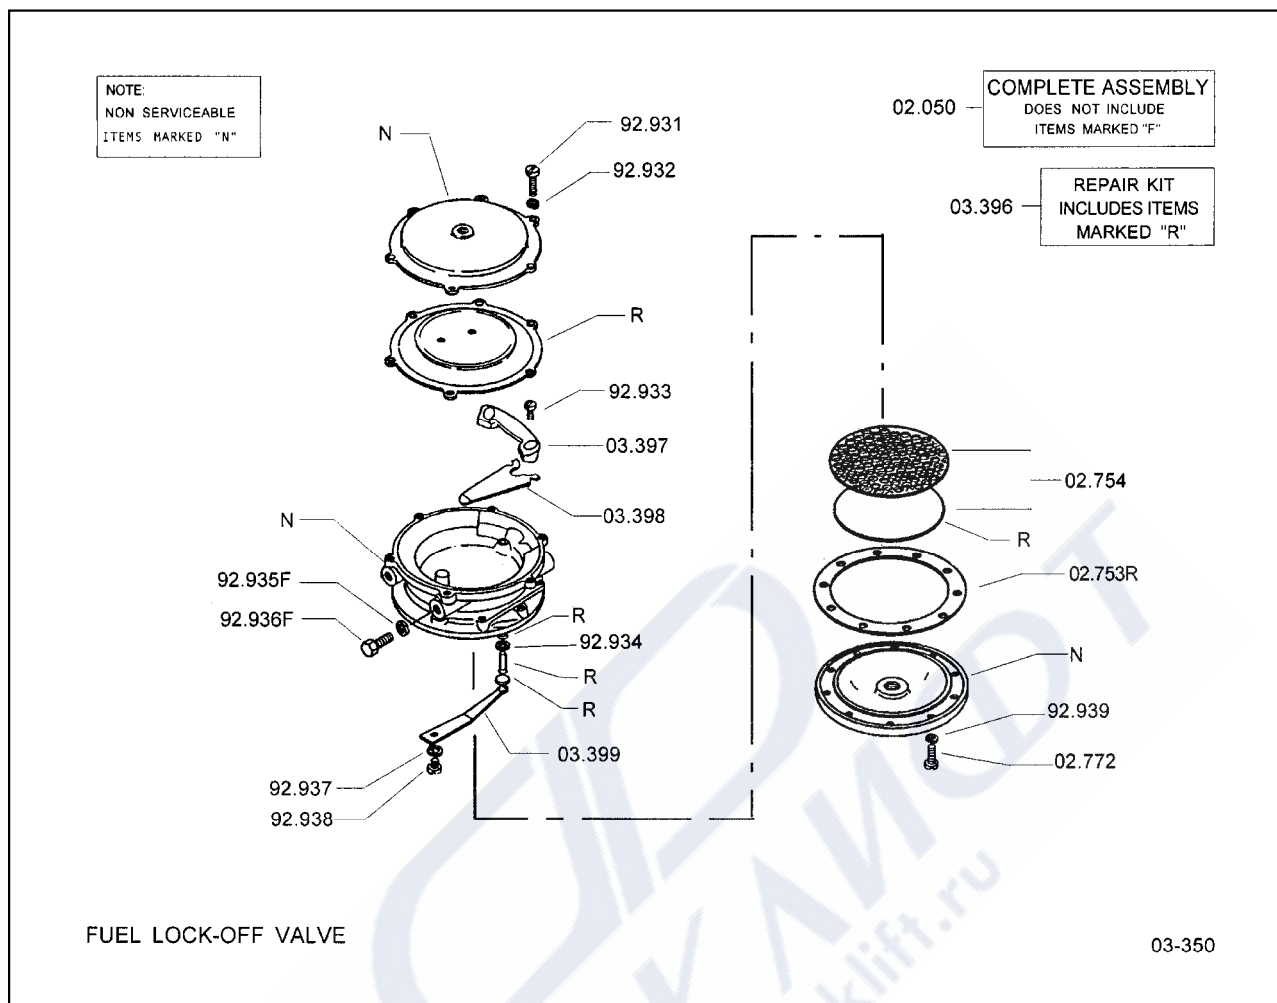 

02.050	VALVE, LPG LOCK OFF 밸브
02.753	GASKET, FUEL FILTER BODY 가스켓
02.754	ELEMENT, FUEL FILTER 엘리먼트
02.772	FASTENER, FUEL FILTER COVER 패스너
03.396	REPAIR KIT, FUEL VALVE AND FILTER 리페어키트
03.397	FULCRUM, FUEL VALVE OPERATING VALVE LEVER 지지대
03.398	LEVER, FUEL VALVE OPERATING VALVE 레버
03.399	SPRING, FUEL VALVE OPERATING VALVE 스프링
92.931	FASTENER, FUEL VALVE DIAPHRAGM COVER 패스너

92.932	LOCKWASHER, FUEL VALVE DIAPHRAGM COVER FASTENER 로크와셔
92.933	FASTENER, FUEL VALVE OPERATING VALVE LEVER FULCRUM 패스너
92.934	RETAINER, FUEL VALVE OPERATING VALVE SEAL 리테이너
92.935	FASTENER, LOCK-OFF VALVE AND FILTER 패스너
92.936	LOCKWASHER, LOCK-OFF VALVE AND FILTER FASTENER 로크와셔
92.937	LOCKWASHER, FUEL VALVE OPERATING VALVE SPRING FAST 로크와셔
92.938	FASTENER, FUEL FILTER COVER FASTENER 패스너
92.939	LOCKWASHER, FUEL FILTER COVER FASTENER 로크와셔

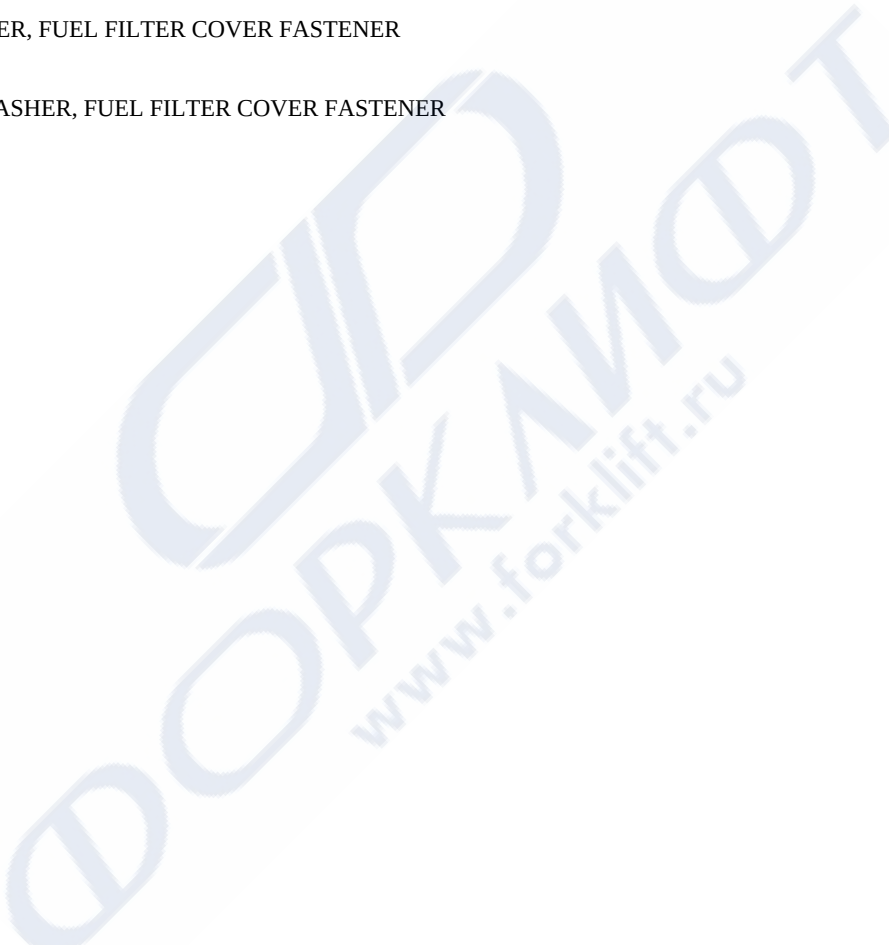 


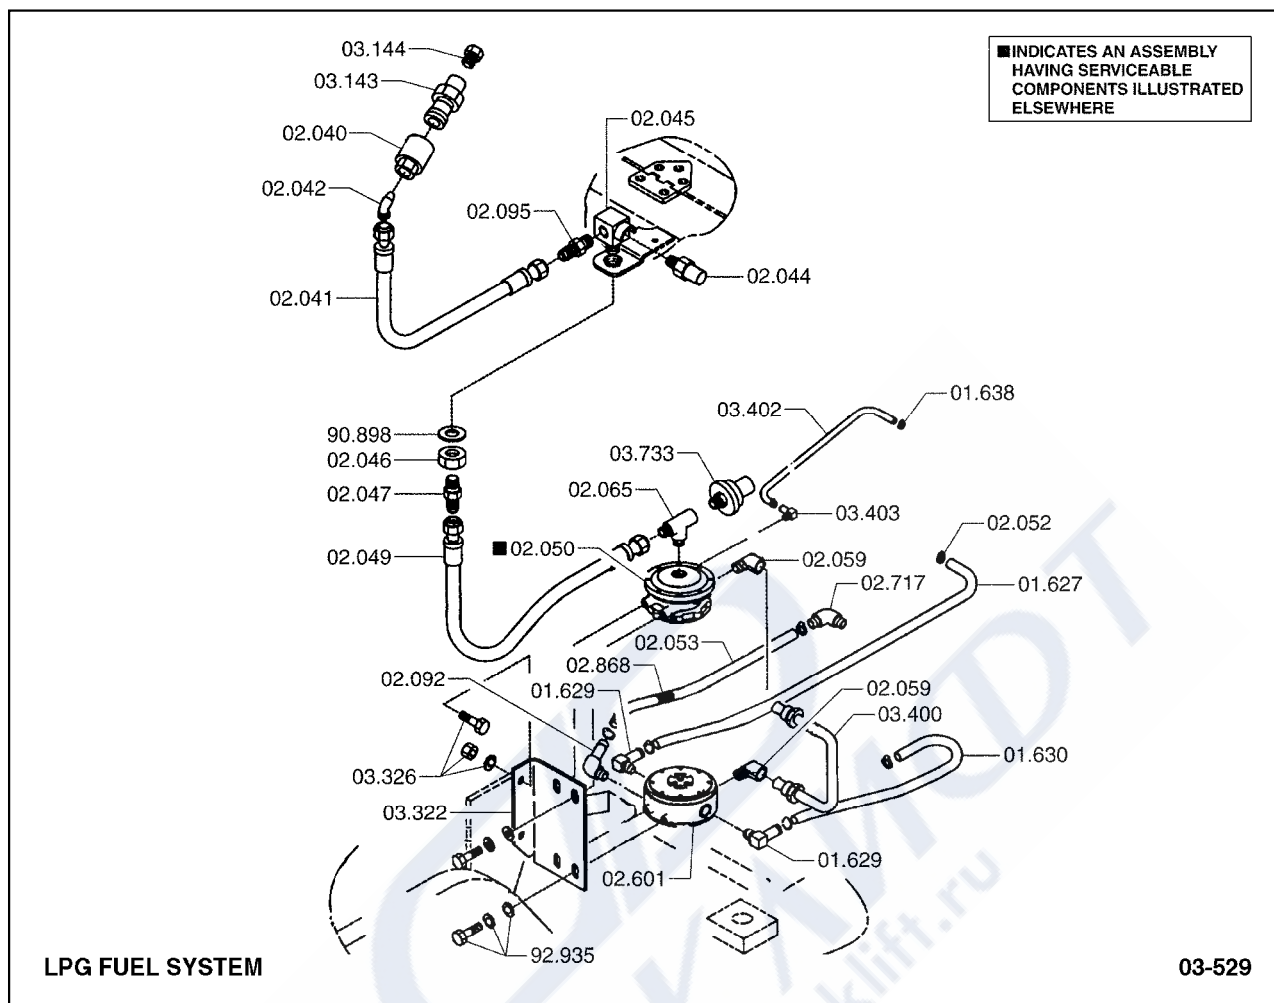 


01.627	LINE, VAPORIZER WATER OUTLET 라인	02.059	FITTING, LPG VAPORIZER INLET 피팅
01.629	FITTING, VAPORIZER WATER INLET 피팅	02.065	FITTING, LOCK OFF VALVE INLET 피팅
01.630	LINE, VAPORIZER WATER INLET 라인	02.092	FITTING, LPG VAPORIZER OUTLET 피팅
01.638	CLAMP, VAPORIZER WATER OUTLET LINE 클램프	02.095	FITTING, LPG THREE WAY ADAPTOR 피팅
02.040	COUPLER, LPG QUICK DISCONNECT 커플러	02.601	REGULATOR, VAPORIZER ASSY 레귤레이터
02.041	LINE, LP GAS TANK OUTLET 라인	02.717	FITTING, CARBURETOR INLET 피팅
02.042	FITTING, LPG COUPLER TO LINE 피팅	02.868	SHIELD, LPG LINE 실드
02.044	VALVE, HYDROSTATIC RELIEF 밸브	03.143	COUPLER, LPG QUICK DISCONNECT 커플러
02.045	ADAPTOR, THREE WAY THRU HOOD 어댑터	03.144	COUPLER, LPG QUICK DISCONNECT 커플러
02.046	FASTENER, ADAPTOR 패스너	03.322	BRACKET, LPG REGULATOR MOUNTING 브라켓
02.047	FITTING, LPG ADAPTOR OUTLET 피팅	03.326	FASTENER, LPG REGULATOR MOUNTING BRACKET 패스너
02.049	LINE, ADAPTOR OUTLET 라인	03.400	LINE, FUEL LOCK-OFF VALVE OUTLET 라인
02.050	VALVE, LPG LOCK OFF 밸브	03.402	LINE, LPG LOCK-OFF VALVE VACUUM 라인
02.052	CLAMP, REGULATOR OUTLET HOSE 클램프	03.403	FITTING, LPG LOCK-OFF VALVE VACUUM PORT 피팅
02.053	LINE, REGULATOR OUTLET 라인	03.733	SWITCH, LPG PRESSURE 스위치

90.898	LOCKWASHER, ADAPTOR FASTENER 로크와셔
92.935	FASTENER, LOCK-OFF VALVE AND FILTER 패스너

 ФОРКЛИФТ
www.forklift.ru

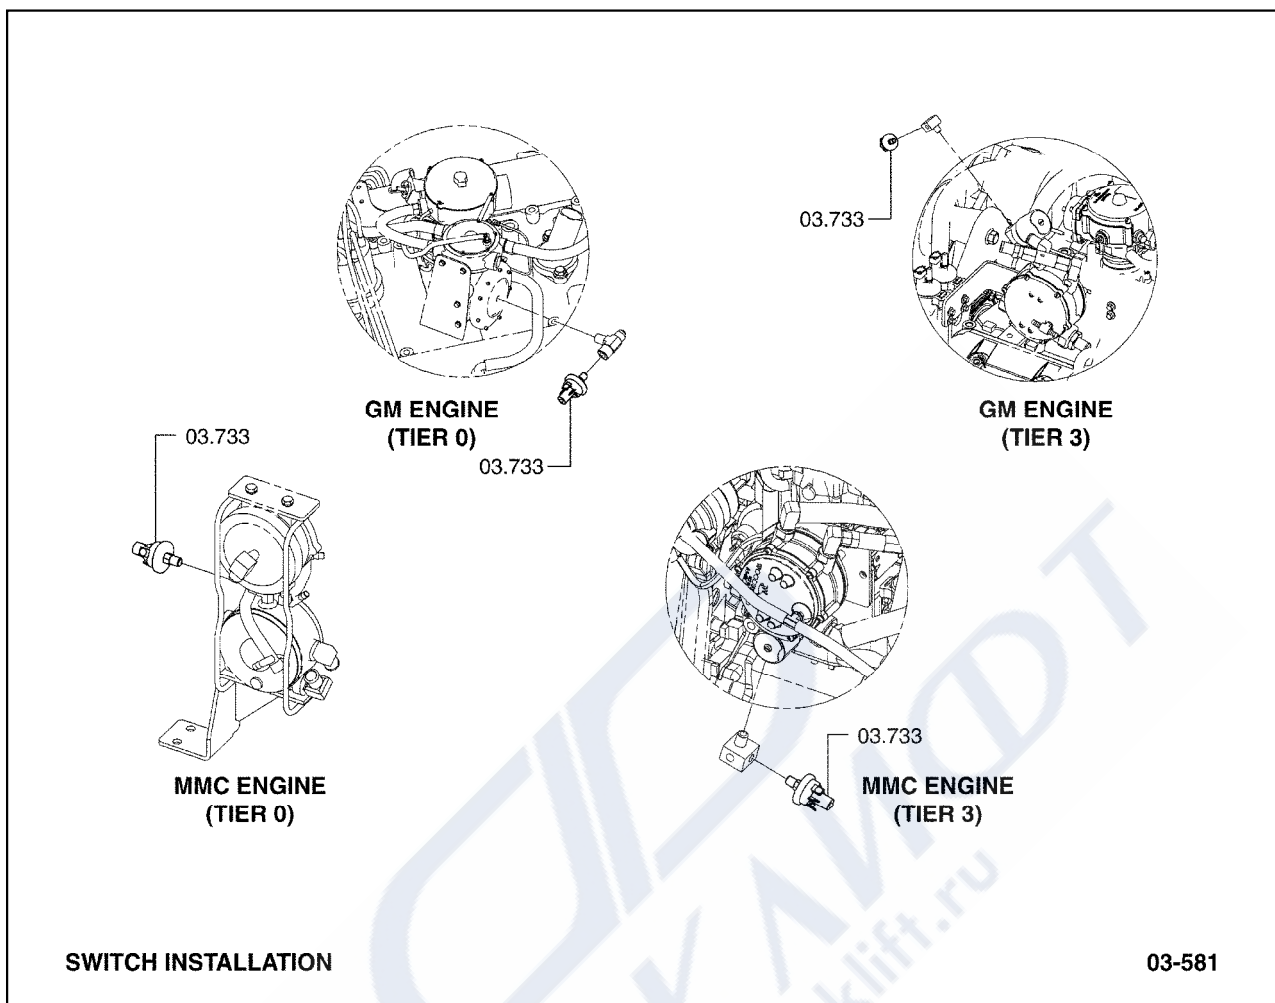

 
03.733 SWITCH,LPG PRESSURE
스위치

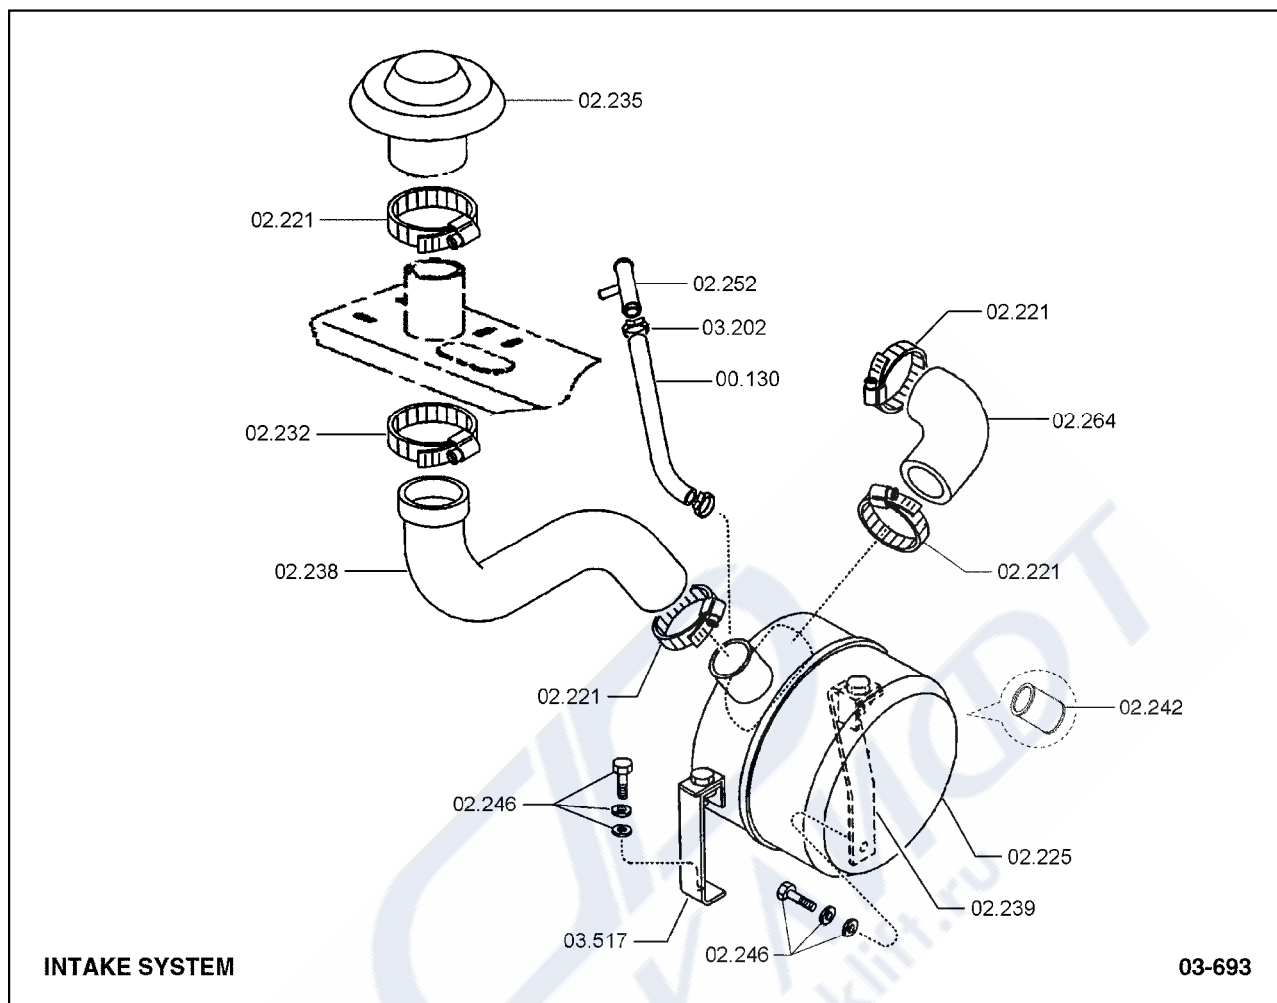

00.130	LINE, CRANKCASE VENT 라인
02.221	CLAMP, MAIN AIR CLEANER OUTLET HOSE 클램프
02.225	CLEANER ASSEMBLY, ENGINE INTAKE AIR 에어클리너
02.232	CLAMP, INTAKE AIR CLEANER 클램프
02.235	CAP, ENGINE INTAKE AIR CLEANER INLET 캡
02.238	TUBE, MAIN AIR CLEANER INLET 튜브
02.239	BAND, ENGINE INTAKE AIR CLEANER 밴드
02.242	ELEMENT & GASKET, ENGINE INTAKE AIR CLEANER 엘리먼트& 가스켓
02.246	FASTENER, ENGINE INTAKE AIR CLEANER ATTACHING 패스너

02.252	FITTING, MAIN AIR CLEANER OUTLET TUBE 피팅
02.264	TUBE, MAIN AIR CLEANER OUTLET 튜브
03.202	CLAMP, ENGINE AIR INTAKE ADAPTOR 클램프
03.517	BRACKET, AIR CLEANER MOUNTING 브라켓



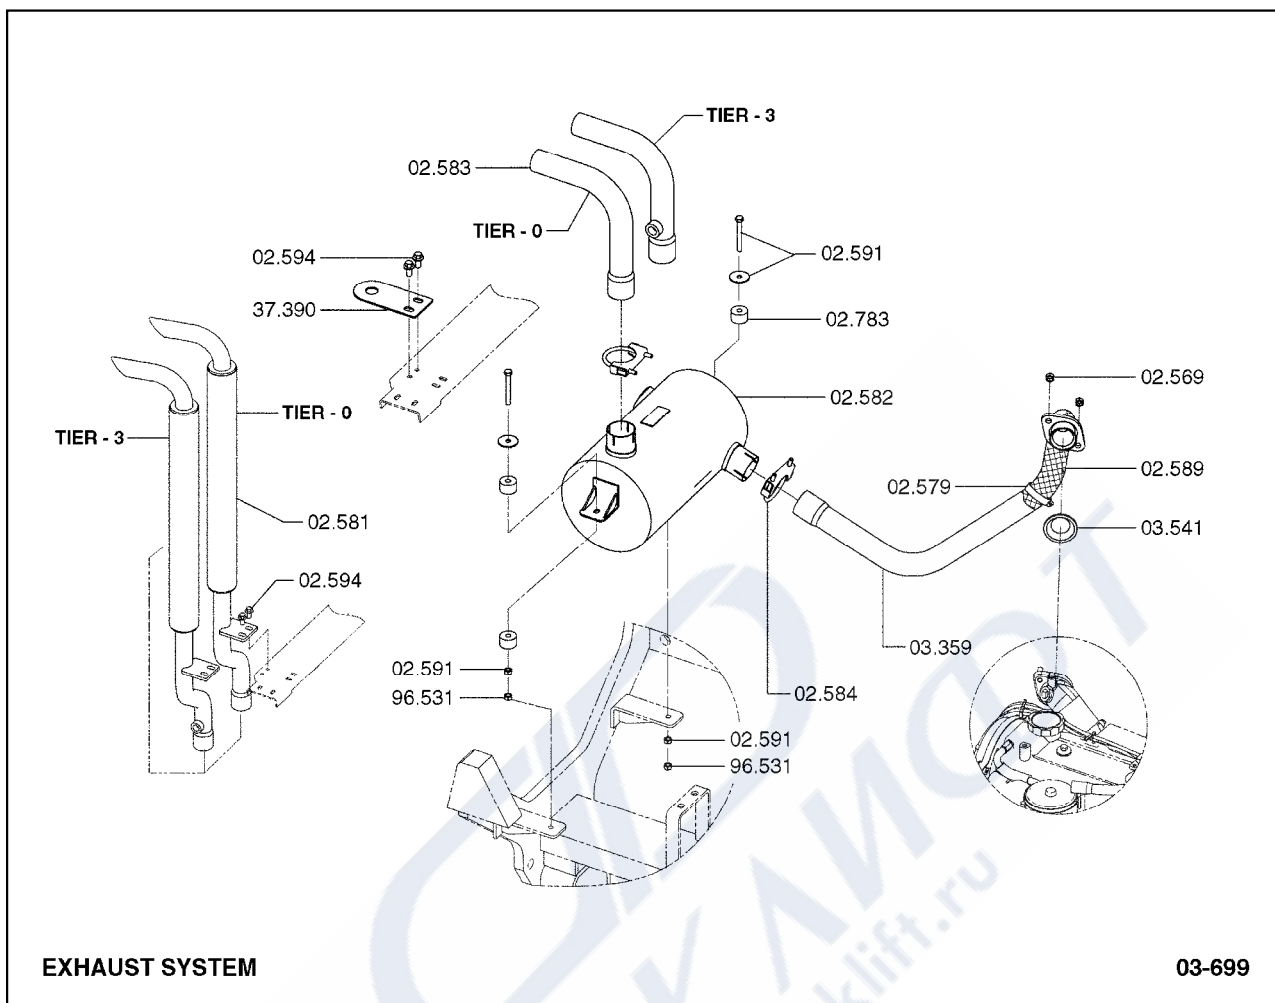 


EXHAUST SYSTEM

03-699

02.569	FASTENER, EXHAUST PIPE FLANGE TO MANIFOLD 패스너
02.579	CLAMP, EXHAUST PIPE TO MUFFLER 클램프
02.581	EXTENSION, TAIL PIPE 익스텐션
02.582	MUFFLER 머플러
02.583	PIPE, TAIL 파이프
02.584	CLAMP, TAIL PIPE TO MUFFLER 클램프
02.589	SHIELD, HEAT (AT MANIFOLD) 실드
02.591	FASTENER, MUFFLER MOUNTING 패스너
02.594	FASTENER, TAIL PIPE MOUNTING BRACKET 패스너

02.783	DAMPENER, MUFFLER MOUNTING VIBRATION 댐프너
03.359	PIPE, EXHAUST 파이프
03.541	RING, EXHAUST PIPE MANIFOLD FLANGE SEALING 링
37.390	PLATE, OVERHEAD GUARD REINFORCING 플레이트
96.531	NUT, MUFFLER MOUNTING BRACKET FASTENER 너트




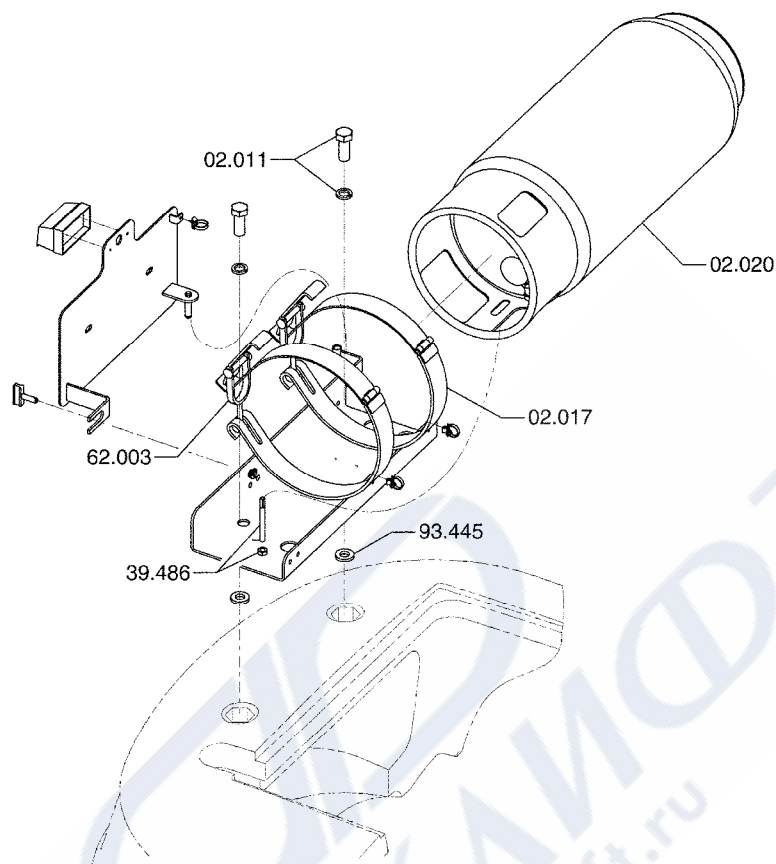 

LPG TANK MOUNTING


03-702

02.011	FASTENER, TANK REAR MOUNTING BRACKET 패스너
02.017	SUPPORT, GAS TANK MOUNTING 서포트
02.020	TANK, FUEL 탱크
39.486	FASTENER, GAS TANK SHIELD 패스너
62.003	CLAMP, LPG TANK 클램프
93.445	WASHER, LPG TANK SUPPORT FASTENER 와셔

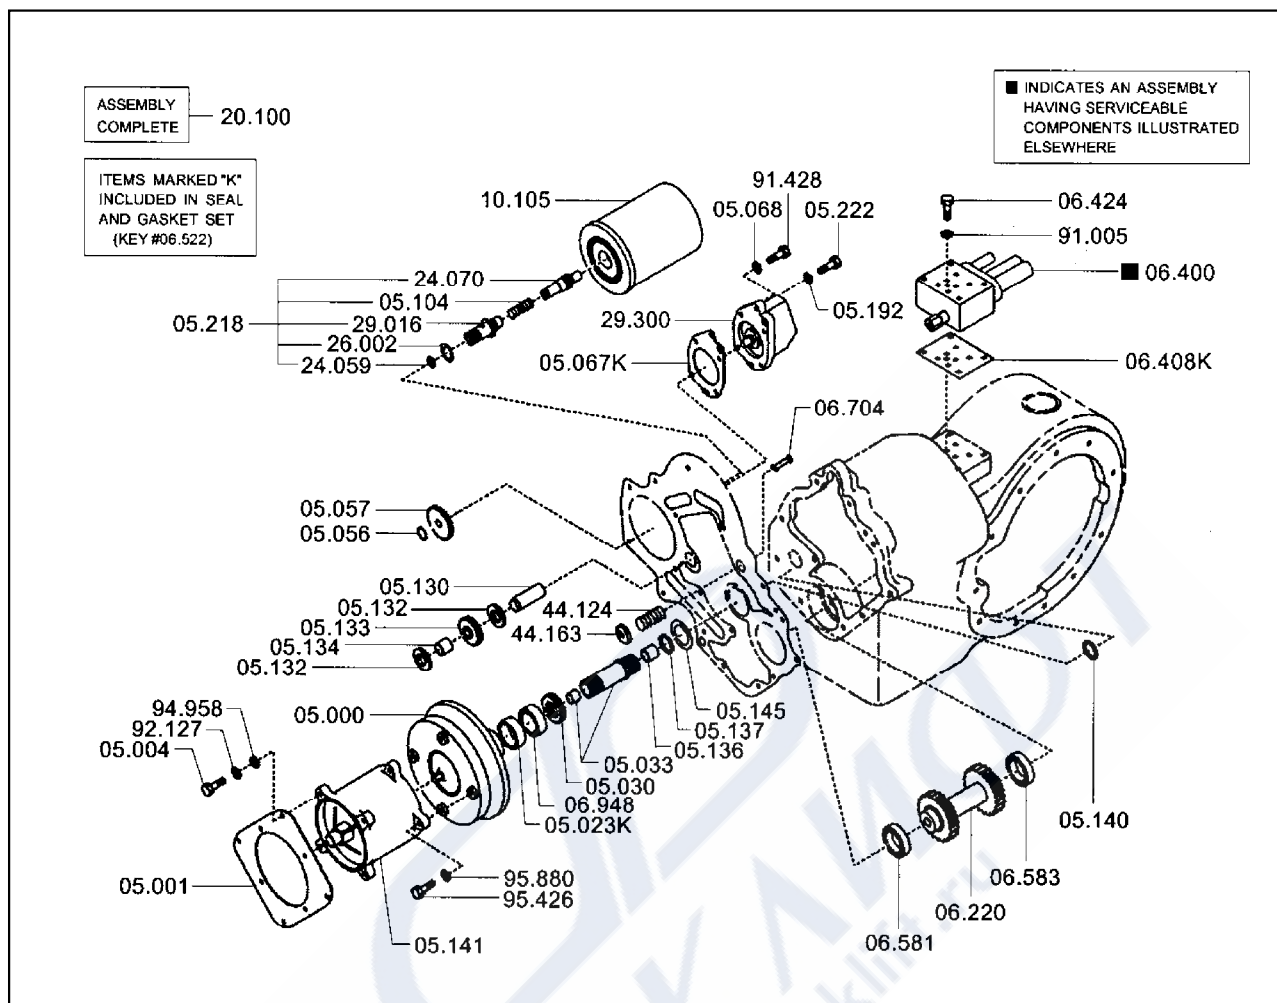 


05.000	CONVERTER ASSEMBLY, TORQUE 컨버터	05.136	BEARING, CONVERTER STATOR SUPPORT 베어링
05.001	GEAR, CONVERTER RING 기어	05.137	LOCATOR, CONVERTER STATOR SUPPORT (OUTER) 로케이터
05.004	FASTENER, CONVERTER DRIVE & REINFORCING PLATE 패스너	05.140	LOCATOR, CONVERTER STATOR SUPPORT (INNER) 로케이터
05.023	SEAL, CONVERTER IMPELLER HUB 씰	05.141	ADAPTOR, CONVERTER DRIVE 어댑터
05.030	GEAR, IMPELLER HUB 기어	05.145	WASHER, CONVERTER STATOR SUPPORT 와셔
05.033	STATOR SUPPORT ASSEMBLY, CONVERTER 스테이터	05.192	LOCKWASHER, CONVERTER PUMP FASTENER 로크와셔
05.056	RING-RETAINING, PUMP DRIVE GEAR 링	05.218	BODY, PRESSURE REGULATING VALVE 바디
05.057	GEAR, PUMP DRIVE 기어	05.222	CAPSCREW, CONVERTOR PUMP MOUNTING 캡스크류
05.067	GASKET, CONVERTER PUMP 가스켓	06.220	GEAR, REVERSE IDLER 기어
05.068	FASTENER, CONVERTER CHARGING PUMP 패스너	06.400	CONTROL COVER & VALVE ASSEMBLY 컨트롤커버& 밸브
05.104	SPRING, INNER 스프링	06.408	GASKET, CONTROL COVER ATTACHING 가스켓
05.130	SHAFT, CONVERTER PUMP IDLER GEAR 샤프트	06.424	FASTENER, CONTROL COVER 패스너
05.132	THRUST WASHER, CONVERTOR PUMP IDLER GEAR 스러스트와셔	06.581	BEARING, REVERSE GEAR 베어링
05.133	GEAR, CONVERTOR PUMP IDLER 기어	06.583	BEARING, REVERSE GEAR 베어링
05.134	BEARING, CONVERTOR PUMP IDLER GEAR 베어링	06.704	VALVE, TRANSMISSION PRESSURE RELIEF 밸브

06.948	SLEEVE, CLUTCH OIL DISTRIBUTION 슬리브
10.105	ELEMENT & GASKET, OIL FILTER 엘리먼트& 가스켓
20.100	TRANSAXLE ASSEMBLY 트랜스액슬
24.059	SHIM, OIL PUMP PISTON BUSHING 심
24.070	PISTON, OIL PUMP 피스톤
26.002	SNAP RING, PISTON ROD SEAL RETAINING 스냅링
29.016	VALVE, OIL FILTER CHECK 밸브
29.300	PUMP ASSEMBLY, CONVERTER CHARGING 펌프
44.124	SPRING, TRANSMISSION SAFETY VALVE 스프링
44.163	STOP, TRANSMISSION SAFETY VALVE 스톱
91.005	LOCKWASHER, CONTROL COVER FASTENER 로크와셔
91.428	LOCKWASHER, CONVERTER CHARGING PUMP FAST 로크와셔
92.127	LOCKWASHER, CONVERTER DRIVE AND REINFORCING PLAT 로크와셔
94.958	WASHER, CONVERTER DRIVE & REINFORCING PLATE FAST 와셔
95.426	FASTENER, CONVERTER DRIVE ADAPTOR 패스너
95.880	LOCKWASHER, CONVERTER DRIVE ADAPTOR FASTENER 로크와셔

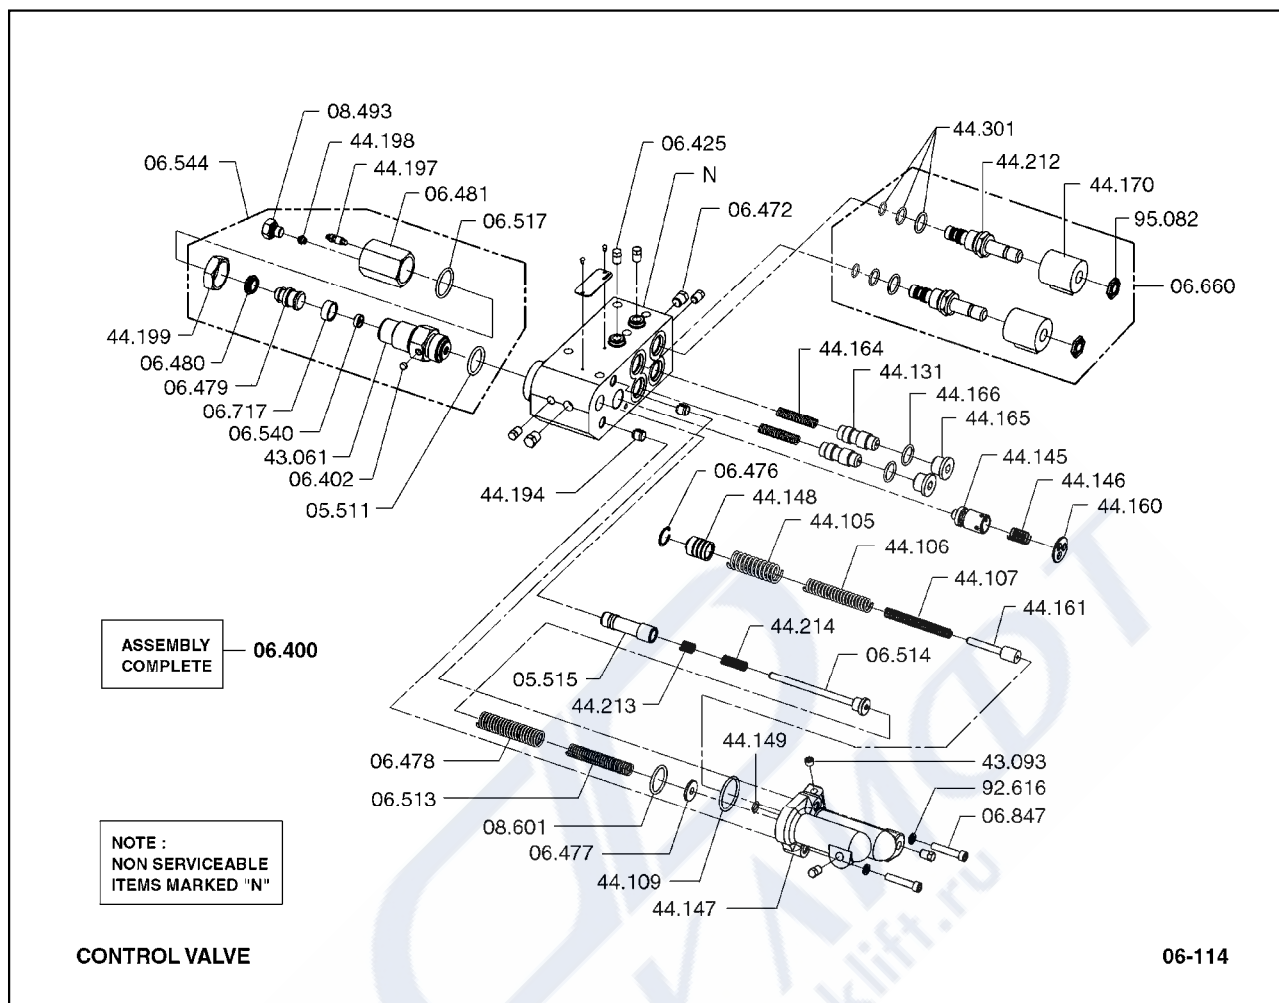 


05.511	SEAL, INCHING PISTON HOUSING 씰	06.540	SEAL, INCHING PISTON HOUSING 씰
05.515	SPOOL, INCHING 스풀	06.544	HOUSING, INCHING PISTON 하우징
06.400	CONTROL COVER & VALVE ASSEMBLY 컨트롤커버&밸브	06.660	SOLENOID ASSEMBLY, TRANSMISSION 솔레노이드
06.402	VENT, CONTROL COVER AIR 벤트	06.717	SEAL, CONTROL COVER OIL PASSAGE 씰
06.425	PLUG, CONTROL COVER OIL PASSAGE 플러그	06.847	FASTENER, ACCUMULATOR HOUSING 패스너
06.472	PLUG, CONTROL VALVE HOUSING OIL PASSAGE 플러그	08.493	PLUG, SPEED CHANGE NEEDLE VALVE HOUSING 플러그
06.476	RETAINER, INCHING VALVE PISTON 리테이너	08.601	GASKET, MODULATION VALVE 가스켓
06.477	WASHER, INCHING VALVE PISTON 와셔	43.061	HOUSING, CONTROL VALVE INCHING PISTON 하우징
06.478	SPRING, INCHING PISTON RETURN 스프링	43.093	PLUG, CONTROL VALVE HOUSING 플러그
06.479	PISTON, INCHING 피스톤	44.105	SPRING, TRANSMISSION ACCUMULATOR OUTER 스프링
06.480	SEAL, INCHING PISTON 씰	44.106	SPRING, TRANSMISSION ACCUMULATOR MIDDLE 스프링
06.481	FITTING, INCHING VALVE PISTON PORT 피팅	44.107	SPRING, TRANSMISSION ACCUMULATOR INNER 스프링
06.513	SPRING, INCHING VALVE 스프링	44.109	SEAL, TRANSMISSION ACCUMULATOR BORE PLUG 씰
06.514	ROD, INCHING VALVE 로드	44.131	SPOOL, FORWARD & REVERSE 스풀
06.517	SEAL, INCHING VALVE PISTON PORT FITTING 씰	44.145	SPOOL, MODULATOR 스풀

44.146	SPRING, MODULATOR SPOOL 스프링
44.147	HOUSING, TRANSMISSION CONTROL ACCUMULATOR 하우징
44.148	SPOOL, ACCUMULATOR 스풀
44.149	SEAL, ACCUMULATOR HOUSING TO CONTROL VALVE 씰
44.160	SEAT, TRANSMISSION SHIFT MODULATOR SPOOL SPRING 시트
44.161	STOP, TRANSMISSION ACCUMULATOR SPOOL 스톱
44.164	SPRING, TRANSMISSION FORWARD & REVERSE VALVE SPO 스프링
44.165	CAP, TRANSMISSION FORWARD & REVERSE VALVE SPOOL 캡
44.166	SEAL, TRANSMISSION FORWARD & REVERSE VALVE SPOOL 씰
44.170	COIL, TRANSMISSION CONTROL COVER SOLENOID 코일
44.194	LOCATOR, CONTROL COVER 로케이터
44.197	BLEEDER, CONTROL VALVE SLAVE CYLINDER 블리더
44.198	SEAT, SLAVE CYLINDER BRAKE LINE 시트
44.199	NUT, SLAVE CYLINDER ADJUSTING 너트
44.212	CARTRIDGE, CONTROL VALVE SHIFT SOLENOID 카트리지
44.213	SPRING, INCHING SPOOL BALANCE- OUTER 스프링
44.214	SPRING, INCHING SPOOL BALANCE- INNER 스프링
44.301	SEAL KIT, SOLENOID VALVE 씰키트
92.616	LOCKWASHER, ACCUMULATOR HOUSING FASTENER 로크와셔
95.082	FASTENER, CONTROL SELECTOR SOLENOID RELAY 패스너

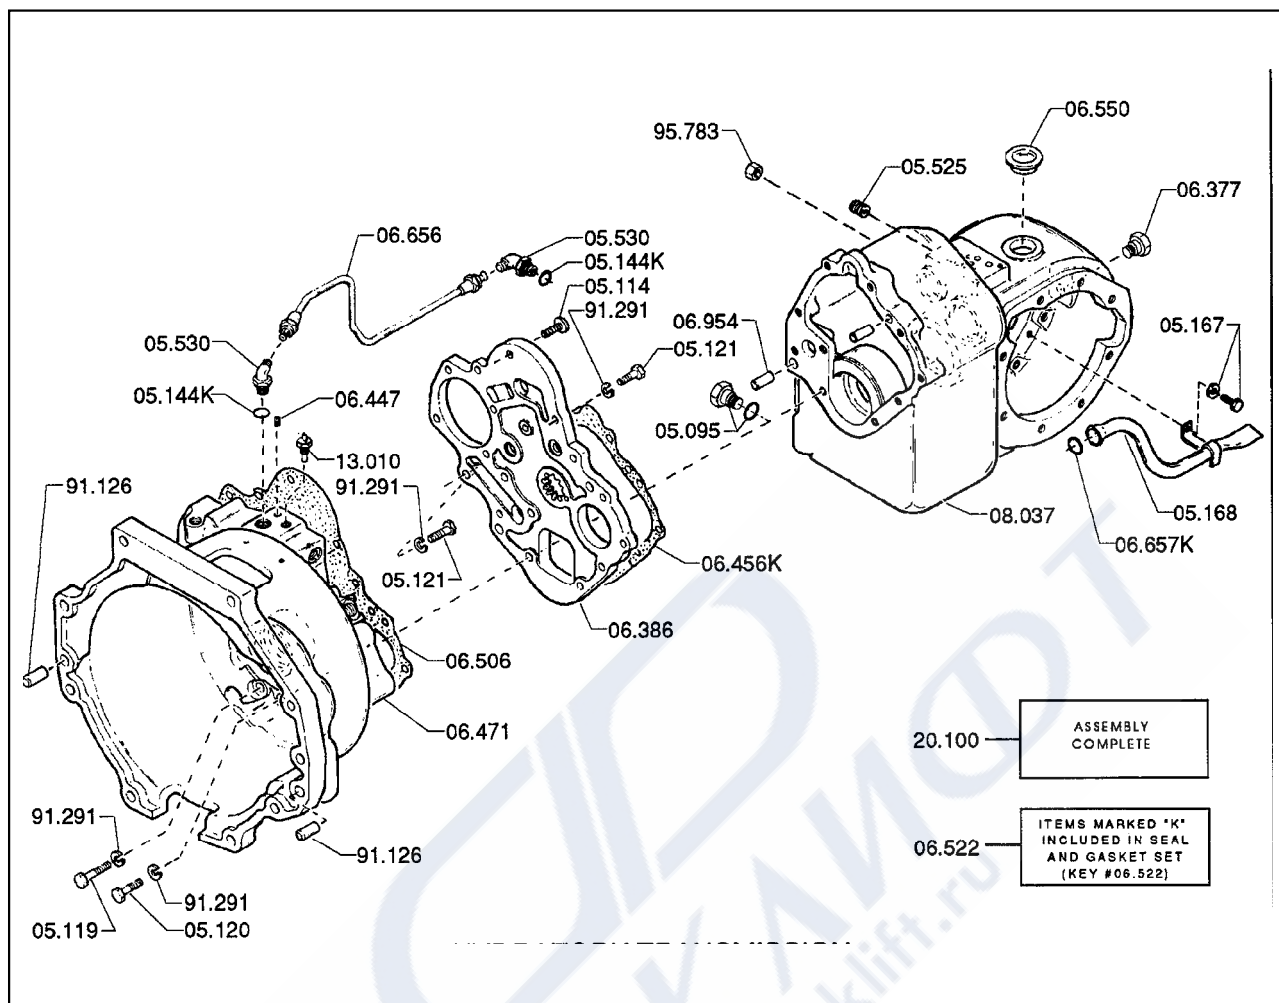 

- | | |
|--------|---|
| 05.095 | PLUG, CONVERTER HOUSING OIL PASSAGE
플러그 |
| 05.114 | FASTENER, CONVERTER TO CASE
패스너 |
| 05.119 | FASTENER, CONVERTER CASE
패스너 |
| 05.120 | FASTENER, CONVERTER TO CASE
패스너 |
| 05.121 | FASTENER, CONVERTER TO CASE
패스너 |
| 05.144 | SEAL, CONVERTER PUMP SUPPLY LINE FITTING
씰 |
| 05.167 | FASTENER, CONVERTER PUMP INLET LINE
패스너 |
| 05.168 | LINE, CONVERTER PUMP INLET
라인 |
| 05.525 | PLUG, TRANSMISSION CASE
플러그 |


05.530	FITTING, TORQUE CONVERTER INLET LINE 피팅
06.377	PLUG, TRANSMISSION SUMP OIL LEVEL 플러그
06.386	ADAPTOR, CONVERTER END 어댑터
06.447	PLUG, TRANSMISSION CASE 플러그
06.456	GASKET, TRANSMISSION ADAPTOR 가스켓
06.471	HOUSING, CONVERTER 하우징
06.506	SEAL, CONVERTER HOUSING TO CASE-INNER 씰
06.522	SEAL AND GASKET KIT, TRANSMISSION 씰& 가스켓
06.550	COVER, TRANSMISSION HOUSING INSPECTION 커버
06.656	LINE, TRANS VALVE PRESS PUMP INLET 라인
06.657	SEAL, TRANS VALVE PRESS PUMP INLET LINE 씰
06.954	DOWEL, TRANSMISSION CASE TO CONVERTER 다웰
08.037	CASE, TRANSMISSION 케이스
13.010	CONTROL, CONVERTOR TEMPERATURE INDICATOR 컨트롤
20.100	TRANSAXLE ASSEMBLY 트랜스액슬
91.126	DOWEL RING, FLYWHEEL HOUSING FASTENER 다웰링
91.291	LOCKWASHER, CONVERTER TO CASE FASTENER 로크와셔
95.783	NUT, CONVERTER OIL SUCTION TUBE FASTENER 너트

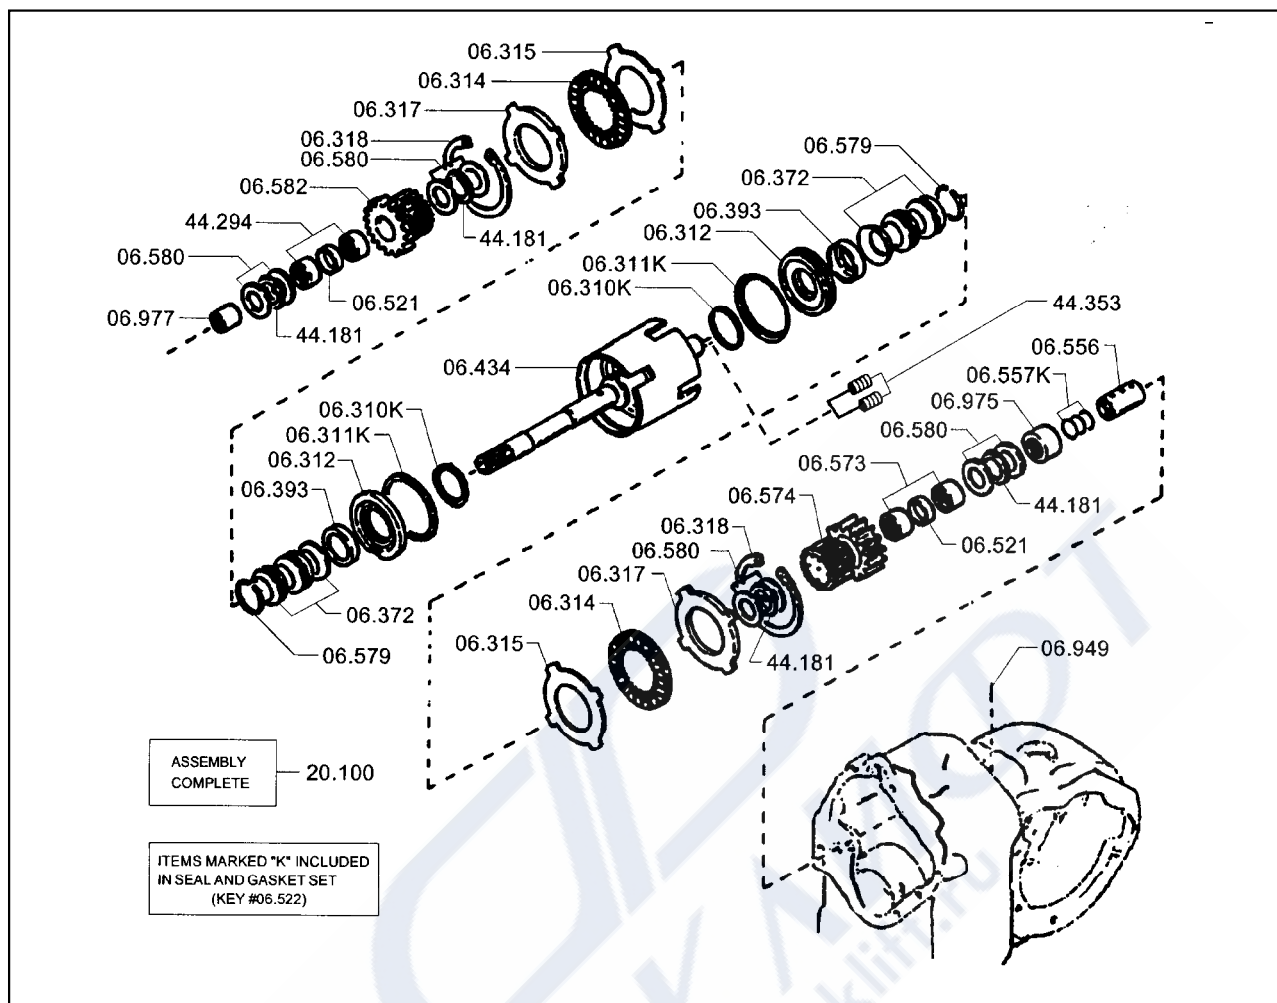 

06.310	SEAL, FORWARD CLUCH PISTON INNER 씰
06.311	SEAL, FORWARD CLUTCH PISTON OUTER 씰
06.312	PISTON, FORWARD CLUTCH 피스톤
06.314	DISC, FORWARD CLUTCH INNER 디스크
06.315	DISC, FORWARD CLUTCH OUTER 디스크
06.317	PLATE, FORWARD CLUTCH DISC END 플레이트
06.318	RING, FORWARD CLUTCH DISC END PLATE RET 링
06.372	SPRING, REVERSE CLUTCH DISC RELEASE 스프링
06.393	WASHER KIT, FORWARD CLUTCH CYLINDER THRUST 와셔키트

06.434	SHAFT & GEAR, CLUTCH DRIVE 샤프트& 기어
06.521	BALL, INCHING RELIEF VALVE 볼
06.556	DISTRIBUTOR, TRANSMISSION DIRECTION SEL OIL 디스트리뷰터
06.557	SEAL, TRANSMISSION DIRECTION SELECTOR OIL DIST 셀
06.573	BEARING, FORWARD GEAR 베어링
06.574	GEAR & BEARING FORWARD 기어& 베어링
06.579	FASTENER, REVERSE CLUTCH SPRING RETAINER 패스너
06.580	THRUST WASHER, REVERSE CLUTCH HUB & DRUM 스러스트와셔
06.582	GEAR & BEARING, REVERSE 기어& 베어링
06.949	RETAINER, CLUTCH OIL DISTRIBUTION SLEEVE 리테이너
06.975	BEARING, REVERSE CLUTCH HUB (AXLE END) 베어링
06.977	BEARING, REVERSE CLUTCH HUB (ENGINE END) 베어링
20.100	TRANSAXLE ASSEMBLY 트랜스액슬
44.181	BEARING, CLUTCH SHAFT THRUST 베어링
44.294	BEARING, REVERSE CLUTCH GEAR 베어링
44.353	PLUG, CLUTCH DRIVE SHAFT AND GEAR 플러그

 
■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

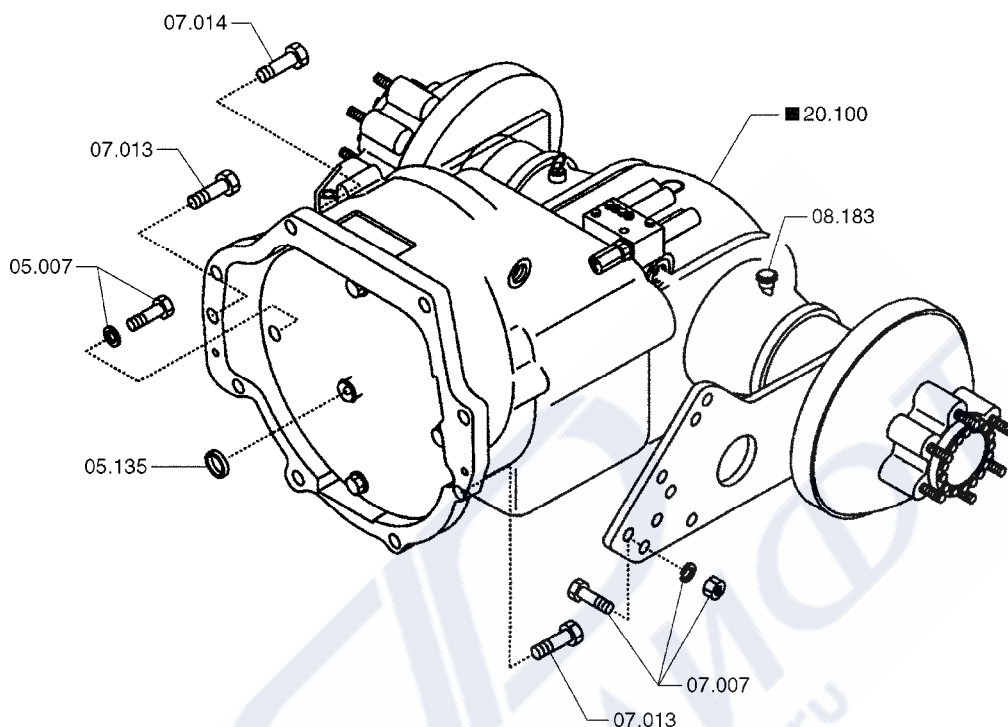

TRANSAXLE MOUNTING

07-045


05.007	FASTENER, CONVERTER TO FLYWHEEL 패스너
05.135	SPACER, CONVERTER PILOT SHAFT 스페이서
07.007	FASTENER, TRANSMISSION MOUNTING BRACKET LH 패스너
07.013	FASTENER, TRANSMISSION TO ENGINE 패스너
07.014	FASTENER, TRANSMISSION TO ENGINE 패스너
08.183	VENT, TRANSMISSION CASE 벤트
20.100	TRANSAXLE ASSEMBLY 트랜스액슬

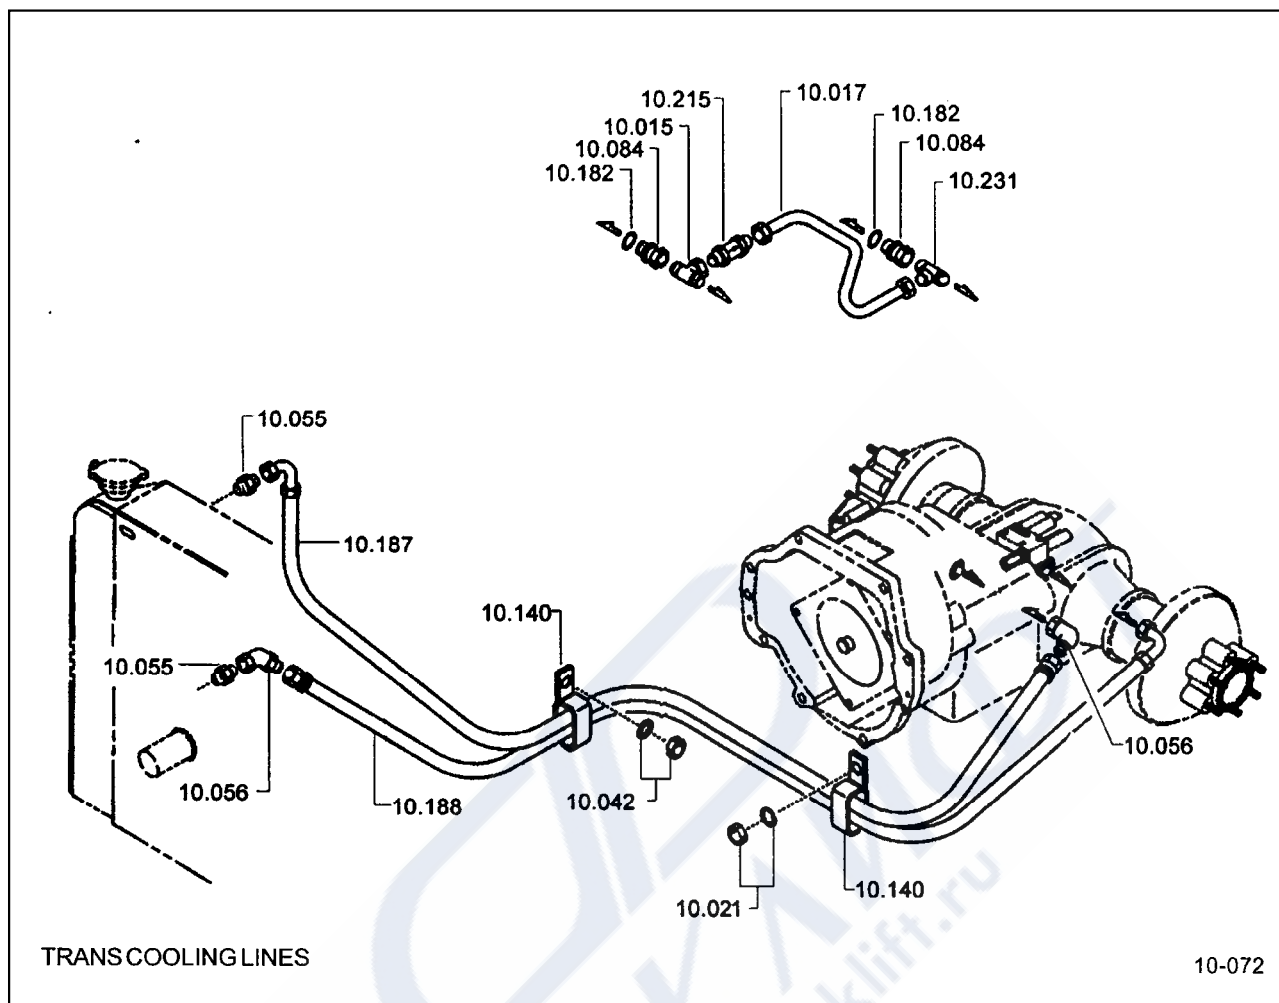 

10.015	FITTING, CONVERTOR SUMP INLET 피팅
10.017	LINE, COOLER OUTLET 라인
10.021	FASTENER, COOLER OUTLET LINE CLAMP 패스너
10.042	FASTENER, COOLER INLET LINE CLAMP 패스너
10.055	FITTING, COOLER OUTLET 피팅
10.056	FITTING, COOLER OUTLET 피팅
10.084	FITTING, COOLER INLET LINE 피팅
10.140	CLAMP, COOLER LINE 클램프
10.182	SEAL, TRANSMISSION COOLER OUTLET LINE FITTING 셀

10.187	LINE, TRANSMISSION COOLER INLET 라인
10.188	LINE, TRANSMISSION COOLER OUTLET 라인
10.215	VALVE, TRANSMISSION COOLER LINE RELIEF 밸브
10.231	FITTING, OIL COOLING LINES 피팅




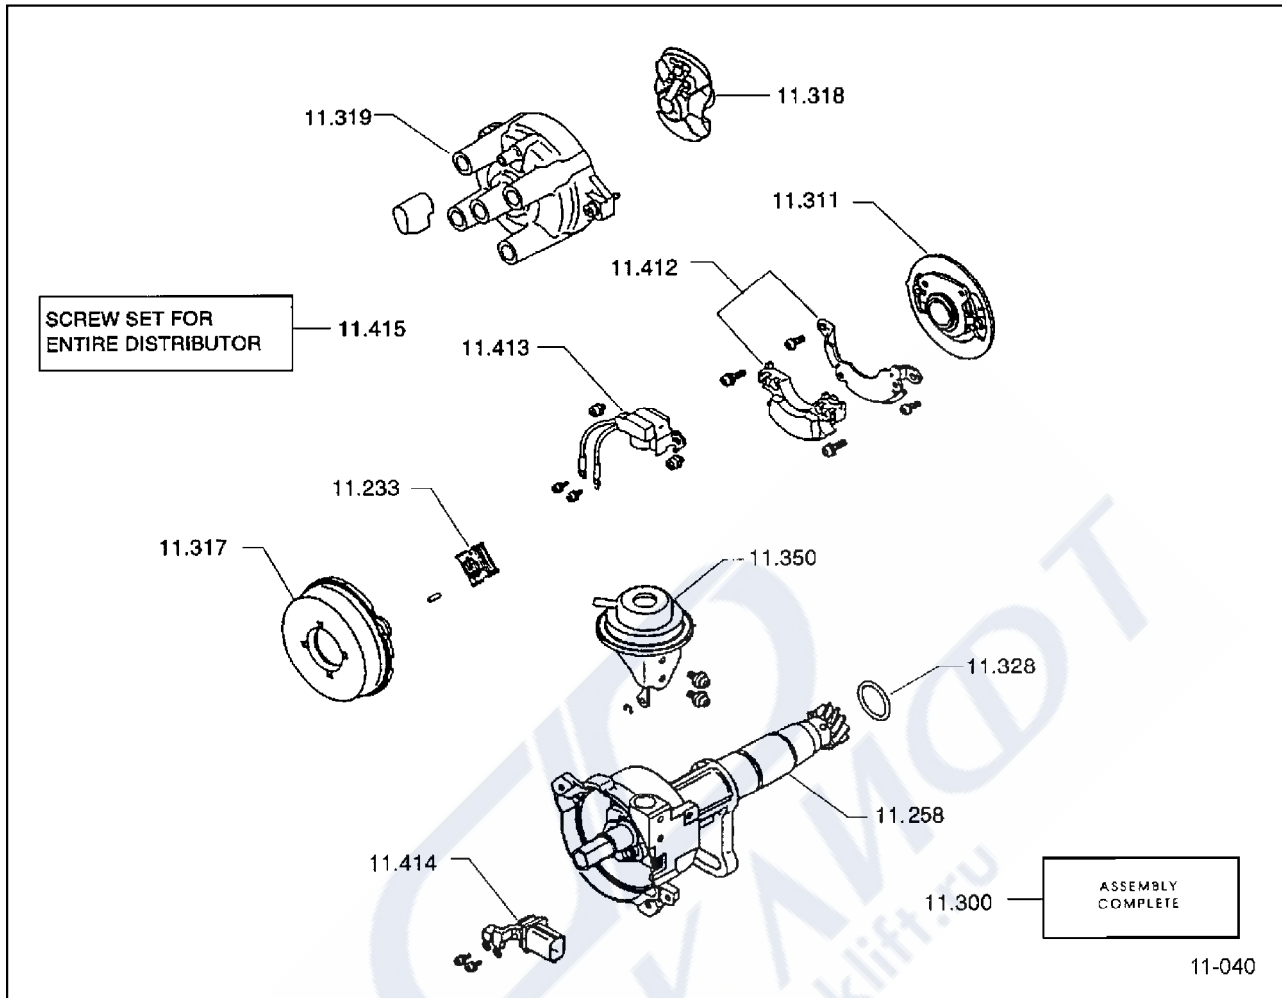 

- | | |
|--------|--|
| 11.233 | INDUCTOR, DISTRIBUTOR ELECTRONIC TIMER
인덕터 |
| 11.258 | HOUSING, DISTRIBUTOR
하우징 |
| 11.300 | DISTRIBUTOR ASSEMBLY
디스트리뷰터 |
| 11.311 | PLATE, DISTRIBUTOR BREAKER
플레이트 |
| 11.317 | COVER - GASKET - SEAL, DISTRIBUTOR HOUSING
커버 |
| 11.318 | ROTOR, DISTRIBUTOR
로터 |
| 11.319 | CAP, DISTRIBUTOR
캡 |
| 11.328 | SEAL, DISTRIBUTOR HOUSING
씼 |
| 11.350 | ASSEMBLY, DISTRIBUTOR VACUUM ADVANCE
진공어드밴스 |


11.412	IGNITER KIT, DISTRIBUTOR 시동키트
11.413	PICKUP KIT, DISTRIBUTOR 픽업키트
11.414	CONNECTOR KIT, DISTRIBUTOR 커넥터키트
11.415	SCREW SET, DISTRIBUTOR 스크류세트



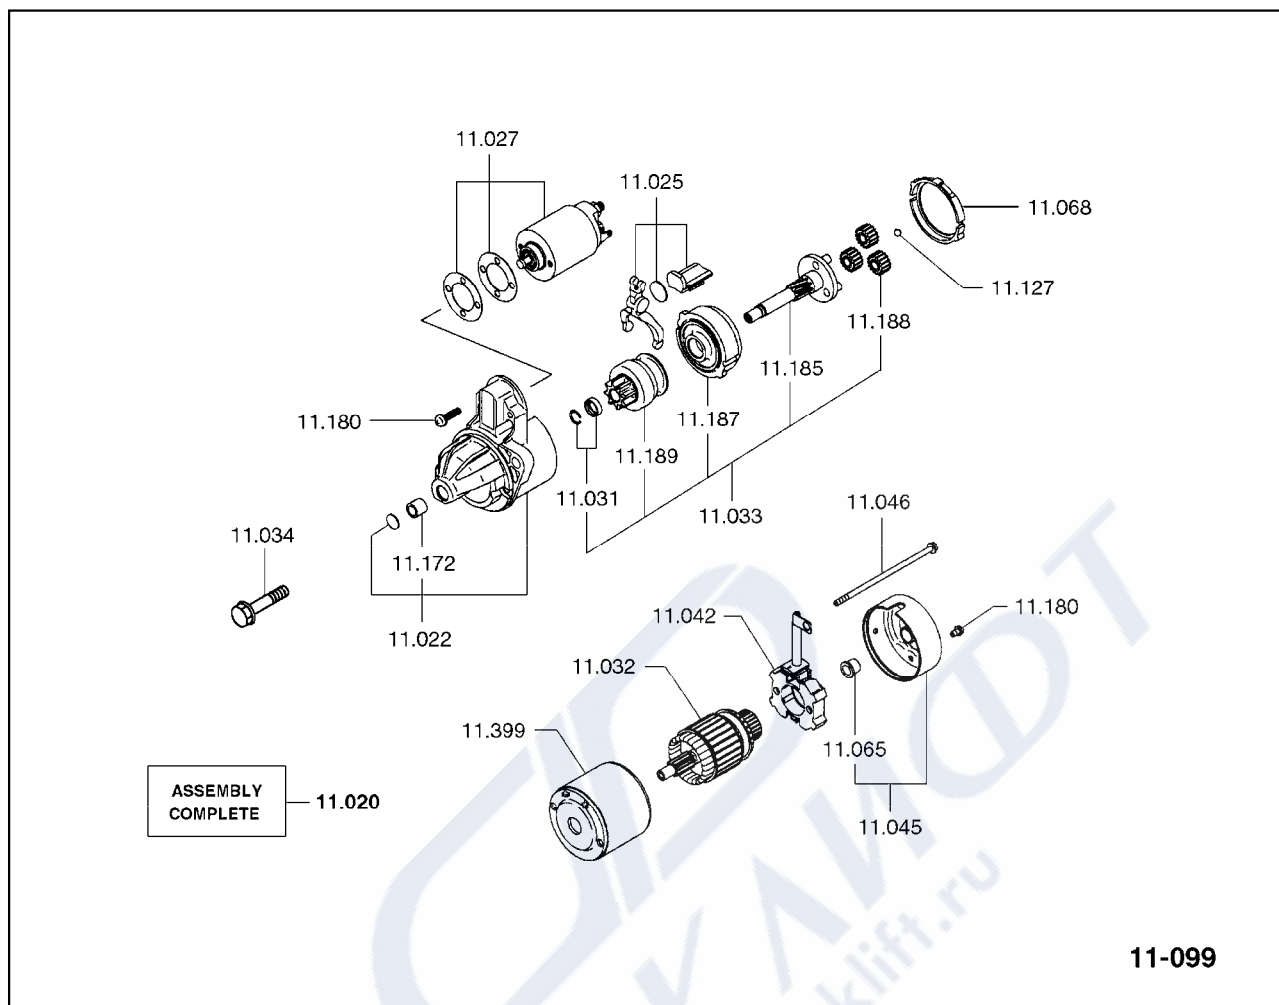 

- | | |
|--------|---|
| 11.020 | MOTOR ASSEMBLY, STARTING
모터 |
| 11.022 | HOUSING & BUSHING, DRIVE END
하우징& 부싱 |
| 11.025 | LEVER, DRIVE SHIFT FORK
레버 |
| 11.027 | SWITCH, SOLENOID
스위치 |
| 11.031 | COLLAR, PINION STOP
칼라 |
| 11.032 | ARMATURE, STARTING MOTOR
아마츄어 |
| 11.033 | DRIVE ASSEMBLY, STARTING MOTOR
드라이브 |
| 11.034 | FASTENER, STARTING MOTOR
패스너 |
| 11.042 | BRUSH HOLDER & BRUSH (KIT)
브러쉬홀더 |


11.045	FRAME, COMMUTATOR END 프레임
11.046	FASTENER, THRU 패스너
11.065	BEARING, COMMUTATOR END FRAME 베어링
11.068	GASKET, STARTER MOTOR CENTER BEARING 가스켓
11.127	BALL, CRANKING MOTOR DRIVE 볼
11.172	BEARING, CRANKING MOTOR CENTER 베어링
11.180	KIT, CRANKING MOTOR ARMATURE SHAFT 키트
11.185	GEAR, PINION SHAFT DRIVE 기어
11.187	GEAR, STARTER REDUCTION INTERNAL 기어
11.188	GEAR, STARTER REDUCTION PINION 기어
11.189	CLUTCH, STARTER OVERRUNNING 클러치
11.399	HOUSING ASSEMBLY, CRANKING MOTOR 하우징

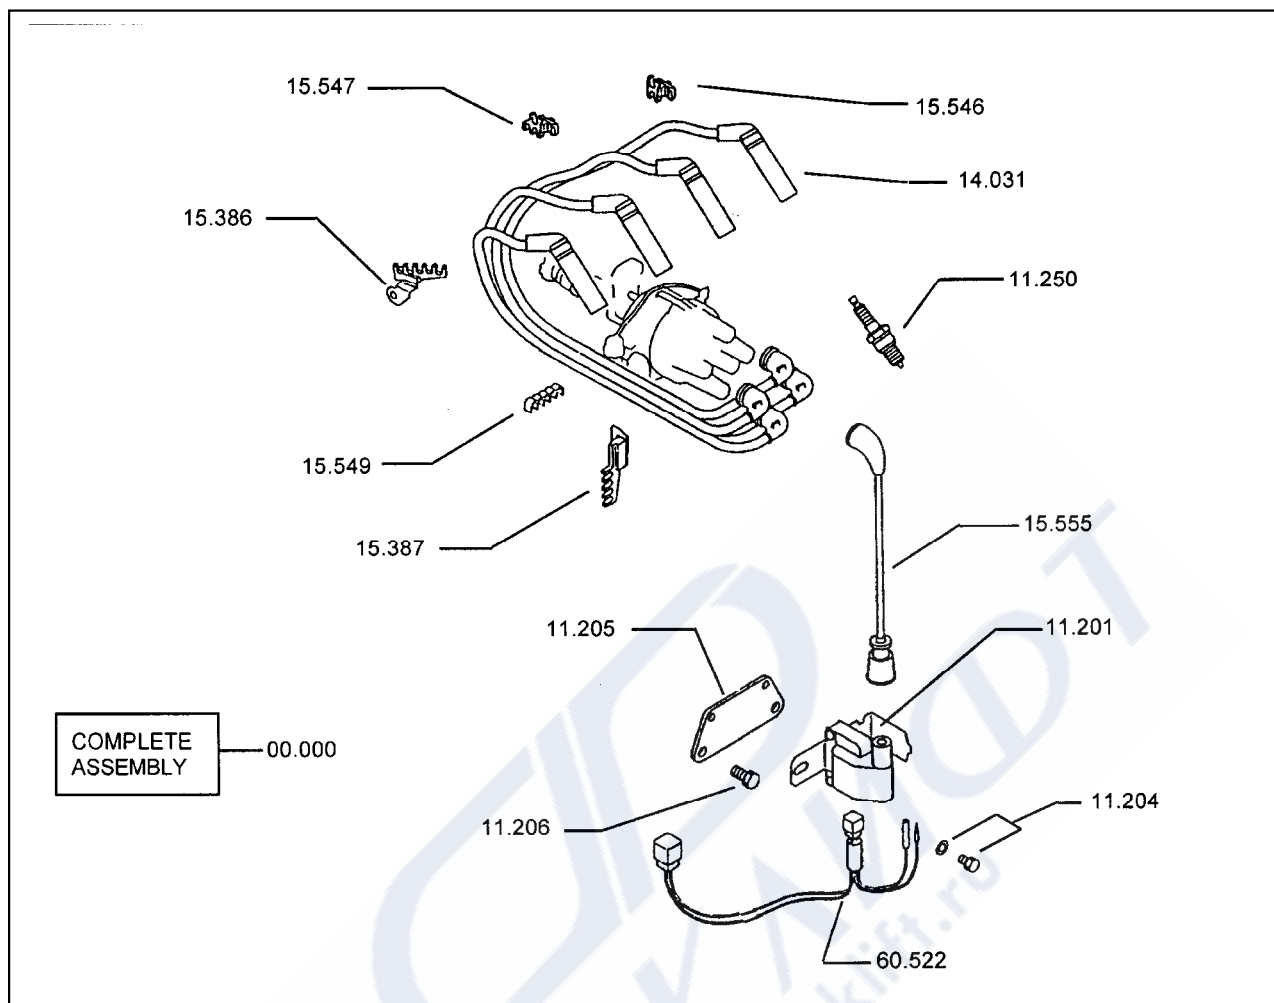 

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
11.201	COIL, IGNITION 코일
11.204	FASTENER, COIL STRAP 패스너
11.205	BRACKET, COIL MOUNTING 브라켓
11.206	FASTENER, COIL MOUNTING BRACKET 패스너
11.250	SPARK PLUG 스파크
14.031	KIT, HIGH TENSION WIRES & BOOTS 키트
15.386	BRACKET, SPARK PLUG WIRES 브라켓
15.387	BRACKET, SPARK PLUG WIRES 브라켓


15.546	SUPPORT, SPARK PLUG WIRES 서포트
15.547	SUPPORT, SPARK PLUG WIRES 서포트
15.549	SUPPORT, SPARK PLUG WIRES 서포트
15.555	WIRE, IGNITION LEAD 와이어
60.522	HARNESS, COIL TO DISTRIBUTOR 하네스

 ФОРКЛИФТ
www.forklift.ru

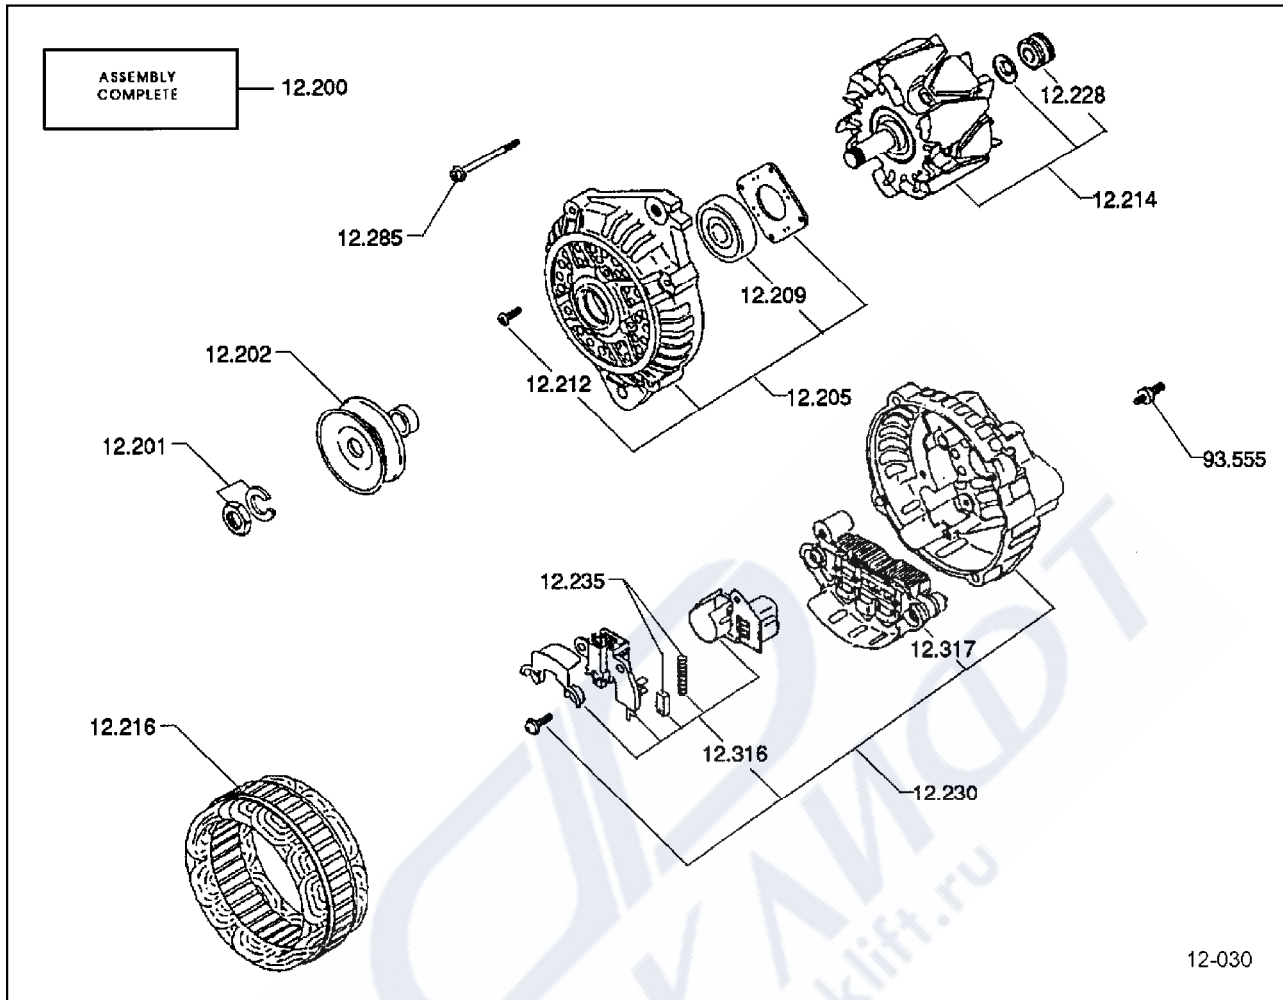

12.200	ALTERNATOR ASSEMBLY 알터네이터
12.201	FASTENER, ALTERNATOR PULLEY TO SHAFT 패스너
12.202	PULLEY, ALTERNATOR 폴리
12.205	FRAME, ALTERNATOR DRIVE END 프레임
12.209	BEARING, ALTERNATOR DRIVE END 베어링
12.212	FASTENER, ALTERNATOR DRIVE END BEARING RETAINER PL 패스너
12.214	ROTOR ASSEMBLY, ALTERNATOR 로터
12.216	STATOR ASSEMBLY, ALTERNATOR 스테이터
12.228	BEARING, ALTERNATOR SLIP RING FRAME END 베어링

12.230	FRAME, ALTERNATOR SLIP RING END 프레임
12.235	BRUSH KIT, ALTERNATOR 브러쉬키트
12.285	FASTENER, THROUGH 패스너
12.316	REGULATOR, ALTERNATOR VOLTAGE OUTPUT 레귤레이터
12.317	RECTIFIER ASSEMBLY, ALTERNATOR 정류기
93.555	FASTENER, ALTERNATOR RECTIFIER HOUSING COVER 패스너

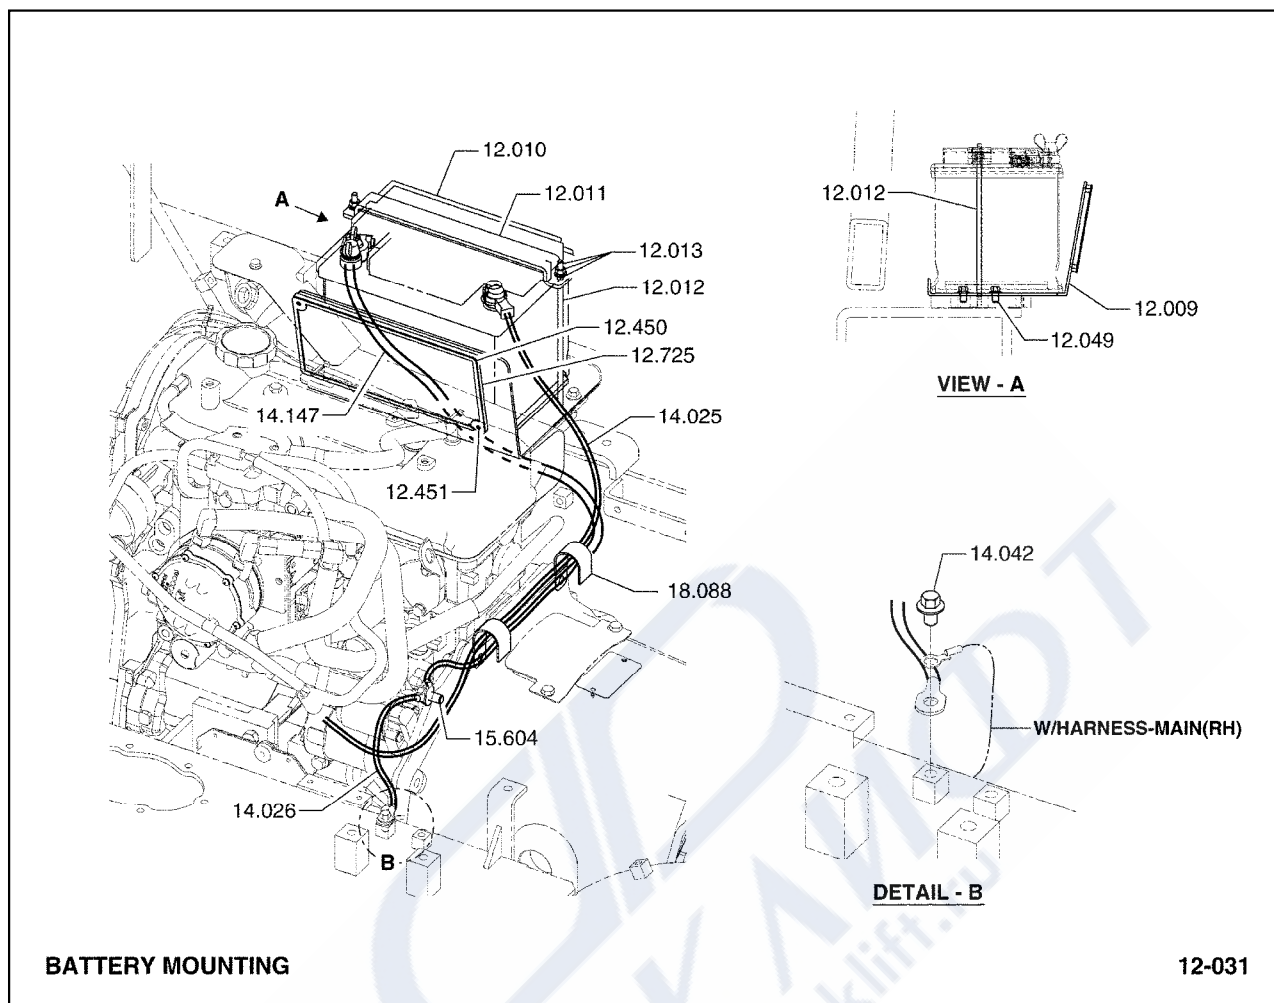 


BATTERY MOUNTING

12-031

12.009	SUPPORT, BATTERY 서포트
12.010	BATTERY 배터리
12.011	CLAMP, BATTERY HOLD DOWN 클램프
12.012	STUD, BATTERY HOLD DOWN 스터드
12.013	FASTENER, BATTERY HOLD DOWN (AT CLAMP) 패스너
12.049	FASTENER, BATTERY SUPPORT 패스너
12.450	COVER, BATTERY HEAT SHIELD INSULATOR 커버
12.451	FASTENER, BATTERY INSULATOR COVER 패스너
12.725	INSULATOR, BATTERY HEAT SHIELD 절연체

14.025	CABLE, BATTERY TO STARTER 케이블
14.026	CABLE, BATTERY GROUND 케이블
14.042	FASTENER, BATTERY GROUND CABLE 패스너
14.147	CABLE, BATTERY NEGATIVE 케이블
15.604	FASTENER, BATTERY NEGATIVE CABLE 패스너
18.088	CLAMP, BATTERY CABLE 클램프




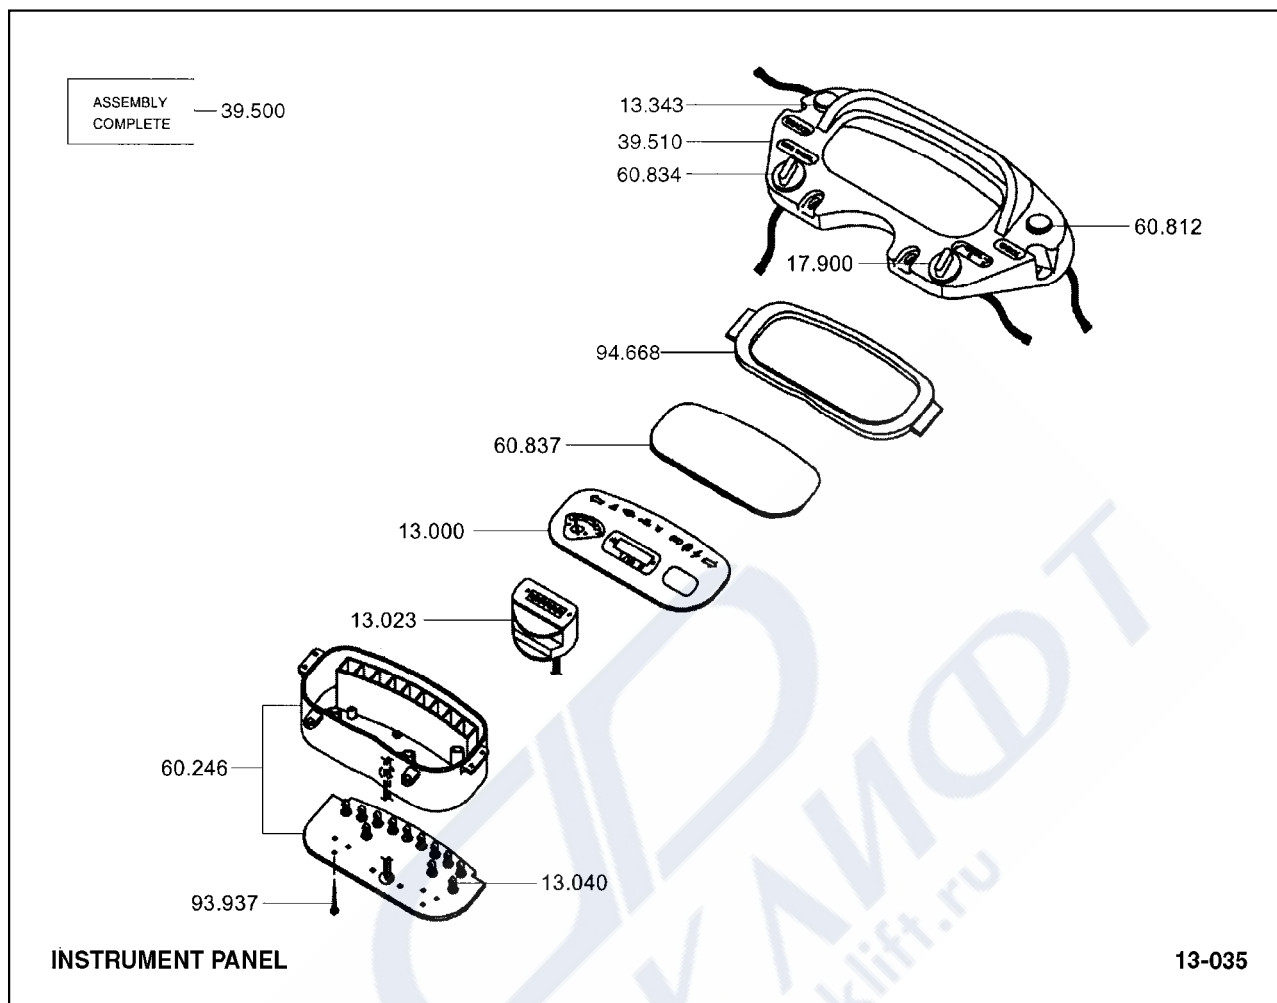 


13.000	PANEL, INSTRUMENT CLUSTER 판넬
13.023	METER, TRUCK HOUR 미터
13.040	BULB, PANEL LIGHT 전구
13.343	SWITCH, WARNING LIGHT/PREHEAT 스위치
17.900	SWITCH, DIRECTION CONTROL 스위치
39.500	PANEL, INSTRUMENT 판넬
39.510	HOUSING, INSTRUMENT PANEL 하우징
60.246	HOUSING, PANEL GAUGE CLUSTER 하우징
60.812	SWITCH, DASH PANEL ON-OFF 스위치

60.834	SWITCH, CLUSTER AUTO MANUAL 스위치
60.837	GLASS, CLUSTER WINDOW 글래스
93.937	FASTENER, PANEL GAUGE CLUSTER LENS 패스너
94.668	RETAINER, INSTRUMENT PANEL SIGNAL CLUSTER 리테이너




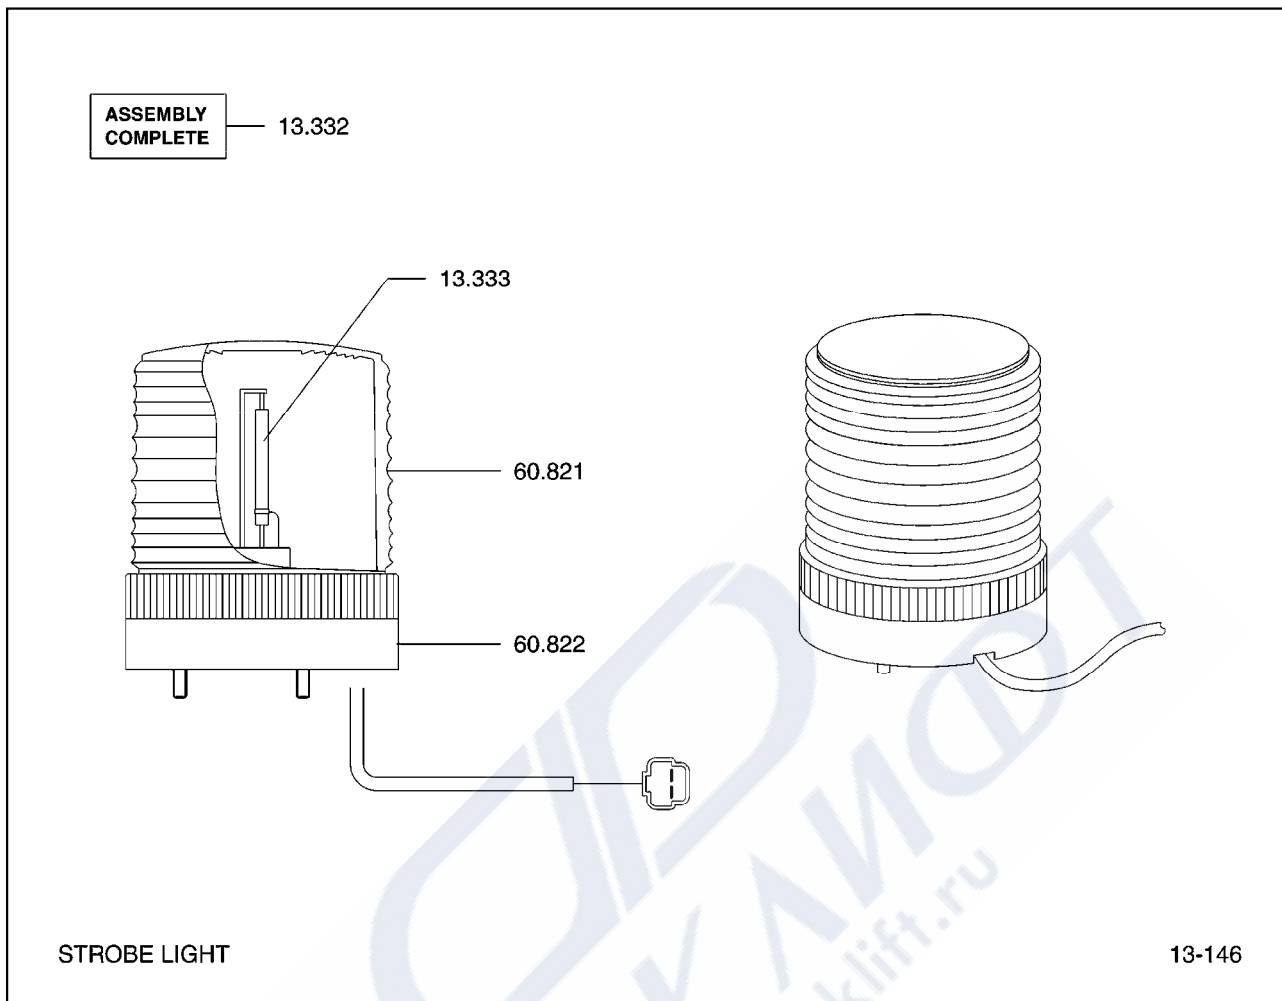 

13.332	ASSEMBLY, WARNING LIGHT 경고등
13.333	BULB, WARNING LIGHT 전구
60.821	GLOBE, STROBE LIGHT 글로브
60.822	BASE, STROBE LIGHT 베이스

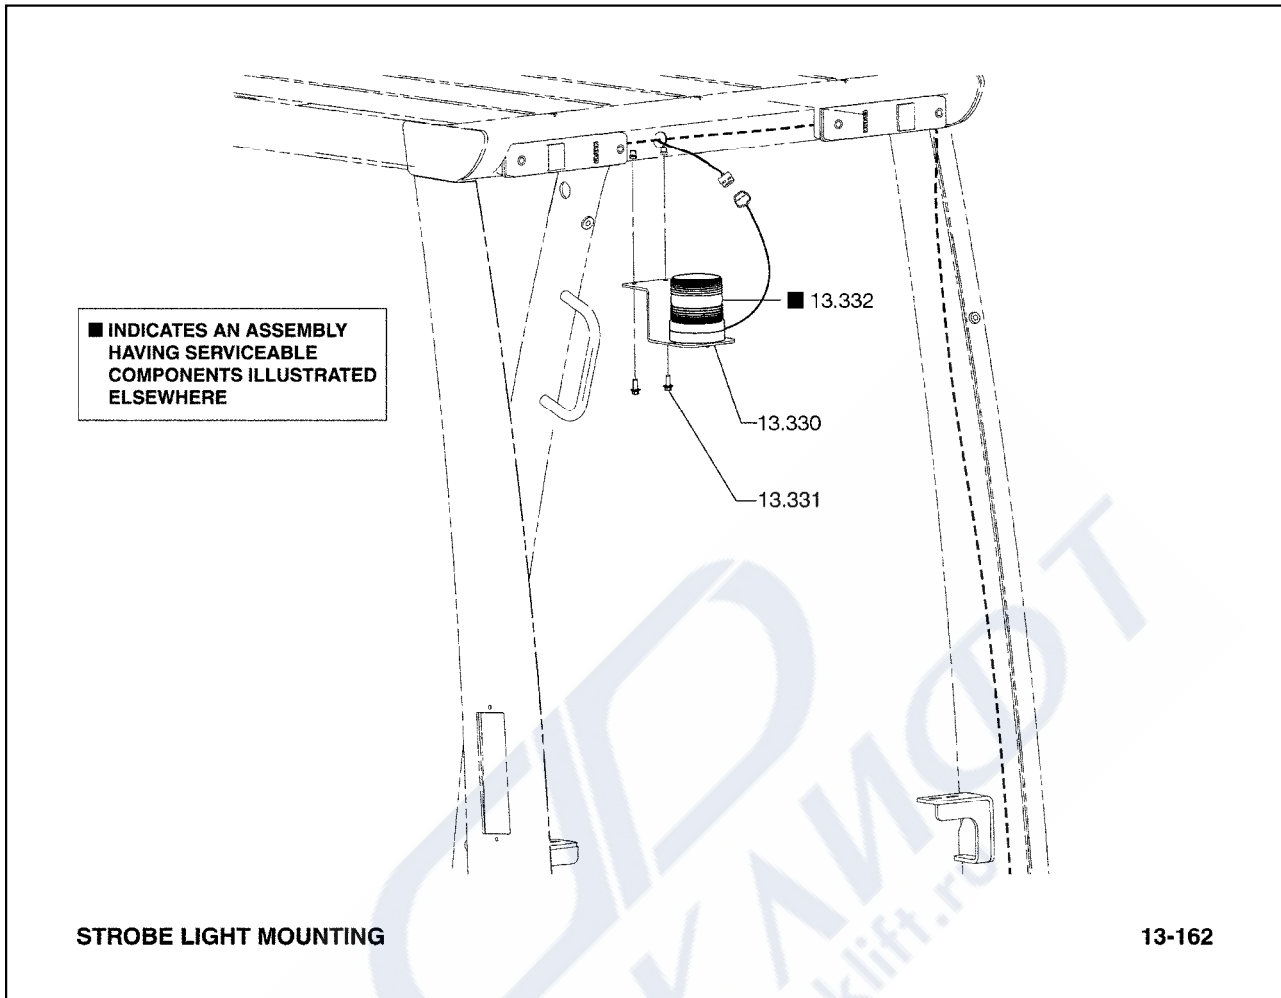 


- | | |
|--------|--|
| 13.330 | BRACKET, WARNING LIGHT
브라켓 |
| 13.331 | FASTENER, WARNING LIGHT BRACKET
패스너 |
| 13.332 | ASSEMBLY, WARNING LIGHT
경고등 |

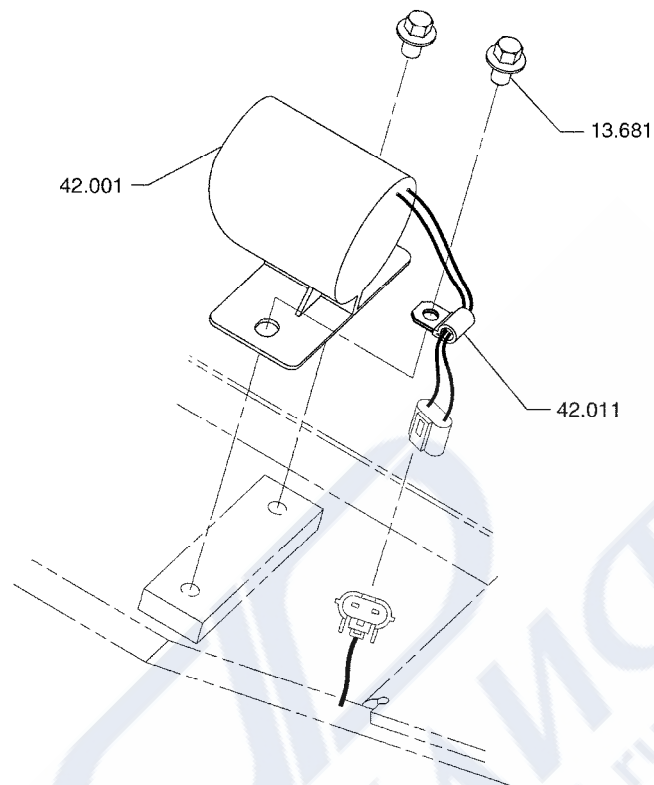 


BACK-UP ALARM INSTALLATION

13-228


- | | |
|--------|--|
| 13.681 | FASTENER, WARNING DEVICE
패스너 |
| 42.001 | WARNING DEVICE, AUDIBLE (AIR OPER)
경고장치 |
| 42.011 | CLIP, AUDIBLE WARNING DEVICE CABLE
클립 |

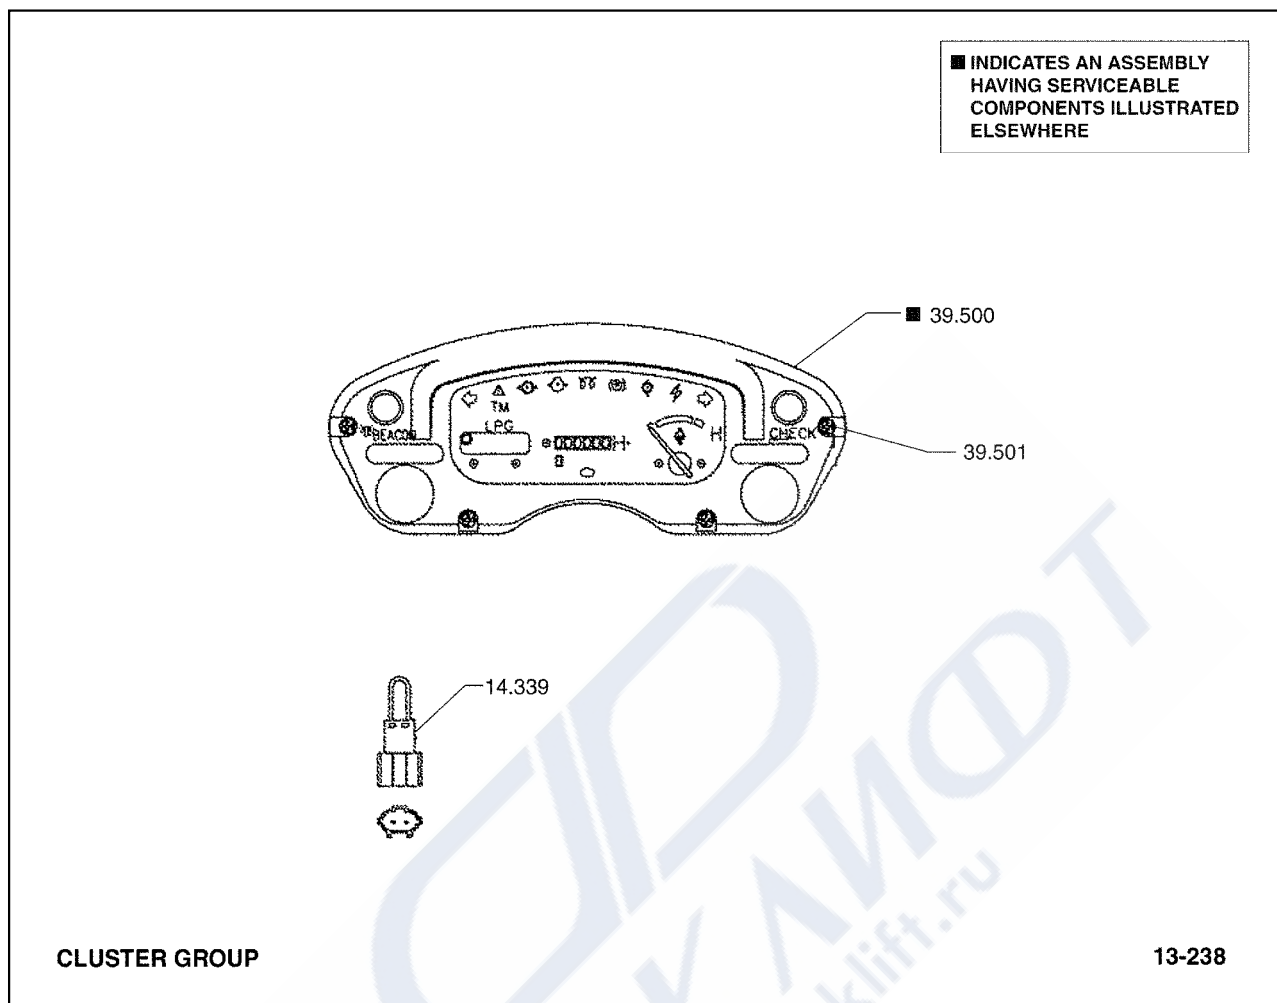 

14.339	WIRE, ELECTRICAL INSTALLATION 와이어
39.500	PANEL, INSTRUMENT 판넬
39.501	FASTENER, INSTRUMENT PANEL 패스너

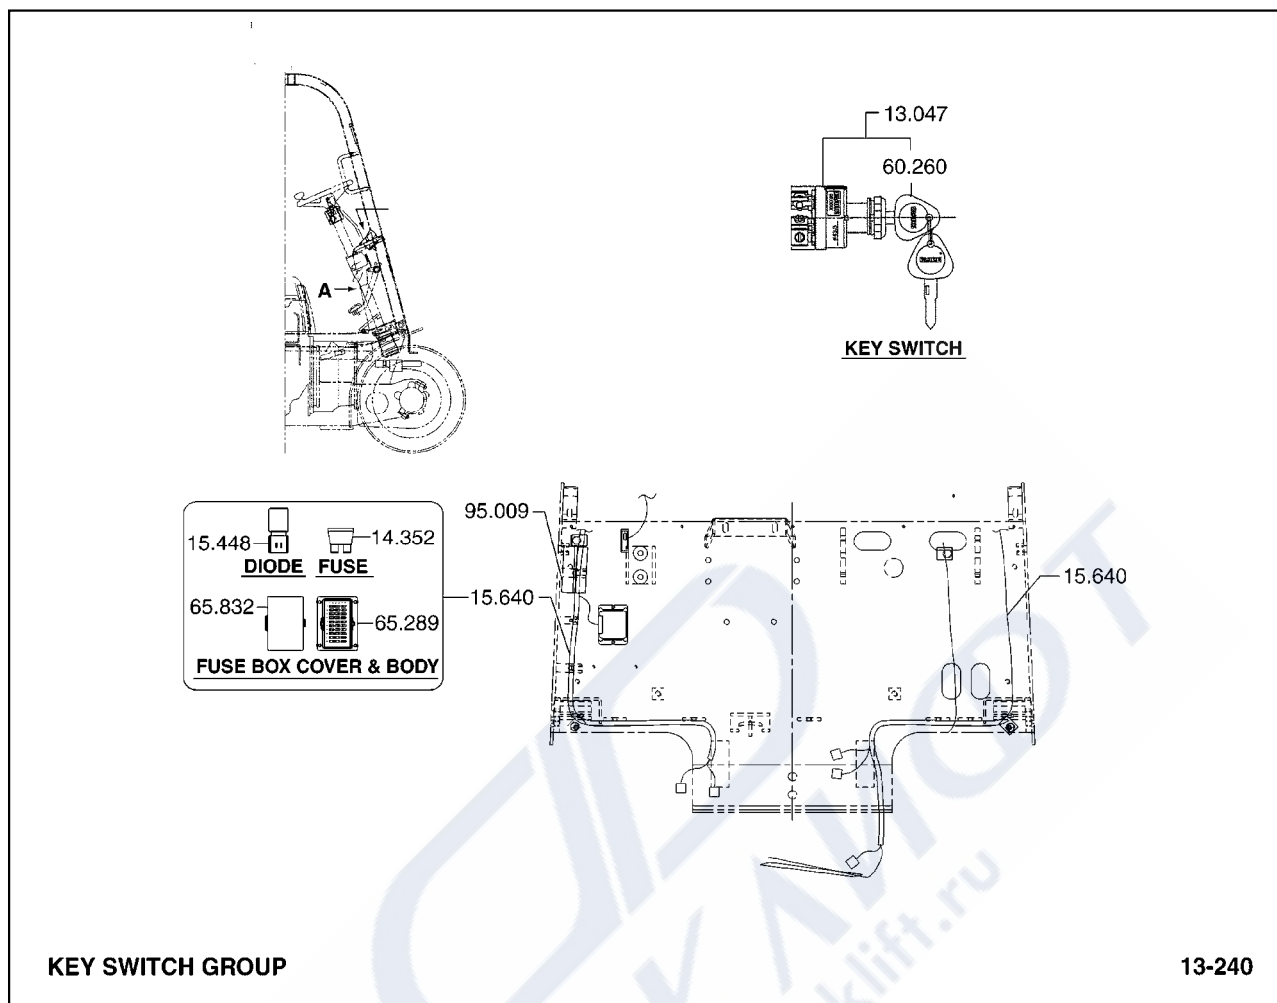 


13.047	SWITCH, CIRCUIT LOCKING 스위치
14.352	FUSE, CONTROL CIRCUIT 퓨즈
15.448	DIODE, HARNESS 다이오드
15.640	WIRING HARNESS, MACHINE COWL 와이어하네스
60.260	KEY, CIRCUIT LOCKING SWITCH 키
65.289	BODY, FUSE BOX 바디
65.832	COVER, FUSE BOX 커버
95.009	FASTENER, FUSE BOX MOUNTING 패스너

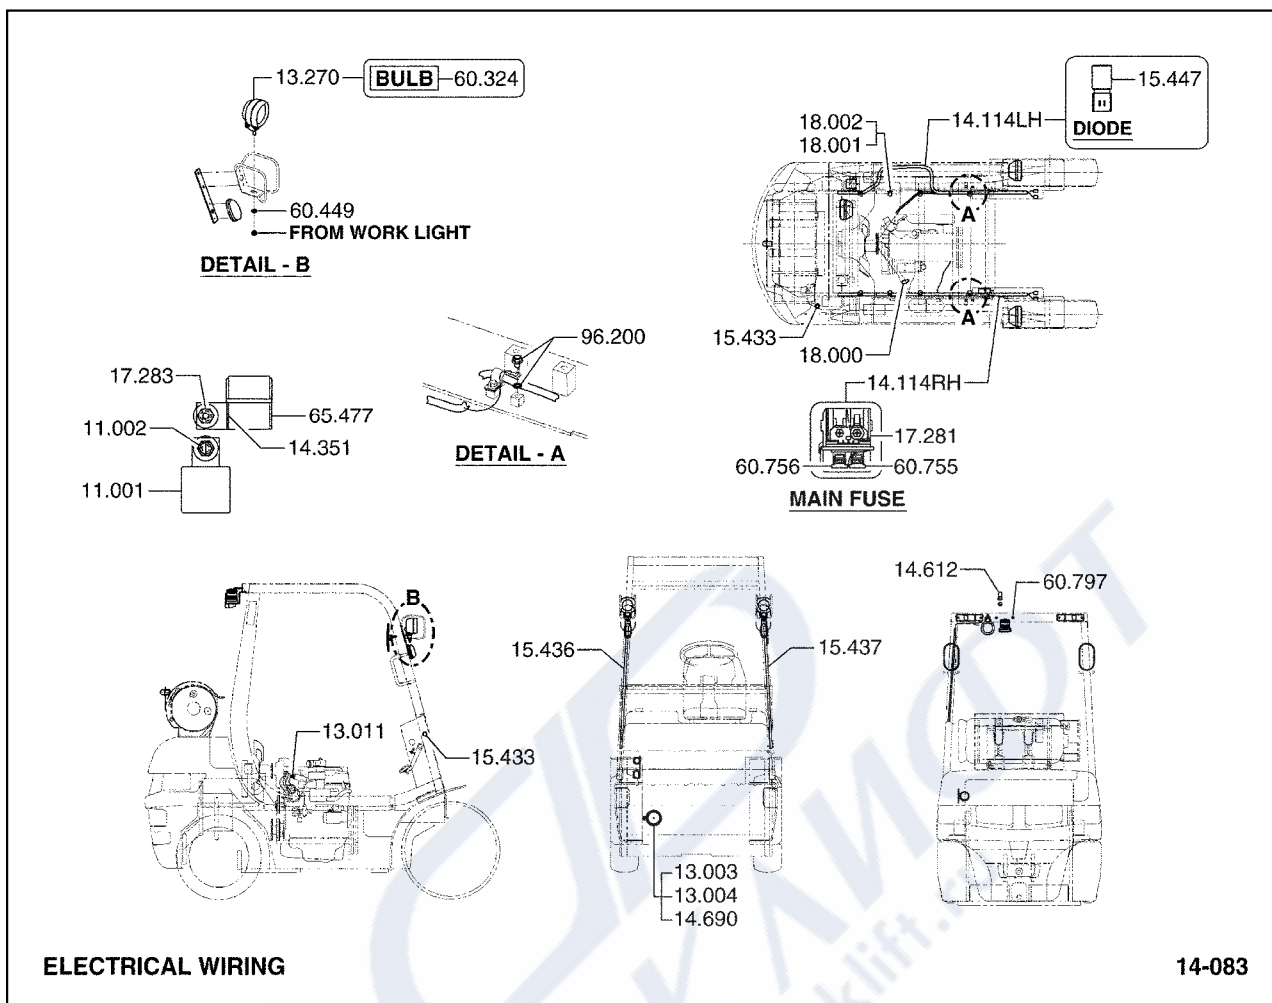 


- | | |
|--------|--|
| 11.001 | RELAY, STARTER
릴레이 |
| 11.002 | FASTENER, STARTER RELAY
패스너 |
| 13.003 | HORN
혼 |
| 13.004 | FASTENER, HORN MOUNTING BRACKET
패스너 |
| 13.011 | CONTROL, ENGINE TEMPERATURE INDICATOR
컨트롤 |
| 13.270 | HEADLAMP, ADJUSTABLE
헤드램프 |
| 14.114 | HARNESS, MACHINE WIRING
하네스 |
| 14.351 | BRACKET, CONTROL CIRCUIT FUSE HOLDER
브라켓 |
| 14.612 | CONNECTOR, WARNING LIGHT WIRE
커넥터 |


14.690	WIRE, HORN FILTER 와이어
15.433	GROMMET, CONTROL CIRCUIT WIRING HARNESS 그로멧
15.436	HARNESS, RH HEADLAMP WIRING 하네스
15.437	HARNESS, HEADLAMP WIRING 하네스
15.447	DIODE, HARNESS 다이오드
17.281	BLOCK, MAIN FUSE 블록
17.283	FASTENER, MAIN FUSE BLOCK 패스너
18.000	CLIP, WIRING HARNESS 클립
18.001	FASTENER, WIRING HARNESS CLIP 패스너
18.002	CLIP, WIRING HARNESS 클립
60.324	BULB, HEADLAMP 전구
60.449	SPACER, HEAD LAMP BRACKET MOUNTING 스페이서
60.755	FUSE, WIRING HARNESS 40AMP 퓨즈
60.756	FUSE, WIRING HARNESS 60AMP 퓨즈
60.797	GROMMET, REAR ACCESSORY WIRE 그로멧
65.477	BRACKET, POWER FUSE MOUNTING 브라켓
96.200	FASTENER, WIRING HARNESS GROUND 패스너

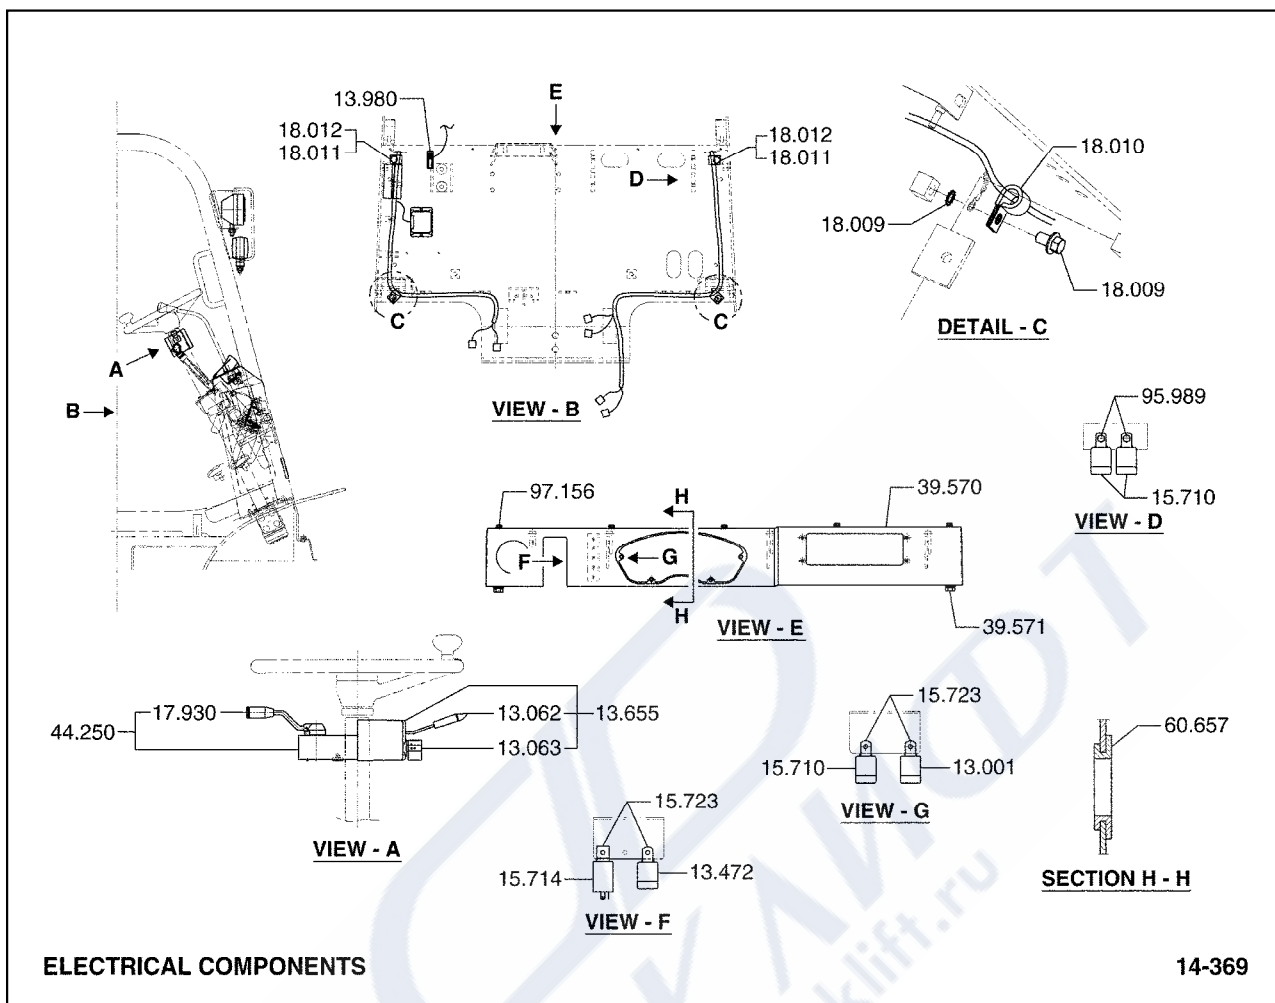 


13.001	RELAY, HORN 릴레이
13.062	SWITCH, LIGHT 스위치
13.063	KNOB, LIGHT SWITCH 노브
13.472	RELAY, MAIN POWER 릴레이
13.655	SWITCH, TURN INDICATOR 스위치
13.980	SWITCH, PARK/SAFETY INTERLOCK 스위치
15.710	RELAY, ELECTRICAL 릴레이
15.714	FLASHER, UNIT 플래셔
15.723	FASTENER, ELECTRICAL RELAY 패스너

17.930	KNOB, FORWARD & REVERSE LEVER 노브
18.009	FASTENER, HARNESS CLIP 패스너
18.010	CLIP, HARNESS 클립
18.011	FASTENER, HARNESS CLIP 패스너
18.012	CLIP, WIRE HARNESS 클립
39.570	COVER ASSEMBLY, DASH 커버
39.571	FASTENER, DASH COVER 패스너
44.250	DIRECTIONAL CONTROL ASSEMBLY 방향컨트롤
60.657	SEAL, INSTRUMENT PANEL 씰
95.989	FASTENER, RELAY MOUNTING 패스너
97.156	FASTENER, DASH COVER 패스너

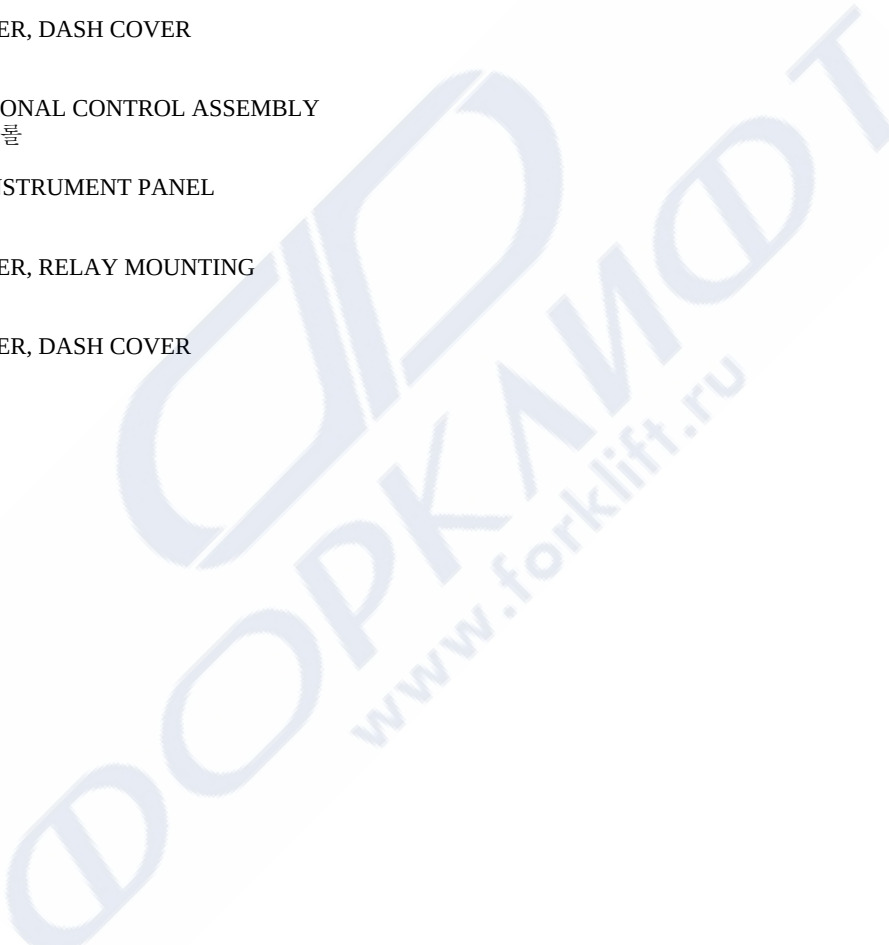 

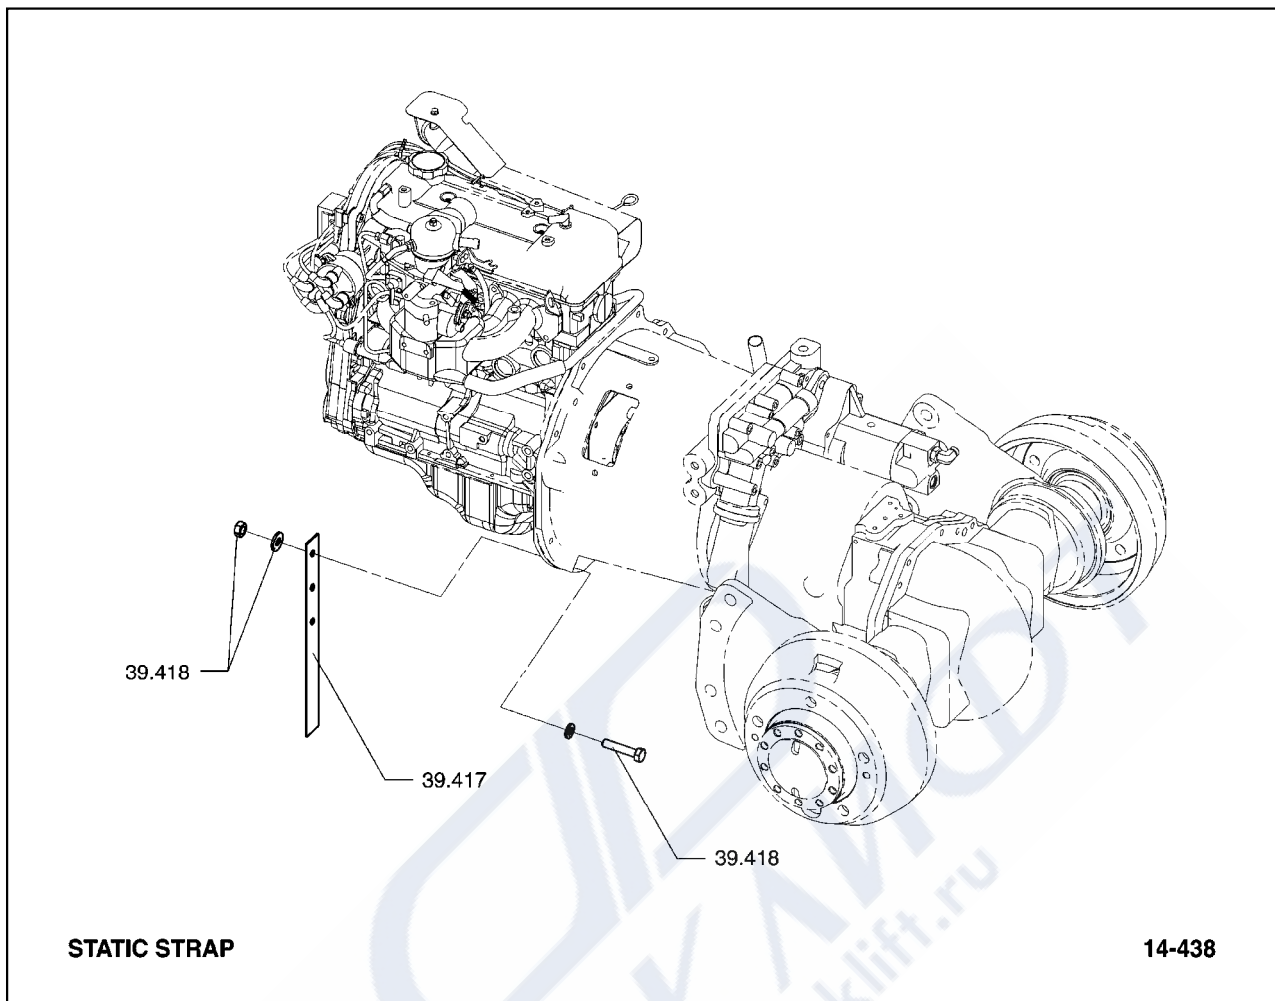 


 - 39.417 GROUND STRAP, ELECTRIC TRUCK
접지케이블
- 39.418 FASTENER, ELECTRIC TRUCK GROUND STRAP
패스너

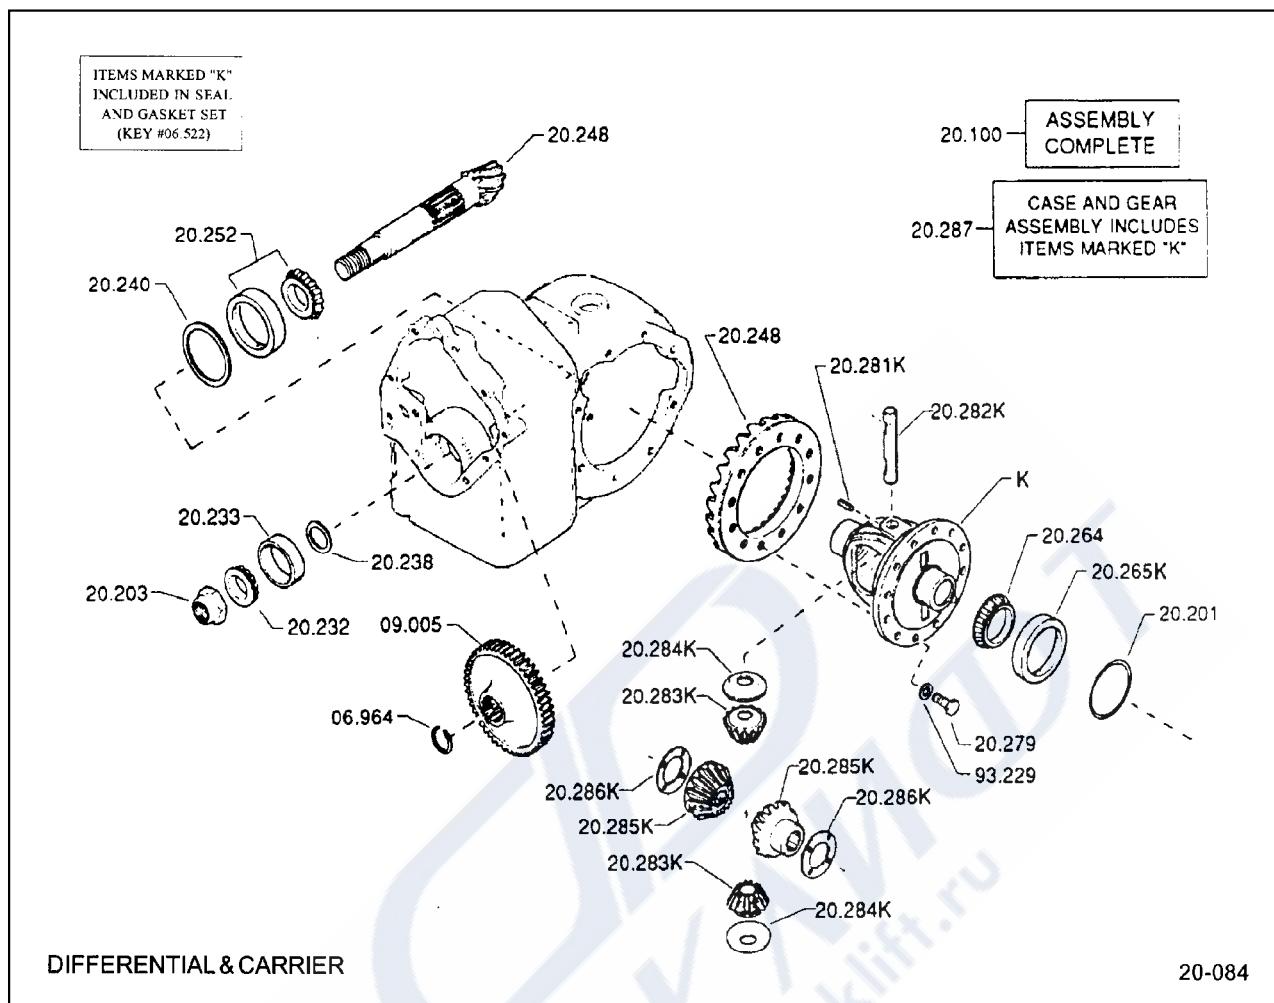


06.964	RING, OUTPUT SHAFT GEAR LOCATING 링
09.005	GEAR, OUTPUT 기어
20.100	TRANSAXLE ASSEMBLY 트랜스액슬
20.201	SHIM, DIFF BRG CARRIER TO AXLE HOUSING 심
20.203	NUT, DIFFERENTIAL PINION COMPANION FLANGE 너트
20.232	CONE, DIFFERENTIAL PINION OUTER BEARING 콘
20.233	CUP, DIFFERENTIAL PINION OUTER BEARING 컵
20.238	SHIM KIT, DIFFERENTIAL PINION BEARING CAGE 심
20.240	SPACER, DIFFERENTIAL PINION BEARING 스페이서

20.248	RING GEAR & PINION SET, DIFFERENTIAL 링
20.252	BEARING, DIFFERENTIAL PINION INNER 베어링
20.264	CONE, DIFFERENTIAL BEARING 콘
20.265	CUP, DIFFERENTIAL BEARING 컵
20.279	FASTENER, DIFFERENTIAL CASE TO RING GEAR 패스너
20.281	FASTENER, DIFF SIDE PINION PIN 패스너
20.282	SPIDER, DIFFERENTIAL PINION 스파이더
20.283	GEAR, DIFFERENTIAL SIDE PINION 기어
20.284	WASHER, DIFF SIDE PINION GEAR THRUST 와셔
20.285	GEAR, DIFFERENTIAL SIDE 기어
20.286	WASHER, DIFFERENTIAL SIDE GEAR THRUST 와셔
20.287	CASE & GEAR ASSEMBLY, DIFFERENTIAL 케이스& 기어
93.229	WASHER, DIFFERENTIAL CASE TO RING GEAR FASTENER 와셔

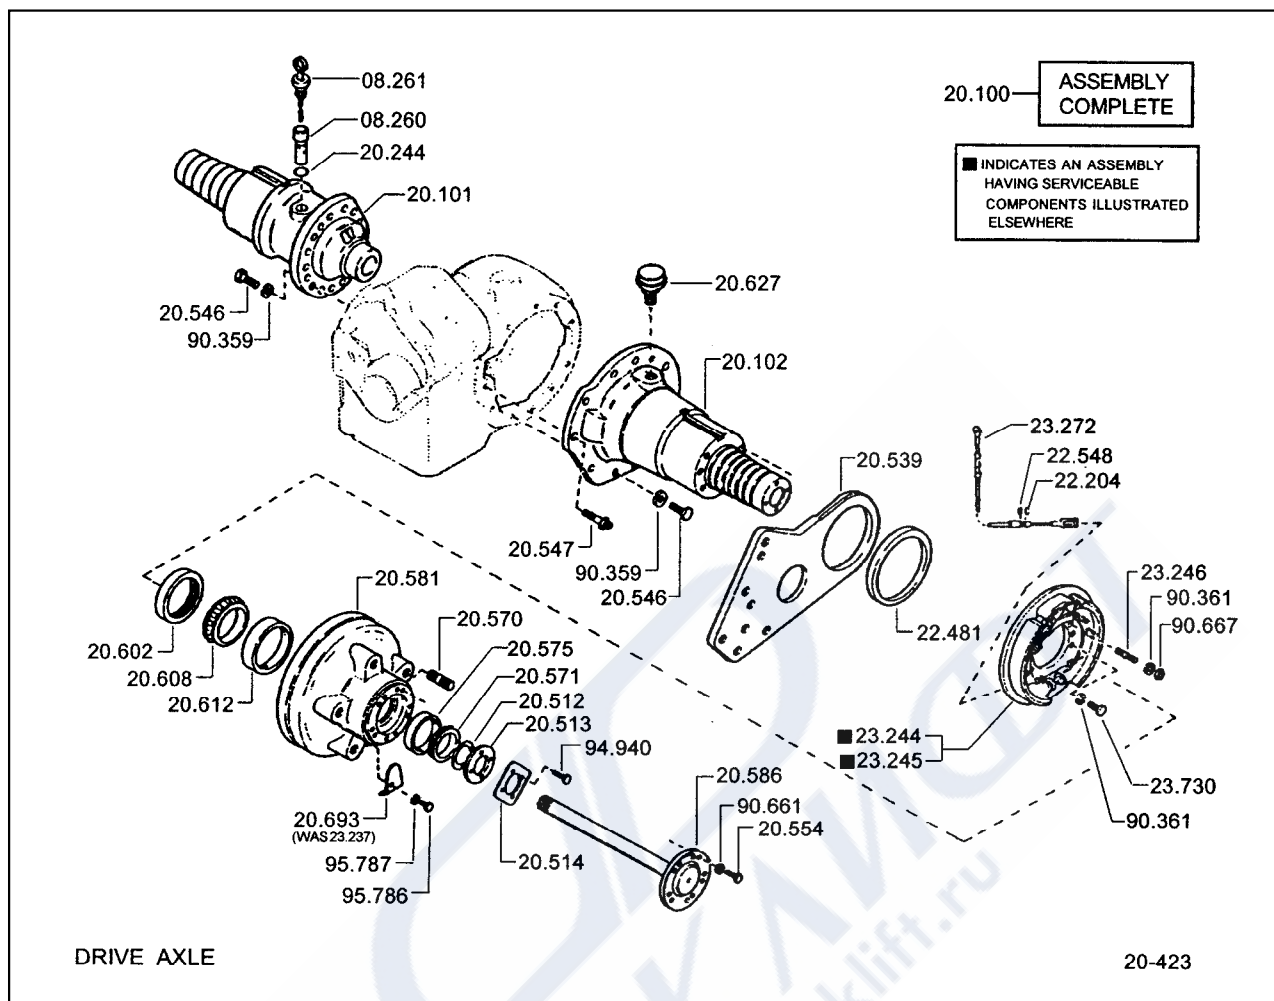 

08.260	TUBE, TRAN OIL LEVEL DIPSTICK SUPPORT 튜브	20.575	CUP, DRIVE AXLE HUB OUTER BEARING 컵
08.261	DIPSTICK, TRANSMISSION OIL LEVEL 딤스틱	20.581	HUB ASSEMBLY, DRIVE AXLE 허브
20.100	TRANSAXLE ASSEMBLY 트랜스액슬	20.586	SHAFT, DRIVE AXLE 샤프트
20.101	HOUSING, TRANSAXLE WHEEL END - LH 하우징	20.602	SEAL, DRIVE AXLE HUB INNER OIL 씰
20.102	HOUSING, TRANSAXLE WHEEL END - RH 하우징	20.608	CONE, DRIVE AXLE HUB INNER BEARING 콘
20.244	SEAL, DIFFERENTIAL OIL LEVEL DIPSTICK SUPPORT 씰	20.612	CUP, DRIVE AXLE HUB INNER BEARING 컵
20.512	SHIM, DRIVE AXLE HUB BEARING 심	20.627	VENT, DIFFERENTIAL & AXLE 벤트
20.513	RETAINER, DRIVE AXLE HUB BEARING 리테이너	20.693	COVER, BRAKE ADJUSTER 커버
20.514	LOCKPLATE, DRIVE AXLE HUB BEARING RETAINER 로크플레이트	22.204	CLIP, BRAKE CABLE 클립
20.539	SUPPORT, DRIVE AXLE SPINDLE (RH) 서포트	22.481	SPACER, WHEEL BRAKE ASSEMBLY 스페이스
20.546	FASTENER, DRIVE AXLE END 패스너	22.548	SEAL, PARKING BRAKE CABLE 씰
20.547	FASTENER, DRIVE AXLE END 패스너	23.244	BRAKE ASSEMBLY, RH DRIVE WHEEL 브레이크
20.554	FASTENER, DRIVE AXLE HUB CAP 패스너	23.245	BRAKE ASSEMBLY, LH DRIVE WHEEL 브레이크
20.570	FASTENER, DRIVE WHEEL MOUNTING 패스너	23.246	FASTENER, BRAKE ASSEMBLY 패스너
20.571	CONE, DRIVE AXLE HUB OUTER BEARING 콘	23.272	CABLE, PARKING BRAKE 케이블


23.730	FASTENER, BRAKE ASSEMBLY 패스너
90.359	LOCKWASHER, DRIVE AXLE END FASTENER 로크와셔
90.361	LOCKWASHER, BRAKE ASSEMBLY FASTENER 로크와셔
90.661	LOCKWASHER, DRIVE AXLE HUB CAP FASTENER 로크와셔
90.667	NUT, WHEEL BRAKE ASSEMBLY FASTENER 너트
94.940	FASTENER, DRIVE AXLE HUB BEARING RETAINER 패스너
95.786	FASTENER, BRAKE ADJUSTOR ACCESS HOLE COVER 패스너
95.787	LOCKWASHER, BRAKE ADJUSTOR ACCESS HOLE COVER FAS 로크와셔

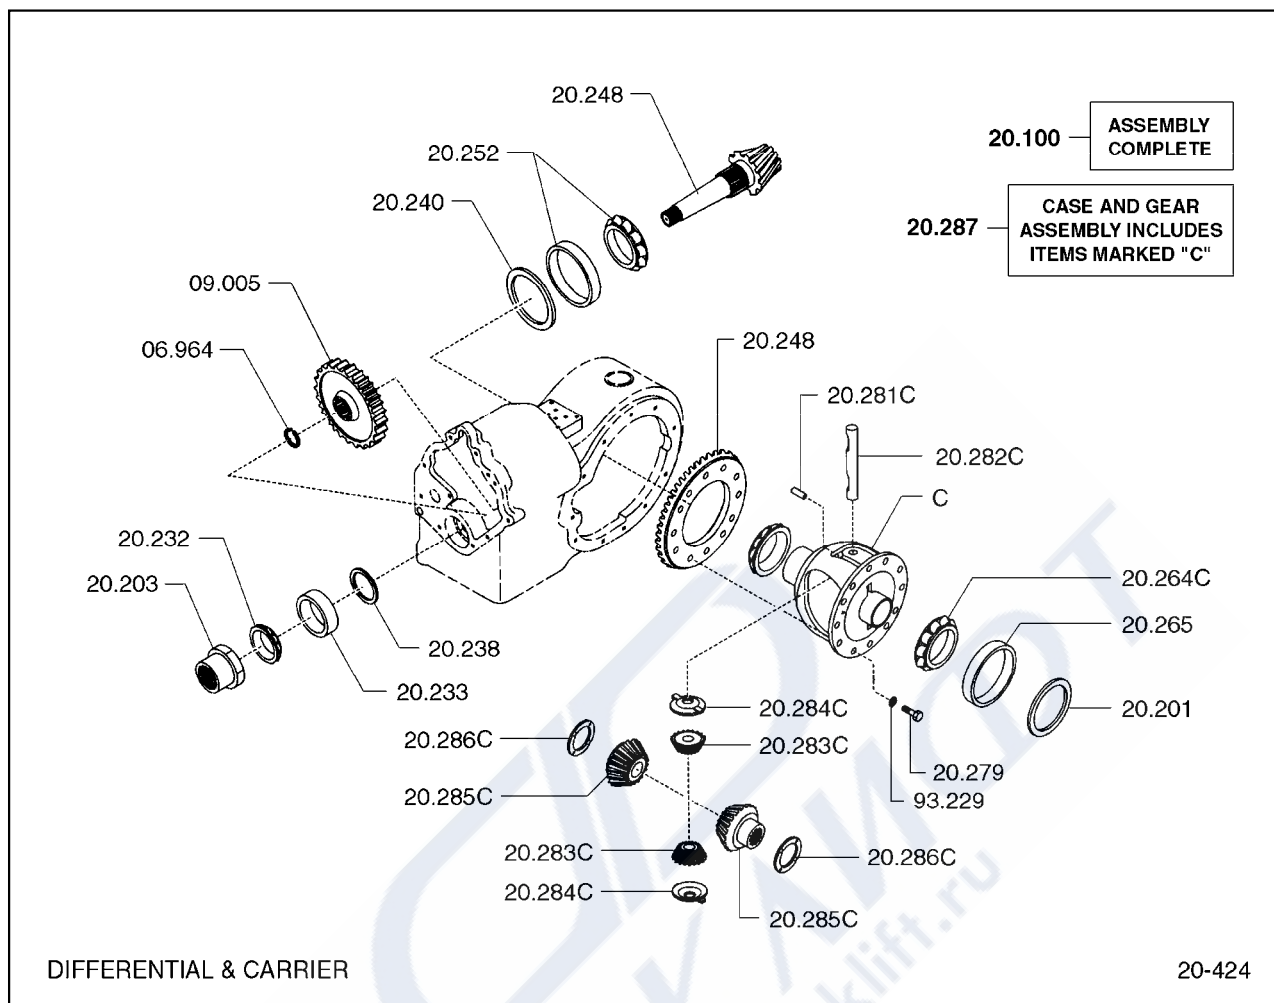 

06.964	RING, OUTPUT SHAFT GEAR LOCATING 링
09.005	GEAR, OUTPUT 기어
20.100	TRANSAXLE ASSEMBLY 트랜스액슬
20.201	SHIM, DIFF BRG CARRIER TO AXLE HOUSING 심
20.203	NUT, DIFFERENTIAL PINION COMPANION FLANGE 너트
20.232	CONE, DIFFERENTIAL PINION OUTER BEARING 콘
20.233	CUP, DIFFERENTIAL PINION OUTER BEARING 컵
20.238	SHIM KIT, DIFFERENTIAL PINION BEARING CAGE 심
20.240	SPACER, DIFFERENTIAL PINION BEARING 스페이서

20.248	RING GEAR & PINION SET, DIFFERENTIAL 링
20.252	BEARING, DIFFERENTIAL PINION INNER 베어링
20.264	CONE, DIFFERENTIAL BEARING 콘
20.265	CUP, DIFFERENTIAL BEARING 컵
20.279	FASTENER, DIFFERENTIAL CASE TO RING GEAR 패스너
20.281	FASTENER, DIFF SIDE PINION PIN 패스너
20.282	SPIDER, DIFFERENTIAL PINION 스파이더
20.283	GEAR, DIFFERENTIAL SIDE PINION 기어
20.284	WASHER, DIFF SIDE PINION GEAR THRUST 와셔
20.285	GEAR, DIFFERENTIAL SIDE 기어
20.286	WASHER, DIFFERENTIAL SIDE GEAR THRUST 와셔
20.287	CASE & GEAR ASSEMBLY, DIFFERENTIAL 케이스& 기어
93.229	WASHER, DIFFERENTIAL CASE TO RING GEAR FASTENER 와셔

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

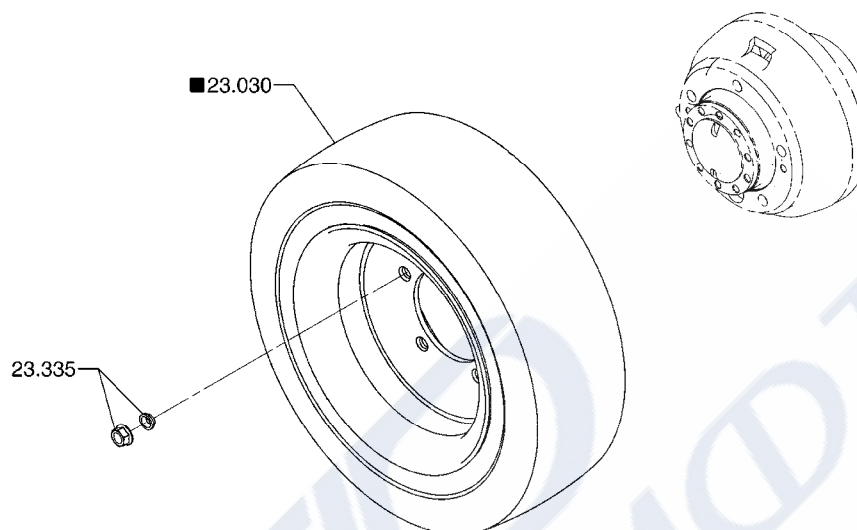


DRIVE WHEEL & TIRE MOUNTING

22-013

- | | |
|--------|--|
| 23.030 | DRIVE WHEEL AND TIRE ASSEMBLY
드라이브휠 & 타이어 |
| 23.335 | FASTENER, DRIVE WHEEL
패스너 |

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

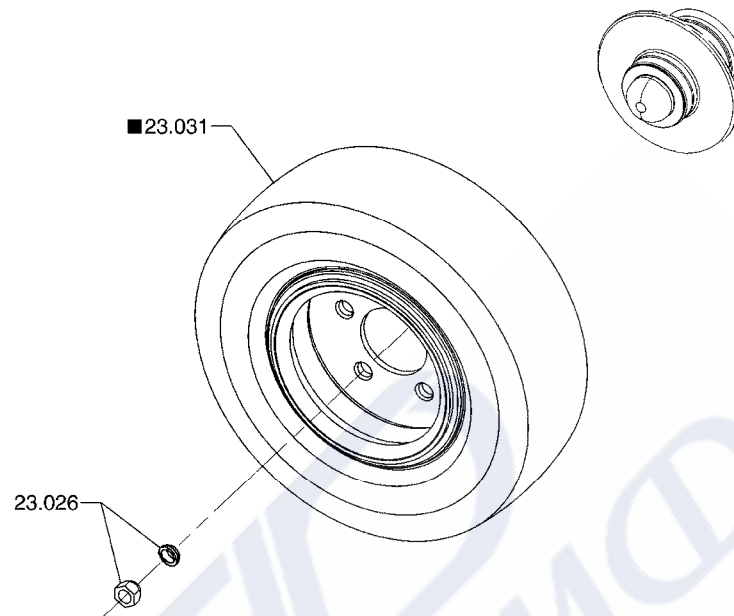


STEER WHEEL & TIRE MOUNTING

22-014

- | | |
|--------|---|
| 23.026 | FASTENER, STEER WHEEL
패스너 |
| 23.031 | STEER WHEEL AND TIRE ASSEMBLY
스티어휠 & 타이어 |

 ASSEMBLY
COMPLETE — 23.030

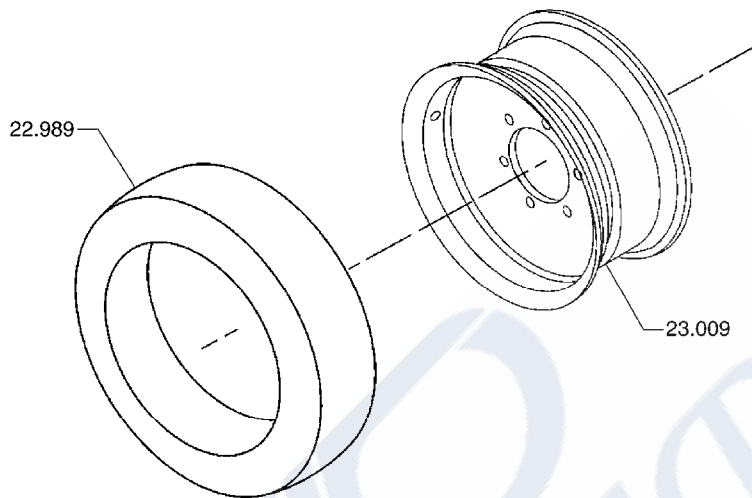


DRIVE WHEEL & TIRE (SOLID TYPE)

22-024

22.989	TIRE ASSEMBLY, DRIVE 타이어
23.009	RIM ASSEMBLY, DRIVE WHEEL 립
23.030	DRIVE WHEEL AND TIRE ASSEMBLY 드라이브휠& 타이어

 ASSEMBLY
COMPLETE — 23.030

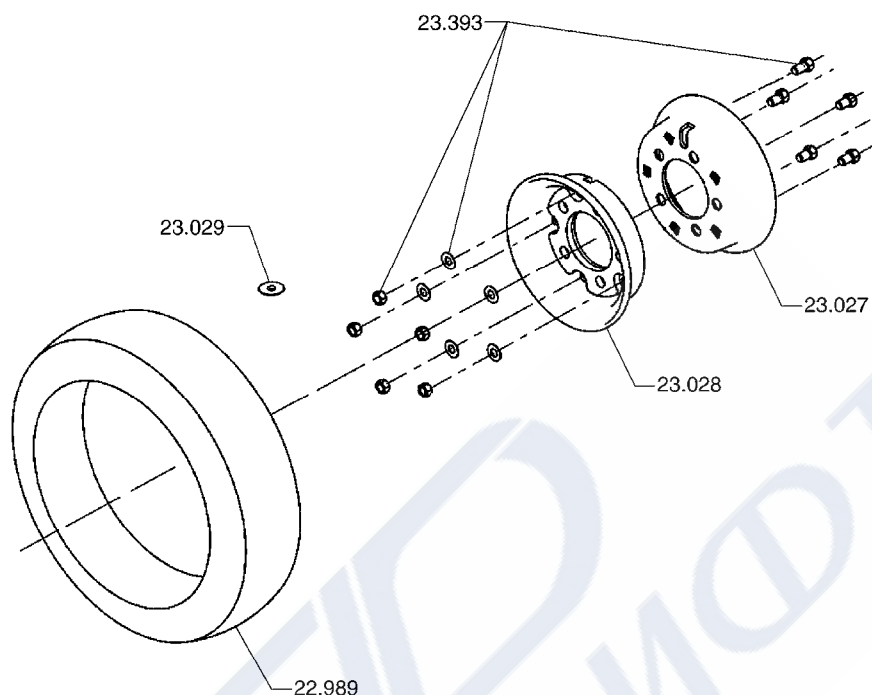


DRIVE WHEEL & TIRE (SOLID TYPE)

22-026

22.989	TIRE ASSEMBLY, DRIVE 타이어
23.027	OUTER HALF, DRIVE WHEEL 아우터하프
23.028	INNER HALF, DRIVE WHEEL 인너하프
23.029	FASTENER, DRIVE WHEEL ASSEMBLY 패스너
23.030	DRIVE WHEEL AND TIRE ASSEMBLY 드라이브휠& 타이어
23.393	FASTENER, DRIVE WHEEL 패스너

 ASSEMBLY
COMPLETE — 23.031

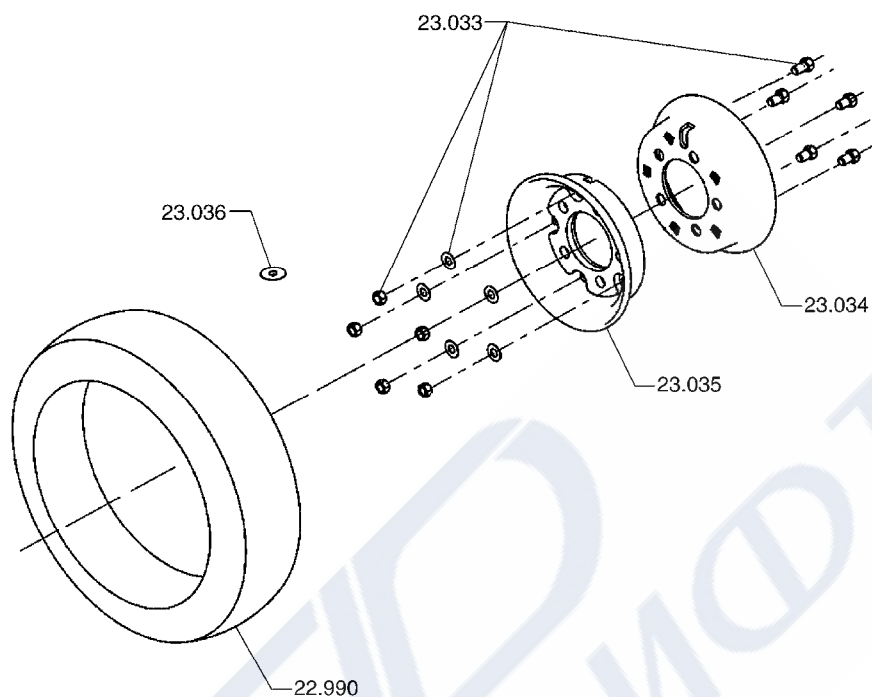


STEER WHEEL & TIRE (SOLID TYPE)

22-027

22.990	TIRE ASSEMBLY, STEER 타이어
23.031	STEER WHEEL AND TIRE ASSEMBLY 스티어휠 & 타이어
23.033	FASTENER, STEER WHEEL 패스너
23.034	OUTER HALF, STEER WHEEL 아웃터하프
23.035	INNER HALF, STEER WHEEL 인너하프
23.036	FASTENER, STEER WHEEL ASSEMBLY 패스너

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

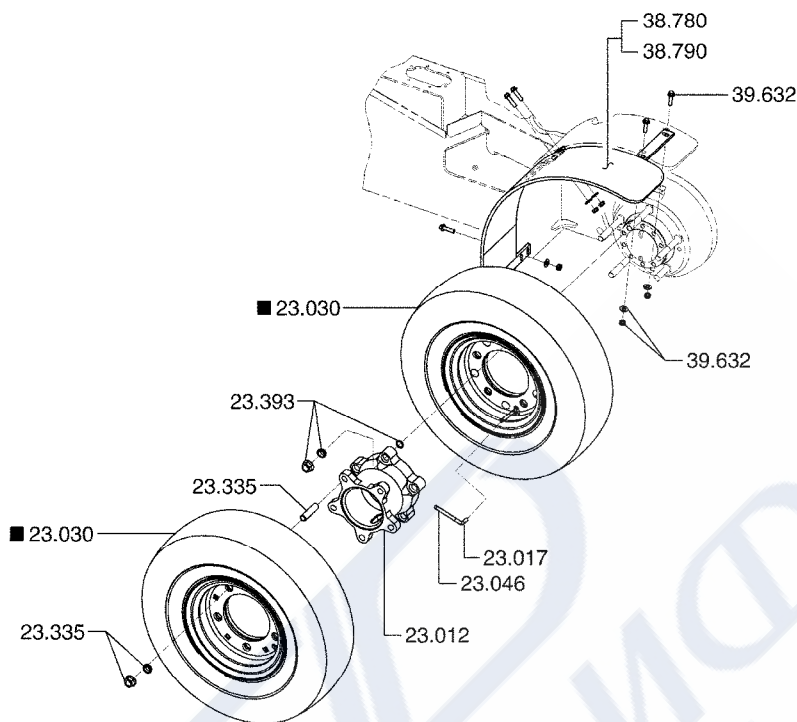


DUAL DRIVE TIRE MOUNTING

22-033

23.012	SPACER, DRIVE WHEEL DUAL RIM 스페이서
23.017	EXTENSION, DRIVE WHEEL VALVE 익스텐션
23.030	DRIVE WHEEL AND TIRE ASSEMBLY 드라이브휠& 타이어
23.046	EXTENSION, DRIVE WHEEL 익스텐션
23.335	FASTENER, DRIVE WHEEL 패스너
23.393	FASTENER, DRIVE WHEEL 패스너
38.780	FENDER, RIGHT HAND FRONT 펜더
38.790	FENDER, LEFT HAND FRONT 펜더
39.632	FASTENER, FENDER SUPPORT 패스너

 ASSEMBLY
COMPLETE — 23.030

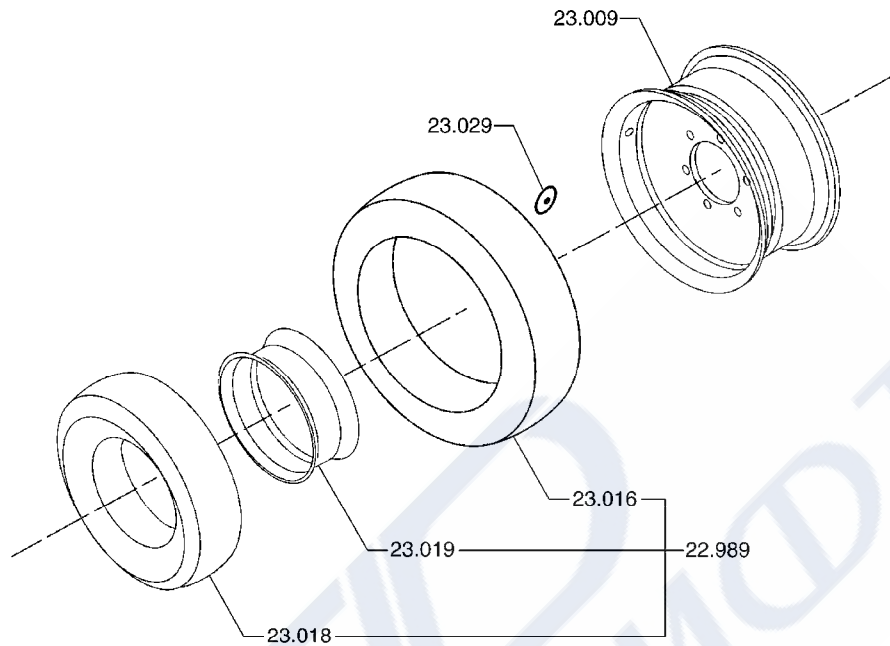


DRIVE WHEEL & TIRE

22-041

22.989	TIRE ASSEMBLY, DRIVE 타이어
23.009	RIM ASSEMBLY, DRIVE WHEEL 립
23.016	TIRE, DRIVE WHEEL 타이어
23.018	TUBE, DRIVE WHEEL 튜브
23.019	FLAP, DRIVE WHEEL TUBE 플랩
23.029	FASTENER, DRIVE WHEEL ASSEMBLY 패스너
23.030	DRIVE WHEEL AND TIRE ASSEMBLY 드라이브휠& 타이어

 ASSEMBLY
COMPLETE — 23.030

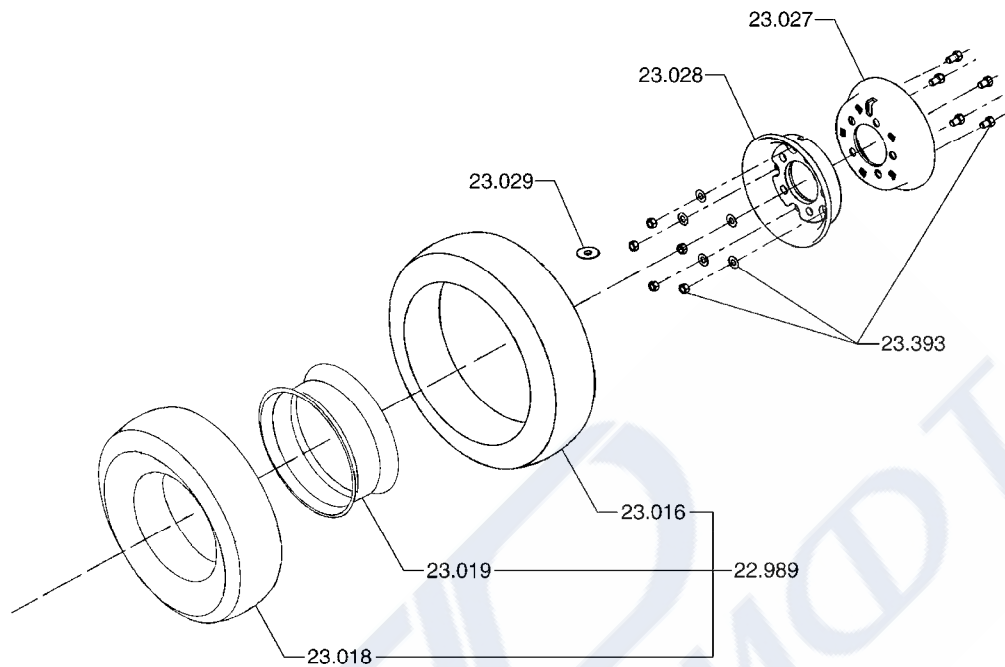


DRIVE WHEEL & TIRE

22-043

22.989	TIRE ASSEMBLY, DRIVE 타이어
23.016	TIRE, DRIVE WHEEL 타이어
23.018	TUBE, DRIVE WHEEL 튜브
23.019	FLAP, DRIVE WHEEL TUBE 플랩
23.027	OUTER HALF, DRIVE WHEEL 아웃터하프
23.028	INNER HALF, DRIVE WHEEL 인너하프
23.029	FASTENER, DRIVE WHEEL ASSEMBLY 패스너
23.030	DRIVE WHEEL AND TIRE ASSEMBLY 드라이브휠& 타이어
23.393	FASTENER, DRIVE WHEEL 패스너

 
ASSEMBLY
COMPLETE — 23.031

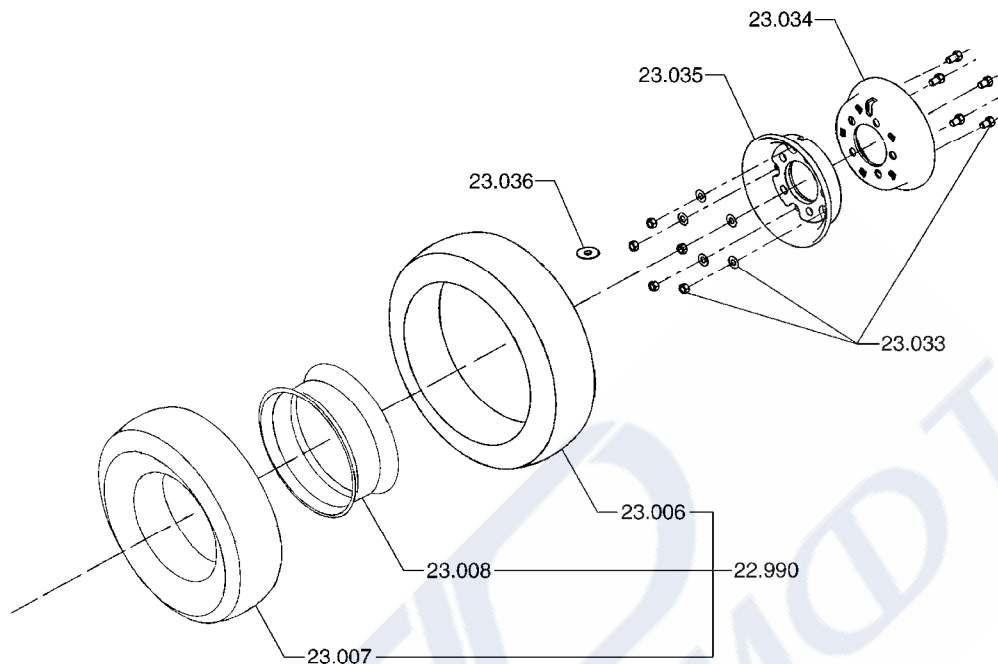

STEER WHEEL & TIRE

22-044


22.990	TIRE ASSEMBLY, STEER 타이어
23.006	TIRE, STEER WHEEL 타이어
23.007	TUBE, STEER WHEEL 튜브
23.008	FLAP, STEER WHEEL 플랩
23.031	STEER WHEEL AND TIRE ASSEMBLY 스티어휠 & 타이어
23.033	FASTENER, STEER WHEEL 패스너
23.034	OUTER HALF, STEER WHEEL 아웃터하프
23.035	INNER HALF, STEER WHEEL 인너하프
23.036	FASTENER, STEER WHEEL ASSEMBLY 패스너

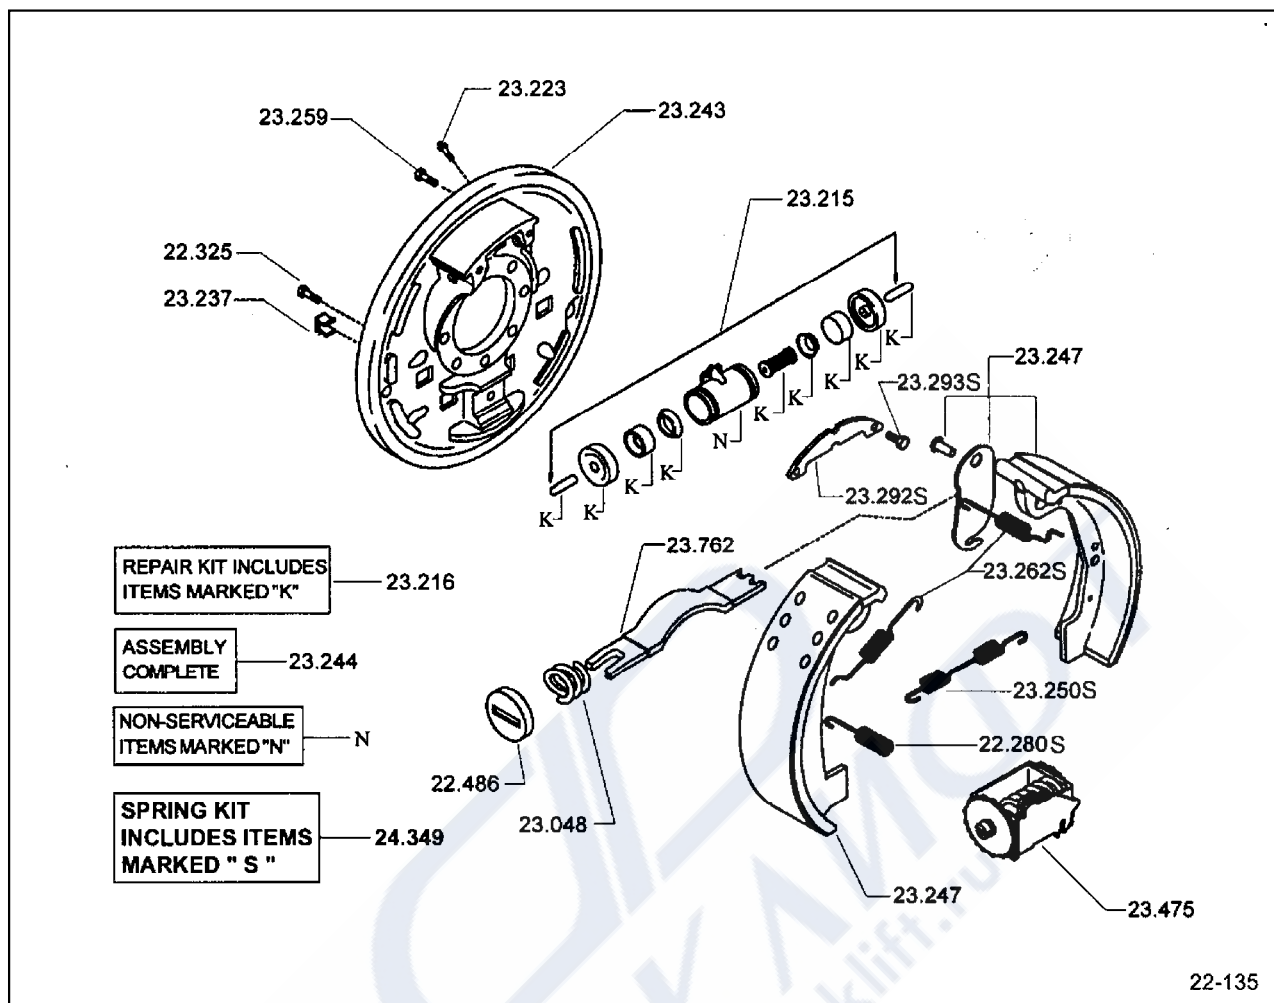 


22-135

22.280	SPRING, BRAKE SHOE GUIDE PIN 스프링
22.325	FASTENER, BRAKE SHOE ADJUSTOR 패스너
22.486	SEAT, PARKING BRAKE OPERATING ARM ANTI-RATTLE SPRI 시트
23.048	SPRING, PARKING BRAKE OPERATING ARM ANTI-RATTLE 스프링
23.215	CYLINDER ASSEMBLY, RH BRAKE 실린더
23.216	REPAIR KIT, BRAKE CYLINDER (LH) 리페어키트
23.223	BLEEDER, BRAKE WHEEL CYLINDER 블리더
23.237	COVER, RH BRAKE ADJUSTOR 커버
23.243	PLATE, RH BRAKE BACKING 플레이트


23.244	BRAKE ASSEMBLY, RH DRIVE WHEEL 브레이크
23.247	SHOE SET, BRAKE LINING 슈
23.259	FASTENER, RH WHEEL CYLINDER 패스너
23.262	SPRING, BRAKE SHOE RETURN 스프링
23.292	ANCHOR, BRAKE SHOE 앵커
23.293	RING-RETAINING, BRAKE SHOE ANCHOR PIN 링
23.475	ADJUSTOR, BRAKE SHOE 어드저스터
23.762	ARM, PARKING BRAKE OPERATING 암
24.349	SPRING KIT, BRAKE SHOE 스프링키트

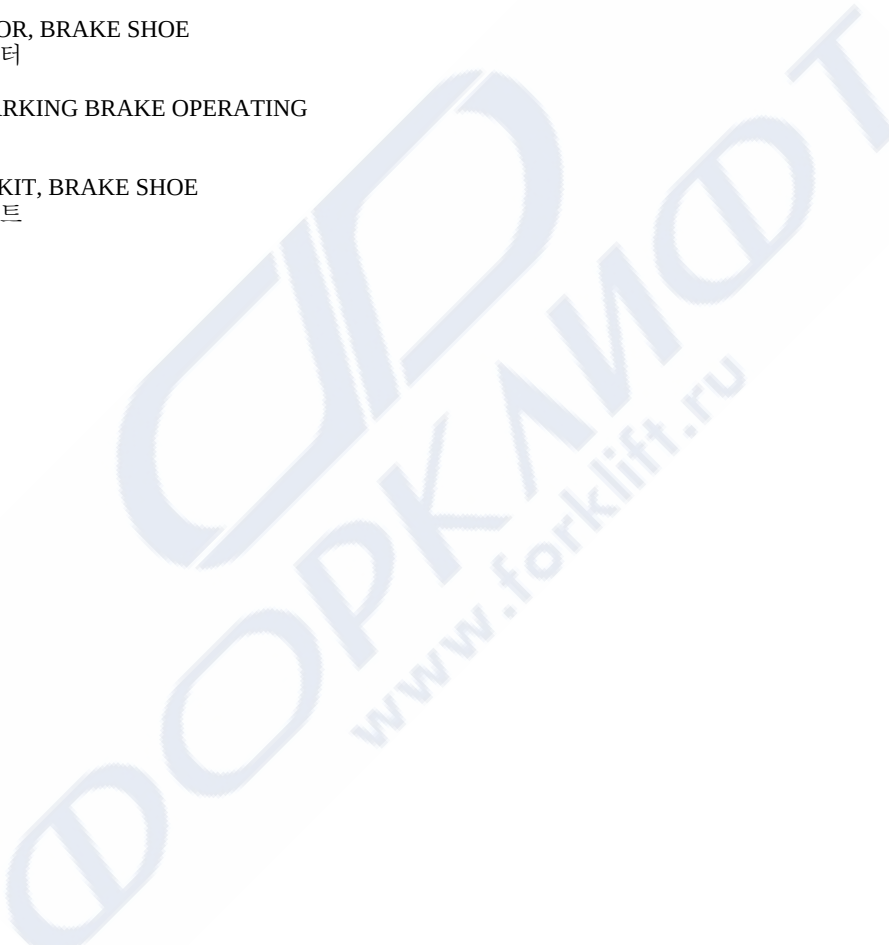 


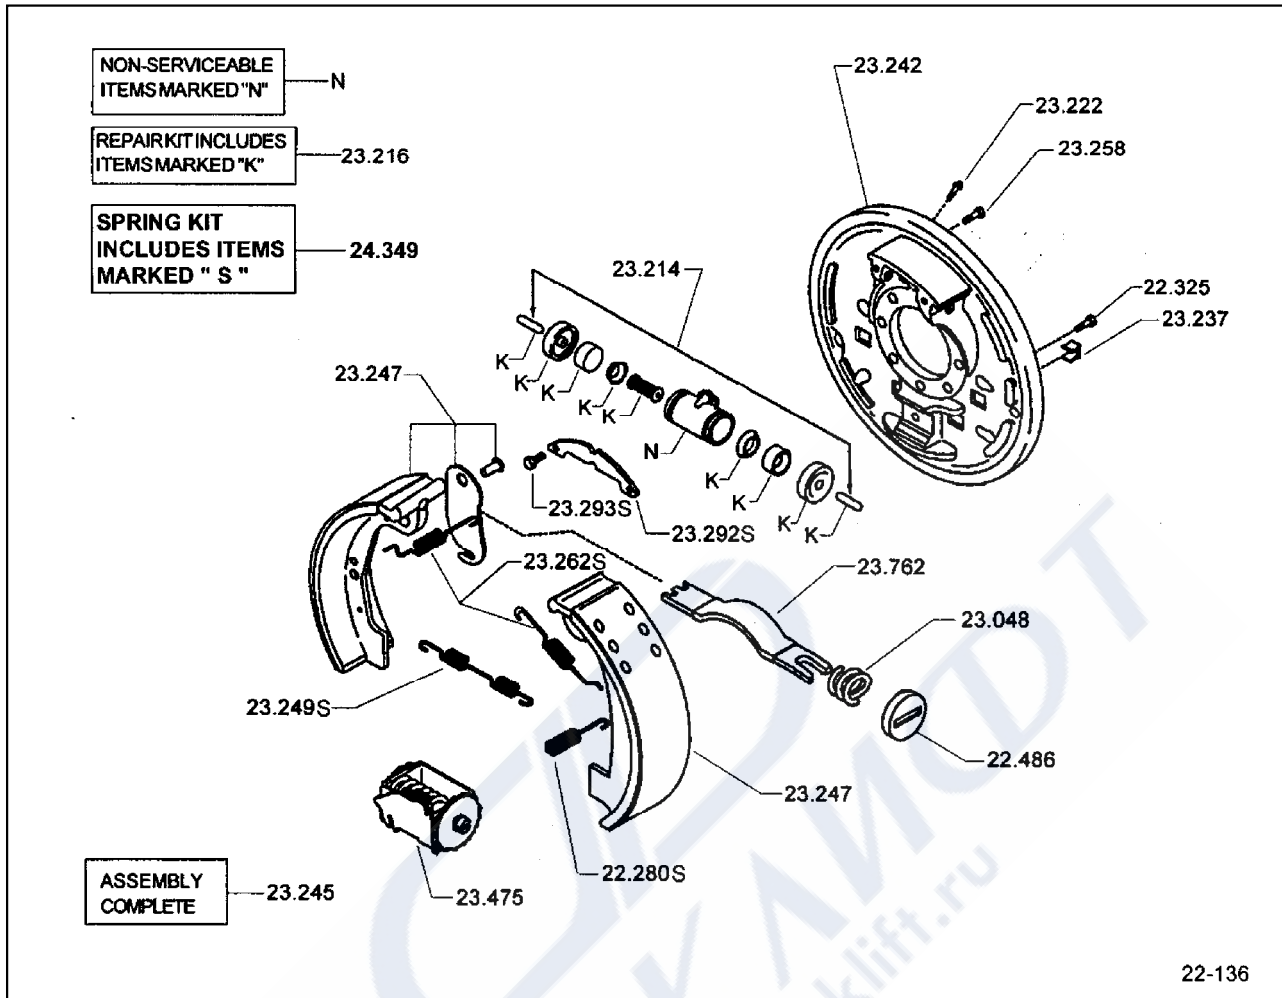 


- 22.280 SPRING, BRAKE SHOE GUIDE PIN
스프링
- 22.325 FASTENER, BRAKE SHOE ADJUSTOR
패스너
- 22.486 SEAT, PARKING BRAKE OPERATING ARM ANTI-RATTLE SPRI
시트
- 23.048 SPRING, PARKING BRAKE OPERATING ARM ANTI-RATTLE
스프링
- 23.214 CYLINDER ASSEMBLY, LH BRAKE
실린더
- 23.216 REPAIR KIT, BRAKE CYLINDER (LH)
리페어키트
- 23.222 SCREW, BRAKE CYLINDER BLEEDER (LH)
스크류
- 23.237 COVER, RH BRAKE ADJUSTOR
커버
- 23.242 PLATE, LH BRAKE BACKING
플레이트

23.245	BRAKE ASSEMBLY, LH DRIVE WHEEL 브레이크
23.247	SHOE SET, BRAKE LINING 슈
23.249	SPRING, LH BRAKE RETURN 스프링
23.258	FASTENER, LH WHEEL CYLINDER 패스너
23.262	SPRING, BRAKE SHOE RETURN 스프링
23.292	ANCHOR, BRAKE SHOE 앵커
23.293	RING-RETAINING, BRAKE SHOE ANCHOR PIN 링
23.475	ADJUSTOR, BRAKE SHOE 어드저스터
23.762	ARM, PARKING BRAKE OPERATING 암
24.349	SPRING KIT, BRAKE SHOE 스프링키트

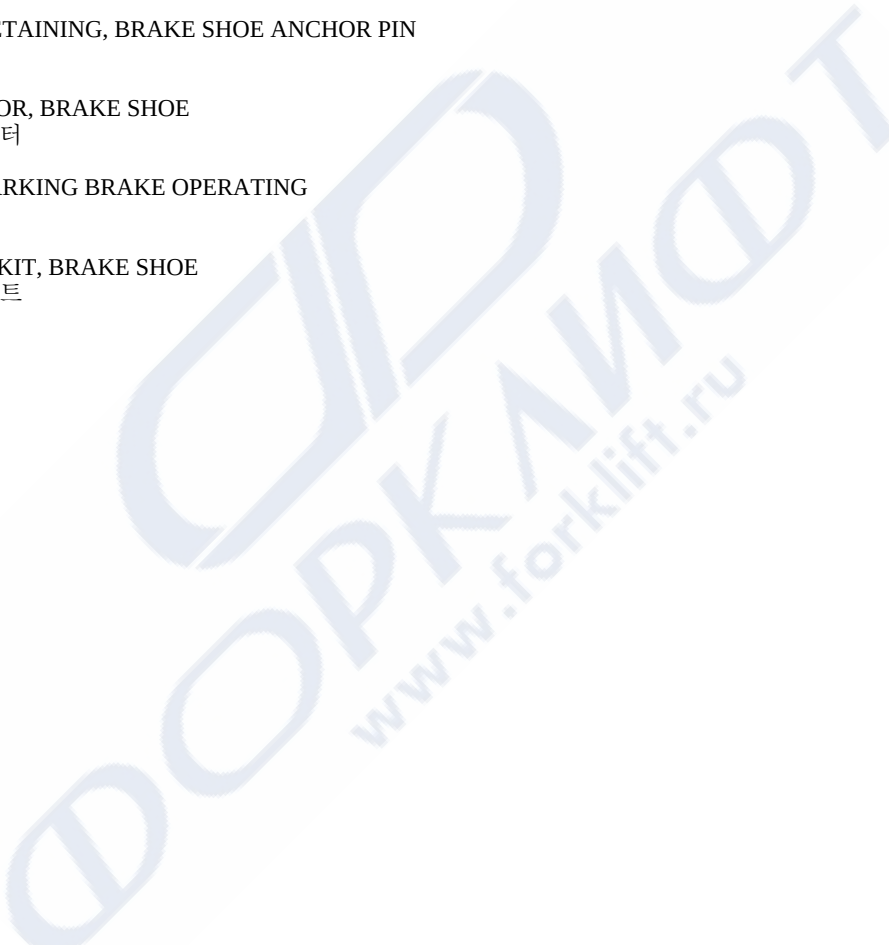 

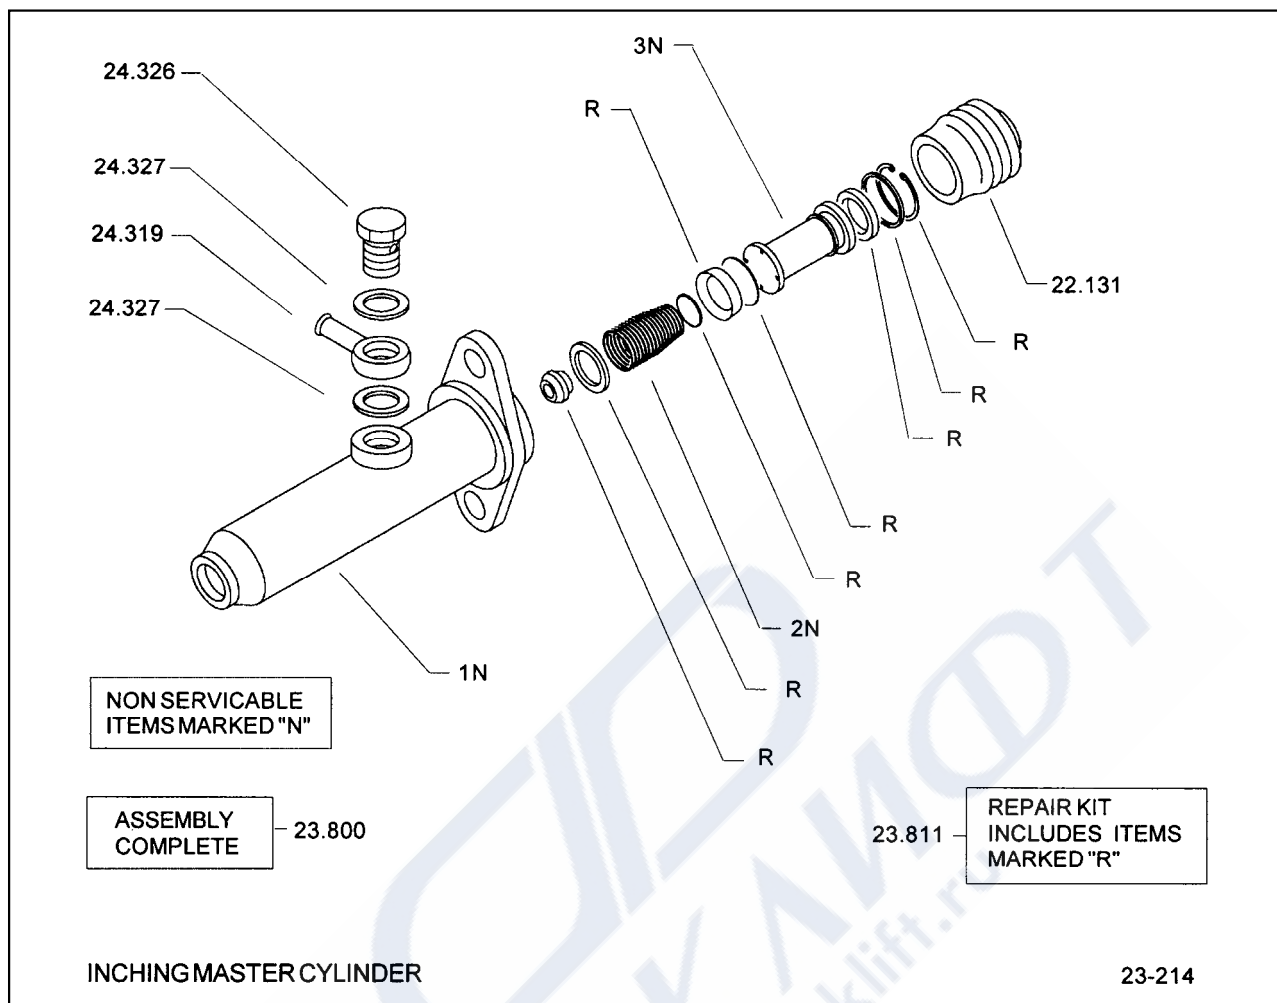 


22.131	BOOT, INCHING MASTER CYLINDER 부트
23.800	CYLINDER ASSEMBLY, INCHING MASTER COMPLETE 실린더
23.811	REPAIR KIT, INCHING MASTER CYLINDER 리페어키트
24.319	FITTING, INCHING MASTER CYLINDER INLET 피팅
24.326	BOLT, INCHING MASTER CYLINDER INLET FITTING 볼트
24.327	SEAL, INCHING MASTER CYLINDER INLET FITTING 셀

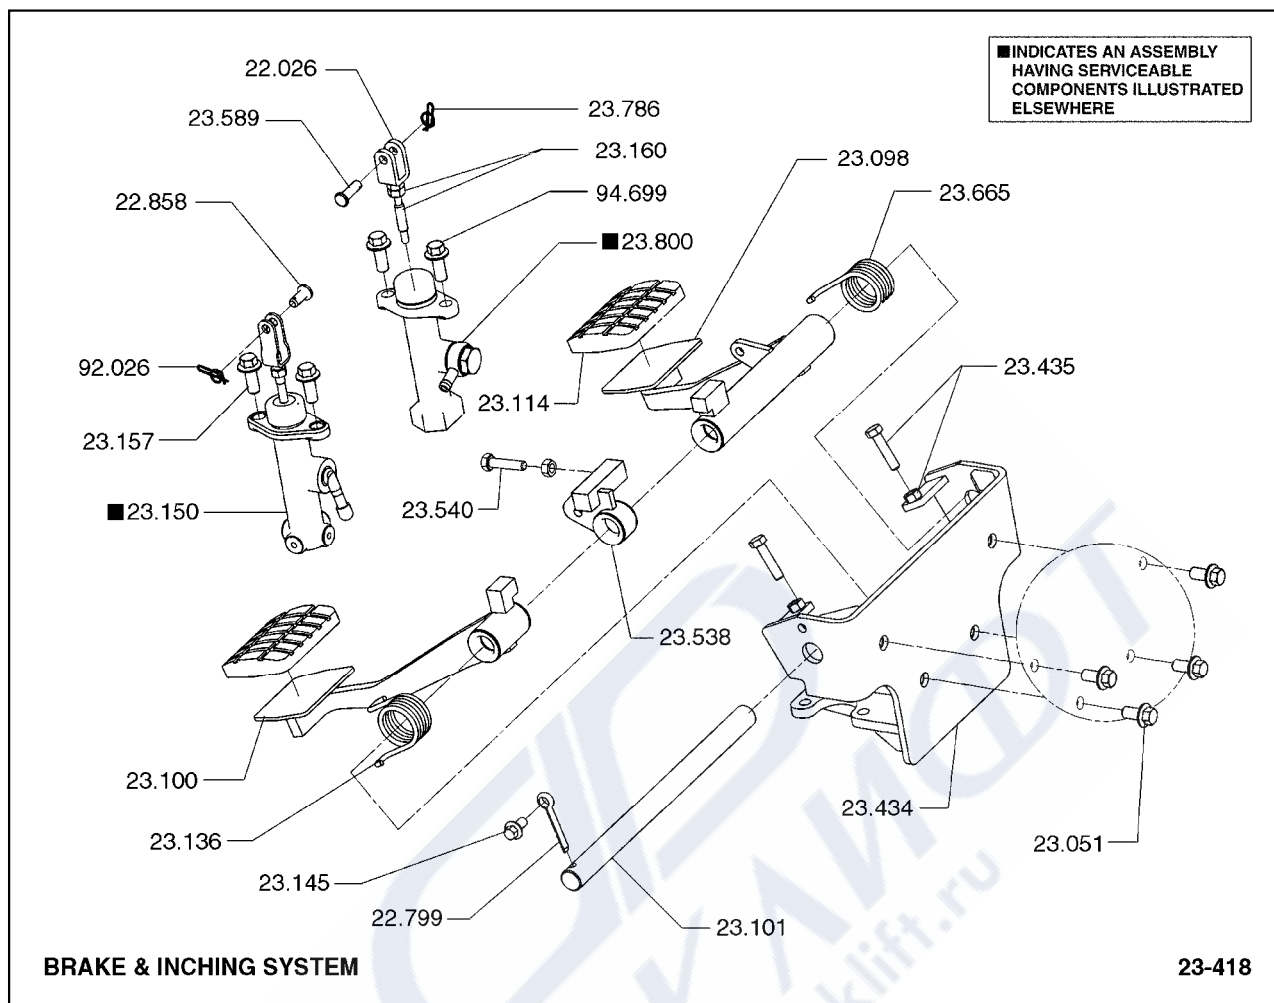 

22.026	ROD END, BRAKE PEDAL LINKAGE 로드엔드
22.799	FASTENER, BRAKE PEDAL PIVOT BRACKET 패스너
22.858	FASTENER, BRAKE MASTER CYLINDER ACTUATING ROD ADJU 패스너
23.051	FASTENER, MASTER CYLINDER MOUNTING BRACKET 패스너
23.098	PEDAL, AUX BRAKE 페달
23.100	PEDAL, BRAKE 페달
23.101	SHAFT, BRAKE PEDAL 샤프트
23.114	PAD & FASTENER, BRAKE PEDAL 패드& 패스너
23.136	SPRING, BRAKE PEDAL RETURN 스프링


23.145	FASTENER, BRAKE PEDAL SHAFT 패스너
23.150	CYLINDER ASSEMBLY, BRAKE MASTER COMPLETE 실린더
23.157	FASTENER, BRAKE MASTER CYLINDER ATTACHING 패스너
23.160	ROD, PUSH 로드
23.434	BRACKET, BRAKE PEDAL PIVOT 브라켓
23.435	FASTENER, BRAKE PEDAL PIVOT BRACKET 패스너
23.538	ARM, BRAKE LINKAGE PIVOT 암
23.540	FASTENER, BRAKE LINKAGE PIVOT ARM 패스너
23.589	RETAINER, BRAKE ACTUATING LEVER 리테이너
23.665	SPRING, INCHING PEDAL RETURN 스프링
23.786	FASTENER, INCHING BRAKE PEDAL 패스너
23.800	CYLINDER ASSEMBLY, INCHING MASTER COMPLETE 실린더
92.026	RETAINER, BRAKE MASTER CYLINDER ACTUATING ROD PIN 리테이너
94.699	FASTENER, BRAKE MASTER CYLINDER SUPPORT BRACKET 패스너

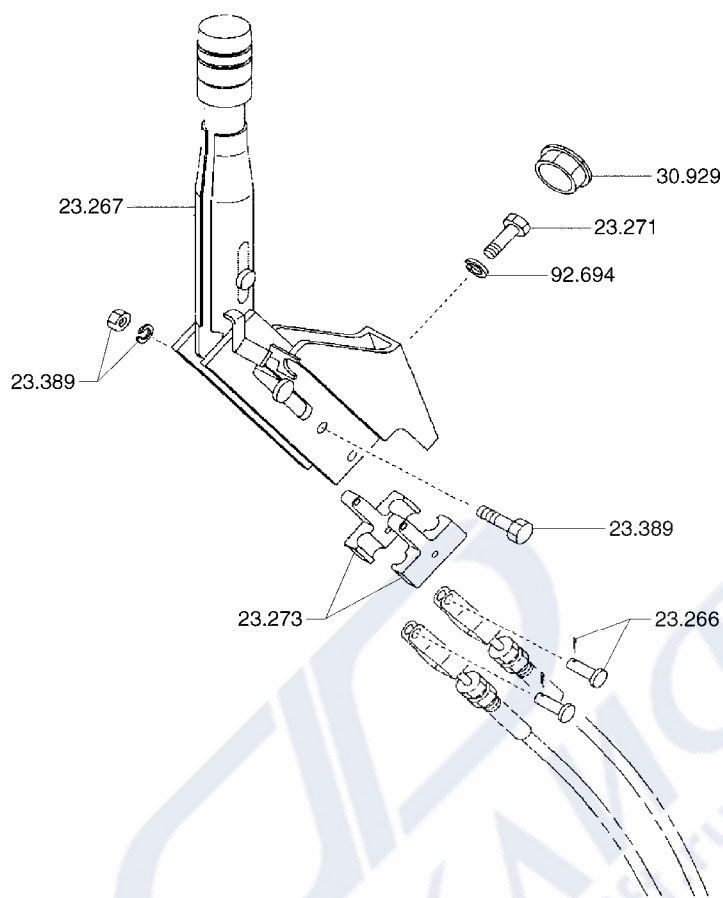 

PARKING BRAKE MOUNTING


23-420

23.266	FASTENER, PARKING BRAKE CABLE CLAMP 패스너
23.267	LEVER, PARKING BRAKE 레버
23.271	FASTENER, PARKING BRAKE LEVER 패스너
23.273	CLAMP, PARKING BRAKE LEVER TO CABLE 클램프
23.389	RETAINER, PARKING BRAKE CABLE 리테이너
30.929	PLUG, PARKING BRAKE 플러그
92.694	WASHER, PARKING BRAKE LEVER FASTENER 와셔

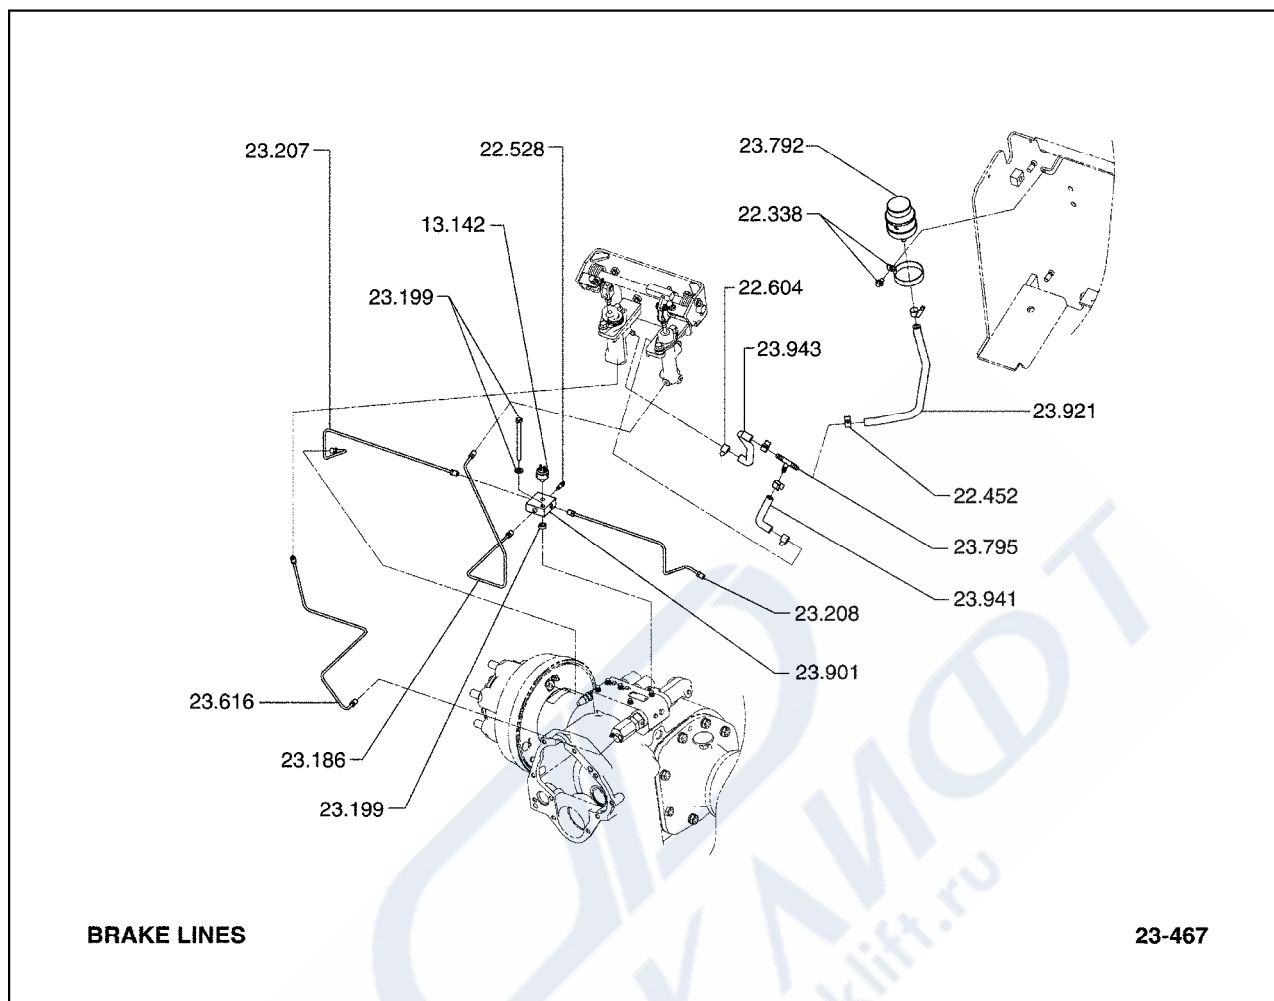 


- | | |
|--------|--|
| 13.142 | SWITCH, BRAKE INTERLOCK
스위치 |
| 22.338 | CLAMP, BRAKE FLUID RESERVOIR
클램프 |
| 22.452 | CLAMP, BRAKE MASTER CYLINDER FILLER LINE
클램프 |
| 22.528 | BLEEDER, BRAKE LINES ADAPTOR
블리더 |
| 22.604 | CLAMP, BRAKE FLUID RESERVOIR LINE
클램프 |
| 23.186 | LINE, BRAKE MASTER CYLINDER OUTLET
라인 |
| 23.199 | FASTENER, BRAKE LINE TEE
패스너 |
| 23.207 | LINE, LH DRIVE WHEEL BRAKE CYLINDER TO TEE
라인 |
| 23.208 | LINE, RH DRIVE WHEEL BRAKE CYLINDER TO TEE
라인 |

23.616	LINE, BRAKE MASTER CYLINDER OUTLET 라인
23.792	RESERVOIR, BRAKE FLUID 리저버
23.795	FITTING, BRAKE MASTER CYLINDER INLET 피팅
23.901	FASTENER, SEAT BRAKE ACTUATING CYLINDER 패스너
23.921	LINE, RESERVOIR OUTLET 라인
23.941	LINE, BRAKE CYLINDER (LH) 라인
23.943	LINE, BRAKE CYLINDER LINE (RH) 라인

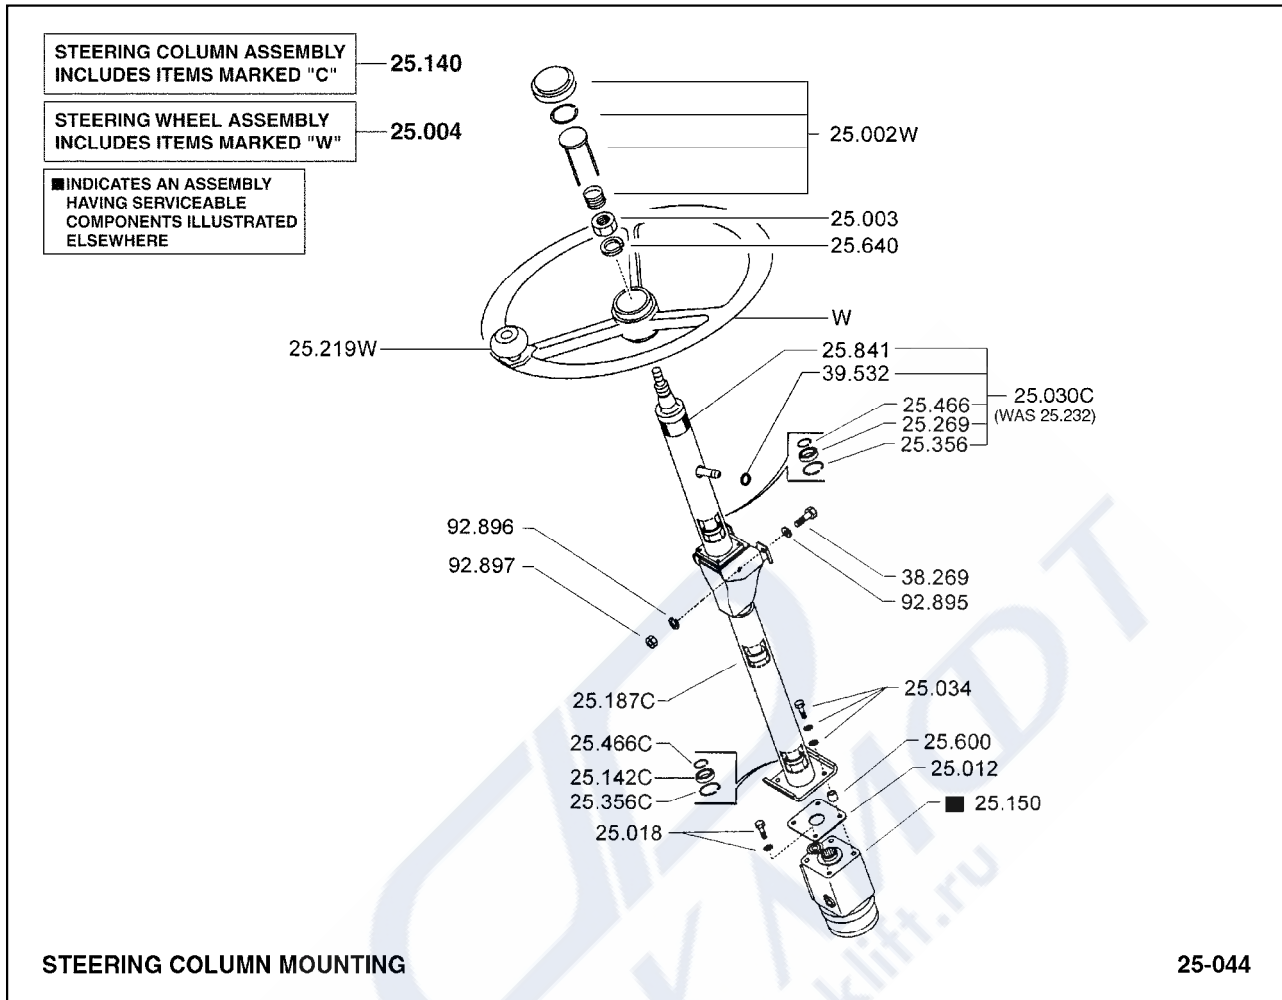 

25.002	HORN BUTTON KIT 혼버튼키트
25.003	NUT, HANDWHEEL 너트
25.004	HAND WHEEL, STEERING GEAR 핸드휠
25.012	CUSHION, STEERING COLUMN 쿠션
25.018	FASTENER, COLUMN JACKET 패스너
25.030	SHAFT ASSEMBLY, STEERING COLUMN 샤프트
25.034	FASTENER, STEERING GEAR ATTACHING 패스너
25.140	SHAFT & COLUMN ASSEMBLY, POWER STEERING 샤프트& 컬럼
25.142	BEARING, STEERING GEAR SHAFT (LOWER) 베어링

25.150	GEAR BOX ASSEMBLY, STEERING 기어박스
25.187	BEARING, STEER SHAFT 베어링
25.219	KNOB, STEERING HAND WHEEL SPINNER 노브
25.269	BEARING, STEERING GEAR SHAFT (UPPER) 베어링
25.356	RETAINER, STEERING SHAFT BEARING 리테이너
25.466	RETAINER, STEERING SHAFT BEARING 리테이너
25.600	SPACER, STEERING COLUMN MOUNTING 스페이서
25.640	LOCKWASHER, HORN CONNECTOR FASTENER 로크와셔
25.841	BUSHING, STEERING GEAR SHAFT 부싱
38.269	FASTENER, STEERING COLUMN SUPPORT 패스너
39.532	GROMMET, STEERING COLUMN 그로멧
92.895	WASHER, STEERING COLUMN SUPPORT FASTENER 와셔
92.896	LOCKWASHER, STEERING COLUMN SUPPORT FASTENER 로크와셔
92.897	NUT, STEERING COLUMN SUPPORT FASTENER 너트

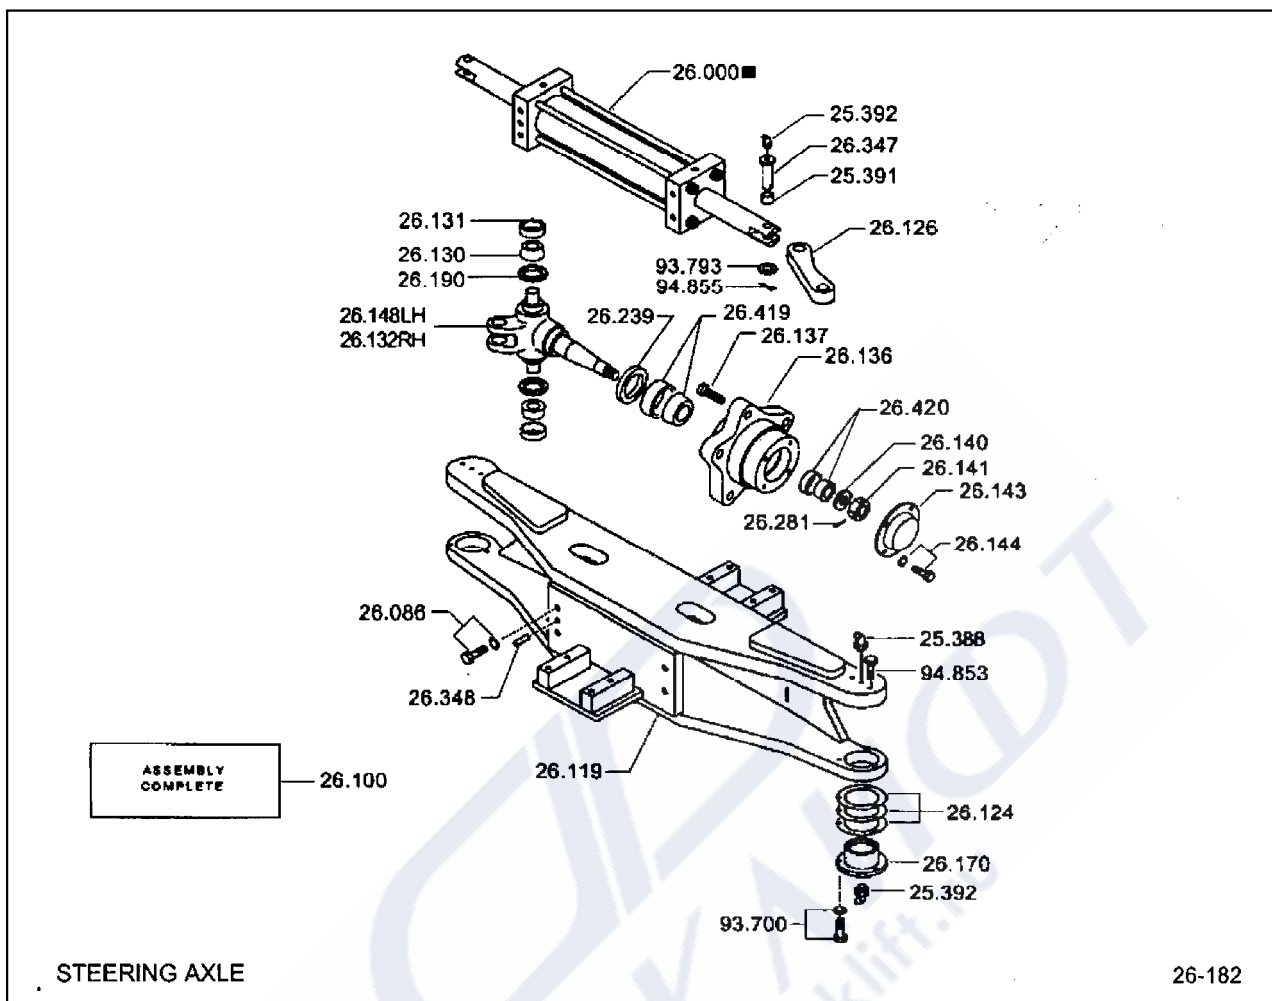 


STEERING AXLE

26-182


25.388	FITTING-LUB, STEERING ARM PIVOT 피팅	26.141	FASTENER, STEER WHEEL HUB 패스너
25.391	BEARING, STEERING ARM 베어링	26.143	CAP, STEER WHEEL HUB 캡
25.392	FITTING-LUB, STEERING ARM 피팅	26.144	FASTENER, STEER AXLE HUB CAP 패스너
26.000	CYLINDER ASSEMBLY, STEERING 실린더	26.148	KNUCKLE, STEER AXLE (LH) 너트
26.086	FASTENER, STEERING CYLINDER ANCHOR END 패스너	26.170	PLUG - EXPANSION, STEER AXLE KNUCKLE PIN 플러그
26.100	AXLE ASSEMBLY, STEERING 스티어 액슬	26.190	SEAL, STEER AXLE KNUCKLE OIL 씰
26.119	AXLE, STEER 액슬	26.239	SEAL, STEER AXLE FORK COVER 씰
26.124	SHIM, STEER AXLE KNUCKLE 심	26.281	RETAINER, STEER AXLE HUB BRG KNUCKLE NUT 리테이너
26.126	ARM, RH STEERING 암	26.347	PIN, STEER ARM 핀
26.130	BEARING, STEER AXLE KNUCKLE PIN 베어링	26.348	LOCATOR, STEER CYLINDER 로케이터
26.131	BEARING, STEER AXLE KNUCKLE PIN LOWER 베어링	26.419	CUP & CONE, STEER WHEEL HUB BEARING (INNER) 컵& 콘
26.132	KNUCKLE, STEER AXLE (RH) 너트	26.420	CUP & CONE, STEER WHEEL HUB BEARING (OUTER) 컵& 콘
26.136	HUB & CUP, STEER WHEEL 허브& 컵	93.700	FASTENER, STEER AXLE KNUCKLE PIN COVER 패스너
26.137	FASTENER, STEER WHEEL 패스너	93.793	WASHER, STEERING ARM PIVOT FASTENER 와셔
26.140	WASHER, STEER WHEEL HUB BEARING THRUST 와셔	94.853	FASTENER, STEER AXLE KNUCKLE PIN 패스너

94.855 RETAINER, STEERING ARM PIN
리테이너

 ФОРКЛИФТ
www.forklift.ru

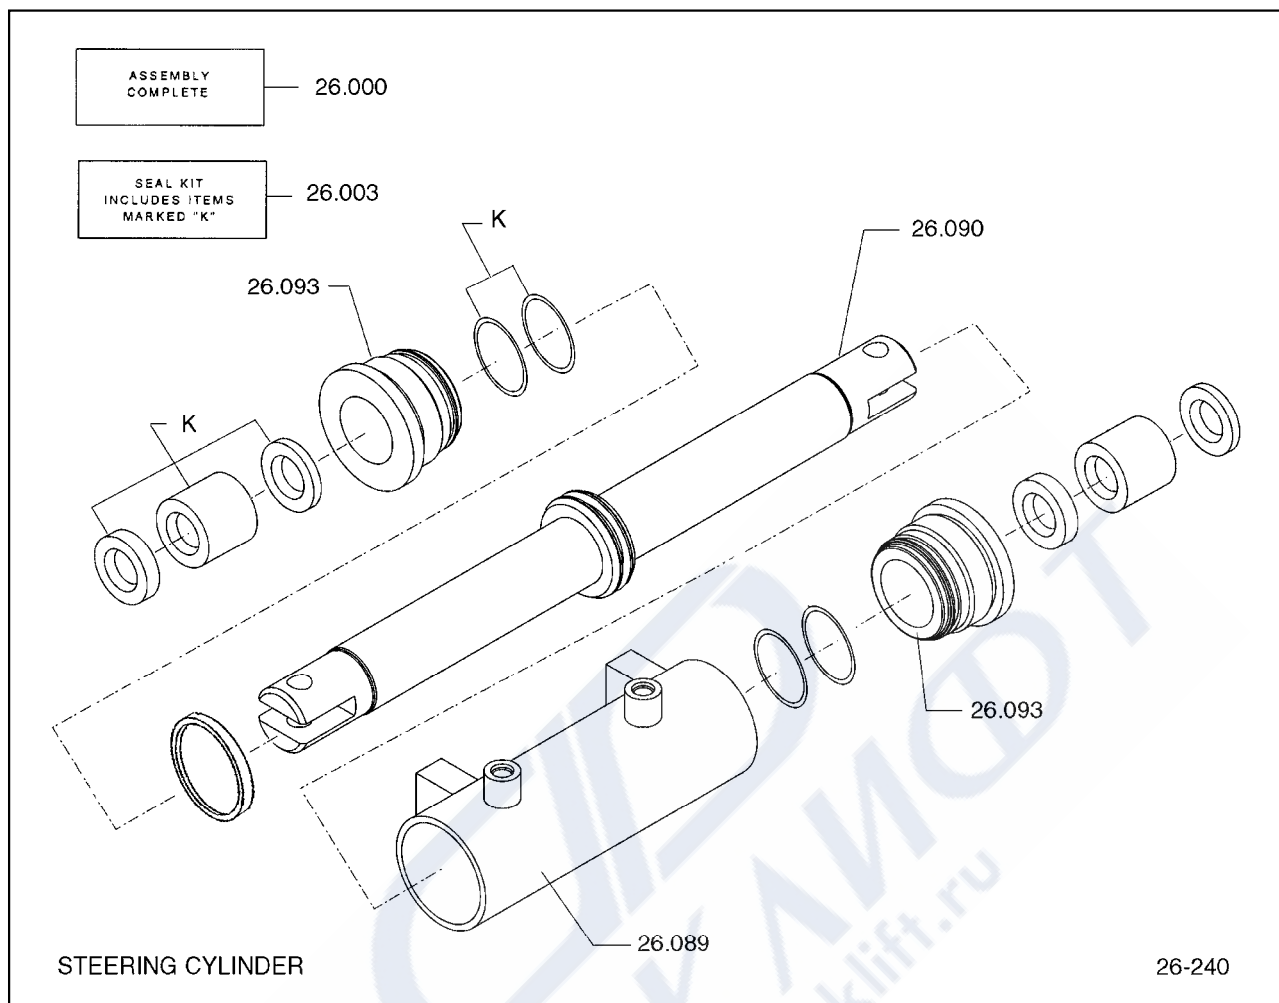

26.000	CYLINDER ASSEMBLY, STEERING 실린더
26.003	SEAL KIT, PISTON ROD 씰키트
26.089	BARREL, STEERING CYLINDER 배럴
26.090	STEER CYLINDER PISTON 스티어실린더피스톤
26.093	GLAND, STEERING CYLINDER 그랜드

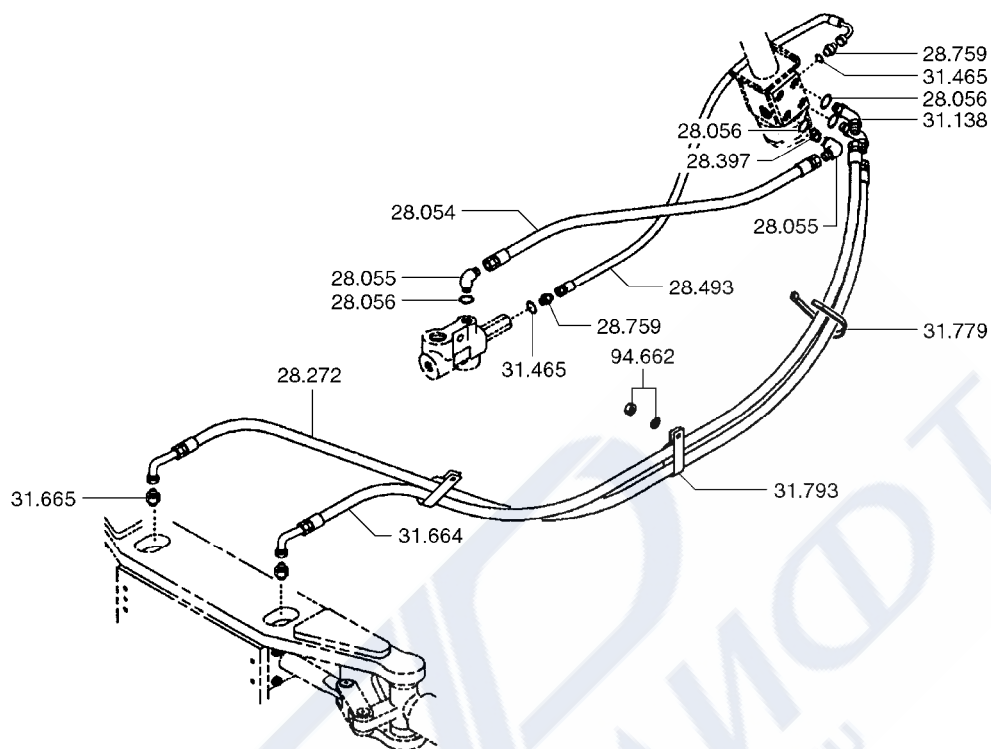 


STEERING LINES

26-280


28.054	LINE, STEERING GEAR 라인
28.055	FITTING, STEERING GEAR 피팅
28.056	SEAL, STEERING GEAR FITTING 씰
28.272	LINE, STEER CYLINDER INLET 라인
28.397	FITTING, STEERING GEAR LINE 피팅
28.493	LINE, PRESSURE SENSING 라인
28.759	FITTING, STEER VALVE OUTLET PORT 피팅
31.138	FITTING, STEER VALVE OUTLET UPPER PORT 피팅
31.465	SEAL, STEER VALVE OUTLET PORT 씰

31.664	LINE, STEERING CYLINDER ANCHOR PORT 라인
31.665	FITTING, STEERING CYLINDER ANCHOR PORT 피팅
31.779	CLAMP, POWER STEERING LINES 클램프
31.793	CLAMP, POWER STEERING LINES 클램프
94.662	FASTENER, POWER STEERING LINES CLAMP 패스너



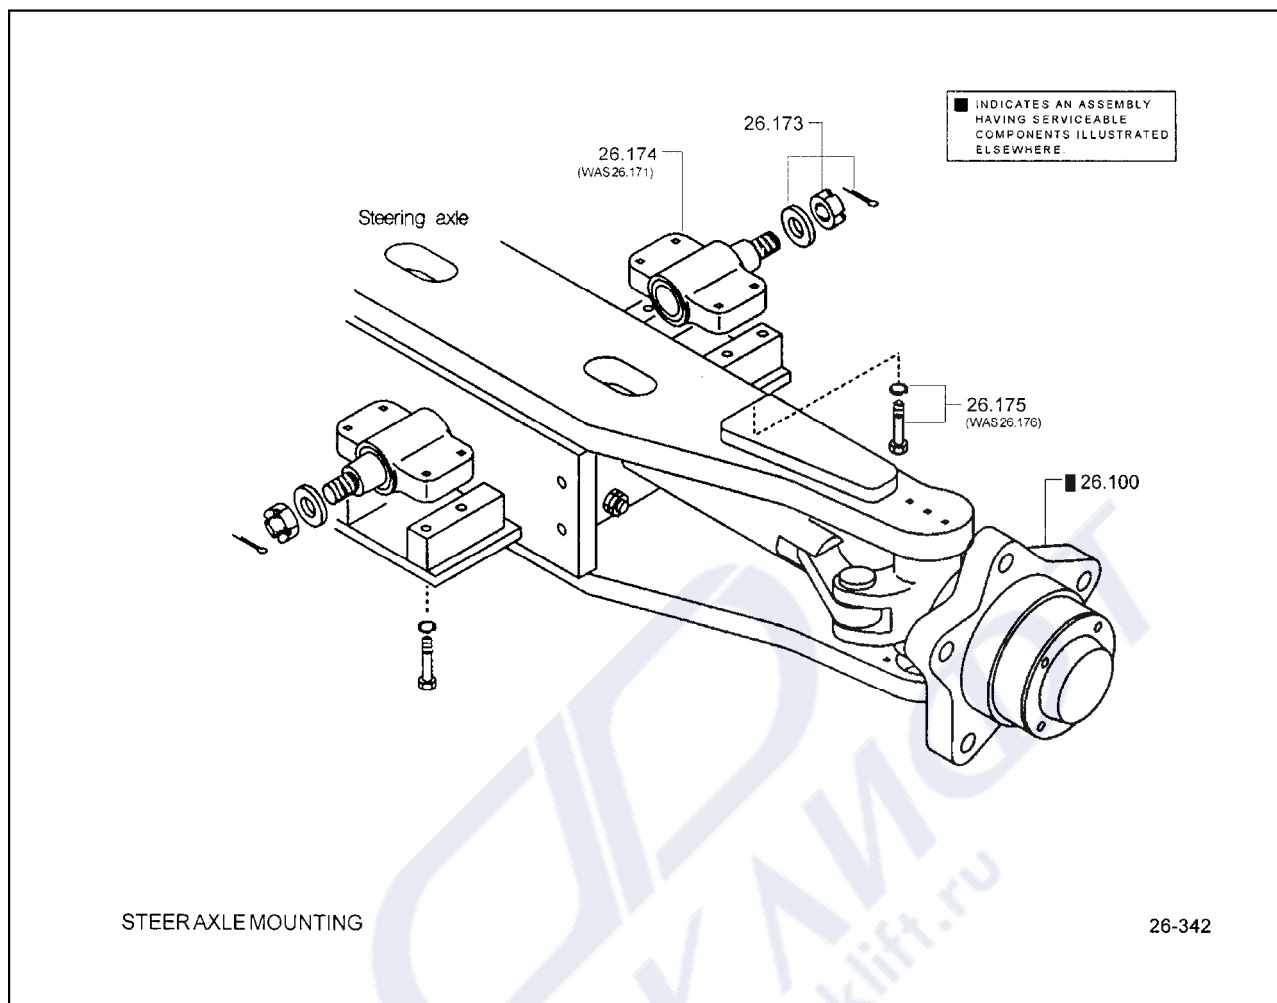 


- | | |
|--------|--|
| 26.100 | AXLE ASSEMBLY, STEERING
스티어 액슬 |
| 26.173 | FASTENER, SILENT BLOCK TO FRAME (FRONT)
패스너 |
| 26.174 | SILENT BLOCK, AXLE MOUNTING (REAR)
사일런트블록 |
| 26.175 | FASTENER, SILENT BLOCK TO FRAME (REAR)
패스너 |

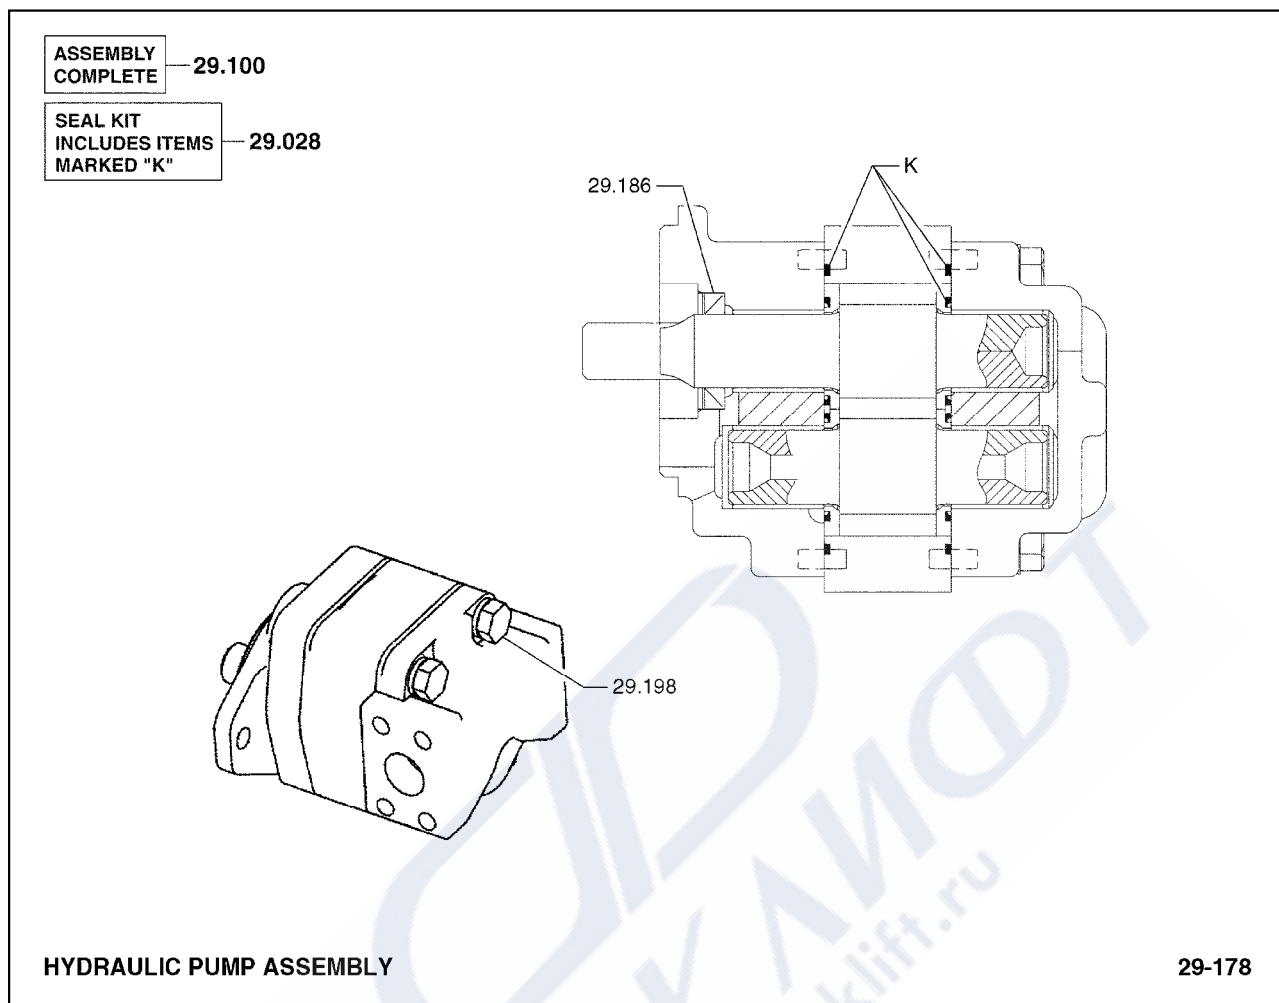 

29.028	SEAL KIT, HYDRAULIC UNIT PUMP 씰키트
29.100	PUMP ASSEMBLY, HYDRAULIC 펌프
29.186	SEAL, PUMP SHAFT 씰
29.198	FASTENER, PUMP HOUSING 패스너

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

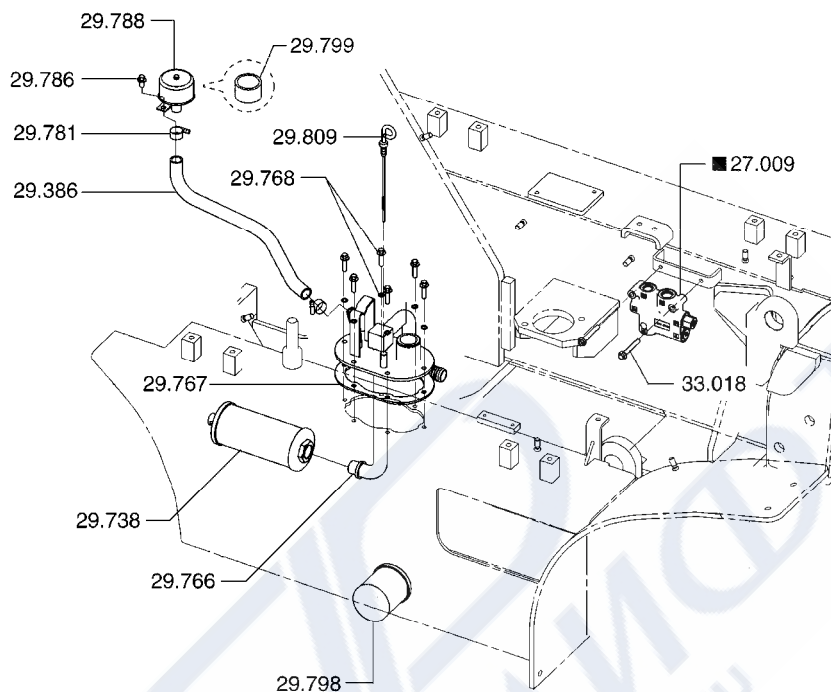


HYDRAULIC SUMP

29-215


27.009	VALVE ASSEMBLY, HYDRAULIC PRIORITY 밸브
29.386	LINE, SUMP BREATHER 라인
29.738	FILTER ASSEMBLY, HYDRAULIC SUMP 필터
29.766	COVER, SUMP TANK 커버
29.767	SEAL, SUMP TANK COVER 셀
29.768	FASTENER, SUMP TANK COVER 패스너
29.781	CLAMP, SUMP BREATHER LINE 클램프
29.786	FASTENER, SUMP BREATHER 패스너
29.788	BREATHER, SUMP 브리더

29.798	SCREEN, HYDRAULIC SUMP PRE FILTER 스크린
29.799	ELEMENT, SUMP BREATHER 엘리먼트
29.809	DIPSTICK, SUMP LEVEL 딤스틱
33.018	FASTENER, FLOW VALVE 패스너



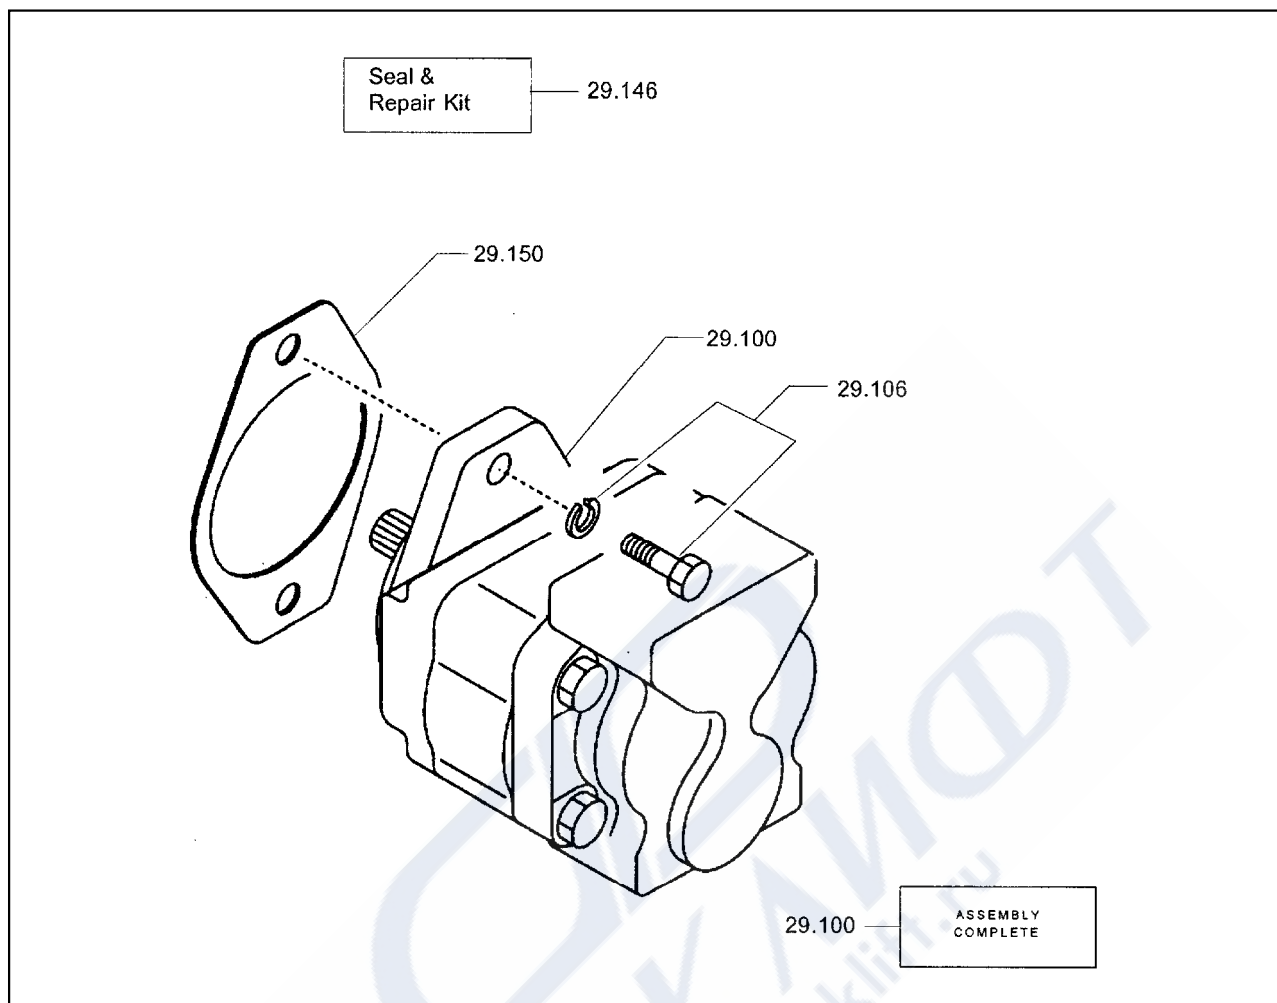 


- | | |
|--------|--|
| 29.100 | PUMP ASSEMBLY, HYDRAULIC
펌프 |
| 29.106 | FASTENER, PUMP TO PLATE
패스너 |
| 29.146 | GASKET & SEAL KIT, PUMP
가스켓& 씬 |
| 29.150 | GASKET, HYDRAULIC PUMP MOUNTING
가스켓 |

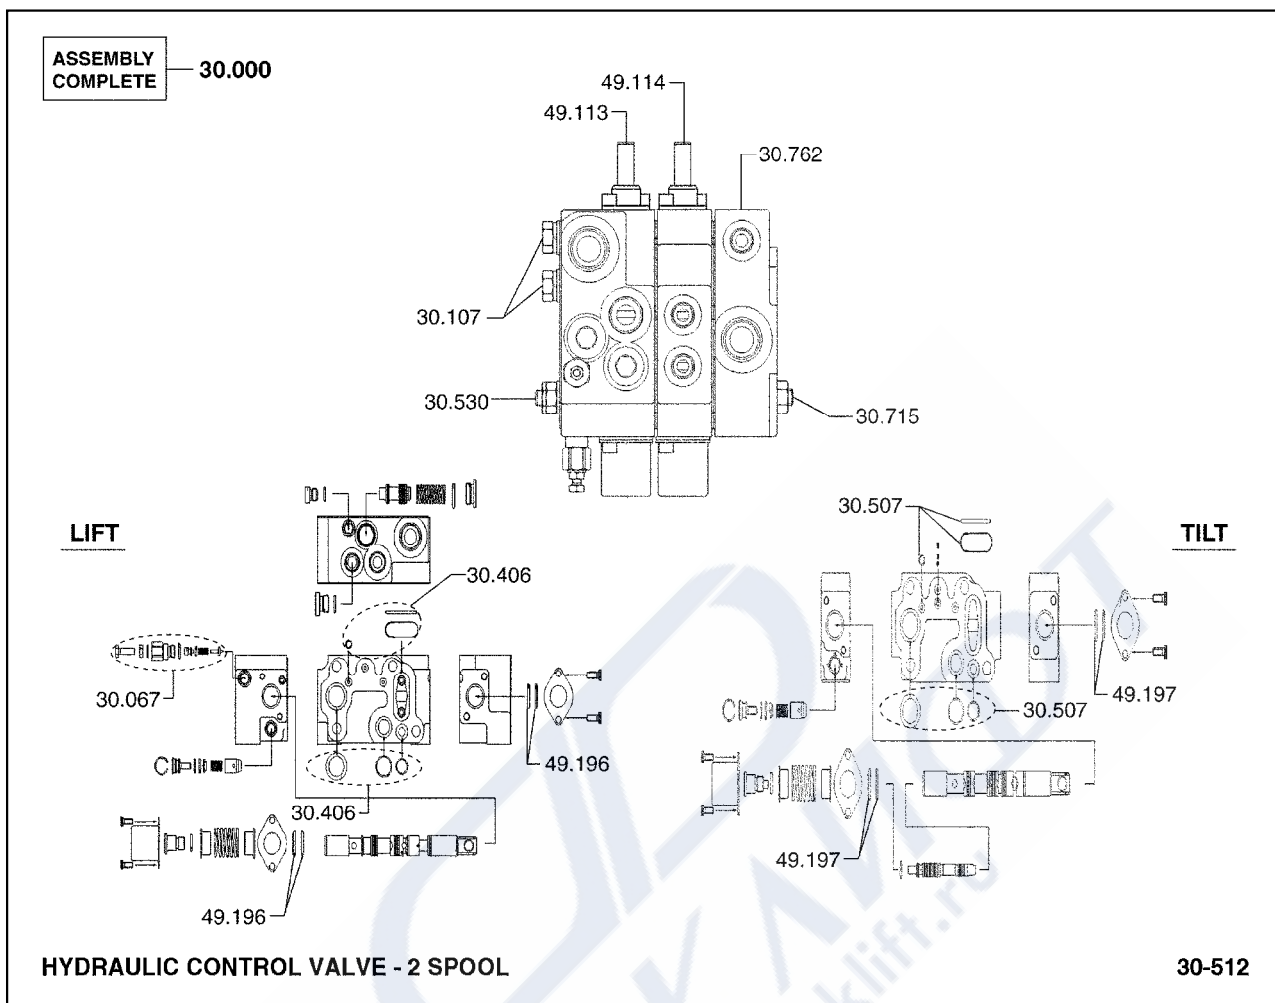 

30.000	VALVE ASSEMBLY, HYDRAULIC 밸브
30.067	RELIEF VALVE KIT, VALVE INLET SECTION 릴리프밸브
30.107	FASTENER, VALVE THRU 패스너
30.406	SEAL KIT, HYDRAULIC VALVE (LIFT) 씰키트
30.507	SEAL KIT, HYDRAULIC VALVE (TILT) 씰키트
30.530	FASTENER, VALVE THRU 패스너
30.715	FASTENER, VALVE THRU 패스너
30.762	END COVER, HYDRAULIC VALVE 엔드커버
49.113	LIFT SECTION, HYDRAULIC VALVE 리프트섹션


49.114	TILT SECTION, HYDRAULIC VALVE 틸트섹션
49.196	SPOOL SEAL KIT, LIFT SECTION 스풀씰키트
49.197	SPOOL SEAL KIT, TILT SECTION 스풀씰키트



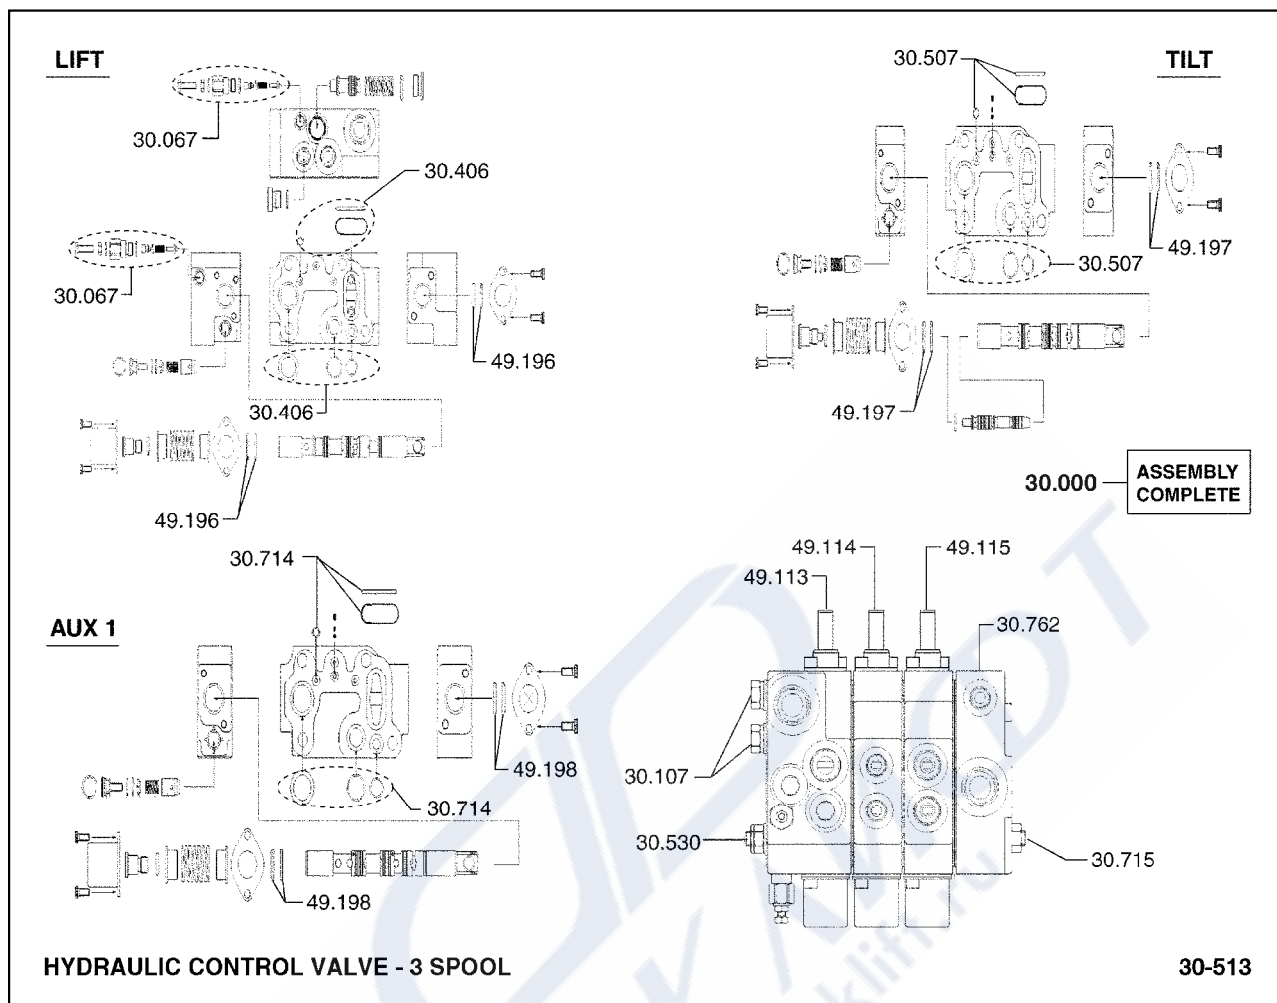 

30.000	VALVE ASSEMBLY, HYDRAULIC 밸브
30.067	RELIEF VALVE KIT, VALVE INLET SECTION 릴리프밸브
30.107	FASTENER, VALVE THRU 패스너
30.406	SEAL KIT, HYDRAULIC VALVE (LIFT) 씰키트
30.507	SEAL KIT, HYDRAULIC VALVE (TILT) 씰키트
30.530	FASTENER, VALVE THRU 패스너
30.714	SEAL KIT, HYDRAULIC VALVE SECTION (AUX) 씰키트
30.715	FASTENER, VALVE THRU 패스너
30.762	END COVER, HYDRAULIC VALVE 엔드커버


49.113	LIFT SECTION, HYDRAULIC VALVE 리프트섹션
49.114	TILT SECTION, HYDRAULIC VALVE 틸트섹션
49.115	AUX SECTION, HYDRAULIC VALVE 보조섹션
49.196	SPOOL SEAL KIT, LIFT SECTION 스풀씰키트
49.197	SPOOL SEAL KIT, TILT SECTION 스풀씰키트
49.198	SPOOL SEAL KIT, AUX SECTION 스풀씰키트

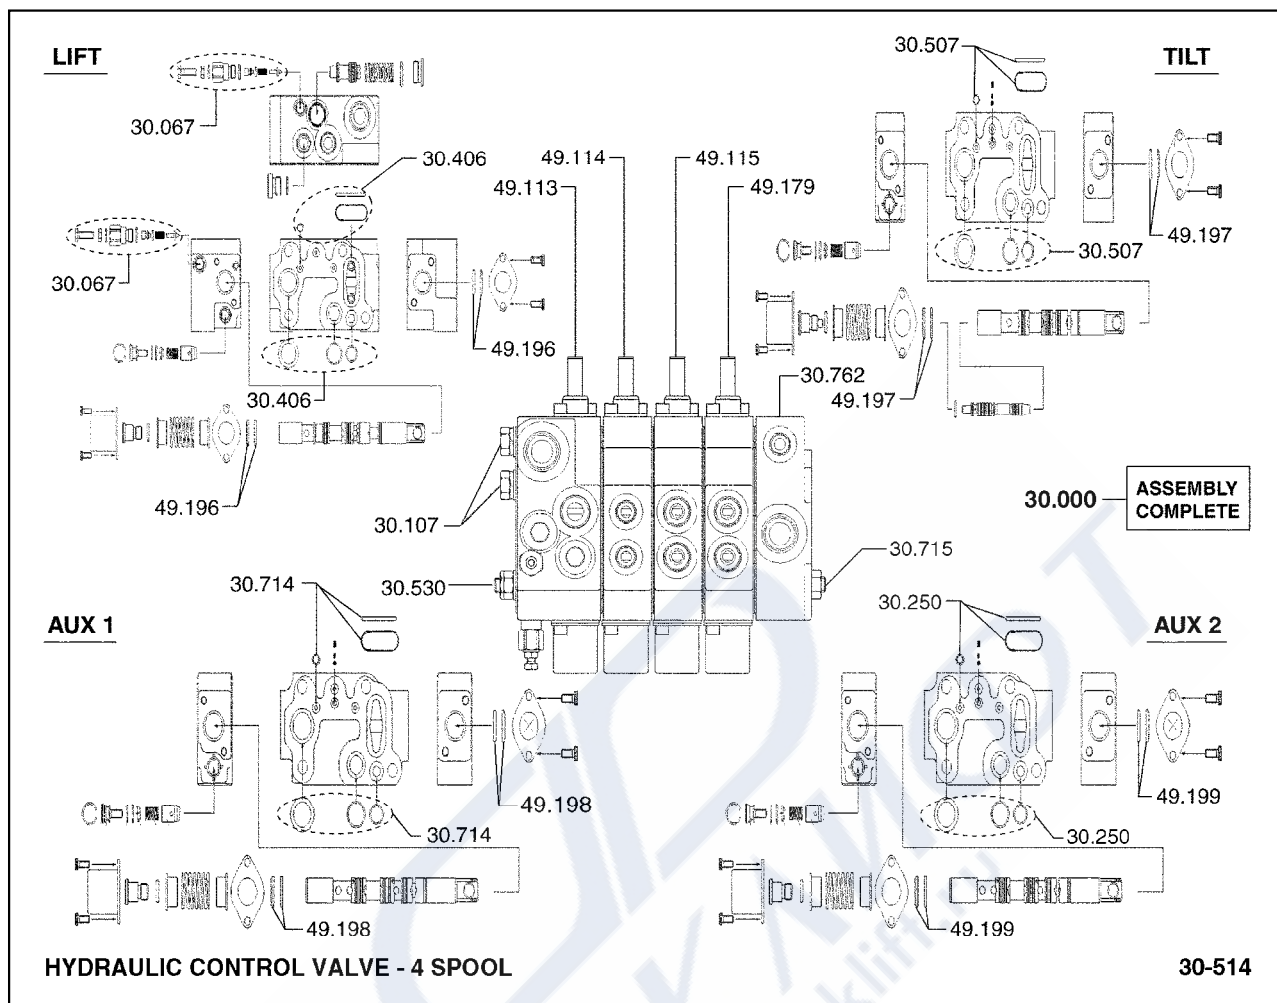 

- | | |
|--------|--|
| 30.000 | VALVE ASSEMBLY, HYDRAULIC
밸브 |
| 30.067 | RELIEF VALVE KIT, VALVE INLET SECTION
릴리프밸브 |
| 30.107 | FASTENER, VALVE THRU
패스너 |
| 30.250 | SEAL KIT, HYDRAULIC VALVE SECTION (AUX)
셀리트 |
| 30.406 | SEAL KIT, HYDRAULIC VALVE (LIFT)
셀리트 |
| 30.507 | SEAL KIT, HYDRAULIC VALVE (TILT)
셀리트 |
| 30.530 | FASTENER, VALVE THRU
패스너 |
| 30.714 | SEAL KIT, HYDRAULIC VALVE SECTION (AUX)
셀리트 |
| 30.715 | FASTENER, VALVE THRU
패스너 |

30.762	END COVER, HYDRAULIC VALVE 엔드커버
49.113	LIFT SECTION, HYDRAULIC VALVE 리프트섹션
49.114	TILT SECTION, HYDRAULIC VALVE 틸트섹션
49.115	AUX SECTION, HYDRAULIC VALVE 보조섹션
49.179	AUX SECTION, HYDRAULIC VALVE 보조섹션
49.196	SPOOL SEAL KIT, LIFT SECTION 스풀씰키트
49.197	SPOOL SEAL KIT, TILT SECTION 스풀씰키트
49.198	SPOOL SEAL KIT, AUX SECTION 스풀씰키트
49.199	SPOOL SEAL KIT, AUX SECTION 스풀씰키트

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

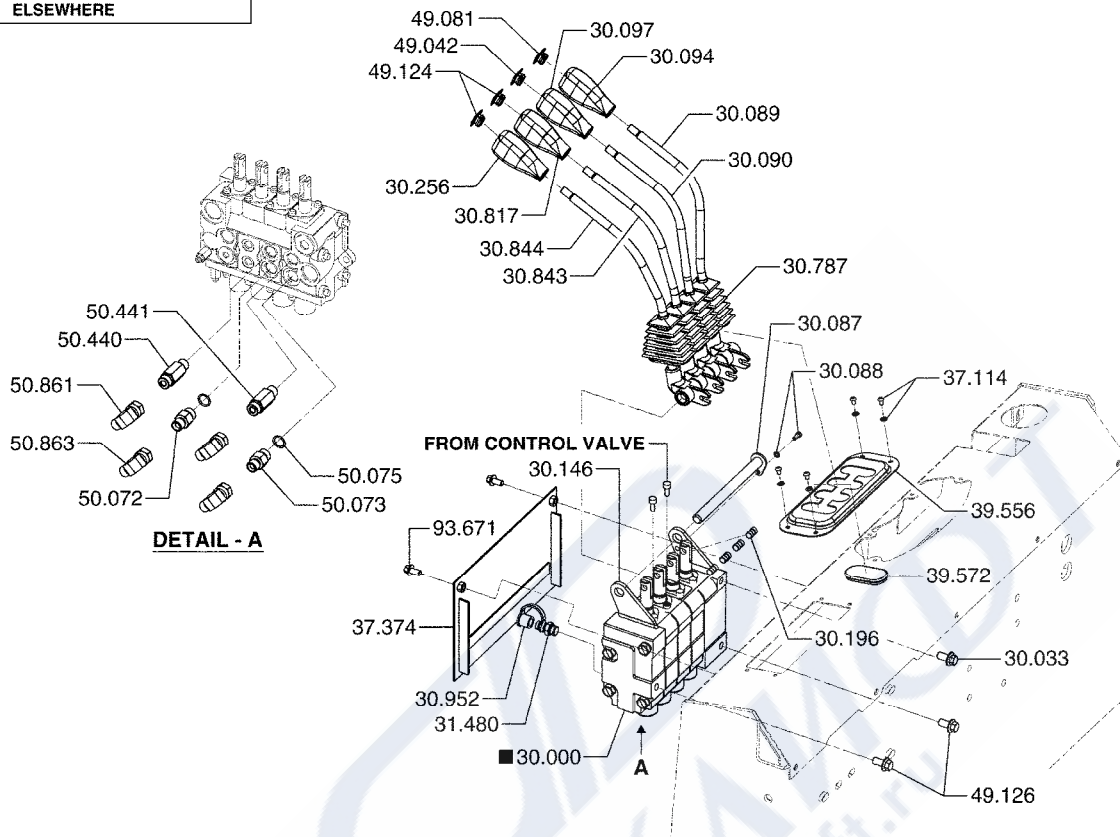


HYDRAULIC VALVE MOUNTING

30-614

30.000	VALVE ASSEMBLY, HYDRAULIC 밸브	30.952	DUST CAP, PRESSURE GAUGE PORT FITTING 더스트캡
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너	31.480	PLUG, PRESSURE GAUGE PORT 플러그
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀	37.114	FASTENER, VALVE LINKAGE ACCESS COVER 패스너
30.088	FASTENER, VALVE CONTROL LEVER PIVOT PIN 패스너	37.374	COVER, HYDRAULIC VALVE 커버
30.089	LEVER, LIFT CONTROL 레버	39.556	COVER, VALVE LINKAGE ACCESS 커버
30.090	LEVER, TILT CONTROL 레버	39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
30.094	KNOB, LIFT CONTROL LEVER 노브	49.042	CAP, TILT CONTROL LEVER 캡
30.097	KNOB, TILT CONTROL LEVER 노브	49.081	CAP, LIFT CONTROL LEVER 캡
30.146	BRACKET, CONTROL LINKAGE LOWER 브라켓	49.124	CAP, AUXILIARY CONTROL LEVER 캡
30.196	FASTENER, SPOOL CENTERING SPRING GUIDE 패스너	49.126	FASTENER, HYDRAULIC VALVE MOUNTING 패스너
30.256	KNOB, AUXILIARY VALVE CONTROL LEVER 노브	50.072	FITTING, 1ST AUXILIARY VALVE "B" PORT 피팅
30.787	BOOT, VALVE CONTROL LEVER 부트	50.073	FITTING, 2ND AUXILIARY VALVE "B" PORT 피팅
30.817	KNOB, AUXILIARY VALVE CONTROL LEVER 노브	50.075	SEAL, AUXILIARY VALVE PORT FITTING 씰
30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버	50.440	FITTING, 1ST AUXILIARY VALVE "A" PORT 피팅
30.844	LEVER, AUXILIARY VALVE CONTROL (2ND AUX) 레버	50.441	FITTING, 2ND AUXILIARY VALVE "A" PORT 피팅

50.861	FITTING, AUXILIARY VALVE A PORT 피팅
50.863	FITTING, AUXILIARY VALVE B PORT 피팅
93.671	FASTENER, HYDRAULIC VALVE COVER 패스너




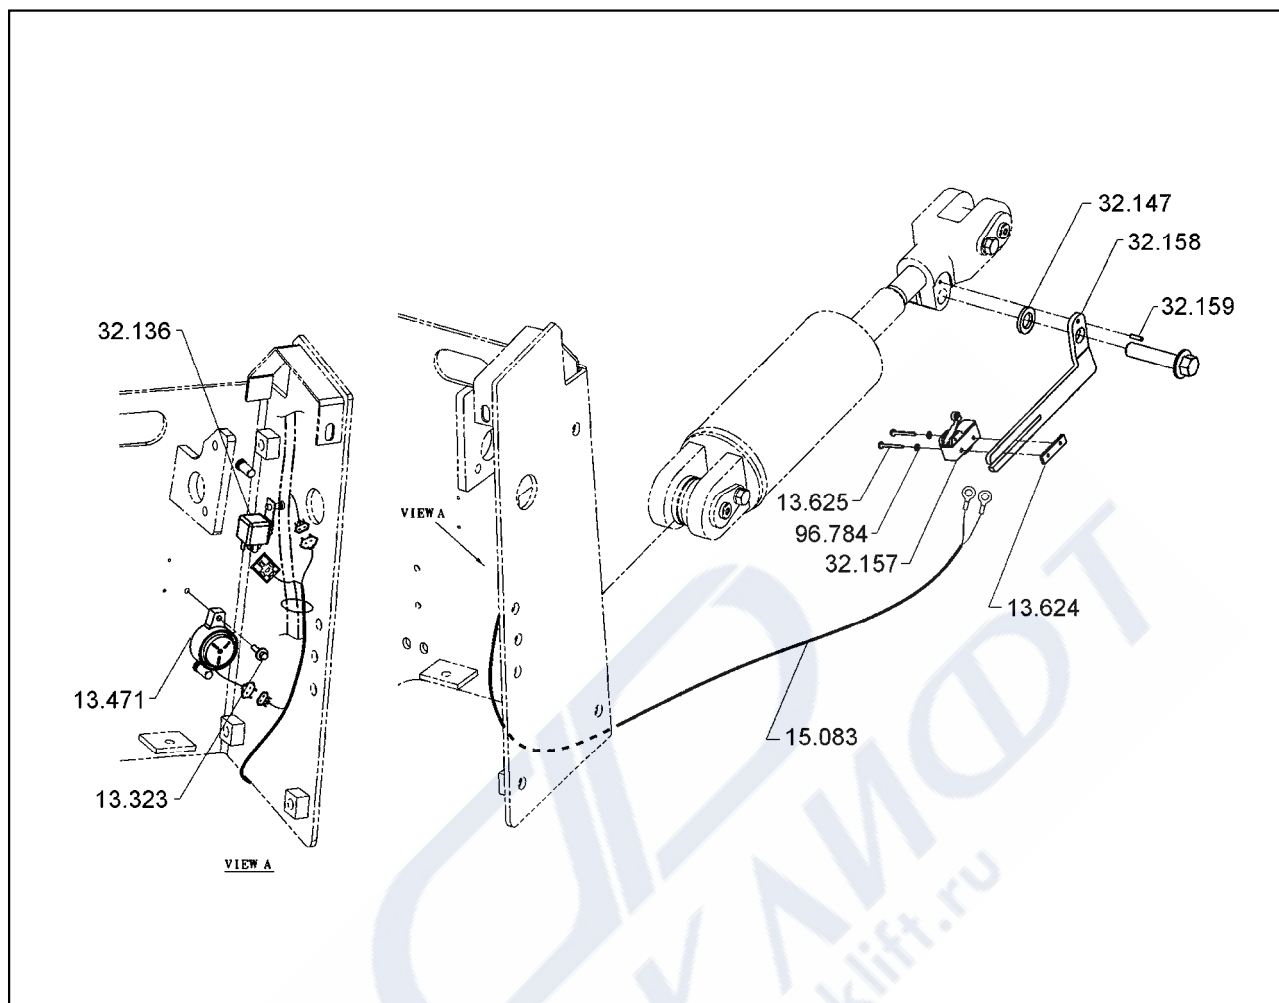 

13.323	FASTENER, WARNING BUZZER 패스너
13.471	BUZZER, WARNING 부저
13.624	BRACKET, TILT LIMIT SWITCH 브라켓
13.625	FASTENER, TILT LIMIT SWITCH 패스너
15.083	CONDUCTOR, TILT LIMIT DEVICE FEED 컨덕터
32.136	RELAY, TILT LIMIT DEVICE 릴레이
32.147	WASHER, TILT LIMIT FASTENER 와셔
32.157	SWITCH, TILT LIMIT 스위치
32.158	BRACKET, TILT LIMIT SWITCH 브라켓

32.159	RETAINER, TILT LIMIT SWITCH BRACKET 리테이너
96.784	WASHER, TILT LIMIT SWITCH FASTENER 와셔




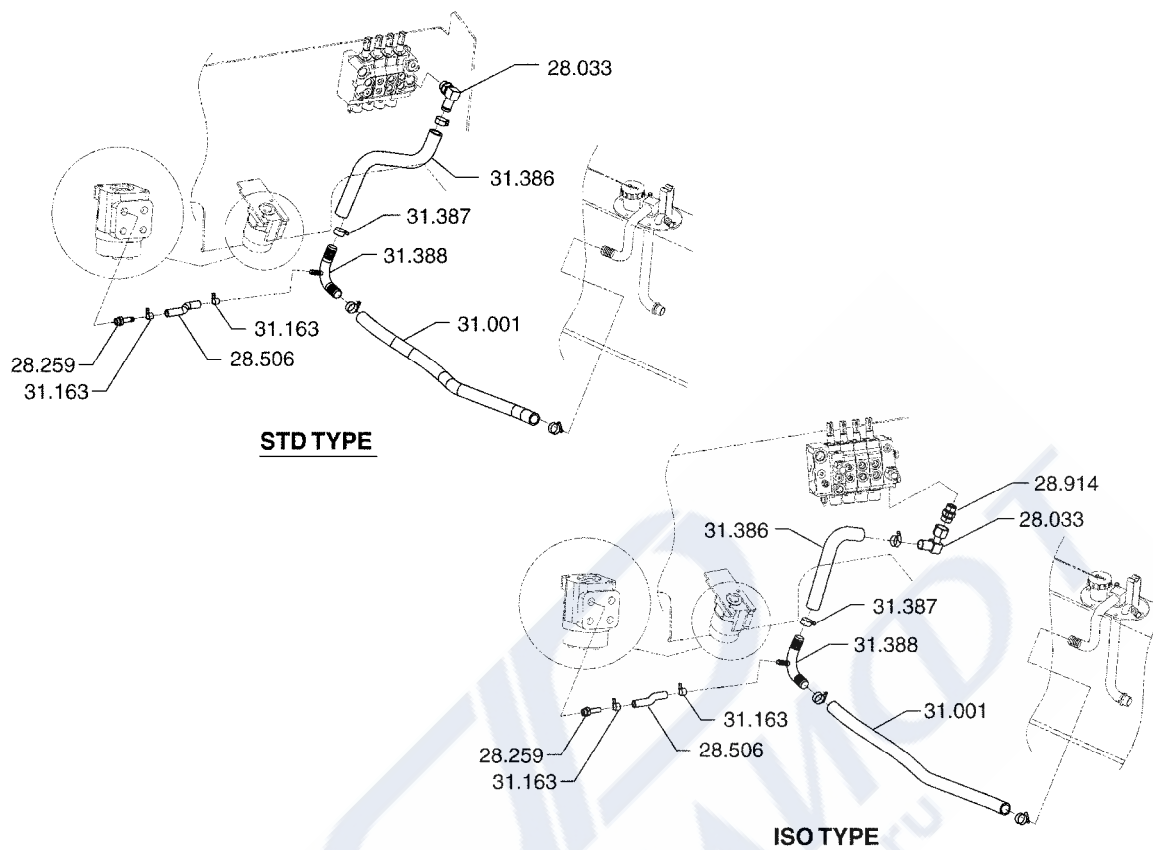 

HYDRAULIC RETURN LINES

31-200


28.033	FITTING, SUMP RETURN 피팅
28.259	FITTING, SUMP RETURN LINE 피팅
28.506	LINE, SUMP RETURN 라인
28.914	FITTING, VALVE SUMP RETURN PORT 피팅
31.001	LINE, SUMP OUTLET 라인
31.163	CLAMP, SUMP RETURN LINE 클램프
31.386	LINE, VALVE TO SUMP RETURN 라인
31.387	CLAMP, MAIN VALVE TO SUMP LINE 클램프
31.388	LINE, VALVE SUMP RETURN 라인

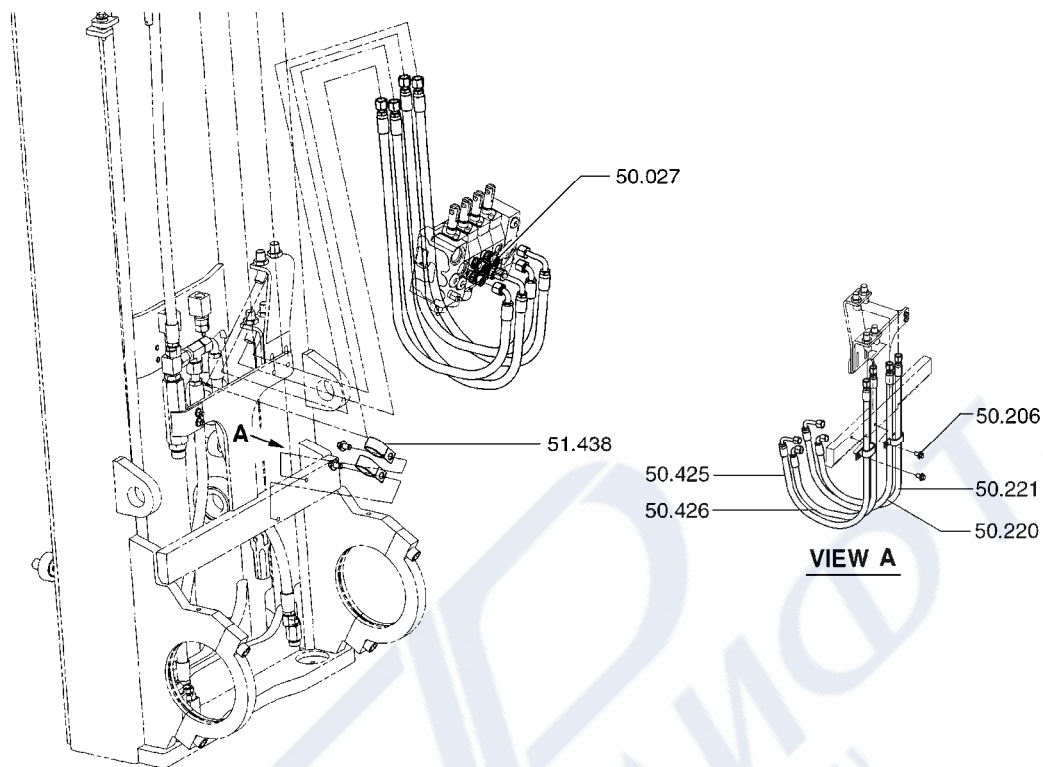 

AUX. VALVE PLUMBING (DOUBLE)

31-201


50.027	FITTING, 1ST AUXILIARY VALVE A PORT 피팅
50.206	FASTENER, DEVICE RH LINE CLAMP 패스너
50.220	LINE, 2ND AUXILIARY VALVE "A" PORT 라인
50.221	LINE, 2ND AUXILIARY VALVE "B" PORT 라인
50.425	LINE, 1ST AUXILIARY VALVE "A" PORT 라인
50.426	LINE, 1ST AUXILIARY VALVE "B" PORT 라인
51.438	CLIP, DEVICE HOSE 클립

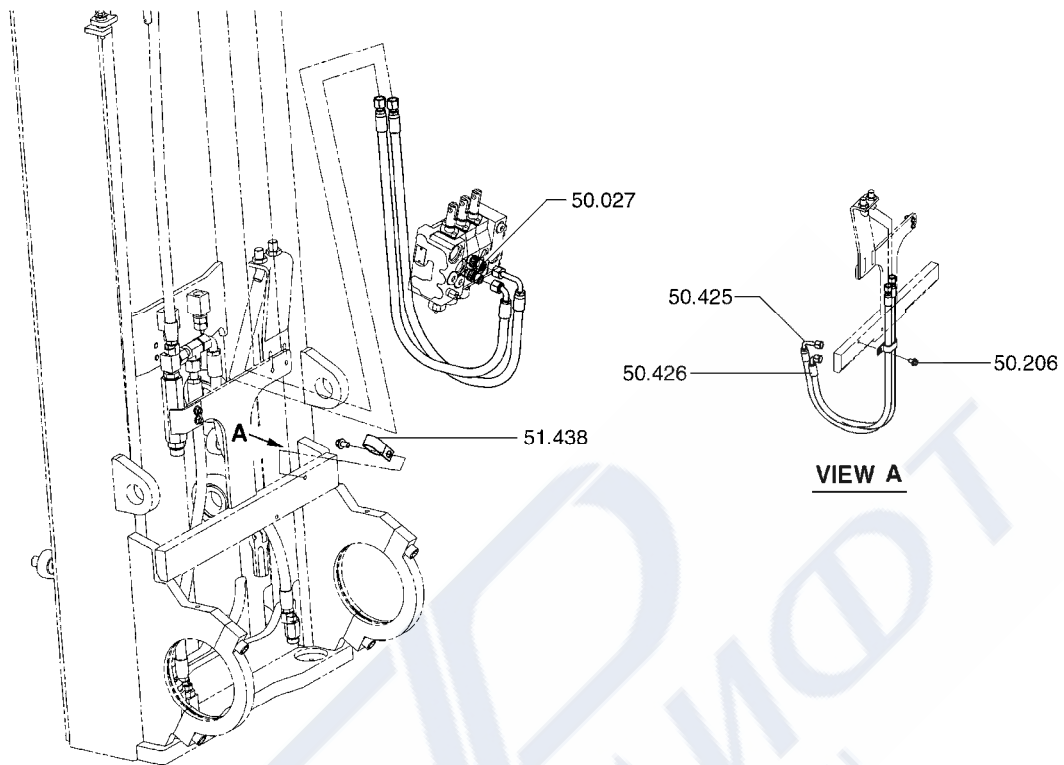 

AUX. VALVE PLUMBING (SINGLE)

31-202

50.027	FITTING, 1ST AUXILIARY VALVE A PORT 피팅
50.206	FASTENER, DEVICE RH LINE CLAMP 패스너
50.425	LINE, 1ST AUXILIARY VALVE "A" PORT 라인
50.426	LINE, 1ST AUXILIARY VALVE "B" PORT 라인
51.438	CLIP, DEVICE HOSE 클립

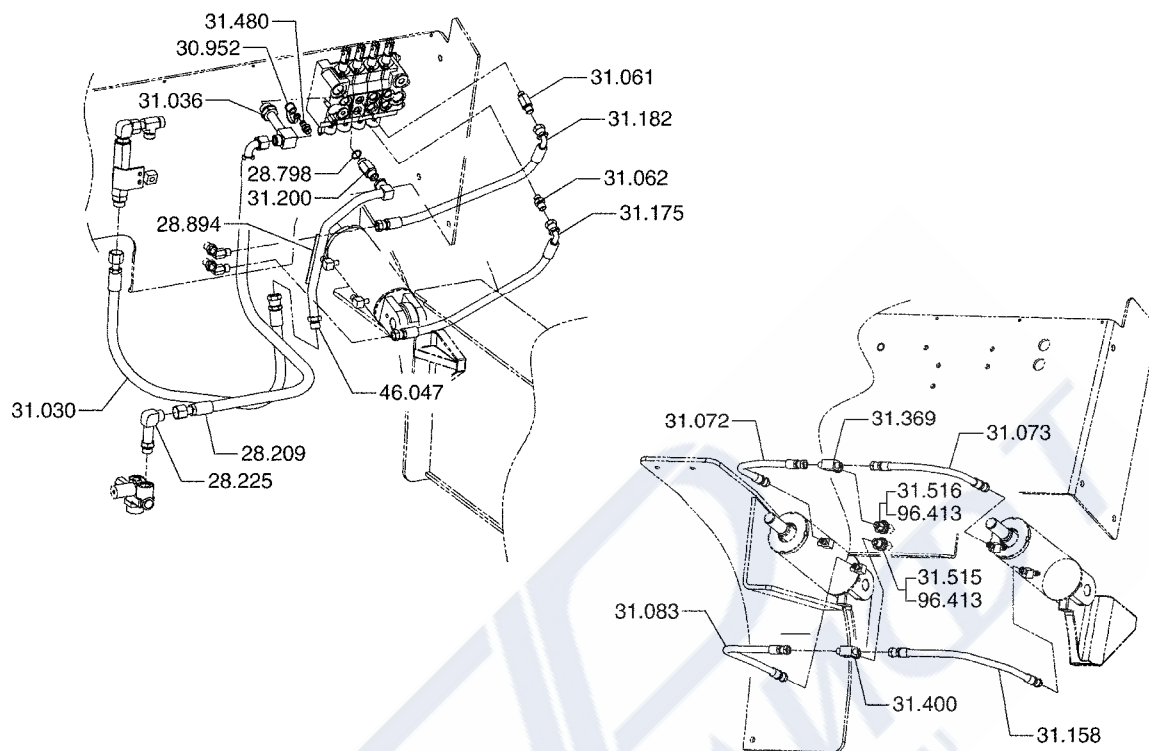 


HYDRAULIC LIFT & TILT LINES

31-367

28.209	LINE, MAIN VALVE INLET 라인
28.225	FITTING, FLOW CONTROL VALVE BY-PASS PORT 피팅
28.798	SEAL, MAIN VALVE LIFT PORT LINE FITTING 씰
28.894	PROTECTOR, LIFT LINE 보호장치
30.952	DUST CAP, PRESSURE GAUGE PORT FITTING 더스트캡
31.030	LINE, VALVE TO LIFT CYLINDER 라인
31.036	FITTING, MAIN VALVE INLET PORT 피팅
31.061	FITTING, VALVE TILT PORT "A" 피팅
31.062	FITTING, VALVE TILT PORT "B" 피팅


31.072	LINE, RH TILT CYLINDER ROD PORT 라인
31.073	LINE, LH TILT CYLINDER ROD PORT 라인
31.083	LINE, RH TILT CYLINDER ANCHOR PORT 라인
31.158	LINE, LH TILT CYLINDER ANCHOR PORT 라인
31.175	LINE, VALVE TILT PORT "B" 라인
31.182	LINE, VALVE TILT PORT "A" 라인
31.200	FITTING, MAIN VALVE LIFT PORT 피팅
31.369	FITTING, VALVE TILT PORT "A" LINE 피팅
31.400	FITTING, VALVE TILT PORT "B" LINE 피팅
31.480	PLUG, PRESSURE GAUGE PORT 플러그
31.515	FITTING, VALVE TILT PORT "B" LINE 피팅
31.516	FITTING, VALVE TILT PORT "A" LINE 피팅
46.047	PIPE, VALVE TO LIFT CYLINDER 파이프
96.413	WASHER, TILT LINE FITTING 와셔

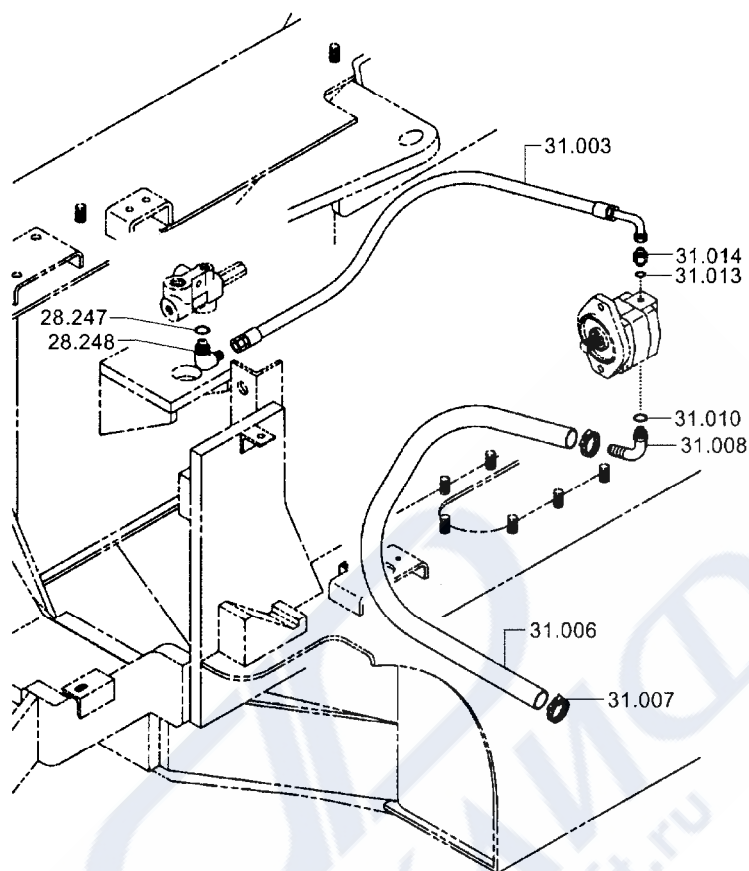 


HYDRAULIC SUPPLY LINES

31-841


28.247	SEAL, PS FLOW CONTROL VAL OUTLET PORT FTG 씰
28.248	FITTING, FLOW CONTROL VALVE OUTLET PORT 피팅
31.003	LINE, PUMP INLET 라인
31.006	LINE, PUMP INLET 라인
31.007	CLAMP, PUMP INLET LINE 클램프
31.008	FITTING, PUMP INLET 피팅
31.010	SEAL, PUMP INLET PORT 씰
31.013	SEAL, PUMP OUTLET 씰
31.014	FITTING, PUMP OUTLET 피팅

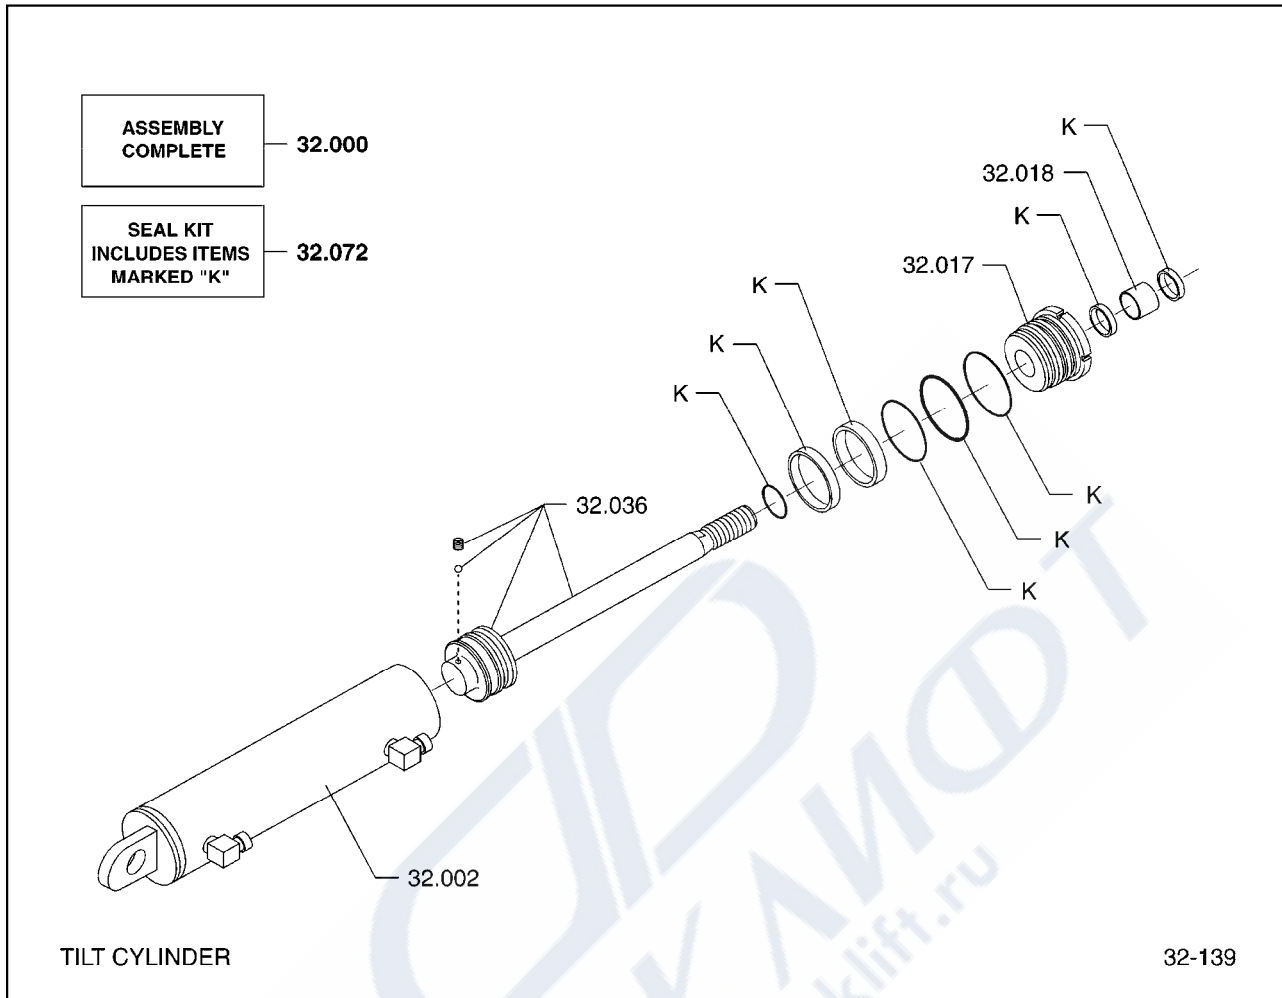 

32.000	CYLINDER ASSEMBLY, TILT 실린더
32.002	CYLINDER ASSEMBLY, WELDED 실린더
32.017	GLAND, TILT CYLINDER 그랜드
32.018	BUSHING, TILT CYLINDER GLAND 부싱
32.036	ROD & PISTON ASSEMBLY, TILT CYLINDER 로드& 피스톤
32.072	PACKING KIT, TILT CYLINDER 패킹키트

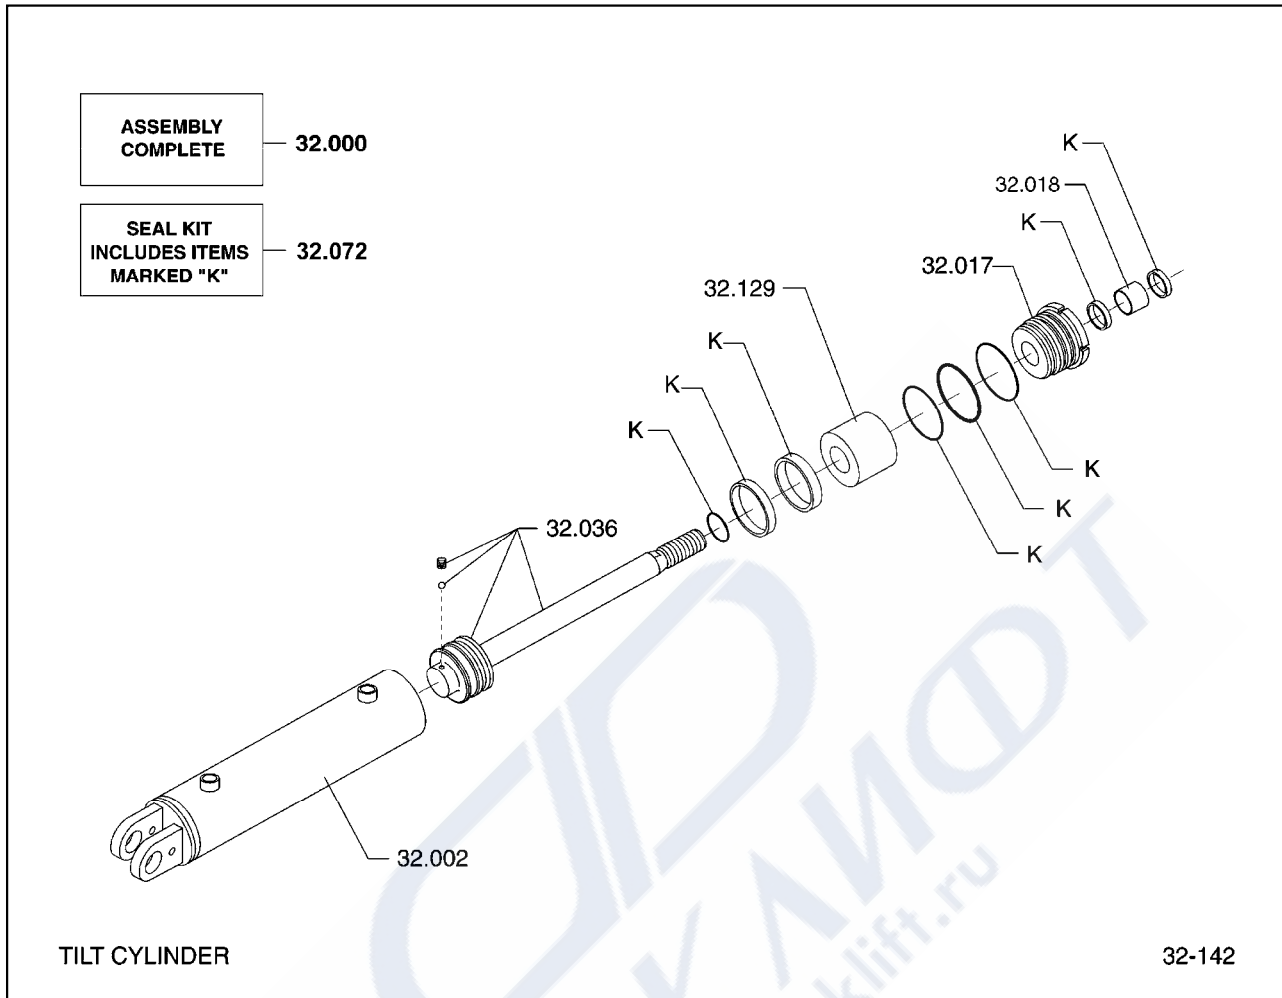 


32.000	CYLINDER ASSEMBLY, TILT 실린더
32.002	CYLINDER ASSEMBLY, WELDED 실린더
32.017	GLAND, TILT CYLINDER 그랜드
32.018	BUSHING, TILT CYLINDER GLAND 부싱
32.036	ROD & PISTON ASSEMBLY, TILT CYLINDER 로드& 피스톤
32.072	PACKING KIT, TILT CYLINDER 패킹키트
32.129	SPACER, TILT CYLINDER BARREL END 스페이서

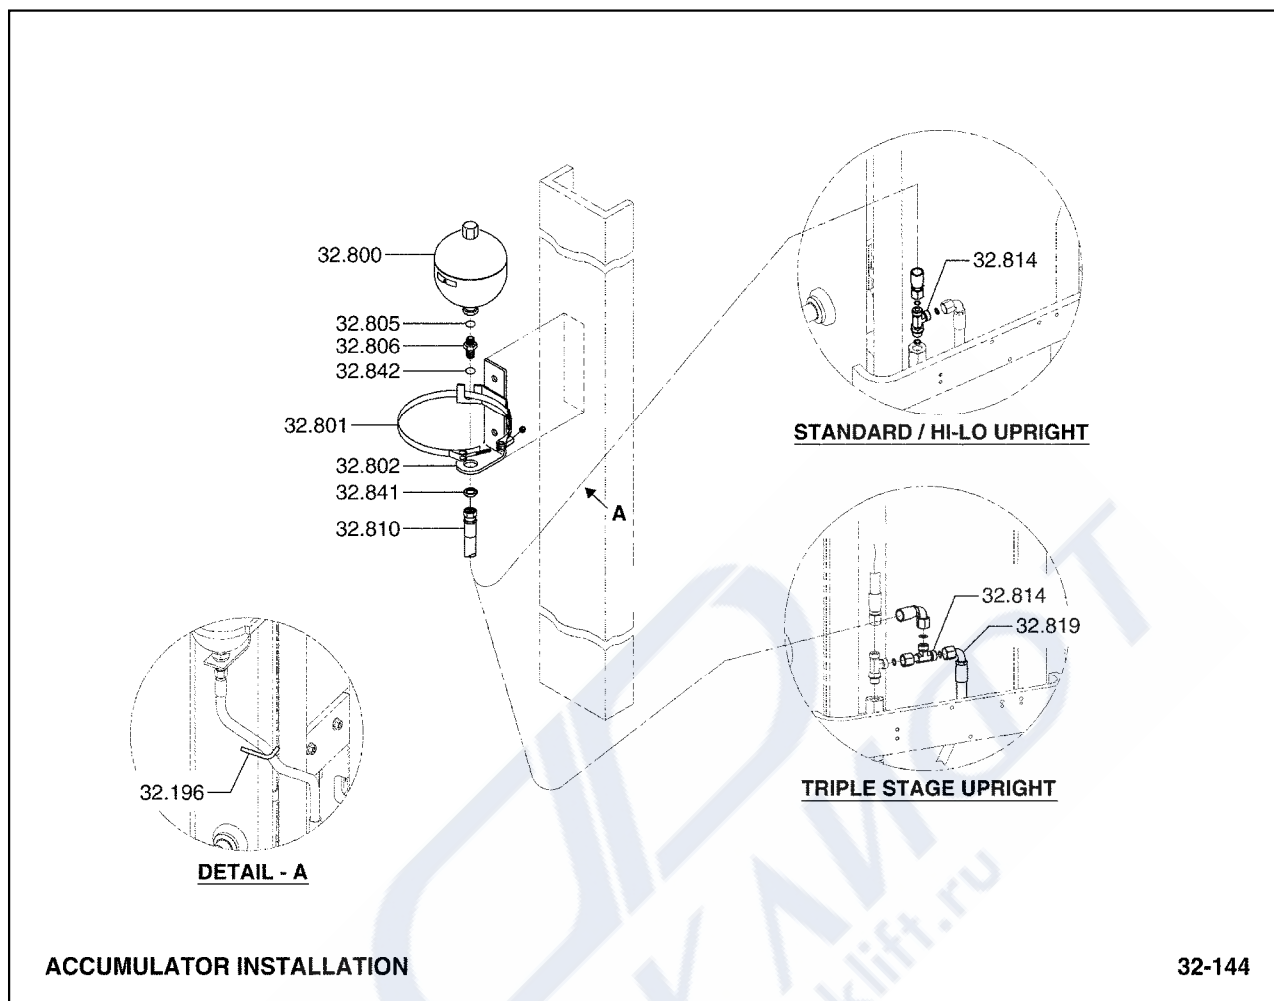 

32.196	ROD, HYDRAULIC ACCUMULATOR LINE 로드
32.800	ACCUMULATOR, HYDRAULIC 어큐물레이터
32.801	CLAMP, HYDRAULIC ACCUMULATOR MOUNTING 클램프
32.802	BRACKET, HYDRAULIC ACCUMULATOR 브라켓
32.805	SEAL, HYDRAULIC ACCUMULATOR CONNECTOR 씰
32.806	CONNECTOR, HYDRAULIC ACCUMULATOR 커넥터
32.810	LINE, HYDRAULIC ACCUMULATOR 라인
32.814	FITTING, HYDRAULIC ACCUMULATOR LINE 피팅
32.819	LINE, HYDRAULIC ACCUMULATOR 라인


32.841	NUT, HYDRAULIC ACCUMULATOR FITTING 너트
32.842	SEAL, HYDRAULIC ACCUMULATOR FITTING 씰



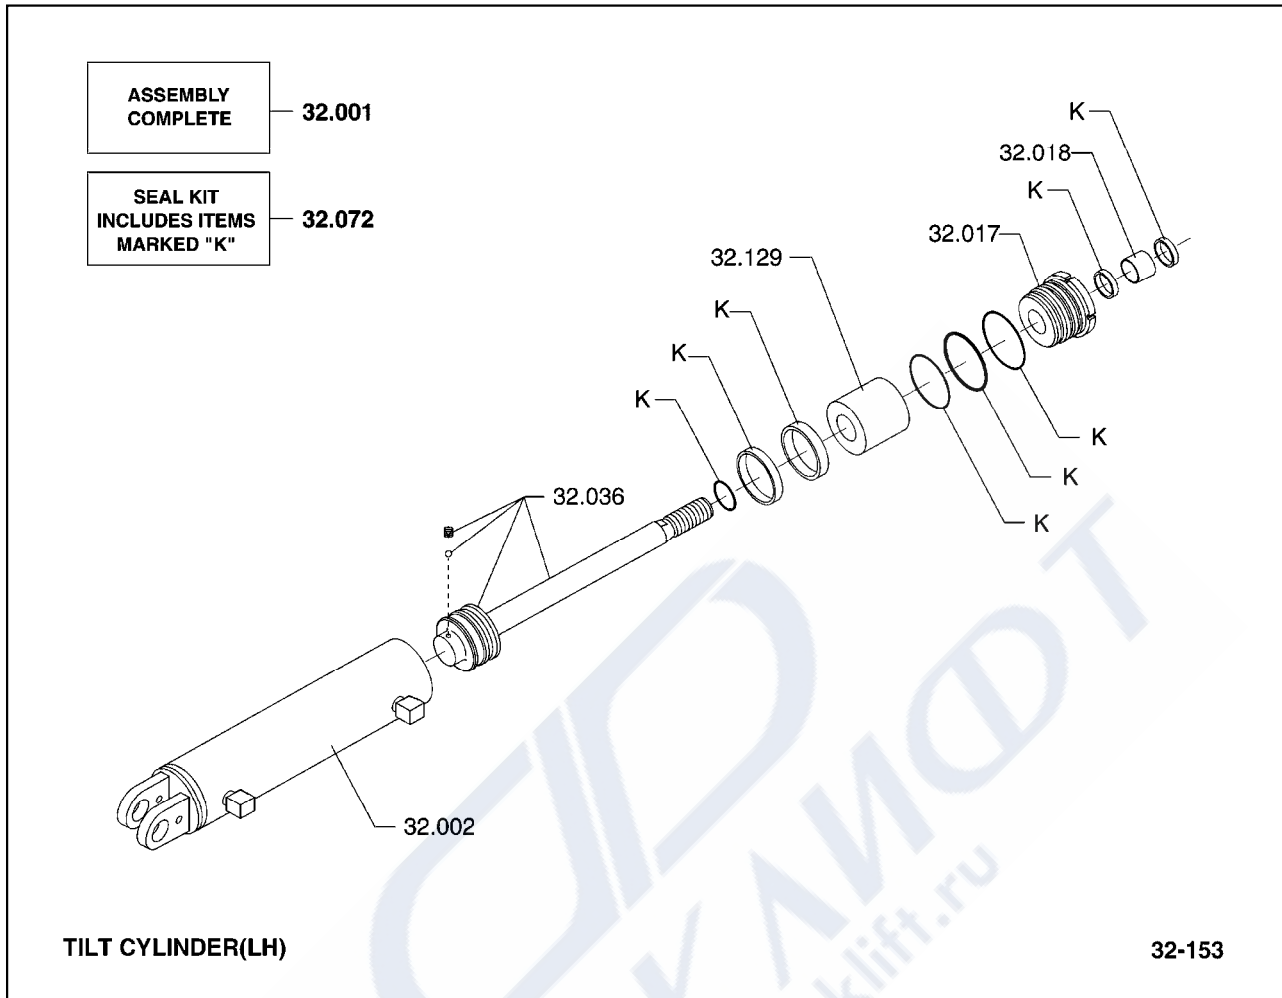 

32.001	TILT CYLINDER ASSEMBLY (LH) 틸트실린더
32.002	CYLINDER ASSEMBLY, WELDED 실린더
32.017	GLAND, TILT CYLINDER 그랜드
32.018	BUSHING, TILT CYLINDER GLAND 부싱
32.036	ROD & PISTON ASSEMBLY, TILT CYLINDER 로드& 피스톤
32.072	PACKING KIT, TILT CYLINDER 패킹키트
32.129	SPACER, TILT CYLINDER BARREL END 스페이서

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

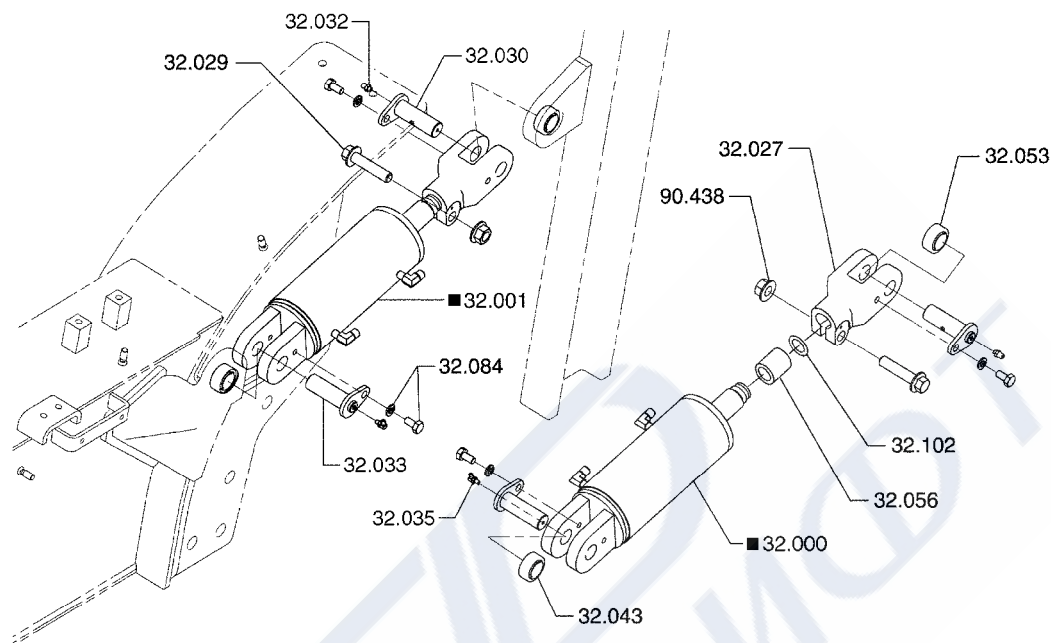


TILT CYLINDER MOUNTING

32-157

32.000	CYLINDER ASSEMBLY, TILT 실린더
32.001	TILT CYLINDER ASSEMBLY (LH) 틸트실린더
32.027	END, RH TILT CYLINDER ROD 엔드
32.029	FASTENER, TILT CYLINDER ROD END 패스너
32.030	PIN, TILT CYLINDER TO UPRIGHT 핀
32.032	FITTING, TILT CYLINDER TO UPRIGHT PIN LUB 피팅
32.033	PIN, TILT CYLINDER REAR MOUNTING RH 핀
32.035	FITTING, TILT CYLINDER TO FRAME PIN LUB 피팅
32.043	BEARING, TILT CYLINDER FRAME MOUNTING 베어링

32.053	BEARING, TILT CYLINDER ROD END 베어링
32.056	SPACER, TILT CYLINDER ROD END 스페이서
32.084	CAPSCREW, TILT CYLINDER ROD END PIN RETAINER 캡스크류
32.102	SHIM, TILT CYLINDER STROKE ADJUSTING 심
90.438	NUT, TILT CYLINDER ROD END FASTENER 너트

 
■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

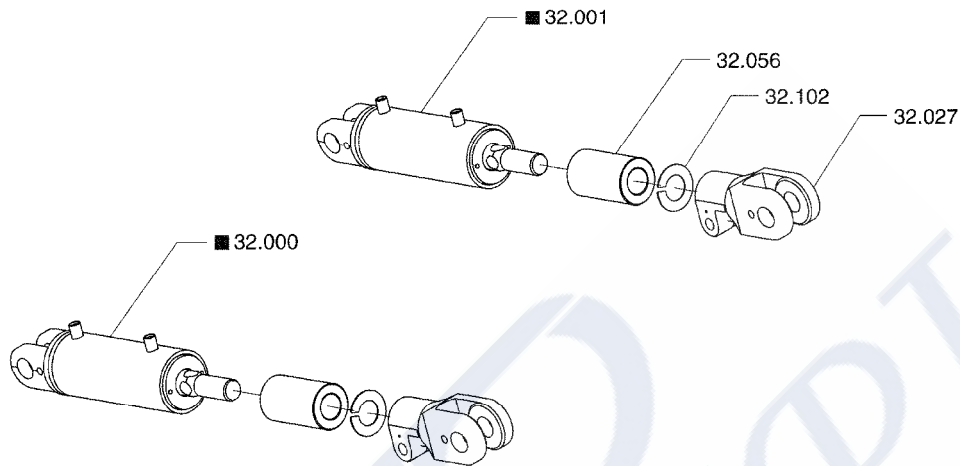


TILT AMOUNT GP

32-167


32.000	CYLINDER ASSEMBLY, TILT 실린더
32.001	TILT CYLINDER ASSEMBLY (LH) 틸트실린더
32.027	END, RH TILT CYLINDER ROD 엔드
32.056	SPACER, TILT CYLINDER ROD END 스페이서
32.102	SHIM, TILT CYLINDER STROKE ADJUSTING 심

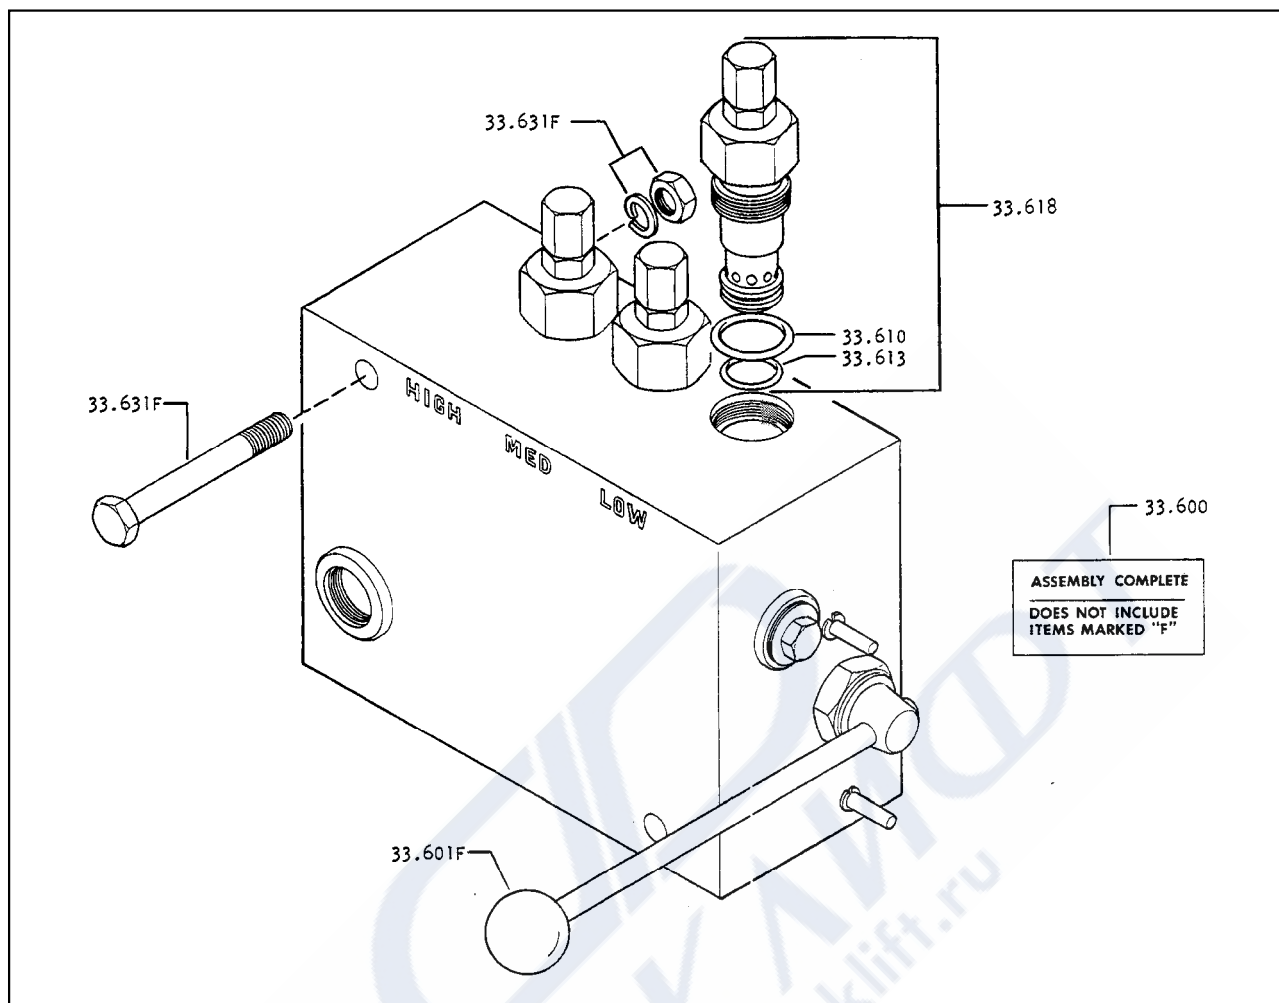 

- | | |
|--------|---|
| 33.600 | RELIEF VALVE, DEVICE VARIABLE PRESSURE
릴리프밸브 |
| 33.601 | LEVER, DEVICE VARIABLE RELIEF VALVE
레버 |
| 33.610 | SEAL, DEVICE PRESS RELIEF VAL CHECK PORT PLUG
씰 |
| 33.613 | SEAL, DEVICE RELIEF VALVE PISTON ADJ END
씰 |
| 33.618 | CARTRIDGE KIT, DEVICE VARIABLE RELIEF VALVE
카트리지키트 |
| 33.631 | FASTENER, DEVICE RELIEF VALVE
패스너 |

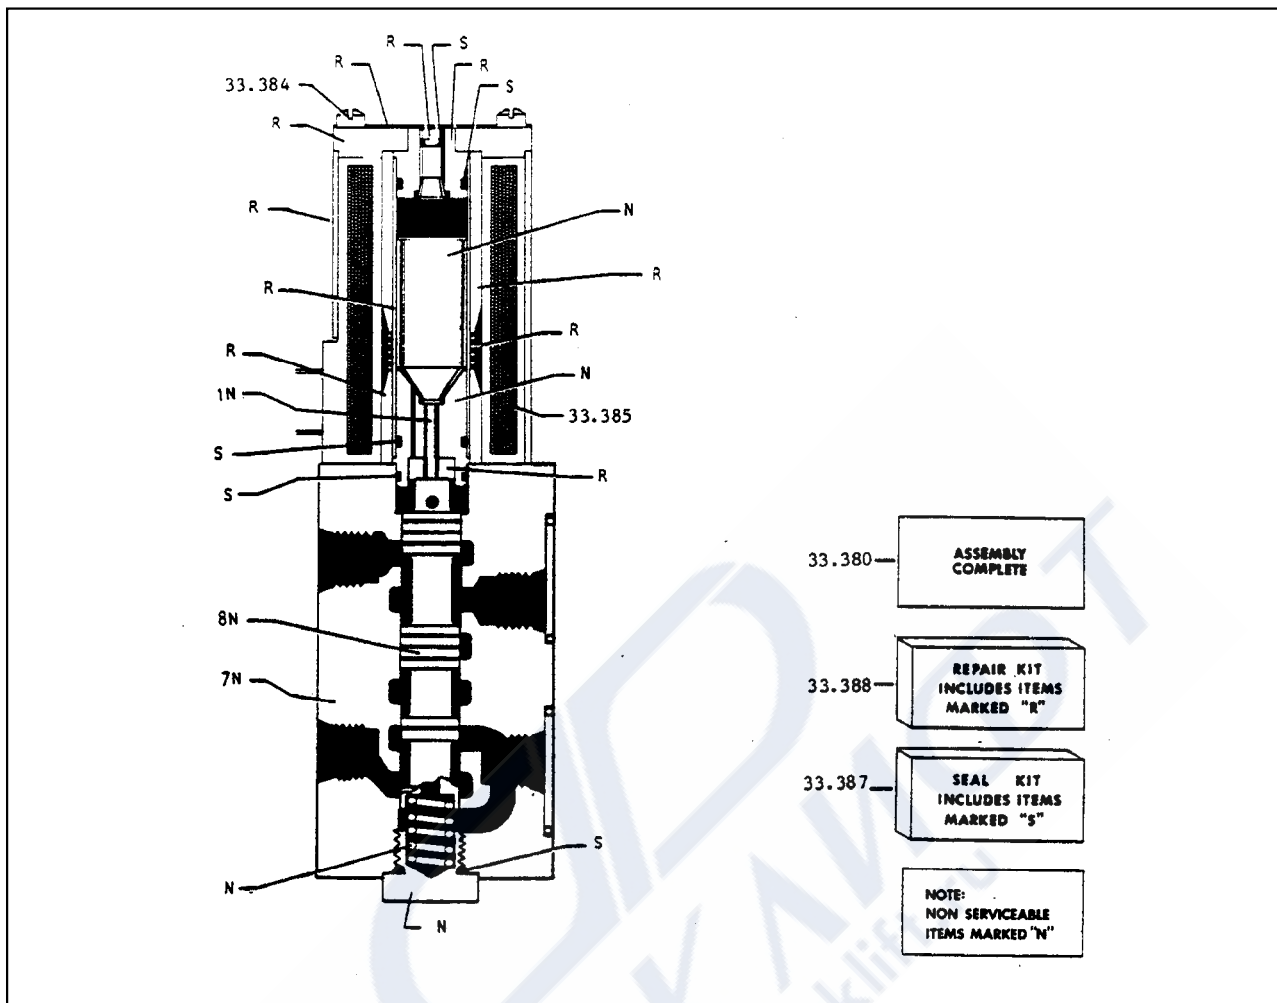 


 - 33.380 VALVE ASSEMBLY, DEVICE SELECTOR SOLENOID
밸브
- 33.384 FASTENER, DEV SELECTOR VALVE SOLENOID COIL
패스너
- 33.385 COIL, DEVICE SELECTOR VALVE SOLENOID
코일
- 33.387 SEAL KIT, DEVICE SELECTOR VALVE
씰키트
- 33.388 REPAIR KIT, DEVICE SELECTOR VALVE
리페어키트

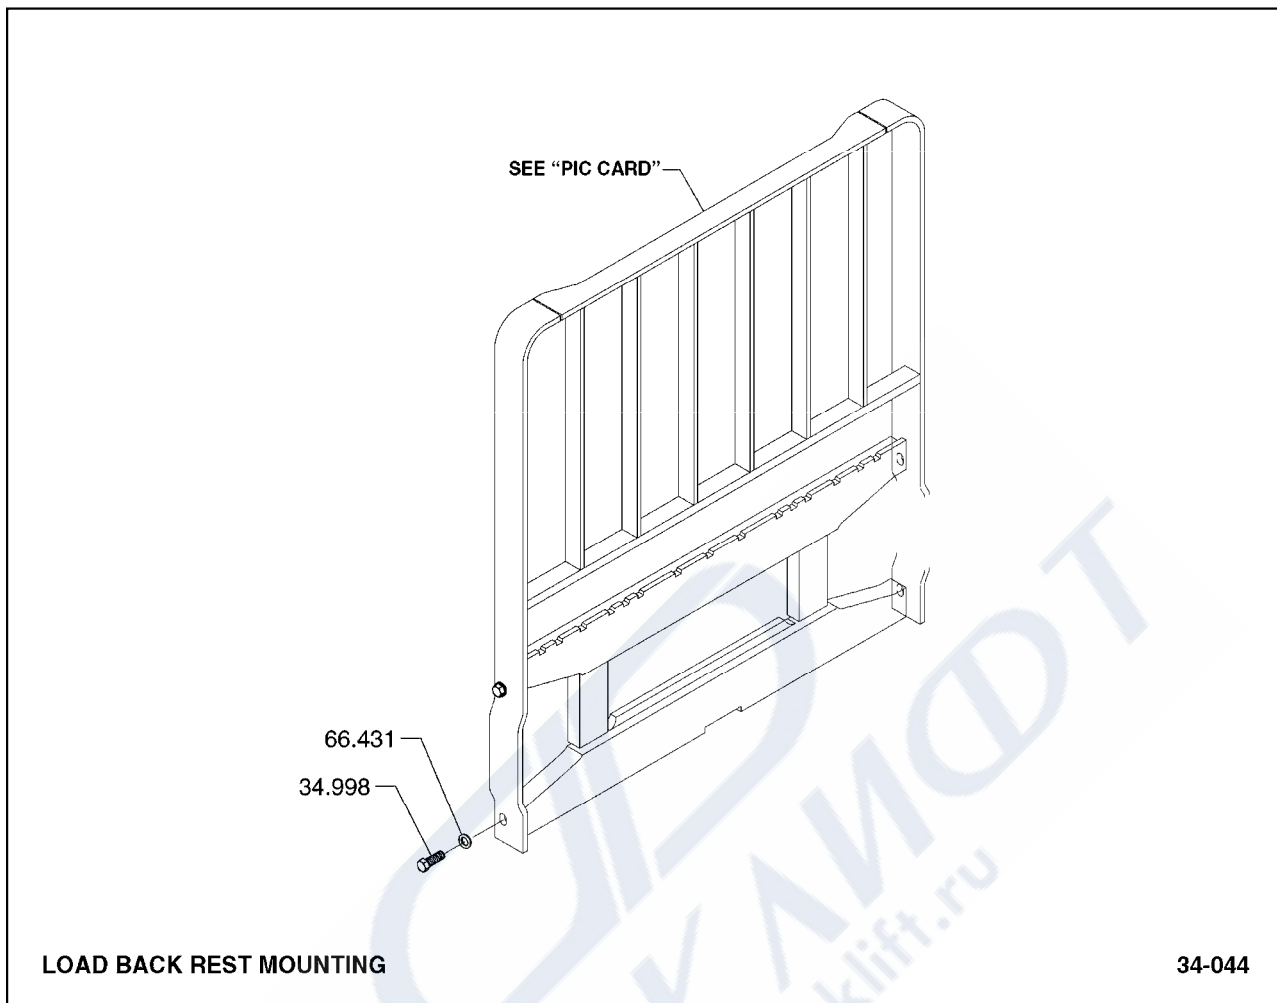

34.998 FASTENER, LOAD SAFETY BACK REST
패스너

 66.431 RETAINER, LBR CAPSCREW
리테이너

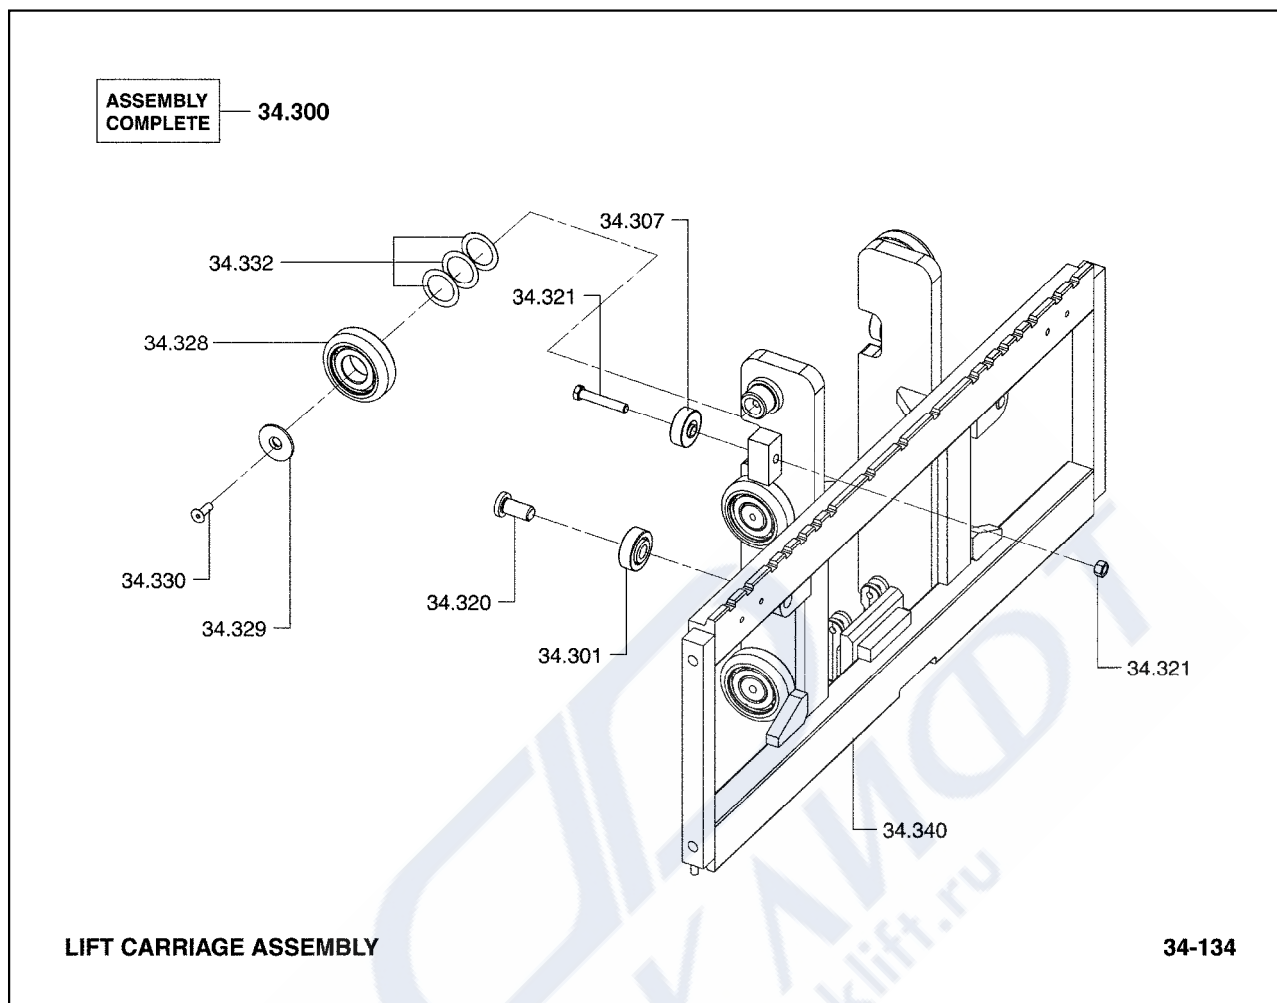

34.300	ASSEMBLY, FORK BARS & CARRIAGE 캐리지
34.301	ROLLER, CARRIAGE OUTER THRUST 롤러
34.307	ROLLER, CARRIAGE INNER THRUST 롤러
34.320	SHAFT, CARRIAGE OUTER THRUST ROLLER 샤프트
34.321	FASTENER, CARRIAGE ROLLER SHAFT 패스너
34.328	ROLLER, CARRIAGE CAPTIVE 롤러
34.329	RETAINER, CARRIAGE CAPTIVE ROLLER 리테이너
34.330	FASTENER, CARRIAGE CAPTIVE ROLLER RETAINER 패스너
34.332	SHIM, CARRIAGE CAPTIVE ROLLER 심

34.340 CARRIAGE WELDED ASSEMBLY
캐리지용 접물




This Carriage assembly was manufactured by the CASCADE CORPORATION and is not serviced by CLARK Material Handling Company.

CASCADE parts manuals, technical specifications and lists of worldwide distributors are available on-line at:

<http://www.cascorp.com>.

When ordering service parts, it will be necessary to provide CASCADE with the CASCADE model and serial numbers of the carriage. CASCADE will not recognize the CLARK carriage part number listed on the PIC or in PartsPRO.

34.300	CARRIAGE ASSEMBLY COMPLETE
34.340	CARRIAGE WELDED ASSEMBLY

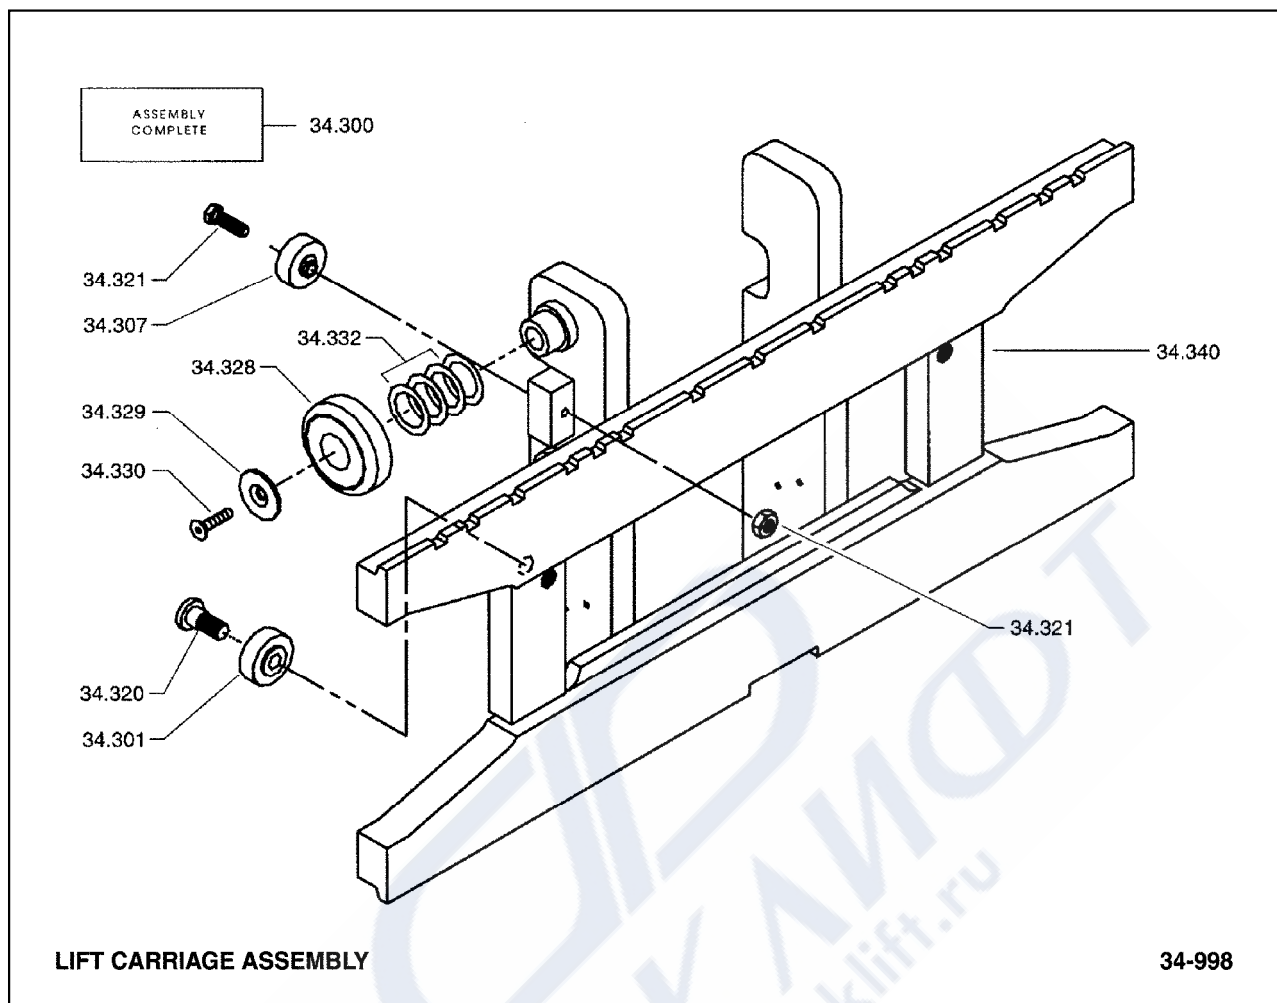 


LIFT CARRIAGE ASSEMBLY

34-998

34.300	ASSEMBLY, FORK BARS & CARRIAGE 캐리지
34.301	ROLLER, CARRIAGE OUTER THRUST 롤러
34.307	ROLLER, CARRIAGE INNER THRUST 롤러
34.320	SHAFT, CARRIAGE OUTER THRUST ROLLER 샤프트
34.321	FASTENER, CARRIAGE ROLLER SHAFT 패스너
34.328	ROLLER, CARRIAGE CAPTIVE 롤러
34.329	RETAINER, CARRIAGE CAPTIVE ROLLER 리테이너
34.330	FASTENER, CARRIAGE CAPTIVE ROLLER RETAINER 패스너
34.332	SHIM, CARRIAGE CAPTIVE ROLLER 심

 34.340 CARRIAGE WELDED ASSEMBLY
캐리지용 접물



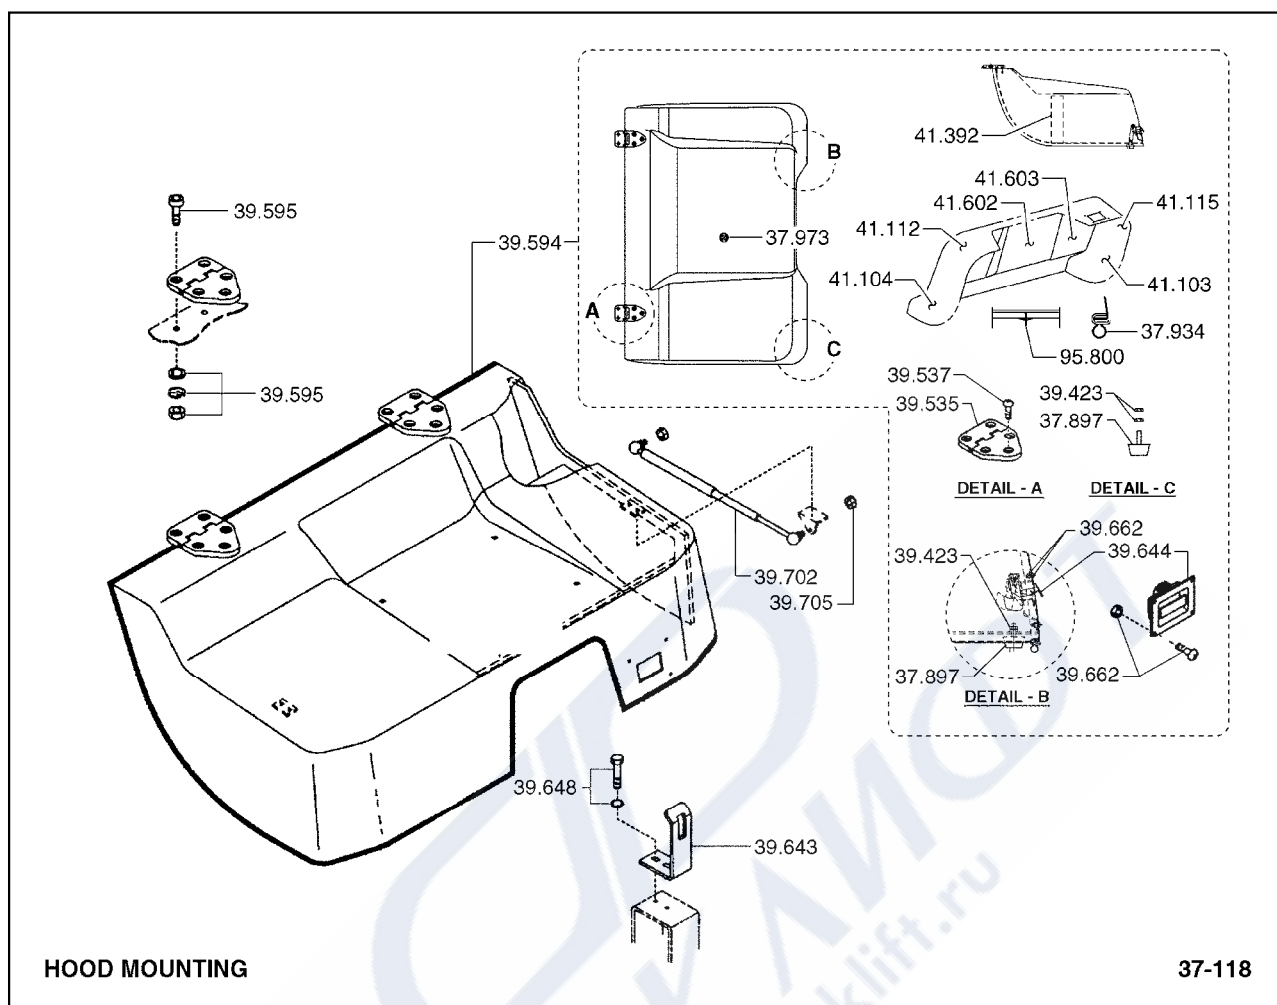


- | | |
|--------|--|
| 37.897 | BUMPER, TOP HOOD
범퍼 |
| 37.934 | SEAL, HOOD ACCESS COVER
씰 |
| 37.973 | GROMMET, SEAT WIRING HARNESS
그로멧 |
| 39.423 | FASTENER, TOP HOOD
패스너 |
| 39.535 | BRACKET, TOP HOOD MOUNTING
브라켓 |
| 39.537 | FASTENER, TOP HOOD MOUNTING BRACKET
패스너 |
| 39.594 | HOOD, TOP
후드 |
| 39.595 | FASTENER, TOP HOOD
패스너 |
| 39.643 | CATCH, TOP HOOD LATCH
캐치 |

39.644	LATCH, TOP HOOD 래치
39.648	FASTENER, TOP HOOD LATCH CATCH 패스너
39.662	FASTENER, TOP HOOD LATCH BRACKET 패스너
39.702	PROP, HOOD 지지대
39.705	FASTENER, HOOD PROP 패스너
41.103	BACKING PLATE, FILLER OPENING SOUND SEAL 백킹플레이트
41.104	SOUND SEAL, RH SIDE HOOD 사운드씰
41.112	SOUND SEAL, RH SIDE HOOD FRONT 사운드씰
41.115	SCUFF PLATE, FLOOR PAD 스커프플레이트
41.392	SOUND SEAL, TOP HOOD 사운드씰
41.602	SOUND SEAL, ENGINE HOOD 사운드씰
41.603	SOUND SEAL, ENGINE HOOD 사운드씰
95.800	FASTENER, SOUND SEAL 패스너



 
www.forklift.ru

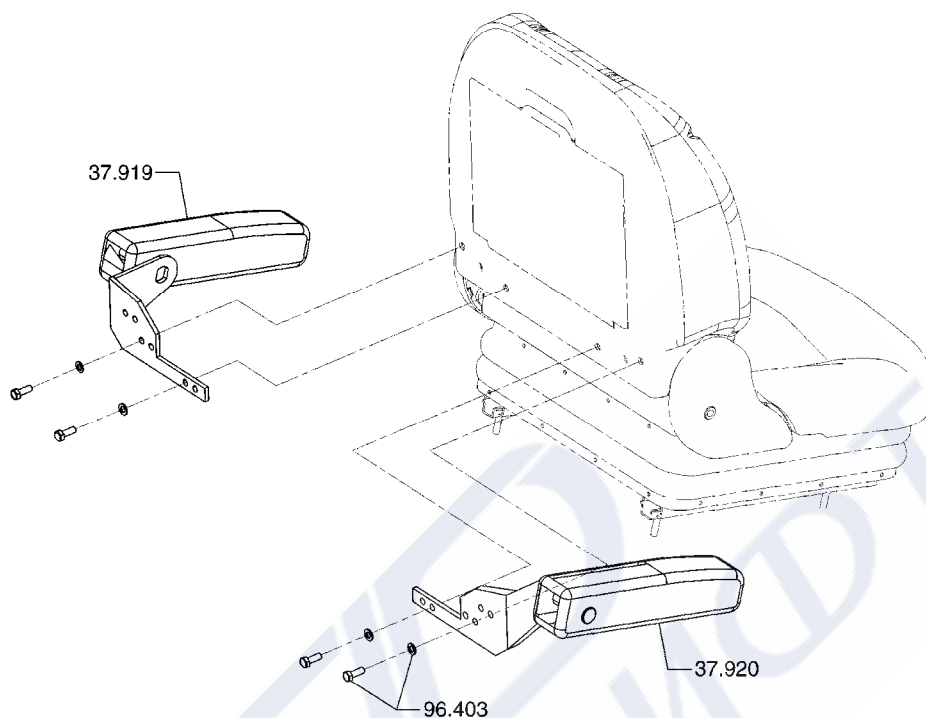

SEAT ARMREST ASSEMBLY

37-124



- | | |
|--------|---------------------------------------|
| 37.919 | ARMREST LH, SEAT
암레스트 |
| 37.920 | ARMREST RH, SEAT
암레스트 |
| 96.403 | FASTENER, SEAT ARMREST BRACKET
패스너 |

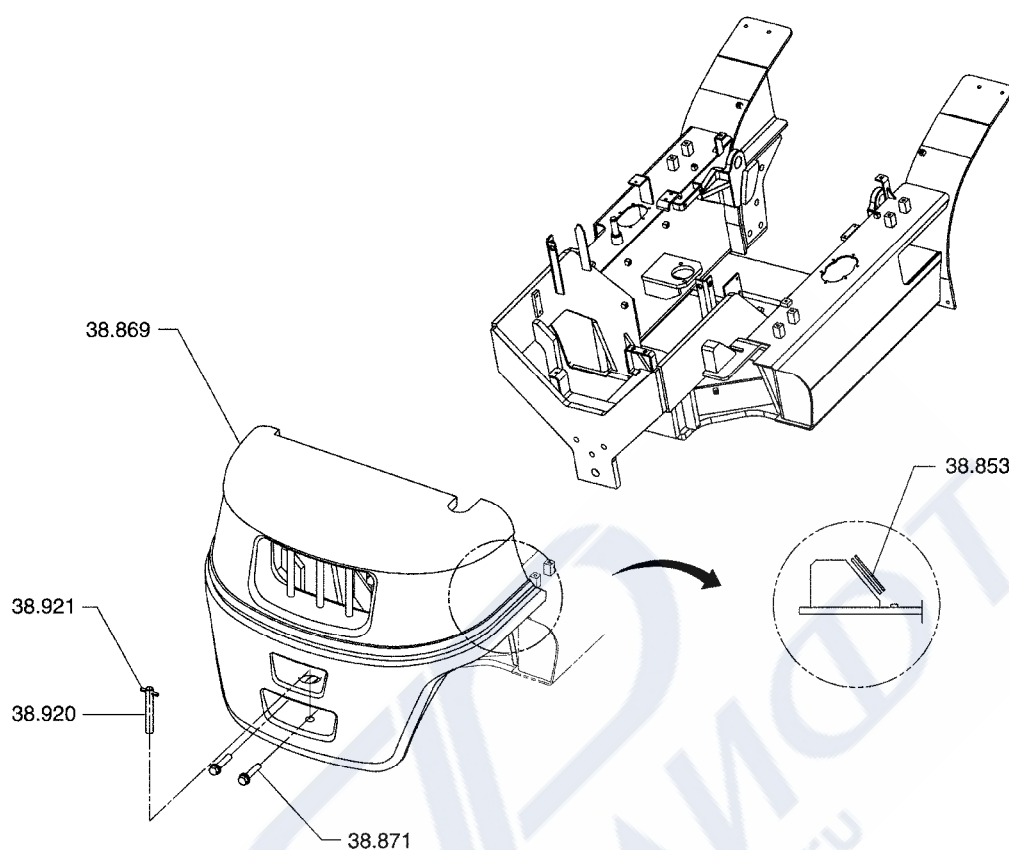 

COUNTERWEIGHT MOUNTING

38-113


- | | |
|--------|--|
| 38.853 | SHIM, COUNTERWEIGHT
심 |
| 38.869 | COUNTERWEIGHT
카운터웨이트 |
| 38.871 | FASTENER, COUNTERWEIGHT (UPPER) CONTINUED
패스너 |
| 38.920 | PIN, COUPLER
핀 |
| 38.921 | PIN, COUPLER PIN CROSS
핀 |

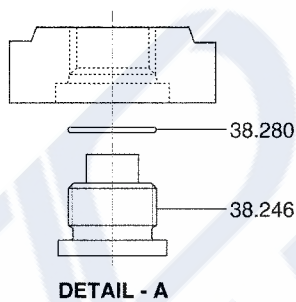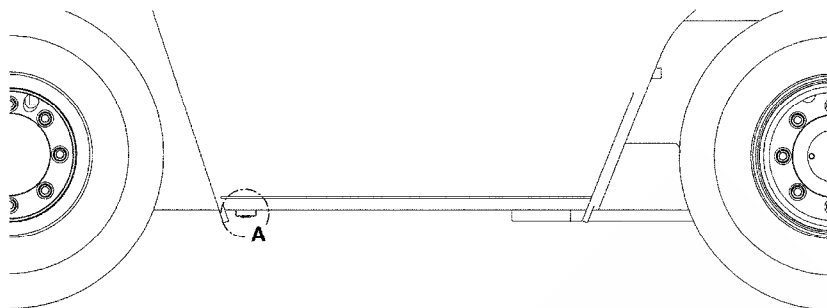  

FRAME TANK BOTTOM PLUG


38-270

- | | |
|--------|---------------------------------------|
| 38.246 | PLUG, FRAME BOTTOM MAGNETIC
플러그 |
| 38.280 | SEAL, FRAME BOTTOM MAGNETIC PLUG
씰 |

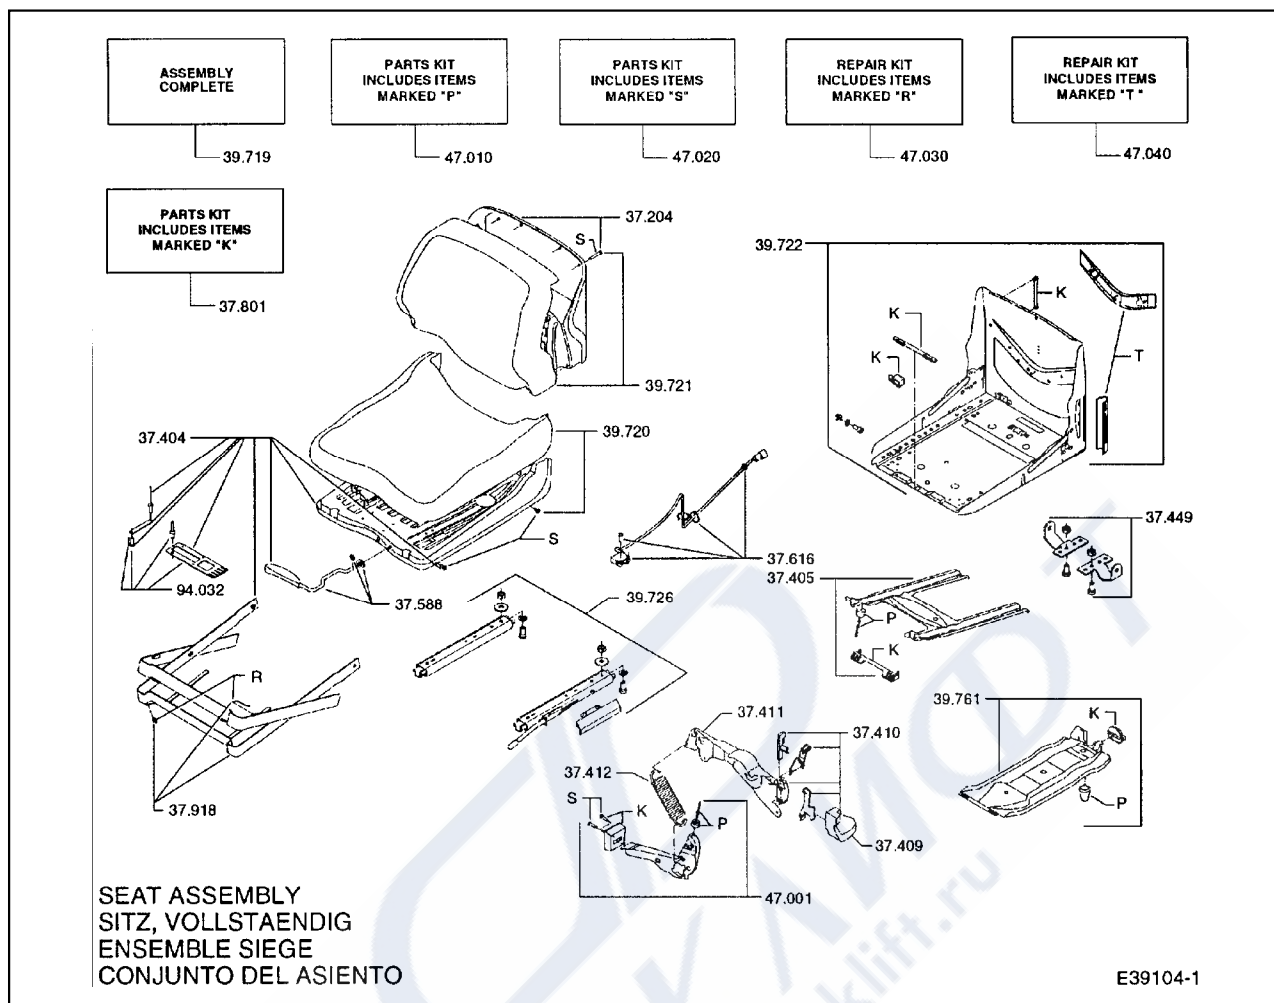 


- | | |
|--------|---|
| 37.204 | COVER, SEAT BACK REST CUSHION
커버 |
| 37.404 | BASE, SEAT FRAME
베이스 |
| 37.405 | TRIM, SEAT MOUNTING PLATE
트림 |
| 37.409 | HANDLE, SEAT CUSHION TENSION ADJUSTOR LEVER
핸들 |
| 37.410 | LEVER, SEAT CUSHION TENSION ADJUSTOR
레버 |
| 37.411 | ADJUSTOR, SEAT CUSHION TENSION
어드저스터 |
| 37.412 | SPRING, SEAT SUSPENSION TENSION
스프링 |
| 37.449 | BRACKET, SEAT SAFETY BELT MOUNTING
브라켓 |
| 37.588 | LEVER, SEAT CUSHION ADJUSTING
레버 |

37.616	SWITCH, SEAT 스위치
37.801	KIT WEARING PARTS, SEAT ASSEMBLY 키트
37.918	SUSPENSION ASSEMBLY, SEAT 서스펜션
39.719	SEAT ASSEMBLY 시트
39.720	CUSHION, SEAT 쿠션
39.721	CUSHION, SEAT BACK REST 쿠션
39.722	FRAME ASSEMBLY, SEAT 프레임
39.726	ADJUSTOR, SEAT 어드저스터
39.761	PLATE, SEAT CUSHION MOUNTING 플레이트
47.001	ADJUSTOR, SEAT CUSHION TENSION 어드저스터
47.010	KIT WEARING PARTS, SEAT ASSY 키트
47.020	SHAFT, SEAT STOP MOUNTING 샤프트
47.030	REPAIR KIT, SEAT ASSEMBLY 리페어키트
47.040	REPAIR KIT, SEAT ASSEMBLY 리페어키트
94.032	RETAINER, SEAT FRAME 리테이너

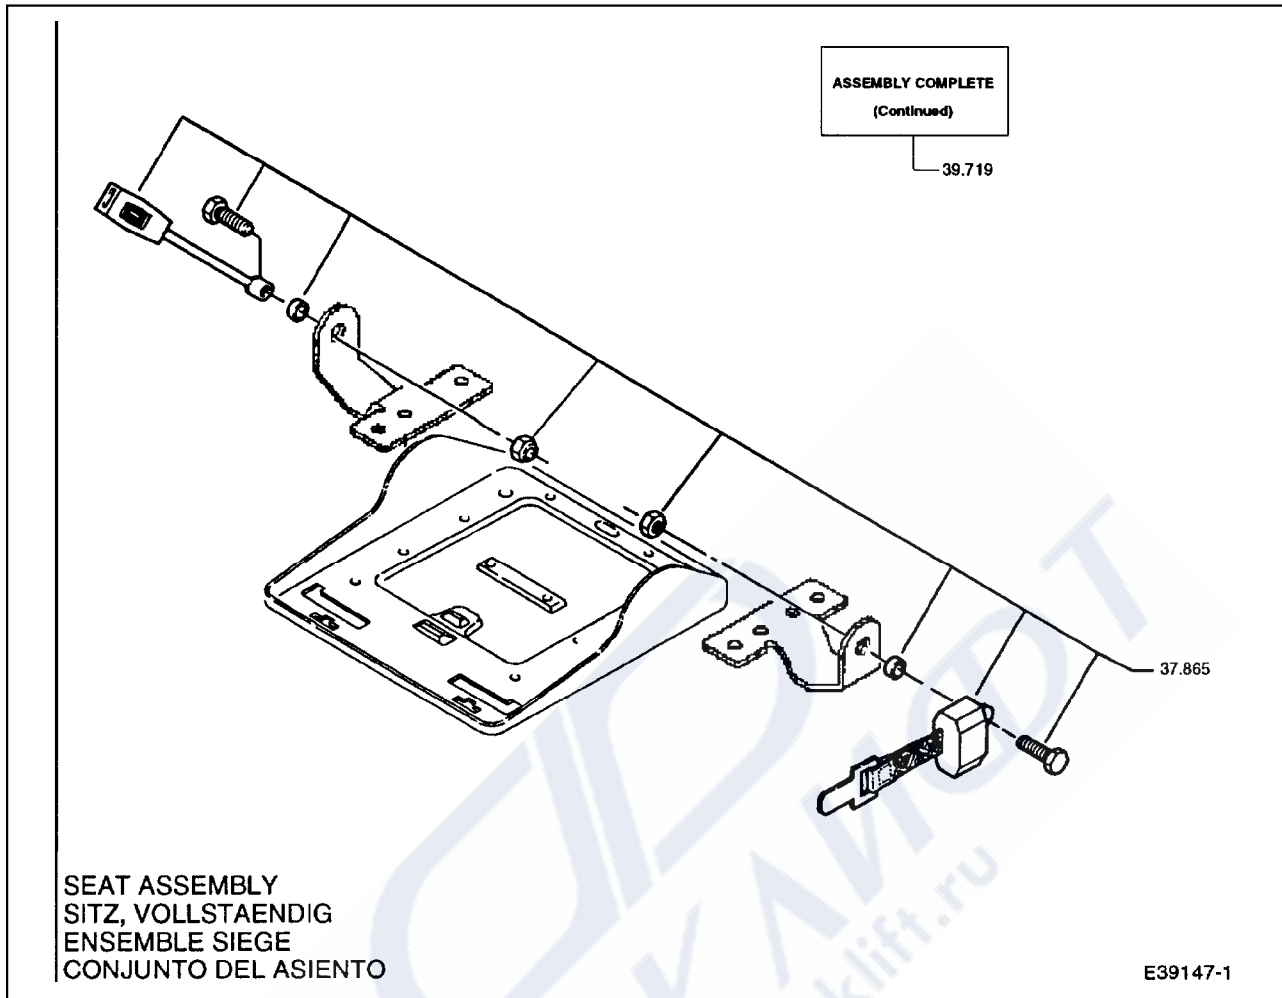 


37.865 FASTENER KIT, SEAT SAFETY BELT
패스너키트

 
39.719 SEAT ASSEMBLY
시트

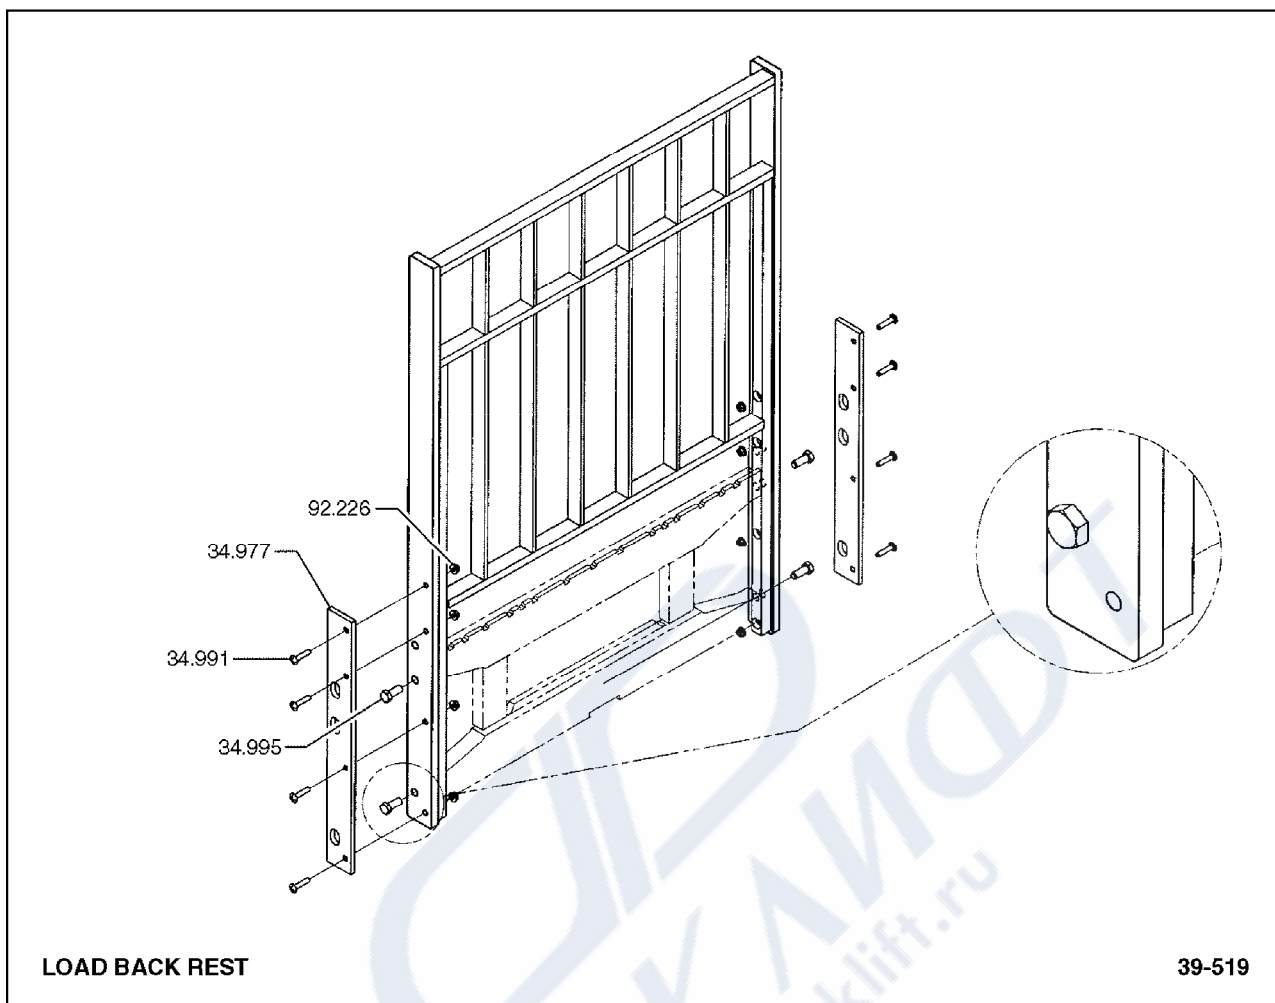

- | | |
|--------|---|
| 34.977 | RETAINER, LOAD BACK REST TRUNNION PIN
리테이너 |
| 34.991 | FASTENER, LOAD SAFETY BACK REST EXT
패스너 |
| 34.995 | FASTENER, LOAD SAFETY BACK REST
패스너 |
| 92.226 | NUT, LOAD SAFETY BACK REST FASTENER
너트 |

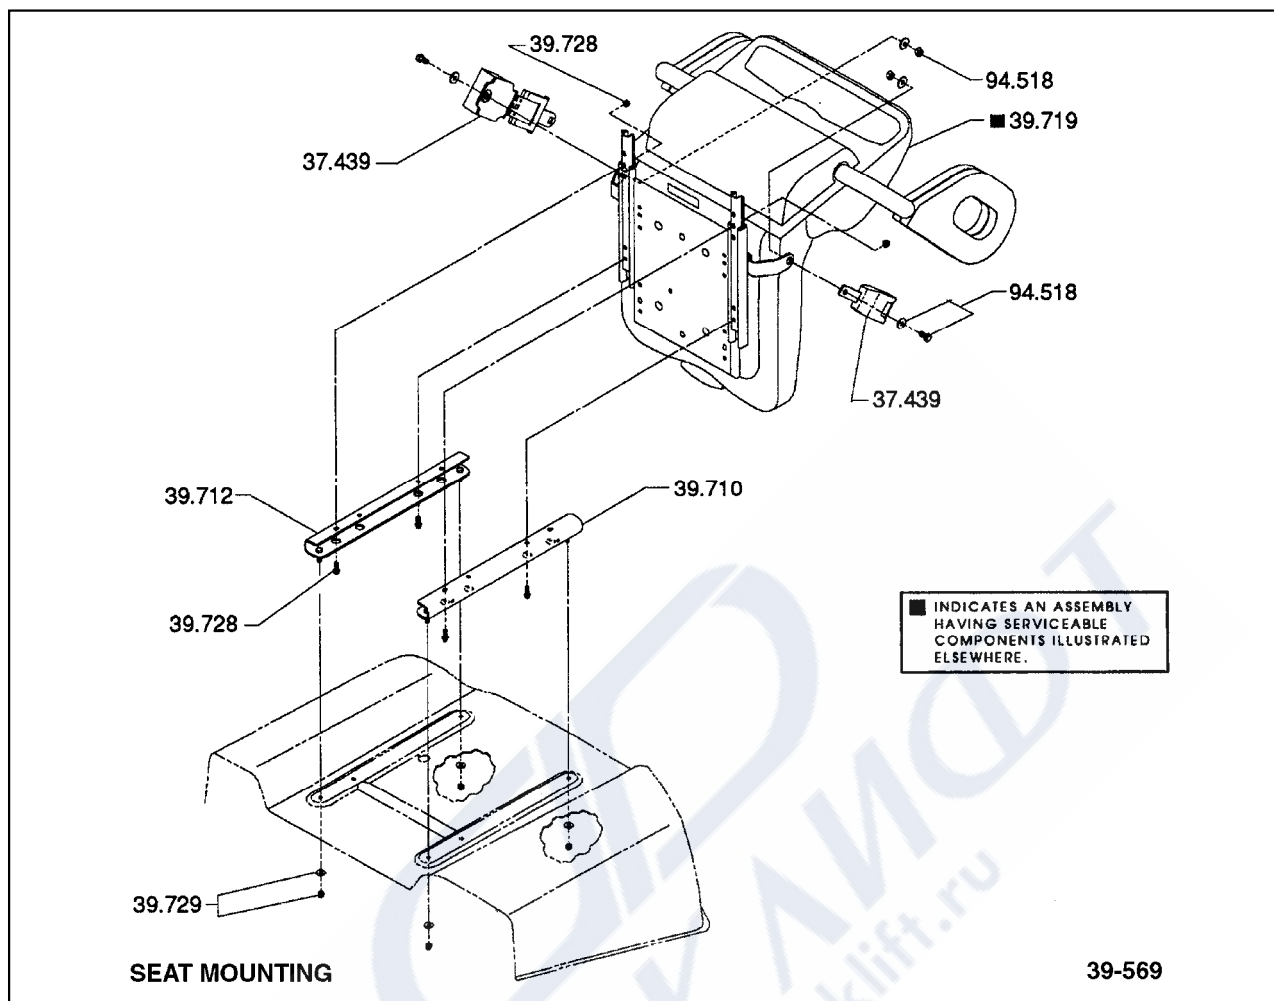 


37.439	SAFETY BELT, SEAT 안전벨트
39.710	SUPPORT, SEAT ADJUSTOR (RH) 서포트
39.712	SUPPORT, SEAT ADJUSTOR (LH) 서포트
39.719	SEAT ASSEMBLY 시트
39.728	FASTENER, SEAT FRAME TO ADJUSTOR 패스너
39.729	FASTENER, ADJUSTOR TO SEAT SUPPORT 패스너
94.518	FASTENER, SEAT SAFETY BELT 패스너

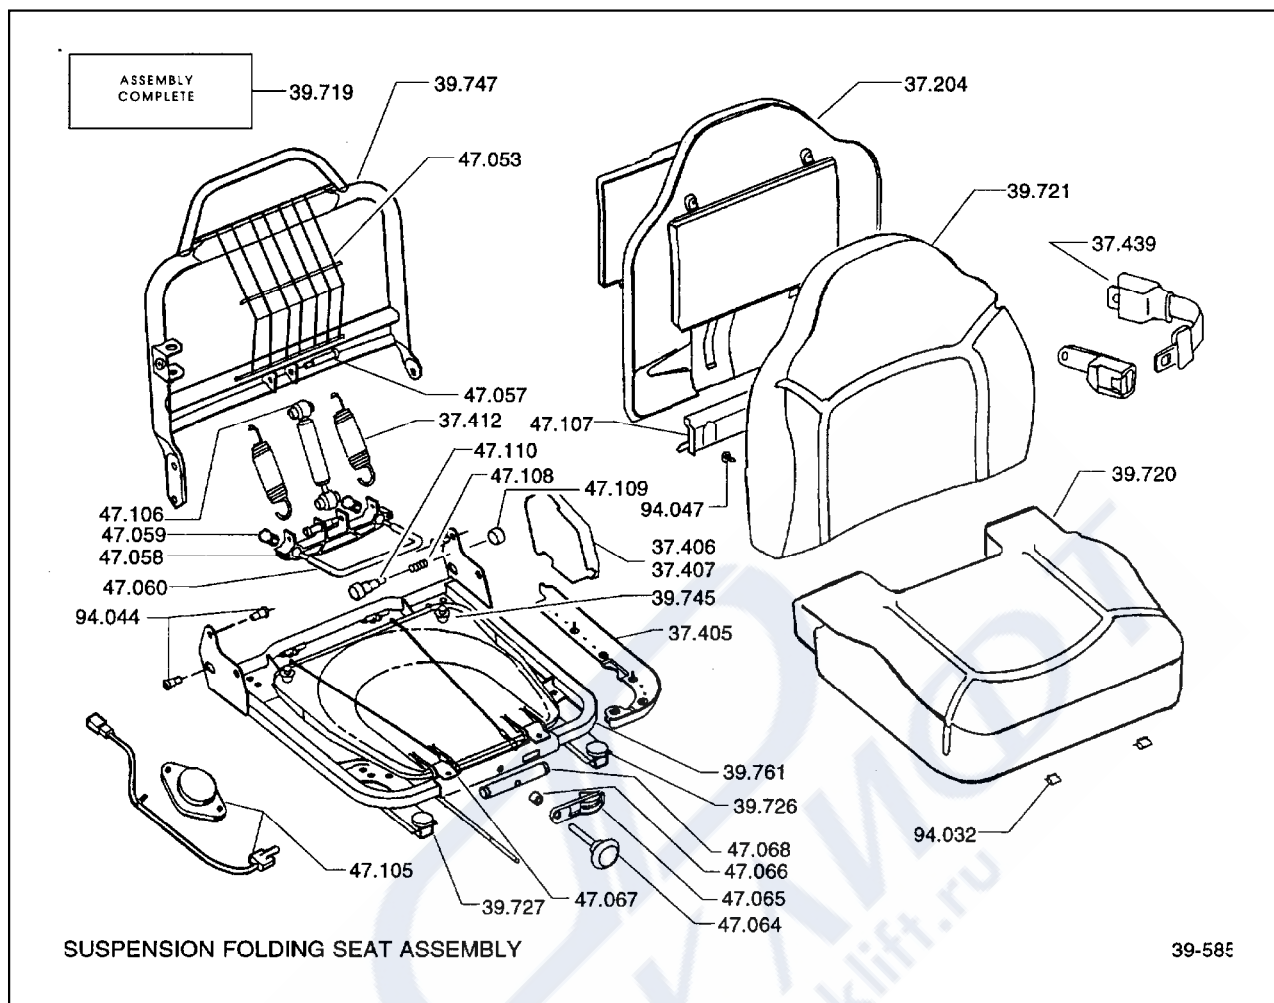 

37.204	COVER, SEAT BACK REST CUSHION 커버	47.057	PIN, BACK FRAME SHOCK 핀
37.405	TRIM, SEAT MOUNTING PLATE 트림	47.058	SADDLE SPRING, SPRING ARM 새들스프링
37.406	BRACKET, SEAT BACK REST COVER LH 브라켓	47.059	SADDLE BUSHING, SPRING ARM 새들부싱
37.407	BRACKET, SEAT BACK REST COVER RH 브라켓	47.060	SPRING ARM, SUSPENSION SEAT 스프링암
37.412	SPRING, SEAT SUSPENSION TENSION 스프링	47.064	KNOB, SEAT ASSEMBLY WEIGHT ADJUSTER 노브
37.439	SAFETY BELT, SEAT 안전벨트	47.065	WEIGHT INDICATOR ASSEMBLY 웨이트인디케이터
39.719	SEAT ASSEMBLY 시트	47.066	SPACER, SEAT ASSEMBLY WEIGHT ADJUST SCREW 스페이서
39.720	CUSHION, SEAT 쿠션	47.067	CLIP, FRONT SEAT FRAME 클립
39.721	CUSHION, SEAT BACK REST 쿠션	47.068	BAR, WEIGHT ADJUSTER 바
39.726	ADJUSTOR, SEAT 어드저스터	47.105	SWITCH KIT, SEAT 스위치키트
39.727	ADJUSTOR, SEAT WITH LATCH 어드저스터	47.106	SHOCK ABSORBER, SUSPENSION SEAT 쇼크업쇼버
39.745	BUMPER, SEAT SUPPORT 범퍼	47.107	COVER, MECHANISM 커버
39.747	PLATE, SEAT BACK REST CUSHION MOUNTING 플레이트	47.108	SPRING, SEAT ASSEMBLY PLUNGER 스프링
39.761	PLATE, SEAT CUSHION MOUNTING 플레이트	47.109	KNOB, FOLD DOWN SEAT 노브
47.053	LUMBAR FLEXOLATOR 롬바	47.110	PLUNGER, FOLD DOWN SEAT 플런저


94.032	RETAINER, SEAT FRAME 리테이너
94.044	FASTENER, SEAT CUSHION MOUNTING PLATE 패스너
94.047	FASTENER, SEAT BACK REST CUSHION 패스너



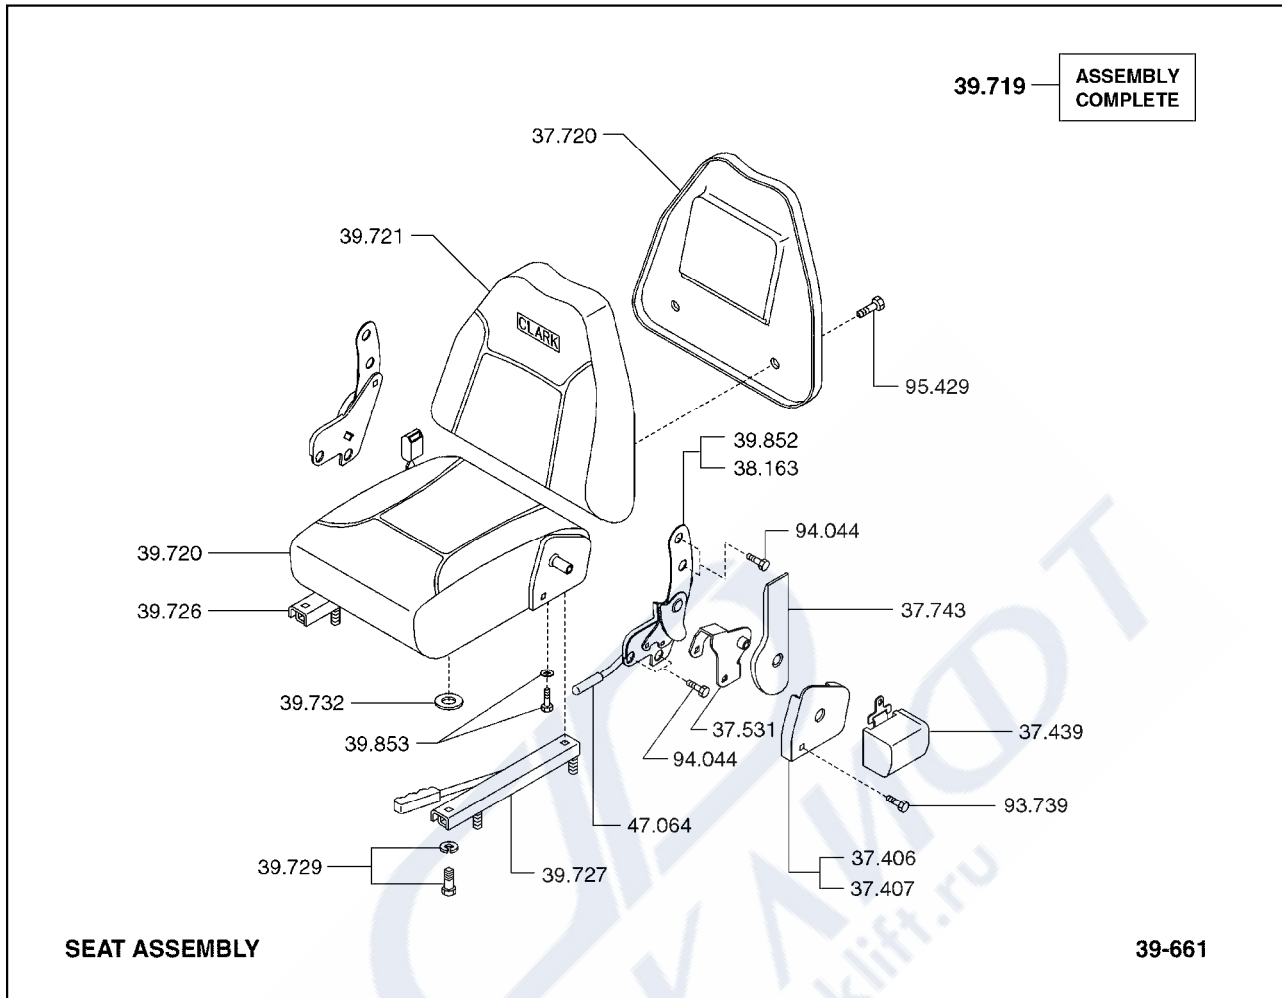 


37.406	BRACKET, SEAT BACK REST COVER LH 브라켓
37.407	BRACKET, SEAT BACK REST COVER RH 브라켓
37.439	SAFETY BELT, SEAT 안전벨트
37.531	BRACKET, SEAT SAFETY BELT MOUNTING 브라켓
37.720	COVER, OPERATOR SEAT LATERAL RESTRAINT 커버
37.743	COVER, SEAT SUPPORT LATCH 커버
38.163	BRACKET, SEAT SUPPORT RH 브라켓
39.719	SEAT ASSEMBLY 시트
39.720	CUSHION, SEAT 쿠션

39.721	CUSHION, SEAT BACK REST 쿠션
39.726	ADJUSTOR, SEAT 어드저스터
39.727	ADJUSTOR, SEAT WITH LATCH 어드저스터
39.729	FASTENER, ADJUSTOR TO SEAT SUPPORT 패스너
39.732	SPACER, SEAT FRAME TO ADJUSTOR 스페이서
39.852	BRACKET, SEAT SUPPORT LH 브라켓
39.853	FASTENER, SEAT SUPPORT BRACKET 패스너
47.064	KNOB, SEAT ASSEMBLY WEIGHT ADJUSTER 노브
93.739	FASTENER, SAFETY BELT ASSEMBLY 패스너
94.044	FASTENER, SEAT CUSHION MOUNTING PLATE 패스너
95.429	FASTENER, SEAT LATERAL RESTRAINT COVER 패스너

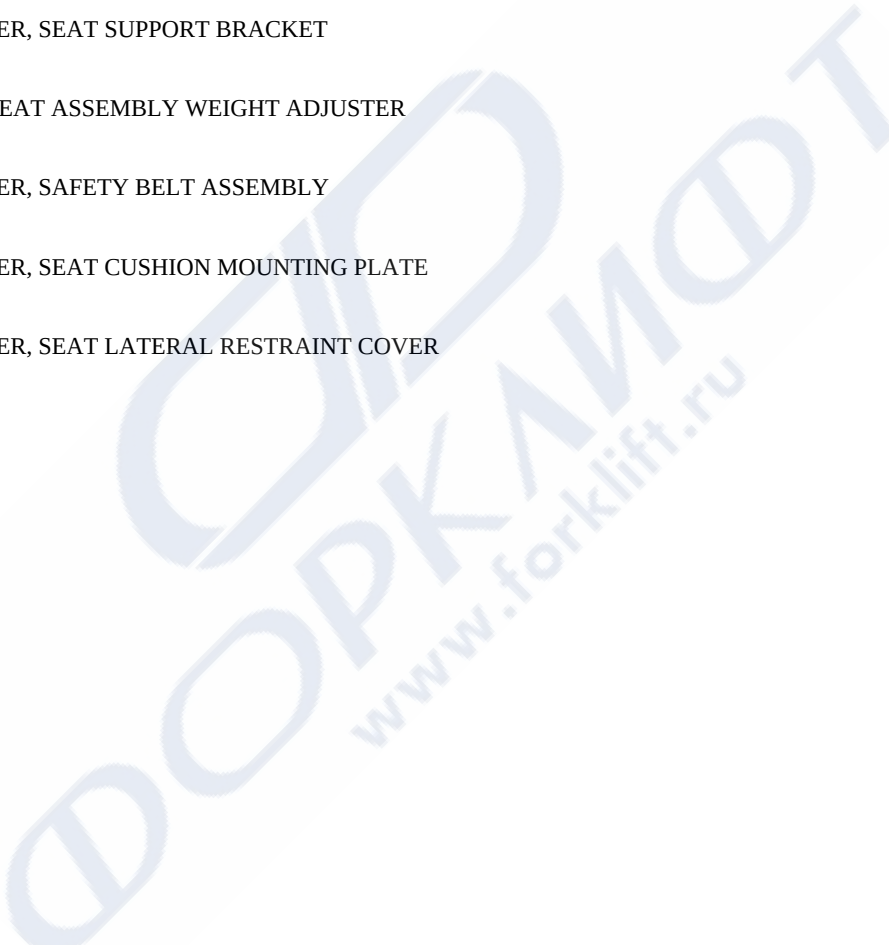 

 
■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

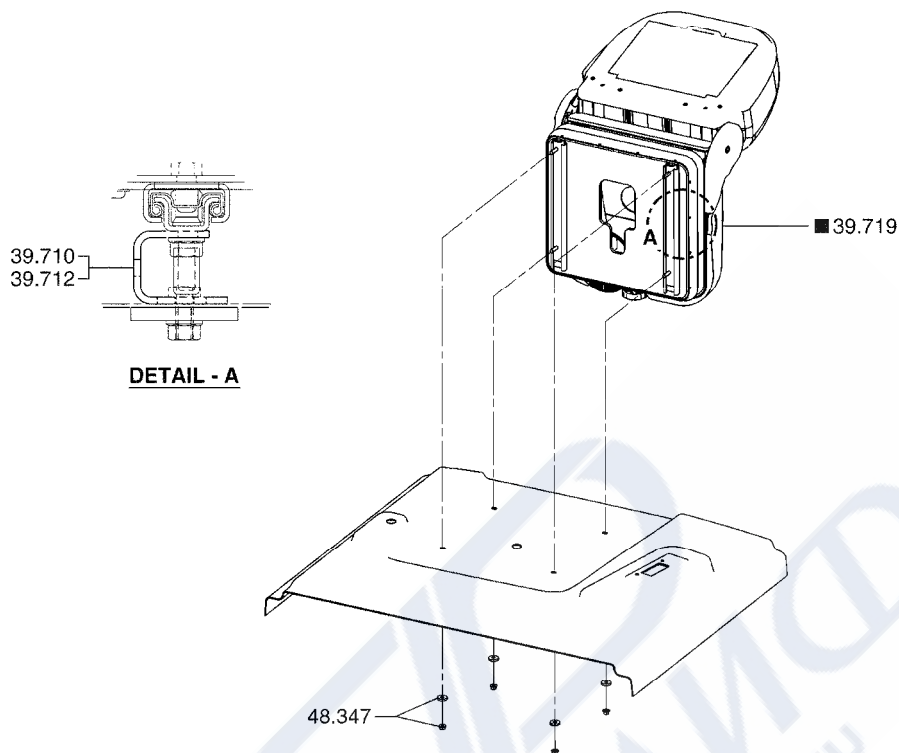

SEAT MOUNTING


39-771


39.710	SUPPORT, SEAT ADJUSTOR (RH) 서포트
39.712	SUPPORT, SEAT ADJUSTOR (LH) 서포트
39.719	SEAT ASSEMBLY 시트
48.347	FASTENER, SEAT ASSEMBLY 패스너

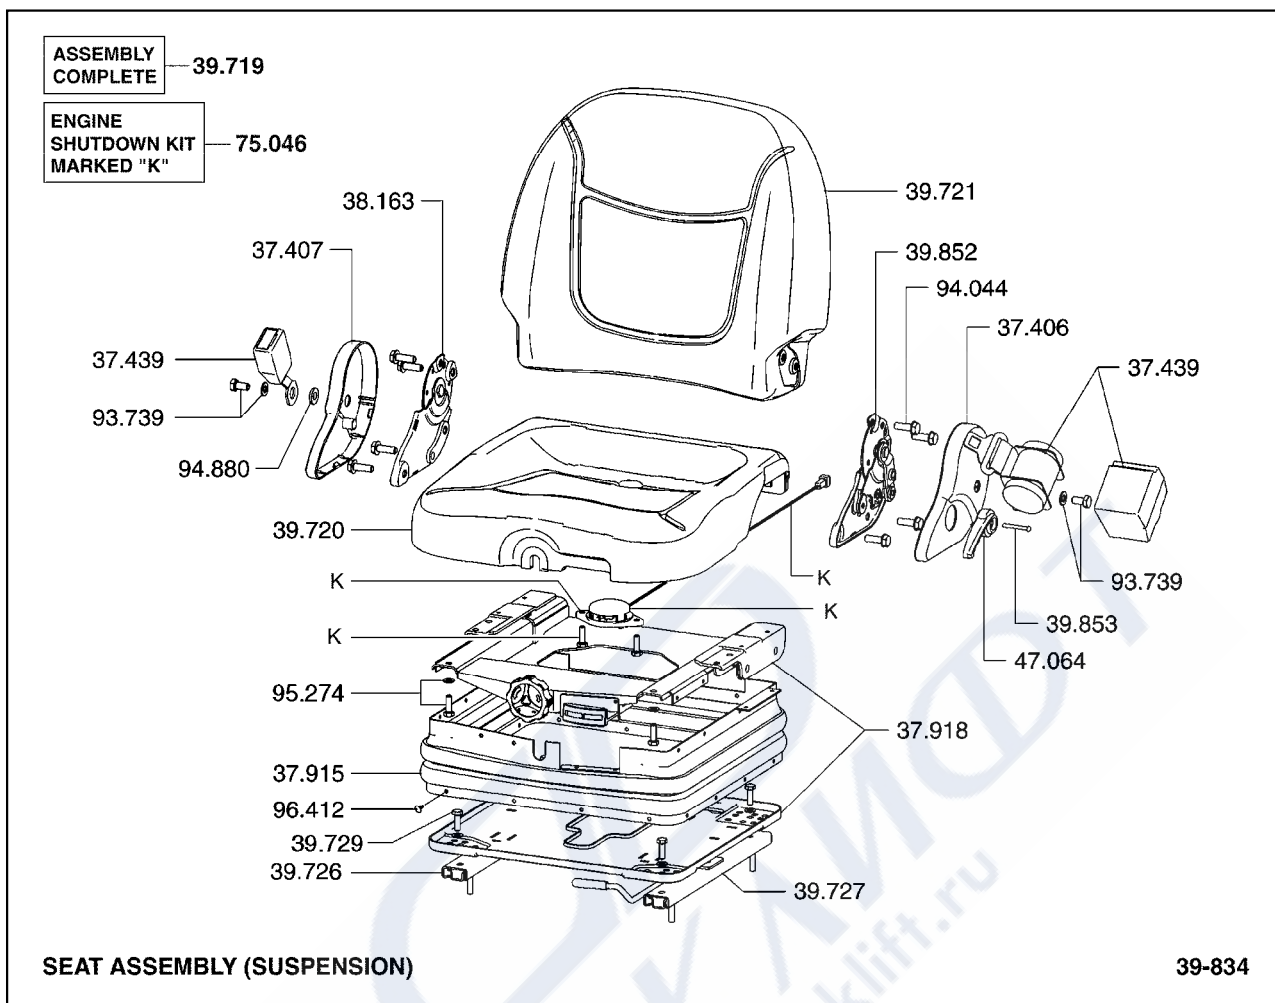 

37.406	BRACKET, SEAT BACK REST COVER LH 브라켓
37.407	BRACKET, SEAT BACK REST COVER RH 브라켓
37.439	SAFETY BELT, SEAT 안전벨트
37.915	SUSPENSION COVER, SEAT SUSPENSION 서스펜션커버
37.918	SUSPENSION ASSEMBLY, SEAT 서스펜션
38.163	BRACKET, SEAT SUPPORT RH 브라켓
39.719	SEAT ASSEMBLY 시트
39.720	CUSHION, SEAT 쿠션
39.721	CUSHION, SEAT BACK REST 쿠션

39.726	ADJUSTOR, SEAT 어드저스터
39.727	ADJUSTOR, SEAT WITH LATCH 어드저스터
39.729	FASTENER, ADJUSTOR TO SEAT SUPPORT 패스너
39.852	BRACKET, SEAT SUPPORT LH 브라켓
39.853	FASTENER, SEAT SUPPORT BRACKET 패스너
47.064	KNOB, SEAT ASSEMBLY WEIGHT ADJUSTER 노브
75.046	KIT, SEAT ACTUATED ENGINE SHUTDOWN 키트
93.739	FASTENER, SAFETY BELT ASSEMBLY 패스너
94.044	FASTENER, SEAT CUSHION MOUNTING PLATE 패스너
94.880	FASTENER, SEAT SUPPORT CATCH BRACKET 패스너
95.274	FASTENER, SEAT CUSHION SUSPENSION SUPPORT 패스너
96.412	FASTENER, SEAT SUSPENSION BACK SIDE COVER 패스너

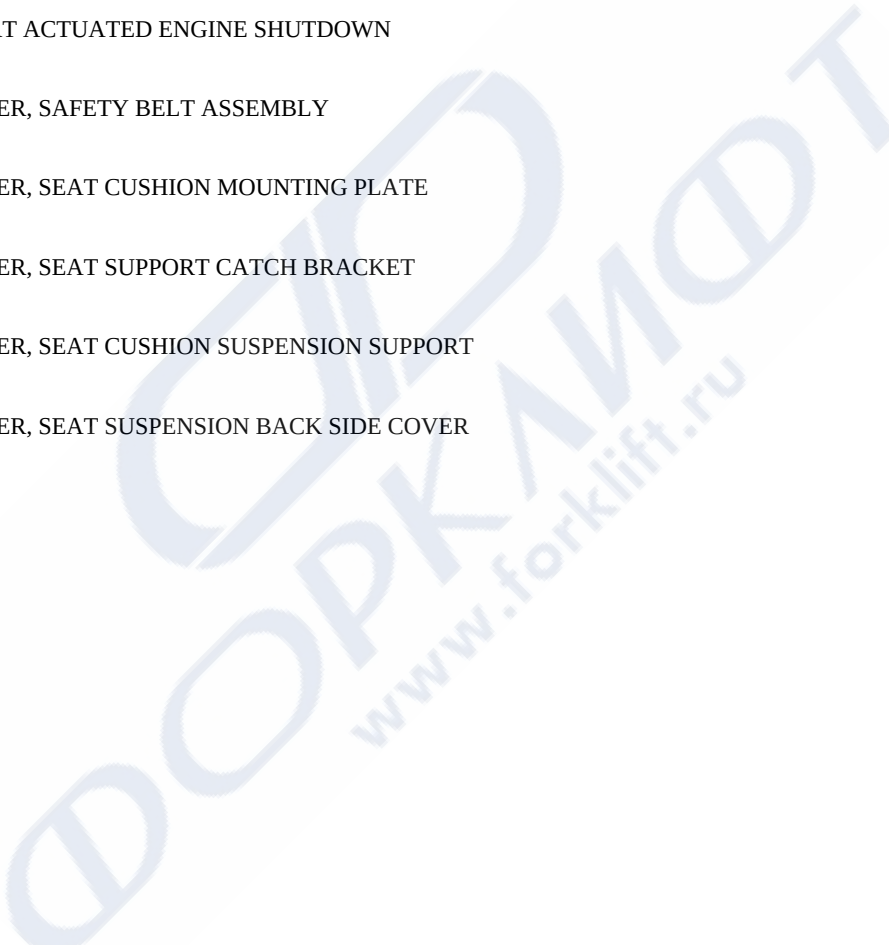 

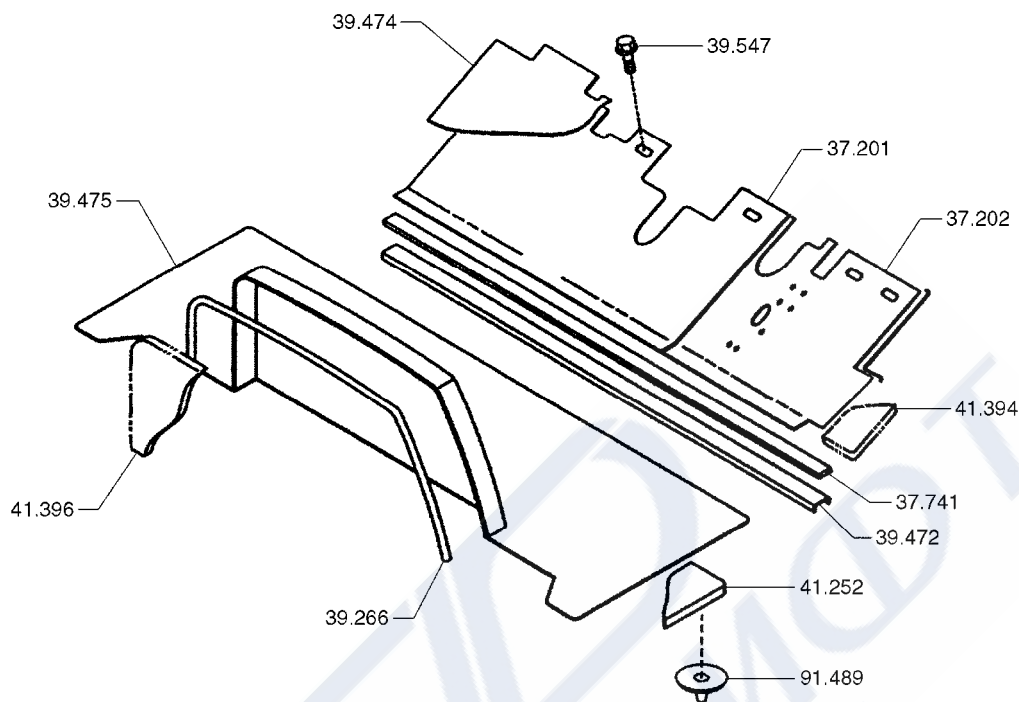 


FLOOR PLATE MOUNTING

39-912

37.201	PANEL, LH SIDE 판넬
37.202	PANEL, RH SIDE 판넬
37.741	SOUND ABSORBER, FLOOR PLATE 흡음재
39.266	WEATHERSEAL, CENTER FLOOR PLATE 웨더셀
39.472	PLATE, FRONT FLOOR LH 플레이트
39.474	PAD, FLOOR BOARD NON-SLIP 패드
39.475	PLATE, FRONT FLOOR 플레이트
39.547	FASTENER, COWL ASSEMBLY 패스너
41.252	SOUND SEAL, FLOOR PLATE FRONT 사운드셀


41.394	SOUND ABSORBER, FLOOR PLATE - REAR 흡음재
41.396	SOUND ABSORBER, SEAT SUPPORT PANEL 흡음재
91.489	FASTENER, FLOOR PLATE 패스너



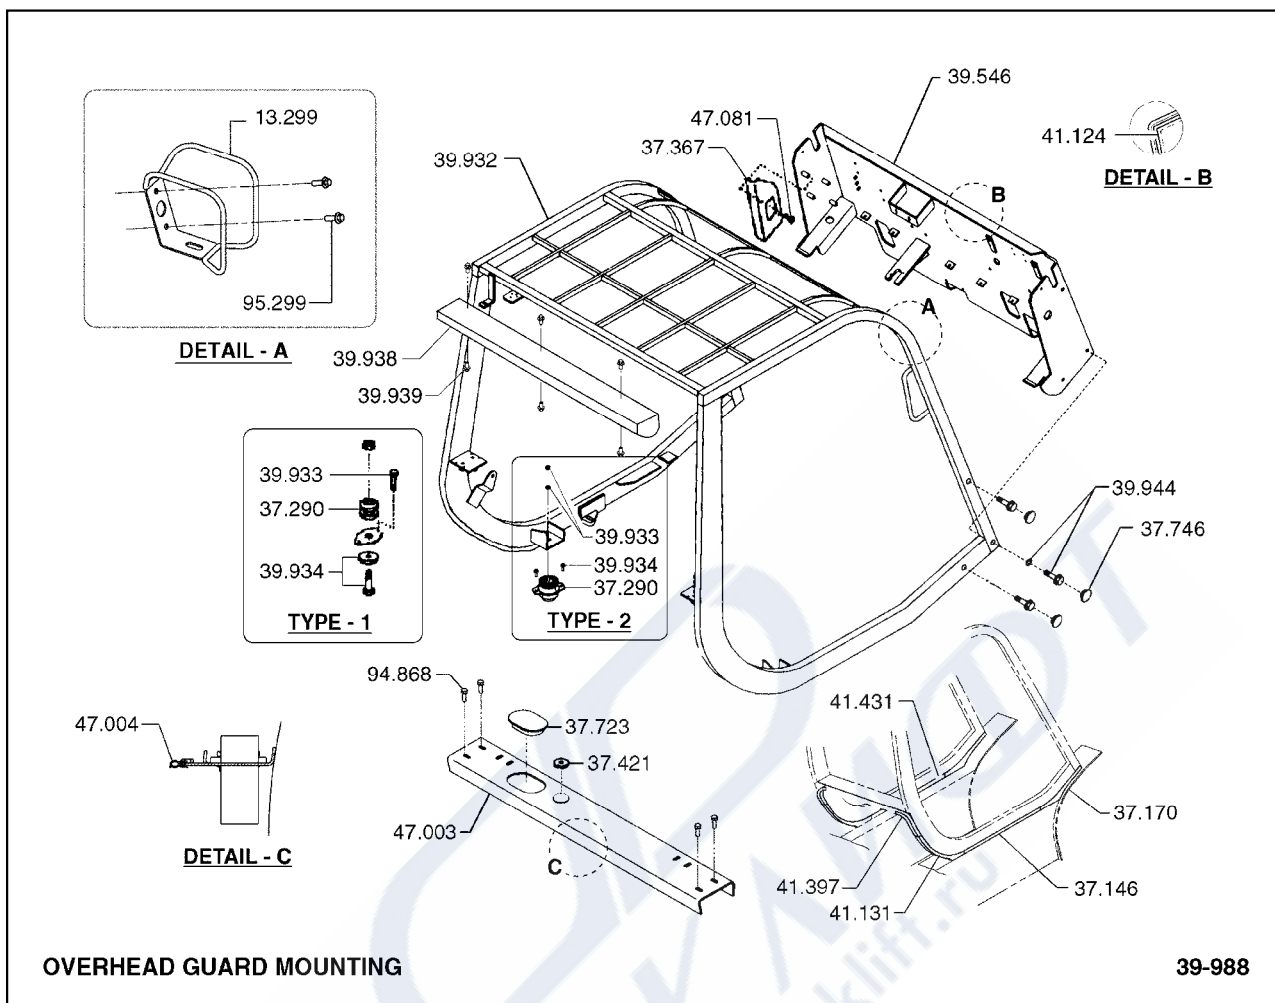 

13.299	GUARD, HEADLIGHT 가드
37.146	SOUND ABSORBER, OVERHEAD GUARD 흡음재
37.170	SOUND ABSORBER, FRONT SIDE PANEL 흡음재
37.290	DAMPENER, OVERHEAD GUARD VIBRATION 댐프너
37.367	FILLER, COWL (LH) 필러
37.421	GROMMET, OVERHEAD GUARD REAR SUPPORT PIVOT 그로멧
37.723	PLUG, RADIATOR COVER HOLE 플러그
37.746	PLUG, DRIVER OVERHEAD GUARD 플러그
39.546	COWL ASSEMBLY 카울

39.932	GUARD, OVERHEAD 가드
39.933	FASTENER, OVERHEAD GUARD 패스너
39.934	FASTENER, OVERHEAD GUARD 패스너
39.938	BRACKET, OVERHEAD GUARD REAR SUPPORT 브라켓
39.939	FASTENER, OVERHEAD GUARD REAR SUPPORT BRACKET 패스너
39.944	FASTENER, OVERHEAD GUARD BRACKET 패스너
41.124	SOUND ABSORBER, COWL 흡음재
41.131	SOUND ABSORBER, LOWER REAR PANEL 흡음재
41.397	SOUND ABSORBER, RADIATOR COVER 흡음재
41.431	SOUND SEAL, FRAME UPPER LH 사운드씰
47.003	COVER, RADIATOR 커버
47.004	SEAL, RADIATOR COVER 씰
47.081	FASTENER, COWL COVER MOUNTING BRACKET 패스너
94.868	FASTENER, RADIATOR SUPPORT 패스너
95.299	FASTENER, HEADLAMP GUARD 패스너

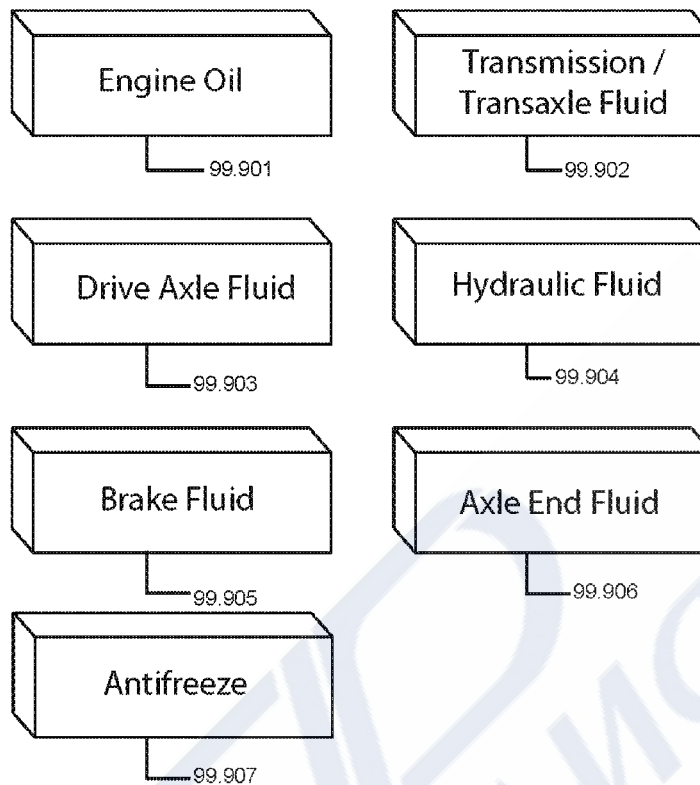 


NOTE: All Trucks Do Not Use All Fluid Key Numbers

TRUCK FLUIDS

40-260


99.901	ENGINE OIL 엔진오일
99.902	TRANSMISSION FLUID 트랜스미션오일
99.903	DRIVE AXLE FLUID 드라이브액슬
99.904	HYDRAULIC SUMP OIL 유압섬프오일
99.905	BRAKE FLUID 브레이크오일
99.906	AXLE END FLUID 액슬엔드오일
99.907	ENGINE ANTIFREEZE 부동액

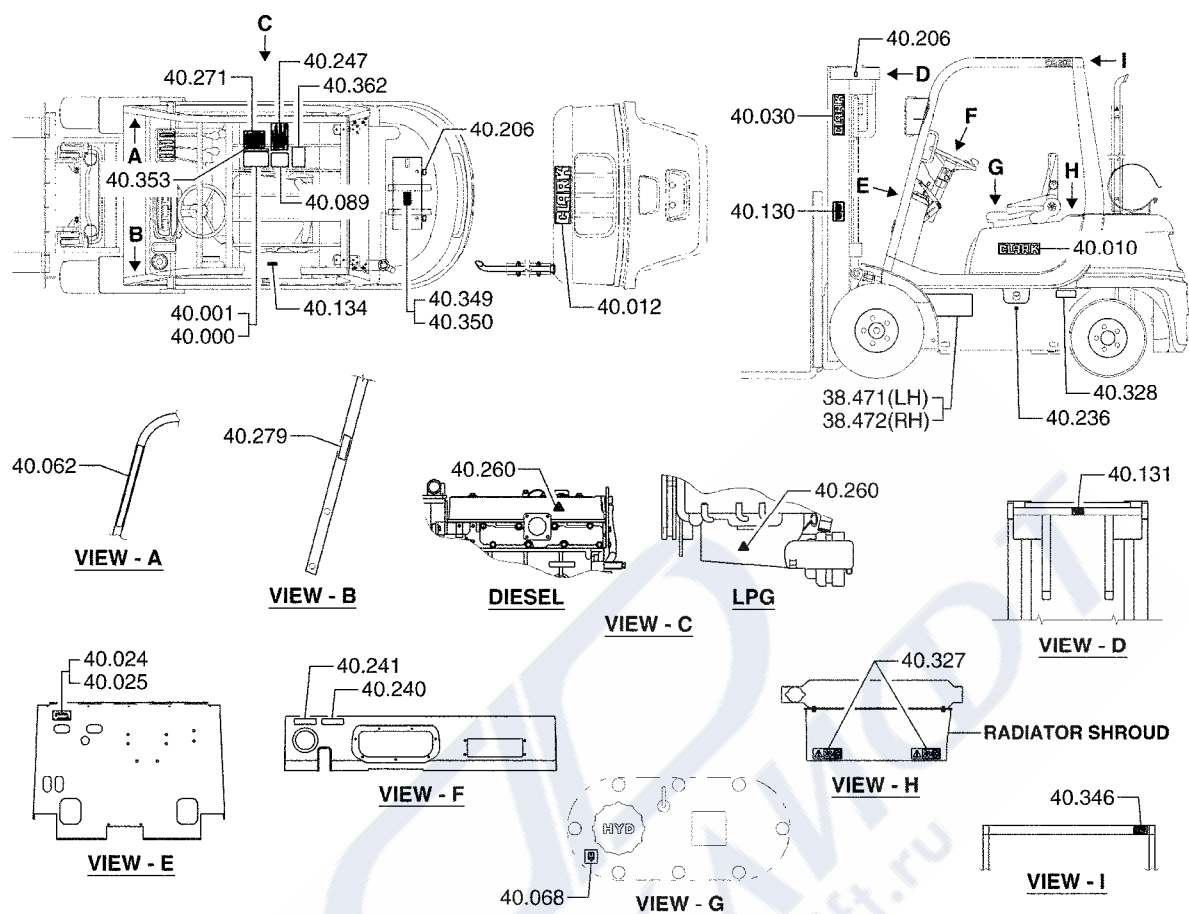 

DECALS

40-288


38.471	PAD, LH STEP NON-SKID 패드	40.206	DECAL, SLING EYE 대칼
38.472	PAD, RH STEP NON-SKID 패드	40.236	DECAL, FUEL 대칼
40.000	PLATE, CAPACITY & SERIAL NUMBER 플레이트	40.240	DECAL, FUEL WARNING 대칼
40.001	FASTENER, CAPACITY & SERIAL PLATE 패스너	40.241	DECAL, BRAKE OIL SPEC 대칼
40.010	DECAL, CLARK 대칼	40.247	DECAL, LPG FUEL CYL REPLACEMENT PROCEDURE 대칼
40.012	DECAL, CLARK LOGO-SMALL 대칼	40.260	DECAL, HOT SURFACE WARNING 대칼
40.024	PLATE, UNDERWRITERS LABEL 플레이트	40.271	DECAL, LP GAS 대칼
40.025	FASTENER, UNDERWRITERS LABEL PLATE 패스너	40.279	DECAL, STARTING PROCEDURE 대칼
40.030	DECAL, CLARK VERTICAL 대칼	40.327	DECAL, FAN WARNING 대칼
40.062	DECAL, DRIVERS CAUTION 대칼	40.328	DECAL, WHEEL NUT WARNING 대칼
40.068	DECAL, HYD-SYSTEM OIL 대칼	40.346	DECAL, OVERHEAD GUARD DROP TEST 대칼
40.089	PLATE, SAFETY INSTRUCTION 플레이트	40.349	PLATE, LESS LP TANK 플레이트
40.130	LEGEND, SAFETY 범례	40.350	FASTENER, PLATE LESS LP TANK 패스너
40.131	LEGEND, SAFETY 범례	40.353	DECAL, AUTHORIZED REPRESENTATIVE 대칼
40.134	DECAL, OPERATORS MANUAL LOCATION 대칼	40.362	DECAL, CAPACITY 대칼

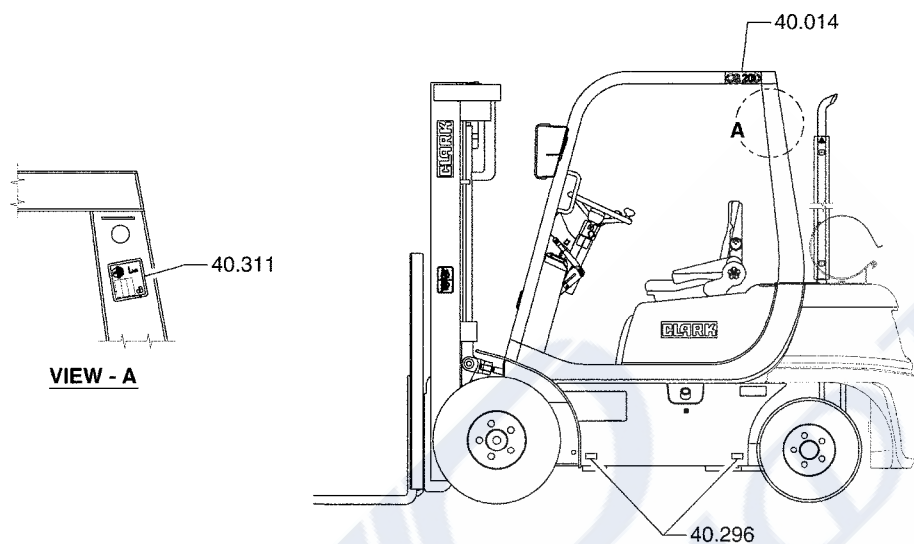 

MODEL & SPECIFICATION DECAL

40-289

- | | |
|--------|--------------------------------|
| 40.014 | DECAL, MODEL NAME
데칼 |
| 40.296 | DECAL, TIRE PRESSURE
데칼 |
| 40.311 | DECAL, SOUND POWER LEVEL
데칼 |

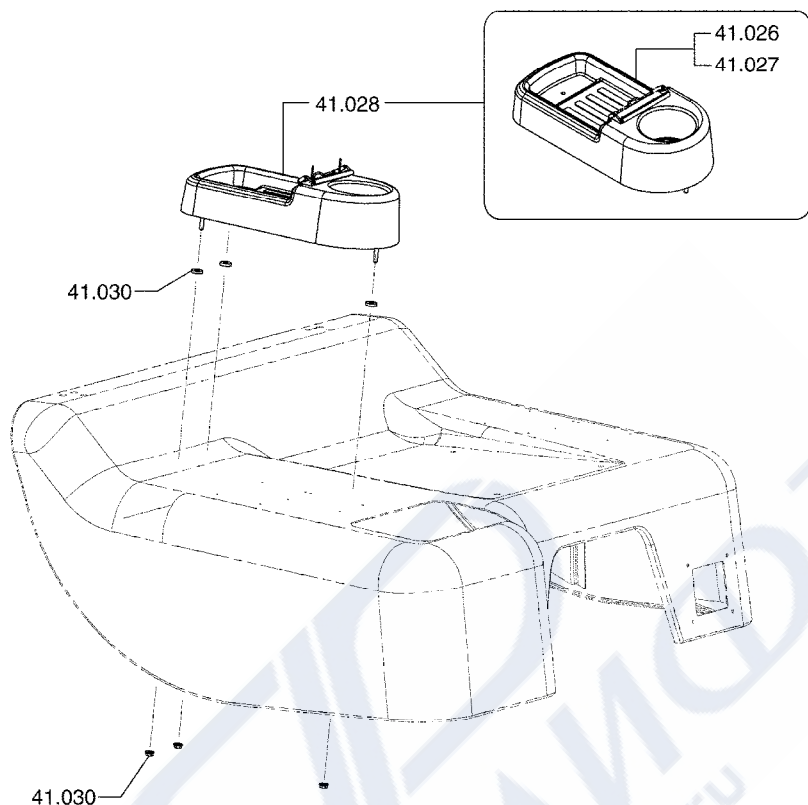 


STORAGE CONSOLE

41-011

- | | |
|--------|--|
| 41.026 | FASTENER, STORAGE CONSOLE DOCUMENT CLIP
패스너 |
| 41.027 | CLIP, STORAGE CONSOLE DOCUMENT
클립 |
| 41.028 | CONSOLE, OPERATOR STORAGE CONSOLE
콘솔 |
| 41.030 | FASTENER, STORAGE CONSOLE
패스너 |

SEAT SAFETY
WING KIT

 
37.970

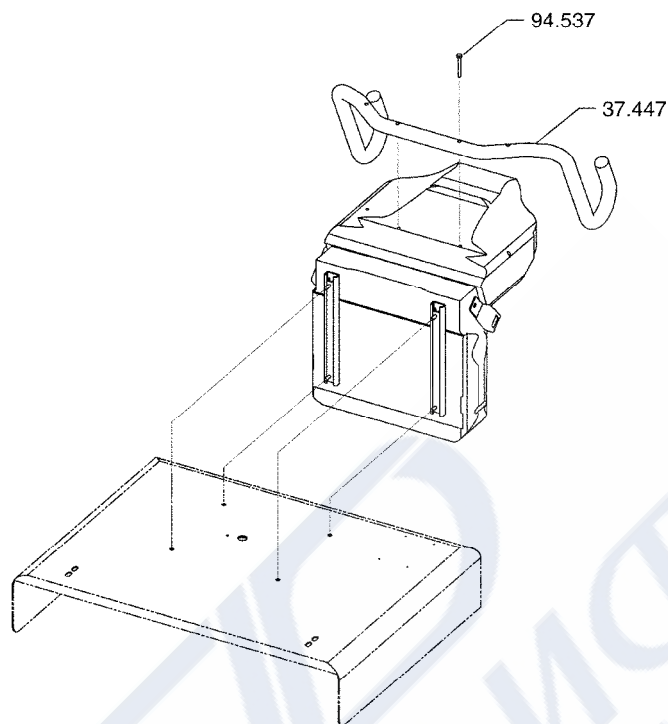


SEAT WING KIT

47-000


- | | |
|--------|--|
| 37.447 | RESTRAINT, OPERATOR SEAT LATERAL
레스트레인트 |
| 37.970 | KIT, SEAT SAFETY
키트 |
| 94.537 | FASTENER, OPERATOR SEAT LATERAL RESTRAINT
패스너 |

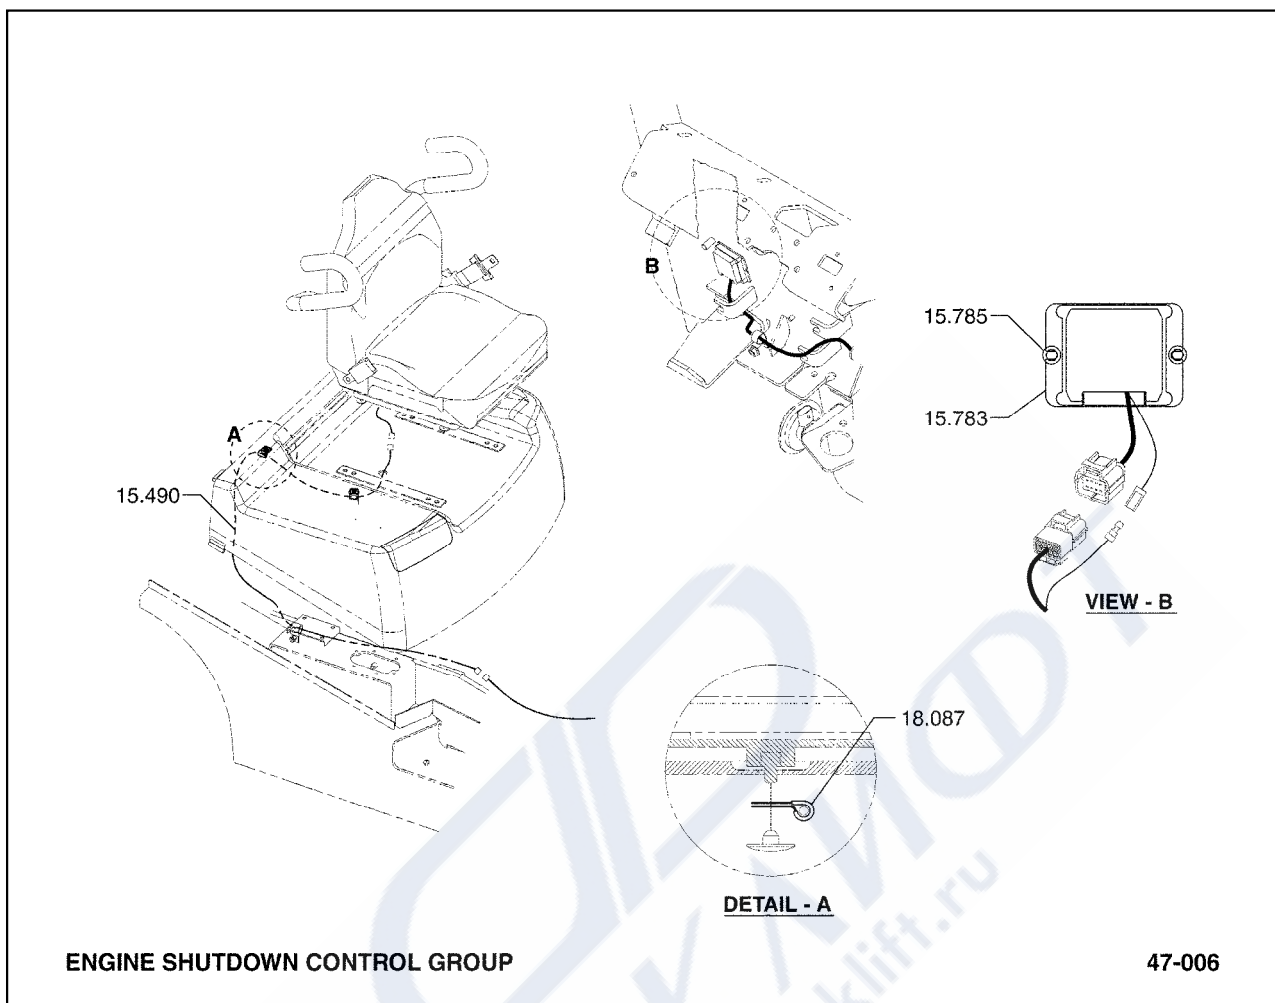 


- | | |
|--------|--|
| 15.490 | HARNESS, SEAT ACTUATED ENGINE SHUTDOWN WIRING
하네스 |
| 15.783 | TRACTION DISABLE CONTROL
트랙션 |
| 15.785 | FASTENER, TRACTION DISABLE CONTROL
패스너 |
| 18.087 | CLIP, SEAT SAFETY SWITCH WIRE
클립 |

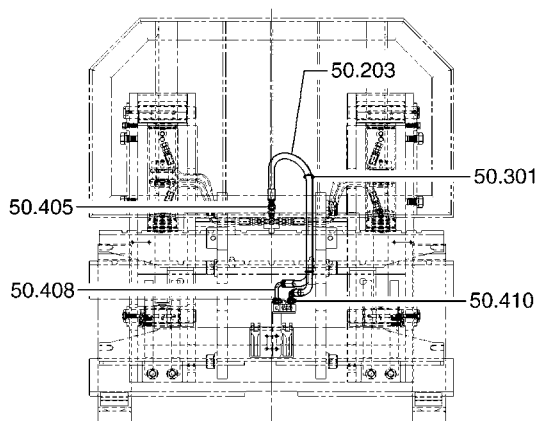 

HINGED BUCKET (HB) / FORK (HF) - BASIC

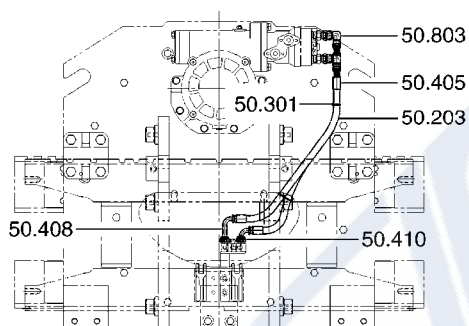 

ROTATING FORK (RF) - BASIC

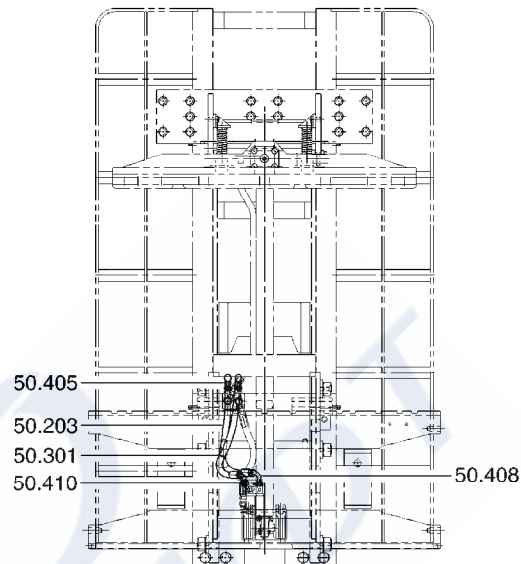 


LOAD STABILIZER (LS) - BASIC

ATTACHMENT HOSE ADAPTATION (CARRIAGE)

50-171

50.203	LINE, DEVICE HYDRAULIC (AT CARRIAGE) 라인
50.301	CLIP, DEVICE RH HOSE (AT CARRIAGE) 클립
50.405	COUPLING, DEVICE HOSE 커플링
50.408	COUPLING, DEVICE HOSE 커플링
50.410	COUPLING, DEVICE HOSE 커플링
50.803	FITTING, DEVICE HYDRAULIC LINE 피팅

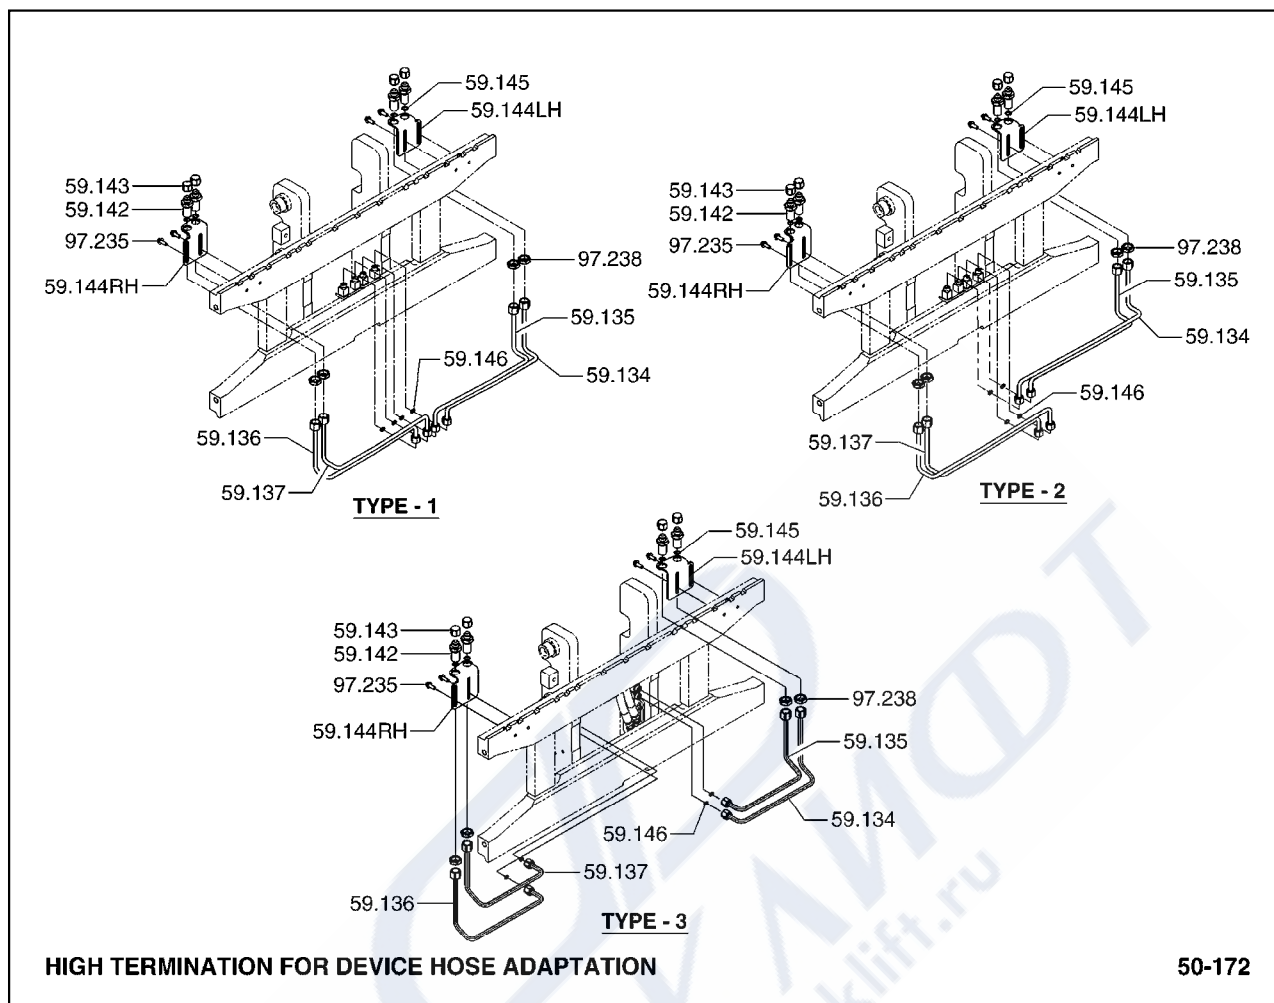 


- 59.134 LINE, DEVICE LH LINE FOR HIGH TERMINATION
라인
- 59.135 LINE, DEVICE LH LINE FOR HIGH TERMINATION
라인
- 59.136 LINE, DEVICE RH LINE FOR HIGH TERMINATION
라인
- 59.137 LINE, DEVICE RH LINE FOR HIGH TERMINATION
라인
- 59.142 FITTING, DEVICE LINE FOR HIGH TERMINATION
피팅
- 59.143 CAP, DEVICE LINE FITTING FOR HIGH TERMINATION
캡
- 59.144 BRACKET, DEVICE LINE FOR HIGH TERMINATION
브라켓
- 59.145 SEAL, DEVICE LINE FITTING FOR HIGH TERMINATION
셀
- 59.146 SEAL, DEVICE LINE FITTING FOR HIGH TERMINATION
셀

97.235	FASTENER, DEVICE LINE CLAMP FOR HIGH TERMINATION 패스너
97.238	FASTENER, DEVICE LINE FITTING FOR HIGH TERMINATION 패스너



 ATTACHMENT HOSE REFERENCE

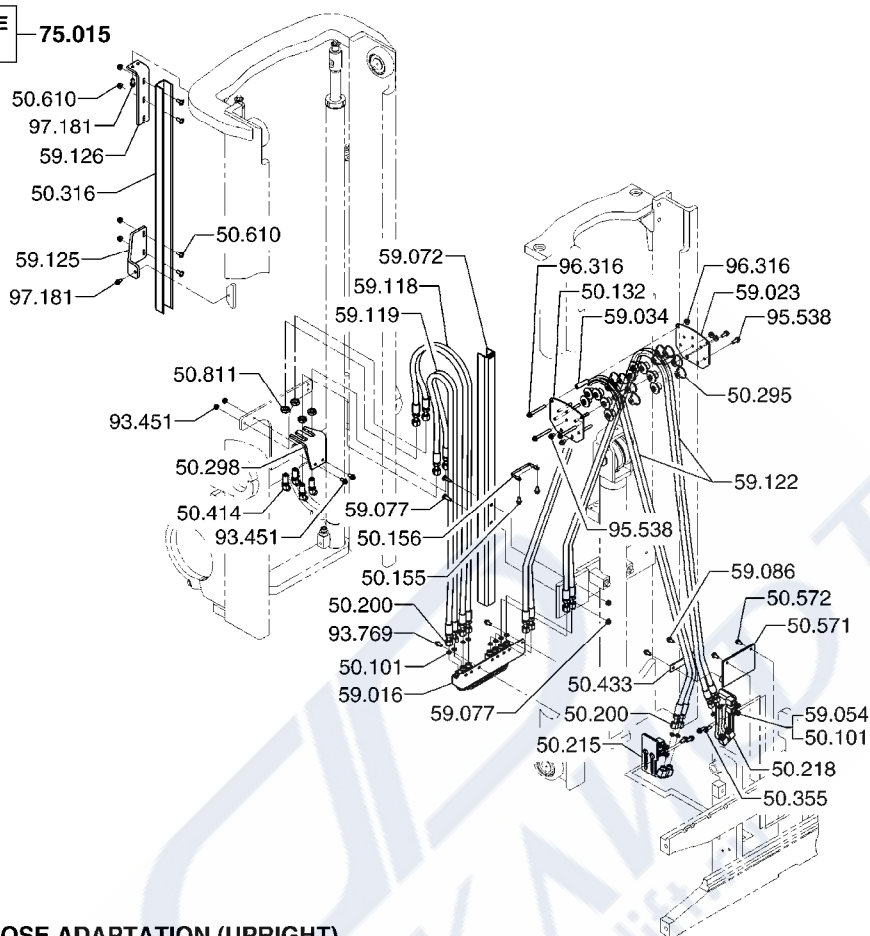


ATTACHMENT HOSE ADAPTATION (UPRIGHT)

50-232

50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 씰	50.610	FASTENER, DEVICE HOSE GUARD 패스너
50.132	BRACKET, DEVICE HOSE REEL 브라켓	50.811	NUT, DEVICE HOSE FITTING 너트
50.155	FASTENER, DEVICE HOSE CLIP 패스너	59.016	JUNCTION BLOCK, DEVICE HOSE 정크션 블록
50.156	CLIP, DEVICE HOSE 클립	59.023	BRACKET, DEVICE HOSE REEL MOUNTING 브라켓
50.200	COUPLING, DEVICE HOSE 커플링	59.034	TUBE, DEVICE HOSE REEL MOUNTING BRACKET 튜브
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록	59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
50.218	TERMINAL BLOCK, DEVICE LH HOSE 터미널블록	59.072	GUARD, DEVICE HOSE 가드
50.295	ROLLER, DEVICE HOSE UPPER 롤러	59.077	FASTENER, DEVICE HOSE GUARD 패스너
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓	59.086	FASTENER, DEVICE HOSE CLIP BRACKET 패스너
50.316	GUARD, DEVICE RH HOSE 가드	59.118	LINE, DEVICE HYDRAULIC (OUTER RAIL) 라인
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너	59.119	LINE, DEVICE HYDRAULIC (OUTER RAIL) 라인
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅	59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
50.433	BRACKET, DEVICE HOSE CLAMP 브라켓	59.125	BRACKET, DEVICE HOSE GUARD MOUNTING 브라켓
50.571	BRACKET, DEVICE HOSE 브라켓	59.126	BRACKET, DEVICE HOSE GUARD MOUNTING 브라켓
50.572	FASTENER, DEVICE HOSE BRACKET 패스너	75.015	MODULE, ATTACHMENT HOSE LINES 모듈

93.316	DOWEL, STEERING INTERLOCK SWITCH FASTENER 다웰
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너
93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너
95.538	FASTENER, DEVICE HOSE REEL BRACKET 패스너
96.316	FASTENER, DEVICE HOSE REEL 패스너
97.181	FASTENER, DEVICE HOSE GUARD MOUNTING BRACKET 패스너



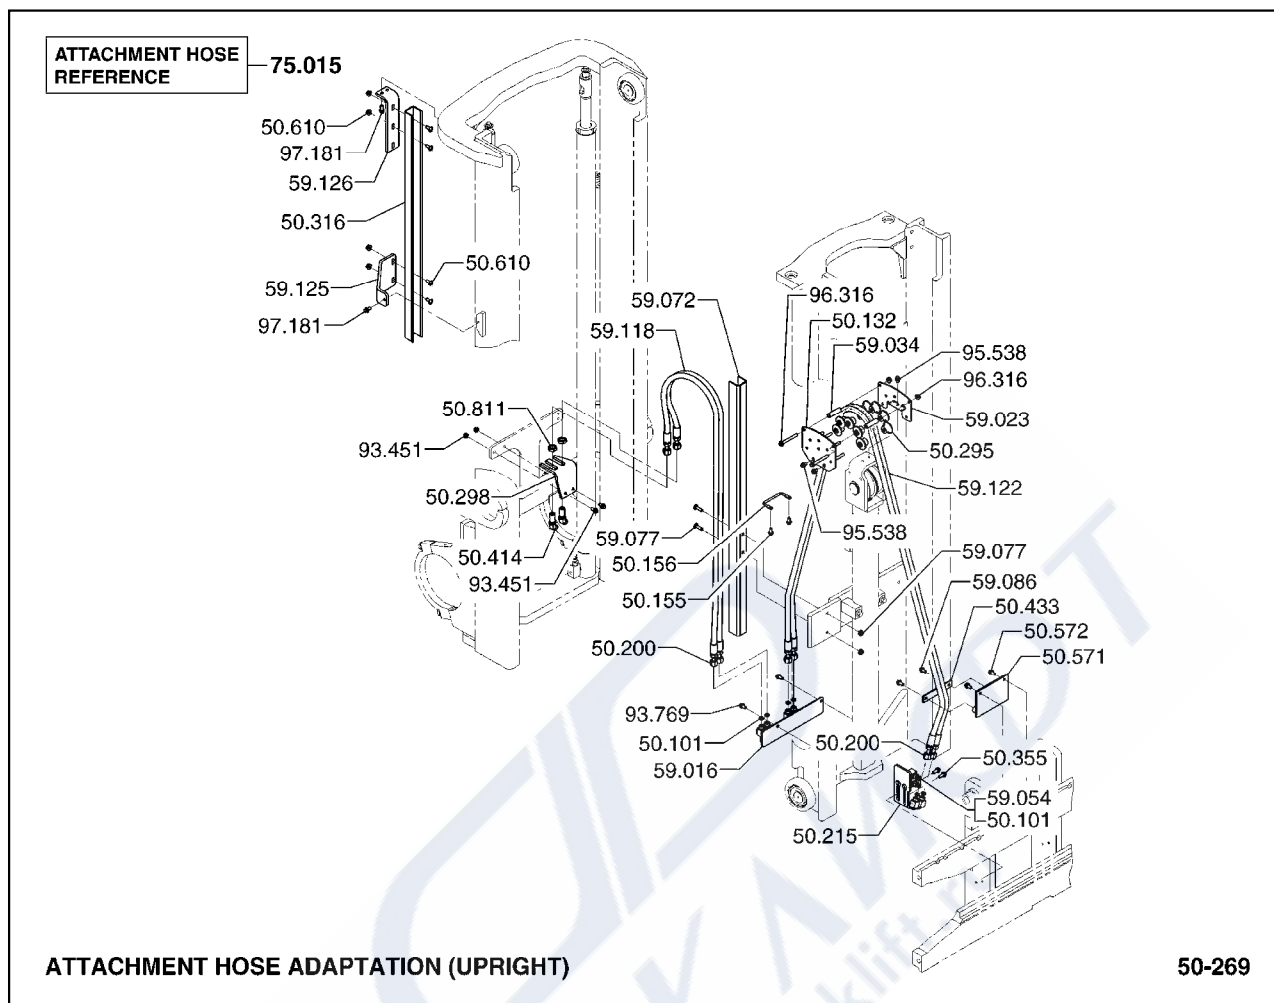 

50.101 SEAL, DEVICE HOSE SWIVEL COUPLING
씰

50.132 BRACKET, DEVICE HOSE REEL
브라켓

50.155 FASTENER, DEVICE HOSE CLIP
패스너

50.156 CLIP, DEVICE HOSE
클립

50.200 COUPLING, DEVICE HOSE
커플링

50.215 TERMINAL BLOCK, DEVICE HOSE
터미널블록

50.295 ROLLER, DEVICE HOSE UPPER
롤러

50.298 BRACKET, DEVICE HOSE TERMINAL
브라켓

50.316 GUARD, DEVICE RH HOSE
가드

50.355 FASTENER, DEVICE HOSE TERMINAL BLOCK
패스너

50.414 FITTING, DEVICE HOSE CONNECTOR
피팅

50.433 BRACKET, DEVICE HOSE CLAMP
브라켓

50.571 BRACKET, DEVICE HOSE
브라켓

50.572 FASTENER, DEVICE HOSE BRACKET
패스너

50.610 FASTENER, DEVICE HOSE GUARD
패스너

50.811 NUT, DEVICE HOSE FITTING
너트

59.016 JUNCTION BLOCK, DEVICE HOSE
정크션 블록

59.023 BRACKET, DEVICE HOSE REEL MOUNTING
브라켓

59.034 TUBE, DEVICE HOSE REEL MOUNTING BRACKET
튜브

59.054 PLUG, DEVICE HOSE JUNCTION BLOCK
플러그

59.072 GUARD, DEVICE HOSE
가드

59.077 FASTENER, DEVICE HOSE GUARD
패스너

59.086 FASTENER, DEVICE HOSE CLIP BRACKET
패스너

59.101 TIE STRAP, AUXILIARY FUNCTION LINES
타이스트랩

59.118 LINE, DEVICE HYDRAULIC (OUTER RAIL)
라인

59.122 LINE, DEVICE HYDRAULIC (INNER RAIL)
라인

59.125 BRACKET, DEVICE HOSE GUARD MOUNTING
브라켓


59.126 BRACKET, DEVICE HOSE GUARD MOUNTING
브라켓

75.015 MODULE, ATTACHMENT HOSE LINES
모듈

93.316 DOWEL, STEERING INTERLOCK SWITCH FASTENER
다웰


93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너
93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너
95.538	FASTENER, DEVICE HOSE REEL BRACKET 패스너
96.316	FASTENER, DEVICE HOSE REEL 패스너
97.181	FASTENER, DEVICE HOSE GUARD MOUNTING BRACKET 패스너



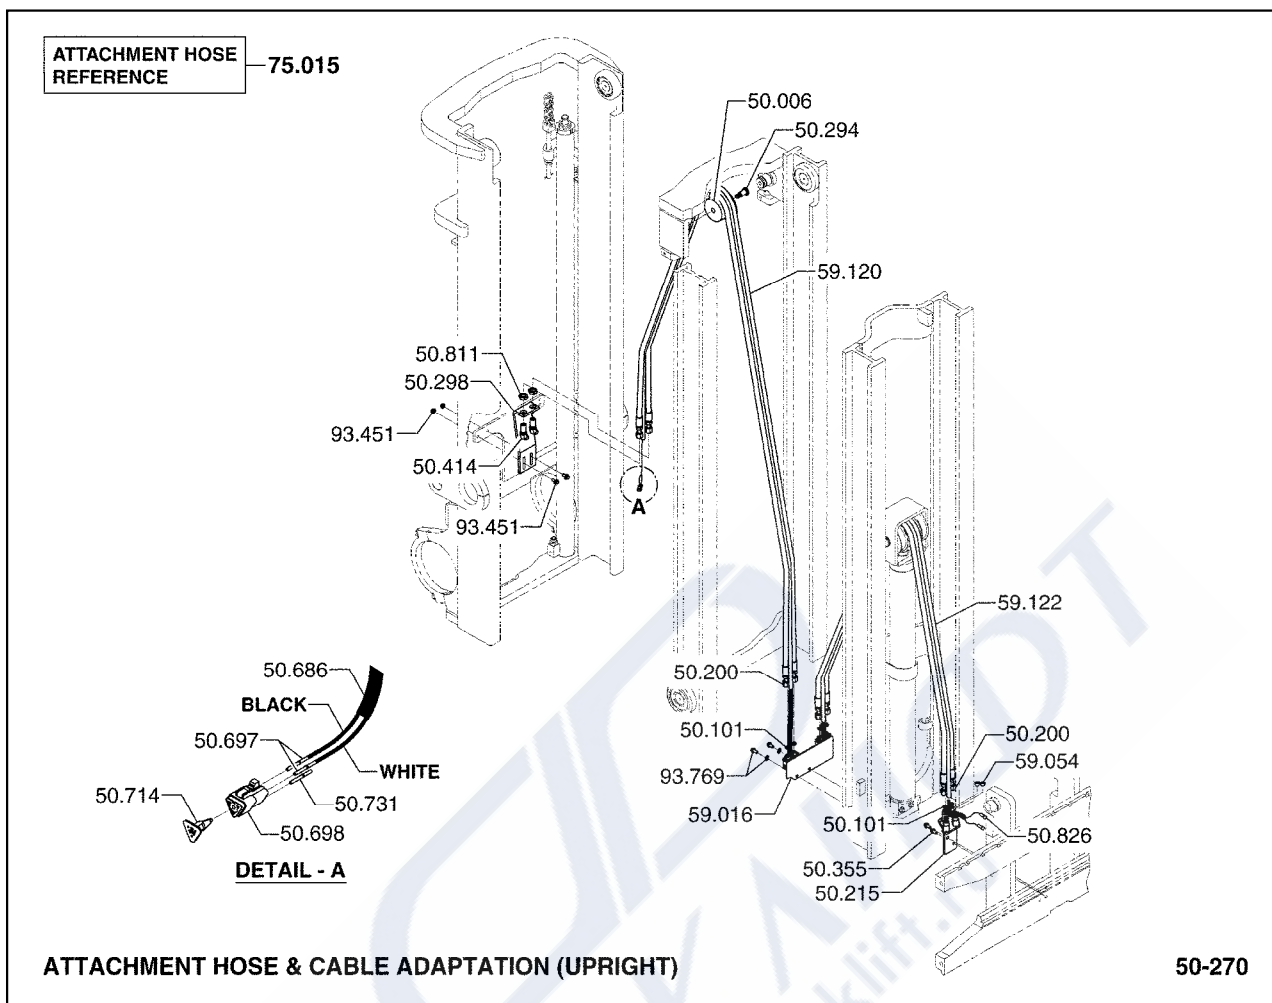 


50.006	SHEAVE, DEVICE HOSE UPPER 쉬브
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 씰
50.200	COUPLING, DEVICE HOSE 커플링
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록
50.294	PIVOT, DEVICE HOSE UPPER SHEAVE 피벗
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅
50.686	WIRE, DEVICE 와이어

50.697	CONNECTOR, DEVICE CABLE (PIN END) 커넥터
50.698	CONNECTOR, DEVICE CABLE (SOCKET END) 커넥터
50.714	LOCK, DEVICE CABLE CONNECTOR 로크
50.731	PLUG, DEVICE CABLE CONNECTOR 플러그
50.811	NUT, DEVICE HOSE FITTING 너트
50.826	TERMINAL, DEVICE CABLE 터미널
59.016	JUNCTION BLOCK, DEVICE HOSE 정크션 블록
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.120	LINE, DEVICE HYDRAULIC (INTERMEDIATE RAIL) 라인
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너
93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너

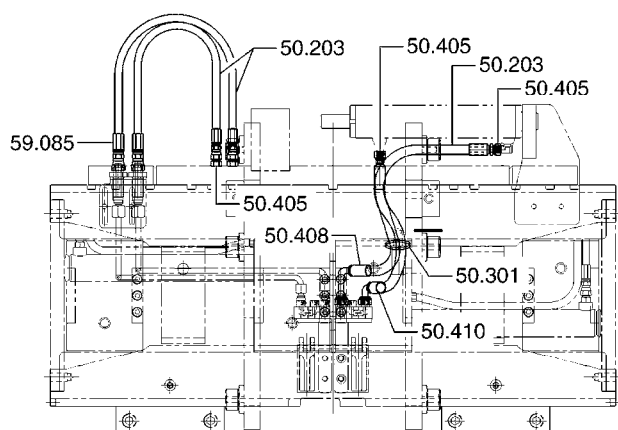 

 **FORK POSITIONER (FP) - SHIFT
TYPE - 1**

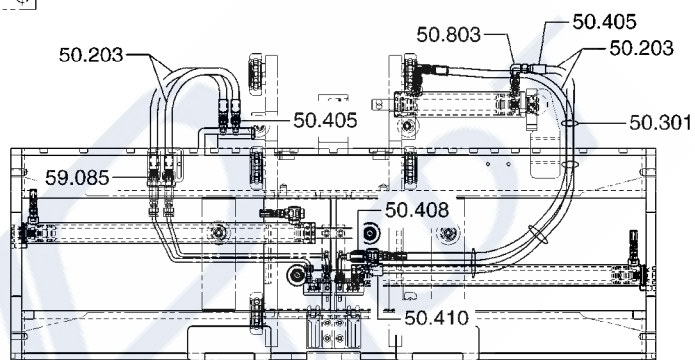


**FORK POSITIONER (FP) - SHIFT
TYPE - 2**

ATTACHMENT HOSE ADAPTATION (CARRIAGE)

50-284

50.203	LINE, DEVICE HYDRAULIC (AT CARRIAGE) 라인
50.301	CLIP, DEVICE RH HOSE (AT CARRIAGE) 클립
50.405	COUPLING, DEVICE HOSE 커플링
50.408	COUPLING, DEVICE HOSE 커플링
50.410	COUPLING, DEVICE HOSE 커플링
50.803	FITTING, DEVICE HYDRAULIC LINE 피팅
59.085	COUPLING, DEVICE HOSE 커플링

 ATTACHMENT HOSE
REFERENCE 75.015

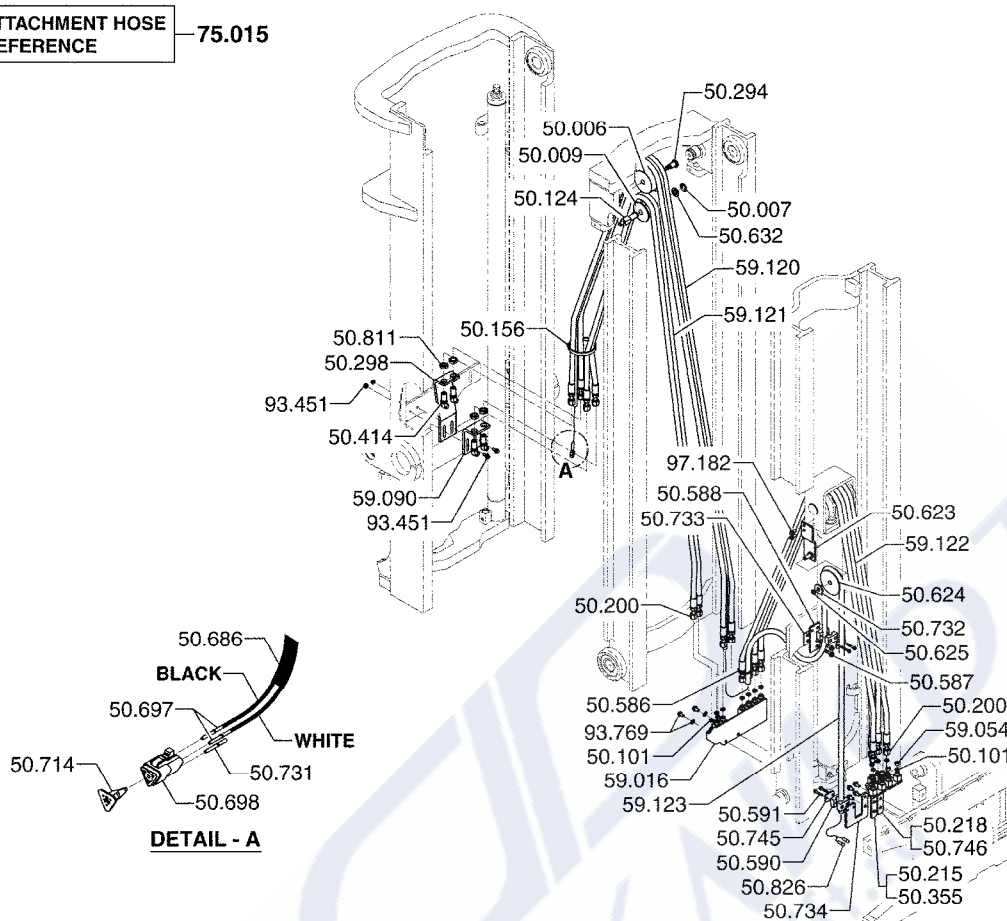


ATTACHMENT HOSE & CABLE ADAPTATION (UPRIGHT)

50-289

50.006	SHEAVE, DEVICE HOSE UPPER 쉬브	50.588	BRACKET, DEVICE CABLE CLAMP 브라켓
50.007	RETAINER, DEVICE HOSE SHEAVE 리테이너	50.590	CLAMP, DEVICE CABLE LOWER 클램프
50.009	SHEAVE, DEVICE HOSE LOWER 쉬브	50.591	FASTENER, DEVICE CABLE CLAMP LOWER 패스너
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 씰	50.623	BRACKET, DEVICE CABLE LOWER SHEAVE 브라켓
50.124	PIVOT, DEVICE HOSE LOWER RH SHEAVE 피봇	50.624	SHEAVE, DEVICE CABLE 쉬브
50.156	CLIP, DEVICE HOSE 클립	50.625	RETAINER, DEVICE CABLE LOWER SHEAVE 리테이너
50.200	COUPLING, DEVICE HOSE 커플링	50.632	SPACER, DEVICE HOSE SHEAVE 스페이서
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록	50.686	WIRE, DEVICE 와이어
50.218	TERMINAL BLOCK, DEVICE LH HOSE 터미널블록	50.697	CONNECTOR, DEVICE CABLE (PIN END) 커넥터
50.294	PIVOT, DEVICE HOSE UPPER SHEAVE 피봇	50.698	CONNECTOR, DEVICE CABLE (SOCKET END) 커넥터
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓	50.714	LOCK, DEVICE CABLE CONNECTOR 로크
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너	50.731	PLUG, DEVICE CABLE CONNECTOR 플러그
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅	50.732	SPACER, DEVICE CABLE SHEAVE 스페이서
50.586	CLIP, DEVICE CABLE 클립	50.733	SPACER, DEVICE CABLE CLAMP BRACKET 스페이서
50.587	FASTENER, DEVICE CABLE CLIP 패스너	50.734	BRACKET, DEVICE CABLE TERMINAL CLAMP 브라켓


50.745	BRACKET, DEVICE CABLE TERMINAL CLAMP MOUNTING 브라켓
50.746	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너
50.811	NUT, DEVICE HOSE FITTING 너트
50.826	TERMINAL, DEVICE CABLE 터미널
59.016	JUNCTION BLOCK, DEVICE HOSE 정크션 블록
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.090	BRACKET, DEVICE HOSE TERMINAL 브라켓
59.120	LINE, DEVICE HYDRAULIC (INTERMEDIATE RAIL) 라인
59.121	LINE, DEVICE HYDRAULIC (INTERMEDIATE RAIL) 라인
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
59.123	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너
93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너
97.182	FASTENER, DEVICE CABLE LOWER SHEAVE BRACKET 패스너

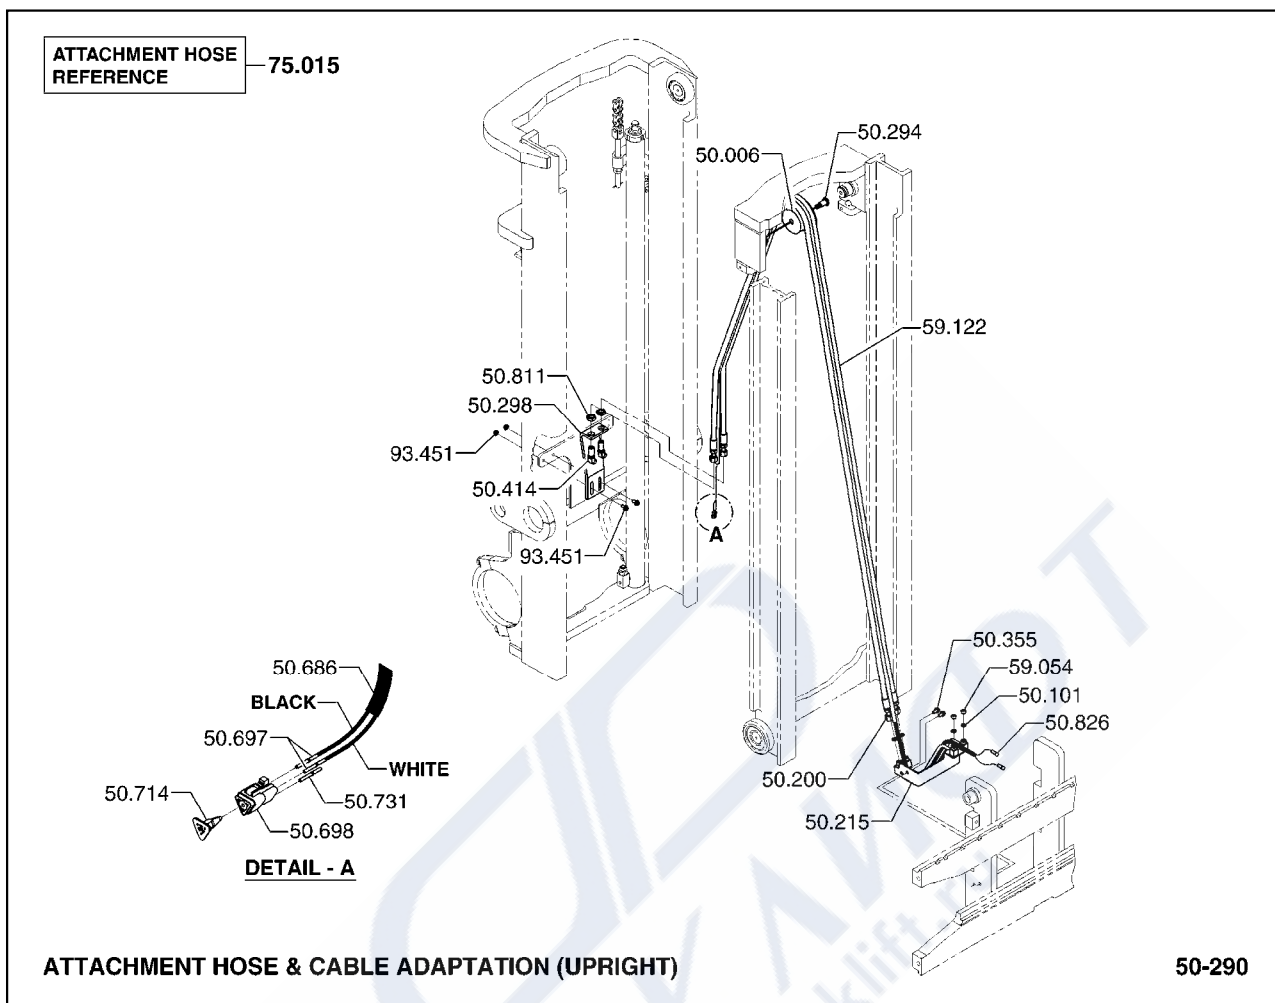 

50.006	SHEAVE, DEVICE HOSE UPPER 쉬브
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 씰
50.200	COUPLING, DEVICE HOSE 커플링
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록
50.294	PIVOT, DEVICE HOSE UPPER SHEAVE 피벗
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅
50.686	WIRE, DEVICE 와이어


50.697	CONNECTOR, DEVICE CABLE (PIN END) 커넥터
50.698	CONNECTOR, DEVICE CABLE (SOCKET END) 커넥터
50.714	LOCK, DEVICE CABLE CONNECTOR 로크
50.731	PLUG, DEVICE CABLE CONNECTOR 플러그
50.811	NUT, DEVICE HOSE FITTING 너트
50.826	TERMINAL, DEVICE CABLE 터미널
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너



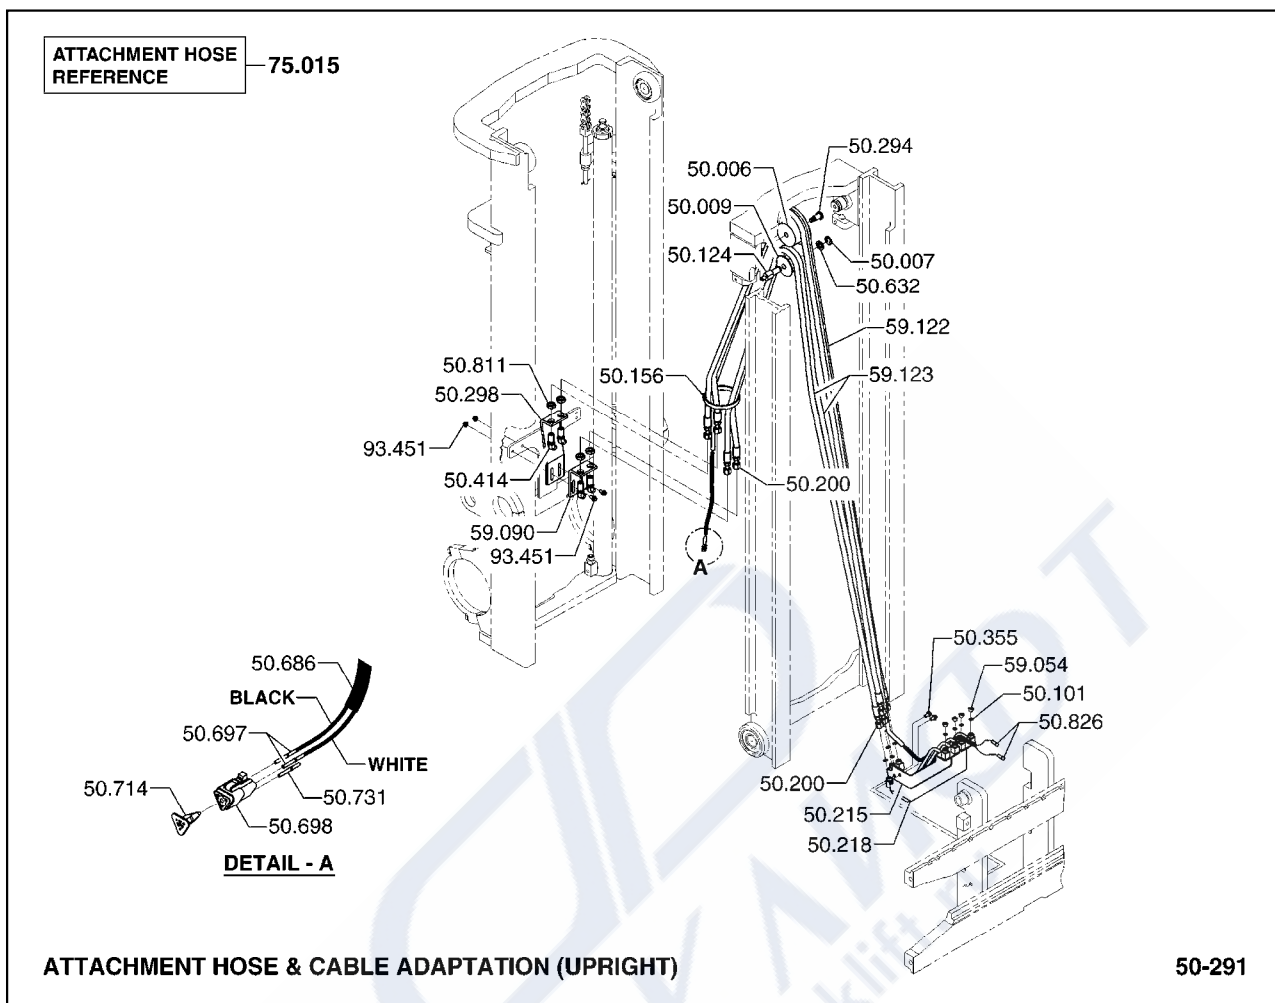 


50.006	SHEAVE, DEVICE HOSE UPPER 쉬브
50.007	RETAINER, DEVICE HOSE SHEAVE 리테이너
50.009	SHEAVE, DEVICE HOSE LOWER 쉬브
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 씰
50.124	PIVOT, DEVICE HOSE LOWER RH SHEAVE 피벗
50.156	CLIP, DEVICE HOSE 클립
50.200	COUPLING, DEVICE HOSE 커플링
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록
50.218	TERMINAL BLOCK, DEVICE LH HOSE 터미널블록

50.294	PIVOT, DEVICE HOSE UPPER SHEAVE 피벗
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅
50.632	SPACER, DEVICE HOSE SHEAVE 스페이서
50.686	WIRE, DEVICE 와이어
50.697	CONNECTOR, DEVICE CABLE (PIN END) 커넥터
50.698	CONNECTOR, DEVICE CABLE (SOCKET END) 커넥터
50.714	LOCK, DEVICE CABLE CONNECTOR 로크
50.731	PLUG, DEVICE CABLE CONNECTOR 플러그
50.811	NUT, DEVICE HOSE FITTING 너트
50.826	TERMINAL, DEVICE CABLE 터미널
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.090	BRACKET, DEVICE HOSE TERMINAL 브라켓
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
59.123	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너

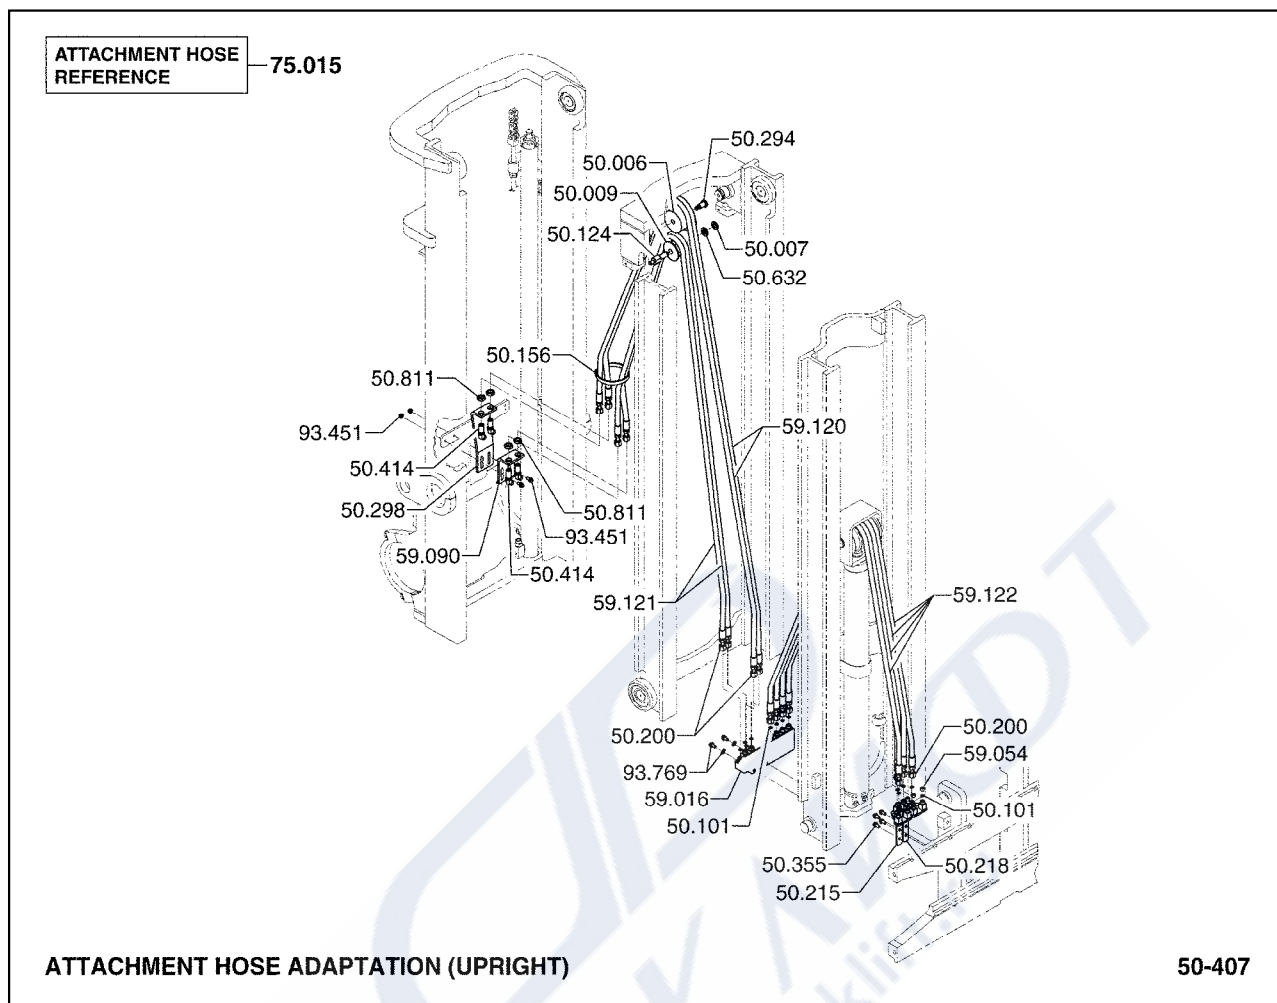 


50.006	SHEAVE, DEVICE HOSE UPPER 쉬브
50.007	RETAINER, DEVICE HOSE SHEAVE 리테이너
50.009	SHEAVE, DEVICE HOSE LOWER 쉬브
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 씰
50.124	PIVOT, DEVICE HOSE LOWER RH SHEAVE 피벗
50.156	CLIP, DEVICE HOSE 클립
50.200	COUPLING, DEVICE HOSE 커플링
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록
50.218	TERMINAL BLOCK, DEVICE LH HOSE 터미널블록

50.294	PIVOT, DEVICE HOSE UPPER SHEAVE 피벗
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅
50.632	SPACER, DEVICE HOSE SHEAVE 스페이서
50.811	NUT, DEVICE HOSE FITTING 너트
59.016	JUNCTION BLOCK, DEVICE HOSE 정크션 블록
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.090	BRACKET, DEVICE HOSE TERMINAL 브라켓
59.120	LINE, DEVICE HYDRAULIC (INTERMEDIATE RAIL) 라인
59.121	LINE, DEVICE HYDRAULIC (INTERMEDIATE RAIL) 라인
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너
93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너

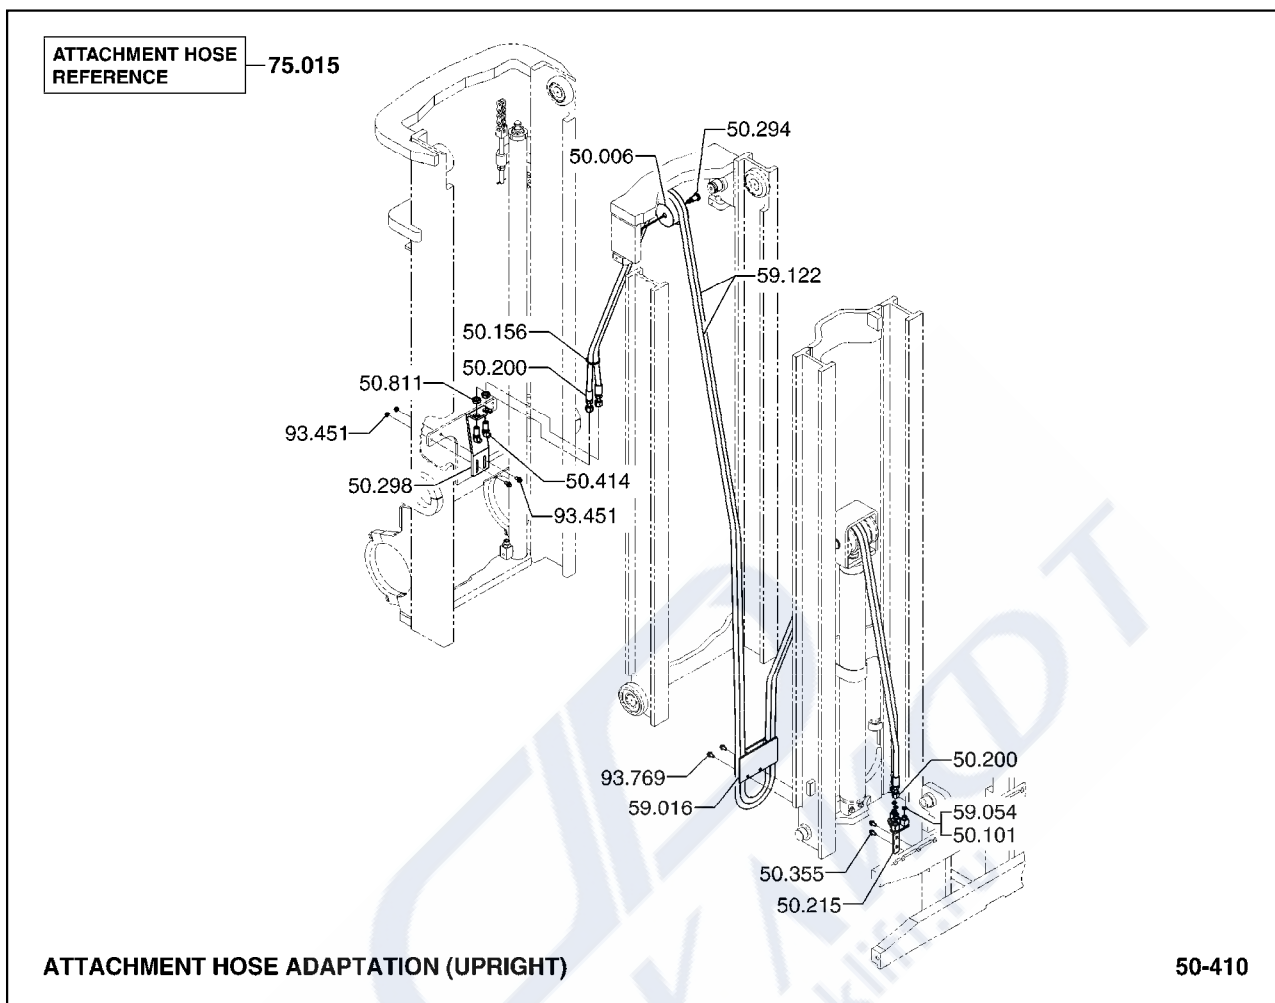 


50.006	SHEAVE, DEVICE HOSE UPPER шнёр
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING шнёр
50.156	CLIP, DEVICE HOSE шнёр
50.200	COUPLING, DEVICE HOSE шнёр
50.215	TERMINAL BLOCK, DEVICE HOSE шнёр
50.294	PIVOT, DEVICE HOSE UPPER SHEAVE шнёр
50.298	BRACKET, DEVICE HOSE TERMINAL шнёр
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK шнёр
50.414	FITTING, DEVICE HOSE CONNECTOR шнёр


50.811	NUT, DEVICE HOSE FITTING 너트
59.016	JUNCTION BLOCK, DEVICE HOSE 정크션 블록
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너
93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너

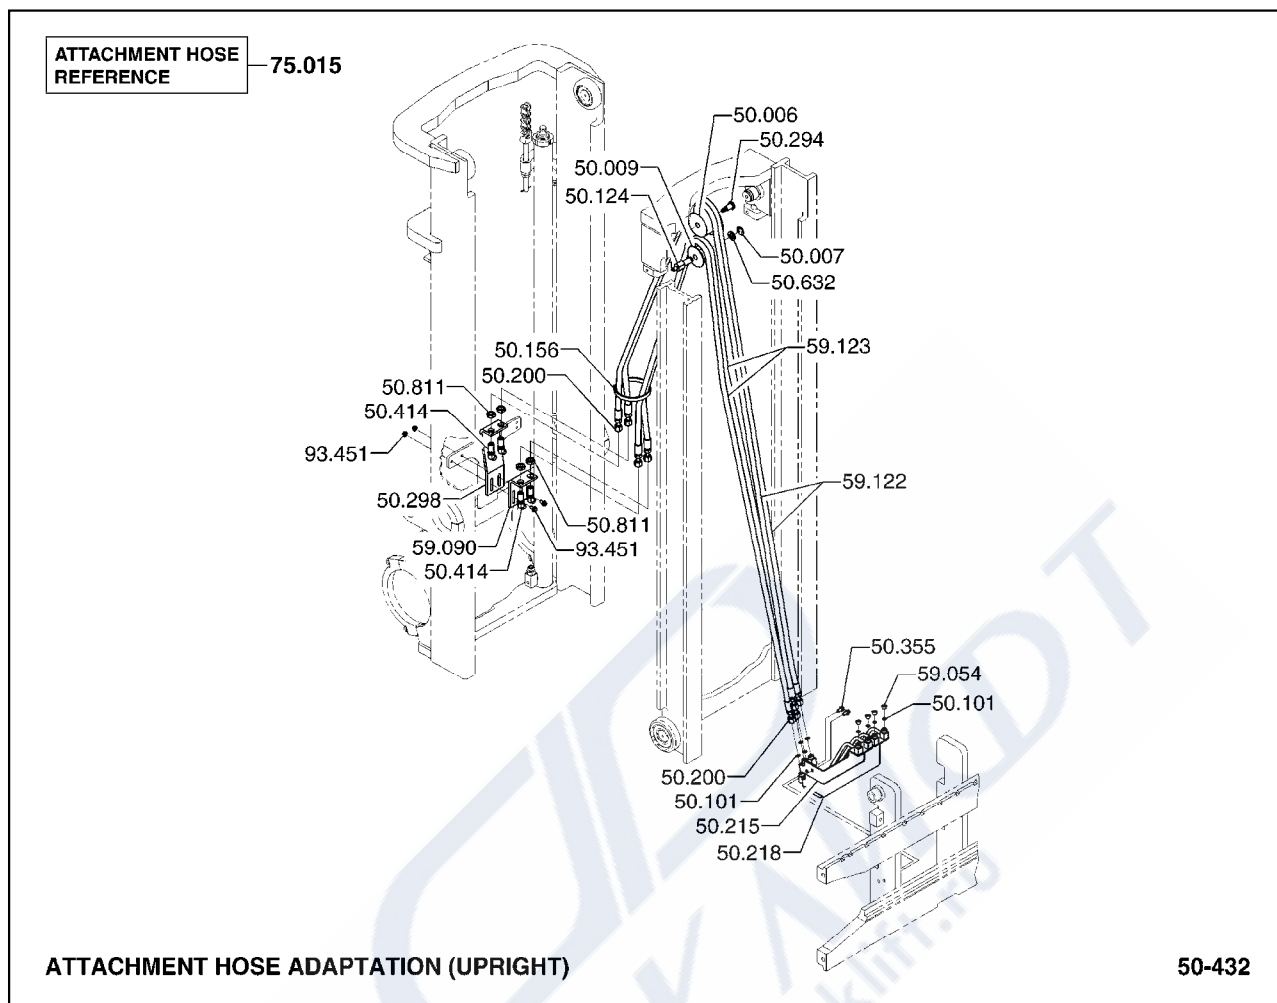 

50.006	SHEAVE, DEVICE HOSE UPPER шнёр
50.007	RETAINER, DEVICE HOSE SHEAVE ритейнер
50.009	SHEAVE, DEVICE HOSE LOWER шнёр
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING сальник
50.124	PIVOT, DEVICE HOSE LOWER RH SHEAVE шнёр
50.156	CLIP, DEVICE HOSE клип
50.200	COUPLING, DEVICE HOSE соединитель
50.215	TERMINAL BLOCK, DEVICE HOSE терминальный блок
50.218	TERMINAL BLOCK, DEVICE LH HOSE терминальный блок


50.294	PIVOT, DEVICE HOSE UPPER SHEAVE 피벗
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅
50.632	SPACER, DEVICE HOSE SHEAVE 스페이서
50.811	NUT, DEVICE HOSE FITTING 너트
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.090	BRACKET, DEVICE HOSE TERMINAL 브라켓
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
59.123	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너

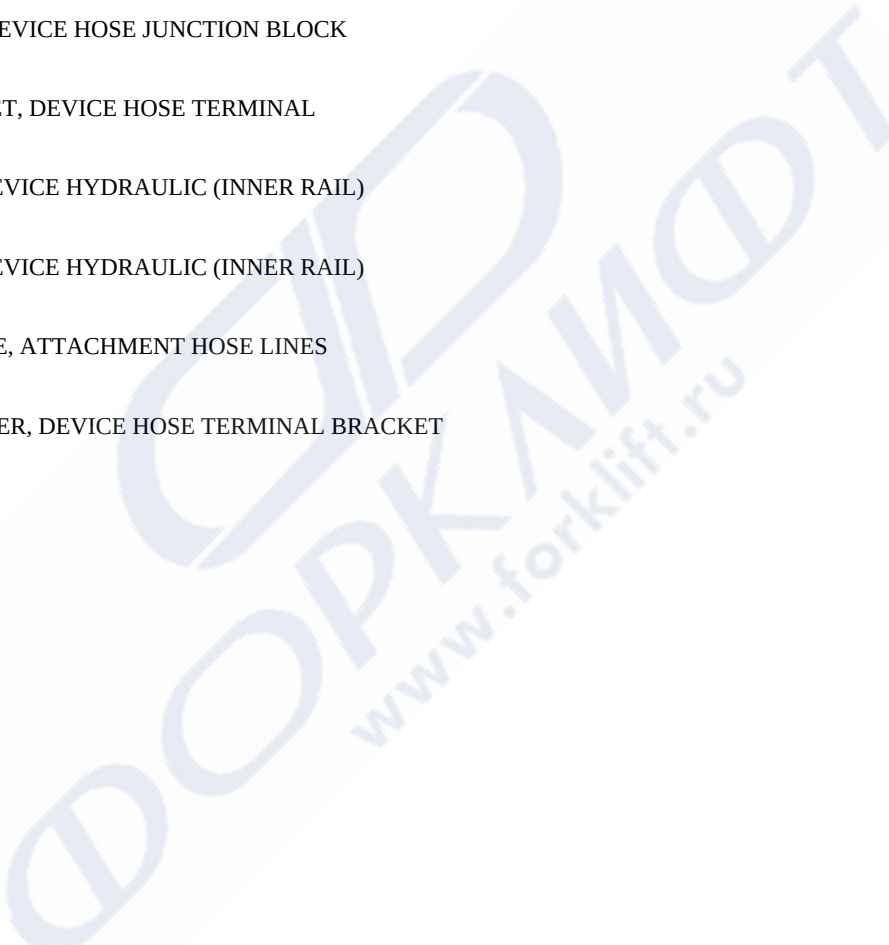 

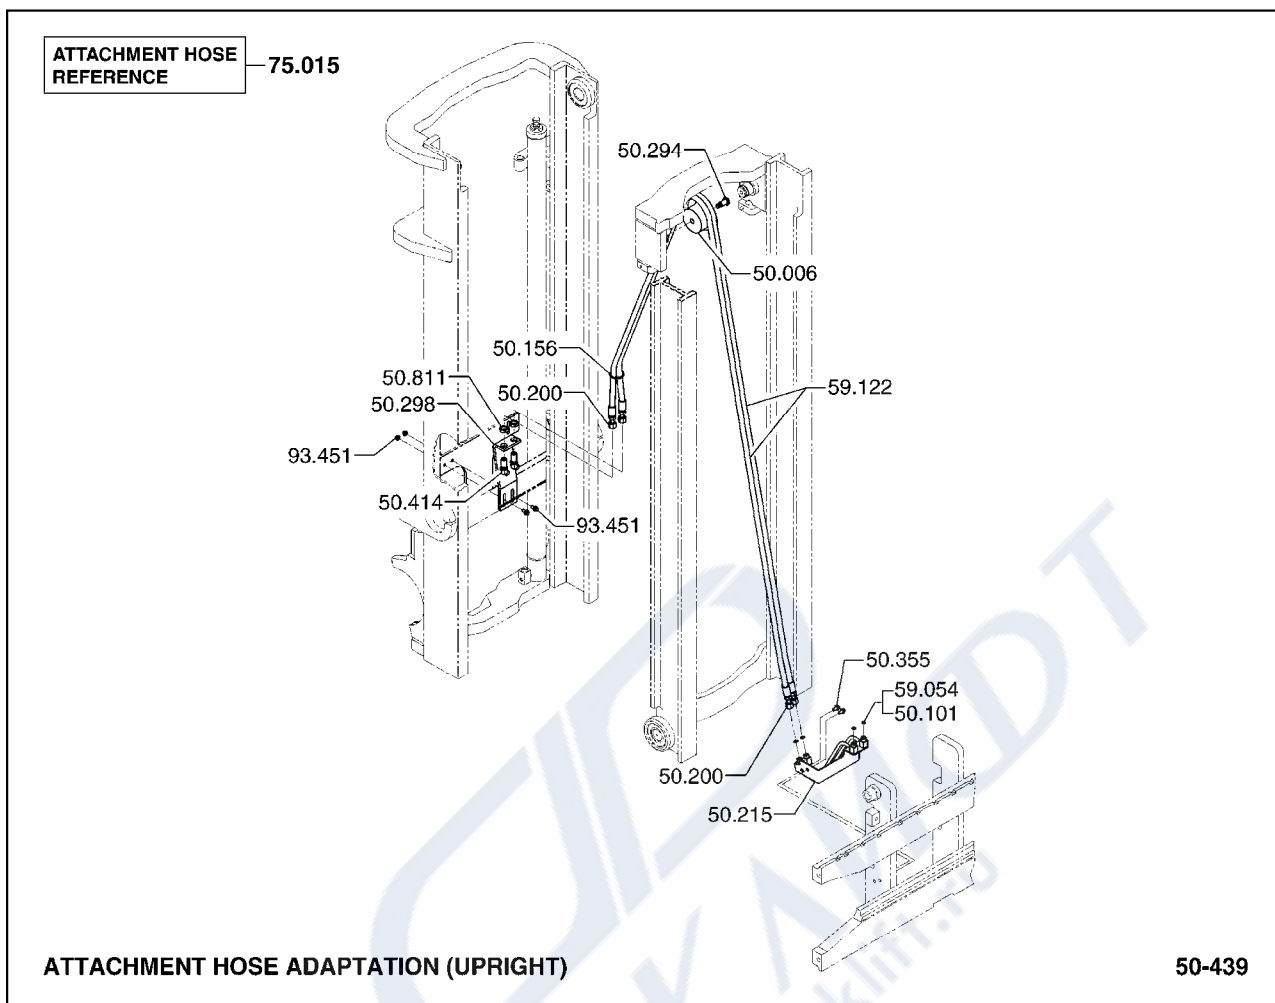 


50.006	SHEAVE, DEVICE HOSE UPPER 쉬브
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 씰
50.156	CLIP, DEVICE HOSE 클립
50.200	COUPLING, DEVICE HOSE 커플링
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록
50.294	PIVOT, DEVICE HOSE UPPER SHEAVE 피벗
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅


50.811	NUT, DEVICE HOSE FITTING 너트
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너

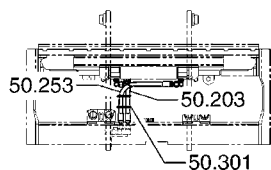 

 
**MODEL: GTX162
GEX162**
UPRIGHT: STANDARD

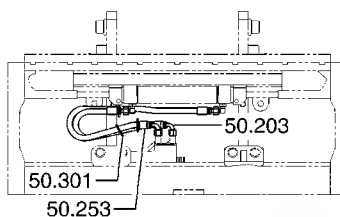

 
**MODEL: EPX360, ECX360
GEX230, P232
GTS232, CQ230**
UPRIGHT: STANDARD

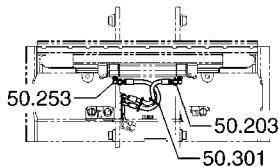

 
**MODEL: GTX162, GEX162
EPX162, CMP158
P152, TMX250, ESX250**
UPRIGHT: TRIPLE STAGE & HI-LO

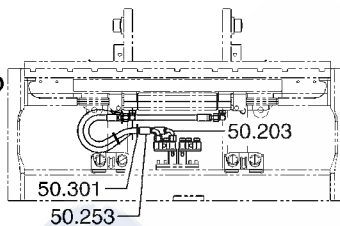

 
**MODEL: EPX360, ECX360
GEX230, P232
GTS232, CQ230**
UPRIGHT: TRIPLE STAGE

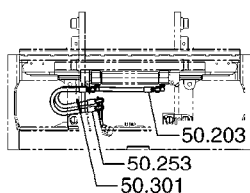

 **MODEL: GTX162, GEX162
EPX162, CMP158
P152, TMX250, ESX250**
UPRIGHT: TRIPLE STAGE

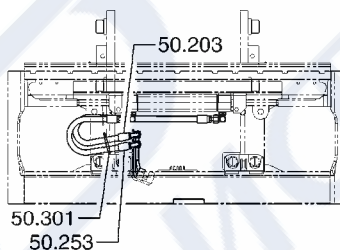

 **MODEL: EPX360, ECX360
GEX230, P232
GTS232, CQ230**
UPRIGHT: HI-LO

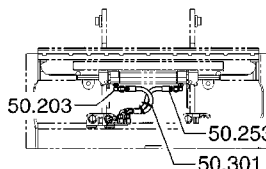


**MODEL: EPX162, CMP158
P152, TMX250, ESX250**
UPRIGHT: STANDARD

ATTACHMENT HOSE ADAPTATION (CARRIAGE)

50-791


- | | |
|--------|--|
| 50.203 | LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인 |
| 50.253 | LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인 |
| 50.301 | CLIP, DEVICE RH HOSE (AT CARRIAGE)
클립 |

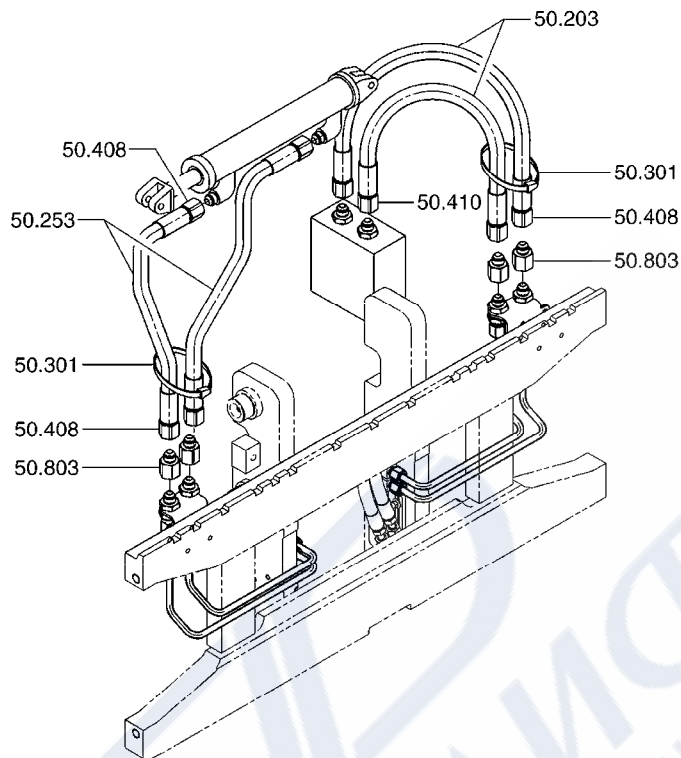 

ATTACHMENT HOSE ADAPTATION (CARRIAGE)

50-794


50.203	LINE, DEVICE HYDRAULIC (AT CARRIAGE) 라인
50.253	LINE, DEVICE HYDRAULIC (AT CARRIAGE) 라인
50.301	CLIP, DEVICE RH HOSE (AT CARRIAGE) 클립
50.408	COUPLING, DEVICE HOSE 커플링
50.410	COUPLING, DEVICE HOSE 커플링
50.803	FITTING, DEVICE HYDRAULIC LINE 피팅

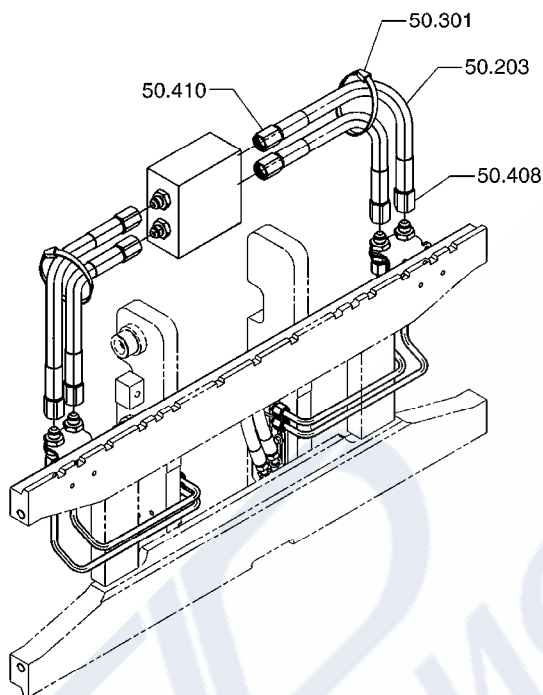 

ATTACHMENT HOSE ADAPTATION (CARRIAGE)

50-796


50.203	LINE, DEVICE HYDRAULIC (AT CARRIAGE) 라인
50.301	CLIP, DEVICE RH HOSE (AT CARRIAGE) 클립
50.408	COUPLING, DEVICE HOSE 커플링
50.410	COUPLING, DEVICE HOSE 커플링

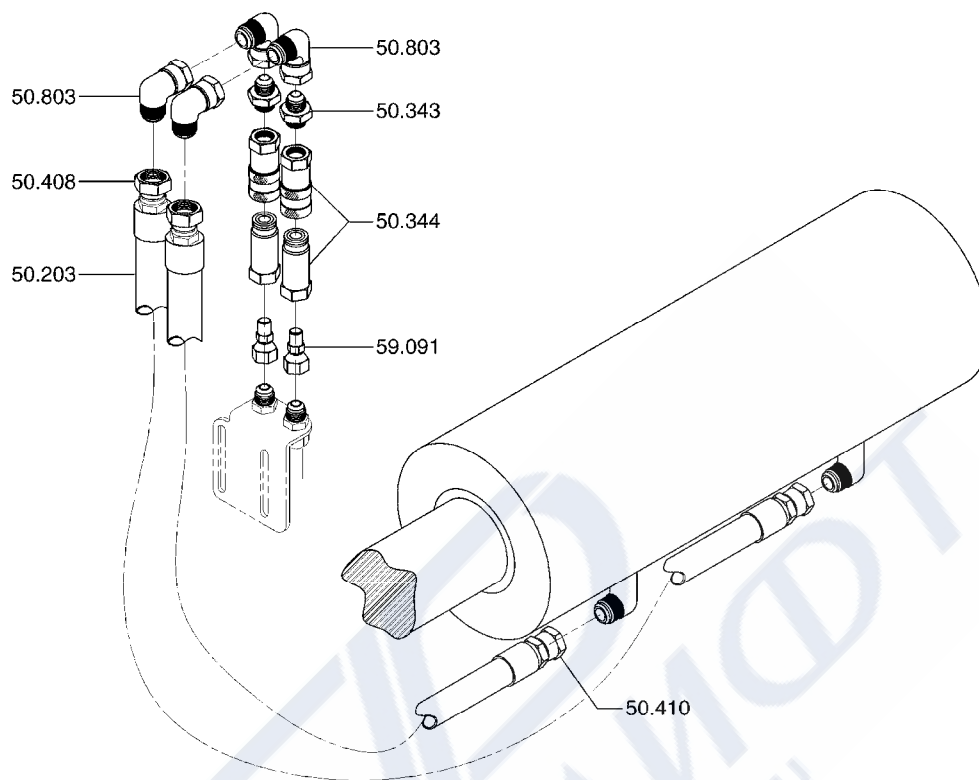 

ATTACHMENT HOSE ADAPTATION (CARRIAGE)


50-797

50.203	LINE, DEVICE HYDRAULIC (AT CARRIAGE) 라인
50.343	FITTING, DEVICE LH LINE 피팅
50.344	FITTING, DEVICE LH LINE 피팅
50.408	COUPLING, DEVICE HOSE 커플링
50.410	COUPLING, DEVICE HOSE 커플링
50.803	FITTING, DEVICE HYDRAULIC LINE 피팅
59.091	FITTING, DEVICE HYDRAULIC LINE 피팅

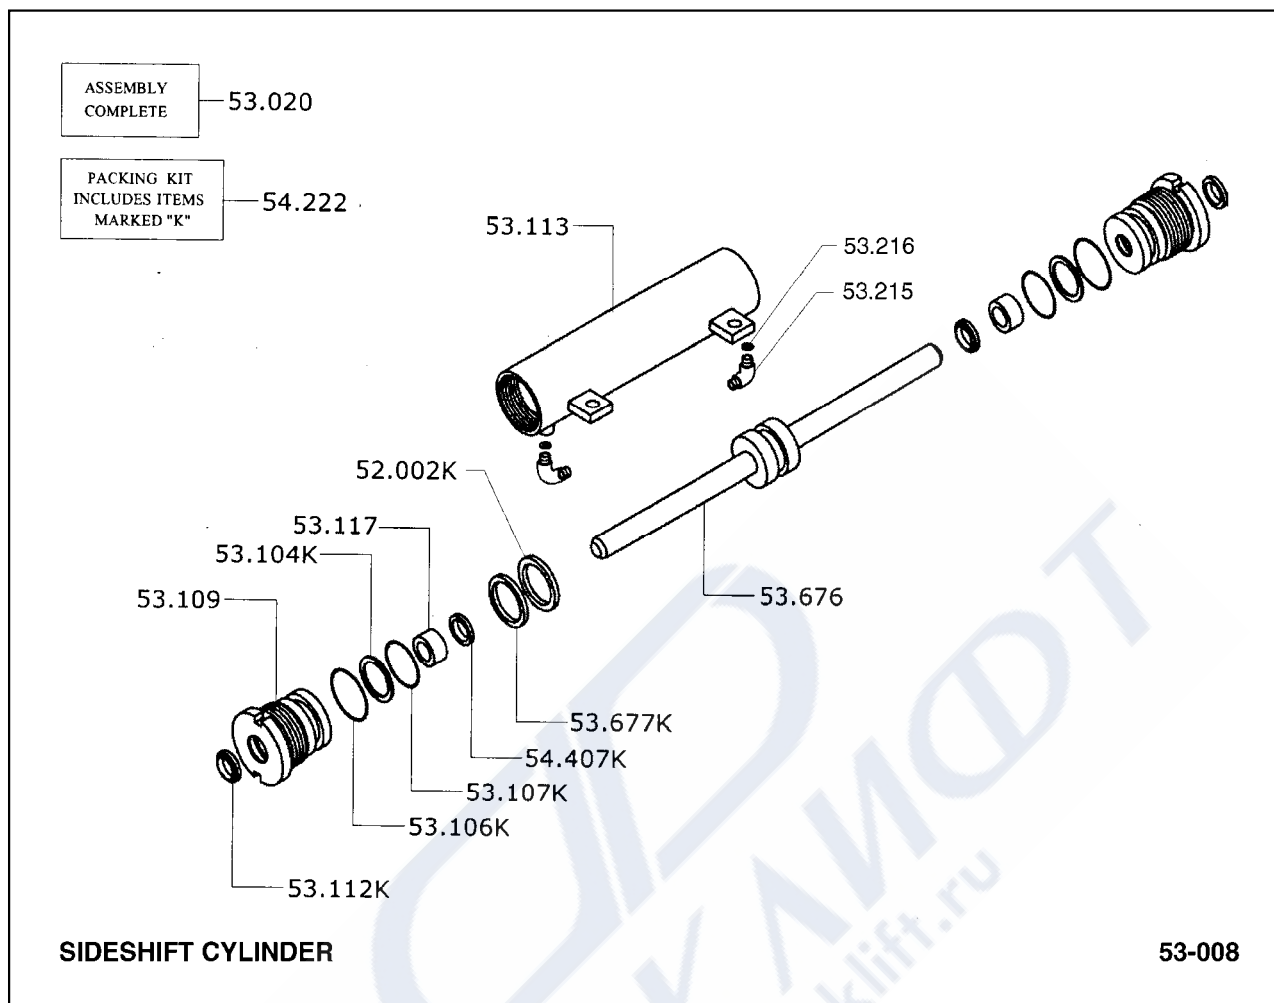 


52.002	RING, CLAMP SIDE SHIFT LIMIT CYL PISTON WEAR 링
53.020	CYLINDER ASSEMBLY, SIDE SHIFTER 실린더
53.104	RING, SIDE SHIFTER CYL PISTON PACKING BACK-UP 링
53.106	SEAL, SIDE SHIFTER CYLINDER GLAND 씰
53.107	RING, SIDE SHIFT CYL GLAND SEAL BACK-UP 링
53.109	GLAND, SIDE SHIFTER CYLINDER 그랜드
53.112	WIPER, SIDE SHIFTER CYLINDER PISTON ROD 와이퍼
53.113	CYLINDER ASSEMBLY, WELDED SIDE SHIFTER 실린더
53.117	BUSHING, SIDE SHIFTER CYLINDER GLAND 부싱

53.215	FITTING, SIDE SHIFTER CYLINDER ROD PORT 피팅
53.216	SEAL, SIDE SHIFTER CYLINDER ROD PORT FITTING 씰
53.676	ROD, SIDE SHIFTER CYLINDER PISTON 로드
53.677	SEAL, SIDE SHIFTER CYLINDER PISTON 씰
54.222	PACKING KIT, SIDE SHIFTER CYLINDER 패킹키트
54.407	SEAL, SIDE SHIFTER CYLINDER PORT ROD 씰

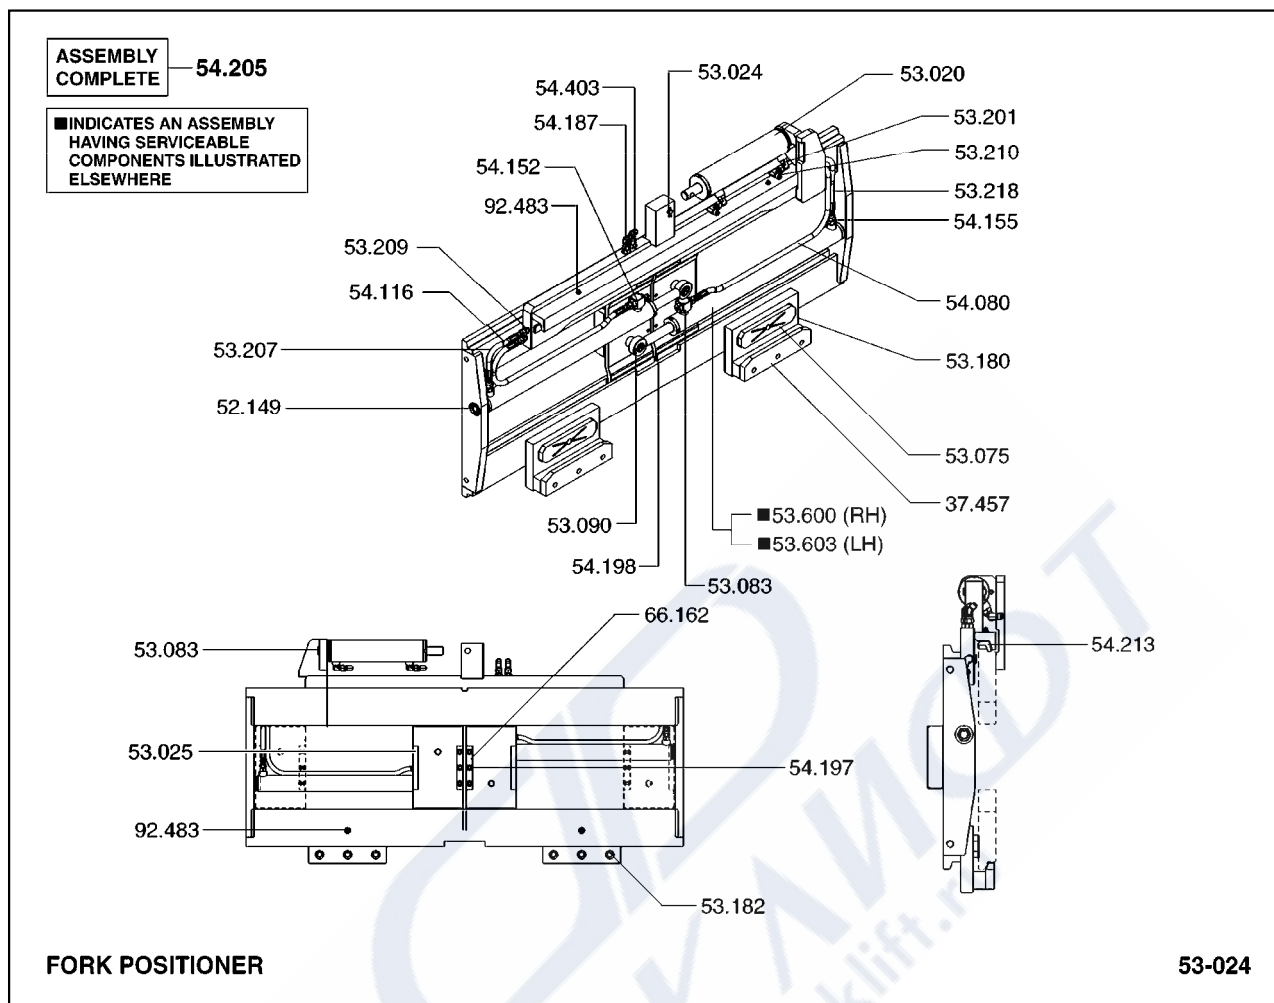 



37.457	HOOK, CAB CLOTHING HANGER 후크	53.600	CYLINDER ASSEMBLY, INBOARD RH FORK 실린더
52.149	NUT, SIDE SHIFT CYLINDER ANCHOR PORT LINE FITTING 너트	53.603	CYLINDER ASSEMBLY, INBOARD LH FORK 실린더
53.020	CYLINDER ASSEMBLY, SIDE SHIFTER 실린더	54.080	LINE, SIDE SHIFT CYLINDER ANCHOR PORT 라인
53.024	ANCHOR, SIDE SHIFTER CYLINDER BASE 앵커	54.116	LINE, SIDE SHIFT CYLINDER ROD PORT 라인
53.025	GUIDE, SIDE SHIFTER MOVABLE FRAME LOWER 가이드	54.152	FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT LINE 피팅
53.075	BEARING, SIDE SHIFTER (LOWER) 베어링	54.155	FITTING, SIDE SHIFTER CYLINDER ROD PORT LINE 피팅
53.083	FASTENER, SIDE SHIFTER CYLINDER ANCHOR 패스너	54.187	FITTING, SIDE SHIFTER ANCHOR PORT LINE 피팅
53.090	FASTENER, SIDE SHIFTER MOVABLE FRAME 패스너	54.197	FASTENER, SIDE SHIFTING BASE PLATE TO ARM 패스너
53.180	SPACER, SIDE SHIFTER BEARING 스페이서	54.198	BEARING, SIDE SHIFTER BASE PLATE ARM 베어링
53.182	FASTENER, SIDE SHIFTER HANGER 패스너	54.205	ATTACHMENT, FORK POSITIONER 어태치먼트
53.201	FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT 피팅	54.213	BEARING, SIDE SHIFTER (UPPER) 베어링
53.207	LINE, SIDE SHIFTER CYLINDER ANCHOR PORT 라인	54.403	FITTING-LUB, SIDE SHIFTER BASE PLATE ARM 피팅
53.209	FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT LINE 피팅	66.162	STOP, CARRIAGE TRAVEL 스톱
53.210	FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT LINE 피팅	92.483	NIPPLE, LUBRICATION 니플
53.218	LINE, SIDE SHIFTER CYLINDER ROD PORT 라인		

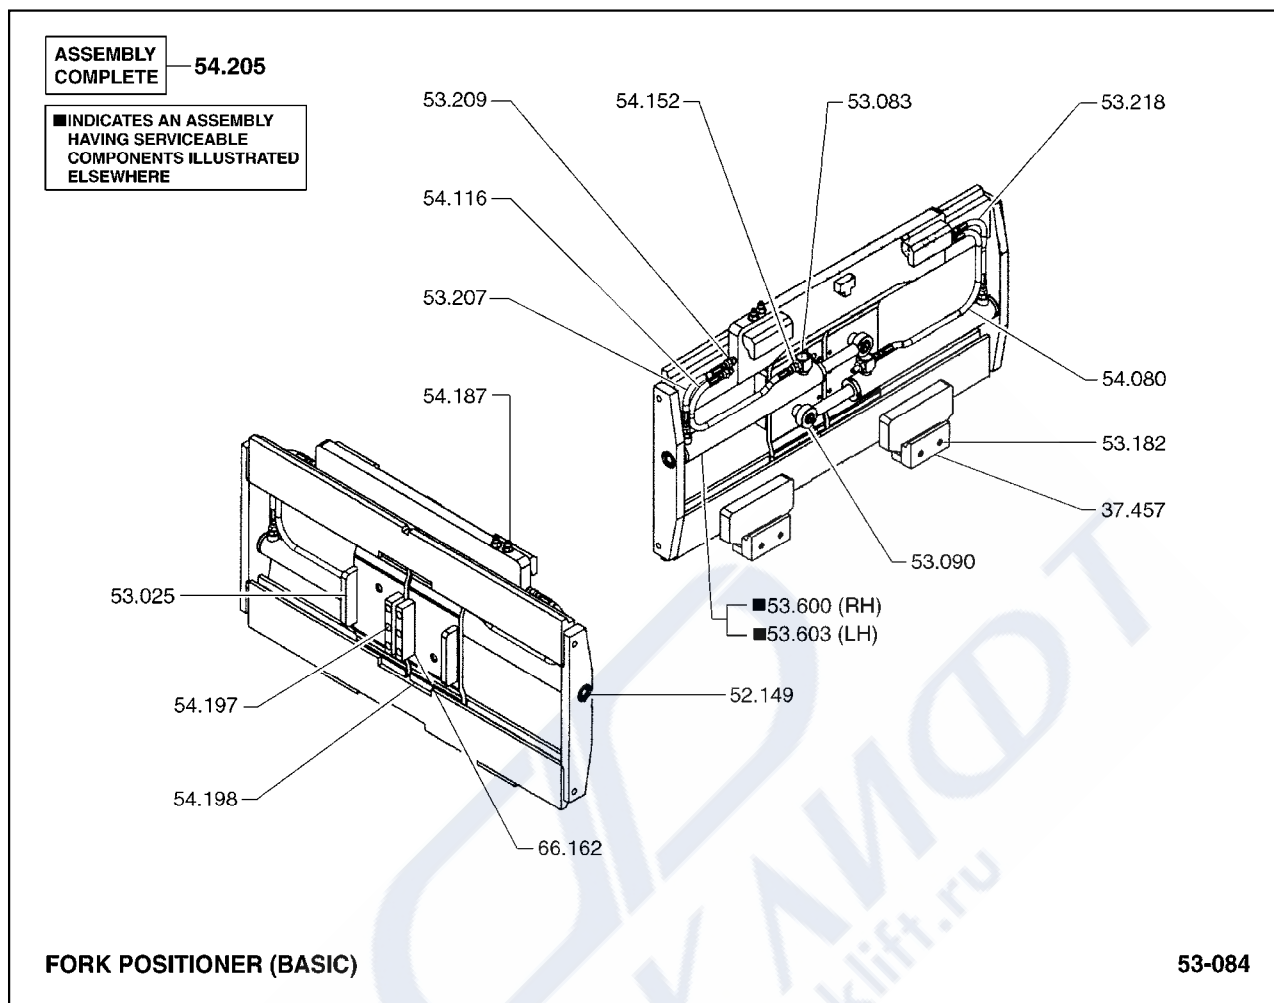 


37.457	HOOK, CAB CLOTHING HANGER 후크
52.149	NUT, SIDE SHIFTER CYLINDER ANCHOR PORT LINE FITTING 너트
53.025	GUIDE, SIDE SHIFTER MOVABLE FRAME LOWER 가이드
53.083	FASTENER, SIDE SHIFTER CYLINDER ANCHOR 패스너
53.090	FASTENER, SIDE SHIFTER MOVABLE FRAME 패스너
53.182	FASTENER, SIDE SHIFTER HANGER 패스너
53.207	LINE, SIDE SHIFTER CYLINDER ANCHOR PORT 라인
53.209	FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT LINE 피팅
53.218	LINE, SIDE SHIFTER CYLINDER ROD PORT 라인

53.600	CYLINDER ASSEMBLY, INBOARD RH FORK 실린더
53.603	CYLINDER ASSEMBLY, INBOARD LH FORK 실린더
54.080	LINE, SIDE SHIFT CYLINDER ANCHOR PORT 라인
54.116	LINE, SIDE SHIFT CYLINDER ROD PORT 라인
54.152	FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT LINE 피팅
54.187	FITTING, SIDE SHIFTER ANCHOR PORT LINE 피팅
54.197	FASTENER, SIDE SHIFTING BASE PLATE TO ARM 패스너
54.198	BEARING, SIDE SHIFTER BASE PLATE ARM 베어링
54.205	ATTACHMENT, FORK POSITIONER 어태치먼트
66.162	STOP, CARRIAGE TRAVEL 스톱

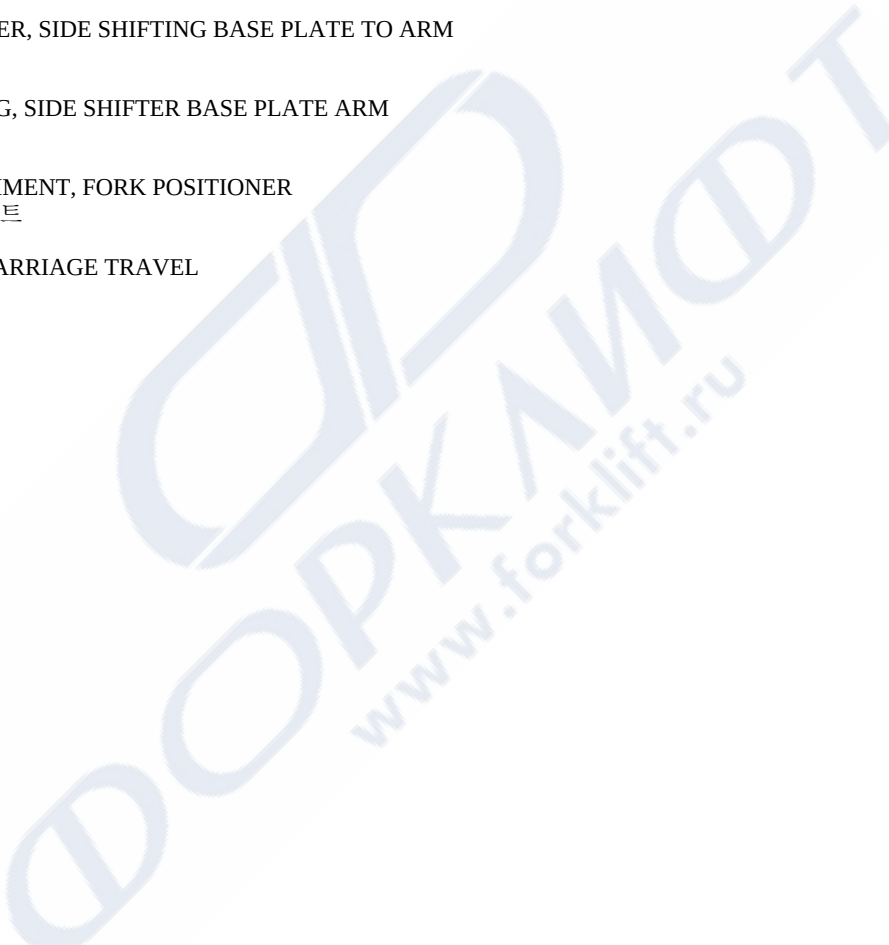 

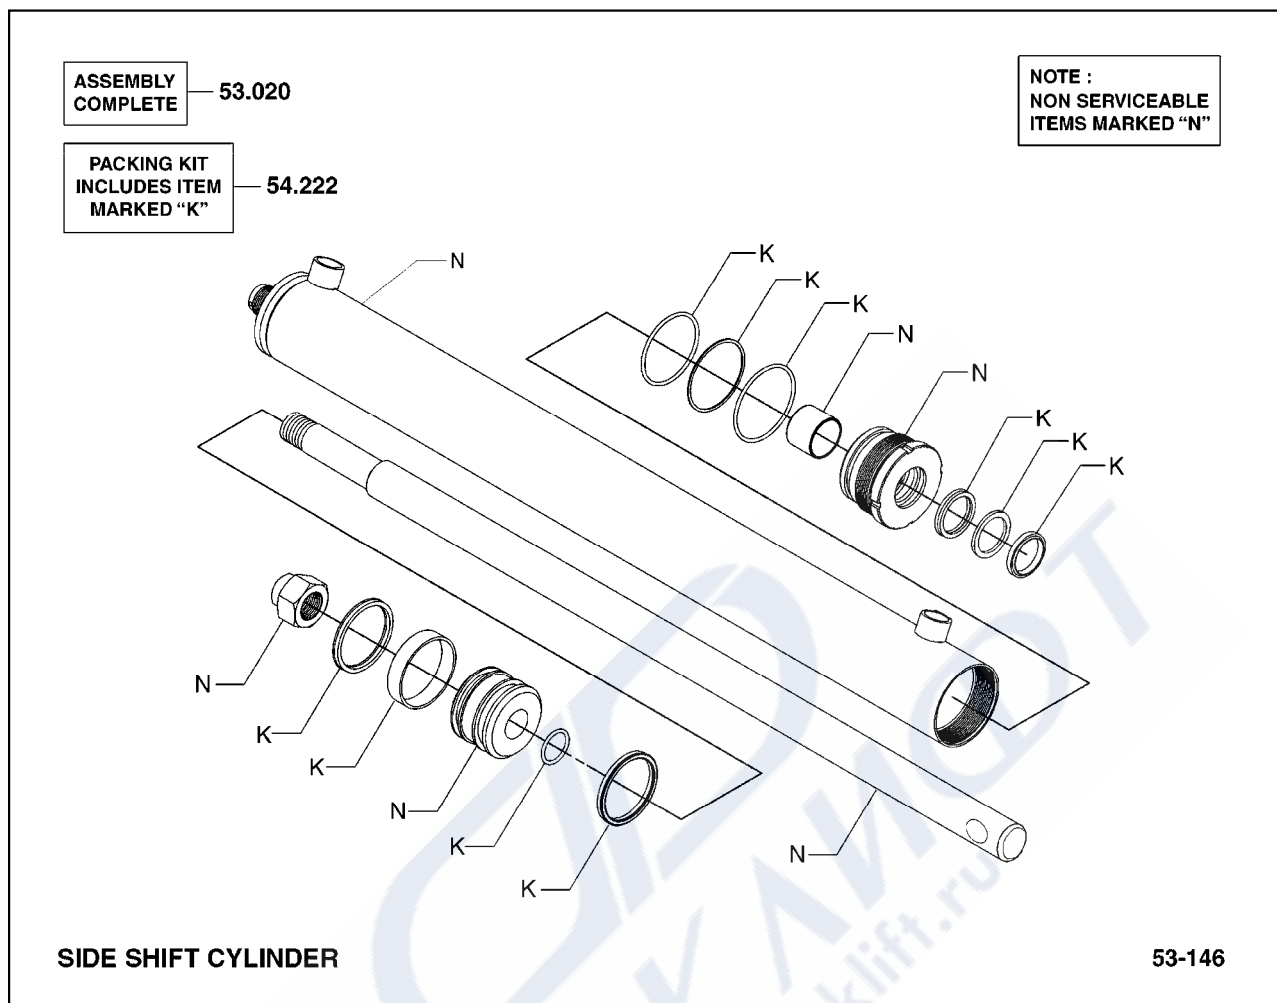 

 - 53.020 CYLINDER ASSEMBLY, SIDE SHIFTER
실린더
- 54.222 PACKING KIT, SIDE SHIFTER CYLINDER
패킹키트

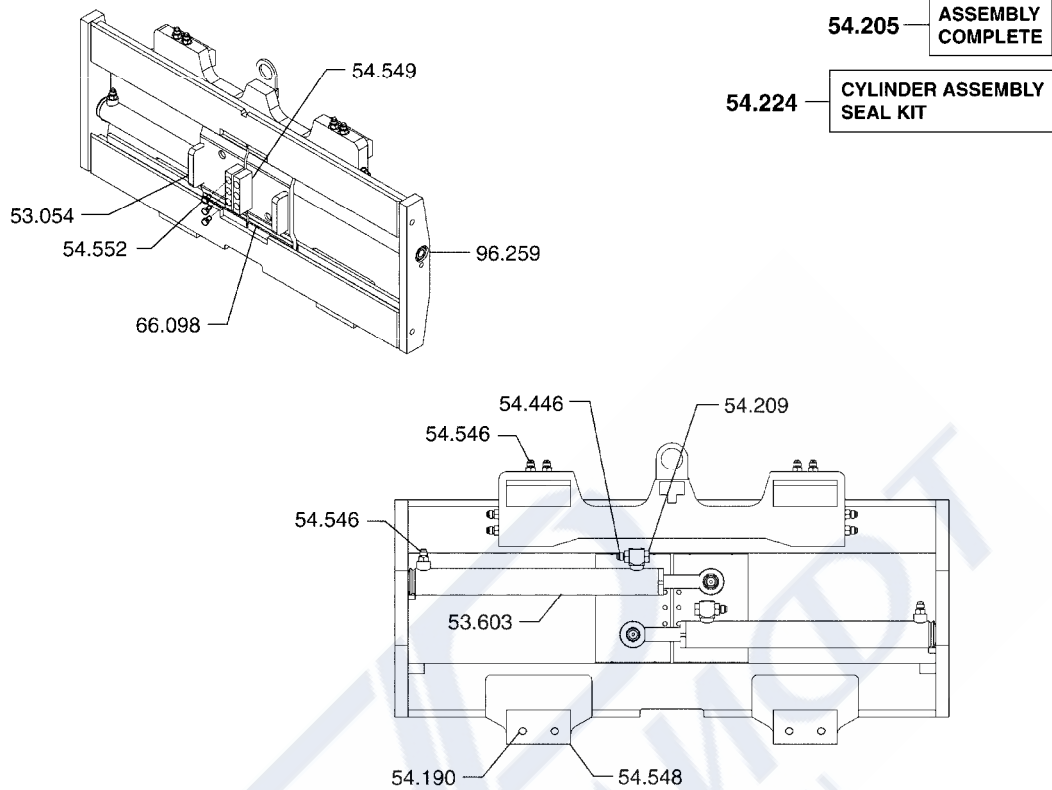


FORK POSITIONER

53-164

53.054	GUIDE, FORK 가이드
53.603	CYLINDER ASSEMBLY, INBOARD LH FORK 실린더
54.190	FASTENER, FORK HANGER SUPPORT 패스너
54.205	ATTACHMENT, FORK POSITIONER 어태치먼트
54.209	PLUG, FORK CYLINDER FLOW DIVIDER 플러그
54.224	PACKING KIT, LH FORK CYLINDER 패킹키트
54.446	FITTING - LUB, FORK POSITIONER 피팅
54.546	FITTING - LUB, FORK POSITIONER 피팅
54.548	HOOK, FORK POSITIONER HANGER 후크


54.549	STOP, FORK POSITIONER CYLINDER 스톱
54.552	FASTENER, FORK POSITIONER CYLINDER STOP 패스너
66.098	BEARING, FORK HORIZONTAL THRUST ROLLER 베어링
96.259	FASTENER, FORK CYLINDER ANCHOR END PIN RETAINER 패스너



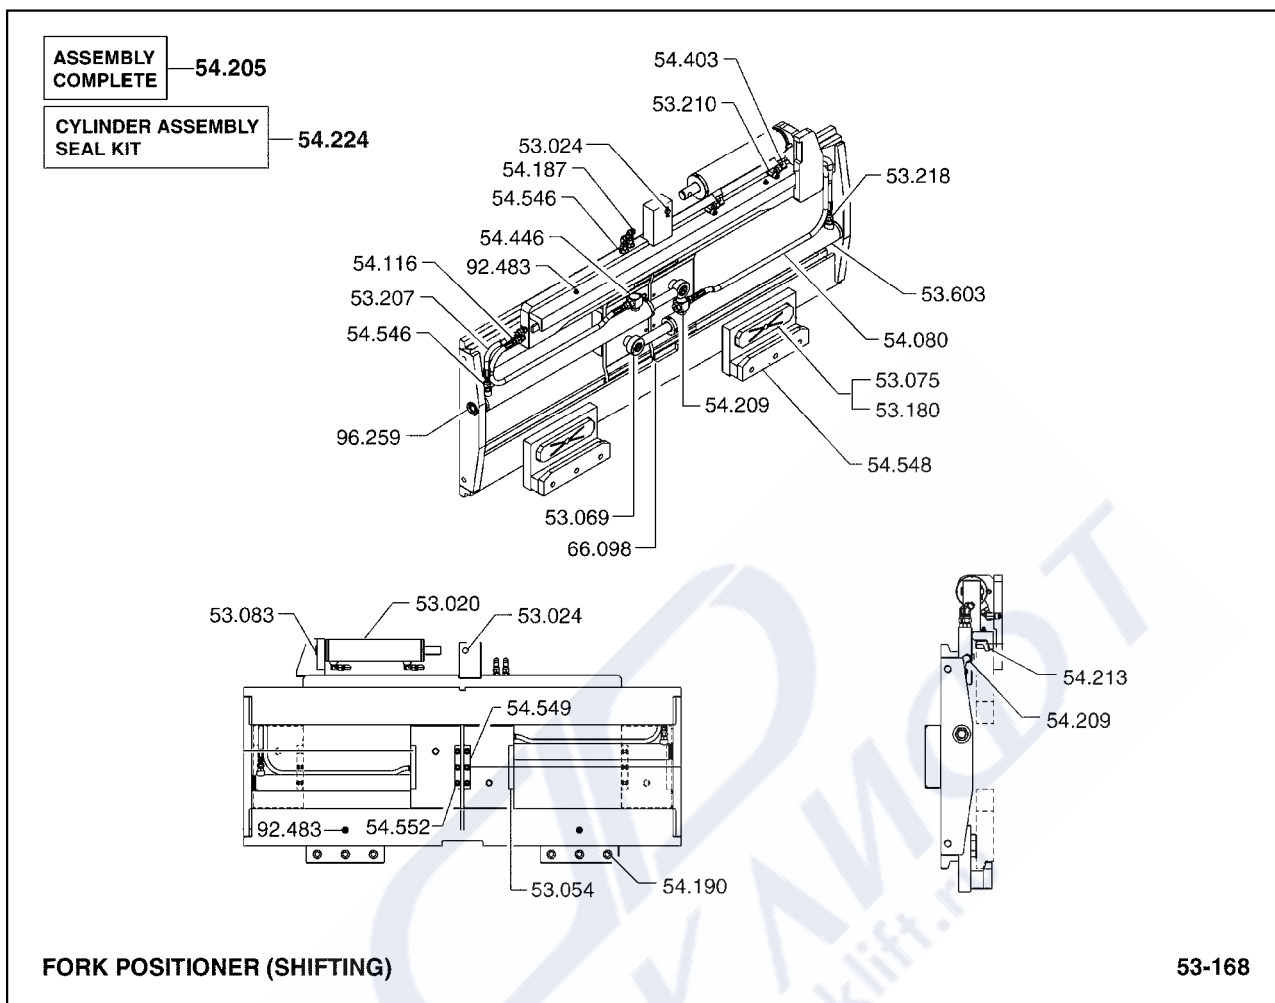 


53.020	CYLINDER ASSEMBLY, SIDE SHIFTER 실린더
53.024	ANCHOR, SIDE SHIFTER CYLINDER BASE 앵커
53.054	GUIDE, FORK 가이드
53.069	FASTENER, FORK CYLINDER ROD END 패스너
53.075	BEARING, SIDE SHIFTER (LOWER) 베어링
53.083	FASTENER, SIDE SHIFTER CYLINDER ANCHOR 패스너
53.180	SPACER, SIDE SHIFTER BEARING 스페이서
53.207	LINE, SIDE SHIFTER CYLINDER ANCHOR PORT 라인
53.210	FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT LINE 피팅


53.218	LINE, SIDE SHIFTER CYLINDER ROD PORT 라인
53.603	CYLINDER ASSEMBLY, INBOARD LH FORK 실린더
54.080	LINE, SIDE SHIFT CYLINDER ANCHOR PORT 라인
54.116	LINE, SIDE SHIFT CYLINDER ROD PORT 라인
54.187	FITTING, SIDE SHIFTER ANCHOR PORT LINE 피팅
54.190	FASTENER, FORK HANGER SUPPORT 패스너
54.205	ATTACHMENT, FORK POSITIONER 어태치먼트
54.209	PLUG, FORK CYLINDER FLOW DIVIDER 플러그
54.213	BEARING, SIDE SHIFTER (UPPER) 베어링
54.224	PACKING KIT, LH FORK CYLINDER 패킹키트
54.403	FITTING-LUB, SIDE SHIFTER BASE PLATE ARM 피팅
54.446	FITTING - LUB, FORK POSITIONER 피팅
54.546	FITTING - LUB, FORK POSITIONER 피팅
54.548	HOOK, FORK POSITIONER HANGER 후크
54.549	STOP, FORK POSITIONER CYLINDER 스톱
54.552	FASTENER, FORK POSITIONER CYLINDER STOP 패스너
66.098	BEARING, FORK HORIZONTAL THRUST ROLLER 베어링
92.483	NIPPLE, LUBRICATION 니플
96.259	FASTENER, FORK CYLINDER ANCHOR END PIN RETAINER 패스너

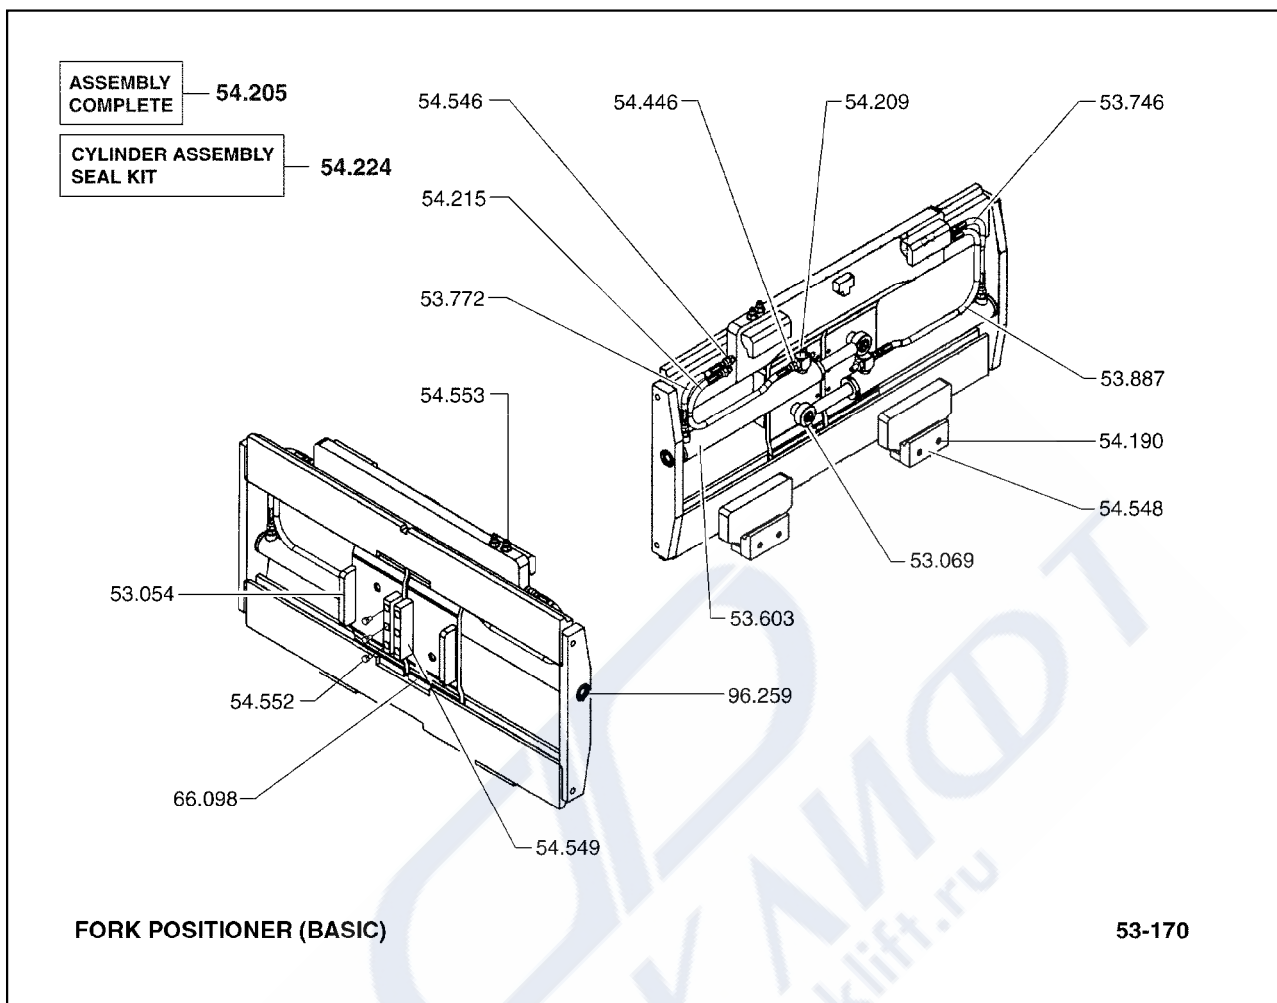 

53.054	GUIDE, FORK 가이드
53.069	FASTENER, FORK CYLINDER ROD END 패스너
53.603	CYLINDER ASSEMBLY, INBOARD LH FORK 실린더
53.746	LINE, FORK CYLINDER ROD END 라인
53.772	LINE, FORK CYLINDER ANCHOR END 라인
53.887	LINE, FORK CYLINDER ANCHOR END 라인
54.190	FASTENER, FORK HANGER SUPPORT 패스너
54.205	ATTACHMENT, FORK POSITIONER 어태치먼트
54.209	PLUG, FORK CYLINDER FLOW DIVIDER 플러그

54.215	LINE, FORK CYLINDER ROD END 라인
54.224	PACKING KIT, LH FORK CYLINDER 패킹키트
54.446	FITTING - LUB, FORK POSITIONER 피팅
54.546	FITTING - LUB, FORK POSITIONER 피팅
54.548	HOOK, FORK POSITIONER HANGER 후크
54.549	STOP, FORK POSITIONER CYLINDER 스톱
54.552	FASTENER, FORK POSITIONER CYLINDER STOP 패스너
54.553	FITTING - LUB, FORK POSITIONER 피팅
66.098	BEARING, FORK HORIZONTAL THRUST ROLLER 베어링
96.259	FASTENER, FORK CYLINDER ANCHOR END PIN RETAINER 패스너

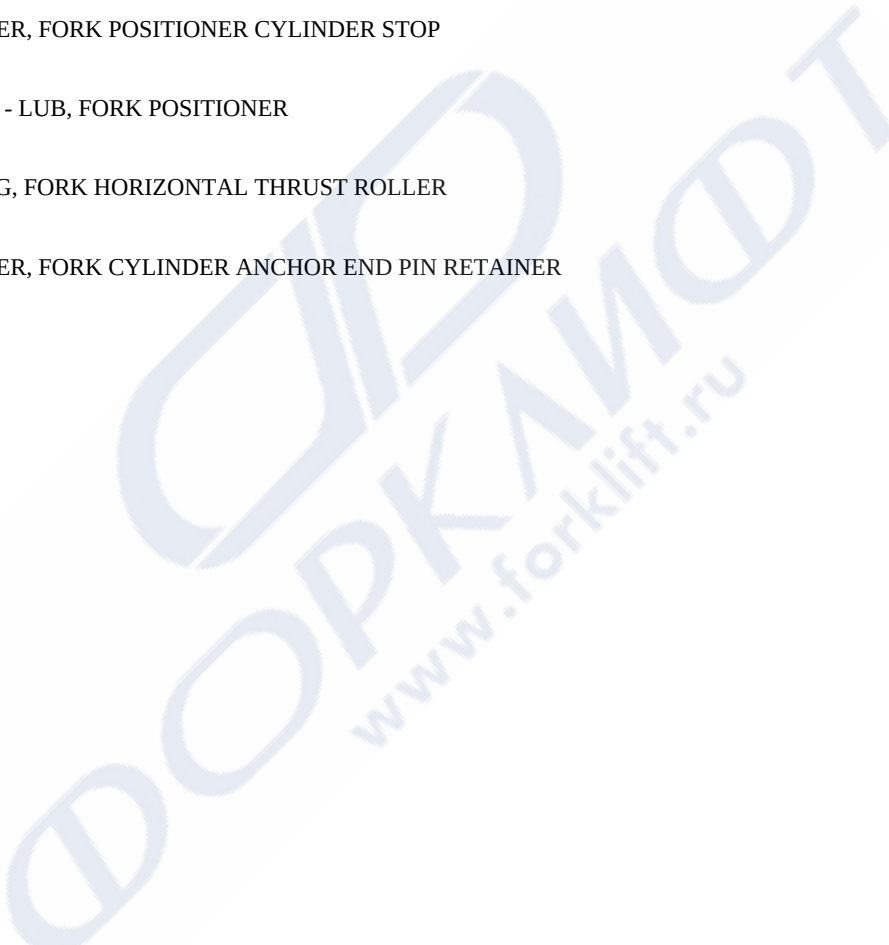 

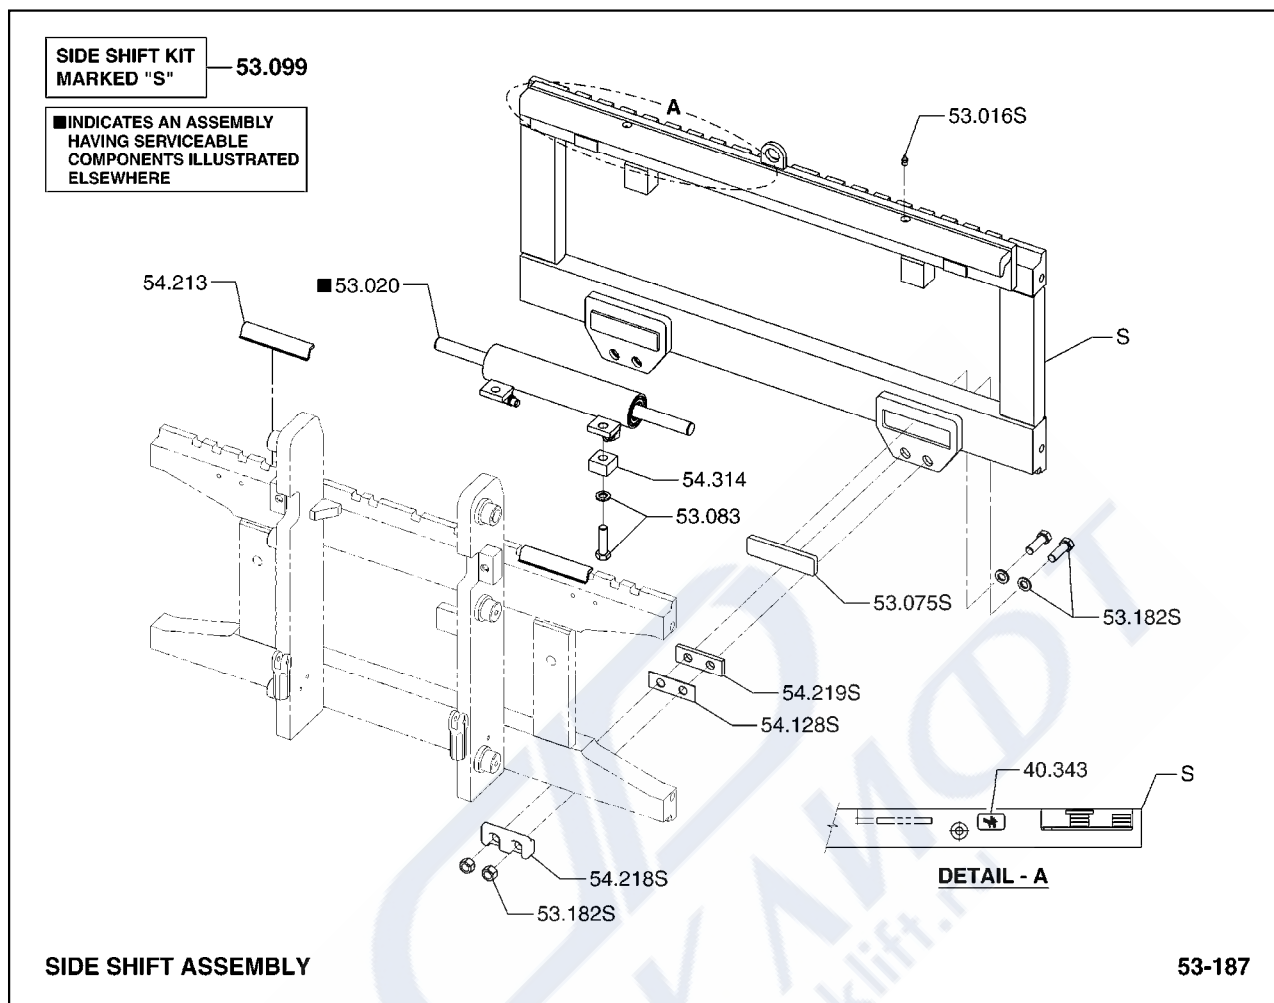 


40.343	DECAL, ATTACHMENT SAFETY 데칼
53.016	FITTING-LUB, SIDE SHIFTER MOVABLE FRAME SUPPORT SH 피팅
53.020	CYLINDER ASSEMBLY, SIDE SHIFTER 실린더
53.075	BEARING, SIDE SHIFTER (LOWER) 베어링
53.083	FASTENER, SIDE SHIFTER CYLINDER ANCHOR 패스너
53.099	SIDE SHIFTER, DEVICE 사이드쉬프트
53.182	FASTENER, SIDE SHIFTER HANGER 패스너
54.128	SPACER, SIDE SHIFTER MOVEABLE FRAME BEARING 스페이서
54.213	BEARING, SIDE SHIFTER (UPPER) 베어링

54.218	HOOK, SIDE SHIFTER HANGER 후크
54.219	SPACER, SIDE SHIFTING BASE PLATE HANGER 스페이서
54.314	SPACER, SIDE SHIFTER CYLINDER REAR 스페이서



ASSEMBLY
COMPLETE — 53.020

 PACKING KIT
INCLUDES ITEMS
MARKED "K" — 54.222

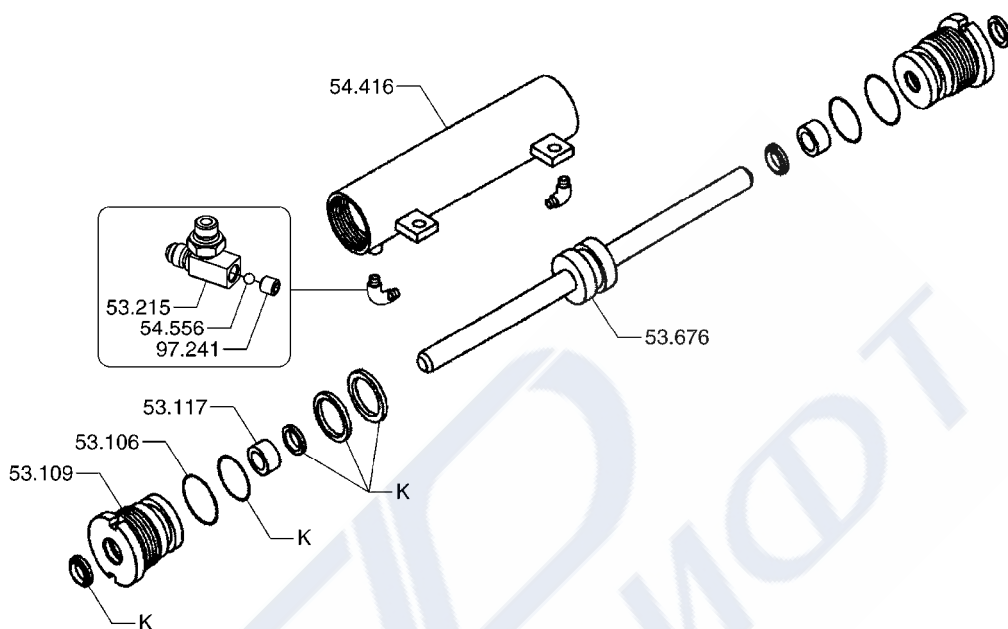


SIDESHIFT CYLINDER

53-198

53.020	CYLINDER ASSEMBLY, SIDE SHIFTER 실린더
53.109	GLAND, SIDE SHIFTER CYLINDER 그랜드
53.110	RETAINER, SIDE SHIFTER CYLINDER GLAND 리테이너
53.117	BUSHING, SIDE SHIFTER CYLINDER GLAND 부싱
53.215	FITTING, SIDE SHIFTER CYLINDER ROD PORT 피팅
53.676	ROD, SIDE SHIFTER CYLINDER PISTON 로드
54.222	PACKING KIT, SIDE SHIFTER CYLINDER 패킹키트
54.416	BARREL, SIDE SHIFT CYLINDER 배럴
54.556	BALL, SIDE SHIFTER CYLINDER ROD PORT 볼

 97.241 SET SCREW, SIDE SHIFTER CYLINDER ROD PORT
세트스크류




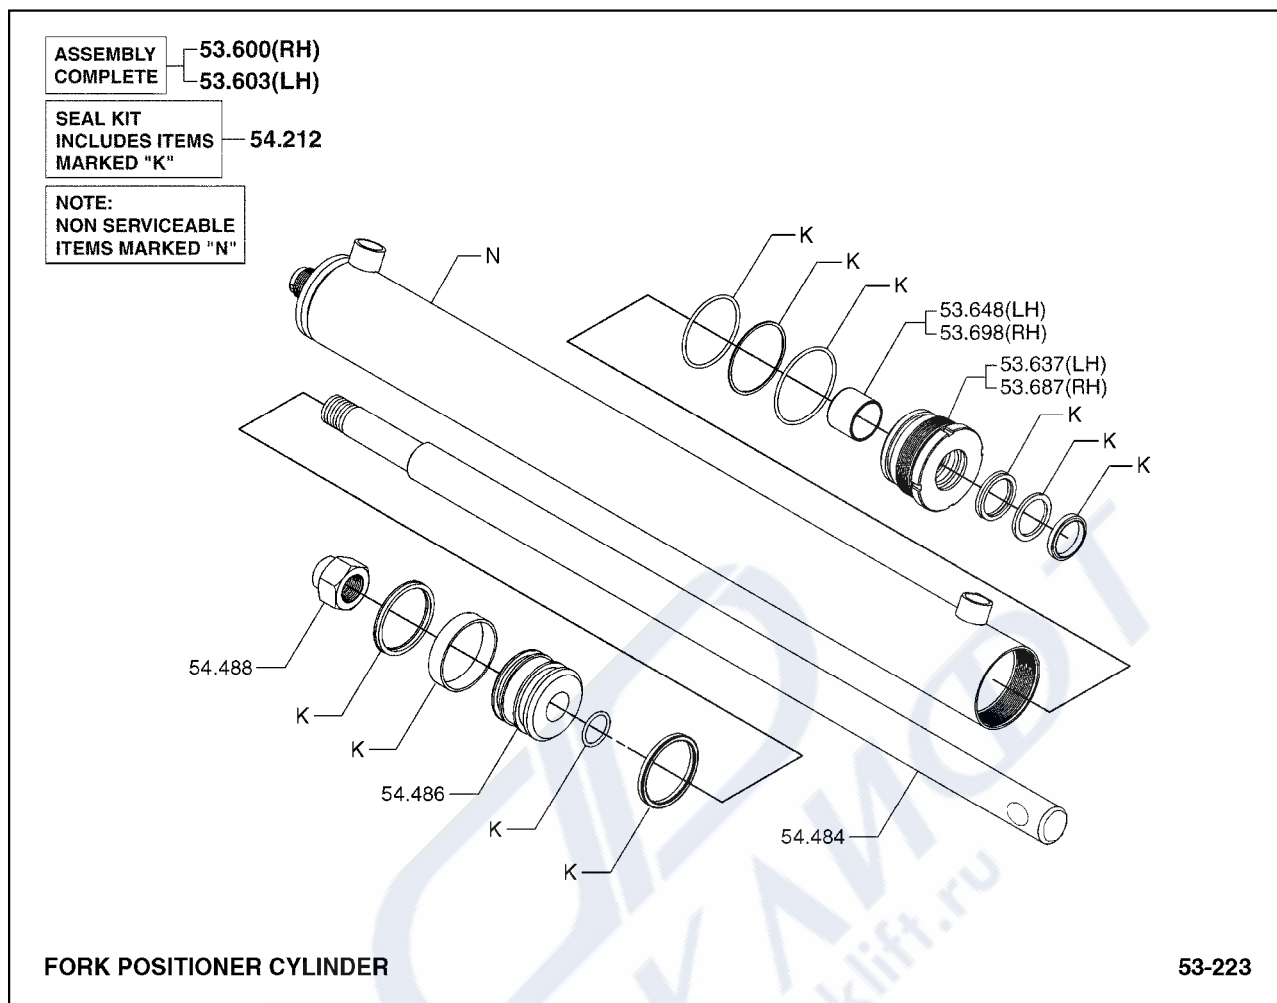

53.600	CYLINDER ASSEMBLY, INBOARD RH FORK 실린더
53.603	CYLINDER ASSEMBLY, INBOARD LH FORK 실린더
53.637	GLAND, INBOARD LH FORK CYLINDER 그랜드
53.648	BUSHING, LH FORK CYLINDER GLAND 부싱
53.687	GLAND, INBOARD RH FORK CYLINDER 그랜드
53.698	BUSHING, RH FORK CYLINDER GLAND 부싱
54.212	SEAL KIT, FORK CYLINDER 씰키트
54.484	ROD, FORK CYLINDER PISTON 로드
54.486	PISTON, FORK CYLINDER 피스톤

 54.488 NUT, FORK CYLINDER PISTON
너트




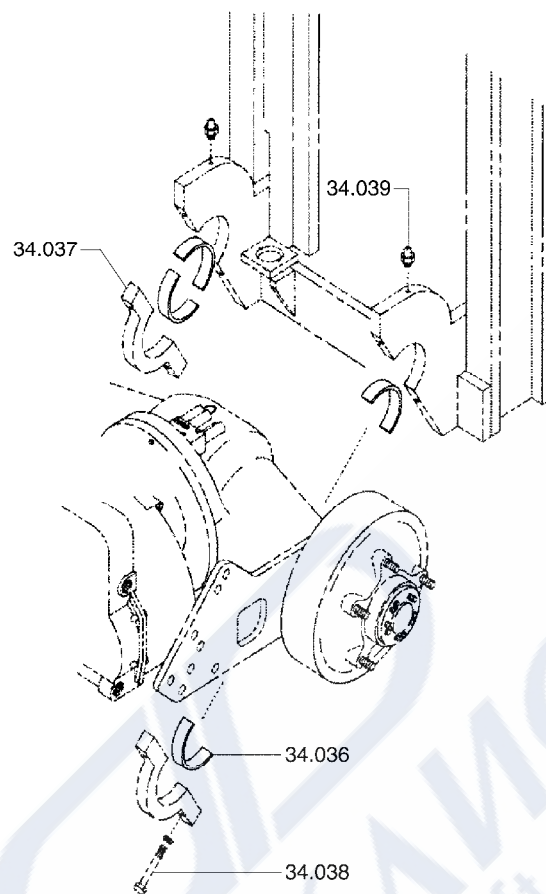


UPRIGHT MOUNTING

66-018


- | | |
|--------|---------------------------------------|
| 34.036 | BUSHING, UPRIGHT TRUNNION
부싱 |
| 34.037 | CAP, UPRIGHT TRUNNION
캡 |
| 34.038 | FASTENER, UPRIGHT TRUNNION CAP
패스너 |
| 34.039 | FITTING-LUB, UPRIGHT TRUNNION
피팅 |

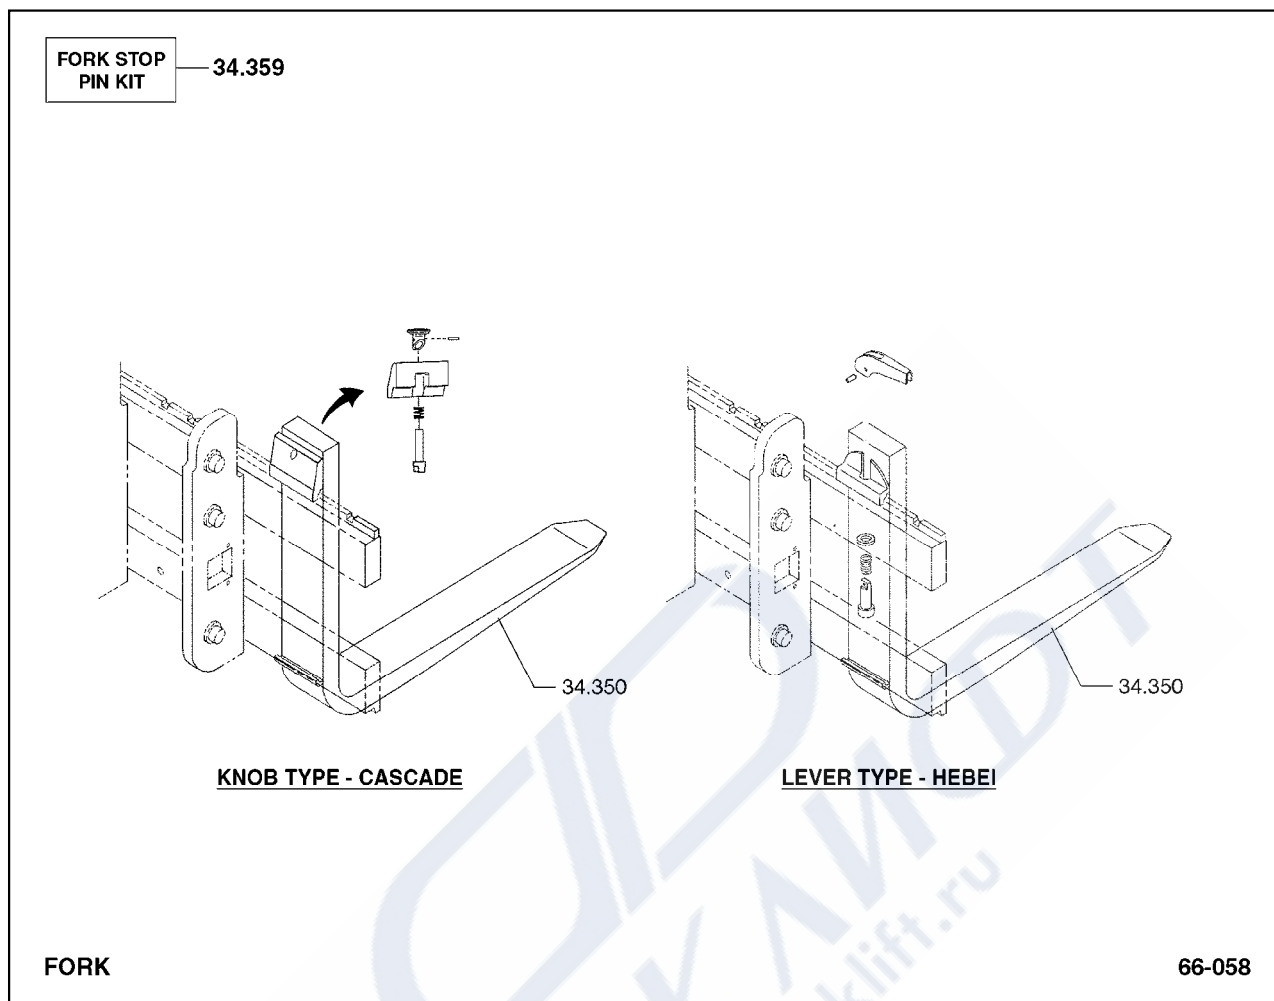 

 
- 34.350 FORK ASSEMBLY
포크
- 34.359 KIT, FORK STOP PIN (CAPTIVE)
키트

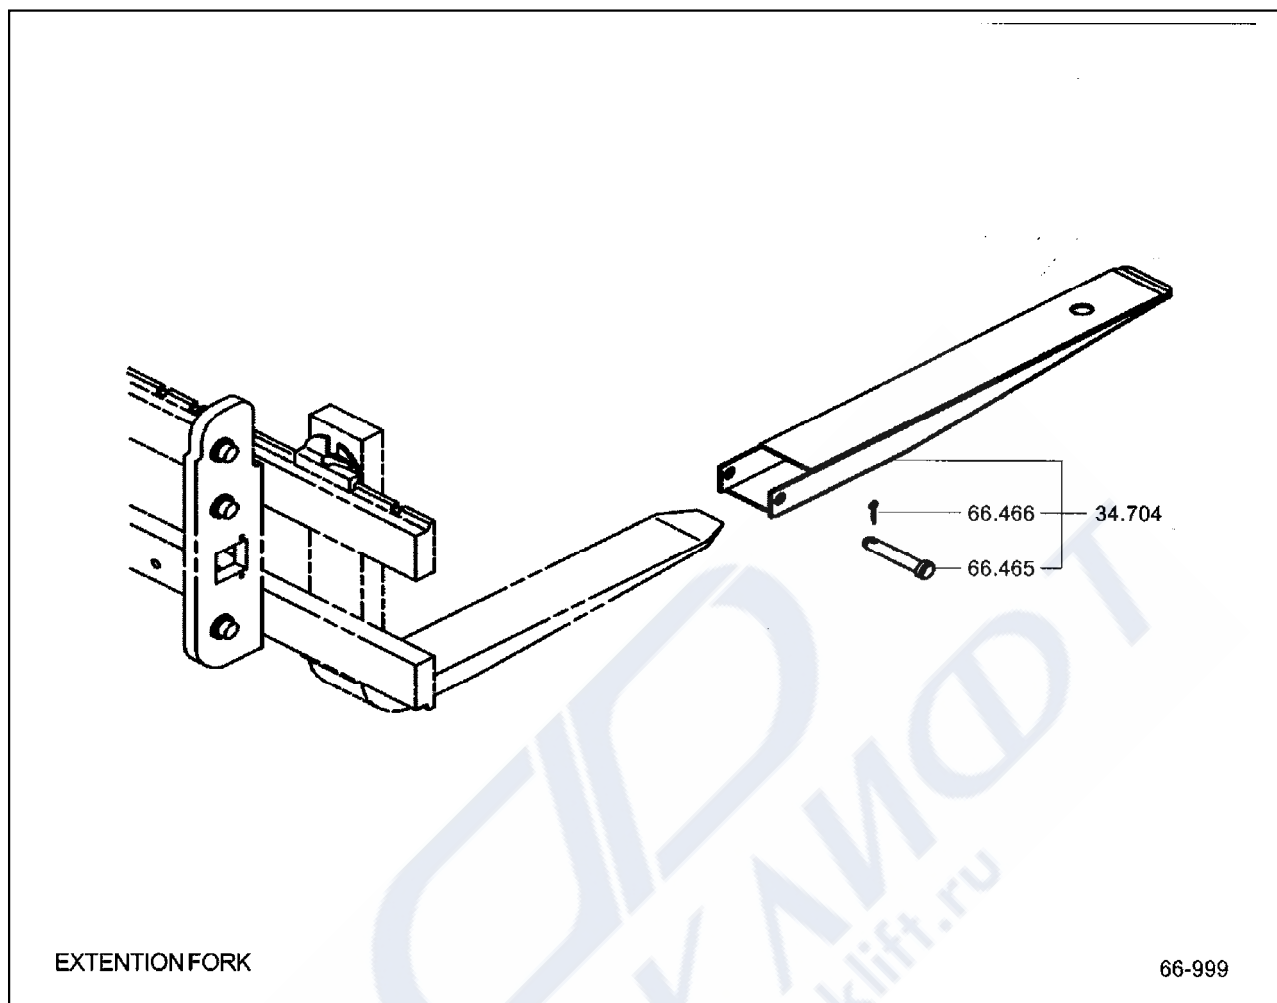


- | | |
|--------|---|
| 34.704 | EXTENSION, FORK ASSEMBLY COMPLETE
익스텐션 |
| 66.465 | PIN, EXTENSION FORK
핀 |
| 66.466 | PIN, EXTENSION FORK
핀 |

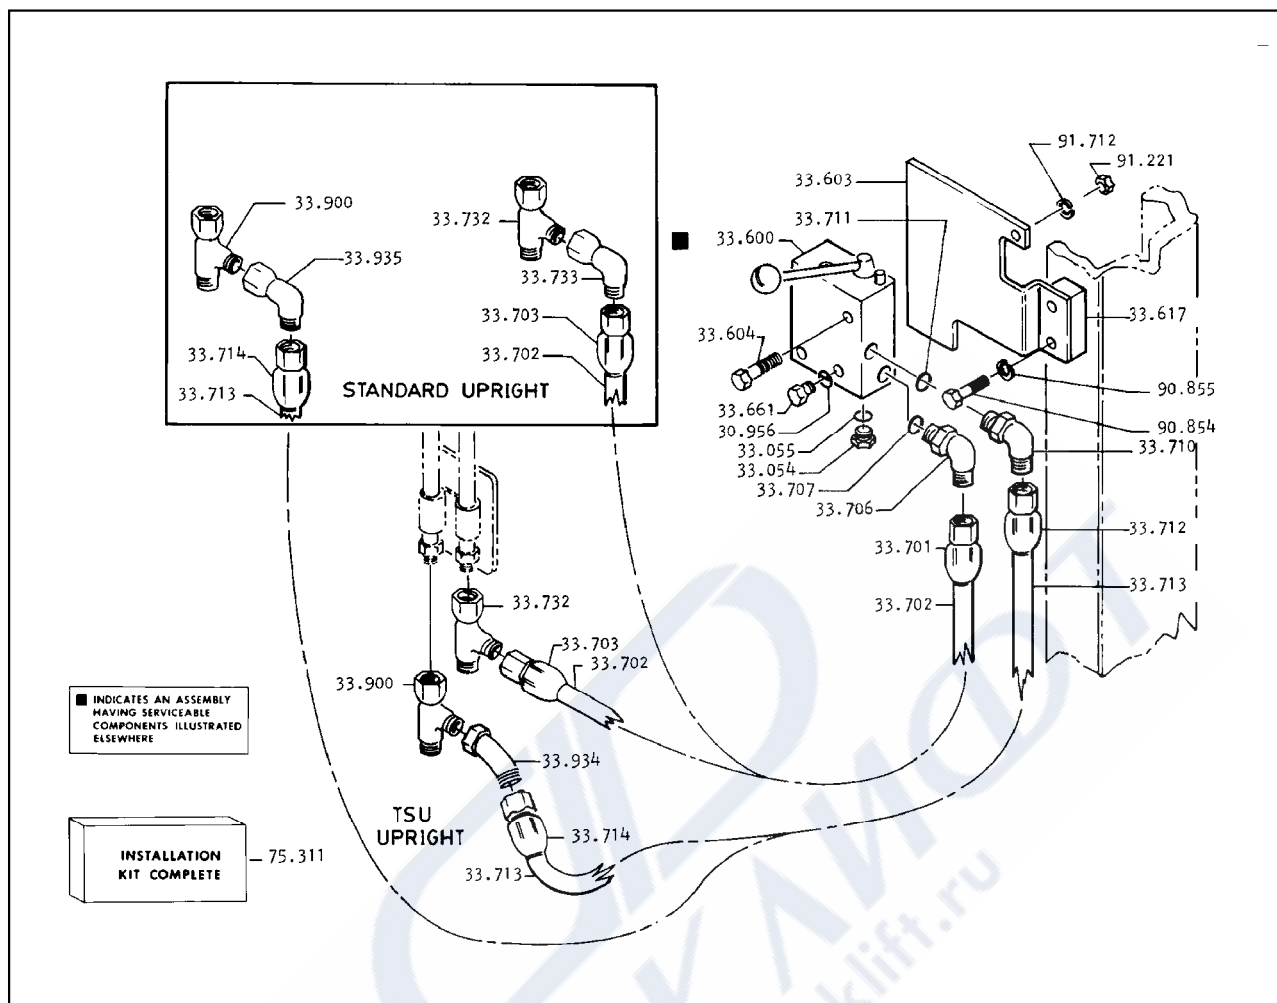 

30.956	SEAL, RELIEF VALVE PLUG 씰	33.712	COUPLING, DEVICE RELIEF VALVE DISCHARGE HOSE 커플링
33.054	PLUG, RELIEF VALVE PORT 플러그	33.713	LINE, DEVICE RELIEF VALVE DISCHARGE 라인
33.055	SEAL, RELIEF VALVE PORT PLUG 씰	33.714	COUPLING, DEVICE RELIEF VALVE DISCHARGE LINE 커플링
33.600	RELIEF VALVE, DEVICE VARIABLE PRESSURE 릴리프밸브	33.732	FITTING, DEVICE RELIEF VALVE INLET 피팅
33.603	BRACKET, DEVICE CARIABLE RELIEF VALVE 브라켓	33.733	FITTING, DEVICE RELIEF VALVE INLET 피팅
33.604	FASTENER, DEVICE VARIABLE RELIEF VALVE 패스너	33.900	FITTING, DEVICE RELIEF VALVE DISCHARGE LINE 피팅
33.617	SPACER, DEV VARIABLE RELIEF VAL BRKT 스페이서	33.934	FITTING, DEVICE RELIEF VALVE DISCHARGE LINE 피팅
33.661	FITTING, DEVICE RELIEF VALVE OUTLET PORT 피팅	33.934	FITTING, DEVICE RELIEF VALVE DISCHARGE LINE 피팅
33.701	COUPLING, DEVICE RELIEF VALVE INLET LINE 커플링	33.935	FITTING, DEVICE RELIEF VALVE DISCHARGE LINE 피팅
33.702	LINE, DEVICE RELIEF VALVE INLET 라인	75.311	KIT, RELIEF VALVE INSTALLATION 키트
33.703	COUPLING, DEVICE RELIEF VALVE INLET LINE 커플링	90.854	BOLT, DEVICE MOUNTING BRACKET FASTENER 볼트
33.706	FITTING, DEVICE RELIEF VALVE INLET PORT 피팅	90.855	LOCKWASHER, DEVICE MOUNTING BRACKET FASTENER 로크와셔
33.707	SEAL, DEVICE RELIEF VALVE INLET PORT FITTING 씰	91.221	NUT, DEV VARIABLE RELIEF VALVE FASTENER 너트
33.710	FITTING, DEVICE RELIEF VALVE DISCHARGE PORT 피팅	91.712	LOCKWASHER, DEVICE RELIEF VALVE FASTENER 로크와셔
33.711	SEAL, DEVICE RELIEF VALVE DISCHARGE PORT FTG 씰		

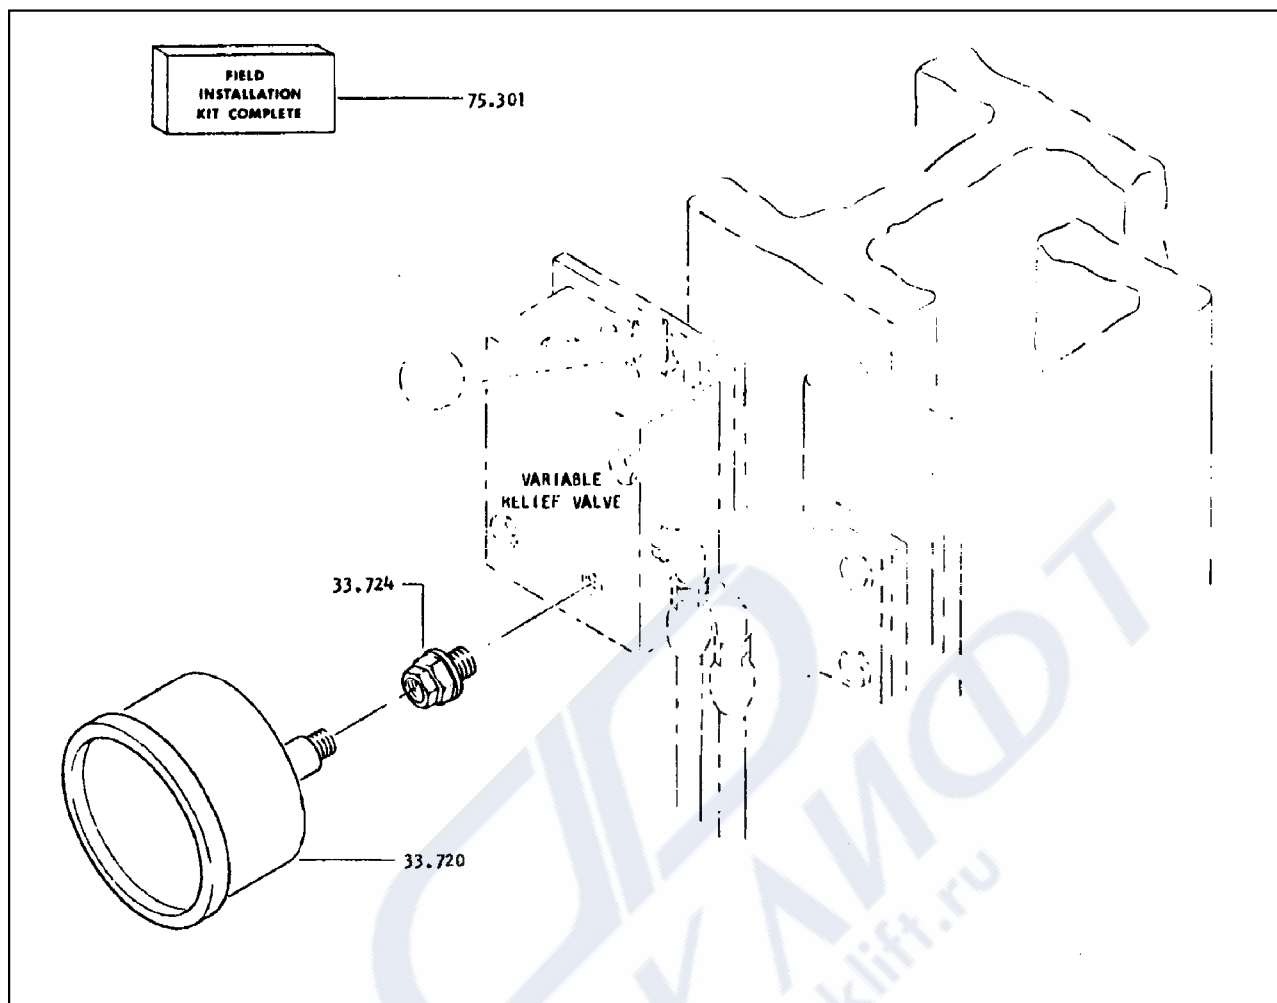 



- | | |
|--------|--|
| 33.720 | GAUGE, DEVICE HYDRAULIC PRESSURE
게이지 |
| 33.724 | FITTING, DEVICE HYD PRESSURE GAUGE
피팅 |
| 75.301 | DEVICE, HYDRAULIC PRESSURE GAUGE
디바이스 |

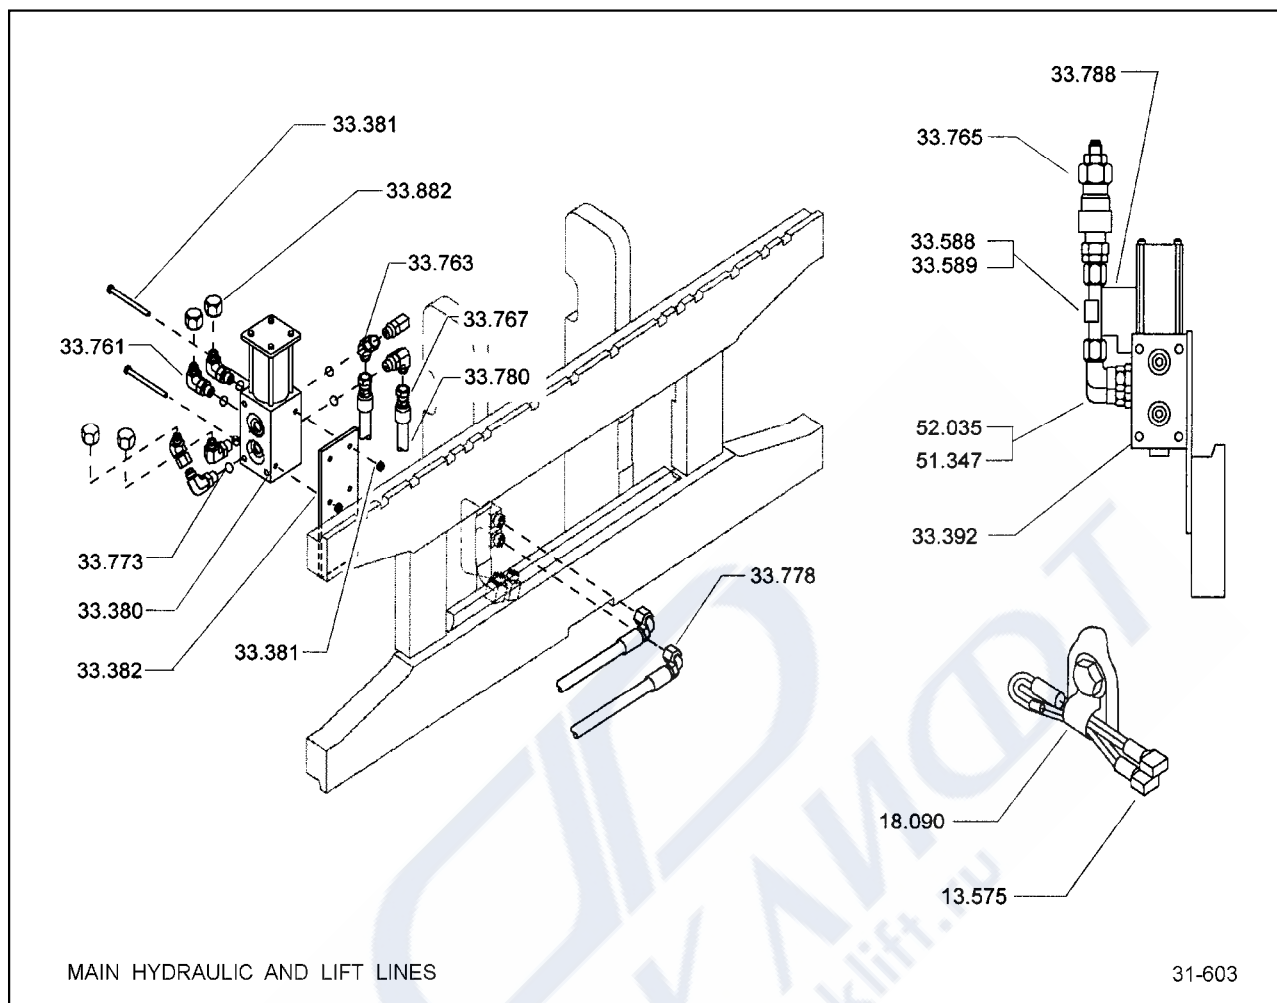 

- | | |
|--------|--|
| 13.575 | WIRE, DEV SELECTOR VALVE SWITCH FEED
와이어 |
| 18.090 | CLIP, REEL WIRE HARNESS
클립 |
| 33.380 | VALVE ASSEMBLY, DEVICE SELECTOR SOLENOID
밸브 |
| 33.381 | FASTENER, DEVICE SELECTOR VALVE
패스너 |
| 33.382 | BRACKET, DEVICE SELECTOR VALVE
브라켓 |
| 33.392 | FASTENER, SECONDARY SELECTOR VALVE
패스너 |
| 33.588 | CLIP, BY-PASS CLAMP LOCK VALVE
클립 |
| 33.589 | FASTENER, BY-PASS CLAMP LOCK VALVE CLIP
패스너 |
| 33.761 | FITTING, DEVICE SELECTOR VALVE C4 PORT
피팅 |

33.763	FITTING, DEVICE SELECTOR VALVE C4 PORT 피팅
33.765	LINE, DEVICE SELECTOR VALVE C4 PORT HYDRAULIC 라인
33.767	HOSE COUPLING, DEV SEL VALVE C1 PORT 호스커플링
33.773	SEAL, DEV SELECTOR VALVE C2 PORT 씰
33.778	HOSE COUPLING, DEV SEL VALVE C3 PORT 호스커플링
33.780	LINE, DEVICE SELECTOR VALVE C2 PORT HYDRAULIC 라인
33.788	BRACKET, DEVICE SEL VALVE HYDRAULIC LINE 브라켓
33.882	PLUG, DEVICE SEL VALVE "P" PORT 플러그
51.347	FITTING, SELECTOR VALVE P PORT 피팅
52.035	FITTING, SEC SEL VALVE C4 PORT LINE 피팅

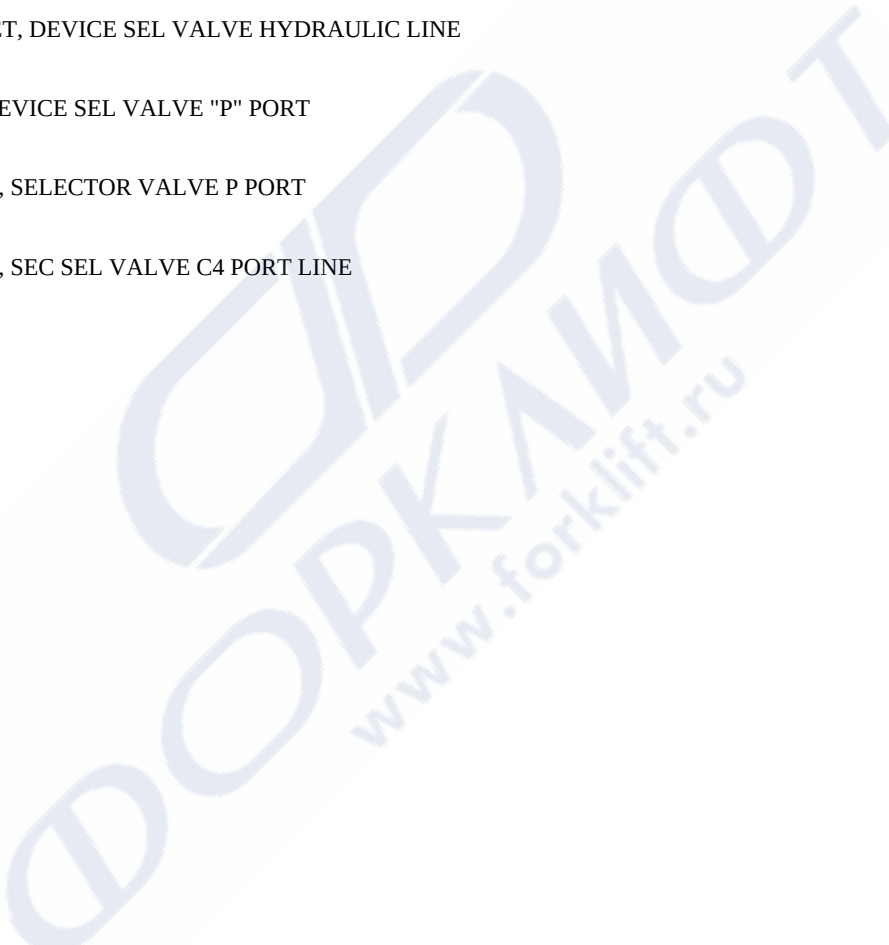 

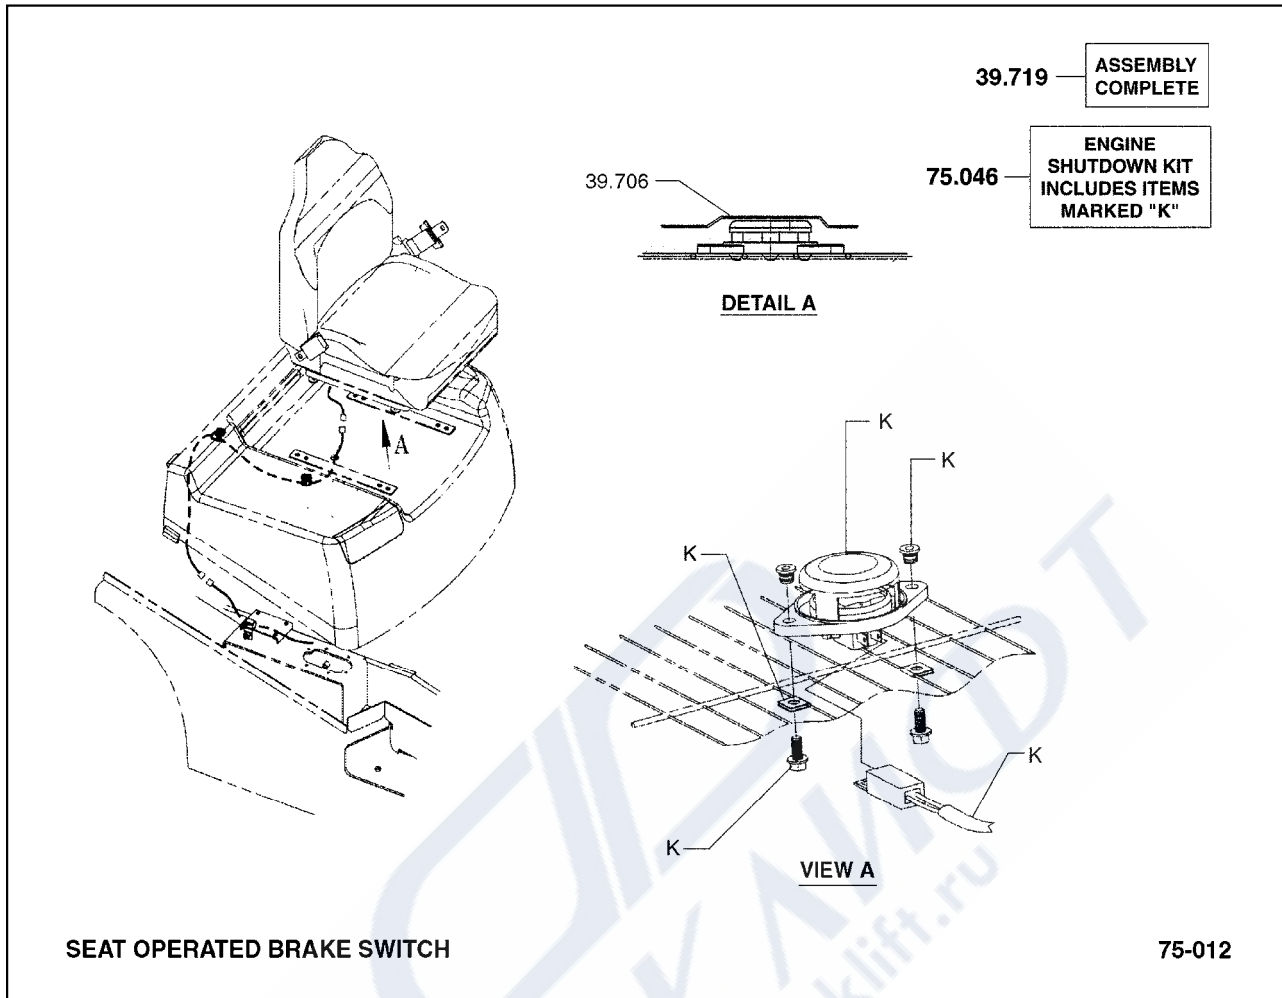 

39.706	SUPPORT, SEAT 서포트
39.719	SEAT ASSEMBLY 시트
75.046	KIT, SEAT ACTUATED ENGINE SHUTDOWN 키트