

 
부품 매뉴얼 PARTS MANUAL

GTS 20/25/30/33 L (HMC Engine)

SERIAL NUMBEL : GTS232L - XXXX - 9821 KF

부품 청구시 항상 장비의 SERIAL NO. 도
함께 알려 주십시오.

ALWAYS GIVE TRUCK SERIAL NUMBER
WHEN ORDERING PARTS.

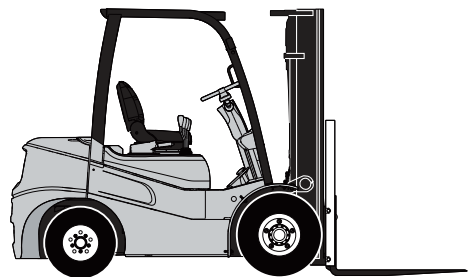

Part No : 8113043
Dec. 2013




(본사) 경기도 부천시 오정구 오정동 202-1
(Head office) 202-1 Ojung-Dong, Ojung-Gu, Bucheon-city, Kyunggi-do, Korea
(공장) 경남 창원시 웅남동 40-1
(Factory) 40-1 Ungnam-dong, Changwon-city, Kyungnam, Korea



00-688	ENGINE GASKET KIT 엔진 가스켓 키트	13-034	HEAD LAMP INSTALLATION 헤드램프 조립그룹
00-690	CYLINDER HEAD & COVERS 실린더 헤드& 커버	13-162	STROBE LIGHT MOUNTING 경광등 마운팅
00-691	CRANKCASE 크랭크케이스	13-175	VALVE SWITCH WIRING 밸브 스위치 와이어링
00-768	ENGINE MOUNTING 엔진 마운팅	13-182	STROBE LIGHT 경광등
01-349	COOLING WATER SYSTEM 쿨링 워터 시스템	13-228	BACK-UP ALARM INSTALLATION 백업 알람 조립그룹
01-350	COOLING SYSTEM 쿨링 시스템	13-230	HEAD & T/SIGNAL LIGHT INSTALLATION 헤드& 턴시그널 라이트 조립그룹
02-474	AIR CLEANER ASSEMBLY 에어 크리너 어셈블리	13-236	COMBINATION & REAR WORK LIGHT INSTALLATION 컴비네이션& 후방 작업등 조립그룹
02-478	INDICATOR LIGHT INSTALLATION 지시등 조립그룹	13-292	KEY SWITCH INSTALLATION 키스위치 조립그룹
02-480	ACCELERATOR SYSTEM 악셀레이터 시스템	13-360	STATIC ELECTRICITY DISCHARGER 고정 전압 방전기
03-182	SWING DOWN ASSY 스윙다운 어셈블리	14-879	ELECTRICAL WIRING (INSTRUMENT) 전기장치 와이어링 (계기판)
03-396	SWING DOWN LPG TANK MTG 스윙 다운 LPG 탱크 마운팅	14-894	ELECTRICAL WIRING (MAIN) 전기장치 와이어링 (메인)
03-515	FUEL SYSTEM (LPG) 연료시스템 (LPG)	20-135	DRIVE AXLE MOUNTING 드라이브 액슬 마운팅
03-519	LPG TANK MOUNTING LPG 탱크 마운팅	20-183	DRIVE AXLE ASSEMBLY 드라이브 액슬 어셈블리
03-581	SWITCH INSTALLATION 스위치 조립그룹	20-184	DIFFERENTIAL & CARRIER ASSY 디퍼렌셜& 캐리어
03-634	INTAKE SYSTEM 흡기 시스템 (듀얼)	20-185	DIFFERENTIAL ASSEMBLY 디퍼렌셜 어셈블리
03-636	FUEL SYSTEM 연료 시스템	21-017	PROP SHAFT 프로펠러 축
03-637	EXHAUST SYSTEM 배기 시스템	22-013	DRIVE WHEEL & TIRE MOUNTING 드라이브휠& 타이어 마운팅
03-683	INTAKE & EXHAUST MANIFOLD 흡기& 배기 기관	22-014	STEER WHEEL & TIRE MOUNTING 스티어휠& 타이어 마운팅
03-718	FUEL LINES 연료 라인	22-024	DRIVE WHEEL & TIRE (SOLID TYPE) 드라이브 휠& 타이어 (솔리드 타입)
05-038	TORQUE CONVERTER CHARGING PUMP 토크 컨버터 충전펌프	22-026	DRIVE WHEEL & TIRE (SOLID TYPE) 드라이브 휠& 타이어 (솔리드 타입)
05-047	TORQUE CONVERTER HOUSING 토크 컨버터 하우징	22-027	STEER WHEEL & TIRE (SOLID TYPE) 스티어 휠& 타이어 (솔리드 타입)
06-125	TRANSMISSION CONTROL COVER 트랜스미션 컨트롤 커버	22-033	DUAL DRIVE WHEEL & TIRE MOUNTING 듀얼 드라이브 휠& 타이어 마운팅
06-126	TRANSMISSION CLUTCH PACKS (FWD) 트랜스미션 클러치 팩 (전진)	22-034	WIDE DRIVE WHEEL & TIRE MOUNTING 와이드 드라이브 휠& 타이어 마운팅
06-127	TRANSMISSION CLUTCH PACKS (REV) 트랜스미션 클러치 팩 (후진)	22-041	DRIVE WHEEL AND TIRE 드라이브 휠& 타이어
06-128	TRANSMISSION OUTPUT SHAFT 트랜스미션 출력 샤프트	22-043	DRIVE WHEEL AND TIRE 드라이브 휠& 타이어
06-135	TRANSMISSION CASE 트랜스미션 케이스	22-044	STEER WHEEL & TIRE 스티어링 휠& 타이어
06-138	TRANSMISSION ASSEMBLY 트랜스미션 어셈블리	23-448	DRIVE WHEEL & TIRE MOUNTING 드라이브휠& 타이어 마운팅
06-139	TRANSMISSION IDLE GEAR SHAFT 트랜스미션 아이들 기어샤프트	23-535	BRAKE & INCHING LINES 브레이크& 인칭라인
06-140	TRANSMISSION OUTPUT SHAFT 트랜스미션 출력 샤프트	23-536	BRAKE LINES 브레이크 라인
06-141	TRANSMISSION CLUTCH ASSEMBLY 트랜스미션 클러치 어셈블리	23-537	PARKING BRAKE SYSTEM 파킹 브레이크 시스템
07-068	TRANSMISSION MOUNTING 트랜스미션 마운팅	24-007	BRAKE ENERGIZER ASSEMBLY 브레이크 에너지저 어셈블리
07-078	TRANSMISSION MOUNTING 트랜스미션 마운팅	25-072	STEERING GEAR MOUNTING 스티어링 기어 마운팅
10-132	TRANS COOLING LINES 트랜스미션 쿨링 라인	25-143	STEERING UNIT 스티어링 유닛
11-110	ELECTRICAL CONTROL 전기장치 컨트롤	25-291	STEERING COLUMN SHAFT ASSEMBLY 스티어링 컬럼 샤프트 어셈블리
12-193	ALTERNATOR ASSEMBLY 알터네이터 어셈블리	25-353	STEERING COLUMN ASSEMBLY 스티어링 컬럼 어셈블리
12-252	BATTERY MOUNTING 배터리 마운팅	25-354	STEERING WHEEL & COLUMN MOUNTING 스티어링 휠& 컬럼 마운팅


26-157	HYDRAULIC RETURN LINES 유압 리턴 라인	37-053	ELECTRICAL COMPONENTS (CAB) 전기장치 구성품 (캐빈)
26-273	STEER AXLE MOUNTING 스티어링 액슬 마운팅	37-124	SEAT ARMREST ASSEMBLY 시트 암레스트 어셈블리
26-274	STEER CYLINDER 스티어링 실린더	38-201	MODEL DECALS & COUNTERWEIGHT MOUNTING 모델 데칼 & 카운터웨이트 마운팅
26-276	STEER AXLE ASSEMBLY 스티어링 액슬 어셈블리	38-245	CROSS PLATE MOUNTING 크로스 플레이트 마운팅
26-277	HYDRAULIC STEERING LINES 유압 스티어링 라인	38-270	FRAME TANK BOTTOM PLUG 프레임 탱크 하단 플러그
29-237	HYDRAULIC TANK & COMPONENTS MOUNTING 유압탱크 & 구성품 마운팅	39-519	LOAD BACK REST 로드 백 레스트
29-274	HYDRAULIC PUMP MOUNTING 유압 펌프 마운팅	39-585	SEAT ASSEMBLY (SUSPENSION) 시트 어셈블리
29-275	HYDRAULIC PUMP ASSEMBLY 유압 펌프 어셈블리	39-594	OVERHEAD GUARD 오버헤드가드
30-495	MAIN CONTROL VALVE 2-SPOOL 메인 컨트롤 밸브 - 2 스톱	39-661	SEAT ASSEMBLY 시트 어셈블리
30-496	MAIN CONTROL VALVE 3-SPOOL 메인 컨트롤 밸브 - 3 스톱	39-829	SEAT MOUNTING 시트 마운팅
30-497	MAIN CONTROL VALVE 4-SPOOL 메인 컨트롤 밸브 - 4 스톱	39-834	SEAT ASSEMBLY (SUSPENSION) 시트 어셈블리
30-498	HYDRAULIC VALVE ASSEMBLY 유압 밸브 어셈블리	39-902	CAB DOOR SASH ASSEMBLY 캐빈 도어 어셈블리
30-499	HYDRAULIC VALVE ASSEMBLY 유압 밸브 어셈블리	39-920	CASSETTE & CD MOUNTING 카세트 & CD 마운팅
30-500	HYDRAULIC VALVE ASSEMBLY 유압 밸브 어셈블리	39-985	SHEET METAL 시트 메탈
31-189	TILT LIMIT WITH OVERRIDE 틸트 제어해제	39-987	HOOD & FLOOR PLATE MOUNTING 후드 & 플로어 플레이트 마운팅
31-220	HYDRAULIC LIFT & TILT LINES 유압 리프트 & 틸트 라인	40-011	DECALS 데칼
31-228	HYDRAULIC SUPPLY LINES 유압 공급 라인	41-043	HEATER INSTALLATION 히터 조립 그룹
32-140	TILT CYLINDER MOUNTING 틸트 실린더 마운팅	47-000	SEAT WING KIT 시트윙 키트
32-142	TILT CYLINDER 틸트 실린더	50-109	E DEVICE HOSE REEL 디바이스 호스릴
32-151	ACCUMULATOR 어큐뮬레이터	50-157	SOLENOID VALVE 솔레노이드 밸브
32-152	ACCUMULATOR 어큐뮬레이터	50-171	ATTACHMENT HOSE ADAPTATION (CARRIAGE) 어태치 호스 적응 (캐리지)
32-153	TILT CYLINDER 틸트 실린더	50-172	HIGH TERMINATION FOR DEVICE HOSE ADAPTATION 하이 터미네이션 (디바이스 호스 적응)
32-167	TILT AMOUNT GROUP 틸트 어마운트 그룹	50-175	HIGH TERMINATION FOR DEVICE HOSE ADAPTATION 하이 터미네이션 (디바이스 호스 적응)
33-069	RELIEF VALVE ASSEMBLY 릴리프 밸브 어셈블리	50-232	ATTACHMENT HOSE ADAPTATION (UPRIGHT) 어태치 호스 적응 (마스트)
33-130	SELECTOR SOLENOID VALVE 셀렉터 솔레노이드 밸브	50-243	QUICK DISCONNECT FOR DEVICE HOSE ADAPTATION 퀵 차단 (호스 어댑션 장치용)
34-044	LOAD BACK REST MOUNTING 로드 백 레스트 마운팅	50-269	ATTACHMENT HOSE ADAPTATION (UPRIGHT) 어태치 호스 적응 (마스트)
34-103	CARRIAGE ASSEMBLY 캐리지 어셈블리	50-270	ATTACHMENT HOSE & CABLE ADAPTATION (UPRIGHT) 어태치 호스 & 케이블 적응 (마스트)
34-130	UPRIGHT MOUNTING 마스트 마운팅	50-289	ATTACHMENT HOSE & CABLE ADAPTATION (UPRIGHT) 어태치 호스 & 케이블 적응 (마스트)
34-209	CARRIAGE ASSEMBLY 캐리지 어셈블리	50-290	ATTACHMENT HOSE & CABLE ADAPTATION (UPRIGHT) 어태치 호스 & 케이블 적응 (마스트)
37-003	OVERHEAD GUARD COVER 오버헤드가드 커버	50-291	ATTACHMENT HOSE & CABLE ADAPTATION (UPRIGHT) 어태치 호스 & 케이블 적응 (마스트)
37-009	SEAT ASSEMBLY 시트 어셈블리	50-407	ATTACHMENT HOSE ADAPTATION (UPRIGHT) 어태치 호스 적응 (마스트)
37-039	REAR WINDOW ASSEMBLY 리어 윈도우 어셈블리	50-410	ATTACHMENT HOSE ADAPTATION (UPRIGHT) 어태치 호스 적응 (마스트)
37-046	CAB MOUNTING 캐빈 마운팅	50-432	ATTACHMENT HOSE ADAPTATION (UPRIGHT) 어태치 호스 적응 (마스트)
37-048	ELECTRICAL COMPONENTS (CAB) 전기장치 구성품 (캐빈)	50-439	ATTACHMENT HOSE ADAPTATION (UPRIGHT) 어태치 호스 적응 (마스트)
37-051	ENCLOSED CAB 캐빈 (박스형)	50-716	E HOSE ADAPTATION 호스 어댑션
37-052	CAB MOUNTING 캐빈 마운팅	50-744	AUXILIARY VALVE LINES 보조 밸브 라인


50-765	HIGH TERMINATION PLUMBING 하이 터미네이션 기관	75-004	SEAT OPERATED BRAKE 시트 조작 브레이크
50-791	ATTACHMENT HOSE ADAPTATION (CARRIAGE) 어태치 호스 적용 (캐리지)	75-005	SEAT OPERATED BRAKE 시트 조작 브레이크
50-793	ATTACHMENT HOSE ADAPTATION (CARRIAGE) 어태치 호스 적용 (캐리지)	75-012	SEAT OPERATED BRAKE SWITCH 시트 조작 브레이크 스위치
50-794	ATTACHMENT HOSE ADAPTATION (CARRIAGE) 어태치 호스 적용 (캐리지)		
50-796	ATTACHMENT HOSE ADAPTATION (CARRIAGE) 어태치 호스 적용 (캐리지)		
50-797	ATTACHMENT HOSE ADAPTATION (CARRIAGE) 어태치 호스 적용 (캐리지)		
50-798	QUICK DISCONNECT FOR DEVICE HOSE ADAPTATION 퀵 차단 (호스 어댑션 장치용)		
50-819	DEVICE LINE ADAPTORS 디바이스 라인 어댑터		
50-820	SOLENOID VALVE FOR DEVICE HOSE ADAPTATION 솔레노이드 밸브 (디바이스 호스 적용)		
53-008	SIDESHIFT CYLINDER 사이드 쉬프트 실린더		
53-024	FORK POSITIONER 포크 포지셔너		
53-084	FORK POSITIONER 포크 포지셔너		
53-146	F/P SIDESHIFT CYLINDER 포크포지셔너 사이드 쉬프트 실린더		
53-164	FORK POSITIONER 포크 포지셔너		
53-168	FORK POSITIONER (SHIFTING) 포크 포지셔너 (쉬프트 타입)		
53-170	FORK POSITIONER (BASIC) 포크 포지셔너 (기본)		
53-187	SIDE SHIFT ASSEMBLY 사이드 쉬프트 어셈블리		
53-198	SIDESHIFT CYLINDER 사이드 쉬프트 실린더		
53-223	FORK POSITIONER CYLINDER 포크 포지셔너 실린더		
54-015	FORK POSITIONER (BASIC) 포크 포지셔너 (기본)		
66-058	FORK 포크		
66-139	SECONDARY CYLINDER ASSEMBLY 2차 실린더 어셈블리		
66-163	PRIMARY CYLINDER ASSEMBLY 프라이머리 실린더 어셈블리		
66-169	LIFT CYLINDER ASSEMBLY 리프트 실린더 어셈블리		
66-170	SECONDARY CYLINDER ASSEMBLY 2차 실린더 어셈블리		
66-190	SECONDARY CYLINDER ASSEMBLY 2차 실린더 어셈블리		
66-194	LIFT CYLINDER ASSEMBLY 리프트 실린더 어셈블리		
66-235	PRIMARY CYLINDER ASSEMBLY 프라이머리 실린더 어셈블리		
66-236	PRIMARY CYLINDER ASSEMBLY 프라이머리 실린더 어셈블리		
66-245	EXTENTION FORK 익스텐션 포크		
66-257	STANDARD UPRIGHT 표준 마스트		
66-261	TRIPLE STAGE UPRIGHT 3단 마스트		
66-265	HI-LO UPRIGHT 하이-로우 마스트		
75-(33)014	VARIABLE RELIEF VALVE INSTALLATION 가변 릴리프 밸브 조립그룹		
75-(33)045	DEVICE HYDRAULIC PRESSURE GAUGE INSTALLATION 디바이스 유압 압력게이지 조립그룹		
75-001	SEAT OPERATED BRAKE SWITCH 시트 조작 브레이크 스위치		

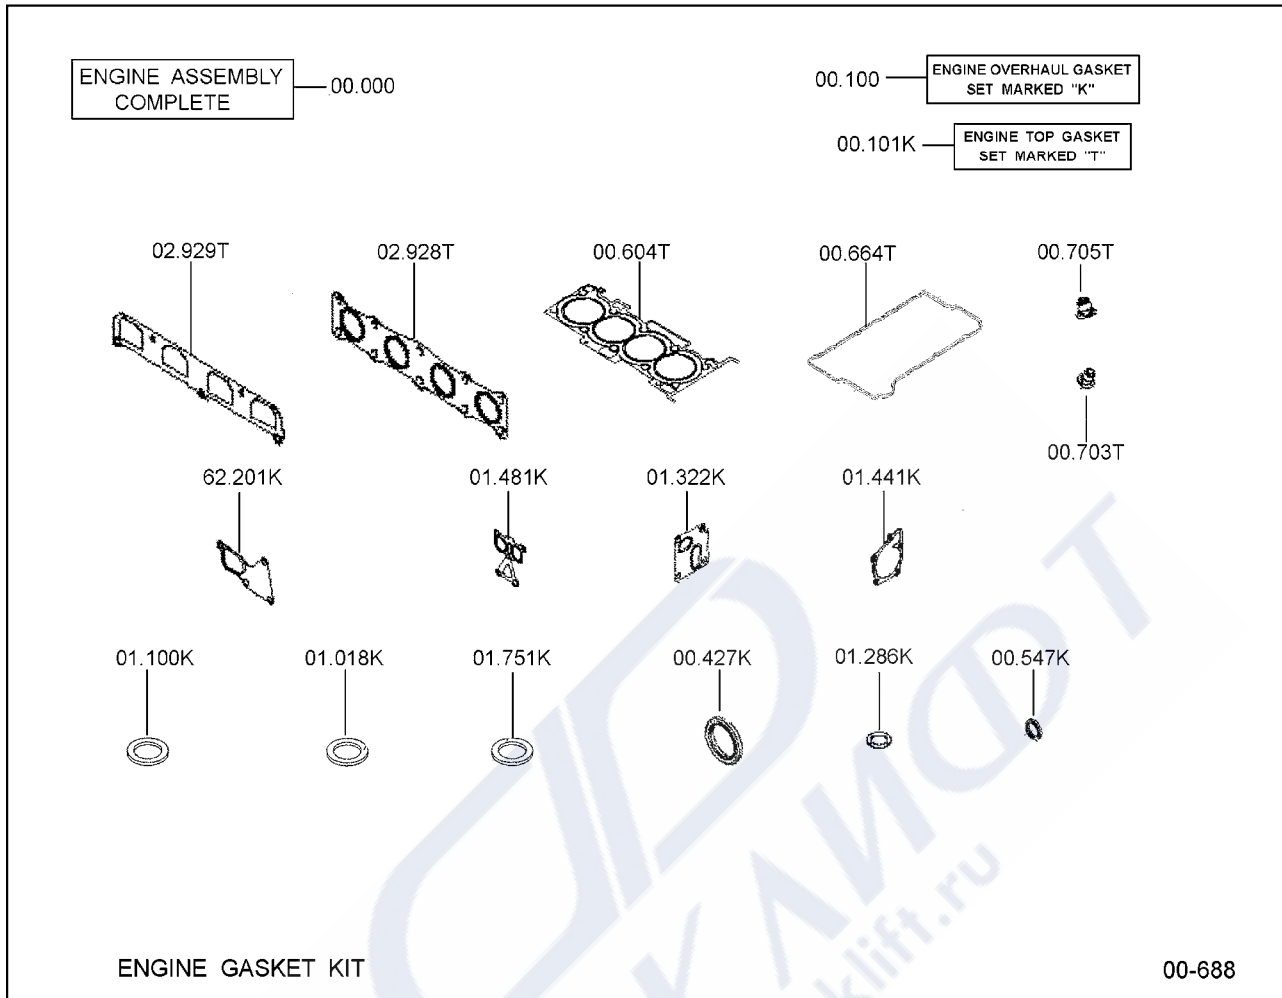 

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.100	GASKET KIT, ENGINE OVERHAUL 가스켓키트
00.101	VALVE GRIND GASKET KIT (TOP SET) 밸브가스켓키트
00.427	SEAL, CRANKCASE REAR OIL 씰
00.547	SEAL, ENGINE FRONT GEAR COVER 씰
00.604	GASKET, CRANKCASE HEAD 가스켓
00.664	GASKET, ROCKER ARM COVER 가스켓
00.703	SEAT, INTAKE VALVE SPRING 시트
00.705	SEAT, EXHAUST VALVE SPRING 시트

01.018	SEAL, OIL LEVEL DIPSTICK ADAPTOR 씰
01.100	GASKET, CRANKCASE OIL PAN DRAIN PLUG 가스켓
01.286	GASKET, OIL FILLER CAP 가스켓
01.322	GASKET, ENGINE OIL FILTER ADAPTOR 가스켓
01.441	GASKET, ENGINE WATER PUMP ATTACHING 가스켓
01.481	GASKET, ENGINE WATER PUMP BODY 가스켓
01.751	SEAL, OIL PAN DIPSTICK HOLE PLUG 씰
02.928	GASKET, EXHAUST MANIFOLD 가스켓
02.929	GASKET, INTAKE MANIFOLD 가스켓
62.201	GASKET, ENGINE WATER TEMPERATURE CONTROL 가스켓

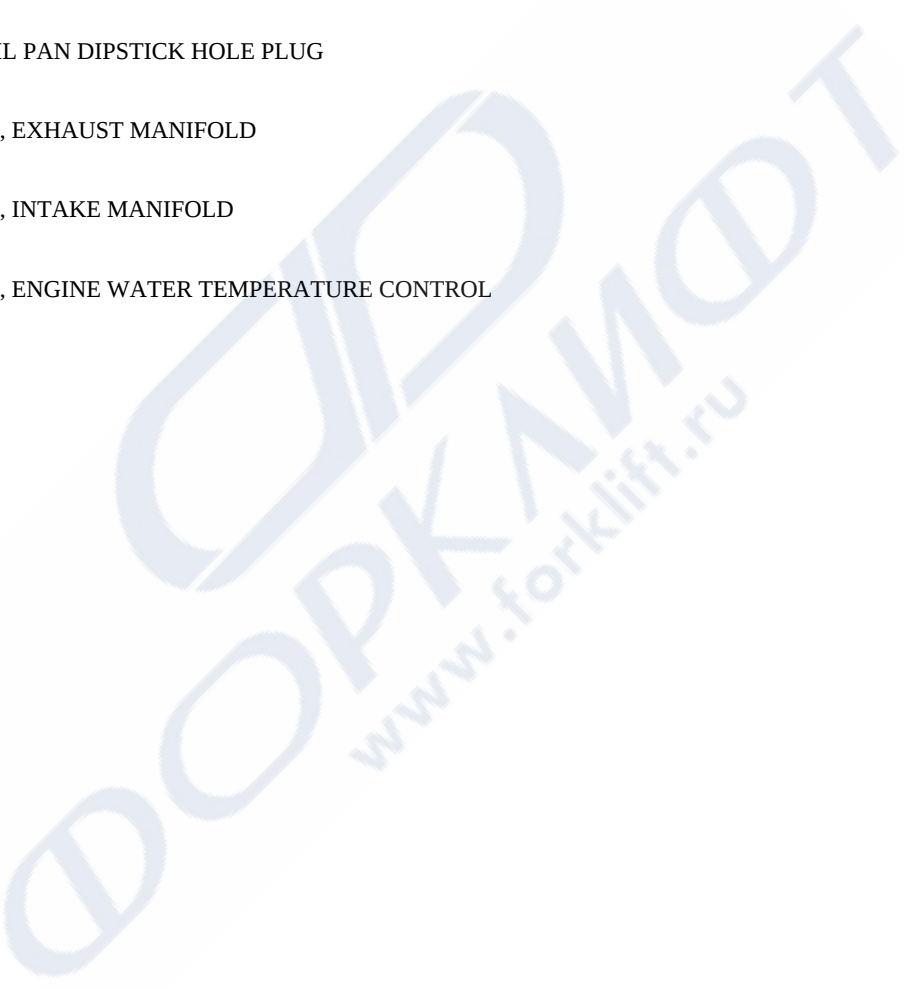 


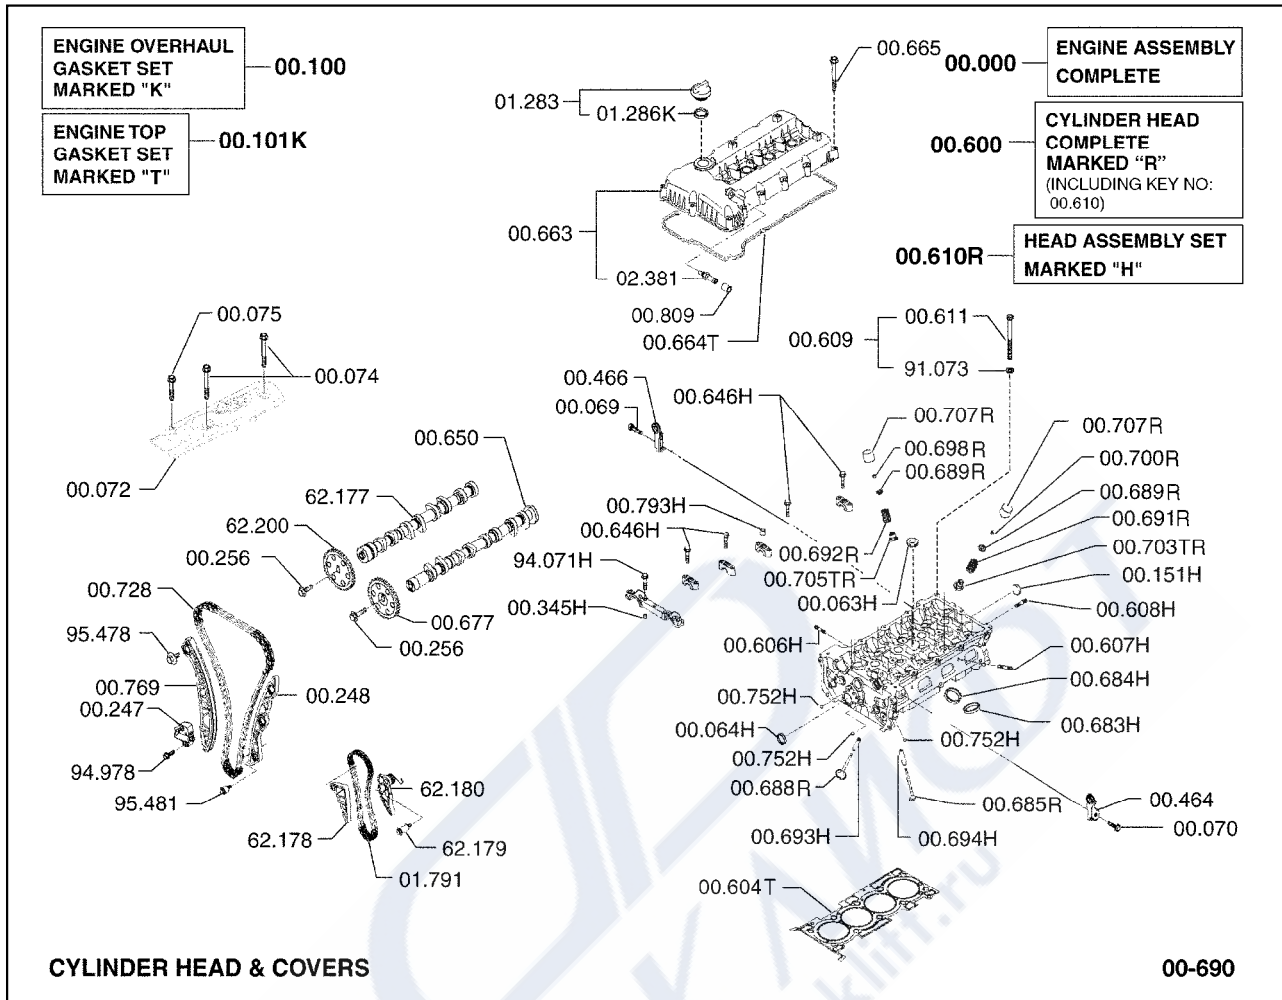 

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.063	PLUG, CRANKCASE HEAD 플러그
00.064	SEAL, CAMSHAFT OIL 씰
00.069	FASTENER, ENGINE LIFTING BRACKET 패스너
00.070	FASTENER, ENGINE LIFTING BRACKET 패스너
00.072	COVER, CRANKCASE HEAD END 커버
00.074	FASTENER, CRANKCASE HEAD END COVER 패스너
00.075	FASTENER, CRANKCASE HEAD END COVER 패스너
00.100	GASKET KIT, ENGINE OVERHAUL 가스켓키트
00.101	VALVE GRIND GASKET KIT (TOP SET) 밸브가스켓키트
00.151	PLUG, CRANKCASE HEAD REAR 플러그
00.247	TENSIONER, CAMSHAFT TIMING BELT 텐서너
00.248	GUIDE, CAMSHAFT TIMING BELT TENSIONER 가이드
00.256	FASTENER, CAMSHAFT TIMING GEAR 패스너
00.345	BUSHING, CRANKCASE HEAD 부싱


00.464	BRACKET, ENGINE LIFTING 브라켓
00.466	BRACKET, ENGINE LIFTING 브라켓
00.600	HEAD ASSEMBLY, CRANKCASE 헤드
00.604	GASKET, CRANKCASE HEAD 가스켓
00.606	FASTENER, CRANKCASE HEAD 패스너
00.607	FASTENER, CRANKCASE HEAD 패스너
00.608	FASTENER, CRANKCASE HEAD 패스너
00.609	FASTENER, CRANKCASE HEAD 패스너
00.610	HEAD, CRANKCASE 헤드
00.611	FASTENER, CRANKCASE HEAD 패스너
00.646	FASTENER, ENGINE ROCKER ARM PIVOT SUPPORT 패스너
00.650	CAMSHAFT 캠샤프트
00.663	COVER, ROCKER ARM 커버
00.664	GASKET, ROCKER ARM COVER 가스켓
00.665	FASTENER, ROCKER ARM COVER 패스너

00.677	GEAR, CAMSHAFT TIMING 기어
00.683	SEAT, EXHAUST VALVE INSERT 시트
00.684	SEAT, INTAKE VALVE INSERT 시트
00.685	VALVE, EXHAUST 밸브
00.688	VALVE, INTAKE 밸브
00.689	RETAINER, ENGINE VALVE SEAL 리테이너
00.691	SPRING, ENGINE INTAKE VALVE 스프링
00.692	SPRING, ENGINE EXHAUST VALVE 스프링
00.693	GUIDE, INTAKE VALVE 가이드
00.694	GUIDE, EXHAUST VALVE 가이드
00.698	LOCK, EXHAUST VALVE SPRING SEAT 로크
00.700	LOCK, INTAKE VALVE SPRING SEAT 로크
00.703	SEAT, INTAKE VALVE SPRING 시트
00.705	SEAT, EXHAUST VALVE SPRING 시트
00.707	LIFTER, ENGINE VALVE 리프터
00.728	CHAIN, CAMSHAFT TIMING 체인
00.752	RETAINER, CRANKCASE HEAD COMBUSTION CHAMBER INSE 리테이너
00.769	TENSIONER, CAMSHAFT TIMING CHAIN 텐셔너
00.793	BUSHING, ENGINE LOCKER ARM PIVOT SUPPORT 부싱
00.809	SLEEVE, CRANKCASE VENT TUBE VALVE 슬리브
01.283	CAP, CRANKCASE OIL FILLER 캡
01.286	GASKET, OIL FILLER CAP 가스켓
01.791	CHAIN, OIL PUMP DRIVE 체인
02.381	VALVE, PCV 밸브
62.177	CAMSHAFT, EXHAUST 캠샤프트
62.178	GUIDE, ENGINE OIL PUMP CHAIN 가이드
62.179	FASTENER, ENGINE OIL PUMP CHAIN TENSION 패스너
62.180	TENSIONER, ENGINE OIL PUMP CHAIN 텐셔너
62.200	GEAR, CAMSHAFT TIMING 기어
91.073	LOCKWASHER, CRANKCASE HEAD FASTENER 로크와셔
94.071	FASTENER, ROCKER ARM PIVOT SUPPORT 패스너
94.978	FASTENER, CAMSHAFT TIMING BELT TENSIONER 패스너
95.478	FASTENER, ENGINE BALANCER WEIGHT DRIVE CHAIN GUI 패스너
95.481	FASTENER, ENGINE BALANCER WEIGHT DRIVE CHAIN GUI 패스너

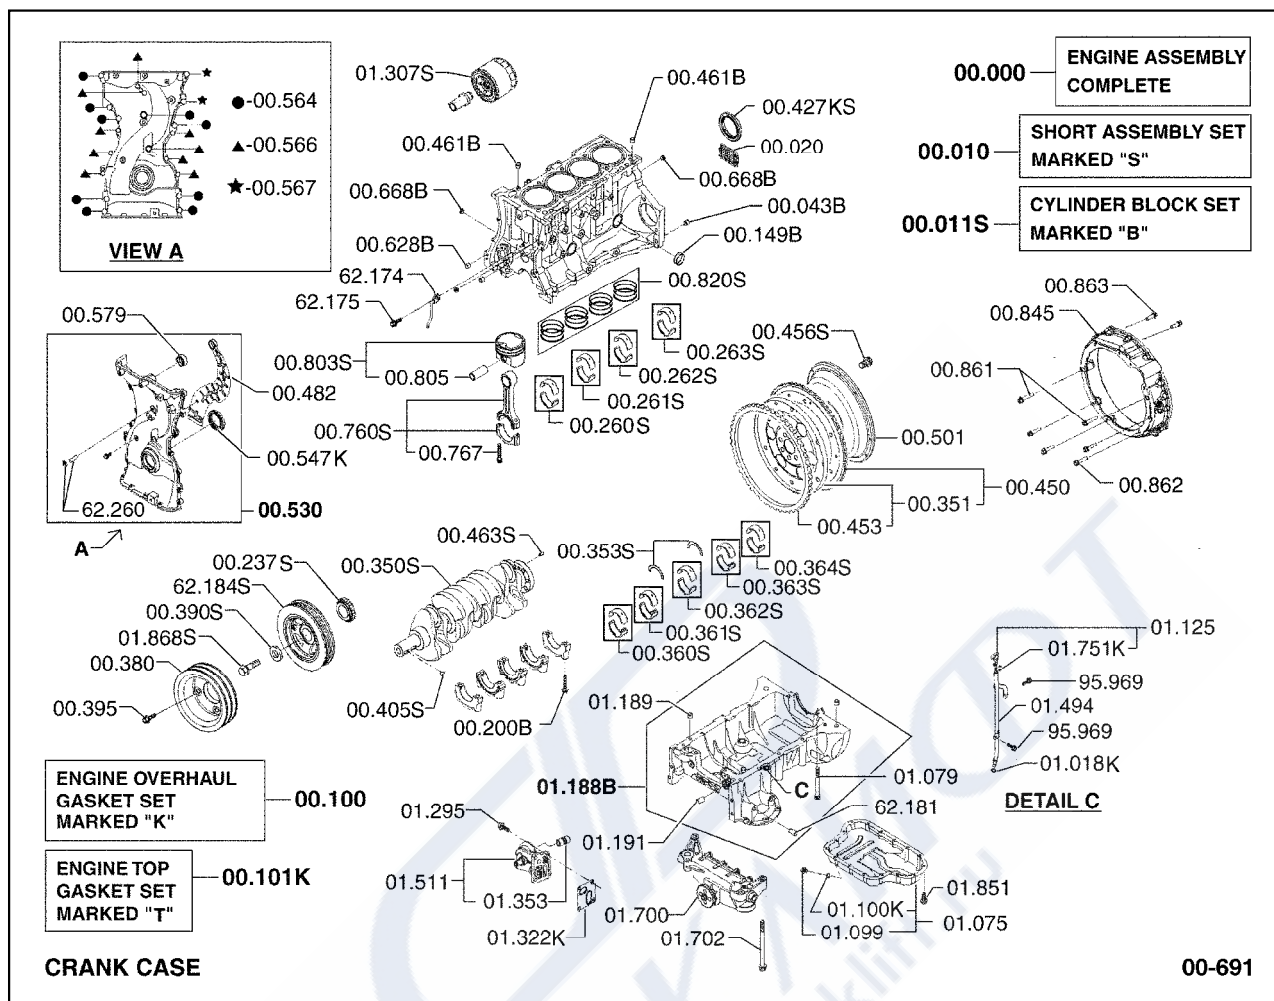 

00.000	PRODUCTION ENGINE ASSEMBLY 엔진	00.351	PLATE, FLYWHEEL REINFORCING 플레이트
00.010	SHORT ENGINE ASSEMBLY 숏엔진	00.353	PLATE, CRANKSHAFT THRUST 플레이트
00.011	CRANKCASE 크랭크케이스	00.360	BEARING, NO. 1 MAIN JOURNAL 베어링
00.020	COVER, CRANKCASE ACCESS HOLE 커버	00.361	BEARING, NO. 2 MAIN JOURNAL 베어링
00.043	BUSHING, ENGINE REAR SUPPORT BRACKET 부싱	00.362	BEARING, NO. 3 MAIN JOURNAL 베어링
00.100	GASKET KIT, ENGINE OVERHAUL 가스켓키트	00.363	BEARING, NO. 4 MAIN JOURNAL 베어링
00.101	VALVE GRIND GASKET KIT (TOP SET) 밸브가스켓키트	00.364	BEARING, NO. 5 MAIN JOURNAL 베어링
00.149	PLUG - EXPANSION, CRANKCASE SIDE 플러그	00.380	PULLEY, CRANKSHAFT 풀리
00.200	FASTENER, CRANKSHAFT BEARING NO. 1 CAP 패스너	00.390	WASHER, CRANKSHAFT PULLEY 와셔
00.237	GUIDE, CRANKSHAFT TIMING SPROCKET 가이드	00.395	FASTENER, CRANKSHAFT PULLEY 패스너
00.260	BEARING, CONNECTING ROD (CYL. #1) 베어링	00.405	KEY, CRANKSHAFT TIMING GEAR 키
00.261	BEARING, CONNECTING ROD (CYL. #2) 베어링	00.427	SEAL, CRANKCASE REAR OIL 씰
00.262	BEARING, CONNECTING ROD (CYL. #3) 베어링	00.450	FLYWHEEL 플라이휠
00.263	BEARING, CONNECTING ROD (CYL. #4) 베어링	00.453	GEAR, FLYWHEEL RING 기어
00.350	CRANKSHAFT 크랭크샤프트	00.456	FASTENER, CRANKSHAFT TO FLYWHEEL 패스너


00.461	DOWEL, CRANKCASE HEAD 다웰	01.700	OIL PUMP ASSEMBLY 오일펌프
00.463	DOWEL, CRANKSHAFT 다웰	01.702	FASTENER, OIL PUMP 패스너
00.482	PLATE, GEAR COVER BACKING 플레이트	01.751	SEAL, OIL PAN DIPSTICK HOLE PLUG 씰
00.501	SPACER, FLYWHEEL RING GEAR 스페이서	01.851	STUD, OIL PAN 스터드
00.530	COVER, ENGINE FRONT GEAR 커버	01.868	FASTENER, CRANKSHAFT PULLEY 패스너
00.547	SEAL, ENGINE FRONT GEAR COVER 씰	62.174	OIL JET, ENGINE OIL PUMP CHAIN 오일젯
00.564	FASTENER, ENGINE FRONT GEAR COVER 패스너	62.175	FASTENER, ENGINE OIL JET 패스너
00.566	FASTENER, ENGINE FRONT GEAR COVER 패스너	62.181	BUSHING, ENGINE KNOCK 부싱
00.567	FASTENER, ENGINE FRONT GEAR COVER 패스너	62.184	PULLEY, ENGINE CRANKSHAFT DAMPER 풀리
00.579	PLUG, ENGINE FRONT GEAR COVER 플러그	62.260	PLUG, ENGINE FRONT GEAR COVER NIPPLE 플러그
00.628	PLUG, CRANKCASE HEAD 플러그	95.969	FASTENER, ENGINE OIL LEVEL CONTROL 패스너
00.668	PLUG, CRANKCASE WATER 플러그		
00.760	ROD ASSEMBLY, CONNECTING 로드		
00.767	FASTENER, CONNECTING ROD BEARING CAP 패스너		
00.803	PISTON (ONE CYLINDER) 피스톤& 핀		
00.805	PIN, PISTON 핀		
00.820	PISTON RING 피스톤링		
00.845	HOUSING, FLYWHEEL 하우징		
00.861	FASTENER, FLYWHEEL HOUSING TO CRANKCASE 패스너		
00.862	FASTENER, FLYWHEEL HOUSING TO CRANKCASE 패스너		
00.863	FASTENER, FLYWHEEL HOUSING TO CRANKCASE 패스너		
01.018	SEAL, OIL LEVEL DIPSTICK ADAPTOR 씰		
01.075	PAN, CRANKCASE OIL 팬		
01.079	FASTENER, CRANKCASE OIL PAN 패스너		
01.099	PLUG, CRANKCASE OIL PAN DRAIN 플러그		
01.100	GASKET, CRANKCASE OIL PAN DRAIN PLUG 가스켓		
01.125	DIPSTICK, CRANKCASE OIL LEVEL 딤스틱		
01.188	PAN, CRANKCASE OIL UPPER 팬		
01.189	PIN, ENGINE OIL PAN 핀		
01.191	PIN, ENGINE OIL PAN 핀		
01.295	FASTENER, ENGINE OIL FILTER ATTACHING 패스너		
01.307	CARTRIDGE & GASKET, ENGINE OIL FILTER 카트리지와 가스켓		
01.322	GASKET, ENGINE OIL FILTER ADAPTOR 가스켓		
01.353	FITTING, BLOCK TO OIL FILTER 피팅		
01.494	TUBE, OIL LEVEL DIPSTICK ADAPTOR 튜브		
01.511	ADAPTOR, ENGINE OIL FILTER 어댑터		

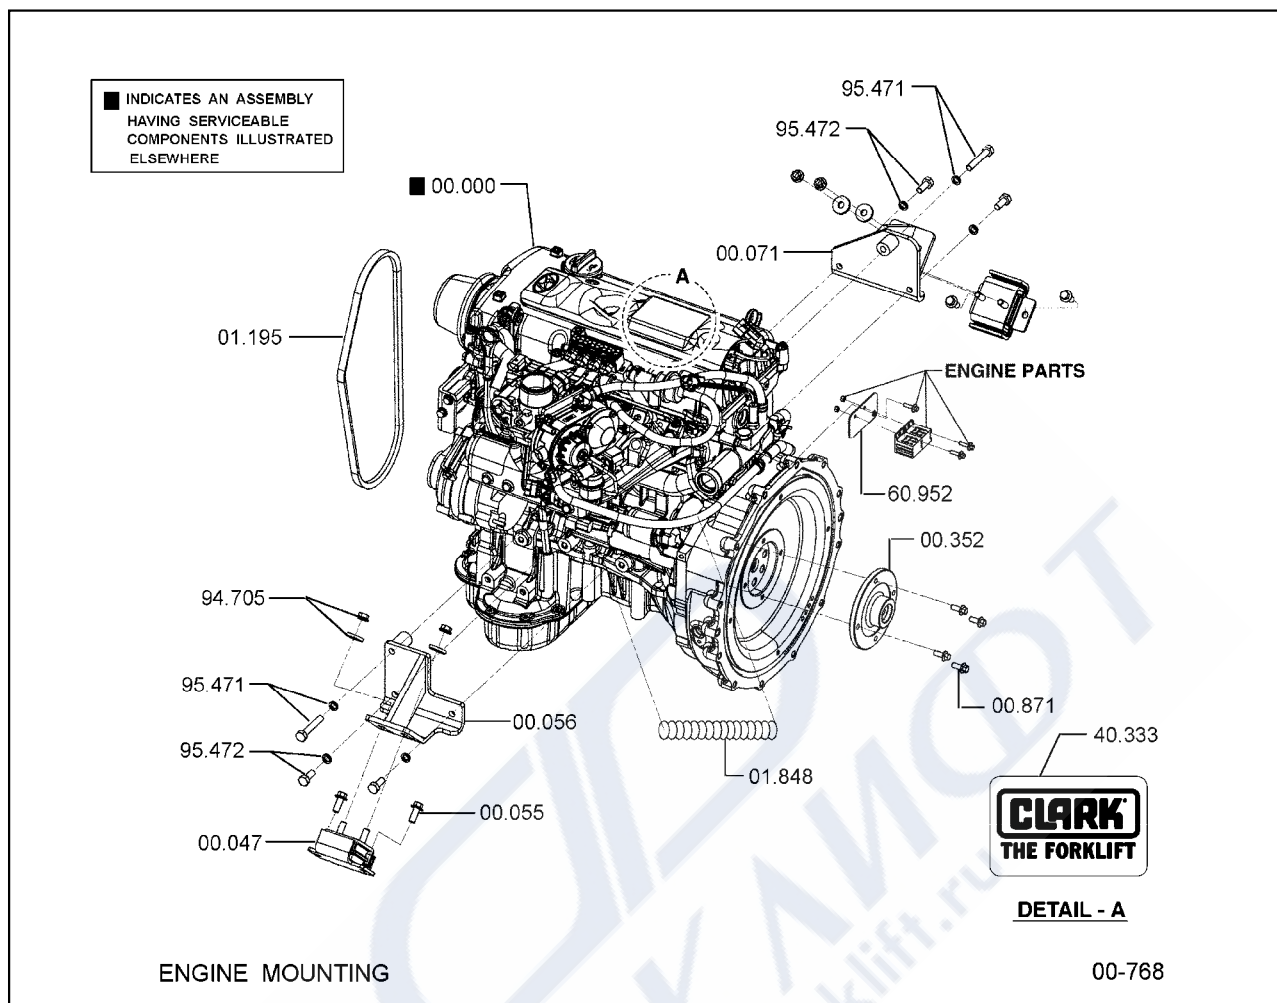 

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.047	DAMPENER, ENGINE FRONT VIBRATION 댐퍼너
00.055	FASTENER, ENGINE FRONT VIBRATION DAMPENER 패스너
00.056	MOUNT, ENGINE RH 마운트
00.071	MOUNT, ENGINE LH 마운트
00.352	ADAPTOR, FLYWHEEL MOUNTING 어댑터
00.871	FASTENER, FLYWHEEL HOUSING 패스너
01.195	BELT, FAN 벨트
01.848	PROTECTION, VAPORIZER WATER LINE 보호장치


40.333	REFLECTOR, COUNTERWEIGHT 리플렉터
60.952	BRACKET, ENGINE CONDITION SIGNAL RELAY SUPPORT 브라켓
94.705	FASTENER, ENGINE MOUNTING BRACKET 패스너
95.471	FASTENER, ENGINE MOUNT 패스너
95.472	FASTENER, ENGINE MOUNT 패스너



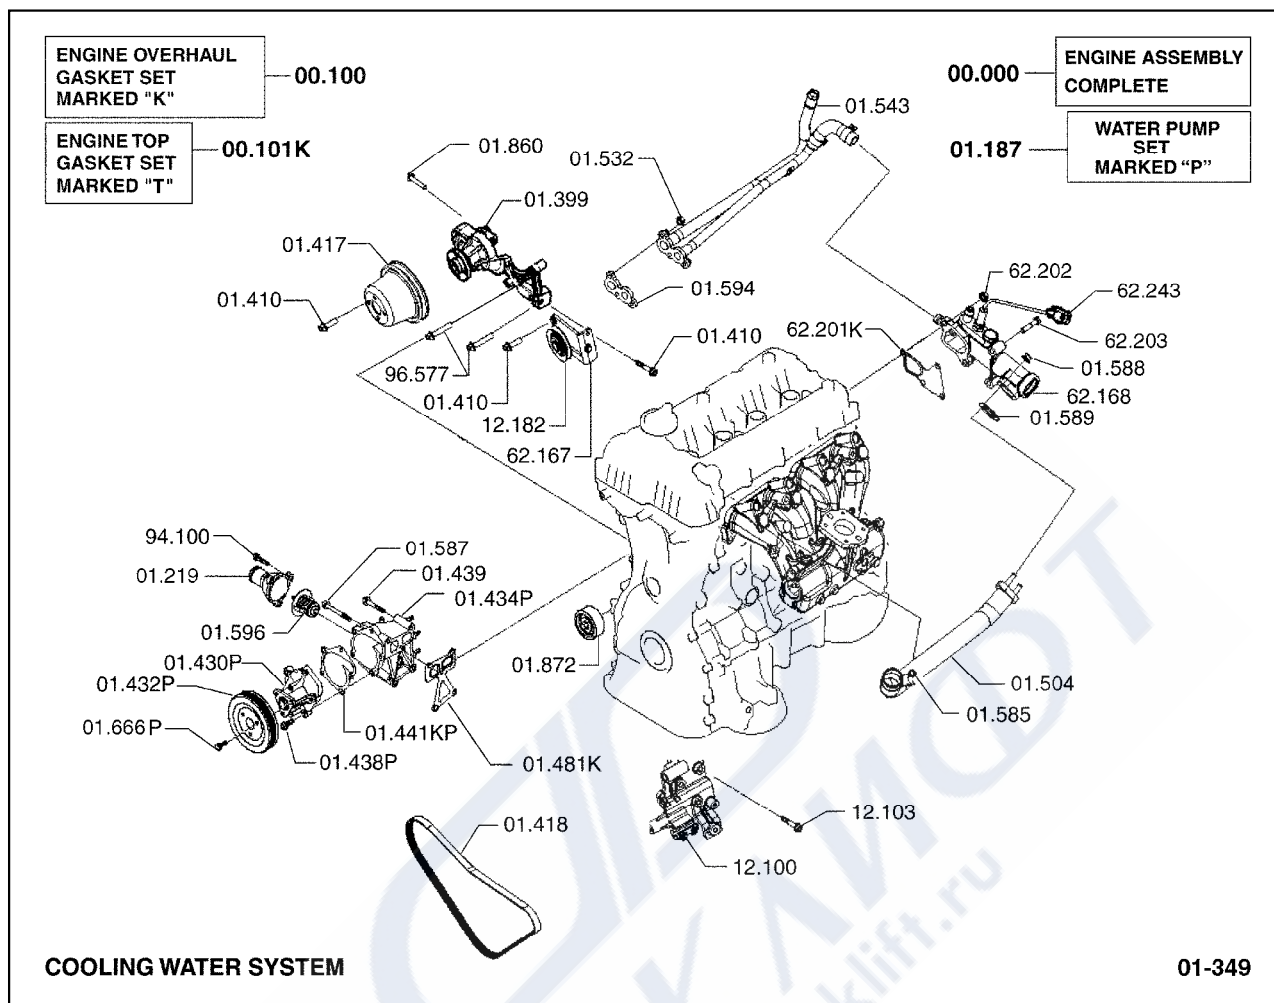 

00.000	PRODUCTION ENGINE ASSEMBLY 엔진	01.481	GASKET, ENGINE WATER PUMP BODY 가스켓
00.100	GASKET KIT, ENGINE OVERHAUL 가스켓키트	01.504	PIPE, ENGINE WATER PUMP INLET 파이프
00.101	VALVE GRIND GASKET KIT (TOP SET) 밸브가스켓키트	01.532	FASTENER, ENG THERMOSTAT BY-PASS FITTING 패스너
01.187	ENGINE WATER PUMP SET 엔진워터펌프세트	01.543	LINE, ENGINE THERMO BY PASS 라인
01.219	FITTING, WATER PUMP INLET 피팅	01.585	FASTENER, WATER OUTLET ELBOW-REAR 패스너
01.399	BRACKET, FAN MOUNTING 브라켓	01.587	FASTENER, WATER INLET COVER 패스너
01.410	FASTENER, IDLER ADJUSTMENT 패스너	01.588	FASTENER, WATER OUTLET ELBOW 패스너
01.417	PULLEY, FAN 풀리	01.589	GASKET, WATER OUTLET ELBOW 가스켓
01.418	BELT, WATER PUMP 벨트	01.594	GASKET, ENGINE THERMOSTAT HOUSING ATT 가스켓
01.430	PUMP ASSEMBLY, ENGINE WATER 펌프	01.596	THERMOSTAT, ENGINE 서모스탯
01.432	PULLEY, WATER PUMP 풀리	01.666	FASTENER, WATER PUMP PULLEY 패스너
01.434	COVER, WATER PUMP 커버	01.860	FASTENER, FAN DRIVE HUB MOUNTING SHAFT 패스너
01.438	FASTENER, WATER PUMP 패스너	01.872	IDLER, V-BELT 아이들러
01.439	FASTENER, WATER PUMP 패스너	12.100	BRACKET, ALTERNATOR MOUNTING 브라켓
01.441	GASKET, ENGINE WATER PUMP ATTACHING 가스켓	12.103	FASTENER, ALTERNATOR TO BRACKET 패스너


12.182	PULLEY, ALTERNATOR TENSIONER 풀리
62.167	BRACKET, ENGINE TENTION PULLEY 브라켓
62.168	CONTROL ASSEMBLY, ENGINE WATER TEMPERATURE 컨트롤
62.201	GASKET, ENGINE WATER TEMPERATURE CONTROL 가스켓
62.202	FASTENER, ENGINE WATER TEMPERATURE CONTROL 패스너
62.203	FASTENER, ENGINE WATER TEMPERATURE CONTROL 패스너
62.243	SENSOR, ENGINE COOLANT TEMPERTURE (ECU) 센서
94.100	FASTENER, WATER PUMP DISCHARGE FLANGE 패스너
96.577	FASTENER, FAN MOUNTING BRACKET 패스너

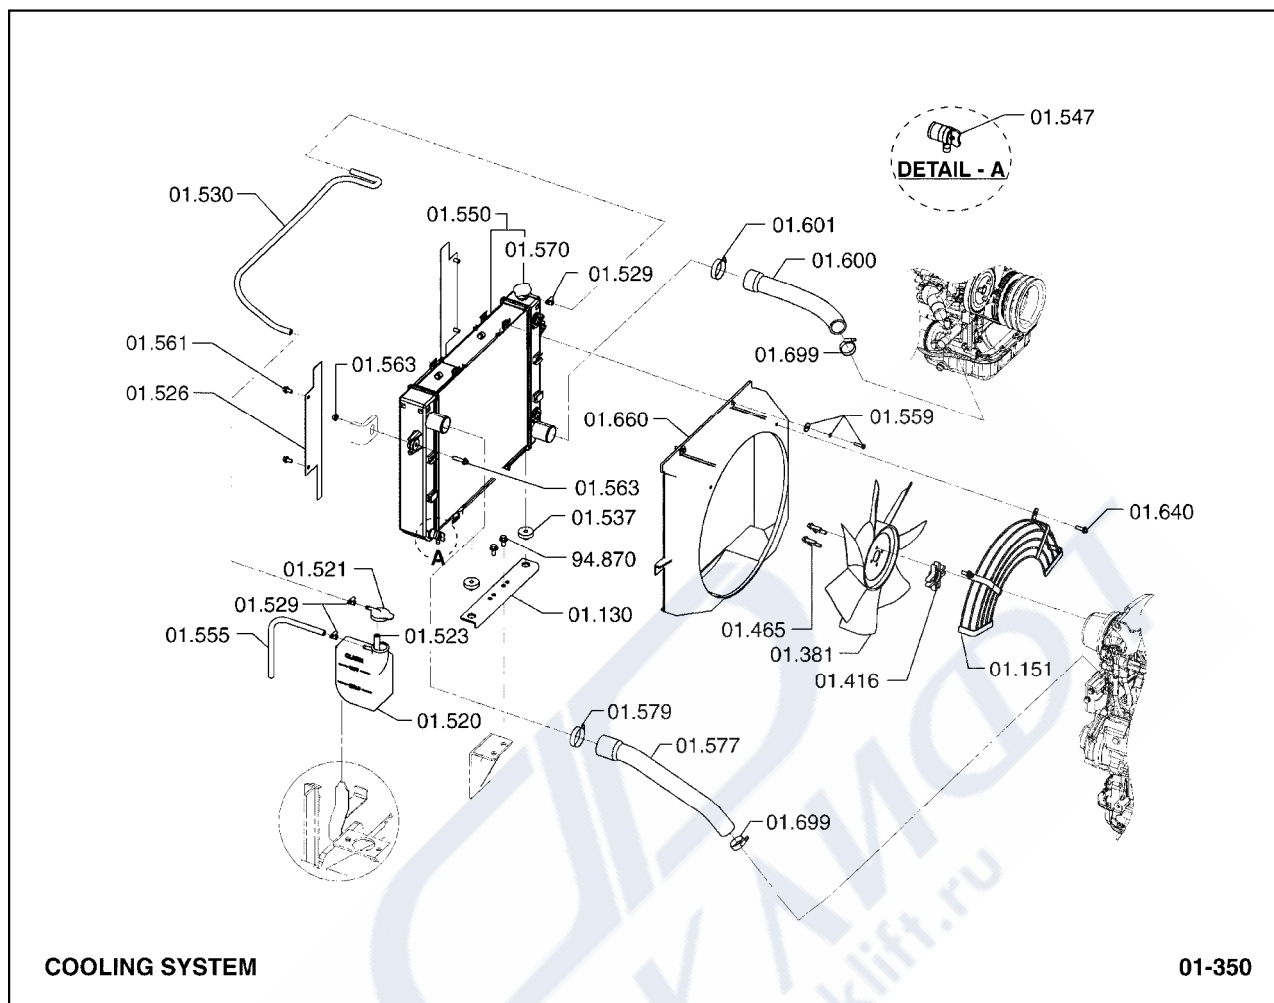 

01.130	BRACKET, RADIATOR 브라켓
01.151	GUARD, RADIATOR FAN 가드
01.381	BLADE, FAN 블레이드
01.416	SPACER, FAN BLADE 스페이서
01.465	FASTENER, FAN BLADE SPACER 패스너
01.520	COMPENSATION TANK, COOLING SYSTEM 보상기
01.521	COVER, COMPENSATION TANK 커버
01.523	LINE, COOLING SYSTEM COMPENSATION TANK 라인
01.526	BRACKET, RADIATOR FILLER MOUNTING 브라켓

01.529	CLAMP, RADIATOR OVERFLOW LINE 클램프
01.530	LINE, RADIATOR FILLER 라인
01.537	PAD, RADIATOR MOUNTING LOWER 패드
01.547	DRAIN COCK, RADIATOR 드레인콕
01.550	RADIATOR 라디에이터
01.555	LINE, RADIATOR OVERFLOW 라인
01.559	FASTENER, RADIATOR UPPER SUPPORT (RADIATOR END) 패스너
01.561	FASTENER, RADIATOR MOUNTING 패스너
01.563	FASTENER, RADIATOR MOUNTING BRACKET 패스너
01.570	CAP, RADIATOR 캡
01.577	HOSE, RADIATOR UPPER 호스
01.579	CLAMP, RADIATOR UPPER HOSE 클램프
01.600	HOSE, RADIATOR LOWER 호스
01.601	CLAMP, RADIATOR LOWER HOSE 클램프
01.640	FASTENER, RADIATOR SHROUD EXTENTION 패스너
01.660	SHROUD, RADIATOR 슈라우드
01.699	CLAMP, RADIATOR HOSE FASTENER 클램프
94.870	FASTENER, RADIATOR MOUNTING BRACKET 패스너

 
ASSEMBLY
COMPLETE — 02.225

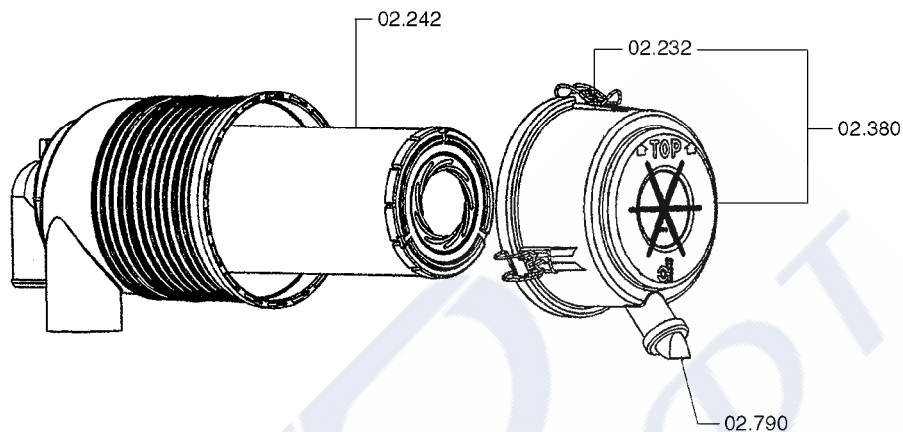


AIR CLEANER ASSEMBLY

02-474

02.225	CLEANER ASSEMBLY, ENGINE INTAKE AIR 에어클리너
02.232	CLAMP, INTAKE AIR CLEANER 클램프
02.242	ELEMENT & GASKET, ENGINE INTAKE AIR CLEANER 엘리먼트& 가스켓
02.380	CAP, FILTER 캡
02.790	VALVE, ENGINE INTAKE AIR CLEANER DUST UNLDR 밸브

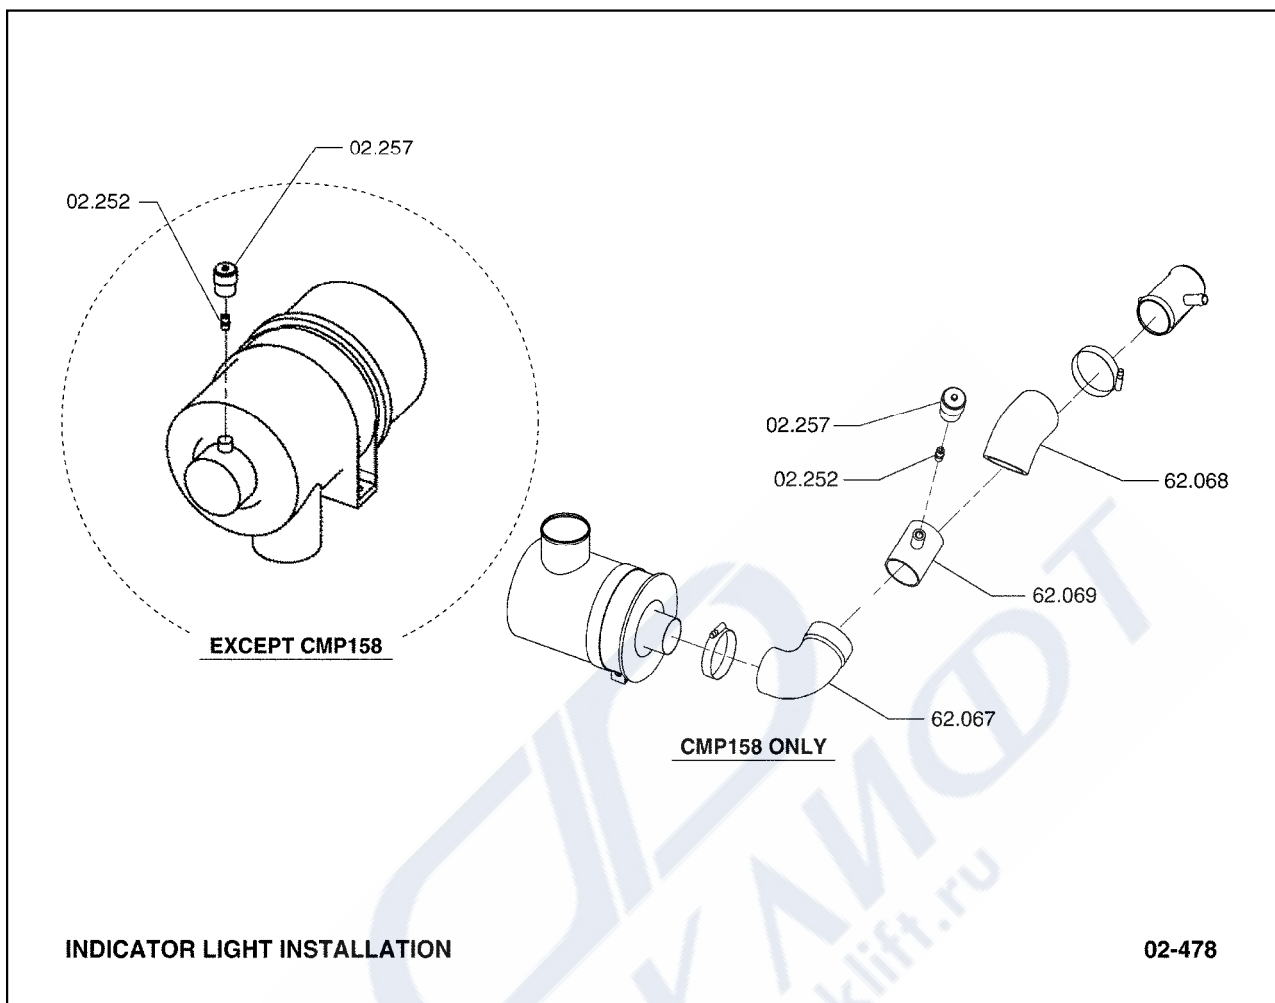 

02.252	FITTING, MAIN AIR CLEANER OUTLET TUBE 피팅
02.257	INDICATOR, ENGINE INTAKE AIR CLEANER AIR RES 인디케이터
62.067	HOSE, AIR CLEANER INTAKE 호스
62.068	HOSE, AIR CLEANER INTAKE 호스
62.069	TUBE, AIR CLEANER INTAKE 튜브

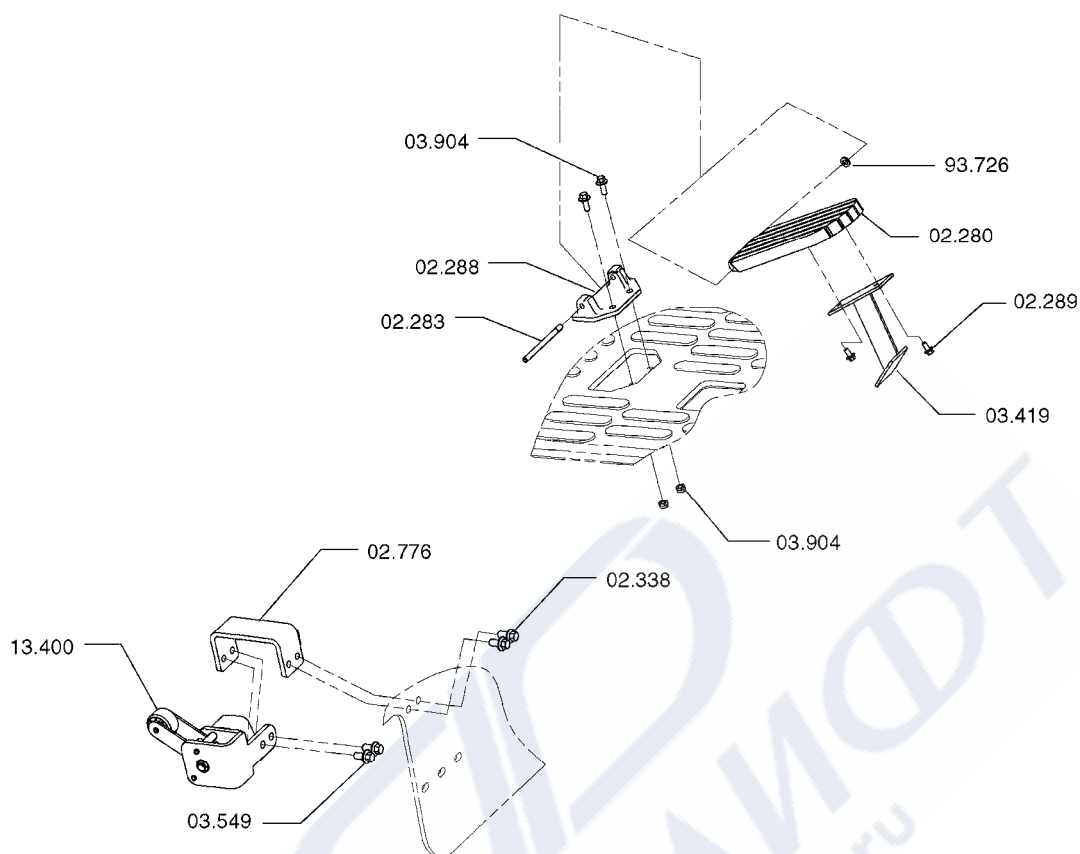 


ACCELERATOR SYSTEM

02-480

- | | |
|--------|---|
| 02.280 | PEDAL, ACCELERATOR
페달 |
| 02.283 | PIN, ACCELERATOR PEDAL TO BRACKET PIVOT
핀 |
| 02.288 | BRACKET, ACCELERATOR PEDAL ATTACHING
브라켓 |
| 02.289 | FASTENER, ACCELERATOR PEDAL BRACKET ATTACHING
패스너 |
| 02.338 | FASTENER, ACCELERATOR LEVER MOUNTING BRACKET
패스너 |
| 02.776 | BRACKET, ACCELERATOR CONTROL CABLE
브라켓 |
| 03.419 | WEAR PLATE, ACCELERATOR PEDAL ROLLER
웨어플레이트 |
| 03.549 | FASTENER, ACCELERATOR LINKAGE MOUNTING BRACKET
패스너 |
| 03.904 | FASTENER, ACCELERATOR PEDAL ROLLER BRACKET
패스너 |


13.400	CONTROL ASSEMBLY, ACCELERATING 컨트롤
93.726	WASHER, ACCELERATOR PEDAL PIVOT RETAINER 와셔



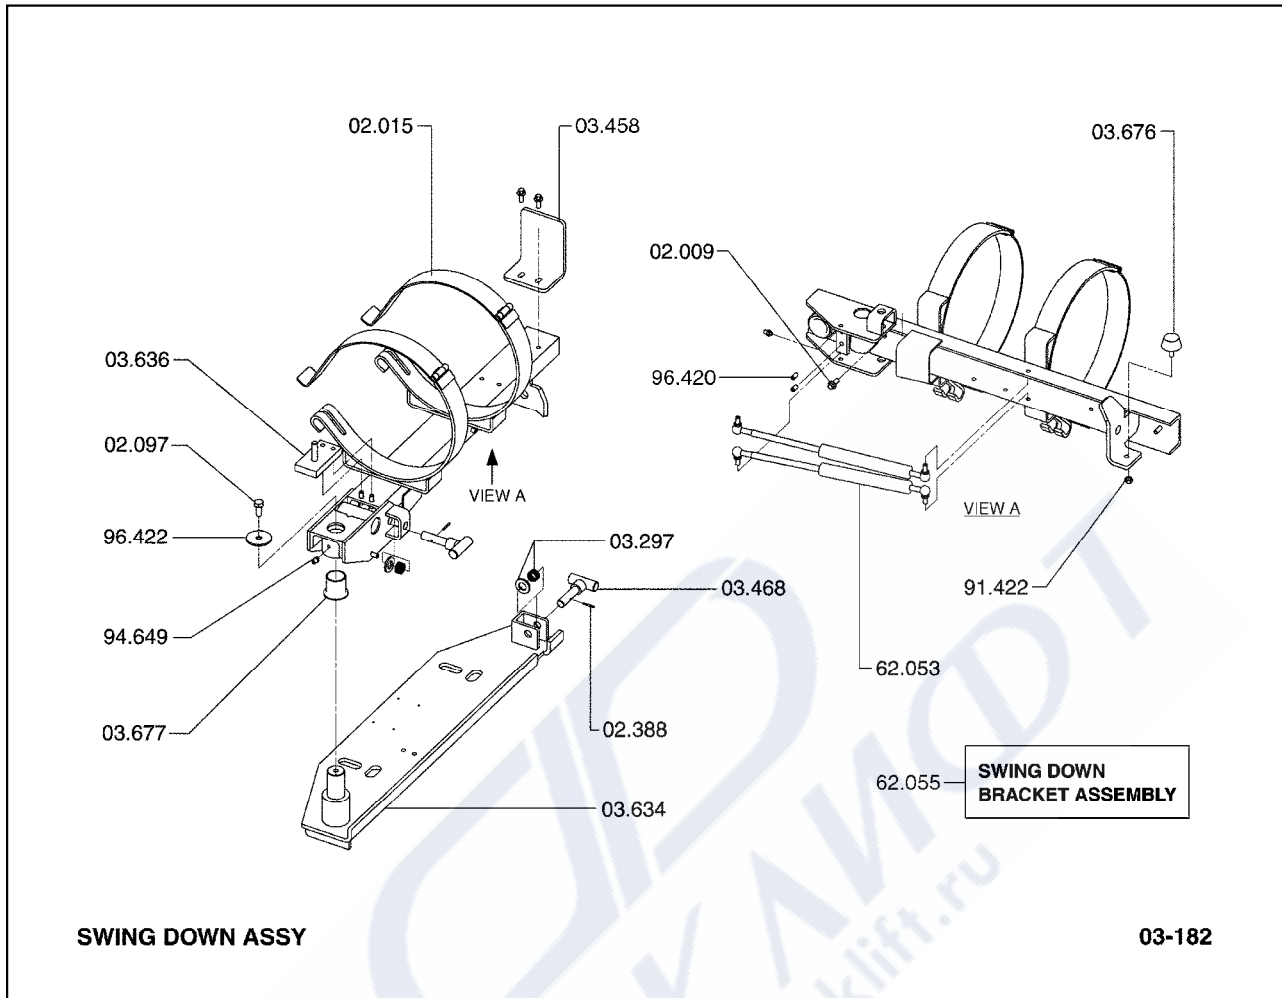 

02.009	FASTENER, LPG TANK GUARD MOUNTING 패스너
02.015	STRAP, LPG TANK CLAMP 스트랩
02.097	FASTENER, TANK GUARD PIVOT ROD 패스너
02.388	PIN, TANK LOCATING 핀
03.297	RETAINER, LPG TANK GUARD 리테이너
03.458	BRACKET, LPG TANK LOCATING PIN 브라켓
03.468	HANDLE, LPG TANK MOUNTING BRACKET 핸들
03.634	SUPPORT, LPG TANK BRACKET 서포트
03.636	SUPPORT, LPG TANK MOUNTING BRACKET 서포트


03.676	STOP, LPG TANK PIVOT 스톱
03.677	BUSHING, LPG TANK PIVOT 부싱
62.053	PROP, SWING DOWN LPG TANK MTG 지지대
62.055	BRACKET, SWING DOWN LPG TANK MTG 브라켓
91.422	NUT, LPG TANK SUPPORT 너트
94.649	FASTENER, LPG TANK MOUNTING SUPPORT BUMPER 패스너
96.420	FASTENER, LPG TANK MOUNTING BRACKET 패스너
96.422	WASHER, LPG TANK BRACKET PIVOT 와셔

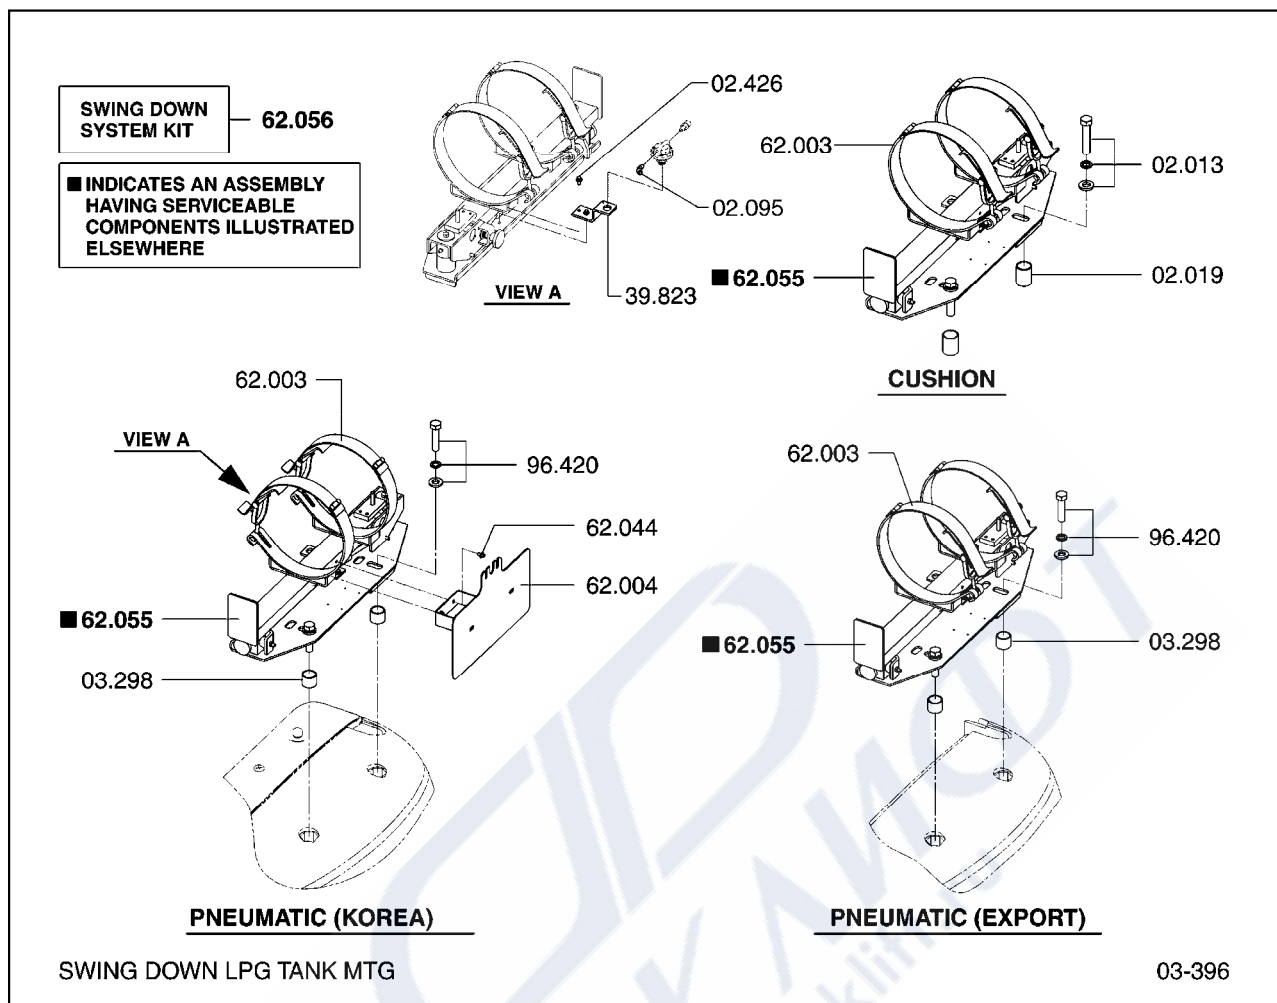 

02.013	FASTENER, LPG TANK FRONT MOUNTING BRACKET 패스너
02.019	SPACER, LPG TANK MOUNTING SUPPORT 스페이서
02.095	FITTING, LPG THREE WAY ADAPTOR 피팅
02.426	FASTENER, FUEL FILTER BRACKET 패스너
03.298	SPACER, LPG TANK GUARD 스페이서
39.823	BRACKET, FUEL FILTER 브라켓
62.003	CLAMP, LPG TANK 클램프
62.004	PLATE, LICENSE 플레이트
62.044	FASTENER, LICENSE PLATE MOUNTING 패스너

62.055	BRACKET, SWING DOWN LPG TANK MTG 브라켓
62.056	KIT, SWING DOWN SYSTEM 키트
96.420	FASTENER, LPG TANK MOUNTING BRACKET 패스너




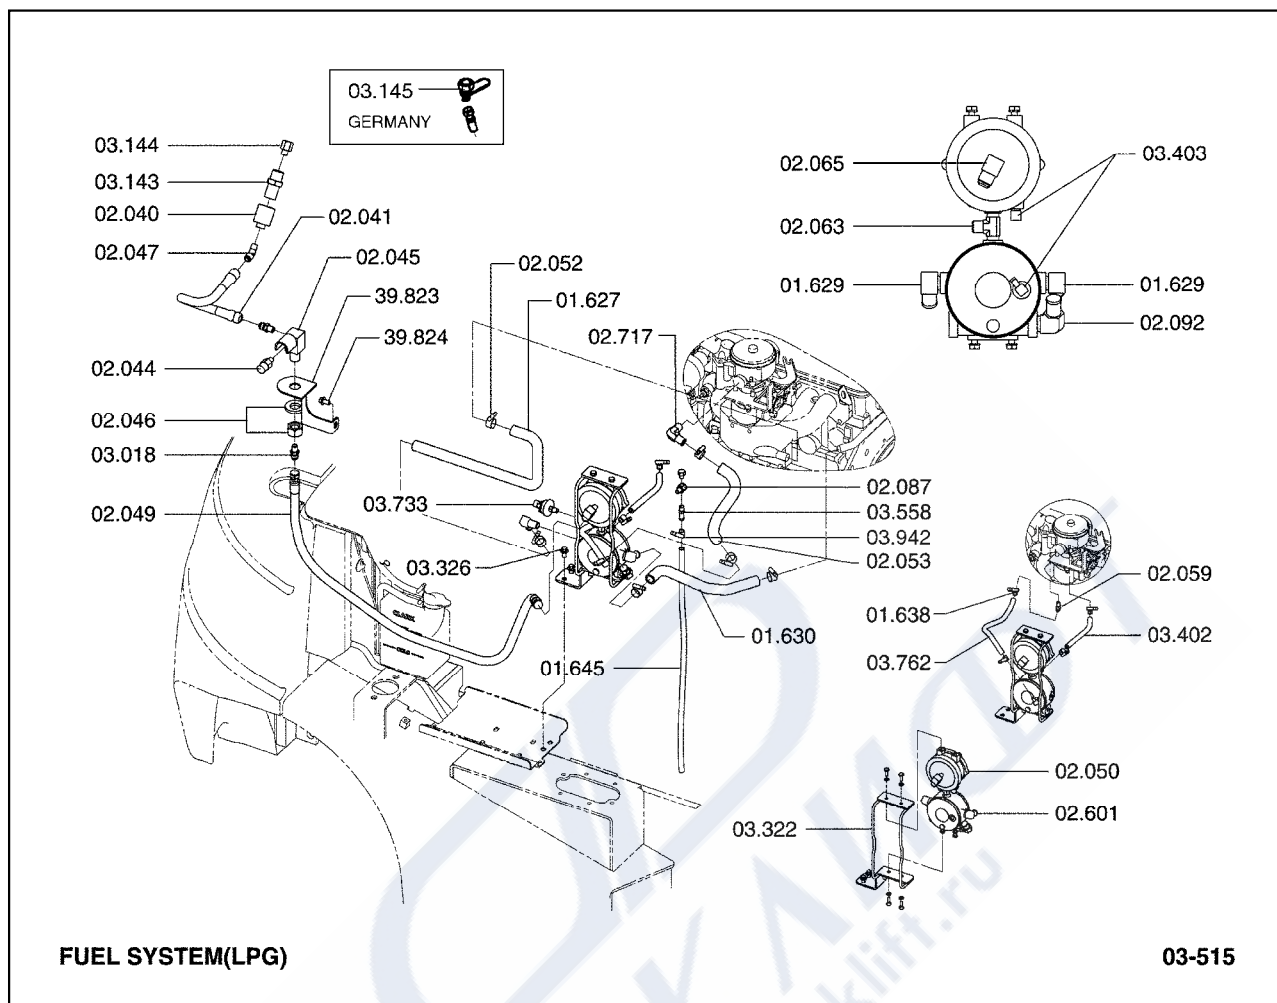 

01.627	LINE, VAPORIZER WATER OUTLET 라인	02.059	FITTING, LPG VAPORIZER INLET 피팅
01.629	FITTING, VAPORIZER WATER INLET 피팅	02.063	FITTING, LOCK-OFF VALVE OUTLET 피팅
01.630	LINE, VAPORIZER WATER INLET 라인	02.065	FITTING, LOCK OFF VALVE INLET 피팅
01.638	CLAMP, VAPORIZER WATER OUTLET LINE 클램프	02.087	FITTING, VAPORIZER OUTLET 피팅
01.645	LINE, VAPORIZER WATER OUTLET 라인	02.092	FITTING, LPG VAPORIZER OUTLET 피팅
02.040	COUPLER, LPG QUICK DISCONNECT 커플러	02.601	REGULATOR,VAPORIZER ASSY 레귤레이터
02.041	LINE, LP GAS TANK OUTLET 라인	02.717	FITTING, CARBURETOR INLET 피팅
02.044	VALVE, HYDROSTATIC RELIEF 밸브	03.018	FITTING, THREE WAY VALVE OUTLET LINE 피팅
02.045	ADAPTOR, THREE WAY THRU HOOD 어댑터	03.143	COUPLER, LPG QUICK DISCONNECT 커플러
02.046	FASTENER, ADAPTOR 패스너	03.144	COUPLER, LPG QUICK DISCONNECT 커플러
02.047	FITTING, LPG ADAPTOR OUTLET 피팅	03.145	COUPLER, LPG QUICK DISCONNECT 커플러
02.049	LINE, ADAPTOR OUTLET 라인	03.322	BRACKET, LPG REGULATOR MOUNTING 브라켓
02.050	VALVE, LPG LOCK OFF 밸브	03.326	FASTENER, LPG REGULATOR MOUNTING BRACKET 패스너
02.052	CLAMP, REGULATOR OUTLET HOSE 클램프	03.402	LINE, LPG LOCK-OFF VALVE VACUUM 라인
02.053	LINE, REGULATOR OUTLET 라인	03.403	FITTING, LPG LOCK-OFF VALVE VACUUM PORT 피팅

03.558	VALVE, FUEL CONTROL 밸브
03.733	SWITCH, LPG PRESSURE 스위치
03.762	HOSE, VACUUM 호스
03.942	CLAMP, RELIEF VALVE HOSE 클램프
39.823	BRACKET, FUEL FILTER 브라켓
39.824	FASTENER, FUEL FILTER BRACKET 패스너

 
ФОРКЛИФТ
www.forklift.ru

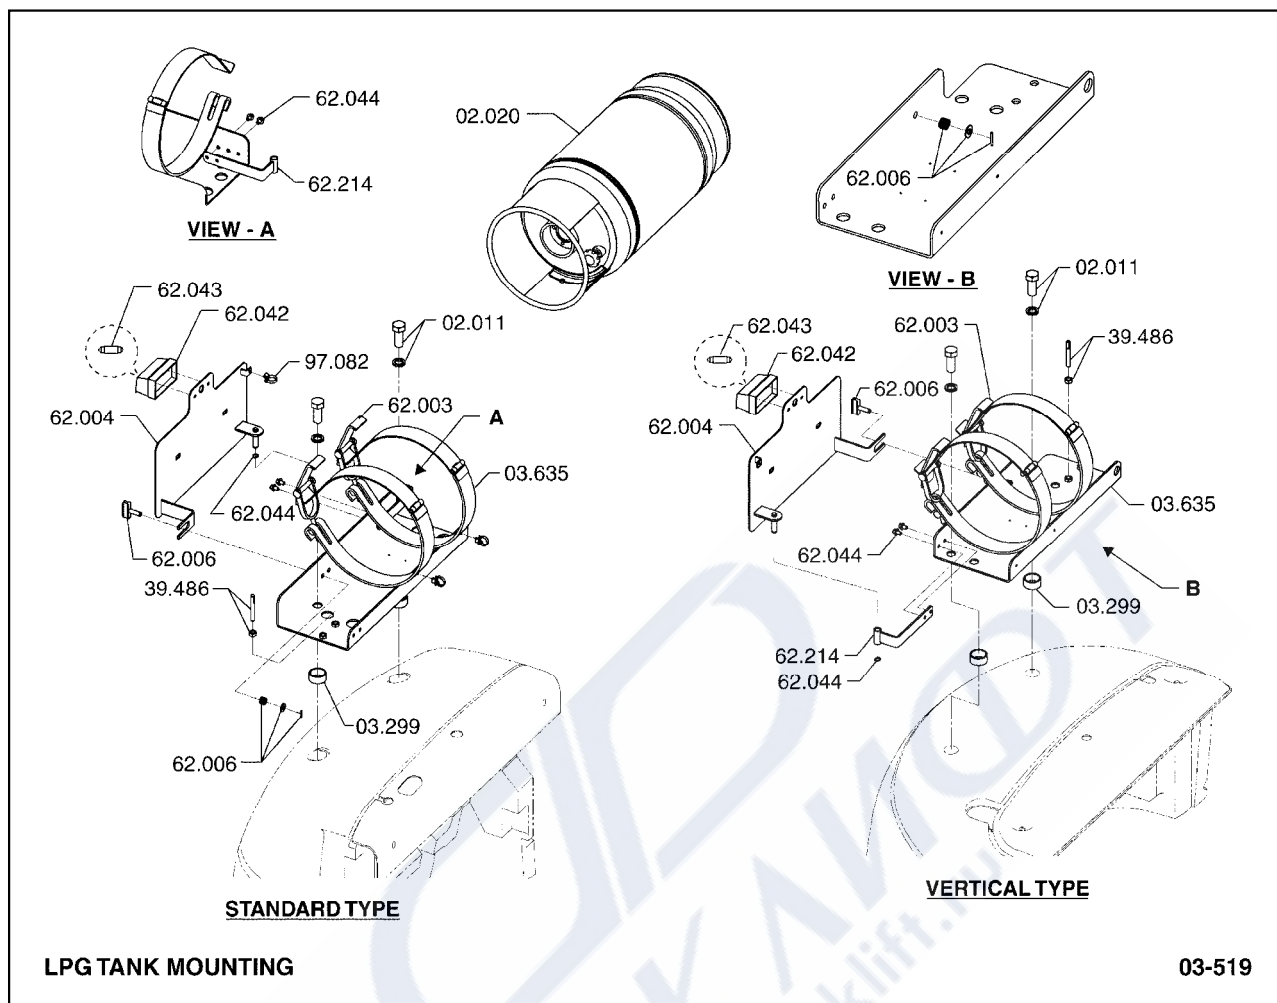

02.011	FASTENER, TANK REAR MOUNTING BRACKET 패스너
02.020	TANK, FUEL 탱크
03.299	SPACER, LPG TANK GUARD MOUNTING FASTENER 스페이서
03.635	BRACKET, LPG TANK 브라켓
39.486	FASTENER, GAS TANK SHIELD 패스너
62.003	CLAMP, LPG TANK 클램프
62.004	PLATE, LICENSE 플레이트
62.006	LOCK, LICENSE 로크
62.042	LAMP ASSEMBLY, LICENSE PLATE 램프

62.043	BULB, LICENSE PLATE LAMP 전구
62.044	FASTENER, LICENSE PLATE MOUNTING 패스너
62.214	BRACKET, LICENSE PLATE MOUNTING 브라켓
97.082	CLIP, LICENSE PLATE 클립



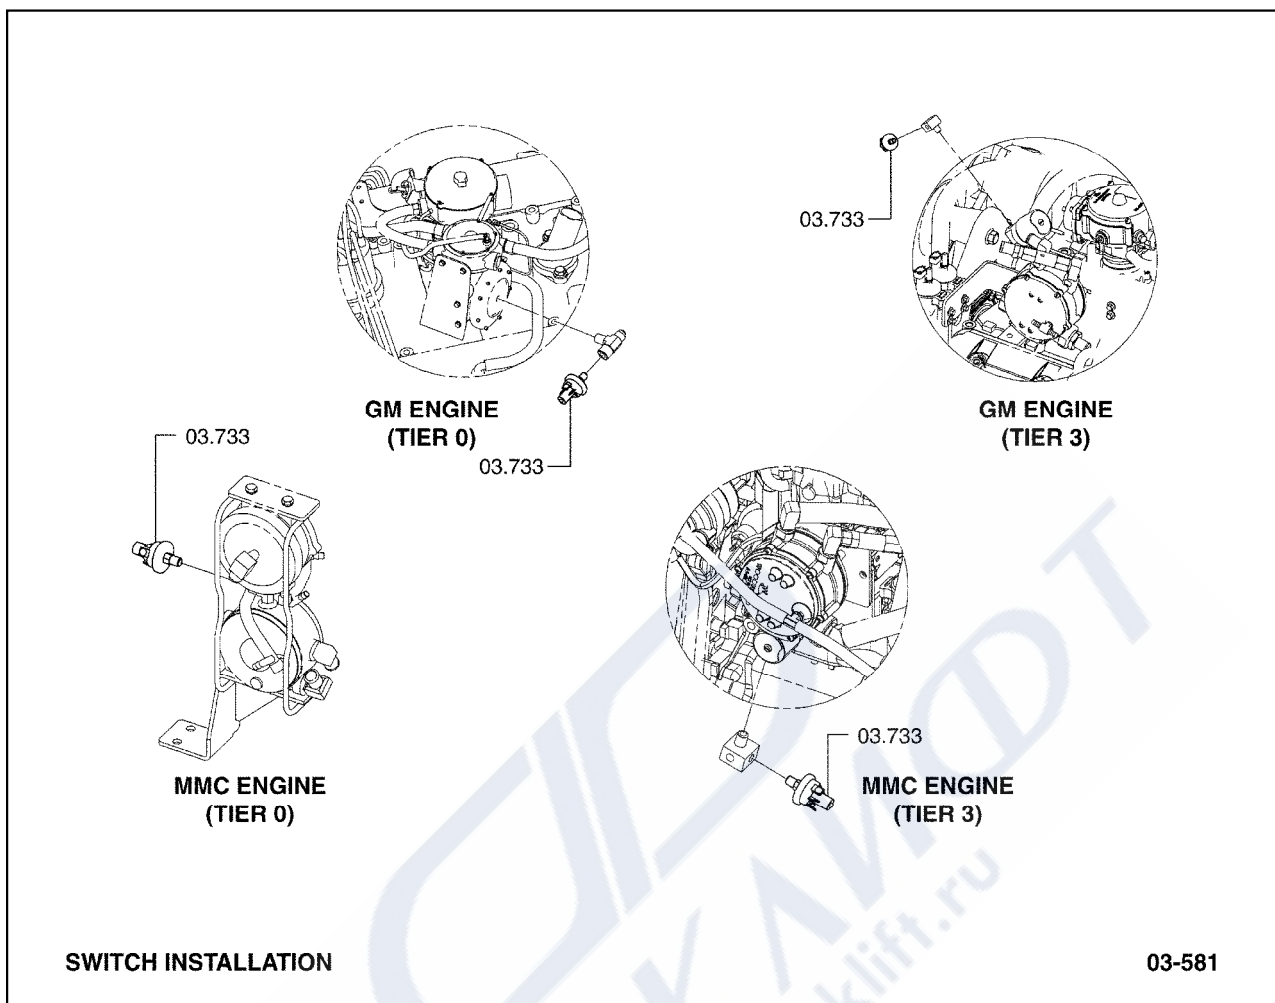 


SWITCH INSTALLATION

03-581

03.733 SWITCH,LPG PRESSURE
스위치

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

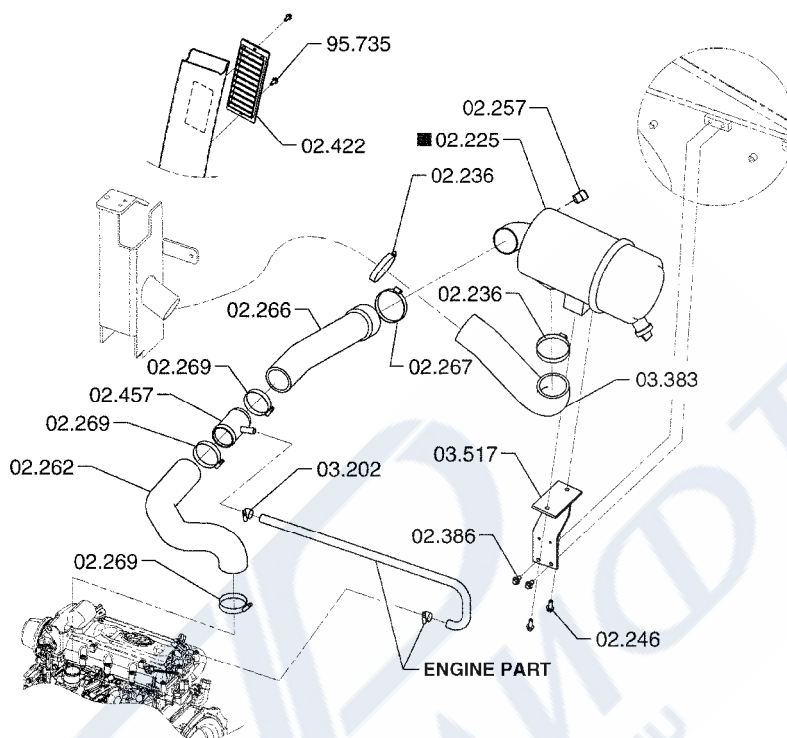


INTAKE SYSTEM

03-634


- | | |
|--------|---|
| 02.225 | CLEANER ASSEMBLY, ENGINE INTAKE AIR
에어클리너 |
| 02.236 | CLAMP, MAIN AIR CLEANER INLET HOSE
클램프 |
| 02.246 | FASTENER, ENGINE INTAKE AIR CLEANER ATTACHING
패스너 |
| 02.257 | INDICATOR, ENGINE INTAKE AIR CLEANER AIR RES
인디케이터 |
| 02.262 | HOSE, MAIN AIR CLEANER OUTLET
호스 |
| 02.266 | HOSE, MAIN AIR CLEANER OUTLET
호스 |
| 02.267 | CLAMP, MAIN AIR CLEANER OUTLET HOSE
클램프 |
| 02.269 | CLAMP, MAIN AIR CLEANER OUTLET HOSE
클램프 |
| 02.386 | FASTENER, ENGINE INTAKE AIR CLEANER SUPPORT
패스너 |


02.422	SCREEN, ENGINE INTAKE AIR 스크린
02.457	FITTING, MAIN AIR CLEANER OUTLET TUBE 피팅
03.202	CLAMP, ENGINE AIR INTAKE ADAPTOR 클램프
03.383	LINE, MAIN AIR CLEANER INLET LINE 라인
03.517	BRACKET, AIR CLEANER MOUNTING 브라켓
95.735	FASTENER, ENGINE AIR INTAKE SCREEN 패스너

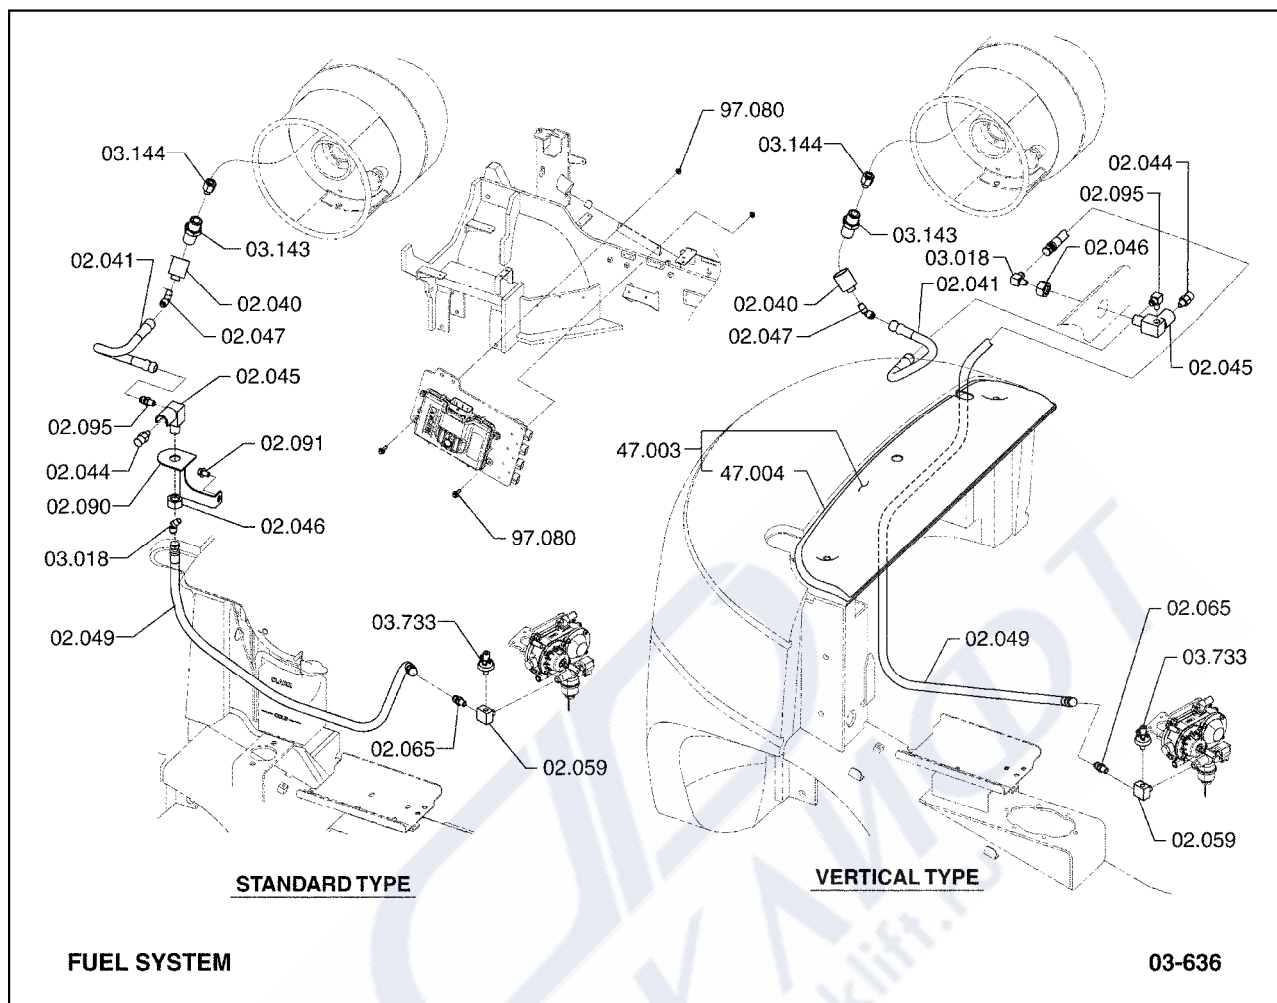 

- | | |
|--------|--------------------------------------|
| 02.040 | COUPLER, LPG QUICK DISCONNECT
커플러 |
| 02.041 | LINE, LP GAS TANK OUTLET
라인 |
| 02.044 | VALVE, HYDROSTATIC RELIEF
밸브 |
| 02.045 | ADAPTOR, THREE WAY THRU HOOD
어댑터 |
| 02.046 | FASTENER, ADAPTOR
패스너 |
| 02.047 | FITTING, LPG ADAPTOR OUTLET
피팅 |
| 02.049 | LINE, ADAPTOR OUTLET
라인 |
| 02.059 | FITTING, LPG VAPORIZER INLET
피팅 |
| 02.065 | FITTING, LOCK OFF VALVE INLET
피팅 |

02.090	BRACKET, LPG THREE WAY ADAPTOR MOUNTING 브라켓
02.091	FASTENER, LPG ADAPTOR MOUNTING BRACKET 패스너
02.095	FITTING, LPG THREE WAY ADAPTOR 피팅
03.018	FITTING, THREE WAY VALVE OUTLET LINE 피팅
03.143	COUPLER, LPG QUICK DISCONNECT 커플러
03.144	COUPLER, LPG QUICK DISCONNECT 커플러
03.733	SWITCH, LPG PRESSURE 스위치
47.003	COVER, RADIATOR 커버
47.004	SEAL, RADIATOR COVER 씰
97.080	FASTENER, ECU MOUNTING 패스너

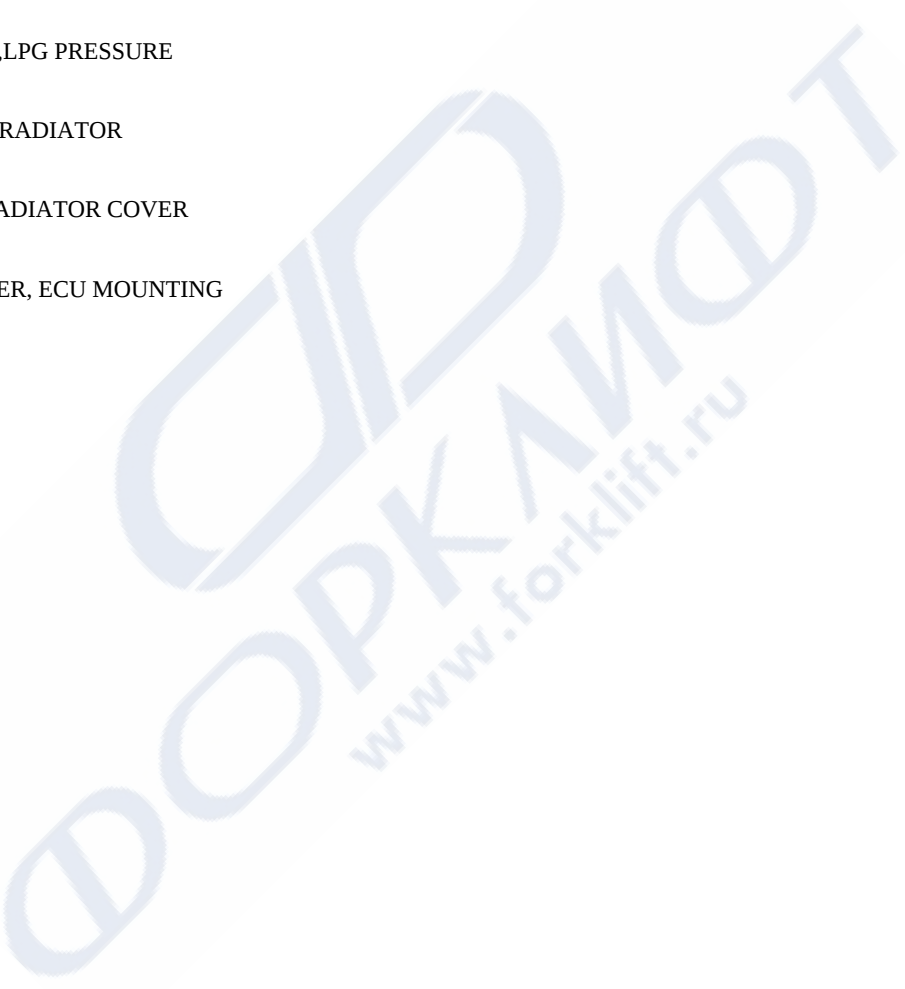 


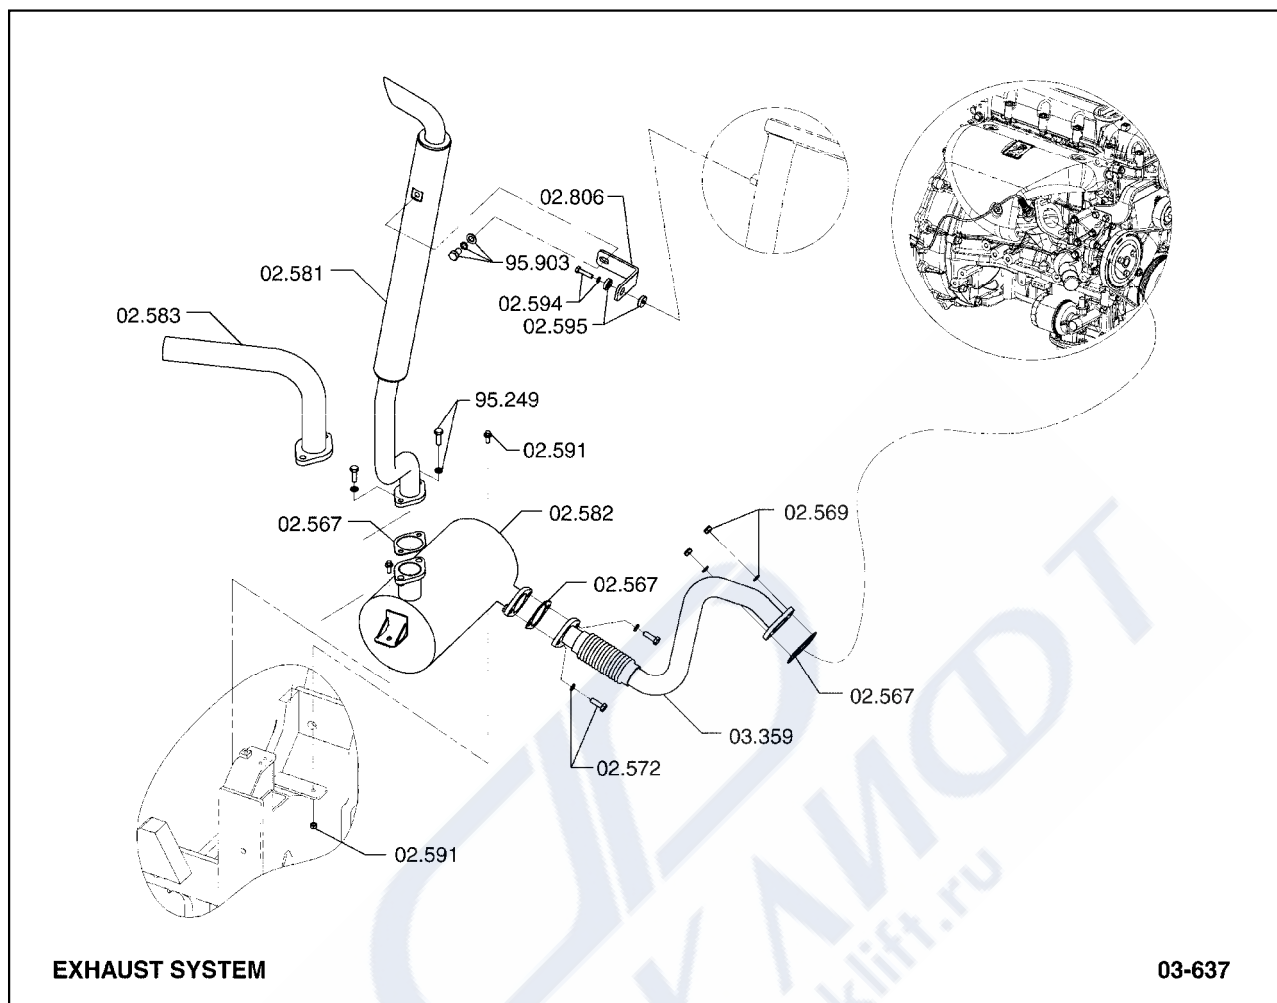 

- | | |
|--------|--|
| 02.567 | GASKET, EXHAUST PIPE FLANGE TO MANIFOLD
가스켓 |
| 02.569 | FASTENER, EXHAUST PIPE FLANGE TO MANIFOLD
패스너 |
| 02.572 | FASTENER, EXHAUST PIPE STRAP
패스너 |
| 02.581 | EXTENSION, TAIL PIPE
익스텐션 |
| 02.582 | MUFFLER
머플러 |
| 02.583 | PIPE, TAIL
파이프 |
| 02.587 | CLAMP, EXHAUST PIPE TO FLANGE
클램프 |
| 02.591 | FASTENER, MUFFLER MOUNTING
패스너 |
| 02.594 | FASTENER, TAIL PIPE MOUNTING BRACKET
패스너 |


02.595	DAMPENER, EXHAUST PIPE VIBRATION 댐프너
02.806	BRACKET, TAIL PIPE MOUNTING 브라켓
03.359	PIPE, EXHAUST 파이프
95.249	FASTENER, TAIL PIPE CONNECTION FLANGE 패스너
95.903	FASTENER, EXHAUST PIPE BRACKET 패스너

 ФОРКЛИФТ
www.forklift.ru

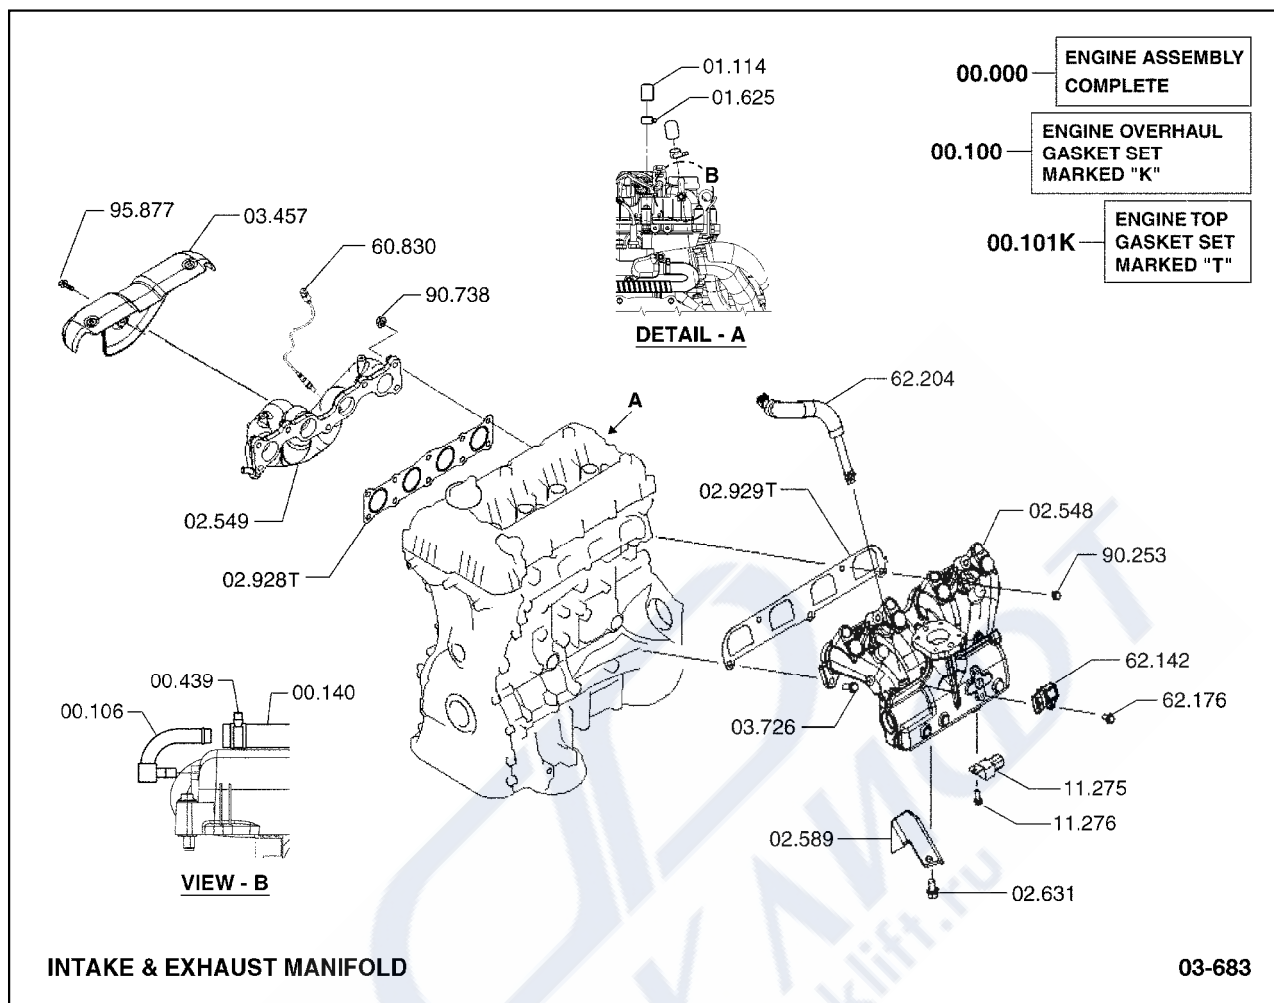


00.000	PRODUCTION ENGINE ASSEMBLY 엔진
00.100	GASKET KIT, ENGINE OVERHAUL 가스켓키트
00.101	VALVE GRIND GASKET KIT (TOP SET) 밸브가스켓키트
00.106	FITTING, CRANKCASE VENT TUBE 피팅
00.140	LINE, CRANKCASE VENT TUBE 라인
00.439	CLAMP, CRANKCASE VENT LINE 클램프
01.114	PLUG, WATER OUTLET ELBOW 플러그
01.625	CLAMP, WATER OUTLET HOUSING HOSE 클램프
02.548	MANIFOLD, INTAKE 매니폴드

02.549	MANIFOLD, EXHAUST 매니폴드
02.589	SHIELD, HEAT (AT MANIFOLD) 실드
02.631	FASTENER, HEAT SHIELD 패스너
02.928	GASKET, EXHAUST MANIFOLD 가스켓
02.929	GASKET, INTAKE MANIFOLD 가스켓
03.457	SHIELD, MANIFOLD HEAT 실드
03.726	FASTENER, INTAKE MANIFOLD 패스너
11.275	CONDENSER, IGNITION 컨덴서
11.276	FASTENER, IGNITION CONDENSER 패스너
60.830	SENSOR, ENG CONTROL OXYGEN 센서
62.142	SENSOR, ENGINE MAP 센서
62.176	FASTENER, ENGINE MAP SENSOR 패스너
62.204	LINE, PCV 라인
90.253	NUT, MANIFOLD FASTENER 너트
90.738	NUT, MANIFOLD FASTENER 너트
95.877	FASTENER, HEAD SHIELD 패스너

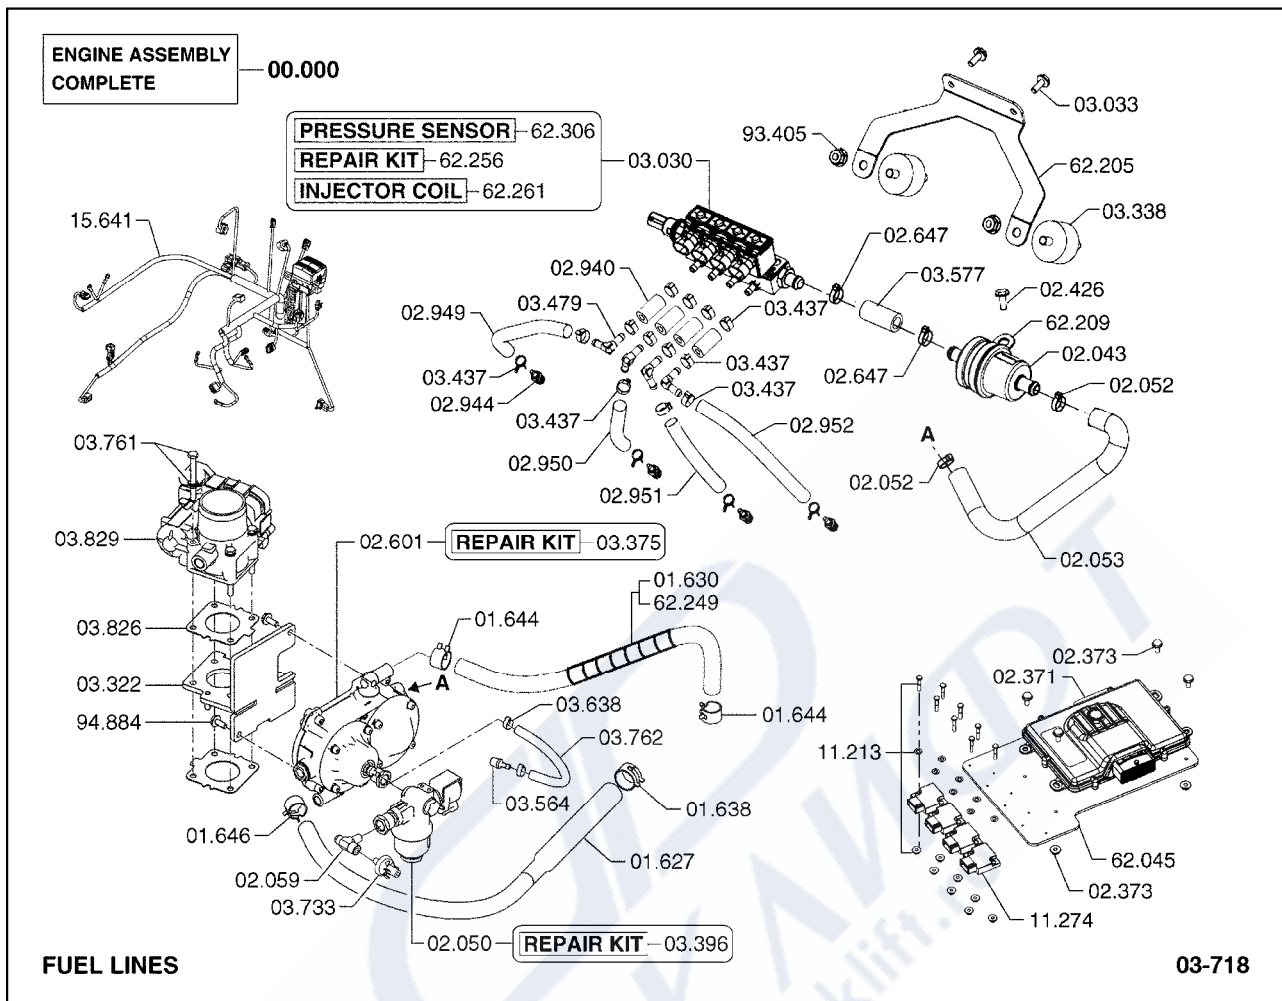 

00.000	PRODUCTION ENGINE ASSEMBLY 엔진	02.647	CLIP, FUEL FILTER OUTLET LINE CLIP 클립
01.627	LINE, VAPORIZER WATER OUTLET 라인	02.940	LINE, INJECTOR LEAK OFF 라인
01.630	LINE, VAPORIZER WATER INLET 라인	02.944	NOZZLE, FUEL INJECTOR 노즐
01.638	CLAMP, VAPORIZER WATER OUTLET LINE 클램프	02.949	LINE, INJECTOR (NO 1 CYLINDER) 라인
01.644	CLAMP, VAPORIZER WATER INLET LINE 클램프	02.950	LINE, INJECTOR (NO 2 CYLINDER) 라인
01.646	CLAMP, VAPORIZER WATER OUTLET LINE 클램프	02.951	LINE, INJECTOR (NO 3 CYLINDER) 라인
02.043	FILTER, FUEL 필터	02.952	LINE, INJECTOR (NO 4 CYLINDER) 라인
02.050	VALVE, LPG LOCK OFF 밸브	03.030	INJECTOR ASSEMBLY, FUEL 인젝터
02.052	CLAMP, REGULATOR OUTLET HOSE 클램프	03.033	FASTENER, FUEL INJECTOR 패스너
02.053	LINE, REGULATOR OUTLET 라인	03.322	BRACKET, LPG REGULATOR MOUNTING 브라켓
02.059	FITTING, LPG VAPORIZER INLET 피팅	03.338	DAMPENER, FUEL INJECTOR LINE VIBRATION 댐퍼
02.371	CONTROL UNIT, ELECTRONIC (ECU) 컨트롤유닛	03.375	REPAIR KIT, LP GAS VAPOR REGULATOR 리페어키트
02.373	FASTENER, ECU TO FUEL MODULE 패스너	03.396	REPAIR KIT, FUEL VALVE AND FILTER 리페어키트
02.426	FASTENER, FUEL FILTER BRACKET 패스너	03.437	CLAMP, FUEL INJECTOR LINE 클램프
02.601	REGULATOR, VAPORIZER ASSY 레귤레이터	03.479	NOZZLE, TIP FUEL INJECTOR 노즐


03.564	NOZZLE, VACUUM REDUCTION 노즐
03.577	LINE, ENGINE FUEL FILTER 라인
03.638	CLAMP, VACUUM LINE 클램프
03.733	SWITCH, LPG PRESSURE 스위치
03.761	FASTENER, THROTTLE POSITIONER BRACKET 패스너
03.762	HOSE, VACUUM 호스
03.826	GASKET, THROTTLE BODY 가스켓
03.829	THROTTLE BODY AND SHAFT 스로틀
11.213	FASTENER, TRANSISTOR IGNITION RESISTOR 패스너
11.274	TRANSISTOR, ENGINE IGNITION 트랜지스터
15.641	WIRING HARNESS, ENGINE 와이어하네스
60.045	GASKET, FORK POSITIONING SWITCH COVER 가스켓
62.205	BRACKET, FUEL INJECTOR 브라켓
62.209	CLAMP, FUEL FILTER 클램프
62.249	GUARD, ENGINE VAPORIZER WATER INLET 가드
62.256	REPAIR KIT, FUEL INJECTOR 리페어키트
62.261	COIL, FUEL INJECTOR 코일
62.306	SENSOR, ENGINE FUEL PRESSURE & TEMPERATURE 센서
93.405	NUT, FUEL INJECTOR FASTENER 너트
94.884	FASTENER, LPG VAPORIZER MOUNTING 패스너

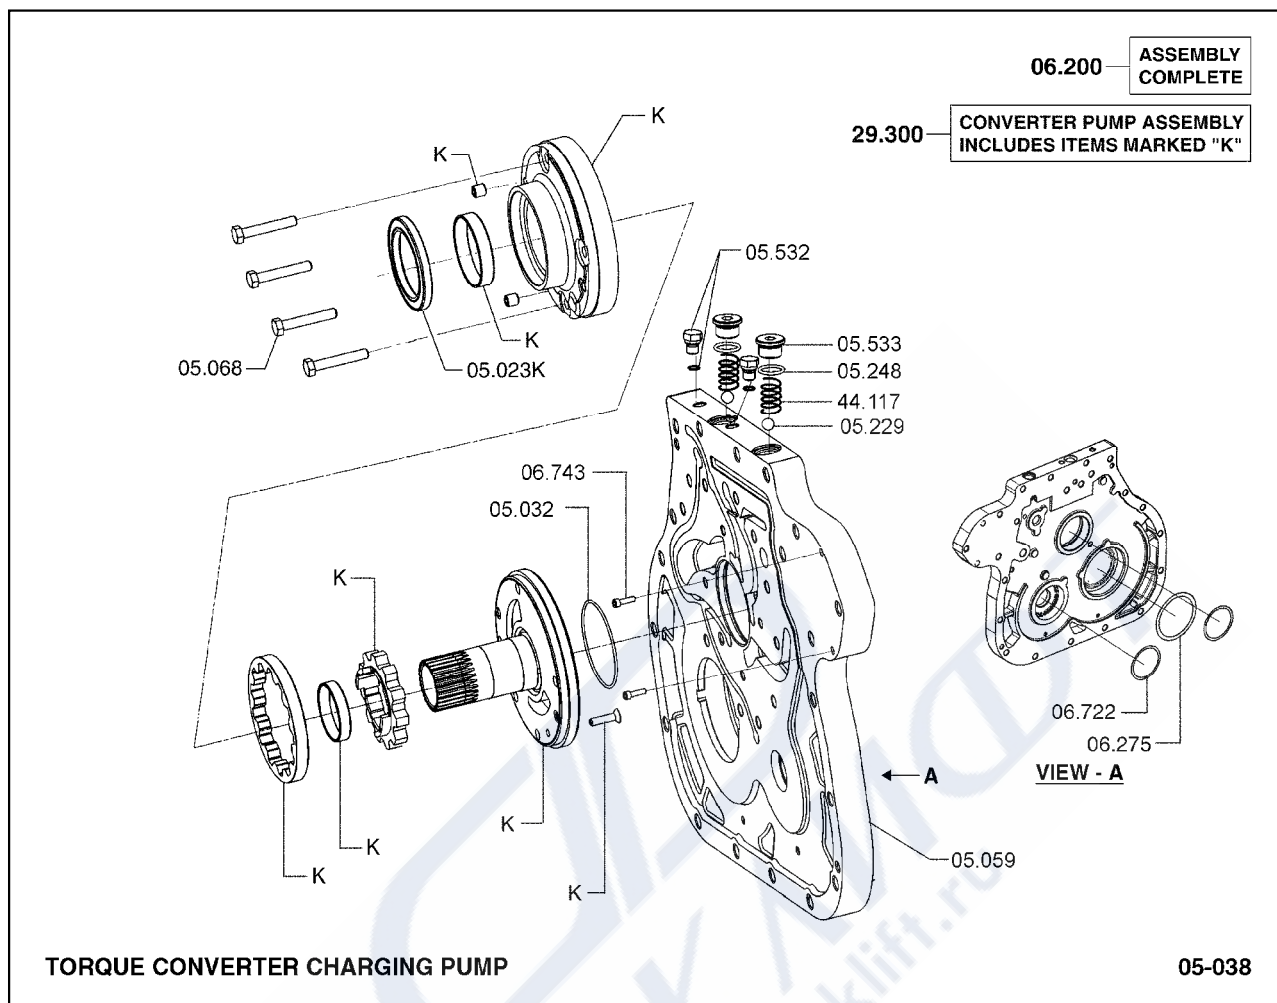 

05.023	SEAL, CONVERTER IMPELLER HUB 씰
05.032	SEAL, STATOR SUPPORT (PISTON RING) 씰
05.059	SPACER, PUMP SHAFT 스페이서
05.068	FASTENER, CONVERTER CHARGING PUMP 패스너
05.229	BALL, CONVERTER PRESSURE REGULATING CHECK 볼
05.248	SEAL, TORQUE CONVETER PRESSURE CHECK 씰
05.532	PLUG, TORQUE CONVERTER INLET FITTING 플러그
05.533	PLUG, CONVERTER HOUSING 플러그
06.200	TRANSMISSION ASSEMBLY 트랜스미션

06.275	SHIM, OUTPUT SHAFT REAR BEARING RETAINER 심
06.722	SHIM, TRANSMISSION STATOR SUPPORT 심
06.743	FASTENER, TRANSMISSION VALVE PRESSURE PUMP COVER 패스너
29.300	PUMP ASSEMBLY, CONVERTER CHARGING 펌프
44.117	SPRING, TRANSMISSION CONTROL ACCUMULATOR MIDDLE IN 스프링

 ASSEMBLY COMPLETE 06.200

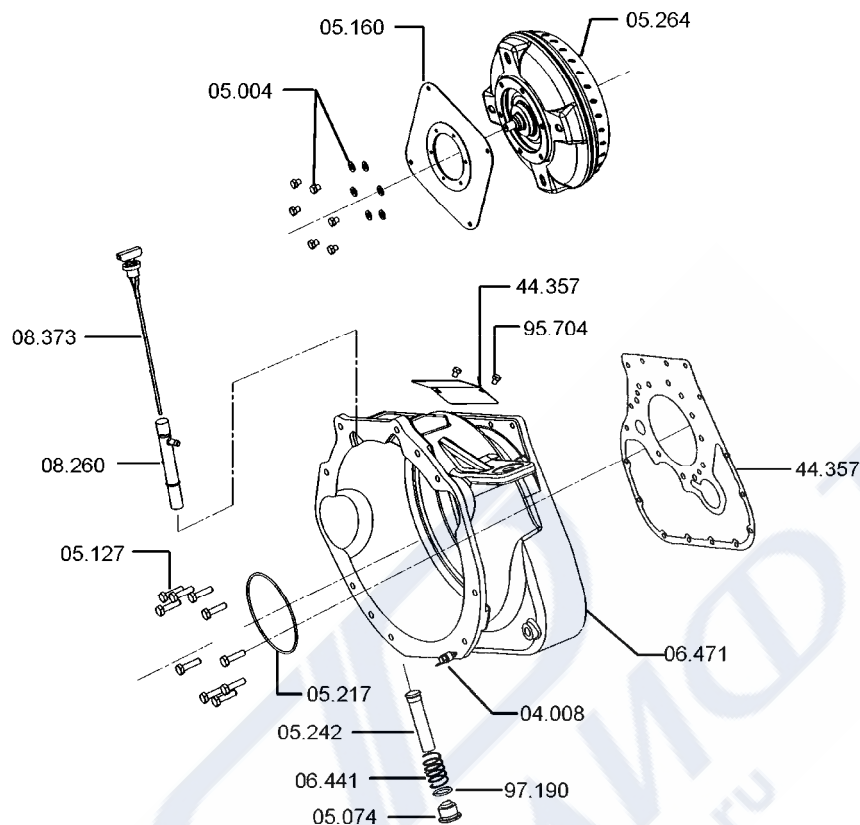


TORQUE CONVERTER HOUSING

05-047


04.008	SENSOR, TRANSMISSION FLUID TEMPERATURE 센서
05.004	FASTENER, CONVERTER DRIVE & REINFORCING PLATE 패스너
05.074	PLUG, HOUSING DRAIN 플러그
05.127	FASTENER, CONVERTER TO CASE 패스너
05.160	SEAL, REGULATING VALVE CONVERTER PORT 셀
05.217	SEAL, CONVERTER HOUSING COVER 셀
05.242	FILTER SCREEN, TRANSMISSION FLUID 필터스크린
05.264	CONVERTER SUB ASSEMBLY, TORQUE 컨버터
06.200	TRANSMISSION ASSEMBLY 트랜스미션

06.441	SPRING, CONVERTER OIL PRESSURE VALVE 스프링
06.471	HOUSING, CONVERTER 하우징
08.260	TUBE, TRAN OIL LEVEL DIPSTICK SUPPORT 튜브
08.373	DIPSTICK, TRANSMISSION 딥스틱
44.357	GASKET, CONVERTER HOUSING COVER 가스켓
95.704	FASTENER, CONVERTER HOUSING PLATE 패스너
97.190	SEAL, FILTER SCREEN 씰

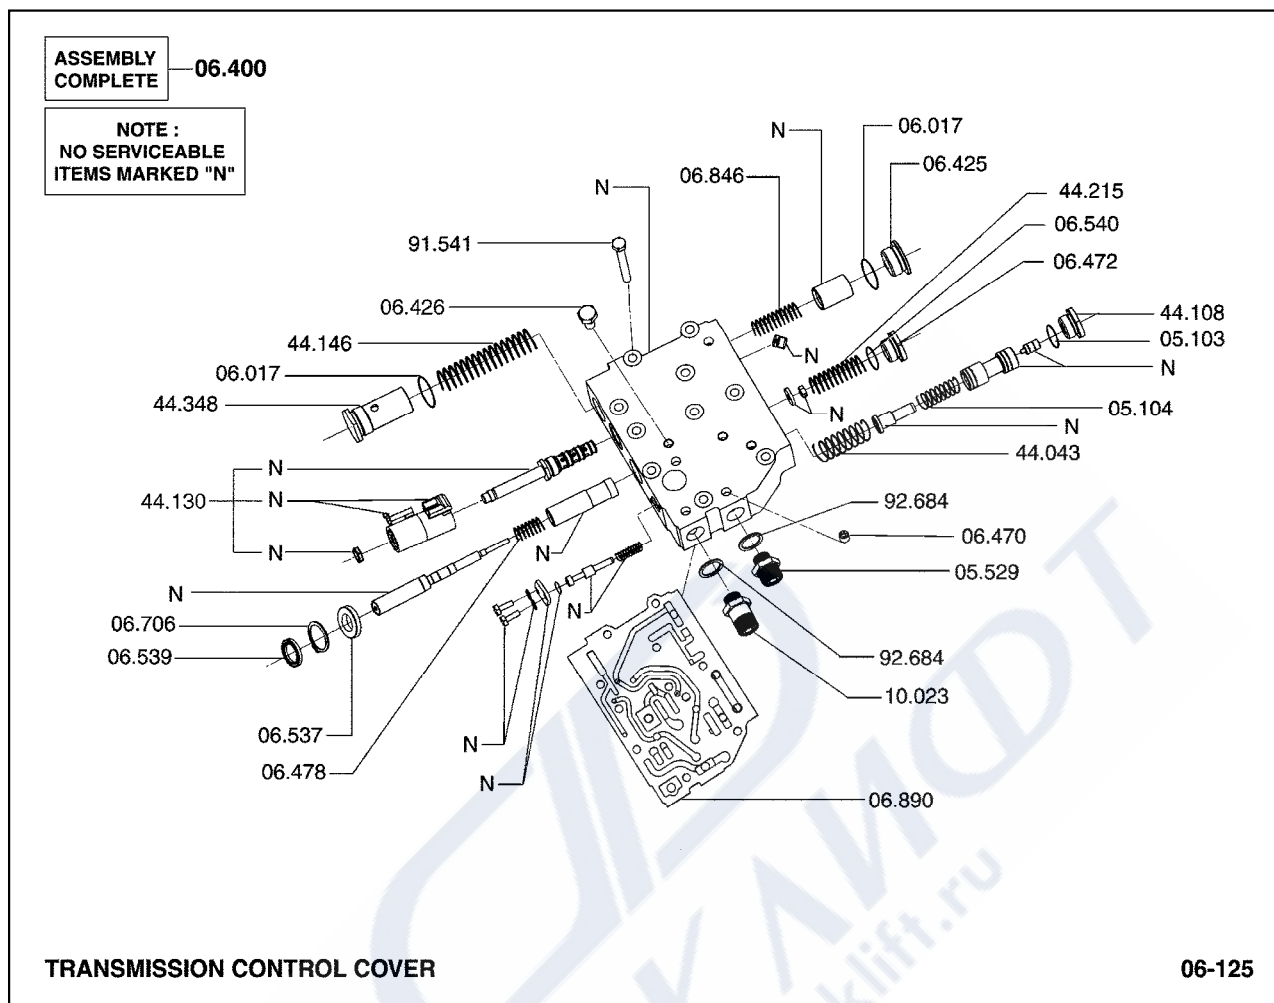 

05.103	SEAL, VALVE STOP 씰
05.104	SPRING, INNER 스프링
05.529	FITTING, CONTROL COVER OUTLET 피팅
06.017	O-RING, SPOOL CARTRIDGE 오링
06.400	CONTROL COVER & VALVE ASSEMBLY 컨트롤커버& 밸브
06.425	PLUG, CONTROL COVER OIL PASSAGE 플러그
06.426	PLUG, CONTROL COVER 플러그
06.470	PLUG, CONTROL VALVE HOUSING OIL PASSAGE 플러그
06.472	PLUG, CONTROL VALVE HOUSING OIL PASSAGE 플러그


06.478	SPRING, INCHING PISTON RETURN 스프링
06.537	FASTENER, SELECTOR VALVE STOP (LARGE) 패스너
06.539	SEAL, SELECTOR VALVE STOP (LARGE) 씰
06.540	SEAL, INCHING PISTON HOUSING 씰
06.706	RETAINER, INCHING PISTON SEAL 리테이너
06.846	SPRING, ACCUMULATOR PISTON (INNER) 스프링
06.890	GASKET, CONTROL COVER PLATE 가스켓
10.023	FITTING, CONTROL COVER INLET PORT 피팅
44.043	SPRING, CONTROL VALVE SPEED SELECTOR SPOOL CENTERI 스프링
44.108	PLUG, TRANSMISSION ACCUMULATOR BORE 플러그
44.130	SOLENOID VALVE, CONTROL COVER 솔레노이드밸브
44.146	SPRING, MODULATOR SPOOL 스프링
44.215	SPRING, INCHING PISTON RETURN OUTER SIDE 스프링
44.348	STOP, TRANS LUBE BY-PASS SPOOL SPRING 스톱
91.541	FASTENER, CONTROL COVER SEPARATOR PLATE 패스너
92.684	WASHER, TRANSMISSION OUTPUT FLANGE FASTENER 와셔

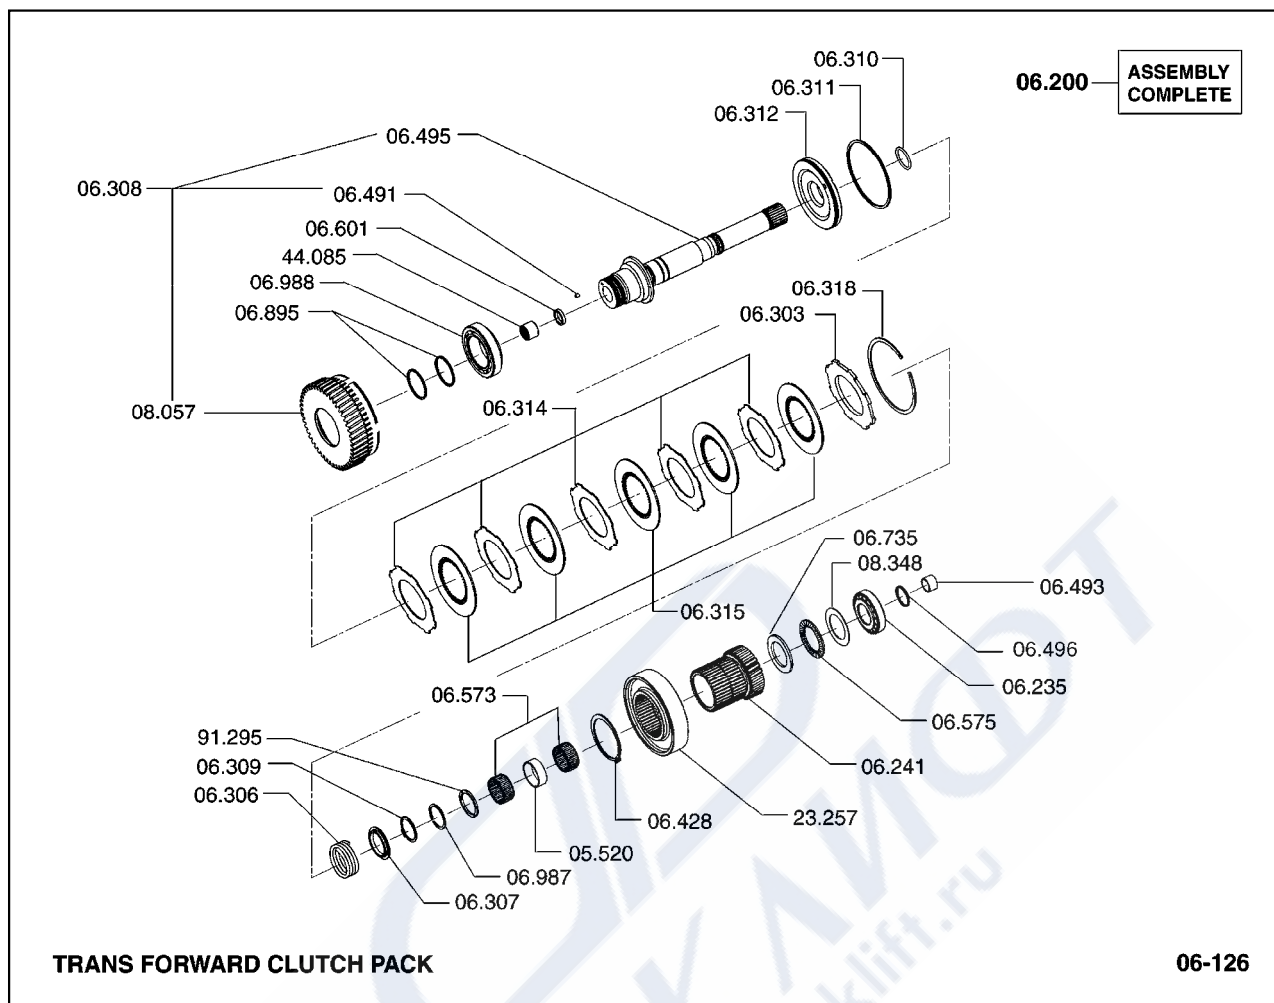 


05.520	SPACER, FORWARD GEAR BEARING 스페이서	06.428	RING, FORWARD CLUTCH PISTON SPRING WEAR 링
06.200	TRANSMISSION ASSEMBLY 트랜스미션	06.491	SEAL, FORWARD CLUTCH SHAFT-INNER 씰
06.235	BEARING, INPUT SHAFT INNER 베어링	06.493	BEARING, FORWARD SHAFT INNER 베어링
06.241	GEAR, INPUT SHAFT FORWARD 기어	06.495	SHAFT, FORWARD CLUTCH 샤프트
06.303	SHIM, FORWARD CLUTCH BEARING CAP 심	06.496	SEAL, FORWARD CLUTCH SHAFT-OUTER 씰
06.306	FASTENER, FORWARD CLUTCH BEARING CAP 패스너	06.573	BEARING, FORWARD GEAR 베어링
06.307	SEAL, FORWARD HUB 씰	06.575	BEARING, FORWARD GEAR 베어링
06.308	HUB & DRUM ASSEMBLY, FORWARD CLUTCH 허브& 드럼	06.601	RING, TRANS INT HIGH GEAR LOCATING 링
06.309	RETAINER, FORWARD HUB 리테이너	06.735	WASHER, FORWARD CLUTCH DISC HUB 와셔
06.310	SEAL, FORWARD CLUCH PISTON INNER 씰	06.895	RING, FWD CLUTCH SHAFT BRG LOCATING 링
06.311	SEAL, FORWARD CLUTCH PISTON OUTER 씰	06.987	RING, FORWARD CLUTCH HUB BEARING LOCATING 링
06.312	PISTON, FORWARD CLUTCH 피스톤	06.988	BEARING, FORWARD CLUTCH HUB (ENGINE END) 베어링
06.314	DISC, FORWARD CLUTCH INNER 디스크	08.057	GEAR, FORWARD & REVERSE 기어
06.315	DISC, FORWARD CLUTCH OUTER 디스크	08.348	WASHER, FORWARD GEAR THRUST 와셔
06.318	RING, FORWARD CLUTCH DISC END PLATE RET 링	23.257	DRUM, PARKING BRAKE 드럼

44.085	BEARING, IDLER SHAFT 베어링
91.295	WASHER, FORWARD CLUTCH BEARING CAP FASTENER 와셔




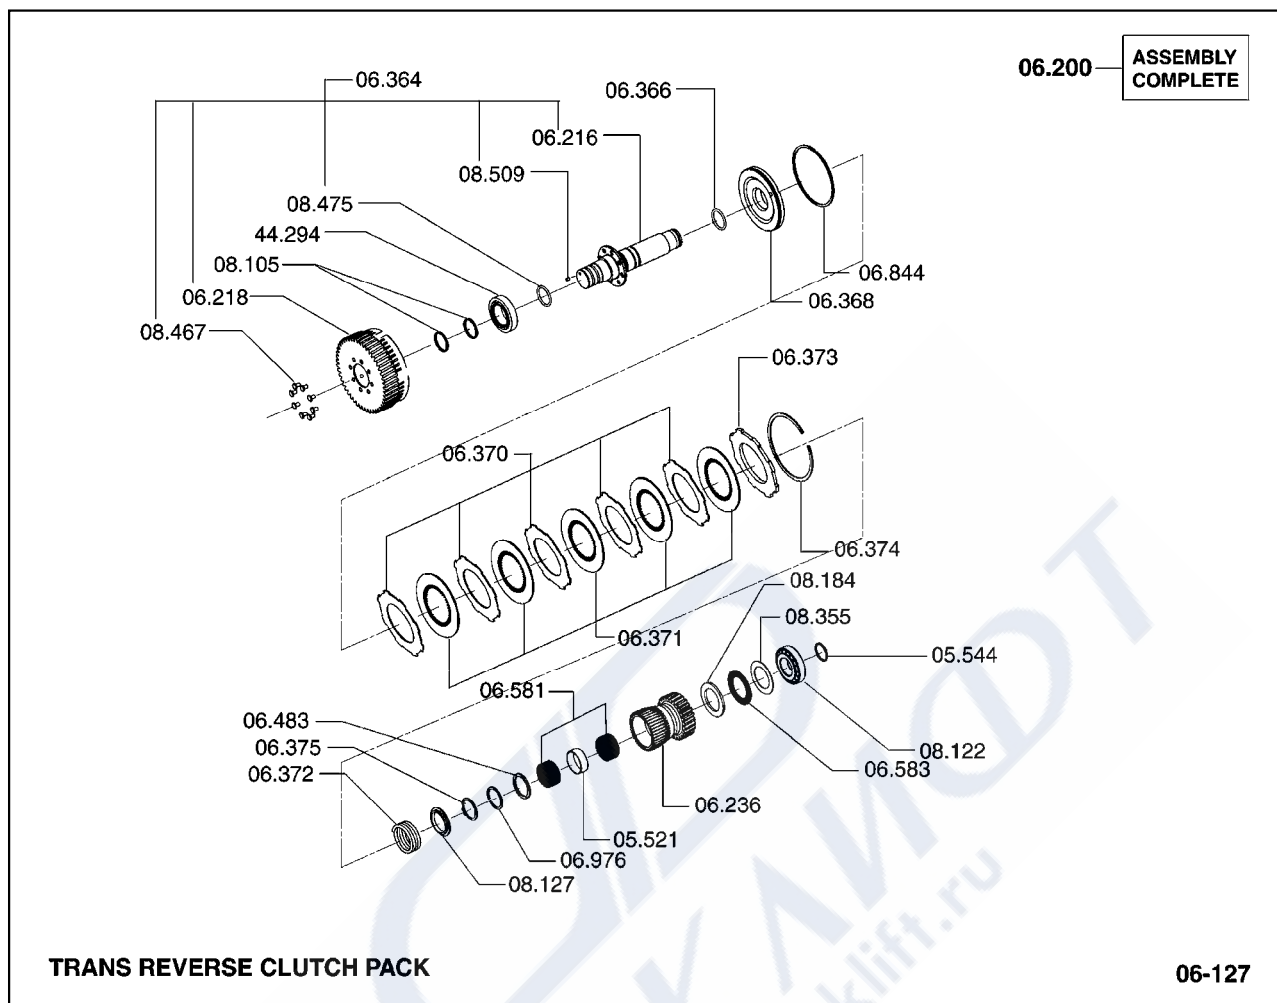 

05.521	SPACER, REVERSE GEAR BEARING 스페이서	06.483	WASHER, REVERSE CLUTCH HUB & DRUM THRUST 와셔
05.544	RING, REVERSE CLUTCH SHAFT BEARING LOCATING 링	06.581	BEARING, REVERSE GEAR 베어링
06.200	TRANSMISSION ASSEMBLY 트랜스미션	06.583	BEARING, REVERSE GEAR 베어링
06.216	SHAFT, REVERSE 샤프트	06.844	RING, REVERSE ACCUMULATOR PISTON 링
06.218	GEAR, REVERSE SHAFT DRIVE 기어	06.976	RING, REVERSE CLUTCH HUB BEARING LOCATING 링
06.236	GEAR, INPUT SHAFT REVERSE 기어	08.105	RING, REVERSE GEAR RETAINING 링
06.364	HUB & DRUM ASSEMBLY, REVERSE CLUTCH 허브& 드럼	08.122	BEARING, REVERSE UNIT DRIVE GEAR 베어링
06.366	SEAL, REVERSE CLUTCH PISTON INNER 씰	08.127	COVER, REVERSE UNIT CONTROL 커버
06.368	PISTON, REVERSE CLUTCH 피스톤	08.184	WASHER, REVERSE IDLER GEAR THRUST 와셔
06.370	DISC, REVERSE CLUTCH INNER 디스크	08.355	WASHER, REVERSE GEAR THRUST 와셔
06.371	DISC, REVERSE CLUTCH OUTER 디스크	08.467	FASTENER, REVERSE IDLER BEARING RETAINER 패스너
06.372	SPRING, REVERSE CLUTCH DISC RELEASE 스프링	08.475	SEAL, REVERSE IDLER SHAFT 씰
06.373	PLATE, REVERSE CLUTCH DISC END 플레이트	08.509	SEAL, REVERSE IDLER SHAFT 씰
06.374	RING, REVERSE CLUTCH DISC END PLATE RET 링	44.294	BEARING, REVERSE CLUTCH GEAR 베어링
06.375	RING, REVERSE CLUTCH DISC HUB RETAINER 링		

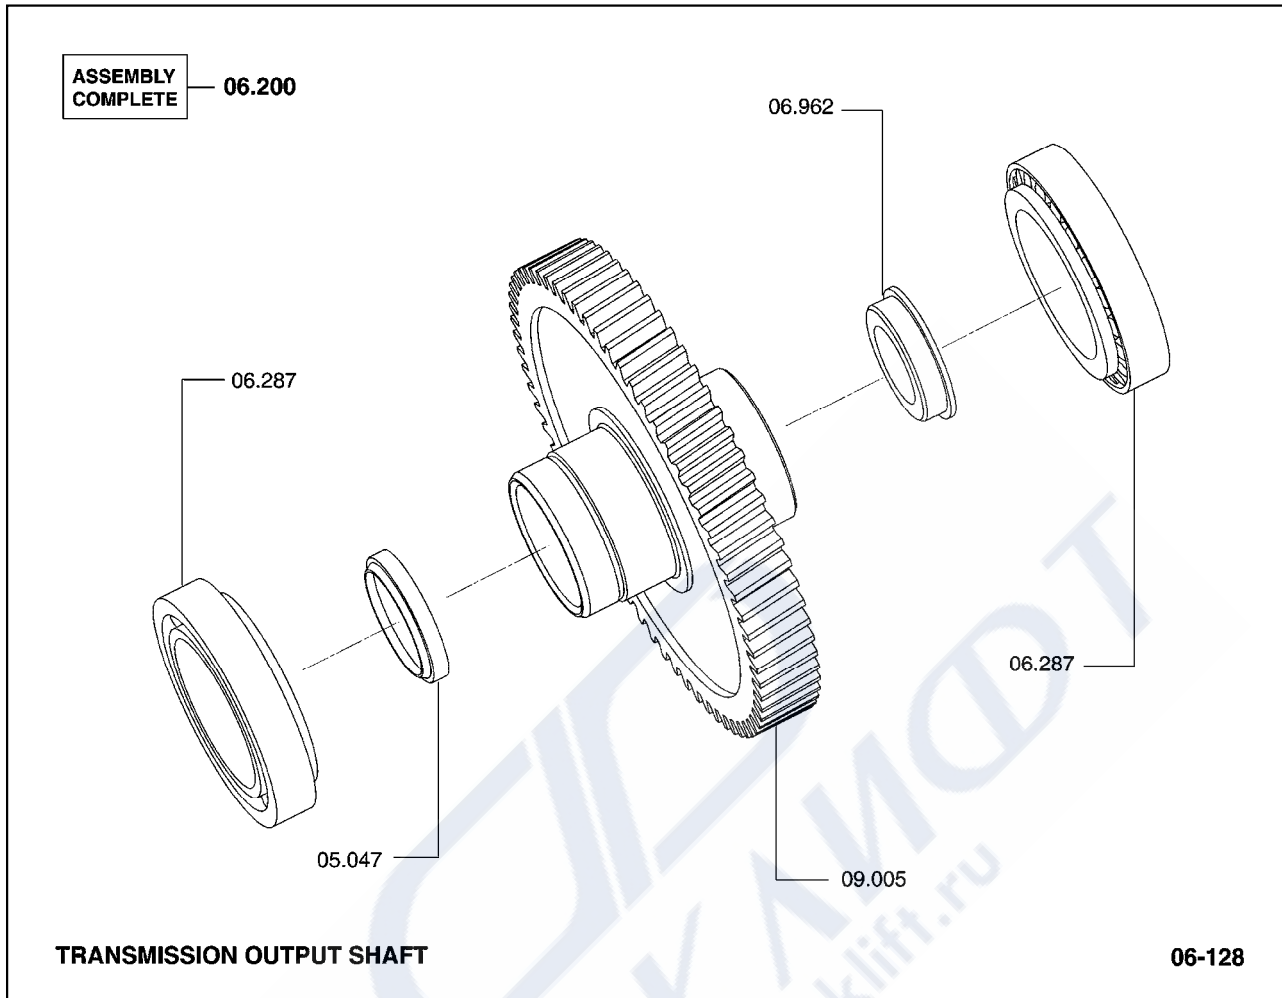 


05.047	SEAL, OUTPUT SHAFT BEARING RETAINER 씰
06.200	TRANSMISSION ASSEMBLY 트랜스미션
06.287	BEARING, OUTPUT SHAFT FRONT 베어링
06.962	SEAL, OUTPUT SHAFT BEARING CAP 씰
09.005	GEAR, OUTPUT 기어

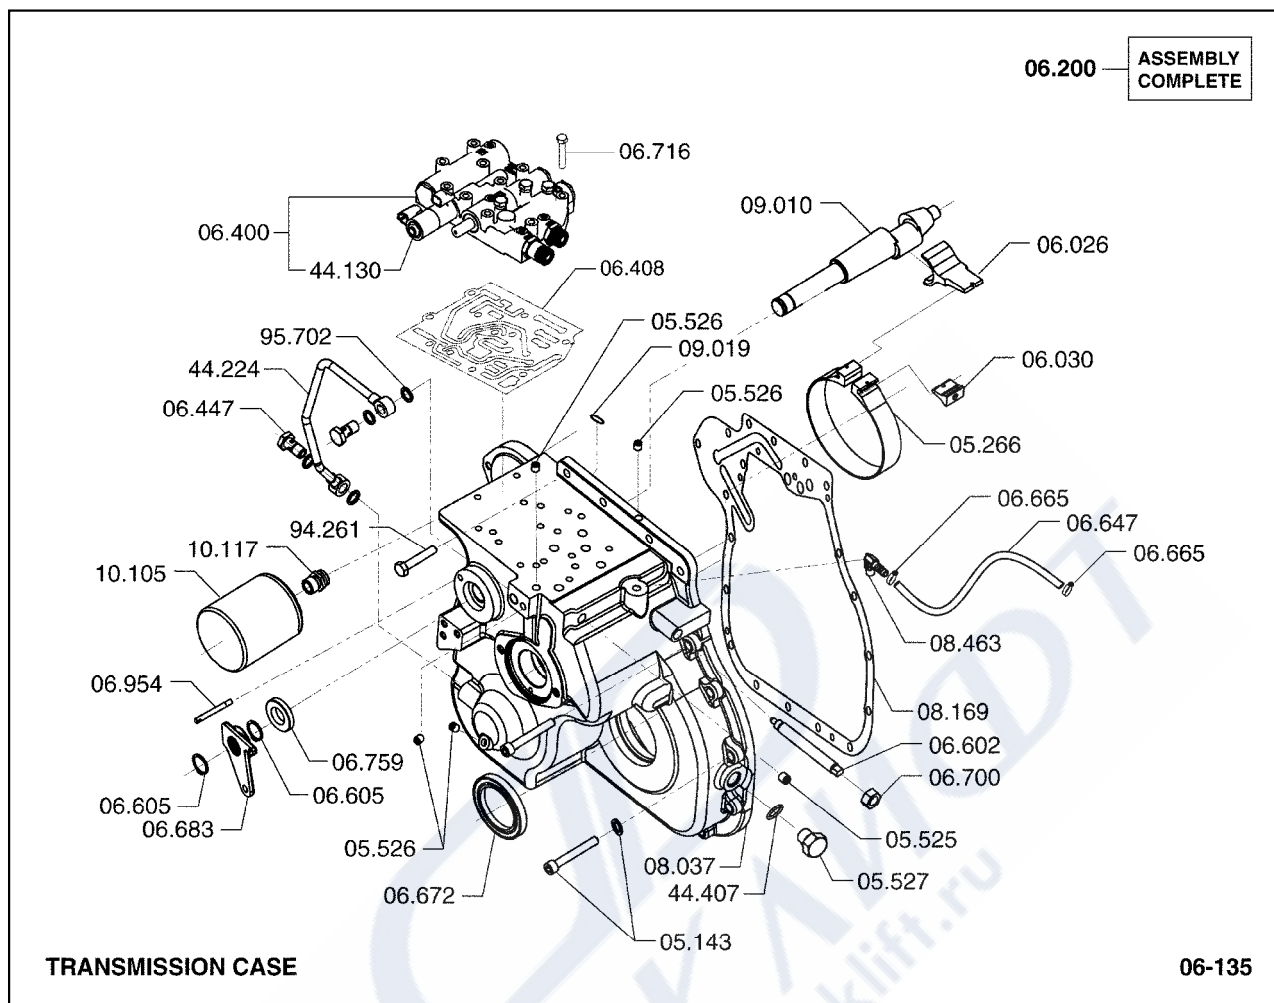 

05.143	FASTENER, CONVERTER HOUSING LOWER COVER 패스너	06.672	SEAL, TRANSMISSION DRIVE SHAFT (INPUT END) 씰
05.266	CLAMP, IDLE SHAFT BAND 클램프	06.683	LEVER, TRANSMISSION BRAKE ACTUATOR 레버
05.525	PLUG, TRANSMISSION CASE 플러그	06.700	FASTENER, TRANSMISSION REAR ACTUATOR ADJUSTOR 패스너
05.526	PLUG, TRANSMISSION CASE 플러그	06.716	FASTENER, CONTROL COVER 패스너
05.527	PLUG, TRANSMISSION CASE 플러그	06.759	SEAL, TRANS FRONT BRAKE ACT RELEASE PISTON 씰
06.026	ADJUSTOR, DIRECTION CONTROL INTERLOCK 어드저스터	06.954	DOWEL, TRANSMISSION CASE TO CONVERTER 다웰
06.030	SUPPORT, DIR CONTROL INTERLOCK LATCH 서포트	08.037	CASE, TRANSMISSION 케이스
06.200	TRANSMISSION ASSEMBLY 트랜스미션	08.169	GASKET, TRANSMISSION CASE TO ADAPTOR PLATE 가스켓
06.400	CONTROL COVER & VALVE ASSEMBLY 컨트롤커버&밸브	08.463	FITTING, TRANSMISSION OIL FILL 피팅
06.408	GASKET, CONTROL COVER ATTACHING 가스켓	09.010	SHAFT, IDLER 샤프트
06.447	PLUG, TRANSMISSION CASE 플러그	09.019	SEAL, TRANSFER CASE COVER 씰
06.602	SHAFT, TRANSMISSION INTERMEDIATE 샤프트	10.105	ELEMENT & GASKET, OIL FILTER 엘리먼트&가스켓
06.605	RING, TRANS INTERMEDIATE SHAFT INNER BRG LOC 링	10.117	FITTING, OIL FILTER TO BASE 피팅
06.647	LINE, TRANSMISSION LUBRICATION 라인	44.130	SOLENOID VALVE, CONTROL COVER 솔레노이드밸브
06.665	CLAMP, TRANSMISSION OIL FILLER TUBE 클램프	44.224	TUBE, TRANSMISSION OIL 튜브


44.407	SEAL, TRANSMISSION CASE PLUG 씰
94.261	FASTENER, TRANSMISSION CASE FRONT COVER 패스너
95.702	FASTENER, TRANSMISSION CASE TUBE 패스너



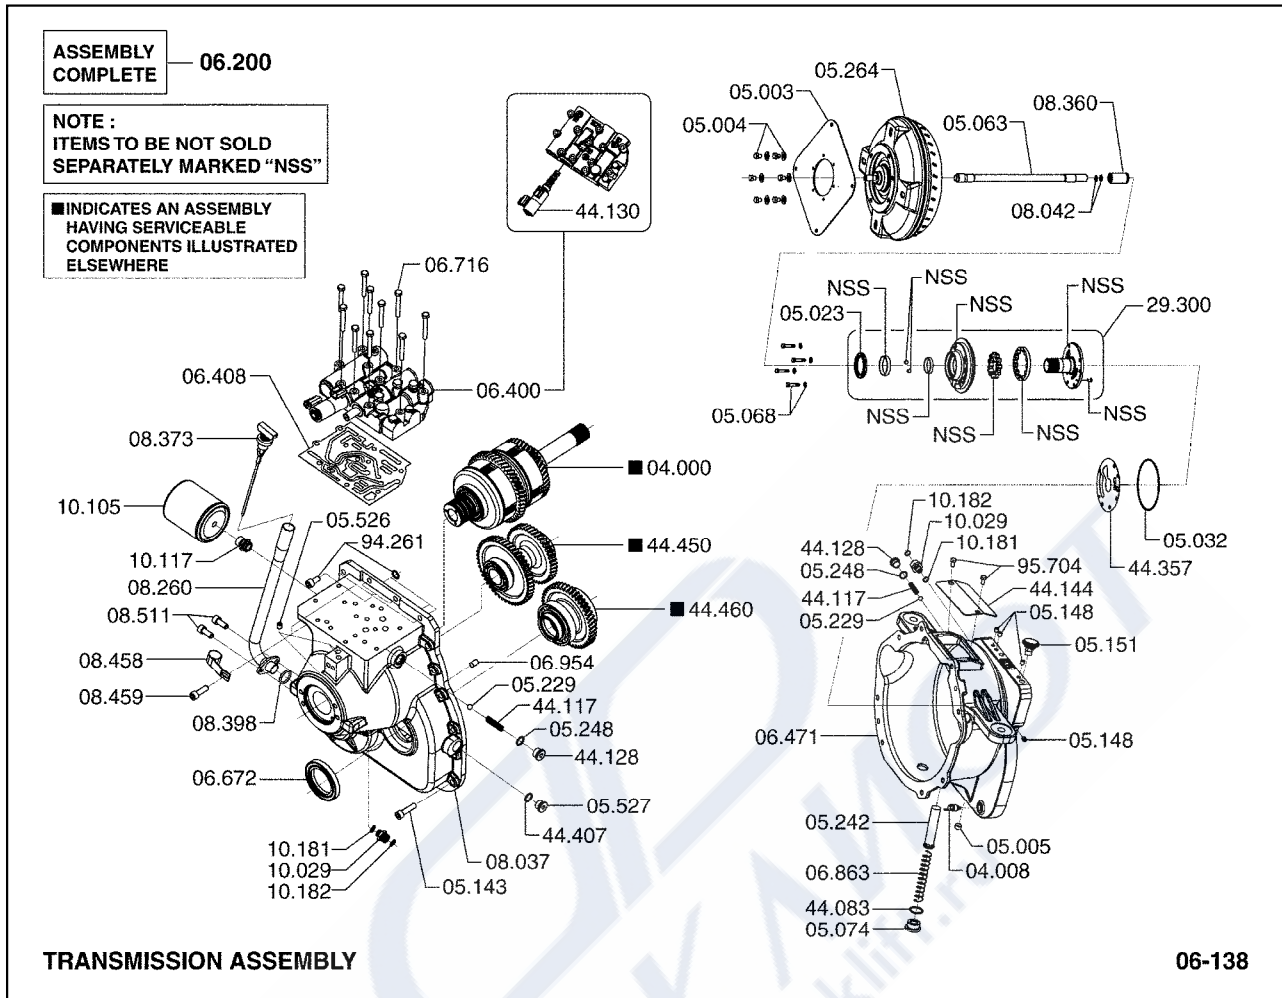 


04.000	CLUTCH ASSEMBLY, COMPLETE 클러치	05.248	SEAL, TORQUE CONVERTER PRESSURE CHECK 씰
04.008	SENSOR, TRANSMISSION FLUID TEMPERATURE 센서	05.264	CONVERTER SUB ASSEMBLY, TORQUE 컨버터
05.003	PLATE, CONVERTER DRIVE & REINFORCING 플레이트	05.526	PLUG, TRANSMISSION CASE 플러그
05.004	FASTENER, CONVERTER DRIVE & REINFORCING PLATE 패스너	05.527	PLUG, TRANSMISSION CASE 플러그
05.005	PLUG, TORQUE CONVERTER DRAIN 플러그	06.200	TRANSMISSION ASSEMBLY 트랜스미션
05.023	SEAL, CONVERTER IMPELLER HUB 씰	06.400	CONTROL COVER & VALVE ASSEMBLY 컨트롤커버& 밸브
05.032	SEAL, STATOR SUPPORT (PISTON RING) 씰	06.408	GASKET, CONTROL COVER ATTACHING 가스켓
05.063	SHAFT, PUMP DRIVE 샤프트	06.471	HOUSING, CONVERTER 하우징
05.068	FASTENER, CONVERTER CHARGING PUMP 패스너	06.672	SEAL, TRANSMISSION DRIVE SHAFT (INPUT END) 씰
05.074	PLUG, HOUSING DRAIN 플러그	06.716	FASTENER, CONTROL COVER 패스너
05.143	FASTENER, CONVERTER HOUSING LOWER COVER 패스너	06.863	SPRING, TRANSMISSION SUMP STRAINER 스프링
05.148	PLUG, CONVERTER HOUSING 플러그	06.954	DOWEL, TRANSMISSION CASE TO CONVERTER 다웰
05.151	BREATHER, CONVERTER AIR 브리더	08.037	CASE, TRANSMISSION 케이스
05.229	BALL, CONVERTER PRESSURE REGULATING CHECK 볼	08.042	PLUG - EXPANSION, COUNTERSHAFT HOLE 플러그
05.242	FILTER SCREEN, TRANSMISSION FLUID 필터스크린	08.260	TUBE, TRAN OIL LEVEL DIPSTICK SUPPORT 튜브


08.360	SLEEVE, MAINSHAFT 슬리브
08.373	DIPSTICK, TRANSMISSION 딥스틱
08.398	SEAL, TRANSMISSION DIPSTICK SUPPORT 씰
08.458	CLIP, TRANSMISSION DIPSTICK TUBE 클립
08.459	FASTENER, TRANSMISSION DIPSTICK TUBE CLIP 패스너
08.511	FASTENER, TRANSMISSION DIPSTICK TUBE MOUNTING BR 패스너
10.029	FITTING, TRANSMISSION COOLING LINE 피팅
10.105	ELEMENT & GASKET, OIL FILTER 엘리먼트& 가스켓
10.117	FITTING, OIL FILTER TO BASE 피팅
10.181	SEAL, TRANSMISSION COOLER INLET LINE FITTING 씰
10.182	SEAL, TRANSMISSION COOLER OUTLET LINE FITTING 씰
29.300	PUMP ASSEMBLY, CONVERTER CHARGING 펌프
44.083	SEAL, TRANSMISSION DRAIN PLUG 씰
44.117	SPRING, TRANSMISSION CONTROL ACCUMULATOR MIDDLE 스프링
44.128	PLUG, TRANSMISSION PRESSURE PICK UP 플러그
44.130	SOLENOID VALVE, CONTROL COVER 솔레노이드밸브
44.144	COVER, CONVERTER HOUSING 커버
44.357	GASKET, CONVERTER HOUSING COVER 가스켓
44.407	SEAL, TRANSMISSION CASE PLUG 씰
44.450	GEAR ASSEMBLY, TRANSMISSION IDLER 기어어셈블리
44.460	GEAR ASSEMBLY, TRANSMISSION OUTPUT SHAFT 기어어셈블리
94.261	FASTENER, TRANSMISSION CASE FRONT COVER 패스너
95.704	FASTENER, CONVERTER HOUSING PLATE 패스너

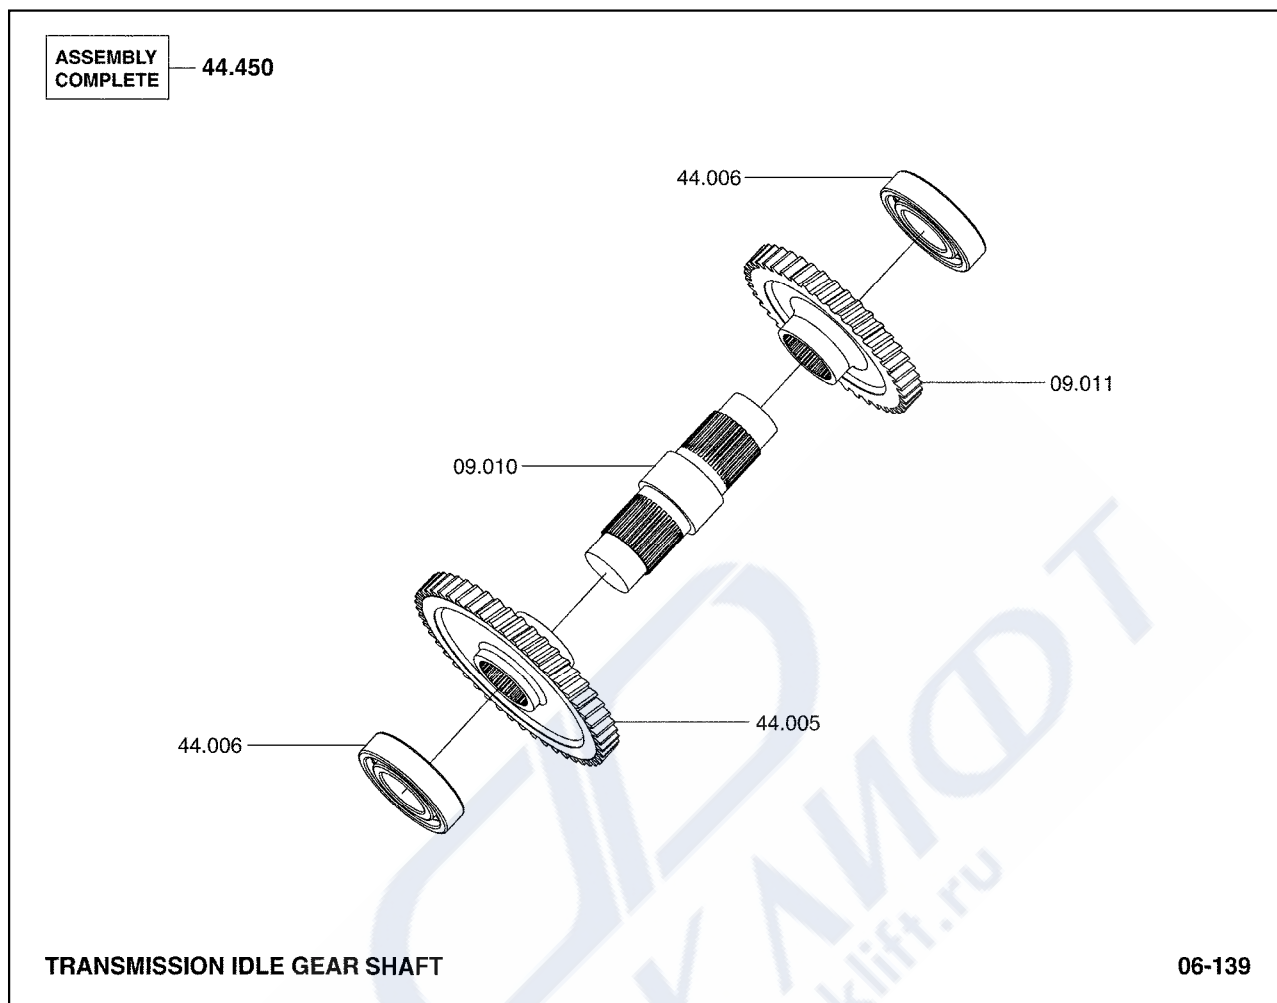 

09.010	SHAFT, IDLER 샤프트
09.011	GEAR, IDLER 기어
44.005	GEAR, TRANSMISSION IDLER 기어
44.006	BEARING, TRANSMISSION IDLER GEAR 베어링
44.450	GEAR ASSEMBLY, TRANSMISSION IDLER 기어어셈블리

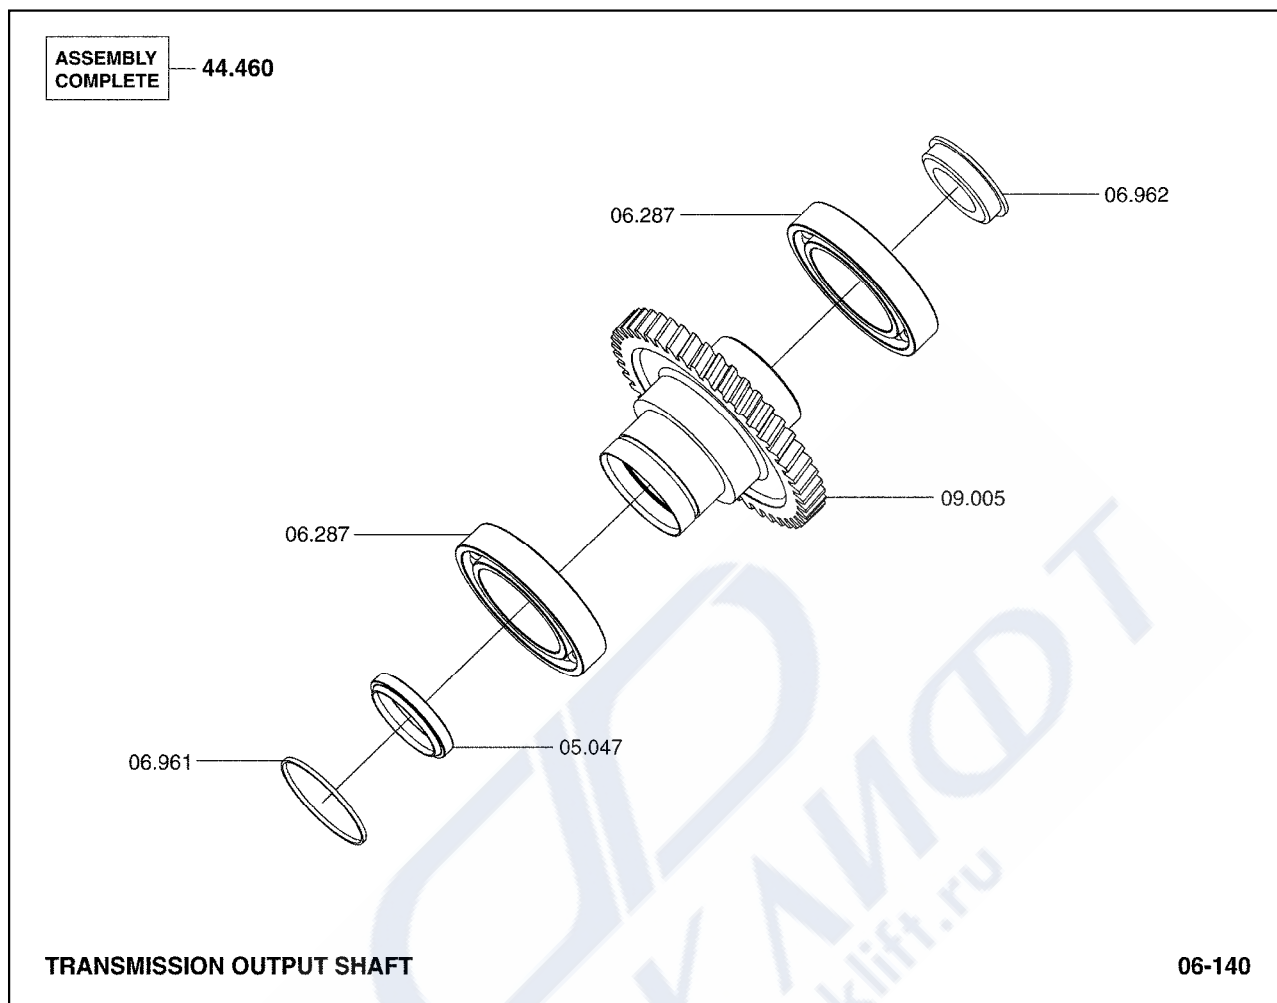 


05.047	SEAL, OUTPUT SHAFT BEARING RETAINER 씰
06.287	BEARING, OUTPUT SHAFT FRONT 베어링
06.961	SEAL, OUTPUT SHAFT FLANGE 씰
06.962	SEAL, OUTPUT SHAFT BEARING CAP 씰
09.005	GEAR, OUTPUT 기어
44.460	GEAR ASSEMBLY, TRANSMISSION OUTPUT SHAFT 기어어셈블리

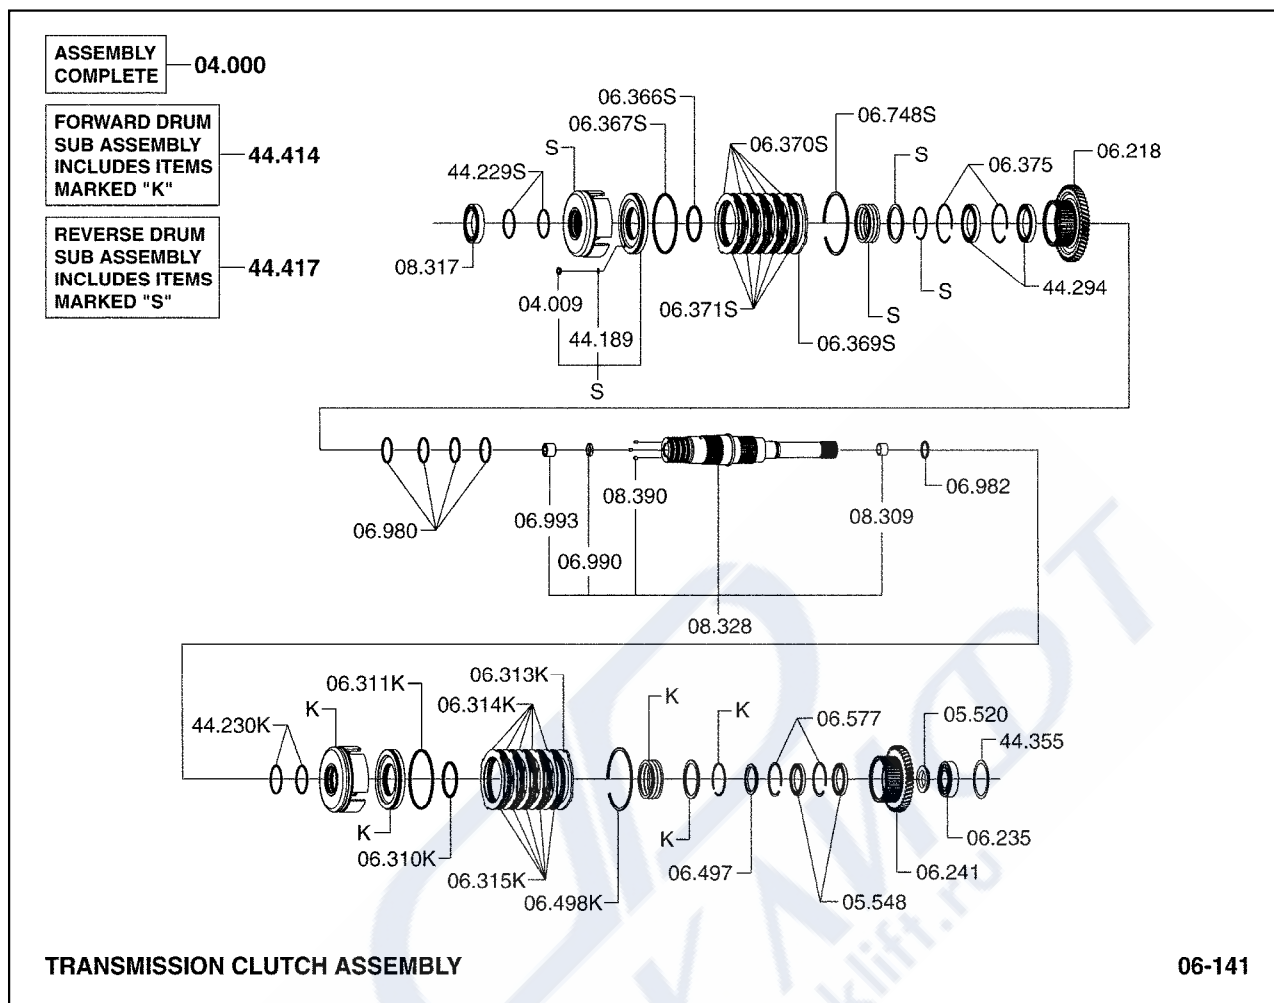 


04.000	CLUTCH ASSEMBLY, COMPLETE 클러치	06.370	DISC, REVERSE CLUTCH INNER 디스크
04.009	STOPPER, CLUTCH PISTON 스토퍼	06.371	DISC, REVERSE CLUTCH OUTER 디스크
05.520	SPACER, FORWARD GEAR BEARING 스페이서	06.375	RING, REVERSE CLUTCH DISC HUB RETAINER 링
05.548	BEARING, FORWARD CLUTCH SHAFT PILOT 베어링	06.497	SPACER, FORWARD CLUTCH SHAFT 스페이서
06.218	GEAR, REVERSE SHAFT DRIVE 기어	06.498	RETAINER, FORWARD CLUTCH SHAFT SPACER 리테이너
06.235	BEARING, INPUT SHAFT INNER 베어링	06.577	RETAINER, FORWARD CLUTCH SPRING 리테이너
06.241	GEAR, INPUT SHAFT FORWARD 기어	06.748	RETAINER, PLANETARY CLUTCH 리테이너
06.310	SEAL, FORWARD CLUTCH PISTON INNER 씰	06.980	SEAL, CLUTCH SHAFT OIL 씰
06.311	SEAL, FORWARD CLUTCH PISTON OUTER 씰	06.982	RING, 2ND GEAR RETAINER 링
06.313	DISC, FORWARD CLUTCH END 디스크	06.990	RING, CLUTCH SHAFT BEARING LOCATING 링
06.314	DISC, FORWARD CLUTCH INNER 디스크	06.993	BEARING, CLUTCH SHAFT PILOT 베어링
06.315	DISC, FORWARD CLUTCH OUTER 디스크	08.309	BUSHING, CLUTCH SHAFT 부싱
06.366	SEAL, REVERSE CLUTCH PISTON INNER 씰	08.317	BEARING, CLUTCH RELEASE 베어링
06.367	SEAL, REVERSE CLUTCH PISTON OUTER 씰	08.328	SHAFT, CLUTCH 샤프트
06.369	DISC, REVERSE CLUTCH END 디스크	08.390	SEAL, CLUTCH RELEASE SHAFT 씰

44.189	RING, TRANSMISSION CLUTCH PISTON 링
44.229	SEAL, CLUTCH PISTON RING 씰
44.230	SEAL, CLUTCH PISTON RING 씰
44.294	BEARING, REVERSE CLUTCH GEAR 베어링
44.355	SHIM, CLUTCH PACK PRIORITY LUBE 삼
44.414	DRUM SUB ASSEMBLY, FORWARD 서브드럼
44.417	DRUM SUB ASSEMBLY, REVERSE 서브드럼

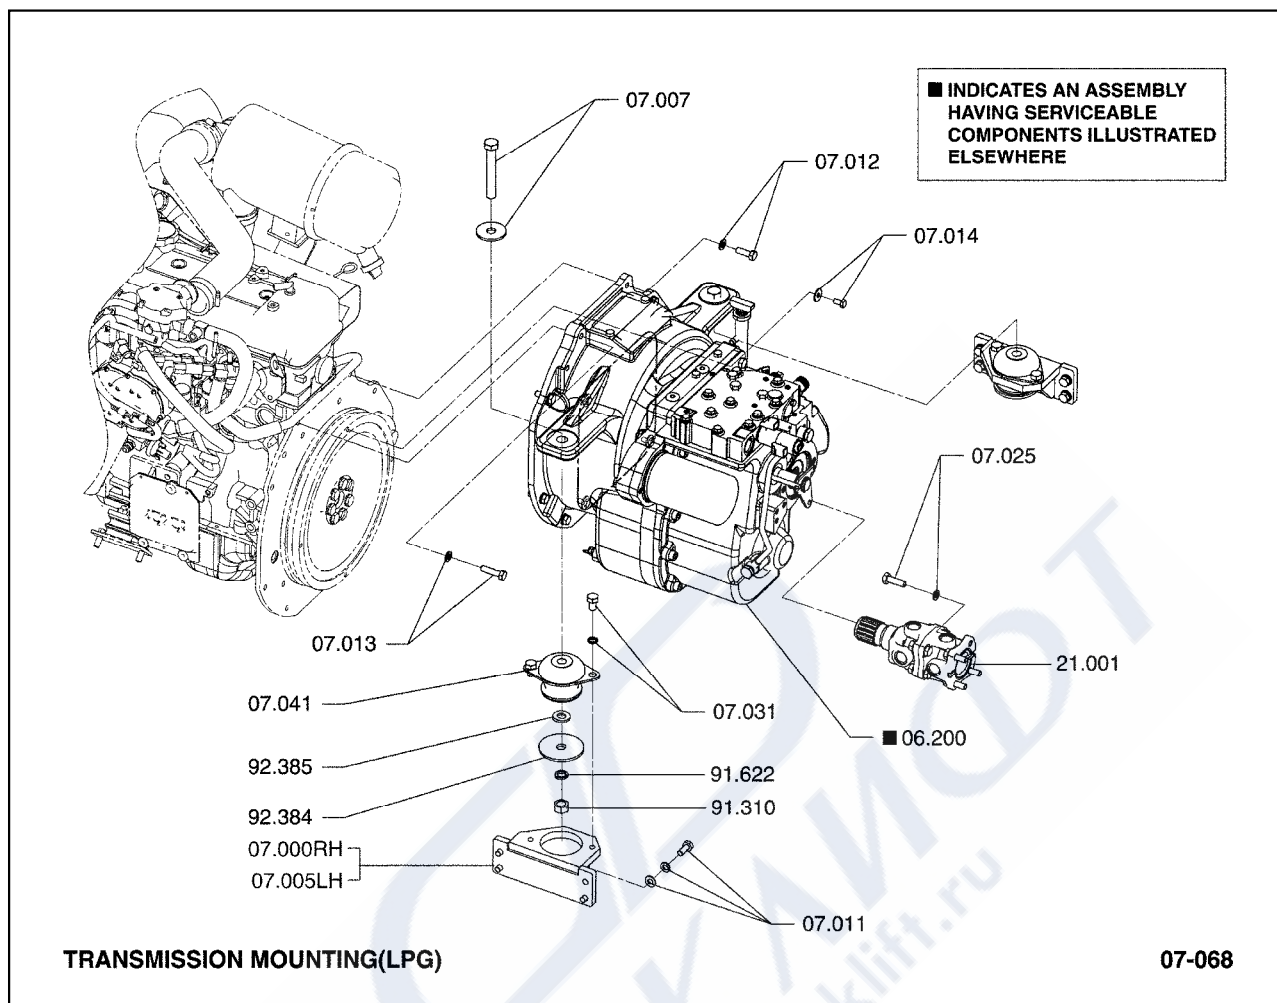 


06.200	TRANSMISSION ASSEMBLY 트랜스미션
07.000	BRACKET, TRANSMISSION MOUNTING (RH) 브라켓
07.005	BRACKET, TRANSMISSION MOUNTING LH 브라켓
07.007	FASTENER, TRANSMISSION MOUNTING BRACKET LH 패스너
07.011	FASTENER, TRANSMISSION MOUNTING BRACKET LH 패스너
07.012	FASTENER, TRANSMISSION TO ENGINE 패스너
07.013	FASTENER, TRANSMISSION TO ENGINE 패스너
07.014	FASTENER, TRANSMISSION TO ENGINE 패스너
07.025	FASTENER, TRANSMISSION MOUNTING BRACKET LH 패스너

07.031	BOLT, TRANSMISSION MOUNTING BRACKET PAD 볼트
07.041	DAMPENER, TRANSMISSION MOUNTING VIBRATION 댐프너
21.001	SHAFT ASSEMBLY, TRANSMISSION TO AXLE PROPELLER 샤프트
91.310	NUT, TRANS MOUNTING BRACKET FASTENER (LH) 너트
91.622	LOCKWASHER, TRANSMISSION MOUNTING BRACKET FASTENER 로크와셔
92.384	WASHER, TRANSMISSION MOUNTING BRACKET TO FRAME FAS 와셔
92.385	WASHER, TRANSMISSION MOUNTING BRACKET TO FRAME FAS 와셔

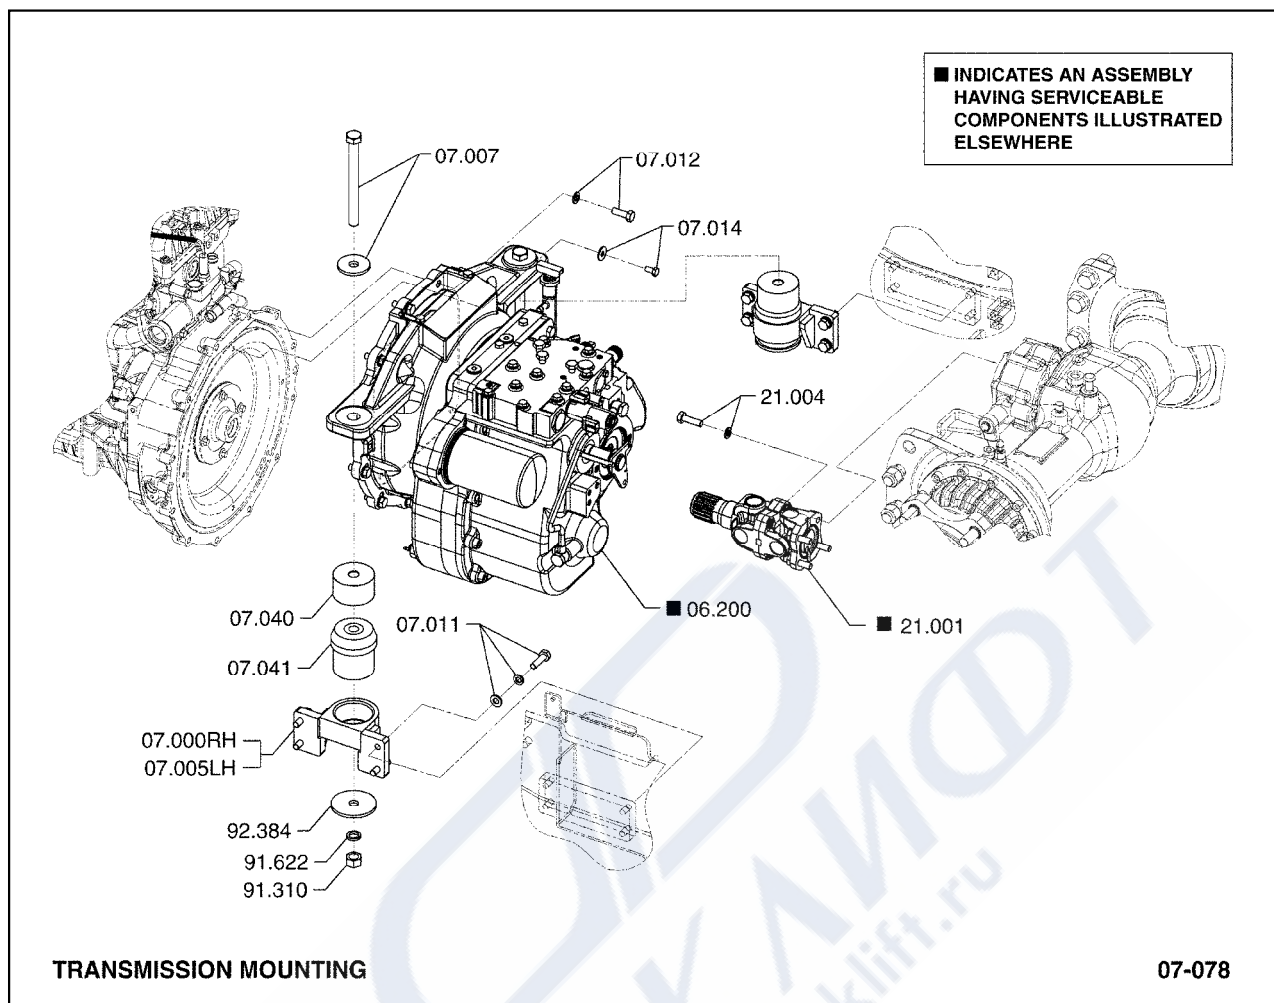 


06.200	TRANSMISSION ASSEMBLY 트랜스미션
07.000	BRACKET, TRANSMISSION MOUNTING (RH) 브라켓
07.005	BRACKET, TRANSMISSION MOUNTING LH 브라켓
07.007	FASTENER, TRANSMISSION MOUNTING BRACKET LH 패스너
07.011	FASTENER, TRANSMISSION MOUNTING BRACKET LH 패스너
07.012	FASTENER, TRANSMISSION TO ENGINE 패스너
07.014	FASTENER, TRANSMISSION TO ENGINE 패스너
07.040	SPACER, TRANSMISSION MOUNTING BRACKET FASTENER 스페이서
07.041	DAMPENER, TRANSMISSION MOUNTING VIBRATION 댐프너

21.001	SHAFT ASSEMBLY, TRANSMISSION TO AXLE PROPELLER 샤프트
21.004	FASTENER, PROPELLER SHAFT 패스너
91.310	NUT, TRANS MOUNTING BRACKET FASTENER (LH) 너트
91.622	LOCKWASHER, TRANSMISSION MOUNTING BRACKET FASTENER 로크와셔
92.384	WASHER, TRANSMISSION MOUNTING BRACKET TO FRAME FAS 와셔

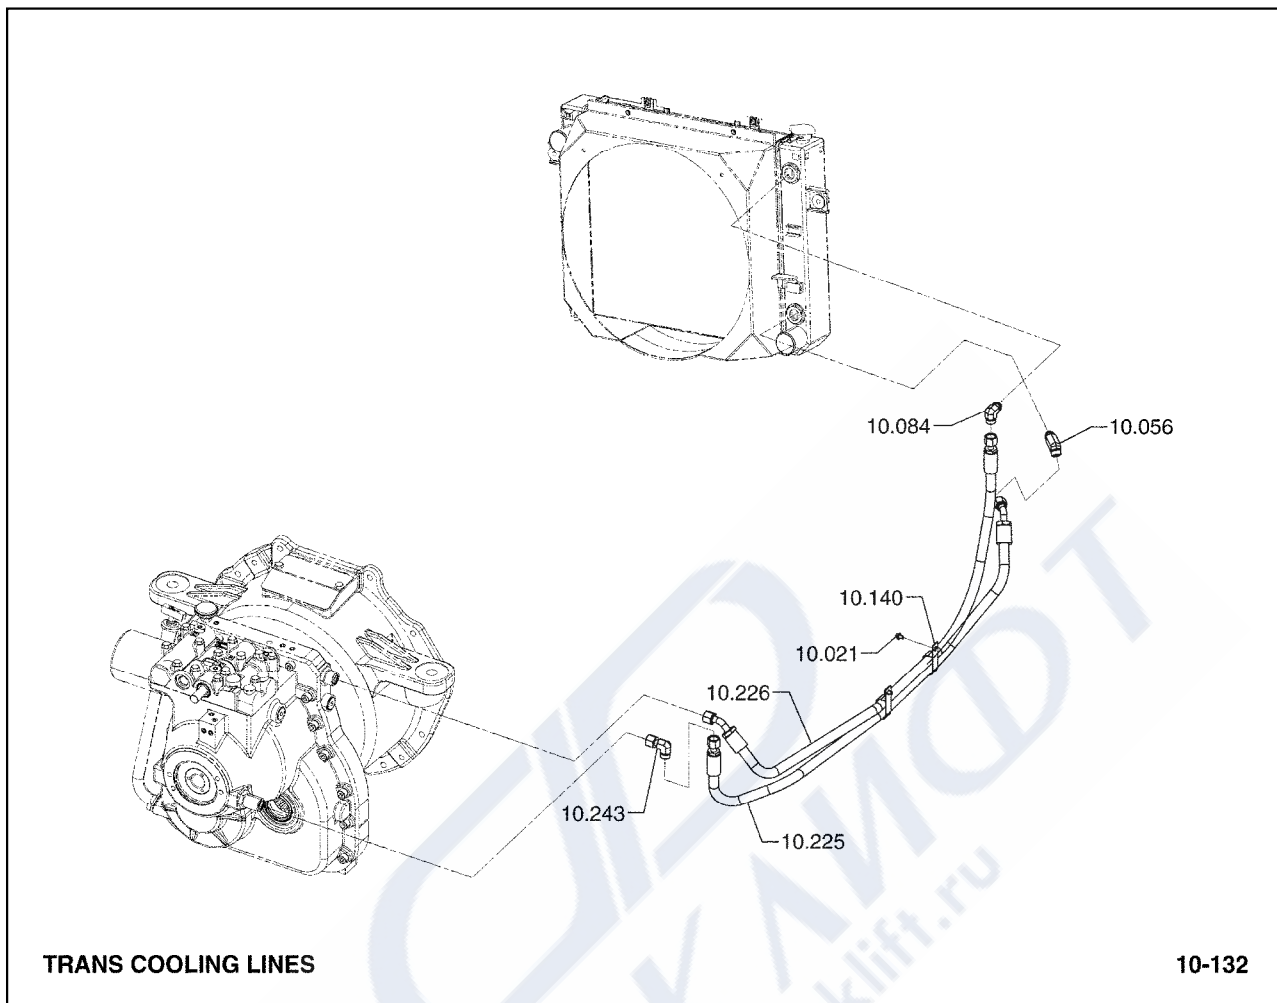 


10.021	FASTENER, COOLER OUTLET LINE CLAMP 패스너
10.056	FITTING, COOLER OUTLET 피팅
10.084	FITTING, COOLER INLET LINE 피팅
10.140	CLAMP, COOLER LINE 클램프
10.225	LINE, OIL COOLING 라인
10.226	LINE, OIL COOLING 라인
10.243	FITTING, COOLING LINE 피팅

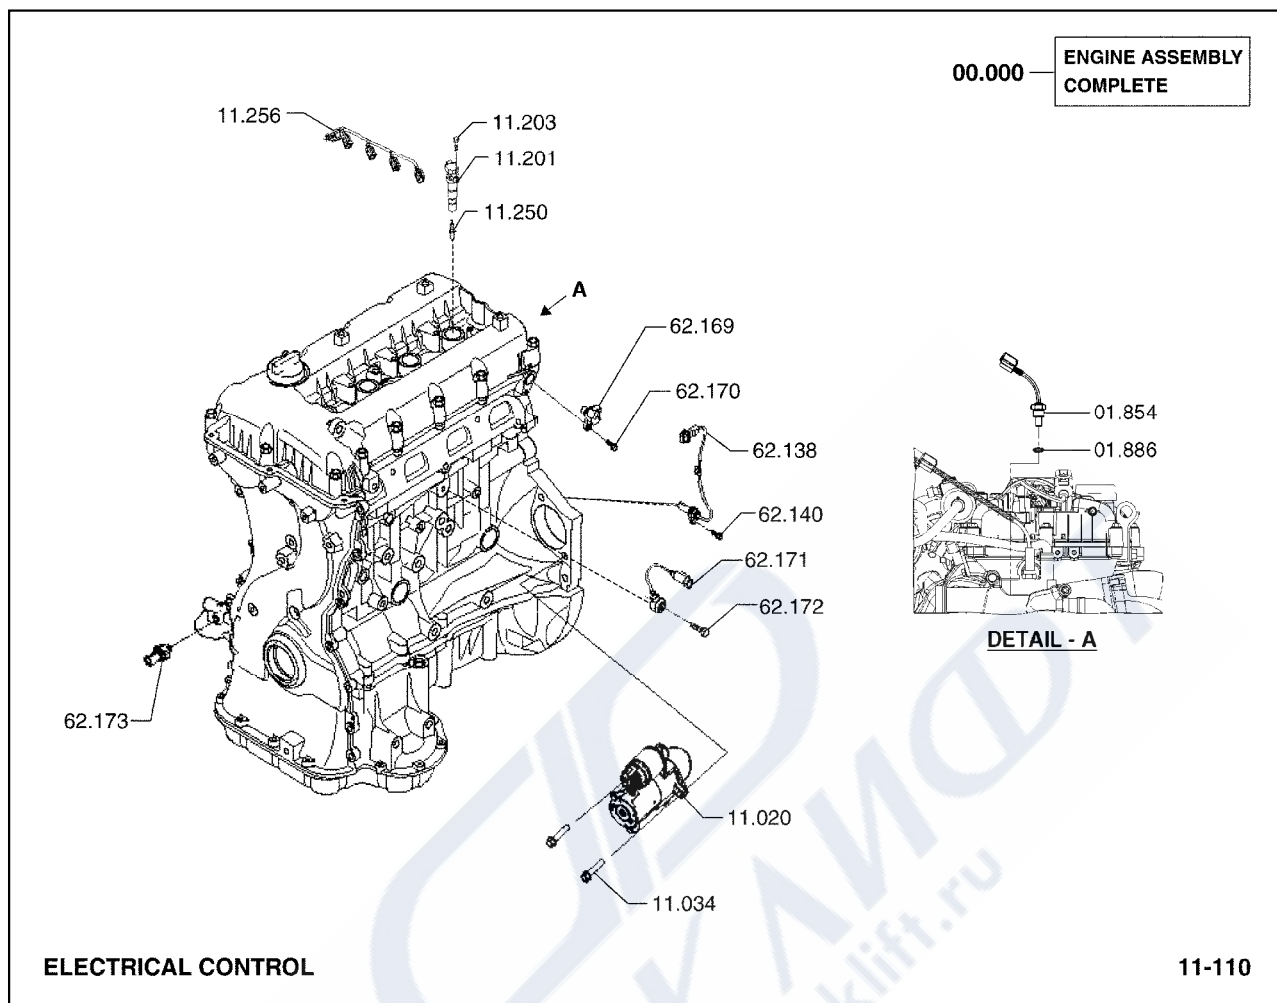 

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
01.854	SENSOR, ENGINE COOLANT TEMPERATURE 센서
01.886	SEAL, ENGINE COOLANT TEMPERATURE SENSOR 씰
11.020	MOTOR ASSEMBLY, STARTING 모터
11.034	FASTENER, STARTING MOTOR 패스너
11.201	COIL, IGNITION 코일
11.203	FASTENER, COIL 패스너
11.250	SPARK PLUG 스파크
11.256	HARNESS, IGNITION COIL WIRING 하네스

62.138	SENSOR, ENGINE CRANKSHAFT POSITION 센서
62.140	FASTENER, ENGINE CRANKSHAFT POSITION SENSOR 패스너
62.169	SENSOR, ENGINE CAMSHAFT POSITION 센서
62.170	FASTENER, ENGINE CAMSHAFT POSITION SENSOR 패스너
62.171	SENSOR, ENGINE KNOCK 센서
62.172	FASTENER, ENGINE KNOCK SENSOR 패스너
62.173	SWITCH, ENGINE OIL PRESSURE 스위치

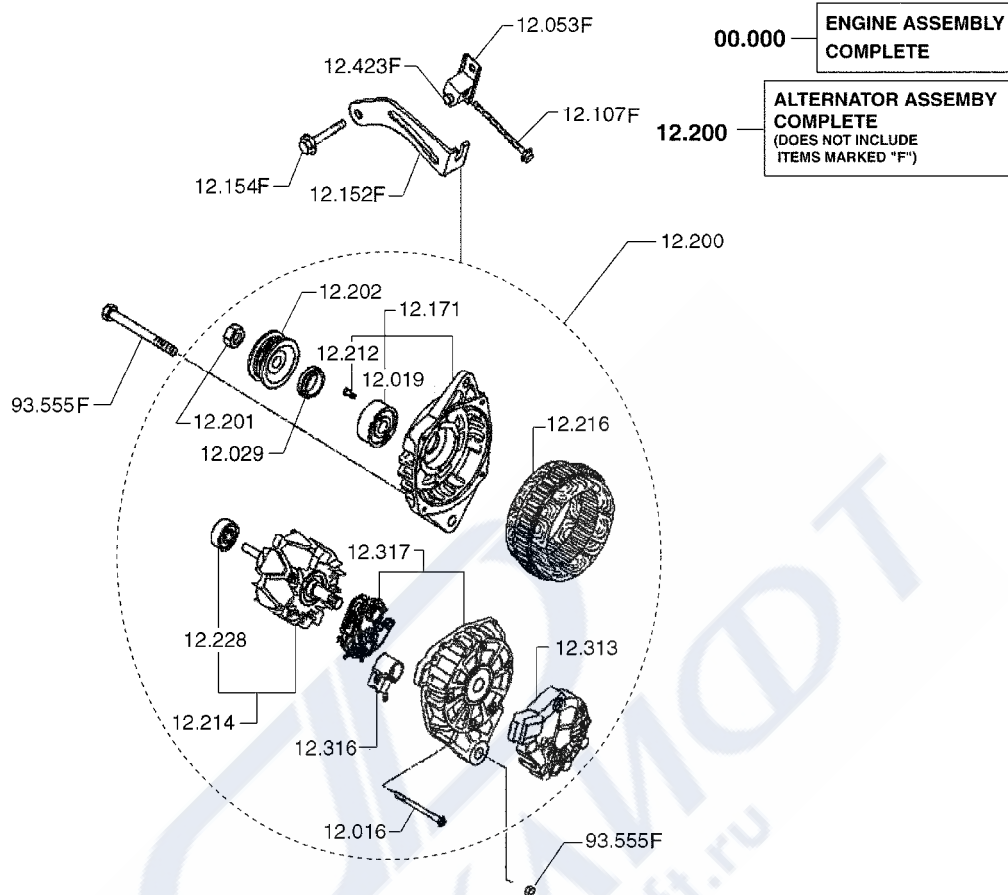 



ALTERNATOR ASSEMBLY

12-193

00.000	PRODUCTION ENGINE ASSEMBLY 엔진
12.016	FASTENER, GENERATOR THRU 패스너
12.019	BEARING, GENERATOR DRIVE END 베어링
12.029	SPACER, GENERATOR DRIVE END 스페이서
12.053	SUPPORT, GENERATOR MOUNTING BRACKET 서포트
12.107	FASTENER, ADJUSTING STRAP TO ALTERNATOR 패스너
12.152	BRACKET, ALTERNATOR ADJUSTING STRAP 브라켓
12.154	FASTENER, ALTERNATOR MOUNTING 패스너
12.171	HOUSING, ALTERNATOR RECTIFIER 하우징

12.200	ALTERNATOR ASSEMBLY 알터네이터
12.201	FASTENER, ALTERNATOR PULLEY TO SHAFT 패스너
12.202	PULLEY, ALTERNATOR 폴리
12.212	FASTENER, ALTERNATOR DRIVE END BEARING RETAINER PL 패스너
12.214	ROTOR ASSEMBLY, ALTERNATOR 로터
12.216	STATOR ASSEMBLY, ALTERNATOR 스테이터
12.228	BEARING, ALTERNATOR SLIP RING FRAME END 베어링
12.313	COVER, ALTERNATOR BRUSH ACCESS 커버
12.316	REGULATOR, ALTERNATOR VOLTAGE OUTPUT 레귤레이터
12.317	RECTIFIER ASSEMBLY, ALTERNATOR 정류기
12.423	FASTENER, ADJUSTING STRAP TO ALTERNATOR 패스너
93.555	FASTENER, ALTERNATOR RECTIFIER HOUSING COVER 패스너

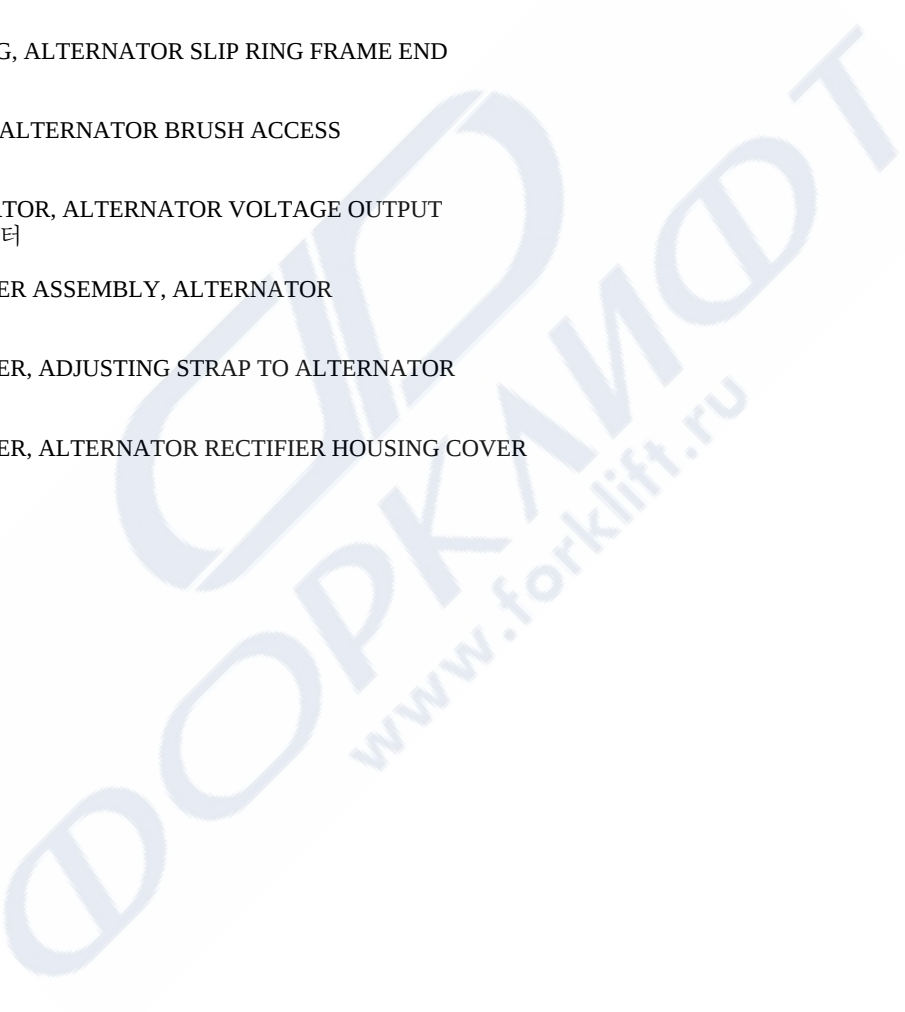 


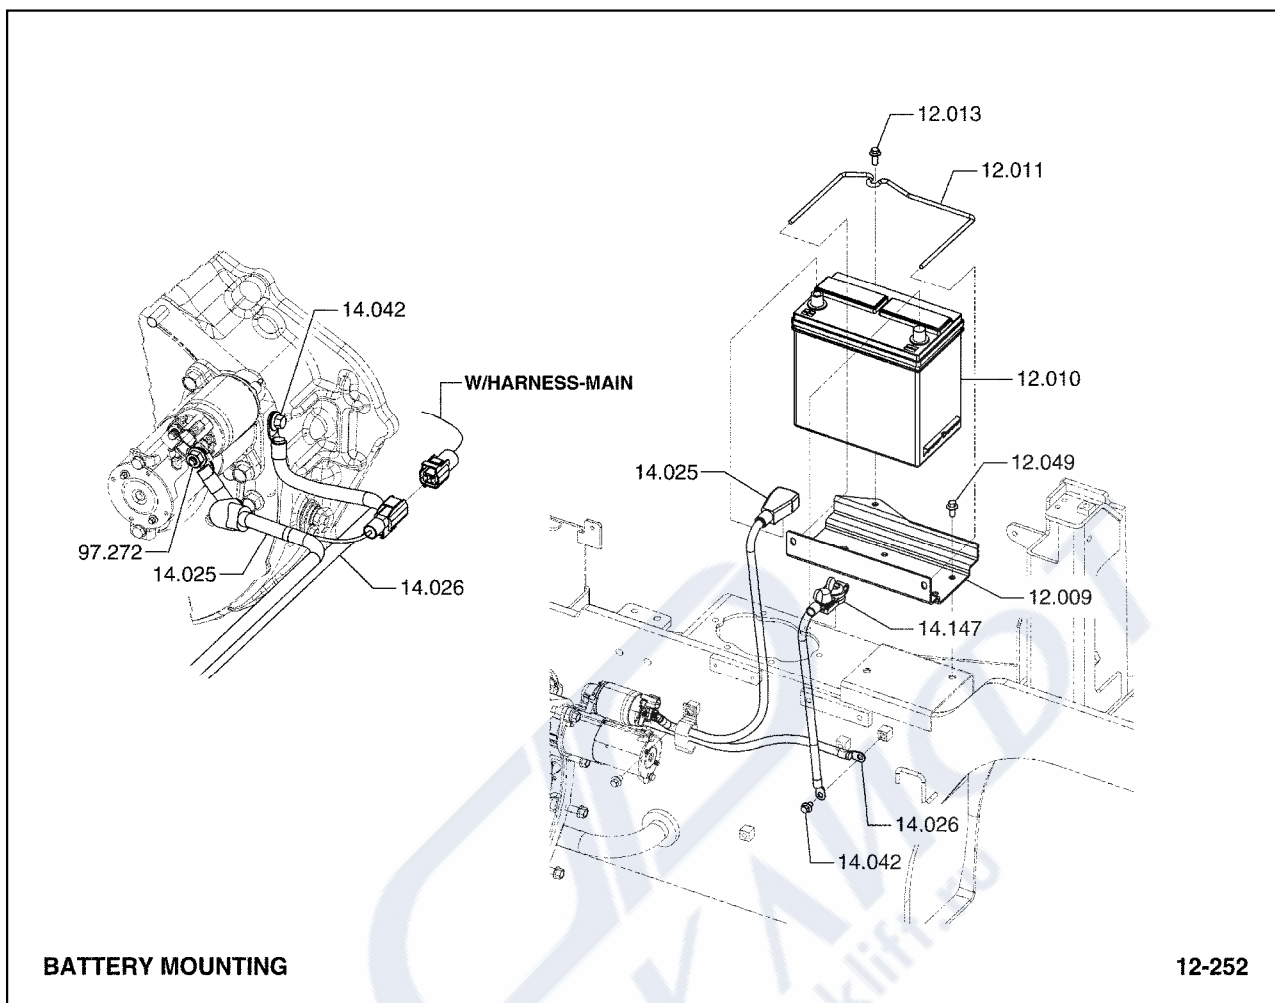 


12.009	SUPPORT, BATTERY 서포트
12.010	BATTERY 배터리
12.011	CLAMP, BATTERY HOLD DOWN 클램프
12.013	FASTENER, BATTERY HOLD DOWN (AT CLAMP) 패스너
12.049	FASTENER, BATTERY SUPPORT 패스너
14.025	CABLE, BATTERY TO STARTER 케이블
14.026	CABLE, BATTERY GROUND 케이블
14.042	FASTENER, BATTERY GROUND CABLE 패스너
14.147	CABLE, BATTERY NEGATIVE 케이블

 97.272 FASTENER, CABLE & WIRE TO STARTER
패스너




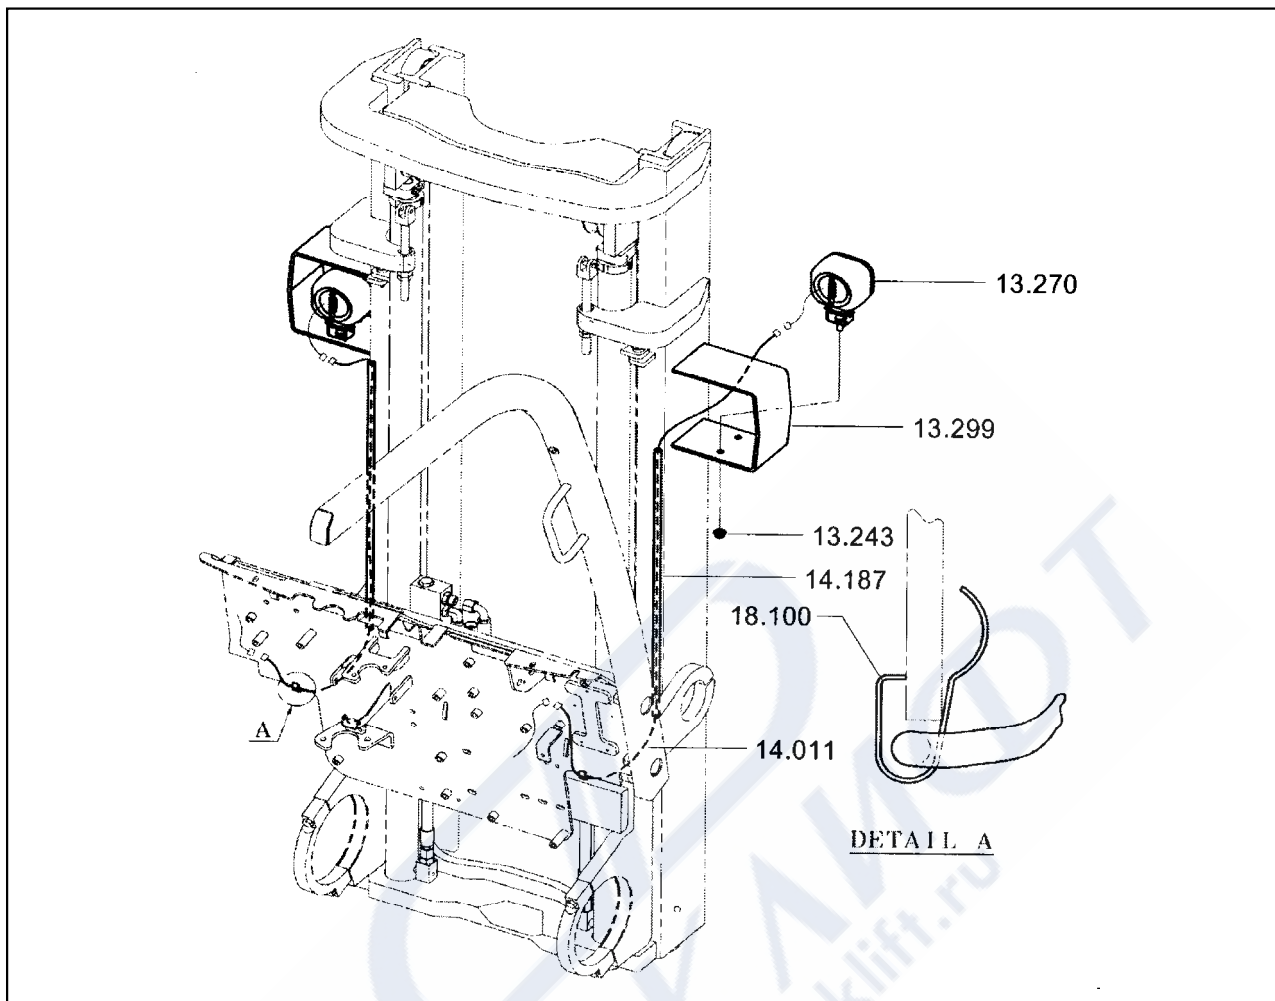


- | | |
|--------|---------------------------------|
| 13.270 | HEADLAMP, ADJUSTABLE
헤드램프 |
| 14.018 | WIRE, HEADLIGHT
와이어 |
| 15.437 | HARNESS, HEADLAMP WIRING
하네스 |
| 18.100 | CLIP, HEAD LIGHT WIRE
클립 |
| 60.324 | BULB, HEADLAMP
전구 |

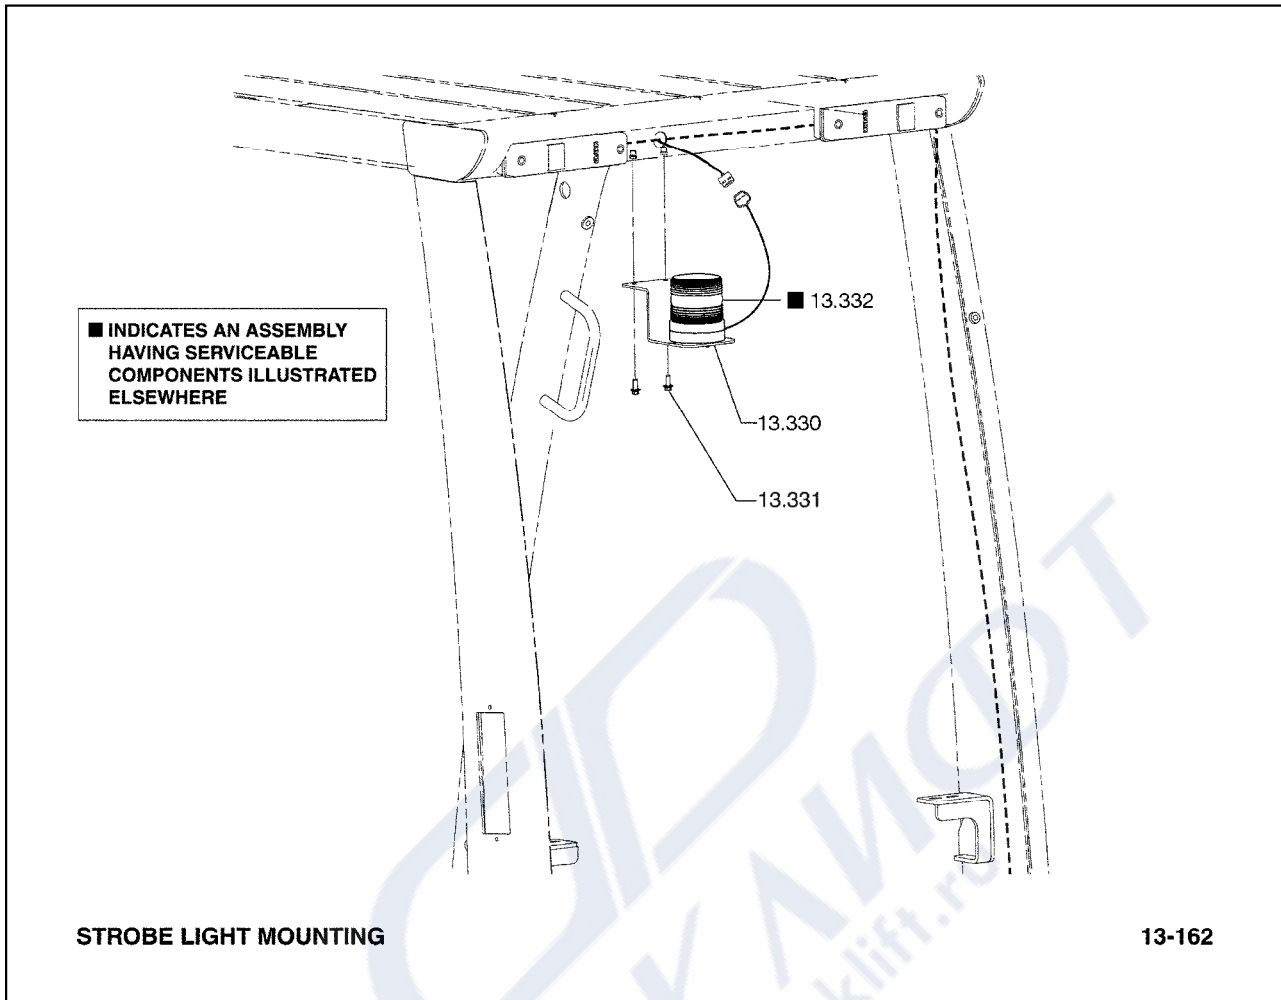 


- | | |
|--------|--|
| 13.330 | BRACKET, WARNING LIGHT
브라켓 |
| 13.331 | FASTENER, WARNING LIGHT BRACKET
패스너 |
| 13.332 | ASSEMBLY, WARNING LIGHT
경고등 |

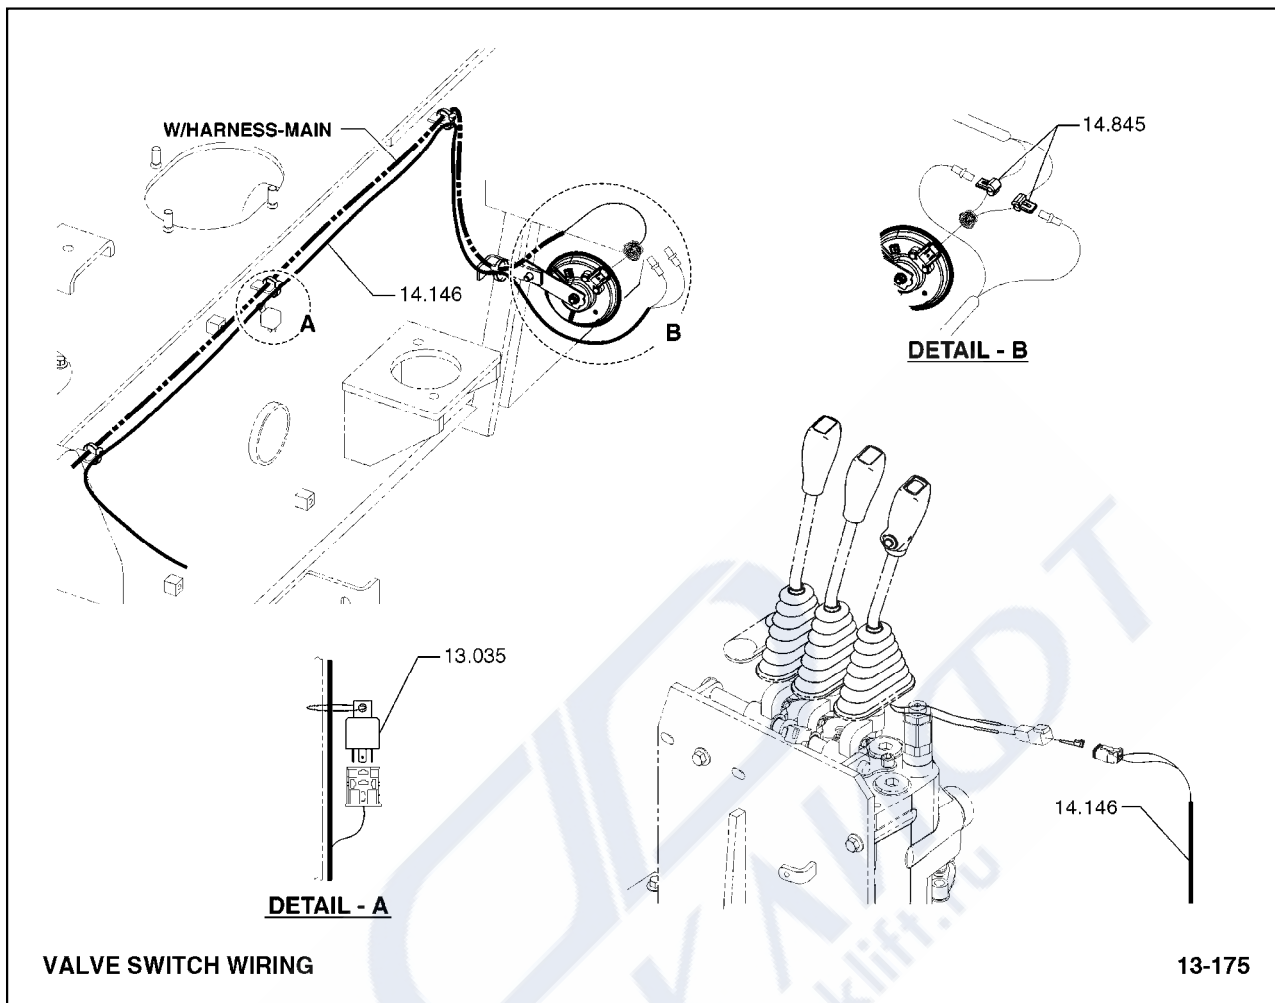 

 
- 13.035 RELAY, VALVE SWITCH WIRING HARNESS
릴레이
- 14.146 HARNESS, VALVE SWITCH WIRING
하네스
- 14.845 CONNECTOR, HYDRAULIC VALVE WIRE
커넥터

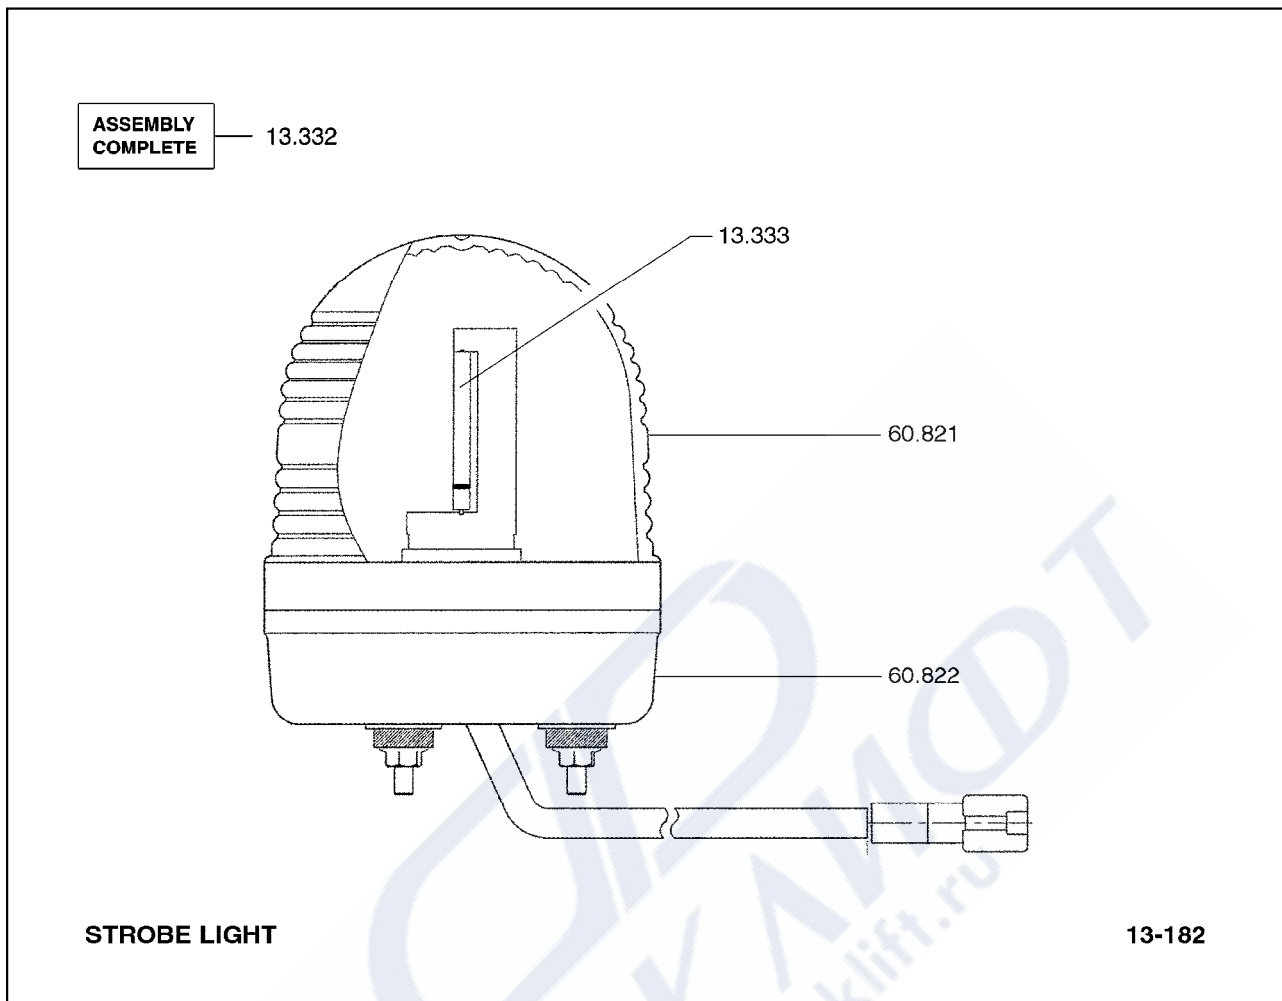

13.332	ASSEMBLY, WARNING LIGHT 경고등
13.333	BULB, WARNING LIGHT 전구
60.821	GLOBE, STROBE LIGHT 글로브
60.822	BASE, STROBE LIGHT 베이스

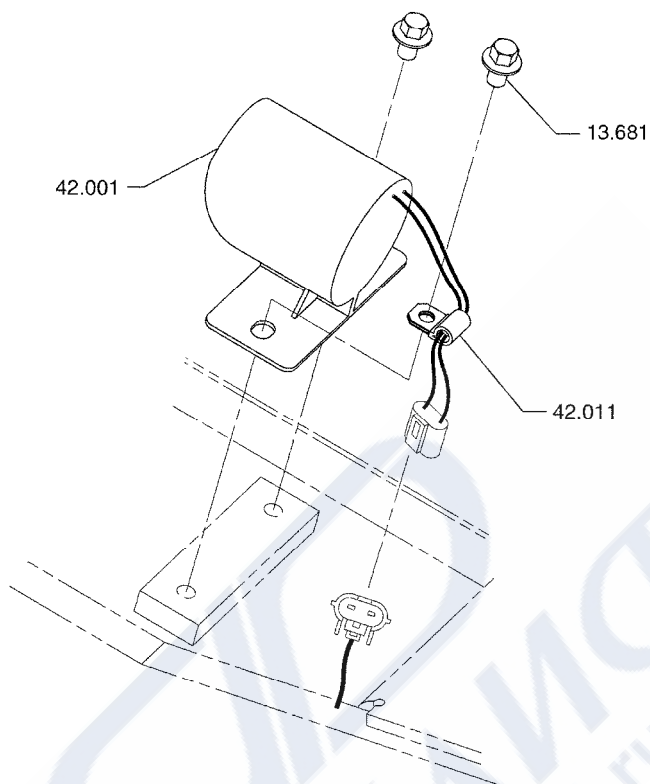 **BACK-UP ALARM INSTALLATION****13-228**


- | | |
|--------|--|
| 13.681 | FASTENER, WARNING DEVICE
패스너 |
| 42.001 | WARNING DEVICE, AUDIBLE (AIR OPER)
경고장치 |
| 42.011 | CLIP, AUDIBLE WARNING DEVICE CABLE
클립 |

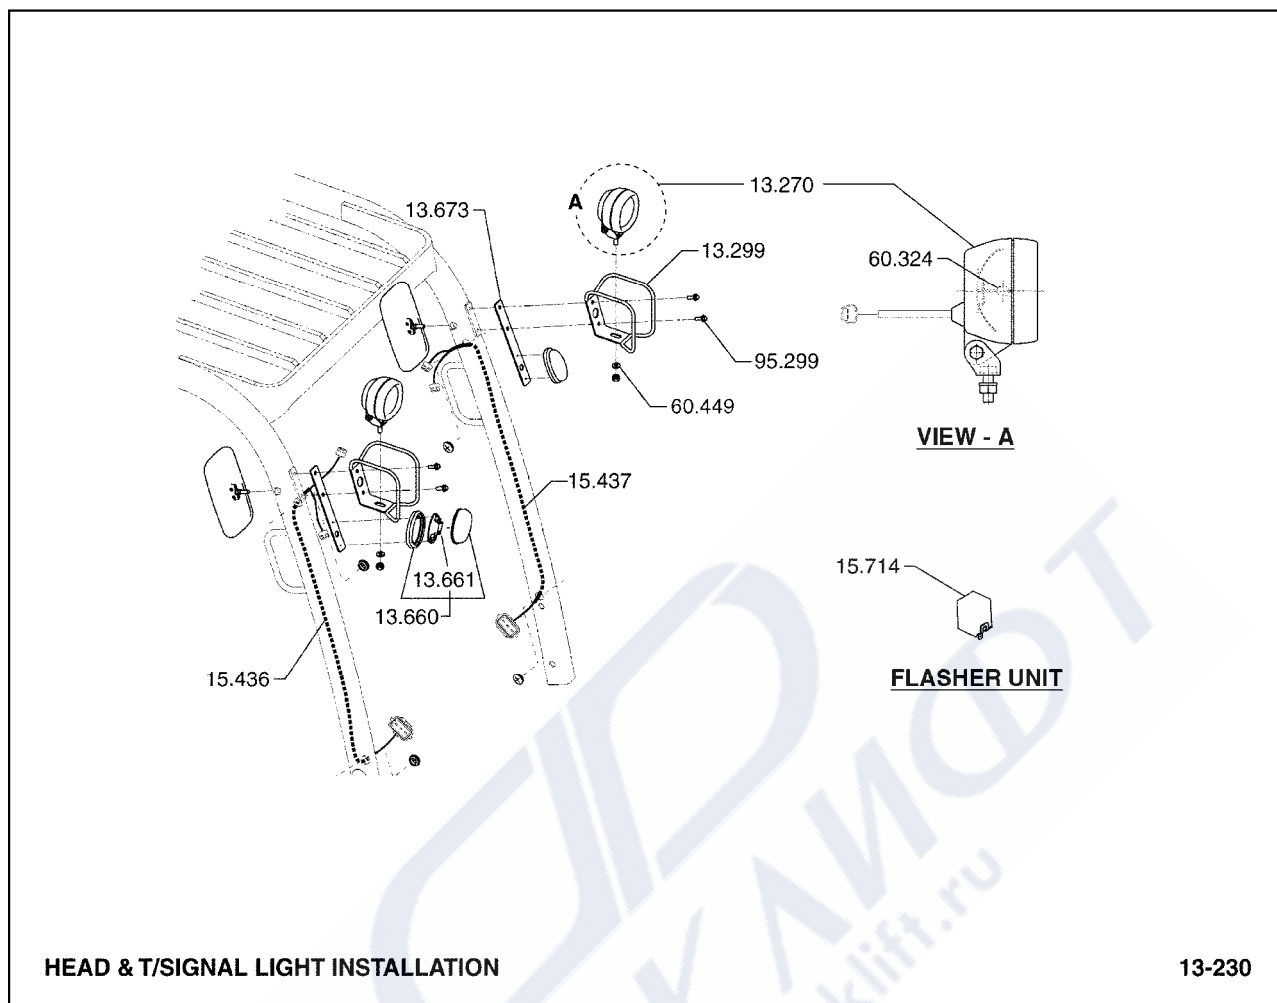 

13.270	HEADLAMP, ADJUSTABLE 헤드램프
13.299	GUARD, HEADLIGHT 가드
13.660	LIGHT, TURN SIGNAL 라이트
13.661	BULB, TURN SIGNAL LIGHT 전구
13.673	BRACKET, TURN LIGHT 브라켓
15.436	HARNESS, RH HEADLAMP WIRING 하네스
15.437	HARNESS, HEADLAMP WIRING 하네스
15.714	FLASHER, UNIT 플래셔
60.324	BULB, HEADLAMP 전구


60.449	SPACER, HEAD LAMP BRACKET MOUNTING 스페이서
95.299	FASTENER, HEADLAMP GUARD 패스너



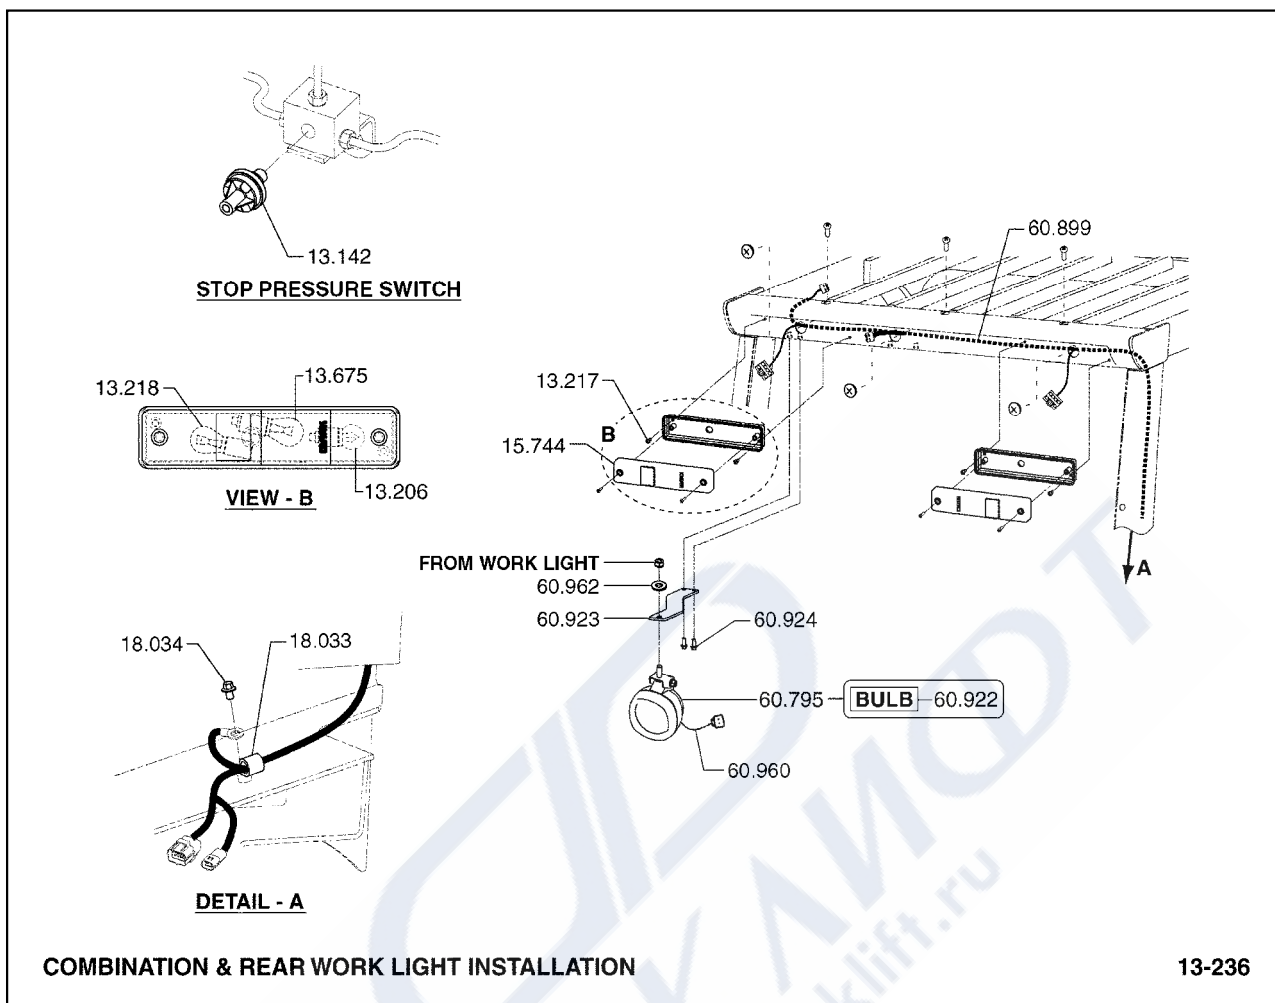 

13.142	SWITCH, BRAKE INTERLOCK 스위치
13.206	BULB, BACK-UP LAMP 전구
13.217	FASTENER, COM STOP & TAIL LAMP ASSY MTG 패스너
13.218	BULB, STOP & TAIL LAMP 전구
13.675	BULB, TURN LIGHT 전구
15.744	LAMP ASSEMBLY, COMBINATION STOP & TAIL 램프
18.033	CLIP, HARNESS 클립
18.034	FASTENER, HARNESS CLIP 패스너
60.795	LIGHT, REAR WORK 라이트


60.899	WIRING HARNESS, REAR ACCESSORY 와이어하네스
60.922	BULB, REAR WORK LAMP 전구
60.923	BRACKET, REAR WORK LAMP MOUNTING 브라켓
60.924	FASTENER, REAR WORK LAMP MOUNTING 패스너
60.960	HARNESS, REAR WORK LAMP EXTENSION 하네스
60.962	SPACER, REAR WORK LAMP MOUNTING 스페이서

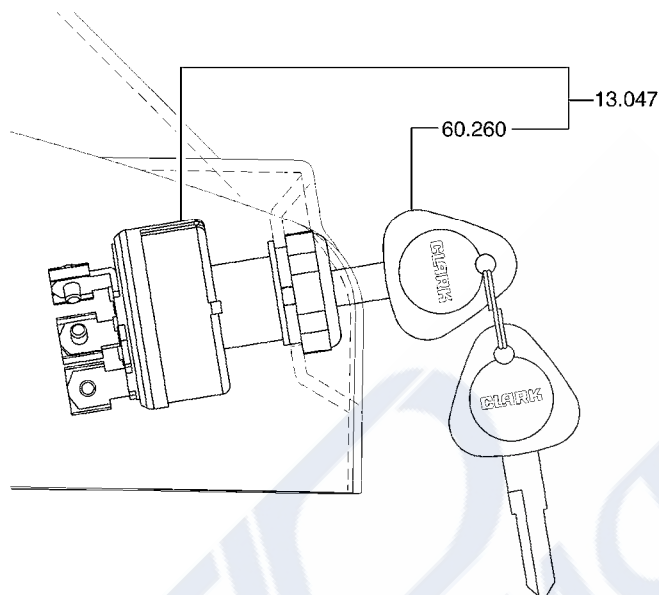 


KEY SWITCH INSTALLATION

13-292

- | | |
|--------|----------------------------------|
| 13.047 | SWITCH, CIRCUIT LOCKING
스위치 |
| 60.260 | KEY, CIRCUIT LOCKING SWITCH
키 |

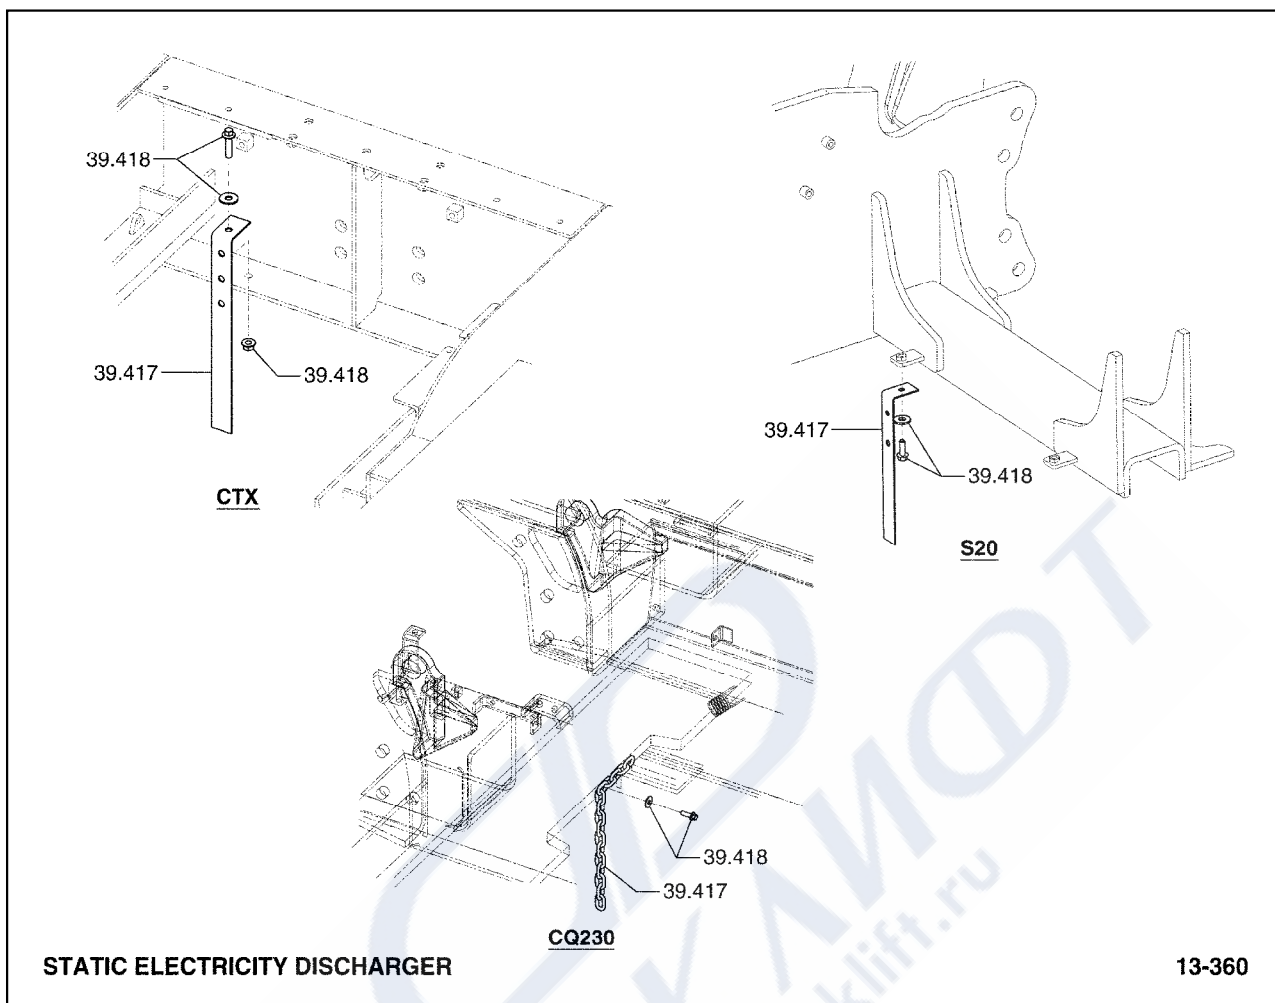 



- | | |
|--------|--|
| 39.417 | GROUND STRAP, ELECTRIC TRUCK
접지케이블 |
| 39.418 | FASTENER, ELECTRIC TRUCK GROUND STRAP
패스너 |

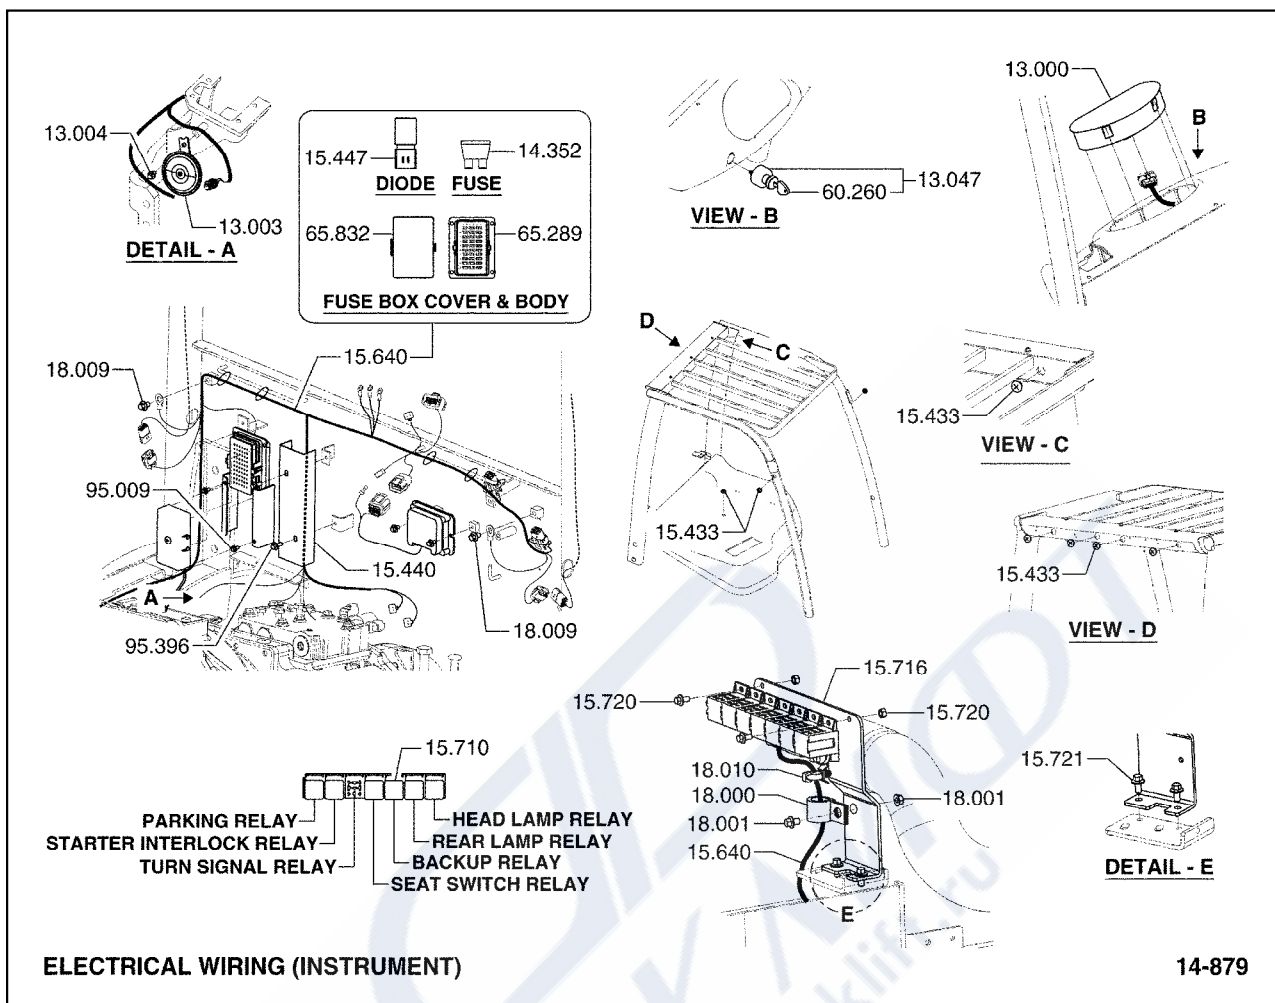 

13.000	PANEL, INSTRUMENT CLUSTER 판넬
13.003	HORN 혼
13.004	FASTENER, HORN MOUNTING BRACKET 패스너
13.047	SWITCH, CIRCUIT LOCKING 스위치
14.352	FUSE, CONTROL CIRCUIT 퓨즈
15.433	GROMMET, CONTROL CIRCUIT WIRING HARNESS 그로멧
15.440	SHIELD, WIRING HARNESS PROTECTION 실드
15.447	DIODE, HARNESS 다이오드
15.640	WIRING HARNESS, MACHINE COWL 와이어하네스

15.710	RELAY, ELECTRICAL 릴레이
15.716	BRACKET, RELAY MOUNTING 브라켓
15.720	FASTENER, RELAY SOCKET 패스너
15.721	FASTENER, RELAY BRACKET 패스너
18.000	CLIP, WIRING HARNESS 클립
18.001	FASTENER, WIRING HARNESS CLIP 패스너
18.009	FASTENER, HARNESS CLIP 패스너
18.010	CLIP, HARNESS 클립
60.260	KEY, CIRCUIT LOCKING SWITCH 키
65.289	BODY, FUSE BOX 바디
65.832	COVER, FUSE BOX 커버
95.009	FASTENER, FUSE BOX MOUNTING 패스너
95.396	FASTENER, WIRING HARNESS PROTECTION SHIELD 패스너

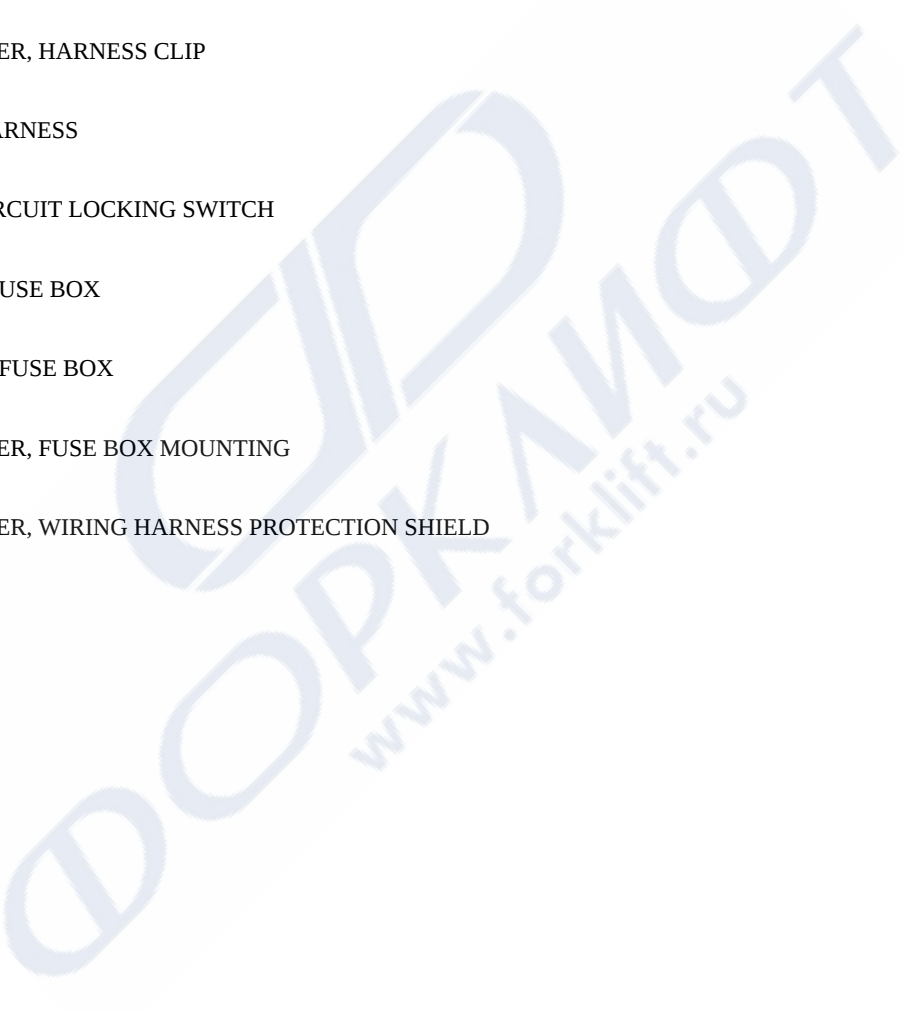 


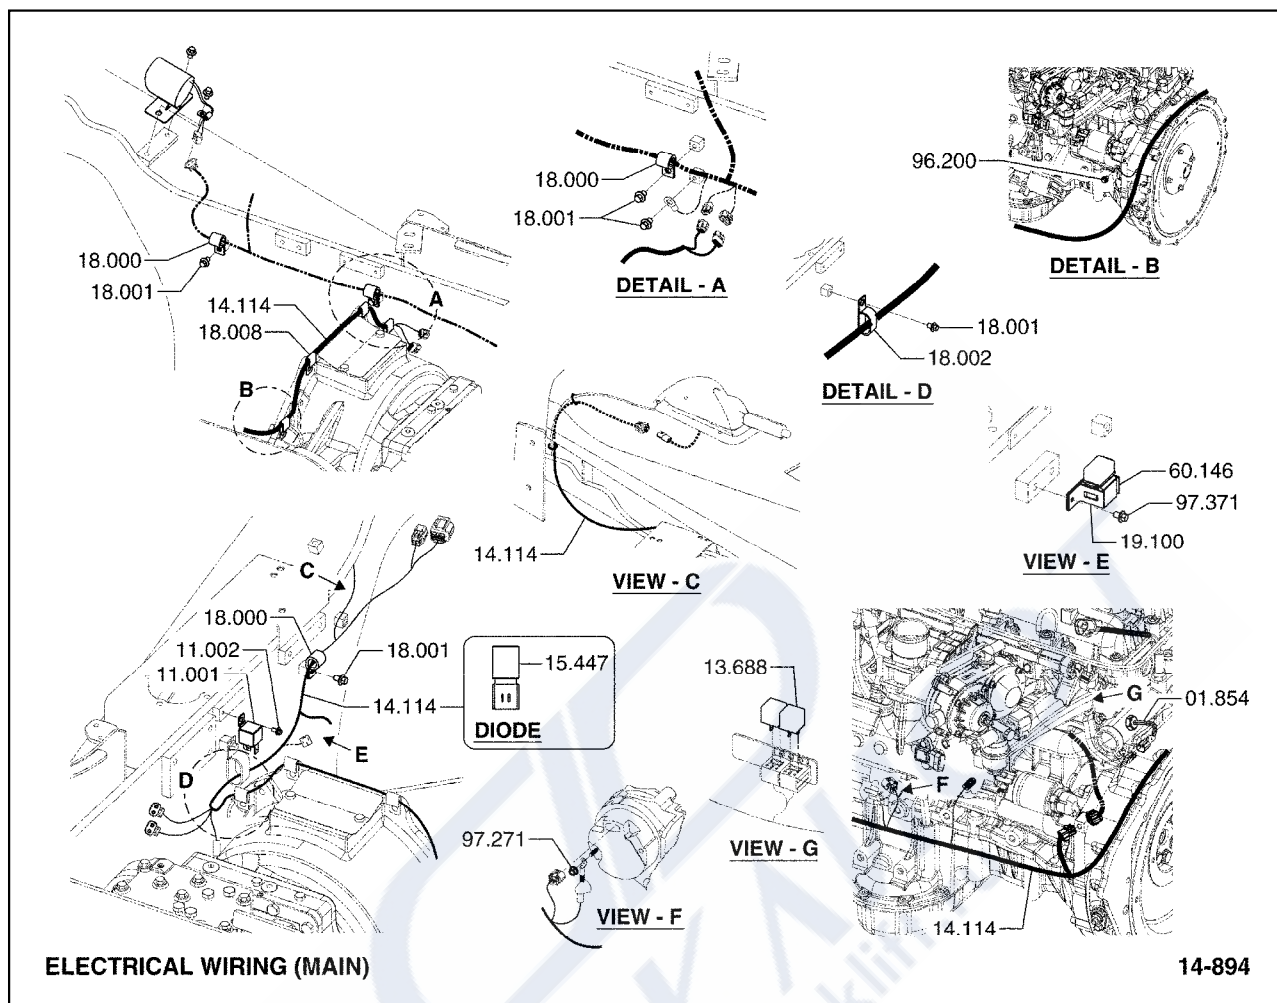 

01.854	SENSOR, ENGINE COOLANT TEMPERATURE 센서
11.001	RELAY, STARTER 릴레이
11.002	FASTENER, STARTER RELAY 패스너
13.688	RELAY, ENGINE CONDITION SIGNAL 릴레이
14.114	HARNESS, MACHINE WIRING 하네스
15.447	DIODE, HARNESS 다이오드
18.000	CLIP, WIRING HARNESS 클립
18.001	FASTENER, WIRING HARNESS CLIP 패스너
18.002	CLIP, WIRING HARNESS 클립

18.008	CLIP, WIRING HARNESS 클립
19.100	BRACKET, RELAY MOUNTING 브라켓
60.146	BRACKET, STARTER RELAY MOUNTING 브라켓
96.200	FASTENER, WIRING HARNESS GROUND 패스너
97.271	FASTENER, CABLE & WIRE TO ALTERNATOR 패스너
97.371	FASTENER, STARTER RELAY MOUNTING BRAK CET 패스너

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

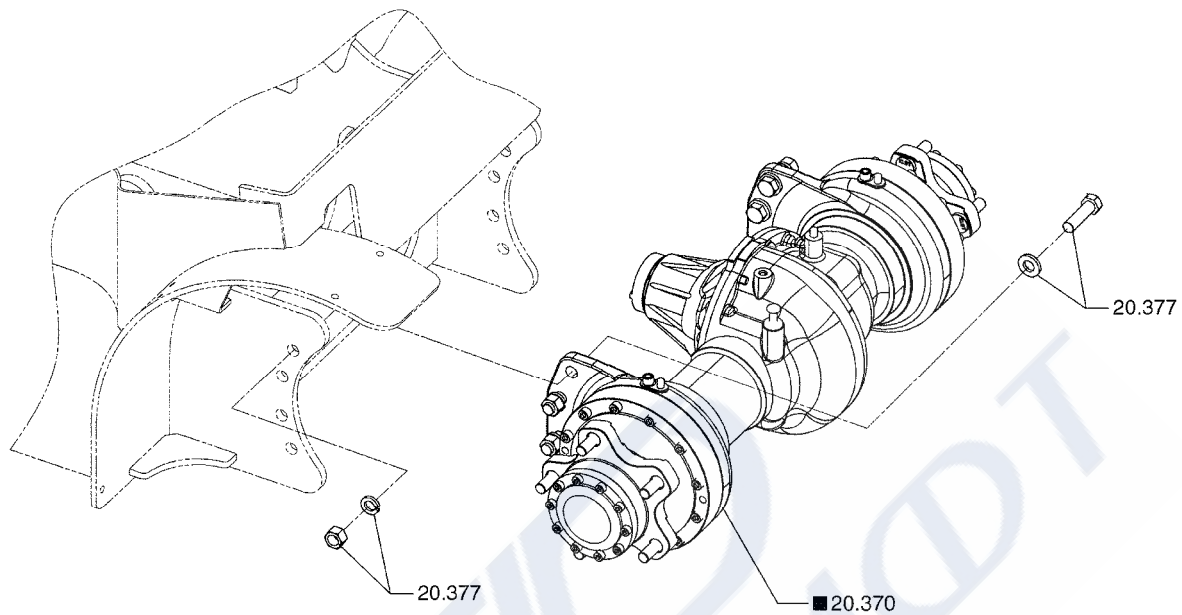


DRIVE AXLE MOUNTING

20-135

- | | |
|--------|--------------------------------------|
| 20.370 | AXLE ASSEMBLY, DRIVE
드라이브액슬 |
| 20.377 | FASTENER, DRIVE AXLE TO FRAME
패스너 |

ASSEMBLY COMPLETE — 20.370

 ■ INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

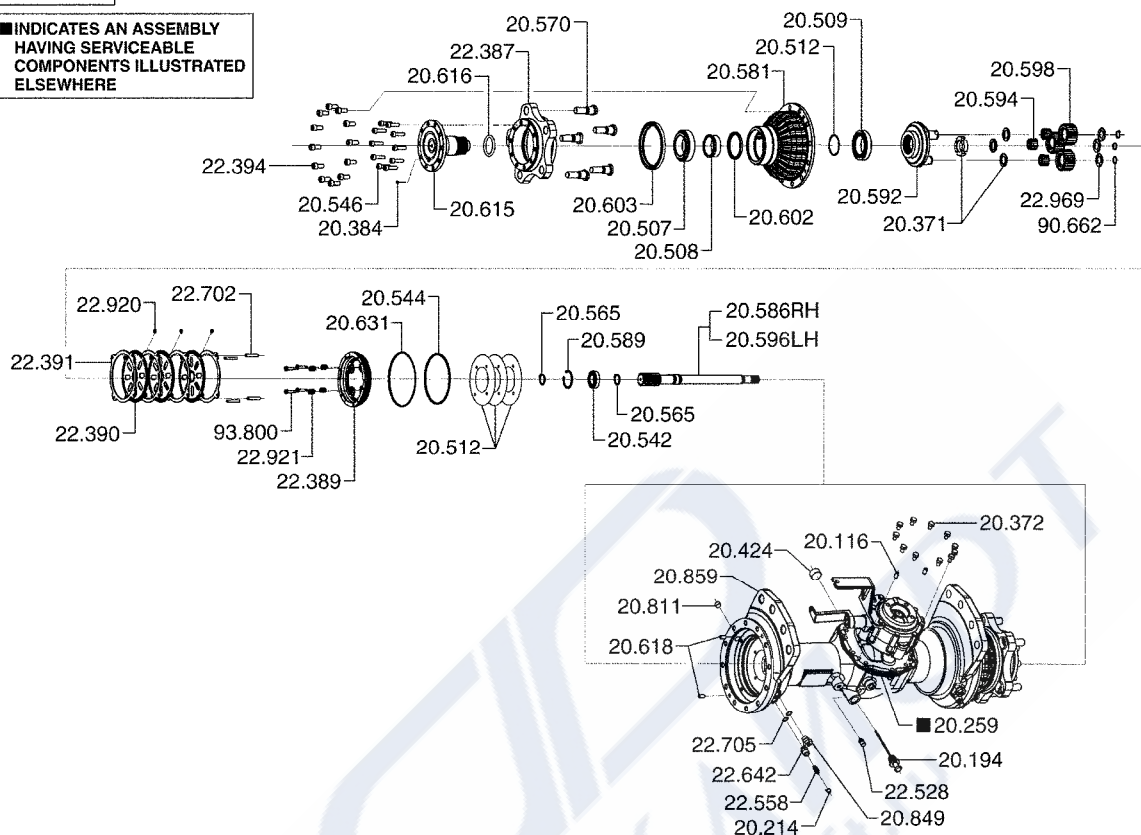

DRIVE AXLE ASSEMBLY


20-183

20.116	PIN, DRIVE AXLE HOUSING & DIFF ALIGNMENT 핀	20.546	FASTENER, DRIVE AXLE END 패스너
20.194	DIPSTICK, DRIVE AXLE 딤스틱	20.565	RETAINER, DRIVE AXLE SHAFT BEARING 리테이너
20.214	COVER, AXLE ADAPTOR BLEEDER OPENING 커버	20.570	FASTENER, DRIVE WHEEL MOUNTING 패스너
20.259	CARRIER & CAP ASSEMBLY, DIFFERENTIAL 캐리어& 캡	20.581	HUB ASSEMBLY, DRIVE AXLE 허브
20.370	AXLE ASSEMBLY, DRIVE 드라이브액슬	20.586	SHAFT, DRIVE AXLE 샤프트
20.371	FASTENER, DRIVE AXLE PLANET 패스너	20.589	RETAINER, DRIVE AXLE SHAFT SEAL 리테이너
20.372	FASTENER, AXLE HOUSING 패스너	20.592	PLANET, DRIVE AXLE 플래닛
20.384	PLUG, DRIVE AXLE HOUSING 플러그	20.594	ROLLER, DRIVE AXLE PLANET PINION GEAR 롤러
20.424	PLUG, DIFFERENTIAL & AXLE HOUSING FILLER 플러그	20.596	SHAFT, DRIVE AXLE (LH) 샤프트
20.507	BEARING, INTERNAL GEAR HUB PINION SHAFT - OUTBOA 베어링	20.598	GEAR, DRIVE AXLE PLANET PINION 기어
20.508	SPACER, INTERNAL GEAR HUB PINION SHAFT BEARING 스페이서	20.602	SEAL, DRIVE AXLE HUB INNER OIL 씰
20.509	BEARING, INTERNAL GEAR HUB PINION SHAFT - INBOAR 베어링	20.603	SEAL, DRIVE AXLE HUB OUTER OIL 씰
20.512	SHIM, DRIVE AXLE HUB BEARING 심	20.615	SPINDLE, DRIVE AXLE END 스핀들
20.542	BEARING, DRIVE AXLE SHAFT 베어링	20.616	SEAL, DRIVE AXLE HUB 씰
20.544	SEAL, DRIVE AXLE SHAFT 씰	20.618	FASTENER, DRIVE AXLE SPINDLE 패스너
		20.116	PIN, DRIVE AXLE HOUSING & DIFF ALIGNMENT 핀
		20.194	DIPSTICK, DRIVE AXLE 딤스틱
		20.214	COVER, AXLE ADAPTOR BLEEDER OPENING 커버
		20.259	CARRIER & CAP ASSEMBLY, DIFFERENTIAL 캐리어& 캡
		20.370	AXLE ASSEMBLY, DRIVE 드라이브액슬
		20.371	FASTENER, DRIVE AXLE PLANET 패스너
		20.372	FASTENER, AXLE HOUSING 패스너
		20.384	PLUG, DRIVE AXLE HOUSING 플러그
		20.424	PLUG, DIFFERENTIAL & AXLE HOUSING FILLER 플러그
		20.507	BEARING, INTERNAL GEAR HUB PINION SHAFT - OUTBOA 베어링
		20.508	SPACER, INTERNAL GEAR HUB PINION SHAFT BEARING 스페이서
		20.509	BEARING, INTERNAL GEAR HUB PINION SHAFT - INBOAR 베어링
		20.512	SHIM, DRIVE AXLE HUB BEARING 심
		20.542	BEARING, DRIVE AXLE SHAFT 베어링
		20.544	SEAL, DRIVE AXLE SHAFT 씰
		20.546	FASTENER, DRIVE AXLE END 패스너
		20.565	RETAINER, DRIVE AXLE SHAFT BEARING 리테이너
		20.570	FASTENER, DRIVE WHEEL MOUNTING 패스너
		20.581	HUB ASSEMBLY, DRIVE AXLE 허브
		20.586	SHAFT, DRIVE AXLE 샤프트
		20.589	RETAINER, DRIVE AXLE SHAFT SEAL 리테이너
		20.592	PLANET, DRIVE AXLE 플래닛
		20.594	ROLLER, DRIVE AXLE PLANET PINION GEAR 롤러
		20.596	SHAFT, DRIVE AXLE (LH) 샤프트
		20.598	GEAR, DRIVE AXLE PLANET PINION 기어
		20.602	SEAL, DRIVE AXLE HUB INNER OIL 씰
		20.603	SEAL, DRIVE AXLE HUB OUTER OIL 씰
		20.615	SPINDLE, DRIVE AXLE END 스핀들
		20.616	SEAL, DRIVE AXLE HUB 씰
		20.618	FASTENER, DRIVE AXLE SPINDLE 패스너

20.631	SEAL, DRIVE AXLE PLANET CARRIER 씰
20.811	PLUG, DRIVE AXLE HOUSING 플러그
20.859	HOUSING, DRIVE AXLE 하우징
22.387	HUB, BRAKE DISC 허브
22.389	PISTON, BRAKE DISC 피스톤
22.390	DISC, BRAKE - INNER 디스크
22.391	DISC, BRAKE - OUTER 디스크
22.394	FASTENER, BRAKE DISC HUB 패스너
22.528	BLEEDER, BRAKE LINES ADAPTOR 블리더
22.558	BLEEDER, BRAKE LINES 블리더
22.642	FITTING, DRIVE AXLE INLET 피팅
22.702	DOWEL PIN, BRAKE DISC PISTON SLEEVE 다웰핀
22.705	SEAL, DRIVE AXLE END HOUSING 씰
22.920	SPRING, BRAKE DISC PISTON PLATE FASTENER 스프링
22.921	SPRING, BRAKE DISC PISTON 스프링
22.969	THRUST WASHER, PLANETARY GEAR ASSEMBLY 스러스트와셔
90.662	DOWEL RING, DRIVE AXLE PLANET FASTENER 다웰링
93.800	FASTENER, BRAKE DISC HOUSING 패스너

ASSEMBLY COMPLETE 20.259

 ■ INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

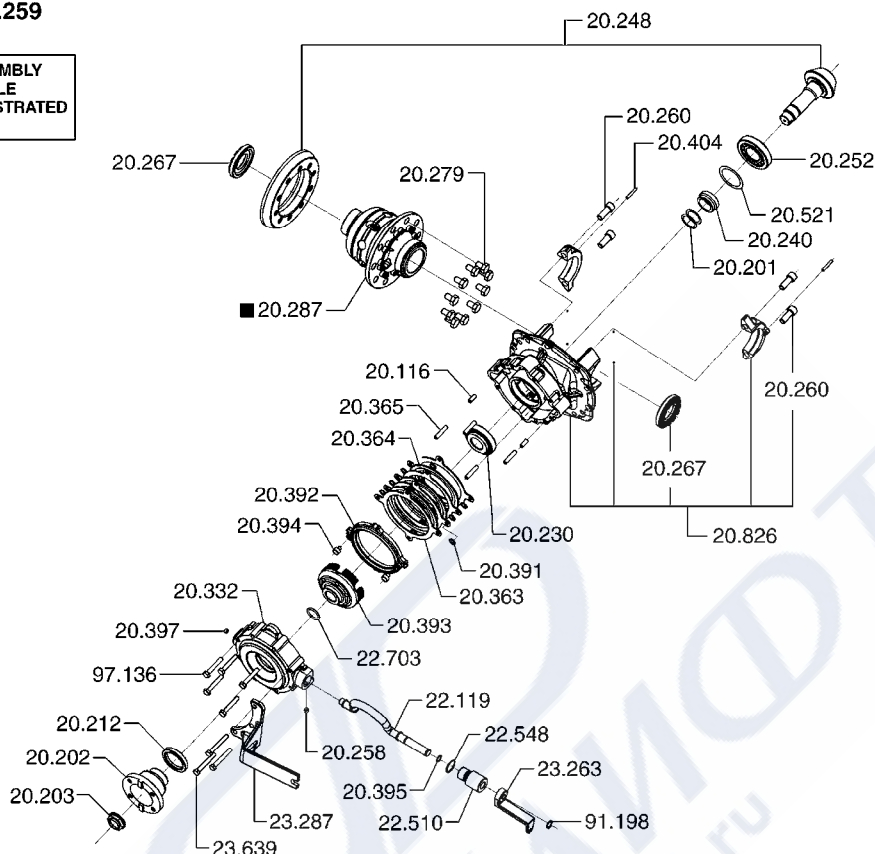


DIFFERENTIAL & CARRIER ASSEMBLY

20-184

20.116	PIN, DRIVE AXLE HOUSING & DIFF ALIGNMENT 핀	20.332	COVER, DRIVE AXLE CARRIER 커버
20.201	SHIM, DIFF BRG CARRIER TO AXLE HOUSING 심	20.363	DISC, PARKING BRAKE 디스크
20.202	FLANGE, DIFFERENTIAL PINION COMPANION 플랜지	20.364	DISC, PARKING BRAKE 디스크
20.203	NUT, DIFFERENTIAL PINION COMPANION FLANGE 너트	20.365	PIN, PARKING BRAKE DISC 핀
20.212	SEAL, DIFFERENTIAL PINION OIL 씰	20.391	SPRING, PARKING BRAKE DISC 스프링
20.230	BEARING ASSEMBLY, DIFF PINION OUTER 베어링	20.392	PISTON, PARKING BRAKE DISC 피스톤
20.240	SPACER, DIFFERENTIAL PINION BEARING 스페이서	20.393	SPLINE, BRAKE DISC 스플라인
20.248	RING GEAR & PINION SET, DIFFERENTIAL 링	20.394	PIN, PARKING BRAKE PISTON 핀
20.252	BEARING, DIFFERENTIAL PINION INNER 베어링	20.395	SEAL, PARKING BRAKE SHAFT 씰
20.258	FASTENER, DIFFERENTIAL BRG CARRIER HSG 패스너	20.397	CAP, DRIVE AXLE CARRIER COVER 캡
20.259	CARRIER & CAP ASSEMBLY, DIFFERENTIAL 캐리어& 캡	20.404	DOWEL PIN, DIFFERENTIAL CARRIER AND CAP ASSEMBLY 다웰핀
20.260	FASTENER, DIFFERENTIAL CARRIER CAP 패스너	20.521	SHIM, DRIVE AXLE SHAFT GEAR 심
20.267	NUT, DIFFERENTIAL BEARING ADJUSTING 너트	20.826	CARRIER, DRIVE AXLE HOUSING 캐리어
20.279	FASTENER, DIFFERENTIAL CASE TO RING GEAR 패스너	22.119	SHAFT, PARKING BRAKE LINKAGE LEVER 샤프트
20.287	CASE & GEAR ASSEMBLY, DIFFERENTIAL 케이스& 기어	22.510	SUPPORT, PARKING BRAKE CABLE BRACKET 서포트

22.548	SEAL, PARKING BRAKE CABLE 씰
22.703	SEAL, BRAKE DISC PISTON 씰
23.263	LEVER, PARKING BRAKE OPERATING 레버
23.287	BRACKET, PARKING BRAKE CABLE 브라켓
23.639	FASTENER, PARKING BRAKE CABLE ANCHOR 패스너
91.198	RETAINER, PARKING BRAKE CABLE END CLEVIS PIN 리테이너
97.136	FASTENER, DRIVE AXLE CARRIER COVER 패스너

 ASSEMBLY
COMPLETE 20.287

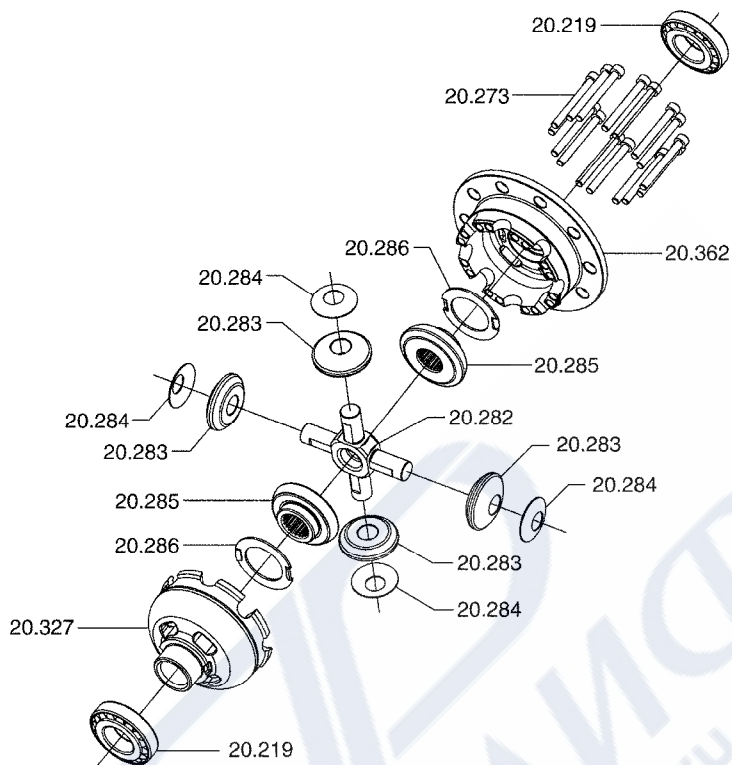

DIFFERENTIAL ASSEMBLY


20-185

20.219	BEARING, DIFFERENTIAL 베어링
20.273	FASTENER, DIFFERENTIAL CASE 패스너
20.282	SPIDER, DIFFERENTIAL PINION 스파이더
20.283	GEAR, DIFFERENTIAL SIDE PINION 기어
20.284	WASHER, DIFF SIDE PINION GEAR THRUST 와셔
20.285	GEAR, DIFFERENTIAL SIDE 기어
20.286	WASHER, DIFFERENTIAL SIDE GEAR THRUST 와셔
20.287	CASE & GEAR ASSEMBLY, DIFFERENTIAL 케이스& 기어
20.327	CASE, DIFFERENTIAL 케이스

20.362


CASE, DIFFERENTIAL
케이스

 ФОРКЛИФТ
www.forklift.ru

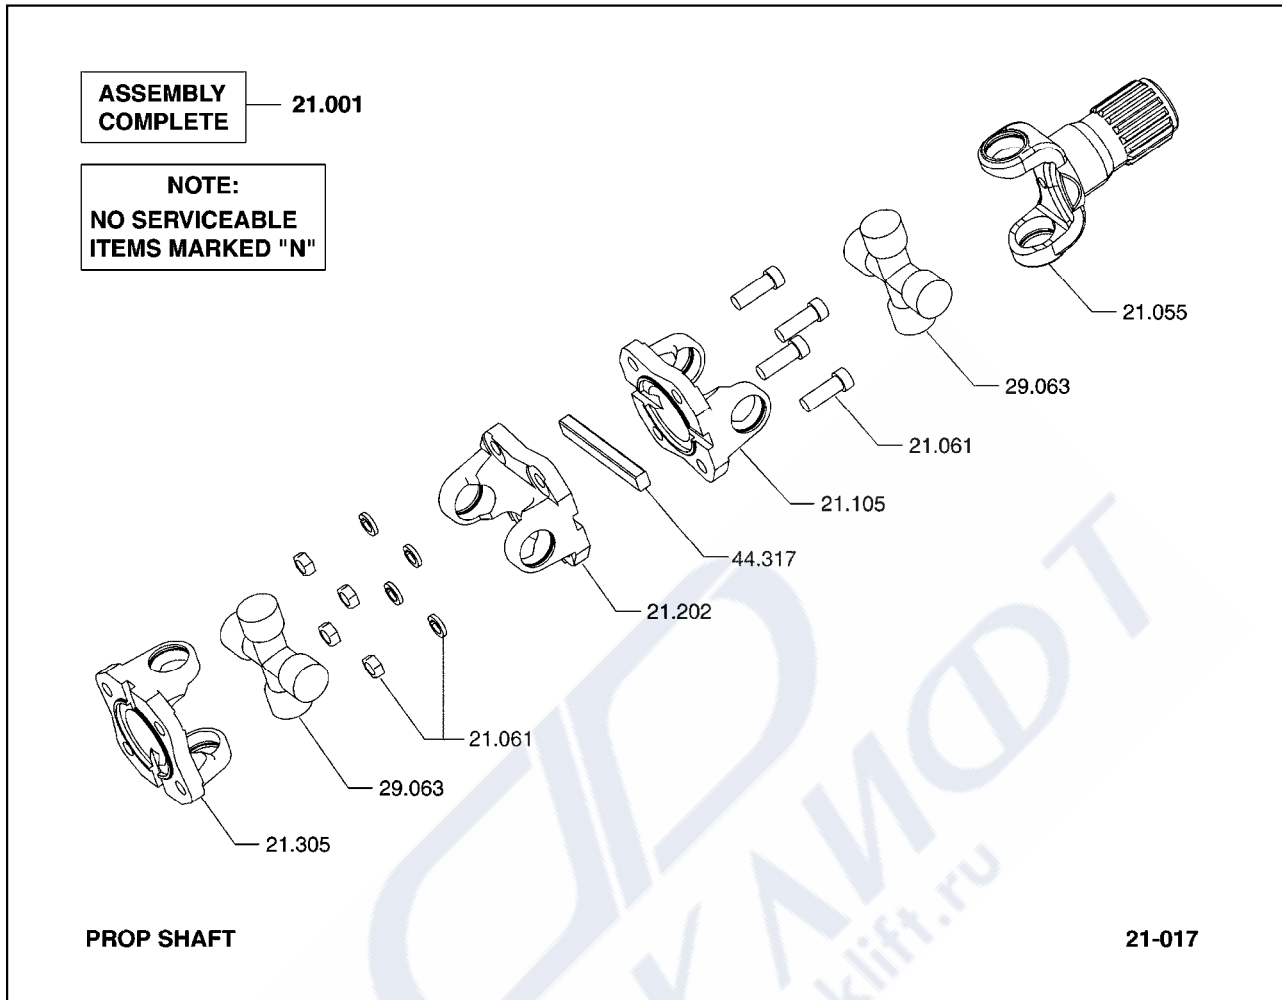

- | | |
|--------|--|
| 21.001 | SHAFT ASSEMBLY, TRANSMISSION TO AXLE PROPELLER
샤프트 |
| 21.055 | YOKE CAP & WASHER ASSEMBLY, PROP SHAFT SLIP
요크캡& 와셔 |
| 21.061 | FASTENER, PROPELLER SHAFT
패스너 |
| 21.105 | YOKE, PROPELLER SHAFT FLANGED
요크 |
| 21.202 | YOKE, PROPELLER SHAFT FLANGED
요크 |
| 21.305 | YOKE, PROPELLER SHAFT FLANGED
요크 |
| 29.063 | BEARING, WET DISC COOLING PUMP SHAFT
베어링 |
| 44.317 | KEY, TRANSMISSION OUTPUT SHAFT
키 |

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

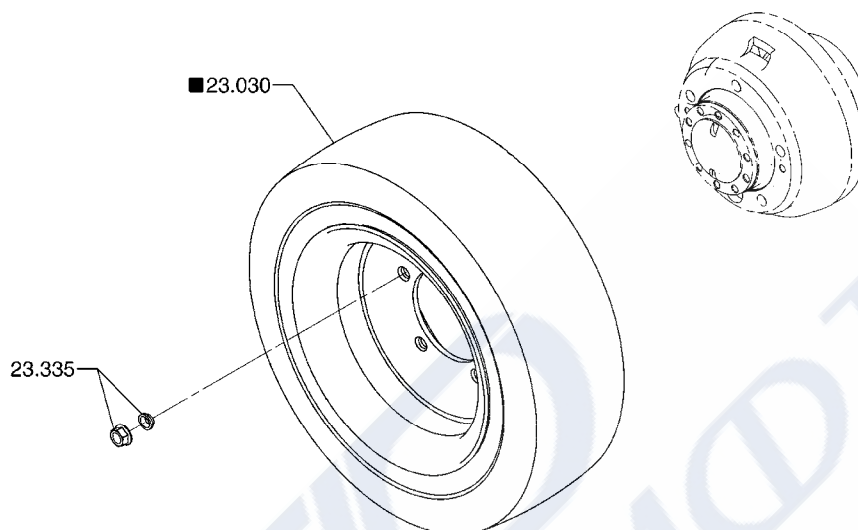


DRIVE WHEEL & TIRE MOUNTING

22-013

- | | |
|--------|--|
| 23.030 | DRIVE WHEEL AND TIRE ASSEMBLY
드라이브휠 & 타이어 |
| 23.335 | FASTENER, DRIVE WHEEL
패스너 |

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

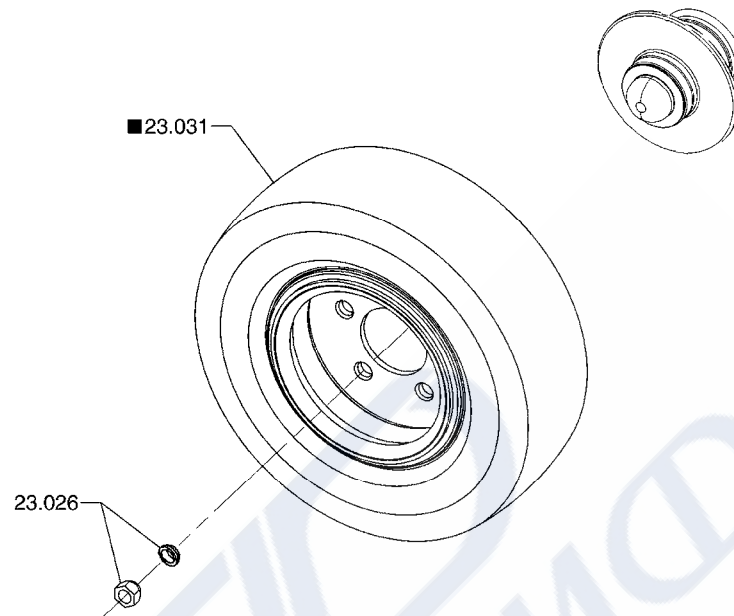


STEER WHEEL & TIRE MOUNTING

22-014

- | | |
|--------|---|
| 23.026 | FASTENER, STEER WHEEL
패스너 |
| 23.031 | STEER WHEEL AND TIRE ASSEMBLY
스티어휠 & 타이어 |

 ASSEMBLY
COMPLETE — 23.030

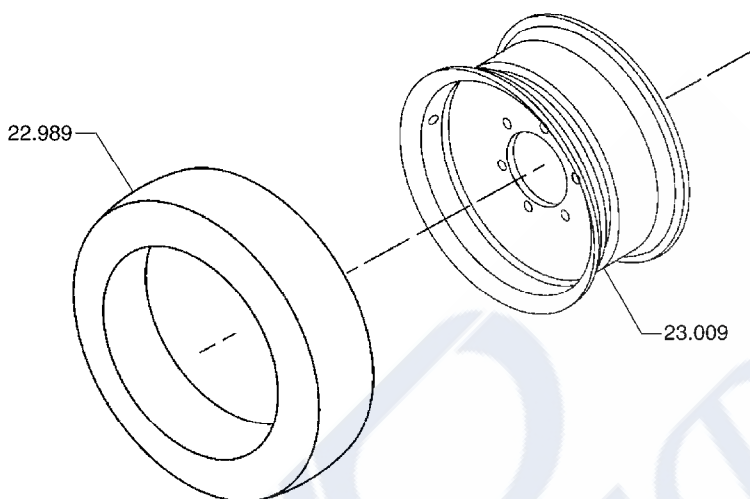


DRIVE WHEEL & TIRE (SOLID TYPE)

22-024

22.989	TIRE ASSEMBLY, DRIVE 타이어
23.009	RIM ASSEMBLY, DRIVE WHEEL 립
23.030	DRIVE WHEEL AND TIRE ASSEMBLY 드라이브휠& 타이어

 ASSEMBLY
COMPLETE — 23.030

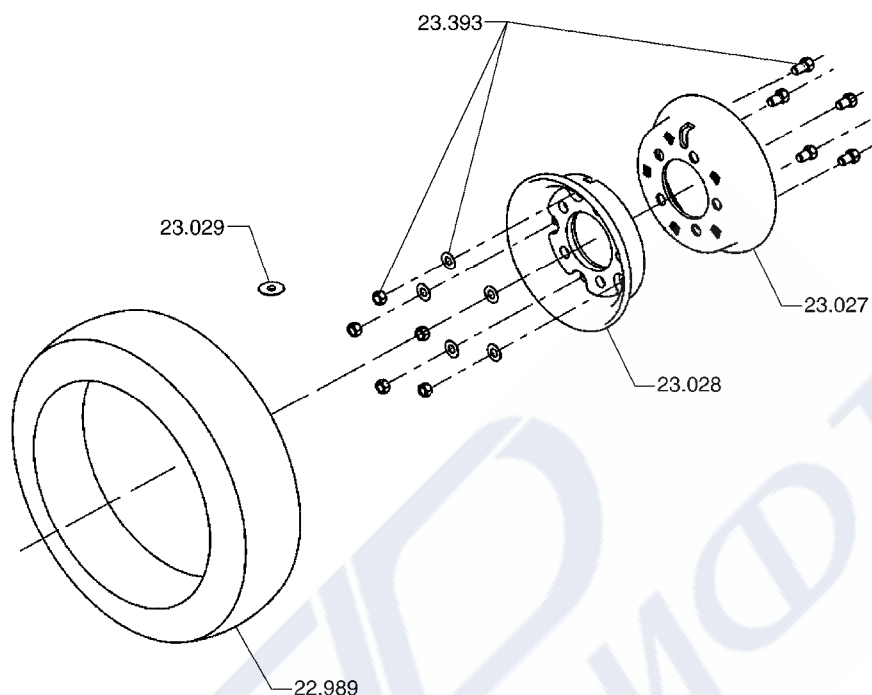


DRIVE WHEEL & TIRE (SOLID TYPE)

22-026

22.989	TIRE ASSEMBLY, DRIVE 타이어
23.027	OUTER HALF, DRIVE WHEEL 아우터하프
23.028	INNER HALF, DRIVE WHEEL 인너하프
23.029	FASTENER, DRIVE WHEEL ASSEMBLY 패스너
23.030	DRIVE WHEEL AND TIRE ASSEMBLY 드라이브휠& 타이어
23.393	FASTENER, DRIVE WHEEL 패스너

 ASSEMBLY
COMPLETE — 23.031

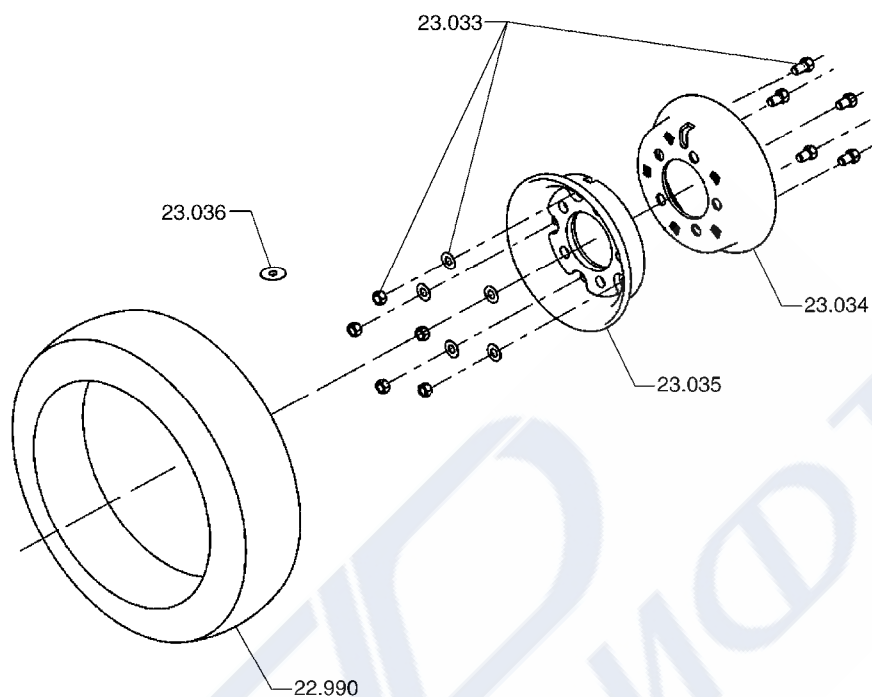


STEER WHEEL & TIRE (SOLID TYPE)

22-027

22.990	TIRE ASSEMBLY, STEER 타이어
23.031	STEER WHEEL AND TIRE ASSEMBLY 스티어휠& 타이어
23.033	FASTENER, STEER WHEEL 패스너
23.034	OUTER HALF, STEER WHEEL 아웃터하프
23.035	INNER HALF, STEER WHEEL 인너하프
23.036	FASTENER, STEER WHEEL ASSEMBLY 패스너

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

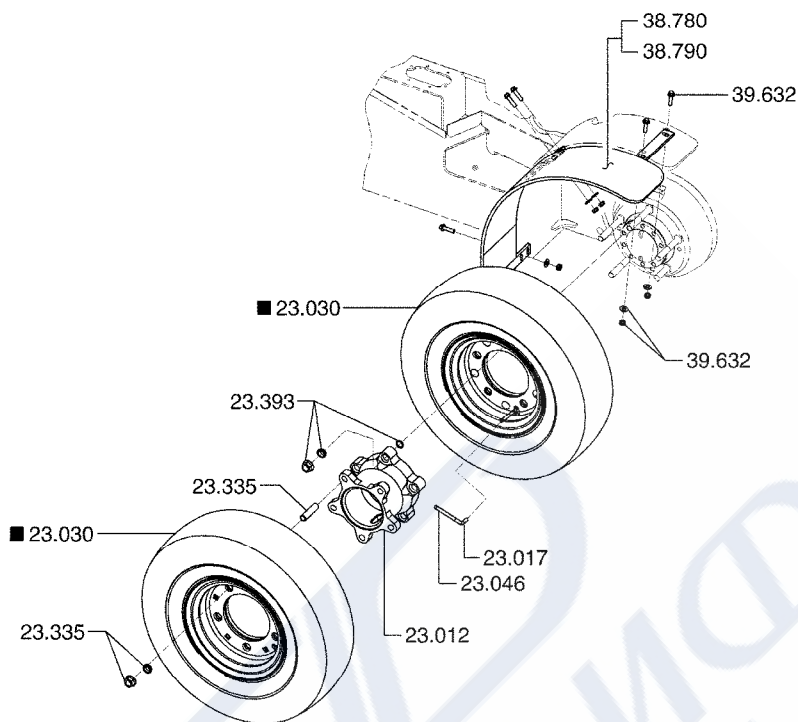


DUAL DRIVE TIRE MOUNTING

22-033

23.012	SPACER, DRIVE WHEEL DUAL RIM 스페이서
23.017	EXTENSION, DRIVE WHEEL VALVE 익스텐션
23.030	DRIVE WHEEL AND TIRE ASSEMBLY 드라이브휠& 타이어
23.046	EXTENSION, DRIVE WHEEL 익스텐션
23.335	FASTENER, DRIVE WHEEL 패스너
23.393	FASTENER, DRIVE WHEEL 패스너
38.780	FENDER, RIGHT HAND FRONT 펜더
38.790	FENDER, LEFT HAND FRONT 펜더
39.632	FASTENER, FENDER SUPPORT 패스너

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

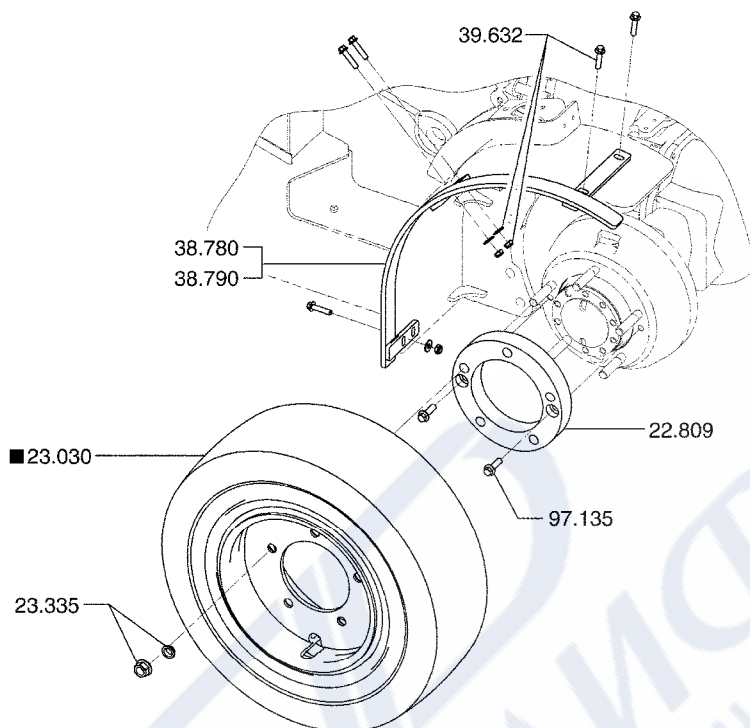


WIDE DRIVE TIRE MOUNTING

22-034

22.809	SPACER, DRIVE WHEEL OFFSET MOUNTING 스페이서
23.030	DRIVE WHEEL AND TIRE ASSEMBLY 드라이브휠& 타이어
23.335	FASTENER, DRIVE WHEEL 패스너
38.780	FENDER, RIGHT HAND FRONT 펜더
38.790	FENDER, LEFT HAND FRONT 펜더
39.632	FASTENER, FENDER SUPPORT 패스너
97.135	FASTENER, DRIVE WHEEL OFFSET SPACER 패스너

 ASSEMBLY
COMPLETE — 23.030

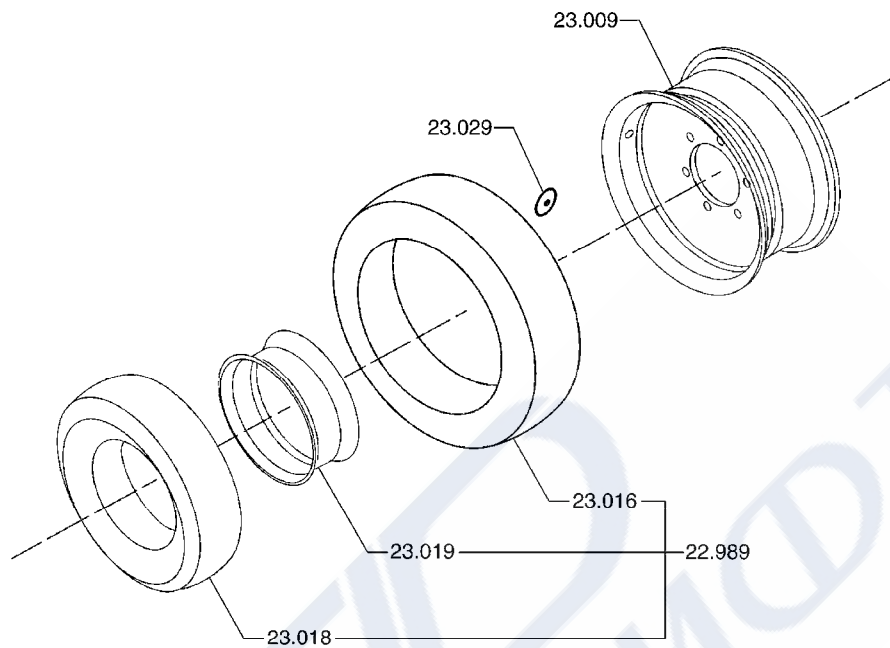


DRIVE WHEEL & TIRE

22-041

22.989	TIRE ASSEMBLY, DRIVE 타이어
23.009	RIM ASSEMBLY, DRIVE WHEEL 립
23.016	TIRE, DRIVE WHEEL 타이어
23.018	TUBE, DRIVE WHEEL 튜브
23.019	FLAP, DRIVE WHEEL TUBE 플랩
23.029	FASTENER, DRIVE WHEEL ASSEMBLY 패스너
23.030	DRIVE WHEEL AND TIRE ASSEMBLY 드라이브휠& 타이어

 ASSEMBLY
COMPLETE — 23.030

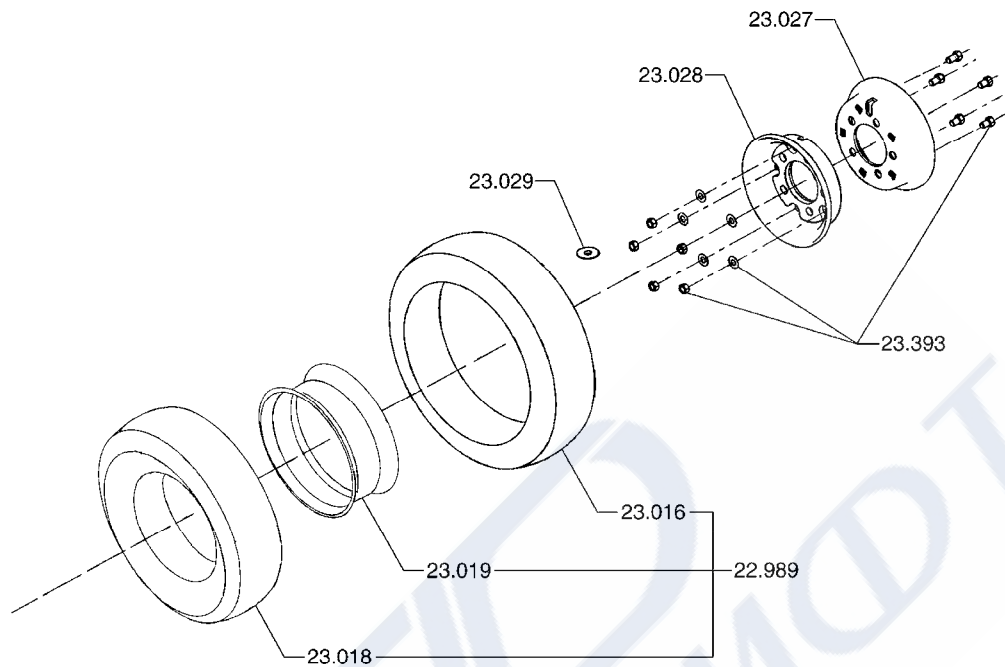


DRIVE WHEEL & TIRE

22-043

22.989	TIRE ASSEMBLY, DRIVE 타이어
23.016	TIRE, DRIVE WHEEL 타이어
23.018	TUBE, DRIVE WHEEL 튜브
23.019	FLAP, DRIVE WHEEL TUBE 플랩
23.027	OUTER HALF, DRIVE WHEEL 아웃터하프
23.028	INNER HALF, DRIVE WHEEL 인너하프
23.029	FASTENER, DRIVE WHEEL ASSEMBLY 패스너
23.030	DRIVE WHEEL AND TIRE ASSEMBLY 드라이브휠& 타이어
23.393	FASTENER, DRIVE WHEEL 패스너

 ASSEMBLY
COMPLETE — 23.031

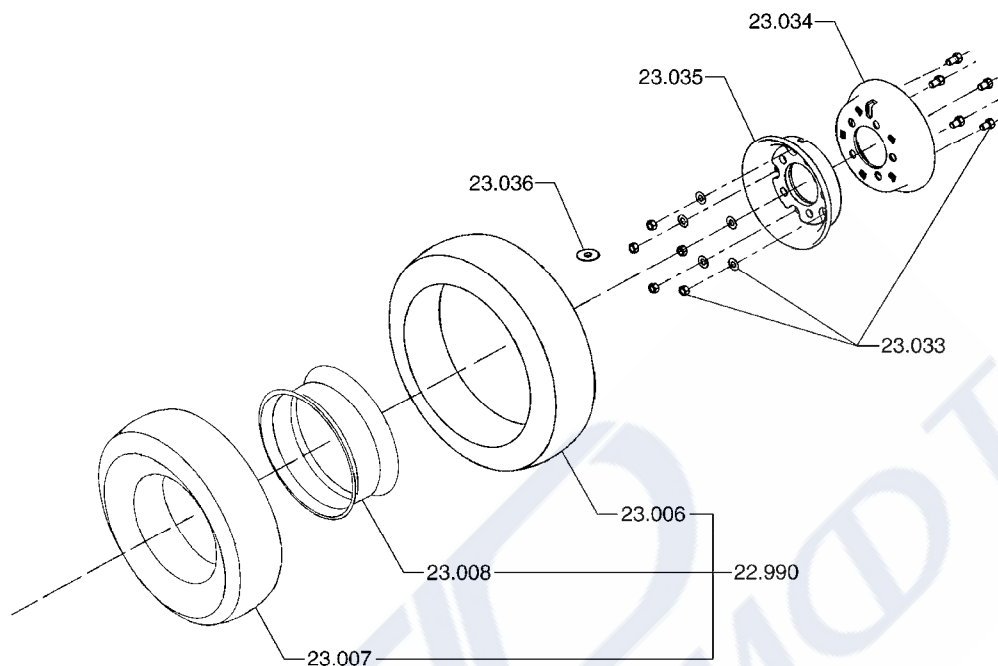


STEER WHEEL & TIRE

22-044

22.990	TIRE ASSEMBLY, STEER 타이어
23.006	TIRE, STEER WHEEL 타이어
23.007	TUBE, STEER WHEEL 튜브
23.008	FLAP, STEER WHEEL 플랩
23.031	STEER WHEEL AND TIRE ASSEMBLY 스티어휠 & 타이어
23.033	FASTENER, STEER WHEEL 패스너
23.034	OUTER HALF, STEER WHEEL 아웃터하프
23.035	INNER HALF, STEER WHEEL 인너하프
23.036	FASTENER, STEER WHEEL ASSEMBLY 패스너

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

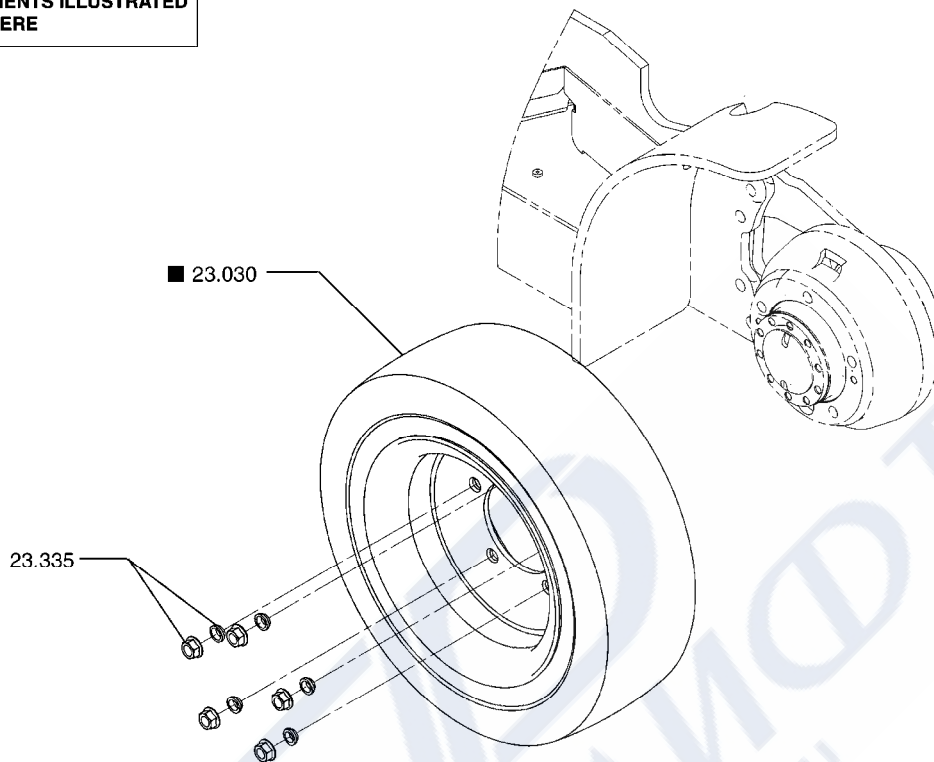


DRIVE WHEEL & TIRE MOUNTING

23-448

- | | |
|--------|---|
| 23.030 | DRIVE WHEEL AND TIRE ASSEMBLY
드라이브휠& 타이어 |
| 23.335 | FASTENER, DRIVE WHEEL
패스너 |

 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

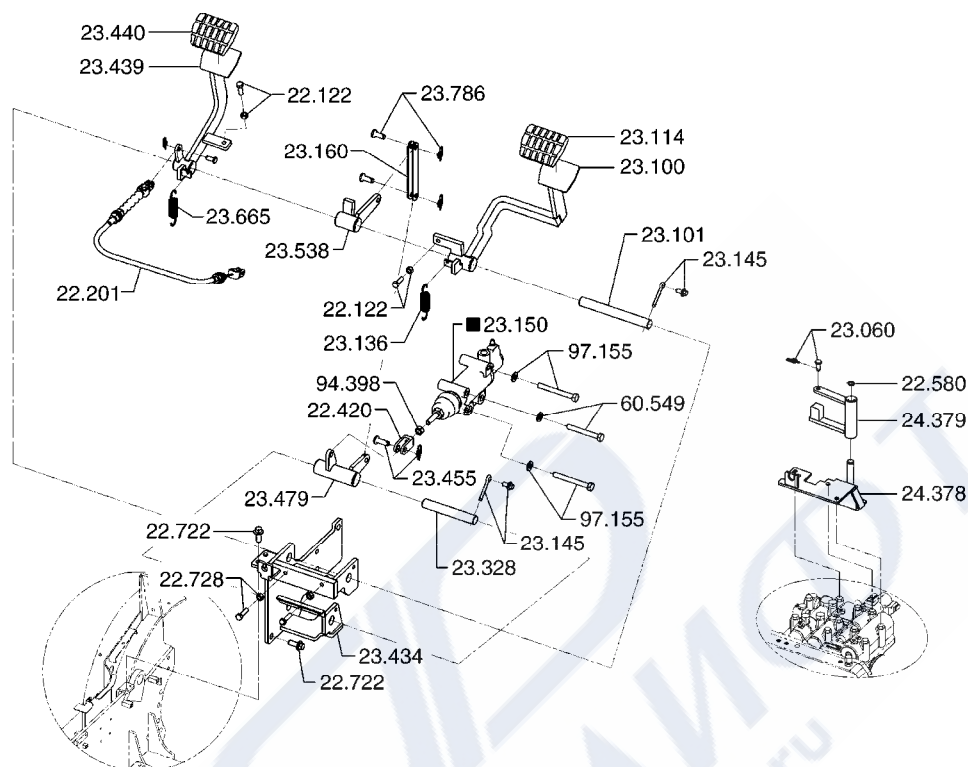


BRAKE & INCHING LINES

23-535

22.122	FASTENER, BRAKE PEDAL PIVOT RETAINER 패스너
22.201	CABLE, INCHING 케이블
22.420	CLEVIS, MASTER CYLINDER PUSH ROD 클레비스
22.580	RETAINER, BRAKE LINKAGE PIVOT ARM CLEVIS PIN 리테이너
22.722	FASTENER, BRAKE MOUNTING PLATE 패스너
22.728	FASTENER, BRAKE MOUNTING PLATE 패스너
23.060	CLEVIS, INCH ACTUATOR ROD 클레비스
23.100	PEDAL, BRAKE 페달
23.101	SHAFT, BRAKE PEDAL 샤프트

23.114	PAD & FASTENER, BRAKE PEDAL 패드& 패스너
23.136	SPRING, BRAKE PEDAL RETURN 스프링
23.145	FASTENER, BRAKE PEDAL SHAFT 패스너
23.150	CYLINDER ASSEMBLY, BRAKE MASTER COMPLETE 실린더
23.160	ROD, PUSH 로드
23.328	SHAFT, BRAKE OPERATING CAM 샤프트
23.434	BRACKET, BRAKE PEDAL PIVOT 브라켓
23.439	PEDAL, INCHING 페달
23.440	PAD & FASTENER, INCHING PEDAL 패드& 패스너
23.455	FASTENER, INCHING LEVER ROD CLEVIS 패스너
23.479	ARM, BRAKE RH 암
23.538	ARM, BRAKE LINKAGE PIVOT 암
23.665	SPRING, INCHING PEDAL RETURN 스프링
23.786	FASTENER, INCHING BRAKE PEDAL 패스너
24.378	BRACKET, INCHING 브라켓
24.379	LINK, INCHING 링크
60.549	FASTENER, BRAKE VALVE 패스너
94.398	NUT, BRAKE MASTER CYLINDER ACTUATING ROD FASTENER 너트
97.155	FASTENER, BRAKE VALVE MOUNTING 패스너

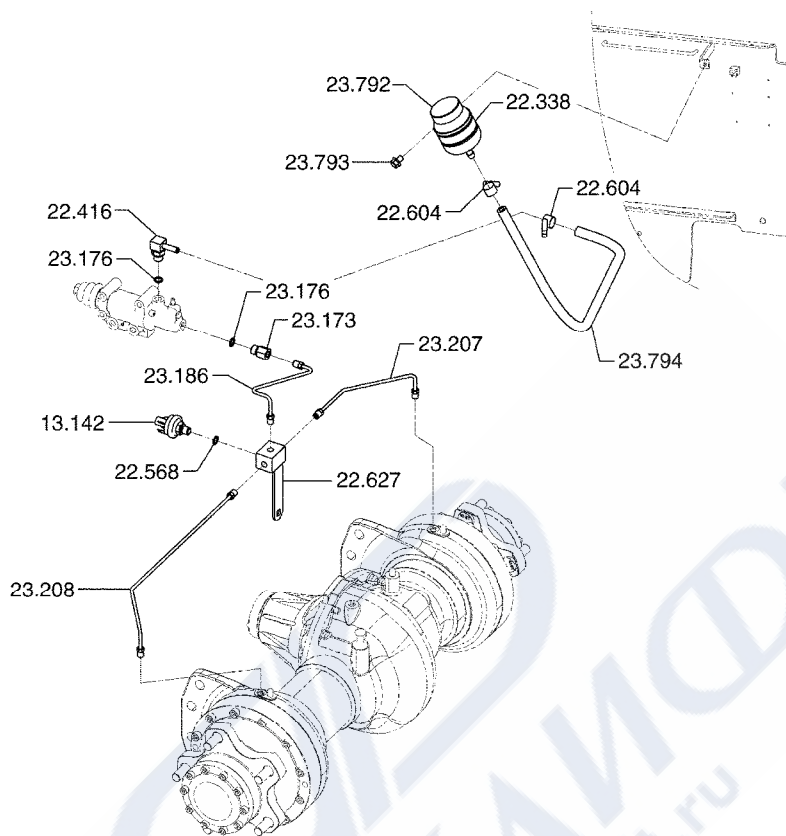 


BRAKE LINES

23-536

13.142	SWITCH, BRAKE INTERLOCK 스위치
22.338	CLAMP, BRAKE FLUID RESERVOIR 클램프
22.416	FITTING, BRAKE MASTER CYLINDER INLET LINE 피팅
22.568	SEAL, BRAKE LINE TEE PLUG 씰
22.604	CLAMP, BRAKE FLUID RESERVOIR LINE 클램프
22.627	TEE, BRAKE LINE 티
23.173	FITTING, BRAKE MASTER CYLINDER OUTLET 피팅
23.176	GASKET, BRAKE MASTER CYLINDER OUTLET FTG BOLT 가스켓
23.186	LINE, BRAKE MASTER CYLINDER OUTLET 라인


23.207	LINE, LH DRIVE WHEEL BRAKE CYLINDER TO TEE 라인
23.208	LINE, RH DRIVE WHEEL BRAKE CYLINDER TO TEE 라인
23.792	RESERVOIR, BRAKE FLUID 리저버
23.793	FASTENER, BRAKE FLUID RESERVOIR 패스너
23.794	LINE, BRAKE MASTER CYLINDER INLET 라인

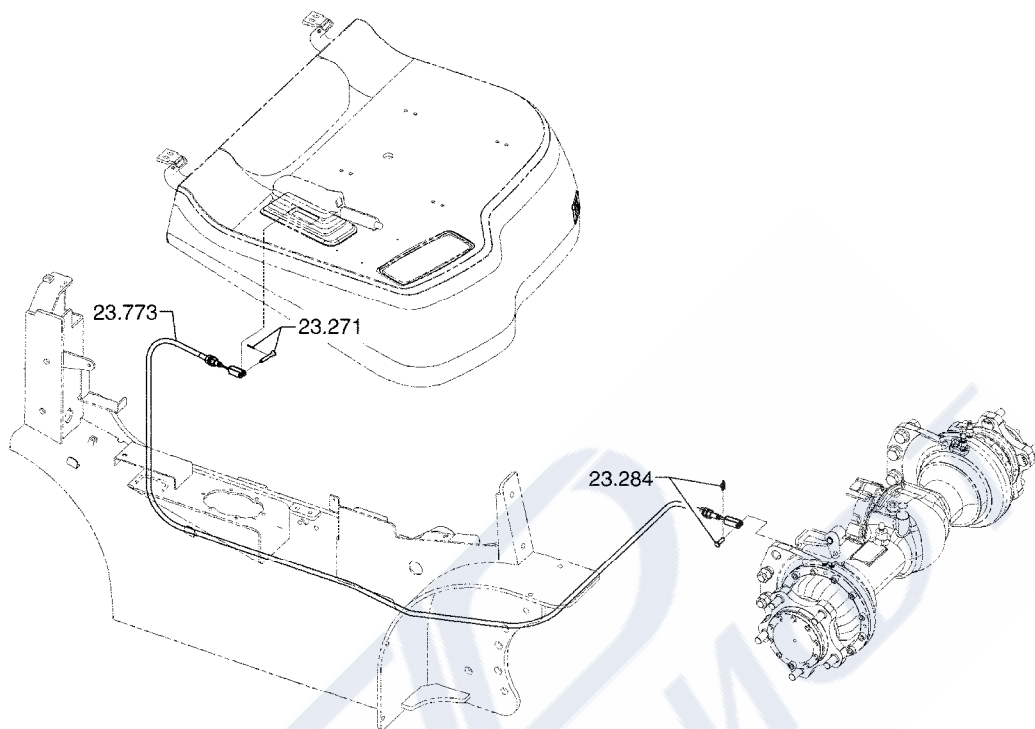 

PARKING BRAKE SYSTEM


23-537

- | | |
|--------|--|
| 23.271 | FASTENER, PARKING BRAKE LEVER
패스너 |
| 23.284 | FASTENER, PARKING BRAKE CABLE BRACKET
패스너 |
| 23.773 | CABLE, PARKING BRAKE WHEEL END
케이블 |

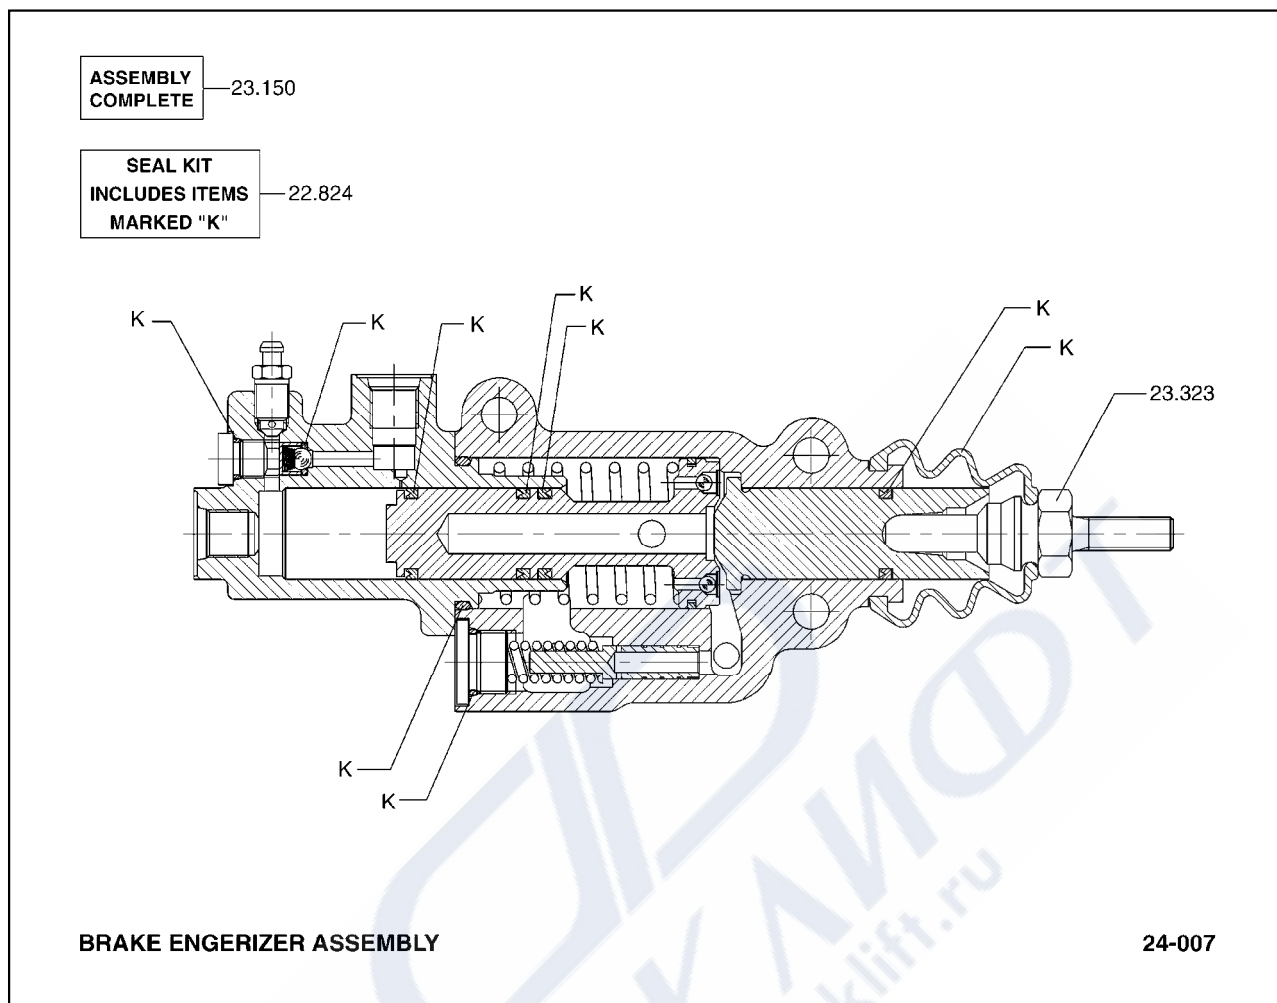 

- | | |
|--------|---|
| 22.824 | SEAL KIT, BRAKE ENERGIZER/MASTER CYL
씰키트 |
| 23.150 | CYLINDER ASSEMBLY, BRAKE MASTER COMPLETE
실린더 |
| 23.323 | ROD, BRAKE ADJUSTING
로드 |

 
■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

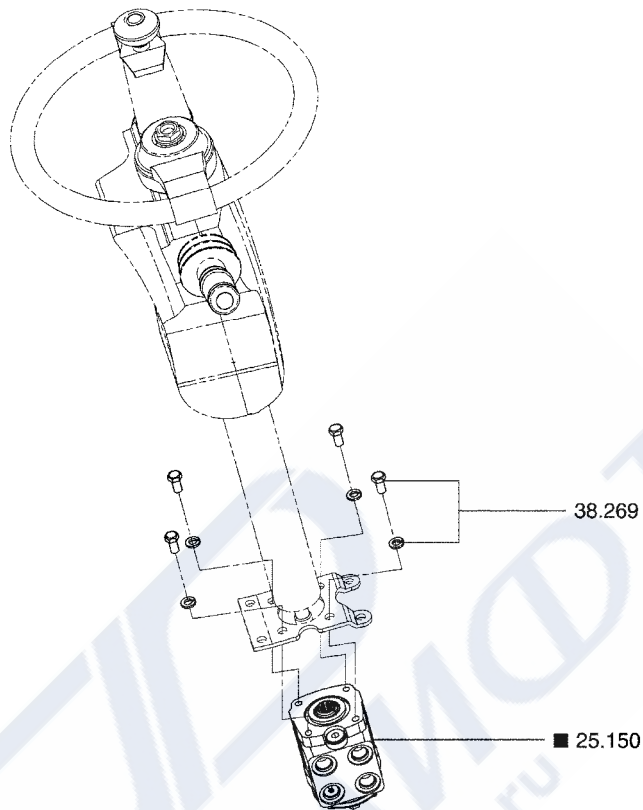

STEERING GEAR MOUNTING


25-072

- | | |
|--------|--|
| 25.150 | GEAR BOX ASSEMBLY, STEERING
기어박스 |
| 38.269 | FASTENER, STEERING COLUMN SUPPORT
패스너 |

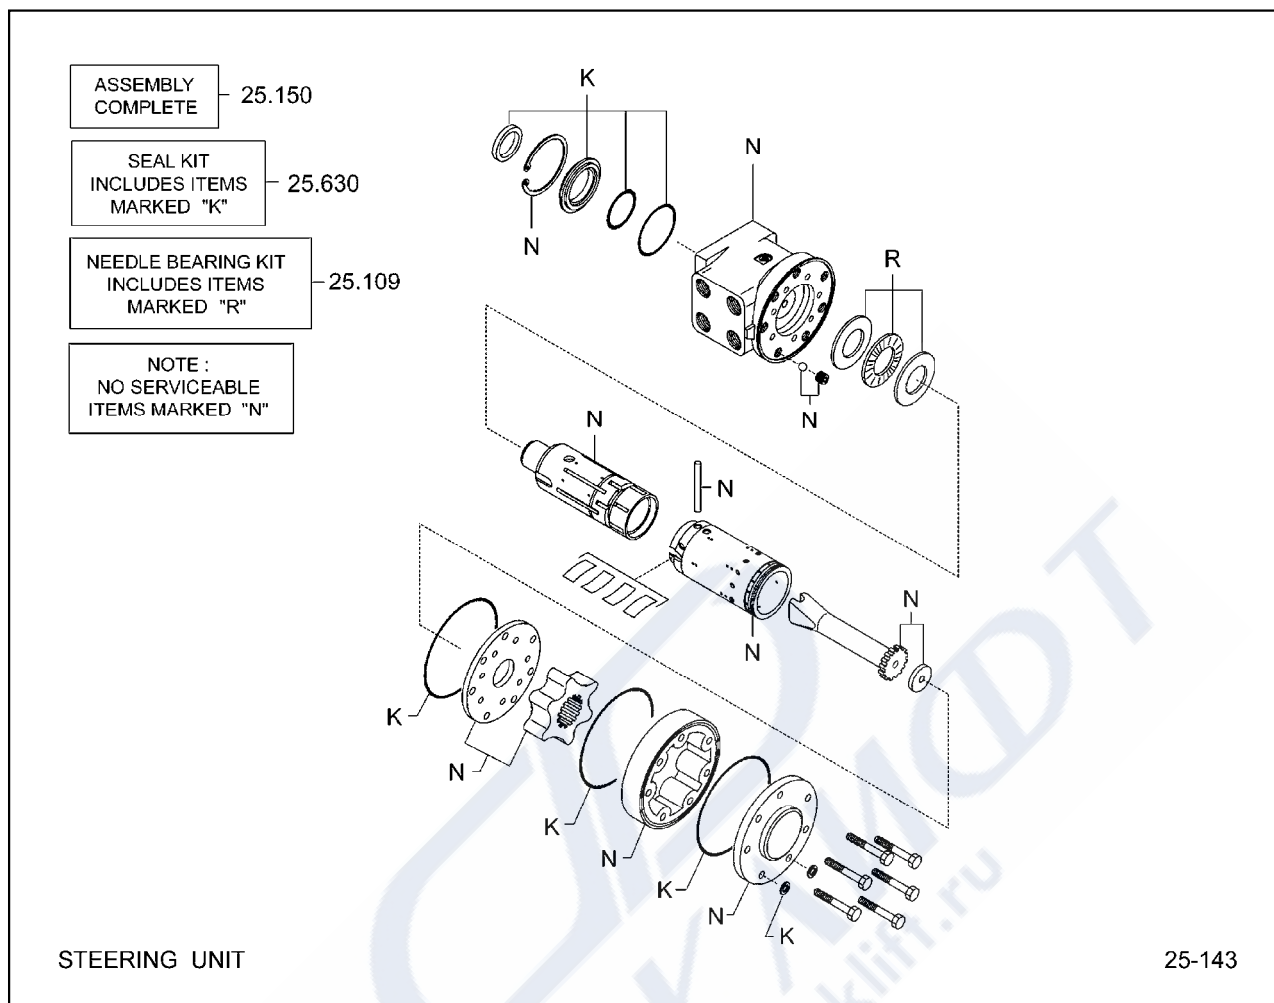 

- | | |
|--------|--------------------------------------|
| 25.109 | KIT, STEER GEAR SEAL
키트 |
| 25.150 | GEAR BOX ASSEMBLY, STEERING
기어박스 |
| 25.630 | REPAIR KIT, STEERING COLUMN
리페어키트 |

 ASSEMBLY
COMPLETE 25.030

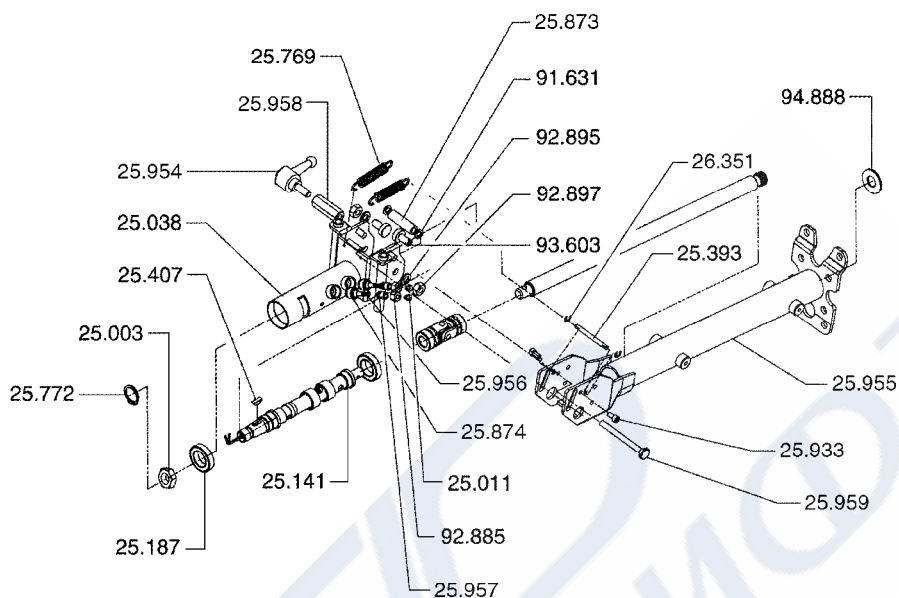


STEERING COLUMN SHAFT ASSEMBLY

25-291

25.003	NUT, HANDWHEEL 너트
25.011	FASTENER, STEERING COLUMN 패스너
25.030	SHAFT ASSEMBLY, STEERING COLUMN 샤프트
25.038	HOUSING ASSEMBLY-CUP & BUSHING, STEERING 하우징
25.141	SHAFT, STEERING GEAR 샤프트
25.187	BEARING, STEER SHAFT 베어링
25.393	PIN, STEERING LINK (STEERING ARM) 핀
25.407	KEY, STEER COLUMN SHAFT COUPLING 키
25.769	SPRING, STEERING COLUMN TILTING (LOWER) 스프링


25.772	RETAINER, STEERING COLUMN SHAFT 리테이너
25.873	BUSHING, STEER COLUMN AXIAL 부싱
25.874	BUSHING, STEER COLUMN TELESCOPING 부싱
25.933	FASTENER, STEERING COLUMN 패스너
25.954	ARM, TILT STEERING COLUMN ADJUSTOR 암
25.955	SUPPORT, STEERING COLUMN SHAFT 서포트
25.956	BRUSH, STEERING COLUMN SHAFT 브러쉬
25.957	BRUSH HOLDER, STEERING COLUMN SHAFT 브러쉬홀더
25.958	PIVOT, TILT STEERING COLUMN ADJUSTOR ARM 피봇
25.959	PIN, TILT STEERING COLUMN ADJUSTOR ARM 핀
26.351	WASHER, STEERING ARM PIN 와셔
91.631	WASHER, STEERING COLUMN UPPER BRACKET FASTENER 와셔
92.885	NUT, STEERING COLUMN UPPER BRACKET FASTENER 너트
92.895	WASHER, STEERING COLUMN SUPPORT FASTENER 와셔
92.897	NUT, STEERING COLUMN SUPPORT FASTENER 너트
93.603	FASTENER, STEERING COLUMN TILTING SPRING BALL STUD 패스너
94.888	RETAINER, STEERING COLUMN ADJUSTOR 리테이너

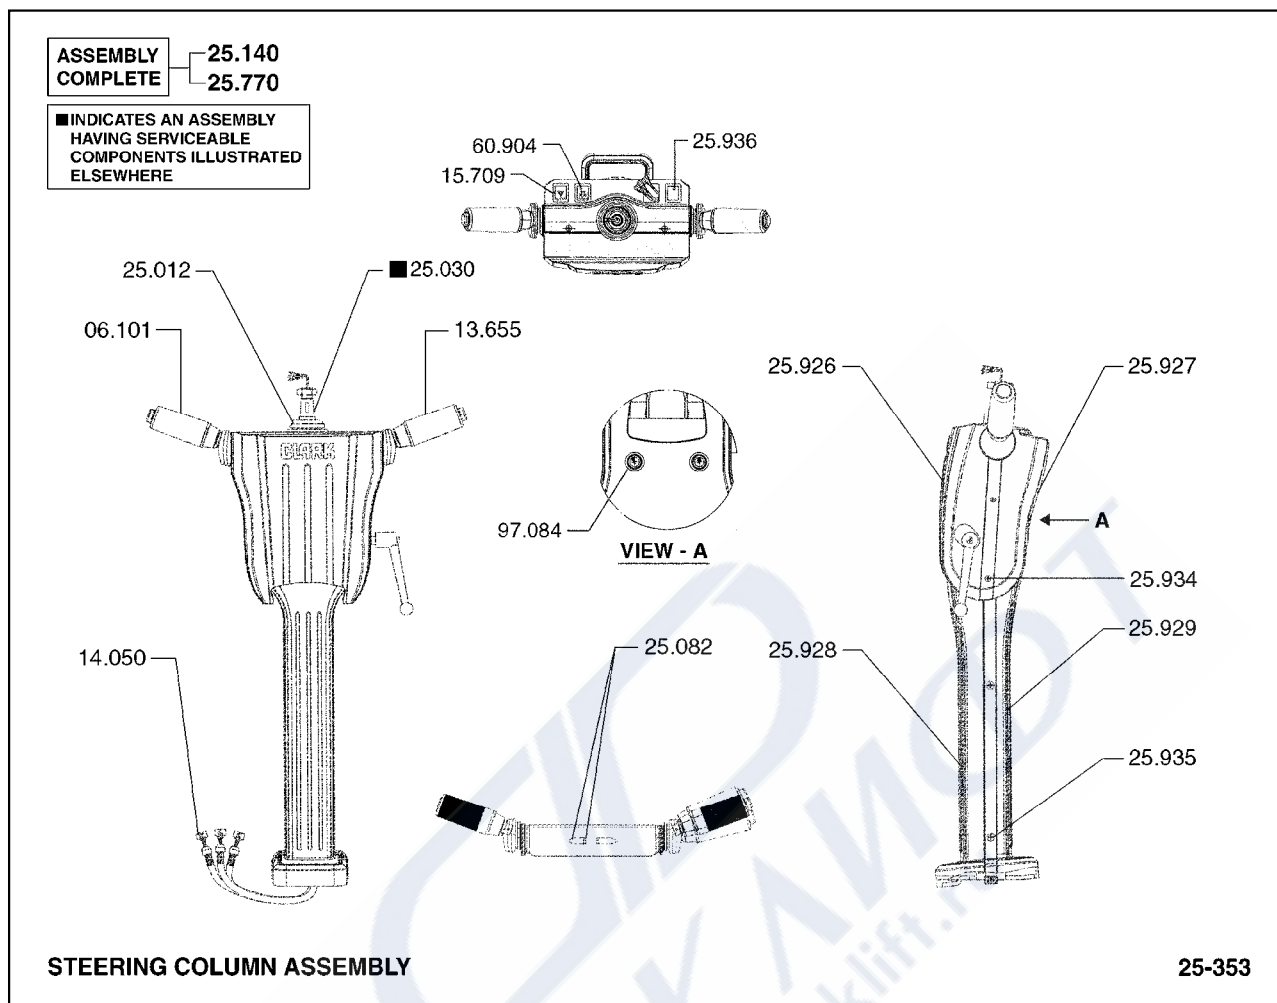 

06.101	LEVER ASSEMBLY, FORWARD & REVERSE 레버
13.655	SWITCH, TURN INDICATOR 스위치
14.050	HARNESS, CONTROL CIRCUIT WIRING 하네스
15.709	SWITCH, EMERGENCY 스위치
25.012	CUSHION, STEERING COLUMN 쿠션
25.030	SHAFT ASSEMBLY, STEERING COLUMN 샤프트
25.082	FASTENER, LEVER MOUNTING BRACKET 패스너
25.770	SHAFT & COLUMN ASSY, POWER STEERING (TILT) 샤프트& 컬럼
25.926	COVER, STEER COLUMN FRONT UPPER 커버

25.927	COVER, STEER COLUMN REAR UPPER 커버
25.928	COVER, STEER COLUMN FRONT LOWER 커버
25.929	COVER, STEER COLUMN REAR LOWER 커버
25.934	FASTENER, STEER COLUMN COVER 패스너
25.935	FASTENER, STEER COLUMN COVER 패스너
25.936	PLUG, STEER COLUMN SWITCH 플러그
60.904	SWITCH, STROBE LIGHT 스위치
97.084	FASTENER, STEER COLUMN COVER 패스너

 
■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

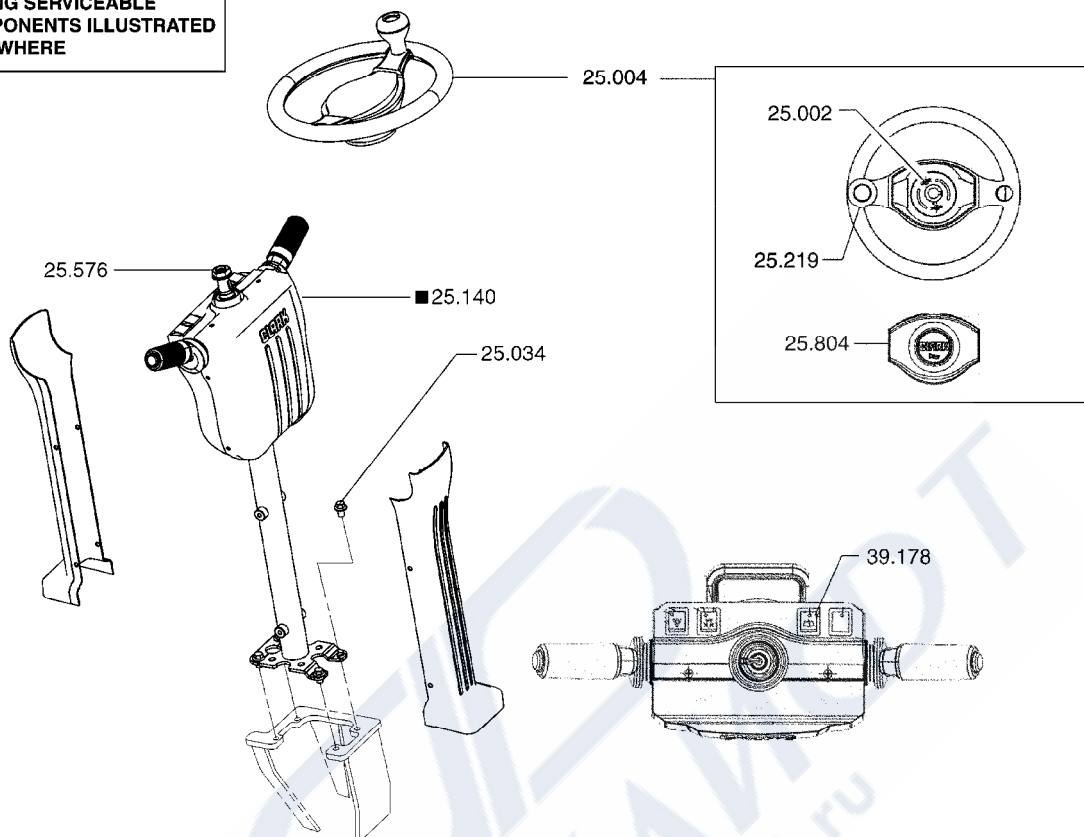

STEERING WHEEL & COLUMN MOUNTING

25-354

25.002	HORN BUTTON KIT 혼버튼키트
25.004	HAND WHEEL, STEERING GEAR 핸드휠
25.219	KNOB, STEERING HAND WHEEL SPINNER 노브
25.576	SPACER, STEERING HAND WHEEL 스페이서
25.770	SHAFT & COLUMN ASSY, POWER STEERING (TILT) 샤프트& 컬럼
25.785	FASTENER, TILT STEERING SHAFT & COLUMN ASSEMBLY 패스너
25.804	COVER, HANDLE CONTROL ASSEMBLY 커버
25.936	PLUG, STEER COLUMN SWITCH 플러그
39.178	SWITCH, WINDSHIELD WIPER 스위치

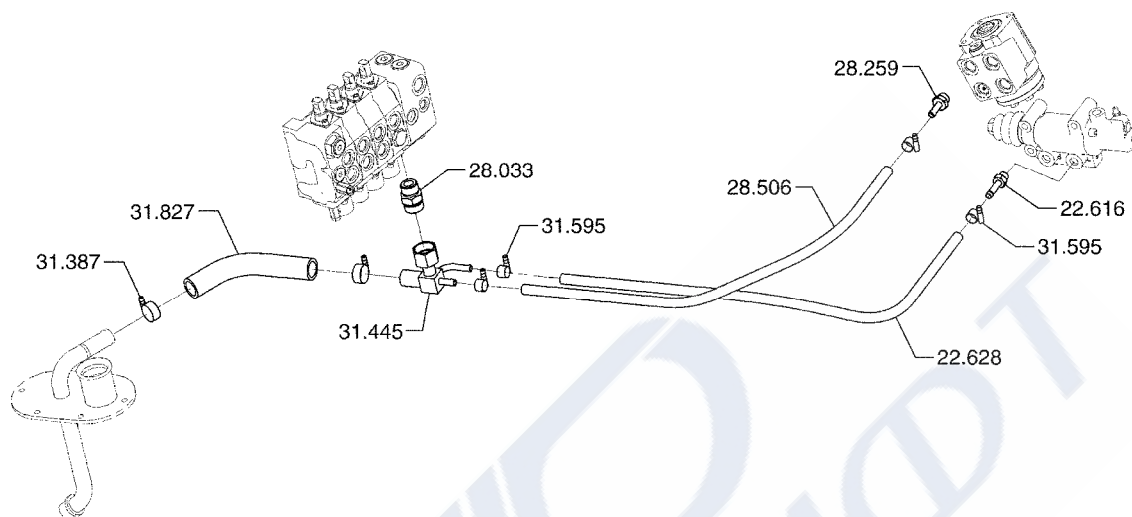 


HYDRAULIC RETURN LINES

26-157

22.616	FITTING, BRAKE ENERGIZER SUMP RETURN LINE 피팅
22.628	LINE, BRAKE LINE RETURN TO SUMP 라인
28.033	FITTING, SUMP RETURN 피팅
28.259	FITTING, SUMP RETURN LINE 피팅
28.506	LINE, SUMP RETURN 라인
31.387	CLAMP, MAIN VALVE TO SUMP LINE 클램프
31.445	FITTING, MAIN VALVE TO FILTER LINE 피팅
31.595	CLAMP, SUMP RETURN LINE FITTING 클램프
31.827	LINE, FILTER INLET 라인

 
■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

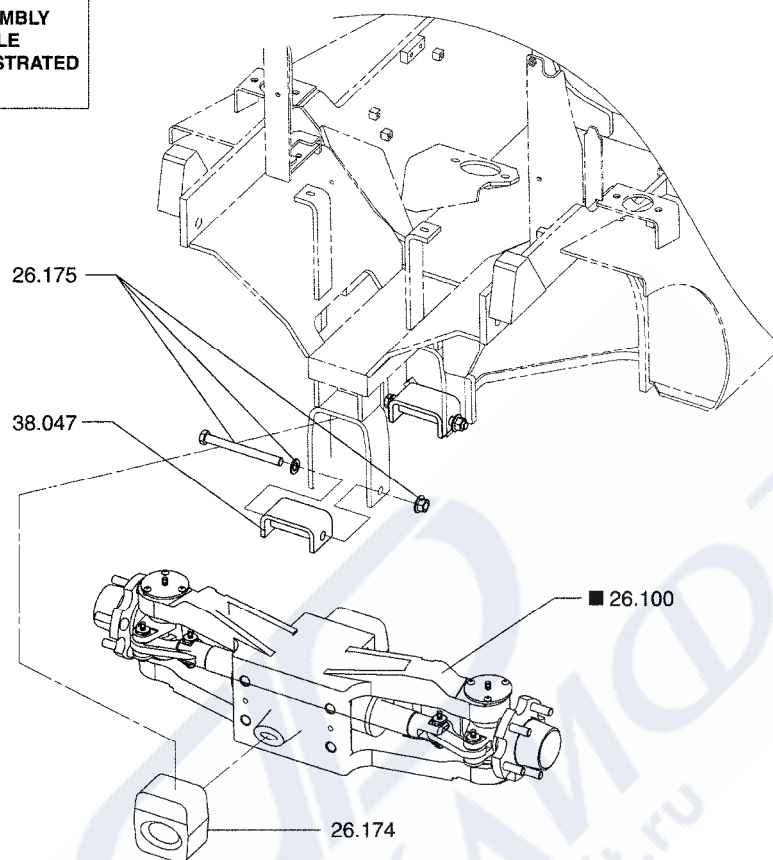


STEER AXLE MOUNTING

26-273

- | | |
|--------|---|
| 26.100 | AXLE ASSEMBLY, STEERING
스티어액슬 |
| 26.174 | SILENT BLOCK, AXLE MOUNTING (REAR)
사일런트블록 |
| 26.175 | FASTENER, SILENT BLOCK TO FRAME (REAR)
패스너 |
| 38.047 | BRACKET, STEER AXLE MOUNTING
브라켓 |

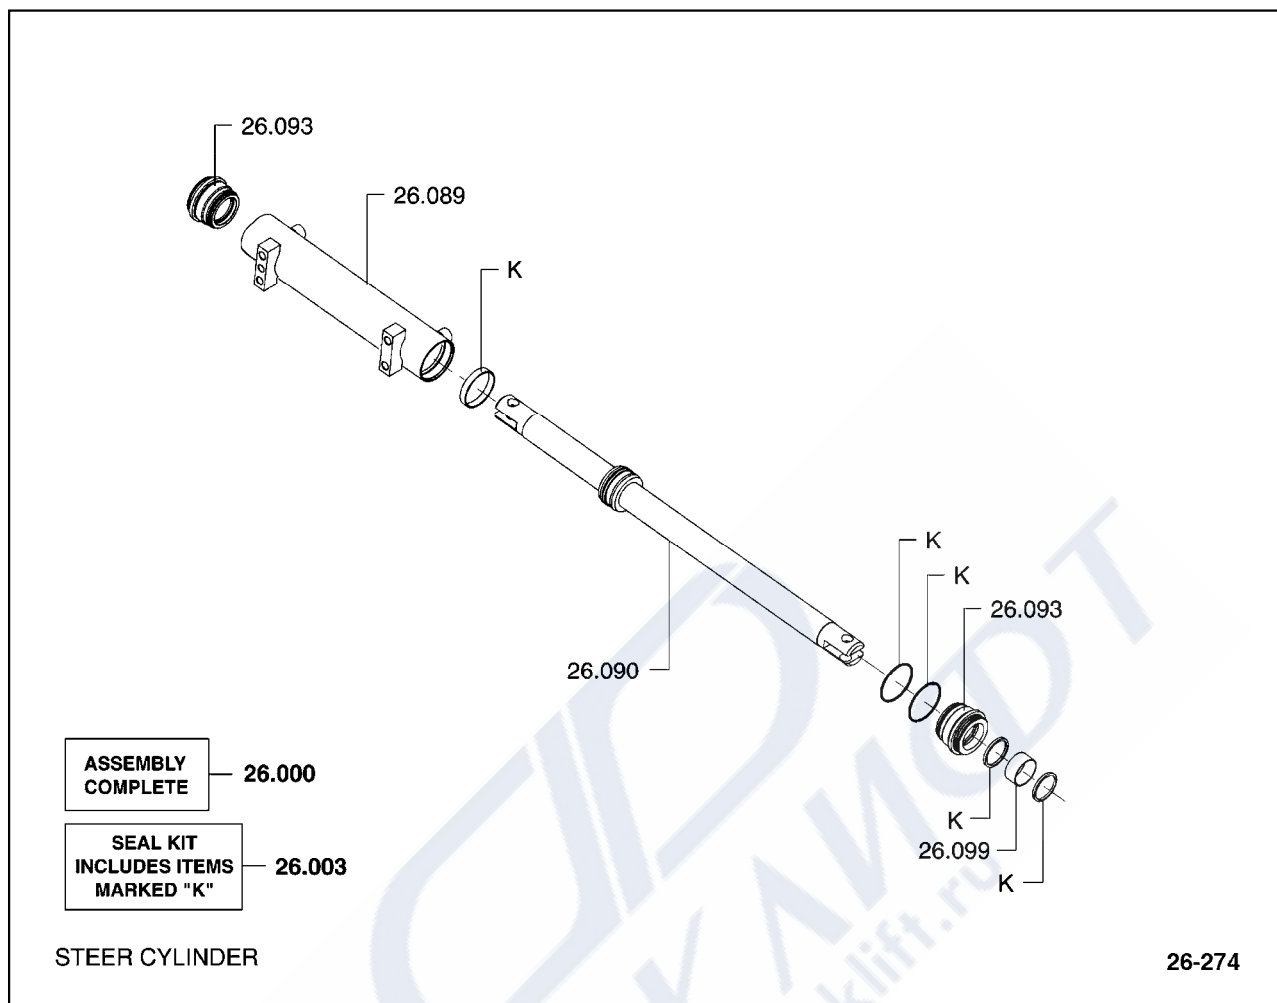 


26.000	CYLINDER ASSEMBLY, STEERING 실린더
26.003	SEAL KIT, PISTON ROD 씰키트
26.089	BARREL, STEERING CYLINDER 배럴
26.090	STEER CYLINDER PISTON 스티어실린더피스톤
26.093	GLAND, STEERING CYLINDER 그랜드
26.099	BUSHING, STEERING CYLINDER GLAND 부싱

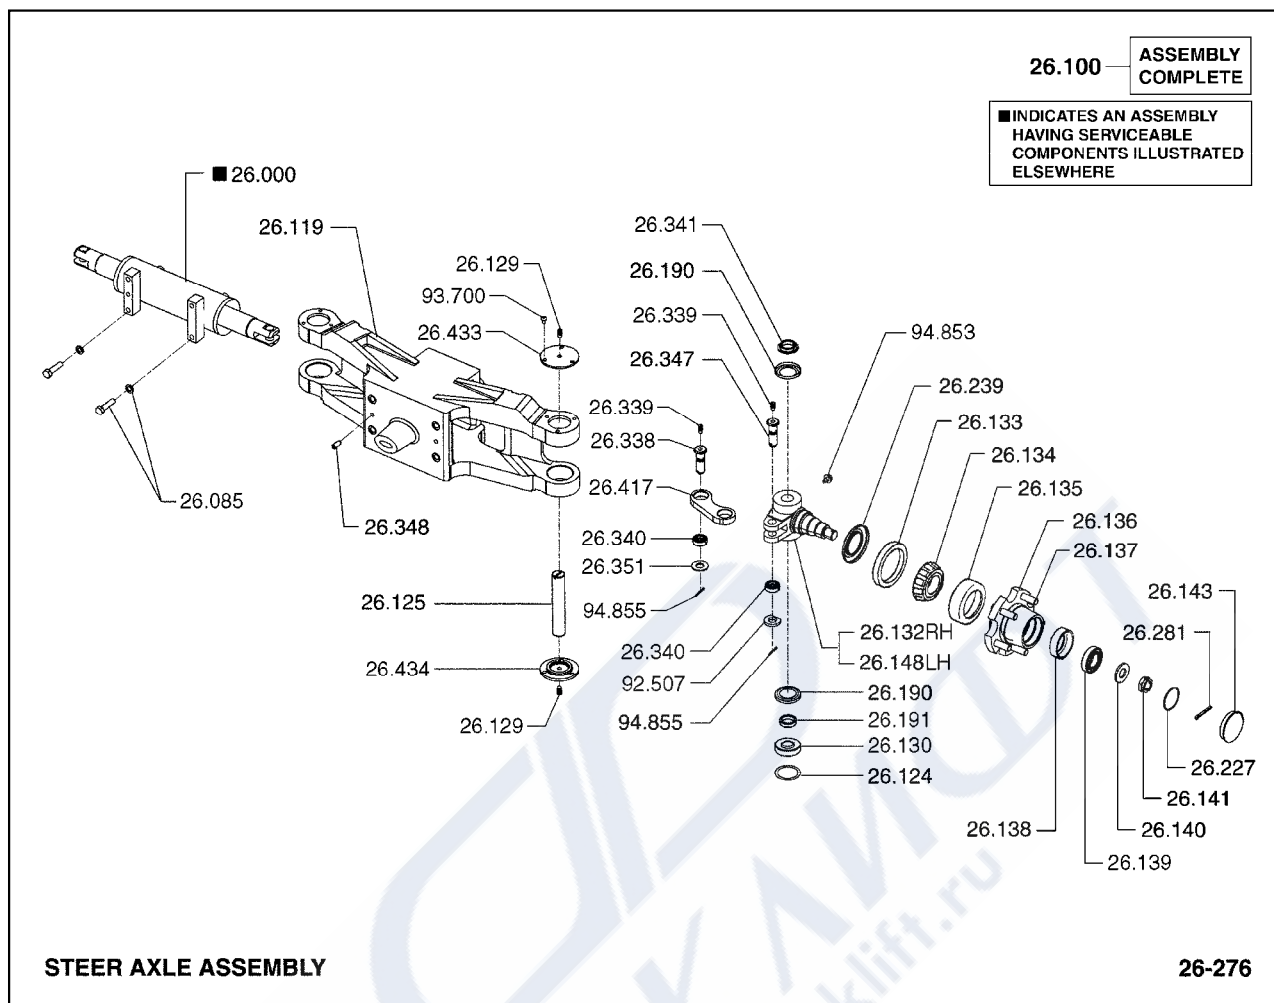 

26.000	CYLINDER ASSEMBLY, STEERING 실린더	26.139	CONE, STEER WHEEL HUB BEARING (OUTER) 콘
26.085	FASTENER, STEERING CYLINDER MOUNTING BRKT 패스너	26.140	WASHER, STEER WHEEL HUB BEARING THRUST 와셔
26.100	AXLE ASSEMBLY, STEERING 스티어액슬	26.141	FASTENER, STEER WHEEL HUB 패스너
26.119	AXLE, STEER 액슬	26.143	CAP, STEER WHEEL HUB 캡
26.124	SHIM, STEER AXLE KNUCKLE 심	26.148	KNUCKLE, STEER AXLE (LH) 너트
26.125	PIN, STEER AXLE KNUCKLE 핀	26.190	SEAL, STEER AXLE KNUCKLE OIL 씰
26.129	FITTING - LUB, STEER AXLE KNUCKLE 피팅	26.191	PLUG - EXPANSION, STEER AXLE KNUCKLE PIN 플러그
26.130	BEARING, STEER AXLE KNUCKLE PIN 베어링	26.227	SEAL, STEER AXLE FORK HOUSING 씰
26.132	KNUCKLE, STEER AXLE (RH) 너트	26.239	SEAL, STEER AXLE FORK COVER 씰
26.133	SEAL, STEER WHEEL HUB 씰	26.281	RETAINER, STEER AXLE HUB BRG KNUCKLE NUT 리테이너
26.134	CONE, STEER WHEEL HUB BEARING (INNER) 콘	26.338	PIN, STEERING ARM 핀
26.135	CUP, STEER WHEEL HUB BEARING (INNER) 컵	26.339	LUB-FITTING, STEERING ARM 윤활피팅
26.136	HUB & CUP, STEER WHEEL 허브&컵	26.340	BEARING, STEERING ARM PIN 베어링
26.137	FASTENER, STEER WHEEL 패스너	26.341	SPACER, STEER AXLE PIVOT BUSHING 스페이서
26.138	CUP, STEER WHEEL HUB BEARING (OUTER) 컵	26.347	PIN, STEER ARM 핀

26.348	LOCATOR, STEER CYLINDER 로케이터
26.351	WASHER, STEERING ARM PIN 와셔
26.417	ARM, STEERING 암
26.433	COVER, STEER AXLE KNUCKLE PIVOT (TOP) 커버
26.434	COVER, STEER AXLE KNUCKLE PIVOT (BOTTOM) 커버
92.507	WASHER, STEERING ARM FASTENER 와셔
93.700	FASTENER, STEER AXLE KNUCKLE PIN COVER 패스너
94.853	FASTENER, STEER AXLE KNUCKLE PIN 패스너
94.855	RETAINER, STEERING ARM PIN 리테이너

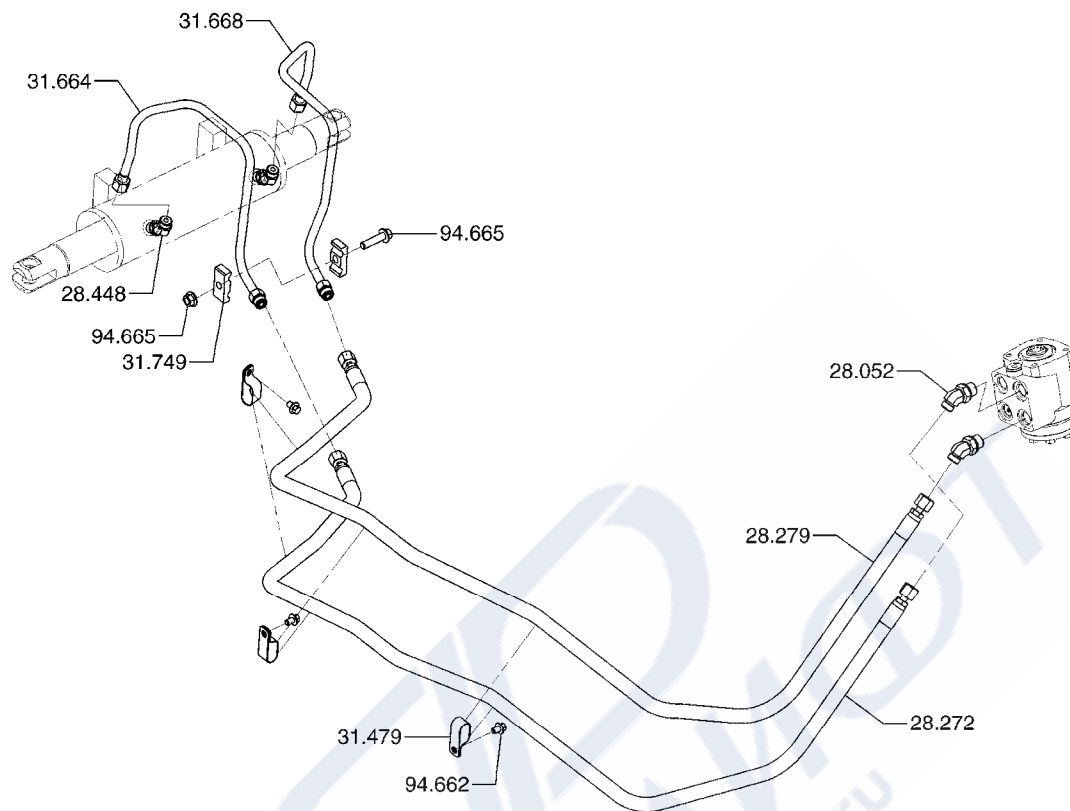 


STEERING LINES

26-277

28.052	FITTING, STEERING GEAR 피팅
28.272	LINE, STEER CYLINDER INLET 라인
28.279	LINE, STEER CYLINDER INLET 라인
28.448	FITTING, STEER CYLINDER LINE 피팅
31.479	CLAMP, STEERING LINES 클램프
31.664	LINE, STEERING CYLINDER ANCHOR PORT 라인
31.668	LINE, STEERING CYLINDER ROD PORT 라인
31.749	CLAMP, POWER STEERING LINES 클램프
94.662	FASTENER, POWER STEERING LINES CLAMP 패스너

 94.665 FASTENER, POWER STEERING LINES CLAMP
패스너




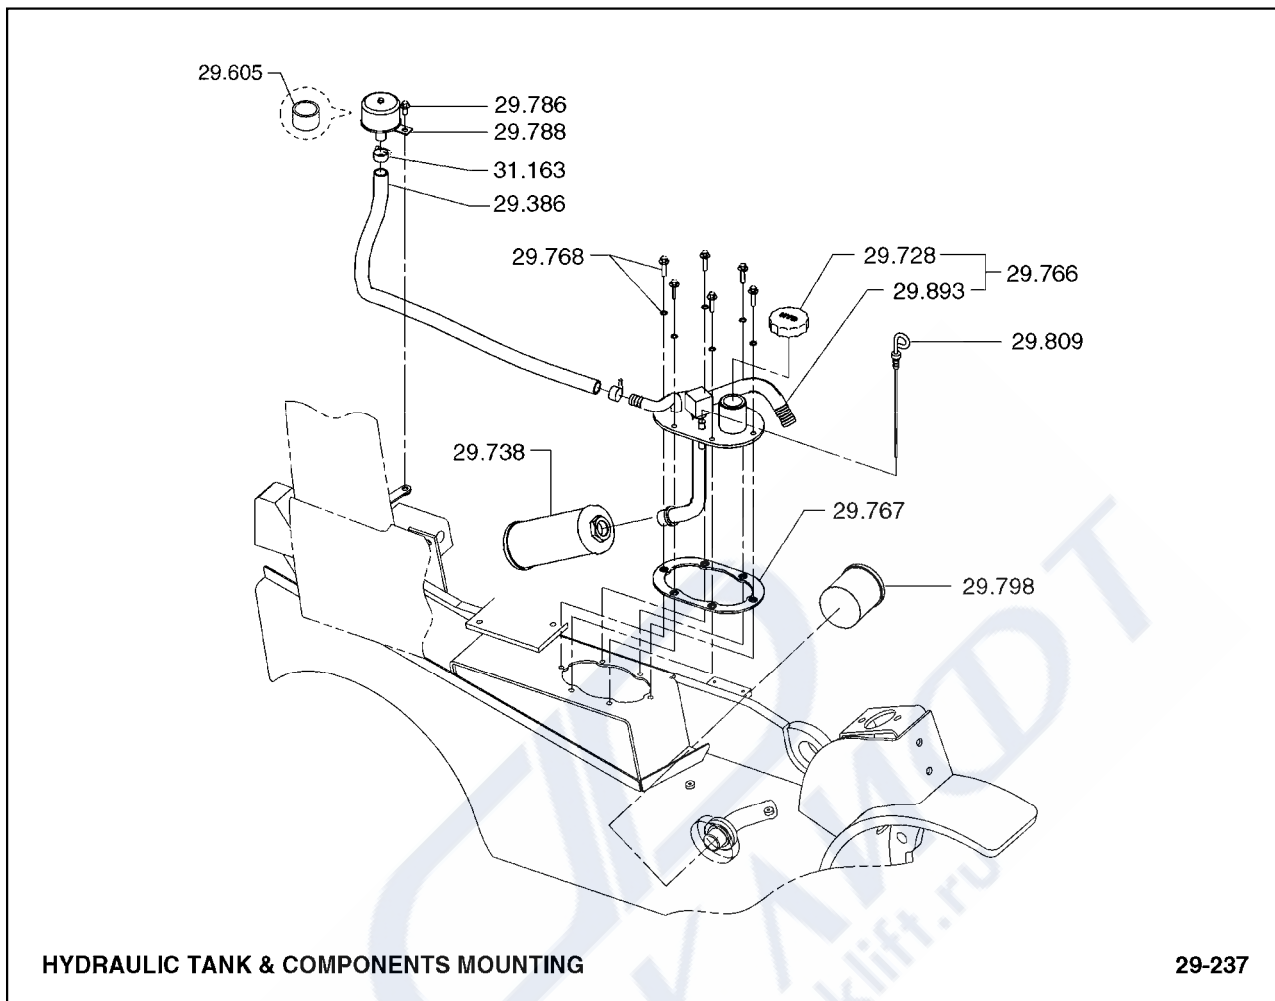


29.386	LINE, SUMP BREATHER 라인
29.605	FILTER, AIR BREATHER 필터
29.728	CAP, HYDRAULIC SUMP FILLER 캡
29.738	FILTER ASSEMBLY, HYDRAULIC SUMP 필터
29.766	COVER, SUMP TANK 커버
29.767	SEAL, SUMP TANK COVER 셀
29.768	FASTENER, SUMP TANK COVER 패스너
29.786	FASTENER, SUMP BREATHER 패스너
29.788	BREATHER, SUMP 브리더

29.798	SCREEN, HYDRAULIC SUMP PRE FILTER 스크린
29.809	DIPSTICK, SUMP LEVEL 딤스틱
29.893	PLATE, HYDRAULIC SUMP 플레이트
31.163	CLAMP, SUMP RETURN LINE 클램프




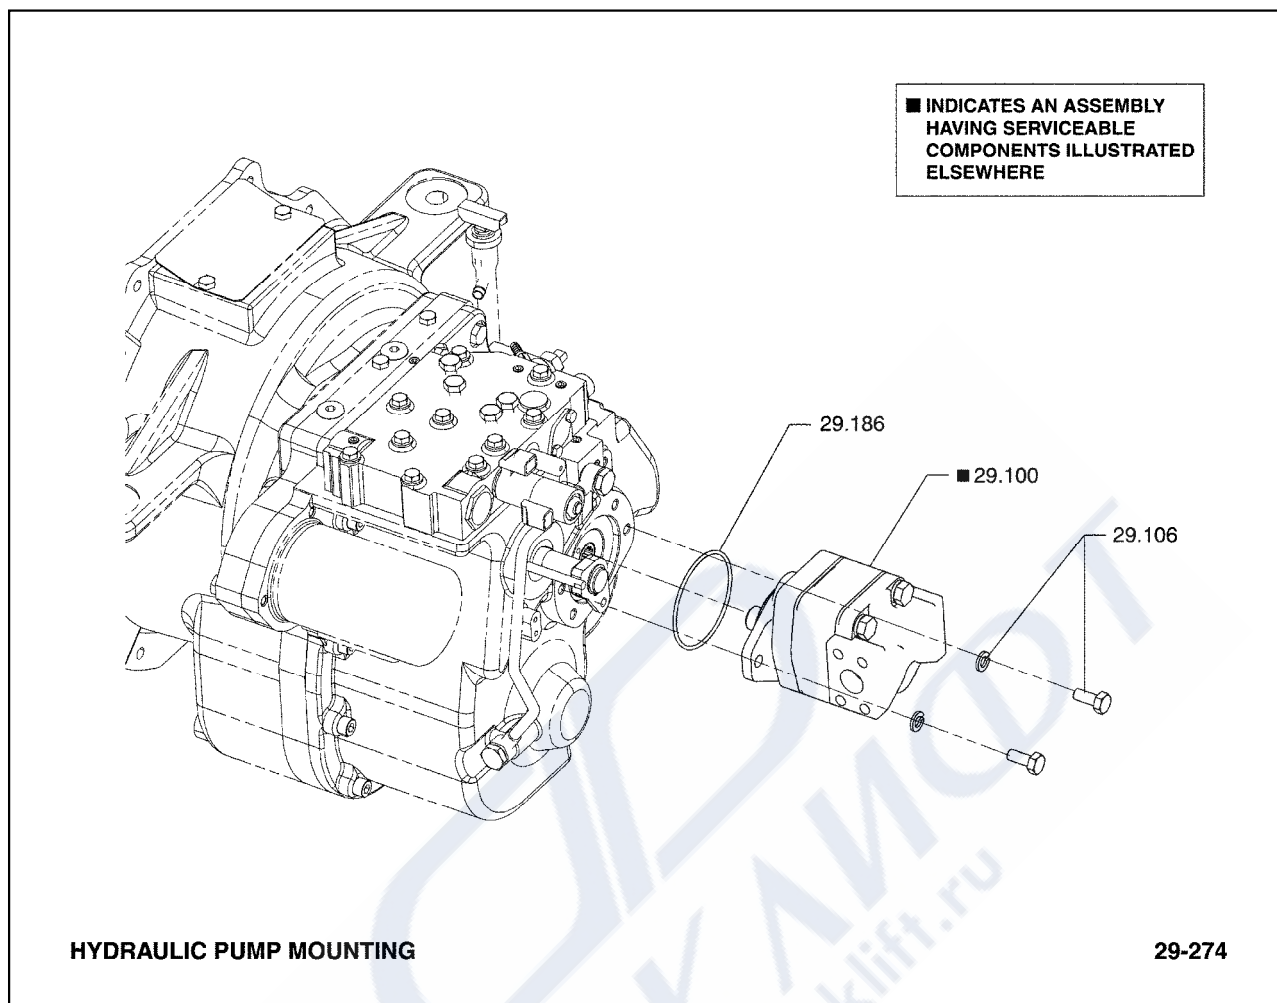 

- | | |
|--------|--------------------------------|
| 29.100 | PUMP ASSEMBLY, HYDRAULIC
펌프 |
| 29.106 | FASTENER, PUMP TO PLATE
패스너 |
| 29.186 | SEAL, PUMP SHAFT
씰 |

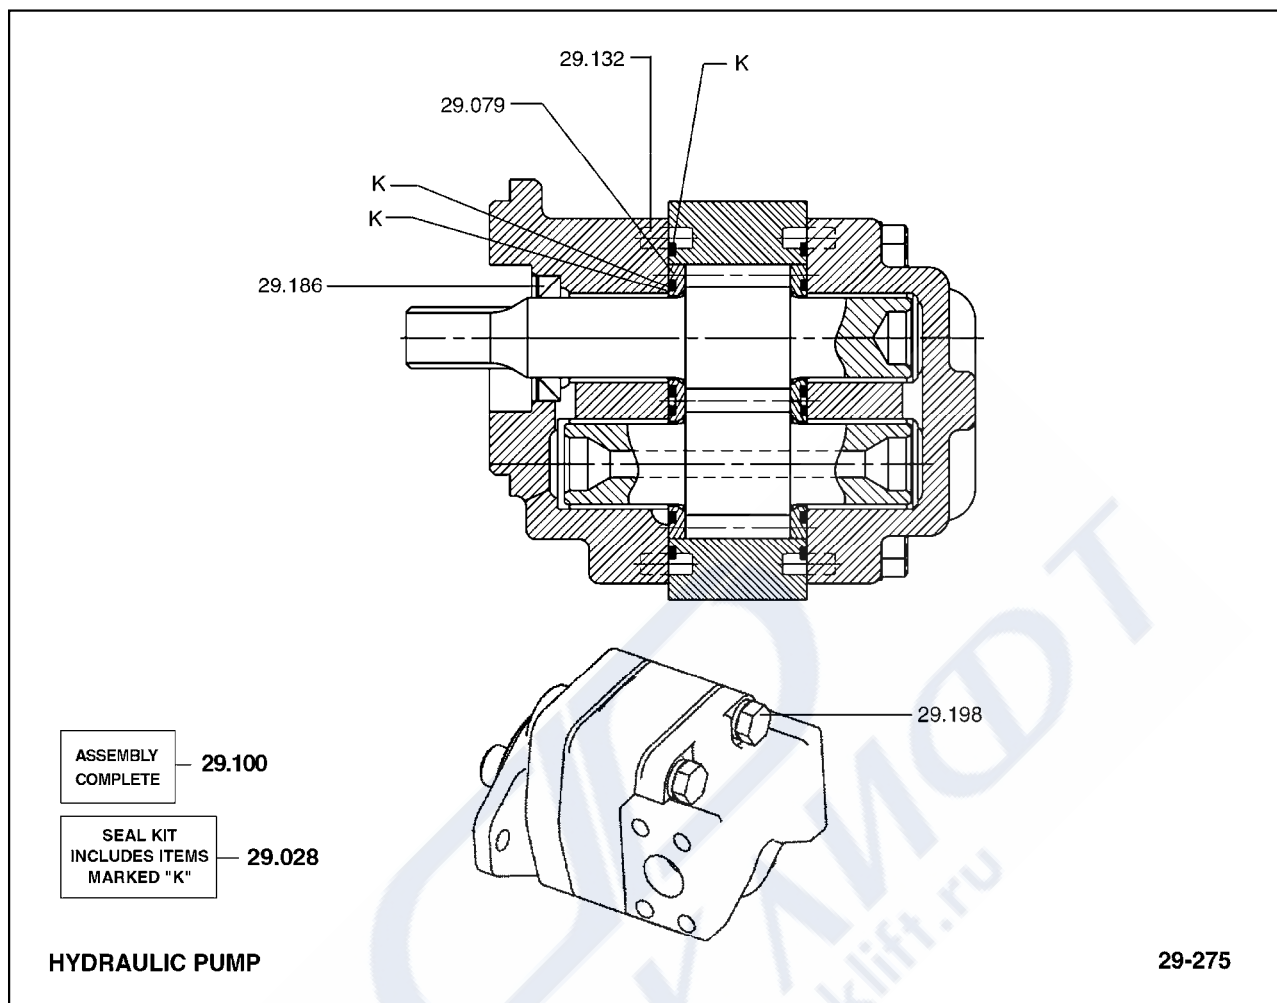 



29.028	SEAL KIT, HYDRAULIC UNIT PUMP 씰키트
29.079	PLATE, HYDRAULIC PUMP GEAR THRUST 플레이트
29.100	PUMP ASSEMBLY, HYDRAULIC 펌프
29.132	PIN, PUMP RING LOCATING 핀
29.186	SEAL, PUMP SHAFT 씰
29.198	FASTENER, PUMP HOUSING 패스너

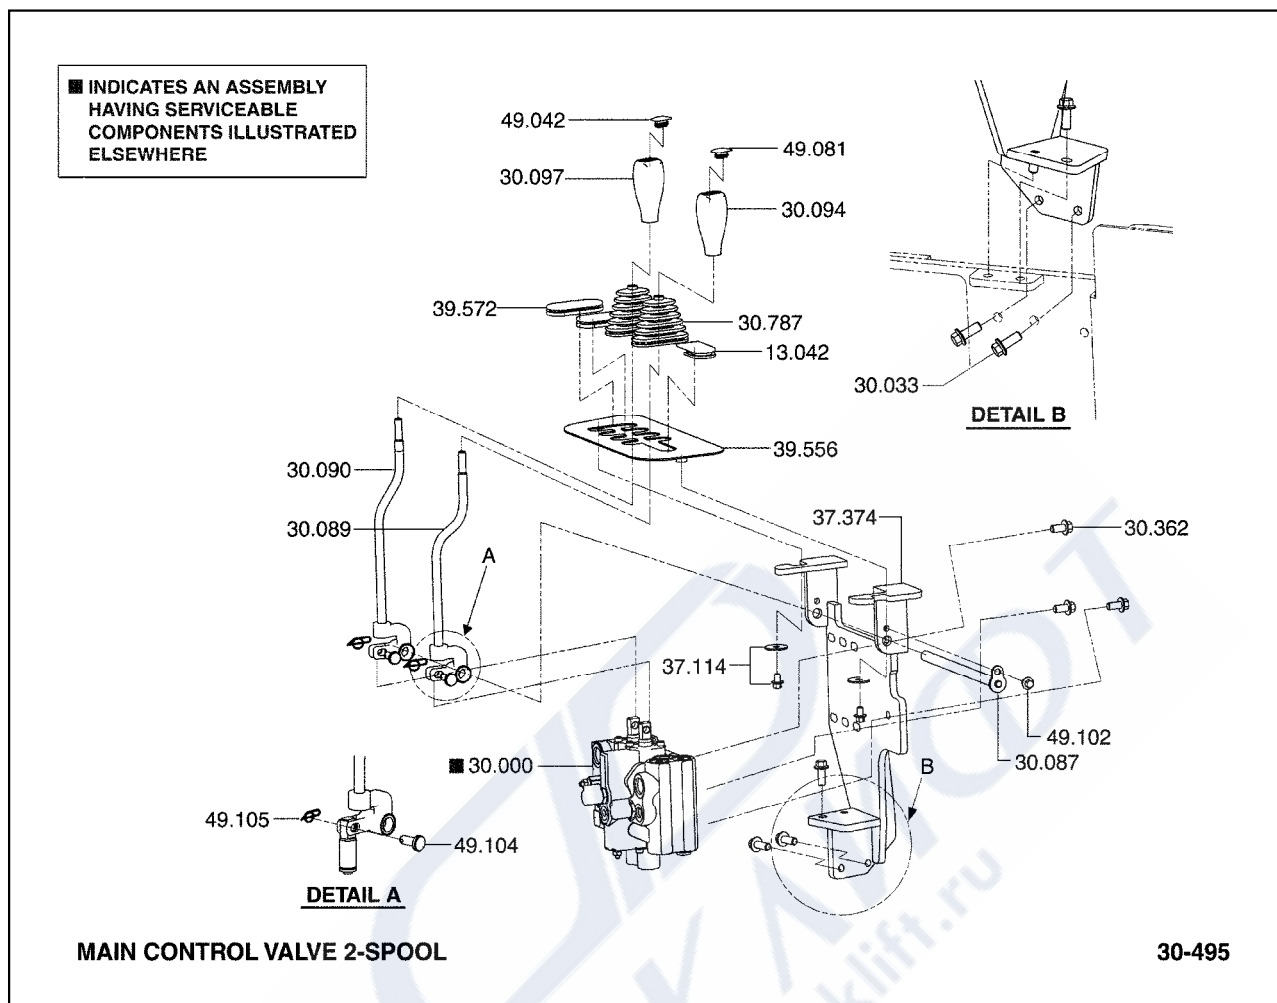 

13.042	PLUG - BUTTON, PANEL HOLE 플러그
30.000	VALVE ASSEMBLY, HYDRAULIC 밸브
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀
30.089	LEVER, LIFT CONTROL 레버
30.090	LEVER, TILT CONTROL 레버
30.094	KNOB, LIFT CONTROL LEVER 노브
30.097	KNOB, TILT CONTROL LEVER 노브
30.362	FASTENER, VALVE MOUNTING PLATE 패스너


30.787	BOOT, VALVE CONTROL LEVER 부트
37.114	FASTENER, VALVE LINKAGE ACCESS COVER 패스너
37.374	COVER, HYDRAULIC VALVE 커버
39.556	COVER, VALVE LINKAGE ACCESS 커버
39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너

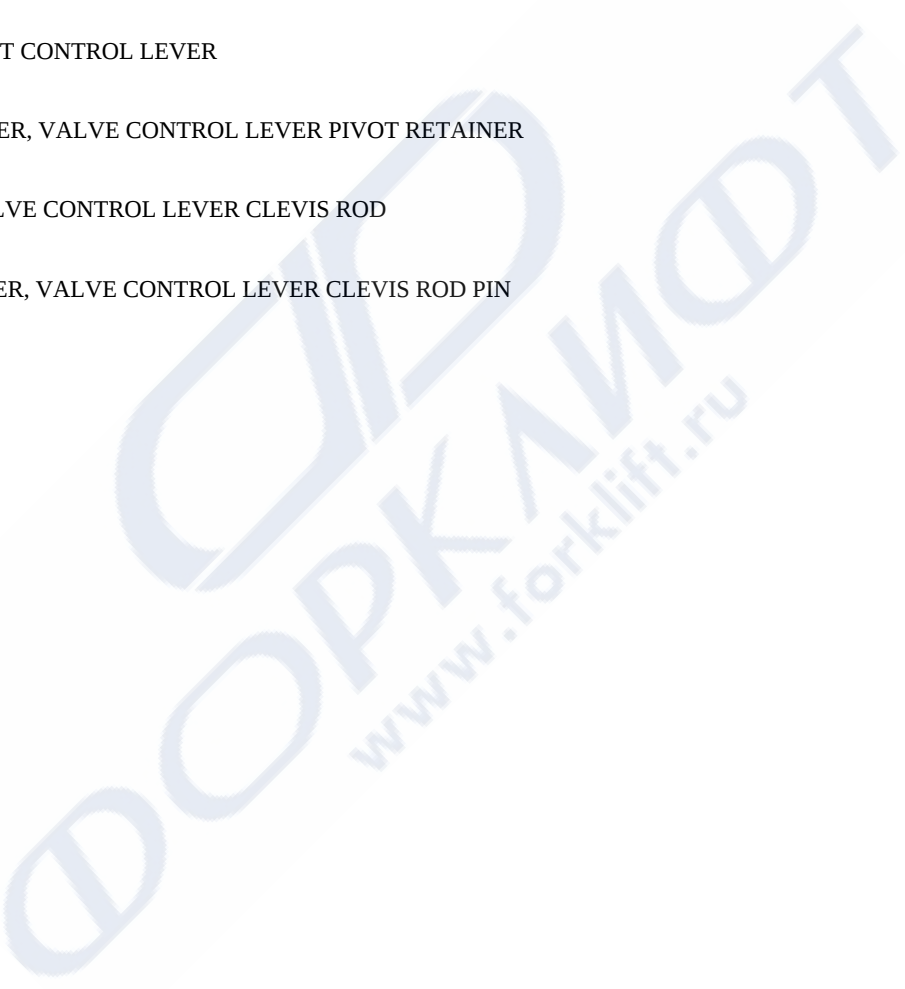 

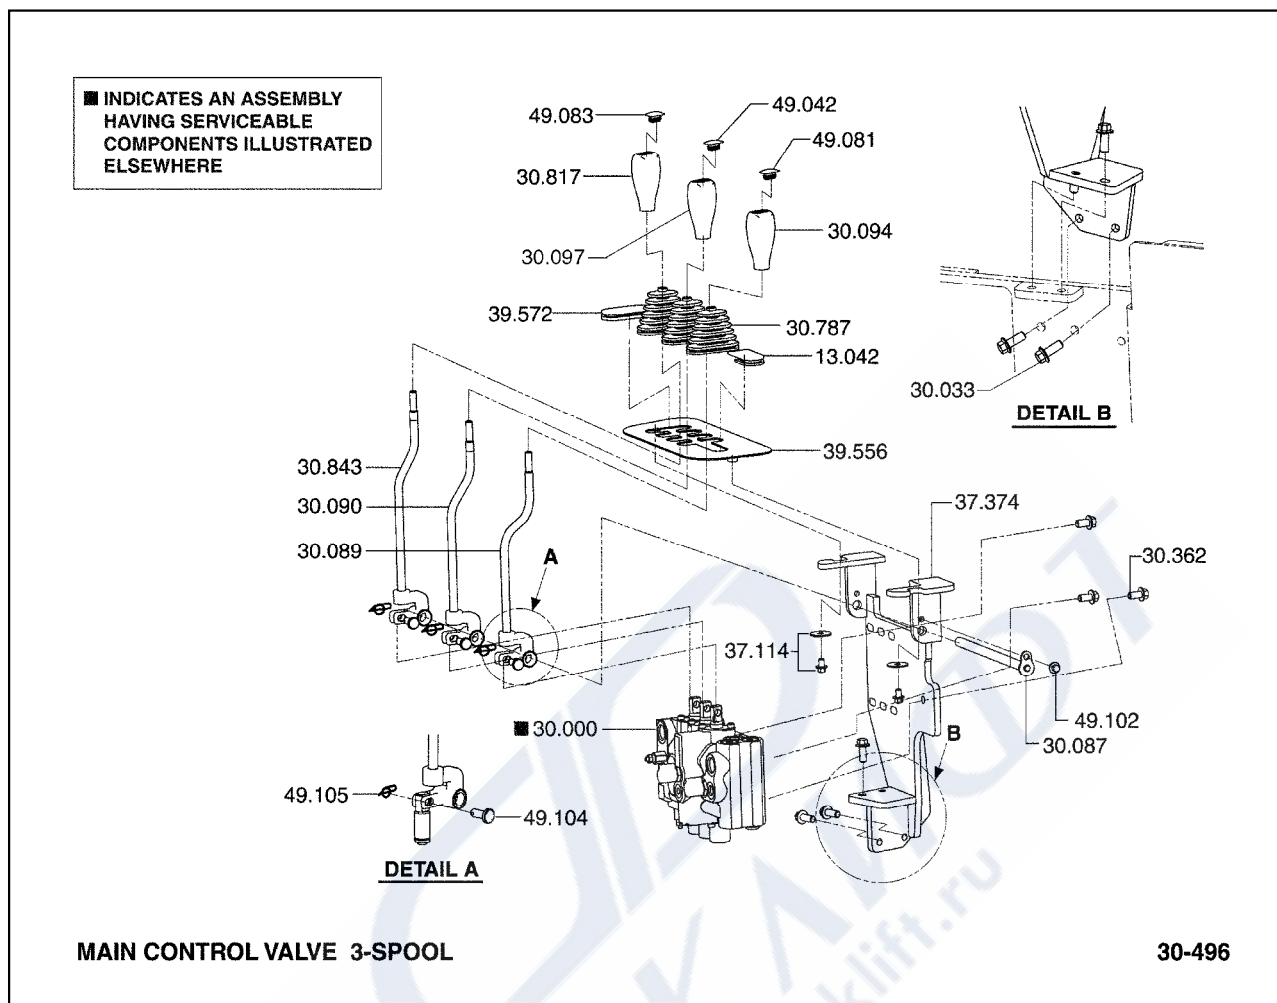 


13.042	PLUG - BUTTON, PANEL HOLE 플러그
30.000	VALVE ASSEMBLY, HYDRAULIC 밸브
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀
30.089	LEVER, LIFT CONTROL 레버
30.090	LEVER, TILT CONTROL 레버
30.094	KNOB, LIFT CONTROL LEVER 노브
30.097	KNOB, TILT CONTROL LEVER 노브
30.362	FASTENER, VALVE MOUNTING PLATE 패스너

30.787	BOOT, VALVE CONTROL LEVER 부트
30.817	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버
37.114	FASTENER, VALVE LINKAGE ACCESS COVER 패스너
37.374	COVER, HYDRAULIC VALVE 커버
39.556	COVER, VALVE LINKAGE ACCESS 커버
39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.083	CAP, VALVE CONTROL LEVER DECAL 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너

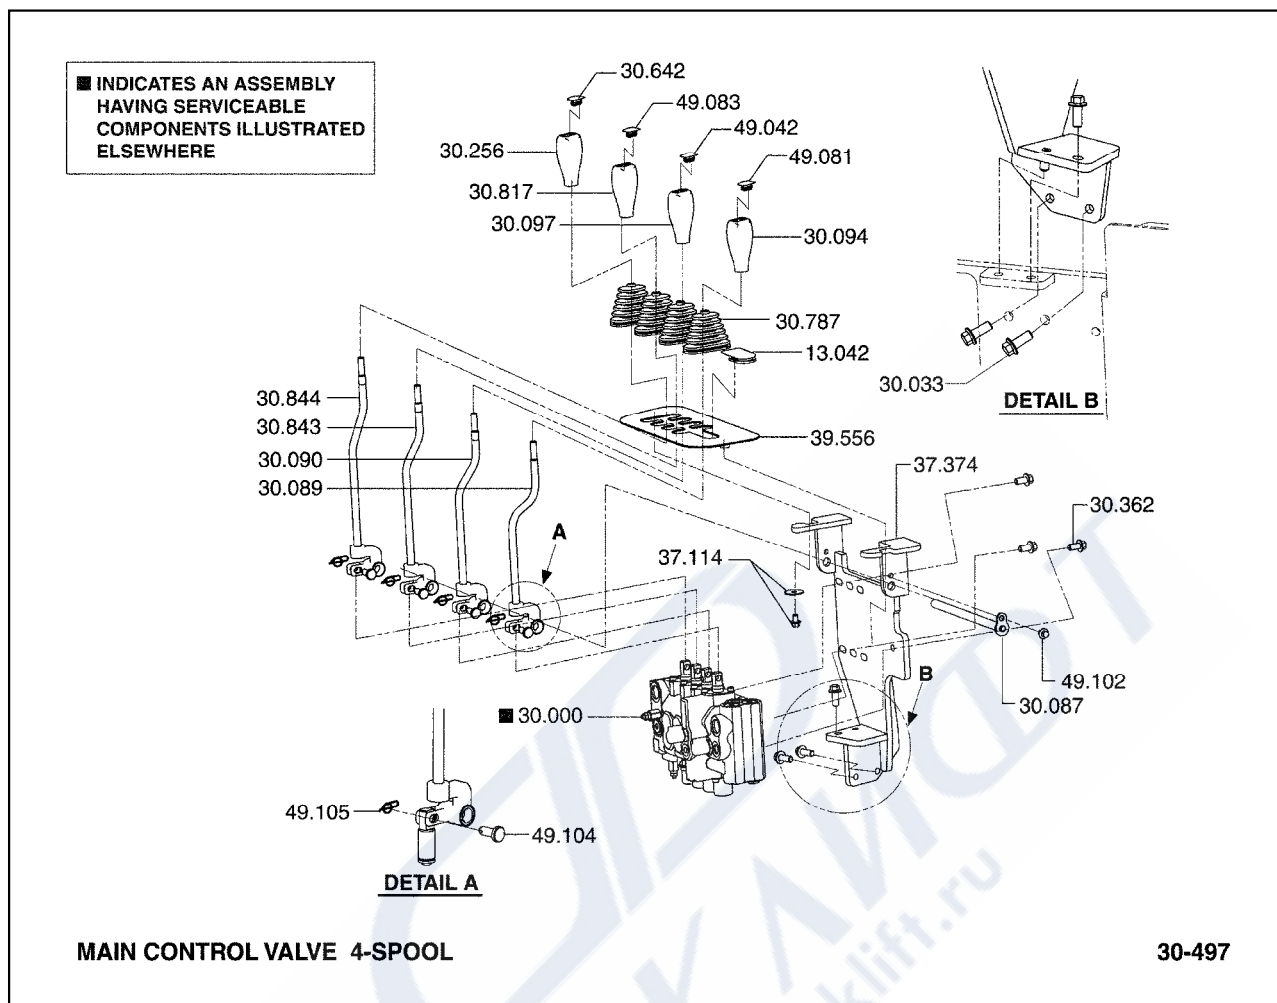 


13.042	PLUG - BUTTON, PANEL HOLE 플러그
30.000	VALVE ASSEMBLY, HYDRAULIC 밸브
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀
30.089	LEVER, LIFT CONTROL 레버
30.090	LEVER, TILT CONTROL 레버
30.094	KNOB, LIFT CONTROL LEVER 노브
30.097	KNOB, TILT CONTROL LEVER 노브
30.256	KNOB, AUXILIARY VALVE CONTROL LEVER 노브

30.362	FASTENER, VALVE MOUNTING PLATE 패스너
30.642	CAP, AUXILIARY VALVE SPOOL 캡
30.787	BOOT, VALVE CONTROL LEVER 부트
30.817	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버
30.844	LEVER, AUXILIARY VALVE CONTROL (2ND AUX) 레버
37.114	FASTENER, VALVE LINKAGE ACCESS COVER 패스너
37.374	COVER, HYDRAULIC VALVE 커버
39.556	COVER, VALVE LINKAGE ACCESS 커버
49.042	CAP, TILT CONTROL LEVER 캡
49.081	CAP, LIFT CONTROL LEVER 캡
49.083	CAP, VALVE CONTROL LEVER DECAL 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.104	PIN, VALVE CONTROL LEVER CLEVIS ROD 핀
49.105	RETAINER, VALVE CONTROL LEVER CLEVIS ROD PIN 리테이너

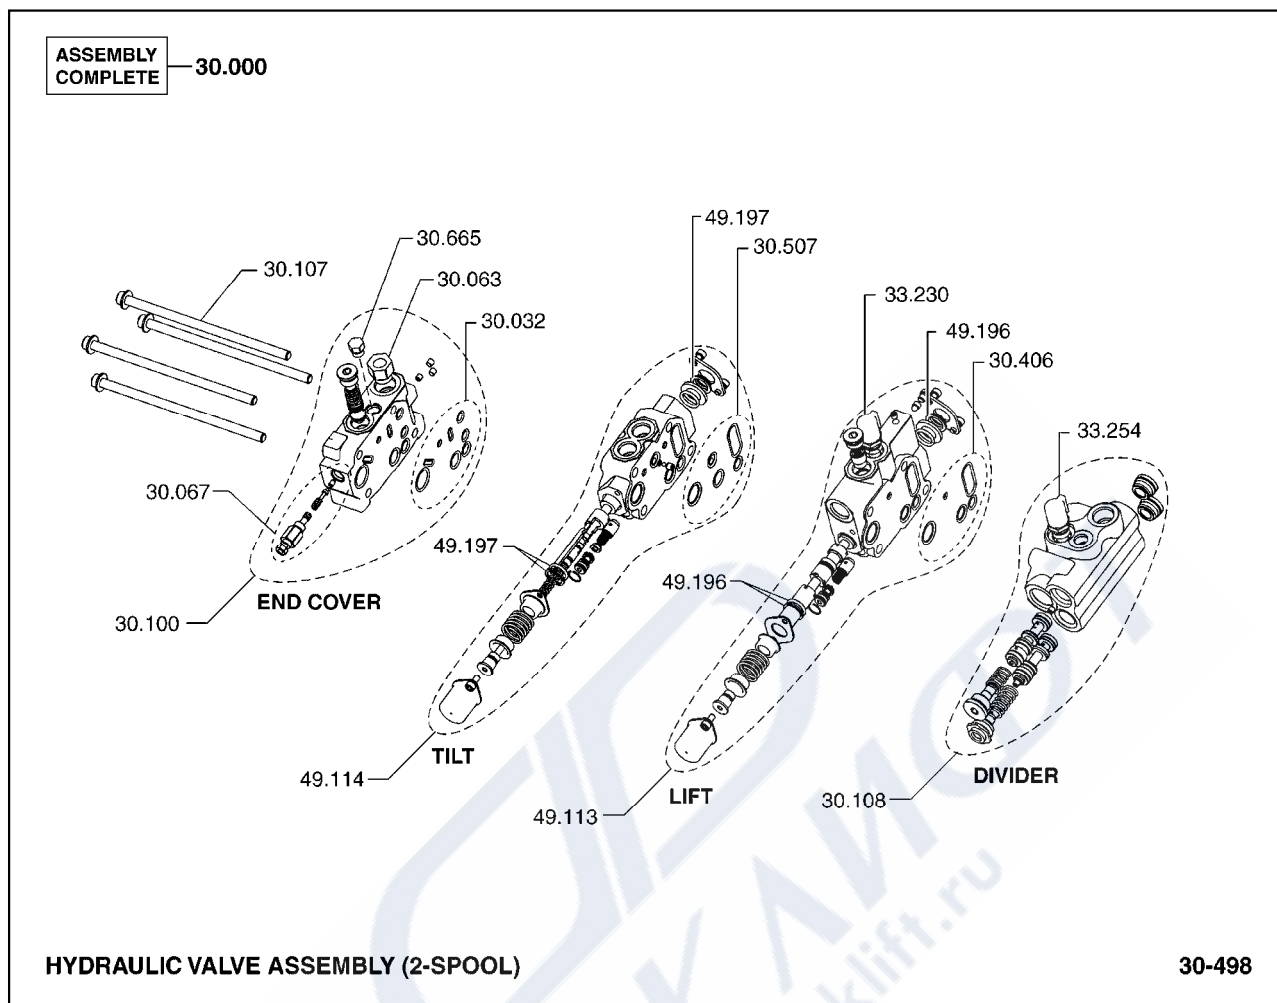 


30.000	VALVE ASSEMBLY, HYDRAULIC 밸브
30.032	SEAL KIT, HYDRAULIC VALVE SECTION (INLET) 씰키트
30.063	PLUG, INLET SECTION PRESSURE PORT 플러그
30.067	RELIEF VALVE KIT, VALVE INLET SECTION 릴리프밸브
30.100	INLET SECTION, HYDRAULIC VALVE 인렛섹션
30.107	FASTENER, VALVE THRU 패스너
30.108	OUTLET SECTION, HYDRAULIC VALVE 아웃렛섹션
30.406	SEAL KIT, HYDRAULIC VALVE (LIFT) 씰키트
30.507	SEAL KIT, HYDRAULIC VALVE (TILT) 씰키트

30.665	PLUG, INLET SECTION PRESSURE PORT 플러그
33.230	VALVE ASSEMBLY, LIFT SOLENOID 밸브
33.254	SOLENOID VALVE, DEVICE BY-PASS 솔레노이드밸브
49.113	LIFT SECTION, HYDRAULIC VALVE 리프트섹션
49.114	TILT SECTION, HYDRAULIC VALVE 틸트섹션
49.196	SPOOL SEAL KIT, LIFT SECTION 스풀씰키트
49.197	SPOOL SEAL KIT, TILT SECTION 스풀씰키트

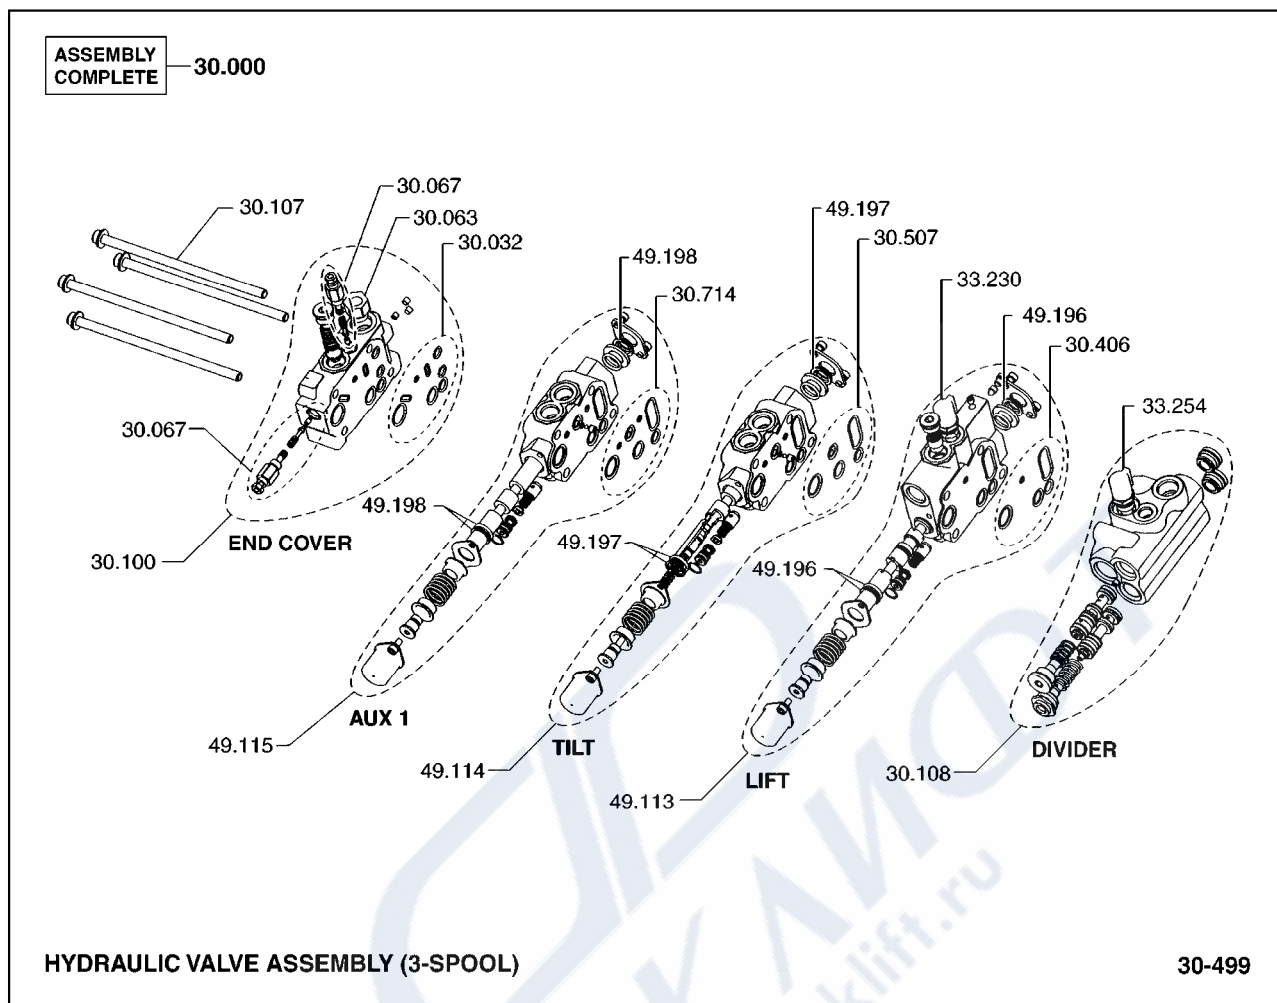 


30.000	VALVE ASSEMBLY, HYDRAULIC 밸브
30.032	SEAL KIT, HYDRAULIC VALVE SECTION (INLET) 씰키트
30.063	PLUG, INLET SECTION PRESSURE PORT 플러그
30.067	RELIEF VALVE KIT, VALVE INLET SECTION 릴리프밸브
30.100	INLET SECTION, HYDRAULIC VALVE 인렛섹션
30.107	FASTENER, VALVE THRU 패스너
30.108	OUTLET SECTION, HYDRAULIC VALVE 아웃렛섹션
30.406	SEAL KIT, HYDRAULIC VALVE (LIFT) 씰키트
30.507	SEAL KIT, HYDRAULIC VALVE (TILT) 씰키트

30.714	SEAL KIT, HYDRAULIC VALVE SECTION (AUX) 씰키트
33.230	VALVE ASSEMBLY, LIFT SOLENOID 밸브
33.254	SOLENOID VALVE, DEVICE BY-PASS 솔레노이드밸브
49.113	LIFT SECTION, HYDRAULIC VALVE 리프트섹션
49.114	TILT SECTION, HYDRAULIC VALVE 틸트섹션
49.115	AUX SECTION, HYDRAULIC VALVE 보조섹션
49.196	SPOOL SEAL KIT, LIFT SECTION 스풀씰키트
49.197	SPOOL SEAL KIT, TILT SECTION 스풀씰키트
49.198	SPOOL SEAL KIT, AUX SECTION 스풀씰키트

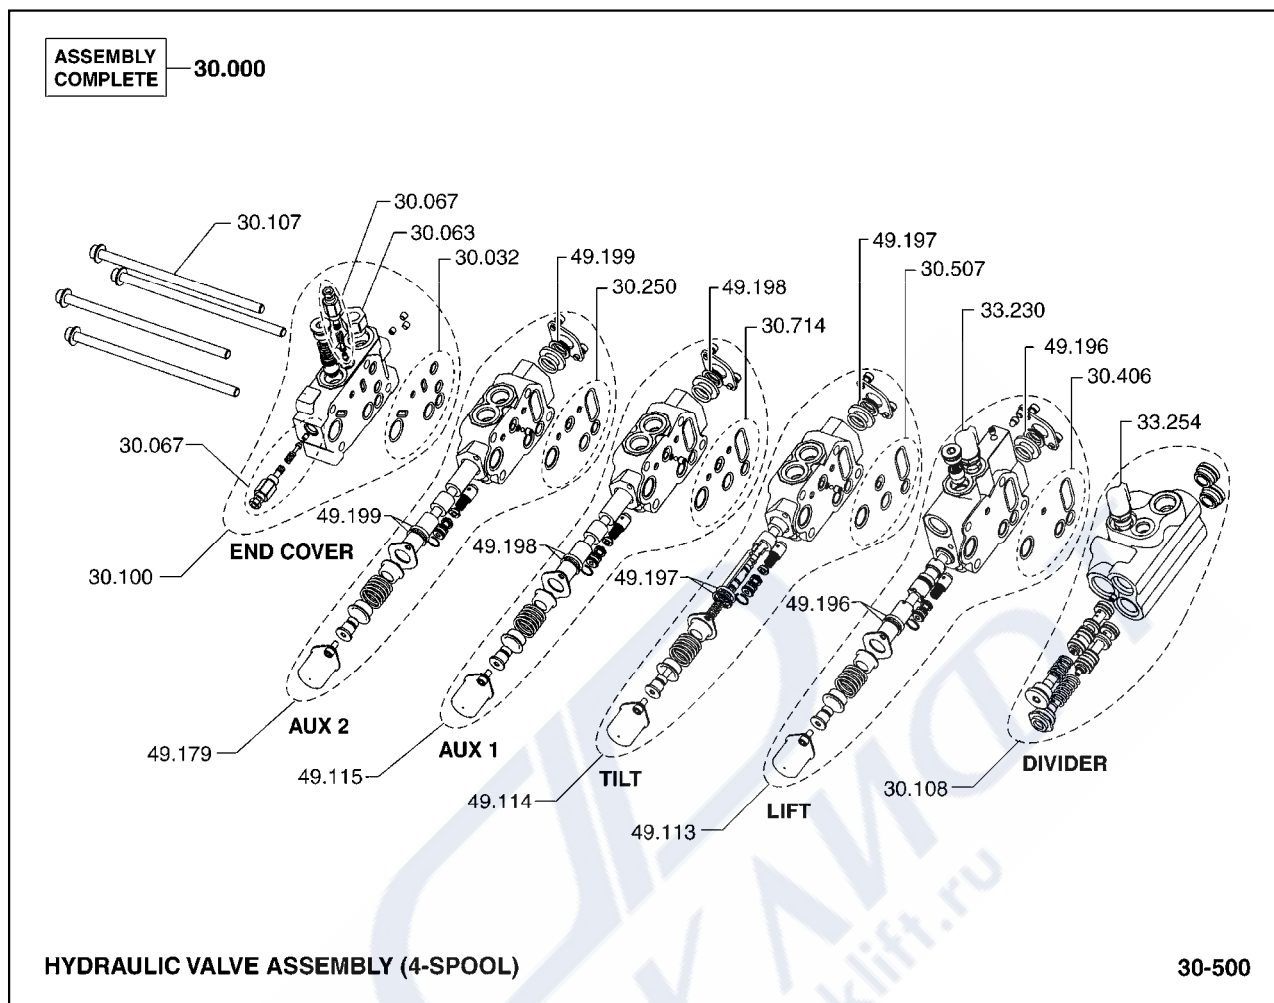 

30.000	VALVE ASSEMBLY, HYDRAULIC 밸브
30.032	SEAL KIT, HYDRAULIC VALVE SECTION (INLET) 씰키트
30.063	PLUG, INLET SECTION PRESSURE PORT 플러그
30.067	RELIEF VALVE KIT, VALVE INLET SECTION 릴리프밸브
30.100	INLET SECTION, HYDRAULIC VALVE 인렛섹션
30.107	FASTENER, VALVE THRU 패스너
30.108	OUTLET SECTION, HYDRAULIC VALVE 아웃렛섹션
30.250	SEAL KIT, HYDRAULIC VALVE SECTION (AUX) 씰키트
30.406	SEAL KIT, HYDRAULIC VALVE (LIFT) 씰키트


30.507	SEAL KIT, HYDRAULIC VALVE (TILT) 씰키트
30.714	SEAL KIT, HYDRAULIC VALVE SECTION (AUX) 씰키트
33.230	VALVE ASSEMBLY, LIFT SOLENOID 밸브
33.254	SOLENOID VALVE, DEVICE BY-PASS 솔레노이드밸브
49.113	LIFT SECTION, HYDRAULIC VALVE 리프트섹션
49.114	TILT SECTION, HYDRAULIC VALVE 틸트섹션
49.115	AUX SECTION, HYDRAULIC VALVE 보조섹션
49.179	AUX SECTION, HYDRAULIC VALVE 보조섹션
49.196	SPOOL SEAL KIT, LIFT SECTION 스풀씰키트
49.197	SPOOL SEAL KIT, TILT SECTION 스풀씰키트
49.198	SPOOL SEAL KIT, AUX SECTION 스풀씰키트
49.199	SPOOL SEAL KIT, AUX SECTION 스풀씰키트

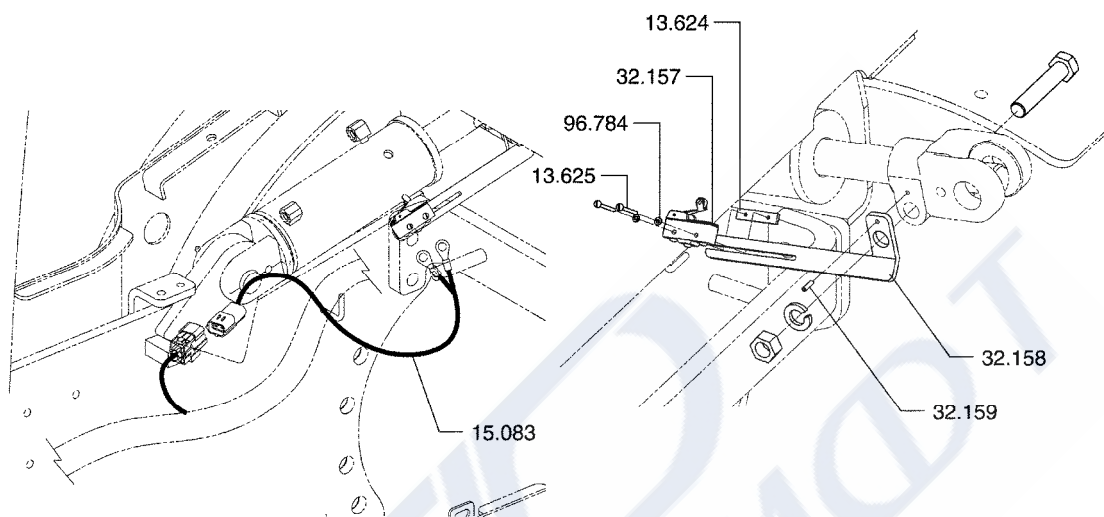 

TILT ALARM GP

31-189

- | | |
|--------|---|
| 13.624 | BRACKET, TILT LIMIT SWITCH
브라켓 |
| 13.625 | FASTENER, TILT LIMIT SWITCH
패스너 |
| 15.083 | CONDUCTOR, TILT LIMIT DEVICE FEED
컨덕터 |
| 32.157 | SWITCH, TILT LIMIT
스위치 |
| 32.158 | BRACKET, TILT LIMIT SWITCH
브라켓 |
| 32.159 | RETAINER, TILT LIMIT SWITCH BRACKET
리테이너 |
| 96.784 | WASHER, TILT LIMIT SWITCH FASTENER
와셔 |

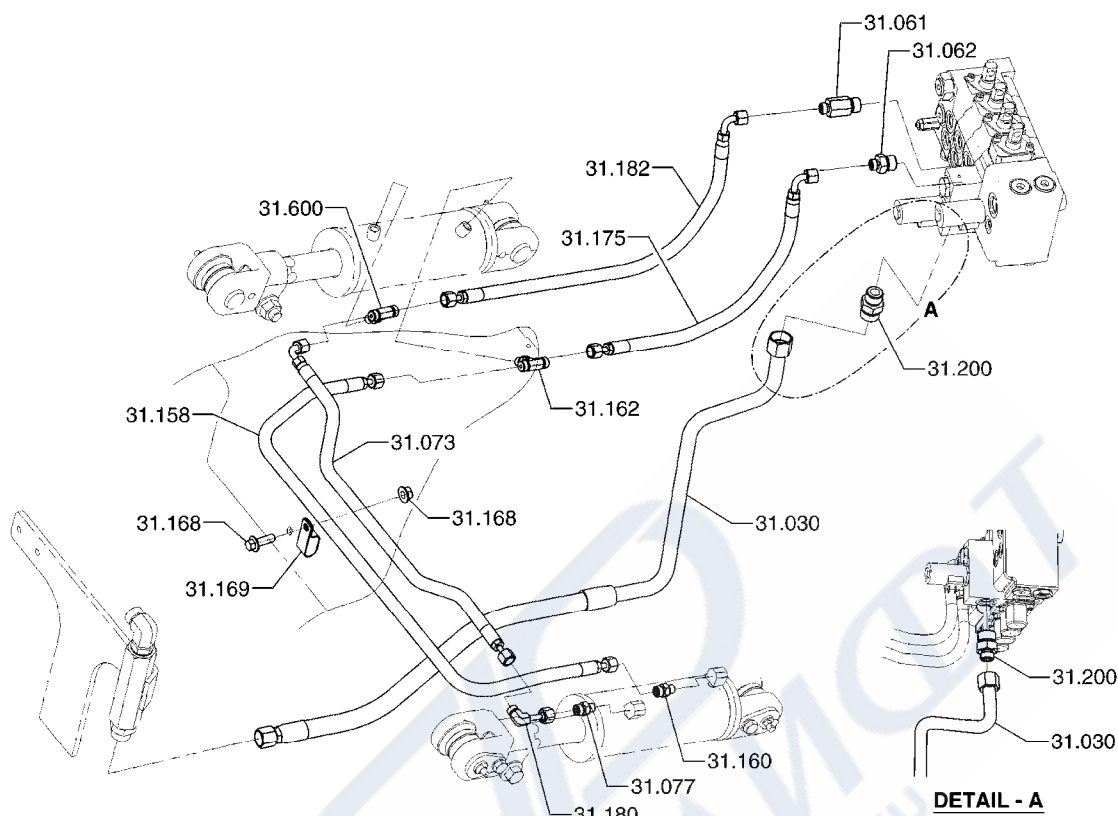 


HYDRAULIC LIFT & TILT LINES

31-220

31.030	LINE, VALVE TO LIFT CYLINDER 라인
31.061	FITTING, VALVE TILT PORT "A" 피팅
31.062	FITTING, VALVE TILT PORT "B" 피팅
31.073	LINE, LH TILT CYLINDER ROD PORT 라인
31.077	FITTING, LH TILT CYLINDER ROD PORT 피팅
31.158	LINE, LH TILT CYLINDER ANCHOR PORT 라인
31.160	FITTING, LH TILT CYLINDER ANCHOR PORT 피팅
31.162	FITTING, RH TILT CYLINDER ANCHOR PORT 피팅
31.168	FASTENER, TILT LINE CLAMP 패스너

31.169	CLAMP, TILT LINE 클램프
31.175	LINE, VALVE TILT PORT "B" 라인
31.180	FITTING, LH TILT CYLINDER ROD PORT LINE 피팅
31.182	LINE, VALVE TILT PORT "A" 라인
31.200	FITTING, MAIN VALVE LIFT PORT 피팅
31.600	FITTING, RH TILT CYLINDER ROD PORT 피팅

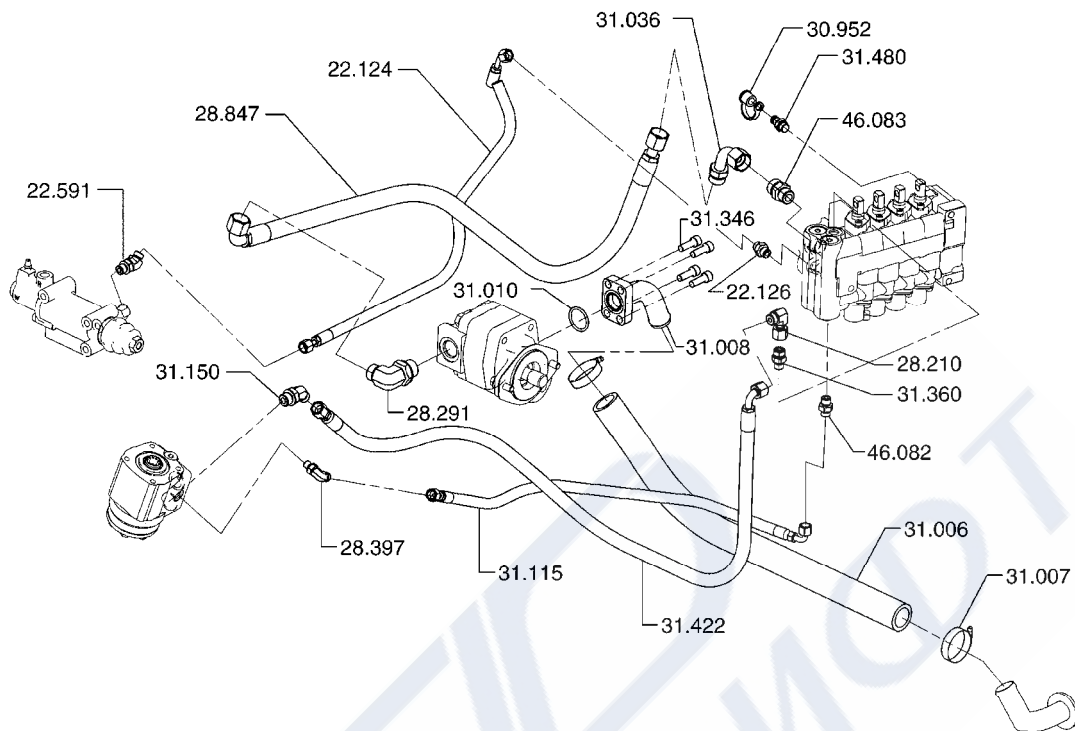 

HYDRAULIC SUPPLY LINES


31-228

22.124	LINE, BRAKE OPERATING VALVE INLET 라인
22.126	CHECK VALVE, BRAKE OPERATING VALVE INLET 체크밸브
22.591	FITTING, BRAKE BOOSTER RETURN LINE 피팅
28.210	FITTING, MAIN VALVE INLET LINE 피팅
28.291	FITTING, PUMP OUTLET 피팅
28.397	FITTING, STEERING GEAR LINE 피팅
28.847	LINE, MAIN VALVE INLET 라인
30.952	DUST CAP, PRESSURE GAUGE PORT FITTING 더스트캡
31.006	LINE, PUMP INLET 라인

31.007	CLAMP, PUMP INLET LINE 클램프
31.008	FITTING, PUMP INLET 피팅
31.010	SEAL, PUMP INLET PORT 씰
31.036	FITTING, MAIN VALVE INLET PORT 피팅
31.115	LINE, STEERING PUMP OUTLET 라인
31.150	FITTING, STEER VALVE DISCHARGE PORT 피팅
31.346	FASTENER, PUMP INLET PORT FITTING 패스너
31.360	FITTING, VALVE SUMP RETURN LINE 피팅
31.422	LINE, PUMP OUTLET (COVER END) 라인
31.480	PLUG, PRESSURE GAUGE PORT 플러그
46.082	FITTING, MAIN VALVE OUTLET 피팅
46.083	FITTING, MAIN VALVE 피팅



 ■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

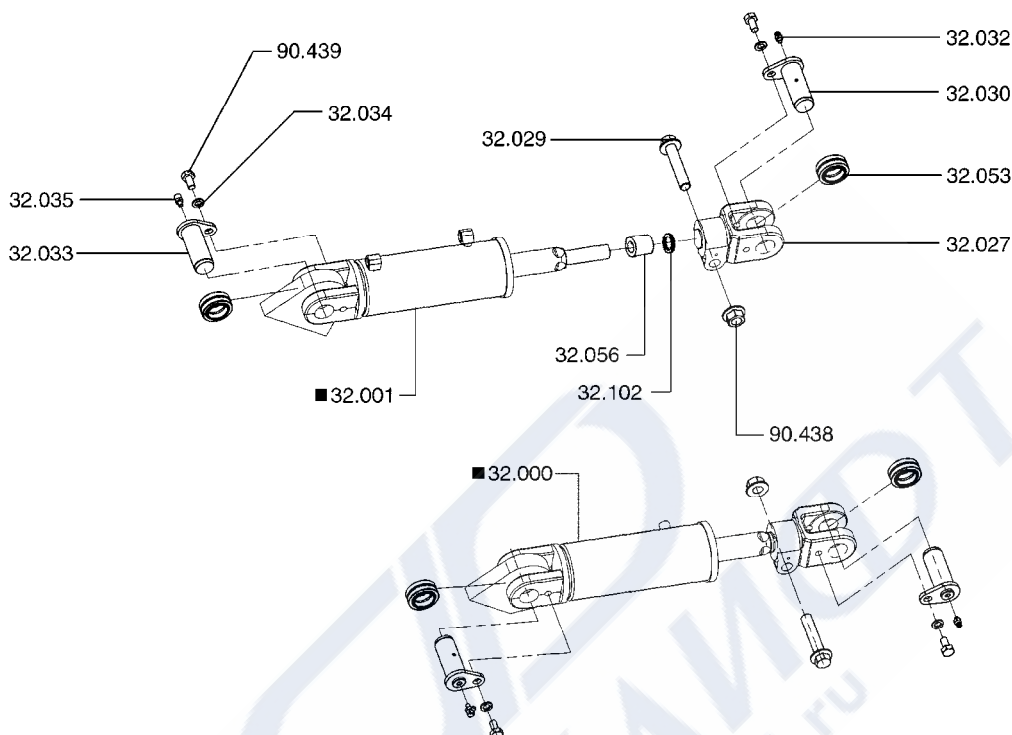


TILT CYLINDER MOUNTING

32-140


32.000	CYLINDER ASSEMBLY, TILT 실린더
32.001	TILT CYLINDER ASSEMBLY (LH) 틸트실린더
32.027	END, RH TILT CYLINDER ROD 엔드
32.029	FASTENER, TILT CYLINDER ROD END 패스너
32.030	PIN, TILT CYLINDER TO UPRIGHT 핀
32.032	FITTING, TILT CYLINDER TO UPRIGHT PIN LUB 피팅
32.033	PIN, TILT CYLINDER REAR MOUNTING RH 핀
32.034	RETAINER, TILT CYLINDER ANCHOR PIN 리테이너
32.035	FITTING, TILT CYLINDER TO FRAME PIN LUB 피팅

32.053	BEARING, TILT CYLINDER ROD END 베어링
32.056	SPACER, TILT CYLINDER ROD END 스페이서
32.102	SHIM, TILT CYLINDER STROKE ADJUSTING 심
90.438	NUT, TILT CYLINDER ROD END FASTENER 너트
90.439	BOLT, TILT CYLINDER TO FRAME PIN LOCK 볼트



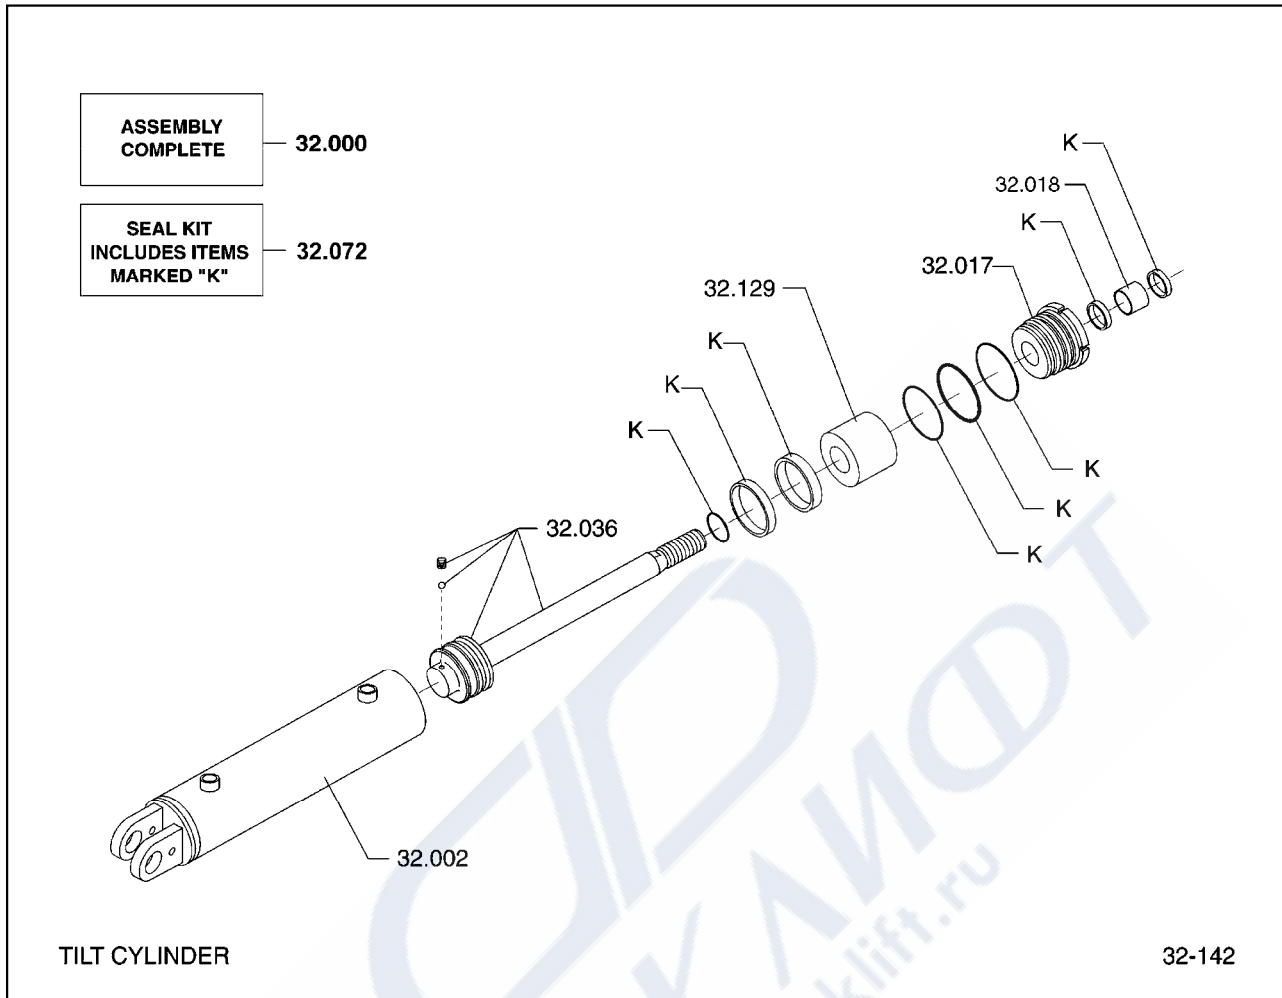 

32.000	CYLINDER ASSEMBLY, TILT 실린더
32.002	CYLINDER ASSEMBLY, WELDED 실린더
32.017	GLAND, TILT CYLINDER 그랜드
32.018	BUSHING, TILT CYLINDER GLAND 부싱
32.036	ROD & PISTON ASSEMBLY, TILT CYLINDER 로드& 피스톤
32.072	PACKING KIT, TILT CYLINDER 패킹키트
32.129	SPACER, TILT CYLINDER BARREL END 스페이서

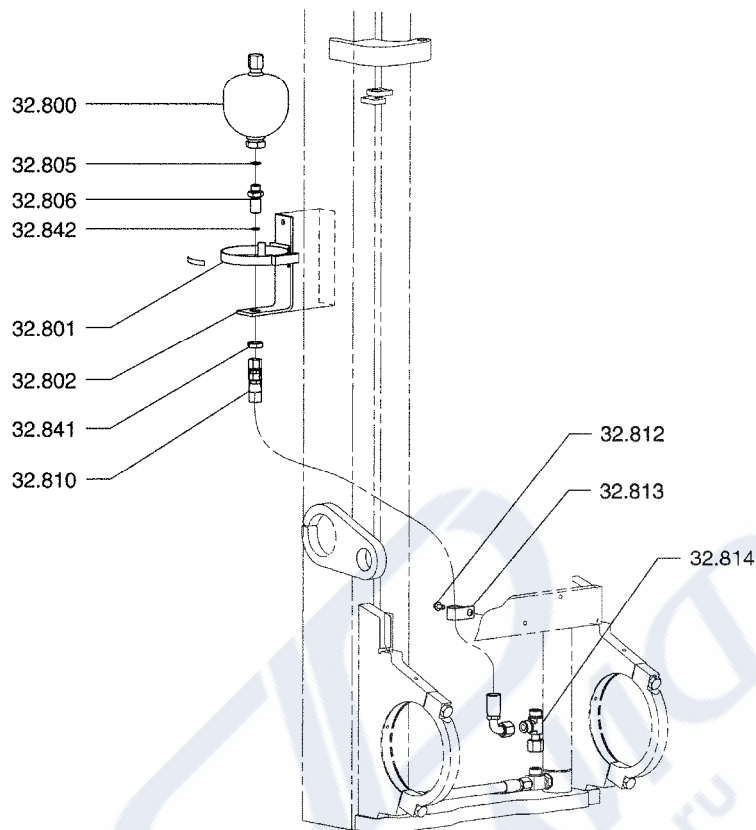 


ACCUMULATOR (STD)

32-151


32.800	ACCUMULATOR, HYDRAULIC 어큐플레이터
32.801	CLAMP, HYDRAULIC ACCUMULATOR MOUNTING 클램프
32.802	BRACKET, HYDRAULIC ACCUMULATOR 브라켓
32.805	SEAL, HYDRAULIC ACCUMULATOR CONNECTOR 씰
32.810	LINE, HYDRAULIC ACCUMULATOR 라인
32.812	CLIP, HYDRAULIC ACCUMULATOR LINE 클립
32.813	FASTENER, HYDRAULIC ACCUMULATOR LINE CLIP 패스너
32.814	FITTING, HYDRAULIC ACCUMULATOR LINE 피팅
32.841	NUT, HYDRAULIC ACCUMULATOR FITTING 너트

32.842 SEAL, HYDRAULC ACCUMULATOR FITTING
셀

 ФОРКЛИФТ
www.forklift.ru

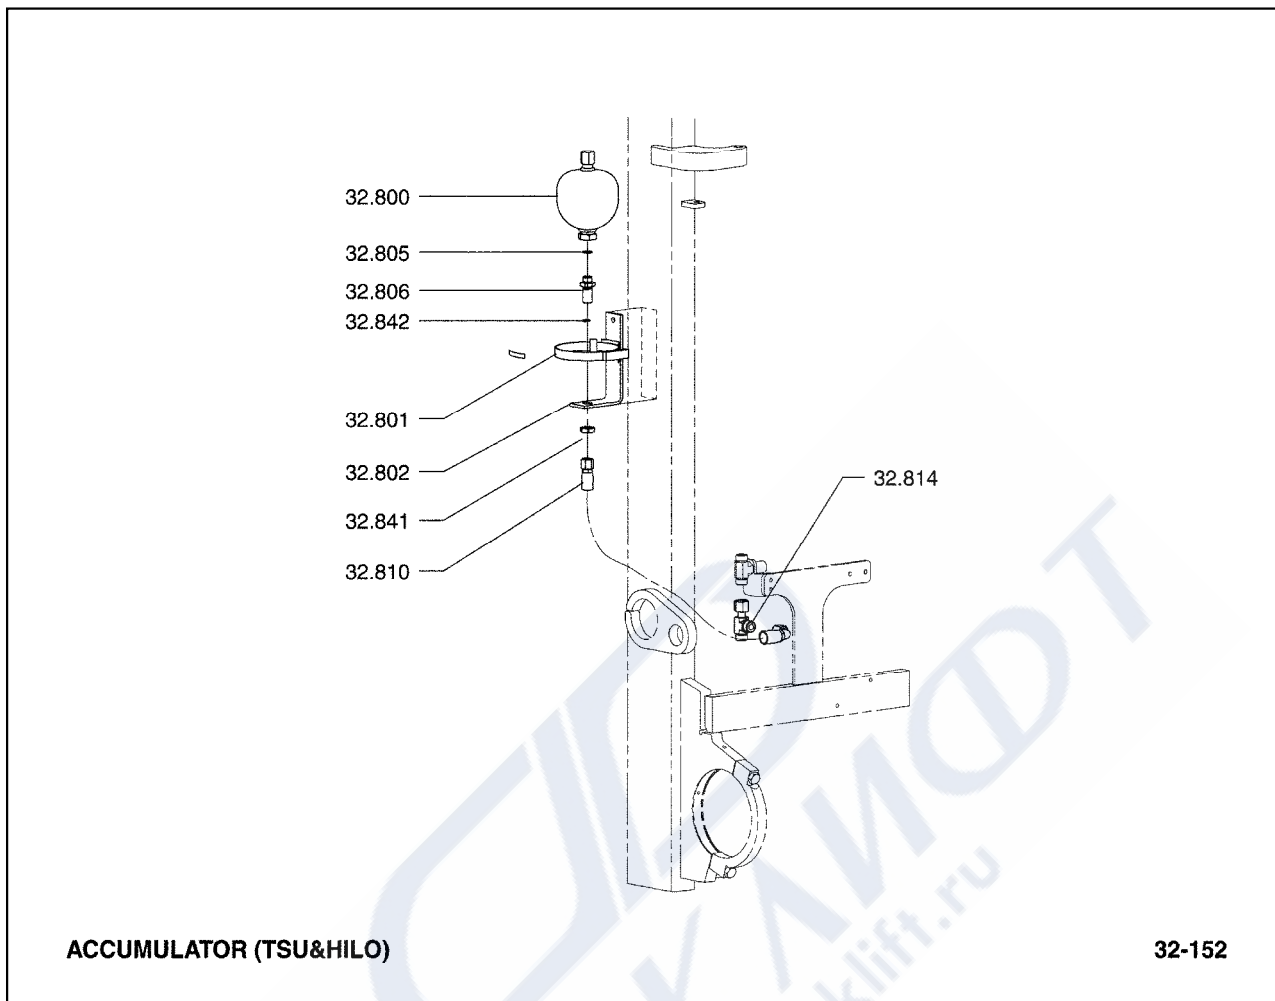


32.800	ACCUMULATOR, HYDRAULIC 어큐플레이터
32.801	CLAMP, HYDRAULIC ACCUMULATOR MOUNTING 클램프
32.802	BRACKET, HYDRAULIC ACCUMULATOR 브라켓
32.805	SEAL, HYDRAULIC ACCUMULATOR CONNECTOR 씰
32.806	CONNECTOR, HYDRAULIC ACCUMULATOR 커넥터
32.810	LINE, HYDRAULIC ACCUMULATOR 라인
32.814	FITTING, HYDRAULIC ACCUMULATOR LINE 피팅
32.841	NUT, HYDRAULIC ACCUMULATOR FITTING 너트
32.842	SEAL, HYDRAULIC ACCUMULATOR FITTING 씰

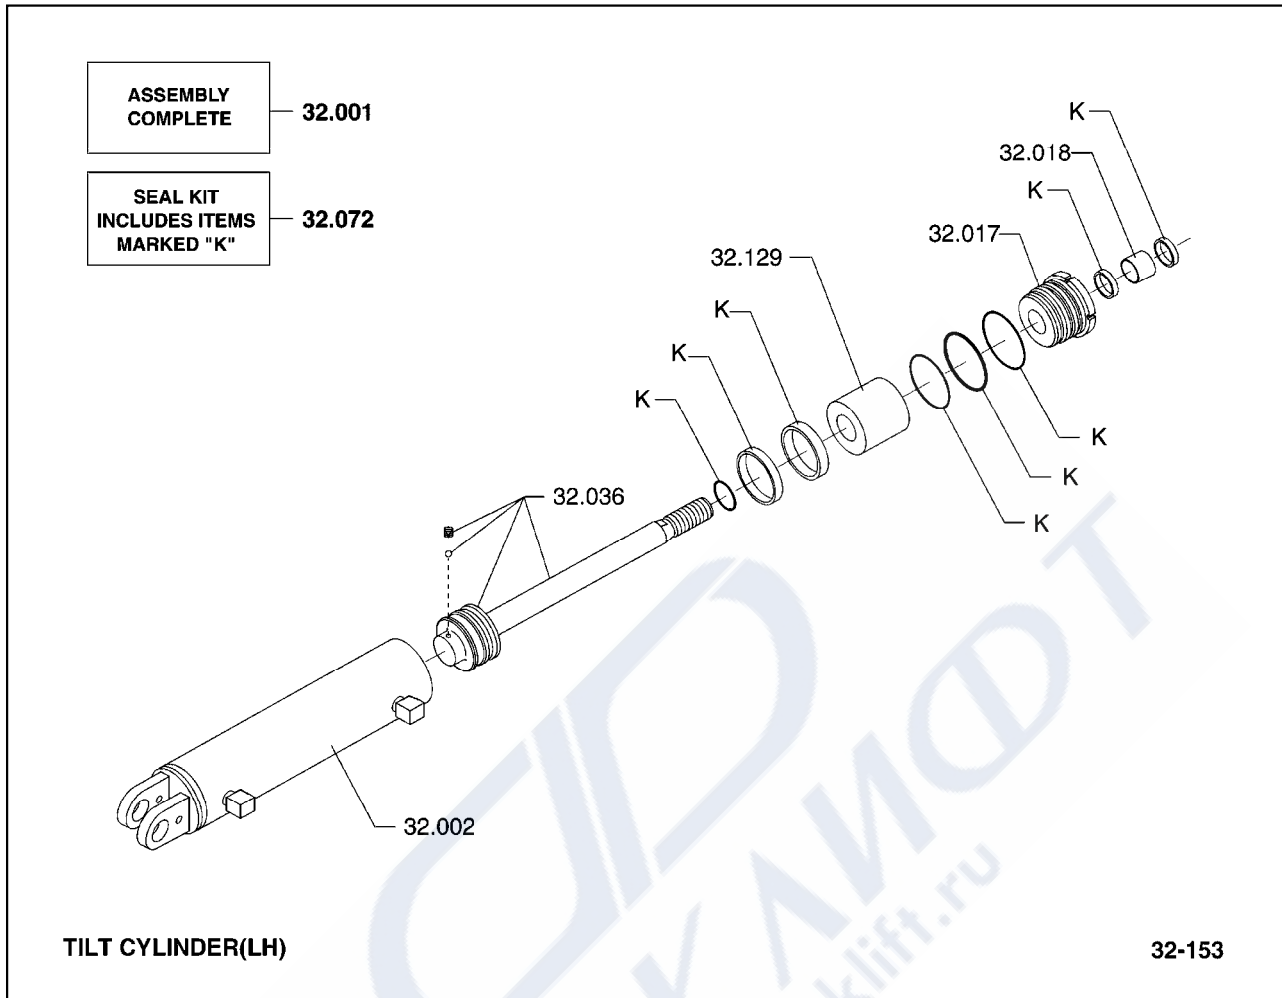 

32.001	TILT CYLINDER ASSEMBLY (LH) 틸트실린더
32.002	CYLINDER ASSEMBLY, WELDED 실린더
32.017	GLAND, TILT CYLINDER 그랜드
32.018	BUSHING, TILT CYLINDER GLAND 부싱
32.036	ROD & PISTON ASSEMBLY, TILT CYLINDER 로드& 피스톤
32.072	PACKING KIT, TILT CYLINDER 패킹키트
32.129	SPACER, TILT CYLINDER BARREL END 스페이서

 
■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

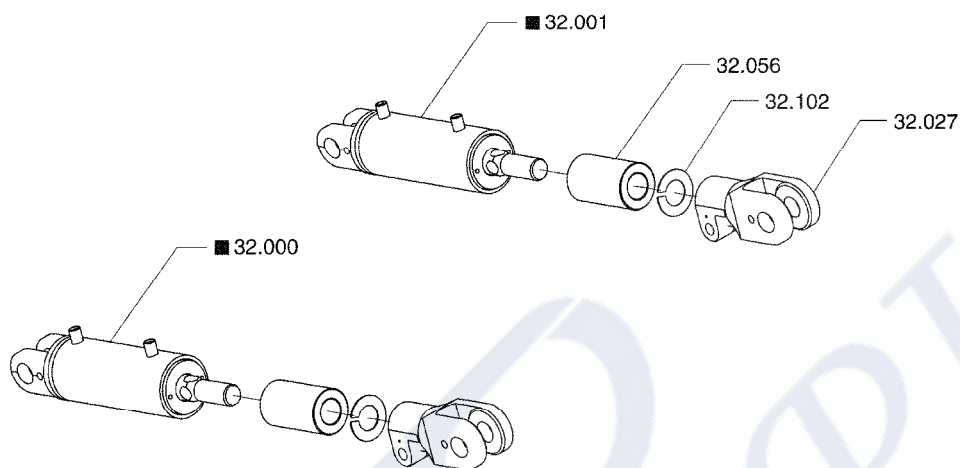


TILT AMOUNT GP

32-167


32.000	CYLINDER ASSEMBLY, TILT 실린더
32.001	TILT CYLINDER ASSEMBLY (LH) 틸트실린더
32.027	END, RH TILT CYLINDER ROD 엔드
32.056	SPACER, TILT CYLINDER ROD END 스페이서
32.102	SHIM, TILT CYLINDER STROKE ADJUSTING 심

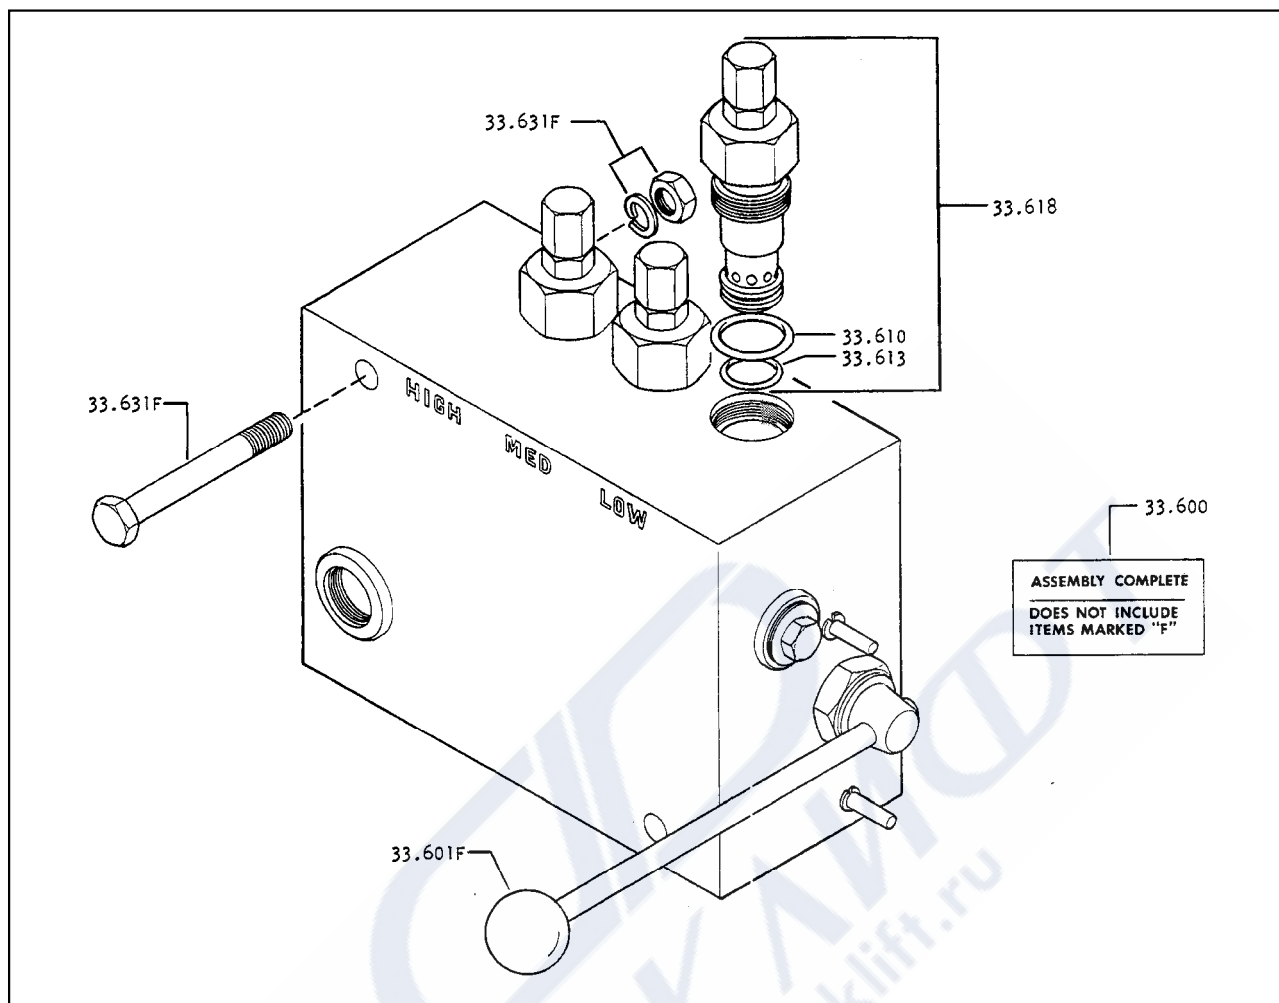 

- | | |
|--------|---|
| 33.600 | RELIEF VALVE, DEVICE VARIABLE PRESSURE
릴리프밸브 |
| 33.601 | LEVER, DEVICE VARIABLE RELIEF VALVE
레버 |
| 33.610 | SEAL, DEVICE PRESS RELIEF VAL CHECK PORT PLUG
씰 |
| 33.613 | SEAL, DEVICE RELIEF VALVE PISTON ADJ END
씰 |
| 33.618 | CARTRIDGE KIT, DEVICE VARIABLE RELIEF VALVE
카트리지기트 |
| 33.631 | FASTENER, DEVICE RELIEF VALVE
패스너 |

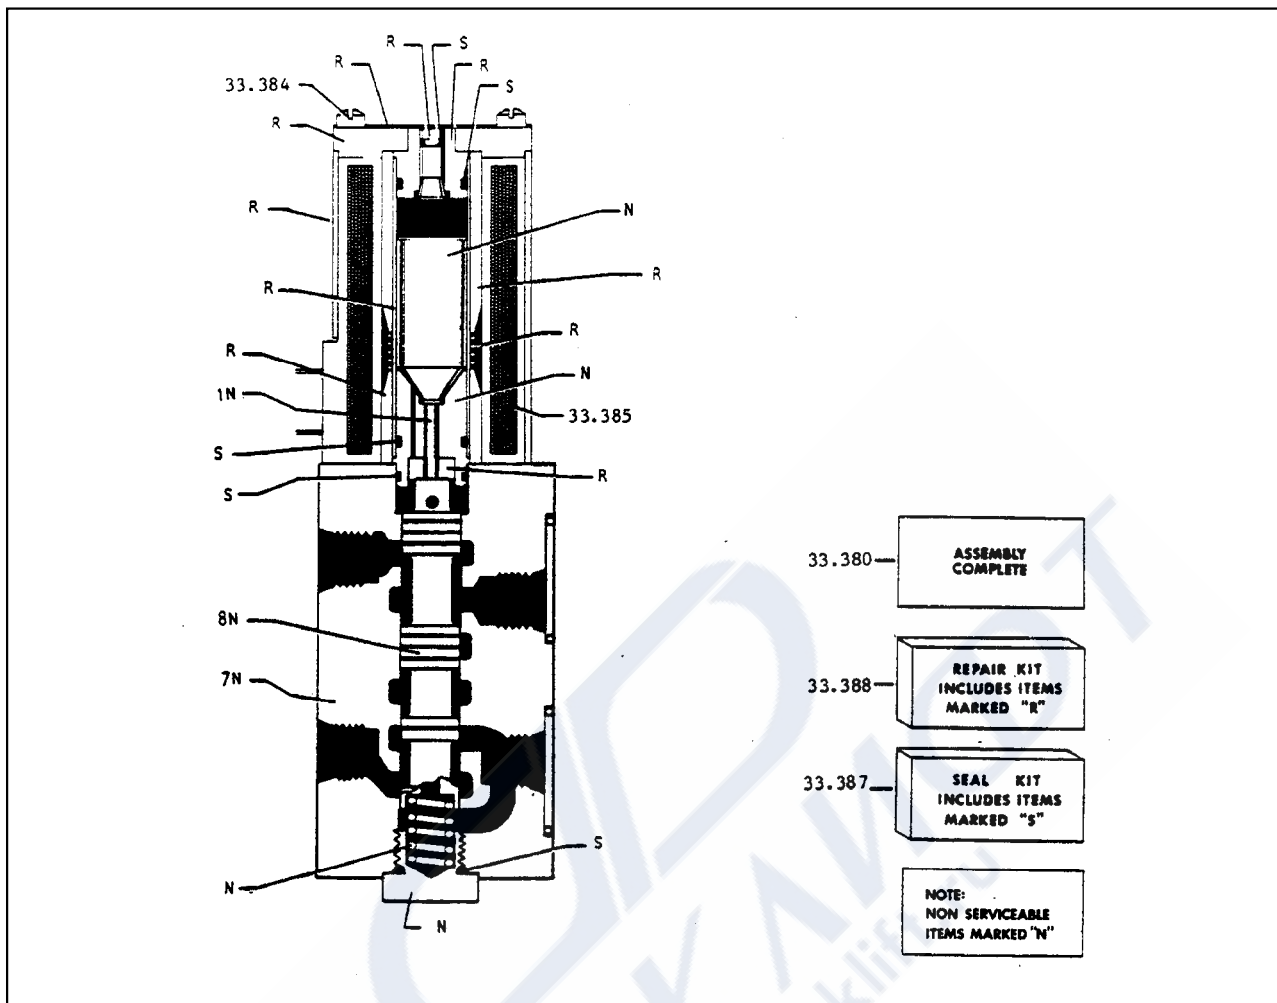 

 - 33.380 VALVE ASSEMBLY, DEVICE SELECTOR SOLENOID
밸브
- 33.384 FASTENER, DEV SELECTOR VALVE SOLENOID COIL
패스너
- 33.385 COIL, DEVICE SELECTOR VALVE SOLENOID
코일
- 33.387 SEAL KIT, DEVICE SELECTOR VALVE
씰키트
- 33.388 REPAIR KIT, DEVICE SELECTOR VALVE
리페어키트

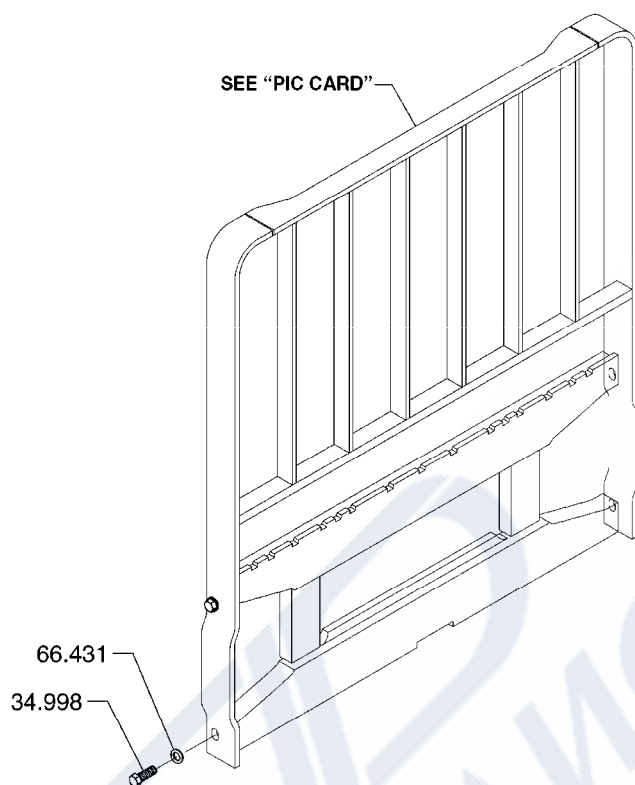


LOAD BACK REST MOUNTING


34-044

- | | |
|--------|--|
| 34.998 | FASTENER, LOAD SAFETY BACK REST
패스너 |
| 66.431 | RETAINER, LBR CAPSCREW
리테이너 |

 
ASSEMBLY
COMPLETE 34.300

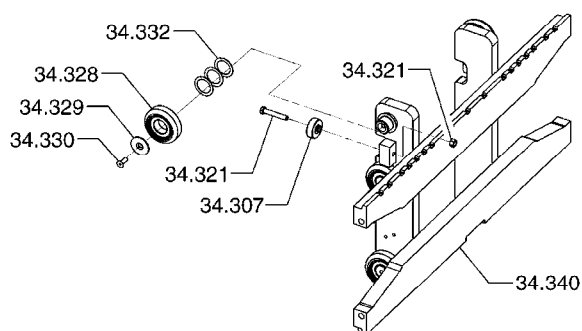


TYPE - 1

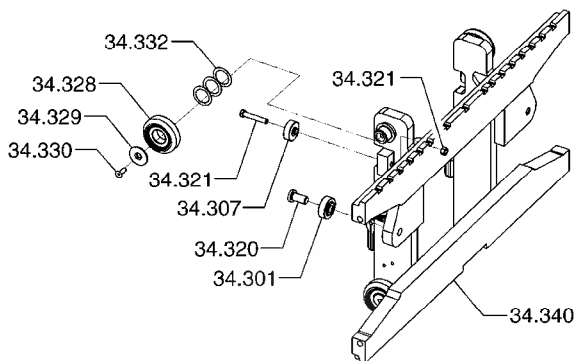 

TYPE - 2

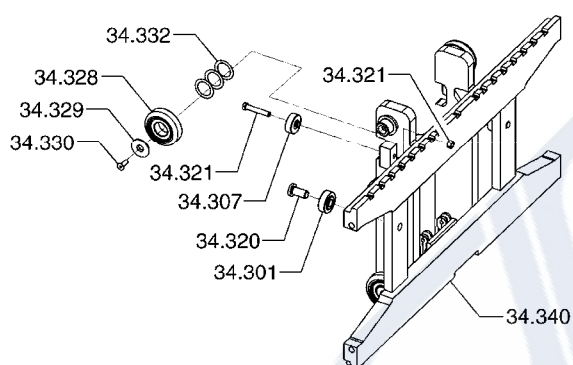 

TYPE - 3

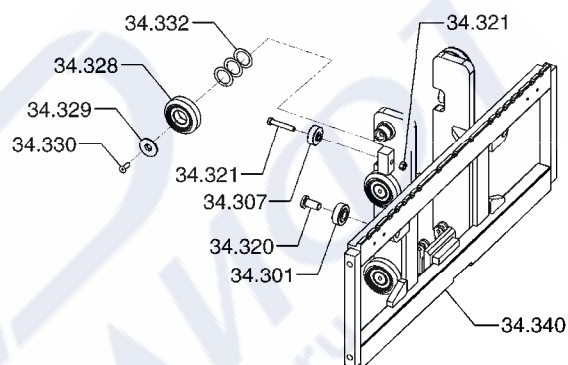 

TYPE - 4

CARRIAGE ASSEMBLY


34-103

34.300	ASSEMBLY, FORK BARS & CARRIAGE 캐리지
34.301	ROLLER, CARRIAGE OUTER THRUST 롤러
34.307	ROLLER, CARRIAGE INNER THRUST 롤러
34.320	SHAFT, CARRIAGE OUTER THRUST ROLLER 샤프트
34.321	FASTENER, CARRIAGE ROLLER SHAFT 패스너
34.328	ROLLER, CARRIAGE CAPTIVE 롤러
34.329	RETAINER, CARRIAGE CAPTIVE ROLLER 리테이너
34.330	FASTENER, CARRIAGE CAPTIVE ROLLER RETAINER 패스너
34.332	SHIM, CARRIAGE CAPTIVE ROLLER 심

34.340

CARRIAGE WELDED ASSEMBLY
캐리지용 접물

 ФОРКЛИФТ
www.forklift.ru

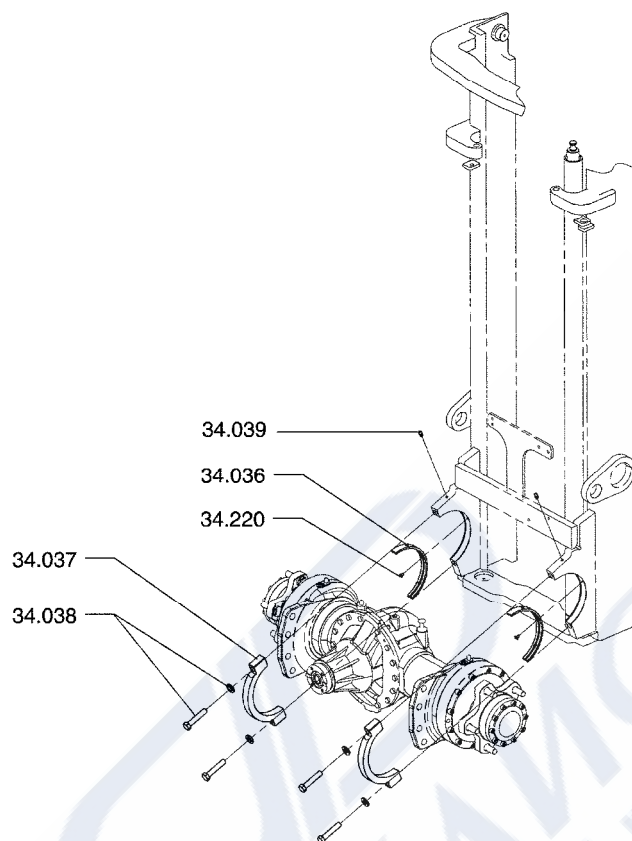

UPRIGHT MOUNTING

34-130

34.036	BUSHING, UPRIGHT TRUNNION 부싱
34.037	CAP, UPRIGHT TRUNNION 캡
34.038	FASTENER, UPRIGHT TRUNNION CAP 패스너
34.039	FITTING-LUB, UPRIGHT TRUNNION 피팅
34.220	FASTENER, UPRIGHT TRUNNION CAP DOWEL 패스너


This Carriage assembly was manufactured by the CASCADE CORPORATION and is not serviced by CLARK Material Handling Company.

CASCADE parts manuals, technical specifications and lists of worldwide distributors are available on-line at:

<http://www.cascorp.com>.

When ordering service parts, it will be necessary to provide CASCADE with the CASCADE model and serial numbers of the carriage. CASCADE will not recognize the CLARK carriage part number listed on the PIC or in PartsPRO.


34.300	CARRIAGE ASSEMBLY COMPLETE
34.340	CARRIAGE WELDED ASSEMBLY

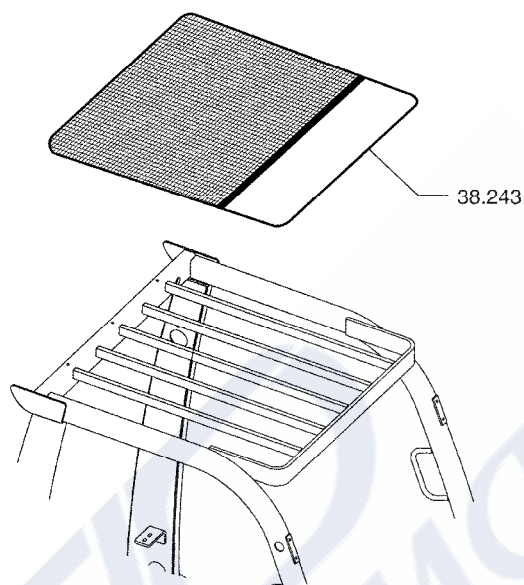 

OVERHEAD GUARD COVER


37-003

 38.243 COVER ASSEMBLY, OVERHEAD GUARD TOP
커버

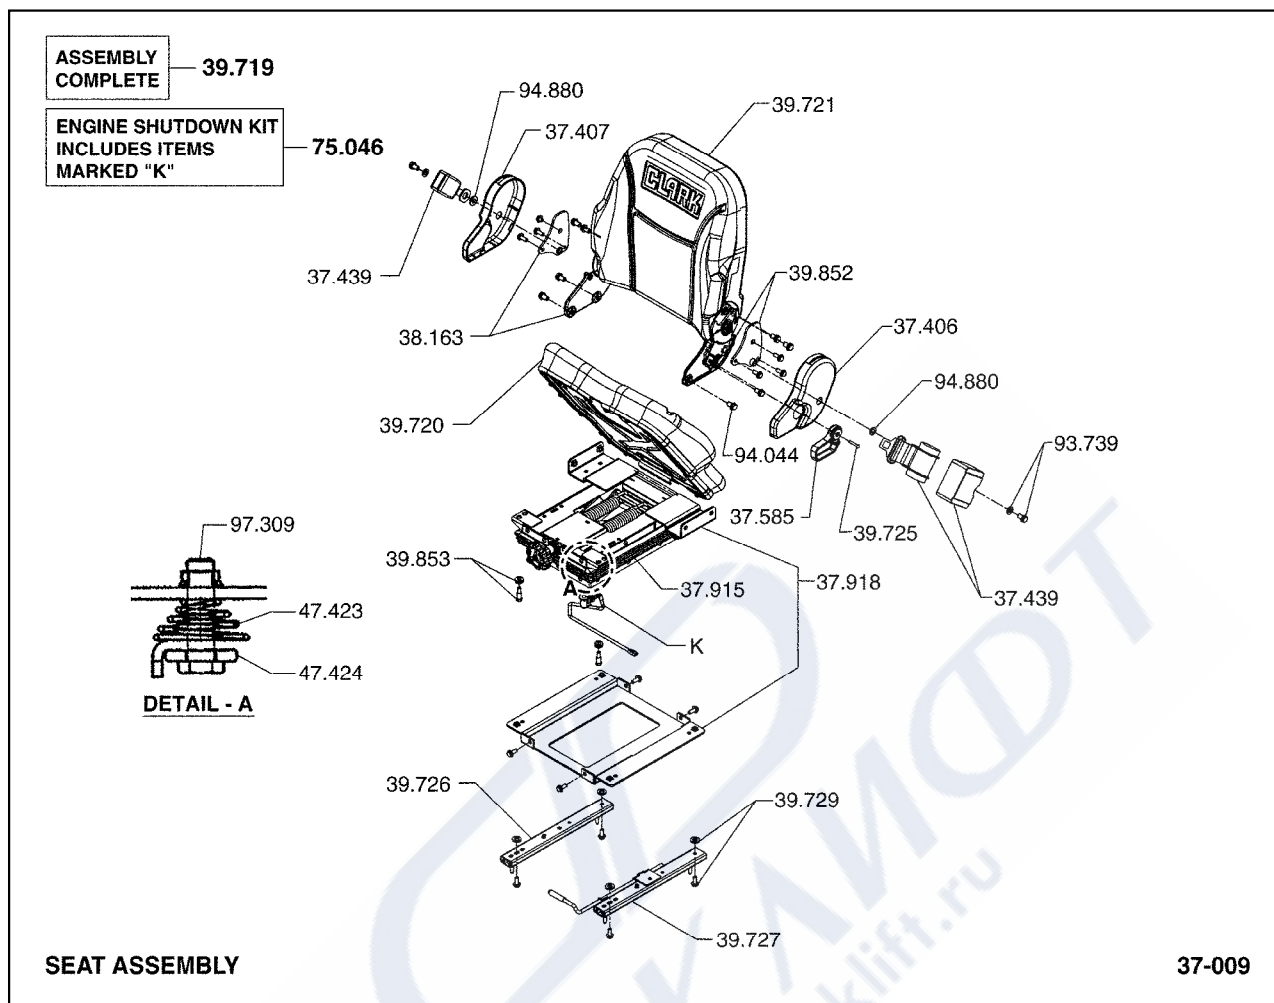

37.406	BRACKET, SEAT BACK REST COVER LH 브라켓
37.407	BRACKET, SEAT BACK REST COVER RH 브라켓
37.439	SAFETY BELT, SEAT 안전벨트
37.585	KNOB, SEAT BACK REST CUSHION ADJUSTOR 노브
37.915	SUSPENSION COVER, SEAT SUSPENSION 서스펜션커버
37.918	SUSPENSION ASSEMBLY, SEAT 서스펜션
38.163	BRACKET, SEAT SUPPORT RH 브라켓
39.719	SEAT ASSEMBLY 시트
39.720	CUSHION, SEAT 쿠션


39.721	CUSHION, SEAT BACK REST 쿠션
39.725	FASTENER, SEAT BACK REST CLIP TO FRAME 패스너
39.726	ADJUSTOR, SEAT 어드저스터
39.727	ADJUSTOR, SEAT WITH LATCH 어드저스터
39.729	FASTENER, ADJUSTOR TO SEAT SUPPORT 패스너
39.852	BRACKET, SEAT SUPPORT LH 브라켓
39.853	FASTENER, SEAT SUPPORT BRACKET 패스너
47.423	SPRING, SEAT SWITCH 스프링
47.424	GROMMET, SEAT SWITCH SPRING 그로멧
75.046	KIT, SEAT ACTUATED ENGINE SHUTDOWN 키트
93.739	FASTENER, SAFETY BELT ASSEMBLY 패스너
94.044	FASTENER, SEAT CUSHION MOUNTING PLATE 패스너
94.880	FASTENER, SEAT SUPPORT CATCH BRACKET 패스너
97.309	FASTENER, SEAT SWITCH SPRING 패스너

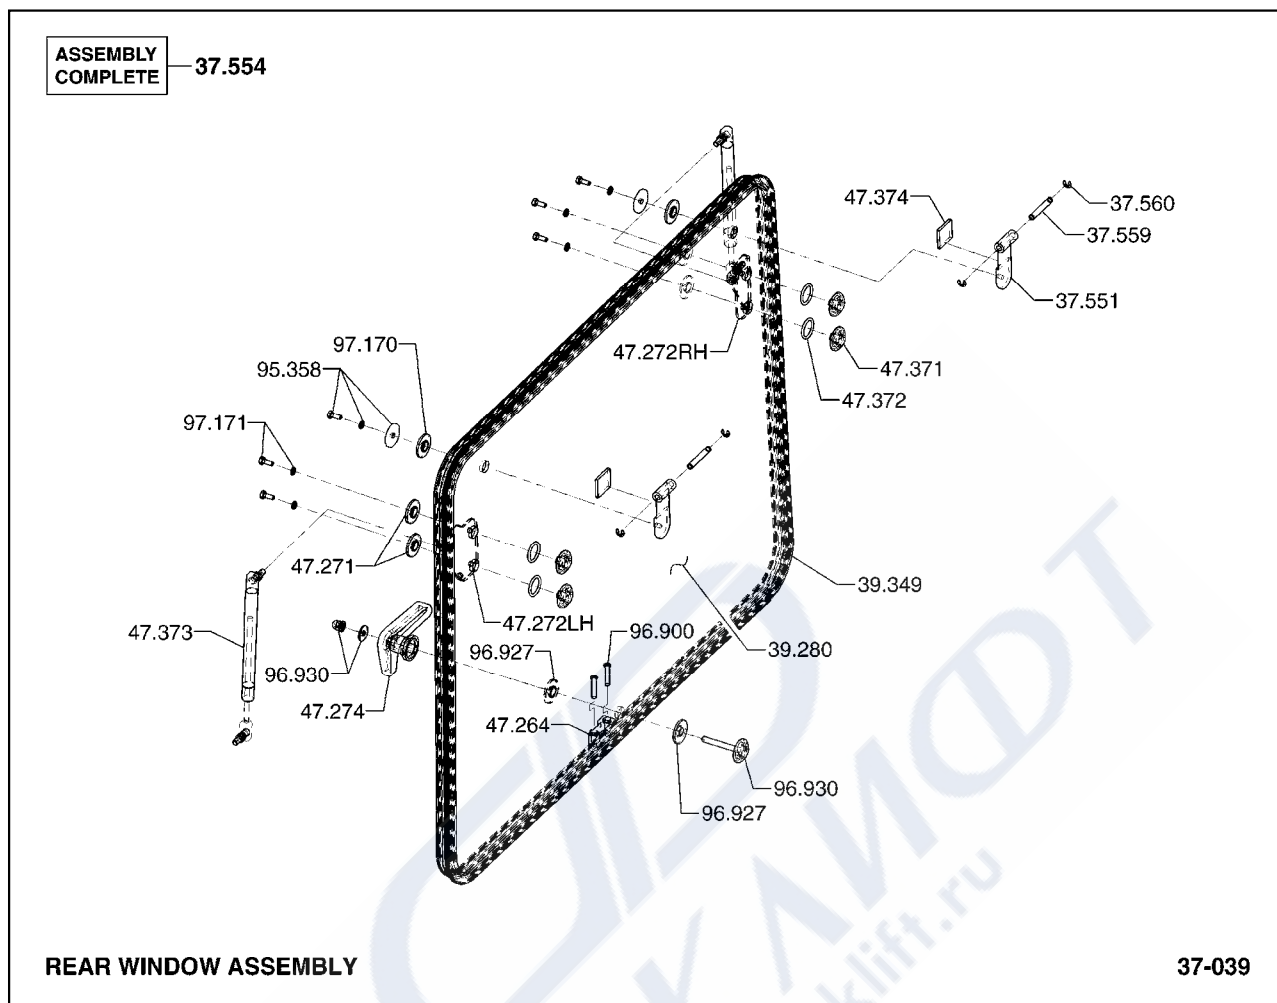 


37.551	HANGER, CAB REAR GLASS 행거
37.554	REAR GLASS COMPLETE, CABIN 리어글래스
37.559	PIN, CABIN REAR GLASS HANGER 핀
37.560	RETAINER, CAB REAR GLASS HANGER PIN 리테이너
39.280	GLASS, REAR WINDOW - MOVEABLE 글래스
39.349	WEATHERSEAL, CAB REAR WINDOW 웨더셀
47.264	GRIP, CAB REAR HANDLE 그립
47.271	RUBBER, CAB REAR GLASS GAS SPRING MOUNTING 리버
47.272	BRACKET, CAB REAR GLASS GAS SPRING MOUNTING 브라켓

47.274	HANDLE, CAB REAR GLASS 핸들
47.371	CAP, CAB REAR GLASS GAS SPRING MOUNTING FASTENER 캡
47.372	SEAL, CAB REAR GLASS GAS SPRING MOUNTING FASTENER 씰
47.373	SHOCK ABSORBER, CAB REAR GLASS 쇼크업쇼버
47.374	RUBBER, CAB REAR GLASS HANGER 러버
95.358	FASTENER, REAR GLASS HANGER 패스너
96.900	FASTENER, CAB REAR HANDLE GRIP 패스너
96.927	RUBBERWASHER, REAR GLASS HANDLE FASTENER 러버와셔
96.930	FASTENER, REAR GLASS HANDLE 패스너
97.170	RUBBERWASHER, REAR GLASS HANGER FASTENER 러버와셔
97.171	FASTENER, CAB REAR GLASS GAS SPRING MOUNTING 패스너



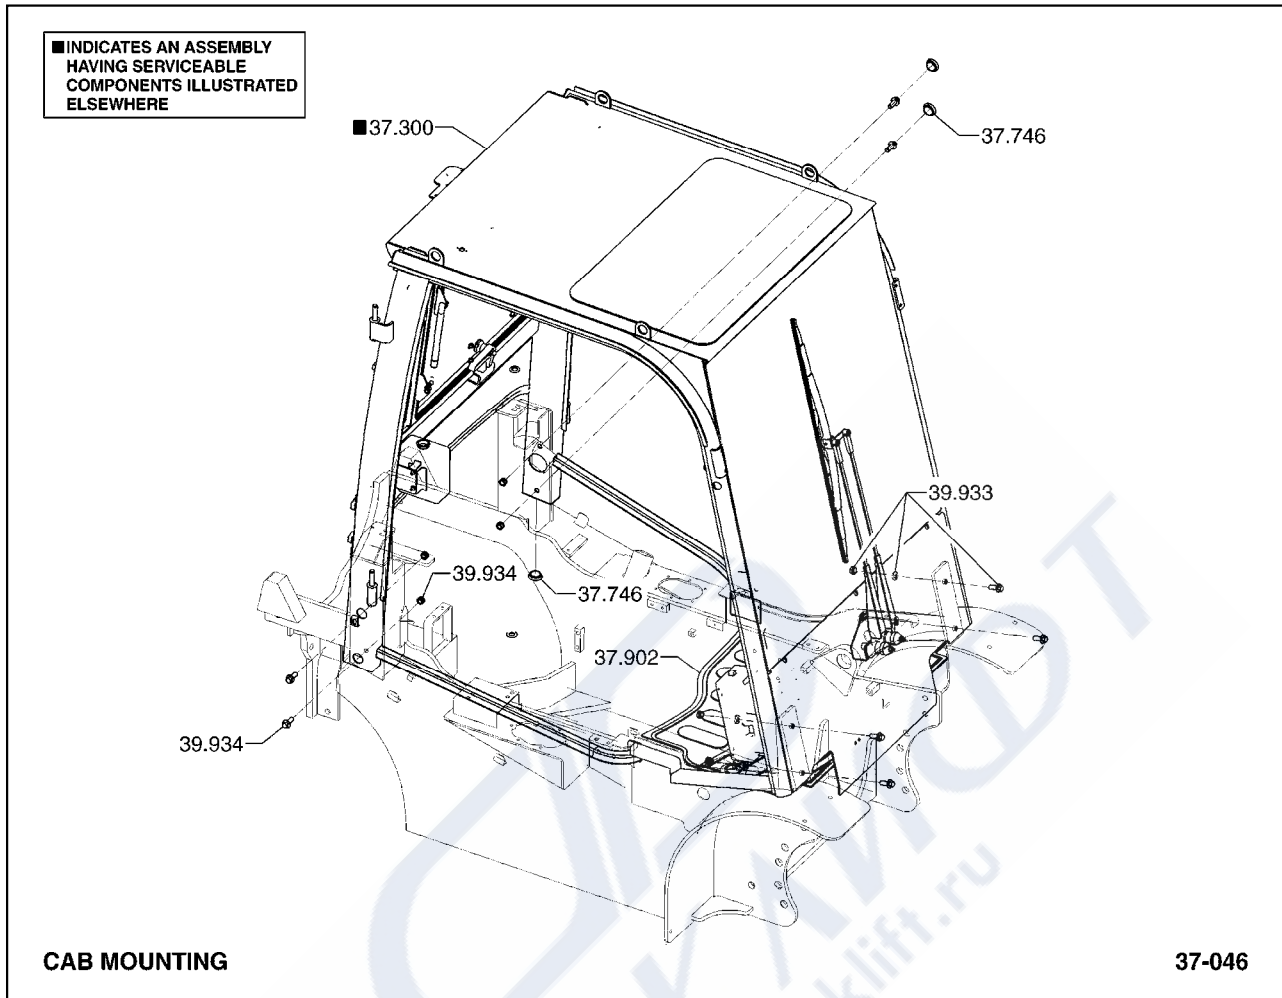 


37.300	CAB ASSEMBLY 캐빈
37.746	PLUG, DRIVER OVERHEAD GUARD 플러그
37.902	MAT, FLOORPLATE 매트
39.933	FASTENER, OVERHEAD GUARD 패스너
39.934	FASTENER, OVERHEAD GUARD 패스너

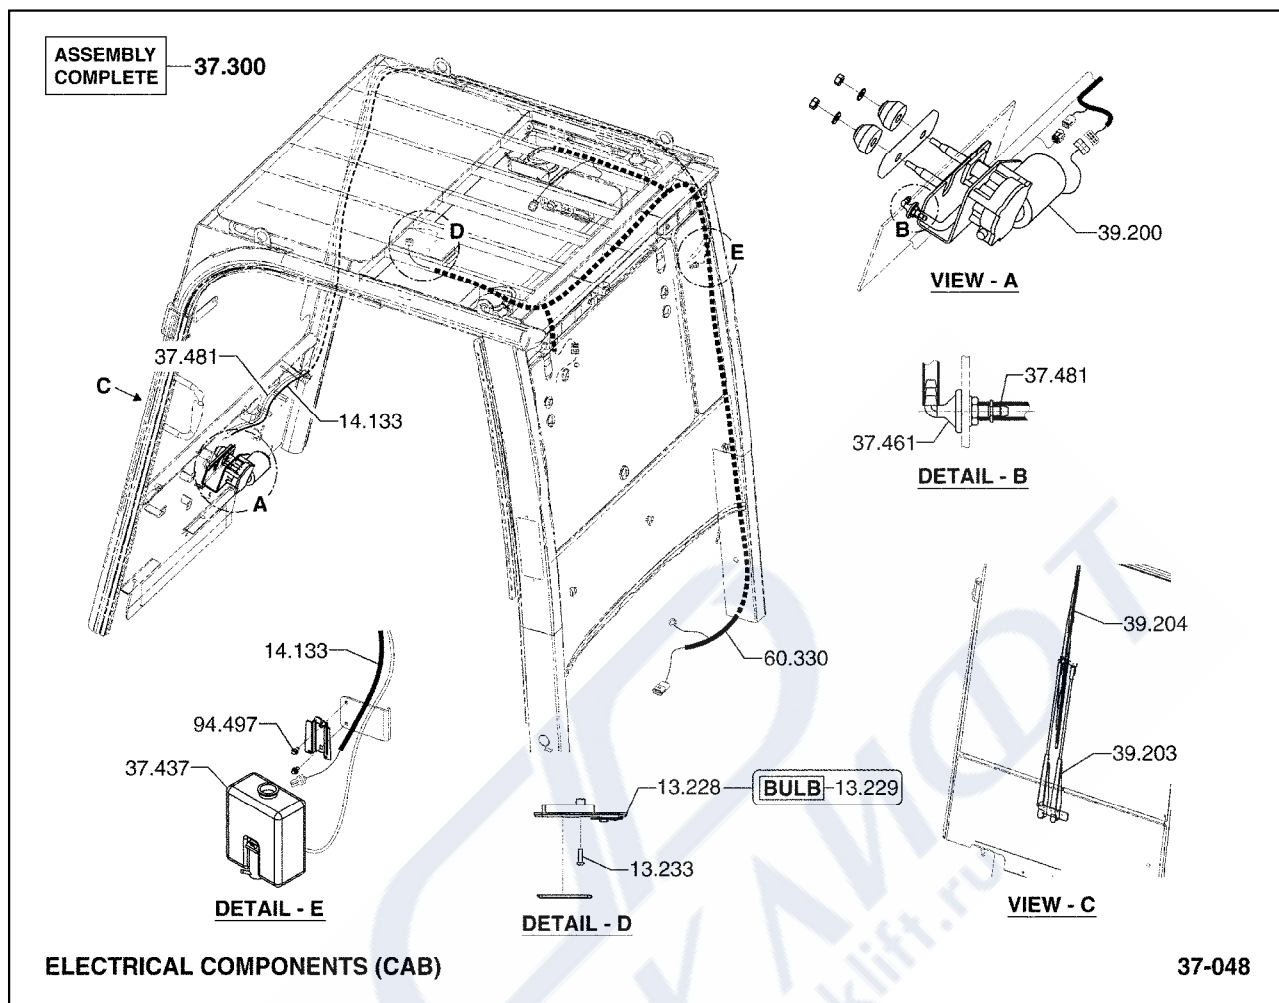 

13.228	LAMP ASSEMBLY, DOME 램프
13.229	BULB, DOME LAMP 전구
13.233	FASTENER, DOME LAMP 패스너
14.133	WIRE, WIPER MOTOR 와이어
37.300	CAB ASSEMBLY 캐빈
37.437	PUMP & TANK, WINDSHIELD WASHER 펌프& 탱크
37.461	NOZZLE, WINDSHIELD GLASS WASHER 노즐
37.481	LINE, WINDOW GLASS WASHER 라인
39.200	MOTOR, WINDSHIELD WIPER 모터

39.203	ARM, WINDSHIELD WIPER 암
39.204	BLADE, WINDSHIELD WIPER 블레이드
60.330	WIRING HARNESS, CAB 와이어하네스
94.497	FASTENER, WINDSHIELD WASHER TANK 패스너

 
ФОРКЛИФТ
www.forklift.ru

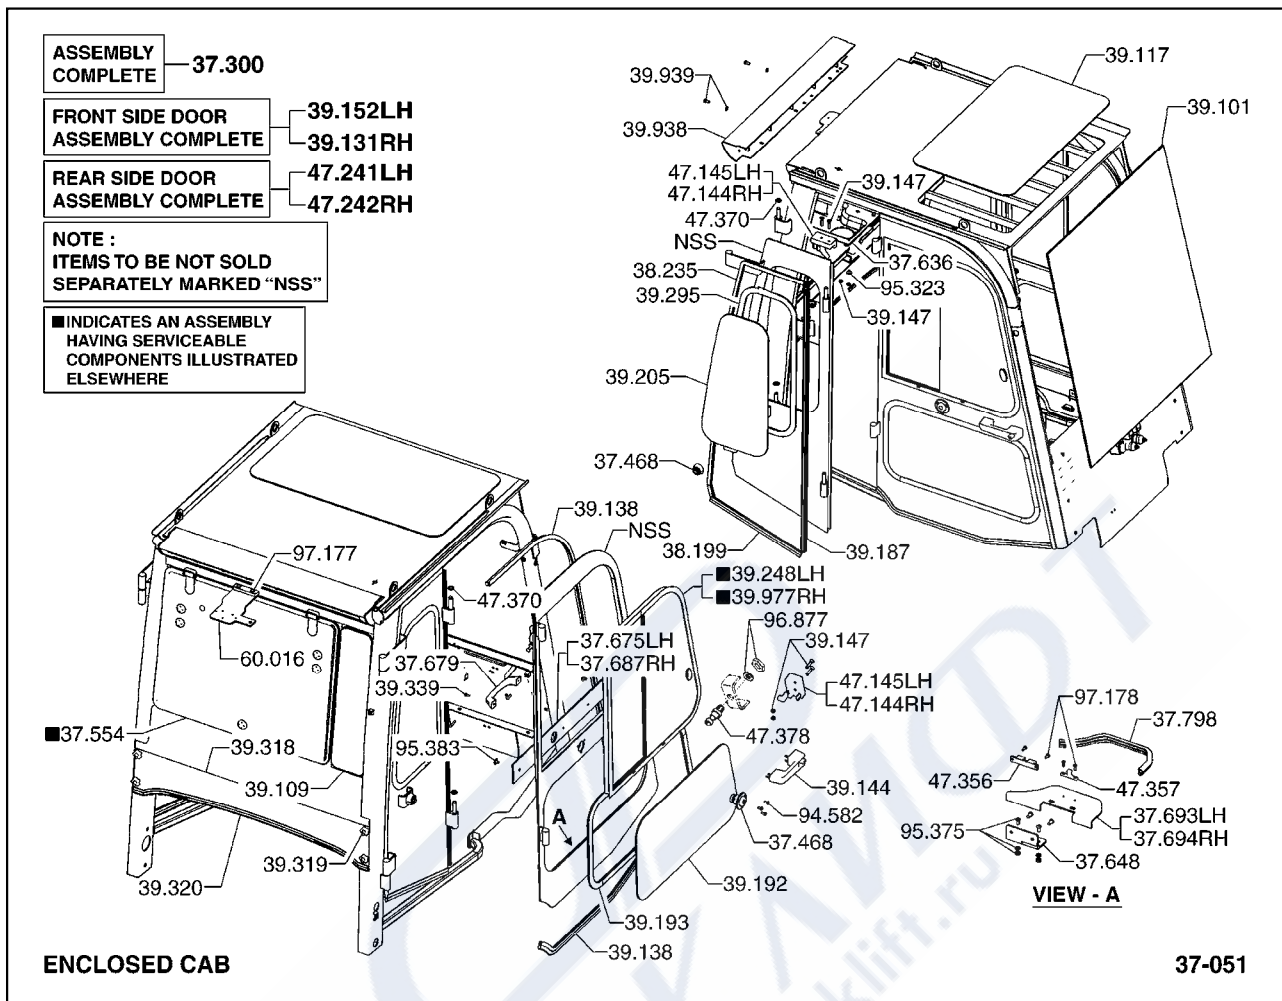

37.300	CAB ASSEMBLY 캐빈	39.117	ROOF SCREEN 루프스크린
37.468	CATCH, CAB DOOR LATCH 캐치	39.131	DOOR ASSEMBLY, RIGHT HAND 도어
37.554	REAR GLASS COMPLETE, CABIN 리어글래스	39.138	WEATHERSEAL, RIGHT HAND DOOR 웨더셀
37.636	COVERING, CAB INSIDE ROOF 커버링	39.144	HANDLE, RH DOOR OUTSIDE 핸들
37.648	SUPPORT, CAB HOLD DOWN LATCH 서포트	39.147	FASTENER, RIGHT HAND DOOR LATCH 패스너
37.675	COVER, CAB DOOR INSIDE LEFT 커버	39.152	DOOR ASSEMBLY, LEFT HAND 도어
37.679	HANDLE, RH DOOR INSIDE 핸들	39.187	SEAL, DOOR HINGE 셀
37.687	COVER, CAB DOOR INSIDE RIGHT 커버	39.192	GLASS, RIGHT HAND DOOR (LOWER) 글래스
37.693	COVER, DOOR INSIDE LATCH LH 커버	39.193	WEATHERSEAL, RH DOOR GLASS (LOWER) 웨더셀
37.694	COVER, DOOR INSIDE LATCH RH 커버	39.205	GLASS, RH DOOR REAR 글래스
37.798	SEAL, CAB DOOR INSIDE COVER 셀	39.248	WINDOW ASSEMBLY, CAB DOOR (LH) 윈도우
38.199	WEATHERSEAL, REAR DOOR (RH) 웨더셀	39.295	WEATHERSEAL, DOOR REAR GLASS 웨더셀
38.235	WEATHERSEAL, REAR DOOR 웨더셀	39.318	PANEL, REAR LOWER 판널
39.101	GLASS, WINDSHIELD 글래스	39.319	FASTENER, LOWER REAR PANEL 패스너
39.109	GLASS, REAR 글래스	39.320	SEAL STRIP, REAR PANEL LOWER 셀스트립

39.339	FASTENER, RH DOOR INSIDE HANDLE 패스너
39.938	BRACKET, OVERHEAD GUARD REAR SUPPORT 브라켓
39.939	FASTENER, OVERHEAD GUARD REAR SUPPORT BRACKET 패스너
39.977	WINDOW ASSEMBLY, CAB DOOR (RH) 윈도우
47.144	LATCH, RH DOOR INSIDE 래치
47.145	LATCH, LH DOOR INSIDE 래치
47.241	DOOR ASSY, CAB REAR (RH) 도어
47.242	DOOR ASSY, CAB REAR (LH) 도어
47.356	CATCH, CAB DOOR LOWER 캐치
47.357	CATCH, CAB DOOR LOWER 캐치
47.370	SPACER, CAB DOOR HINGE 스페이서
47.378	SUPPORT, CAB DOOR INSIDE LATCH 서포트
60.016	SUPPORT, WARNING LAMP 서포트
94.582	FASTENER, CAB DOOR LATCH CATCH 패스너
95.323	FASTENER, CAB INSIDE ROOF COVERING 패스너
95.375	FASTENER, DOOR INSIDE COVER 패스너
95.383	FASTENER, DOOR INSIDE LATCH COVER 패스너
96.877	FASTENER, DOOR INSIDE LATCH STRIKER 패스너
97.177	FASTENER, WARNING LAMP SUPPORT 패스너
97.178	FASTENER, CAB DOOR LOWER CATCH 패스너

 
■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

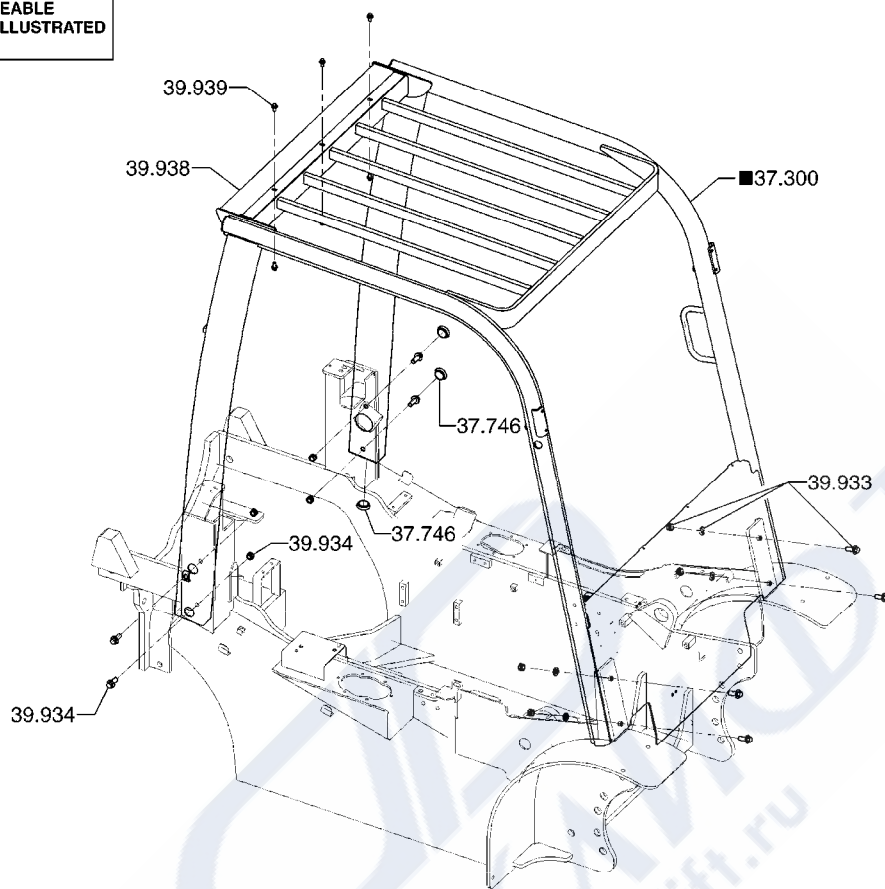

CAB MOUNTING

37-052


37.300	CAB ASSEMBLY 캐빈
37.746	PLUG, DRIVER OVERHEAD GUARD 플러그
39.933	FASTENER, OVERHEAD GUARD 패스너
39.934	FASTENER, OVERHEAD GUARD 패스너
39.938	BRACKET, OVERHEAD GUARD REAR SUPPORT 브라켓
39.939	FASTENER, OVERHEAD GUARD REAR SUPPORT BRACKET 패스너

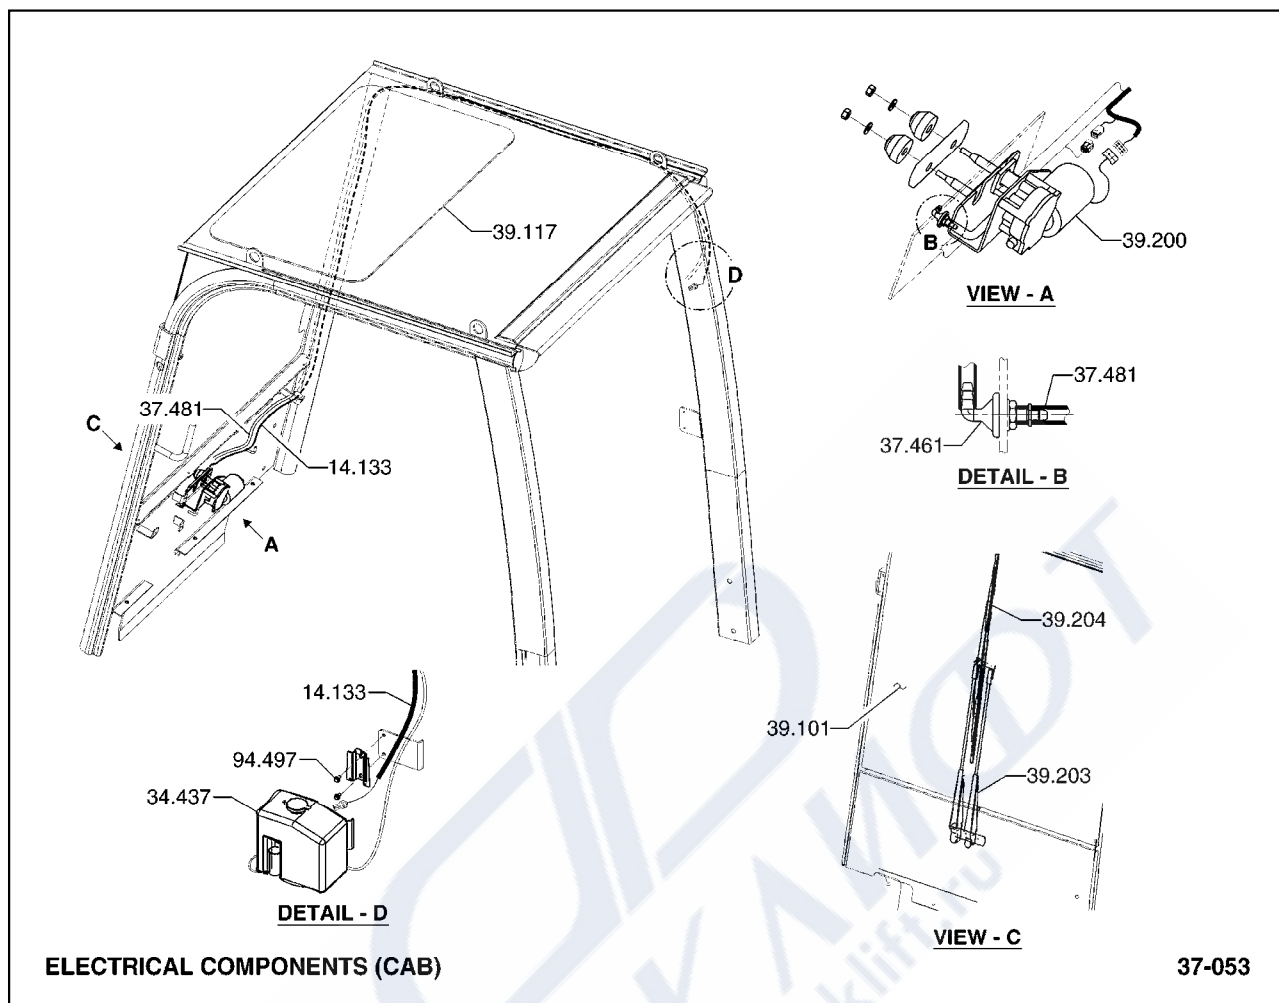 


14.133	WIRE, WIPER MOTOR 와이어
34.437	SEAL, LIFT CYLINDER BASE 씰
37.461	NOZZLE, WINDSHIELD GLASS WASHER 노즐
37.481	LINE, WINDOW GLASS WASHER 라인
39.101	GLASS, WINDSHIELD 글래스
39.117	ROOF SCREEN 루프스크린
39.200	MOTOR, WINDSHIELD WIPER 모터
39.203	ARM, WINDSHIELD WIPER 암
39.204	BLADE, WINDSHIELD WIPER 블레이드

94.497 FASTENER, WINDSHIELD WASHER TANK
패스너

 
ФОРКЛИФТ
www.forklift.ru

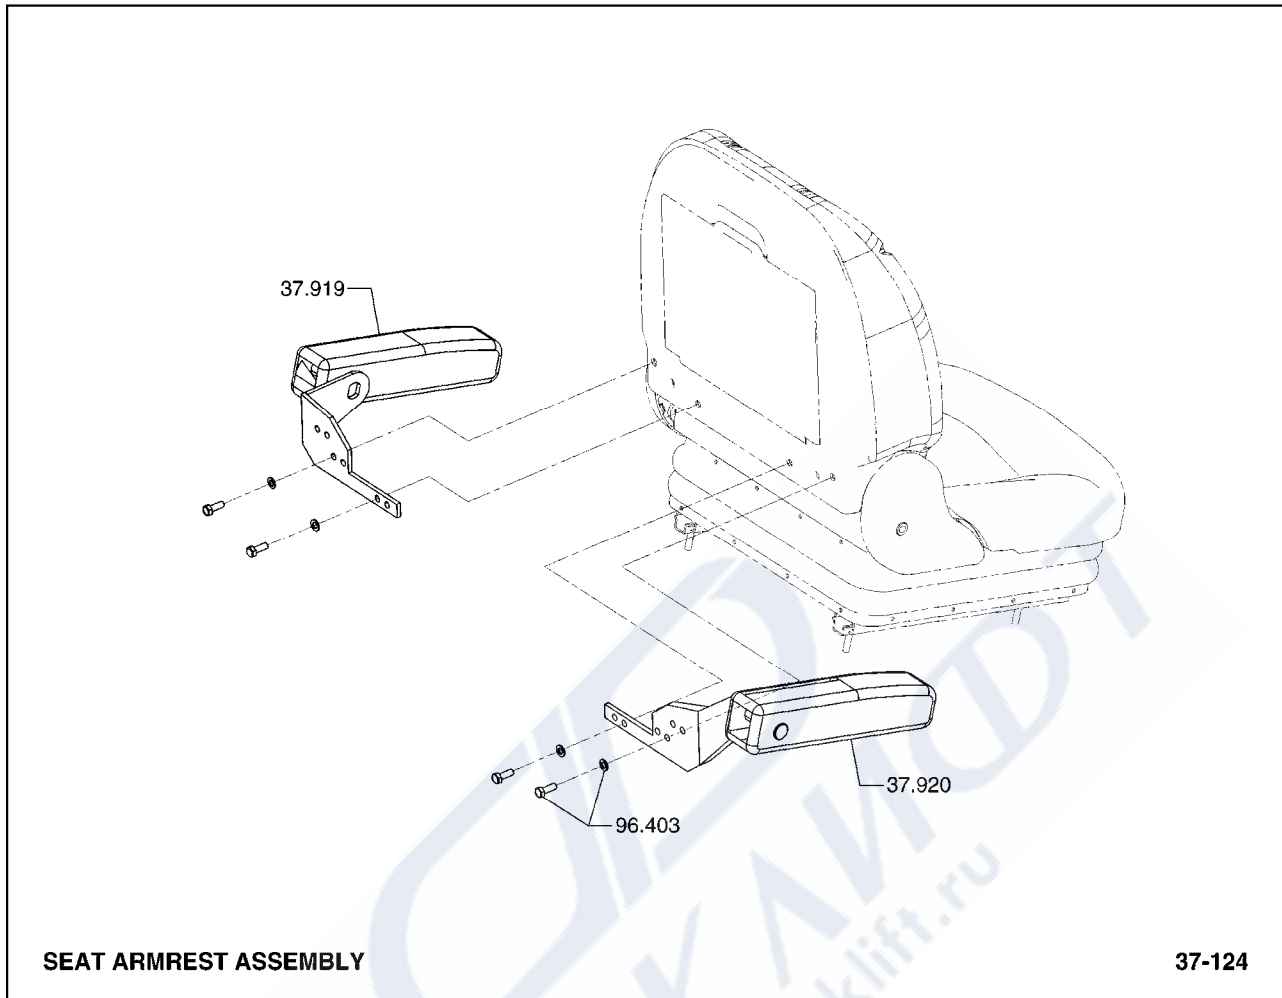



- | | |
|--------|---------------------------------------|
| 37.919 | ARMREST LH, SEAT
암레스트 |
| 37.920 | ARMREST RH, SEAT
암레스트 |
| 96.403 | FASTENER, SEAT ARMREST BRACKET
패스너 |

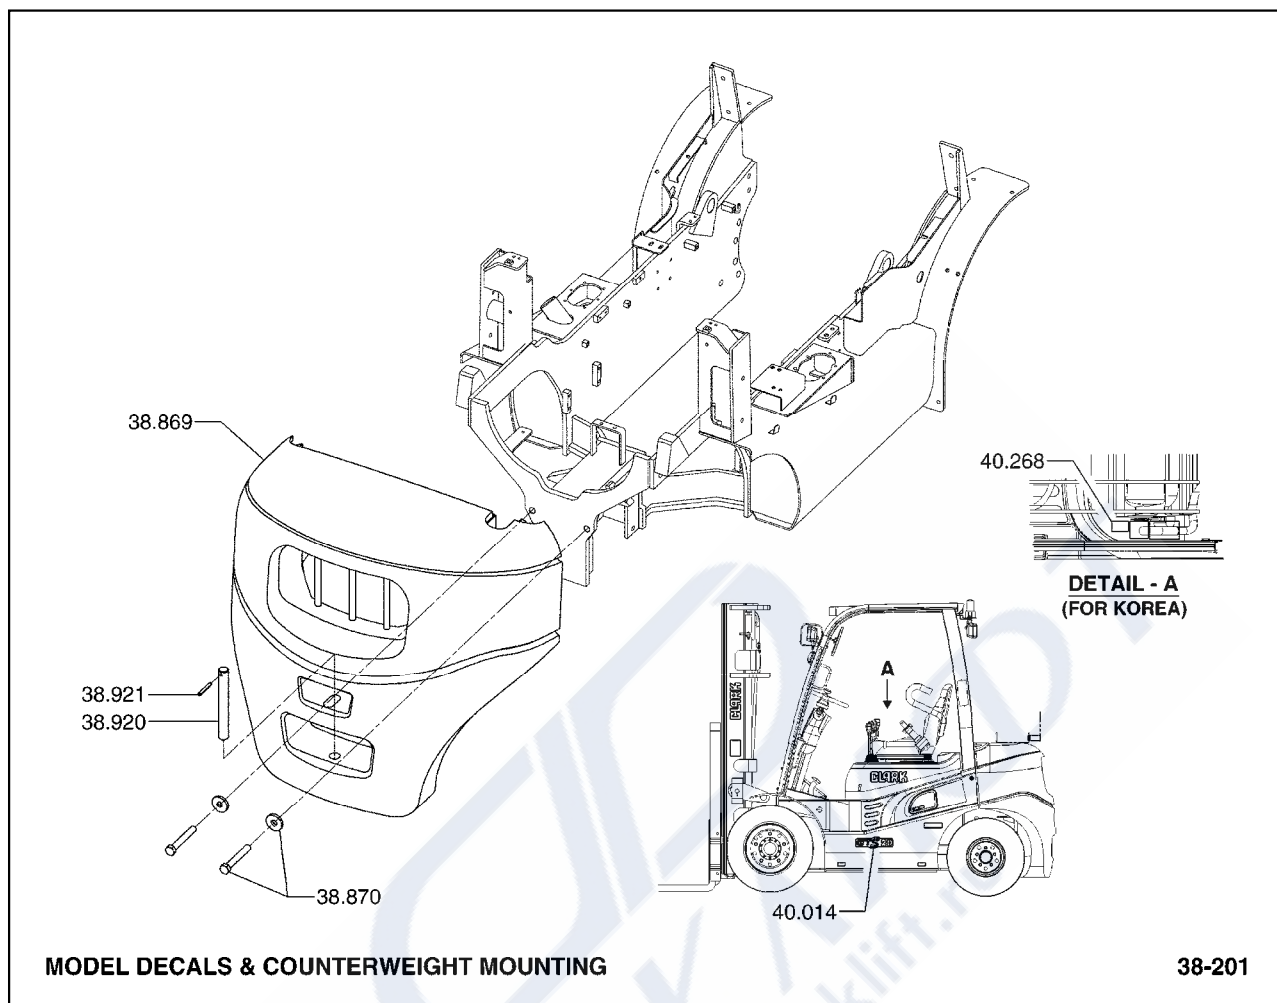 

38.869	COUNTERWEIGHT 카운터웨이트
38.870	FASTENER, COUNTERWEIGHT (LOWER) 패스너
38.920	PIN, COUPLER 핀
38.921	PIN, COUPLER PIN CROSS 핀
40.014	DECAL, MODEL NAME 데칼
40.268	DECAL, SPEC 데칼

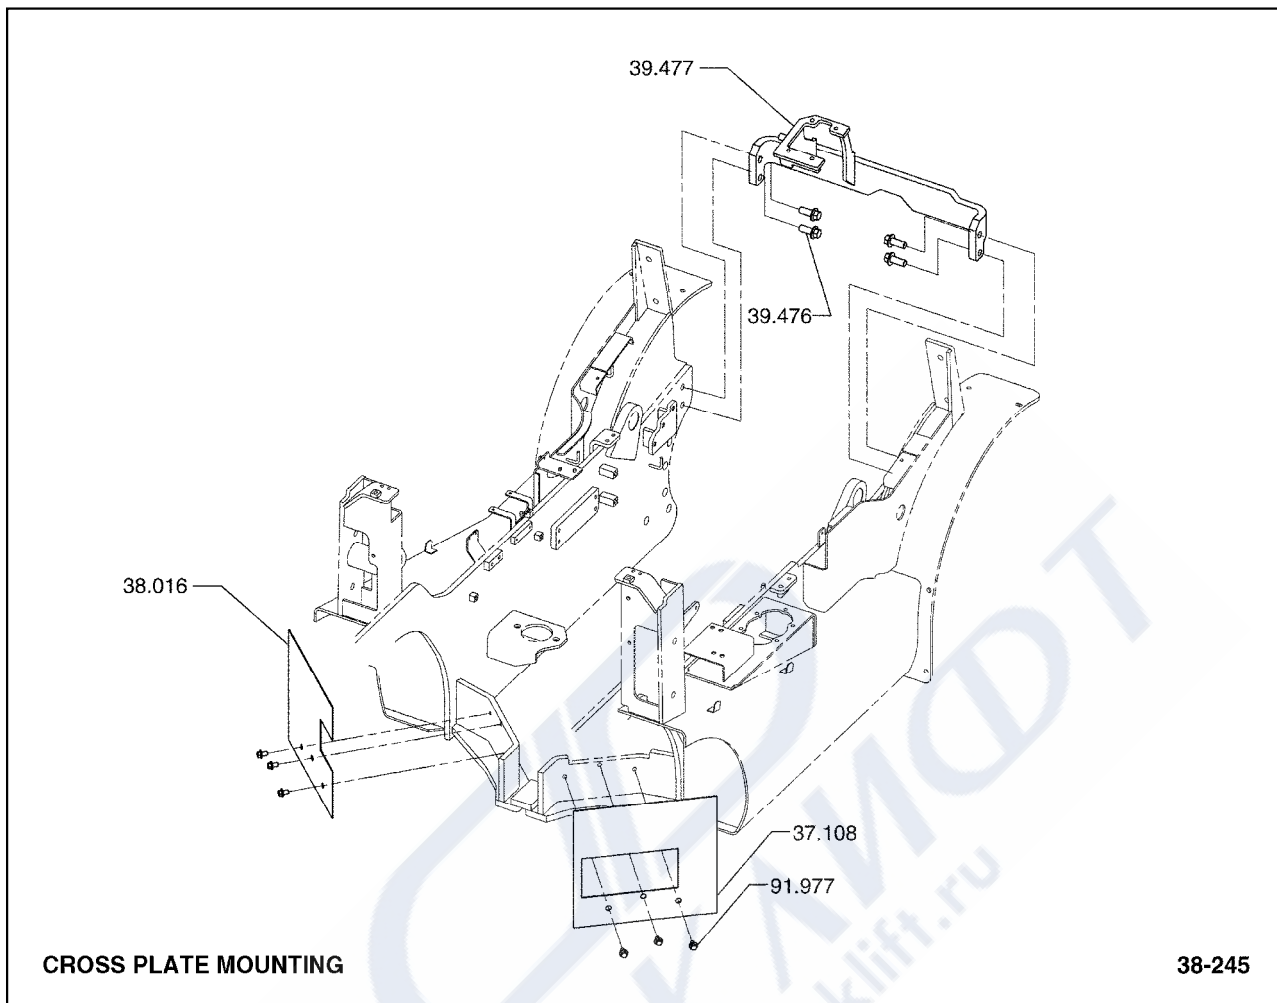 


37.108	SHIELD, RH REAR 실드
38.016	SHIELD, LH REAR 실드
39.476	FASTENER, CENTER FLOOR PLATE 패스너
39.477	PLATE, CENTER FLOOR 플레이트
91.977	FASTENER, REAR SHIELD 패스너

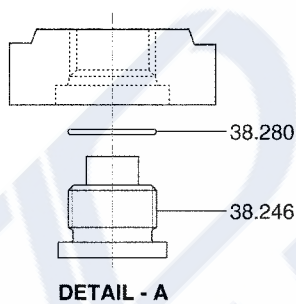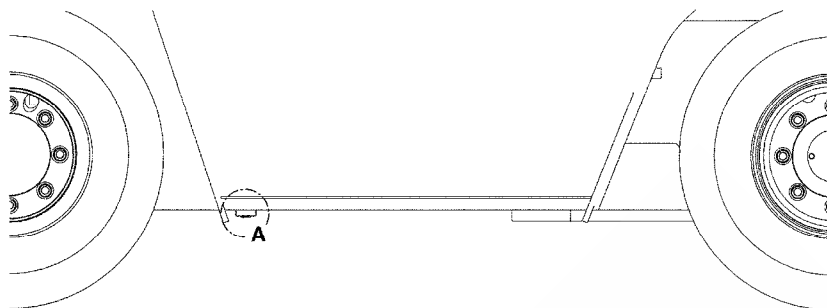  


FRAME TANK BOTTOM PLUG

38-270

- | | |
|--------|---------------------------------------|
| 38.246 | PLUG, FRAME BOTTOM MAGNETIC
플러그 |
| 38.280 | SEAL, FRAME BOTTOM MAGNETIC PLUG
씰 |

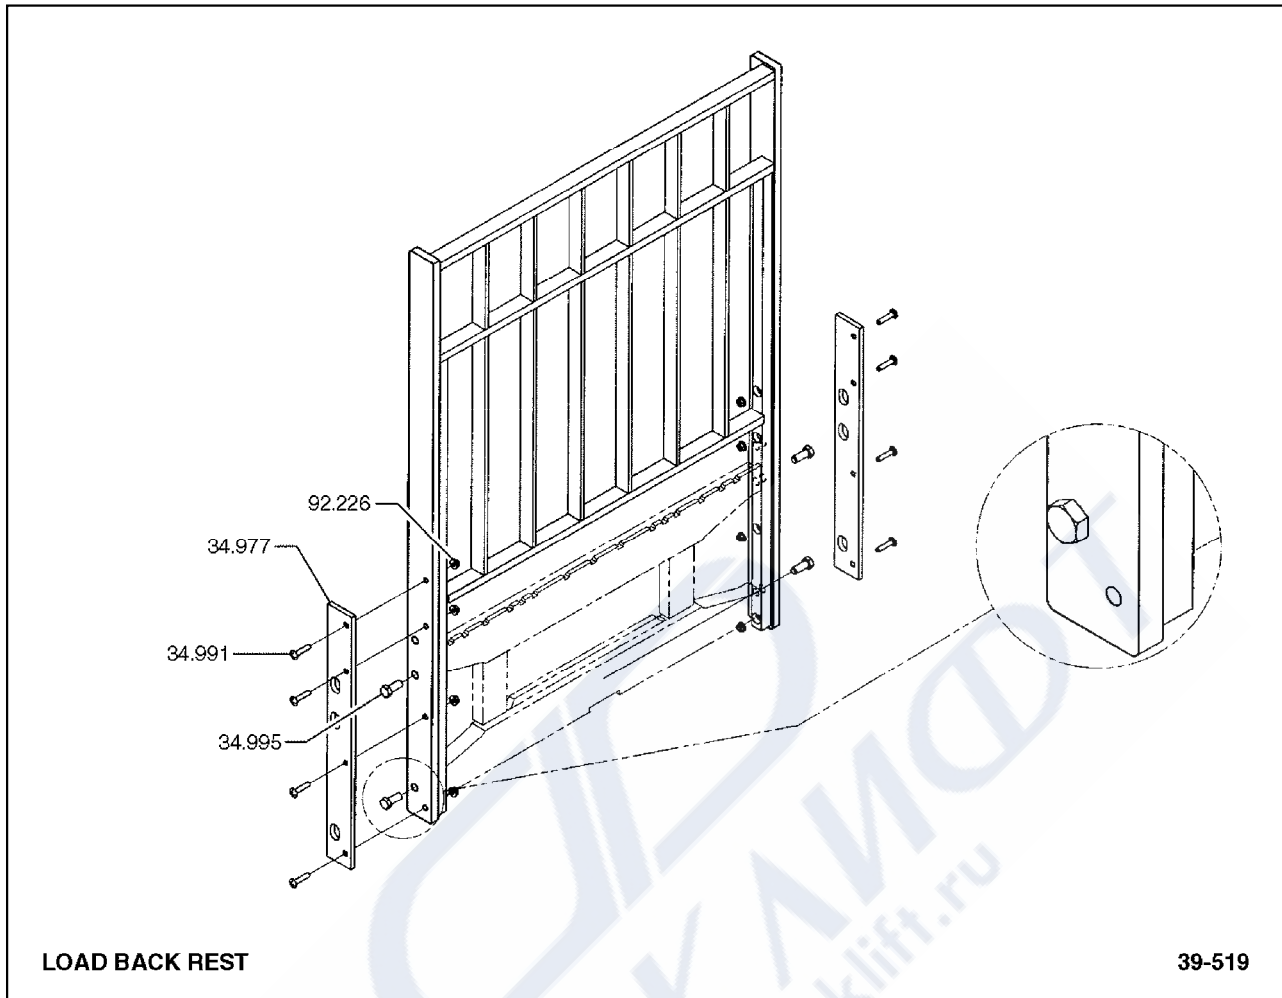 


- | | |
|--------|---|
| 34.977 | RETAINER, LOAD BACK REST TRUNNION PIN
리테이너 |
| 34.991 | FASTENER, LOAD SAFETY BACK REST EXT
패스너 |
| 34.995 | FASTENER, LOAD SAFETY BACK REST
패스너 |
| 92.226 | NUT, LOAD SAFETY BACK REST FASTENER
너트 |

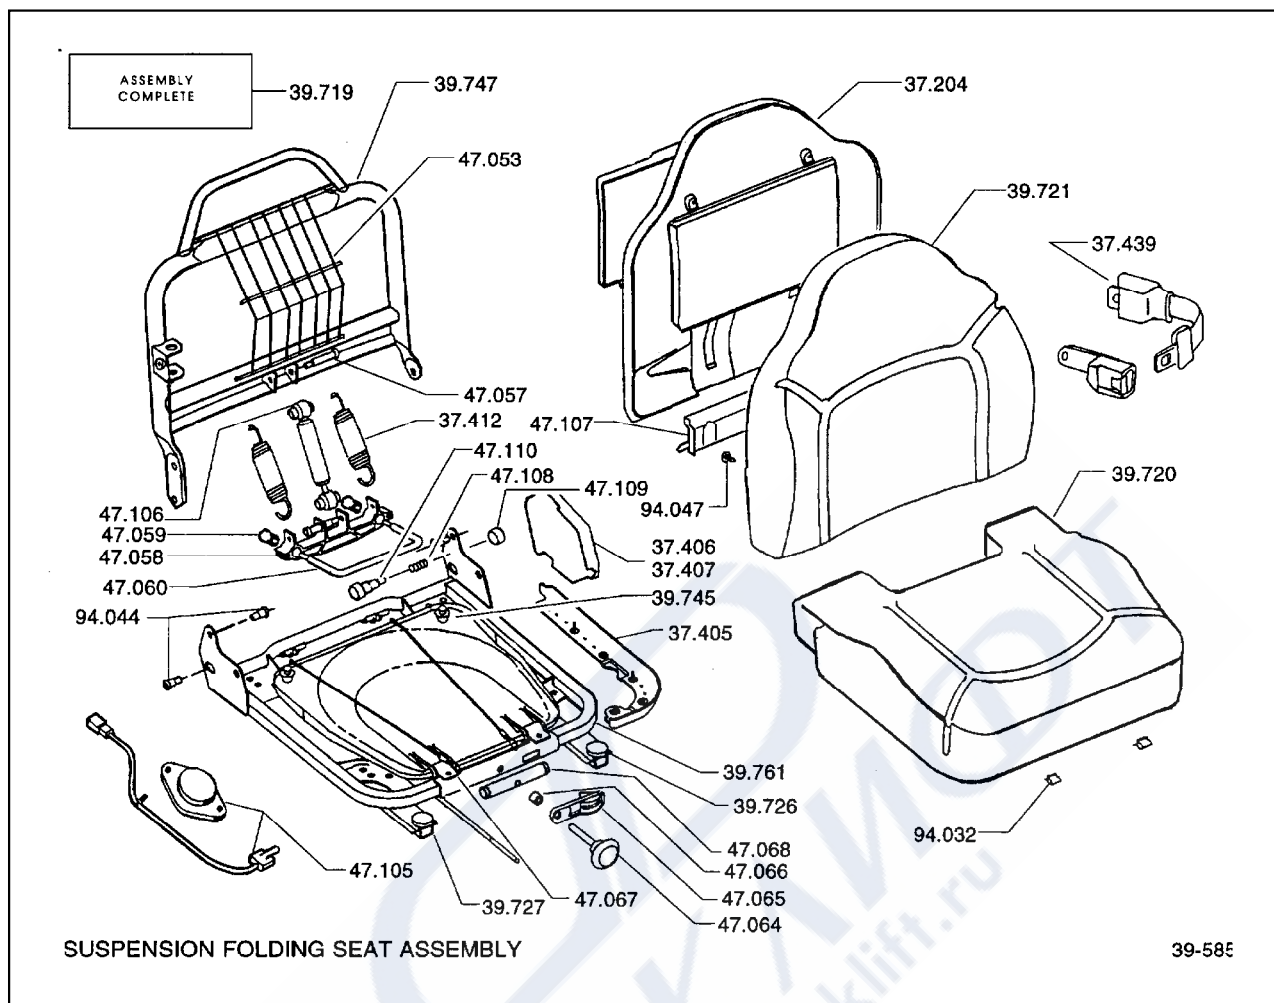 


37.204	COVER, SEAT BACK REST CUSHION 커버	47.057	PIN, BACK FRAME SHOCK 핀
37.405	TRIM, SEAT MOUNTING PLATE 트림	47.058	SADDLE SPRING, SPRING ARM 새들스프링
37.406	BRACKET, SEAT BACK REST COVER LH 브라켓	47.059	SADDLE BUSHING, SPRING ARM 새들부싱
37.407	BRACKET, SEAT BACK REST COVER RH 브라켓	47.060	SPRING ARM, SUSPENSION SEAT 스프링암
37.412	SPRING, SEAT SUSPENSION TENSION 스프링	47.064	KNOB, SEAT ASSEMBLY WEIGHT ADJUSTER 노브
37.439	SAFETY BELT, SEAT 안전벨트	47.065	WEIGHT INDICATOR ASSEMBLY 웨이트인디케이터
39.719	SEAT ASSEMBLY 시트	47.066	SPACER, SEAT ASSEMBLY WEIGHT ADJUST SCREW 스페이서
39.720	CUSHION, SEAT 쿠션	47.067	CLIP, FRONT SEAT FRAME 클립
39.721	CUSHION, SEAT BACK REST 쿠션	47.068	BAR, WEIGHT ADJUSTER 바
39.726	ADJUSTOR, SEAT 어드저스터	47.105	SWITCH KIT, SEAT 스위치키트
39.727	ADJUSTOR, SEAT WITH LATCH 어드저스터	47.106	SHOCK ABSORBER, SUSPENSION SEAT 쇼크업쇼버
39.745	BUMPER, SEAT SUPPORT 범퍼	47.107	COVER, MECHANISM 커버
39.747	PLATE, SEAT BACK REST CUSHION MOUNTING 플레이트	47.108	SPRING, SEAT ASSEMBLY PLUNGER 스프링
39.761	PLATE, SEAT CUSHION MOUNTING 플레이트	47.109	KNOB, FOLD DOWN SEAT 노브
47.053	LUMBAR FLEXOLATOR 롬바	47.110	PLUNGER, FOLD DOWN SEAT 플런저

94.032	RETAINER, SEAT FRAME 리테이너
94.044	FASTENER, SEAT CUSHION MOUNTING PLATE 패스너
94.047	FASTENER, SEAT BACK REST CUSHION 패스너



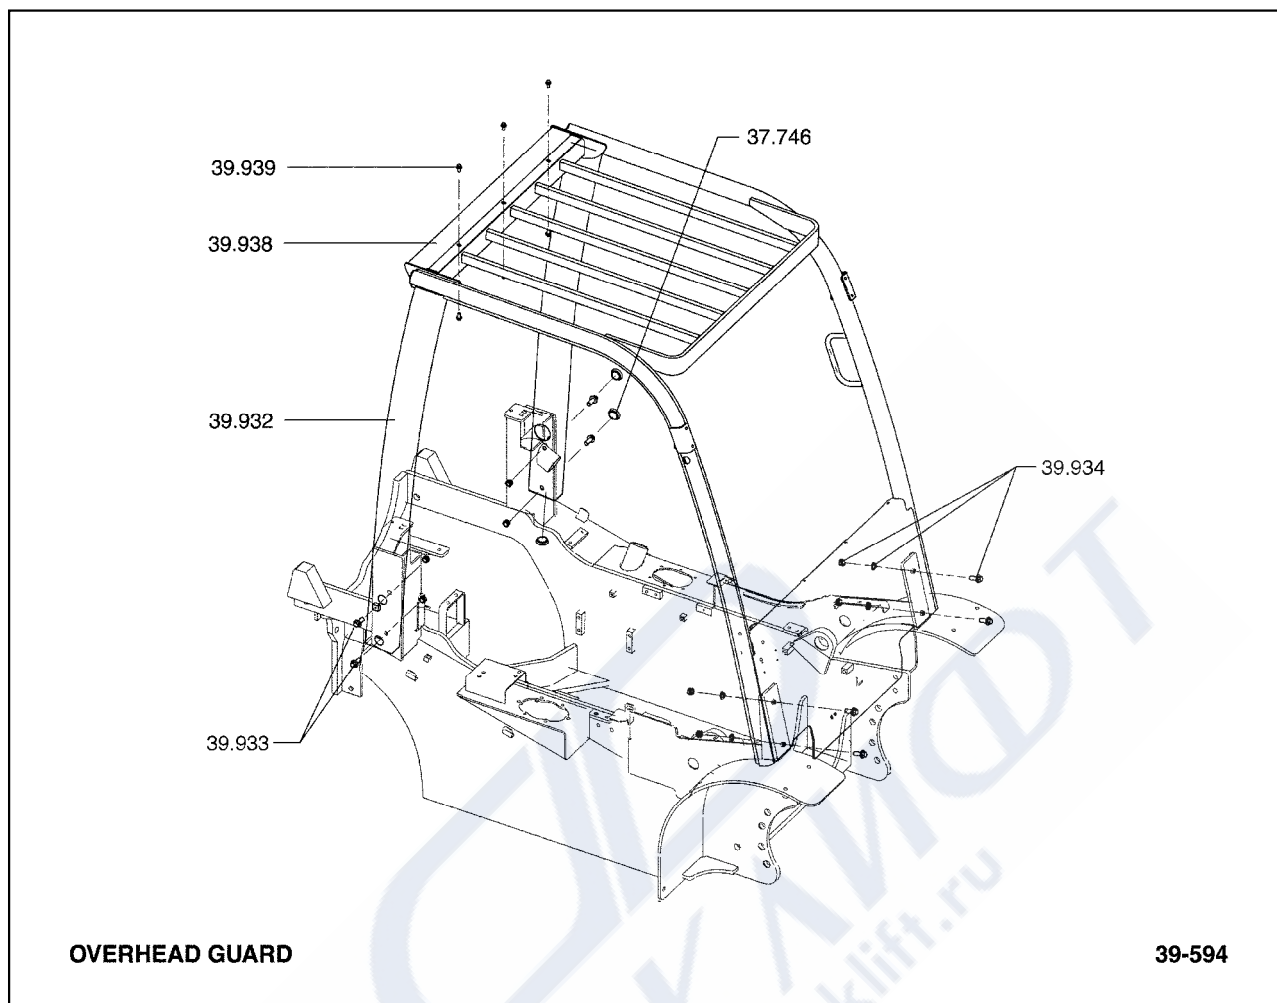 

37.746	PLUG, DRIVER OVERHEAD GUARD 플러그
39.932	GUARD, OVERHEAD 가드
39.933	FASTENER, OVERHEAD GUARD 패스너
39.934	FASTENER, OVERHEAD GUARD 패스너
39.938	BRACKET, OVERHEAD GUARD REAR SUPPORT 브라켓
39.939	FASTENER, OVERHEAD GUARD REAR SUPPORT BRACKET 패스너

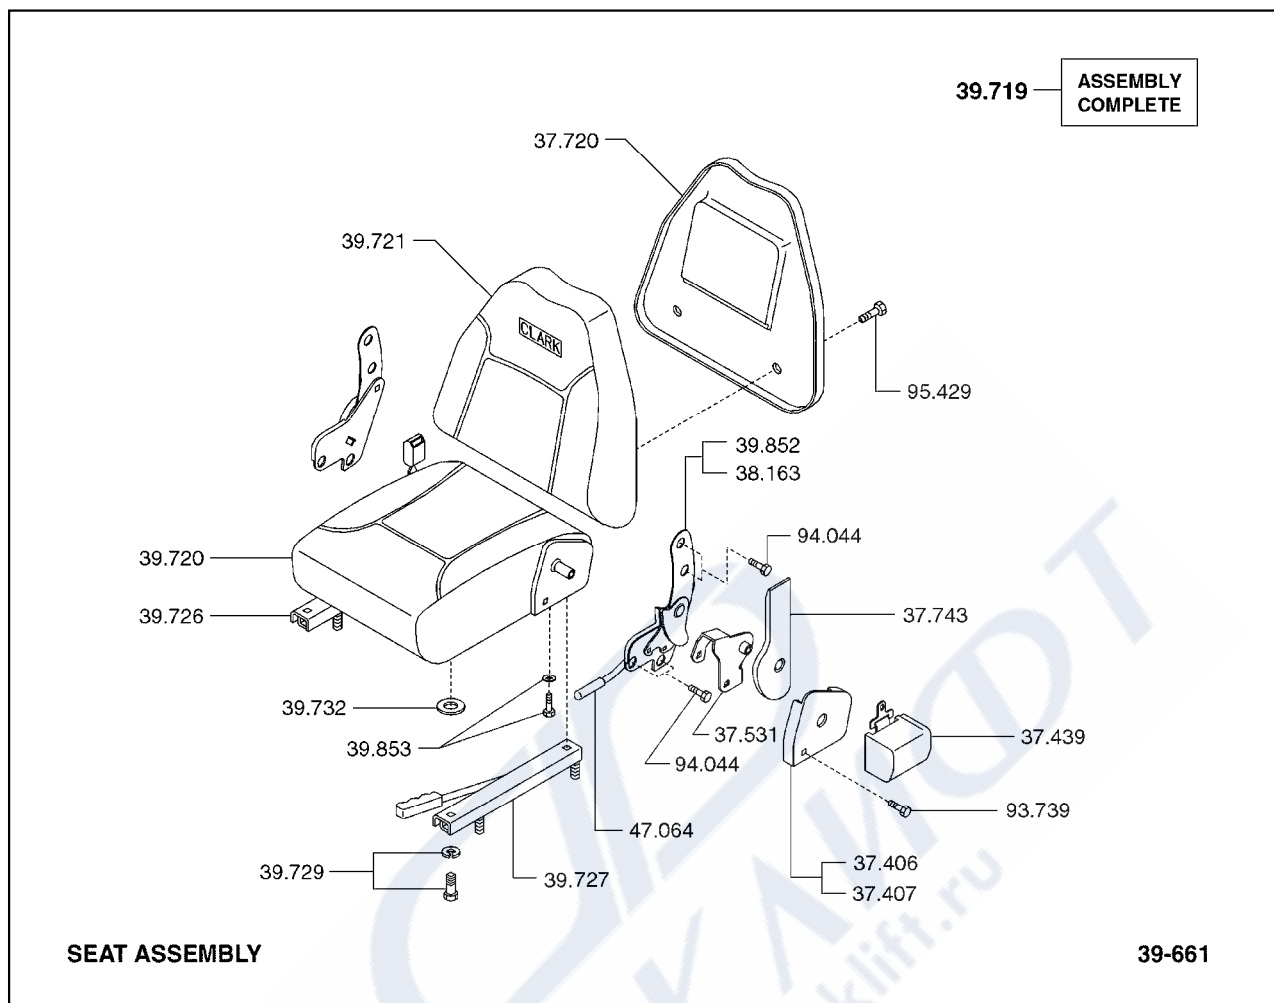 


37.406	BRACKET, SEAT BACK REST COVER LH 브라켓
37.407	BRACKET, SEAT BACK REST COVER RH 브라켓
37.439	SAFETY BELT, SEAT 안전벨트
37.531	BRACKET, SEAT SAFETY BELT MOUNTING 브라켓
37.720	COVER, OPERATOR SEAT LATERAL RESTRAINT 커버
37.743	COVER, SEAT SUPPORT LATCH 커버
38.163	BRACKET, SEAT SUPPORT RH 브라켓
39.719	SEAT ASSEMBLY 시트
39.720	CUSHION, SEAT 쿠션

39.721	CUSHION, SEAT BACK REST 쿠션
39.726	ADJUSTOR, SEAT 어드저스터
39.727	ADJUSTOR, SEAT WITH LATCH 어드저스터
39.729	FASTENER, ADJUSTOR TO SEAT SUPPORT 패스너
39.732	SPACER, SEAT FRAME TO ADJUSTOR 스페이서
39.852	BRACKET, SEAT SUPPORT LH 브라켓
39.853	FASTENER, SEAT SUPPORT BRACKET 패스너
47.064	KNOB, SEAT ASSEMBLY WEIGHT ADJUSTER 노브
93.739	FASTENER, SAFETY BELT ASSEMBLY 패스너
94.044	FASTENER, SEAT CUSHION MOUNTING PLATE 패스너
95.429	FASTENER, SEAT LATERAL RESTRAINT COVER 패스너



 
■ INDICATES AN ASSEMBLY
HAVING SERVICEABLE
COMPONENTS ILLUSTRATED
ELSEWHERE

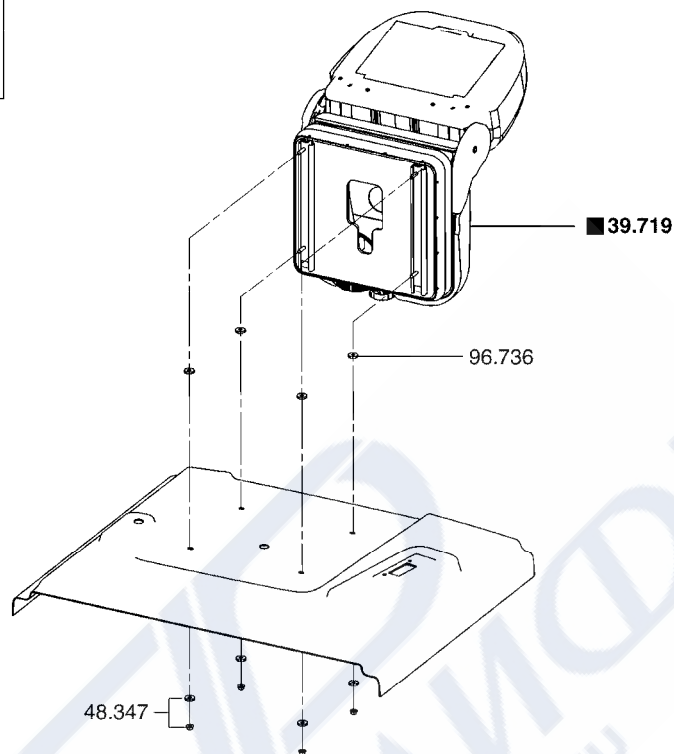

SEAT MOUNTING

39-829

39.719	SEAT ASSEMBLY 시트
48.347	FASTENER, SEAT ASSEMBLY 패스너
96.736	WASHER, SEAT ASSEMBLY FASTENER 와셔

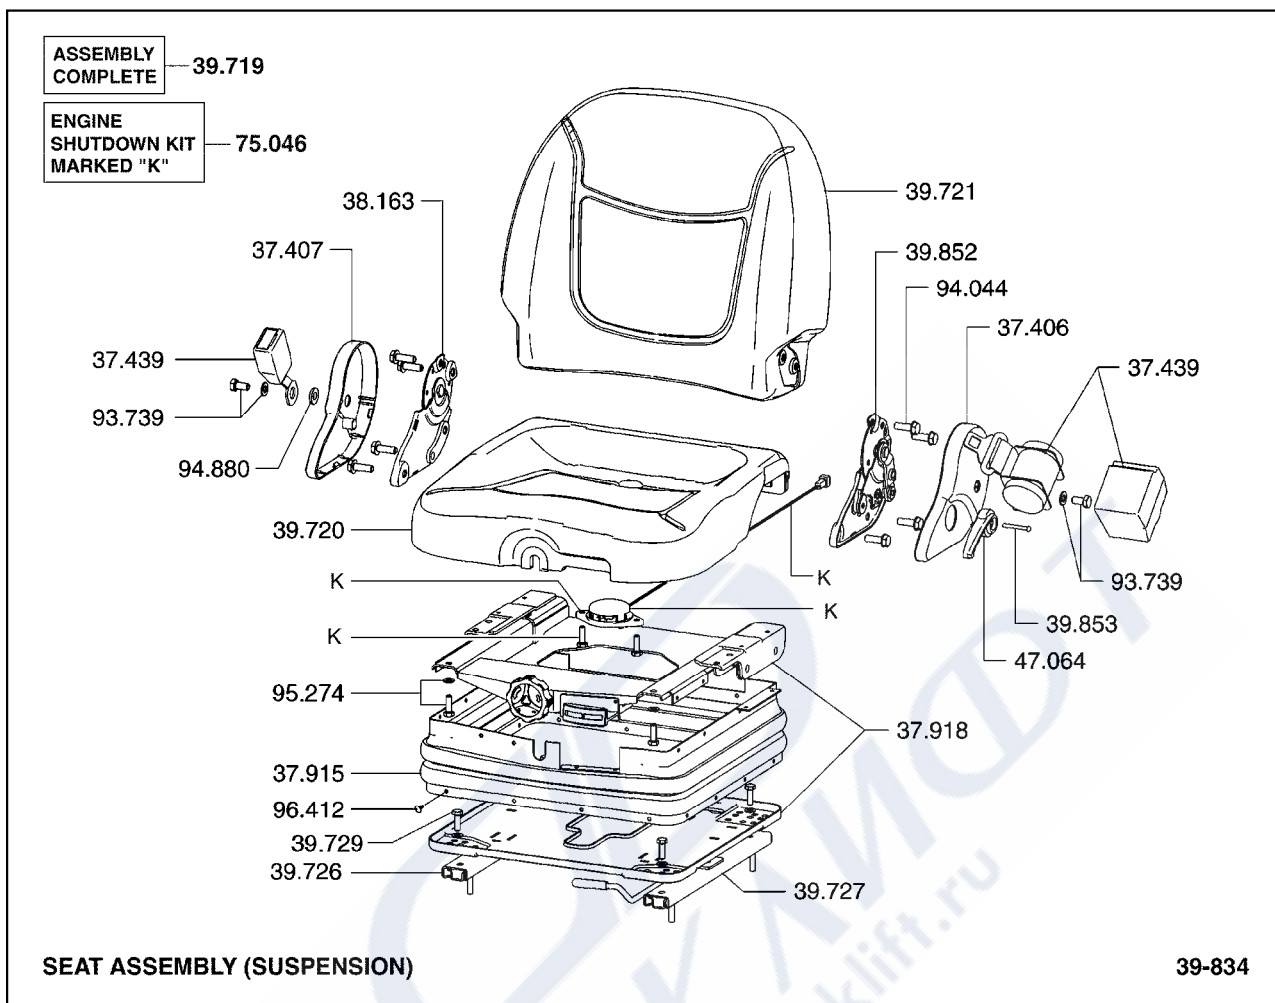 


37.406	BRACKET, SEAT BACK REST COVER LH 브라켓
37.407	BRACKET, SEAT BACK REST COVER RH 브라켓
37.439	SAFETY BELT, SEAT 안전벨트
37.915	SUSPENSION COVER, SEAT SUSPENSION 서스펜션커버
37.918	SUSPENSION ASSEMBLY, SEAT 서스펜션
38.163	BRACKET, SEAT SUPPORT RH 브라켓
39.719	SEAT ASSEMBLY 시트
39.720	CUSHION, SEAT 쿠션
39.721	CUSHION, SEAT BACK REST 쿠션

39.726	ADJUSTOR, SEAT 어드저스터
39.727	ADJUSTOR, SEAT WITH LATCH 어드저스터
39.729	FASTENER, ADJUSTOR TO SEAT SUPPORT 패스너
39.852	BRACKET, SEAT SUPPORT LH 브라켓
39.853	FASTENER, SEAT SUPPORT BRACKET 패스너
47.064	KNOB, SEAT ASSEMBLY WEIGHT ADJUSTER 노브
75.046	KIT, SEAT ACTUATED ENGINE SHUTDOWN 키트
93.739	FASTENER, SAFETY BELT ASSEMBLY 패스너
94.044	FASTENER, SEAT CUSHION MOUNTING PLATE 패스너
94.880	FASTENER, SEAT SUPPORT CATCH BRACKET 패스너
95.274	FASTENER, SEAT CUSHION SUSPENSION SUPPORT 패스너
96.412	FASTENER, SEAT SUSPENSION BACK SIDE COVER 패스너



ASSEMBLY
COMPLETE — 39.248LH
— 39.977RH

 
NOTE :
ITEMS TO BE NOT SOLD
SEPARATELY MARKED "NSS"

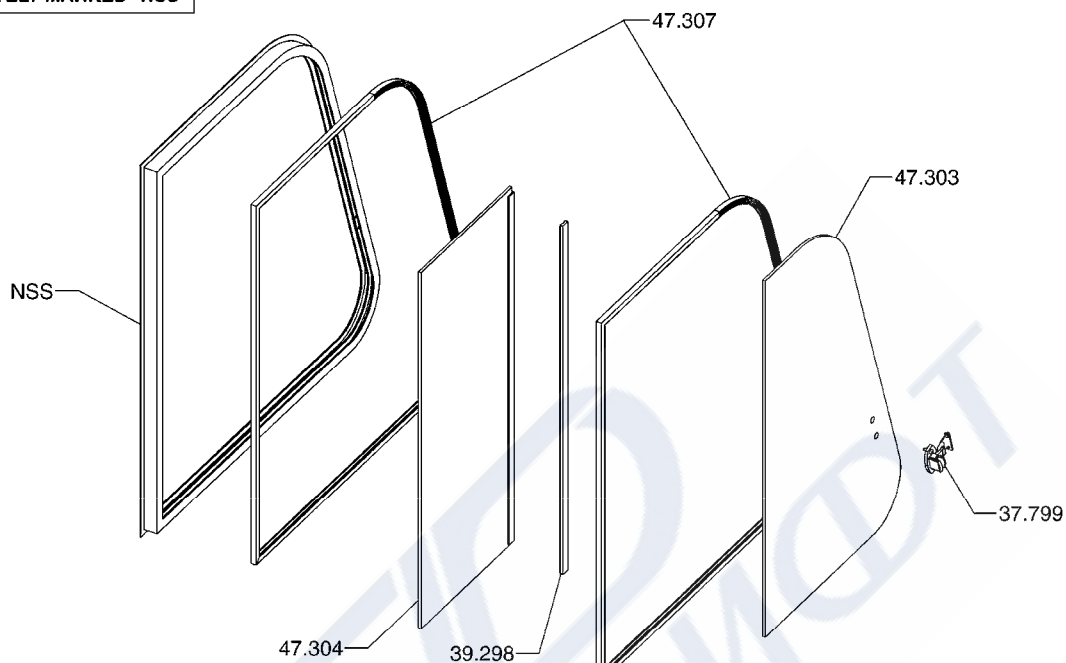


CAB DOOR SASH ASSEMBLY

39-902

37.799	LATCH, CAB DOOR WINDOW ASSEMBLY 래치
39.248	WINDOW ASSEMBLY, CAB DOOR (LH) 윈도우
39.298	CHANNEL, FRONT DOOR GLASS - FRONT 채널
39.977	WINDOW ASSEMBLY, CAB DOOR (RH) 윈도우
47.303	GLASS, CAB DOOR (FRONT) 글래스
47.304	GLASS, CAB DOOR (REAR) 글래스
47.307	CHANNEL, CAB SIDE DOOR WINDOW 채널

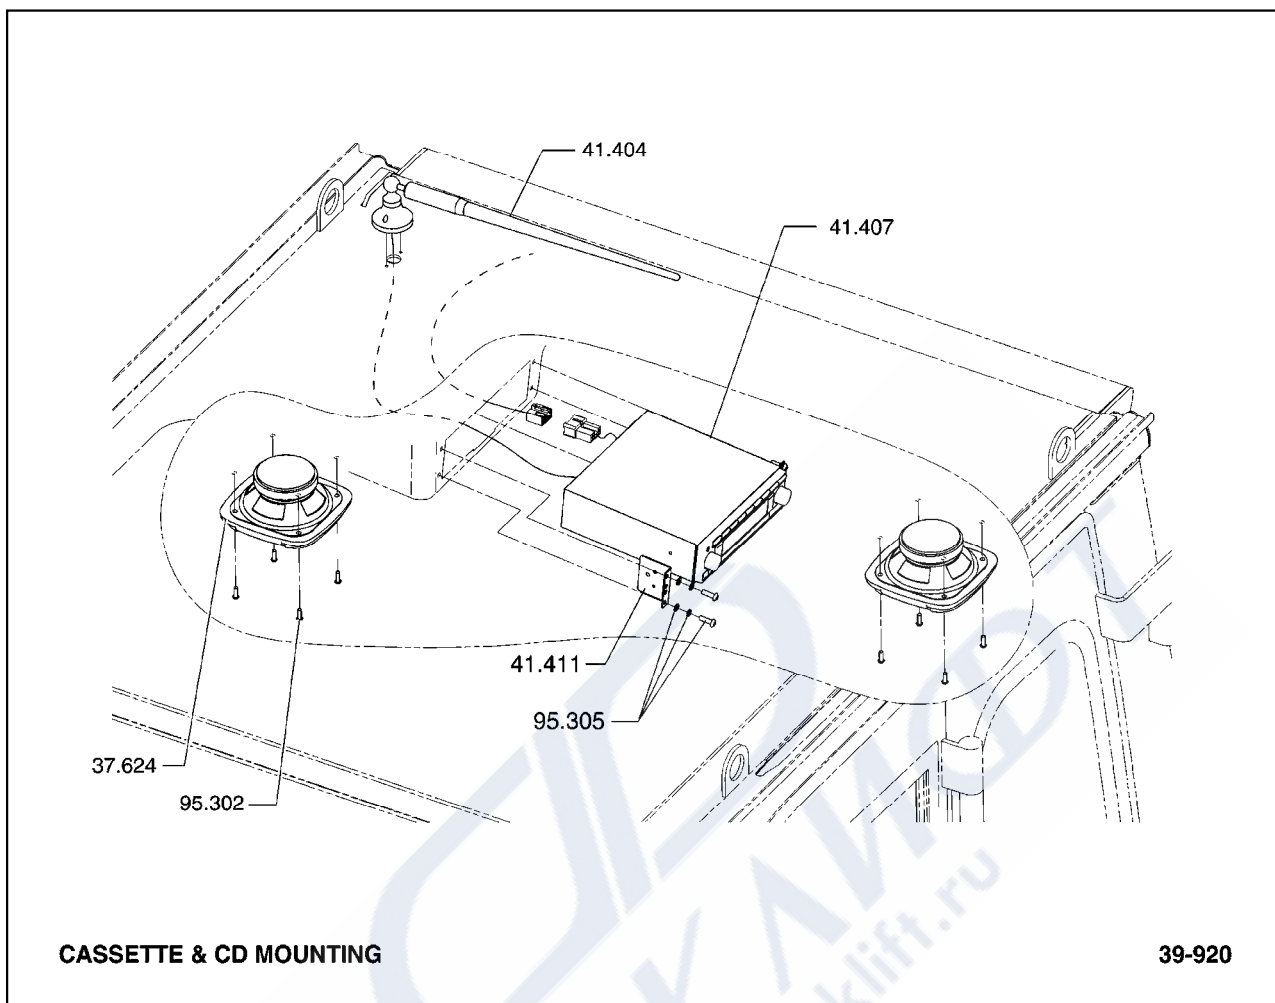 



37.624	SPEAKER, CABIN 스피커
41.404	ANTENNA, AUDIO 안테나
41.407	AUDIO 오디오
41.411	BRACKET, AUDIO AND TRANSCEIVER BOX MOUNTING 브라켓
95.302	FASTENER, LOUDSPEAKER 패스너
95.305	FASTENER, AUDIO AND TRANSCEIVER BOX TO MOUNTING BR 패스너

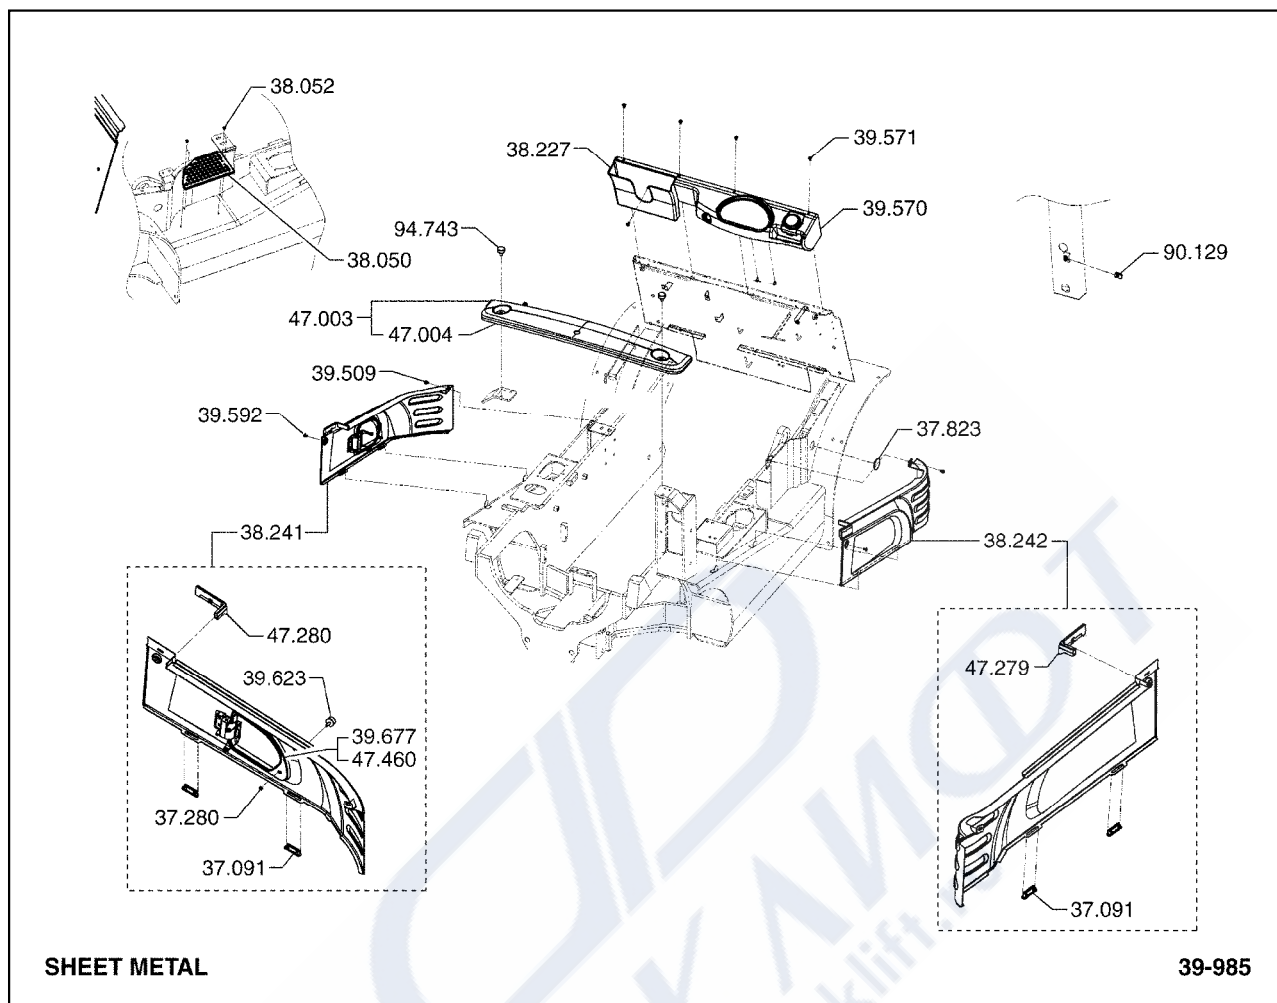 

37.091	DAMPENER, SIDE MEMBER VIBRATION 댐프너
37.280	CAPSCREW, FRAME SIDE PLATE 캡스크류
37.823	PLUG, CAB FRONT FRAME SUPPORT FASTENER PROTECTION 플러그
38.050	STEP ASSEMBLY, LH 스텝
38.052	FASTENER, STEP FRONT 패스너
38.227	POCKET, DASH PANEL 포켓
38.241	COVER ASSEMBLY, SIDE LH 커버
38.242	COVER ASSEMBLY, SIDE RH 커버
39.509	FASTENER, SIDE HOOD 패스너

39.570	COVER ASSEMBLY, DASH 커버
39.571	FASTENER, DASH COVER 패스너
39.592	FASTENER, SIDE HOOD 패스너
39.623	DAMPENER, FRAME SIDE PLATE 댐프너
39.677	DOOR, FUEL FILLER 도어
47.003	COVER, RADIATOR 커버
47.004	SEAL, RADIATOR COVER 씰
47.279	RUBBER, SIDE COVER RH 러버
47.280	RUBBER, SIDE COVER LH 러버
47.460	HINGE, FUEL FILLER DOOR 힌지
90.129	NUT, OVERHEAD GUARD REAR LEG FASTENER 너트
94.743	FASTENER, RADIATOR COVER TRIM 패스너

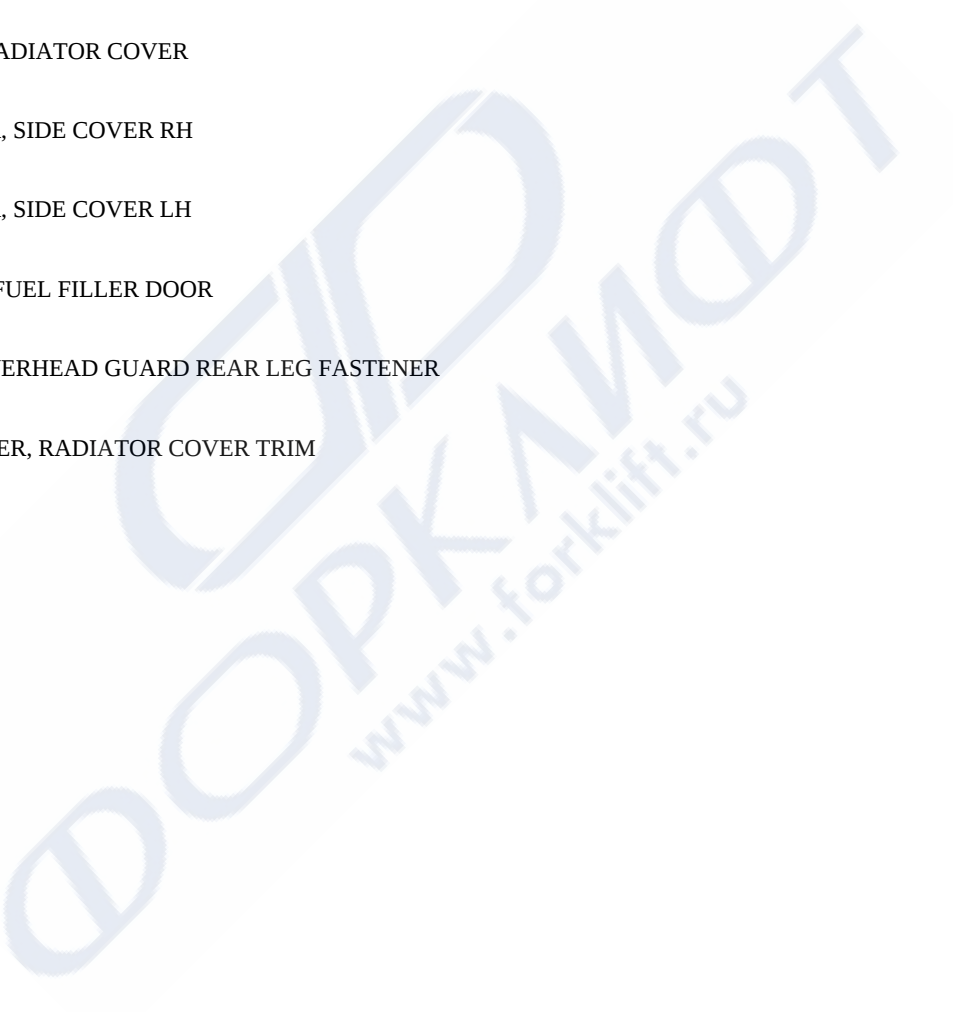 

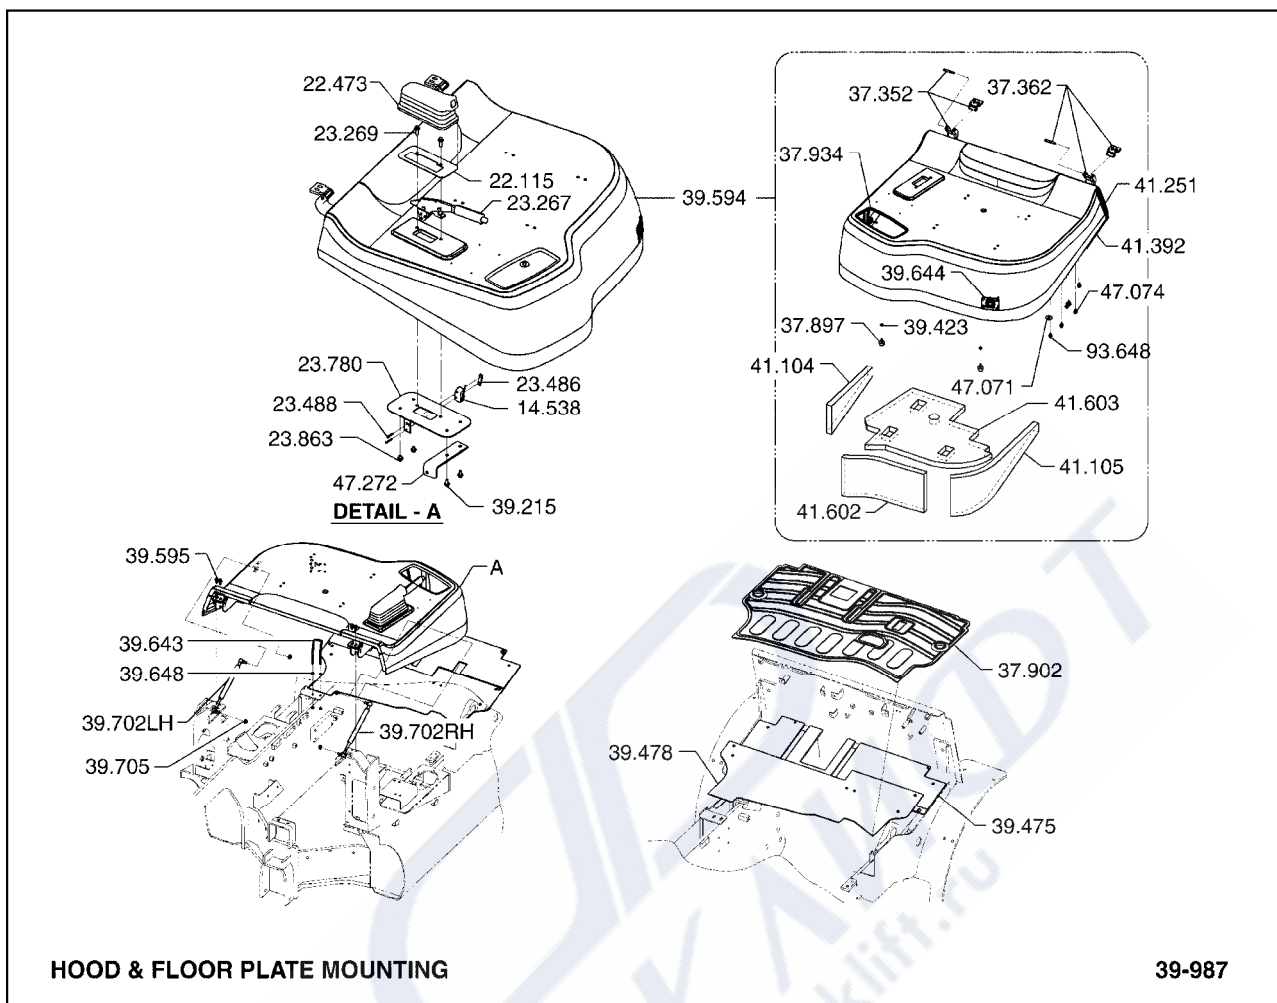 


HOOD & FLOOR PLATE MOUNTING

39-987

14.538	SWITCH, PARK BRAKE 스위치	39.423	FASTENER, TOP HOOD 패스너
22.115	SUPPORT, PARKING BRAKE LEVER MOUNTING BRACKET 서포트	39.475	PLATE, FRONT FLOOR 플레이트
22.473	COVER, HAND BRAKE LEVER 커버	39.478	PLATE, REAR FLOOR 플레이트
23.267	LEVER, PARKING BRAKE 레버	39.594	HOOD, TOP 후드
23.269	FASTENER, PARKING BRAKE LEVER 패스너	39.595	FASTENER, TOP HOOD 패스너
23.486	SIDE PLATE, PARKING BRAKE 사이드플레이트	39.643	CATCH, TOP HOOD LATCH 캐치
23.488	FASTENER, PARKING BRAKE SIDE PLATE 패스너	39.644	LATCH, TOP HOOD 래치
23.780	SUPPORT, PARKING BRAKE LINKAGE 서포트	39.648	FASTENER, TOP HOOD LATCH CATCH 패스너
23.863	FASTENER, PARKING BRAKE LEVER BRACKET 패스너	39.702	PROP, HOOD 지지대
37.352	BRACKET, TOP HOOD SPRING (RH) 브라켓	39.705	FASTENER, HOOD PROP 패스너
37.362	BRACKET, TOP HOOD SPRING (LH) 브라켓	41.104	SOUND SEAL, RH SIDE HOOD 사운드씰
37.897	BUMPER, TOP HOOD 범퍼	41.105	SOUND SEAL, LH SIDE HOOD 사운드씰
37.902	MAT, FLOORPLATE 매트	41.251	SOUND SEAL, TOP HOOD 사운드씰
37.934	SEAL, HOOD ACCESS COVER 씰	41.392	SOUND SEAL, TOP HOOD 사운드씰
39.215	FASTENER, GAS SPRING 패스너	41.602	SOUND SEAL, ENGINE HOOD 사운드씰

41.603	SOUND SEAL, ENGINE HOOD 사운드씰
47.071	FASTENER, TOP HOOD COVER 패스너
47.074	FASTENER, TOP HOOD SPRING BRACKET 패스너
47.272	BRACKET, CAB REAR GLASS GAS SPRING MOUNTING 브라켓
93.648	FASTENER, TOP HOOD SUPPORT HINGE BASE 패스너



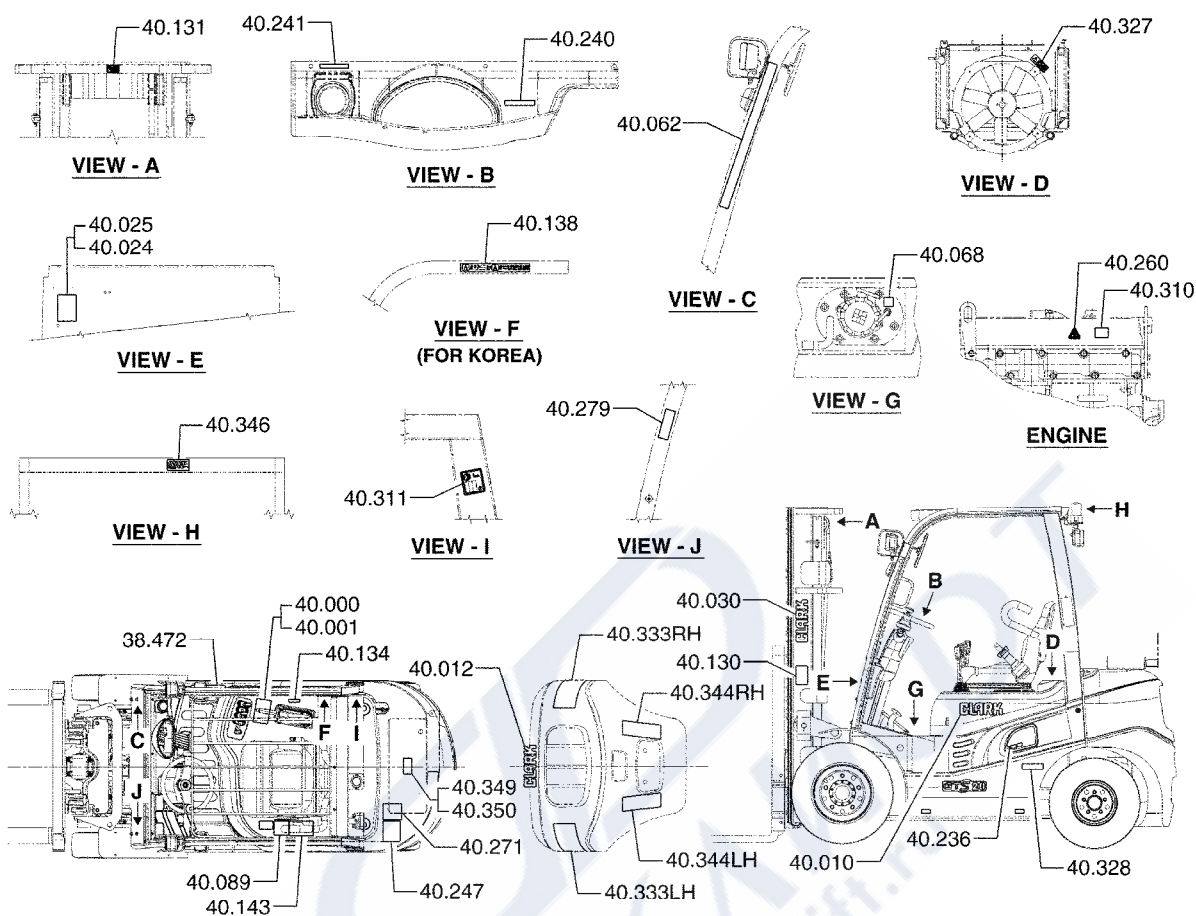 


DECALS

40-011

38.472	PAD, RH STEP NON-SKID 패드	40.143	DECAL, OPERATORS INSTRUCTIONS 데칼
40.000	PLATE, CAPACITY & SERIAL NUMBER 플레이트	40.236	DECAL, FUEL 데칼
40.001	FASTENER, CAPACITY & SERIAL PLATE 패스너	40.240	DECAL, FUEL WARNING 데칼
40.010	DECAL, CLARK 데칼	40.241	DECAL, BRAKE OIL SPEC 데칼
40.012	DECAL, CLARK LOGO-SMALL 데칼	40.247	DECAL, LPG FUEL CYL REPLACEMENT PROCEDURE 데칼
40.024	PLATE, UNDERWRITERS LABEL 플레이트	40.260	DECAL, HOT SURFACE WARNING 데칼
40.025	FASTENER, UNDERWRITERS LABEL PLATE 패스너	40.271	DECAL, LP GAS 데칼
40.030	DECAL, CLARK VERTICAL 데칼	40.279	DECAL, STARTING PROCEDURE 데칼
40.062	DECAL, DRIVERS CAUTION 데칼	40.310	DECAL, EXHAUST GAS 데칼
40.068	DECAL, HYD-SYSTEM OIL 데칼	40.311	DECAL, SOUND POWER LEVEL 데칼
40.089	PLATE, SAFETY INSTRUCTION 플레이트	40.327	DECAL, FAN WARNING 데칼
40.130	LEGEND, SAFETY 범례	40.328	DECAL, WHEEL NUT WARNING 데칼
40.131	LEGEND, SAFETY 범례	40.333	REFLECTOR, COUNTERWEIGHT 리플렉터
40.134	DECAL, OPERATORS MANUAL LOCATION 데칼	40.344	REFLECTOR, COUNTERWEIGHT LOWER 리플렉터
40.138	DECAL, SAFETY 데칼	40.346	DECAL, OVERHEAD GUARD DROP TEST 데칼


40.349	PLATE, LESS LP TANK 플레이트
40.350	FASTENER, PLATE LESS LP TANK 패스너



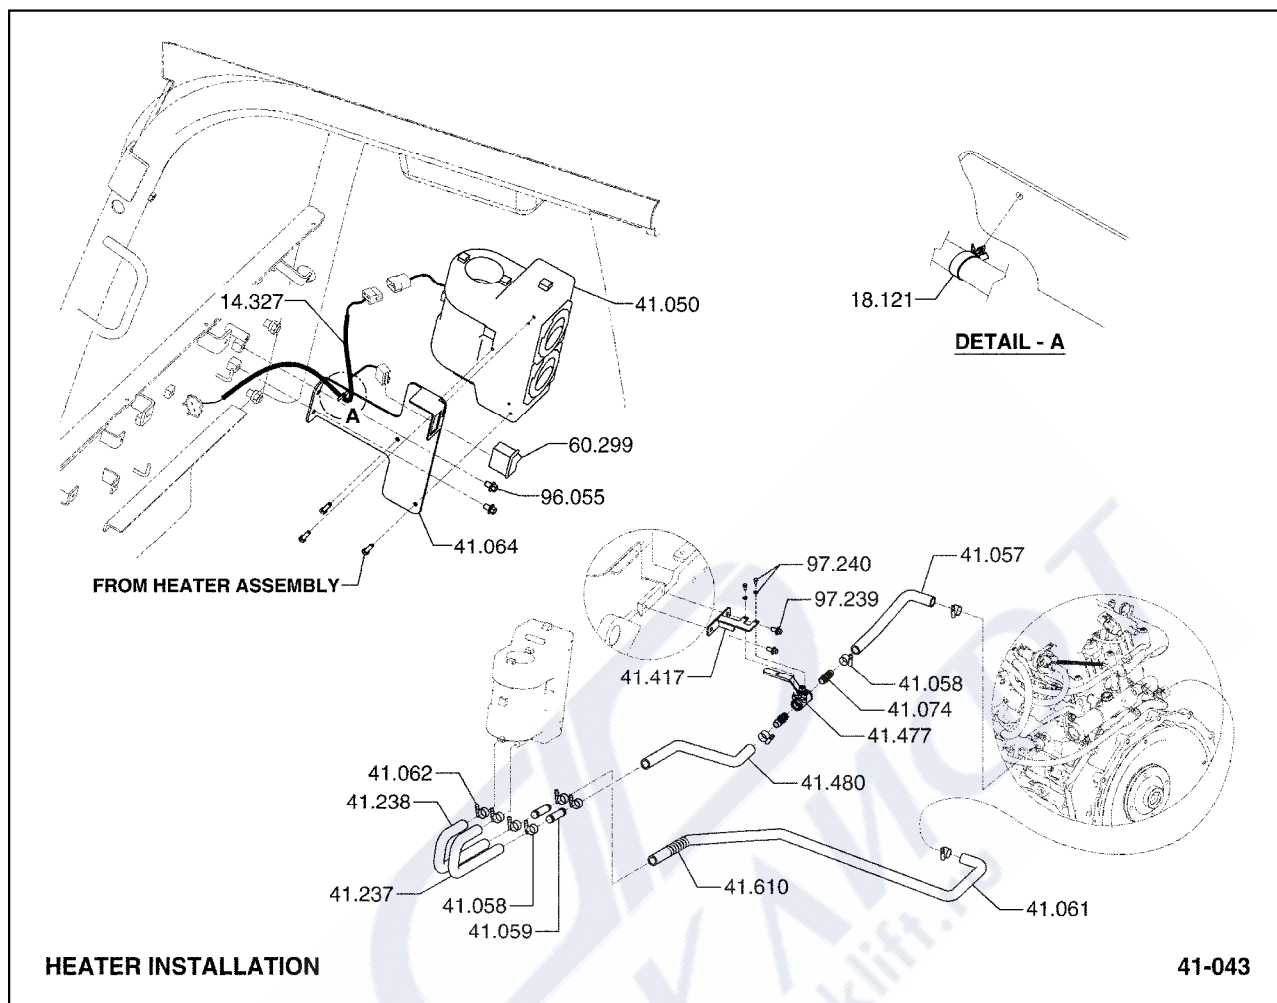 


14.327	WIRE, SWITCH HEATER CONTROL 와이어
18.121	CLIP, HEATER CONTROL WIRE 클립
41.050	HEATER ASSEMBLY 히터
41.057	LINE, HEATER INLET 라인
41.058	CLAMP, HEATER INLET LINE 클램프
41.059	FITTING, HEATER LINE (ENGINE) 피팅
41.061	LINE, HEATER OUTLET 라인
41.062	CLAMP, HEATER OUTLET LINE 클램프
41.064	BRACKET, HEATER MOUNTING 브라켓

41.074	FITTING, HEATER LINE (ENGINE) 피팅
41.237	LINE, HEATER INLET 라인
41.238	LINE, HEATER OUTLET 라인
41.417	BRACKET, HEATER VALVE 브라켓
41.477	VALVE, HEATER LINE 밸브
41.480	HOSE, HEATER 호스
41.610	GUARD, HEATER HOSE 가드
60.299	SWITCH, HEATER ON/OFF 스위치
96.055	FASTENER, HEATER MOUNTING BRACKET 패스너
97.239	FASTENER, HEATER VALVE BRACKET 패스너
97.240	FASTENER, HEATER VALVE MOUNTING 패스너

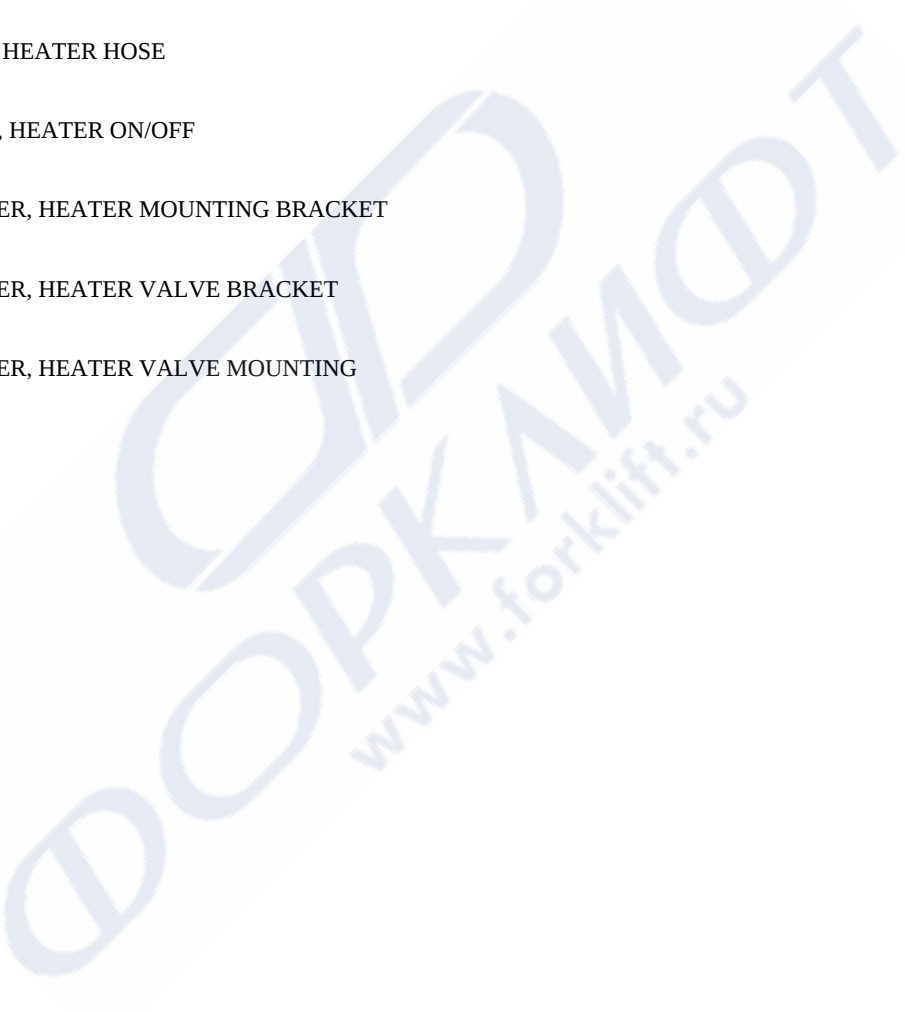 

SEAT SAFETY
WING KIT

 
37.970

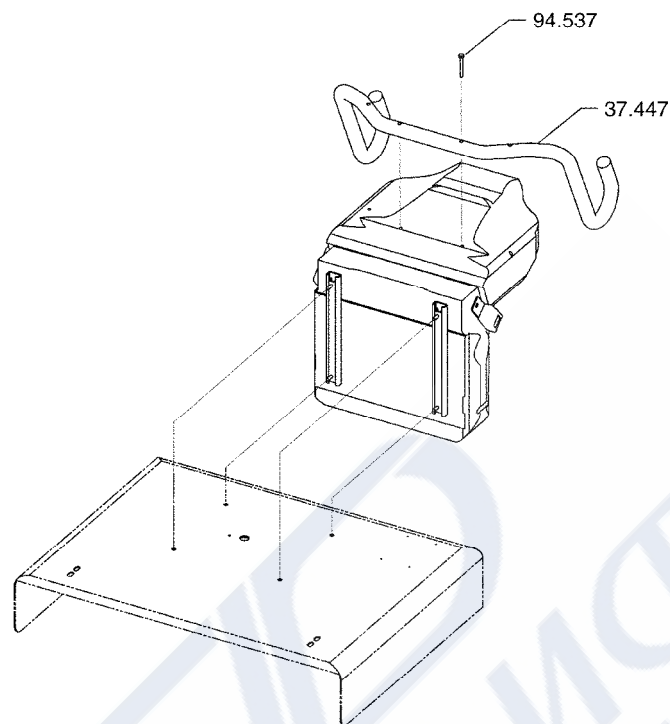

SEAT WING KIT


47-000

- | | |
|--------|--|
| 37.447 | RESTRAINT, OPERATOR SEAT LATERAL
레스트레인트 |
| 37.970 | KIT, SEAT SAFETY
키트 |
| 94.537 | FASTENER, OPERATOR SEAT LATERAL RESTRAINT
패스너 |

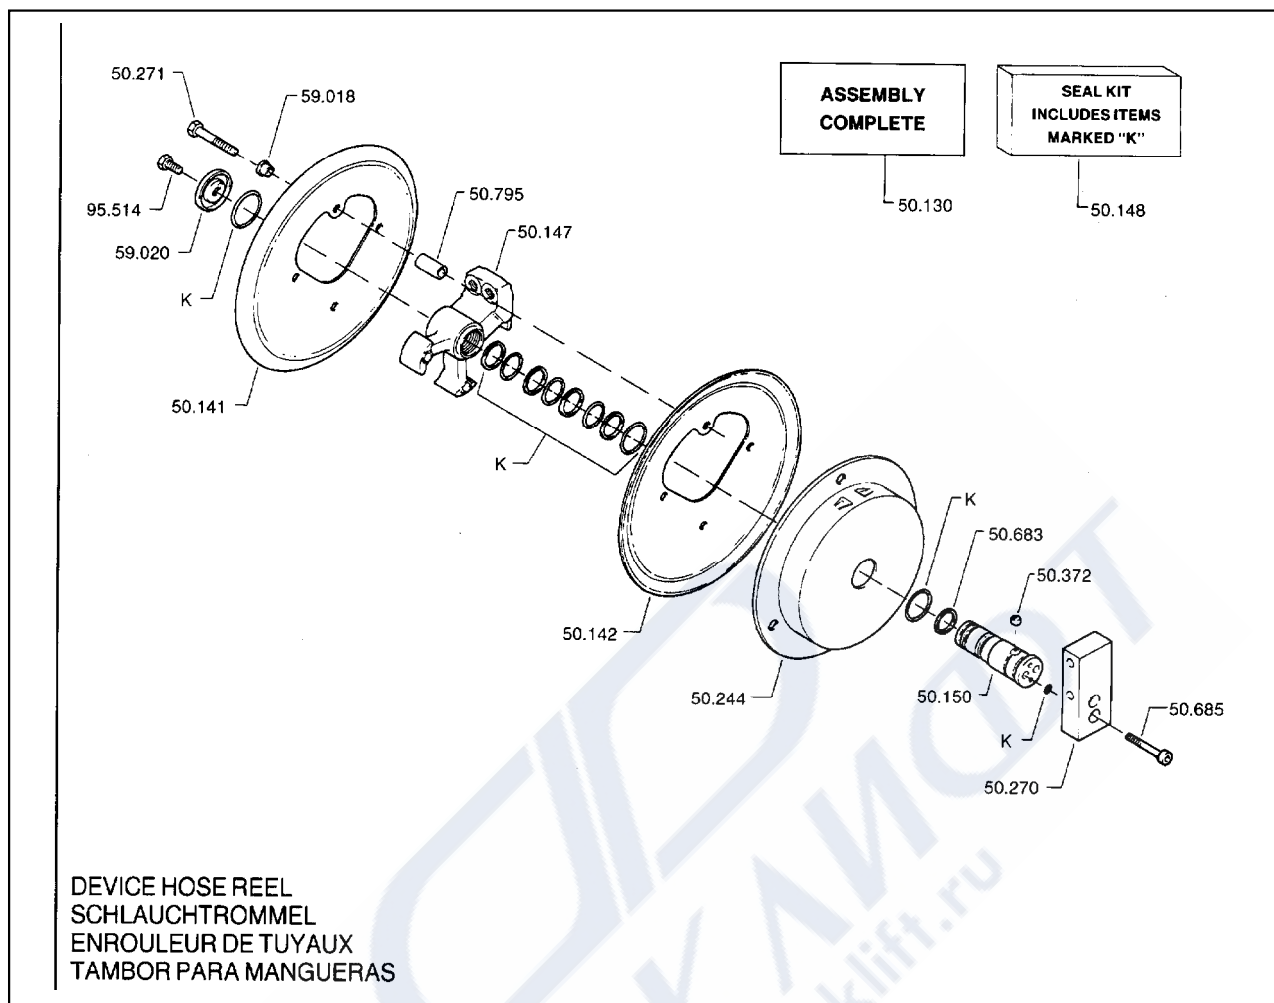 

- 50.130 REEL ASSEMBLY, DEVICE RH HOSE
릴어셈블리
- 50.141 FLANGE, DEVICE RH HOSE REEL OUTBOARD
플랜지
- 50.142 FLANGE, DEVICE RH HOSE REEL CENTER
플랜지
- 50.147 HUB, DEVICE RH HOSE REEL
허브
- 50.148 SEAL, DEVICE RH HOSE REEL AXLE
씰
- 50.150 AXLE, DEVICE RH HOSE REEL
액슬
- 50.244 HOUSING ASSEMBLY, DEVICE RH HOSE REEL SPRING
하우징
- 50.270 BASE, DEVICE RH HOSE REEL
베이스
- 50.271 FASTENER, DEVICE RH HOSE REEL AXLE
패스너

50.372	DOG, DEVICE RH HOSE REEL SPRING 도그
50.683	LOCK, DEVICE HOSE REEL DOG 로크
50.685	FASTENER, DEVICE HOSE REEL BASE 패스너
50.795	SPACER, DEVICE HOSE REEL SPRING HOUSING 스페이서
59.018	GUIDE, DEVICE HOSE REEL FASTENER 가이드
59.020	CAP, DEVICE HOSE REEL AXLE 캡
95.514	FASTENER, DEVICE HOSE REEL AXLE CAP 패스너

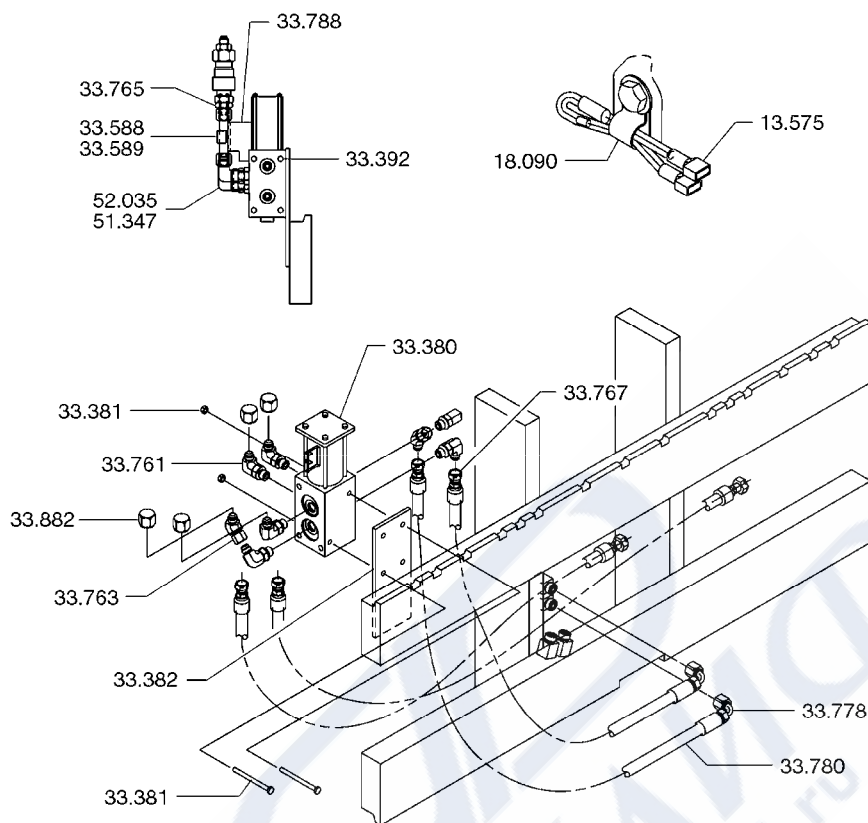 



SOLENOID VALVE

50-157


13.575	WIRE, DEV SELECTOR VALVE SWITCH FEED 와이어
18.090	CLIP, REEL WIRE HARNESS 클립
33.380	VALVE ASSEMBLY, DEVICE SELECTOR SOLENOID 밸브
33.381	FASTENER, DEVICE SELECTOR VALVE 패스너
33.382	BRACKET, DEVICE SELECTOR VALVE 브라켓
33.392	FASTENER, SECONDARY SELECTOR VALVE 패스너
33.588	CLIP, BY-PASS CLAMP LOCK VALVE 클립
33.589	FASTENER, BY-PASS CLAMP LOCK VALVE CLIP 패스너
33.761	FITTING, DEVICE SELECTOR VALVE C4 PORT 피팅

33.763	FITTING, DEVICE SELECTOR VALVE C4 PORT 피팅
33.765	LINE, DEVICE SELECTOR VALVE C4 PORT HYDRAULIC 라인
33.767	HOSE COUPLING, DEV SEL VALVE C1 PORT 호스커플링
33.778	HOSE COUPLING, DEV SEL VALVE C3 PORT 호스커플링
33.780	LINE, DEVICE SELECTOR VALVE C2 PORT HYDRAULIC 라인
33.788	BRACKET, DEVICE SEL VALVE HYDRAULIC LINE 브라켓
33.882	PLUG, DEVICE SEL VALVE "P" PORT 플러그
51.347	FITTING, SELECTOR VALVE P PORT 피팅
52.035	FITTING, SEC SEL VALVE C4 PORT LINE 피팅

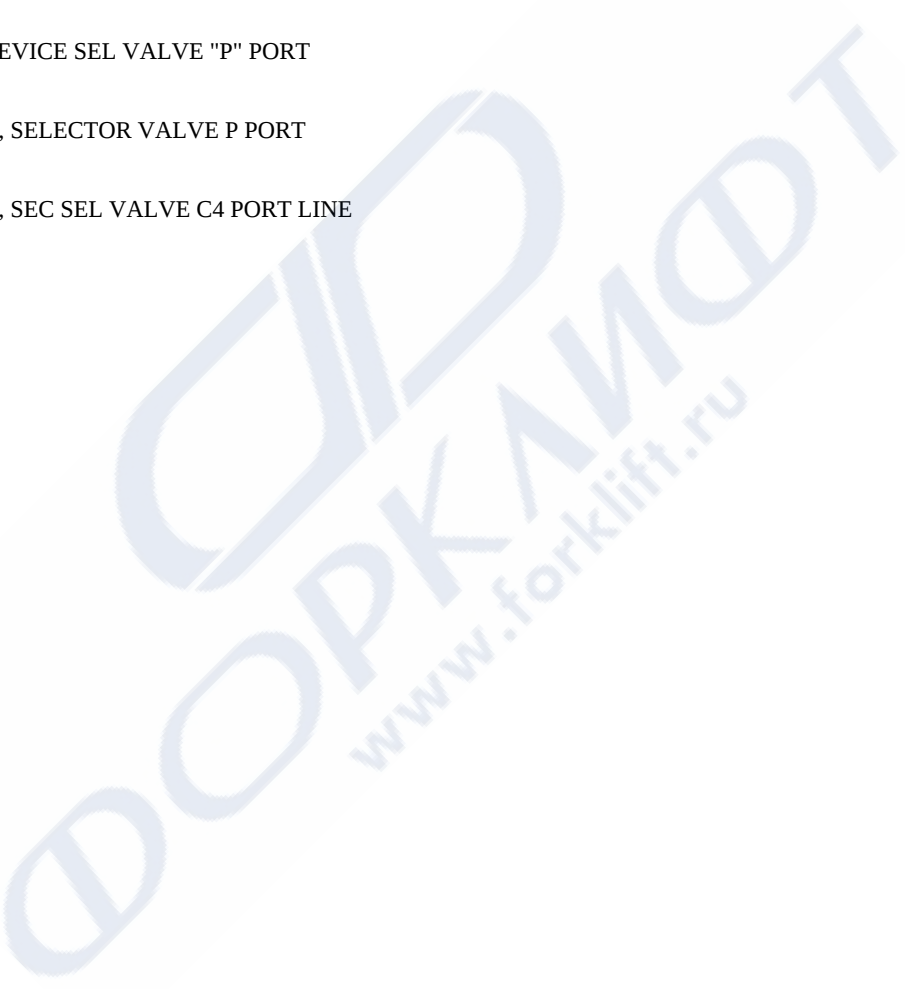 


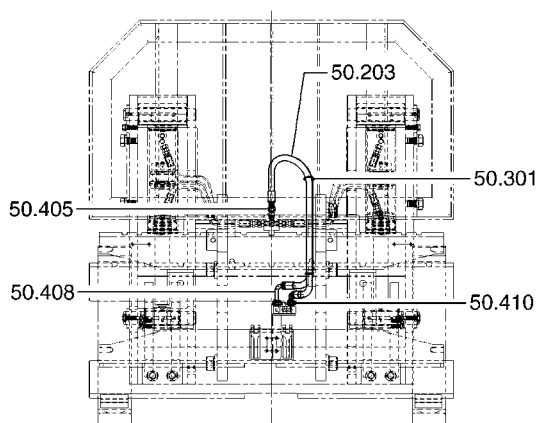 

HINGED BUCKET (HB) / FORK (HF) - BASIC

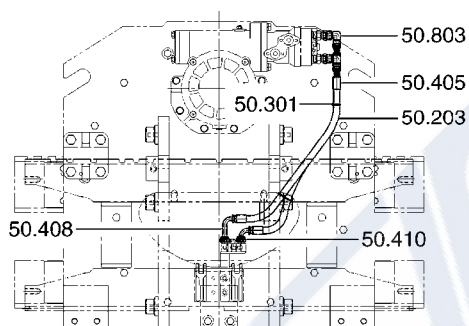 

ROTATING FORK (RF) - BASIC

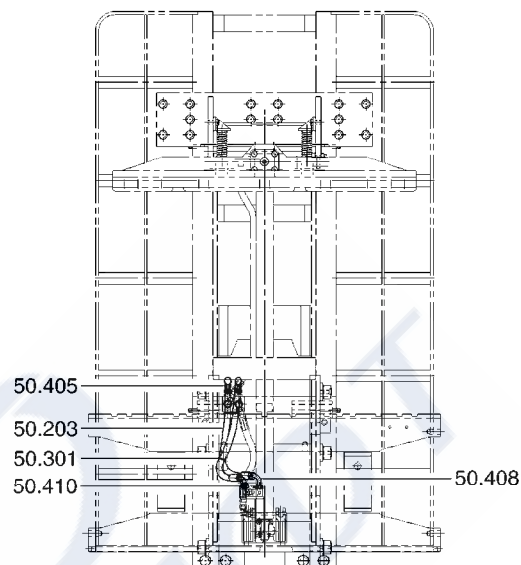 


LOAD STABILIZER (LS) - BASIC

ATTACHMENT HOSE ADAPTATION (CARRIAGE)

50-171

50.203	LINE, DEVICE HYDRAULIC (AT CARRIAGE) 라인
50.301	CLIP, DEVICE RH HOSE (AT CARRIAGE) 클립
50.405	COUPLING, DEVICE HOSE 커플링
50.408	COUPLING, DEVICE HOSE 커플링
50.410	COUPLING, DEVICE HOSE 커플링
50.803	FITTING, DEVICE HYDRAULIC LINE 피팅

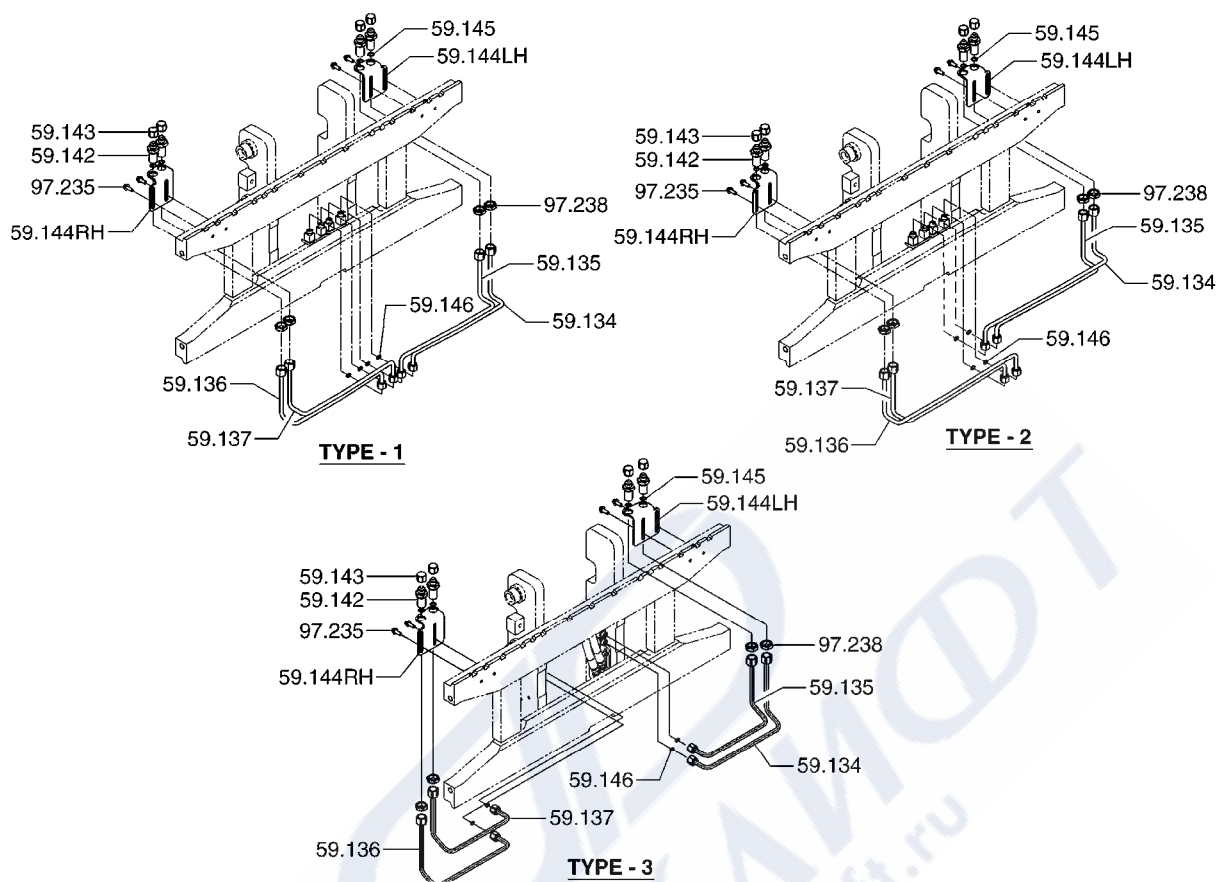 


HIGH TERMINATION FOR DEVICE HOSE ADAPTION

50-172

- | | |
|--------|---|
| 59.134 | LINE, DEVICE LH LINE FOR HIGH TERMINATION
라인 |
| 59.135 | LINE, DEVICE LH LINE FOR HIGH TERMINATION
라인 |
| 59.136 | LINE, DEVICE RH LINE FOR HIGH TERMINATION
라인 |
| 59.137 | LINE, DEVICE RH LINE FOR HIGH TERMINATION
라인 |
| 59.142 | FITTING, DEVICE LINE FOR HIGH TERMINATION
피팅 |
| 59.143 | CAP, DEVICE LINE FITTING FOR HIGH TERMINATION
캡 |
| 59.144 | BRACKET, DEVICE LINE FOR HIGH TERMINATION
브라켓 |
| 59.145 | SEAL, DEVICE LINE FITTING FOR HIGH TERMINATION
셀 |
| 59.146 | SEAL, DEVICE LINE FITTING FOR HIGH TERMINATION
셀 |

97.235	FASTENER, DEVICE LINE CLAMP FOR HIGH TERMINATION 패스너
97.238	FASTENER, DEVICE LINE FITTING FOR HIGH TERMINATION 패스너



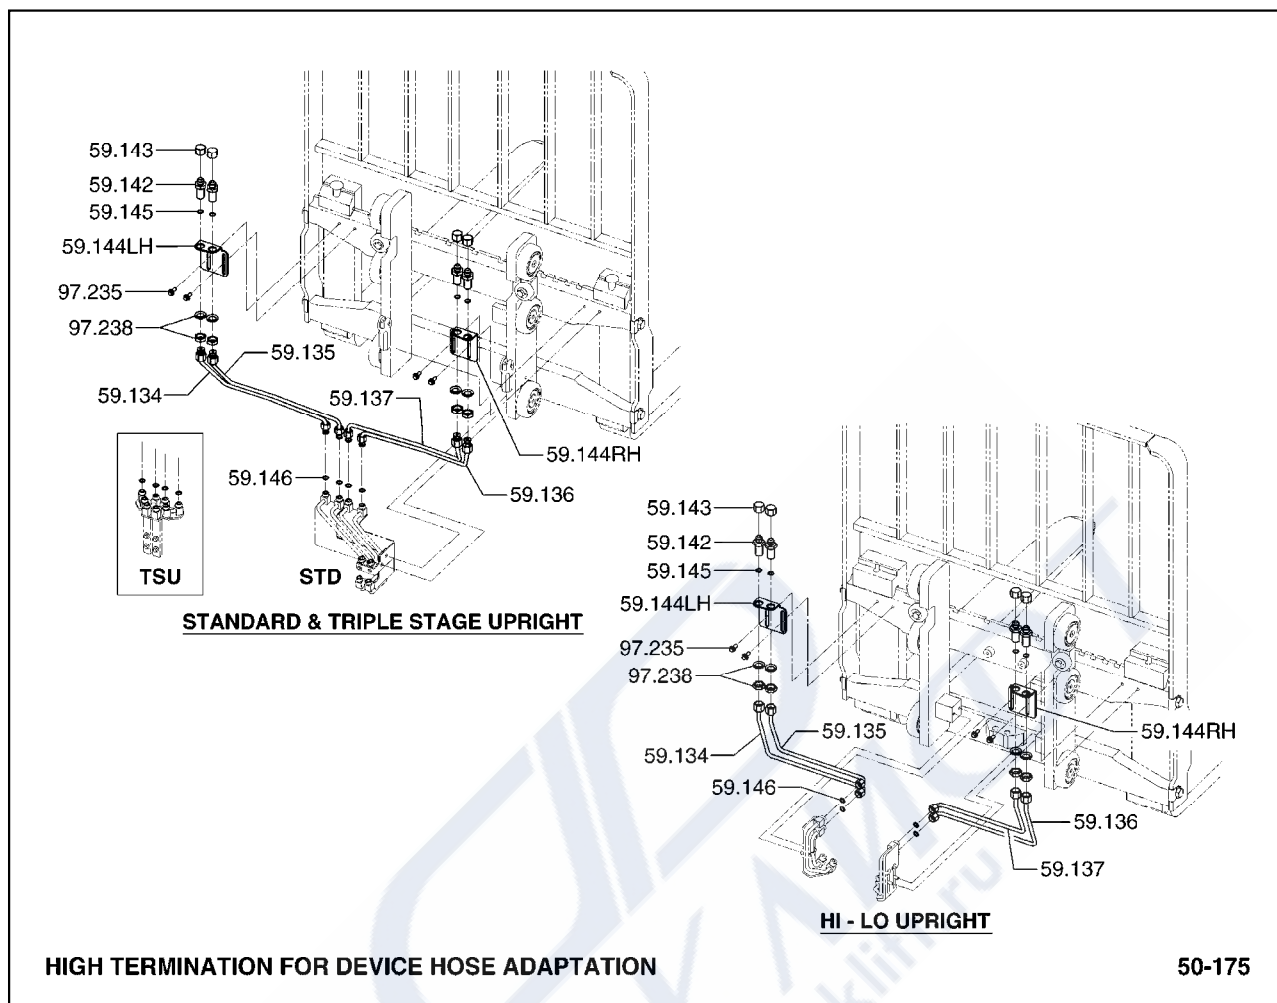 


- | | |
|--------|---|
| 59.134 | LINE, DEVICE LH LINE FOR HIGH TERMINATION
라인 |
| 59.135 | LINE, DEVICE LH LINE FOR HIGH TERMINATION
라인 |
| 59.136 | LINE, DEVICE RH LINE FOR HIGH TERMINATION
라인 |
| 59.137 | LINE, DEVICE RH LINE FOR HIGH TERMINATION
라인 |
| 59.142 | FITTING, DEVICE LINE FOR HIGH TERMINATION
피팅 |
| 59.143 | CAP, DEVICE LINE FITTING FOR HIGH TERMINATION
캡 |
| 59.144 | BRACKET, DEVICE LINE FOR HIGH TERMINATION
브라켓 |
| 59.145 | SEAL, DEVICE LINE FITTING FOR HIGH TERMINATION
셀 |
| 59.146 | SEAL, DEVICE LINE FITTING FOR HIGH TERMINATION
셀 |

97.235	FASTENER, DEVICE LINE CLAMP FOR HIGH TERMINATION 패스너
97.238	FASTENER, DEVICE LINE FITTING FOR HIGH TERMINATION 패스너



 ATTACHMENT HOSE REFERENCE

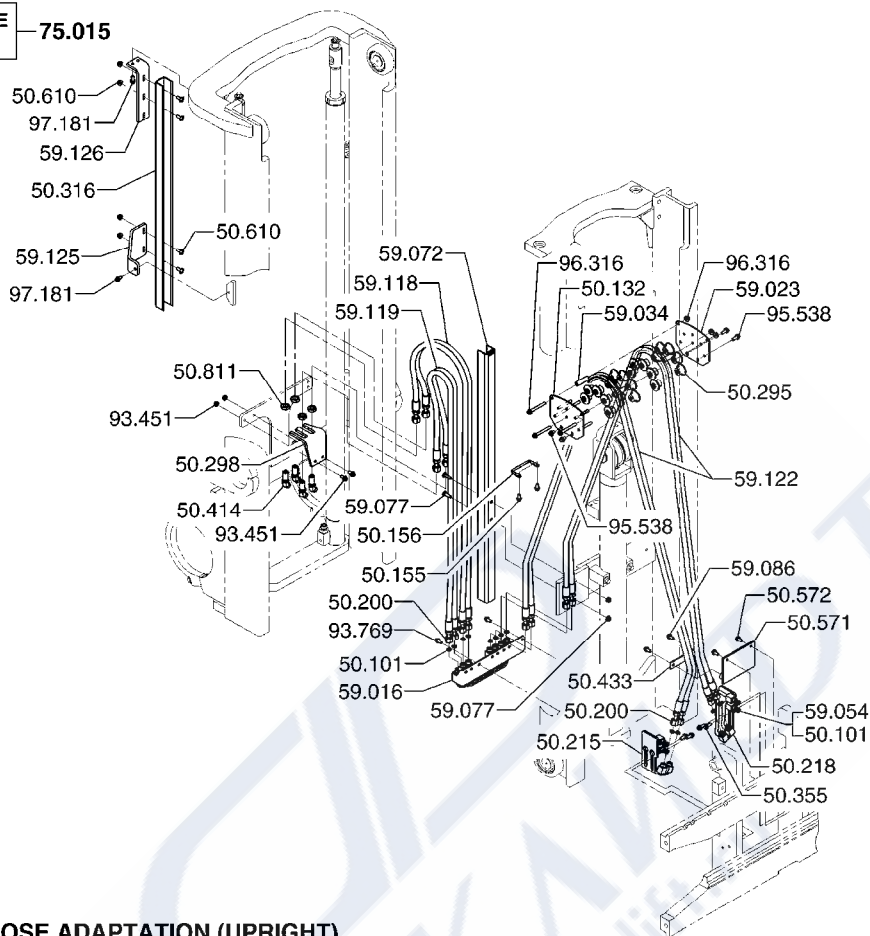


ATTACHMENT HOSE ADAPTATION (UPRIGHT)

50-232

50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 씰	50.610	FASTENER, DEVICE HOSE GUARD 패스너
50.132	BRACKET, DEVICE HOSE REEL 브라켓	50.811	NUT, DEVICE HOSE FITTING 너트
50.155	FASTENER, DEVICE HOSE CLIP 패스너	59.016	JUNCTION BLOCK, DEVICE HOSE 정크션 블록
50.156	CLIP, DEVICE HOSE 클립	59.023	BRACKET, DEVICE HOSE REEL MOUNTING 브라켓
50.200	COUPLING, DEVICE HOSE 커플링	59.034	TUBE, DEVICE HOSE REEL MOUNTING BRACKET 튜브
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록	59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
50.218	TERMINAL BLOCK, DEVICE LH HOSE 터미널블록	59.072	GUARD, DEVICE HOSE 가드
50.295	ROLLER, DEVICE HOSE UPPER 롤러	59.077	FASTENER, DEVICE HOSE GUARD 패스너
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓	59.086	FASTENER, DEVICE HOSE CLIP BRACKET 패스너
50.316	GUARD, DEVICE RH HOSE 가드	59.118	LINE, DEVICE HYDRAULIC (OUTER RAIL) 라인
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너	59.119	LINE, DEVICE HYDRAULIC (OUTER RAIL) 라인
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅	59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
50.433	BRACKET, DEVICE HOSE CLAMP 브라켓	59.125	BRACKET, DEVICE HOSE GUARD MOUNTING 브라켓
50.571	BRACKET, DEVICE HOSE 브라켓	59.126	BRACKET, DEVICE HOSE GUARD MOUNTING 브라켓
50.572	FASTENER, DEVICE HOSE BRACKET 패스너	75.015	MODULE, ATTACHMENT HOSE LINES 모듈

93.316	DOWEL, STEERING INTERLOCK SWITCH FASTENER 다웰
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너
93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너
95.538	FASTENER, DEVICE HOSE REEL BRACKET 패스너
96.316	FASTENER, DEVICE HOSE REEL 패스너
97.181	FASTENER, DEVICE HOSE GUARD MOUNTING BRACKET 패스너



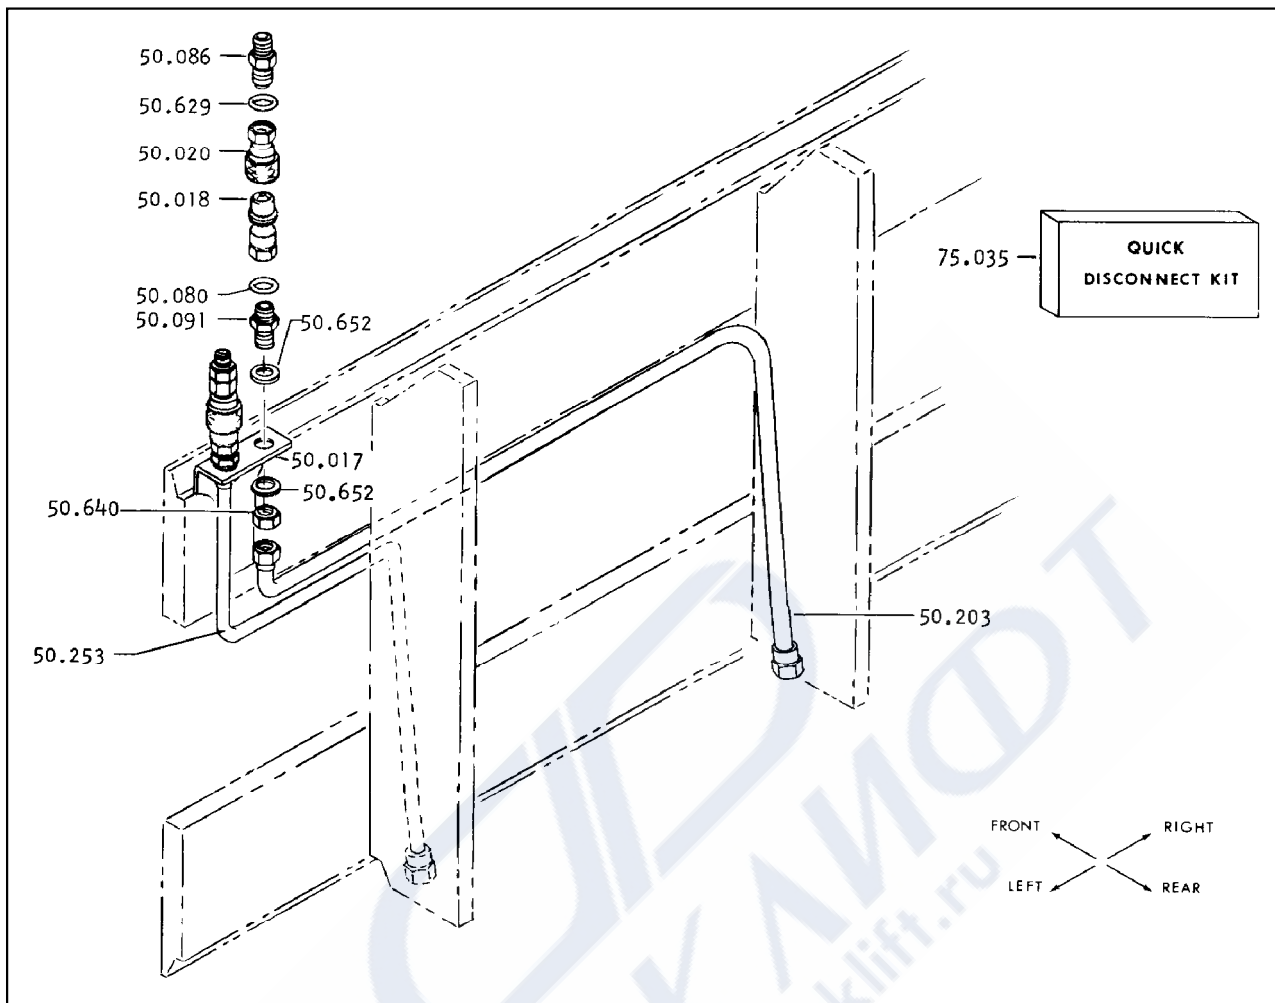 


- | | |
|--------|--|
| 50.017 | TERMINAL BRACKET, DEVICE HOSE
터미널브라켓 |
| 50.018 | DISCONNECT, DEVICE HOSE NIPPLE HALF
디스커넥트 |
| 50.020 | DISCONNECT, DEVICE HOSE SOCKET HALF
디스커넥트 |
| 50.080 | SEAL, DEVICE HOSE DISCONNECT NIPPLE RH
씰 |
| 50.086 | FITTING, DEVICE RH HYDRAULIC HOSE
피팅 |
| 50.091 | FITTING, DEVICE RH HYDRAULIC HOSE
피팅 |
| 50.203 | LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인 |
| 50.253 | LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인 |
| 50.629 | SEAL, DEVICE HOSE DISCONNECT SOCKET RH
씰 |

50.640	FASTENER, DEVICE RH HYD HOSE FITTING 패스너
50.652	SPACER, DEVICE RH HYDRAULIC HOSE FITTING 스페이서
75.035	KIT, QUICK DISCONNECT FOR DEVICE HOSE ADAPTATION 키트



 ATTACHMENT HOSE REFERENCE

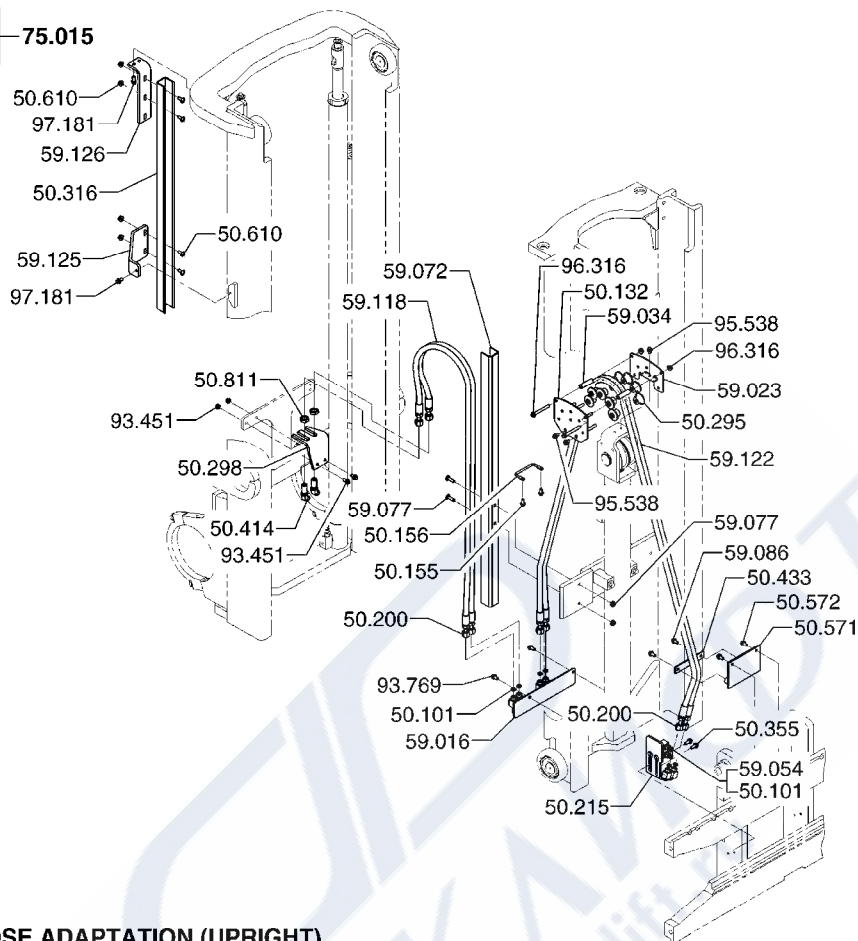


ATTACHMENT HOSE ADAPTATION (UPRIGHT)

50-269

50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 씰	50.811	NUT, DEVICE HOSE FITTING 너트
50.132	BRACKET, DEVICE HOSE REEL 브라켓	59.016	JUNCTION BLOCK, DEVICE HOSE 정크션 블록
50.155	FASTENER, DEVICE HOSE CLIP 패스너	59.023	BRACKET, DEVICE HOSE REEL MOUNTING 브라켓
50.156	CLIP, DEVICE HOSE 클립	59.034	TUBE, DEVICE HOSE REEL MOUNTING BRACKET 튜브
50.200	COUPLING, DEVICE HOSE 커플링	59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록	59.072	GUARD, DEVICE HOSE 가드
50.295	ROLLER, DEVICE HOSE UPPER 롤러	59.077	FASTENER, DEVICE HOSE GUARD 패스너
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓	59.086	FASTENER, DEVICE HOSE CLIP BRACKET 패스너
50.316	GUARD, DEVICE RH HOSE 가드	59.101	TIE STRAP, AUXILIARY FUNCTION LINES 타이스트랩
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너	59.118	LINE, DEVICE HYDRAULIC (OUTER RAIL) 라인
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅	59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
50.433	BRACKET, DEVICE HOSE CLAMP 브라켓	59.125	BRACKET, DEVICE HOSE GUARD MOUNTING 브라켓
50.571	BRACKET, DEVICE HOSE 브라켓	59.126	BRACKET, DEVICE HOSE GUARD MOUNTING 브라켓
50.572	FASTENER, DEVICE HOSE BRACKET 패스너	75.015	MODULE, ATTACHMENT HOSE LINES 모듈
50.610	FASTENER, DEVICE HOSE GUARD 패스너	93.316	DOWEL, STEERING INTERLOCK SWITCH FASTENER 다웰

93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너
93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너
95.538	FASTENER, DEVICE HOSE REEL BRACKET 패스너
96.316	FASTENER, DEVICE HOSE REEL 패스너
97.181	FASTENER, DEVICE HOSE GUARD MOUNTING BRACKET 패스너




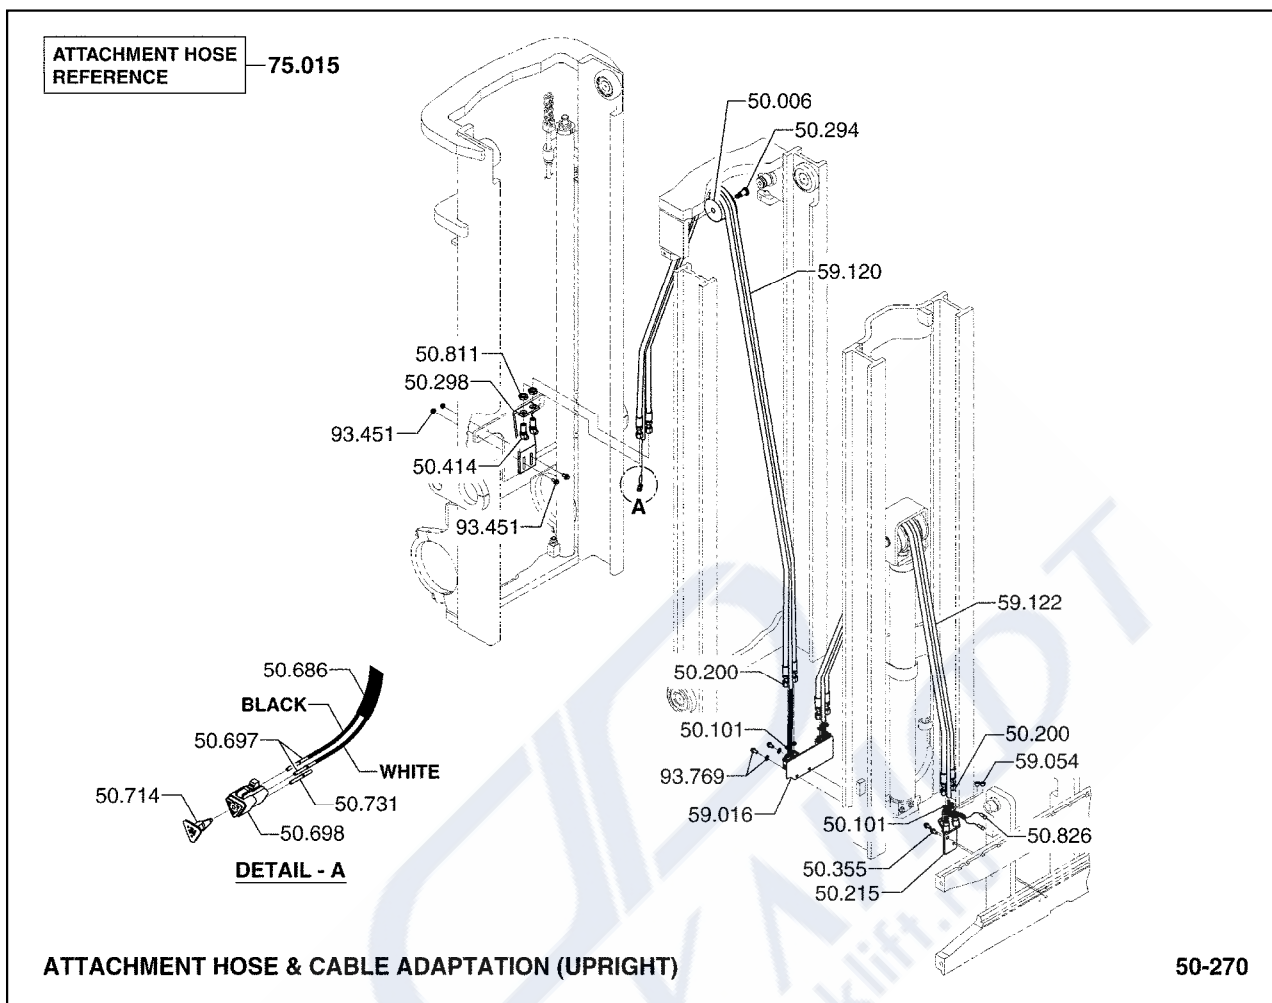 

50.006	SHEAVE, DEVICE HOSE UPPER 쉬브
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 씰
50.200	COUPLING, DEVICE HOSE 커플링
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록
50.294	PIVOT, DEVICE HOSE UPPER SHEAVE 피벗
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅
50.686	WIRE, DEVICE 와이어

50.697	CONNECTOR, DEVICE CABLE (PIN END) 커넥터
50.698	CONNECTOR, DEVICE CABLE (SOCKET END) 커넥터
50.714	LOCK, DEVICE CABLE CONNECTOR 로크
50.731	PLUG, DEVICE CABLE CONNECTOR 플러그
50.811	NUT, DEVICE HOSE FITTING 너트
50.826	TERMINAL, DEVICE CABLE 터미널
59.016	JUNCTION BLOCK, DEVICE HOSE 정크션 블록
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.120	LINE, DEVICE HYDRAULIC (INTERMEDIATE RAIL) 라인
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너
93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너

 ATTACHMENT HOSE
REFERENCE 75.015

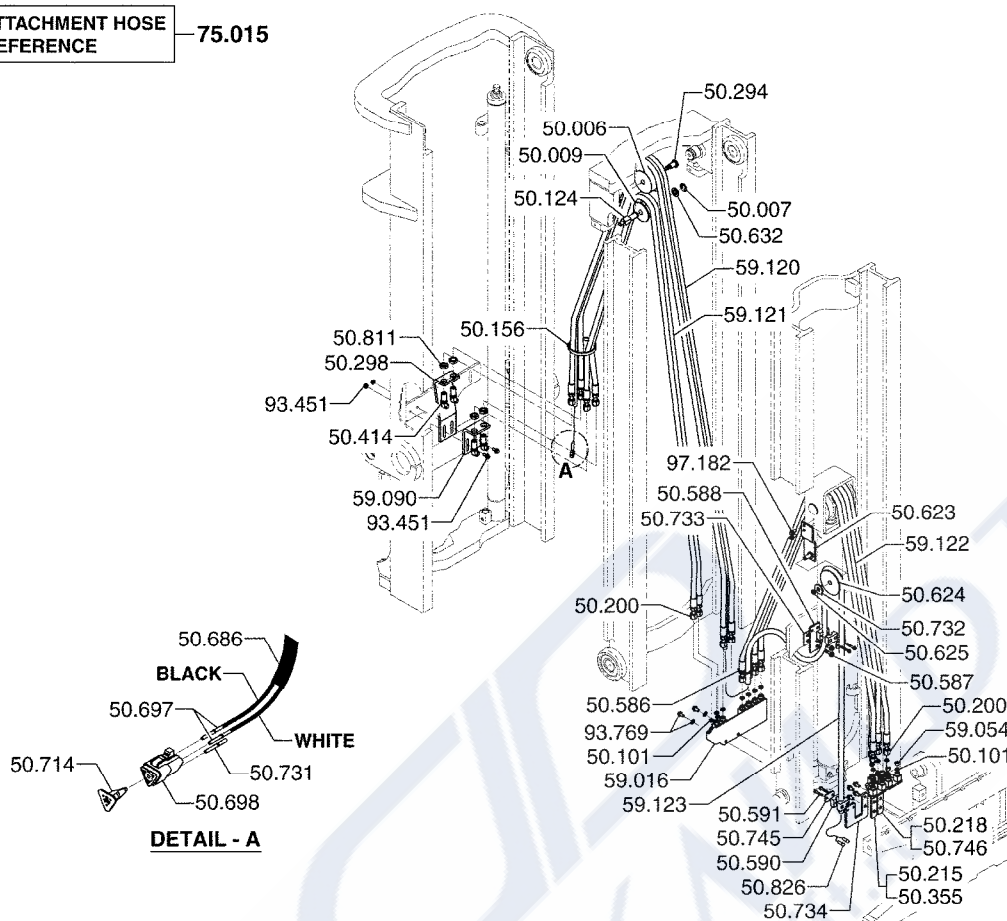


ATTACHMENT HOSE & CABLE ADAPTATION (UPRIGHT)

50-289

50.006	SHEAVE, DEVICE HOSE UPPER 쉬브	50.588	BRACKET, DEVICE CABLE CLAMP 브라켓
50.007	RETAINER, DEVICE HOSE SHEAVE 리테이너	50.590	CLAMP, DEVICE CABLE LOWER 클램프
50.009	SHEAVE, DEVICE HOSE LOWER 쉬브	50.591	FASTENER, DEVICE CABLE CLAMP LOWER 패스너
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 씰	50.623	BRACKET, DEVICE CABLE LOWER SHEAVE 브라켓
50.124	PIVOT, DEVICE HOSE LOWER RH SHEAVE 피봇	50.624	SHEAVE, DEVICE CABLE 쉬브
50.156	CLIP, DEVICE HOSE 클립	50.625	RETAINER, DEVICE CABLE LOWER SHEAVE 리테이너
50.200	COUPLING, DEVICE HOSE 커플링	50.632	SPACER, DEVICE HOSE SHEAVE 스페이서
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록	50.686	WIRE, DEVICE 와이어
50.218	TERMINAL BLOCK, DEVICE LH HOSE 터미널블록	50.697	CONNECTOR, DEVICE CABLE (PIN END) 커넥터
50.294	PIVOT, DEVICE HOSE UPPER SHEAVE 피봇	50.698	CONNECTOR, DEVICE CABLE (SOCKET END) 커넥터
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓	50.714	LOCK, DEVICE CABLE CONNECTOR 로크
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너	50.731	PLUG, DEVICE CABLE CONNECTOR 플러그
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅	50.732	SPACER, DEVICE CABLE SHEAVE 스페이서
50.586	CLIP, DEVICE CABLE 클립	50.733	SPACER, DEVICE CABLE CLAMP BRACKET 스페이서
50.587	FASTENER, DEVICE CABLE CLIP 패스너	50.734	BRACKET, DEVICE CABLE TERMINAL CLAMP 브라켓


50.745	BRACKET, DEVICE CABLE TERMINAL CLAMP MOUNTING 브라켓
50.746	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너
50.811	NUT, DEVICE HOSE FITTING 너트
50.826	TERMINAL, DEVICE CABLE 터미널
59.016	JUNCTION BLOCK, DEVICE HOSE 정크션 블록
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.090	BRACKET, DEVICE HOSE TERMINAL 브라켓
59.120	LINE, DEVICE HYDRAULIC (INTERMEDIATE RAIL) 라인
59.121	LINE, DEVICE HYDRAULIC (INTERMEDIATE RAIL) 라인
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
59.123	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너
93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너
97.182	FASTENER, DEVICE CABLE LOWER SHEAVE BRACKET 패스너

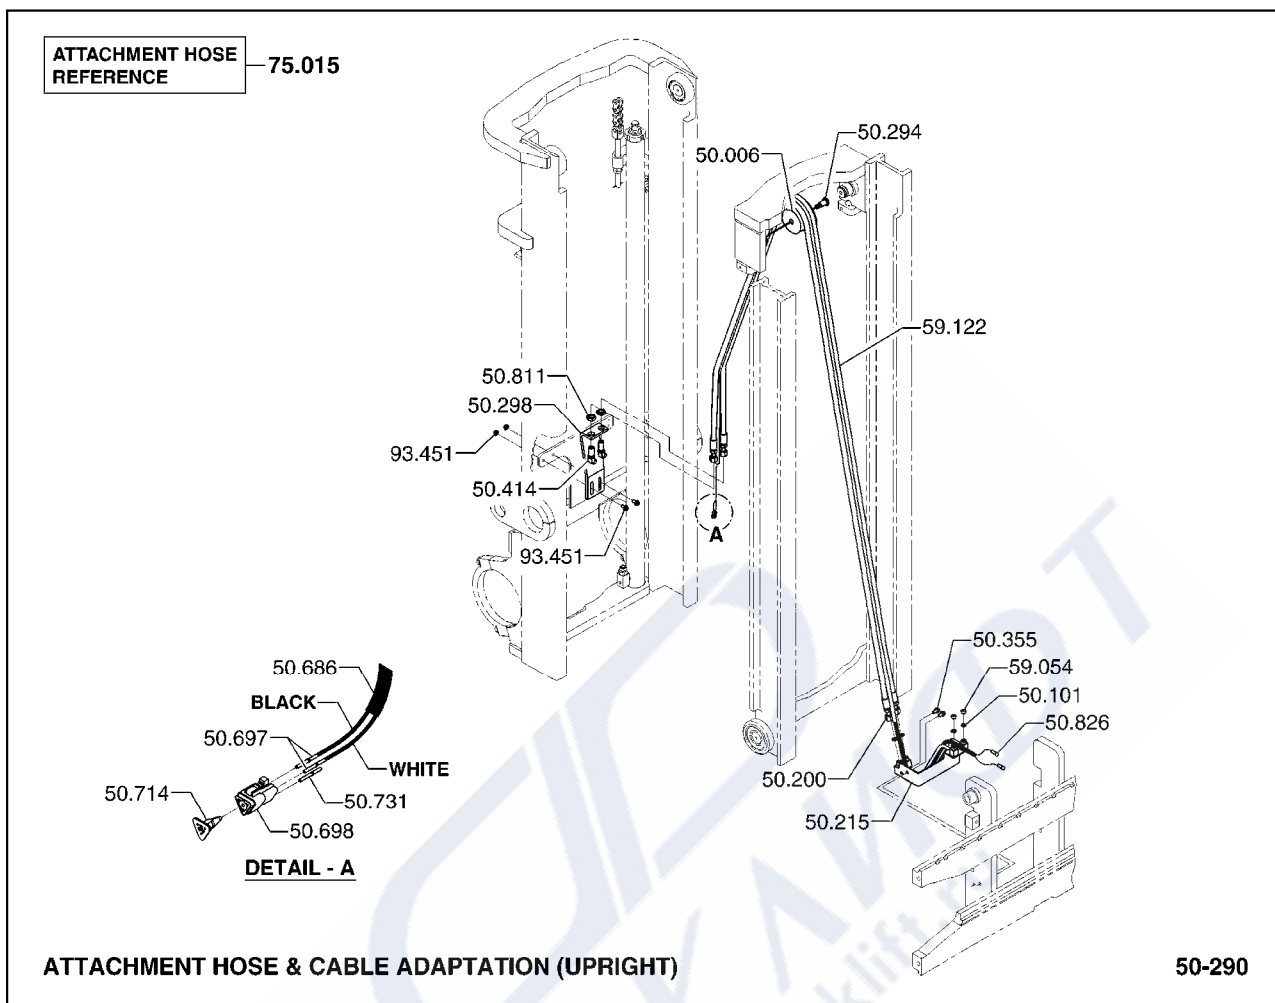 

50.006	SHEAVE, DEVICE HOSE UPPER 쉬브
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 씰
50.200	COUPLING, DEVICE HOSE 커플링
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록
50.294	PIVOT, DEVICE HOSE UPPER SHEAVE 피벗
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅
50.686	WIRE, DEVICE 와이어

50.697	CONNECTOR, DEVICE CABLE (PIN END) 커넥터
50.698	CONNECTOR, DEVICE CABLE (SOCKET END) 커넥터
50.714	LOCK, DEVICE CABLE CONNECTOR 로크
50.731	PLUG, DEVICE CABLE CONNECTOR 플러그
50.811	NUT, DEVICE HOSE FITTING 너트
50.826	TERMINAL, DEVICE CABLE 터미널
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너




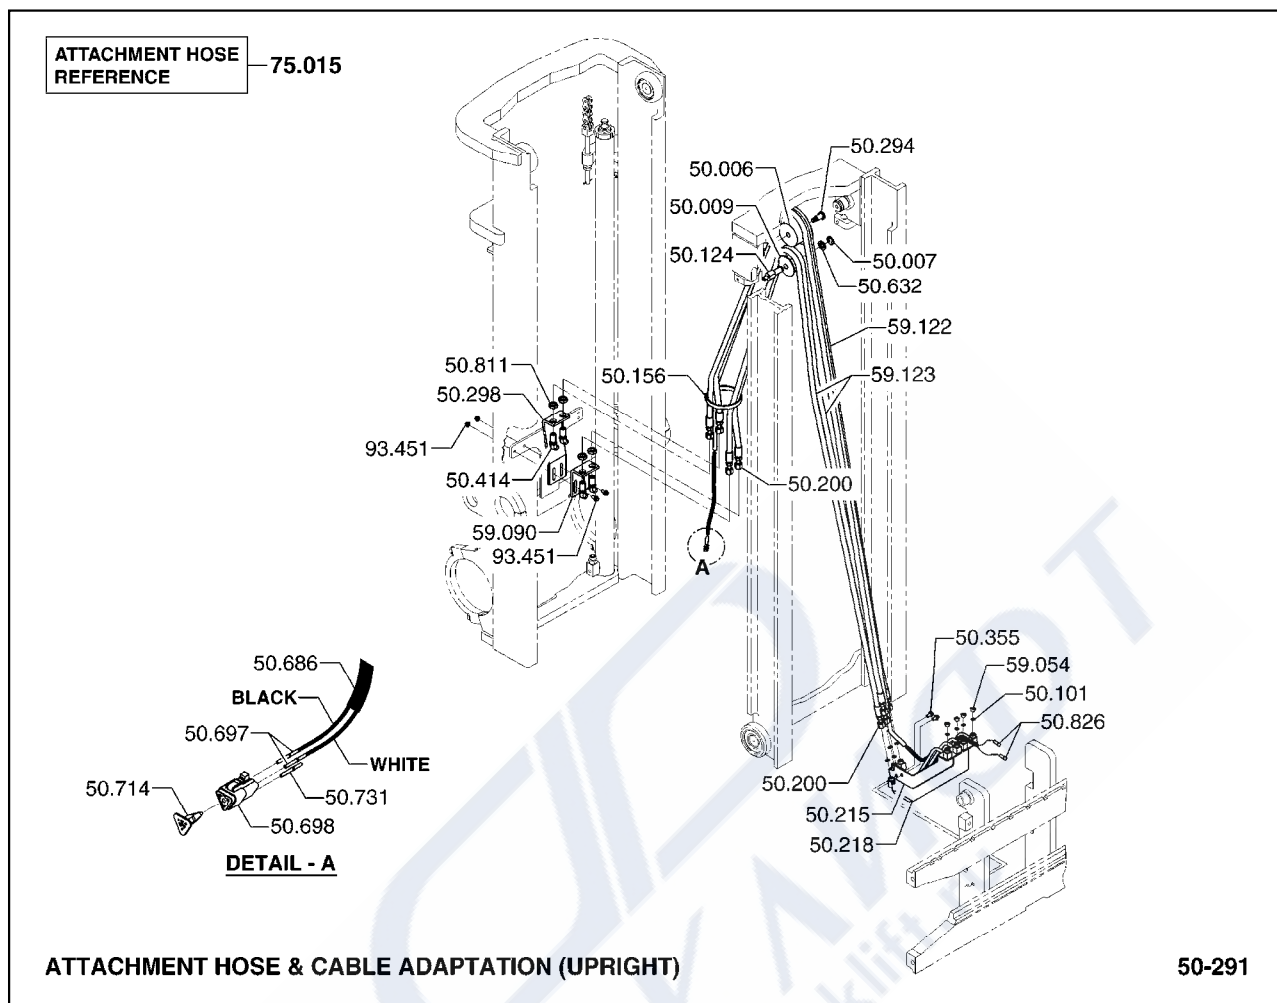 

50.006	SHEAVE, DEVICE HOSE UPPER 쉬브
50.007	RETAINER, DEVICE HOSE SHEAVE 리테이너
50.009	SHEAVE, DEVICE HOSE LOWER 쉬브
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 씰
50.124	PIVOT, DEVICE HOSE LOWER RH SHEAVE 피벗
50.156	CLIP, DEVICE HOSE 클립
50.200	COUPLING, DEVICE HOSE 커플링
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록
50.218	TERMINAL BLOCK, DEVICE LH HOSE 터미널블록

50.294	PIVOT, DEVICE HOSE UPPER SHEAVE 피벗
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅
50.632	SPACER, DEVICE HOSE SHEAVE 스페이서
50.686	WIRE, DEVICE 와이어
50.697	CONNECTOR, DEVICE CABLE (PIN END) 커넥터
50.698	CONNECTOR, DEVICE CABLE (SOCKET END) 커넥터
50.714	LOCK, DEVICE CABLE CONNECTOR 로크
50.731	PLUG, DEVICE CABLE CONNECTOR 플러그
50.811	NUT, DEVICE HOSE FITTING 너트
50.826	TERMINAL, DEVICE CABLE 터미널
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.090	BRACKET, DEVICE HOSE TERMINAL 브라켓
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
59.123	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너

 ATTACHMENT HOSE
REFERENCE 75.015

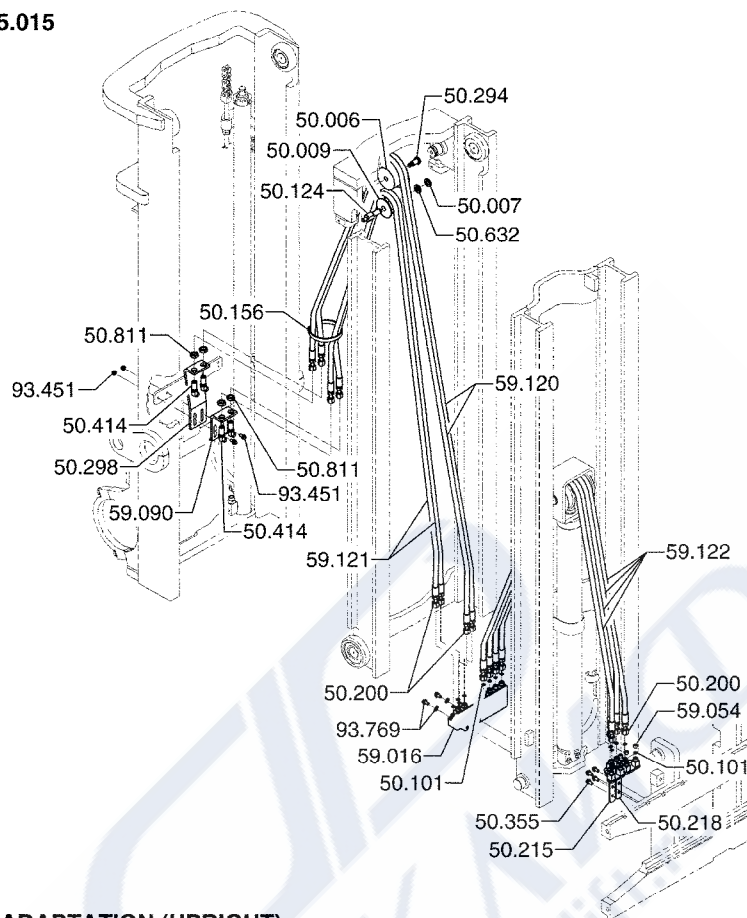


ATTACHMENT HOSE ADAPTATION (UPRIGHT)

50-407


50.006	SHEAVE, DEVICE HOSE UPPER 쉬브
50.007	RETAINER, DEVICE HOSE SHEAVE 리테이너
50.009	SHEAVE, DEVICE HOSE LOWER 쉬브
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 씰
50.124	PIVOT, DEVICE HOSE LOWER RH SHEAVE 피벗
50.156	CLIP, DEVICE HOSE 클립
50.200	COUPLING, DEVICE HOSE 커플링
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록
50.218	TERMINAL BLOCK, DEVICE LH HOSE 터미널블록

50.294	PIVOT, DEVICE HOSE UPPER SHEAVE 피벗
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅
50.632	SPACER, DEVICE HOSE SHEAVE 스페이서
50.811	NUT, DEVICE HOSE FITTING 너트
59.016	JUNCTION BLOCK, DEVICE HOSE 정크션 블록
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.090	BRACKET, DEVICE HOSE TERMINAL 브라켓
59.120	LINE, DEVICE HYDRAULIC (INTERMEDIATE RAIL) 라인
59.121	LINE, DEVICE HYDRAULIC (INTERMEDIATE RAIL) 라인
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너
93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너

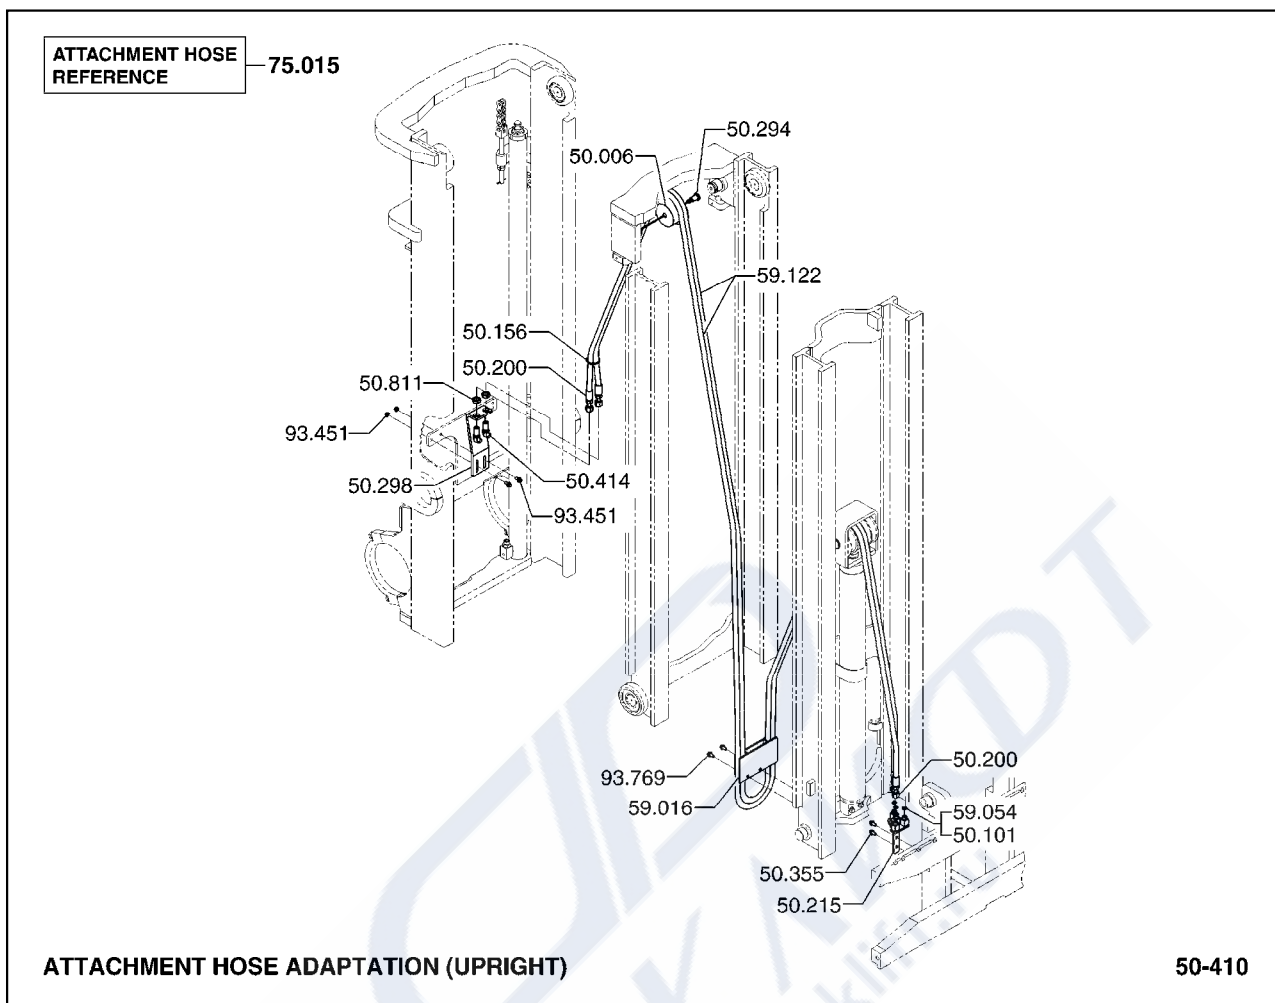 


50.006	SHEAVE, DEVICE HOSE UPPER шнёр
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING сальник
50.156	CLIP, DEVICE HOSE зажим
50.200	COUPLING, DEVICE HOSE соединитель
50.215	TERMINAL BLOCK, DEVICE HOSE терминальный блок
50.294	PIVOT, DEVICE HOSE UPPER SHEAVE опора
50.298	BRACKET, DEVICE HOSE TERMINAL кронштейн
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK крепёжка
50.414	FITTING, DEVICE HOSE CONNECTOR фитинг


50.811	NUT, DEVICE HOSE FITTING 너트
59.016	JUNCTION BLOCK, DEVICE HOSE 정크션 블록
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너
93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너

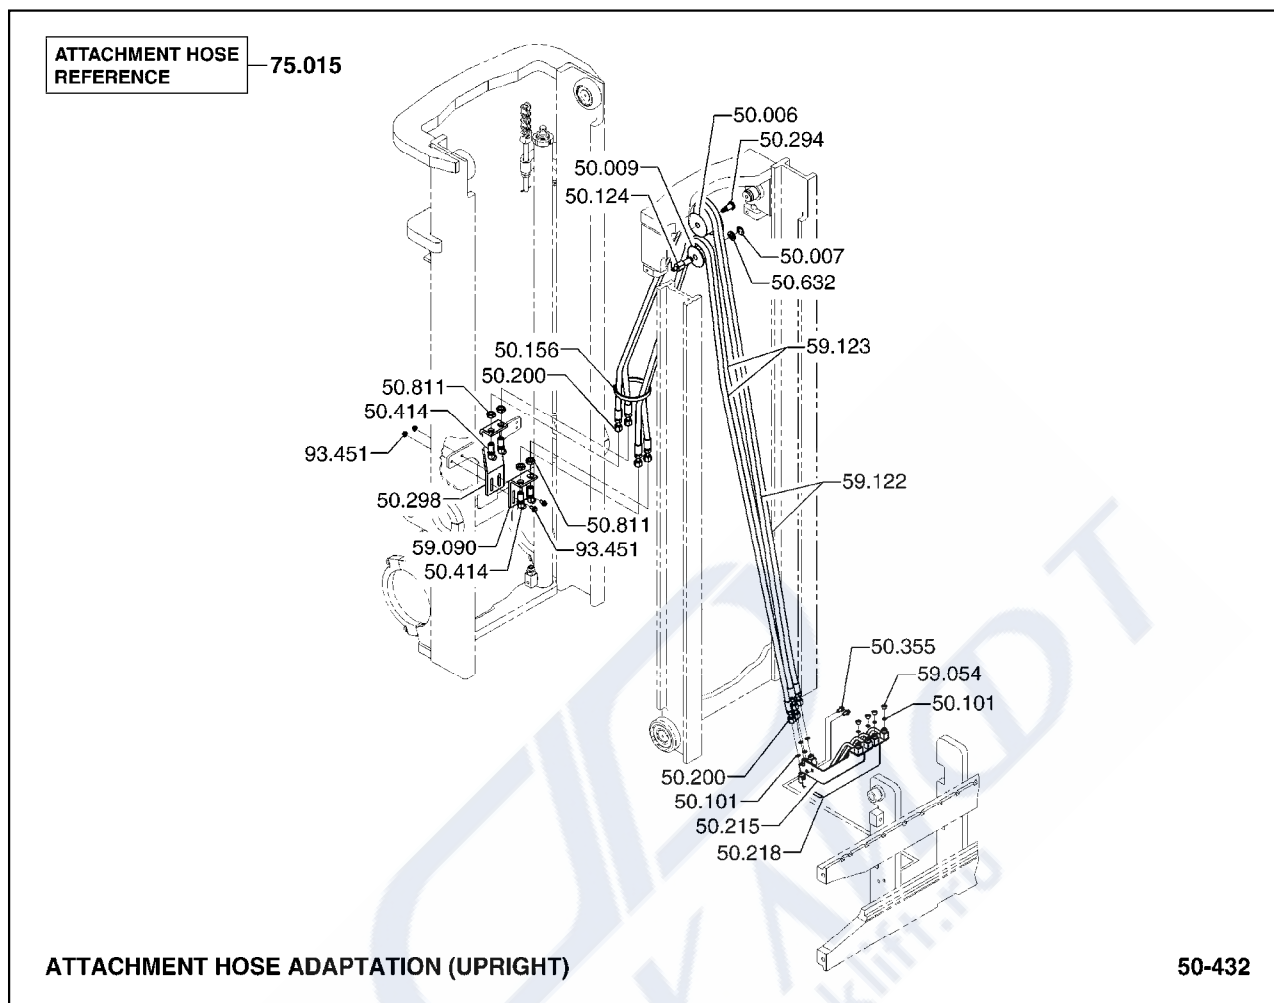 

50.006	SHEAVE, DEVICE HOSE UPPER шнёр
50.007	RETAINER, DEVICE HOSE SHEAVE ритейнер
50.009	SHEAVE, DEVICE HOSE LOWER шнёр
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING сальник
50.124	PIVOT, DEVICE HOSE LOWER RH SHEAVE шнёр
50.156	CLIP, DEVICE HOSE клип
50.200	COUPLING, DEVICE HOSE соединитель
50.215	TERMINAL BLOCK, DEVICE HOSE терминальный блок
50.218	TERMINAL BLOCK, DEVICE LH HOSE терминальный блок


50.294	PIVOT, DEVICE HOSE UPPER SHEAVE 피벗
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅
50.632	SPACER, DEVICE HOSE SHEAVE 스페이서
50.811	NUT, DEVICE HOSE FITTING 너트
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.090	BRACKET, DEVICE HOSE TERMINAL 브라켓
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
59.123	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너

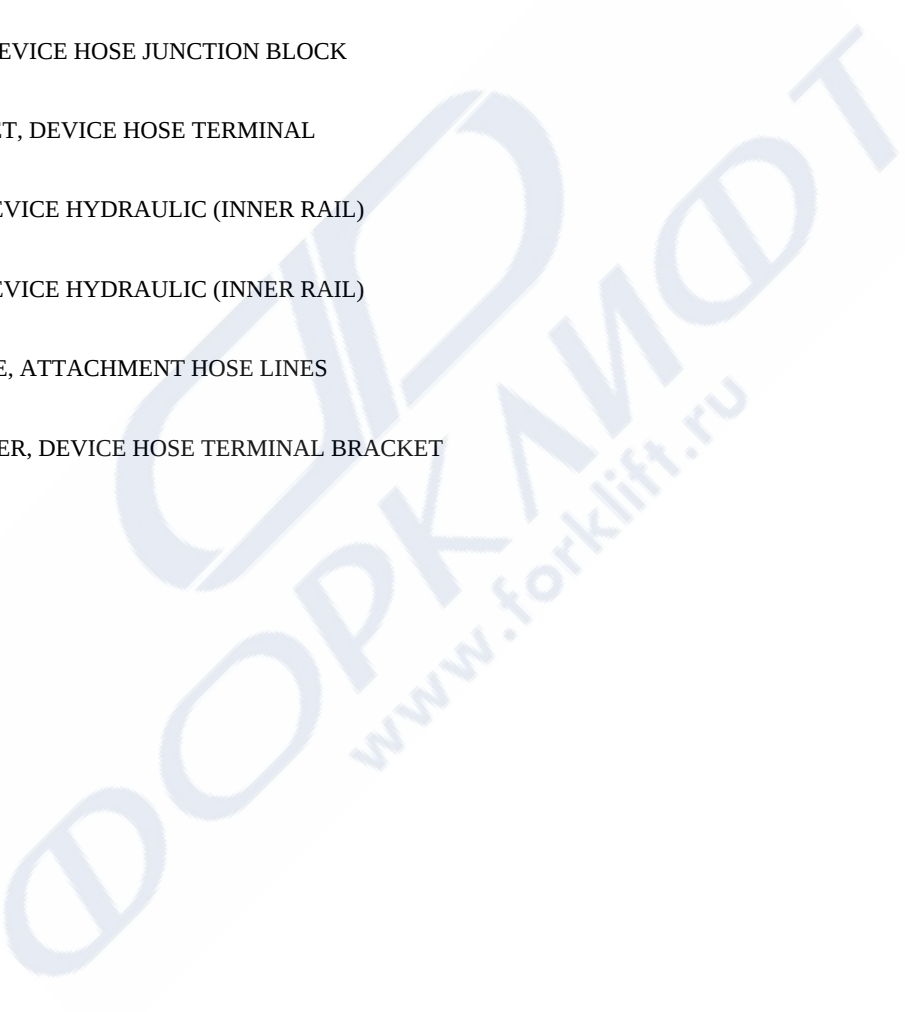 

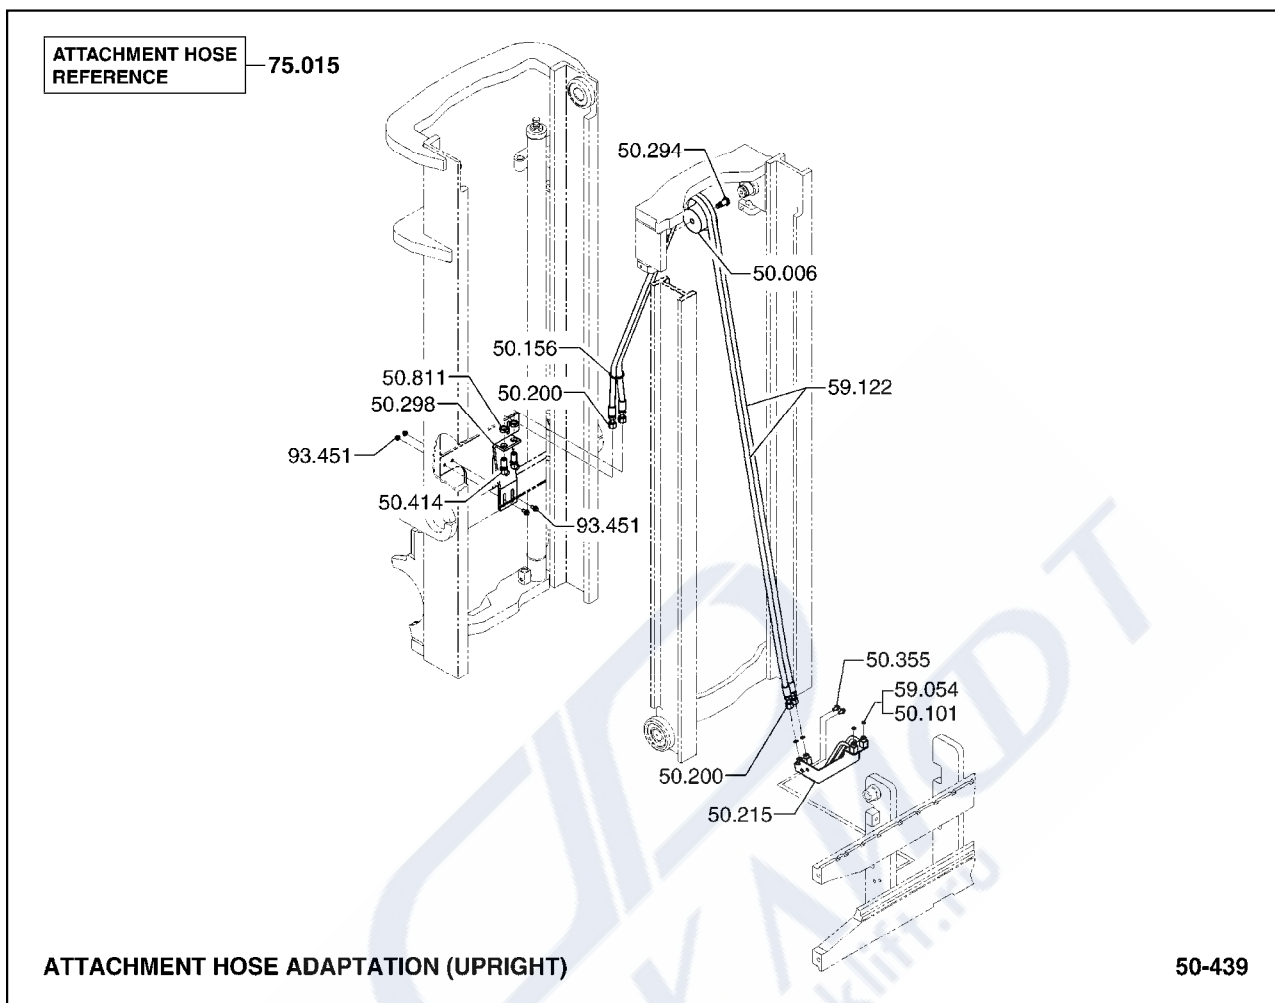 


50.006	SHEAVE, DEVICE HOSE UPPER 쉬브
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 씰
50.156	CLIP, DEVICE HOSE 클립
50.200	COUPLING, DEVICE HOSE 커플링
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록
50.294	PIVOT, DEVICE HOSE UPPER SHEAVE 피벗
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅

50.811	NUT, DEVICE HOSE FITTING 너트
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너

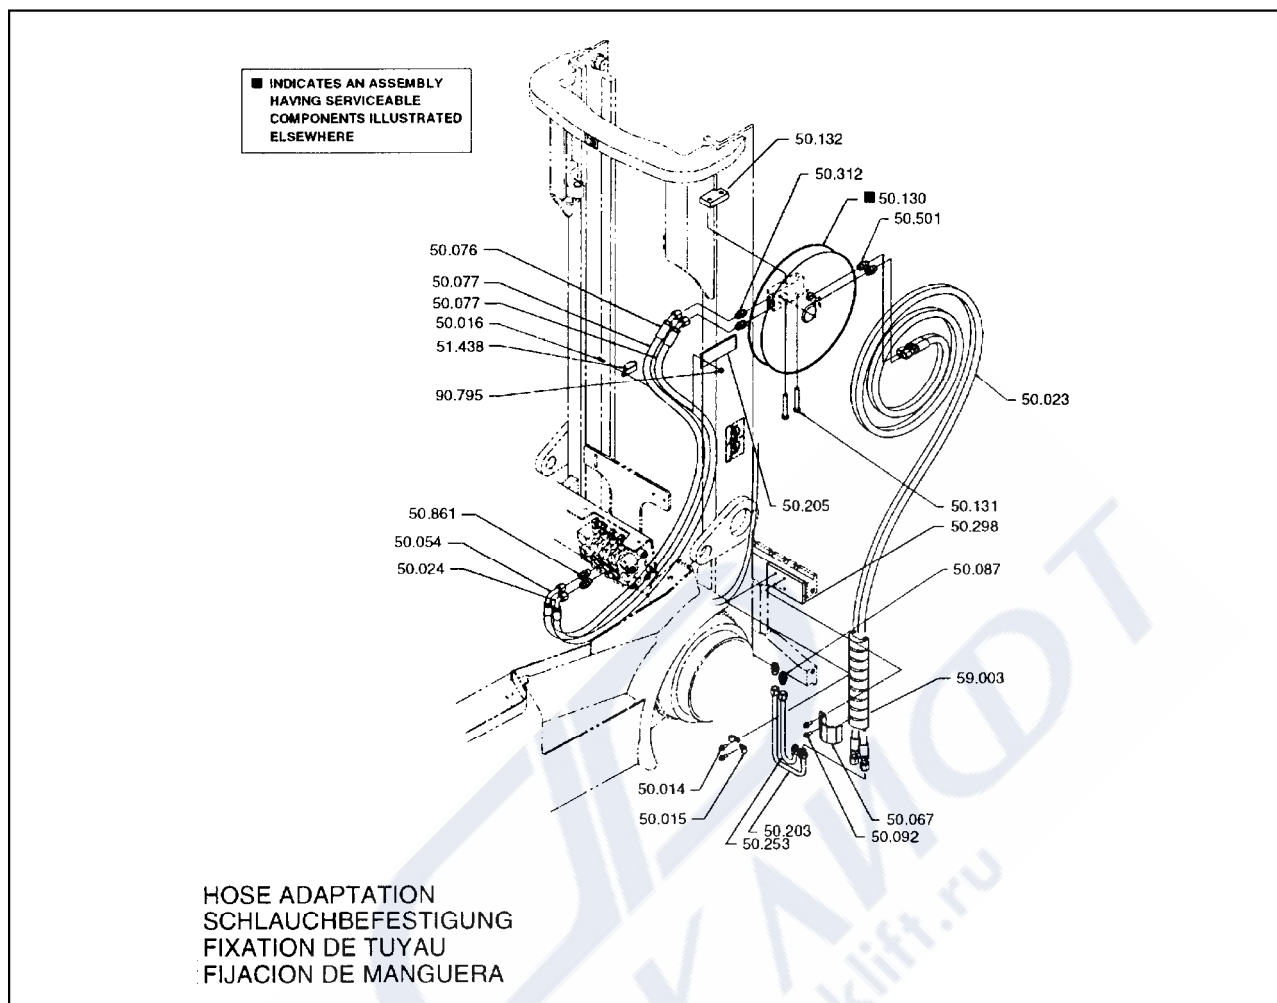 

50.014	FASTENER, DEVICE HOSE CLIP TO BRACKET RH 패스너
50.015	CLIP, DEVICE LINE TO UPRIGHT 클립
50.016	FASTENER, DEVICE LINE TO UPRIGHT CLIP 패스너
50.023	LINE, DEVICE HYDRAULIC 라인
50.024	COUPLING, DEVICE RH HOSE (VALVE END) 커플링
50.054	COUPLING, DEVICE LH HOSE (VALVE END) 커플링
50.067	CLAMP, DEVICE HOSE TO BRACKET 클램프
50.076	COUPLING, DEVICE RH HOSE (REEL INLET) 커플링
50.077	LINE, DEVICE RH HYDRAULIC (VALVE TO REEL) 라인


50.087	FITTING, DEVICE LH HYDRAULIC HOSE 피팅
50.092	FASTENER, DEVICE HOSE TO BRACKET RH CLAMP 패스너
50.130	REEL ASSEMBLY, DEVICE RH HOSE 릴어셈블리
50.131	FASTENER, DEVICE RH HOSE REEL 패스너
50.132	BRACKET, DEVICE HOSE REEL 브라켓
50.203	LINE, DEVICE HYDRAULIC (AT CARRIAGE) 라인
50.205	BRACKET, DEVICE LINE CLAMP 브라켓
50.253	LINE, DEVICE HYDRAULIC (AT CARRIAGE) 라인
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.312	FITTING, DEVICE RH HOSE REEL INLET 피팅
50.501	FITTING, DEVICE HOSE REEL OUTLET 피팅
50.861	FITTING, AUXILIARY VALVE A PORT 피팅
51.438	CLIP, DEVICE HOSE 클립
59.003	RETAINER, DEVICE HOSE 리테이너
90.795	NUT, DEVICE HOSE CLAMP FASTENER 너트

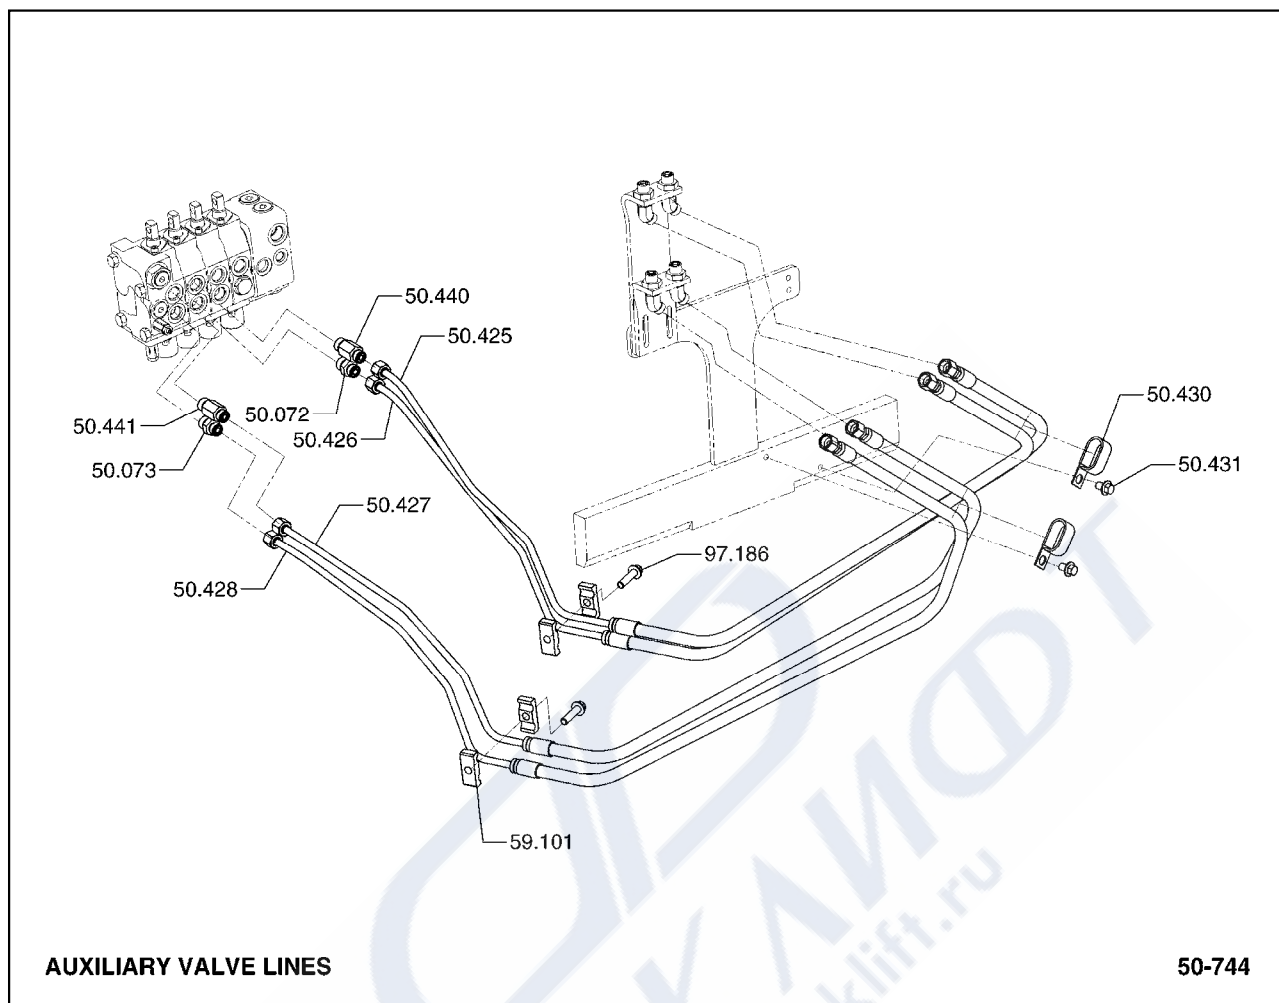 

50.072	FITTING, 1ST AUXILIARY VALVE "B" PORT 피팅
50.073	FITTING, 2ND AUXILIARY VALVE "B" PORT 피팅
50.425	LINE, 1ST AUXILIARY VALVE "A" PORT 라인
50.426	LINE, 1ST AUXILIARY VALVE "B" PORT 라인
50.427	LINE, 2ND AUXILIARY VALVE "A" PORT 라인
50.428	LINE, 2ND AUXILIARY VALVE "B" PORT 라인
50.430	CLAMP, AUXILIARY VALVE LINES 클램프
50.431	FASTENER, AUX VALVE LINES CLAMP 패스너
50.440	FITTING, 1ST AUXILIARY VALVE "A" PORT 피팅


50.441	FITTING, 2ND AUXILIARY VALVE "A" PORT 피팅
59.101	TIE STRAP, AUXILIARY FUNCTION LINES 타이스트랩
97.186	FASTENER, AUX VALVE LINES CLAMP 패스너



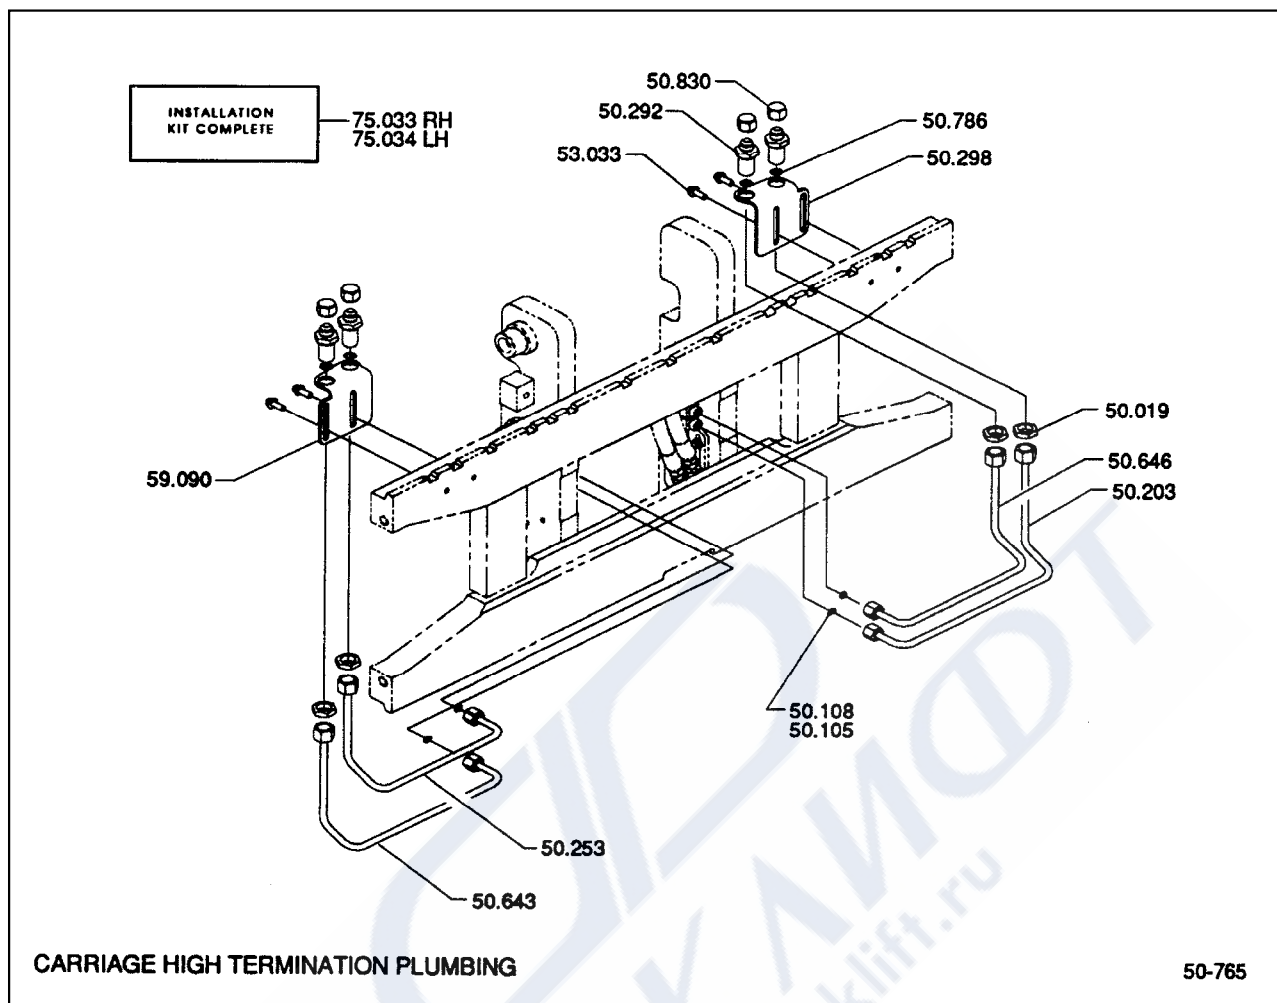 


50.019	FASTENER, DEVICE HOSE DISCONNECT 패스너
50.105	SEAL, DEVICE HOSE SWIVEL COUPLING PLUG 씰
50.108	SEAL, DEVICE HOSE SWIVEL COUPLING INLET PORT 씰
50.203	LINE, DEVICE HYDRAULIC (AT CARRIAGE) 라인
50.253	LINE, DEVICE HYDRAULIC (AT CARRIAGE) 라인
50.292	FITTING, DEVICE RH HYDRAULIC HOSE 피팅
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.643	LINE, DEVICE UPPER (AT CARRIAGE) 라인
50.646	LINE, DEVICE 라인


50.786	SEAL, DEVICE RH HOSE TERMINAL BLOCK PORT 씰
50.830	CAP, DEVICE HOSE REEL FITTING 캡
53.033	FASTENER, HOSE TERMINAL BRACKET 패스너
59.090	BRACKET, DEVICE HOSE TERMINAL 브라켓
75.033	KIT, CARRIAGE TERMINATION PIPING - RH 키트
75.034	KIT, CARRIAGE TERMINATION PIPING - LH 키트

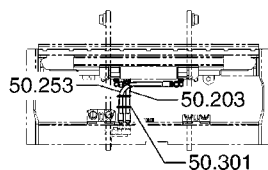 

 
**MODEL: GTX162
GEX162**
UPRIGHT: STANDARD

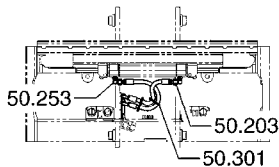

 
**MODEL: GTX162, GEX162
EPX162, CMP158
P152, TMX250, ESX250**
UPRIGHT: TRIPLE STAGE & HI-LO

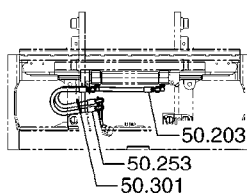

 
**MODEL: GTX162, GEX162
EPX162, CMP158
P152, TMX250, ESX250**
UPRIGHT: TRIPLE STAGE

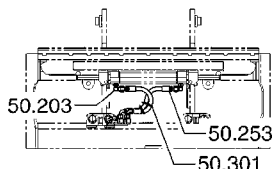

 
**MODEL: EPX162, CMP158
P152, TMX250, ESX250**
UPRIGHT: STANDARD

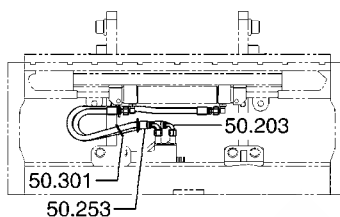

 **MODEL: EPX360, ECX360
GEX230, P232
GTS232, CQ230**
UPRIGHT: STANDARD

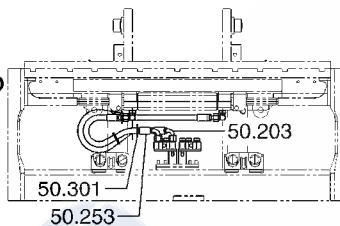

 **MODEL: EPX360, ECX360
GEX230, P232
GTS232, CQ230**
UPRIGHT: TRIPLE STAGE

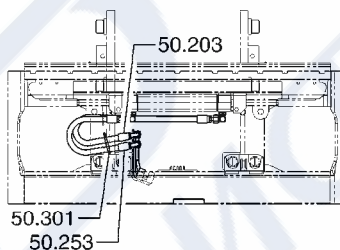


**MODEL: EPX360, ECX360
GEX230, P232
GTS232, CQ230**
UPRIGHT: HI-LO

ATTACHMENT HOSE ADAPTATION (CARRIAGE)

50-791


- | | |
|--------|--|
| 50.203 | LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인 |
| 50.253 | LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인 |
| 50.301 | CLIP, DEVICE RH HOSE (AT CARRIAGE)
클립 |

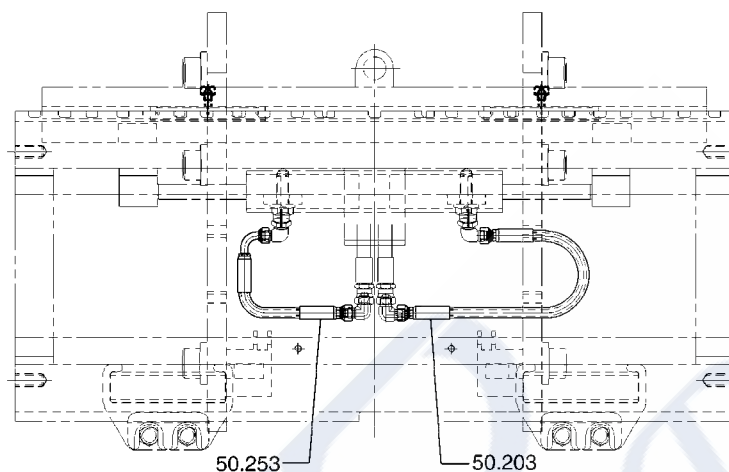 

ATTACHMENT HOSE ADAPTATION (CARRIAGE)

50-793


- | | |
|--------|--|
| 50.203 | LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인 |
| 50.253 | LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인 |

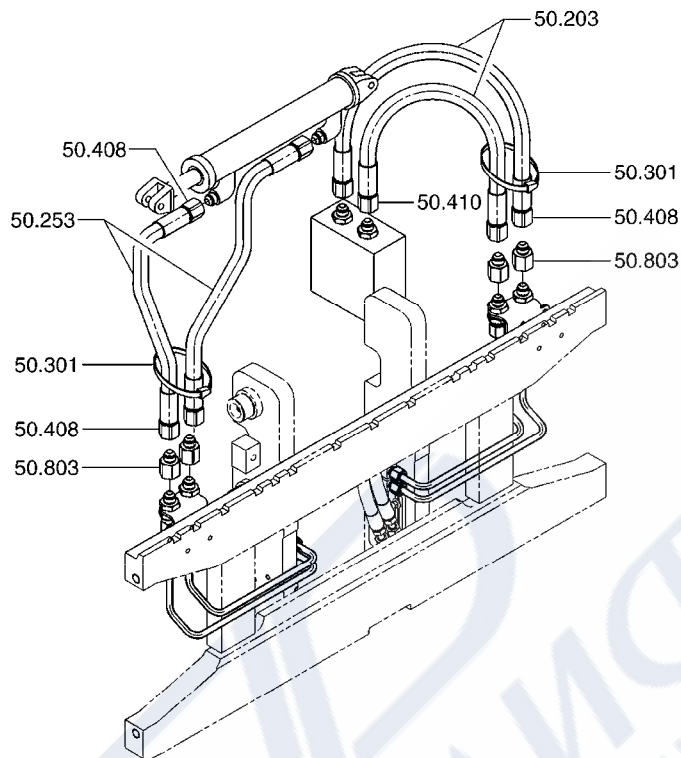 

ATTACHMENT HOSE ADAPTATION (CARRIAGE)

50-794


50.203	LINE, DEVICE HYDRAULIC (AT CARRIAGE) 라인
50.253	LINE, DEVICE HYDRAULIC (AT CARRIAGE) 라인
50.301	CLIP, DEVICE RH HOSE (AT CARRIAGE) 클립
50.408	COUPLING, DEVICE HOSE 커플링
50.410	COUPLING, DEVICE HOSE 커플링
50.803	FITTING, DEVICE HYDRAULIC LINE 피팅

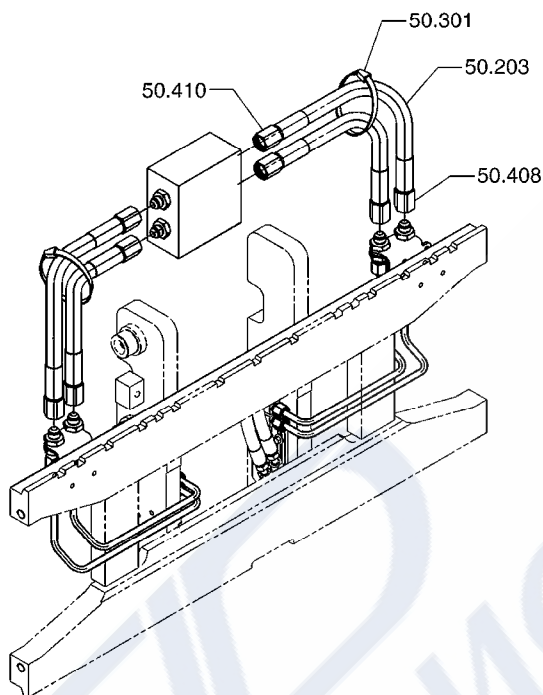 

ATTACHMENT HOSE ADAPTATION (CARRIAGE)

50-796


50.203	LINE, DEVICE HYDRAULIC (AT CARRIAGE) 라인
50.301	CLIP, DEVICE RH HOSE (AT CARRIAGE) 클립
50.408	COUPLING, DEVICE HOSE 커플링
50.410	COUPLING, DEVICE HOSE 커플링

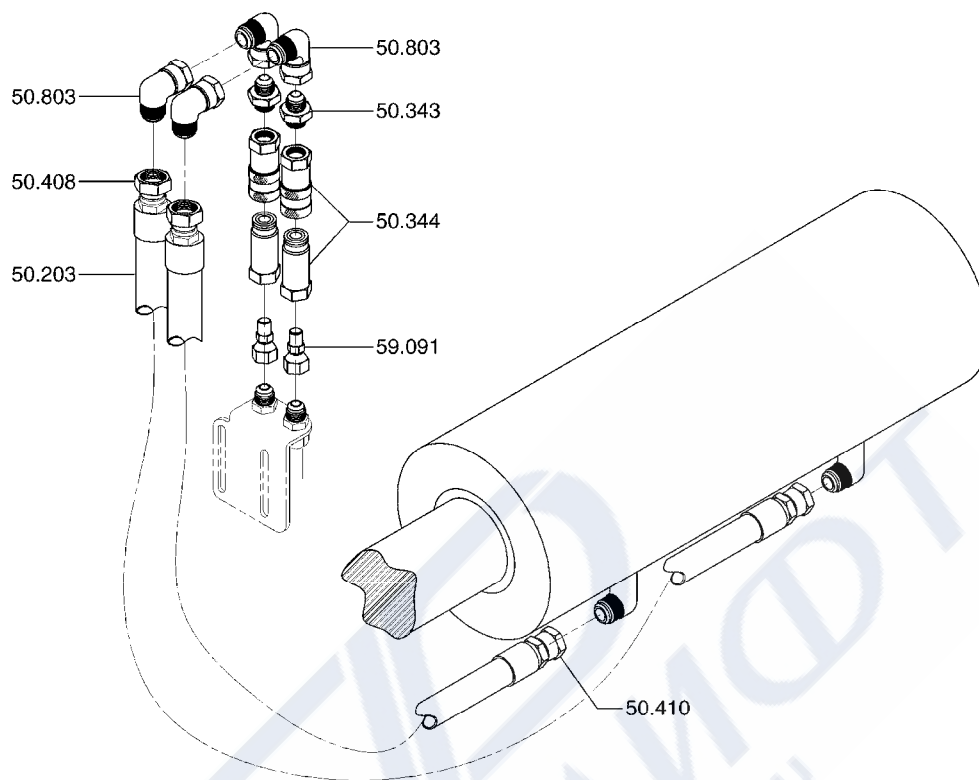 

ATTACHMENT HOSE ADAPTATION (CARRIAGE)

50-797


50.203	LINE, DEVICE HYDRAULIC (AT CARRIAGE) 라인
50.343	FITTING, DEVICE LH LINE 피팅
50.344	FITTING, DEVICE LH LINE 피팅
50.408	COUPLING, DEVICE HOSE 커플링
50.410	COUPLING, DEVICE HOSE 커플링
50.803	FITTING, DEVICE HYDRAULIC LINE 피팅
59.091	FITTING, DEVICE HYDRAULIC LINE 피팅

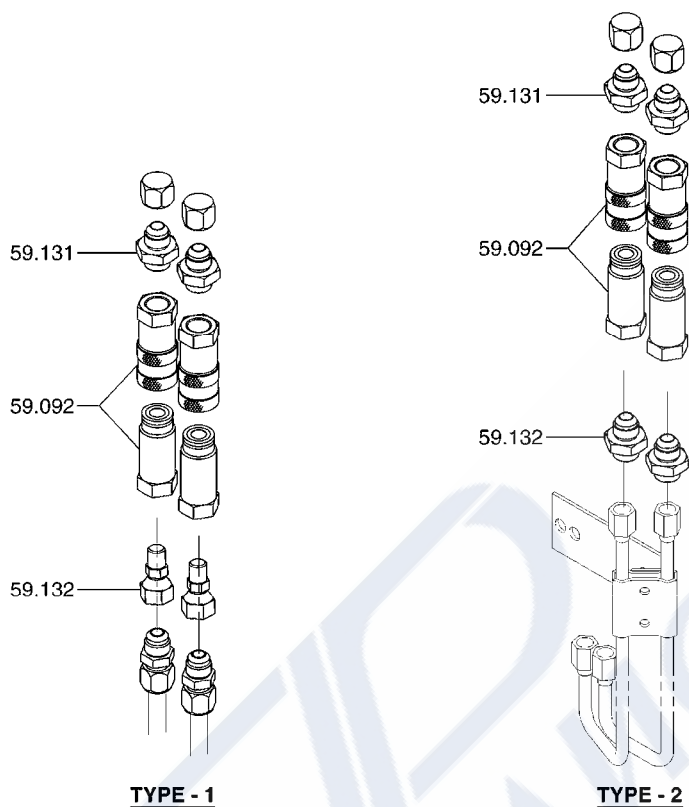 

QUICK DISCONNECT FOR DEVICE HOSE ADAPTATION

50-798


- | | |
|--------|---|
| 59.092 | QUICK DISCONNECT, DEVICE HOSE
퀵디스커넥트 |
| 59.131 | FITTING, DEVICE LINE QUICK DISCONNECT
피팅 |
| 59.132 | FITTING, DEVICE LINE QUICK DISCONNECT
피팅 |

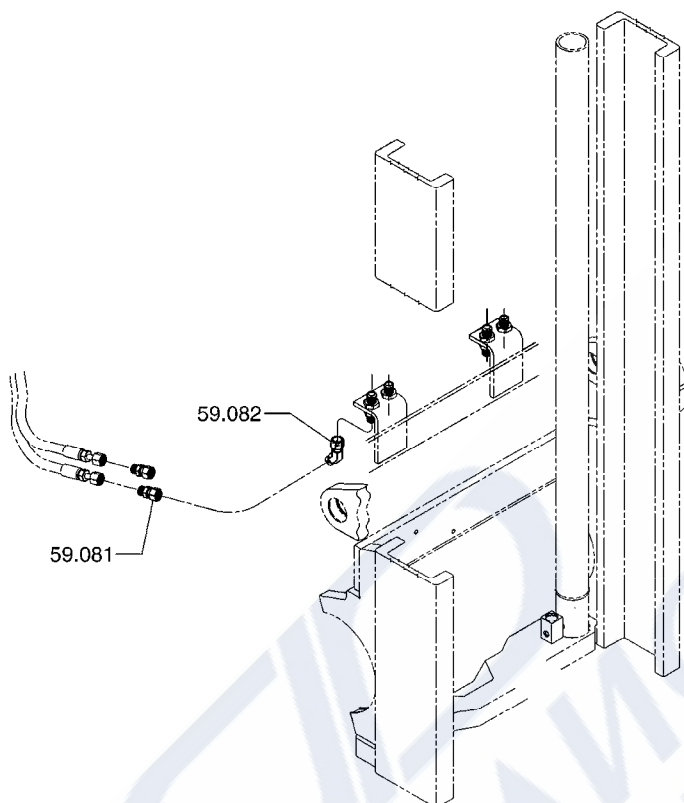 

DEVICE LINE ADAPTORS

50-819


- | | |
|--------|---|
| 59.081 | FITTING, DEVICE HOSE ADAPTOR (AT UPRIGHT)
피팅 |
| 59.082 | FITTING, DEVICE HOSE ADAPTOR (AT UPRIGHT)
피팅 |

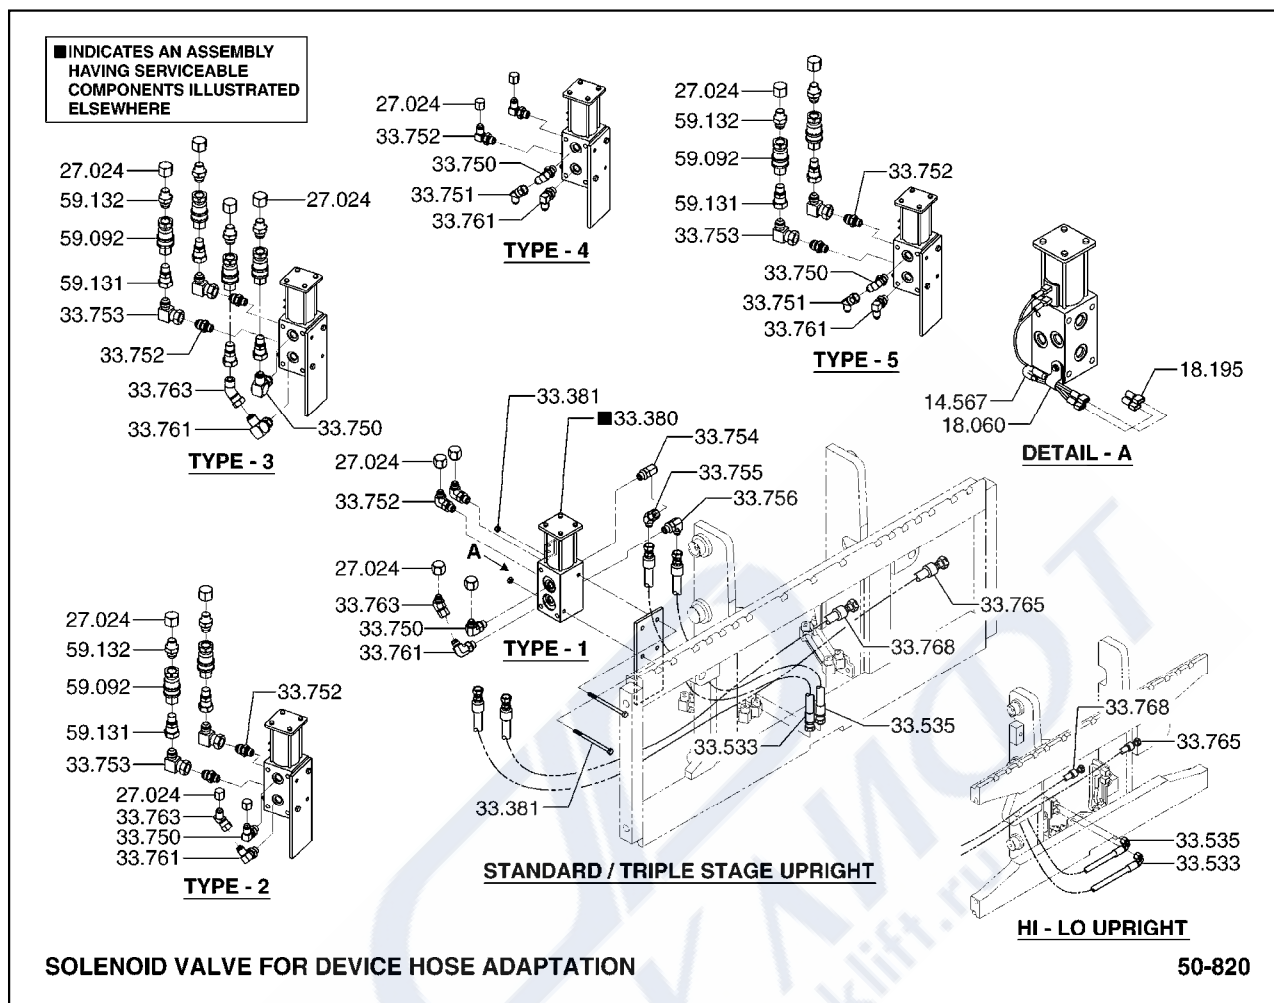 

14.567	WIRE, DEVICE SELECTOR VALVE SWITCH FEED 와이어
18.060	CLAMP, DEVICE SELECTOR VALVE CABLE 클램프
18.195	TERMINAL, DEVICE SELECTOR VALVE SWITCH FEED WIRE 터미널
27.024	PLUG, DEVICE SELECTOR VALVE OPTIONAL OUTLET PORT 플러그
33.380	VALVE ASSEMBLY, DEVICE SELECTOR SOLENOID 밸브
33.381	FASTENER, DEVICE SELECTOR VALVE 패스너
33.533	LINE, DEVICE SELECTOR VALVE "P" PORT HYDRAULIC 라인
33.535	LINE, DEVICE SELECTOR VALVE "R" PORT HYDRAULIC 라인
33.750	FITTING, DEVICE SELECTOR VALVE C1 PORT 피팅


33.751	FITTING, DEVICE SELECTOR VALVE C1 PORT 피팅
33.752	FITTING, DEVICE SELECTOR VALVE C2 PORT 피팅
33.753	FITTING, DEVICE SELECTOR VALVE C2 PORT 피팅
33.754	FITTING, DEVICE SELECTOR VALVE "P" PORT 피팅
33.755	FITTING, DEVICE SELECTOR VALVE "P" PORT 피팅
33.756	FITTING, DEVICE SELECTOR VALVE "R" PORT 피팅
33.761	FITTING, DEVICE SELECTOR VALVE C4 PORT 피팅
33.763	FITTING, DEVICE SELECTOR VALVE C4 PORT 피팅
33.765	LINE, DEVICE SELECTOR VALVE C4 PORT HYDRAULIC 라인
33.768	LINE, DEVICE SELECTOR VALVE C1 PORT HYDRAULIC 라인
59.092	QUICK DISCONNECT, DEVICE HOSE 퀵디स्क넥트
59.131	FITTING, DEVICE LINE QUICK DISCONNECT 피팅
59.132	FITTING, DEVICE LINE QUICK DISCONNECT 피팅



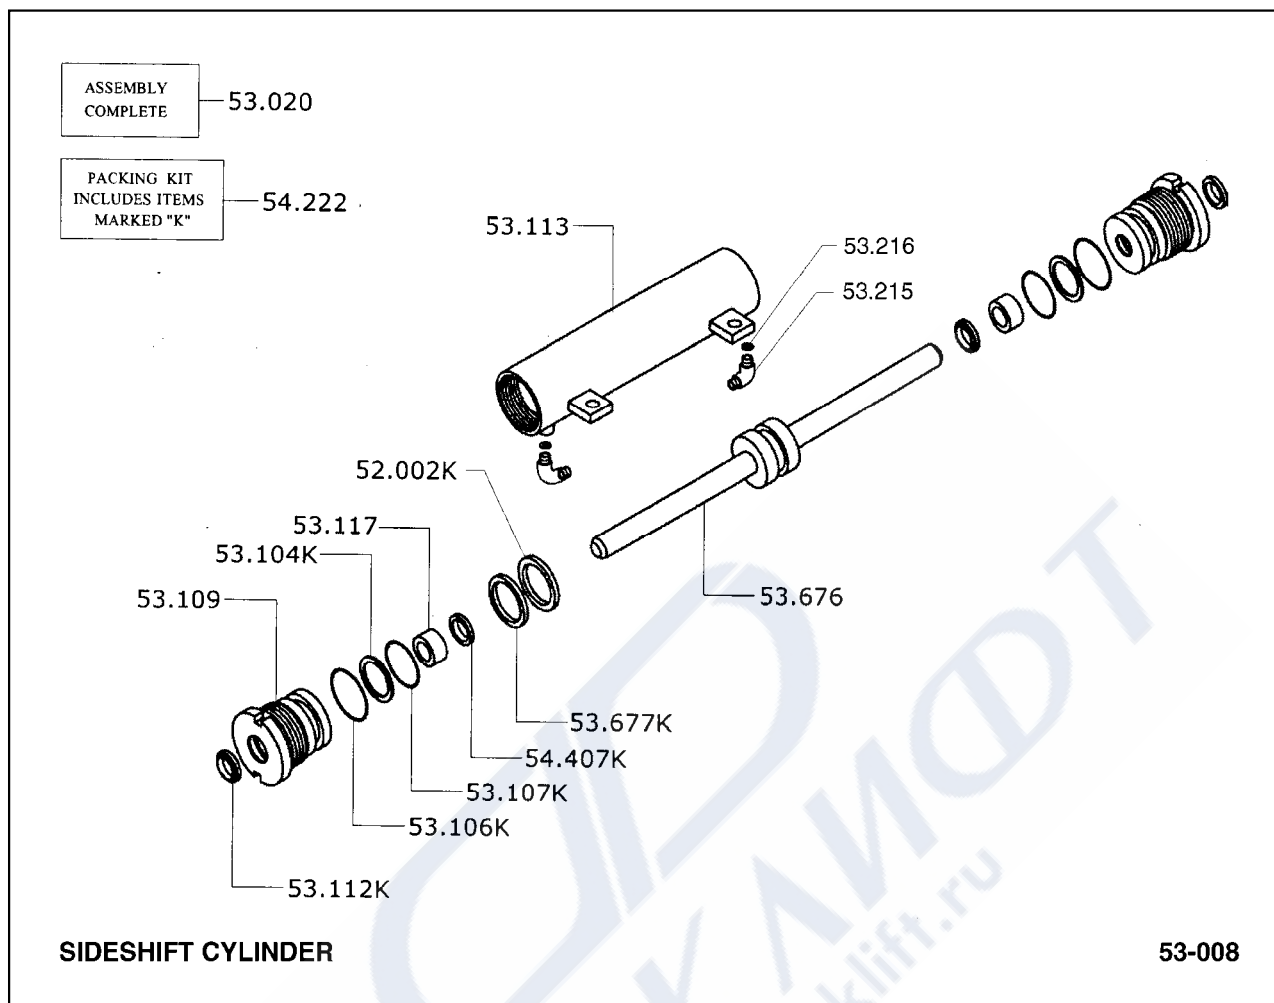 


52.002	RING, CLAMP SIDE SHIFT LIMIT CYL PISTON WEAR 링
53.020	CYLINDER ASSEMBLY, SIDE SHIFTER 실린더
53.104	RING, SIDE SHIFTER CYL PISTON PACKING BACK-UP 링
53.106	SEAL, SIDE SHIFTER CYLINDER GLAND 씰
53.107	RING, SIDE SHIFT CYL GLAND SEAL BACK-UP 링
53.109	GLAND, SIDE SHIFTER CYLINDER 그랜드
53.112	WIPER, SIDE SHIFTER CYLINDER PISTON ROD 와이퍼
53.113	CYLINDER ASSEMBLY, WELDED SIDE SHIFTER 실린더
53.117	BUSHING, SIDE SHIFTER CYLINDER GLAND 부싱

53.215	FITTING, SIDE SHIFTER CYLINDER ROD PORT 피팅
53.216	SEAL, SIDE SHIFTER CYLINDER ROD PORT FITTING 씰
53.676	ROD, SIDE SHIFTER CYLINDER PISTON 로드
53.677	SEAL, SIDE SHIFTER CYLINDER PISTON 씰
54.222	PACKING KIT, SIDE SHIFTER CYLINDER 패킹키트
54.407	SEAL, SIDE SHIFTER CYLINDER PORT ROD 씰

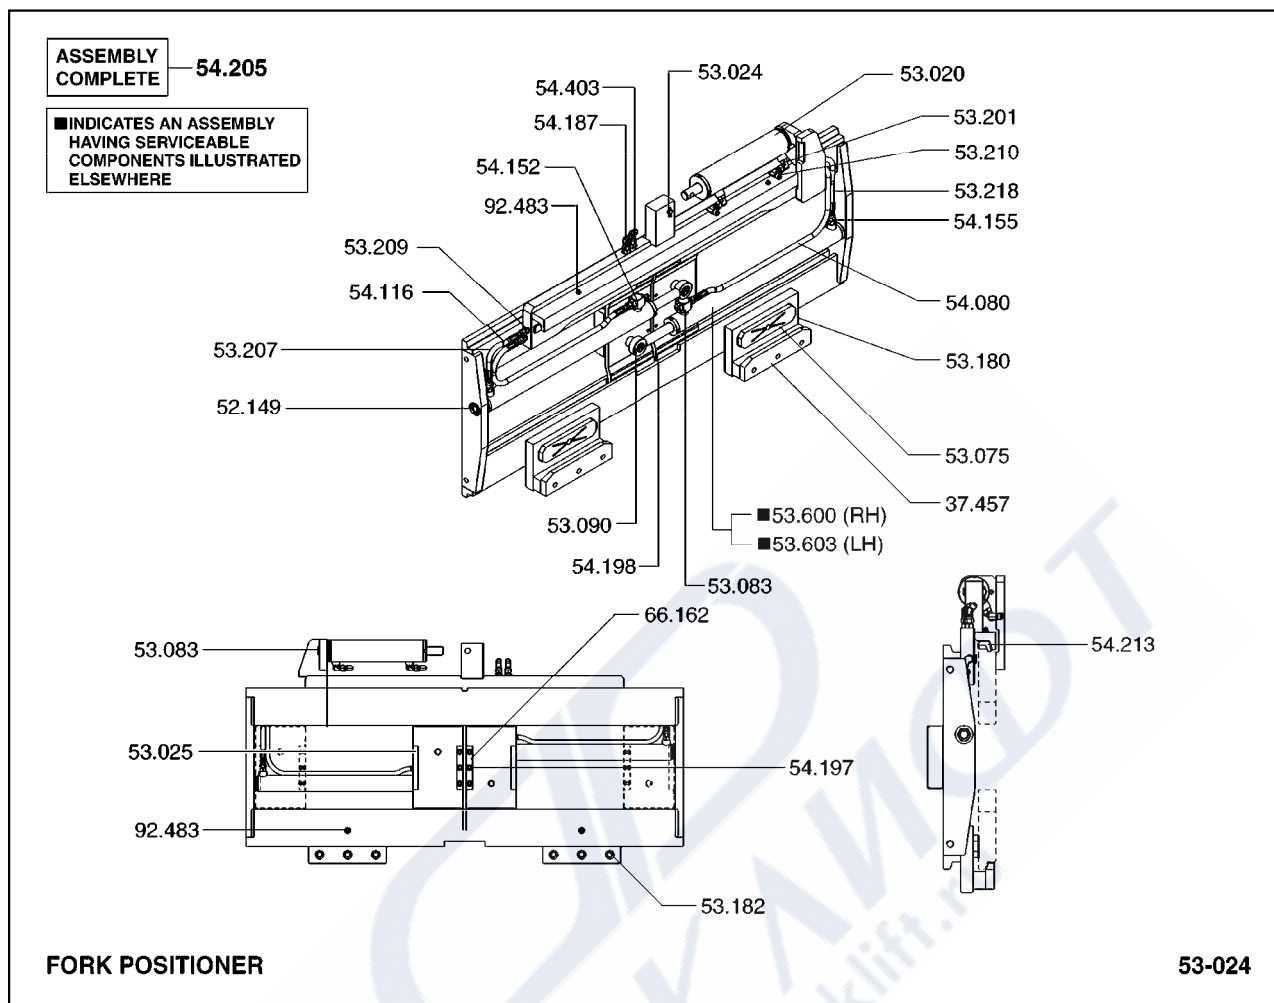 



37.457	HOOK, CAB CLOTHING HANGER 후크	53.600	CYLINDER ASSEMBLY, INBOARD RH FORK 실린더
52.149	NUT, SIDE SHIFT CYLINDER ANCHOR PORT LINE FITTING 너트	53.603	CYLINDER ASSEMBLY, INBOARD LH FORK 실린더
53.020	CYLINDER ASSEMBLY, SIDE SHIFTER 실린더	54.080	LINE, SIDE SHIFT CYLINDER ANCHOR PORT 라인
53.024	ANCHOR, SIDE SHIFTER CYLINDER BASE 앵커	54.116	LINE, SIDE SHIFT CYLINDER ROD PORT 라인
53.025	GUIDE, SIDE SHIFTER MOVABLE FRAME LOWER 가이드	54.152	FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT LINE 피팅
53.075	BEARING, SIDE SHIFTER (LOWER) 베어링	54.155	FITTING, SIDE SHIFTER CYLINDER ROD PORT LINE 피팅
53.083	FASTENER, SIDE SHIFTER CYLINDER ANCHOR 패스너	54.187	FITTING, SIDE SHIFTER ANCHOR PORT LINE 피팅
53.090	FASTENER, SIDE SHIFTER MOVABLE FRAME 패스너	54.197	FASTENER, SIDE SHIFTING BASE PLATE TO ARM 패스너
53.180	SPACER, SIDE SHIFTER BEARING 스페이서	54.198	BEARING, SIDE SHIFTER BASE PLATE ARM 베어링
53.182	FASTENER, SIDE SHIFTER HANGER 패스너	54.205	ATTACHMENT, FORK POSITIONER 어태치먼트
53.201	FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT 피팅	54.213	BEARING, SIDE SHIFTER (UPPER) 베어링
53.207	LINE, SIDE SHIFTER CYLINDER ANCHOR PORT 라인	54.403	FITTING-LUB, SIDE SHIFTER BASE PLATE ARM 피팅
53.209	FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT LINE 피팅	66.162	STOP, CARRIAGE TRAVEL 스톱
53.210	FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT LINE 피팅	92.483	NIPPLE, LUBRICATION 니플
53.218	LINE, SIDE SHIFTER CYLINDER ROD PORT 라인		

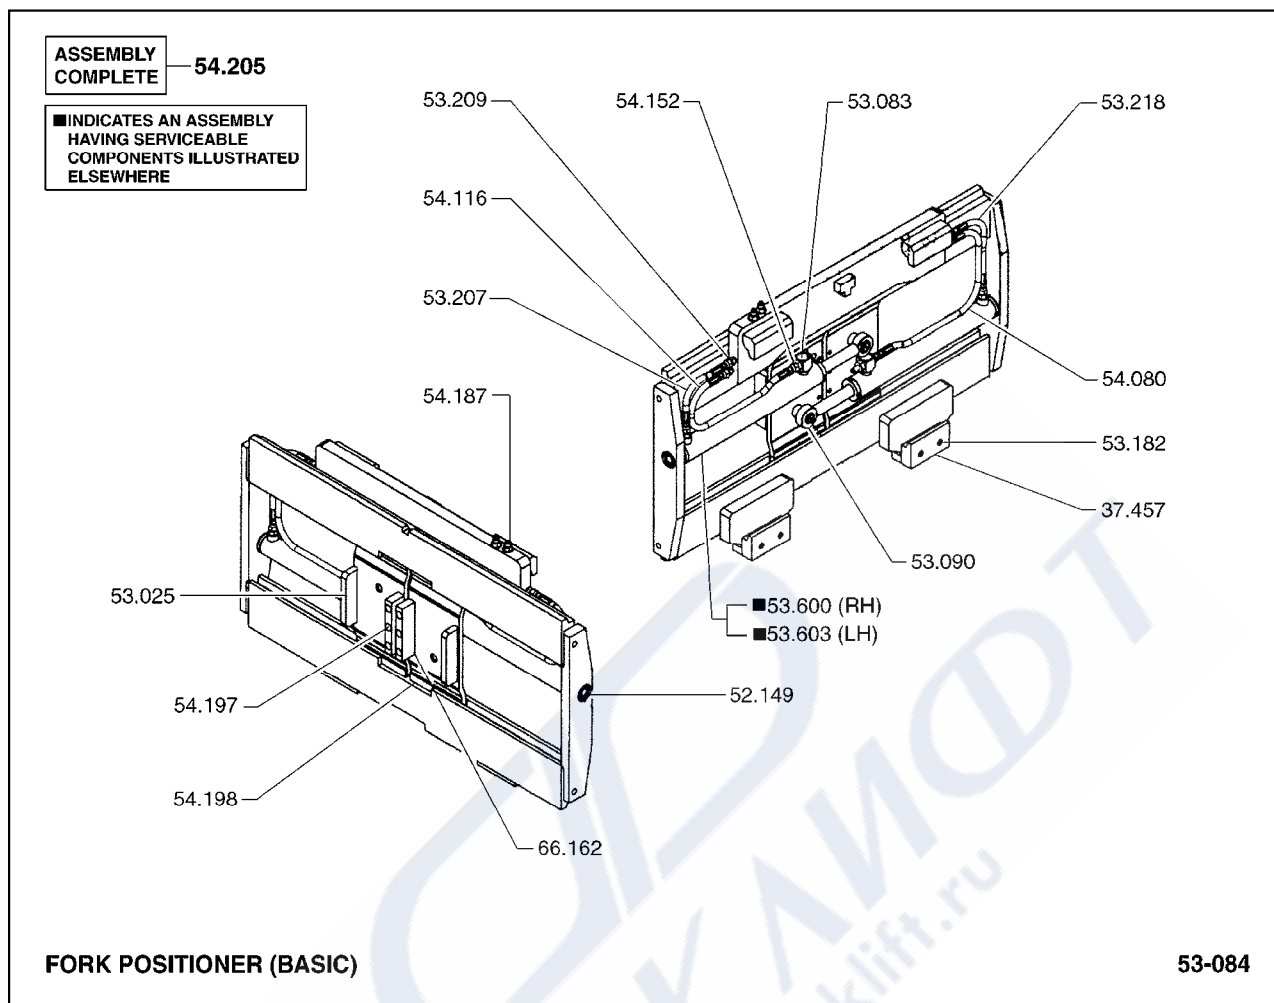 


37.457	HOOK, CAB CLOTHING HANGER 후크
52.149	NUT, SIDE SHIFTER CYLINDER ANCHOR PORT LINE FITTING 너트
53.025	GUIDE, SIDE SHIFTER MOVABLE FRAME LOWER 가이드
53.083	FASTENER, SIDE SHIFTER CYLINDER ANCHOR 패스너
53.090	FASTENER, SIDE SHIFTER MOVABLE FRAME 패스너
53.182	FASTENER, SIDE SHIFTER HANGER 패스너
53.207	LINE, SIDE SHIFTER CYLINDER ANCHOR PORT 라인
53.209	FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT LINE 피팅
53.218	LINE, SIDE SHIFTER CYLINDER ROD PORT 라인

53.600	CYLINDER ASSEMBLY, INBOARD RH FORK 실린더
53.603	CYLINDER ASSEMBLY, INBOARD LH FORK 실린더
54.080	LINE, SIDE SHIFT CYLINDER ANCHOR PORT 라인
54.116	LINE, SIDE SHIFT CYLINDER ROD PORT 라인
54.152	FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT LINE 피팅
54.187	FITTING, SIDE SHIFTER ANCHOR PORT LINE 피팅
54.197	FASTENER, SIDE SHIFTING BASE PLATE TO ARM 패스너
54.198	BEARING, SIDE SHIFTER BASE PLATE ARM 베어링
54.205	ATTACHMENT, FORK POSITIONER 어태치먼트
66.162	STOP, CARRIAGE TRAVEL 스톱

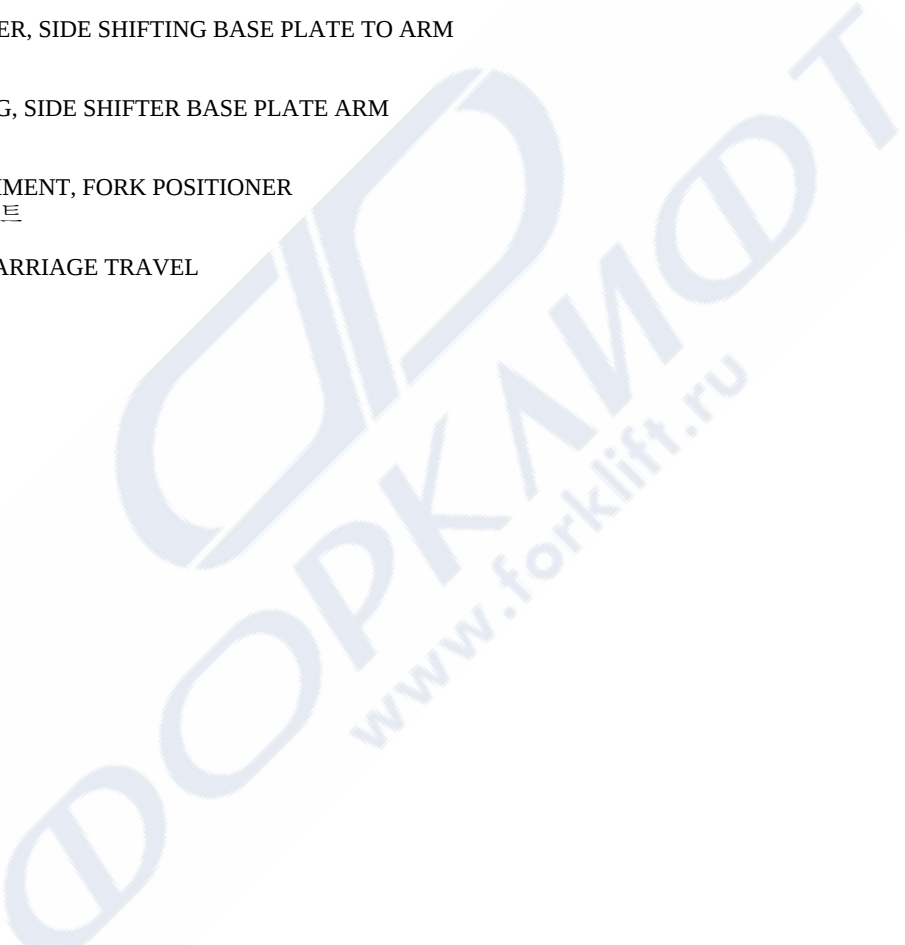 

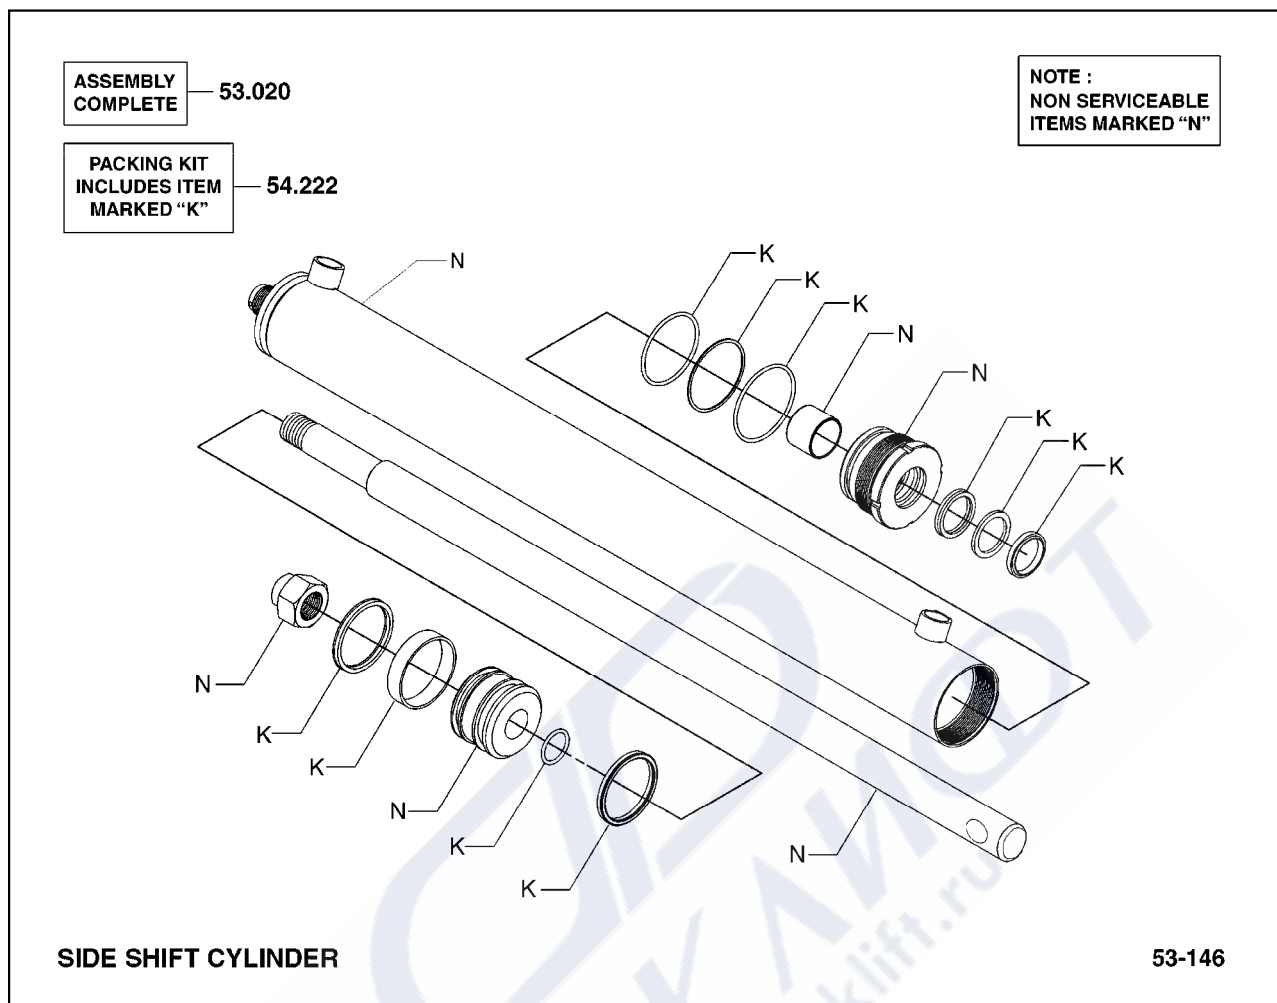 

 - 53.020 CYLINDER ASSEMBLY, SIDE SHIFTER
실린더
- 54.222 PACKING KIT, SIDE SHIFTER CYLINDER
패킹키트

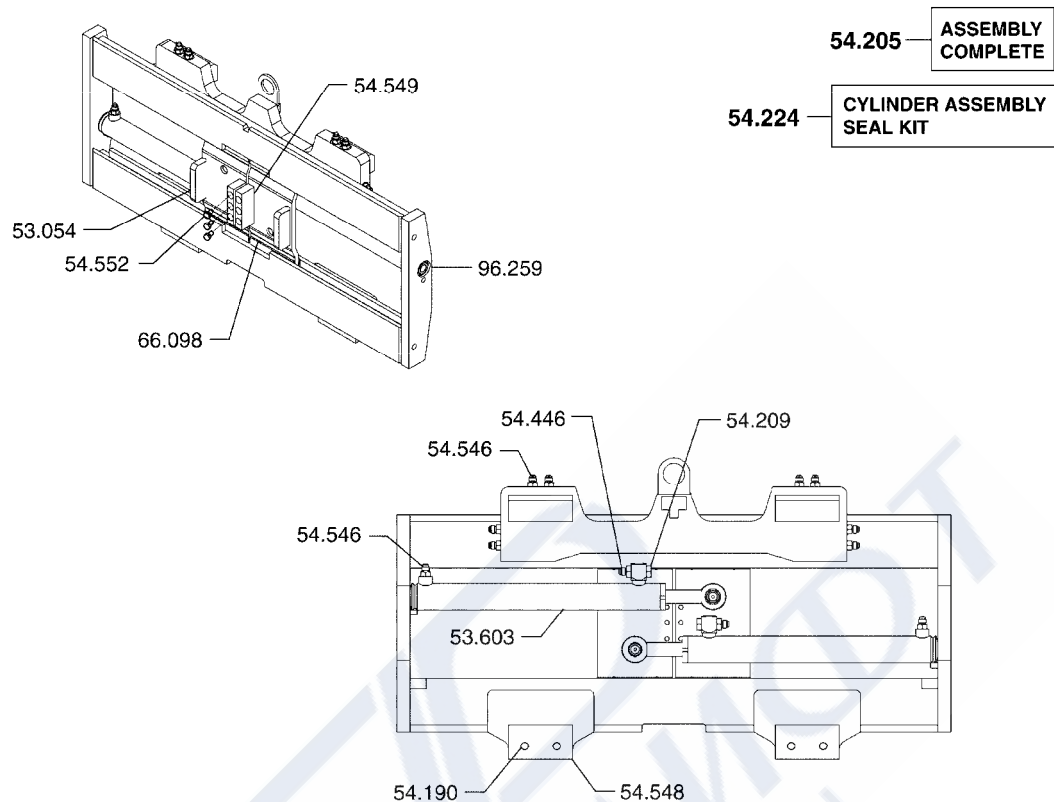


FORK POSITIONER

53-164

53.054	GUIDE, FORK 가이드
53.603	CYLINDER ASSEMBLY, INBOARD LH FORK 실린더
54.190	FASTENER, FORK HANGER SUPPORT 패스너
54.205	ATTACHMENT, FORK POSITIONER 어태치먼트
54.209	PLUG, FORK CYLINDER FLOW DIVIDER 플러그
54.224	PACKING KIT, LH FORK CYLINDER 패킹키트
54.446	FITTING - LUB, FORK POSITIONER 피팅
54.546	FITTING - LUB, FORK POSITIONER 피팅
54.548	HOOK, FORK POSITIONER HANGER 후크


54.549	STOP, FORK POSITIONER CYLINDER 스톱
54.552	FASTENER, FORK POSITIONER CYLINDER STOP 패스너
66.098	BEARING, FORK HORIZONTAL THRUST ROLLER 베어링
96.259	FASTENER, FORK CYLINDER ANCHOR END PIN RETAINER 패스너



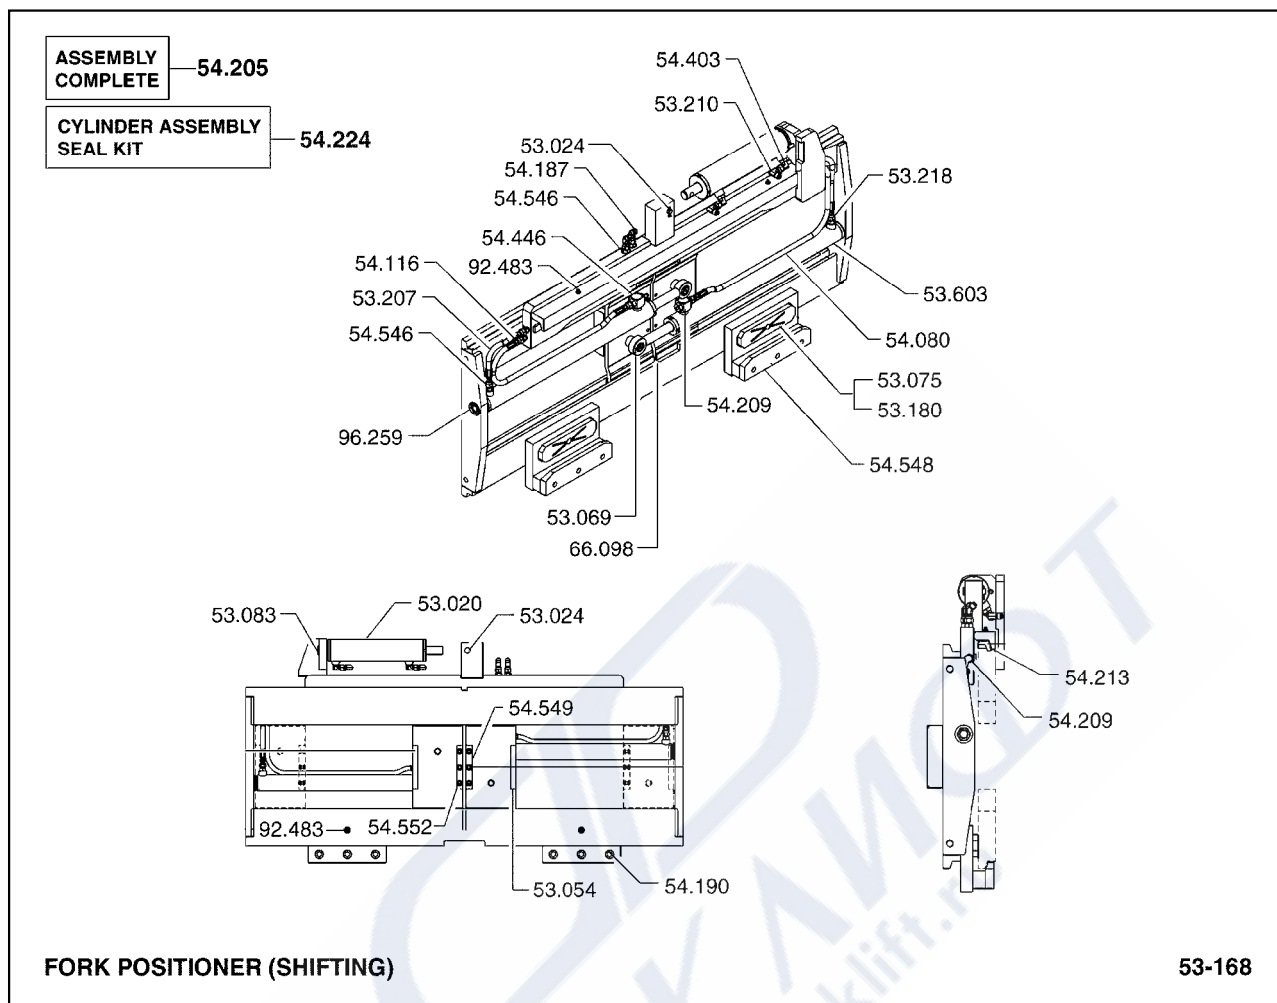 


- | | |
|--------|---|
| 53.020 | CYLINDER ASSEMBLY, SIDE SHIFTER
실린더 |
| 53.024 | ANCHOR, SIDE SHIFTER CYLINDER BASE
앵커 |
| 53.054 | GUIDE, FORK
가이드 |
| 53.069 | FASTENER, FORK CYLINDER ROD END
패스너 |
| 53.075 | BEARING, SIDE SHIFTER (LOWER)
베어링 |
| 53.083 | FASTENER, SIDE SHIFTER CYLINDER ANCHOR
패스너 |
| 53.180 | SPACER, SIDE SHIFTER BEARING
스페이서 |
| 53.207 | LINE, SIDE SHIFTER CYLINDER ANCHOR PORT
라인 |
| 53.210 | FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT LINE
피팅 |


53.218	LINE, SIDE SHIFTER CYLINDER ROD PORT 라인
53.603	CYLINDER ASSEMBLY, INBOARD LH FORK 실린더
54.080	LINE, SIDE SHIFT CYLINDER ANCHOR PORT 라인
54.116	LINE, SIDE SHIFT CYLINDER ROD PORT 라인
54.187	FITTING, SIDE SHIFTER ANCHOR PORT LINE 피팅
54.190	FASTENER, FORK HANGER SUPPORT 패스너
54.205	ATTACHMENT, FORK POSITIONER 어태치먼트
54.209	PLUG, FORK CYLINDER FLOW DIVIDER 플러그
54.213	BEARING, SIDE SHIFTER (UPPER) 베어링
54.224	PACKING KIT, LH FORK CYLINDER 패킹키트
54.403	FITTING-LUB, SIDE SHIFTER BASE PLATE ARM 피팅
54.446	FITTING - LUB, FORK POSITIONER 피팅
54.546	FITTING - LUB, FORK POSITIONER 피팅
54.548	HOOK, FORK POSITIONER HANGER 후크
54.549	STOP, FORK POSITIONER CYLINDER 스톱
54.552	FASTENER, FORK POSITIONER CYLINDER STOP 패스너
66.098	BEARING, FORK HORIZONTAL THRUST ROLLER 베어링
92.483	NIPPLE, LUBRICATION 니플
96.259	FASTENER, FORK CYLINDER ANCHOR END PIN RETAINER 패스너

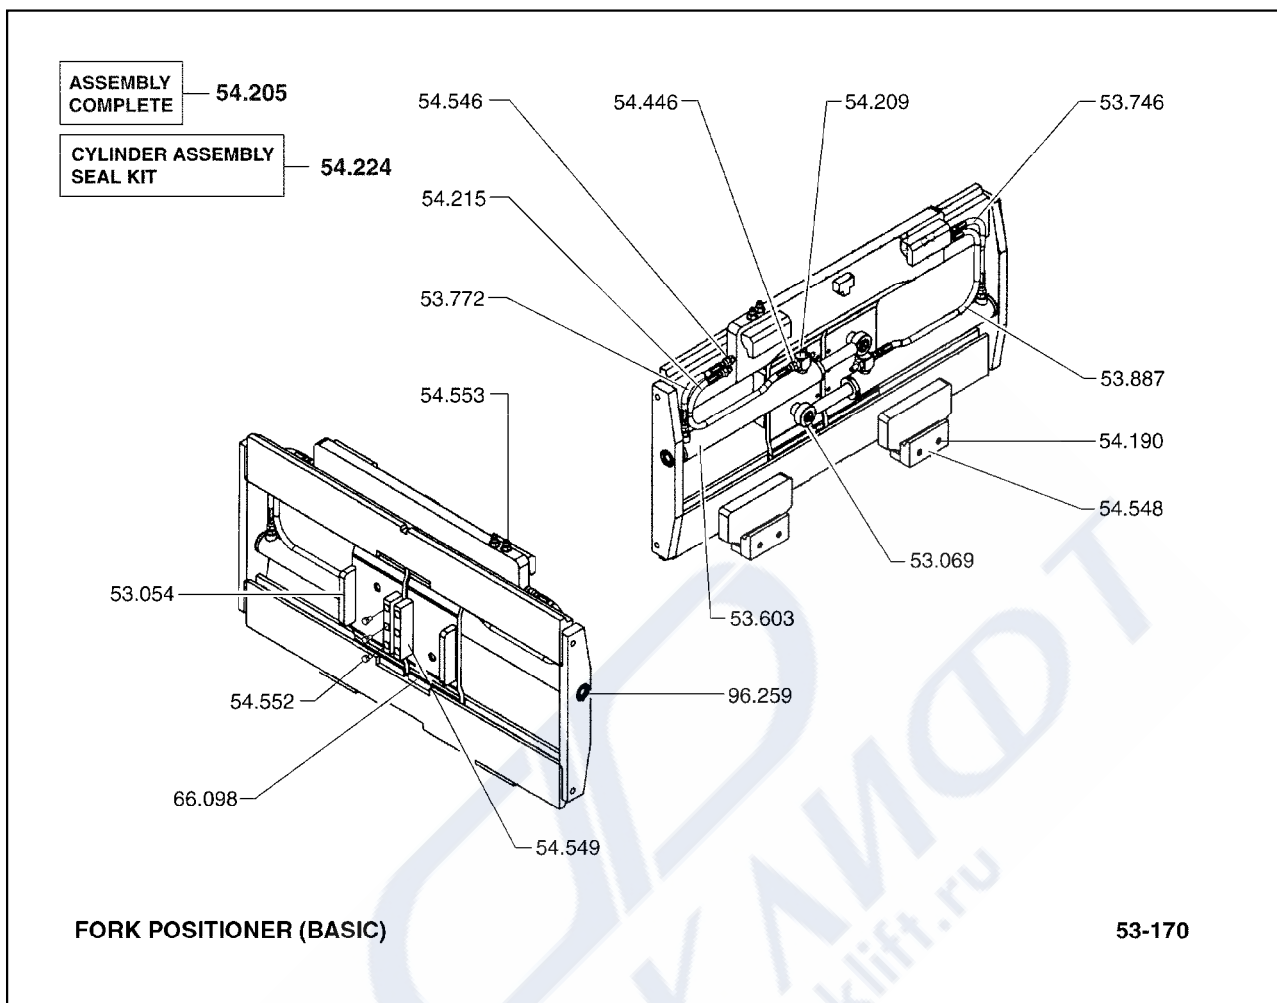 

53.054	GUIDE, FORK 가이드
53.069	FASTENER, FORK CYLINDER ROD END 패스너
53.603	CYLINDER ASSEMBLY, INBOARD LH FORK 실린더
53.746	LINE, FORK CYLINDER ROD END 라인
53.772	LINE, FORK CYLINDER ANCHOR END 라인
53.887	LINE, FORK CYLINDER ANCHOR END 라인
54.190	FASTENER, FORK HANGER SUPPORT 패스너
54.205	ATTACHMENT, FORK POSITIONER 어태치먼트
54.209	PLUG, FORK CYLINDER FLOW DIVIDER 플러그

54.215	LINE, FORK CYLINDER ROD END 라인
54.224	PACKING KIT, LH FORK CYLINDER 패킹키트
54.446	FITTING - LUB, FORK POSITIONER 피팅
54.546	FITTING - LUB, FORK POSITIONER 피팅
54.548	HOOK, FORK POSITIONER HANGER 후크
54.549	STOP, FORK POSITIONER CYLINDER 스톱
54.552	FASTENER, FORK POSITIONER CYLINDER STOP 패스너
54.553	FITTING - LUB, FORK POSITIONER 피팅
66.098	BEARING, FORK HORIZONTAL THRUST ROLLER 베어링
96.259	FASTENER, FORK CYLINDER ANCHOR END PIN RETAINER 패스너

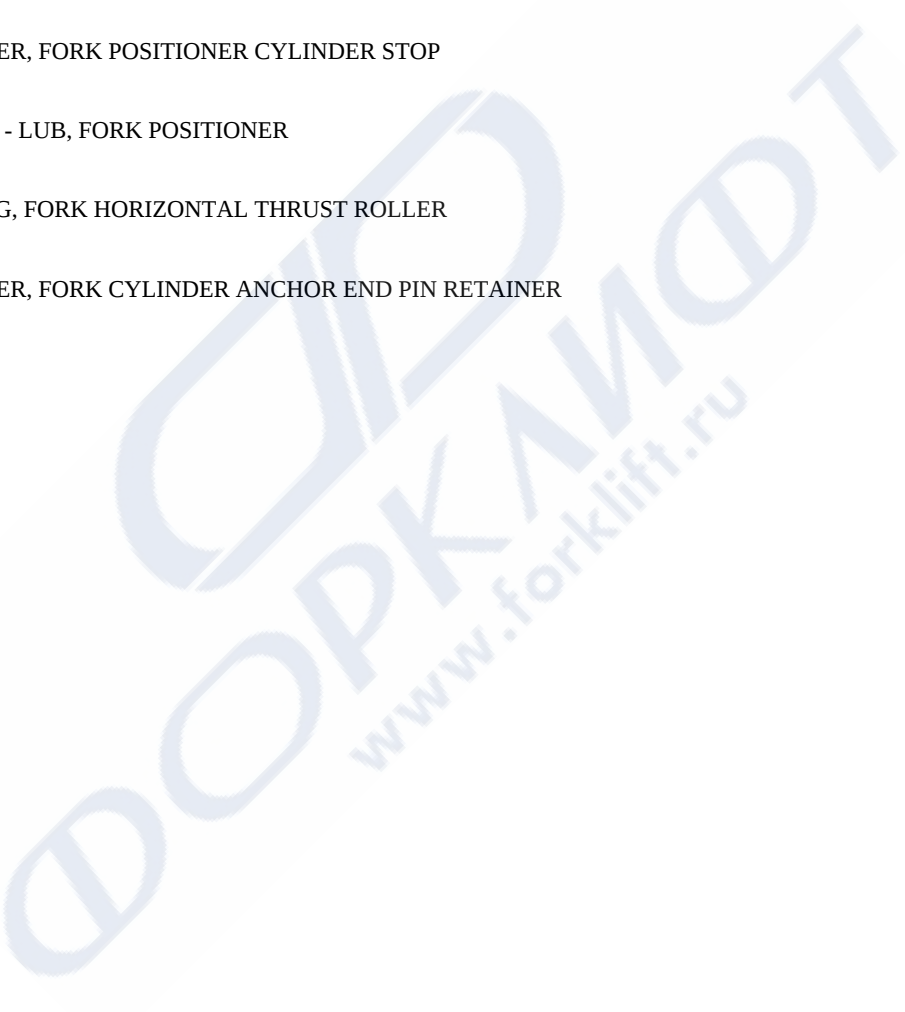 

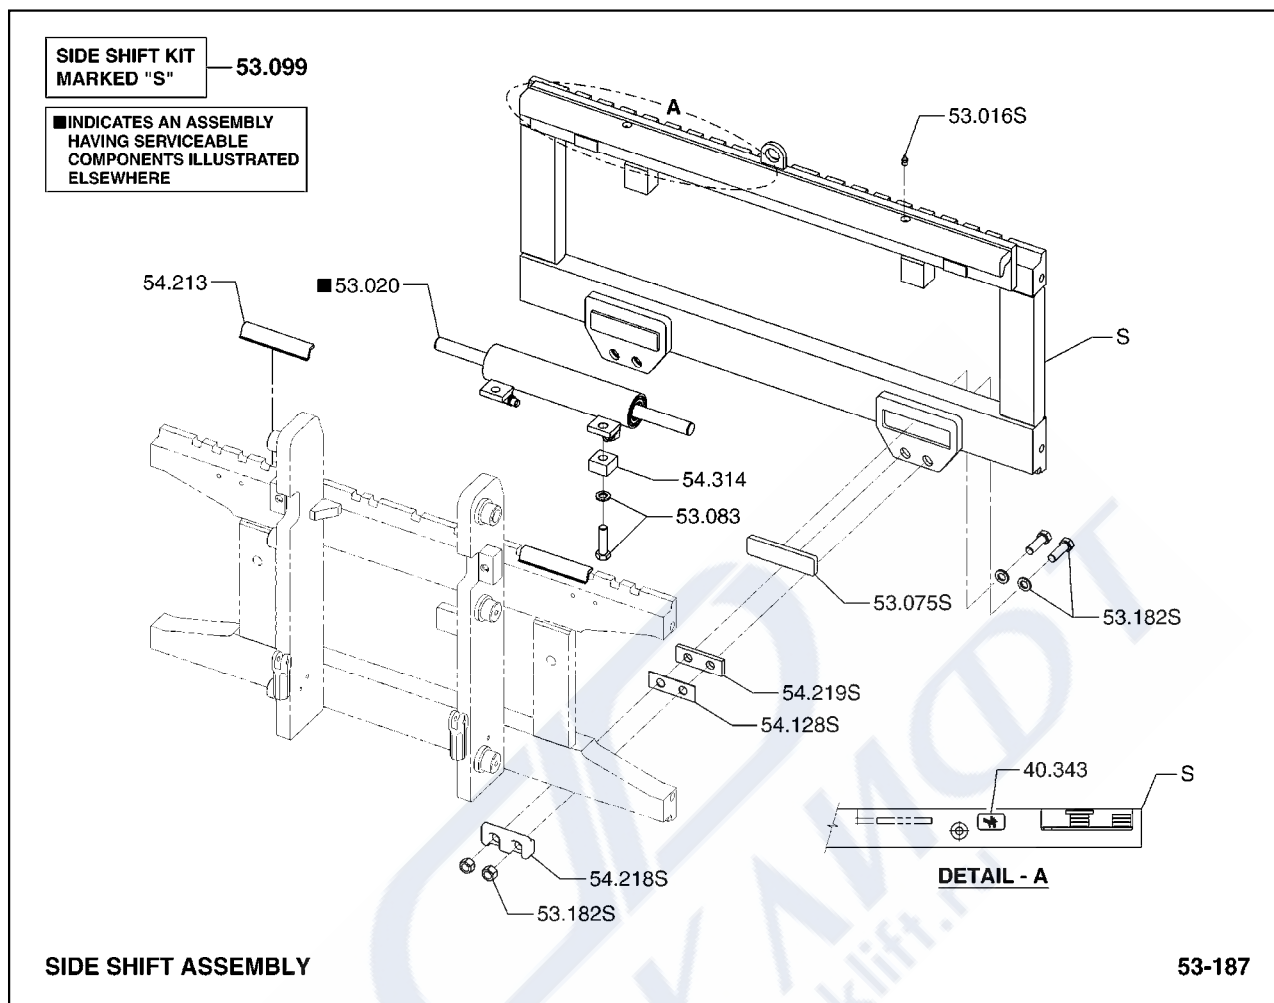 


40.343	DECAL, ATTACHMENT SAFETY 데칼
53.016	FITTING-LUB, SIDE SHIFTER MOVABLE FRAME SUPPORT SH 피팅
53.020	CYLINDER ASSEMBLY, SIDE SHIFTER 실린더
53.075	BEARING, SIDE SHIFTER (LOWER) 베어링
53.083	FASTENER, SIDE SHIFTER CYLINDER ANCHOR 패스너
53.099	SIDE SHIFTER, DEVICE 사이드쉬프트
53.182	FASTENER, SIDE SHIFTER HANGER 패스너
54.128	SPACER, SIDE SHIFTER MOVEABLE FRAME BEARING 스페이서
54.213	BEARING, SIDE SHIFTER (UPPER) 베어링

54.218	HOOK, SIDE SHIFTER HANGER 후크
54.219	SPACER, SIDE SHIFTING BASE PLATE HANGER 스페이서
54.314	SPACER, SIDE SHIFTER CYLINDER REAR 스페이서



ASSEMBLY
COMPLETE — 53.020

 PACKING KIT
INCLUDES ITEMS
MARKED "K" — 54.222

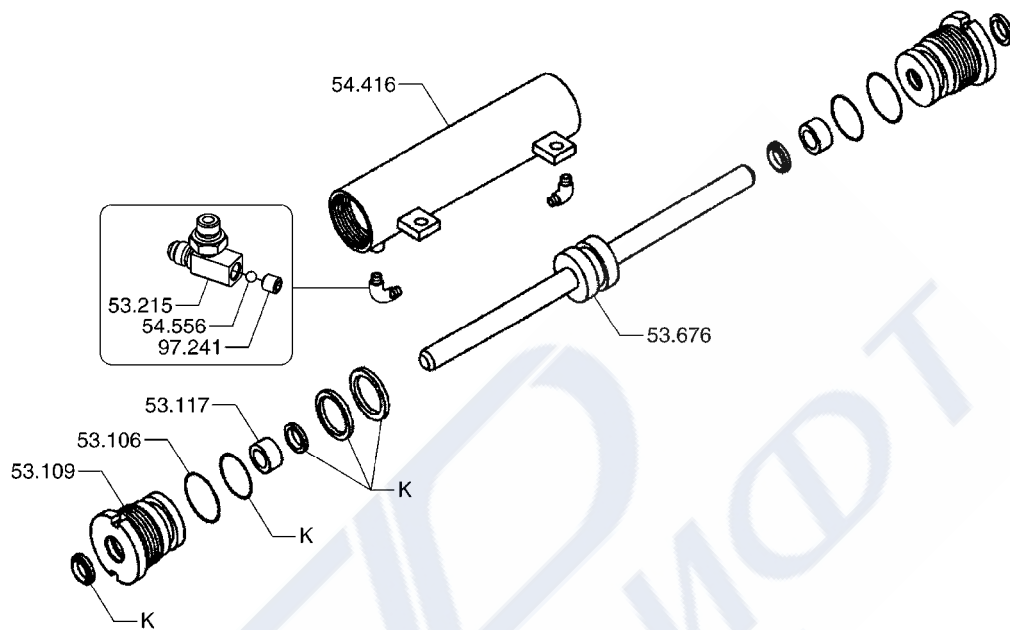


SIDESHIFT CYLINDER

53-198

53.020	CYLINDER ASSEMBLY, SIDE SHIFTER 실린더
53.109	GLAND, SIDE SHIFTER CYLINDER 그랜드
53.110	RETAINER, SIDE SHIFTER CYLINDER GLAND 리테이너
53.117	BUSHING, SIDE SHIFTER CYLINDER GLAND 부싱
53.215	FITTING, SIDE SHIFTER CYLINDER ROD PORT 피팅
53.676	ROD, SIDE SHIFTER CYLINDER PISTON 로드
54.222	PACKING KIT, SIDE SHIFTER CYLINDER 패킹키트
54.416	BARREL, SIDE SHIFT CYLINDER 배럴
54.556	BALL, SIDE SHIFTER CYLINDER ROD PORT 볼

 97.241 SET SCREW, SIDE SHIFTER CYLINDER ROD PORT
세트스크류




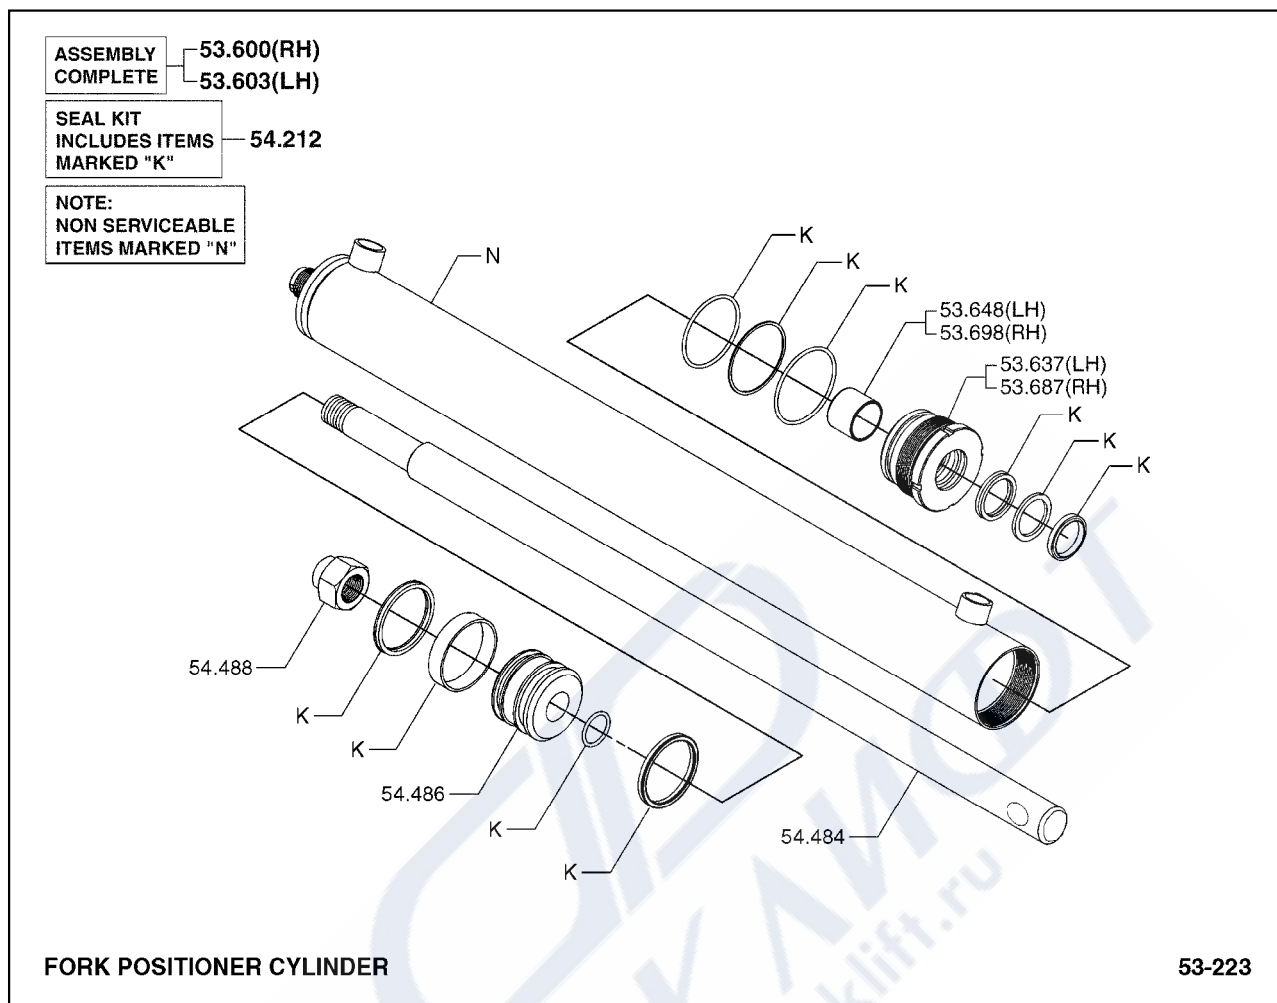

53.600	CYLINDER ASSEMBLY, INBOARD RH FORK 실린더
53.603	CYLINDER ASSEMBLY, INBOARD LH FORK 실린더
53.637	GLAND, INBOARD LH FORK CYLINDER 그랜드
53.648	BUSHING, LH FORK CYLINDER GLAND 부싱
53.687	GLAND, INBOARD RH FORK CYLINDER 그랜드
53.698	BUSHING, RH FORK CYLINDER GLAND 부싱
54.212	SEAL KIT, FORK CYLINDER 씰키트
54.484	ROD, FORK CYLINDER PISTON 로드
54.486	PISTON, FORK CYLINDER 피스톤

 54.488 NUT, FORK CYLINDER PISTON
너트




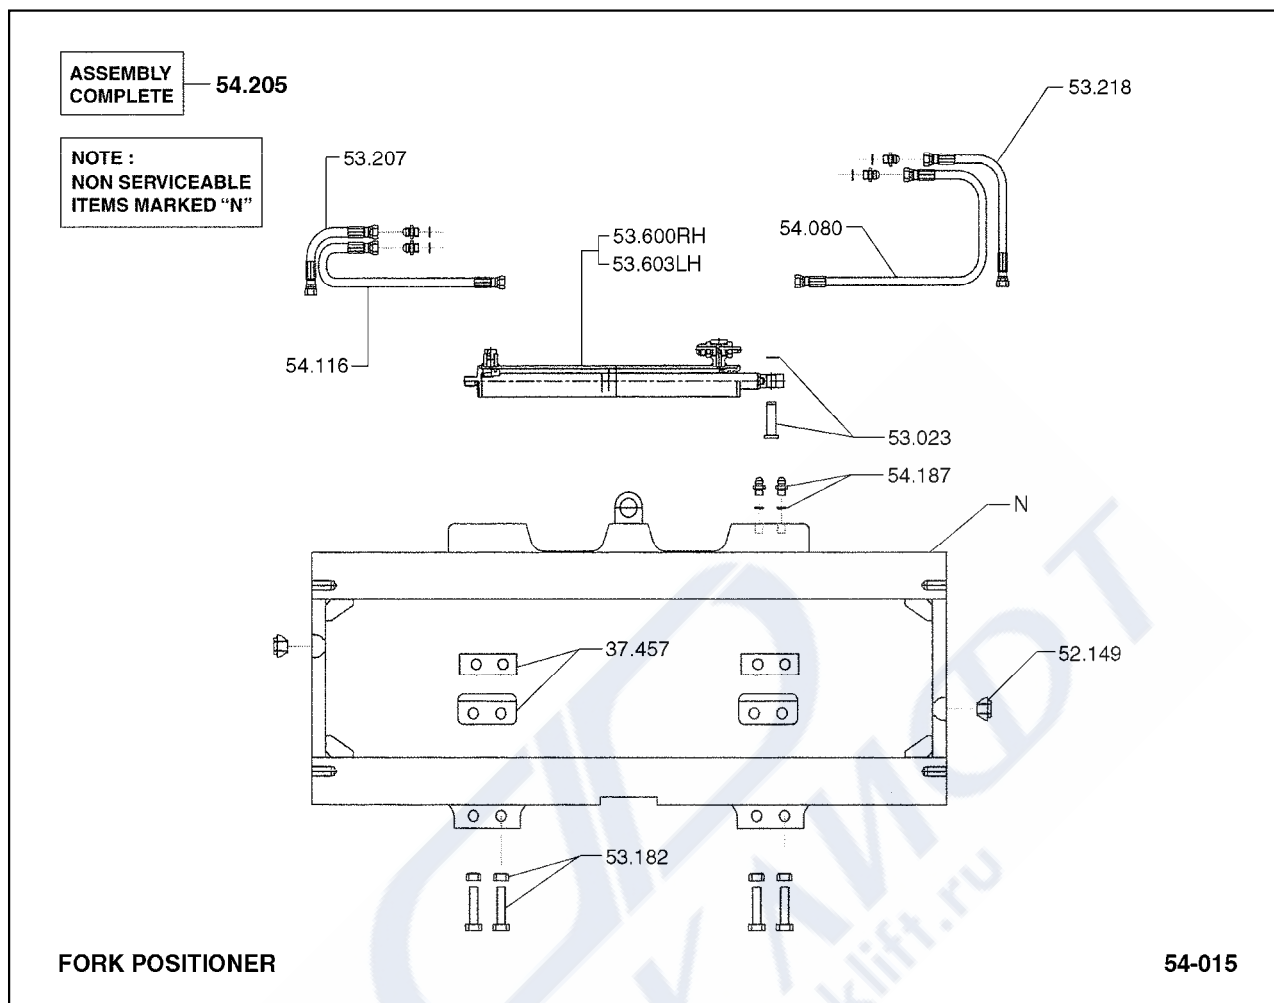


- | | |
|--------|---|
| 52.149 | NUT, SIDE SHIFT CYLINDER ANCHOR PORT LINE FITTING
너트 |
| 53.023 | ANCHOR, SIDE SHIFTER CYLINDER ROD END
앵커 |
| 53.182 | FASTENER, SIDE SHIFTER HANGER
패스너 |
| 53.207 | LINE, SIDE SHIFTER CYLINDER ANCHOR PORT
라인 |
| 53.218 | LINE, SIDE SHIFTER CYLINDER ROD PORT
라인 |
| 53.600 | CYLINDER ASSEMBLY, INBOARD RH FORK
실린더 |
| 53.603 | CYLINDER ASSEMBLY, INBOARD LH FORK
실린더 |
| 54.080 | LINE, SIDE SHIFT CYLINDER ANCHOR PORT
라인 |
| 54.116 | LINE, SIDE SHIFT CYLINDER ROD PORT
라인 |

54.187	FITTING, SIDE SHIFTER ANCHOR PORT LINE 피팅
54.205	ATTACHMENT, FORK POSITIONER 어태치먼트




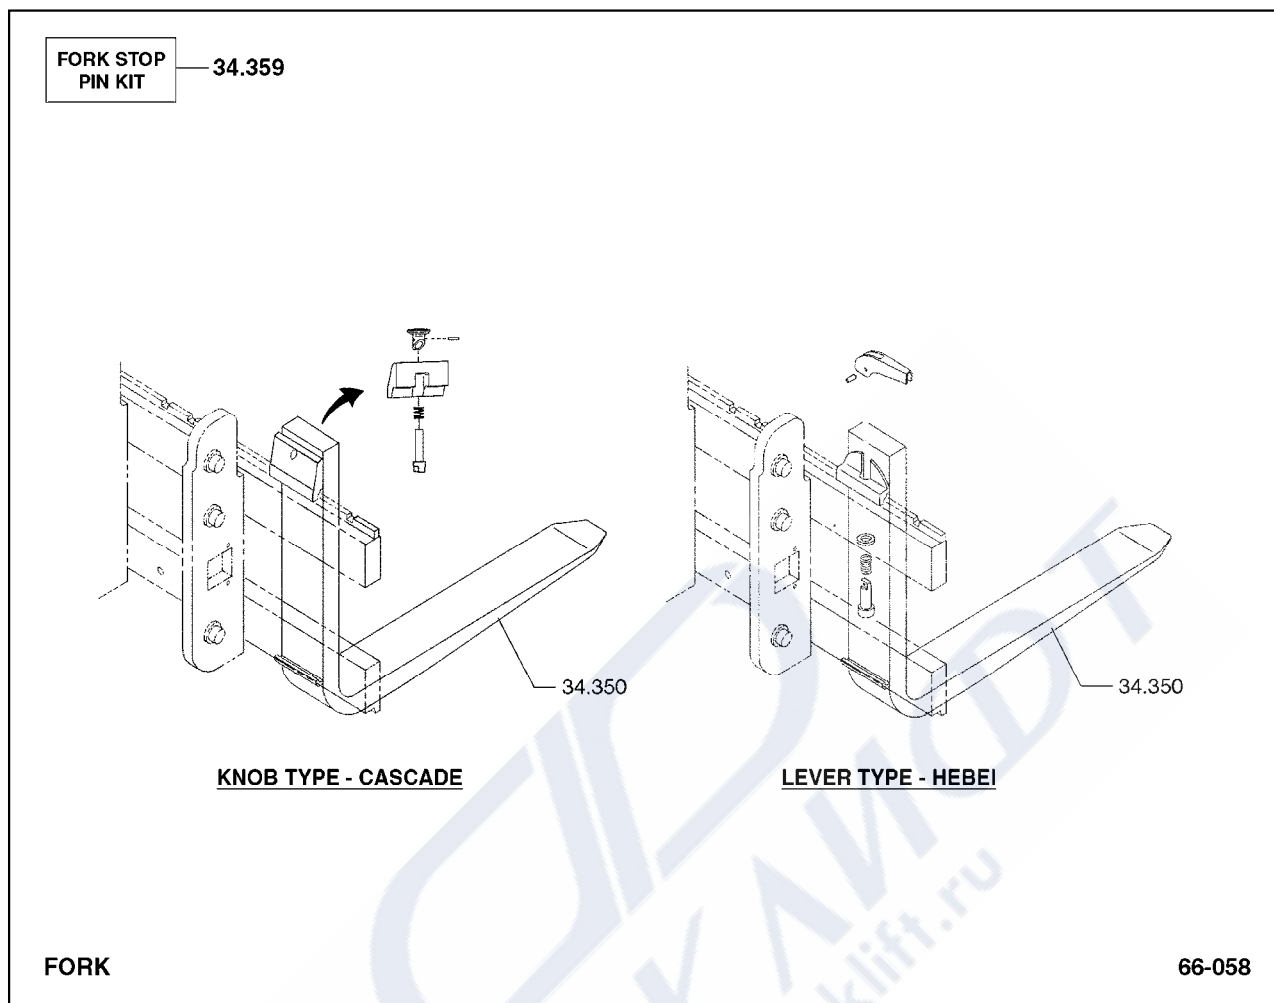 

 
- 34.350 FORK ASSEMBLY
포크
- 34.359 KIT, FORK STOP PIN (CAPTIVE)
키트

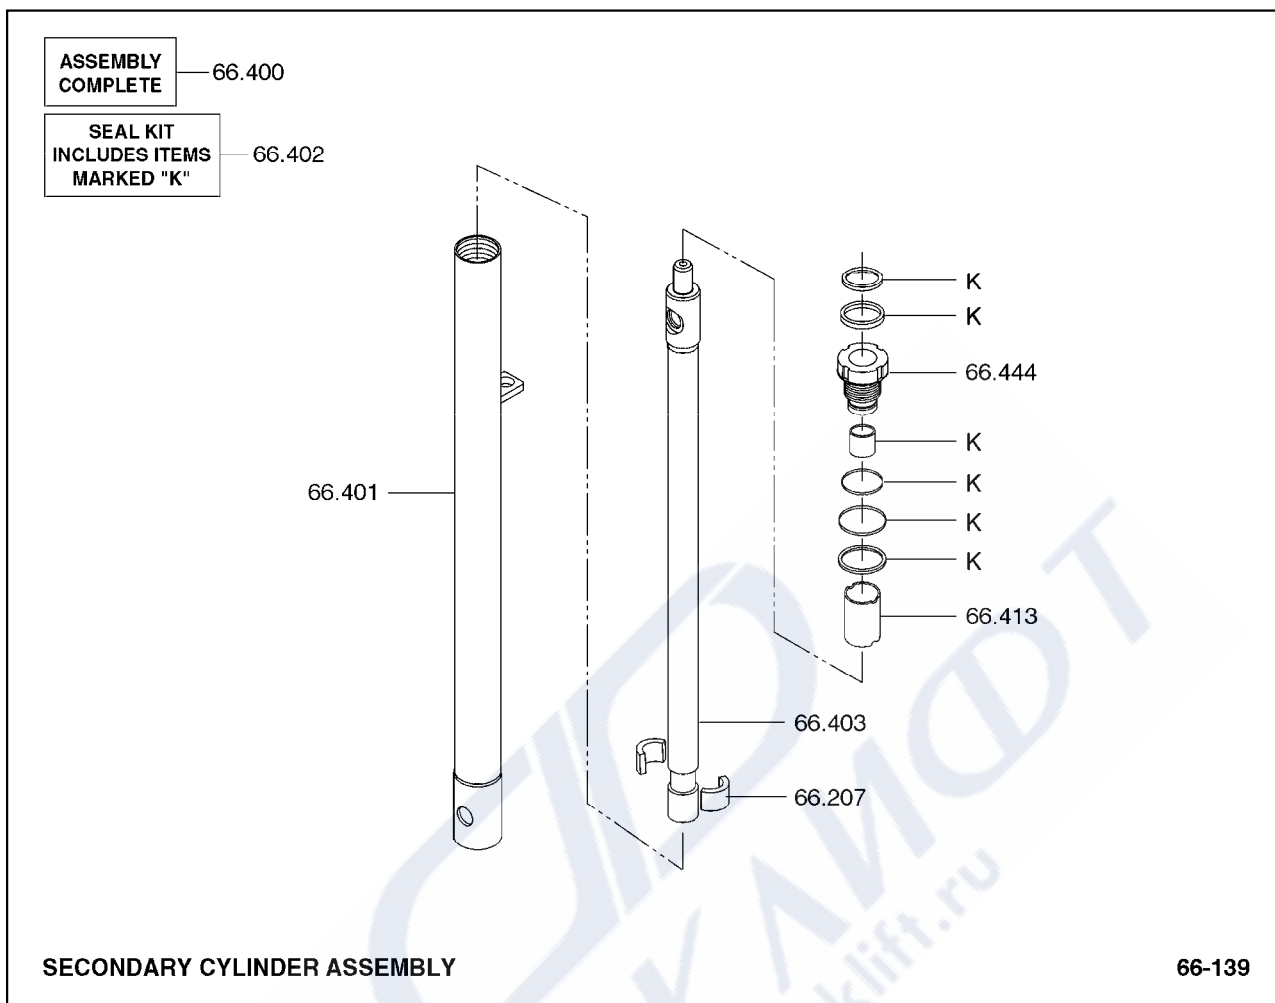

66.207	PISTON, FINAL LIFT CYLINDER 피스톤
66.400	CYLINDER ASSEMBLY, FINAL LIFT 실린더
66.401	BARREL, FINAL LIFT CYLINDER 배럴
66.402	PACKING KIT, FINAL LIFT CYLINDER 패킹키트
66.403	PISTON ROD, FINAL LIFT CYLINDER 피스톤로드
66.413	SPACER, FINAL LIFT CYLINDER PISTON ROD 스페이서
66.444	GLAND, FINAL LIFT CYLINDER 그랜드

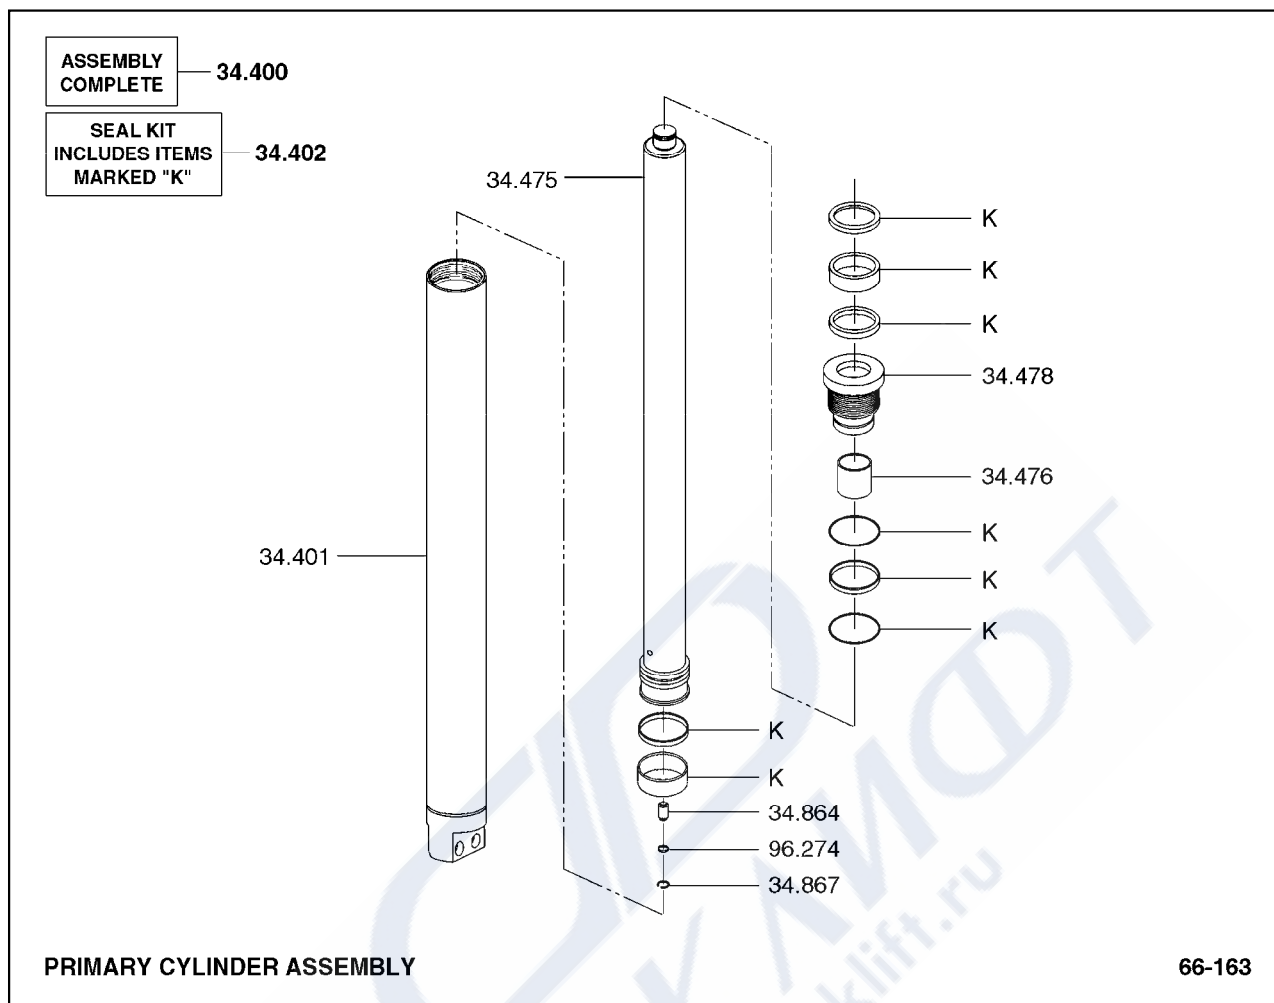 


34.400	CYLINDER ASSEMBLY, LIFT 실린더
34.401	BARREL, LIFT CYLINDER 배럴
34.402	SEAL & PACKING KIT, LIFT CYLINDER 씰& 팩킹키트
34.475	ROD, LIFT CYLINDER 로드
34.476	BEARING, LIFT CYLINDER ROD 베어링
34.478	GLAND, LIFT CYLINDER 그랜드
34.864	CHECK VALVE, LIFT CYLINDER 체크밸브
34.867	RETAINER, LIFT CYLINDER CHECK VALVE 리테이너
96.274	WASHER, LIFT CYLINDER CHECK VALVE 워셔

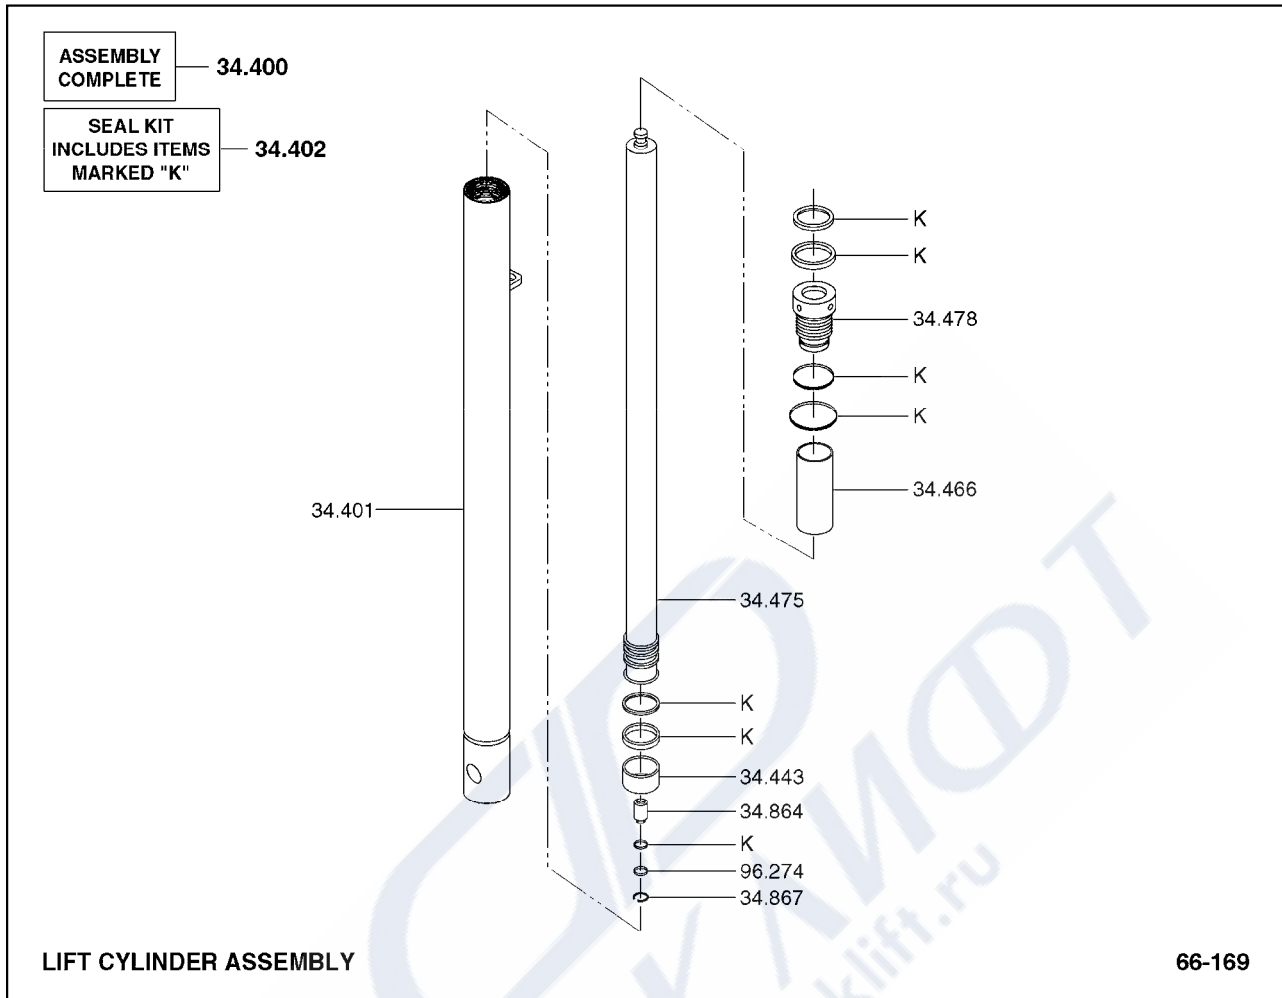 

34.400	CYLINDER ASSEMBLY, LIFT 실린더
34.401	BARREL, LIFT CYLINDER 배럴
34.402	SEAL & PACKING KIT, LIFT CYLINDER 씰& 팩킹키트
34.443	RING, LIFT CYLINDER PISTON WEAR 링
34.466	SPACER, LIFT CYLINDER FEED TUBE 스페이서
34.475	ROD, LIFT CYLINDER 로드
34.478	GLAND, LIFT CYLINDER 그랜드
34.864	CHECK VALVE, LIFT CYLINDER 체크밸브
34.867	RETAINER, LIFT CYLINDER CHECK VALVE 리테이너

96.274 WASHER, LIFT CYLINDER CHECK VALVE
 옥셔

 
ФОРКЛИФТ
www.forklift.ru

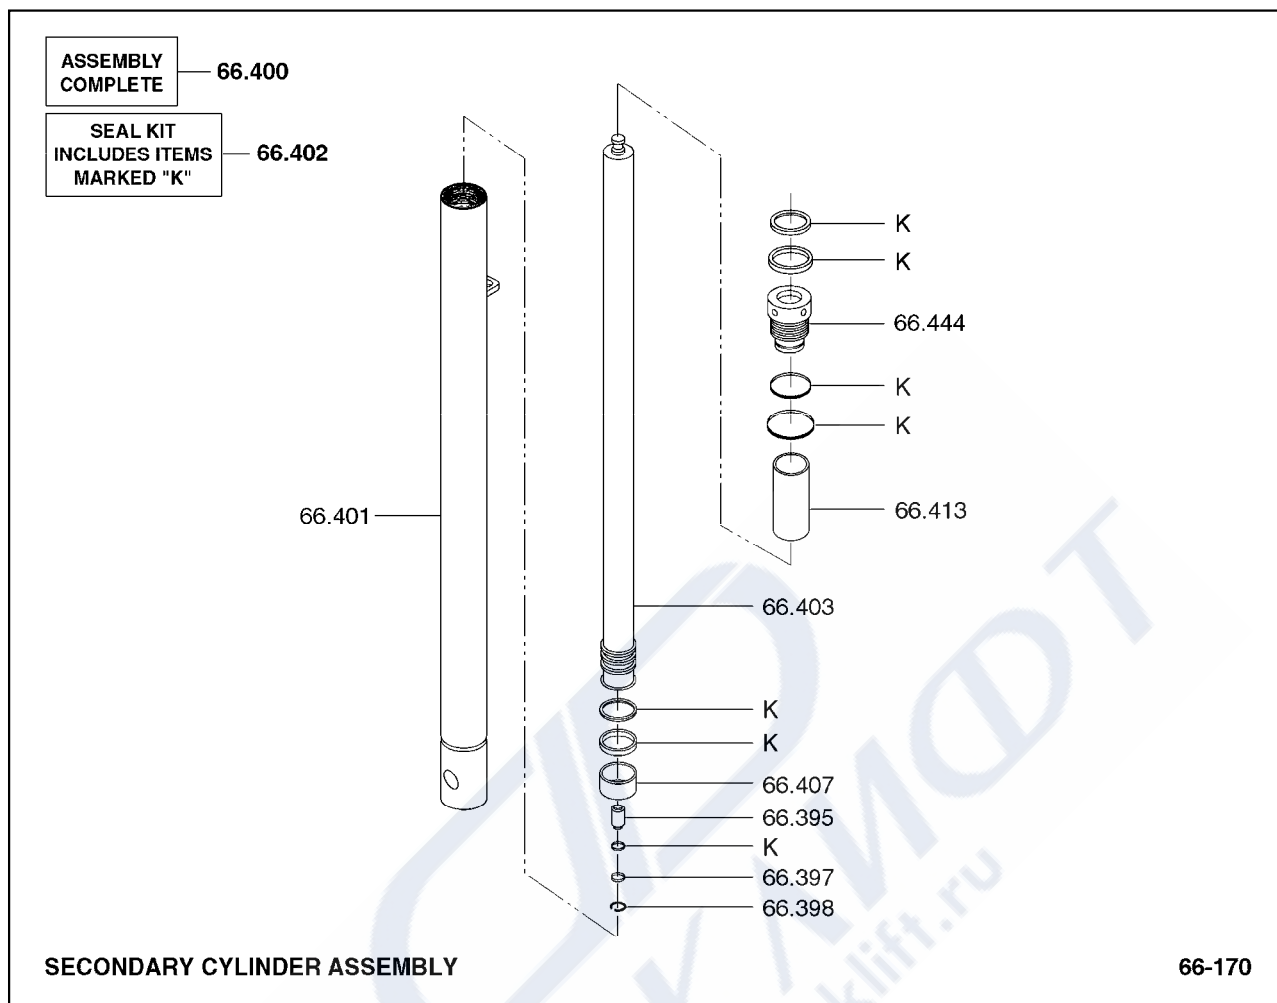

- | | |
|--------|---|
| 66.395 | CHECK VALVE, FINAL LIFT CYLINDER
체크밸브 |
| 66.397 | WASHER, FINAL LIFT CYLINDER CHECK VALVE
와셔 |
| 66.398 | SNAP RING, FINAL LIFT CYLINDER CHECK VALVE
스냅링 |
| 66.400 | CYLINDER ASSEMBLY, FINAL LIFT
실린더 |
| 66.401 | BARREL, FINAL LIFT CYLINDER
배럴 |
| 66.402 | PACKING KIT, FINAL LIFT CYLINDER
패킹키트 |
| 66.403 | PISTON ROD, FINAL LIFT CYLINDER
피스톤로드 |
| 66.407 | WEAR RING, FINAL LIFT CYLINDER PISTON
웨어링 |
| 66.413 | SPACER, FINAL LIFT CYLINDER PISTON ROD
스페이서 |

 66.444 GLAND, FINAL LIFT CYLINDER
그로드




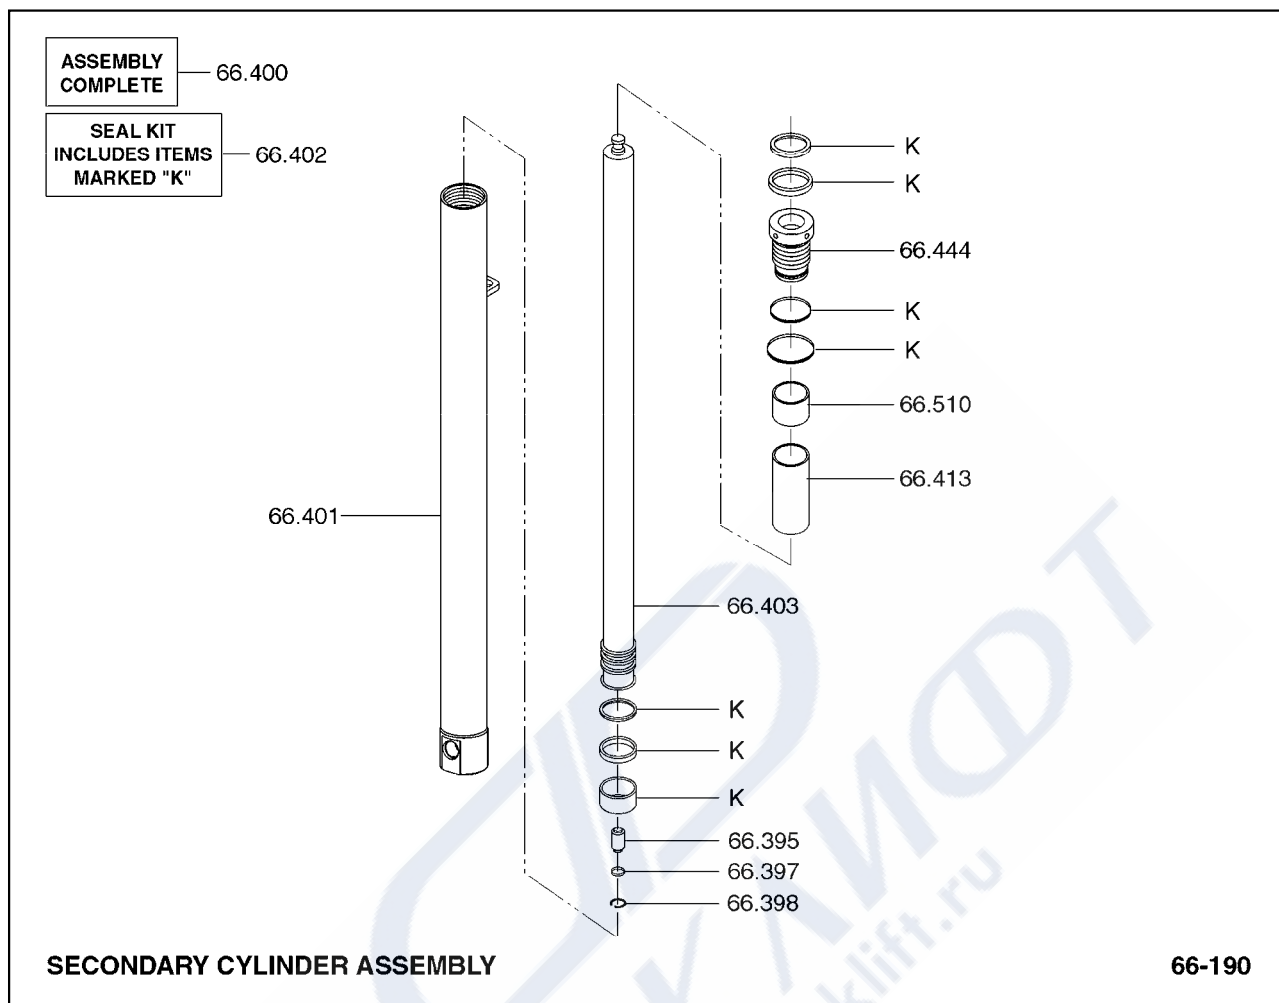

- | | |
|--------|---|
| 66.395 | CHECK VALVE, FINAL LIFT CYLINDER
체크밸브 |
| 66.397 | WASHER, FINAL LIFT CYLINDER CHECK VALVE
와셔 |
| 66.398 | SNAP RING, FINAL LIFT CYLINDER CHECK VALVE
스냅링 |
| 66.400 | CYLINDER ASSEMBLY, FINAL LIFT
실린더 |
| 66.401 | BARREL, FINAL LIFT CYLINDER
배럴 |
| 66.402 | PACKING KIT, FINAL LIFT CYLINDER
패킹키트 |
| 66.403 | PISTON ROD, FINAL LIFT CYLINDER
피스톤로드 |
| 66.413 | SPACER, FINAL LIFT CYLINDER PISTON ROD
스페이서 |
| 66.444 | GLAND, FINAL LIFT CYLINDER
그랜드 |

 66.510 BEARING, FINAL LIFT CYLINDER ROD
베어링




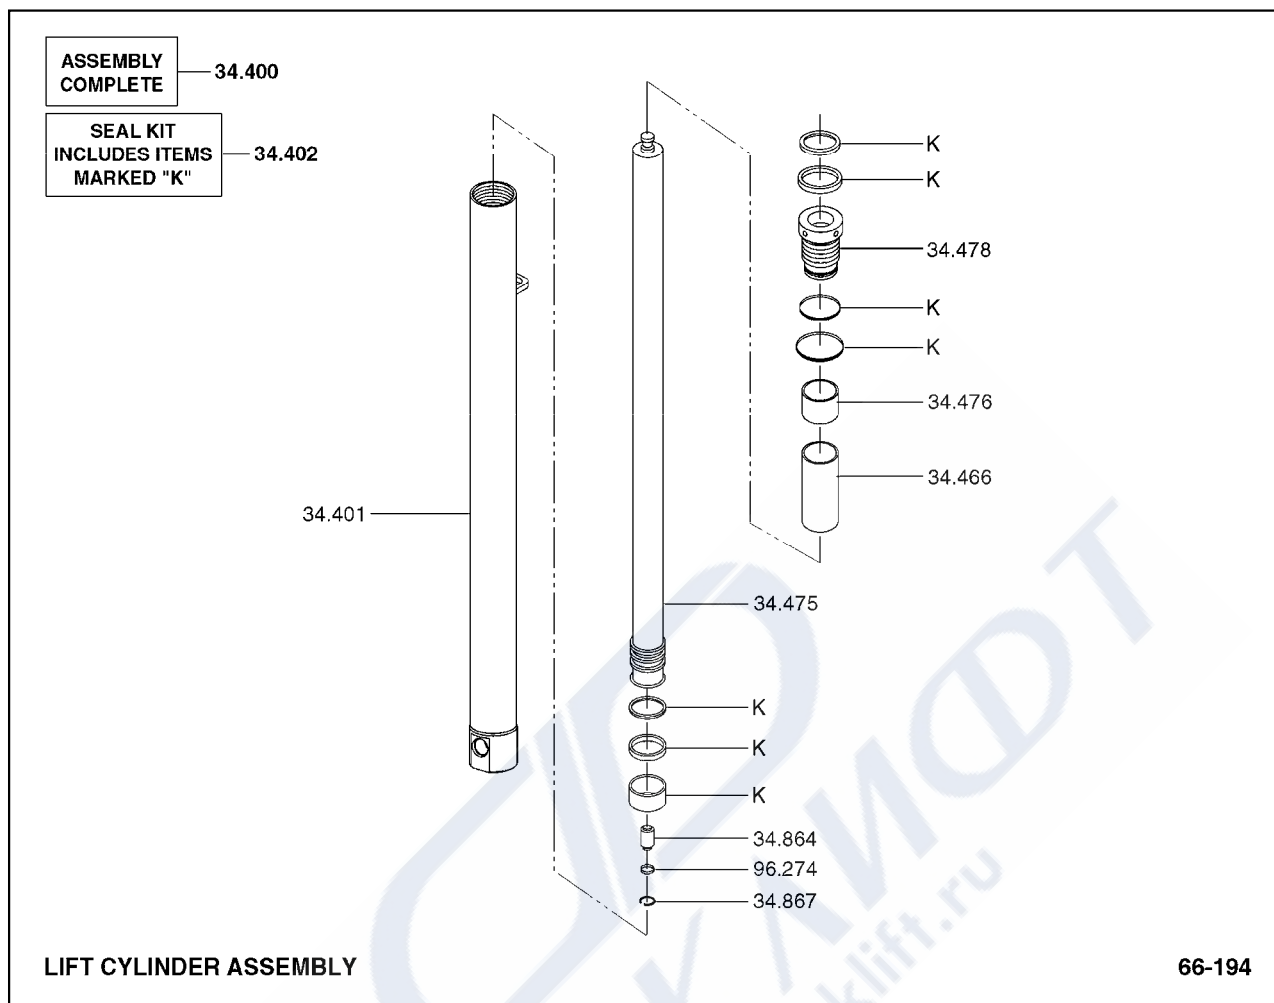

34.400	CYLINDER ASSEMBLY, LIFT 실린더
34.401	BARREL, LIFT CYLINDER 배럴
34.402	SEAL & PACKING KIT, LIFT CYLINDER 씰& 팩킹키트
34.466	SPACER, LIFT CYLINDER FEED TUBE 스페이서
34.475	ROD, LIFT CYLINDER 로드
34.476	BEARING, LIFT CYLINDER ROD 베어링
34.478	GLAND, LIFT CYLINDER 그랜드
34.864	CHECK VALVE, LIFT CYLINDER 체크밸브
34.867	RETAINER, LIFT CYLINDER CHECK VALVE 리테이너

96.274 WASHER, LIFT CYLINDER CHECK VALVE
 옥셔

 
ФОРКЛИФТ
www.forklift.ru

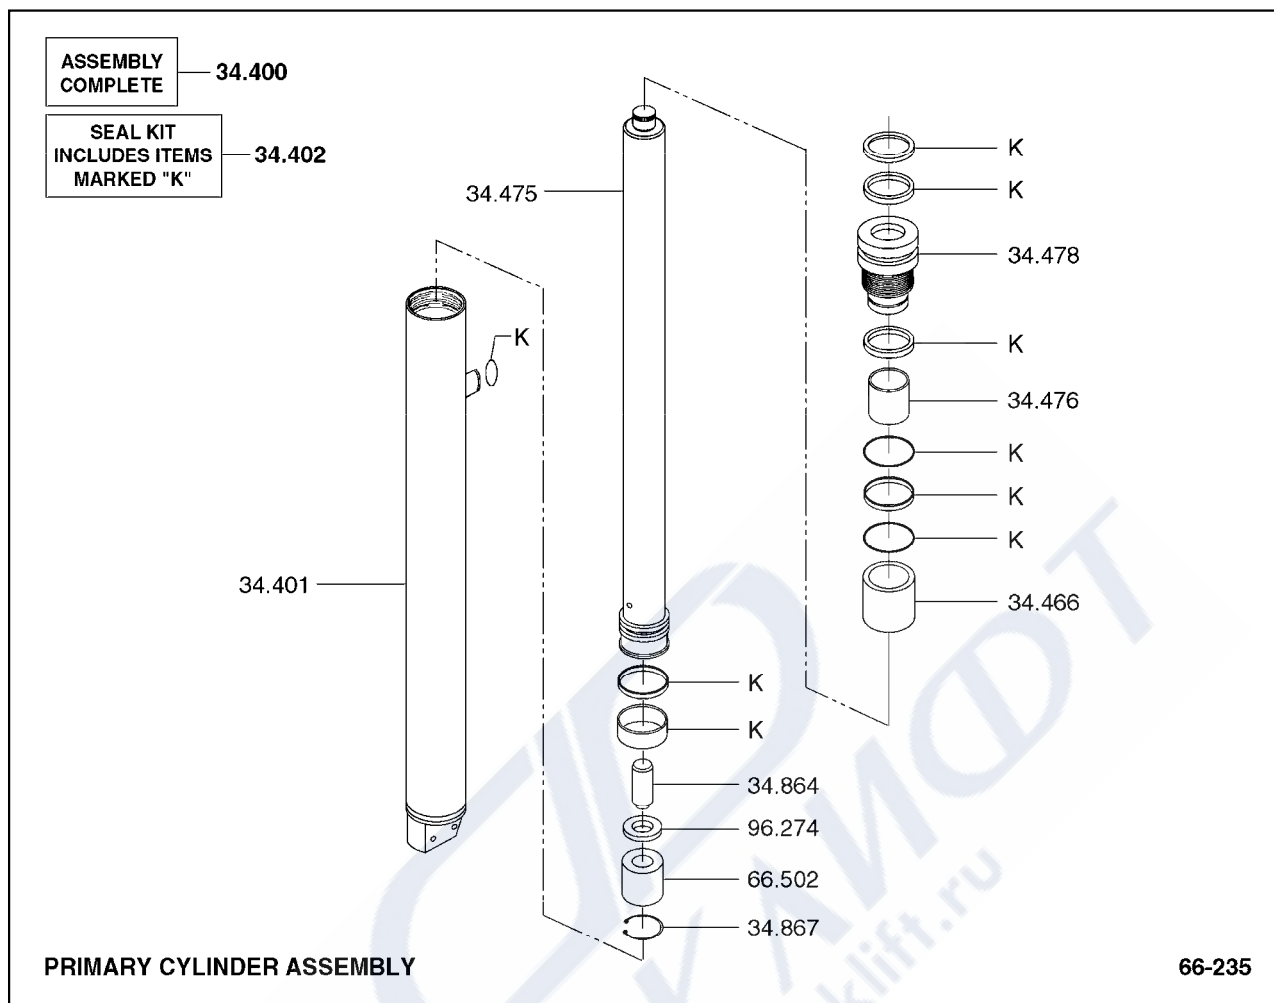

34.400	CYLINDER ASSEMBLY, LIFT 실린더
34.401	BARREL, LIFT CYLINDER 배럴
34.402	SEAL & PACKING KIT, LIFT CYLINDER 씰& 팩킹키트
34.466	SPACER, LIFT CYLINDER FEED TUBE 스페이서
34.475	ROD, LIFT CYLINDER 로드
34.476	BEARING, LIFT CYLINDER ROD 베어링
34.478	GLAND, LIFT CYLINDER 그랜드
34.864	CHECK VALVE, LIFT CYLINDER 체크밸브
34.867	RETAINER, LIFT CYLINDER CHECK VALVE 리테이너

66.502	CUSHION, LIFT CYLINDER 쿠션
96.274	WASHER, LIFT CYLINDER CHECK VALVE 옥셔




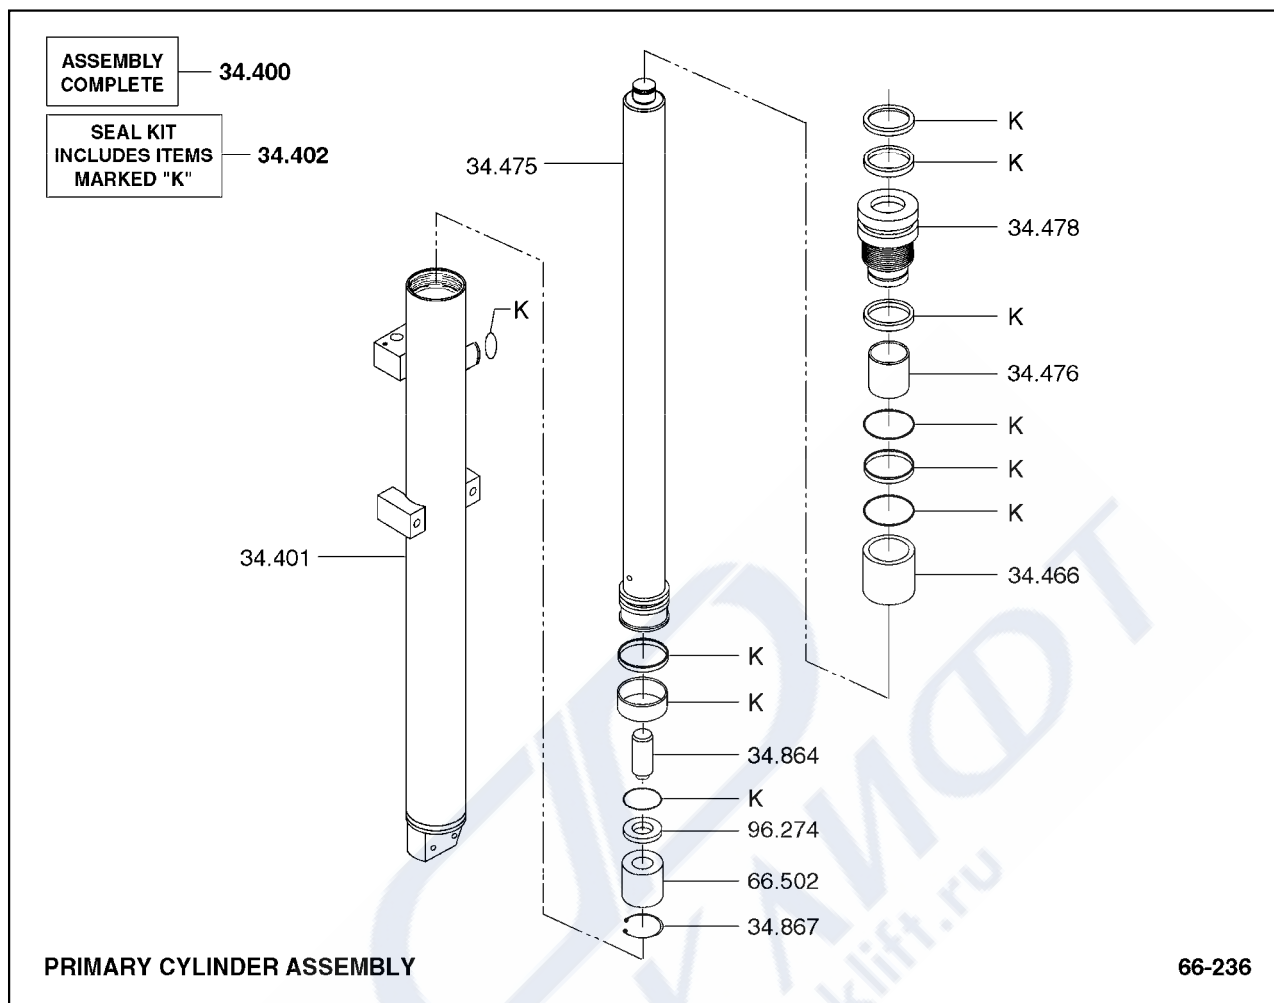 

34.400	CYLINDER ASSEMBLY, LIFT 실린더
34.401	BARREL, LIFT CYLINDER 배럴
34.402	SEAL & PACKING KIT, LIFT CYLINDER 씰& 팩킹키트
34.466	SPACER, LIFT CYLINDER FEED TUBE 스페이서
34.475	ROD, LIFT CYLINDER 로드
34.476	BEARING, LIFT CYLINDER ROD 베어링
34.478	GLAND, LIFT CYLINDER 그랜드
34.864	CHECK VALVE, LIFT CYLINDER 체크밸브
34.867	RETAINER, LIFT CYLINDER CHECK VALVE 리테이너

66.502	CUSHION, LIFT CYLINDER 쿠션
96.274	WASHER, LIFT CYLINDER CHECK VALVE 옥셔




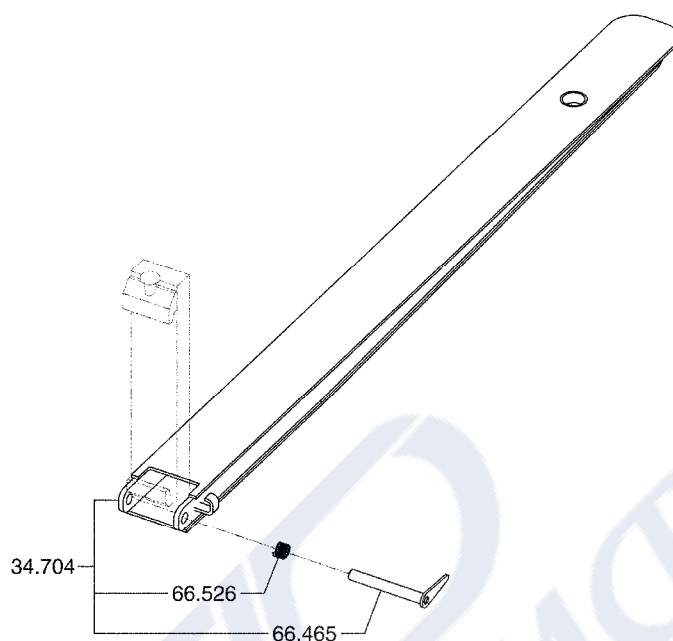 

EXTENSION FORK

66-245


- | | |
|--------|---|
| 34.704 | EXTENSION, FORK ASSEMBLY COMPLETE
익스텐션 |
| 66.465 | PIN, EXTENSION FORK
핀 |
| 66.526 | FASTENER, EXTENSION FORK PIN
패스너 |

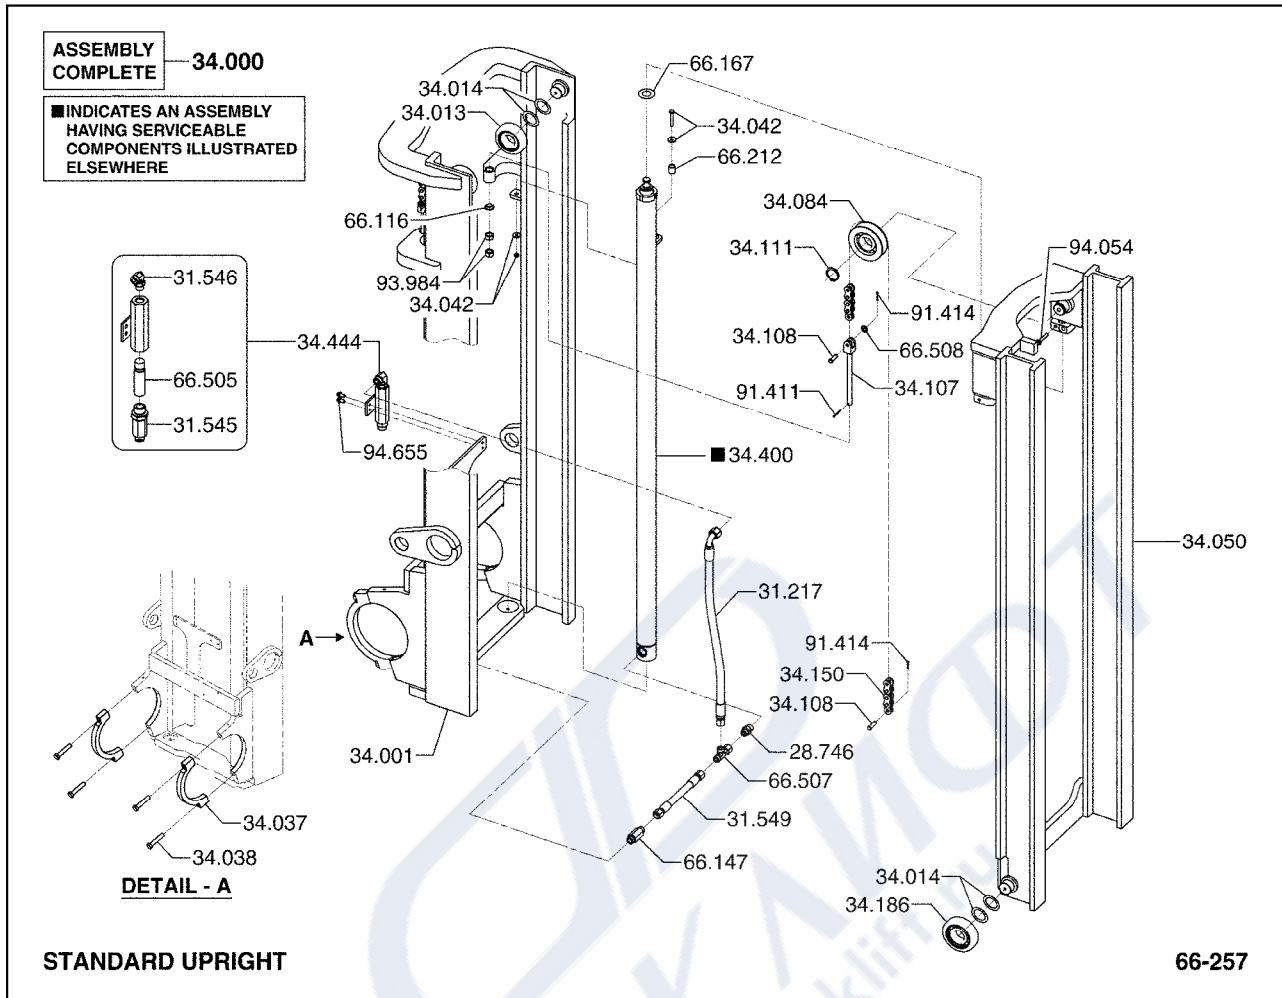 

28.746	FITTING, LIFT CYLINDER LINE 피팅	34.108	FASTENER, LIFT CHAIN TO ANCHOR 패스너
31.217	LINE, LIFT CYLINDER INLET FITTING 라인	34.111	FASTENER, CHAIN SHEAVE SHAFT (CARRIER) 패스너
31.545	FITTING, LIFT CYL FLOW CONTROL VALVE INLET 피팅	34.150	CHAIN, UPRIGHT RAIL LIFT 체인
31.546	FITTING, LIFT CYL FLOW CONTROL VALVE OUTLET 피팅	34.186	ROLLER, UPRIGHT 롤러
31.549	LINE, LIFT CYL FLOW CONTROL VALVE INLET 라인	34.400	CYLINDER ASSEMBLY, LIFT 실린더
34.000	UPRIGHT & LIFT CYL ASSEMBLY 마스트& 실린더	34.444	VALVE ASSEMBLY, LIFT CYLINDER FLOW CONTROL 밸브
34.001	OUTER RAIL WELDER ASSEMBLY, UPRIGHT 아우터레일	66.116	SPACER, LIFT CHAIN ANCHOR 스페이서
34.013	ROLLER, UPRIGHT 롤러	66.147	VALVE, FINAL LIFT CYLINDER PORT FLOW CONTROL 밸브
34.014	SHIM, UPRIGHT ROLLER 심	66.167	SHIM, LIFT CYLINDER UPPER 심
34.037	CAP, UPRIGHT TRUNNION 캡	66.212	SPACER, LIFT CYLINDER FASTENER 스페이서
34.038	FASTENER, UPRIGHT TRUNNION CAP 패스너	66.505	CARTRIDGE, LIFT CYLINDER FLOW CONTROL VALVE 카트리지
34.042	FASTENER, LIFT CYLINDER (UPPER) 패스너	66.507	TEE, LIFT CYLINDER LINE 티
34.050	INNER RAIL WELDED ASSEMBLY, UPRIGHT 인너레일	66.508	SPACER, LIFT CHAIN ANCHOR FASTENER 스페이서
34.084	SHEAVE, LIFT CHAIN 쉬브	91.411	RETAINER, LIFT CHAIN TO ANCHOR FASTENER 리테이너
34.107	ANCHOR, LIFT CHAIN 앵커	91.414	RETAINER, LIFT CHAIN TO ANCHOR FASTENER 리테이너

93.984	FASTENER, LIFT CHAIN ANCHOR 패스너
94.054	FASTENER, LIFT CYLINDER (UPPER) 패스너
94.655	FASTENER, LIFT CYLINDER LINE JUNCTION BLOCK 패스너




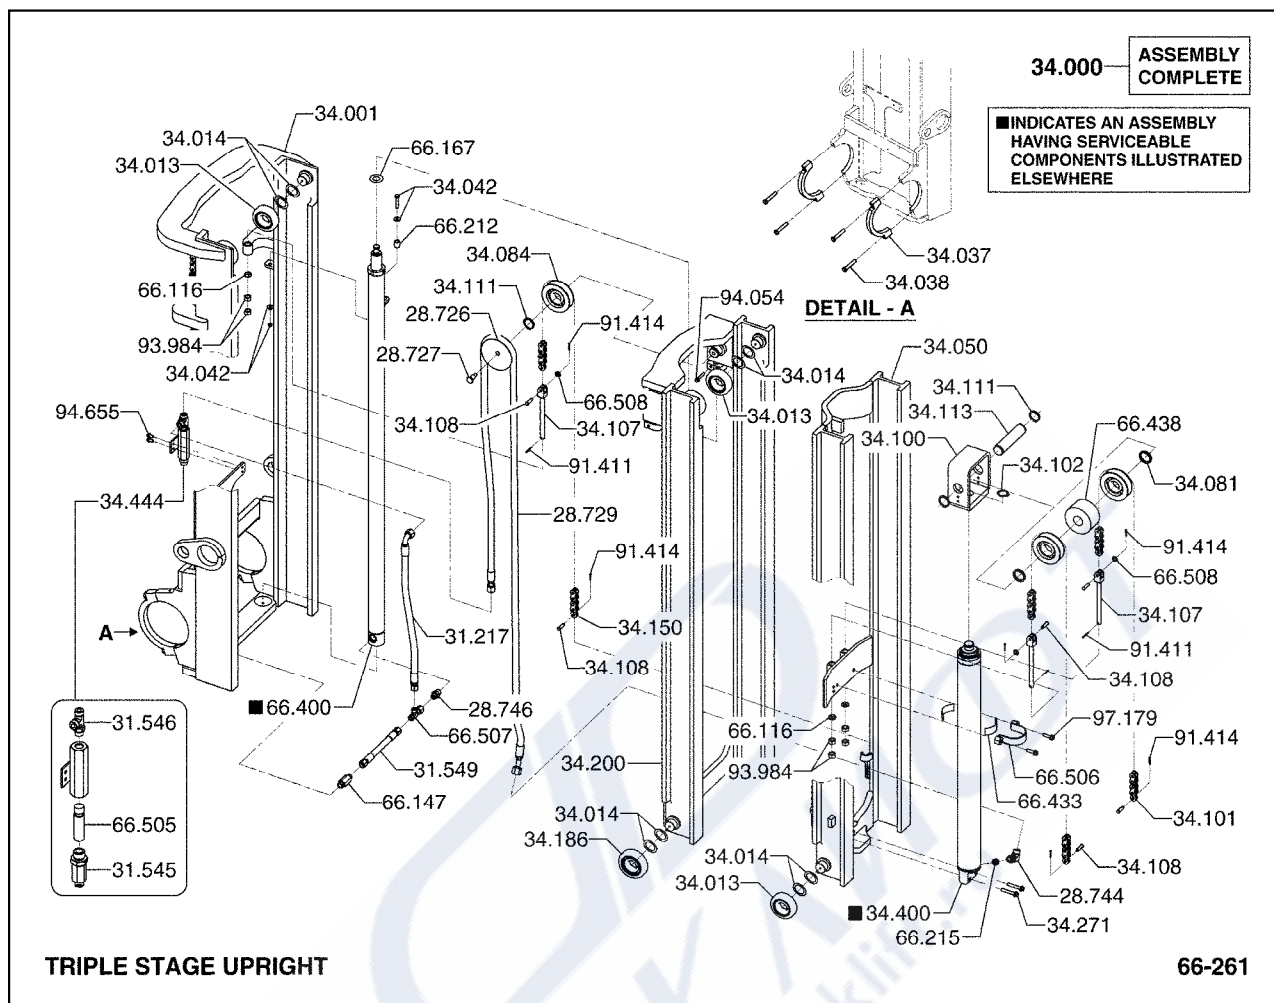 

28.726	SHEAVE, LIFT CYLINDER HOSE 쉬브	34.042	FASTENER, LIFT CYLINDER (UPPER) 패스너
28.727	PIVOT, LIFT CYLINDER HOSE SHEAVE 피봇	34.050	INNER RAIL WELDED ASSEMBLY, UPRIGHT 인너레일
28.729	LINE, LIFT CYLINDER 라인	34.081	SPACER, LIFT CHAIN SHEAVE CARRIER 스페이서
28.744	FITTING, LIFT CYLINDER LINE 피팅	34.084	SHEAVE, LIFT CHAIN 쉬브
28.746	FITTING, LIFT CYLINDER LINE 피팅	34.100	CARRIER, LIFT CYLINDER CHAIN SHEAVE 캐리어
31.217	LINE, LIFT CYLINDER INLET FITTING 라인	34.101	CHAIN, LIFT 체인
31.545	FITTING, LIFT CYL FLOW CONTROL VALVE INLET 피팅	34.102	FASTENER, SHEAVE CARRIER 패스너
31.546	FITTING, LIFT CYL FLOW CONTROL VALVE OUTLET 피팅	34.107	ANCHOR, LIFT CHAIN 앵커
31.549	LINE, LIFT CYL FLOW CONTROL VALVE INLET 라인	34.108	FASTENER, LIFT CHAIN TO ANCHOR 패스너
34.000	UPRIGHT & LIFT CYL ASSEMBLY 마스트& 실린더	34.111	FASTENER, CHAIN SHEAVE SHAFT (CARRIER) 패스너
34.001	OUTER RAIL WELDER ASSEMBLY, UPRIGHT 아우터레일	34.113	SHAFT, LIFT CHAIN SHEAVE (CARRIER) 샤프트
34.013	ROLLER, UPRIGHT 롤러	34.150	CHAIN, UPRIGHT RAIL LIFT 체인
34.014	SHIM, UPRIGHT ROLLER 심	34.186	ROLLER, UPRIGHT 롤러
34.037	CAP, UPRIGHT TRUNNION 캡	34.200	INTERMEDIATE RAIL WELDED ASSEMBLY, UPRIGHT 인터레일
34.038	FASTENER, UPRIGHT TRUNNION CAP 패스너	34.271	FASTENER, LIFT CYLINDER LOWER 패스너

34.400	CYLINDER ASSEMBLY, LIFT 실린더
34.444	VALVE ASSEMBLY, LIFT CYLINDER FLOW CONTROL 밸브
66.116	SPACER, LIFT CHAIN ANCHOR 스페이서
66.147	VALVE, FINAL LIFT CYLINDER PORT FLOW CONTROL 밸브
66.167	SHIM, LIFT CYLINDER UPPER 심
66.212	SPACER, LIFT CYLINDER FASTENER 스페이서
66.215	VALVE, LIFT CYLINDER PORT FLOW CONTROL 밸브
66.400	CYLINDER ASSEMBLY, FINAL LIFT 실린더
66.433	SHIM, CYLINDER MOUNT 심
66.438	SHEAVE, HOSE 쉬브
66.505	CARTRIDGE, LIFT CYLINDER FLOW CONTROL VALVE 카트리지
66.506	CLAMP, LIFT CYLINDER 클램프
66.507	TEE, LIFT CYLINDER LINE 티
66.508	SPACER, LIFT CHAIN ANCHOR FASTENER 스페이서
91.411	RETAINER, LIFT CHAIN TO ANCHOR FASTENER 리테이너
91.414	RETAINER, LIFT CHAIN TO ANCHOR FASTENER 리테이너
93.984	FASTENER, LIFT CHAIN ANCHOR 패스너
94.054	FASTENER, LIFT CYLINDER (UPPER) 패스너
94.655	FASTENER, LIFT CYLINDER LINE JUNCTION BLOCK 패스너
97.179	FASTENER, LIFT CYLINDER CLAMP 패스너



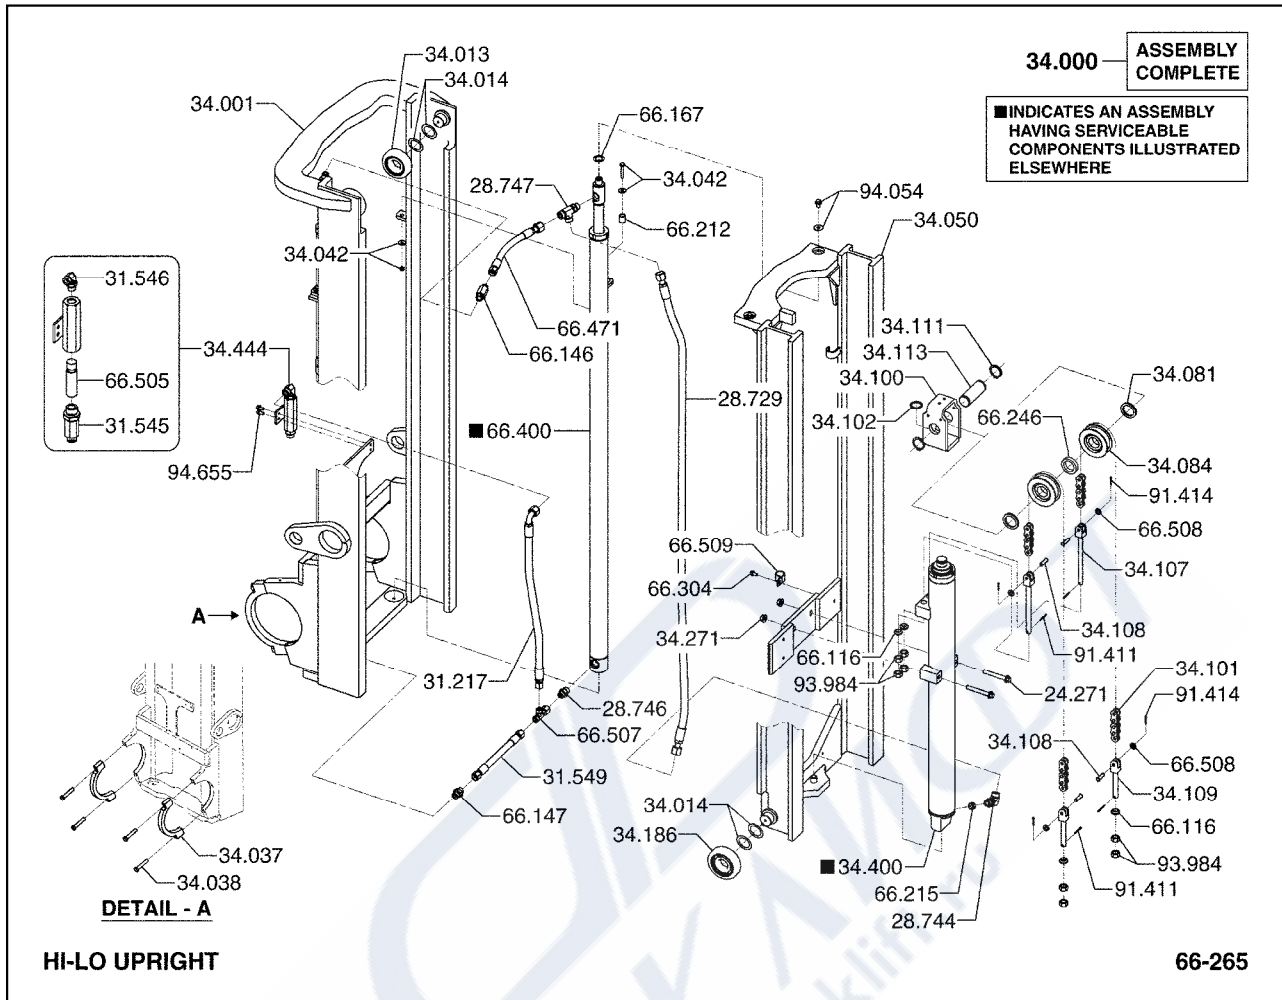 


24.271	PLUG, AIR COMPRESSOR CYLINDER HEAD 플러그
28.729	LINE, LIFT CYLINDER 라인
28.744	FITTING, LIFT CYLINDER LINE 피팅
28.746	FITTING, LIFT CYLINDER LINE 피팅
28.747	FITTING, LIFT CYLINDER LINE 피팅
31.217	LINE, LIFT CYLINDER INLET FITTING 라인
31.545	FITTING, LIFT CYL FLOW CONTROL VALVE INLET 피팅
31.546	FITTING, LIFT CYL FLOW CONTROL VALVE OUTLET 피팅
31.549	LINE, LIFT CYL FLOW CONTROL VALVE INLET 라인
34.000	UPRIGHT & LIFT CYL ASSEMBLY 마스트& 실린더
34.001	OUTER RAIL WELDER ASSEMBLY, UPRIGHT 아우터레일
34.013	ROLLER, UPRIGHT 롤러
34.014	SHIM, UPRIGHT ROLLER 심
34.037	CAP, UPRIGHT TRUNNION 캡
34.038	FASTENER, UPRIGHT TRUNNION CAP 패스너


34.042	FASTENER, LIFT CYLINDER (UPPER) 패스너
34.050	INNER RAIL WELDED ASSEMBLY, UPRIGHT 인너레일
34.081	SPACER, LIFT CHAIN SHEAVE CARRIER 스페이서
34.084	SHEAVE, LIFT CHAIN 쉬브
34.100	CARRIER, LIFT CYLINDER CHAIN SHEAVE 캐리어
34.101	CHAIN, LIFT 체인
34.102	FASTENER, SHEAVE CARRIER 패스너
34.107	ANCHOR, LIFT CHAIN 앵커
34.108	FASTENER, LIFT CHAIN TO ANCHOR 패스너
34.109	ANCHOR, LIFT CHAIN CARRIAGE END 앵커
34.111	FASTENER, CHAIN SHEAVE SHAFT (CARRIER) 패스너
34.113	SHAFT, LIFT CHAIN SHEAVE (CARRIER) 샤프트
34.186	ROLLER, UPRIGHT 롤러
34.271	FASTENER, LIFT CYLINDER LOWER 패스너
34.400	CYLINDER ASSEMBLY, LIFT 실린더

34.444	VALVE ASSEMBLY, LIFT CYLINDER FLOW CONTROL 밸브
66.116	SPACER, LIFT CHAIN ANCHOR 스페이서
66.146	VALVE, LIFT CYLINDER PORT FLOW CONTROL 밸브
66.147	VALVE, FINAL LIFT CYLINDER PORT FLOW CONTROL 밸브
66.167	SHIM, LIFT CYLINDER UPPER 심
66.212	SPACER, LIFT CYLINDER FASTENER 스페이서
66.215	VALVE, LIFT CYLINDER PORT FLOW CONTROL 밸브
66.246	SPACER, LIFT CHAIN SHEAVE 스페이서
66.304	FASTENER, LIFT CYLINDER LINE CLAMP 패스너
66.400	CYLINDER ASSEMBLY, FINAL LIFT 실린더
66.471	LINE, LIFT CYLINDER FEED 라인
66.505	CARTRIDGE, LIFT CYLINDER FLOW CONTROL VALVE 카트리지
66.507	TEE, LIFT CYLINDER LINE 티
66.508	SPACER, LIFT CHAIN ANCHOR FASTENER 스페이서
66.509	CLAMP, LIFT CYLINDER LINE 클램프
91.411	RETAINER, LIFT CHAIN TO ANCHOR FASTENER 리테이너
91.414	RETAINER, LIFT CHAIN TO ANCHOR FASTENER 리테이너
93.984	FASTENER, LIFT CHAIN ANCHOR 패스너
94.054	FASTENER, LIFT CYLINDER (UPPER) 패스너
94.655	FASTENER, LIFT CYLINDER LINE JUNCTION BLOCK 패스너




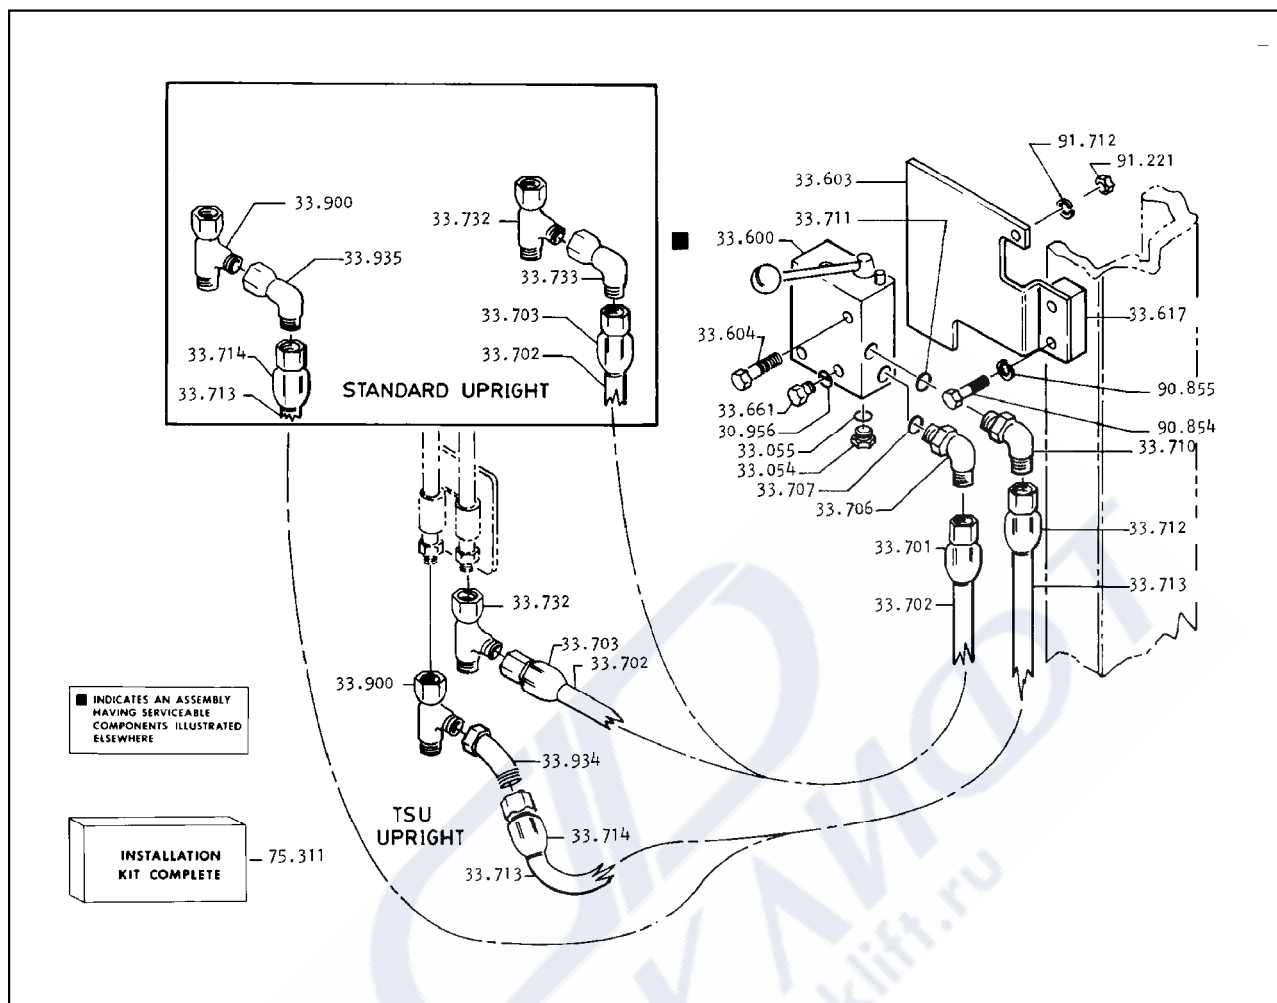 


30.956	SEAL, RELIEF VALVE PLUG 씰	33.712	COUPLING, DEVICE RELIEF VALVE DISCHARGE HOSE 커플링
33.054	PLUG, RELIEF VALVE PORT 플러그	33.713	LINE, DEVICE RELIEF VALVE DISCHARGE 라인
33.055	SEAL, RELIEF VALVE PORT PLUG 씰	33.714	COUPLING, DEVICE RELIEF VALVE DISCHARGE LINE 커플링
33.600	RELIEF VALVE, DEVICE VARIABLE PRESSURE 릴리프밸브	33.732	FITTING, DEVICE RELIEF VALVE INLET 피팅
33.603	BRACKET, DEVICE CARIABLE RELIEF VALVE 브라켓	33.733	FITTING, DEVICE RELIEF VALVE INLET 피팅
33.604	FASTENER, DEVICE VARIABLE RELIEF VALVE 패스너	33.900	FITTING, DEVICE RELIEF VALVE DISCHARGE LINE 피팅
33.617	SPACER, DEV VARIABLE RELIEF VAL BRKT 스페이서	33.934	FITTING, DEVICE RELIEF VALVE DISCHARGE LINE 피팅
33.661	FITTING, DEVICE RELIEF VALVE OUTLET PORT 피팅	33.934	FITTING, DEVICE RELIEF VALVE DISCHARGE LINE 피팅
33.701	COUPLING, DEVICE RELIEF VALVE INLET LINE 커플링	33.935	FITTING, DEVICE RELIEF VALVE DISCHARGE LINE 피팅
33.702	LINE, DEVICE RELIEF VALVE INLET 라인	75.311	KIT, RELIEF VALVE INSTALLATION 키트
33.703	COUPLING, DEVICE RELIEF VALVE INLET LINE 커플링	90.854	BOLT, DEVICE MOUNTING BRACKET FASTENER 볼트
33.706	FITTING, DEVICE RELIEF VALVE INLET PORT 피팅	90.855	LOCKWASHER, DEVICE MOUNTING BRACKET FASTENER 로크와셔
33.707	SEAL, DEVICE RELIEF VALVE INLET PORT FITTING 씰	91.221	NUT, DEV VARIABLE RELIEF VALVE FASTENER 너트
33.710	FITTING, DEVICE RELIEF VALVE DISCHARGE PORT 피팅	91.712	LOCKWASHER, DEVICE RELIEF VALVE FASTENER 로크와셔
33.711	SEAL, DEVICE RELIEF VALVE DISCHARGE PORT FTG 씰		

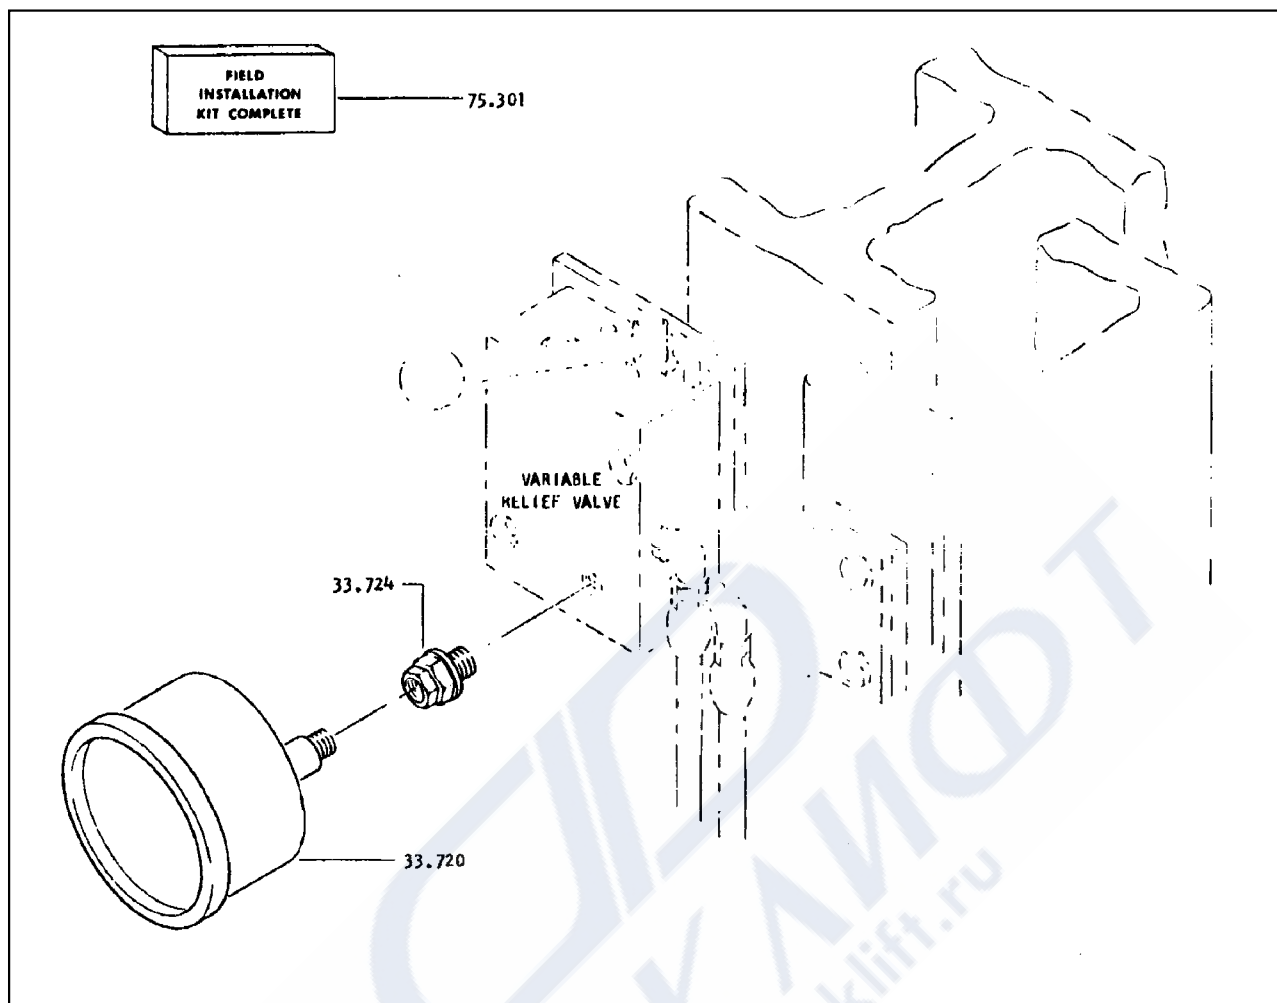 

- | | |
|--------|--|
| 33.720 | GAUGE, DEVICE HYDRAULIC PRESSURE
게이지 |
| 33.724 | FITTING, DEVICE HYD PRESSURE GAUGE
피팅 |
| 75.301 | DEVICE, HYDRAULIC PRESSURE GAUGE
디바이스 |

  
ENGINE
SHUTDOWN KIT — 75.046

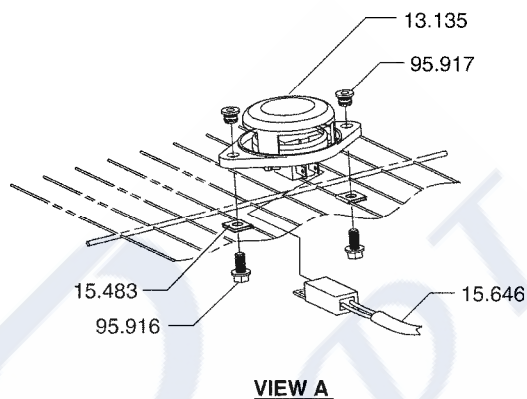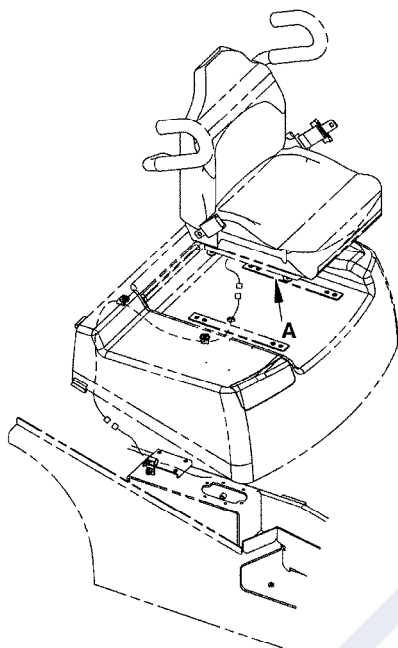

SEAT OPERATED BRAKE SWITCH


75-001

- | | |
|--------|--|
| 13.135 | SWITCH, SEAT SAFETY
스위치 |
| 15.483 | CLAMP, SEAT SWITCH INSTALLATION CABLE
클램프 |
| 15.646 | HARNESS, ENGINE DISCONNECT
하네스 |
| 75.046 | KIT, SEAT ACTUATED ENGINE SHUTDOWN
키트 |
| 95.916 | FASTENER, SEAT SWITCH
패스너 |
| 95.917 | NUT, SEAT SWITCH FASTENER
너트 |

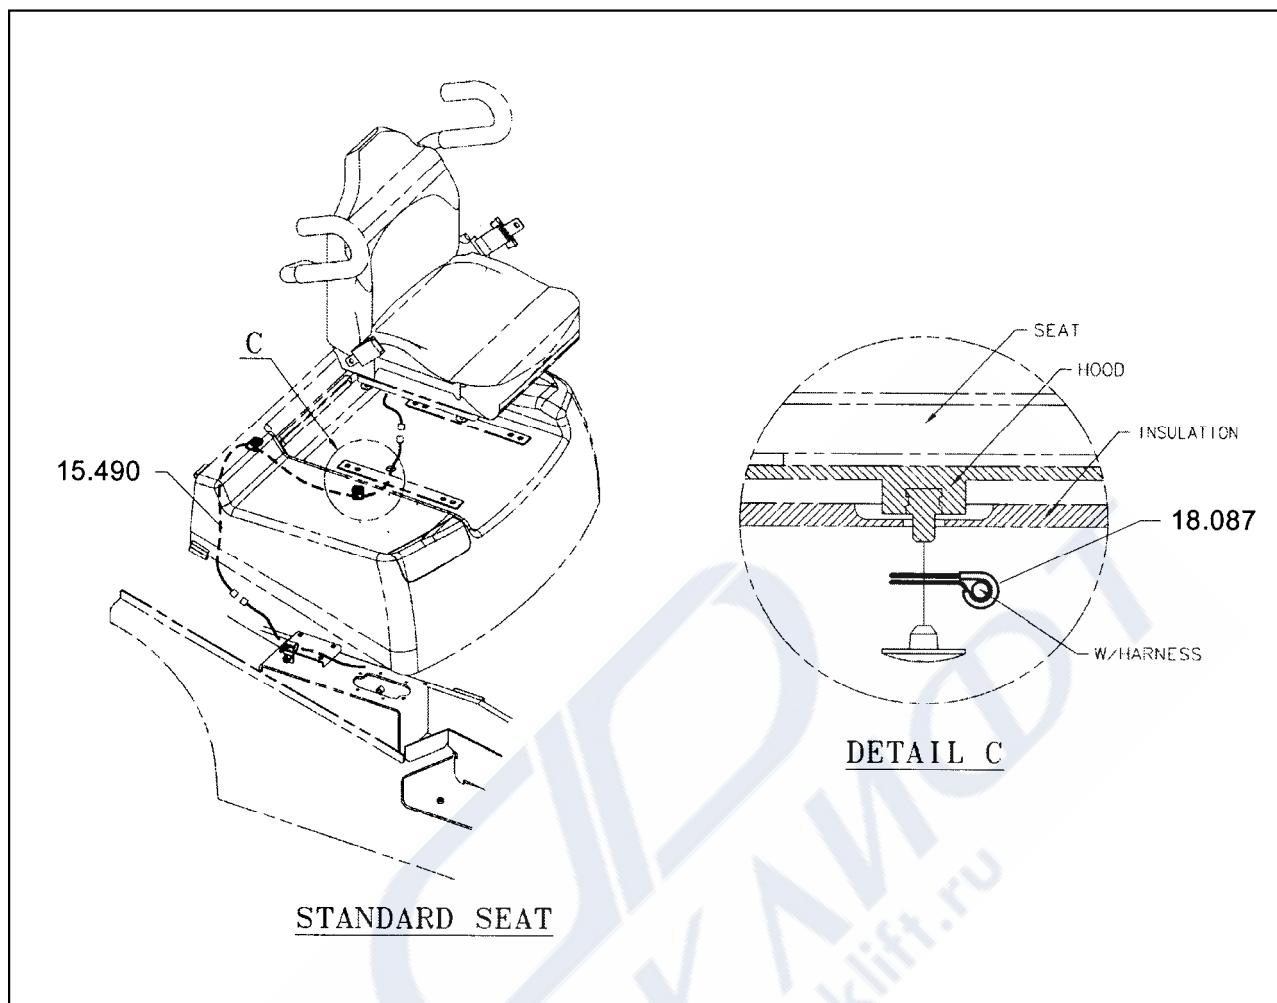 


15.490 HARNESS, SEAT ACTUATED ENGINE SHUTDOWN WIRING
하네스

 18.087 CLIP, SEAT SAFETY SWITCH WIRE
클립

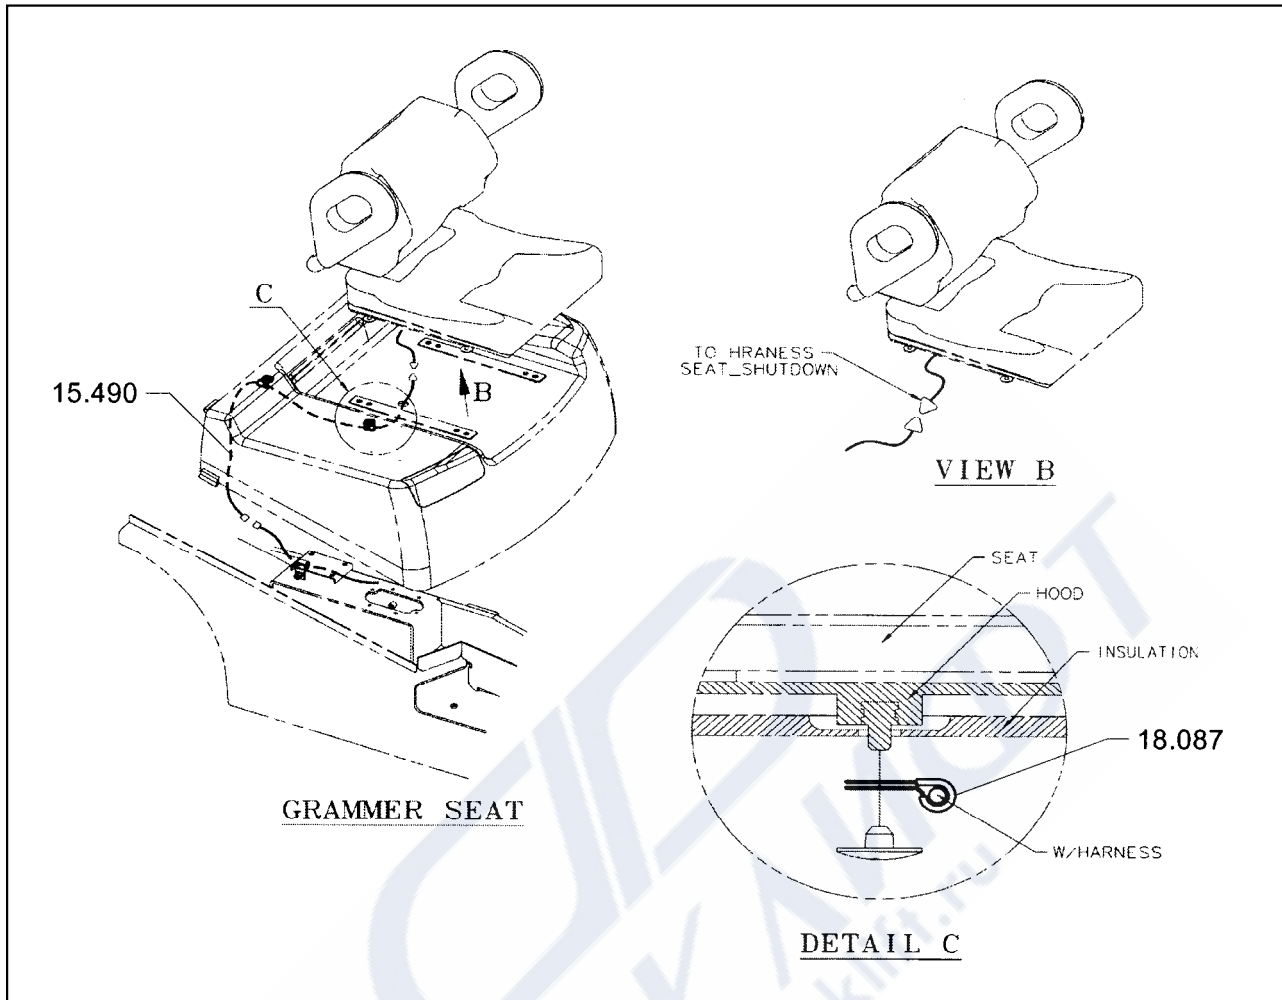

15.490 HARNESS, SEAT ACTUATED ENGINE SHUTDOWN WIRING
하네스

 18.087 CLIP, SEAT SAFETY SWITCH WIRE
클립

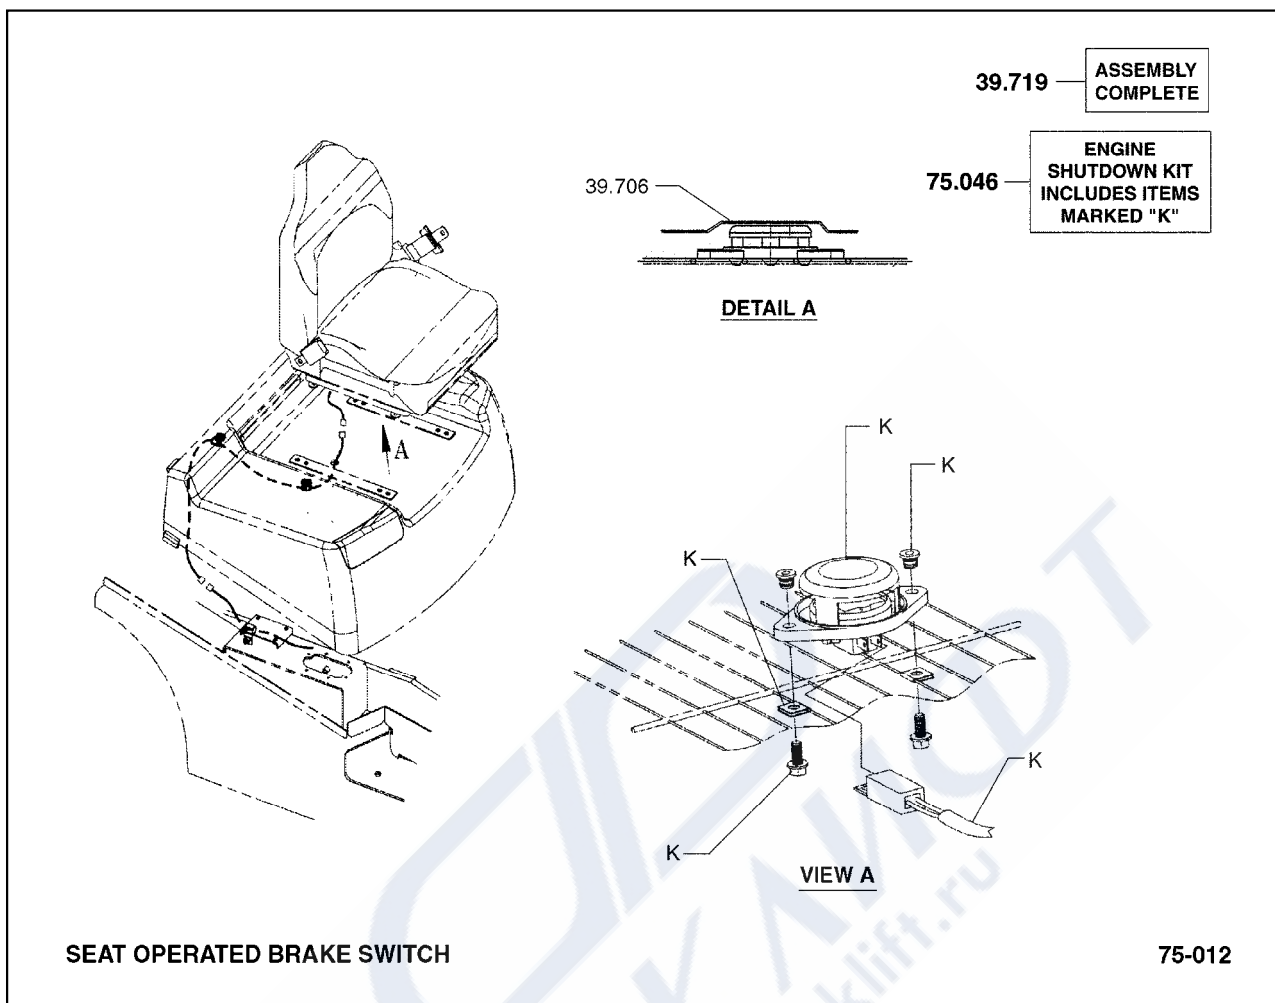

39.706	SUPPORT, SEAT 서포트
39.719	SEAT ASSEMBLY 시트
75.046	KIT, SEAT ACTUATED ENGINE SHUTDOWN 키트