부품 매뉴얼
PARTS MANUAL

GEX 20/25/30

SERIAL NUMBER : GEX230 - XXXX - 9655 KF

부품 청구시 항상 장비의 SERIAL NO. 도 함께 알려 주십시오.

ALWAYS GIVE TRUCK SERIAL NUMBER WHEN ORDERING PARTS.

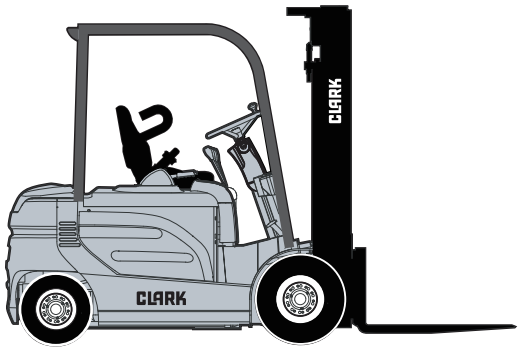

Part No. 8049008
Dec. 2013

CLARK
THE FORKLIFT

(본사) 경기도 부천시 오정구 오정동 202-1
(Head office) 202-1 Ojung-Dong, Ojung-Gu, Bucheon-city, Kyunggi-do, Korea
(공장) 경남 창원시 웅남동 40-1
(Factory) 40-1 Ungnam-dong, Changwon-city, Kyungnam, Korea

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

02-189 ACCELERATOR LINKAGE
악셀레이터 링케이지

13-028 VALVE SWITCH WIRING
밸브 스위치 와이어링

13-130 HEAD & T/SIGNAL LIGHT INSTALLATION
헤드& 턴시그널 라이트 조립그룹

13-131 HEAD & T/SIGNAL LIGHT INSTALLATION
헤드& 턴시그널 라이트 조립그룹

13-136 HEAD & T/SIGNAL LIGHT INSTALLATION
헤드& 턴시그널 라이트 조립그룹

13-137 REAR ACCESSORY MOUNTING
리어 악세서리 마운팅

13-141 HEAD & T/SIGNAL LIGHT INSTALLATION
헤드& 턴시그널 라이트 조립그룹

13-145 COMBINATION & REAR WORK LIGHT INSTALLATION
컴비네이션& 후방 작업등 조립그룹

13-182 STROBE LIGHT
경광등

13-194 WORK LIGHT
작업등

13-315 ELECTRICAL COMPONENTS (SBR)
전기장치 구성품 (SBR)

13-316 ELECTRICAL WIRING (CAB)
전기장치 와이어링 (캐빈)

14-949 ELECTRICAL COMPONENTS
전기장치 구성품

14-952 ELECTRICAL WIRING
전기장치 와이어링

15-025 ELECTRICAL COMPONENTS (ELH)
전기장치 구성품 (ELH)

15-032 ELECTRICAL WIRING (ELH)
전장 와이어링 (ELH)

15-033 ELECTRICAL WIRING
전기장치 와이어링

15-034 ELECTRICAL WIRING (ELH)
전장 와이어링 (ELH)

15-050 CABLE INSTALLATION
케이블 조립그룹

15-052 CABLE INSTALLATION (EE)
케이블 조립그룹 (EE)

15-054 ELECTRICAL COMPONENTS (EE)
전기장치 구성품 (EE)

16-024 TRACTION & PUMP MOTORS MOUNTING
트랙션& 펌프 모터 마운팅

16-240 PUMP MOTOR ASSEMBLY
펌프 모터 어셈블리

16-241 DRIVE MOTOR ASSEMBLY
드라이브 모터 어셈블리

17-118 CONTACTOR ASSEMBLY
컨택터 어셈블리

19-000 CONTROLLER MOUNTING
컨트롤러 마운팅

20-098 CARRIER ASSEMBLY
캐리어 어셈블리

20-104 DRIVE AXLE ASSEMBLY
드라이브 액슬 어셈블리

20-108 DRIVE AXLE MOUNTING
드라이브 액슬 마운팅

22-000 DRIVE TIRE MOUTING
드라이브 타이어 마운팅

22-012 UNITROL SYSTEM
유닛롤 시스템

22-013 DRIVE WHEEL & TIRE MOUNTING
드라이브휠& 타이어 마운팅

22-014 STEER WHEEL & TIRE MOUNTING
스티어휠& 타이어 마운팅

22-024 DRIVE WHEEL & TIRE (SOLID TYPE)
드라이브 휠& 타이어 (솔리드 타입)

23-164 BRAKE LINES
브레이크 라인

23-431 PARKING BRAKE & LINKAGE
파킹 브레이크& 링케이지

23-433 PARKING BRAKE SYSTEM
파킹 브레이크 시스템

23-441 BRAKE SYSTEM
브레이크 시스템

23-508 PARKING BRAKE SYSTEM
파킹 브레이크 시스템

25-143 STEERING UNIT
스티어링 유닛

25-193 STEERING WHEEL & COLUMN & GEAR MOUNTING
스티어링 휠& 컬럼& 기어 마운팅

25-291 STEERING COLUMN SHAFT ASSEMBLY
스티어링 컬럼 샤프트 어셈블리

25-353 STEERING COLUMN ASSEMBLY
스티어링 컬럼 어셈블리

26-272 STEER AXLE MOUNTING
스티어링 액슬 마운팅

26-274 STEER CYLINDER
스티어링 실린더

26-276 STEER AXLE ASSEMBLY
스티어링 액슬 어셈블리

26-315 STEER LINES
스티어링 라인

26-320 STEER LINES
스티어링 라인

26-321 STEER LINES
스티어링 라인

26-322 STEER LINES
스티어링 라인

26-323 STEER LINES
스티어링 라인

26-324 STEER LINES
스티어링 라인

26-325 STEER LINES
스티어링 라인

26-326 STEER LINES
스티어링 라인

27-002 PRIORITY VALVE ASSEMBLY
우선 밸브 어셈블리

29-027 HYDRAULIC PUMP MOUNTING
유압 펌프 마운팅

29-239 HYDRAULIC OIL FILTER
유압 오일 필터

29-256 SUMP TANK MOUNTING
섬프 탱크 마운팅

29-296 HYDRAULIC PUMP ASSEMBLY
유압 펌프 어셈블리

30-244 HYDRAULIC VALVE MOUNTING (2SPOOL)
유압밸브 마운팅 (2스풀)

30-245 HYDRAULIC VALVE MOUNTING (3SPOOL)
유압밸브 마운팅 (3스풀)

30-246 HYDRAULIC VALVE MOUNTING (4SPOOL)
유압밸브 마운팅 (4스풀)

30-295 HYDRAULIC VALVE MOUNTING
유압 밸브 마운팅

30-296 HYDRAULIC VALVE MOUNTING
유압 밸브 마운팅

30-313 HYDRAULIC VALVE MOUNTING (3SPOOL)
유압밸브 마운팅 (3스풀)

30-314 HYDRAULIC VALVE MOUNTING (4SPOOL)
유압밸브 마운팅 (4스풀)

30-341 MAIN CONTROL VALVE 4-SPOOL
메인 컨트롤 밸브 - 4 스풀

30-346 MAIN CONTROL VALVE 2-SPOOL
메인 컨트롤 밸브 - 2 스풀

30-357 HYDRAULIC VALVE MOUNTING (4SPOOL)
유압밸브 마운팅 (4스풀)

30-572 HYDRAULIC VALVE MOUNTING (2SPOOL)
유압밸브 마운팅 (2스풀)

30-597 HYDRAULIC CONTROL VALVE
유압 컨트롤 밸브

30-674 HYDRAULIC CONTROL VALVE-4 SPOOL
유압 컨트롤 밸브 - 4 스풀

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

31-170 HYDRAULIC LIFT & TILT LINES
유압 리프트& 틸트 라인

31-171 HYDRAULIC SUPPLY LINES
유압 공급 라인

31-182 HYDRAULIC LIFT & TILT LINES
유압 리프트& 틸트 라인

31-185 HYDRAULIC SUPPLY LINES
유압 공급 라인

31-199 HYDRAULIC RETURN LINES
유압 리턴 라인

31-326 HYDRAULIC RETURN LINES
유압 리턴 라인

32-142 TILT CYLINDER
틸트 실린더

32-144 ACCUMULATOR
어큐물레이터

32-145 TILT CYLINDER MOUNTING
틸트 실린더 마운팅

32-167 TILT AMOUNT GROUP
틸트 어마운트 그룹

33-014 SOLENOID VALVE
솔레노이드 밸브

33-037 CLAMP LEVER LOCK SYSTEM
클램프 레버 록 시스템

33-069 RELIEF VALVE ASSEMBLY
릴리프 밸브 어셈블리

33-130 SELECTOR SOLENOID VALVE
셀렉터 솔레노이드 밸브

34-009 UPRIGHT MOUNTING
마스트 마운팅

34-044 LOAD BACK REST MOUNTING
로드 백 레스트 마운팅

34-103 CARRIAGE ASSEMBLY
캐리지 어셈블리

34-209 CARRIAGE ASSEMBLY
캐리지 어셈블리

37-034 SHEET METAL & TRIM
시트 메탈& 트림

37-035 CAB MOUNTING
캐빈 마운팅

37-036 ENCLOSED CAB
캐빈 (박스형)

37-037 CAB DOOR SASH ASSEMBLY
캐빈 도어 어셈블리

37-038 CAB ROOF COVER ASSEMBLY
캐빈 루프 커버 어셈블리

37-040 ELECTRICAL COMPONENTS (CAB)
전기장치 구성품 (캐빈)

37-041 CAB MOUNTING
캐빈 마운팅

37-042 ENCLOSED CAB
캐빈 (박스형)

37-043 ELECTRICAL COMPONENTS (CAB)
전기장치 구성품 (캐빈)

37-045 REAR WINDOW ASSEMBLY
리어 윈도우 어셈블리

37-076 BACK MIRROR
백미러

37-122 SEAT ARMREST ASSEMBLY
시트 암레스트 어셈블리

37-123 SEAT ARMREST ASSEMBLY
시트 암레스트 어셈블리

37-124 SEAT ARMREST ASSEMBLY
시트 암레스트 어셈블리

37-125 BATTERY COVER & REAR COVER MOUNTING
베터리 커버& 리어 커버 마운팅

37-168 ARMREST MOUNTING (ELH)
암레스트 마운팅 (ELH)

38-284 MODEL DECALS & COUNTERWEIGHT MOUNTING
모델 데칼& 카운터웨이트 마운팅

39-119 ENCLOSED CAB
캐빈 (박스형)

39-150 CAB MOUNTING
캐빈 마운팅

39-221 ENCLOSED CAB
캐빈 (박스형)

39-223 ELECTRICAL-CABIN
전기장치 - 캐빈

39-519 LOAD BACK REST
로드 백 레스트

39-661 SEAT ASSEMBLY
시트 어셈블리

39-795 SHEET METAL
시트 메탈

39-798 OVERHEAD GUARD MOUNTING
오버헤드가드 마운팅

39-826 SEAT MOUNTING
시트 마운팅

39-829 SEAT MOUNTING
시트 마운팅

39-834 SEAT ASSEMBLY (SUSPENSION)
시트 어셈블리

39-835 ARMREST MOUNTING (ELH)
암레스트 마운팅 (ELH)

39-869 CABIN AND HEATER INSTALLATION
캐빈& 히터 조립그룹

39-930 OHG - DIDT
오버헤드가드 - DIDT

39-942 BATTERY COVER & REAR COVER MOUNTING
베터리 커버& 리어 커버 마운팅

39-944 EE CONSTRUCTION, HOOD/FRAME
EE 구성품 후드& 프레임

39-971 ENCLOSED CAB
캐빈 (박스형)

39-972 ENCLOSED CAB
캐빈 (박스형)

39-973 ENCLOSED CAB
캐빈 (박스형)

40-260 TRUCK FLUIDS
트럭 윤활유

40-270 REFLECTIVE TAPE MOUNTING
반사 테이프 마운팅

40-277 SAFETY & LOGO & WIRING DIAGRAM DECALS
안전& 로고& 회로배선 데칼

40-278 DECALS
데칼

47-000 SEAT WING KIT
시트윙 키트

47-016 REAR HAND GRIP MOUNTING
리어 핸드 그립 마운팅

50-171 ATTACHMENT HOSE ADAPTATION (CARRIAGE)
어태치 호스 적용 (캐리지)

50-172 HIGH TERMINATION FOR DEVICE HOSE ADAPTATION
하이 터미네이션 (디바이스 호스 적용)

50-175 HIGH TERMINATION FOR DEVICE HOSE ADAPTATION
하이 터미네이션 (디바이스 호스 적용)

50-177 SOLENOID VALVE FOR DEVICE HOSE ADAPTATION
솔레노이드 밸브 (디바이스 호스 적용)

50-187 AUXILIARY VALVE LINES
보조 밸브 라인

50-232 ATTACHMENT HOSE ADAPTATION (UPRIGHT)
어태치 호스 적용 (마스트)

50-269 ATTACHMENT HOSE ADAPTATION (UPRIGHT)
어태치 호스 적용 (마스트)

50-270 ATTACHMENT HOSE & CABLE ADAPTATION (UPRIGHT)
어태치 호스& 케이블 적용 (마스트)

50-289 ATTACHMENT HOSE & CABLE ADAPTATION (UPRIGHT)
어태치 호스& 케이블 적용 (마스트)

50-290 ATTACHMENT HOSE & CABLE ADAPTATION (UPRIGHT)
어태치 호스& 케이블 적용 (마스트)

50-291 ATTACHMENT HOSE & CABLE ADAPTATION (UPRIGHT)
어태치 호스& 케이블 적용 (마스트)

50-407 ATTACHMENT HOSE ADAPTATION (UPRIGHT)
어태치 호스 적용 (마스트)

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

50-410 ATTACHMENT HOSE ADAPTATION (UPRIGHT)
어태치 호스 적용 (마스트)

50-432 ATTACHMENT HOSE ADAPTATION (UPRIGHT)
어태치 호스 적용 (마스트)

50-439 ATTACHMENT HOSE ADAPTATION (UPRIGHT)
어태치 호스 적용 (마스트)

50-445 ATTACHMENT HOSE & CABLE ADAPTATION (UPRIGHT)
어태치 호스& 케이블 적용 (마스트)

50-526 ATTACHMENT HOSE & CABLE ADAPTATION (UPRIGHT)
어태치 호스& 케이블 적용 (마스트)

50-535 AUXILIARY VALVE LINES
보조 밸브 라인

50-765 HIGH TERMINATION PLUMBING
하이 터미네이션 기관

50-791 ATTACHMENT HOSE ADAPTATION (CARRIAGE)
어태치 호스 적용 (캐리지)

50-794 ATTACHMENT HOSE ADAPTATION (CARRIAGE)
어태치 호스 적용 (캐리지)

50-796 ATTACHMENT HOSE ADAPTATION (CARRIAGE)
어태치 호스 적용 (캐리지)

50-797 ATTACHMENT HOSE ADAPTATION (CARRIAGE)
어태치 호스 적용 (캐리지)

50-798 QUICK DISCONNECT FOR DEVICE HOSE ADAPTATION
퀵 차단 (호스 어댑션 장치용)

50-820 SOLENOID VALVE FOR DEVICE HOSE ADAPTATION
솔레노이드 밸브 (디바이스 호스 적용)

51-000 PRESSURE RELIEF VALVE
압력 릴리프 밸브

53-024 FORK POSITIONER
포크 포지셔너

53-084 FORK POSITIONER
포크 포지셔너

53-146 F/P SIDESHIFT CYLINDER
포크포지셔너 사이드 쉬프트 실린더

53-164 FORK POSITIONER
포크 포지셔너

53-168 FORK POSITIONER (SHIFTING)
포크 포지셔너 (쉬프트 타입)

53-170 FORK POSITIONER (BASIC)
포크 포지셔너 (기본)

53-187 SIDE SHIFT ASSEMBLY
사이드 쉬프트 어셈블리

53-198 SIDESHIFT CYLINDER
사이드 쉬프트 실린더

53-223 FORK POSITIONER CYLINDER
포크 포지셔너 실린더

54-015 FORK POSITIONER (BASIC)
포크 포지셔너 (기본)

66-058 FORK
포크

66-139 SECONDARY CYLINDER ASSEMBLY
2차 실린더 어셈블리

66-169 LIFT CYLINDER ASSEMBLY
리프트 실린더 어셈블리

66-170 SECONDARY CYLINDER ASSEMBLY
2차 실린더 어셈블리

66-235 PRIMARY CYLINDER ASSEMBLY
프라이머리 실린더 어셈블리

66-236 PRIMARY CYLINDER ASSEMBLY
프라이머리 실린더 어셈블리

66-246 TRIPLE STAGE UPRIGHT
3단 마스트

66-249 STANDARD UPRIGHT
표준 마스트

66-253 HI-LO UPRIGHT
하이-로우 마스트

75-(33)045 DEVICE HYDRAULIC PRESSURE GAUGE INSTALLATION
디바이스 유압 압력게이지 조립그룹

75-012 SEAT OPERATED BRAKE SWITCH
시트 조작 브레이크 스위치

75-013 SEAT OPERATED BRAKE
시트 조작 브레이크

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

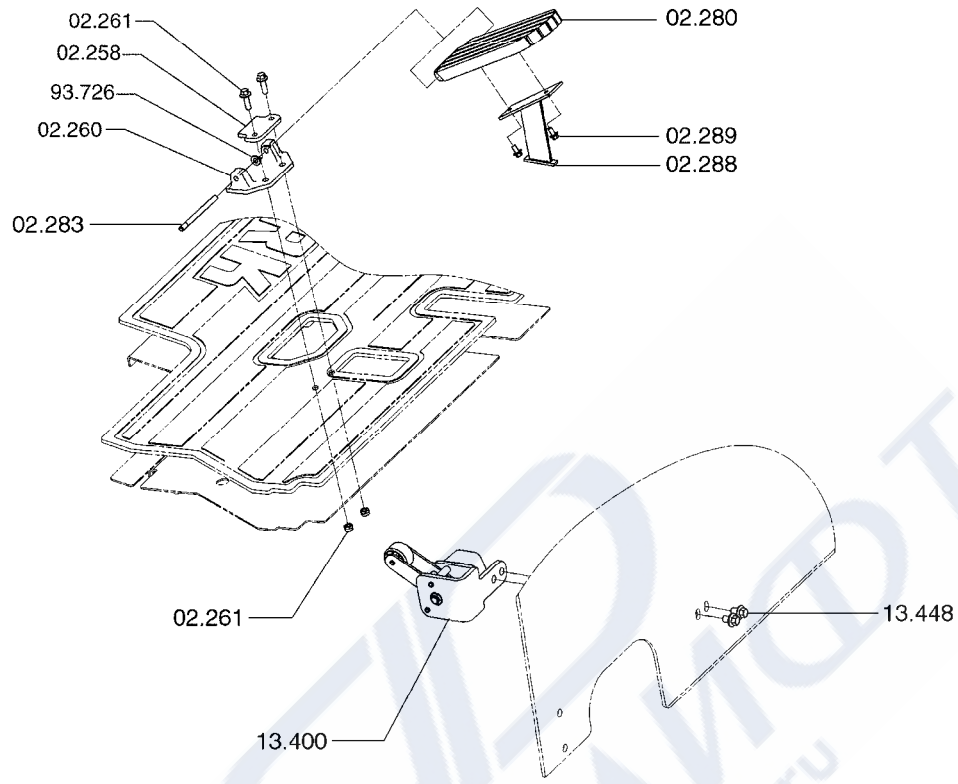

ACCELERATOR LINKAGE **02-189**

02.258 STOP, ACCELERATOR PEDAL
스톱

02.260 BRACKET, ACCELERATOR LINKAGE MOUNTING
브라켓

02.261 FASTENER, ACCELERATOR LINKAGE MOUNTING BRACKET
패스너

02.280 PEDAL, ACCELERATOR
페달

02.283 PIN, ACCELERATOR PEDAL TO BRACKET PIVOT
핀

02.288 BRACKET, ACCELERATOR PEDAL ATTACHING
브라켓

02.289 FASTENER, ACCELERATOR PEDAL BRACKET ATTACHING
패스너

13.400 CONTROL ASSEMBLY, ACCELERATING
컨트롤

13.448 FASTENER, ACCELERATING CONTROL ASSEMBLY
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

93.726 WASHER, ACCELERATOR PEDAL PIVOT RETAINER
와셔

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

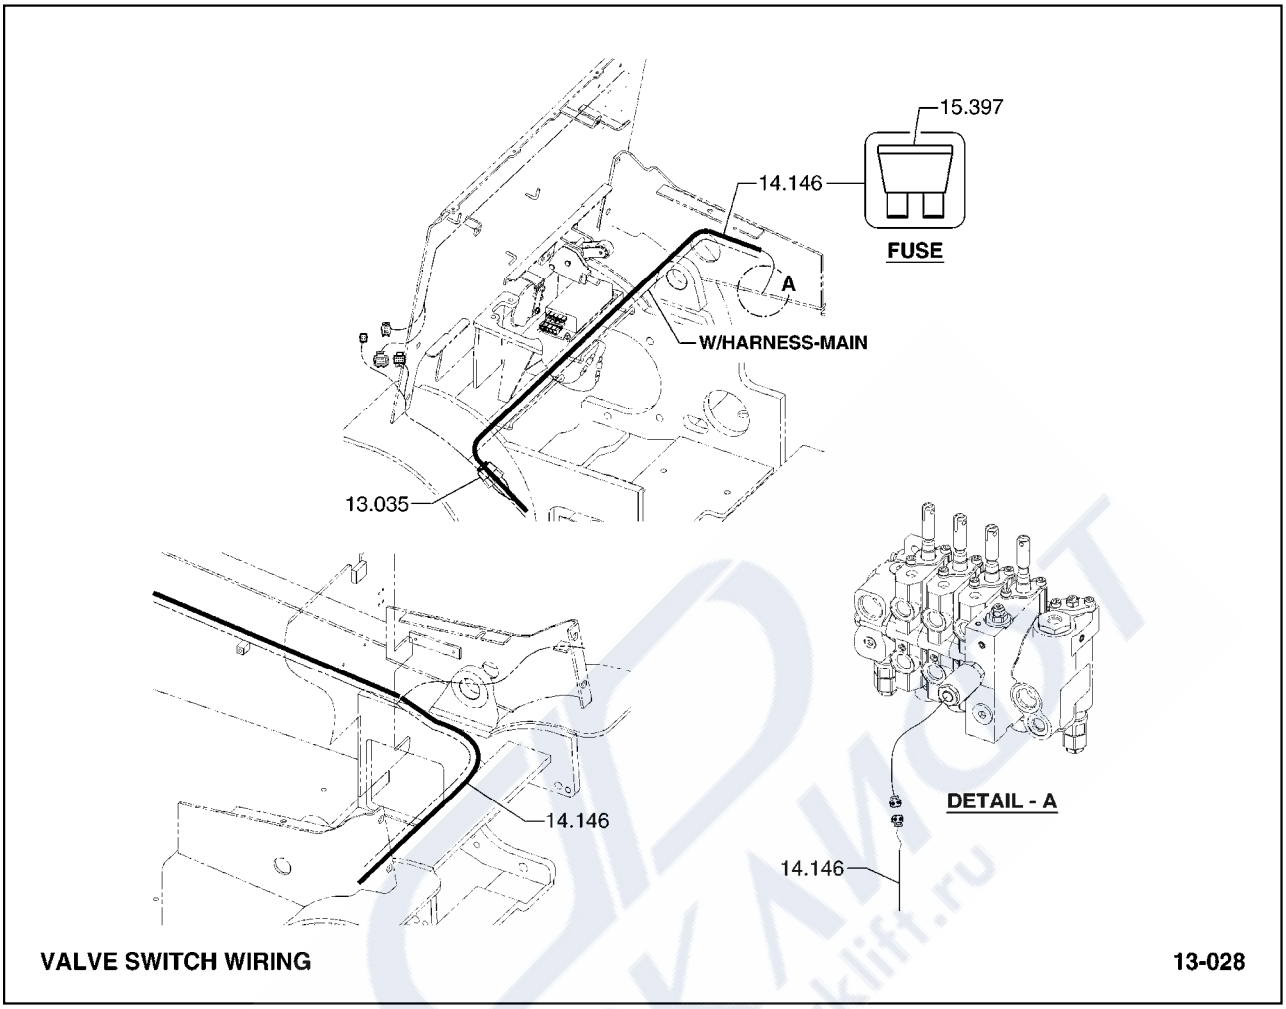

13.035 RELAY, VALVE SWITCH WIRING HARNESS
릴레이

14.146 HARNESS, VALVE SWITCH WIRING
하네스

15.397 FUSE, SOLENOID VALVE
퓨즈

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

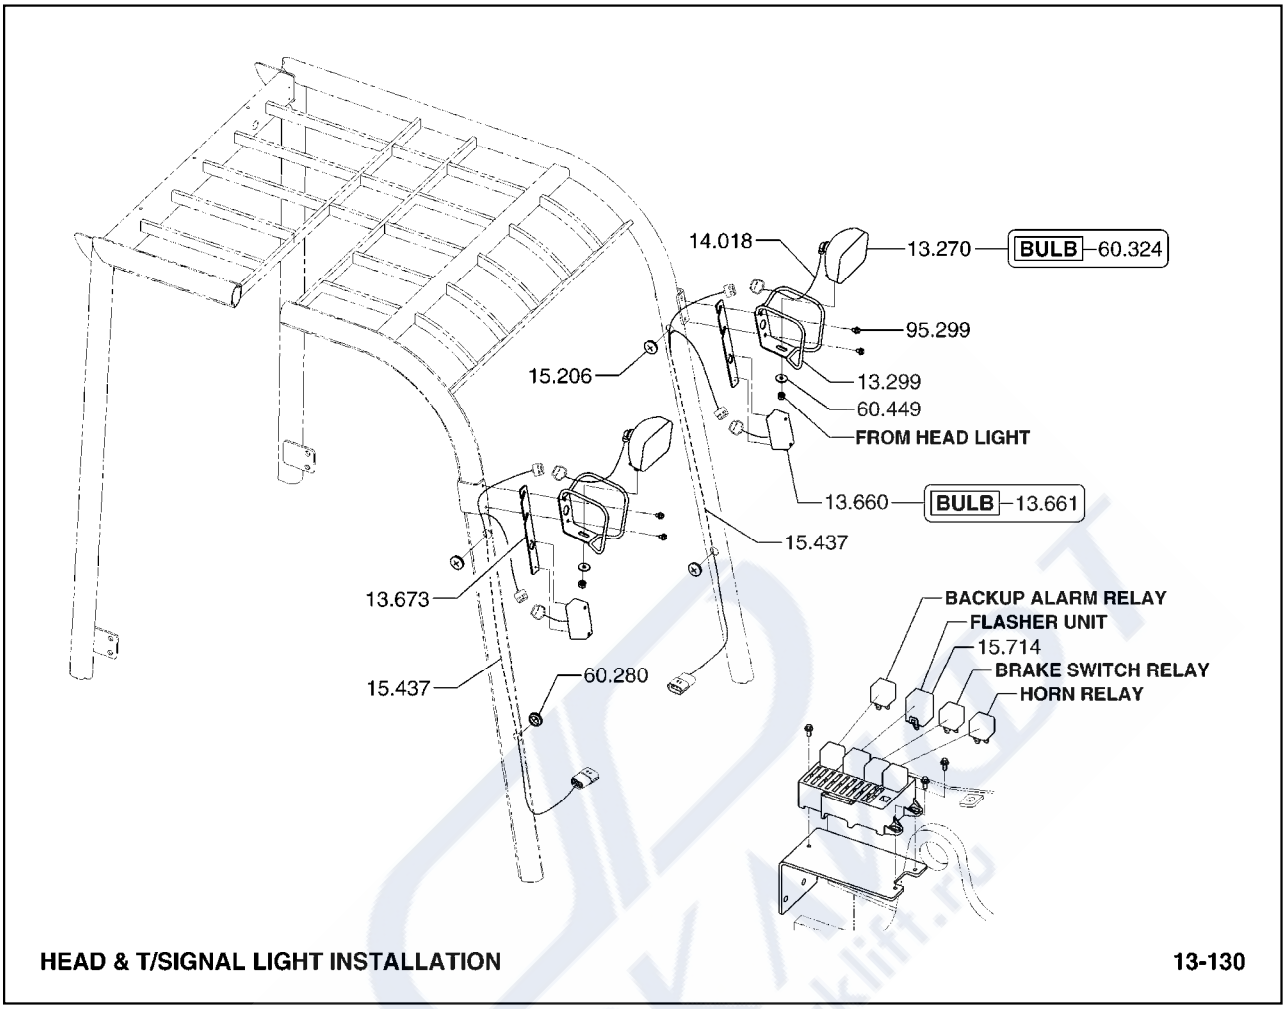

13.270	HEADLAMP, ADJUSTABLE 헤드램프
13.299	GUARD, HEADLIGHT 가드
13.660	LIGHT, TURN SIGNAL 라이트
13.661	BULB, TURN SIGNAL LIGHT 전구
13.673	BRACKET, TURN LIGHT 브라켓
14.018	WIRE, HEADLIGHT 와이어
15.206	GROMMET, HEADLAMP CONDUCTOR 그로멧
15.437	HARNESS, HEADLAMP WIRING 하네스
15.714	FLASHER, UNIT 플래셔

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

60.280	GROMMET, HEADLAMP CONDUCTOR 그로멧
60.324	BULB, HEADLAMP 전구
60.449	SPACER, HEAD LAMP BRACKET MOUNTING 스페이서
95.299	FASTENER, HEADLAMP GUARD 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

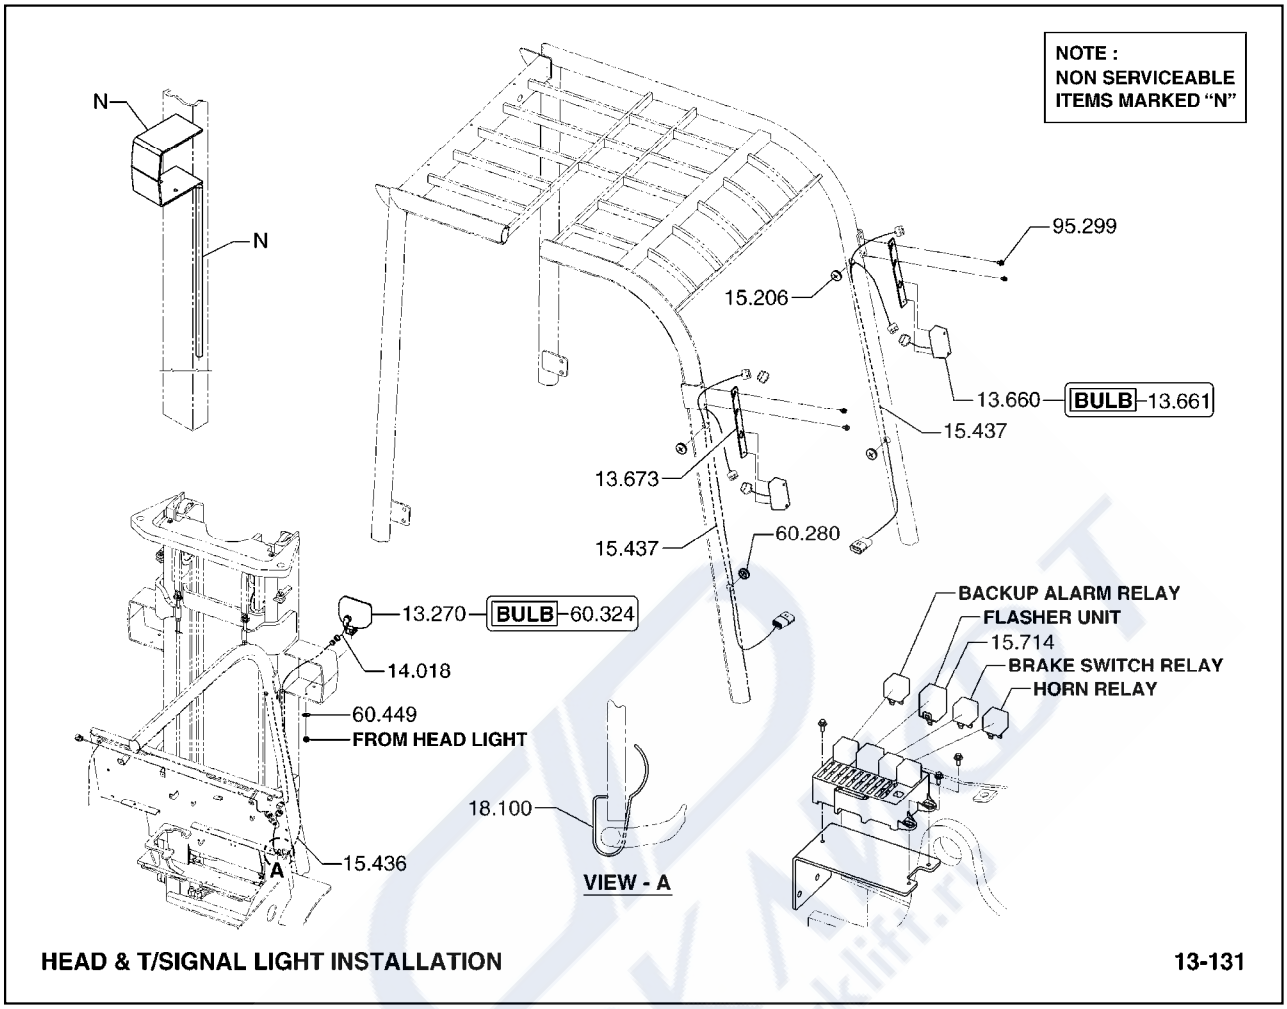

13.270 HEADLAMP, ADJUSTABLE
헤드램프

13.660 LIGHT, TURN SIGNAL
라이트

13.661 BULB, TURN SIGNAL LIGHT
전구

13.673 BRACKET, TURN LIGHT
브라켓

14.018 WIRE, HEADLIGHT
와이어

15.206 GROMMET, HEADLAMP CONDUCTOR
그로멧

15.436 HARNESS, RH HEADLAMP WIRING
하네스

15.437 HARNESS, HEADLAMP WIRING
하네스

15.714 FLASHER, UNIT
플래셔

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

18.100	CLIP, HEAD LIGHT WIRE 클립
60.280	GROMMET, HEADLAMP CONDUCTOR 그로멧
60.324	BULB, HEADLAMP 전구
60.449	SPACER, HEAD LAMP BRACKET MOUNTING 스페이서
95.299	FASTENER, HEADLAMP GUARD 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

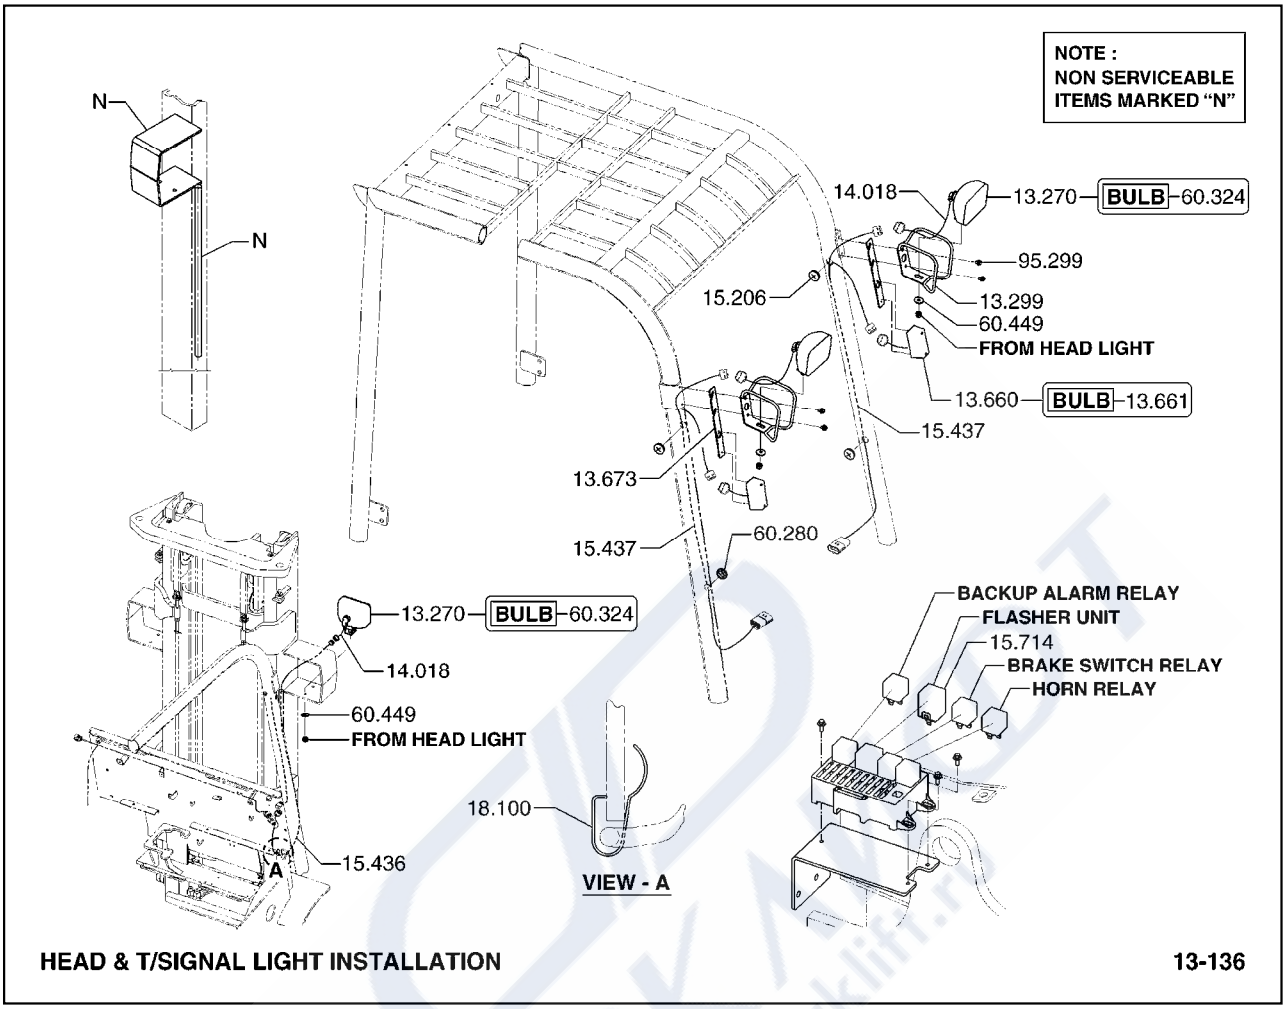

13.270 HEADLAMP, ADJUSTABLE
헤드램프

13.299 GUARD, HEADLIGHT
가드

13.660 LIGHT, TURN SIGNAL
라이트

13.661 BULB, TURN SIGNAL LIGHT
전구

13.673 BRACKET, TURN LIGHT
브라켓

14.018 WIRE, HEADLIGHT
와이어

15.206 GROMMET, HEADLAMP CONDUCTOR
그로멧

15.436 HARNESS, RH HEADLAMP WIRING
하네스

15.437 HARNESS, HEADLAMP WIRING
하네스

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

15.714	FLASHER, UNIT 플래셔
18.100	CLIP, HEAD LIGHT WIRE 클립
60.280	GROMMET, HEADLAMP CONDUCTOR 그로멧
60.324	BULB, HEADLAMP 전구
60.449	SPACER, HEAD LAMP BRACKET MOUNTING 스페이서
95.299	FASTENER, HEADLAMP GUARD 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

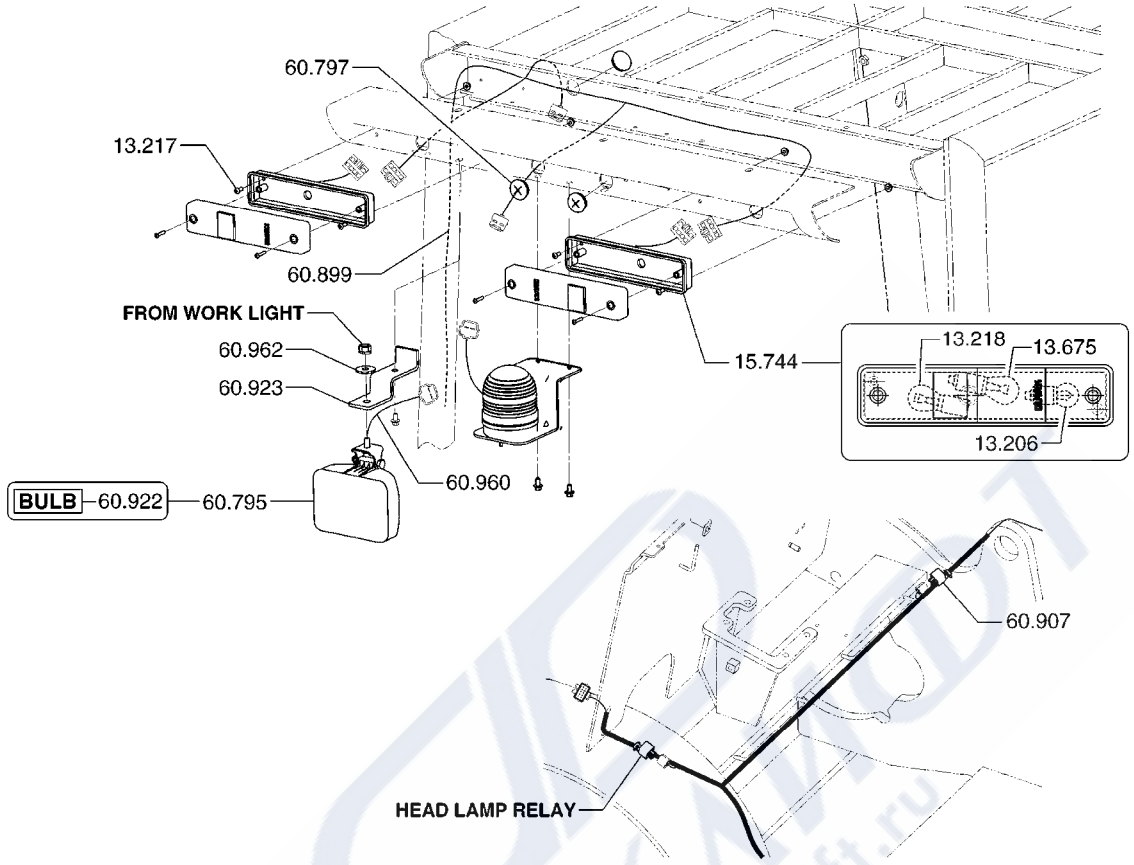

13.206 BULB, BACK-UP LAMP
전구

13.217 FASTENER, COM STOP & TAIL LAMP ASSY MTG
패스너

13.218 BULB, STOP & TAIL LAMP
전구

13.675 BULB, TURN LIGHT
전구

15.744 LAMP ASSEMBLY, COMBINATION STOP & TAIL
램프

60.795 LIGHT, REAR WORK
라이트

60.797 GROMMET, REAR ACCESSORY WIRE
그룽멧

60.899 WIRING HARNESS, REAR ACCESSORY
와이어하네스

60.907 RELAY,STOP LIGHT
릴레이

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

60.922 BULB, REAR WORK LAMP
전구

60.923 BRACKET, REAR WORK LAMP MOUNTING
브라켓

60.960 HARNESS, REAR WORK LAMP EXTENSION
하네스

60.962 SPACER, REAR WORK LAMP MOUNTING
스페이서

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

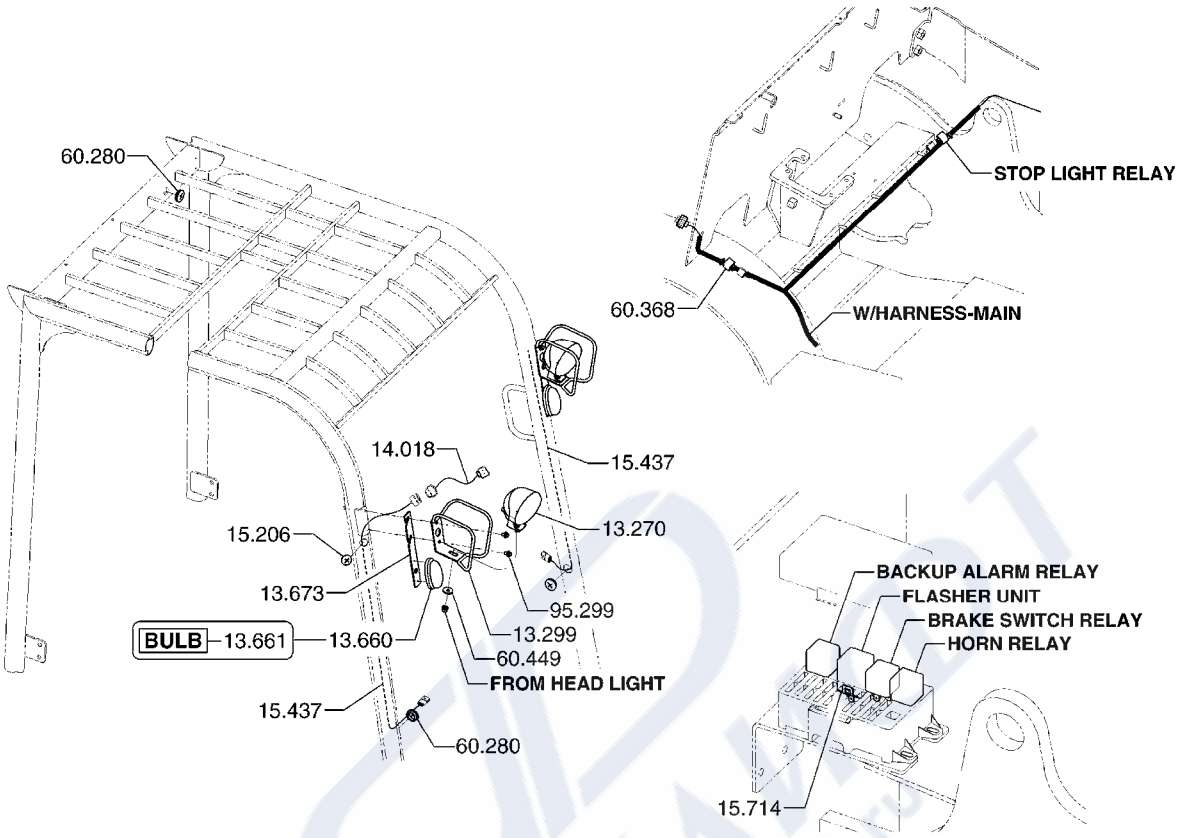

13.270 HEADLAMP, ADJUSTABLE
헤드램프

13.299 GUARD, HEADLIGHT
가드

13.660 LIGHT, TURN SIGNAL
라이트

13.661 BULB, TURN SIGNAL LIGHT
전구

13.673 BRACKET, TURN LIGHT
브라켓

14.018 WIRE, HEADLIGHT
와이어

15.206 GROMMET, HEADLAMP CONDUCTOR
그로멧

15.437 HARNESS, HEADLAMP WIRING
하네스

15.714 FLASHER, UNIT
플래셔

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

60.280	GROMMET, HEADLAMP CONDUCTOR 그로멧
60.368	RELAY, HEADLIGHTS 릴레이
60.449	SPACER, HEAD LAMP BRACKET MOUNTING 스페이서
95.299	FASTENER, HEADLAMP GUARD 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

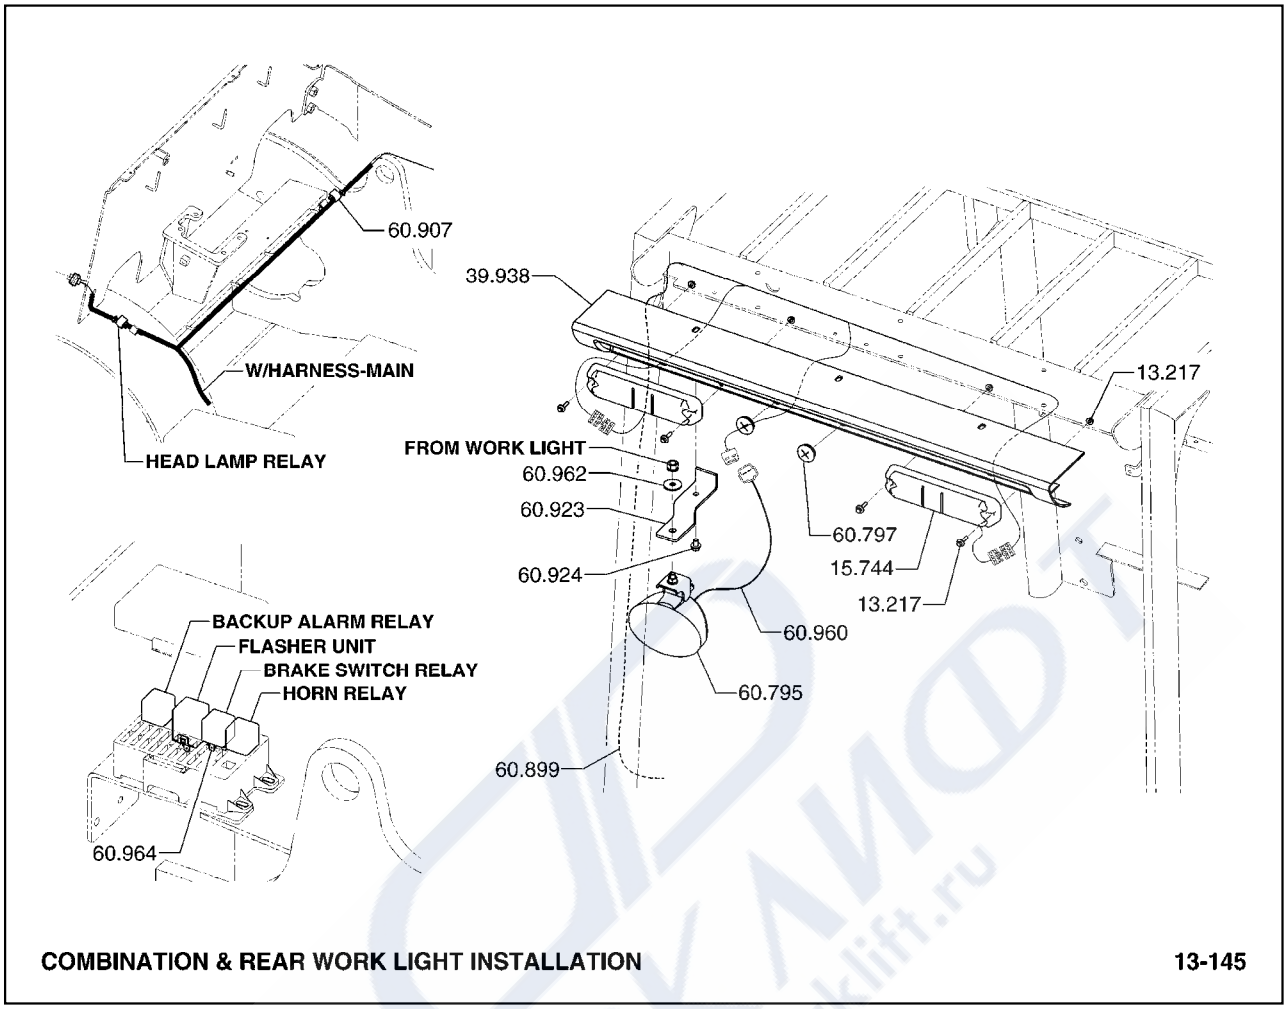

COMBINATION & REAR WORK LIGHT INSTALLATION **13-145**

13.217	FASTENER, COM STOP & TAIL LAMP ASSY MTG 패스너
15.744	LAMP ASSEMBLY, COMBINATION STOP & TAIL 램프
39.938	BRACKET, OVERHEAD GUARD REAR SUPPORT 브라켓
60.795	LIGHT, REAR WORK 라이트
60.797	GROMMET, REAR ACCESSORY WIRE 그룽멧
60.899	WIRING HARNESS, REAR ACCESSORY 와이어하네스
60.907	RELAY,STOP LIGHT 릴레이
60.923	BRACKET, REAR WORK LAMP MOUNTING 브라켓
60.924	FASTENER, REAR WORK LAMP MOUNTING 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

60.960 HARNESS, REAR WORK LAMP EXTENSION
하네스

60.962 SPACER, REAR WORK LAMP MOUNTING
스페이서

60.964 RELAY, FOOT BRAKE
릴레이

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

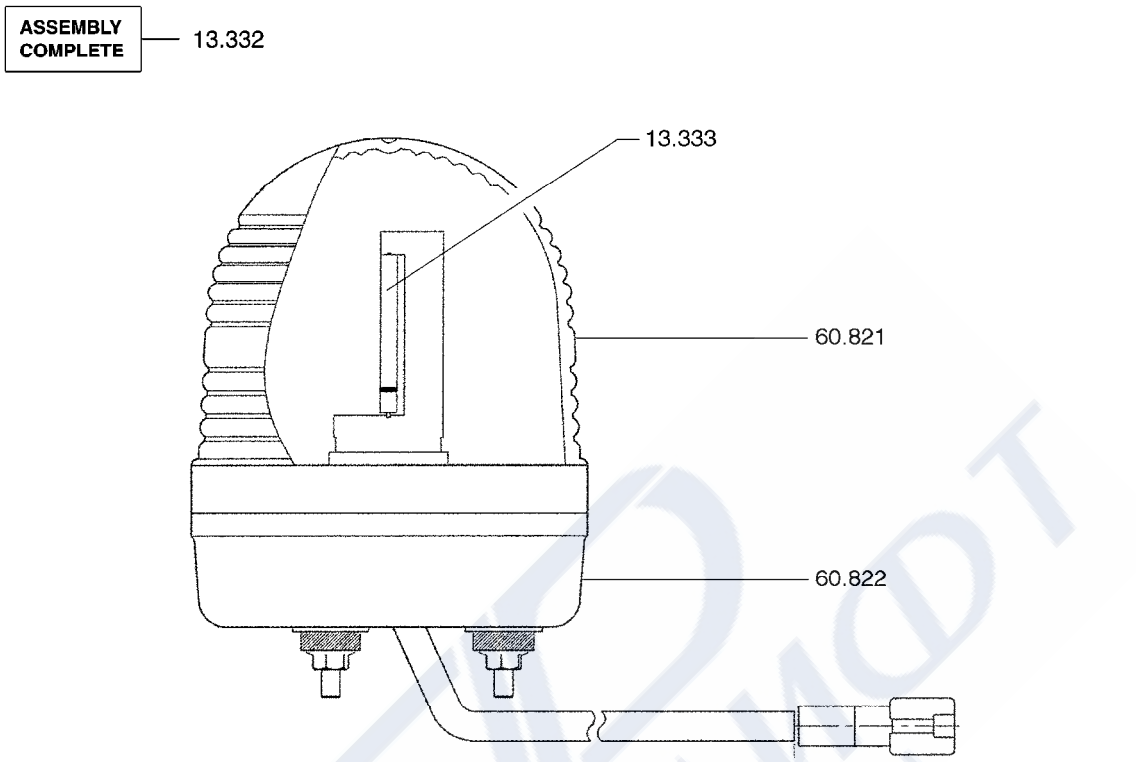

13.332 ASSEMBLY, WARNING LIGHT
경고등

13.333 BULB, WARNING LIGHT
전구

60.821 GLOBE, STROBE LIGHT
글로브

60.822 BASE, STROBE LIGHT
베이스

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

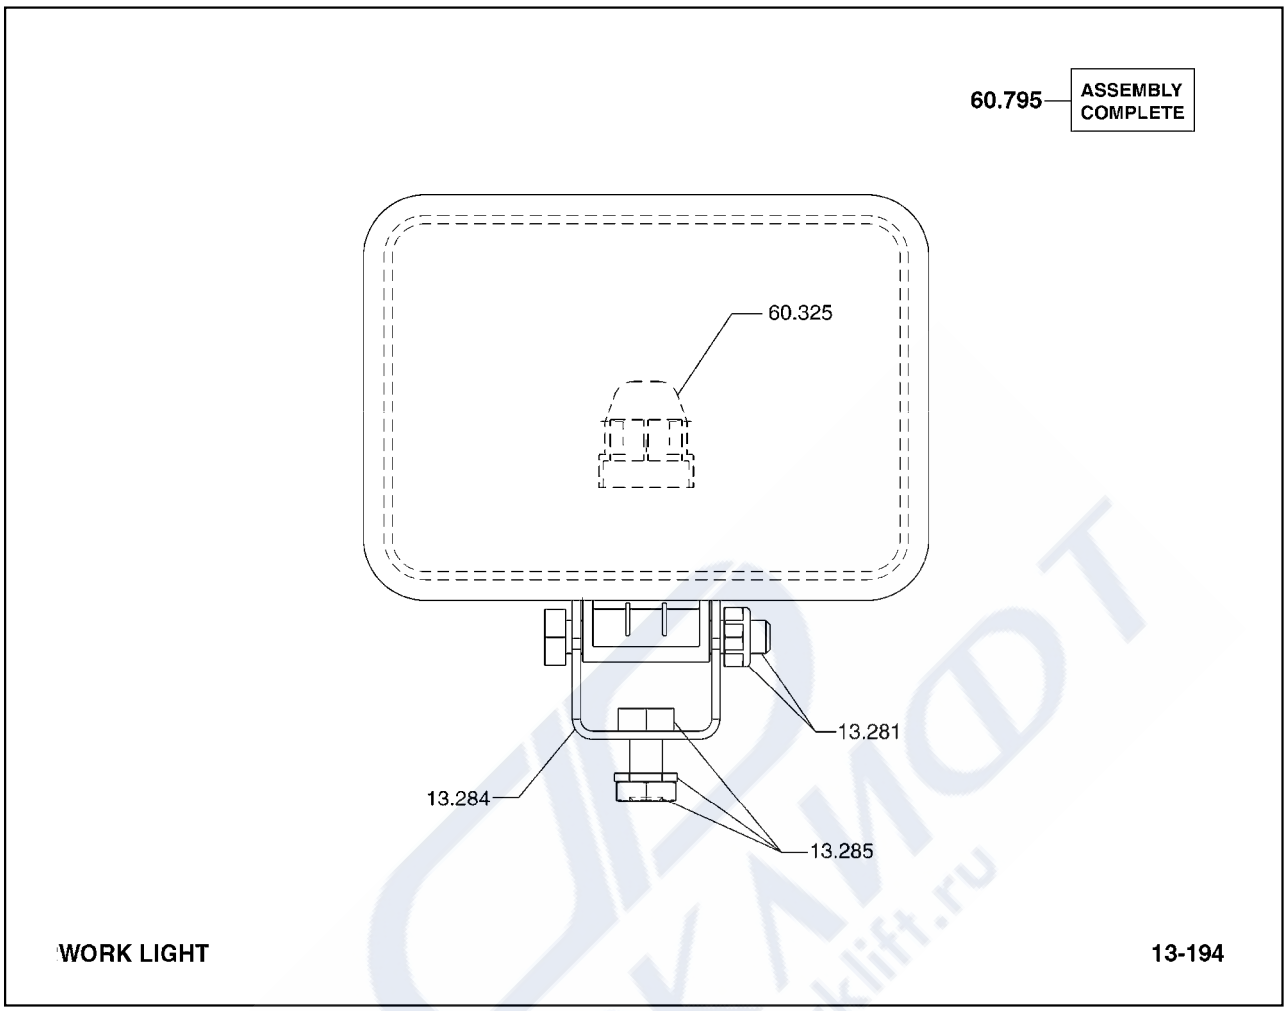

13.281 FASTENER, ADJ HEADLAMP SWIVEL
패스너

13.284 BRACKET, ADJUSTABLE HEADLAMP
브라켓

13.285 FASTENER, ADJUSTABLE HEADLAMP BRACKET
패스너

60.325 BULB, HEADLAMP
전구

60.795 LIGHT, REAR WORK
라이트

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

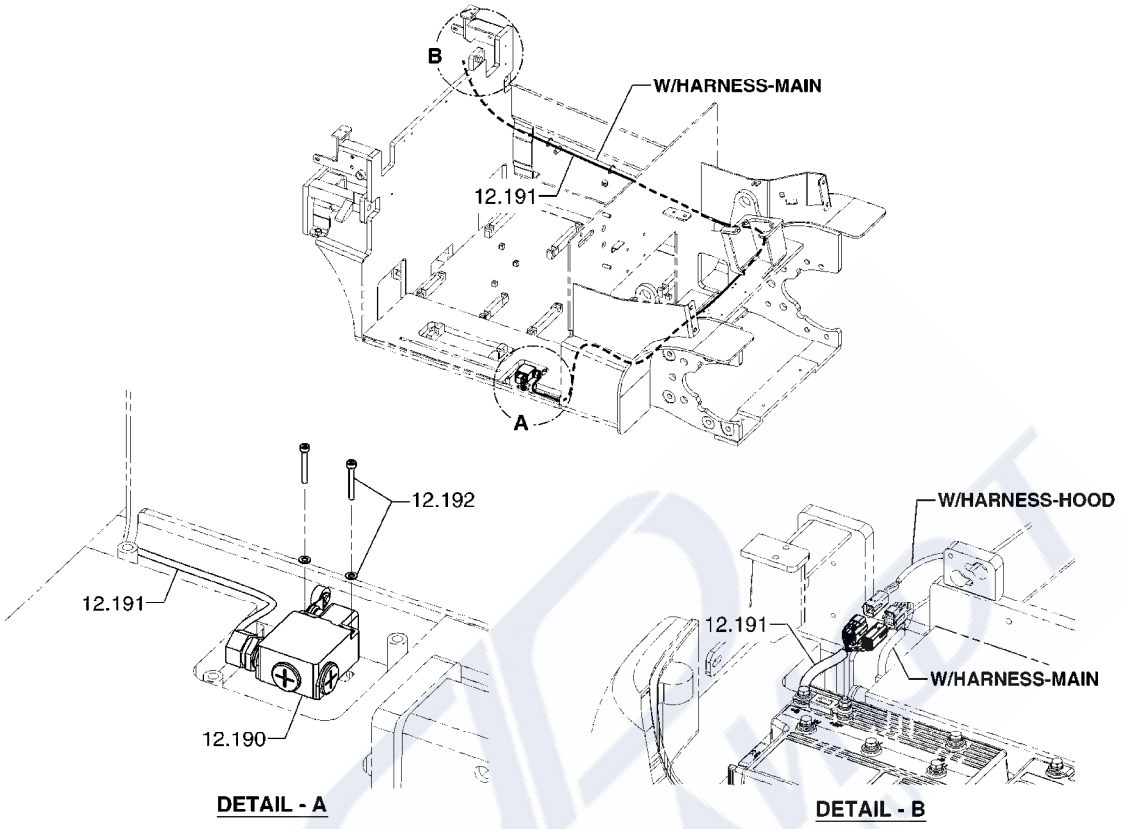

12.190 SWITCH, BATTERY RETAINER INTERLOCK
스위치

12.191 HARNESS, BATTERY RETAINER INTERLOCK SWITCH
하네스

12.192 FASTENER,BATTERY RETAINER INTERLOCK SWITCH
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

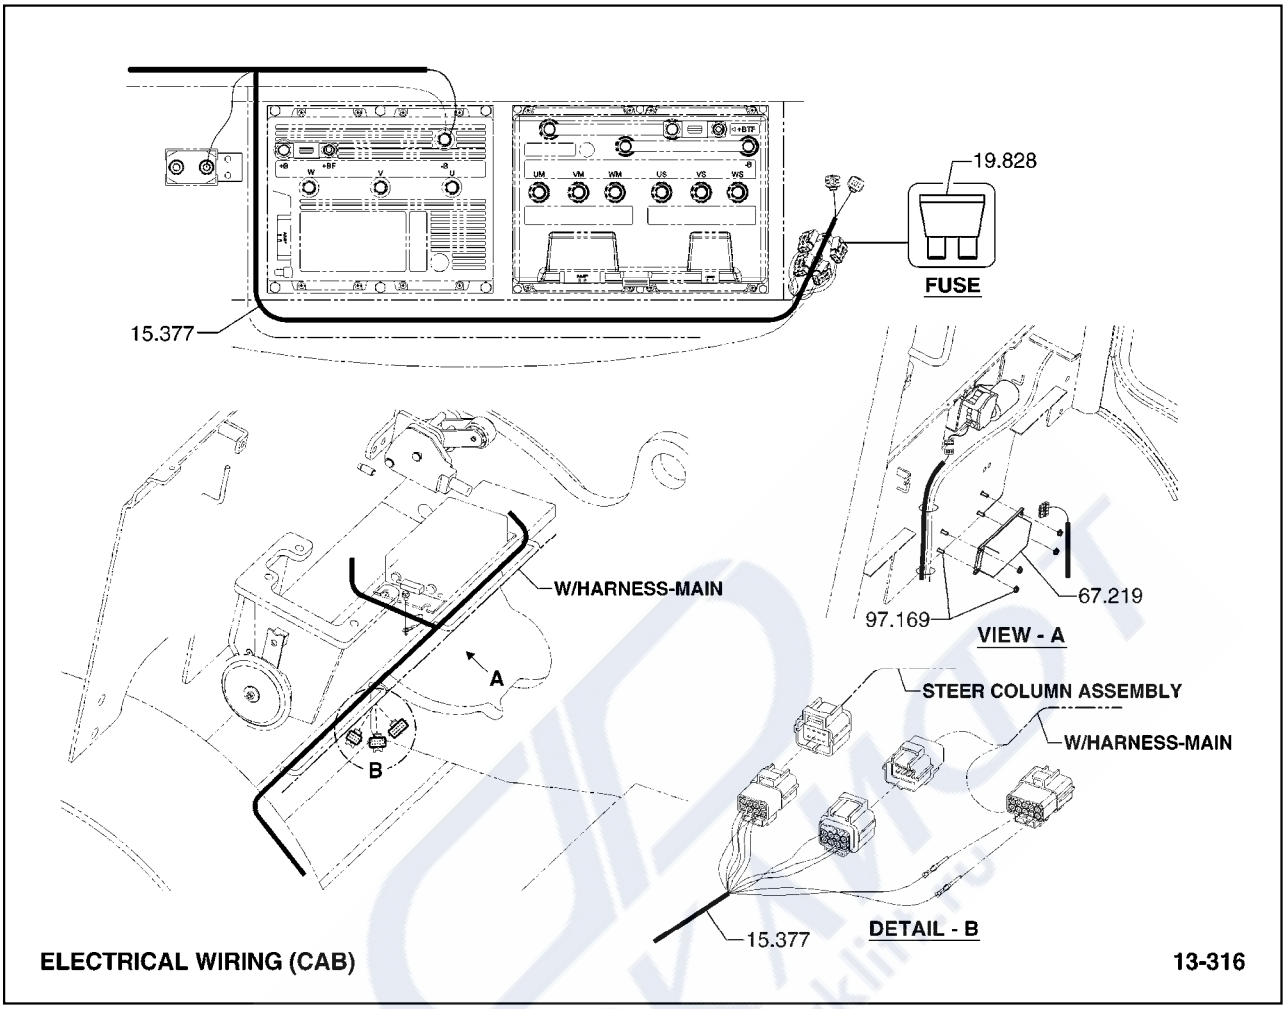

15.377 WIRING HARNESS, MACHINE TO CABIN
와이어하네스

19.828 FUSE, CONTROL CIRCUIT
퓨즈

67.219 CONVERTER, DC-DC FOR CAB ACCESSORY
컨버터

97.169 FASTENER, DC-DC CONVERTER FOR CAB ACCESSORY
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

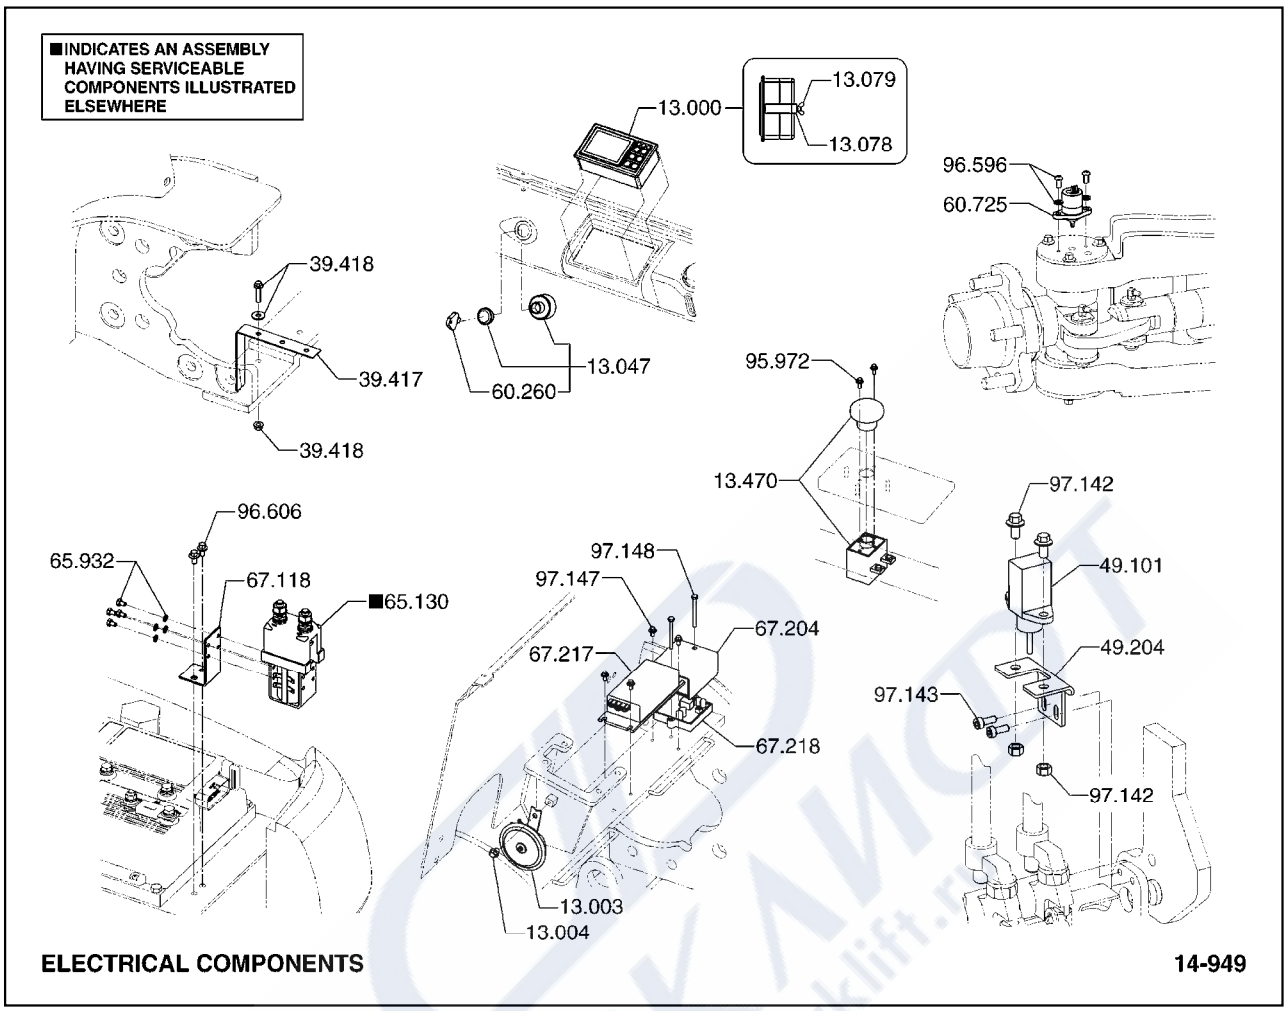

13.000 PANEL, INSTRUMENT CLUSTER
판넬

13.003 HORN
혼

13.004 FASTENER, HORN MOUNTING BRACKET
패스너

13.047 SWITCH, CIRCUIT LOCKING
스위치

13.078 CLAMP, INSTRUMENT CLUSTER TO INST PANEL
클램프

13.079 FASTENER, INSTRUMENT CLUSTER TO INST PANEL
패스너

13.470 SWITCH, DISCONNECT
스위치

39.417 GROUND STRAP, ELECTRIC TRUCK
접지케이블

39.418 FASTENER, ELECTRIC TRUCK GROUND STRAP
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

49.101	SENSOR, LEVER POSITION 센서
49.204	BRACKET, LEVER POSITION SENSOR 브라켓
60.260	KEY, CIRCUIT LOCKING SWITCH 키
60.725	POTENTIOMETER, STEERING INTERLOCK 포텐션메터
65.130	CONTACTOR ASSEMBLY, LINE 컨택터
65.932	FASTENER, LINE CONTACTOR 패스너
67.118	BRACKET, LINE CONTACTOR MOUNTING 브라켓
67.204	COVER, DC CONVERTER 커버
67.217	CONVERTER, DC-DC FOR ACCESSORY 컨버터
67.218	CONVERTER, DC-DC FOR INSTRUMENT PANEL 컨버터
95.972	FASTENER, BATTERY DISCONNECT SWITCH 패스너
96.596	FASTENER, STEERING INTERLOCK POTENTIOMETER 패스너
96.606	FASTENER, LINE CONTACTOR MOUNTING BRACKET 패스너
97.142	FASTENER, LEVER POSITION SENSOR 패스너
97.143	FASTENER, LEVER POSITION SENSOR BRACKET 패스너
97.147	FASTENER, DC-DC CONVERTER FOR ACCESSORY 패스너
97.148	FASTENER, DC-DC CONVERTER FOR INSTRUMENT PANEL 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

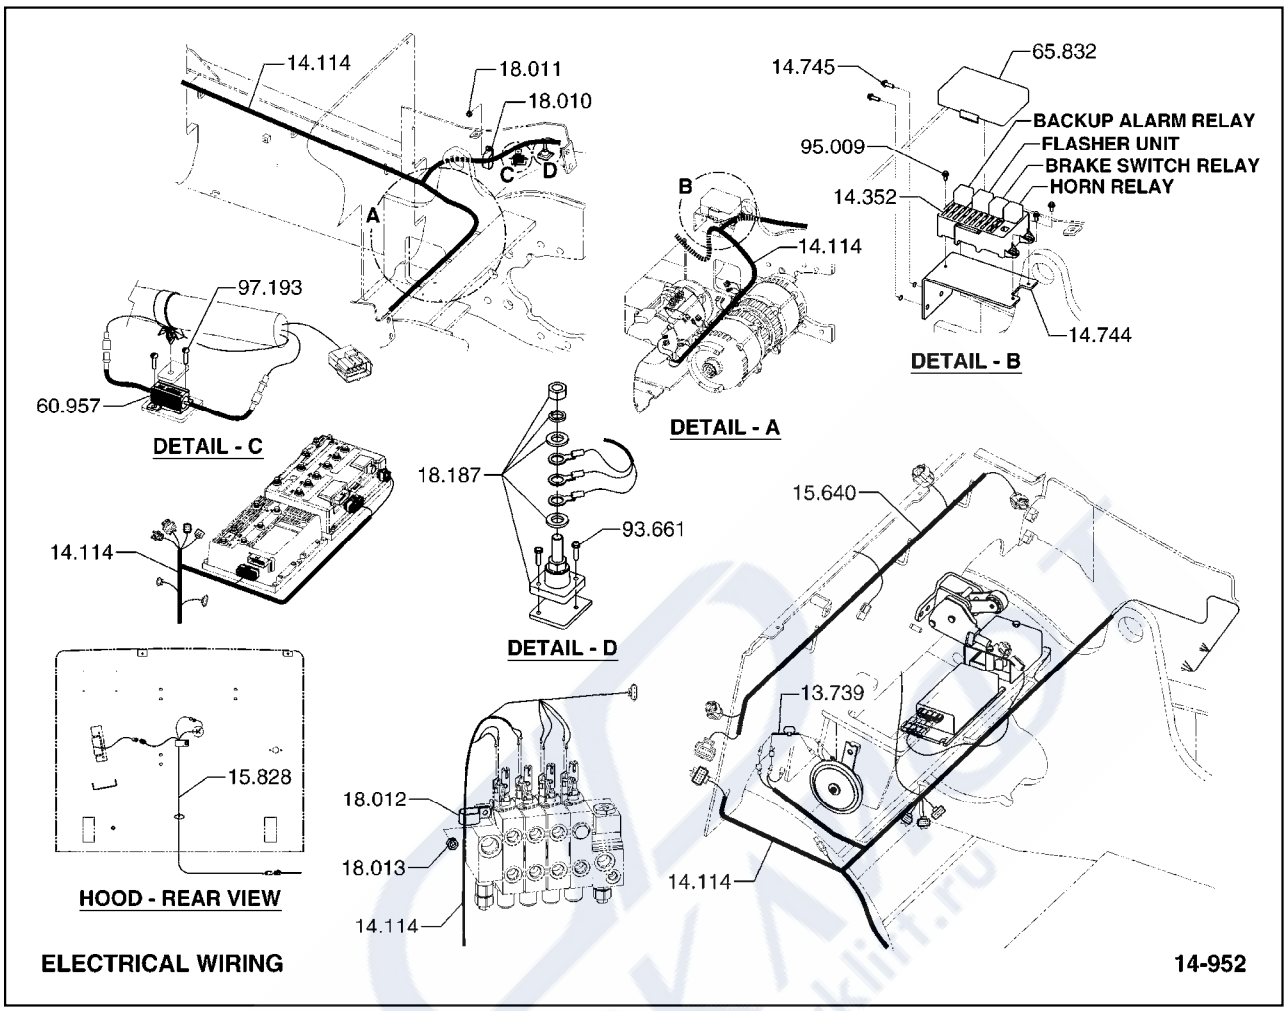

13.739 FILTER, HORN
필터

14.114 HARNESS, MACHINE WIRING
하네스

14.352 FUSE, CONTROL CIRCUIT
퓨즈

14.744 BRACKET, FUSE HOLDER MOUNTING
브라켓

14.745 FASTENER, FUSE HOLDER MOUNTING BRACKET
패스너

15.640 WIRING HARNESS, MACHINE COWL
와이어하네스

15.828 WIRING HARNESS, MACHINE HOOD
와이어하네스

18.010 CLIP, HARNESS
클립

18.011 FASTENER, HARNESS CLIP
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

18.012	CLIP, WIRE HARNESS 클립
18.013	FASTENER, HARNESS CLIP 패스너
18.187	TERMINAL, FUSE 터미널
60.957	RESISTOR, WIRING HARNESS 레지스터
65.832	COVER, FUSE BOX 커버
93.661	FASTENER, TERMINAL BLOCK 패스너
95.009	FASTENER, FUSE BOX MOUNTING 패스너
97.193	FASTENER, WIRING HARNESS RESISTOR 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

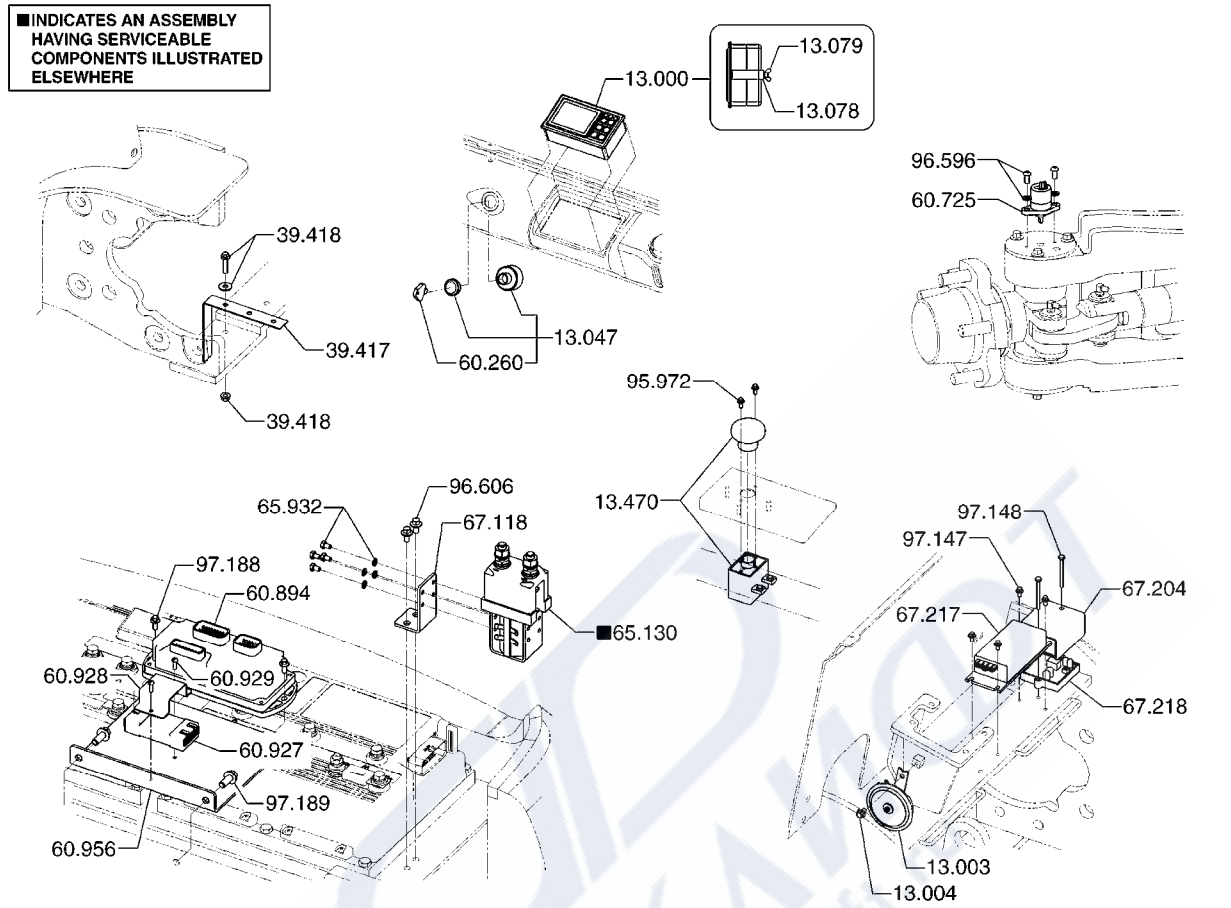

13.000	PANEL, INSTRUMENT CLUSTER 판넬
13.003	HORN 혼
13.004	FASTENER, HORN MOUNTING BRACKET 패스너
13.047	SWITCH, CIRCUIT LOCKING 스위치
13.078	CLAMP, INSTRUMENT CLUSTER TO INST PANEL 클램프
13.079	FASTENER, INSTRUMENT CLUSTER TO INST PANEL 패스너
13.470	SWITCH, DISCONNECT 스위치
39.417	GROUND STRAP, ELECTRIC TRUCK 접지케이블
39.418	FASTENER, ELECTRIC TRUCK GROUND STRAP 패스너
60.260	KEY, CIRCUIT LOCKING SWITCH 키
60.725	POTENTIOMETER, STEERING INTERLOCK 포텐션메터
60.894	CONTROLLER, ELECTRONIC HYDRAULIC 컨트롤러
60.927	CARD, ELECTRIC SIGNAL CONTROL 카드
60.928	BRACKET, ELECTRIC SIGNAL CONTROL CARD 브라켓
60.929	FASTENER, ELECTRIC SIGNAL CONTROL CARD 패스너
60.956	BRACKET, ELECTRONIC HYDRAULIC CONTROLLER 브라켓
65.130	CONTACTOR ASSEMBLY, LINE 컨택터
65.932	FASTENER, LINE CONTACTOR 패스너
67.118	BRACKET, LINE CONTACTOR MOUNTING 브라켓
67.204	COVER, DC CONVERTER 커버
67.217	CONVERTER, DC-DC FOR ACCESSORY 컨버터
67.218	CONVERTER, DC-DC FOR INSTRUMENT PANEL 컨버터
95.972	FASTENER, BATTERY DISCONNECT SWITCH 패스너
96.596	FASTENER, STEERING INTERLOCK POTENTIOMETER 패스너
96.606	FASTENER, LINE CONTACTOR MOUNTING BRACKET 패스너
97.147	FASTENER, DC-DC CONVERTER FOR ACCESSORY 패스너
97.148	FASTENER, DC-DC CONVERTER FOR INSTRUMENT PANEL 패스너
97.188	FASTENER, ELECTRONIC HYDRAULIC CONTROLLER 패스너
97.189	FASTENER, ELECTRONIC HYDRAULIC CONTROLLER BRACKE 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

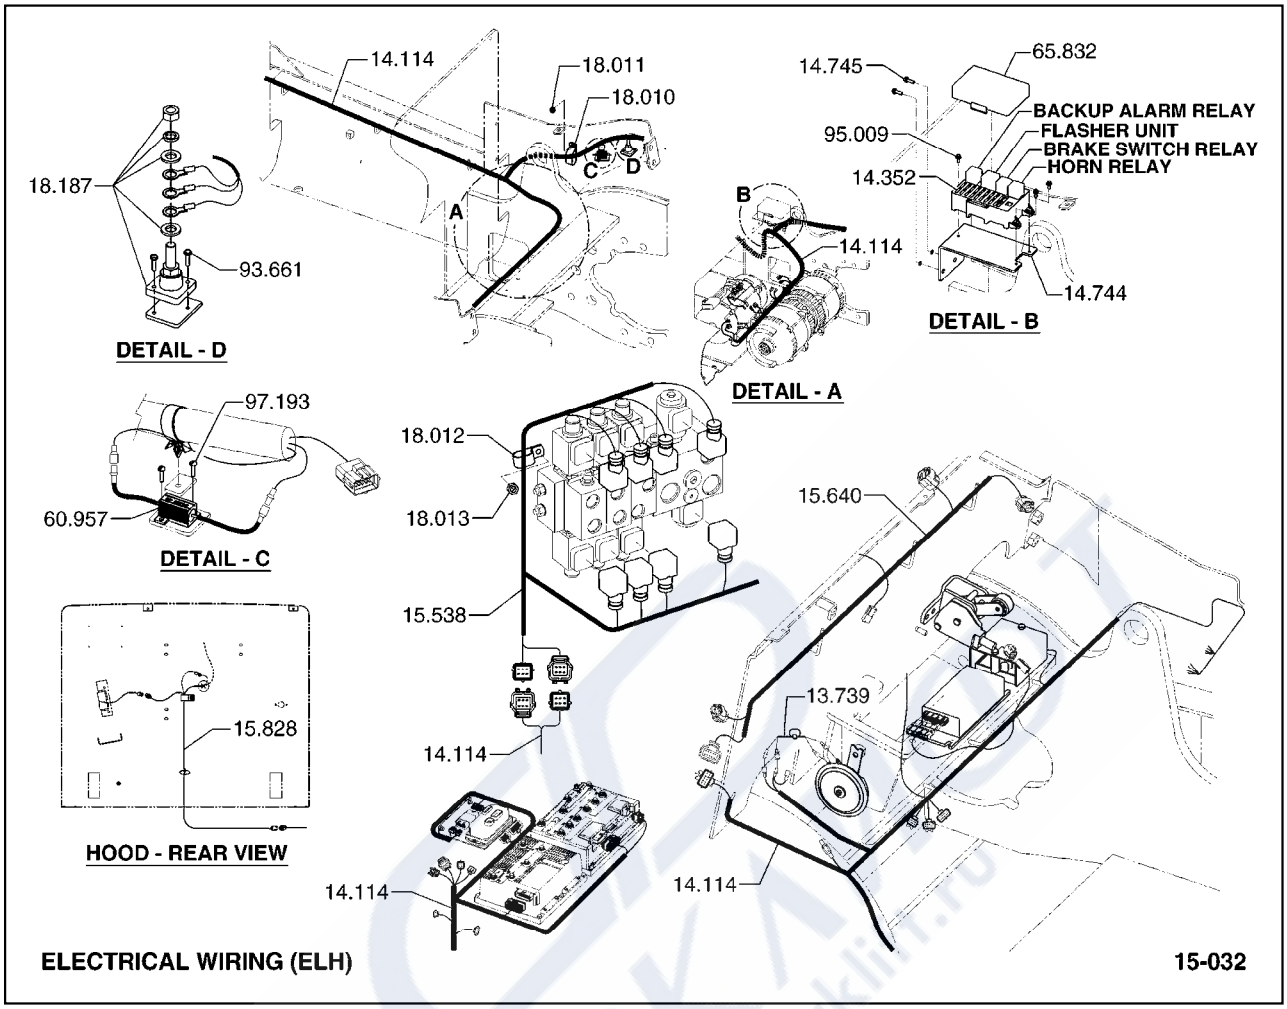

13.739 FILTER, HORN
필터

14.114 HARNESS, MACHINE WIRING
하네스

14.352 FUSE, CONTROL CIRCUIT
퓨즈

14.744 BRACKET, FUSE HOLDER MOUNTING
브라켓

14.745 FASTENER, FUSE HOLDER MOUNTING BRACKET
패스너

15.538 HARNESS, VALVE SWITCH WIRING CONNECTOR
하네스

15.640 WIRING HARNESS, MACHINE COWL
와이어하네스

15.828 WIRING HARNESS, MACHINE HOOD
와이어하네스

18.010 CLIP, HARNESS
클립

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

18.011	FASTENER, HARNESS CLIP 패스너
18.012	CLIP, WIRE HARNESS 클립
18.013	FASTENER, HARNESS CLIP 패스너
18.187	TERMINAL, FUSE 터미널
60.957	RESISTOR, WIRING HARNESS 레지스터
65.832	COVER, FUSE BOX 커버
93.661	FASTENER, TERMINAL BLOCK 패스너
95.009	FASTENER, FUSE BOX MOUNTING 패스너
97.193	FASTENER, WIRING HARNESS RESISTOR 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

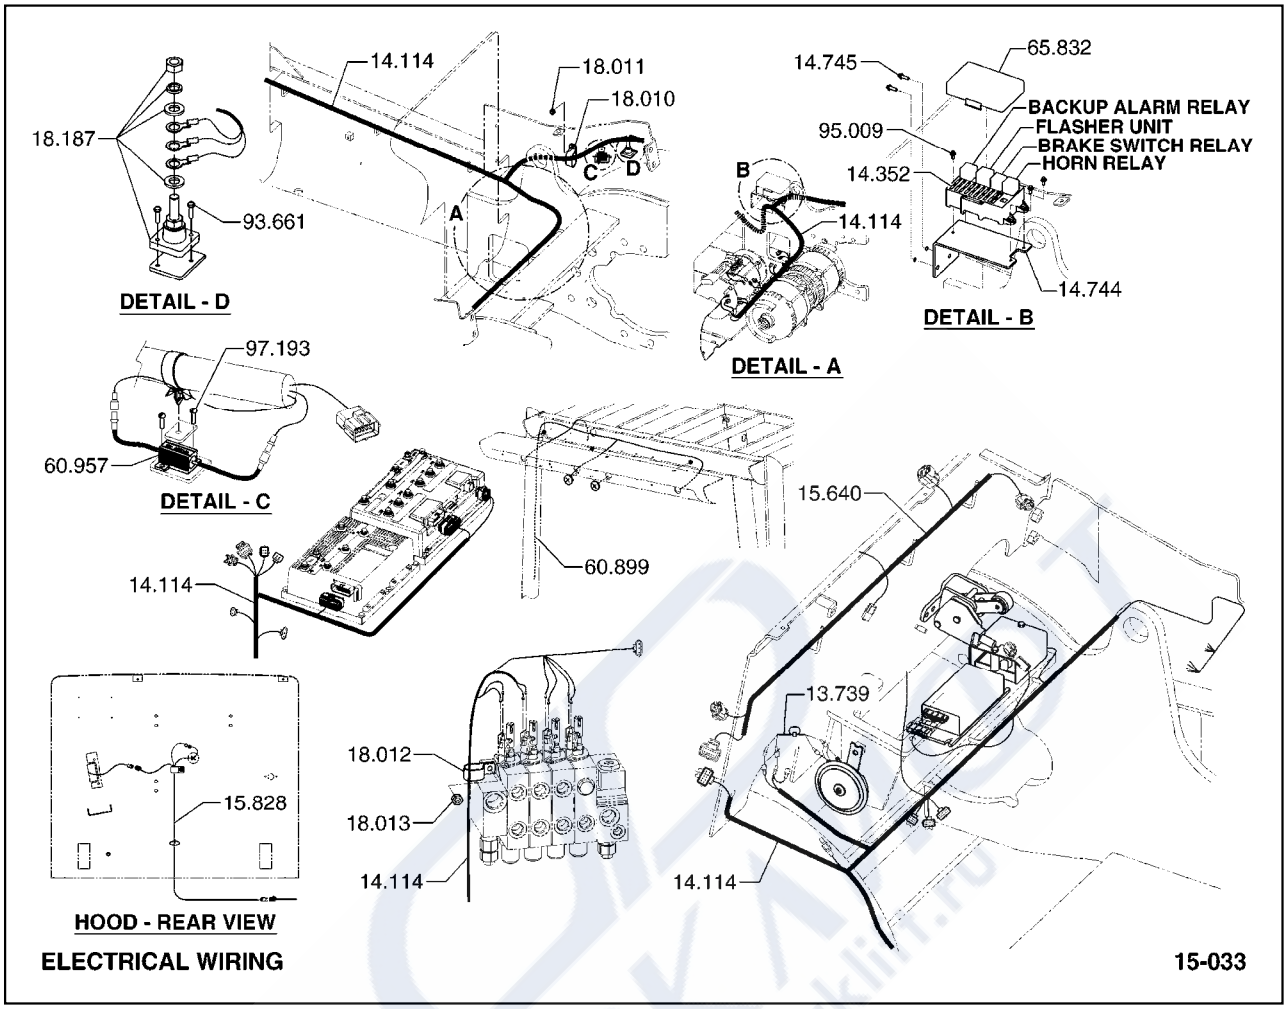

13.739	FILTER, HORN 필터
14.114	HARNESS, MACHINE WIRING 하네스
14.352	FUSE, CONTROL CIRCUIT 퓨즈
14.744	BRACKET, FUSE HOLDER MOUNTING 브라켓
14.745	FASTENER, FUSE HOLDER MOUNTING BRACKET 패스너
15.640	WIRING HARNESS, MACHINE COWL 와이어하네스
15.828	WIRING HARNESS, MACHINE HOOD 와이어하네스
18.010	CLIP, HARNESS 클립
18.011	FASTENER, HARNESS CLIP 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

18.012	CLIP, WIRE HARNESS 클립
18.013	FASTENER, HARNESS CLIP 패스너
18.187	TERMINAL, FUSE 터미널
60.899	WIRING HARNESS, REAR ACCESSORY 와이어하네스
60.957	RESISTOR, WIRING HARNESS 레지스터
65.832	COVER, FUSE BOX 커버
93.661	FASTENER, TERMINAL BLOCK 패스너
95.009	FASTENER, FUSE BOX MOUNTING 패스너
97.193	FASTENER, WIRING HARNESS RESISTOR 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

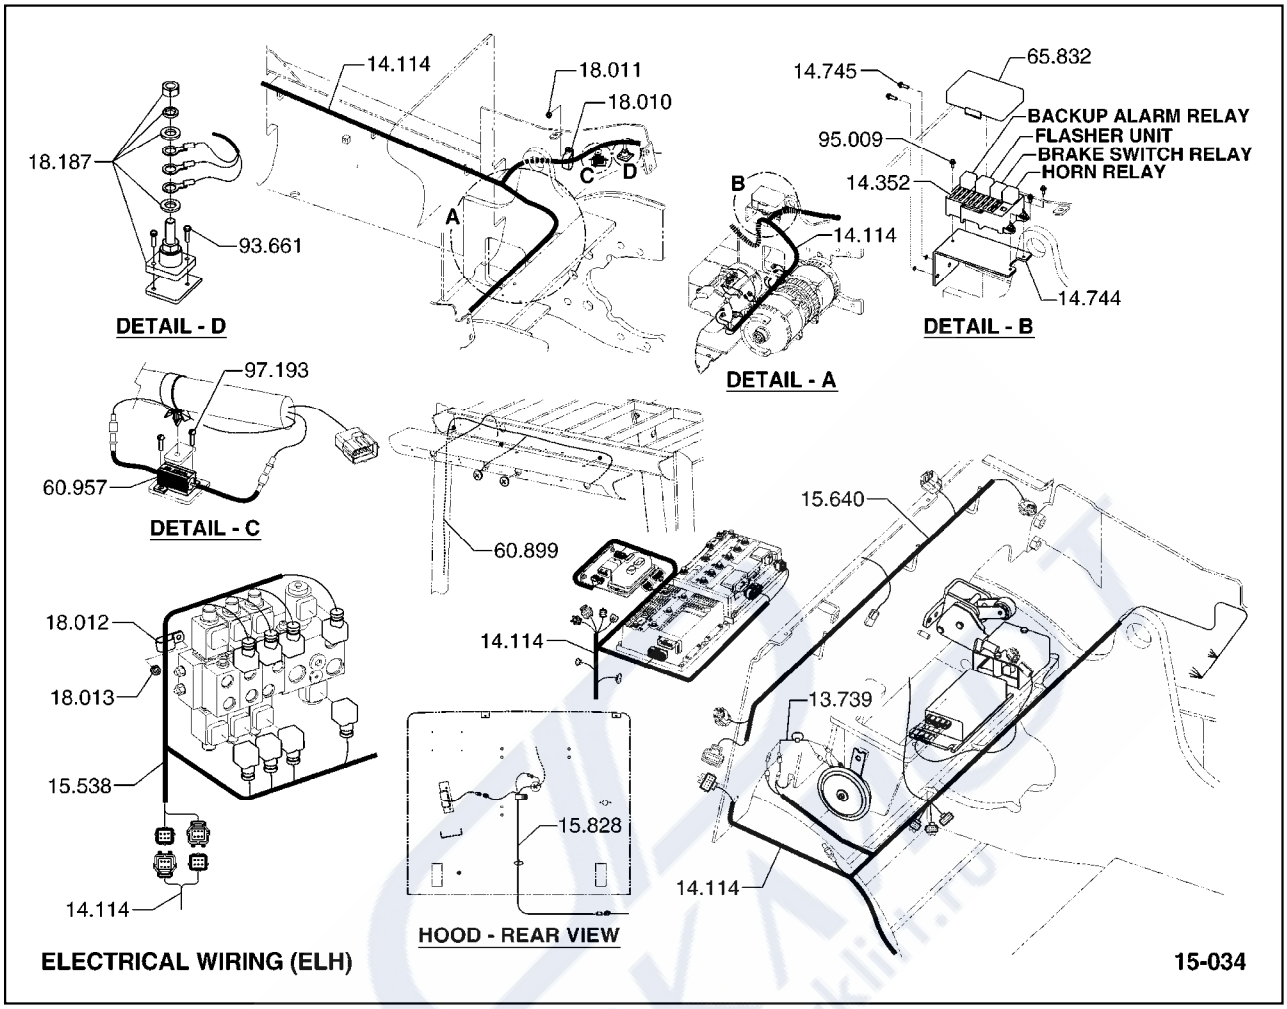

13.739 FILTER, HORN
필터

14.114 HARNESS, MACHINE WIRING
하네스

14.352 FUSE, CONTROL CIRCUIT
퓨즈

14.744 BRACKET, FUSE HOLDER MOUNTING
브라켓

14.745 FASTENER, FUSE HOLDER MOUNTING BRACKET
패스너

15.538 HARNESS, VALVE SWITCH WIRING CONNECTOR
하네스

15.640 WIRING HARNESS, MACHINE COWL
와이어하네스

15.828 WIRING HARNESS, MACHINE HOOD
와이어하네스

18.010 CLIP, HARNESS
클립

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

18.011	FASTENER, HARNESS CLIP 패스너
18.012	CLIP, WIRE HARNESS 클립
18.013	FASTENER, HARNESS CLIP 패스너
18.187	TERMINAL, FUSE 터미널
60.899	WIRING HARNESS, REAR ACCESSORY 와이어하네스
60.957	RESISTOR, WIRING HARNESS 레지스터
65.832	COVER, FUSE BOX 커버
93.661	FASTENER, TERMINAL BLOCK 패스너
95.009	FASTENER, FUSE BOX MOUNTING 패스너
97.193	FASTENER, WIRING HARNESS RESISTOR 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

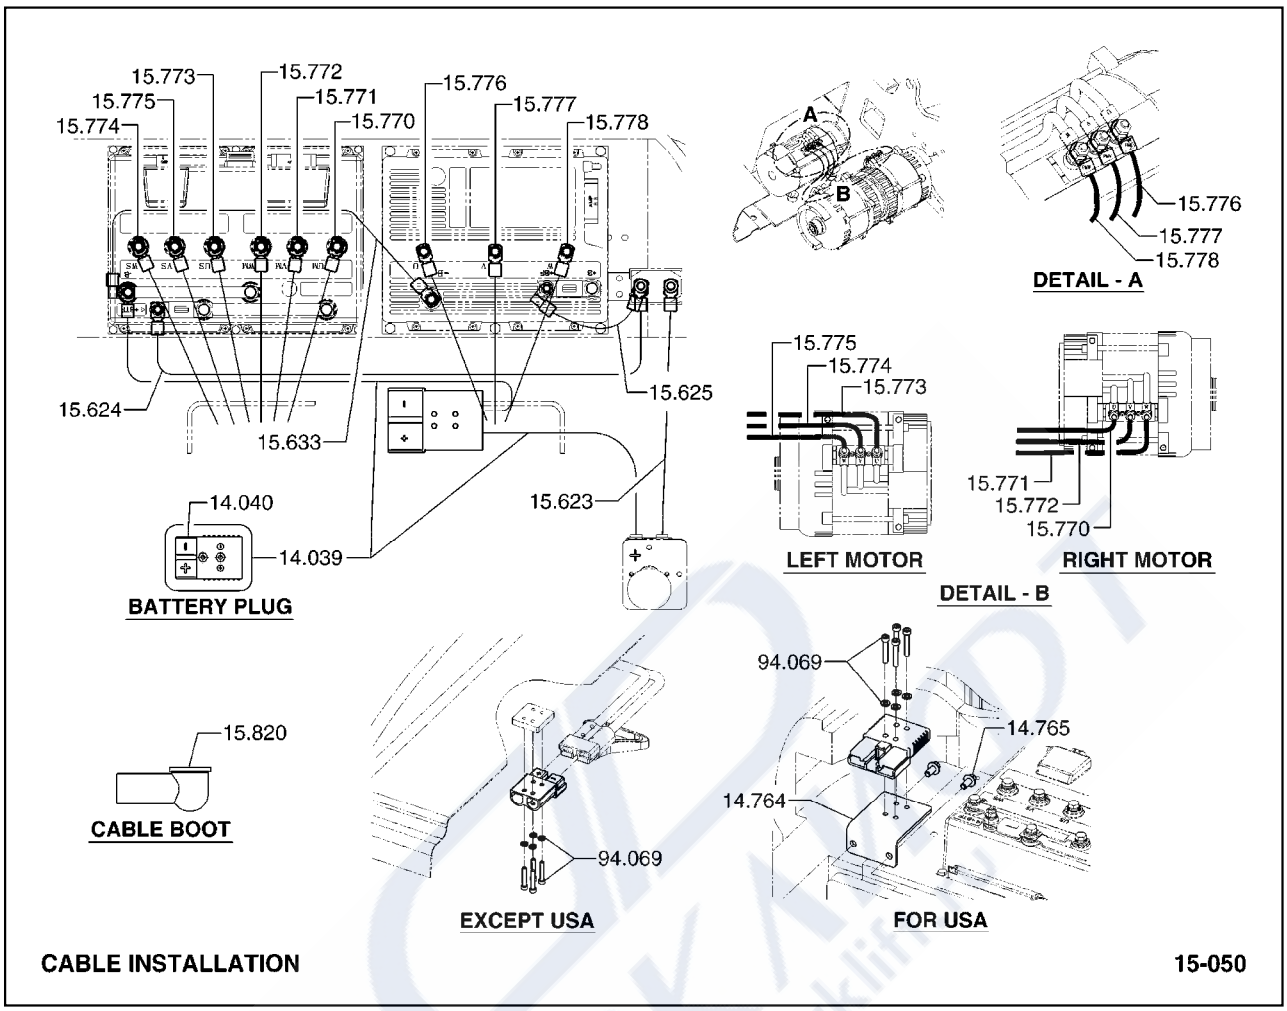

14.039 RECEPTACLE & LEAD ASSEMBLY, BATTERY
리셉터클& 리드

14.040 RECEPTACLE, BATTERY
리셉터클

14.764 BRACKET, BATTERY RECEPTACLE MOUNTING
브라켓

14.765 FASTENER, BATTERY RECEPTACLE MOUNTING BRACKET
패스너

15.623 CABLE, CONTACTOR R+
케이블

15.624 CABLE, CONTACTOR L-
케이블

15.625 CABLE, CONTACTOR L+
케이블

15.633 CABLE, CONTACTOR B-T TO CONTACTOR B-P
케이블

15.770 CABLE, DRIVE MOTOR (TMUR TO TCUR)
케이블

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

15.771 CABLE, DRIVE MOTOR (TMWR TO TCVR)
케이블

15.772 CABLE, DRIVE MOTOR (TMVR TO TCWR)
케이블

15.773 CABLE, DRIVE MOTOR (TMUL TO TCUL)
케이블

15.774 CABLE, DRIVE MOTOR (TMVL TO TCVL)
케이블

15.775 CABLE, DRIVE MOTOR (TMWL TO TCWL)
케이블

15.776 CABLE, PUMP MOTOR (PMU TO PCU)
케이블

15.777 CABLE, PUMP MOTOR (PMV TO PCV)
케이블

15.778 CABLE, PUMP MOTOR (PMW TO PCW)
케이블

15.820 BOOT, CABLE
부트

94.069 FASTENER, BATTERY RECEPTACLE
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

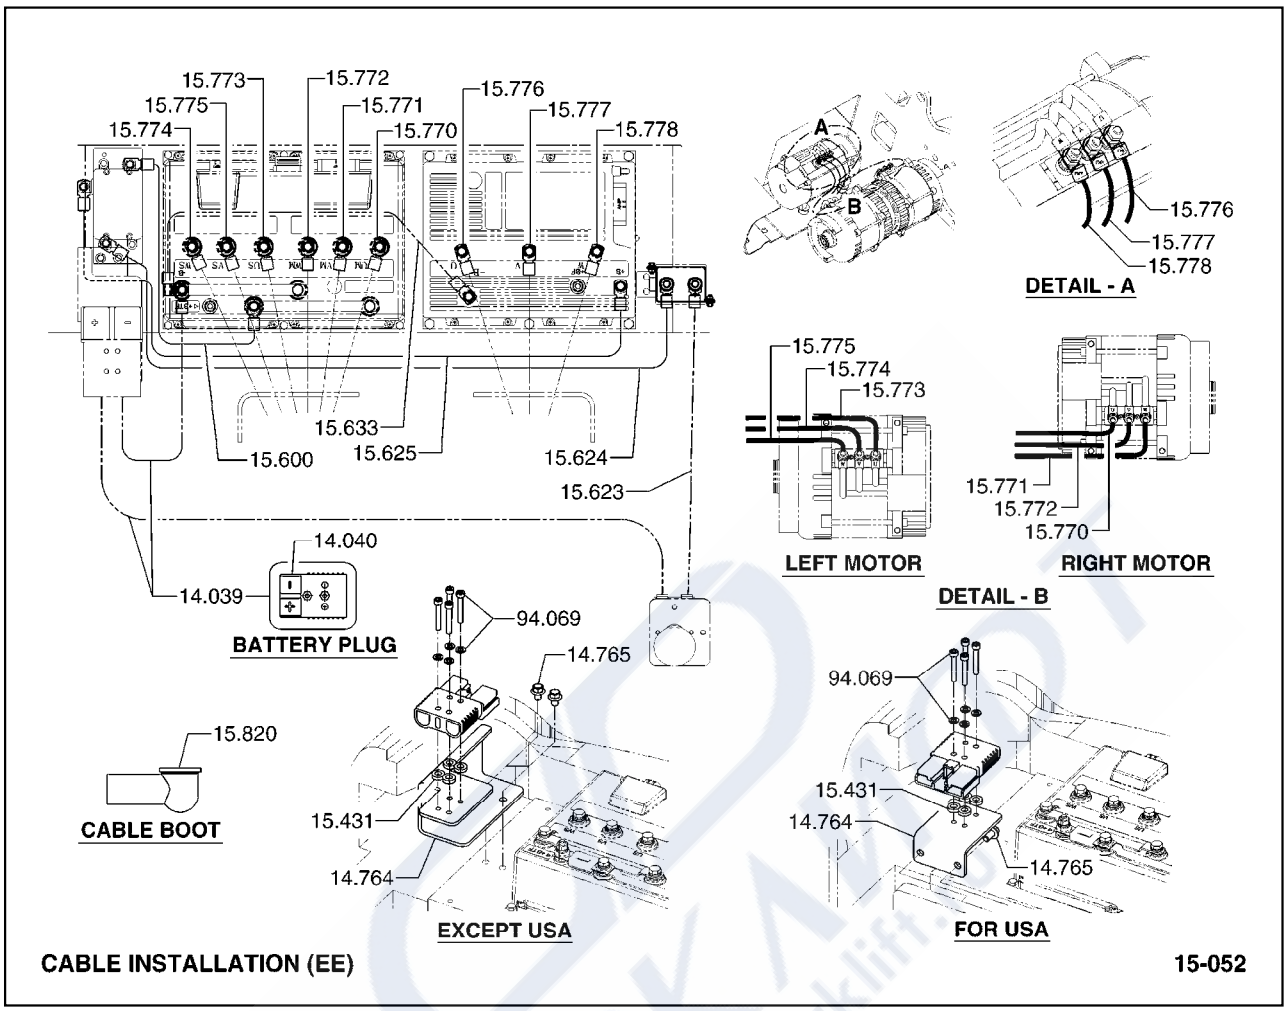

14.039	RECEPTACLE & LEAD ASSEMBLY, BATTERY 리셉터클& 리드
14.040	RECEPTACLE, BATTERY 리셉터클
14.764	BRACKET, BATTERY RECEPTACLE MOUNTING 브라켓
14.765	FASTENER, BATTERY RECEPTACLE MOUNTING BRACKET 패스너
15.431	SPACER, BATTERY RECEPTACLE FASTENER 스페이서
15.600	CABLE, CONTACTOR 케이블
15.623	CABLE, CONTACTOR R+ 케이블
15.624	CABLE, CONTACTOR L- 케이블
15.625	CABLE, CONTACTOR L+ 케이블

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

15.633	CABLE, CONTACTOR B-T TO CONTACTOR B-P 케이블
15.770	CABLE, DRIVE MOTOR (TMUR TO TCUR) 케이블
15.771	CABLE, DRIVE MOTOR (TMWR TO TCVR) 케이블
15.772	CABLE, DRIVE MOTOR (TMVR TO TCWR) 케이블
15.773	CABLE, DRIVE MOTOR (TMUL TO TCUL) 케이블
15.774	CABLE, DRIVE MOTOR (TMVL TO TCVL) 케이블
15.775	CABLE, DRIVE MOTOR (TMWL TO TCWL) 케이블
15.776	CABLE, PUMP MOTOR (PMU TO PCU) 케이블
15.777	CABLE, PUMP MOTOR (PMV TO PCV) 케이블
15.778	CABLE, PUMP MOTOR (PMW TO PCW) 케이블
15.820	BOOT, CABLE 부트
94.069	FASTENER, BATTERY RECEPTACLE 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

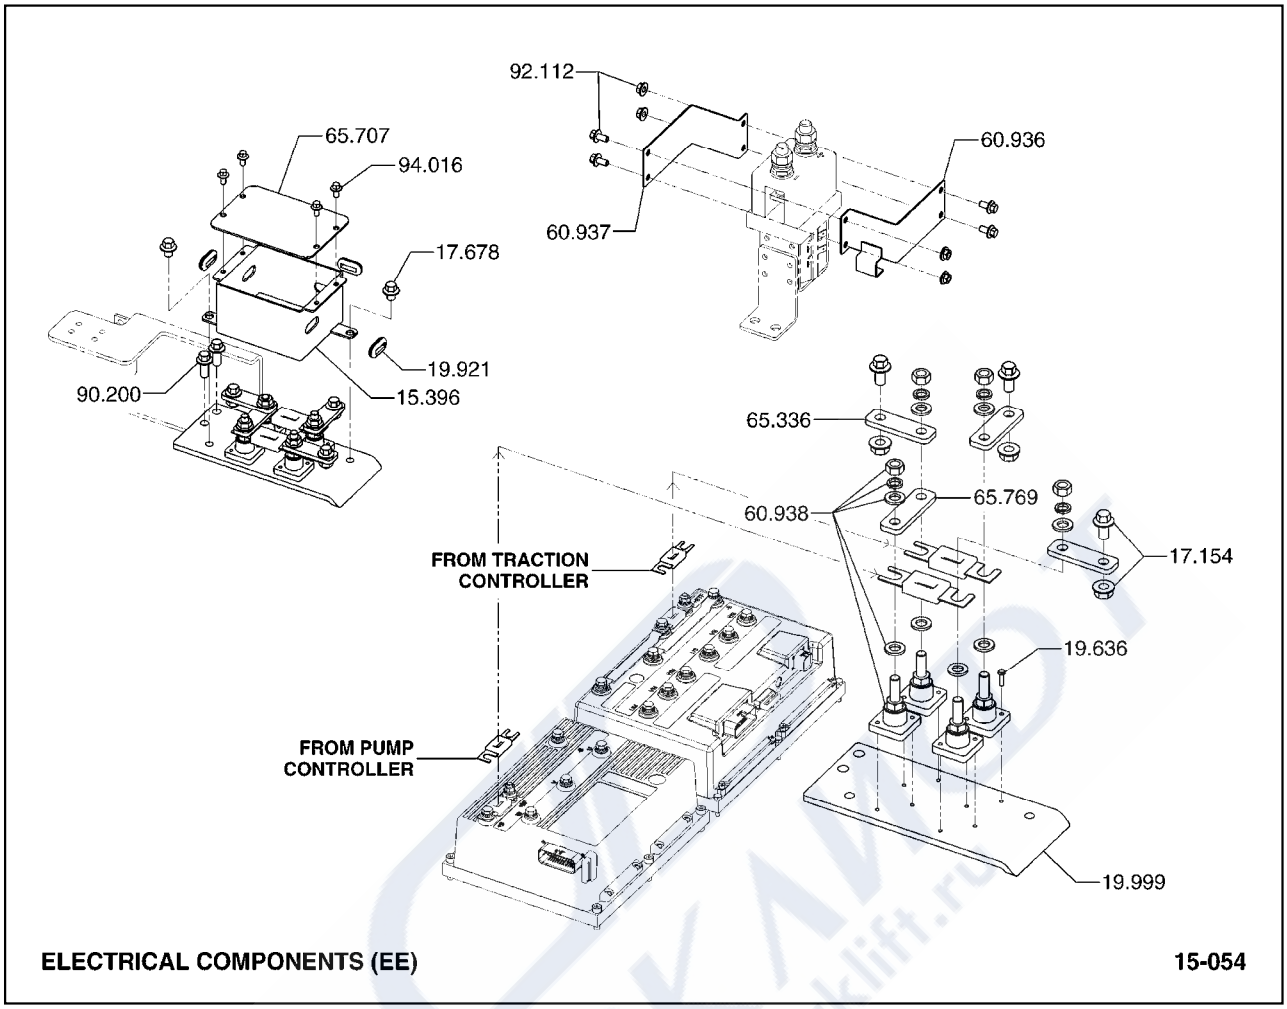

15.396	BOX, FUSE MOUNTING 박스
17.154	FASTENER, FUSE TERMINAL ANGLE BUS 패스너
17.678	FASTENER, FUSE BOX MOUNTING BRACKET 패스너
19.636	FASTENER, CONTACTOR CONTROL TERMINAL 패스너
19.921	GROMMET, FUSE BOX LEADS 그로멧
19.999	BRACKET, CONTACTOR PANEL FUSE HOLDER MOUNTING 브라켓
60.936	BRACKET, CONTACTOR COVERING BODY 브라켓
60.937	BRACKET, CONTACTOR COVERING 브라켓
60.938	TERMINAL, CONTACTOR CONNECTING 터미날

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

65.336	CONDUCTOR, CONTROL PANEL FUSE CONNECTING 컨덕터
65.707	COVER, CONTROL PANEL FUSE BOX 커버
65.769	CONDUCTOR, CONTROL PANEL FUSE CONNECTING 컨덕터
90.200	FASTENER, CONTACTOR PANEL FUSE HOLDER MTG BRKT 패스너
92.112	FASTENER, CONTACTOR BOX 패스너
94.016	FASTENER, CONTROL PANEL FUSE BOX COVER 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

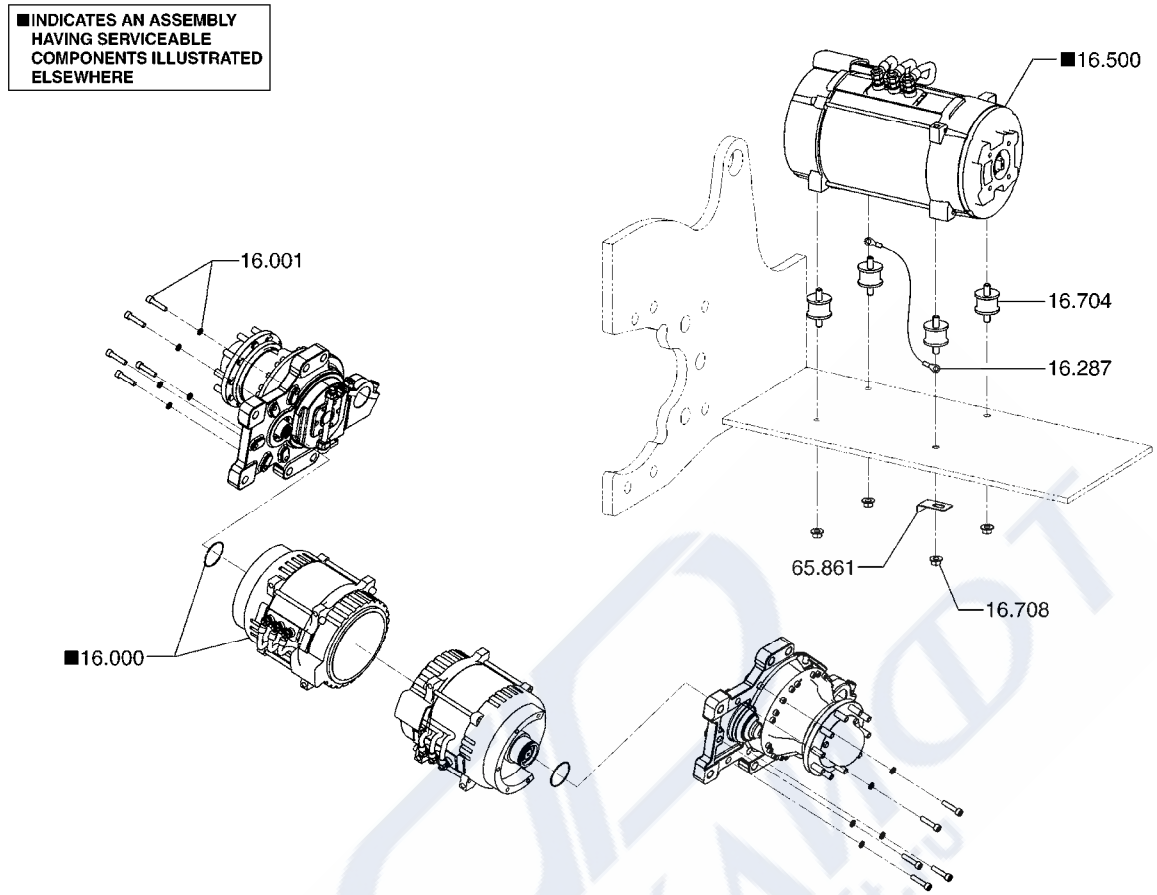

16.000	MOTOR ASSEMBLY, DRIVE 모터
16.001	FASTENER, DRIVE MOTOR 패스너
16.287	WIRE, LEAD GROUND FROM MOTOR 와이어
16.500	MOTOR ASSEMBLY, PUMP 모터
16.704	DAMPENER, PUMP MOTOR VIBRATION 댐프너
16.708	FASTENER, PUMP MOTOR VIBRATION DAMPENER 패스너
65.861	BRACKET, PUMP CONTROL PANEL CABLE CLAMP 브라켓

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

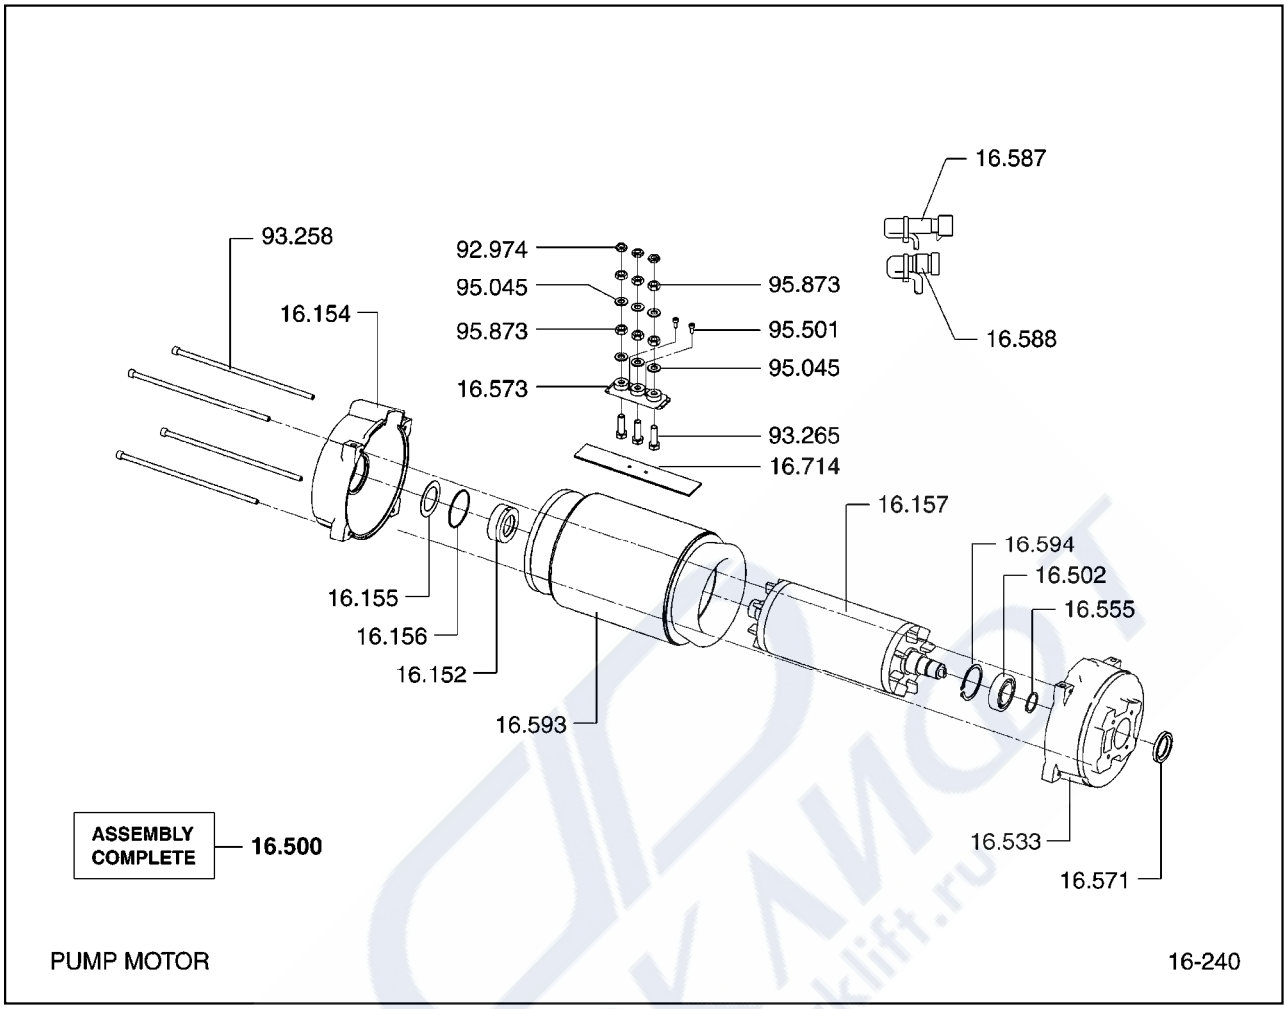

16.152 SENSOR BEARING, PUMP MOTOR ROTOR
센서베어링

16.154 COVER, PUMP MOTOR ROTOR END
커버

16.155 WASHER, PUMP MOTOR ROTOR BEARING
와셔

16.156 RING, PUMP MOTOR ROTOR BEARING
링

16.157 ROTOR, PUMP MOTOR
로터

16.500 MOTOR ASSEMBLY, PUMP
모터

16.502 BEARING, PUMP MOTOR DRIVE END
베어링

16.533 FRAME, PUMP MOTOR DRIVE END
프레임

16.555 RETAINER, PUMP MOTOR DRIVE END BEARING
리테이너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

16.571	SEAL, HYDRAULIC PUMP MOTOR ARMATURE SHAFT DRIVE EN 씰
16.573	TERMINAL BLOCK, HYDRAULIC PUMP MOTOR 터미널블록
16.587	SENSOR, PUMP MOTOR BRUSH WEAR INDICATOR 센서
16.588	SENSOR, PUMP MOTOR TEMPERATURE WARNING INDICATOR 센서
16.593	STATOR ASSY, HYDRAULIC-PUMP MOTOR 스테이터
16.594	RETAINER, HYDRAULIC PUMP MOTOR DRIVE END FRAME 리테이너
16.714	SPACER, PUMP MOTOR MOUNTING 스페이서
92.974	NUT, HYDRAULIC PUMP MOTOR RETAINER FASTENER 너트
93.258	FASTENER, PUMP MOTOR DRIVE END FRAME COVER 패스너
93.265	FASTENER, HYDRAULIC PUMP MOTOR TERMINAL 패스너
95.045	WASHER, HYDRAULIC PUMP MOTOR TERMINAL FASTENER 와셔
95.501	FASTENER, PUMP MOTOR TERMINAL BLOCK CONNECTOR 패스너
95.873	NUT, HYDRAULIC PUMP MOTOR TERMINAL CLAMP FASTENER 너트

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

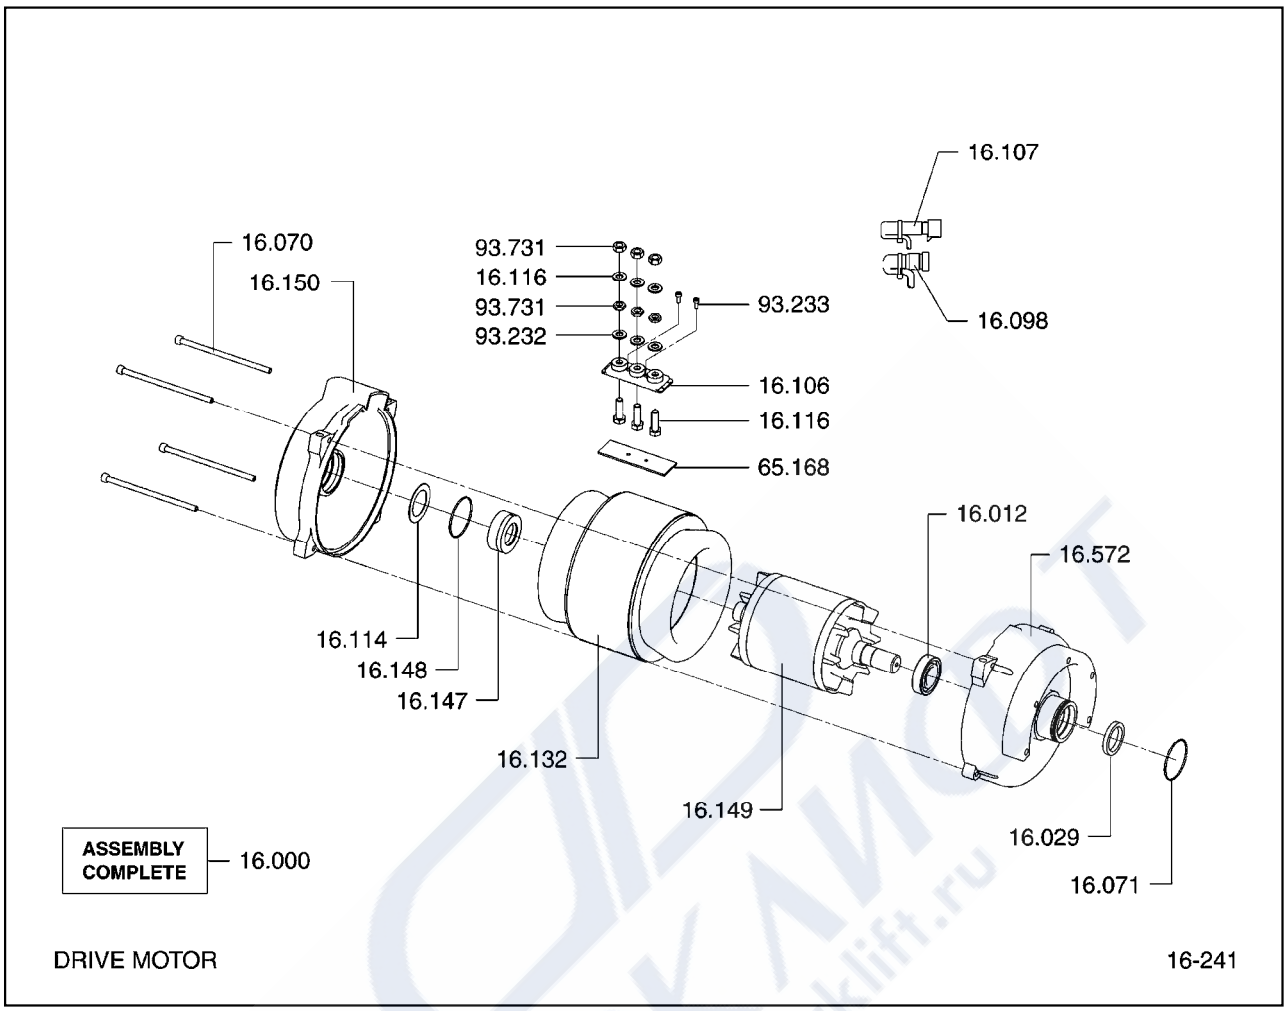

16.000 MOTOR ASSEMBLY, DRIVE
모터

16.012 BEARING, DRIVE MOTOR END
베어링

16.029 SEAL, DRIVE MOTOR ARMATURE SHAFT DRIVE END
씰

16.070 FASTENER, DRIVE MOTOR_LIFT LUG PLUG
패스너

16.071 SEAL, DRIVE MOTOR TO AXLE
씰

16.098 CONNECTOR, DRIVE MOTOR BRUSH-WEAR INDICATOR
센서

16.106 TERMINAL BLOCK, DRIVE MOTOR
터미널블록

16.107 SENSOR, DRIVE MOTOR TEMPERATURE WARNING INDICATOR
센서

16.114 WASHER, DRIVE MOTOR DRIVE END THRUST
와셔

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

16.116	FASTENER, DRIVE MOTOR TERMINAL 패스너
16.132	YOKE, STATOR 요크
16.147	SENSOR BEARING, DRIVE MOTOR ROTOR 센서베어링
16.148	RING, DRIVE MOTOR ROTOR BEARING 링
16.149	ROTOR, DRIVE MOTOR 로터
16.150	COVER, DRIVE MOTOR ROTOR END 커버
16.572	COVER, HYDRAULIC PUMP MOTOR DRIVE END FRAME 커버
65.168	BASE, DRIVE MOTOR FIELD CONTACTOR 베이스
93.232	WASHER, DRIVE MOTOR TERMINAL BLOCK FASTENER 와셔
93.233	FASTENER, DRIVE MOTOR TERMINAL 패스너
93.731	NUT, DRIVE MOTOR FASTENER 너트

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

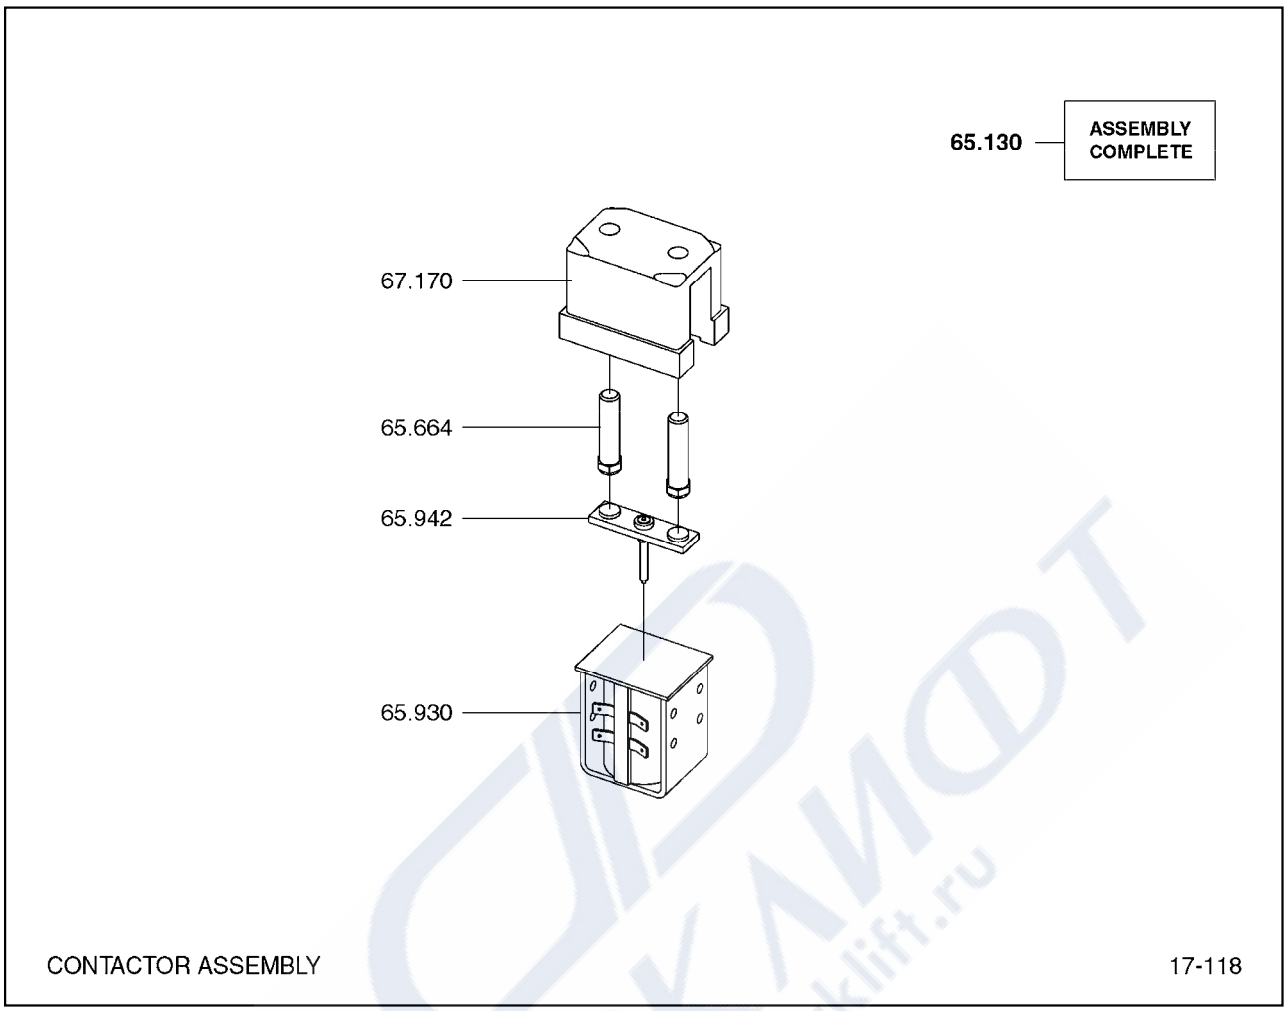

65.130	CONTACTOR ASSEMBLY, LINE 컨택터
65.664	CONDUCTOR, CONTACTOR STATIONARY CONTACT 컨덕터
65.930	ASSEMBLED COIL & MAGNET FRAME, LINE CONTACTOR 코일& 마그넷
65.942	CONTACT SET, LINE CONTACTOR 컨택트세트
67.170	SUPPORT,LINE CONTACTOR STATIONARY CONTACT 서포트

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

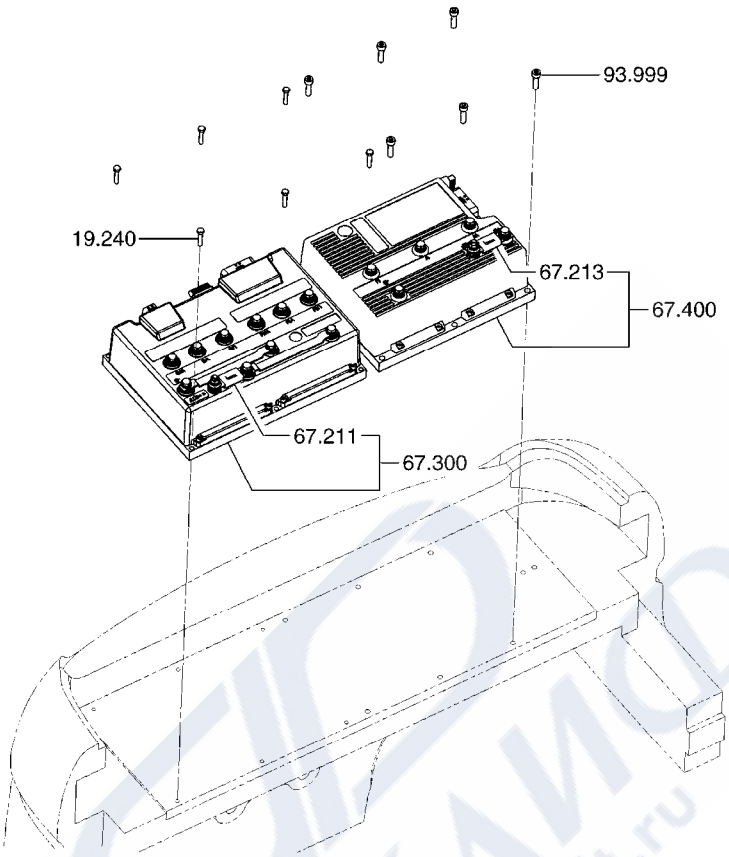

CONTROLLER MOUNTING **19-000**

19.240	FASTENER, CONTROL PANEL MOUNTING 패스너
67.211	FUSE, TRACTION CONTROLLER 퓨즈
67.213	FUSE, PUMP CONTROLLER 퓨즈
67.300	CONTROLLER, TRACTION 컨트롤러
67.400	CONTROLLER, PUMP 컨트롤러
93.999	FASTENER, CONTROL PANEL MOUNTING 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

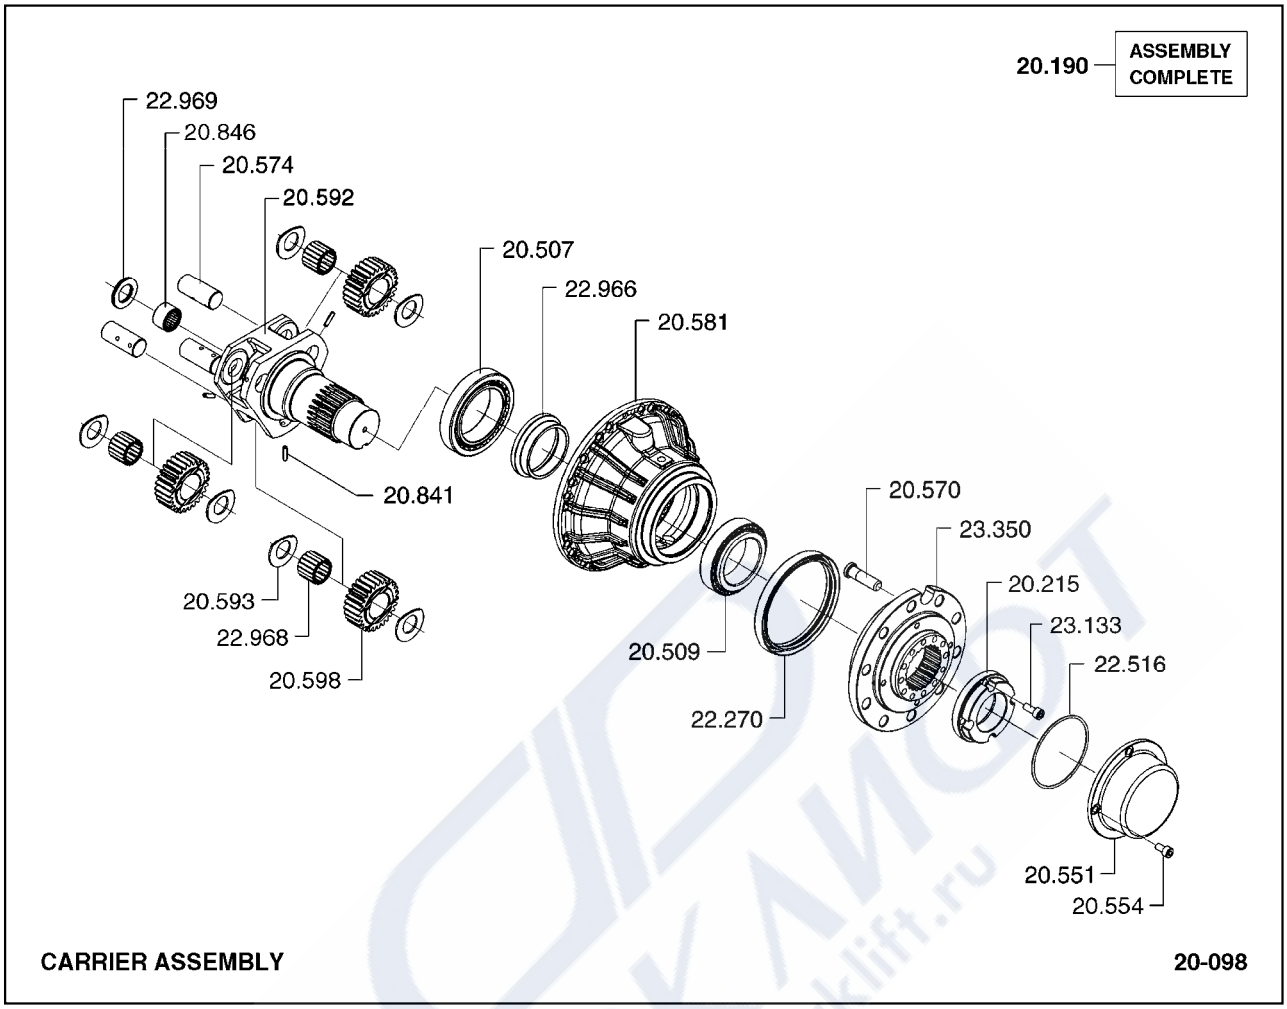

20.190	WHEEL ASSY, DRIVE AXLE 휠
20.215	RETAINER, DIFFERENTIAL PINION OIL SEAL 리테이너
20.507	BEARING, INTERNAL GEAR HUB PINION SHAFT - OUTBOARD 베어링
20.509	BEARING, INTERNAL GEAR HUB PINION SHAFT - INBOARD 베어링
20.551	CAP, DRIVE AXLE HUB 캡
20.554	FASTENER, DRIVE AXLE HUB CAP 패스너
20.570	FASTENER, DRIVE WHEEL MOUNTING 패스너
20.574	SHAFT, DRIVE AXLE PLANET PINION 샤프트
20.581	HUB ASSEMBLY, DRIVE AXLE 허브

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

20.592	PLANET, DRIVE AXLE 플래닛
20.593	WASHER, PLANET PINION GEAR THRUST 와셔
20.598	GEAR, DRIVE AXLE PLANET PINION 기어
20.841	LOCATOR, DRIVE AXLE PLANET 로케이터
20.846	BEARING, DRIVE AXLE PLANET PINION GEAR 베어링
22.270	SEAL, DRIVE AXLE END HOUSING 씰
22.516	SEAL, BRAKE DISC HOUSING TO AXLE END HOUSING 씰
22.966	SPACER, AXLE END 스페이서
22.968	BEARING, PLANTEARY GEAR ASSEMBLY 베어링
22.969	THRUST WASHER, PLANTEARY GEAR ASSEMBLY 스러스트와셔
23.133	FASTENER, BRAKE LOCK UNIT ATTACHING 패스너
23.350	FLANGE & DRUM ASSEMBLY 플랜지& 드럼

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

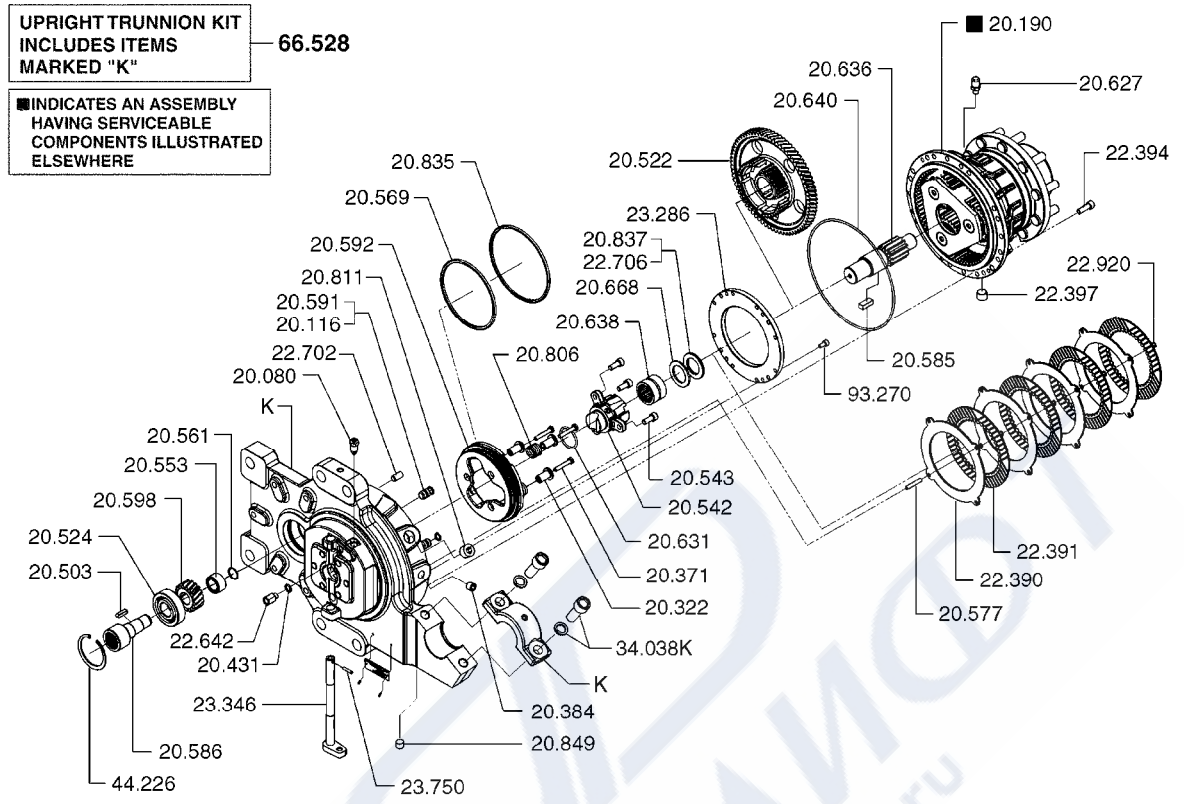

20.080	BREATHER, DRIVE UNIT 브리더	20.561	SNAP RING, DRIVE AXLE SUN GEAR 스냅링
20.116	PIN, DRIVE AXLE HOUSING & DIFF ALIGNMENT 핀	20.569	RETAINER, DRIVE AXLE INTER GEAR 리테이너
20.190	WHEEL ASSY, DRIVE AXLE 휠	20.577	FASTENER, DRIVE AXLE PLANET 패스너
20.322	SPACER, DRIVE AXLE SHAFT BEARING 스페이서	20.585	KEY, HUB MOUNTING 키
20.371	FASTENER, DRIVE AXLE PLANET 패스너	20.586	SHAFT, DRIVE AXLE 샤프트
20.384	PLUG, DRIVE AXLE HOUSING 플러그	20.591	SEAL, AXLE HOUSING FASTENER 씰
20.431	SEAL, DRIVE AXLE INLET FITTING 씰	20.592	PLANET, DRIVE AXLE 플래닛
20.500	AXLE END ASSEMBLY, DRIVE RH 액슬엔드	20.598	GEAR, DRIVE AXLE PLANET PINION 기어
20.501	AXLE END ASSEMBLY, DRIVE LH 액슬엔드	20.627	VENT, DIFFERENTIAL & AXLE 벤트
20.503	KEY, DRIVE AXLE SUN GEAR THRUST WASHER 키	20.631	SEAL, DRIVE AXLE PLANET CARRIER 씰
20.522	GEAR, DRIVE AXLE SHAFT 기어	20.636	SHAFT, DRIVE AXLE RING GEAR 샤프트
20.524	BEARING, DRIVE AXLE INTERMEDIATE GEAR SHAFT 베어링	20.638	BEARING, RING GEAR SHAFT OUTBOARD 베어링
20.542	BEARING, DRIVE AXLE SHAFT 베어링	20.640	SEAL, RING GEAR SHAFT BEARING HOUSING 씰
20.543	FASTENER, DRIVE AXLE SHAFT BEARING 패스너	20.668	SPACER, DRIVE AXLE SHAFT INBOARD BEARING 스페이서
20.553	BEARING, DRIVE AXLE SHAFT (INBOARD) 베어링	20.806	SPRING, DRIVE AXLE LUBRICATING PUMP PISTON 스프링

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

20.811	PLUG, DRIVE AXLE HOUSING 플러그
20.835	RETAINER, DRIVE AXLE RING GEAR 리테이너
20.837	BEARING, DRIVE AXLE RING GEAR SHAFT 베어링
20.849	PLUG, DRIVE AXLE HOUSING 플러그
22.390	DISC, BRAKE - INNER 디스크
22.391	DISC, BRAKE - OUTER 디스크
22.394	FASTENER, BRAKE DISC HUB 패스너
22.397	PLUG, BRAKE DISC HOUSING 플러그
22.642	FITTING, DRIVE AXLE INLET 피팅
22.702	DOWEL PIN, BRAKE DISC PISTON SLEEVE 다월핀
22.706	WASHER, DRIVE AXLE SHAFT BEARING 와셔
22.920	SPRING, BRAKE DISC PISTON PLATE FASTENER 스프링
23.286	PLATE, BRAKE BACKING 플레이트
23.346	ARM, PARKING BRAKE 암
23.750	PIN, BRAKE ACTUATING LEVER PIVOT 핀
34.038	FASTENER, UPRIGHT TRUNNION CAP 패스너
44.226	RING, DRIVE SHAFT BEARING 링
66.528	KIT, UPRIGHT TRUNNION *
93.270	FASTENER, RING GEAR SHAFT BEARING HOUSING 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

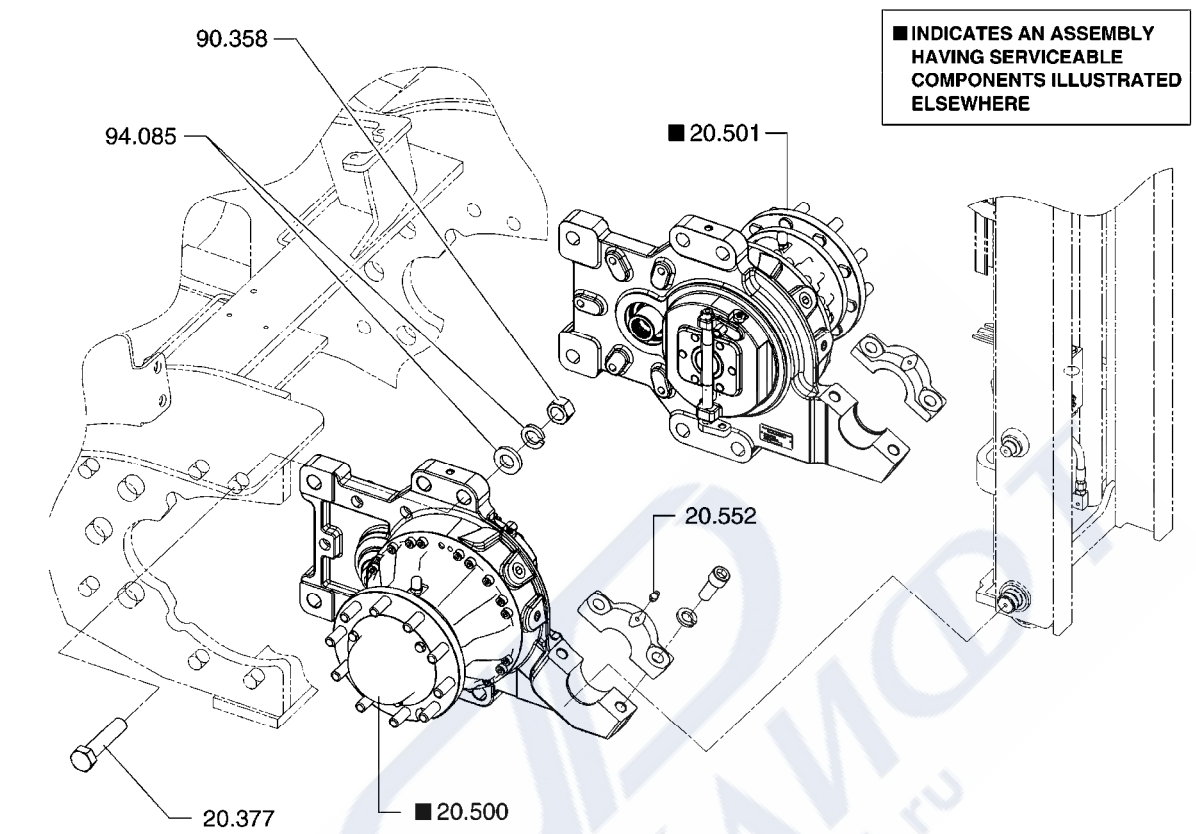

20.377	FASTENER, DRIVE AXLE TO FRAME 패스너
20.500	AXLE END ASSEMBLY, DRIVE RH 액슬엔드
20.501	AXLE END ASSEMBLY, DRIVE LH 액슬엔드
34.039	FITTING-LUB, UPRIGHT TRUNNION 피팅

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

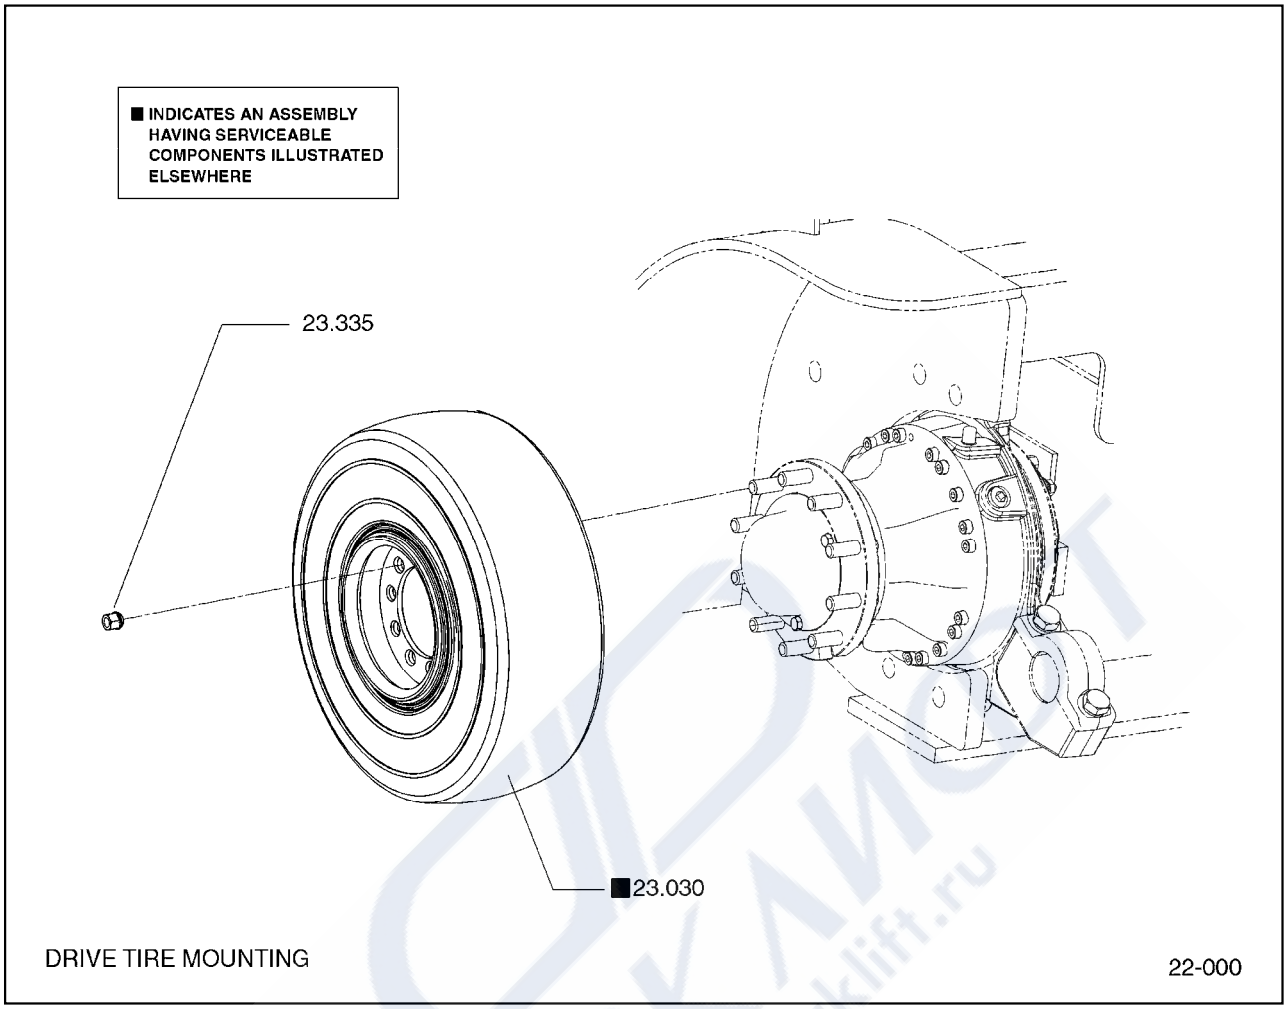

23.030 DRIVE WHEEL AND TIRE ASSEMBLY
드라이브휠& 타이어

23.335 FASTENER, DRIVE WHEEL
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

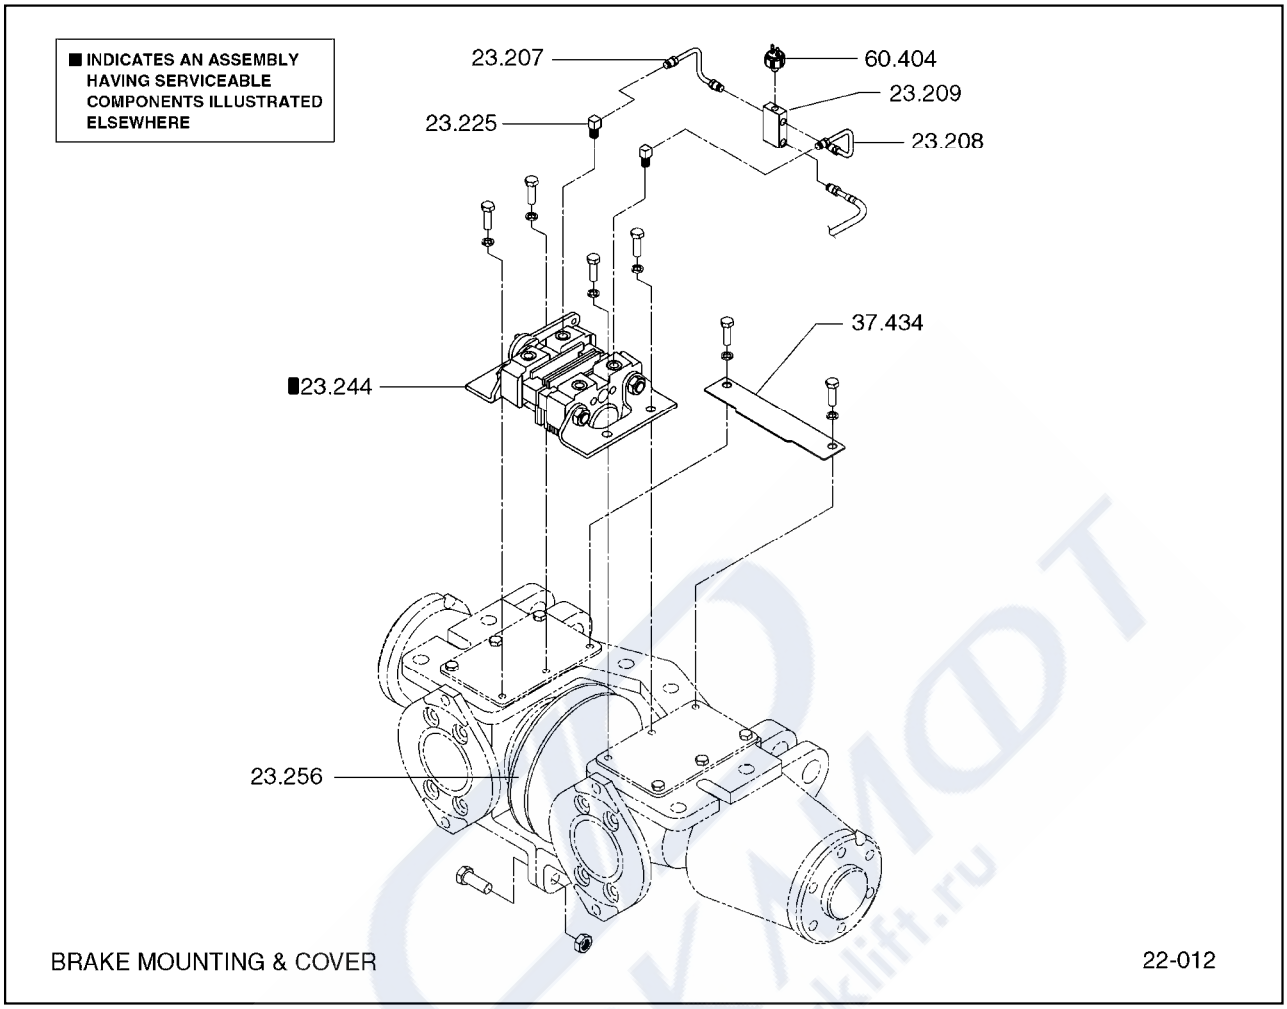

02.285	STOP, ACCELERATOR PEDAL LINKAGE 스톱	22.758	SEAL, UNITROL PEDAL PAD STOP PLATE 씰
02.317	ROLLER, ACCELERATOR PEDAL 롤러	22.759	FASTENER, UNITROL PEDAL PAD STOP PLATE 패스너
02.465	FASTENER, ACCELERATOR CONTROL LINKAGE 패스너	22.760	HARNESS, UNITROL PEDAL SWITCH WIRING 하네스
03.465	PAD, ACCELERATOR PEDAL 패드	22.761	NUT, UNITROL PEDAL PAD TENSION SPRING RETAINER 너트
03.761	FASTENER, THROTTLE POSITIONER BRACKET 패스너	22.763	RETAINER, UNITROL PEDAL PAD TENSION SPRING 리테이너
03.903	BRACKET, ACCELERATOR PEDAL ROLLER 브라켓	22.764	GUIDE, UNITROL PEDAL PAD TENSION SPRING 가이드
03.904	FASTENER, ACCELERATOR PEDAL ROLLER BRACKET 패스너	22.765	SPRING, UNITROL PEDAL PAD TENSION 스프링
13.400	CONTROL ASSEMBLY, ACCELERATING 컨트롤	22.768	PIVOT, UNITROL PEDAL 피봇
13.448	FASTENER, ACCELERATING CONTROL ASSEMBLY 패스너	22.769	BEARING, UNITROL PEDAL BRACKET 베어링
13.572	BRACKET, ACCEL CONTROL ASSEMBLY MOUNTING 브라켓	22.770	BRACKET, UNITROL PEDAL 브라켓
13.573	FASTENER, ACCELERATOR CONTROL ASSY MOUNTING BRAC 패스너	22.771	SPRING, UNITROL PEDAL RETURN 스프링
22.754	PAD, UNITROL PEDAL 패드	22.772	BRACKET, UNITROL PEDAL MOUNTING 브라켓
22.755	SHAFT, UNITROL PEDAL PAD PIVOT 샤프트	22.773	WASHER, UNITROL PEDAL PIVOT FASTENER 와셔
22.756	FASTENER, UNITROL PEDAL PAD PIVOT 패스너	22.774	FASTENER, UNITROL PEDAL PIVOT 패스너
22.757	PLATE, UNITROL PEDAL PAD STOP 플레이트	22.881	WASHER, UNITROL PEDAL PAD STOP PLATE FASTENER 와셔

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

22.882 FASTENER, UNITROL PEDAL SWITCH
패스너

22.883 CONNECTOR, UNITROL PEDAL SWITCH WIRING HARNESS
커넥터

22.884 LOCK, UNITROL PEDAL SWITCH WIRING HARNESS CONNEC
로크

22.885 GROMMET, UNITROL PEDAL WIRING HARNESS
그로멧

22.886 RETAINER, UNITROL PEDAL RETURN SPRING
리테이너

22.888 FASTENER, UNITROL PEDAL MOUNTING BRACKET
패스너

22.889 BUMPER, UNITROL PEDAL PAD
범퍼

22.916 FASTENER, UNITROL SWITCH WIRE RETAINER
패스너

37.902 MAT, FLOORPLATE
매트

39.475 PLATE, FRONT FLOOR
플레이트

40.211 DECAL, WARNING UNITROL
데칼

60.596 HARNESS, UNITROL ASEMBLY TO TRUCK HARNESS
하네스

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

■INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

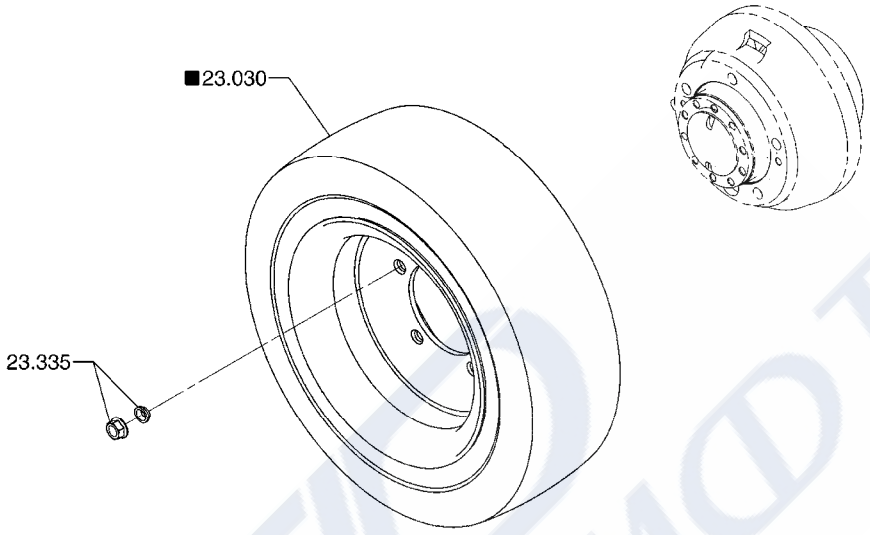

DRIVE WHEEL & TIRE MOUNTING **22-013**

23.030 DRIVE WHEEL AND TIRE ASSEMBLY
드라이브휠& 타이어

23.335 FASTENER, DRIVE WHEEL
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

■INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

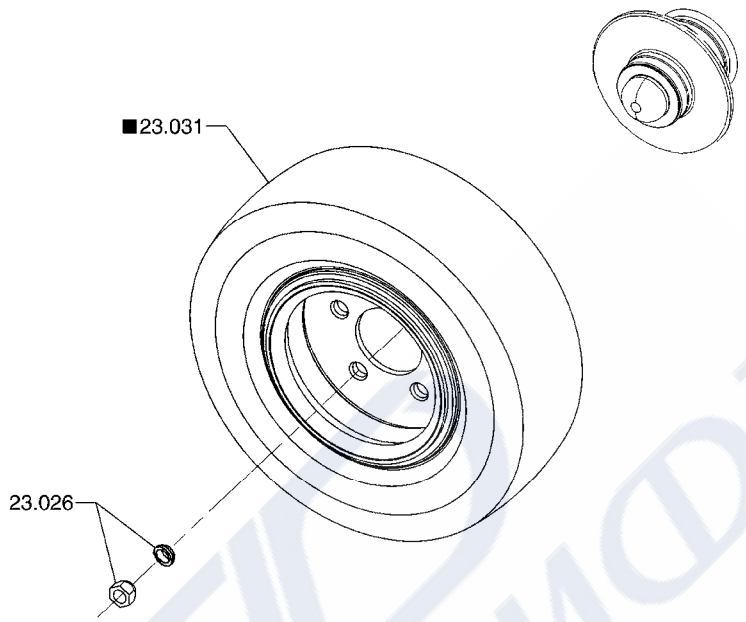

STEER WHEEL & TIRE MOUNTING **22-014**

23.026 FASTENER, STEER WHEEL
패스너

23.031 STEER WHEEL AND TIRE ASSEMBLY
스티어휠& 타이어

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

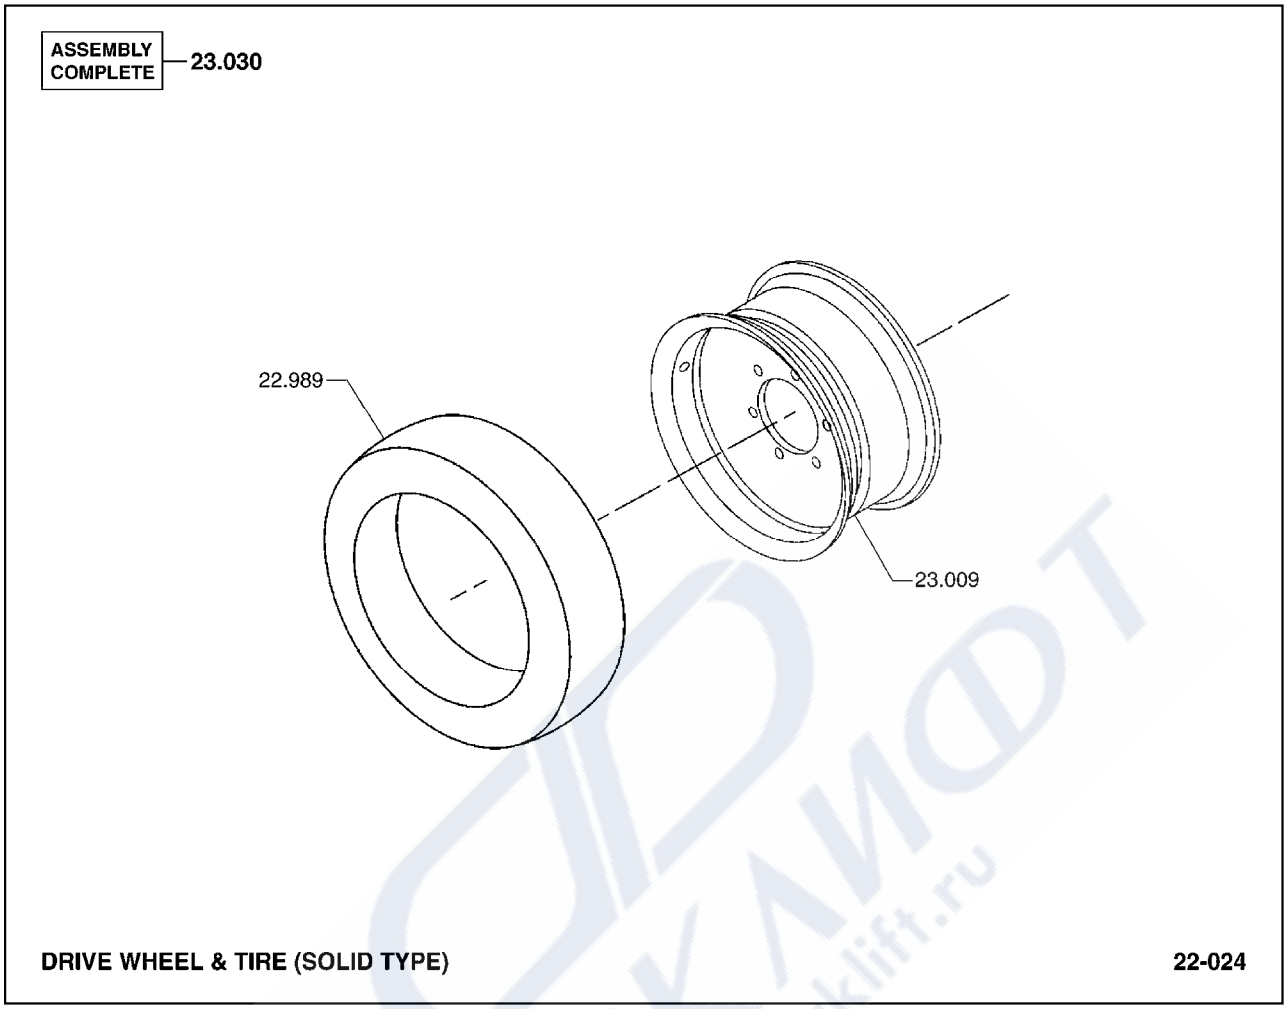

22.989	TIRE ASSEMBLY, DRIVE 타이어
23.009	RIM ASSEMBLY, DRIVE WHEEL 림
23.030	DRIVE WHEEL AND TIRE ASSEMBLY 드라이브휠& 타이어

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

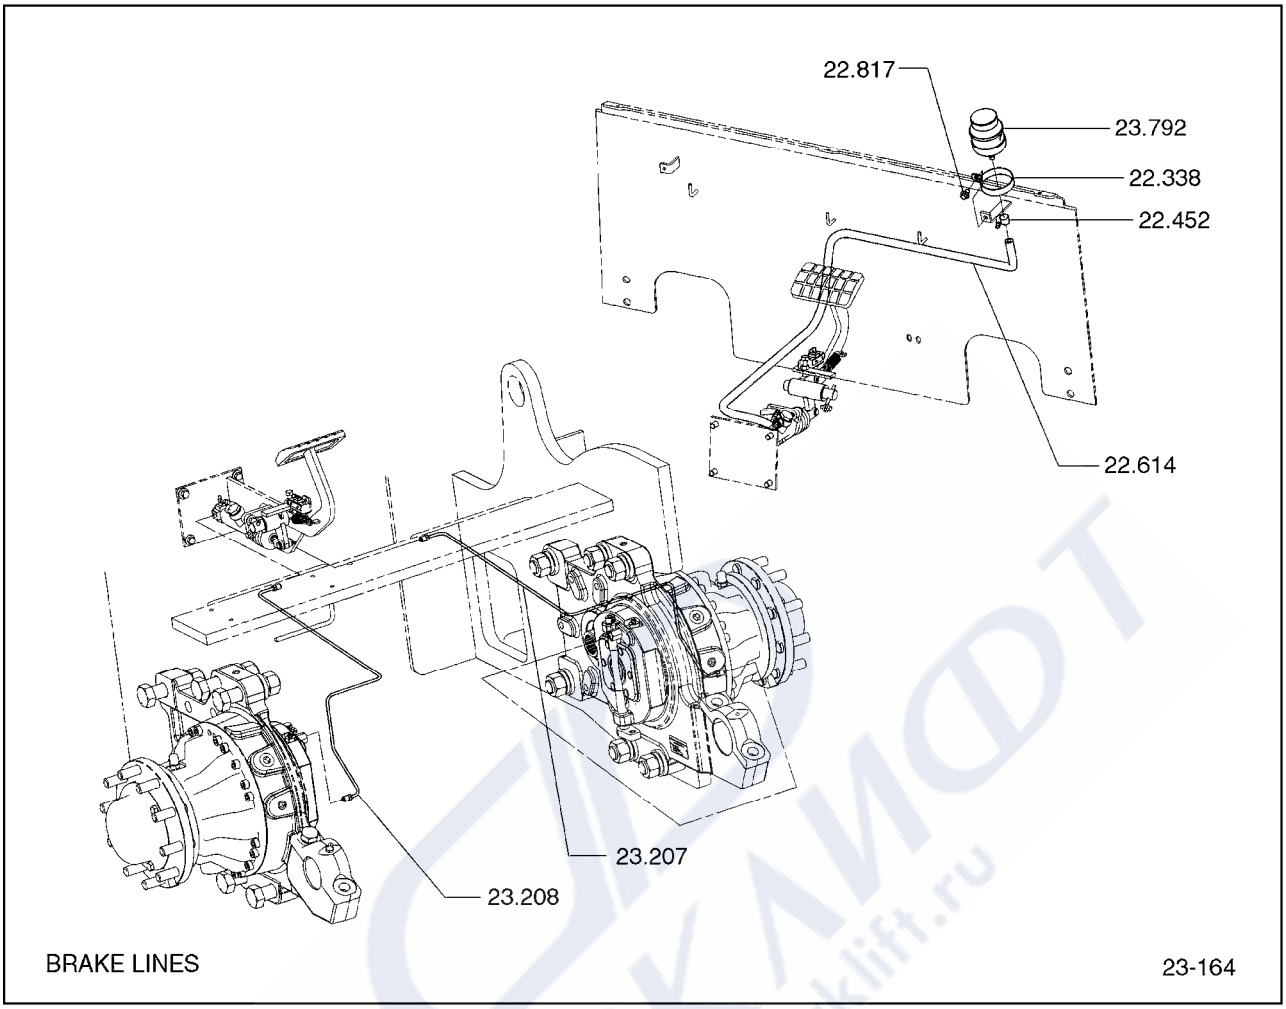

22.338 CLAMP, BRAKE FLUID RESERVOIR
클램프

22.452 CLAMP, BRAKE MASTER CYLINDER FILLER LINE
클램프

22.614 LINE, STABILIZER WHEEL BRAKE
라인

22.817 FASTENER, BRAKE PIVOT RETAINER
패스너

23.207 LINE, LH DRIVE WHEEL BRAKE CYLINDER TO TEE
라인

23.208 LINE, RH DRIVE WHEEL BRAKE CYLINDER TO TEE
라인

23.792 RESERVOIR, BRAKE FLUID
리저버

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

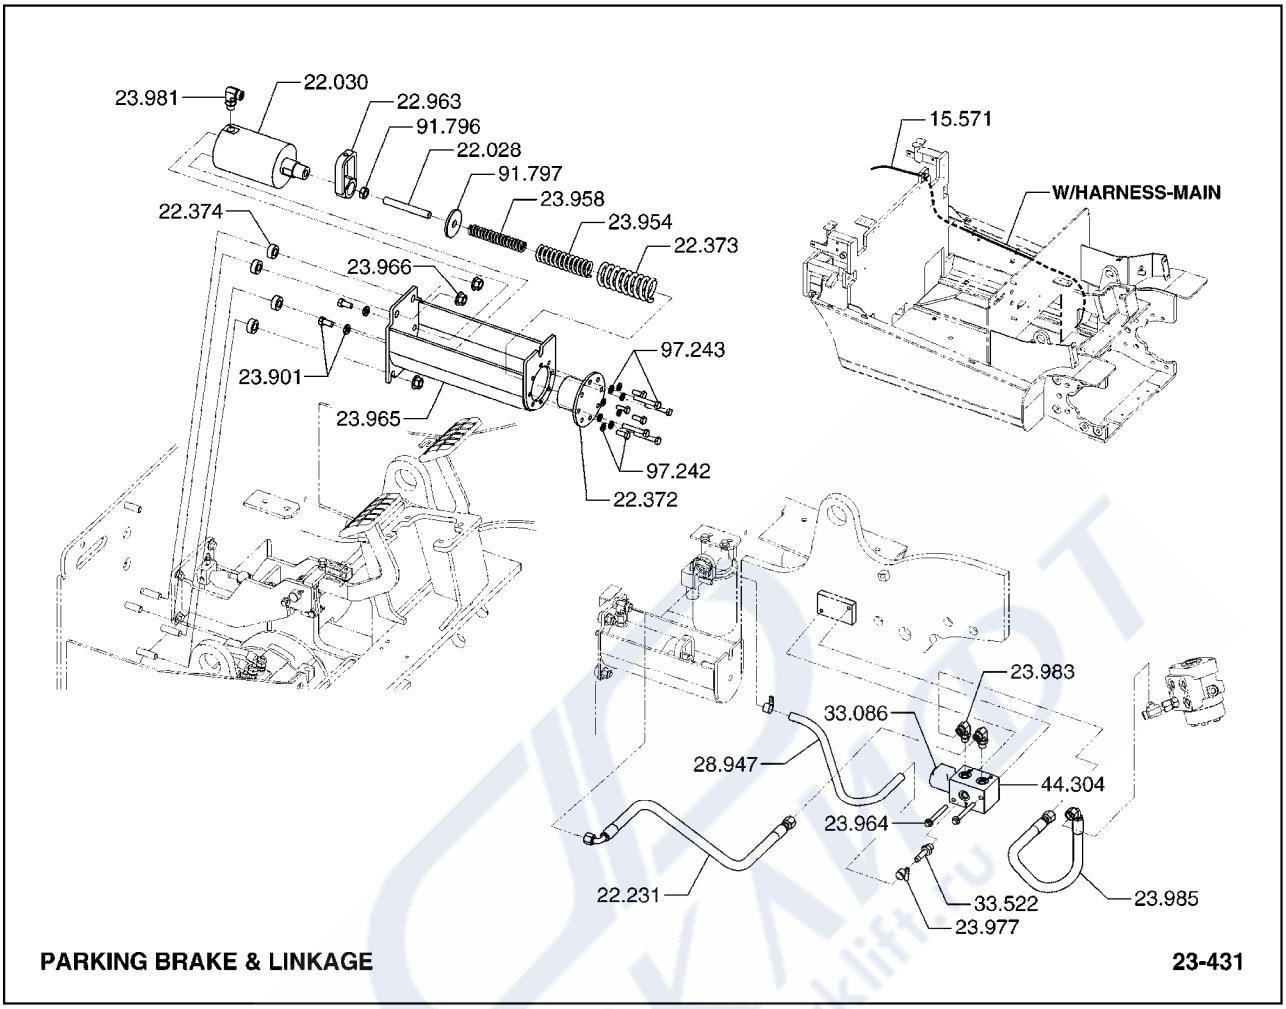

15.571 WIRE HARNESS, PARKING BRAKE SWITCH
와이어하네스

22.028 ROD END, PARKING BRAKE RELEASE CYLINDER
로드엔드

22.030 CYLINDER ASSEMBLY, PARKING BRAKE RELEASE
실린더

22.231 LINE, PARKING BRAKE RELEASE VALVE PRESSURE
라인

22.372 COVER, PARKING BRAKE RELEASE CYLINDER GLAND
커버

22.373 SPRING, PARKING BRAKE RELEASE CYLINDER
스프링

22.374 SPACER, PARKING BRAKE RELEASE CYLINDER
스페이서

22.963 PLUG, MASTER CYLINDER
플러그

23.901 FASTENER, SEAT BRAKE ACTUATING CYLINDER
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

23.954	SPRING, P/B RELEASE VALVE SPOOL RETURN 스프링
23.958	SPRING, P/B RELEASE CYLINDER RETURN 스프링
23.964	FASTENER, P/B RELEASE VALVE ACTUATOR 패스너
23.965	BRACKET, PARKING BRAKE RELEASE CYL MTG 브라켓
23.966	FASTENER, P/B RELEASE CYL MOUNTING BRACKET 패스너
23.977	CLAMP P/B REL VALVE SUMP RETURN HOSE 클램프
23.981	FITTING, P/B RELEASE VALVE INLET PORT 피팅
23.983	FITTING, P/B RELEASE VALVE PRESSURE LINE 피팅
23.985	LINE, P/B RELEASE VALVE PRESSURE 라인
28.947	LINE, AUXILIARY VALVE SUMP RETURN 라인
33.086	VALVE, SOLENOID 밸브
33.522	FITTING, SOLENOID VALVE OPTIONAL OUTLET 피팅
44.304	HOUSING, SOLENOID VALVE 하우징
91.796	NUT, PARKING BRAKE RELEASE CYLINDER ROD END 너트
91.797	WASHER, PARKING BRAKE RELEASE CYLINDER ROD END FAS 와셔
97.242	FASTENER, P/B RELEASE CYLINDER GLAND COVER 패스너
97.243	FASTENER, P/B RELEASE CYLINDER GLAND COVER 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

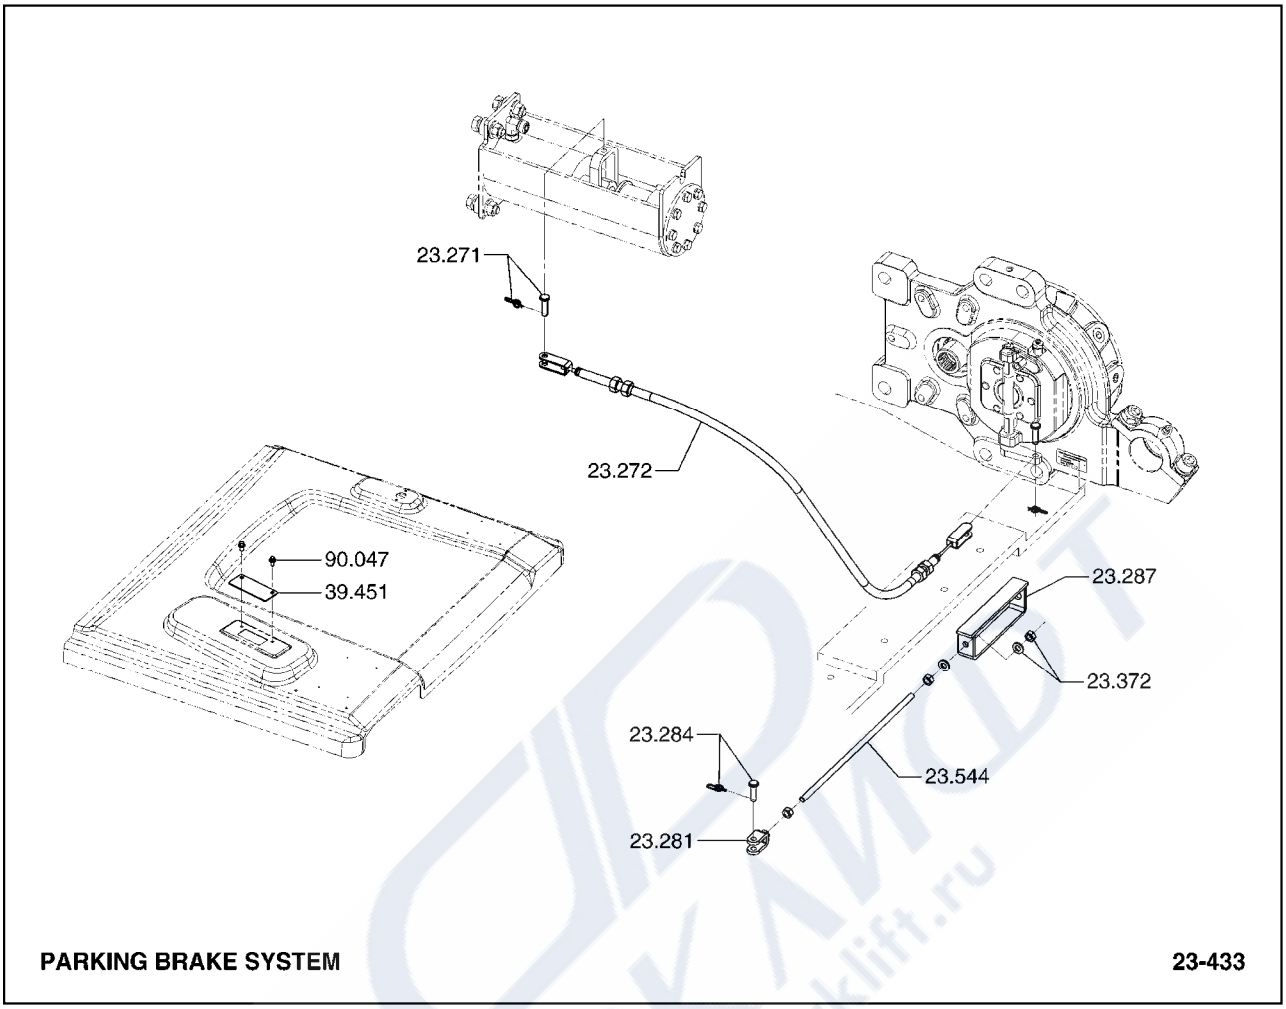

23.271	FASTENER, PARKING BRAKE LEVER 패스너
23.272	CABLE, PARKING BRAKE 케이블
23.281	CLEVIS, PARKING BRAKE CABLE END 클레비스
23.284	FASTENER, PARKING BRAKE CABLE BRACKET 패스너
23.287	BRACKET, PARKING BRAKE CABLE 브라켓
23.372	FASTENER, PARKING BRAKE DRAW ROD 패스너
23.544	ROD, PARKING BRAKE DRAW 로드
39.451	COVER, PARKING BRAKE LEVER 커버
90.047	FASTENER, PARKING BRAKE LEVER COVER 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

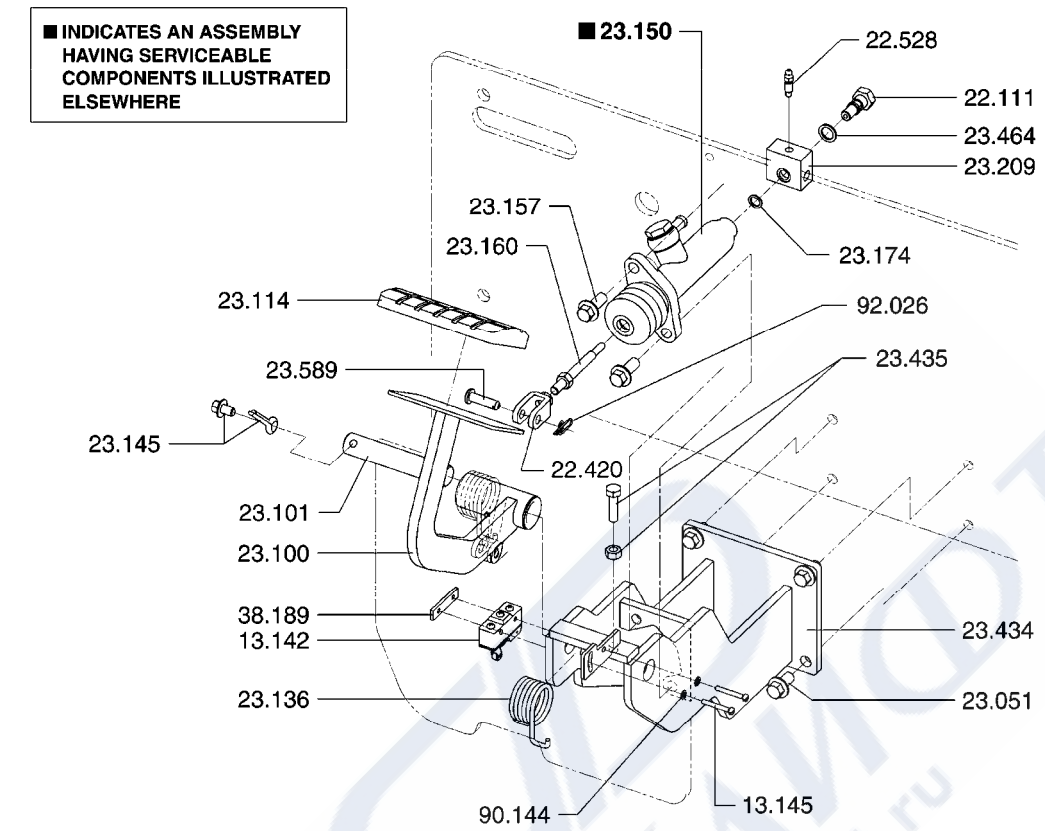

13.142 SWITCH, BRAKE INTERLOCK
스위치

13.145 FASTENER, BRAKE INTERLOCK SWITCH
패스너

22.111 ADAPTOR, BRAKE MASTER CYLINDER MOUNTING
어댑터

22.420 CLEVIS, MASTER CYLINDER PUSH ROD
클레비스

22.528 BLEEDER, BRAKE LINES ADAPTOR
블리더

23.051 FASTENER, MASTER CYLINDER MOUNTING BRACKET
패스너

23.100 PEDAL, BRAKE
페달

23.101 SHAFT, BRAKE PEDAL
샤프트

23.114 PAD & FASTENER, BRAKE PEDAL
패드& 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

23.136	SPRING, BRAKE PEDAL RETURN 스프링
23.145	FASTENER, BRAKE PEDAL SHAFT 패스너
23.150	CYLINDER ASSEMBLY, BRAKE MASTER COMPLETE 실린더
23.157	FASTENER, BRAKE MASTER CYLINDER ATTACHING 패스너
23.160	ROD, PUSH 로드
23.174	GASKET, BRAKE MASTER CYLINDER OUTLET FITTING 가스켓
23.209	TEE, BRAKE LINE W/INTEGRAL MOUNT 티
23.434	BRACKET, BRAKE PEDAL PIVOT 브라켓
23.435	FASTENER, BRAKE PEDAL PIVOT BRACKET 패스너
23.464	SEAL, BRAKE CYLINDER BLEEDER PORT 씰
23.589	RETAINER, BRAKE ACTUATING LEVER 리테이너
38.189	PLATE, SWITCH MOUNTING 플레이트
90.144	WASHER, BRAKE INTERLOCK SWITCH FASTENER 와셔
92.026	RETAINER, BRAKE MASTER CYLINDER ACTUATING ROD PIN 리테이너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

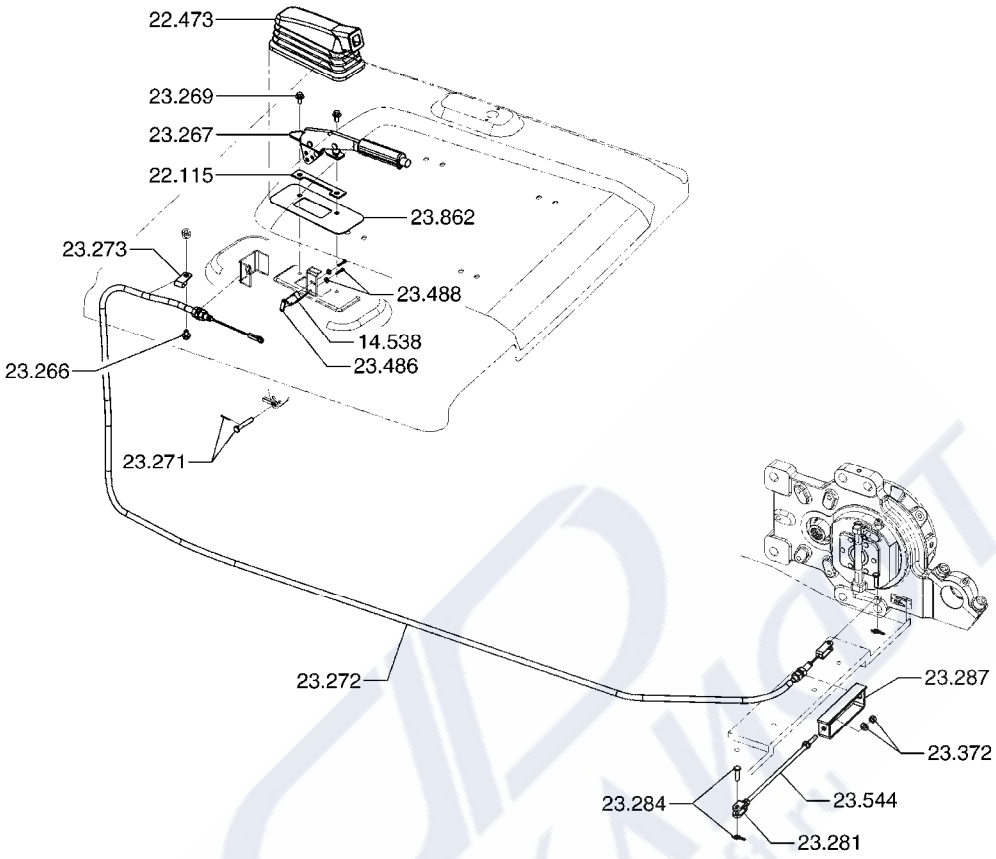

PARKING BRAKE SYSTEM **23-508**

14.538 SWITCH, PARK BRAKE
스위치

22.115 SUPPORT, PARKING BRAKE LEVER MOUNTING BRACKET
서포트

22.473 COVER, HAND BRAKE LEVER
커버

23.266 FASTENER, PARKING BRAKE CABLE CLAMP
패스너

23.267 LEVER, PARKING BRAKE
레버

23.269 FASTENER, PARKING BRAKE LEVER
패스너

23.271 FASTENER, PARKING BRAKE LEVER
패스너

23.272 CABLE, PARKING BRAKE
케이블

23.273 CLAMP, PARKING BRAKE LEVER TO CABLE
클램프

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

23.281	CLEVIS, PARKING BRAKE CABLE END 클레비스
23.284	FASTENER, PARKING BRAKE CABLE BRACKET 패스너
23.287	BRACKET, PARKING BRAKE CABLE 브라켓
23.372	FASTENER, PARKING BRAKE DRAW ROD 패스너
23.486	SIDE PLATE, PARKING BRAKE 사이드플레이트
23.488	FASTENER, PARKING BRAKE SIDE PLATE 패스너
23.544	ROD, PARKING BRAKE DRAW 로드
23.862	BRACKET, PARKING BRAKE LEVER MOUNTING 브라켓

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

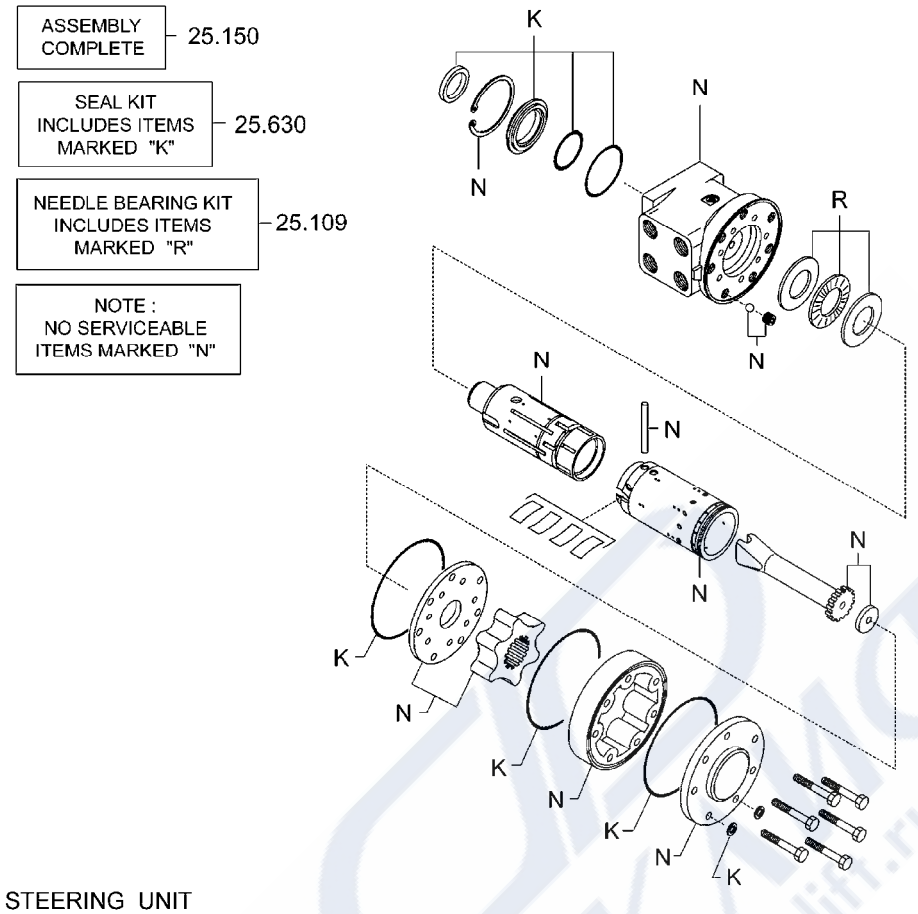

25.109 KIT, STEER GEAR SEAL
키트

25.150 GEAR BOX ASSEMBLY, STEERING
기어박스

25.630 REPAIR KIT, STEERING COLUMN
리페어키트

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

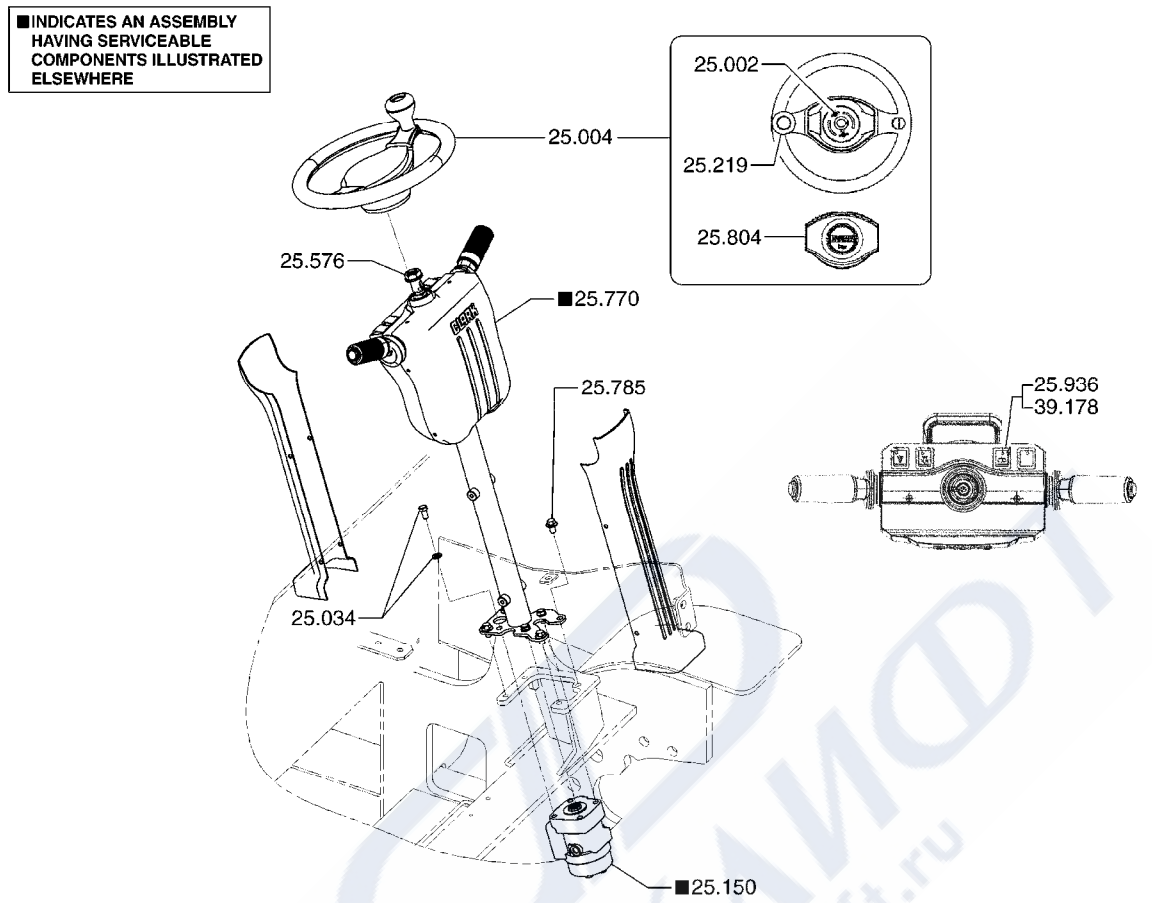

25.002 HORN BUTTON KIT
혼버튼키트

25.004 HAND WHEEL, STEERING GEAR
핸드휠

25.034 FASTENER, STEERING GEAR ATTACHING
패스너

25.150 GEAR BOX ASSEMBLY, STEERING
기어박스

25.219 KNOB, STEERING HAND WHEEL SPINNER
노브

25.576 SPACER, STEERING HAND WHEEL
스페이서

25.770 SHAFT & COLUMN ASSY, POWER STEERING (TILT)
샤프트& 컬럼

25.785 FASTENER, TILT STEERING SHAFT & COLUMN ASSEMBLY
패스너

25.804 COVER, HANDLE CONTROL ASSEMBLY
커버

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

25.936	PLUG, STEER COLUMN SWITCH 플러그
39.178	SWITCH, WINDSHIELD WIPER 스위치

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

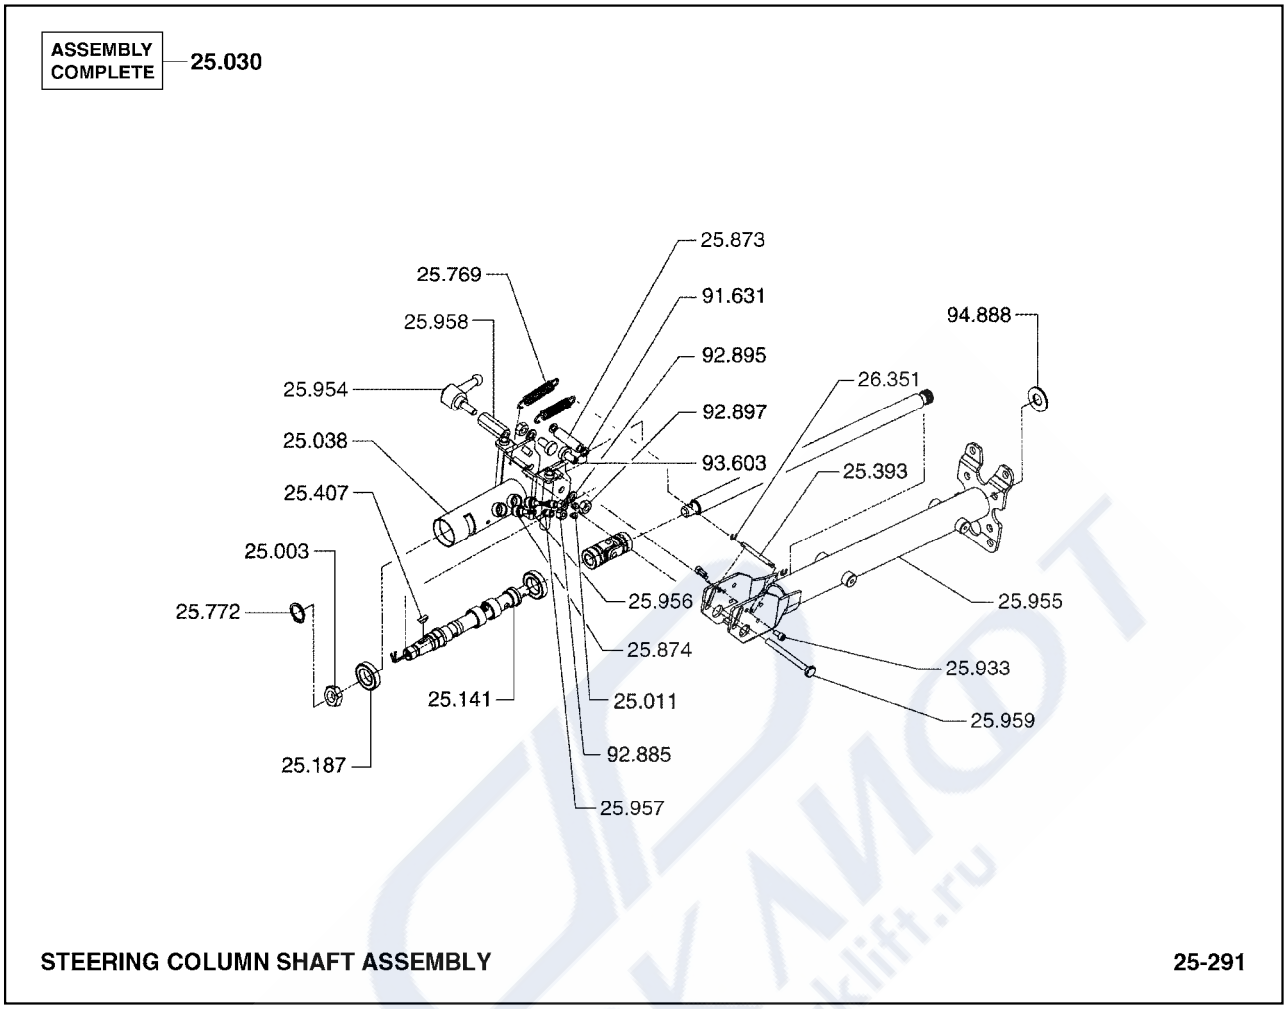

25.003	NUT, HANDWHEEL 너트
25.011	FASTENER, STEERING COLUMN 패스너
25.030	SHAFT ASSEMBLY, STEERING COLUMN 샤프트
25.038	HOUSING ASSEMBLY-CUP & BUSHING, STEERING 하우징
25.141	SHAFT, STEERING GEAR 샤프트
25.187	BEARING, STEER SHAFT 베어링
25.393	PIN, STEERING LINK (STEERING ARM) 핀
25.407	KEY, STEER COLUMN SHAFT COUPLING 키
25.769	SPRING, STEERING COLUMN TILTING (LOWER) 스프링

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

25.772	RETAINER, STEERING COLUMN SHAFT 리테이너
25.873	BUSHING, STEER COLUMN AXIAL 부싱
25.874	BUSHING, STEER COLUMN TELESCOPING 부싱
25.933	FASTENER, STEERING COLUMN 패스너
25.954	ARM, TILT STEERING COLUMN ADJUSTOR 암
25.955	SUPPORT, STEERING COLUMN SHAFT 서포트
25.956	BRUSH, STEERING COLUMN SHAFT 브러쉬
25.957	BRUSH HOLDER, STEERING COLUMN SHAFT 브러쉬홀더
25.958	PIVOT, TILT STEERING COLUMN ADJUSTOR ARM 피봇
25.959	PIN, TILT STEERING COLUMN ADJUSTOR ARM 핀
26.351	WASHER, STEERING ARM PIN 와셔
91.631	WASHER, STEERING COLUMN UPPER BRACKET FASTENER 와셔
92.885	NUT, STEERING COLUMN UPPER BRACKET FASTENER 너트
92.895	WASHER, STEERING COLUMN SUPPORT FASTENER 와셔
92.897	NUT, STEERING COLUMN SUPPORT FASTENER 너트
93.603	FASTENER, STEERING COLUMN TILTING SPRING BALL STUD 패스너
94.888	RETAINER, STEERING COLUMN ADJUSTOR 리테이너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

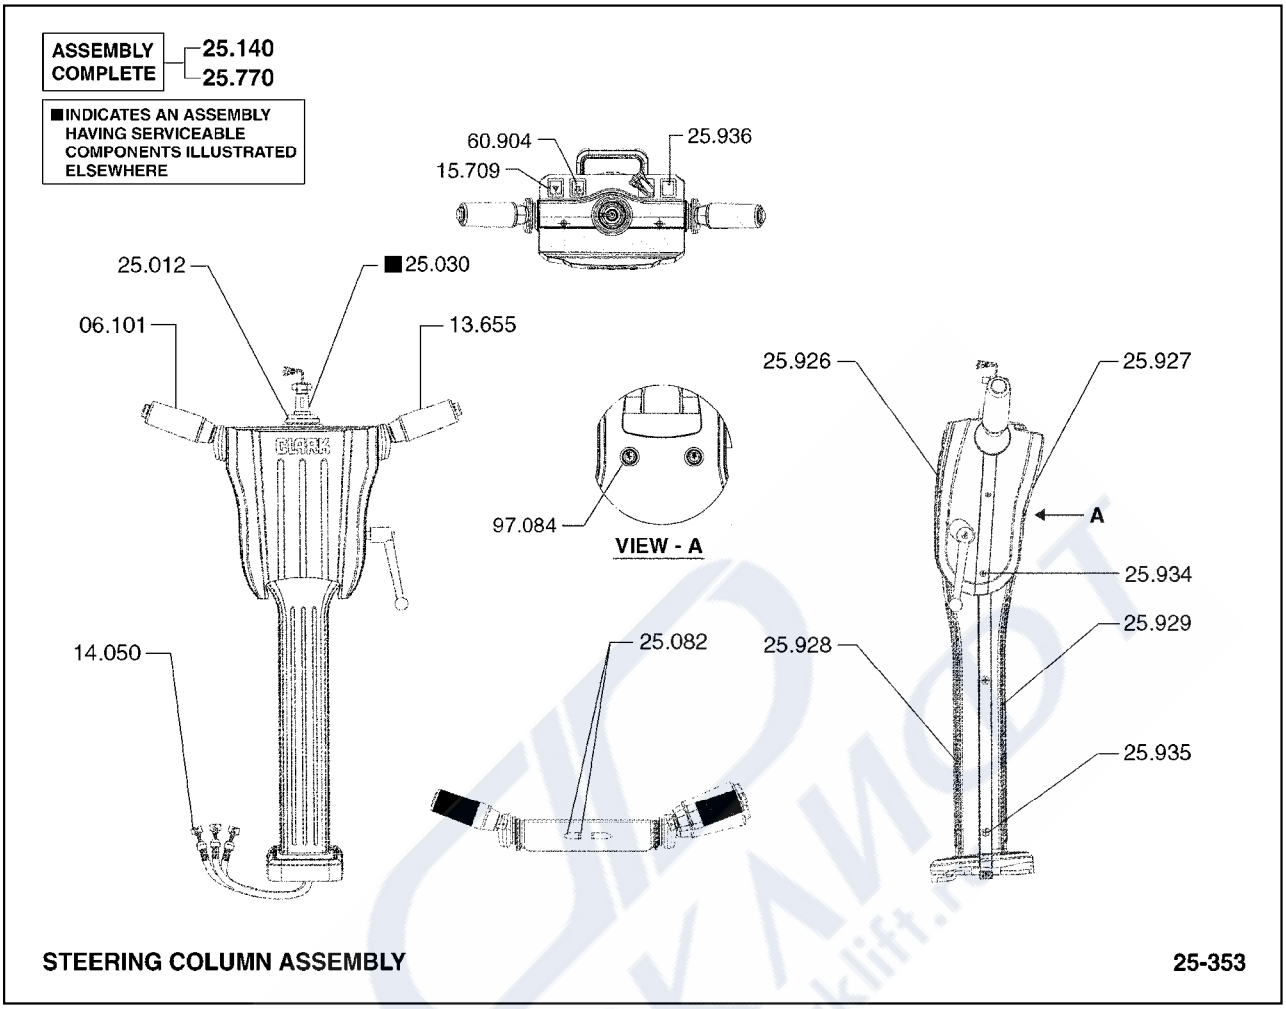

06.101	LEVER ASSEMBLY, FORWARD & REVERSE 레버
13.655	SWITCH, TURN INDICATOR 스위치
14.050	HARNESS, CONTROL CIRCUIT WIRING 하네스
15.709	SWITCH, EMERGENCY 스위치
25.012	CUSHION, STEERING COLUMN 쿠션
25.030	SHAFT ASSEMBLY, STEERING COLUMN 샤프트
25.082	FASTENER, LEVER MOUNTING BRACKET 패스너
25.770	SHAFT & COLUMN ASSY, POWER STEERING (TILT) 샤프트& 컬럼
25.926	COVER, STEER COLUMN FRONT UPPER 커버

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

25.927	COVER, STEER COLUMN REAR UPPER 커버
25.928	COVER, STEER COLUMN FRONT LOWER 커버
25.929	COVER, STEER COLUMN REAR LOWER 커버
25.934	FASTENER, STEER COLUMN COVER 패스너
25.935	FASTENER, STEER COLUMN COVER 패스너
25.936	PLUG, STEER COLUMN SWITCH 플러그
60.904	SWITCH, STROBE LIGHT 스위치
97.084	FASTENER, STEER COLUMN COVER 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

■INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

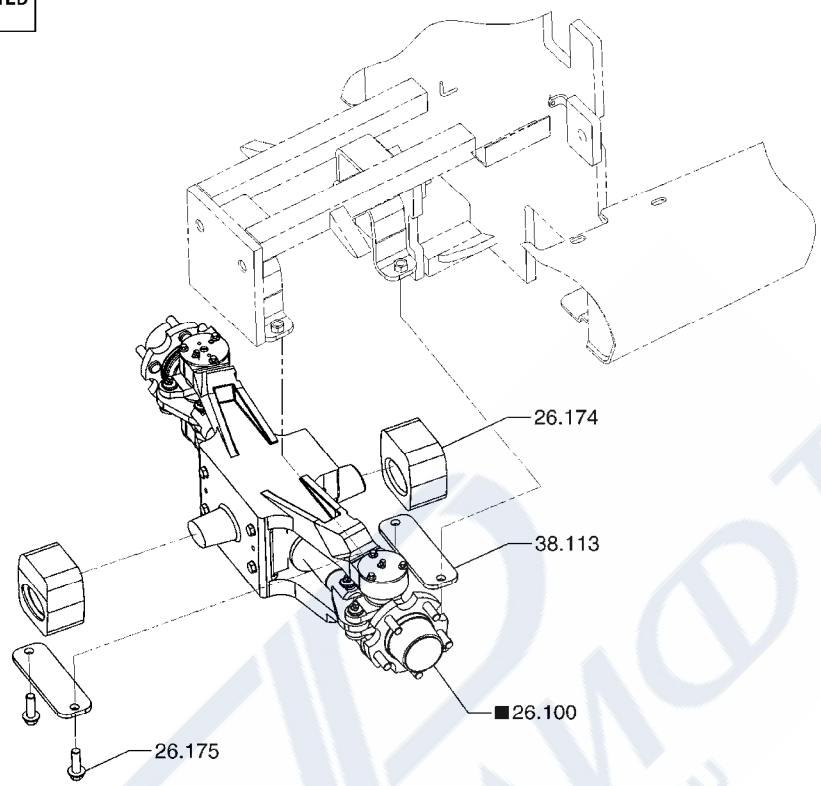

STEER AXLE MOUNTING **26-272**

26.100	AXLE ASSEMBLY, STEERING 스티어액슬
26.174	SILENT BLOCK, AXLE MOUNTING (REAR) 사일런트블록
26.175	FASTENER, SILENT BLOCK TO FRAME (REAR) 패스너
38.113	PLATE, AXLE SILENT BLOCK COVER 플레이트

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

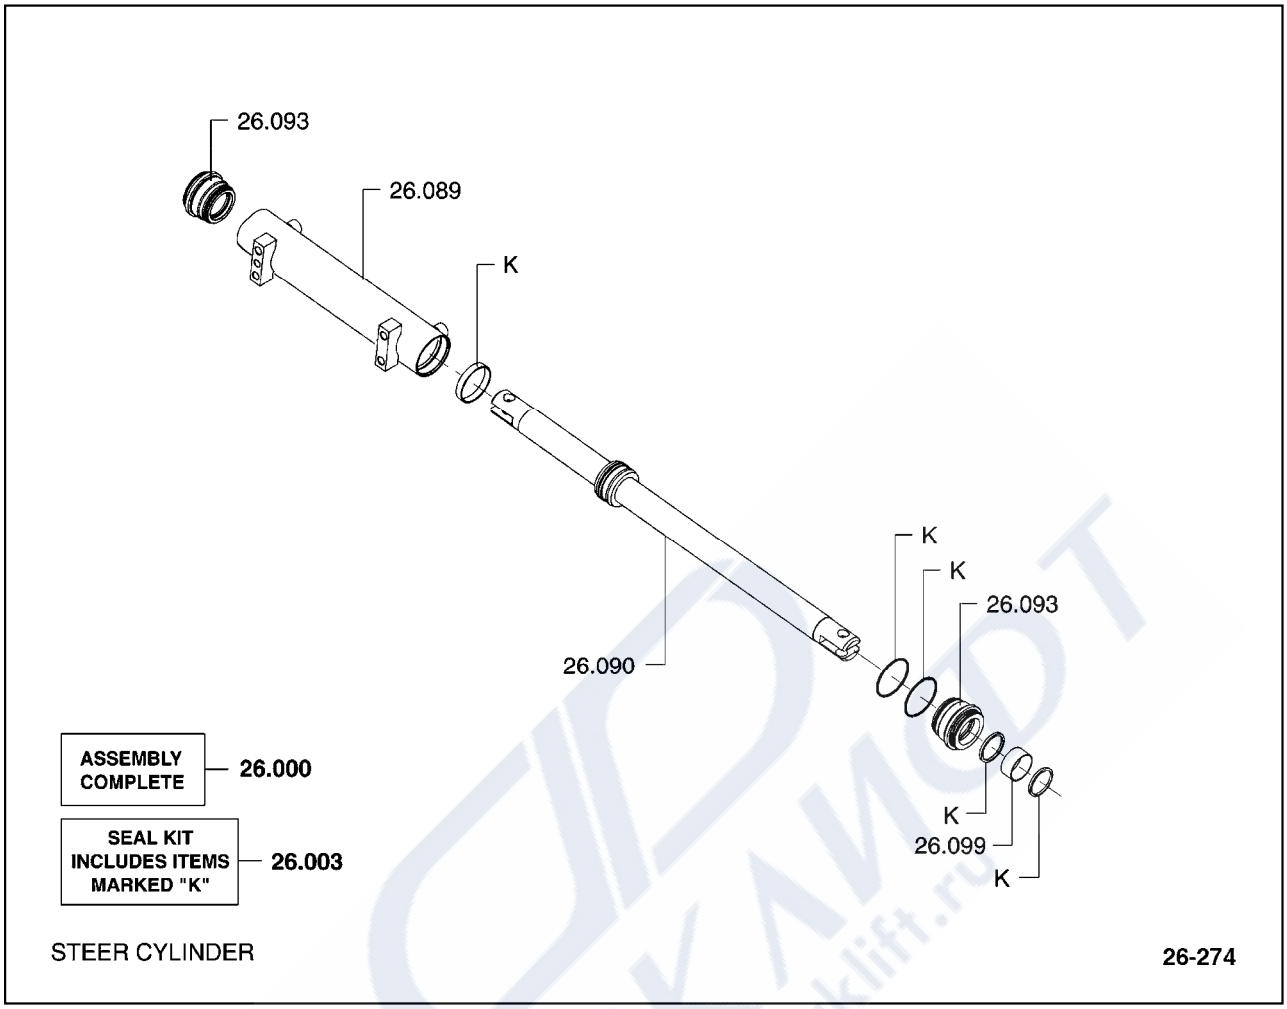

26.000	CYLINDER ASSEMBLY, STEERING 실린더
26.003	SEAL KIT, PISTON ROD 씰키트
26.089	BARREL, STEERING CYLINDER 배럴
26.090	STEER CYLINDER PISTON 스티어실린더피스톤
26.093	GLAND, STEERING CYLINDER 그랜드
26.099	BUSHING, STEERING CYLINDER GLAND 부싱

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

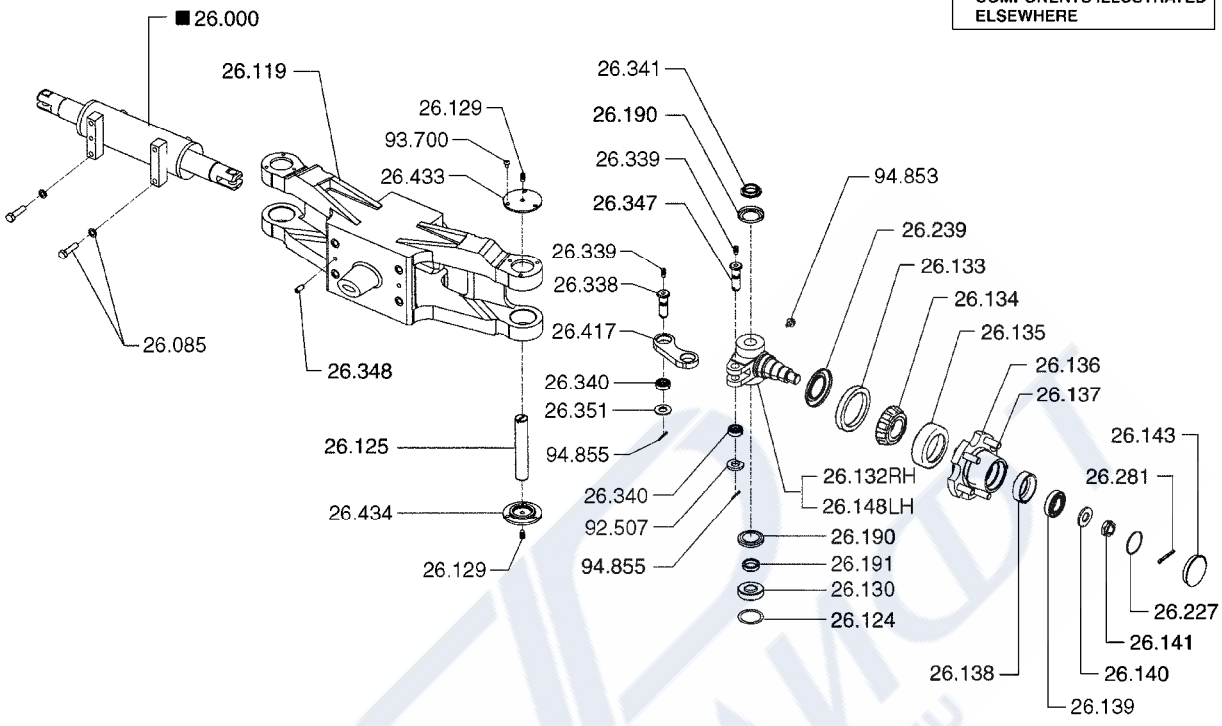

26.000	CYLINDER ASSEMBLY, STEERING 실린더	26.139	CONE, STEER WHEEL HUB BEARING (OUTER) 콘
26.085	FASTENER, STEERING CYLINDER MOUNTING BRKT 패스너	26.140	WASHER, STEER WHEEL HUB BEARING THRUST 와셔
26.100	AXLE ASSEMBLY, STEERING 스티어액슬	26.141	FASTENER, STEER WHEEL HUB 패스너
26.119	AXLE, STEER 액슬	26.143	CAP, STEER WHEEL HUB 캡
26.124	SHIM, STEER AXLE KNUCKLE 심	26.148	KNUCKLE, STEER AXLE (LH) 너트
26.125	PIN, STEER AXLE KNUCKLE 핀	26.190	SEAL, STEER AXLE KNUCKLE OIL 씰
26.129	FITTING - LUB, STEER AXLE KNUCKLE 피팅	26.191	PLUG - EXPANSION, STEER AXLE KNUCKLE PIN 플러그
26.130	BEARING, STEER AXLE KNUCKLE PIN 베어링	26.227	SEAL, STEER AXLE FORK HOUSING 씰
26.132	KNUCKLE, STEER AXLE (RH) 너트	26.239	SEAL, STEER AXLE FORK COVER 씰
26.133	SEAL, STEER WHEEL HUB 씰	26.281	RETAINER, STEER AXLE HUB BRG KNUCKLE NUT 리테이너
26.134	CONE, STEER WHEEL HUB BEARING (INNER) 콘	26.338	PIN, STEERING ARM 핀
26.135	CUP, STEER WHEEL HUB BEARING (INNER) 컵	26.339	LUB-FITTING, STEERING ARM 윤활피팅
26.136	HUB & CUP, STEER WHEEL 허브& 컵	26.340	BEARING, STEERING ARM PIN 베어링
26.137	FASTENER, STEER WHEEL 패스너	26.341	SPACER, STEER AXLE PIVOT BUSHING 스페이서
26.138	CUP, STEER WHEEL HUB BEARING (OUTER) 컵	26.347	PIN, STEER ARM 핀

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

26.348	LOCATOR, STEER CYLINDER 로케이터
26.351	WASHER, STEERING ARM PIN 와셔
26.417	ARM, STEERING 암
26.433	COVER, STEER AXLE KNUCKLE PIVOT (TOP) 커버
26.434	COVER, STEER AXLE KNUCKLE PIVOT (BOTTOM) 커버
92.507	WASHER, STEERING ARM FASTENER 와셔
93.700	FASTENER, STEER AXLE KNUCKLE PIN COVER 패스너
94.853	FASTENER, STEER AXLE KNUCKLE PIN 패스너
94.855	RETAINER, STEERING ARM PIN 리테이너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

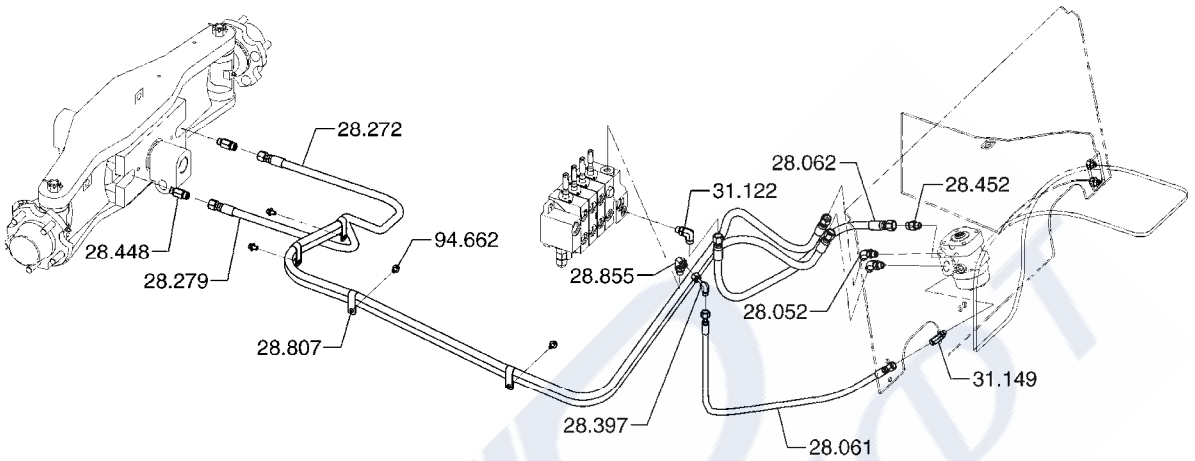

STEER LINES **26-315**

28.052 FITTING, STEERING GEAR
피팅

28.061 LINE, STEER VALVE CONTROL
라인

28.062 LINE, STEER VALVE CONTROL
라인

28.272 LINE, STEER CYLINDER INLET
라인

28.279 LINE, STEER CYLINDER INLET
라인

28.397 FITTING, STEERING GEAR LINE
피팅

28.448 FITTING, STEER CYLINDER LINE
피팅

28.452 CHECK VALVE, POWER STEERING LINE
체크밸브

28.807 CLAMP, POWER STEERING LINES
클램프

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

28.855	FITTING, POWER STEERING LINE 피팅
31.122	FITTING, POWER STEERING RETURN LINE 피팅
31.149	FITTING, STEER VALVE INLET PORT 피팅
94.662	FASTENER, POWER STEERING LINES CLAMP 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

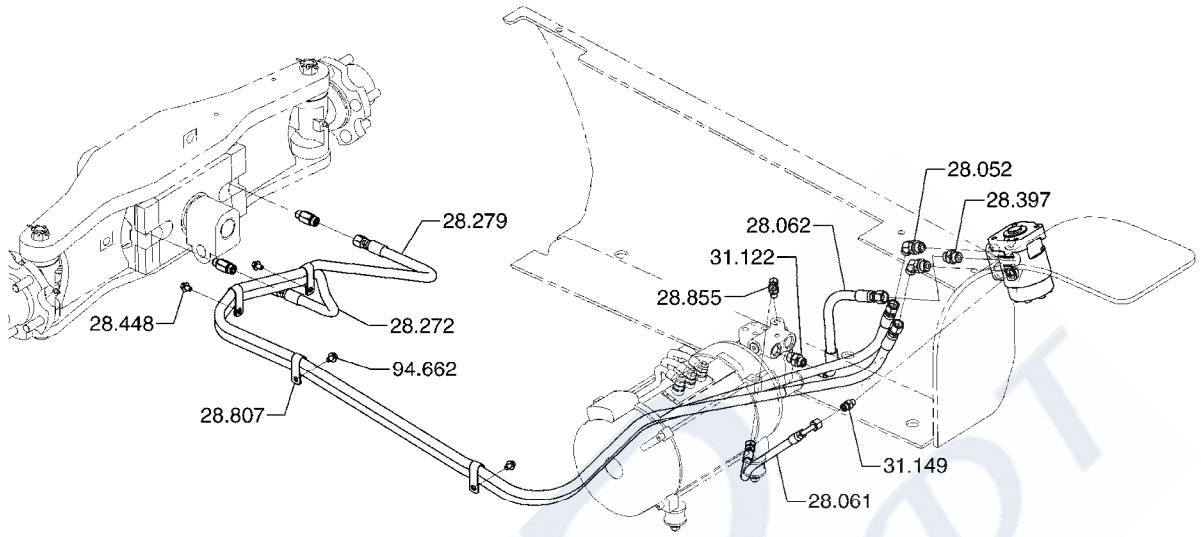

STEER LINES **26-320**

28.052	FITTING, STEERING GEAR 피팅
28.061	LINE, STEER VALVE CONTROL 라인
28.062	LINE, STEER VALVE CONTROL 라인
28.272	LINE, STEER CYLINDER INLET 라인
28.279	LINE, STEER CYLINDER INLET 라인
28.397	FITTING, STEERING GEAR LINE 피팅
28.448	FITTING, STEER CYLINDER LINE 피팅
28.807	CLAMP, POWER STEERING LINES 클램프
28.855	FITTING, POWER STEERING LINE 피팅

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

31.122	FITTING, POWER STEERING RETURN LINE 피팅
31.149	FITTING, STEER VALVE INLET PORT 피팅
94.662	FASTENER, POWER STEERING LINES CLAMP 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

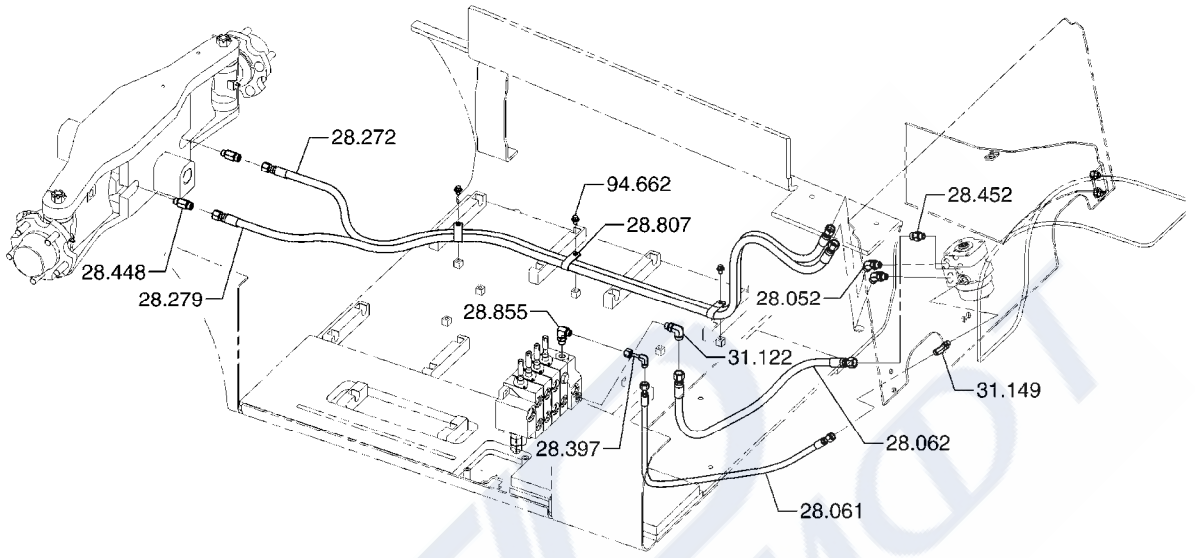

STEER LINES **26-321**

28.052 FITTING, STEERING GEAR
피팅

28.061 LINE, STEER VALVE CONTROL
라인

28.062 LINE, STEER VALVE CONTROL
라인

28.272 LINE, STEER CYLINDER INLET
라인

28.279 LINE, STEER CYLINDER INLET
라인

28.397 FITTING, STEERING GEAR LINE
피팅

28.448 FITTING, STEER CYLINDER LINE
피팅

28.452 CHECK VALVE, POWER STEERING LINE
체크밸브

28.807 CLAMP, POWER STEERING LINES
클램프

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

28.855	FITTING, POWER STEERING LINE 피팅
31.122	FITTING, POWER STEERING RETURN LINE 피팅
31.149	FITTING, STEER VALVE INLET PORT 피팅
94.662	FASTENER, POWER STEERING LINES CLAMP 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

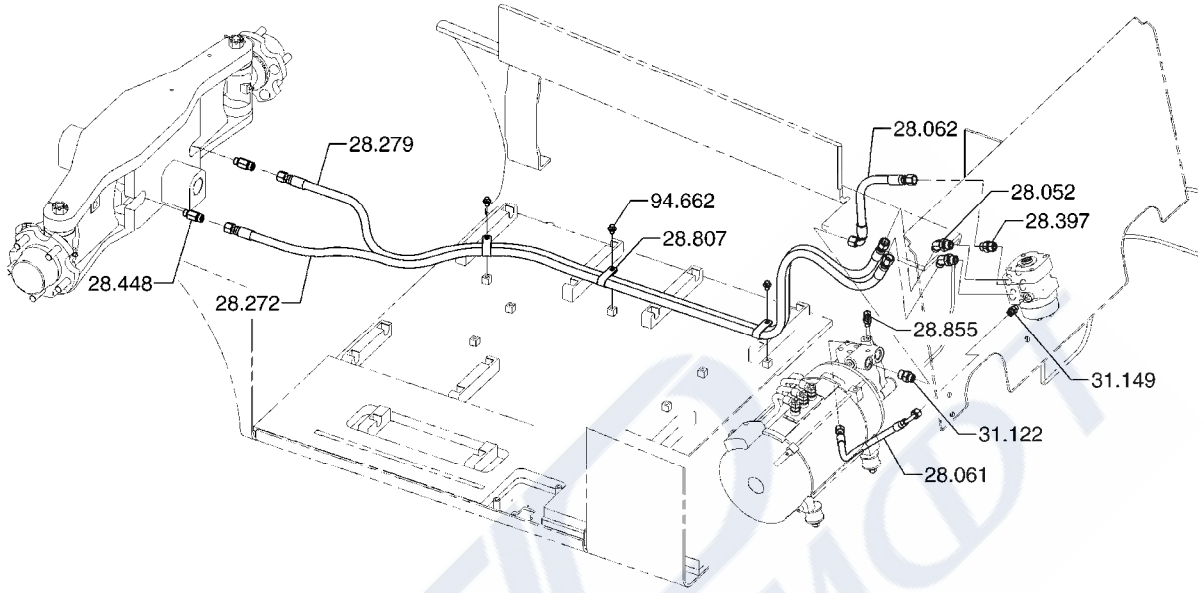

STEER LINES **26-322**

28.052 FITTING, STEERING GEAR
피팅

28.061 LINE, STEER VALVE CONTROL
라인

28.062 LINE, STEER VALVE CONTROL
라인

28.272 LINE, STEER CYLINDER INLET
라인

28.279 LINE, STEER CYLINDER INLET
라인

28.397 FITTING, STEERING GEAR LINE
피팅

28.448 FITTING, STEER CYLINDER LINE
피팅

28.807 CLAMP, POWER STEERING LINES
클램프

28.855 FITTING, POWER STEERING LINE
피팅

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

31.122	FITTING, POWER STEERING RETURN LINE 피팅
31.149	FITTING, STEER VALVE INLET PORT 피팅
94.662	FASTENER, POWER STEERING LINES CLAMP 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

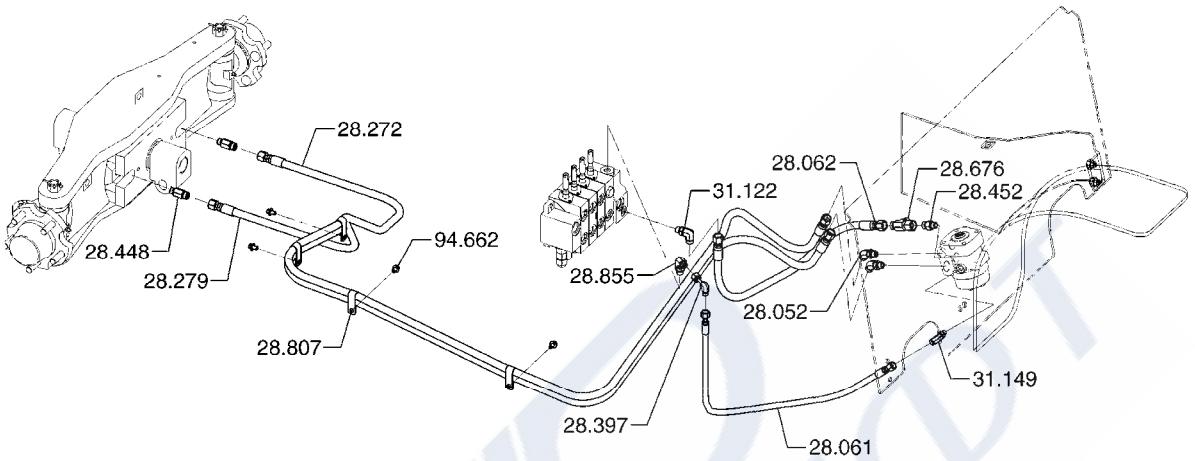

STEER LINES **26-323**

28.052	FITTING, STEERING GEAR 피팅
28.061	LINE, STEER VALVE CONTROL 라인
28.062	LINE, STEER VALVE CONTROL 라인
28.272	LINE, STEER CYLINDER INLET 라인
28.279	LINE, STEER CYLINDER INLET 라인
28.397	FITTING, STEERING GEAR LINE 피팅
28.448	FITTING, STEER CYLINDER LINE 피팅
28.452	CHECK VALVE, POWER STEERING LINE 체크밸브
28.676	FITTING, STEER VALVE DISCHARGE LINE 피팅

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

28.807	CLAMP, POWER STEERING LINES 클램프
28.855	FITTING, POWER STEERING LINE 피팅
31.122	FITTING, POWER STEERING RETURN LINE 피팅
31.149	FITTING, STEER VALVE INLET PORT 피팅
94.662	FASTENER, POWER STEERING LINES CLAMP 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

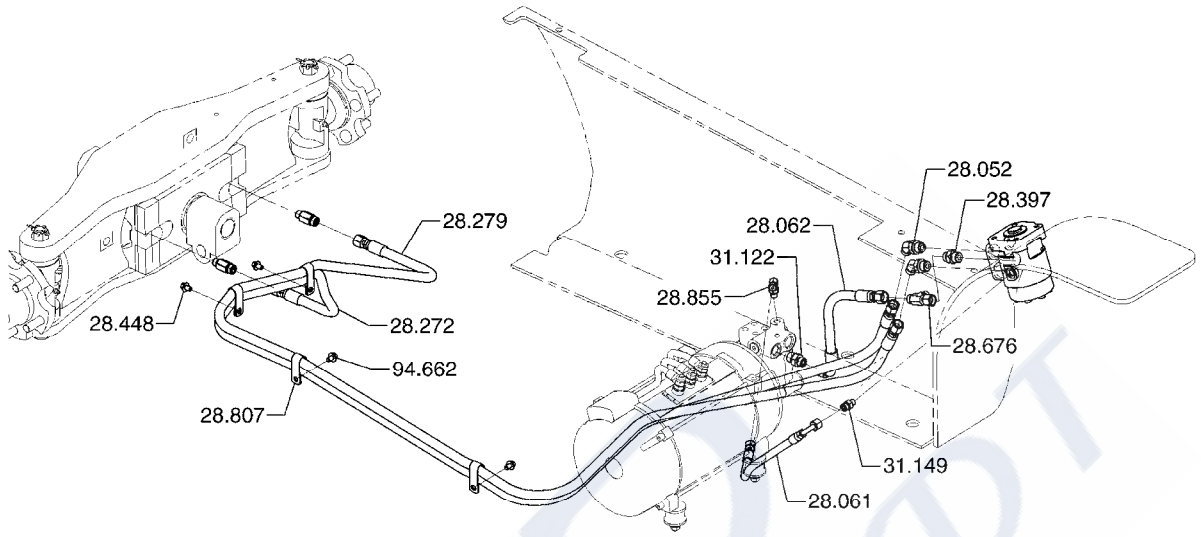

STEER LINES **26-324**

28.052 FITTING, STEERING GEAR
피팅

28.061 LINE, STEER VALVE CONTROL
라인

28.062 LINE, STEER VALVE CONTROL
라인

28.272 LINE, STEER CYLINDER INLET
라인

28.279 LINE, STEER CYLINDER INLET
라인

28.397 FITTING, STEERING GEAR LINE
피팅

28.448 FITTING, STEER CYLINDER LINE
피팅

28.676 FITTING, STEER VALVE DISCHARGE LINE
피팅

28.807 CLAMP, POWER STEERING LINES
클램프

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

28.855	FITTING, POWER STEERING LINE 피팅
31.122	FITTING, POWER STEERING RETURN LINE 피팅
31.149	FITTING, STEER VALVE INLET PORT 피팅
94.662	FASTENER, POWER STEERING LINES CLAMP 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

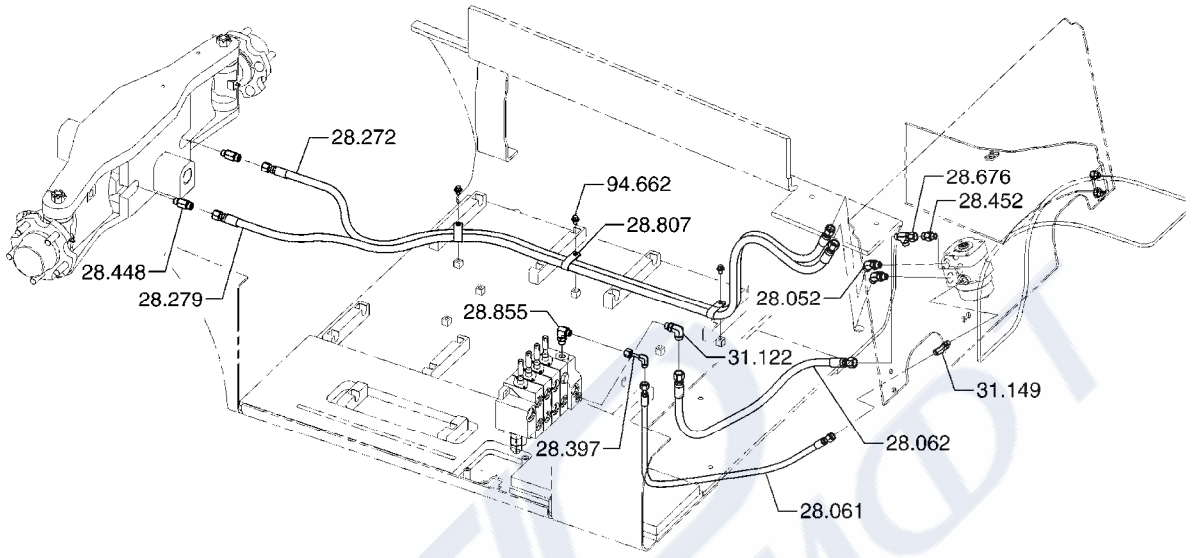

STEER LINES **26-325**

28.052 FITTING, STEERING GEAR
피팅

28.061 LINE, STEER VALVE CONTROL
라인

28.062 LINE, STEER VALVE CONTROL
라인

28.272 LINE, STEER CYLINDER INLET
라인

28.279 LINE, STEER CYLINDER INLET
라인

28.397 FITTING, STEERING GEAR LINE
피팅

28.448 FITTING, STEER CYLINDER LINE
피팅

28.452 CHECK VALVE, POWER STEERING LINE
체크밸브

28.676 FITTING, STEER VALVE DISCHARGE LINE
피팅

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

28.807	CLAMP, POWER STEERING LINES 클램프
28.855	FITTING, POWER STEERING LINE 피팅
31.122	FITTING, POWER STEERING RETURN LINE 피팅
31.149	FITTING, STEER VALVE INLET PORT 피팅
94.662	FASTENER, POWER STEERING LINES CLAMP 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

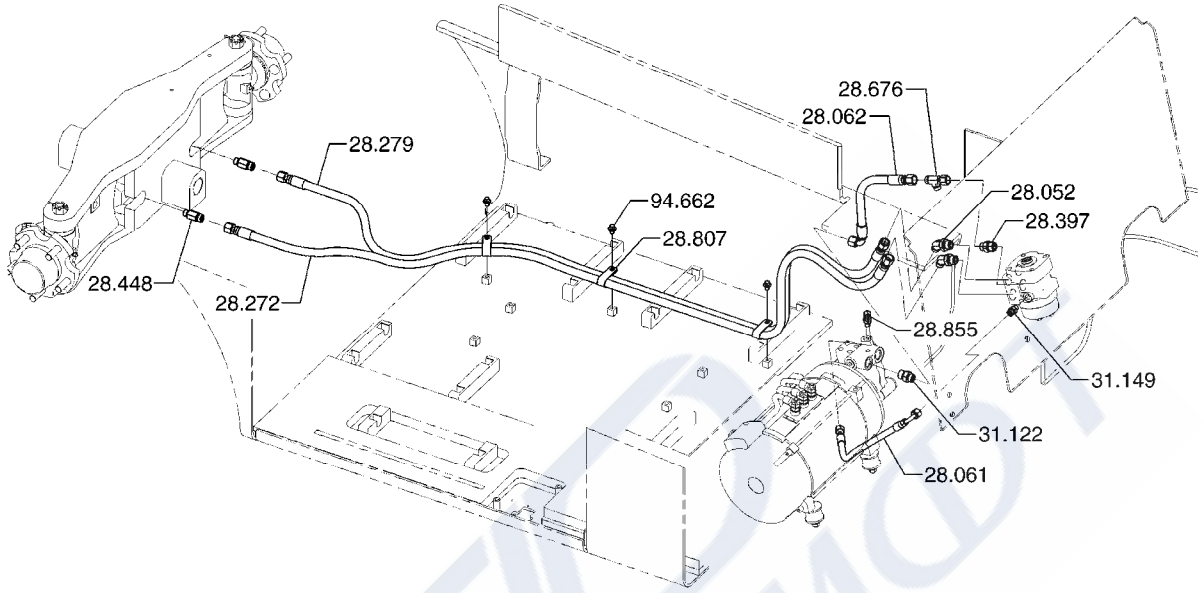

STEER LINES **26-326**

28.052 FITTING, STEERING GEAR
피팅

28.061 LINE, STEER VALVE CONTROL
라인

28.062 LINE, STEER VALVE CONTROL
라인

28.272 LINE, STEER CYLINDER INLET
라인

28.279 LINE, STEER CYLINDER INLET
라인

28.397 FITTING, STEERING GEAR LINE
피팅

28.448 FITTING, STEER CYLINDER LINE
피팅

28.676 FITTING, STEER VALVE DISCHARGE LINE
피팅

28.807 CLAMP, POWER STEERING LINES
클램프

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

28.855	FITTING, POWER STEERING LINE 피팅
31.122	FITTING, POWER STEERING RETURN LINE 피팅
31.149	FITTING, STEER VALVE INLET PORT 피팅
94.662	FASTENER, POWER STEERING LINES CLAMP 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

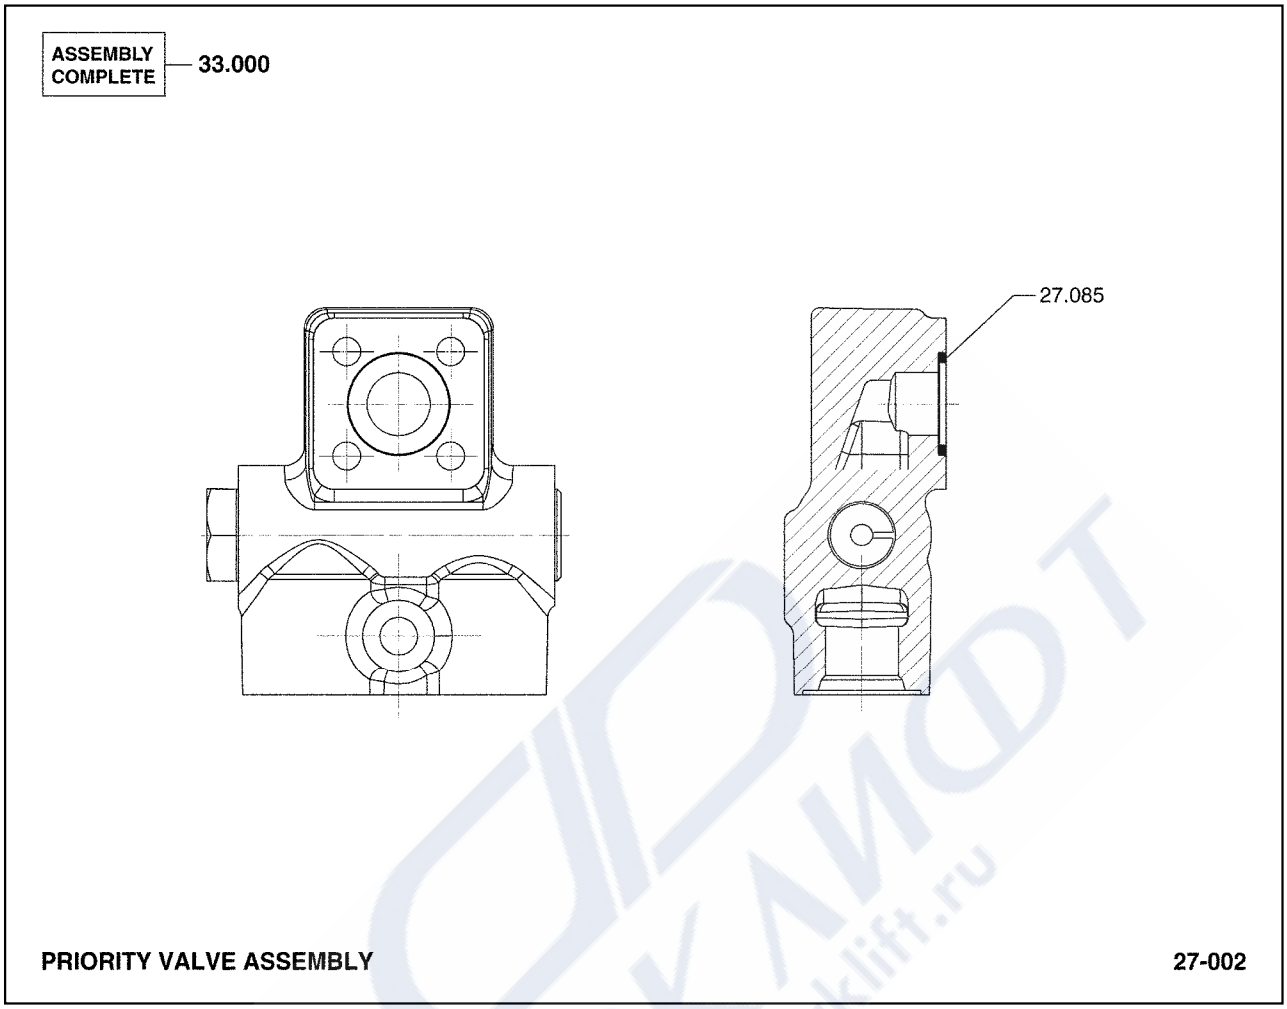

27.085 SEAL, FLOW CONTROL VALVE
씰

33.000 VALVE ASSEMBLY, FLOW CONTROL
밸브

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

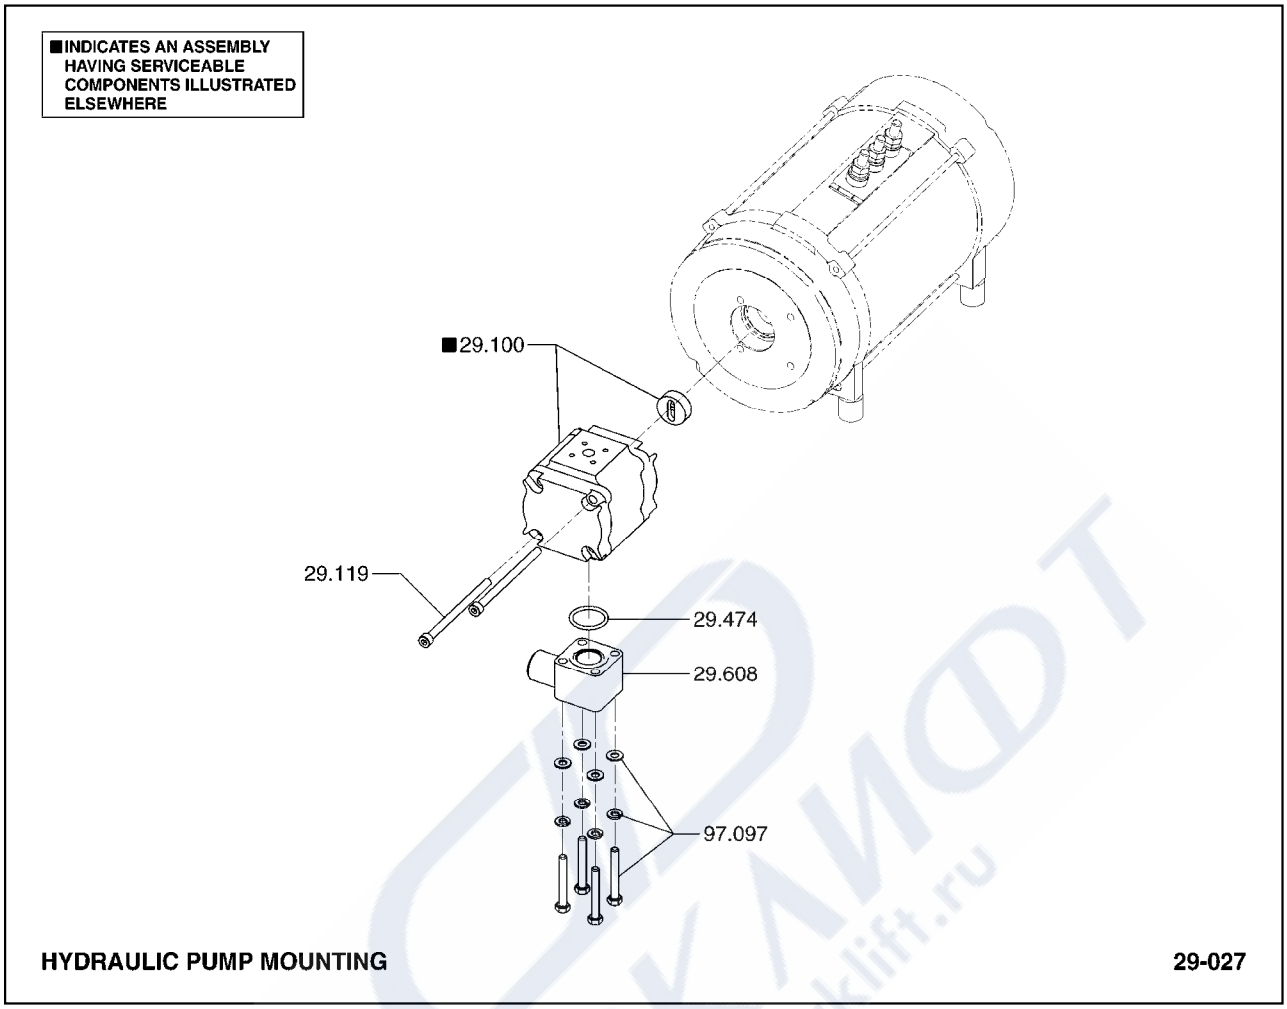

29.100	PUMP ASSEMBLY, HYDRAULIC 펌프
29.119	FASTENER, PUMP HOUSING 패스너
29.474	SEAL, PUMP INLET FITTING 씰
29.608	MANIFOLD, HYDRAULIC PUMP INLET SUCTION 매니폴드
97.097	FASTENER, HYDRAULIC PUMP INLET SUCTION MANIFOLD 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

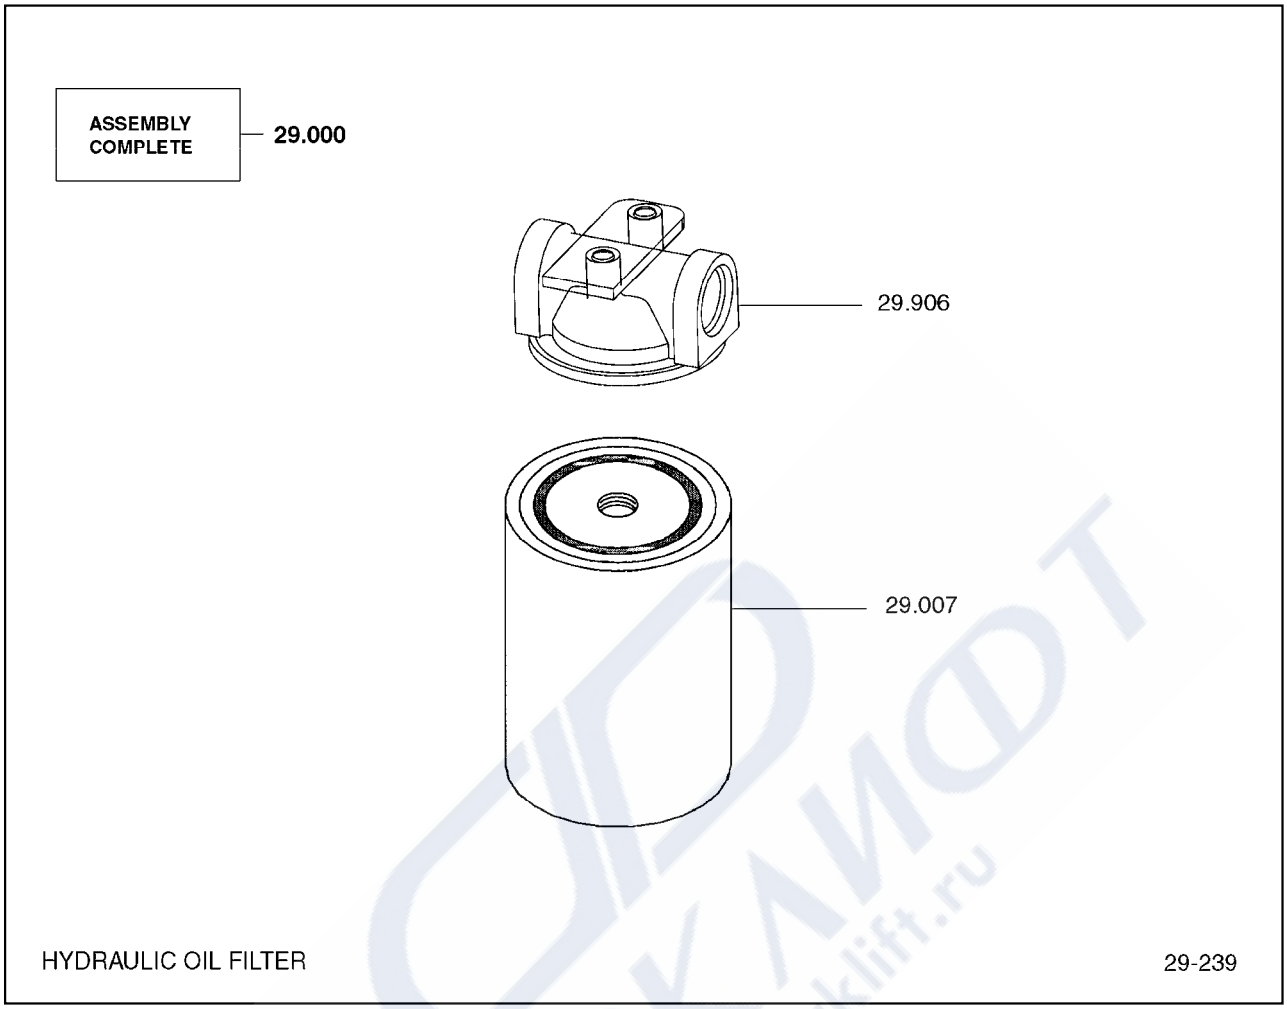

29.000 FILTER, HYDRAULIC OIL
필터

29.007 CARTRIDGE, HYDRAULIC OIL FILTER
카트리지

29.906 HEAD ASSEMBLY, HYDROSTATIC OIL FILTER
헤드

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

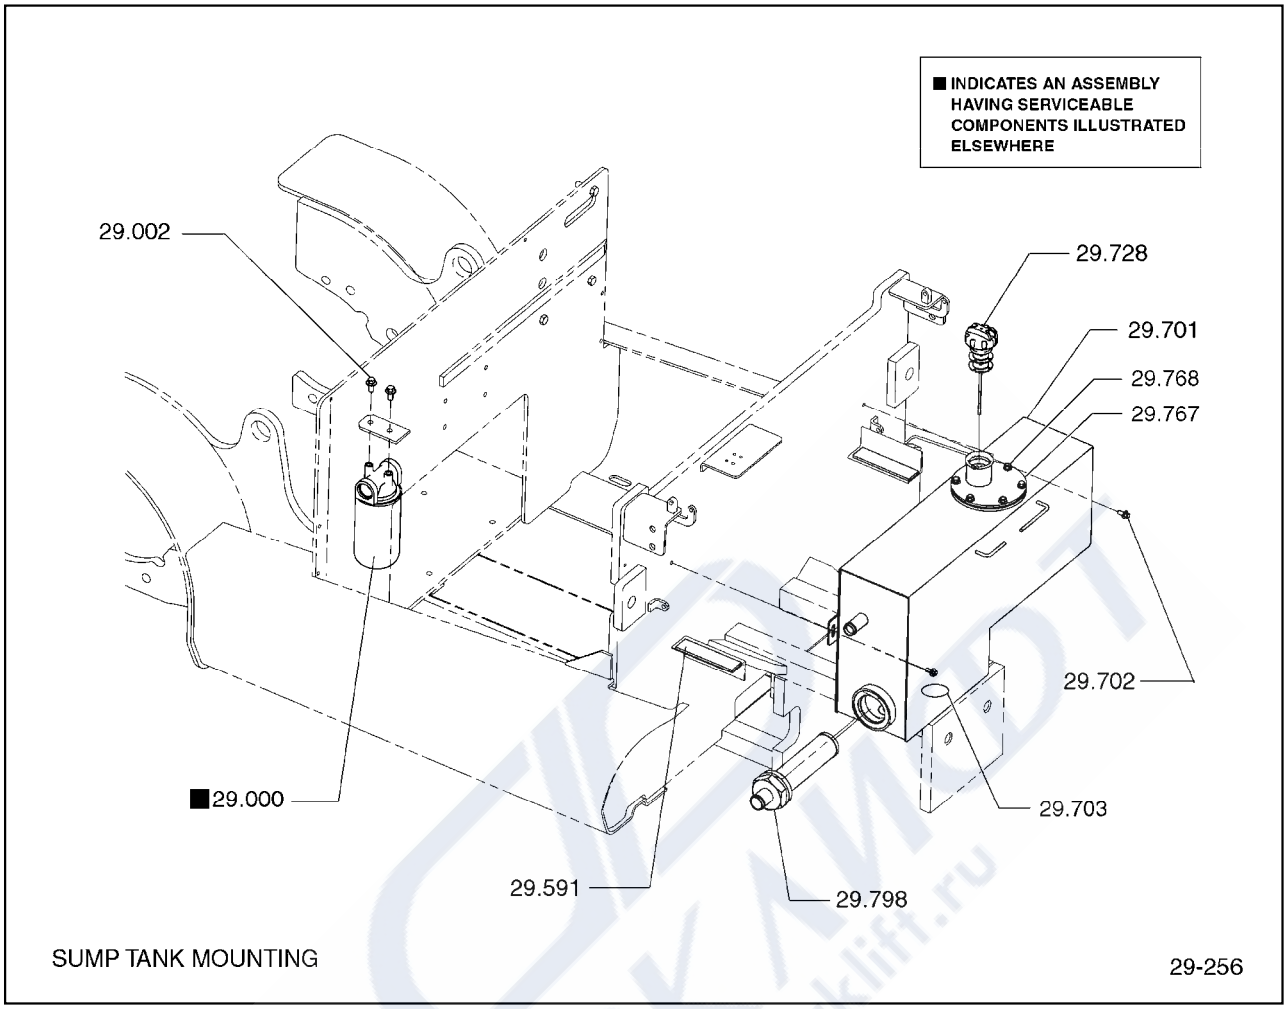

29.000	FILTER, HYDRAULIC OIL 필터
29.002	FASTENER, HYDRAULIC OIL FILTER 패스너
29.591	RUBBER, SUMP TANK MOUNTING 러버
29.701	TANK, SUMP 탱크
29.702	FASTENER, SUMP TANK 패스너
29.703	SEAL, SUMP TANK 씰
29.728	CAP, HYDRAULIC SUMP FILLER 캡
29.767	SEAL, SUMP TANK COVER 씰
29.768	FASTENER, SUMP TANK COVER 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

29.798 SCREEN, HYDRAULIC SUMP PRE FILTER
스크린

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

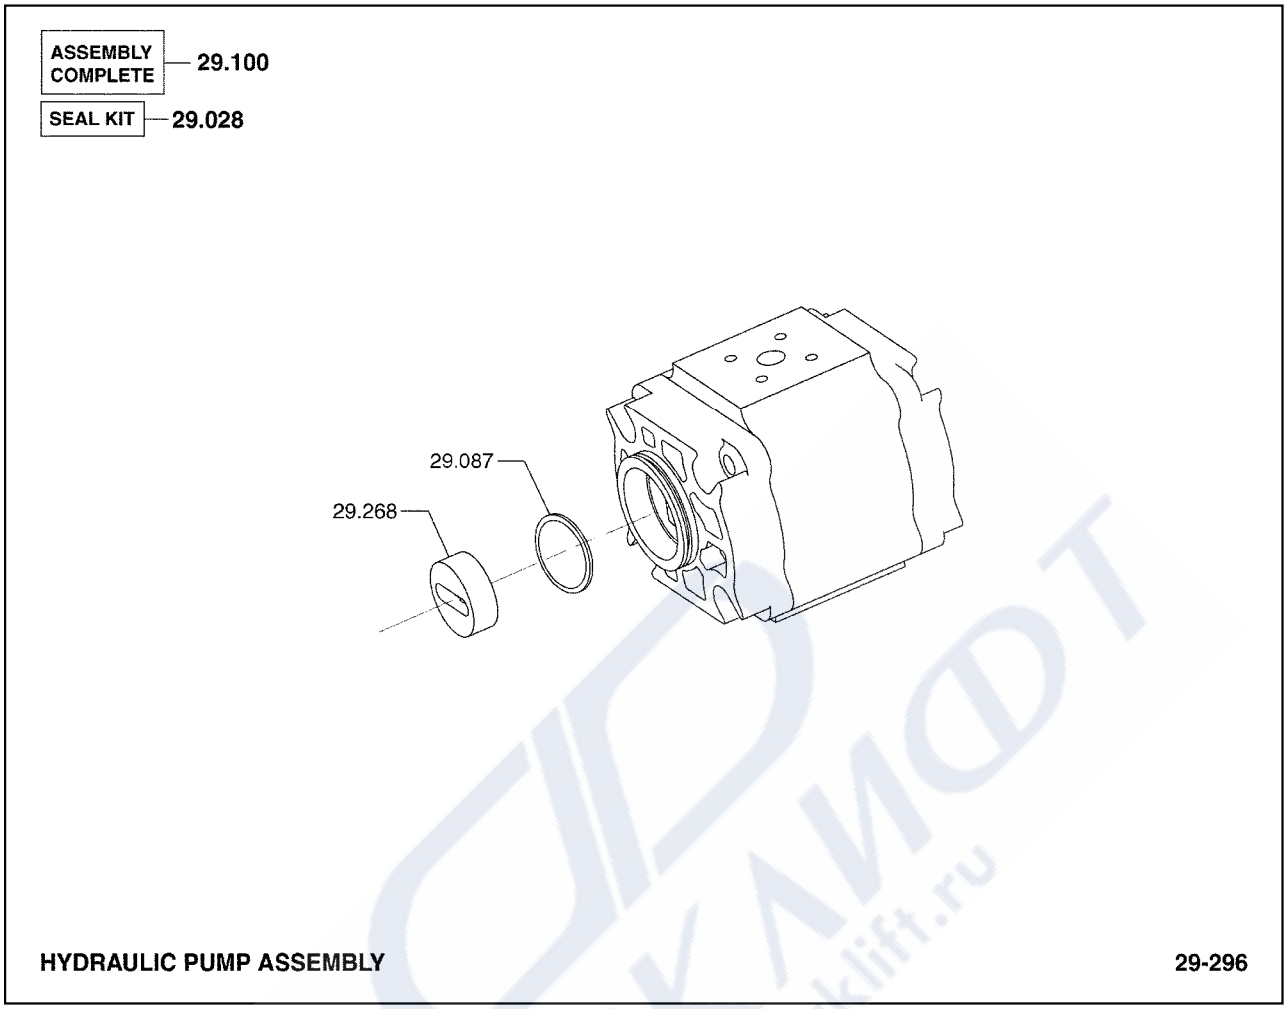

29.028	SEAL KIT, HYDRAULIC UNIT PUMP 씰키트
29.087	SEAL, HYDRAULIC PUMP HOUSING 씰
29.100	PUMP ASSEMBLY, HYDRAULIC 펌프
29.268	COUPLING, MAIN HYDRAULIC PUMP 커플링

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

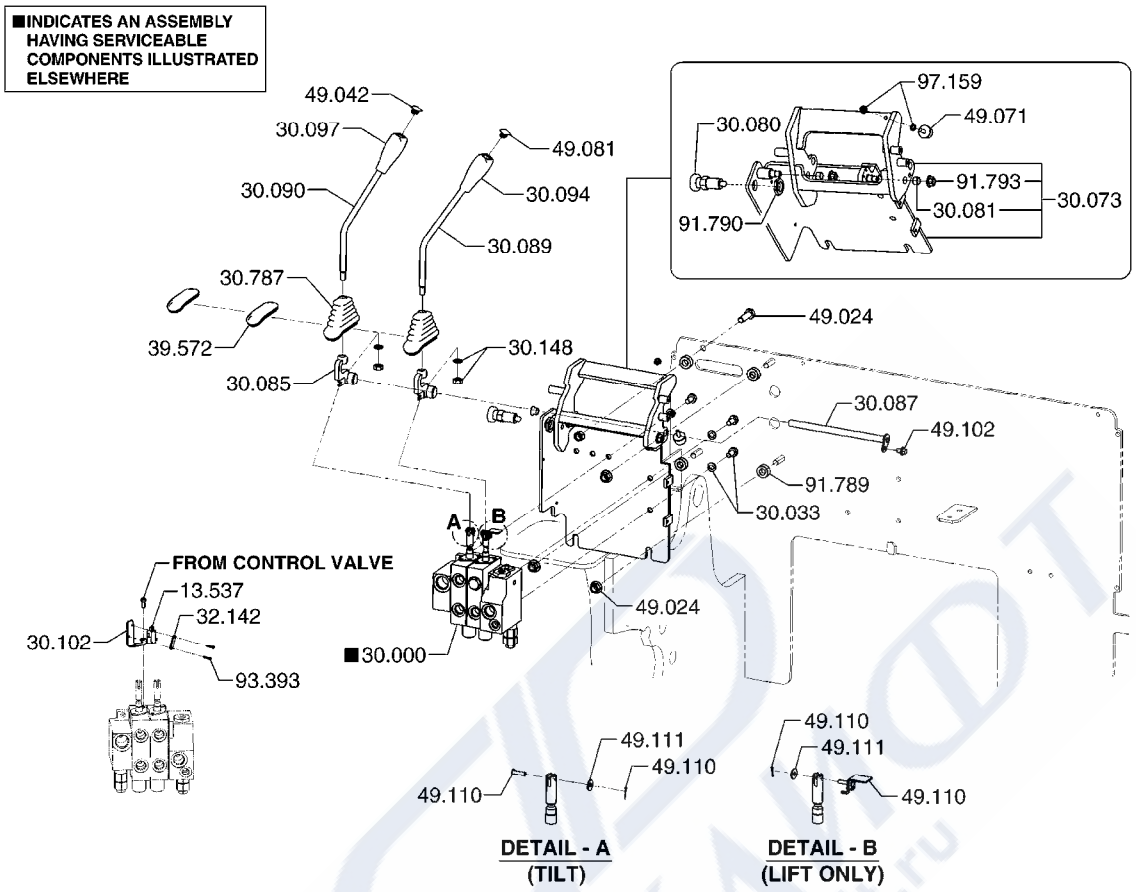

13.537	SWITCH, CONTROL VALVE PUMP OPERATING 스위치	32.142	PLATE, SWITCH MOUNTING BRACKET 플레이트
30.000	VALVE ASSEMBLY, HYDRAULIC 밸브	39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너	49.024	FASTENER, HYDRAULIC VALVE MOUNTING BRACKET 패스너
30.073	BRACKET, HYDRAULIC VALVE MOUNTING 브라켓	49.042	CAP, TILT CONTROL LEVER 캡
30.080	PLUNGER, HYDRAULIC VALVE MOUNTING BRACKET 플런저	49.071	DAMPENER, HYDRAULIC VALVE BRACKET 댐프너
30.081	BEARING, HYDRAULIC VALVE BRACKET HINGE PIVOT 베어링	49.081	CAP, LIFT CONTROL LEVER 캡
30.085	LINK, CONTROL VALVE SPOOL 링크	49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀	49.110	PIN, VALVE SPOOL CLEVIS ROD 핀
30.089	LEVER, LIFT CONTROL 레버	49.111	RETAINER, VALVE SPOOL CLEVIS ROD PIN 리테이너
30.090	LEVER, TILT CONTROL 레버	91.789	SPACER, HYDRAULIC VALVE MOUNTING FASTENER 스페이서
30.094	KNOB, LIFT CONTROL LEVER 노브	91.790	NUT, HYDRAULIC VALVE MOUNTING BRACKET FASTENER 너트
30.097	KNOB, TILT CONTROL LEVER 노브	91.793	NUT, HYDRAULIC VALVE MOUNTING BRACKET FASTENER 너트
30.102	BRACKET, HYDRAULIC VALVE SWITCH 브라켓	93.393	FASTENER, HYDRAULIC VALVE SWITCH BRACKET 패스너
30.148	FASTENER, CONTROL LINKAGE BRACKET 패스너	97.159	FASTENER, HYDRAULIC VALVE BRACKET DAMPENER 패스너
30.787	BOOT, VALVE CONTROL LEVER 부트		

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

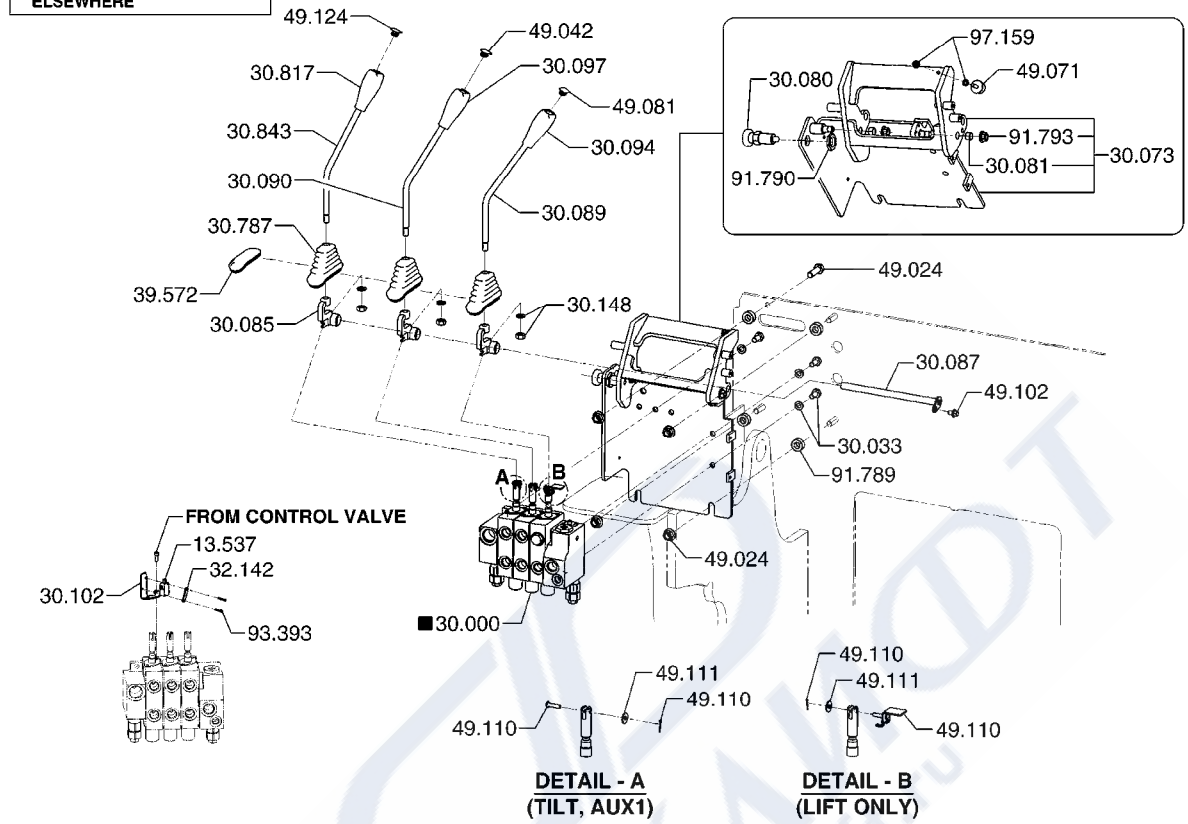

13.537	SWITCH, CONTROL VALVE PUMP OPERATING 스위치	30.817	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.000	VALVE ASSEMBLY, HYDRAULIC 밸브	30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너	32.142	PLATE, SWITCH MOUNTING BRACKET 플레이트
30.073	BRACKET, HYDRAULIC VALVE MOUNTING 브라켓	39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
30.080	PLUNGER, HYDRAULIC VALVE MOUNTING BRACKET 플런저	49.024	FASTENER, HYDRAULIC VALVE MOUNTING BRACKET 패스너
30.081	BEARING, HYDRAULIC VALVE BRACKET HINGE PIVOT 베어링	49.042	CAP, TILT CONTROL LEVER 캡
30.085	LINK, CONTROL VALVE SPOOL 링크	49.071	DAMPENER, HYDRAULIC VALVE BRACKET 댐프너
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀	49.081	CAP, LIFT CONTROL LEVER 캡
30.089	LEVER, LIFT CONTROL 레버	49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
30.090	LEVER, TILT CONTROL 레버	49.110	PIN, VALVE SPOOL CLEVIS ROD 핀
30.094	KNOB, LIFT CONTROL LEVER 노브	49.111	RETAINER, VALVE SPOOL CLEVIS ROD PIN 리테이너
30.097	KNOB, TILT CONTROL LEVER 노브	49.124	CAP, AUXILIARY CONTROL LEVER 캡
30.102	BRACKET, HYDRAULIC VALVE SWITCH 브라켓	91.789	SPACER, HYDRAULIC VALVE MOUNTING FASTENER 스페이서
30.148	FASTENER, CONTROL LINKAGE BRACKET 패스너	91.790	NUT, HYDRAULIC VALVE MOUNTING BRACKET FASTENER 너트
30.787	BOOT, VALVE CONTROL LEVER 부트	91.793	NUT, HYDRAULIC VALVE MOUNTING BRACKET FASTENER 너트

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

93.393 FASTENER, HYDRAULIC VALVE SWITCH BRACKET
패스너

97.159 FASTENER, HYDRAULIC VALVE BRACKET DAMPENER
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

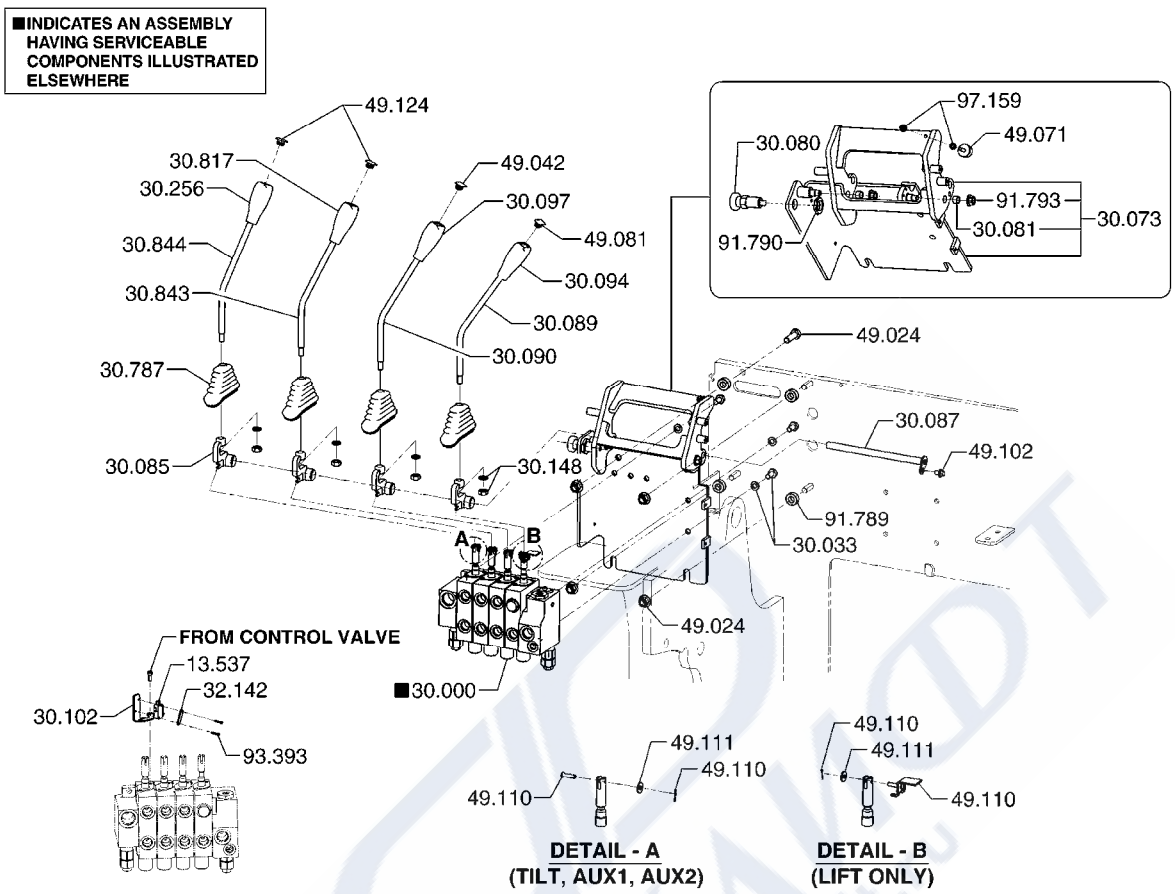

13.537	SWITCH, CONTROL VALVE PUMP OPERATING 스위치
30.000	VALVE ASSEMBLY, HYDRAULIC 밸브
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너
30.073	BRACKET, HYDRAULIC VALVE MOUNTING 브라켓
30.080	PLUNGER, HYDRAULIC VALVE MOUNTING BRACKET 플런저
30.081	BEARING, HYDRAULIC VALVE BRACKET HINGE PIVOT 베어링
30.085	LINK, CONTROL VALVE SPOOL 링크
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀
30.089	LEVER, LIFT CONTROL 레버
30.090	LEVER, TILT CONTROL 레버
30.094	KNOB, LIFT CONTROL LEVER 노브
30.097	KNOB, TILT CONTROL LEVER 노브
30.102	BRACKET, HYDRAULIC VALVE SWITCH 브라켓
30.148	FASTENER, CONTROL LINKAGE BRACKET 패스너
30.256	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.787	BOOT, VALVE CONTROL LEVER 부트
30.817	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버
30.844	LEVER, AUXILIARY VALVE CONTROL (2ND AUX) 레버
32.142	PLATE, SWITCH MOUNTING BRACKET 플레이트
49.024	FASTENER, HYDRAULIC VALVE MOUNTING BRACKET 패스너
49.042	CAP, TILT CONTROL LEVER 캡
49.071	DAMPENER, HYDRAULIC VALVE BRACKET 댐프너
49.081	CAP, LIFT CONTROL LEVER 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.110	PIN, VALVE SPOOL CLEVIS ROD 핀
49.111	RETAINER, VALVE SPOOL CLEVIS ROD PIN 리테이너
49.124	CAP, AUXILIARY CONTROL LEVER 캡
91.789	SPACER, HYDRAULIC VALVE MOUNTING FASTENER 스페이서
91.790	NUT, HYDRAULIC VALVE MOUNTING BRACKET FASTENER 너트

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

91.793	NUT, HYDRAULIC VALVE MOUNTING BRACKET FASTENER 너트
93.393	FASTENER, HYDRAULIC VALVE SWITCH BRACKET 패스너
97.159	FASTENER, HYDRAULIC VALVE BRACKET DAMPENER 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

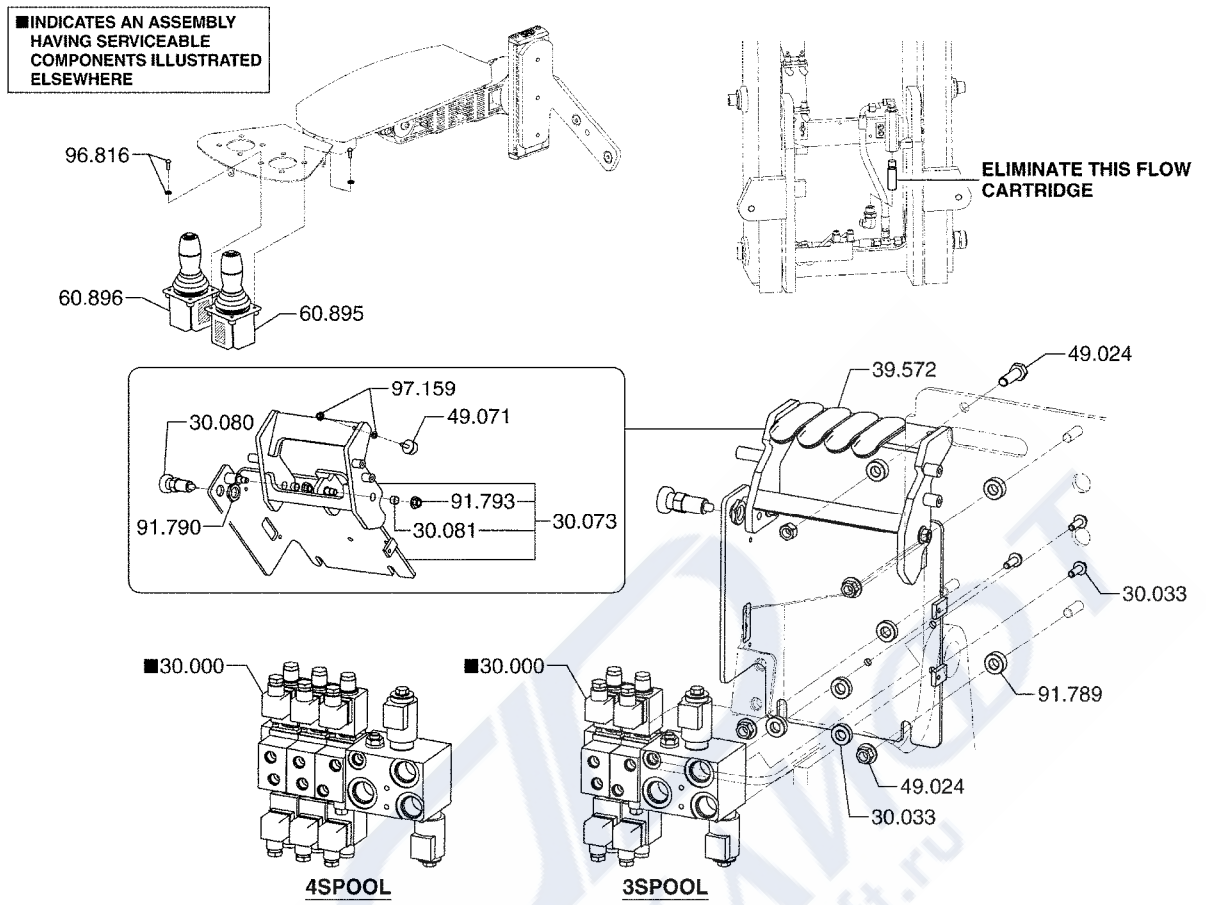

HYDRAULIC VALVE MOUNTING **30-295**

30.000	VALVE ASSEMBLY, HYDRAULIC 밸브
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너
30.073	BRACKET, HYDRAULIC VALVE MOUNTING 브라켓
30.080	PLUNGER, HYDRAULIC VALVE MOUNTING BRACKET 플런저
30.081	BEARING, HYDRAULIC VALVE BRACKET HINGE PIVOT 베어링
39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
49.024	FASTENER, HYDRAULIC VALVE MOUNTING BRACKET 패스너
49.071	DAMPENER, HYDRAULIC VALVE BRACKET 댐프너
60.895	JOYSTICK, ELECTRONIC HYDRAULIC 조이스틱

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

60.896	JOYSTICK, ELECTRONIC HYDRAULIC 조이스틱
91.789	SPACER, HYDRAULIC VALVE MOUNTING FASTENER 스페이서
91.790	NUT, HYDRAULIC VALVE MOUNTING BRACKET FASTENER 너트
91.793	NUT, HYDRAULIC VALVE MOUNTING BRACKET FASTENER 너트
96.816	FASTENER,JOYSTICK 패스너
97.159	FASTENER, HYDRAULIC VALVE BRACKET DAMPENER 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

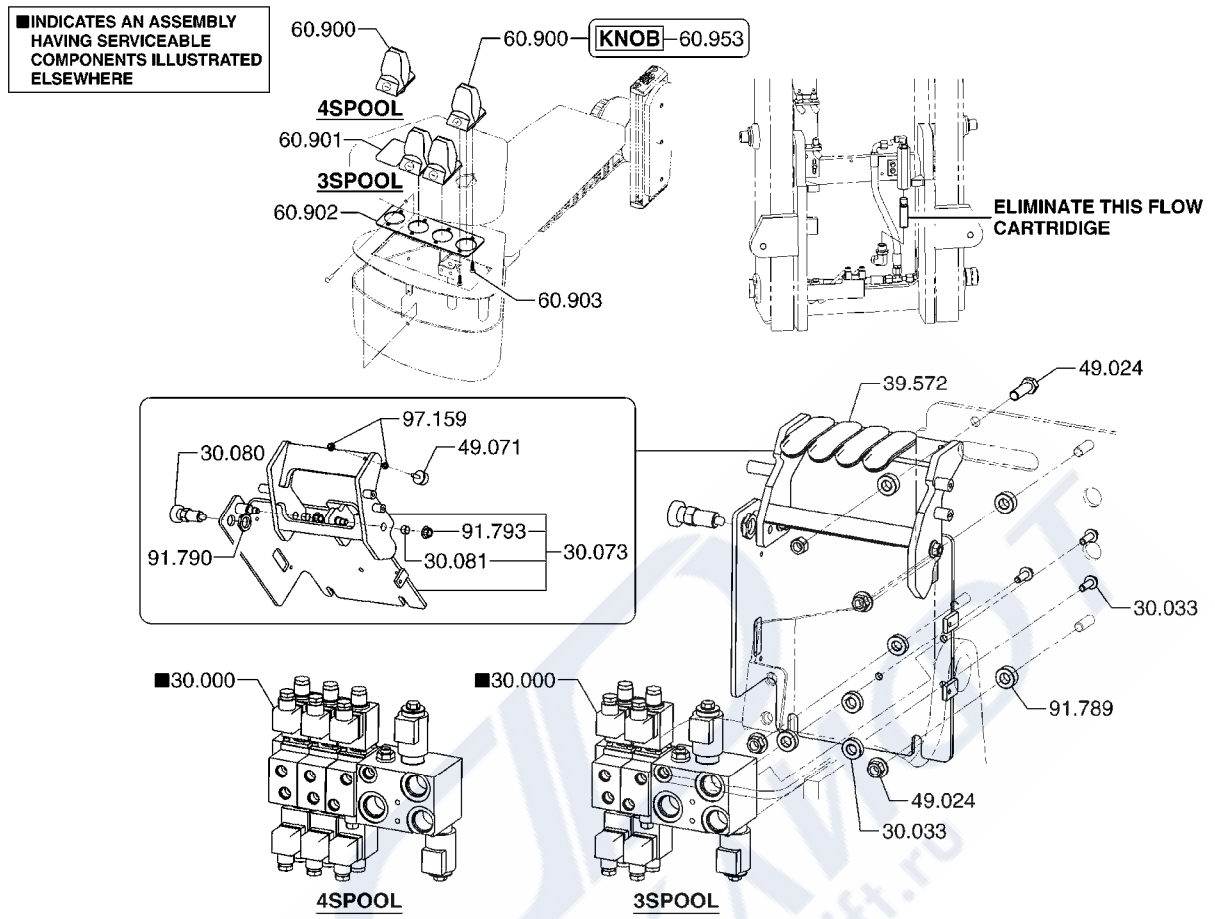

30.000 VALVE ASSEMBLY, HYDRAULIC
밸브

30.033 FASTENER, HYDRAULIC VALVE MOUNTING
패스너

30.073 BRACKET, HYDRAULIC VALVE MOUNTING
브라켓

30.080 PLUNGER, HYDRAULIC VALVE MOUNTING BRACKET
플런저

30.081 BEARING, HYDRAULIC VALVE BRACKET HINGE PIVOT
베어링

39.572 COVER, AUXILIARY VALVE LEVER HOLE
커버

49.024 FASTENER, HYDRAULIC VALVE MOUNTING BRACKET
패스너

49.071 DAMPENER, HYDRAULIC VALVE BRACKET
댐프너

60.900 FINGER TIP, MINI LEVER
핑거팁

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

60.901	PLUG, FINGER TIP 플러그
60.902	PLATE, MINI LEVER 플레이트
60.903	FASTENER, FINGER TIP MOUNTING 패스너
60.953	KNOB, MINI LEVER 노브
91.789	SPACER, HYDRAULIC VALVE MOUNTING FASTENER 스페이서
91.790	NUT, HYDRAULIC VALVE MOUNTING BRACKET FASTENER 너트
91.793	NUT, HYDRAULIC VALVE MOUNTING BRACKET FASTENER 너트
97.159	FASTENER, HYDRAULIC VALVE BRACKET DAMPENER 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

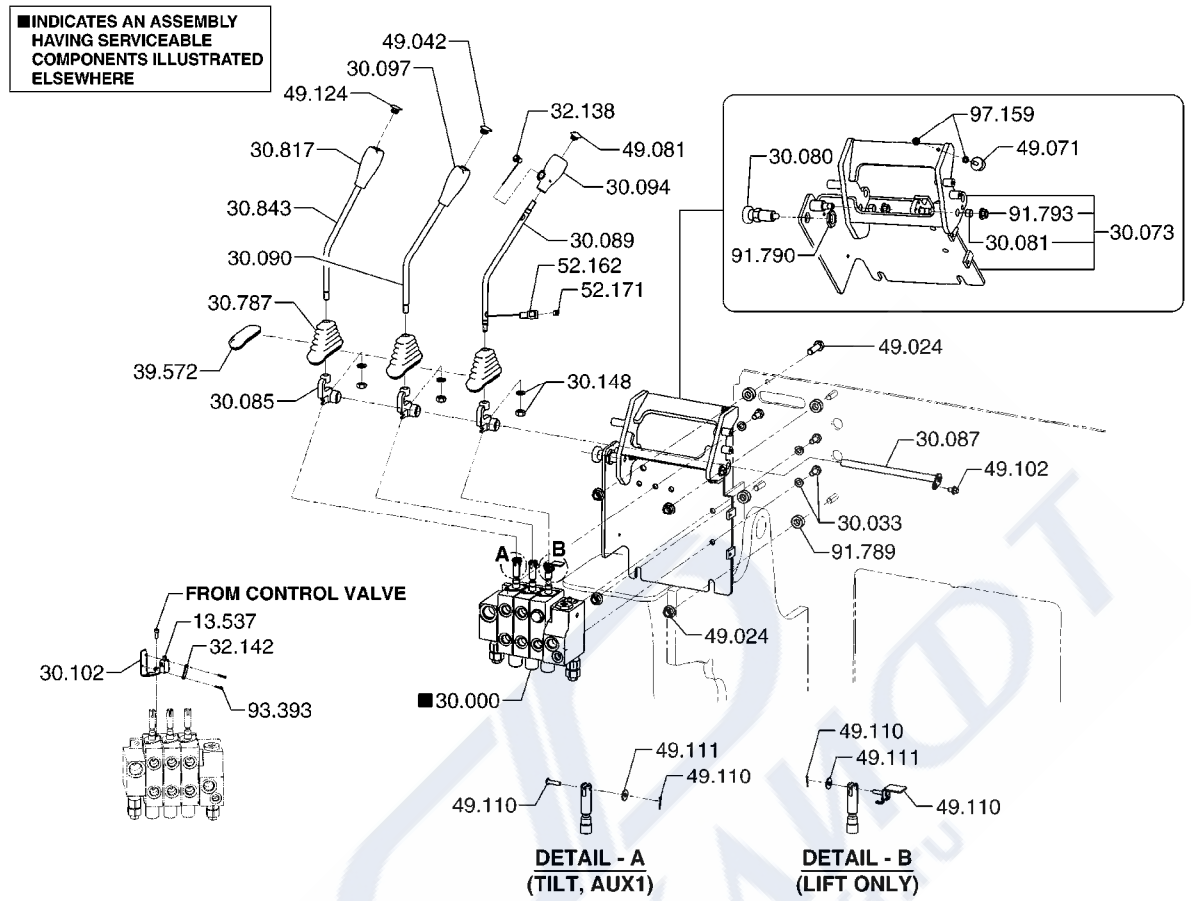

13.537	SWITCH, CONTROL VALVE PUMP OPERATING 스위치	30.817	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.000	VALVE ASSEMBLY, HYDRAULIC 밸브	30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너	32.138	SWITCH, PUSH BUTTON 스위치
30.073	BRACKET, HYDRAULIC VALVE MOUNTING 브라켓	32.142	PLATE, SWITCH MOUNTING BRACKET 플레이트
30.080	PLUNGER, HYDRAULIC VALVE MOUNTING BRACKET 플런저	39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
30.081	BEARING, HYDRAULIC VALVE BRACKET HINGE PIVOT 베어링	49.024	FASTENER, HYDRAULIC VALVE MOUNTING BRACKET 패스너
30.085	LINK, CONTROL VALVE SPOOL 링크	49.042	CAP, TILT CONTROL LEVER 캡
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀	49.071	DAMPENER, HYDRAULIC VALVE BRACKET 댐프너
30.089	LEVER, LIFT CONTROL 레버	49.081	CAP, LIFT CONTROL LEVER 캡
30.090	LEVER, TILT CONTROL 레버	49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
30.094	KNOB, LIFT CONTROL LEVER 노브	49.110	PIN, VALVE SPOOL CLEVIS ROD 핀
30.097	KNOB, TILT CONTROL LEVER 노브	49.111	RETAINER, VALVE SPOOL CLEVIS ROD PIN 리테이너
30.102	BRACKET, HYDRAULIC VALVE SWITCH 브라켓	49.124	CAP, AUXILIARY CONTROL LEVER 캡
30.148	FASTENER, CONTROL LINKAGE BRACKET 패스너	52.162	CONNECTOR, AUXILIARY VALVE LEVER WIRE 커넥터
30.787	BOOT, VALVE CONTROL LEVER 부트	52.171	LOCK, AUXILIARY VALVE LEVER WIRE 로크

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

91.789 SPACER, HYDRAULIC VALVE MOUNTING FASTENER
스페이서

91.790 NUT, HYDRAULIC VALVE MOUNTING BRACKET FASTENER
너트

91.793 NUT, HYDRAULIC VALVE MOUNTING BRACKET FASTENER
너트

93.393 FASTENER, HYDRAULIC VALVE SWITCH BRACKET
패스너

97.159 FASTENER, HYDRAULIC VALVE BRACKET DAMPENER
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

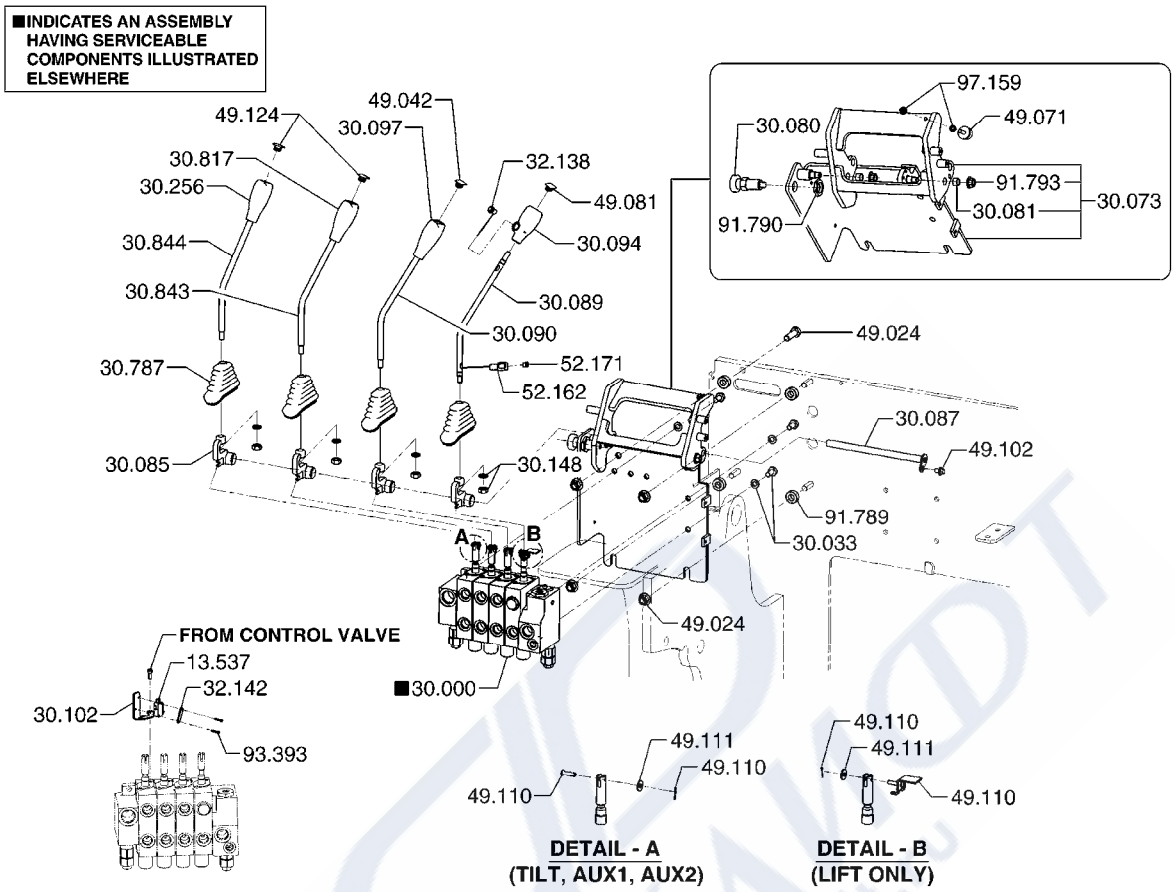

13.537	SWITCH, CONTROL VALVE PUMP OPERATING 스위치
30.000	VALVE ASSEMBLY, HYDRAULIC 밸브
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너
30.073	BRACKET, HYDRAULIC VALVE MOUNTING 브라켓
30.080	PLUNGER, HYDRAULIC VALVE MOUNTING BRACKET 플런저
30.081	BEARING, HYDRAULIC VALVE BRACKET HINGE PIVOT 베어링
30.085	LINK, CONTROL VALVE SPOOL 링크
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀
30.089	LEVER, LIFT CONTROL 레버
30.090	LEVER, TILT CONTROL 레버
30.094	KNOB, LIFT CONTROL LEVER 노브
30.097	KNOB, TILT CONTROL LEVER 노브
30.102	BRACKET, HYDRAULIC VALVE SWITCH 브라켓
30.148	FASTENER, CONTROL LINKAGE BRACKET 패스너
30.256	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.787	BOOT, VALVE CONTROL LEVER 부트
30.817	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버
30.844	LEVER, AUXILIARY VALVE CONTROL (2ND AUX) 레버
32.138	SWITCH, PUSH BUTTON 스위치
32.142	PLATE, SWITCH MOUNTING BRACKET 플레이트
49.024	FASTENER, HYDRAULIC VALVE MOUNTING BRACKET 패스너
49.042	CAP, TILT CONTROL LEVER 캡
49.071	DAMPENER, HYDRAULIC VALVE BRACKET 댐프너
49.081	CAP, LIFT CONTROL LEVER 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.110	PIN, VALVE SPOOL CLEVIS ROD 핀
49.111	RETAINER, VALVE SPOOL CLEVIS ROD PIN 리테이너
49.124	CAP, AUXILIARY CONTROL LEVER 캡
52.162	CONNECTOR, AUXILIARY VALVE LEVER WIRE 커넥터

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

52.171 LOCK, AUXILIARY VALVE LEVER WIRE
로크

91.789 SPACER, HYDRAULIC VALVE MOUNTING FASTENER
스페이서

91.790 NUT, HYDRAULIC VALVE MOUNTING BRACKET FASTENER
너트

91.793 NUT, HYDRAULIC VALVE MOUNTING BRACKET FASTENER
너트

93.393 FASTENER, HYDRAULIC VALVE SWITCH BRACKET
패스너

97.159 FASTENER, HYDRAULIC VALVE BRACKET DAMPENER
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

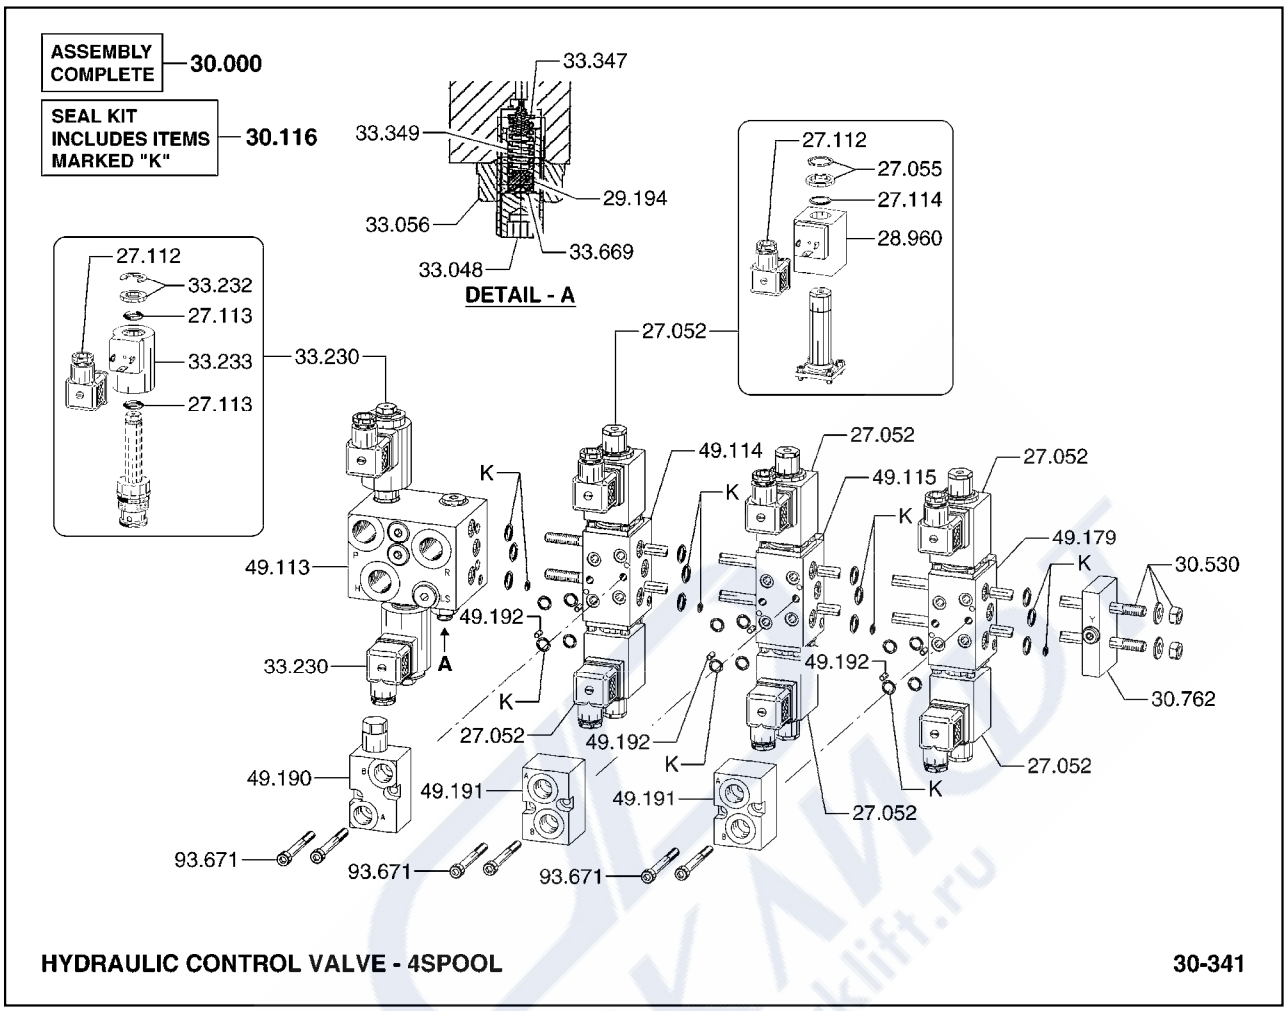

27.052 VALVE ASSEMBLY, AUXILIARY SOLENOID
밸브

27.055 FASTENER, AUXILIARY SOLENOID VALVE
패스너

27.112 PLUG, VALVE SOLENOID TERMINAL
플러그

27.113 SEAL, LIFT VLAVE SOLENOID
씰

27.114 SEAL, AUXILIARY VALVE SOLENOID
씰

28.960 COIL, HYDRAULIC AUXILIARY SOLENOID VALVE
코일

29.194 CAP, RELIEF VALVE
캡

30.000 VALVE ASSEMBLY, HYDRAULIC
밸브

30.116 SEAL KIT, HYDRAULIC VALVE SECTION
씰키트

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

30.530	FASTENER, VALVE THRU 패스너
30.762	END COVER, HYDRAULIC VALVE 엔드커버
33.048	FASTENER, RELIEF VALVE COVER 패스너
33.056	FASTENER, RELIEF VALVE 패스너
33.230	VALVE ASSEMBLY, LIFT SOLENOID 밸브
33.232	FASTENER, LIFT VALVE SOLENOID COIL 패스너
33.233	COIL, LIFT VALVE SOLENOID 코일
33.347	RELIEF VALVE, LIFT LINE CHECK VALVE 릴리프밸브
33.349	SPRING, LIFT LINE CHECK VALVE RELIEF POPPET 스프링
33.669	BALL, RELIEF VALVE POPPET CHECK 볼
49.113	LIFT SECTION, HYDRAULIC VALVE 리프트섹션
49.114	TILT SECTION, HYDRAULIC VALVE 틸트섹션
49.115	AUX SECTION, HYDRAULIC VALVE 보조섹션
49.179	AUX SECTION, HYDRAULIC VALVE 보조섹션
49.190	MANIFOLD, HYDRAULIC VALVE TILT 매니폴드
49.191	MANIFOLD, HYDRAULIC VALVE AUX 매니폴드
49.192	PIN, HYDRAULIC VALVE BODY 핀
93.671	FASTENER, HYDRAULIC VALVE COVER 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

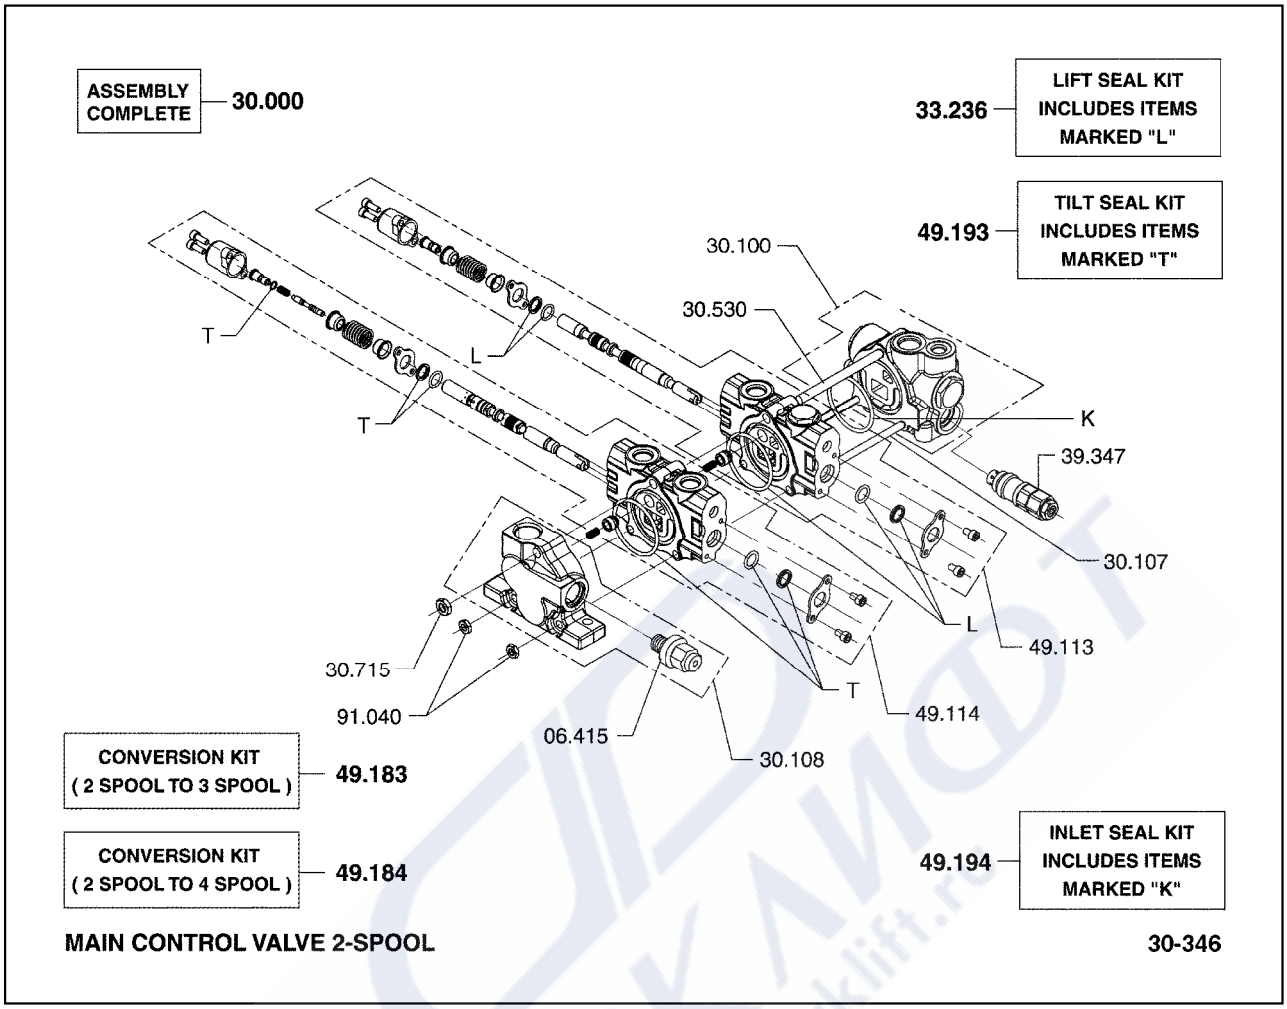

06.415	VALVE, SELECTOR SHUT - OFF 밸브
30.000	VALVE ASSEMBLY, HYDRAULIC 밸브
30.100	INLET SECTION, HYDRAULIC VALVE 인렛섹션
30.106	PLUG, INLET SECTION CHECK VALVE 플러그
30.107	FASTENER, VALVE THRU 패스너
30.530	FASTENER, VALVE THRU 패스너
30.715	FASTENER, VALVE THRU 패스너
33.236	SEAL KIT, LIFT VALVE 씰키트
39.347	FASTENER, CAB REAR WINDOW LATCH 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

49.113	LIFT SECTION, HYDRAULIC VALVE 리프트섹션
49.114	TILT SECTION, HYDRAULIC VALVE 틸트섹션
49.164	ADAPTOR, FILTER 어댑터
49.183	VALVE KIT, 1ST AUXILIARY 밸브키트
49.193	SEAL KIT, TILT SECTION 씰키트
49.194	SEAL KIT, INLET SECTION 씰키트
91.040	NUT, VALVE THRU FASTENER 너트

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

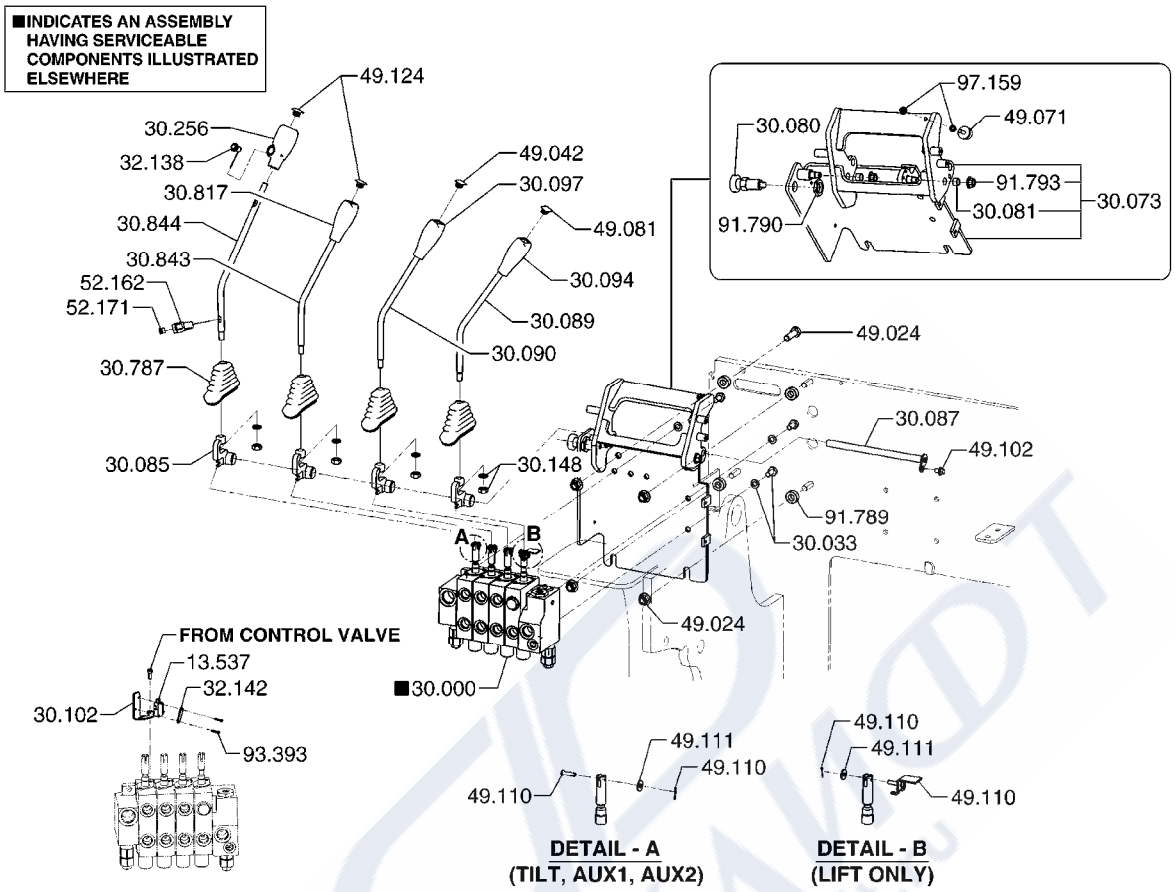

13.537	SWITCH, CONTROL VALVE PUMP OPERATING 스위치
30.000	VALVE ASSEMBLY, HYDRAULIC 밸브
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너
30.073	BRACKET, HYDRAULIC VALVE MOUNTING 브라켓
30.080	PLUNGER, HYDRAULIC VALVE MOUNTING BRACKET 플런저
30.081	BEARING, HYDRAULIC VALVE BRACKET HINGE PIVOT 베어링
30.085	LINK, CONTROL VALVE SPOOL 링크
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀
30.089	LEVER, LIFT CONTROL 레버
30.090	LEVER, TILT CONTROL 레버
30.094	KNOB, LIFT CONTROL LEVER 노브
30.097	KNOB, TILT CONTROL LEVER 노브
30.102	BRACKET, HYDRAULIC VALVE SWITCH 브라켓
30.148	FASTENER, CONTROL LINKAGE BRACKET 패스너
30.256	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.787	BOOT, VALVE CONTROL LEVER 부트
30.817	KNOB, AUXILIARY VALVE CONTROL LEVER 노브
30.843	LEVER, AUXILIARY VALVE CONTROL (1ST AUX) 레버
30.844	LEVER, AUXILIARY VALVE CONTROL (2ND AUX) 레버
32.138	SWITCH, PUSH BUTTON 스위치
32.142	PLATE, SWITCH MOUNTING BRACKET 플레이트
49.024	FASTENER, HYDRAULIC VALVE MOUNTING BRACKET 패스너
49.042	CAP, TILT CONTROL LEVER 캡
49.071	DAMPENER, HYDRAULIC VALVE BRACKET 댐프너
49.081	CAP, LIFT CONTROL LEVER 캡
49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
49.110	PIN, VALVE SPOOL CLEVIS ROD 핀
49.111	RETAINER, VALVE SPOOL CLEVIS ROD PIN 리테이너
49.124	CAP, AUXILIARY CONTROL LEVER 캡
52.162	CONNECTOR, AUXILIARY VALVE LEVER WIRE 커넥터

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

52.171 LOCK, AUXILIARY VALVE LEVER WIRE
로크

91.789 SPACER, HYDRAULIC VALVE MOUNTING FASTENER
스페이서

91.790 NUT, HYDRAULIC VALVE MOUNTING BRACKET FASTENER
너트

91.793 NUT, HYDRAULIC VALVE MOUNTING BRACKET FASTENER
너트

93.393 FASTENER, HYDRAULIC VALVE SWITCH BRACKET
패스너

97.159 FASTENER, HYDRAULIC VALVE BRACKET DAMPENER
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

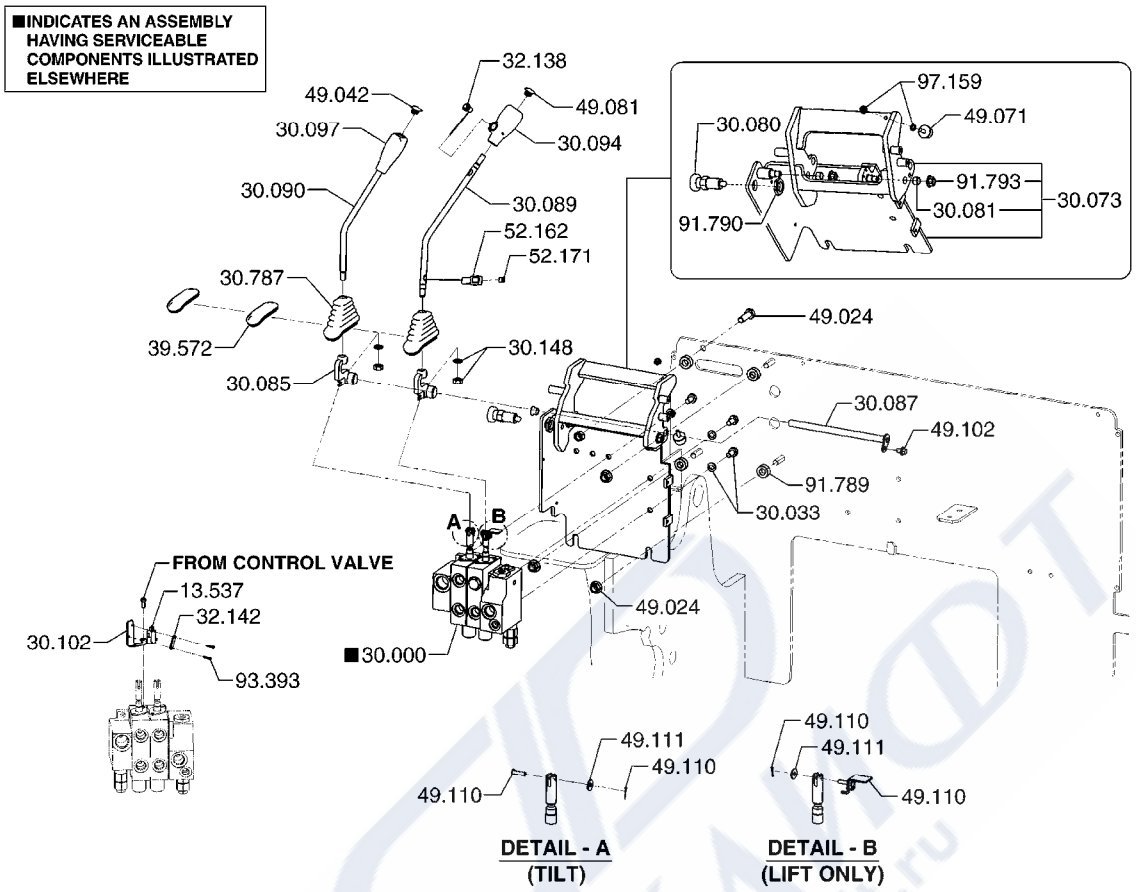

13.537	SWITCH, CONTROL VALVE PUMP OPERATING 스위치	32.138	SWITCH, PUSH BUTTON 스위치
30.000	VALVE ASSEMBLY, HYDRAULIC 밸브	32.142	PLATE, SWITCH MOUNTING BRACKET 플레이트
30.033	FASTENER, HYDRAULIC VALVE MOUNTING 패스너	39.572	COVER, AUXILIARY VALVE LEVER HOLE 커버
30.073	BRACKET, HYDRAULIC VALVE MOUNTING 브라켓	49.024	FASTENER, HYDRAULIC VALVE MOUNTING BRACKET 패스너
30.080	PLUNGER, HYDRAULIC VALVE MOUNTING BRACKET 플런저	49.042	CAP, TILT CONTROL LEVER 캡
30.081	BEARING, HYDRAULIC VALVE BRACKET HINGE PIVOT 베어링	49.071	DAMPENER, HYDRAULIC VALVE BRACKET 댐프너
30.085	LINK, CONTROL VALVE SPOOL 링크	49.081	CAP, LIFT CONTROL LEVER 캡
30.087	PIN, VALVE CONTROL LEVER PIVOT 핀	49.102	FASTENER, VALVE CONTROL LEVER PIVOT RETAINER 패스너
30.089	LEVER, LIFT CONTROL 레버	49.110	PIN, VALVE SPOOL CLEVIS ROD 핀
30.090	LEVER, TILT CONTROL 레버	49.111	RETAINER, VALVE SPOOL CLEVIS ROD PIN 리테이너
30.094	KNOB, LIFT CONTROL LEVER 노브	52.162	CONNECTOR, AUXILIARY VALVE LEVER WIRE 커넥터
30.097	KNOB, TILT CONTROL LEVER 노브	52.171	LOCK, AUXILIARY VALVE LEVER WIRE 로크
30.102	BRACKET, HYDRAULIC VALVE SWITCH 브라켓	91.789	SPACER, HYDRAULIC VALVE MOUNTING FASTENER 스페이서
30.148	FASTENER, CONTROL LINKAGE BRACKET 패스너	91.790	NUT, HYDRAULIC VALVE MOUNTING BRACKET FASTENER 너트
30.787	BOOT, VALVE CONTROL LEVER 부트	91.793	NUT, HYDRAULIC VALVE MOUNTING BRACKET FASTENER 너트

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

93.393 FASTENER, HYDRAULIC VALVE SWITCH BRACKET
패스너

97.159 FASTENER, HYDRAULIC VALVE BRACKET DAMPENER
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

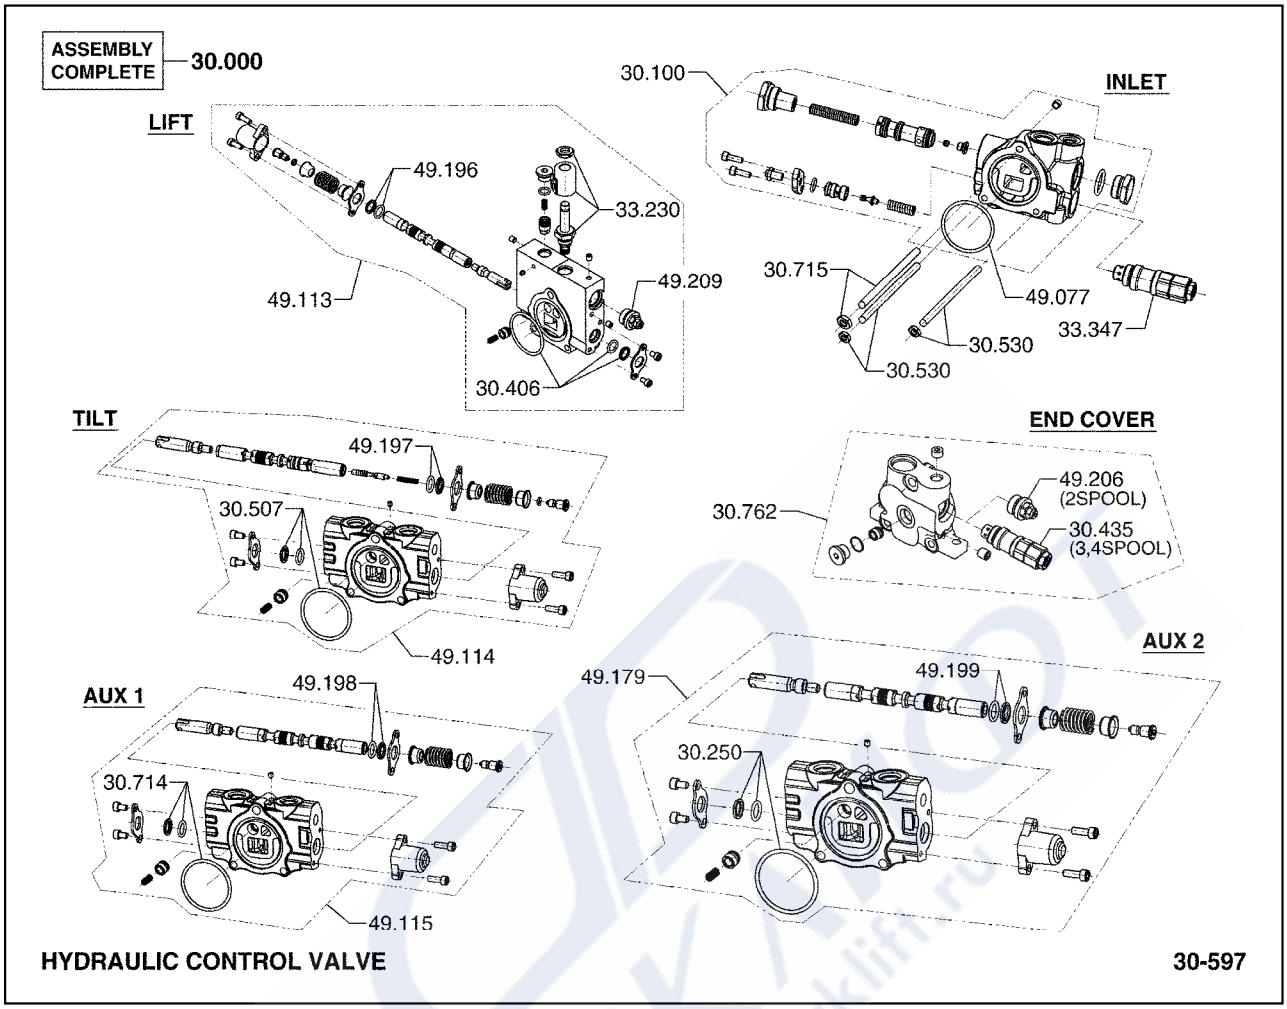

30.000	VALVE ASSEMBLY, HYDRAULIC 밸브
30.100	INLET SECTION, HYDRAULIC VALVE 인렛섹션
30.250	SEAL KIT, HYDRAULIC VALVE SECTION (AUX) 씰키트
30.406	SEAL KIT, HYDRAULIC VALVE (LIFT) 씰키트
30.435	RELIEF VALVE ASSEMBLY, AUXILIARY VALVE 릴리프밸브
30.507	SEAL KIT, HYDRAULIC VALVE (TILT) 씰키트
30.530	FASTENER, VALVE THRU 패스너
30.714	SEAL KIT, HYDRAULIC VALVE SECTION (AUX) 씰키트
30.715	FASTENER, VALVE THRU 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

30.762	END COVER, HYDRAULIC VALVE 엔드커버
33.230	VALVE ASSEMBLY, LIFT SOLENOID 밸브
33.347	RELIEF VALVE, LIFT LINE CHECK VALVE 릴리프밸브
49.077	SEAL, MAIN HYDRAULIC VALVE INLET SECTION 씰
49.113	LIFT SECTION, HYDRAULIC VALVE 리프트섹션
49.114	TILT SECTION, HYDRAULIC VALVE 틸트섹션
49.115	AUX SECTION, HYDRAULIC VALVE 보조섹션
49.179	AUX SECTION, HYDRAULIC VALVE 보조섹션
49.196	SPOOL SEAL KIT, LIFT SECTION 스풀씰키트
49.197	SPOOL SEAL KIT, TILT SECTION 스풀씰키트
49.198	SPOOL SEAL KIT, AUX SECTION 스풀씰키트
49.199	SPOOL SEAL KIT, AUX SECTION 스풀씰키트
49.206	VALVE, HYDRAULIC SHUT-OFF 밸브
49.209	VALVE, HYDRAULIC SHUT-OFF (LIFT) 밸브

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

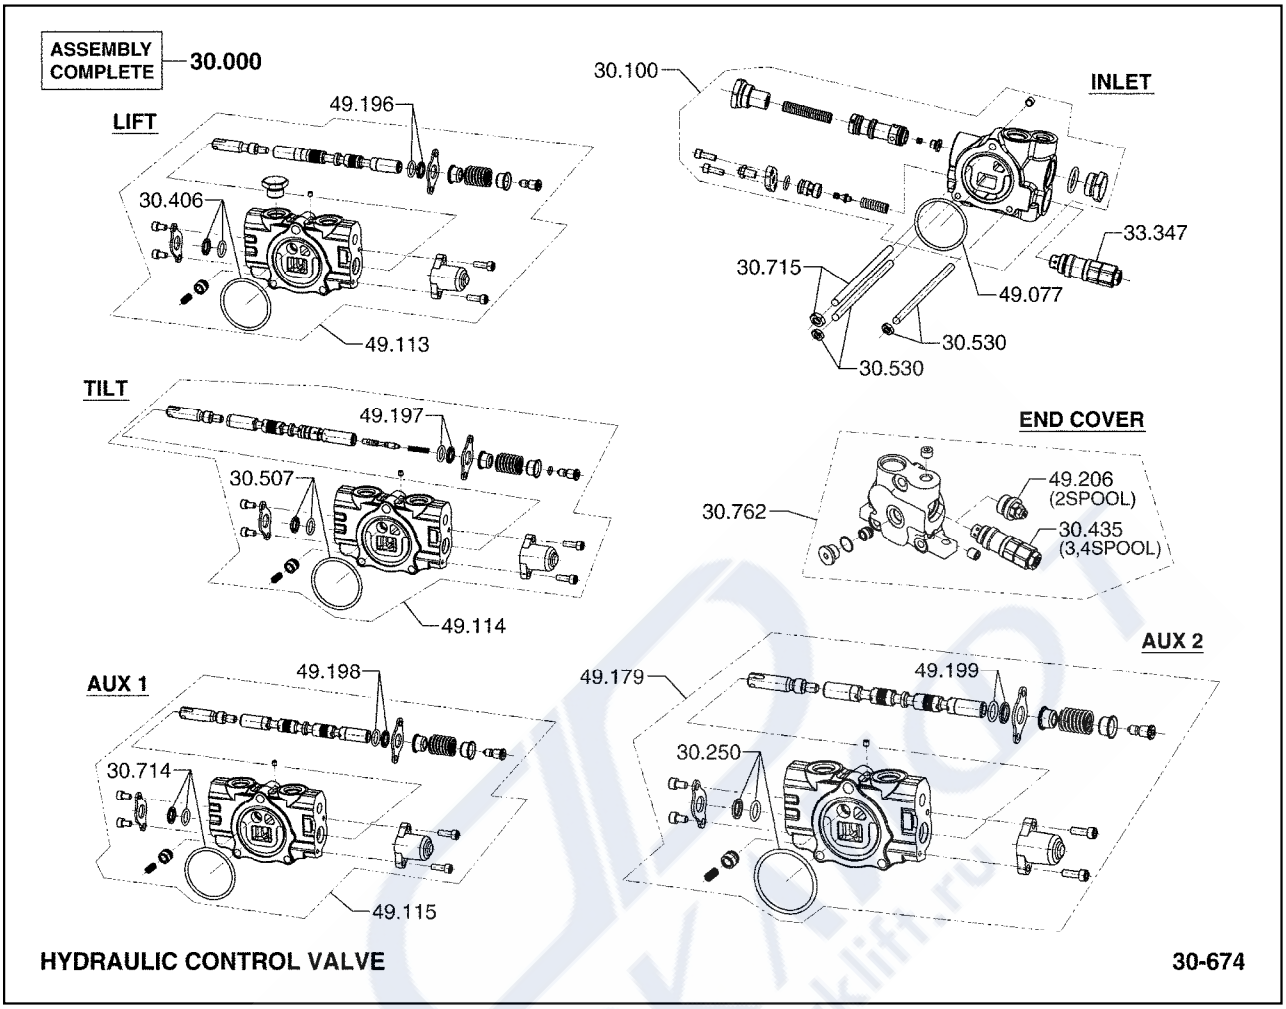

30.000 VALVE ASSEMBLY, HYDRAULIC
밸브

30.100 INLET SECTION, HYDRAULIC VALVE
인렛섹션

30.250 SEAL KIT, HYDRAULIC VALVE SECTION (AUX)
씰키트

30.406 SEAL KIT, HYDRAULIC VALVE (LIFT)
씰키트

30.435 RELIEF VALVE ASSEMBLY, AUXILIARY VALVE
릴리프밸브

30.507 SEAL KIT, HYDRAULIC VALVE (TILT)
씰키트

30.530 FASTENER, VALVE THRU
패스너

30.714 SEAL KIT, HYDRAULIC VALVE SECTION (AUX)
씰키트

30.715 FASTENER, VALVE THRU
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

30.762	END COVER, HYDRAULIC VALVE 엔드커버
33.347	RELIEF VALVE, LIFT LINE CHECK VALVE 릴리프밸브
49.077	SEAL, MAIN HYDRAULIC VALVE INLET SECTION 씰
49.113	LIFT SECTION, HYDRAULIC VALVE 리프트섹션
49.114	TILT SECTION, HYDRAULIC VALVE 틸트섹션
49.115	AUX SECTION, HYDRAULIC VALVE 보조섹션
49.179	AUX SECTION, HYDRAULIC VALVE 보조섹션
49.196	SPOOL SEAL KIT, LIFT SECTION 스풀씰키트
49.197	SPOOL SEAL KIT, TILT SECTION 스풀씰키트
49.198	SPOOL SEAL KIT, AUX SECTION 스풀씰키트
49.199	SPOOL SEAL KIT, AUX SECTION 스풀씰키트
49.206	VALVE, HYDRAULIC SHUT-OFF 밸브

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

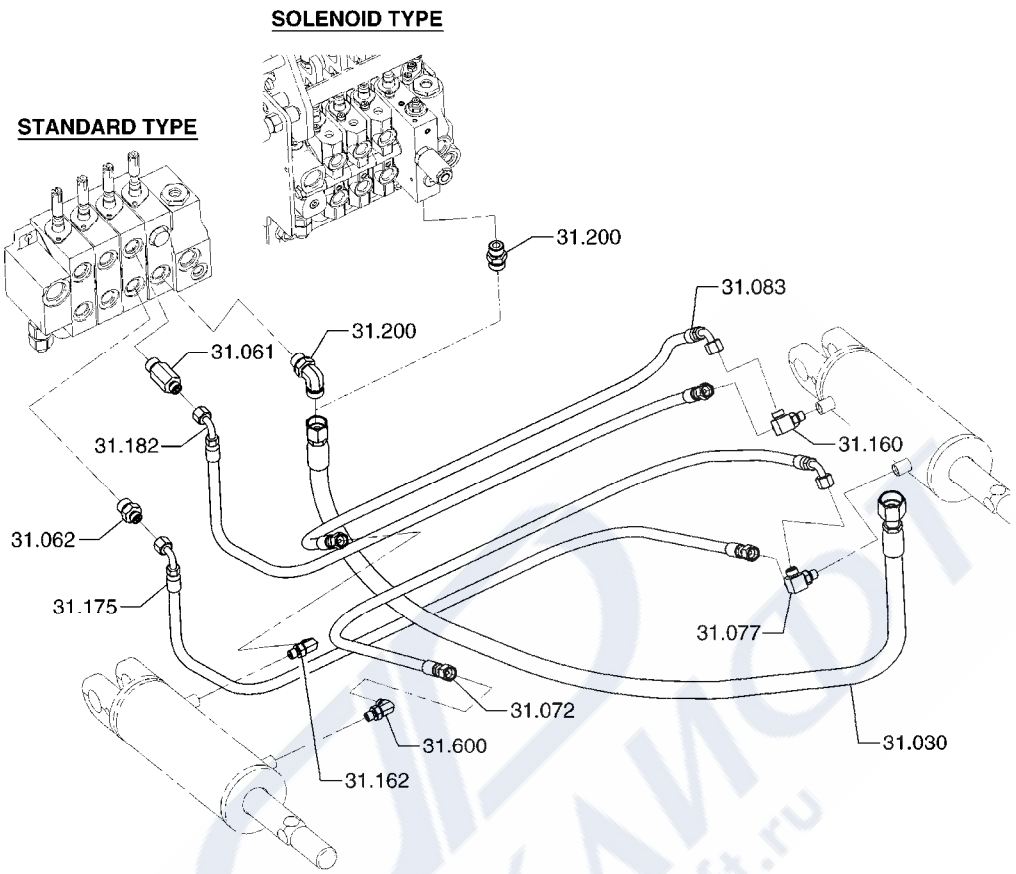

HYDRAULIC LIFT & TILT LINES **31-170**

31.030	LINE, VALVE TO LIFT CYLINDER 라인
31.061	FITTING, VALVE TILT PORT "A" 피팅
31.062	FITTING, VALVE TILT PORT "B" 피팅
31.072	LINE, RH TILT CYLINDER ROD PORT 라인
31.077	FITTING, LH TILT CYLINDER ROD PORT 피팅
31.083	LINE, RH TILT CYLINDER ANCHOR PORT 라인
31.160	FITTING, LH TILT CYLINDER ANCHOR PORT 피팅
31.162	FITTING, RH TILT CYLINDER ANCHOR PORT 피팅
31.175	LINE, VALVE TILT PORT "B" 라인

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

31.182 LINE, VALVE TILT PORT "A"
라인

31.200 FITTING, MAIN VALVE LIFT PORT
피팅

31.600 FITTING, RH TILT CYLINDER ROD PORT
피팅

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

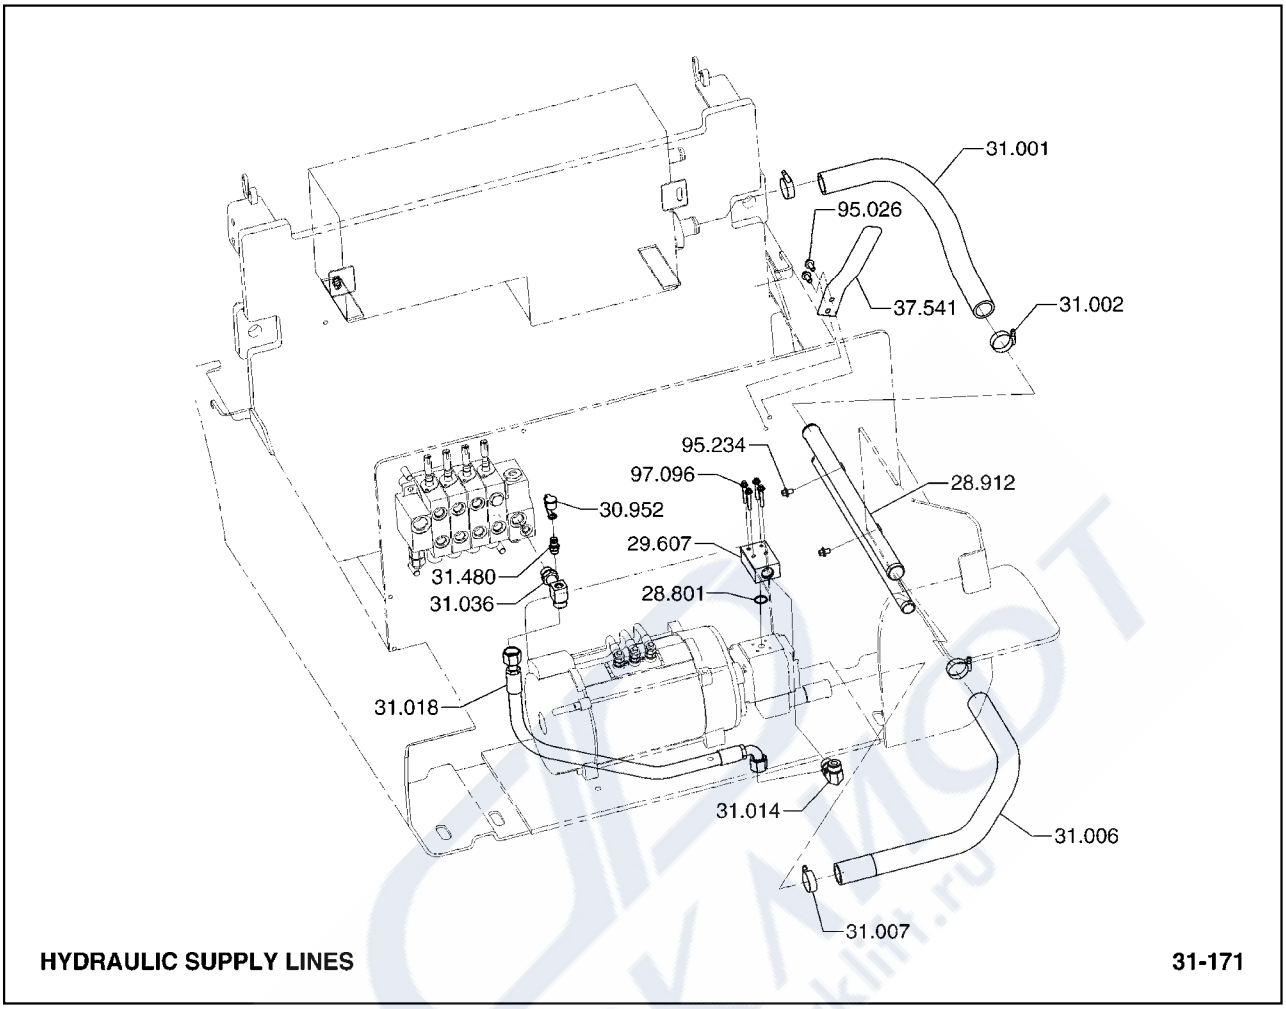

28.801 SEAL, HYD PUMP OUTLET PORT FITTING
씰

28.912 LINE, HYDRAULIC SUMP TO PUMP
라인

29.607 MANIFOLD, HYDRAULIC PUMP OUTLET LINE
매니폴드

30.952 DUST CAP, PRESSURE GAUGE PORT FITTING
더스트캡

31.001 LINE, SUMP OUTLET
라인

31.002 CLAMP, SUMP OUTLET LINE
클램프

31.006 LINE, PUMP INLET
라인

31.007 CLAMP, PUMP INLET LINE
클램프

31.014 FITTING, PUMP OUTLET
피팅

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

31.018	LINE, PUMP OUTLET 라인
31.036	FITTING, MAIN VALVE INLET PORT 피팅
31.480	PLUG, PRESSURE GAUGE PORT 플러그
37.541	COVER, HYDRAULIC LINES 커버
95.026	FASTENER, HYDRAULIC LINES COVER 패스너
95.234	FASTENER, HYDRAULIC LINE CLAMP BRACKET 패스너
97.096	FASTENER, HYDRAULIC PUMP OUTLET LINE MANIFOLD 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

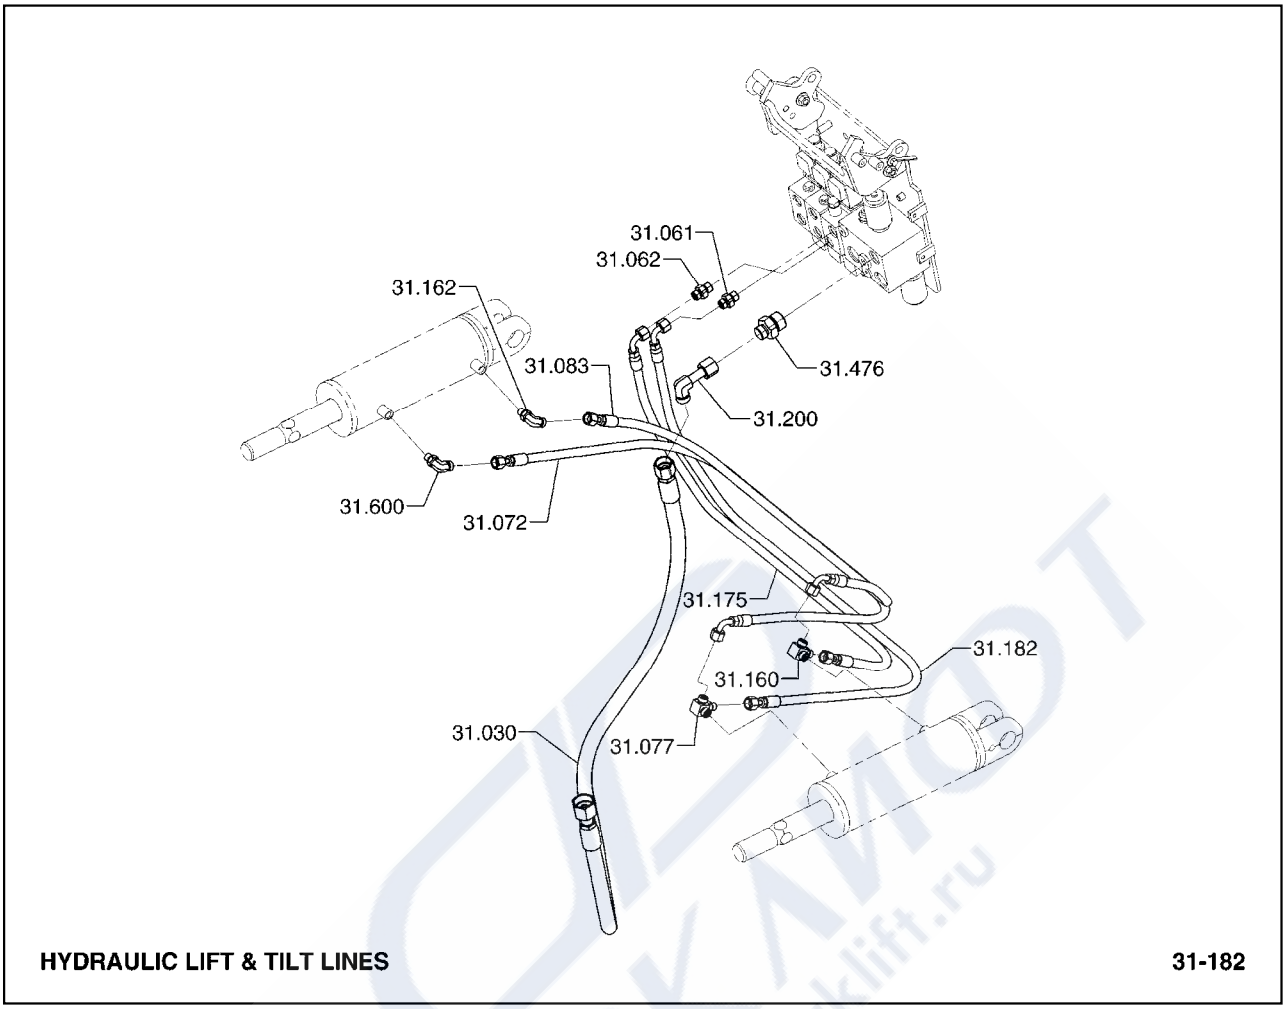

31.030 LINE, VALVE TO LIFT CYLINDER
라인

31.061 FITTING, VALVE TILT PORT "A"
피팅

31.062 FITTING, VALVE TILT PORT "B"
피팅

31.072 LINE, RH TILT CYLINDER ROD PORT
라인

31.077 FITTING, LH TILT CYLINDER ROD PORT
피팅

31.083 LINE, RH TILT CYLINDER ANCHOR PORT
라인

31.160 FITTING, LH TILT CYLINDER ANCHOR PORT
피팅

31.162 FITTING, RH TILT CYLINDER ANCHOR PORT
피팅

31.175 LINE, VALVE TILT PORT "B"
라인

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

31.182	LINE, VALVE TILT PORT "A" 라인
31.200	FITTING, MAIN VALVE LIFT PORT 피팅
31.476	FITTING, VALVE LIFT PORT 피팅
31.600	FITTING, RH TILT CYLINDER ROD PORT 피팅

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

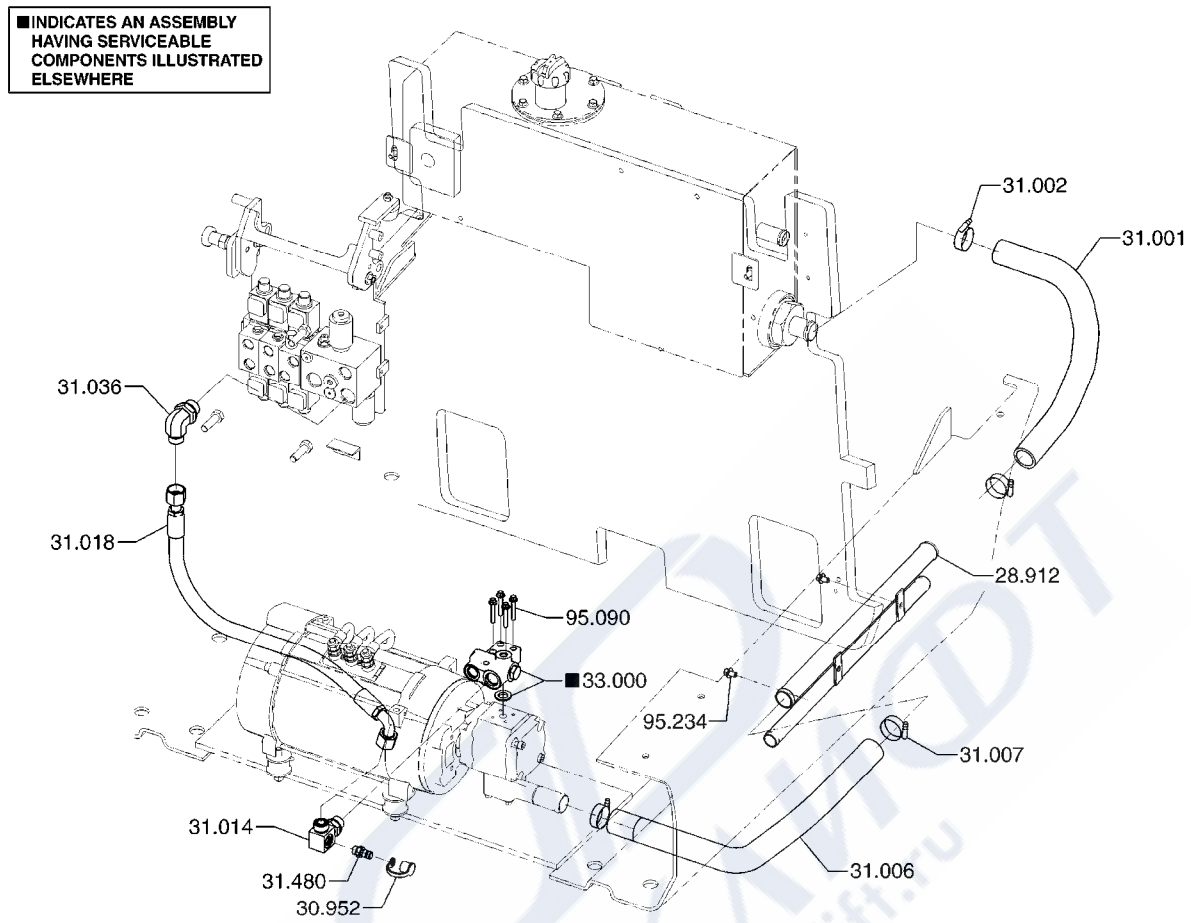

28.912 LINE, HYDRAULIC SUMP TO PUMP
라인

30.952 DUST CAP, PRESSURE GAUGE PORT FITTING
더스트캡

31.001 LINE, SUMP OUTLET
라인

31.002 CLAMP, SUMP OUTLET LINE
클램프

31.006 LINE, PUMP INLET
라인

31.007 CLAMP, PUMP INLET LINE
클램프

31.014 FITTING, PUMP OUTLET
피팅

31.018 LINE, PUMP OUTLET
라인

31.036 FITTING, MAIN VALVE INLET PORT
피팅

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

31.480	PLUG, PRESSURE GAUGE PORT 플러그
33.000	VALVE ASSEMBLY, FLOW CONTROL 밸브
95.090	FASTENER, HYDRAULIC PRIORITY VALVE 패스너
95.234	FASTENER, HYDRAULIC LINE CLAMP BRACKET 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

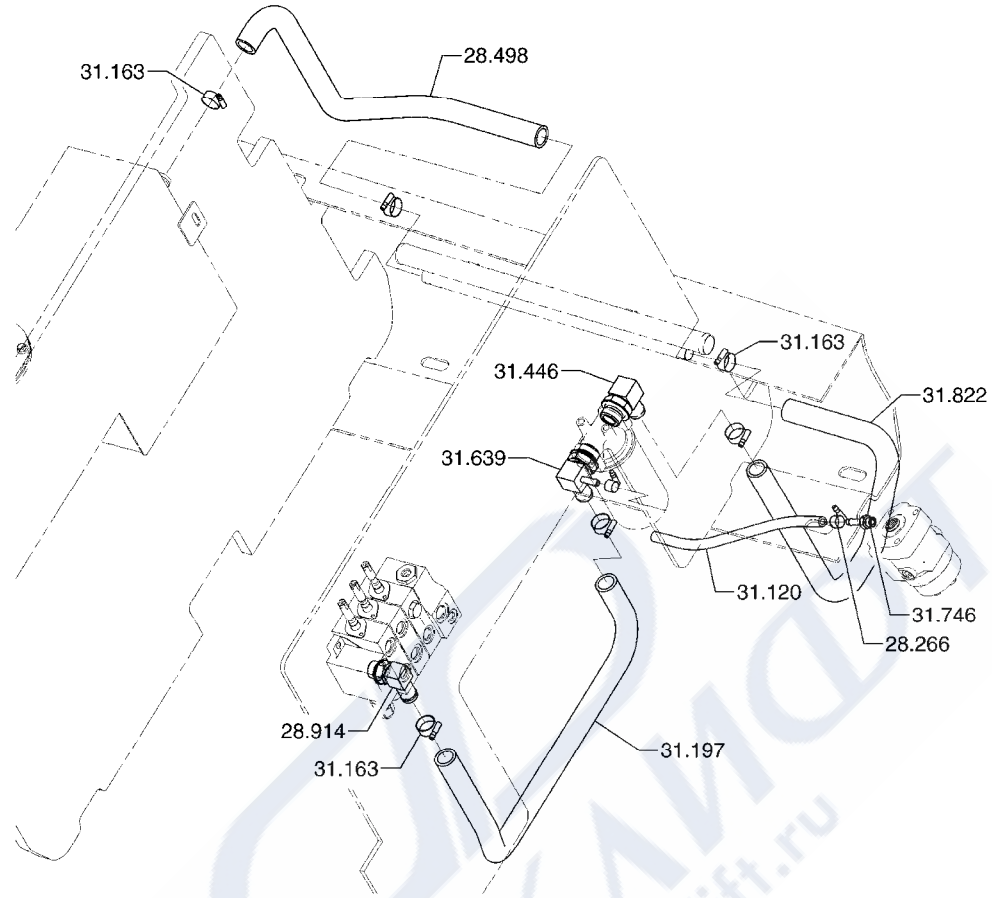

HYDRAULIC RETURN LINES **31-199**

28.266	CLAMP, POWER STEERING SUMP RETURN LINE 클램프
28.498	LINE, SUMP RETURN 라인
28.914	FITTING, VALVE SUMP RETURN PORT 피팅
31.120	LINE, SUMP RETURN (POWER STEERING) 라인
31.163	CLAMP, SUMP RETURN LINE 클램프
31.197	LINE, MAIN VALVE TO SUMP RETURN 라인
31.446	FITTING, FILTER OUTLET PORT 피팅
31.639	FITTING, FILTER INLET PORT 피팅
31.746	FITTING, POWER STEERING SUMP RETURN PORT 피팅

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

31.822 LINE, FILTER OUTLET TO SUMP
라인

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

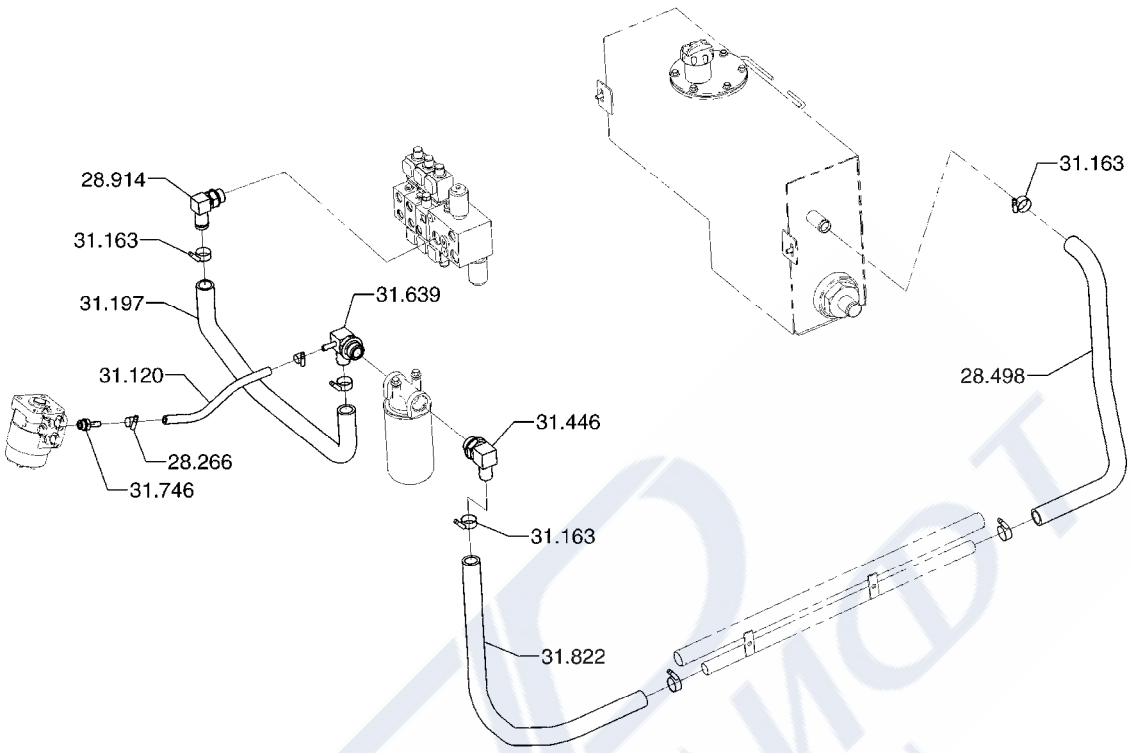

HYDRAULIC RETURN LINES **31-326**

28.266 CLAMP, POWER STEERING SUMP RETURN LINE
클램프

28.498 LINE, SUMP RETURN
라인

28.914 FITTING, VALVE SUMP RETURN PORT
피팅

31.120 LINE, SUMP RETURN (POWER STEERING)
라인

31.163 CLAMP, SUMP RETURN LINE
클램프

31.197 LINE, MAIN VALVE TO SUMP RETURN
라인

31.446 FITTING, FILTER OUTLET PORT
피팅

31.639 FITTING, FILTER INLET PORT
피팅

31.746 FITTING, POWER STEERING SUMP RETURN PORT
피팅

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

31.822 LINE, FILTER OUTLET TO SUMP
라인

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

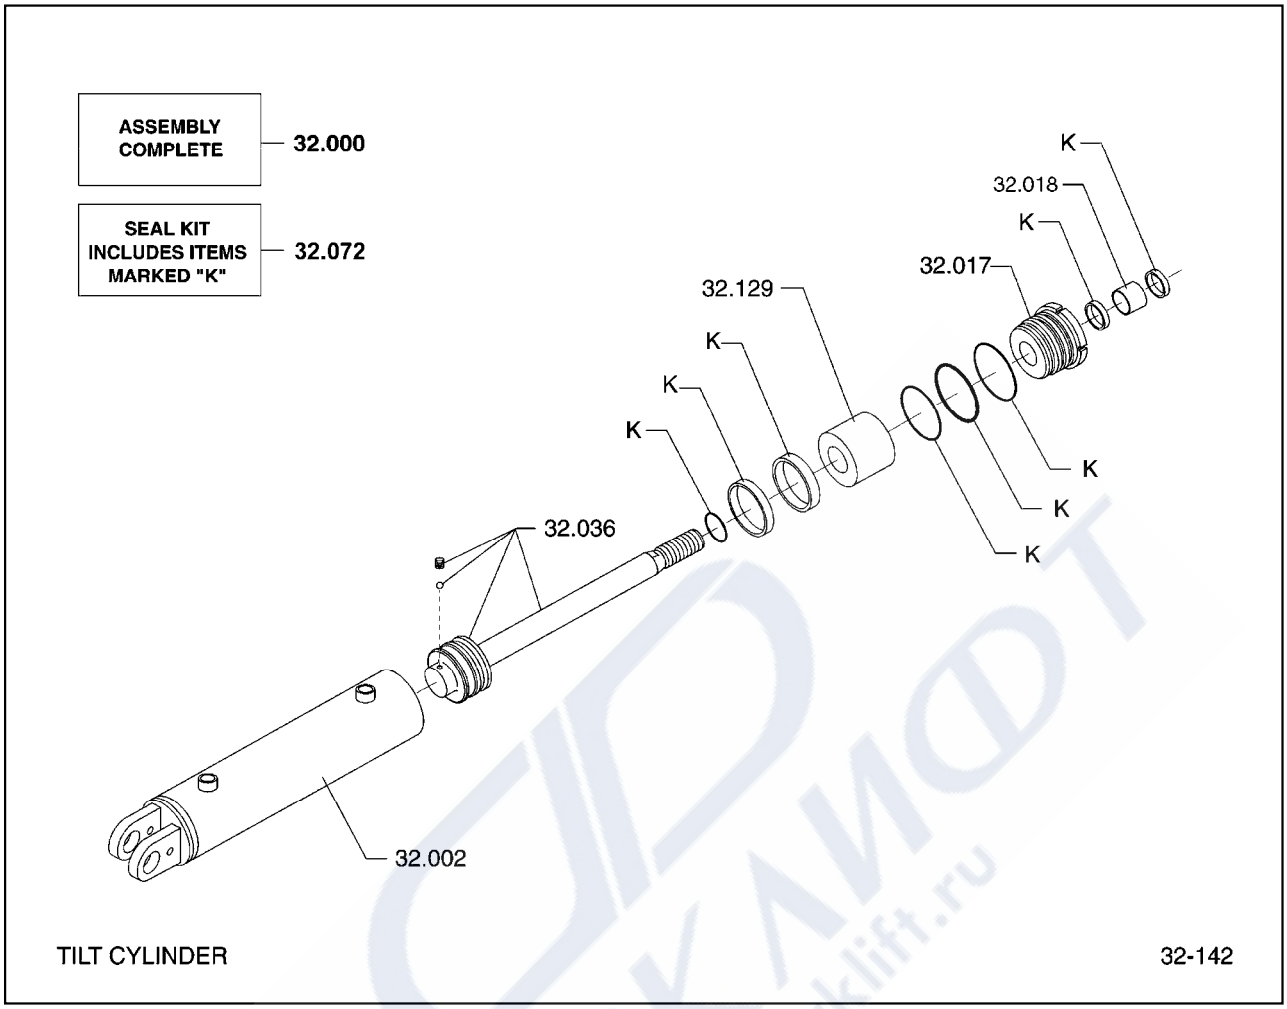

32.000	CYLINDER ASSEMBLY, TILT 실린더
32.002	CYLINDER ASSEMBLY, WELDED 실린더
32.017	GLAND, TILT CYLINDER 그랜드
32.018	BUSHING, TILT CYLINDER GLAND 부싱
32.036	ROD & PISTON ASSEMBLY, TILT CYLINDER 로드& 피스톤
32.072	PACKING KIT, TILT CYLINDER 패킹키트
32.129	SPACER, TILT CYLINDER BARREL END 스페이서

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

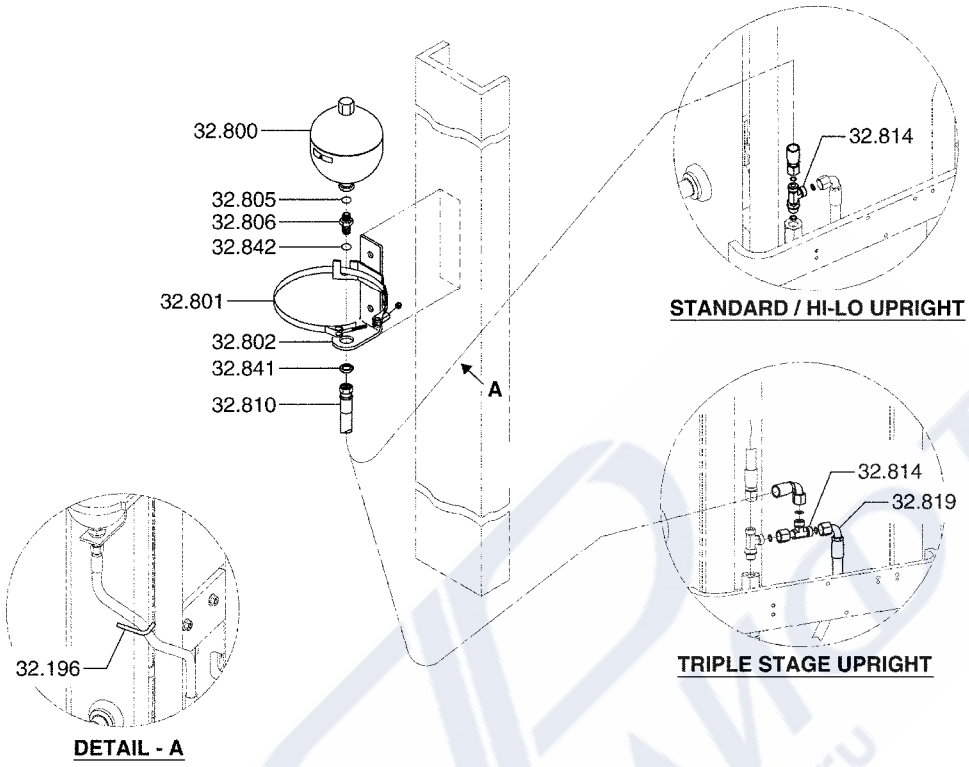

ACCUMULATOR INSTALLATION **32-144**

32.196	ROD, HYDRAULIC ACCUMULATOR LINE 로드
32.800	ACCUMULATOR, HYDRAULIC 어큐뮬레이터
32.801	CLAMP, HYDRAULIC ACCUMULATOR MOUNTING 클램프
32.802	BRACKET, HYDRAULIC ACCUMULATOR 브라켓
32.805	SEAL, HYDRAULIC ACCUMULATOR CONNECTOR 씰
32.806	CONNECTOR, HYDRAULIC ACCUMULATOR 커넥터
32.810	LINE, HYDRAULIC ACCUMULATOR 라인
32.814	FITTING, HYDRAULIC ACCUMULATOR LINE 피팅
32.819	LINE, HYDRAULIC ACCUMULATOR 라인

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

32.841 NUT, HYDRAULIC ACCUMULATOR FITTING
너트

32.842 SEAL, HYDRAULC ACCUMULATOR FITTING
씰

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

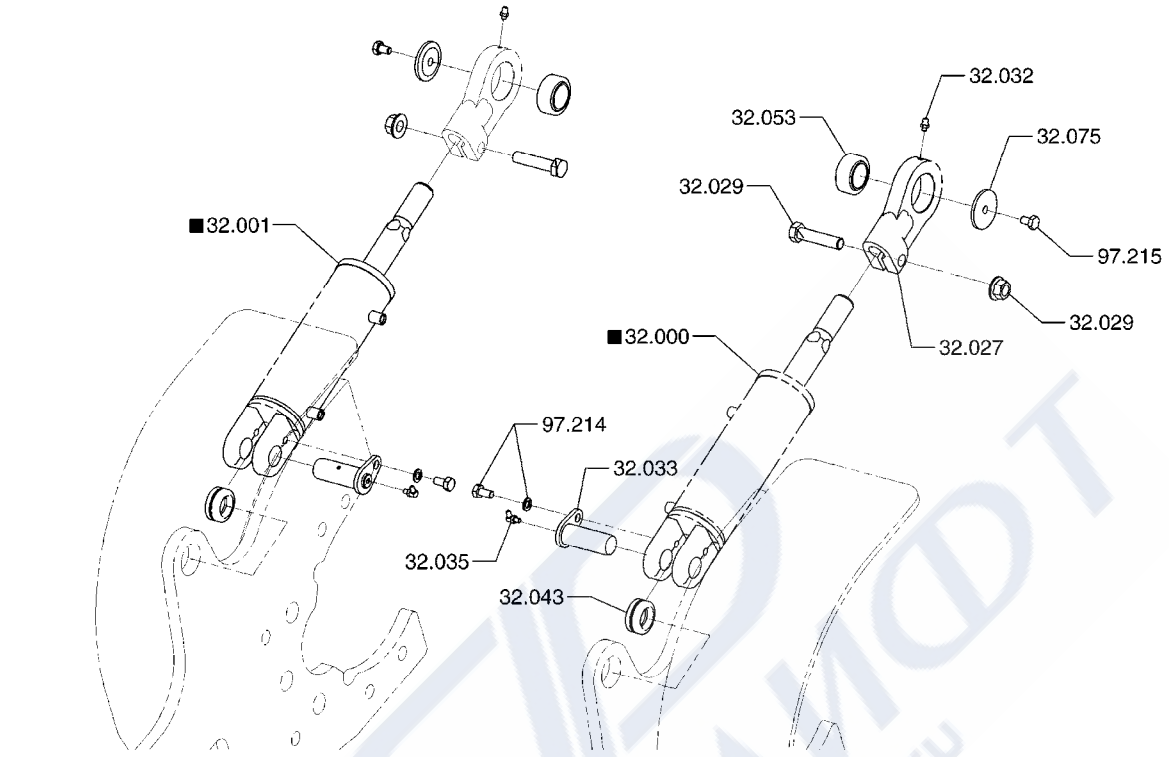

TILT CYLINDER MOUNTING **32-145**

32.000	CYLINDER ASSEMBLY, TILT 실린더
32.001	TILT CYLINDER ASSEMBLY (LH) 틸트실린더
32.027	END, RH TILT CYLINDER ROD 엔드
32.029	FASTENER, TILT CYLINDER ROD END 패스너
32.032	FITTING, TILT CYLINDER TO UPRIGHT PIN LUB 피팅
32.033	PIN, TILT CYLINDER REAR MOUNTING RH 핀
32.035	FITTING, TILT CYLINDER TO FRAME PIN LUB 피팅
32.043	BEARING, TILT CYLINDER FRAME MOUNTING 베어링
32.053	BEARING, TILT CYLINDER ROD END 베어링

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

32.075	RETAINER, TILT CYL ROD END BEARING 리테이너
97.124	FASTENER, POWER STEERING MOTOR SENSOR MAGNET 패스너
97.215	FASTENER, TILT CYL ROD END BEARING RETAINER 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

■ INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

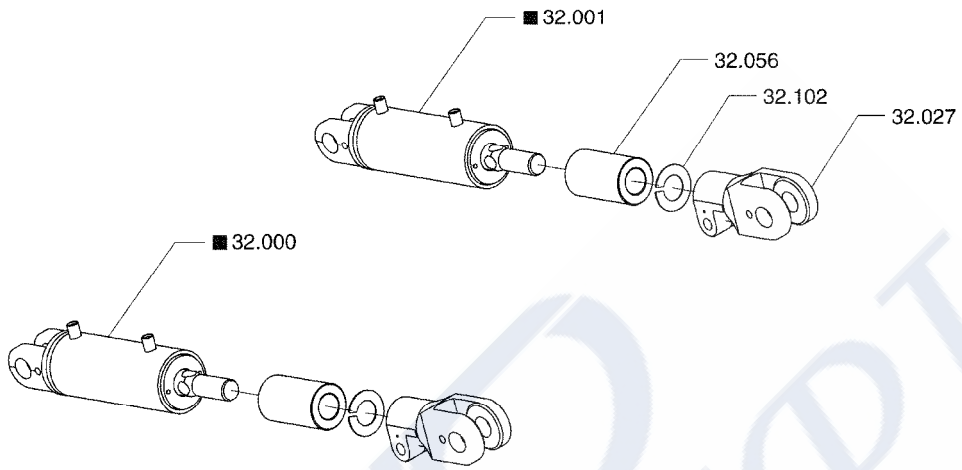

TILT AMOUNT GP **32-167**

32.000	CYLINDER ASSEMBLY, TILT 실린더
32.001	TILT CYLINDER ASSEMBLY (LH) 틸트실린더
32.027	END, RH TILT CYLINDER ROD 엔드
32.056	SPACER, TILT CYLINDER ROD END 스페이서
32.102	SHIM, TILT CYLINDER STROKE ADJUSTING 심

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

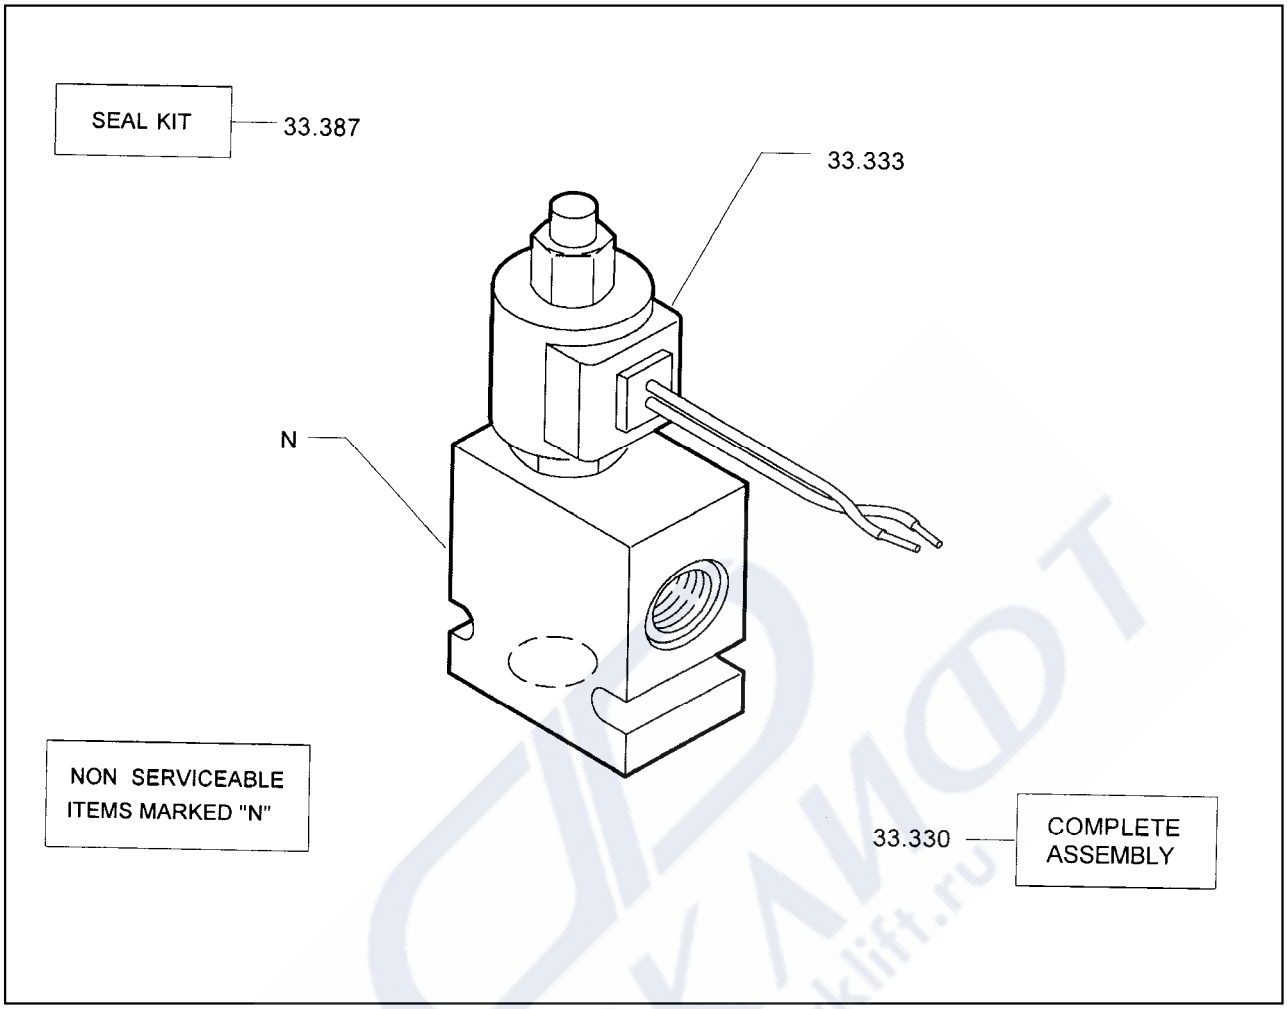

33.330 VALVE ASSEMBLY, CLAMP SOLENOID
밸브

33.333 COIL, CLAMP VALVE SOLENOID
코일

33.387 SEAL KIT, DEVICE SELECTOR VALVE
씰키트

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

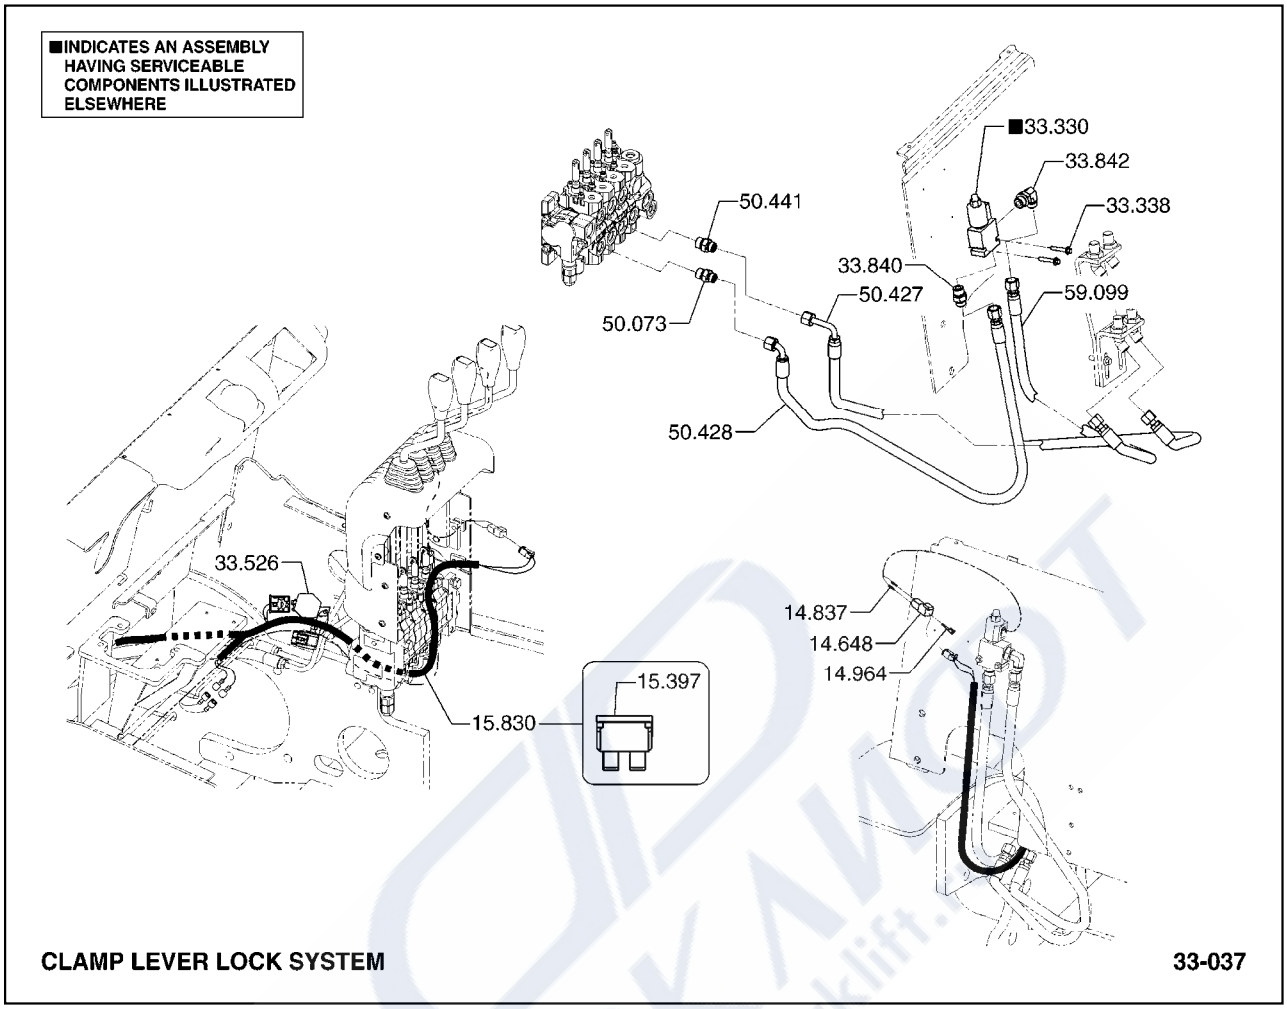

14.648 CONNECTOR, SOLENOID VALVE FEED WIRE
커넥터

14.837 TERMINAL, SOLENOID VALVE WIRING CONNECTOR
터미널

14.964 LOCK, SOLENOID VALVE FEED WIRE CONNECTOR
로크

15.397 FUSE, SOLENOID VALVE
퓨즈

15.830 WIRING HARNESS, CLAMP SOLENOID VALVE
와이어하네스

33.330 VALVE ASSEMBLY, CLAMP SOLENOID
밸브

33.338 FASTENER, CLAMP SOLENOID VALVE
패스너

33.526 RELAY, CLAMP SOLENOID VALVE
릴레이

33.840 FITTING, CLAMP SOLENOID VALVE INLET PORT
피팅

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

33.842	FITTING, CLAMP SOLENOID VALVE OUTLET PORT 피팅
50.073	FITTING, 2ND AUXILIARY VALVE "B" PORT 피팅
50.427	LINE, 2ND AUXILIARY VALVE "A" PORT 라인
50.428	LINE, 2ND AUXILIARY VALVE "B" PORT 라인
50.441	FITTING, 2ND AUXILIARY VALVE "A" PORT 피팅
59.099	LINE, 2ND AUXILIARY FUNCTION 라인

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

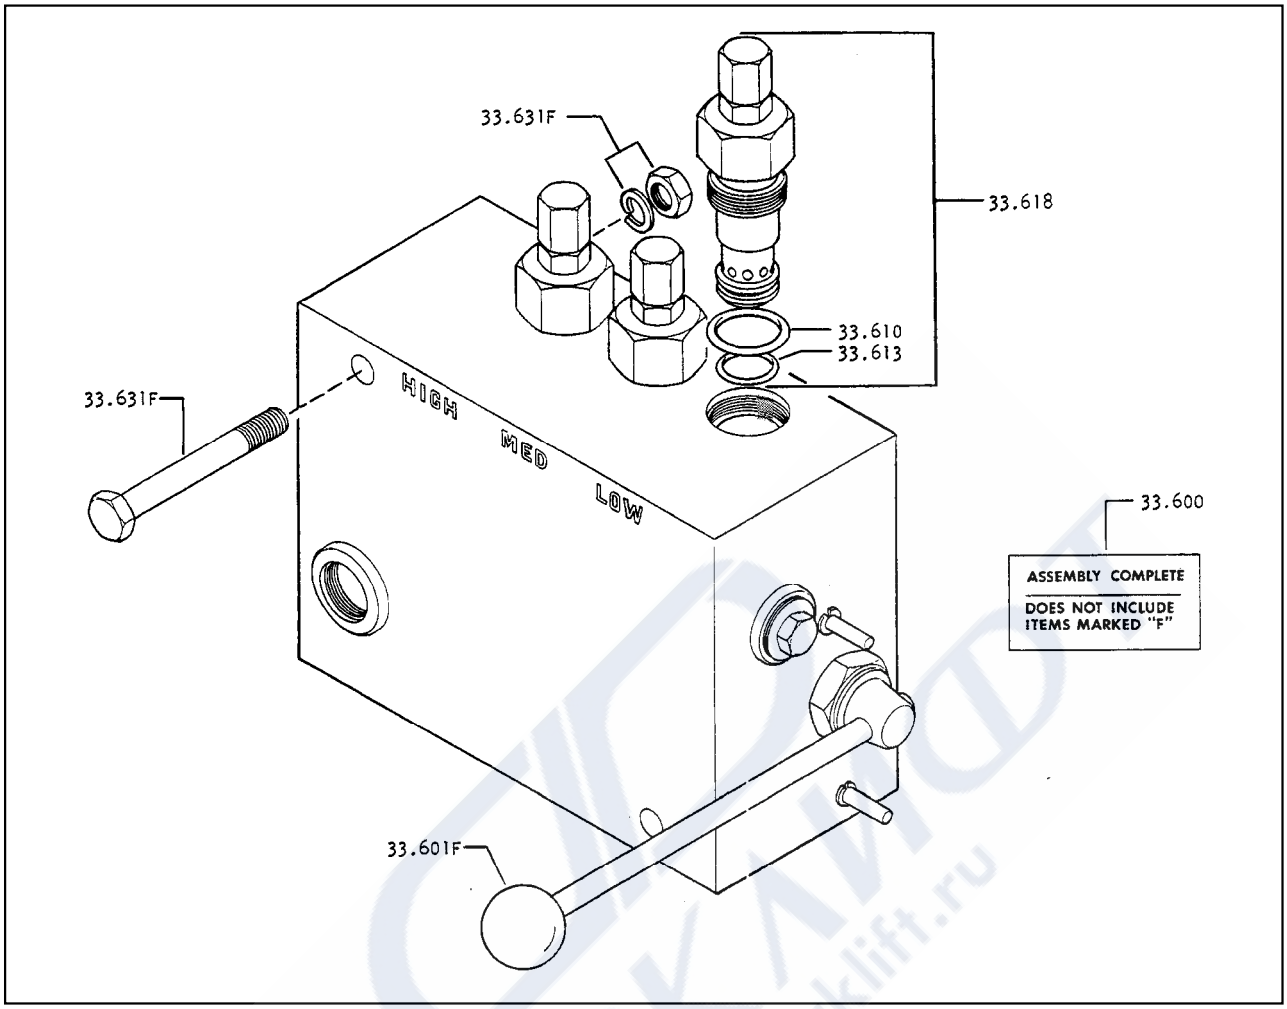

33.600 RELIEF VALVE, DEVICE VARIABLE PRESSURE
릴리프밸브

33.601 LEVER, DEVICE VARIABLE RELIEF VALVE
레버

33.610 SEAL, DEVICE PRESS RELIEF VAL CHECK PORT PLUG
씰

33.613 SEAL, DEVICE RELIEF VALVE PISTON ADJ END
씰

33.618 CARTRIDGE KIT, DEVICE VARIABLE RELIEF VALVE
카트리지키트

33.631 FASTENER, DEVICE RELIEF VALVE
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

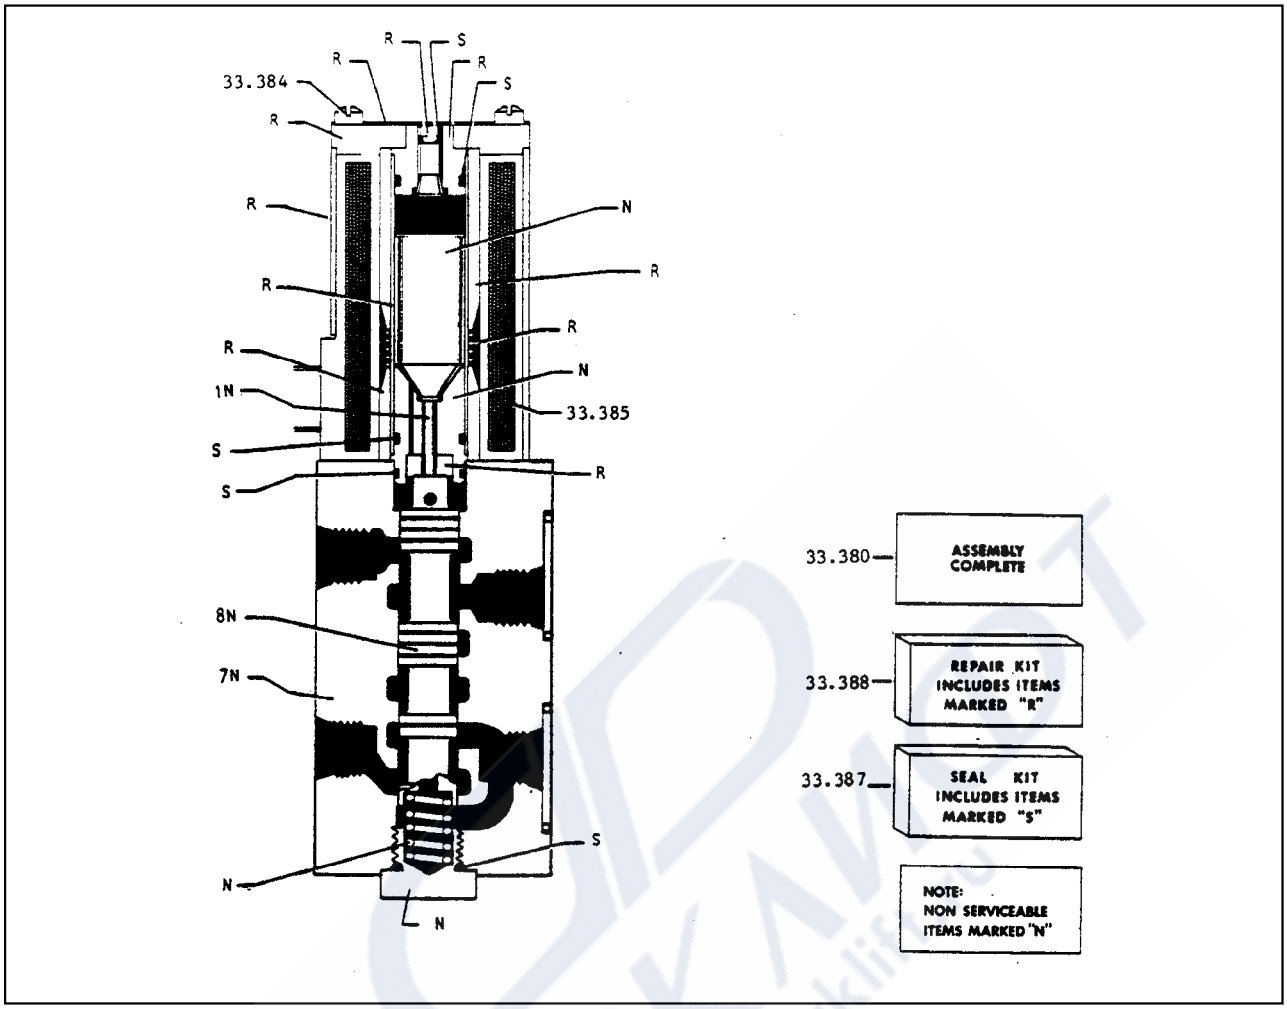

33.380 VALVE ASSEMBLY, DEVICE SELECTOR SOLENOID
밸브

33.384 FASTENER, DEV SELECTOR VALVE SOLENOID COIL
패스너

33.385 COIL, DEVICE SELECTOR VALVE SOLENOID
코일

33.387 SEAL KIT, DEVICE SELECTOR VALVE
씰키트

33.388 REPAIR KIT, DEVICE SELECTOR VALVE
리페어키트

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

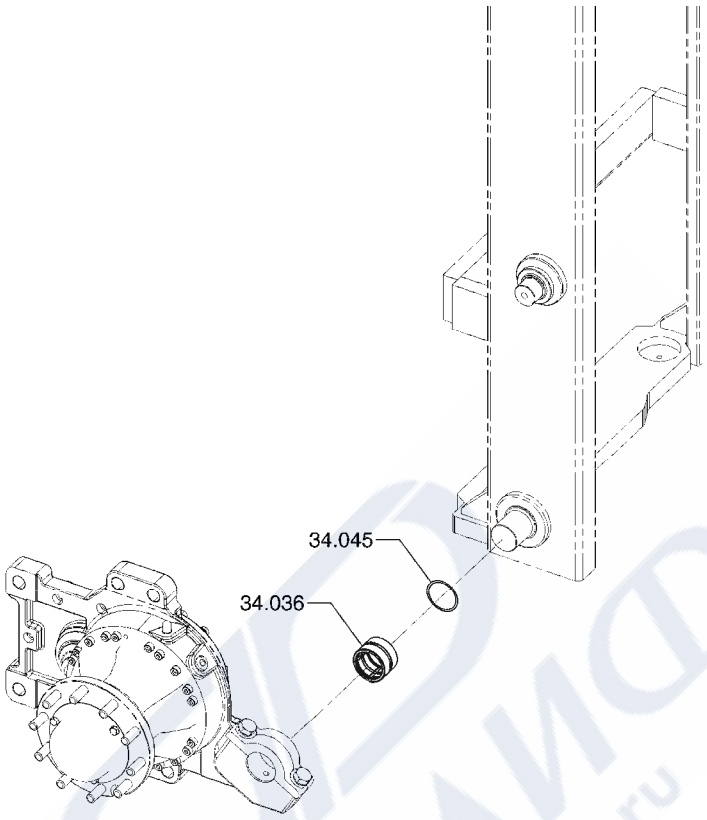

UPRIGHT MOUNTING **34-009**

34.036 BUSHING, UPRIGHT TRUNNION
부싱

34.045 SHIM, UPRIGHT TRUNNION
심

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

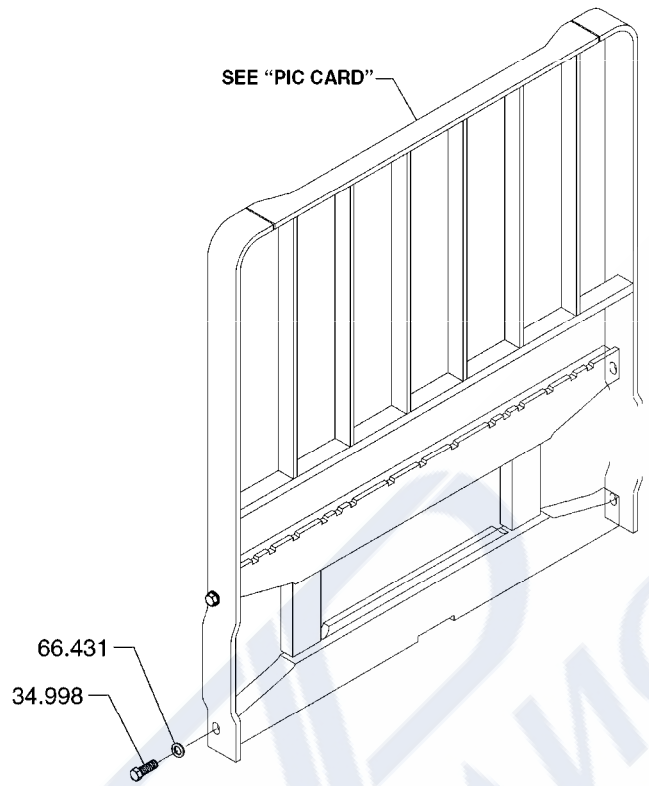

LOAD BACK REST MOUNTING **34-044**

34.998 FASTENER, LOAD SAFETY BACK REST
패스너

66.431 RETAINER, LBR CAPSCREW
리테이너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

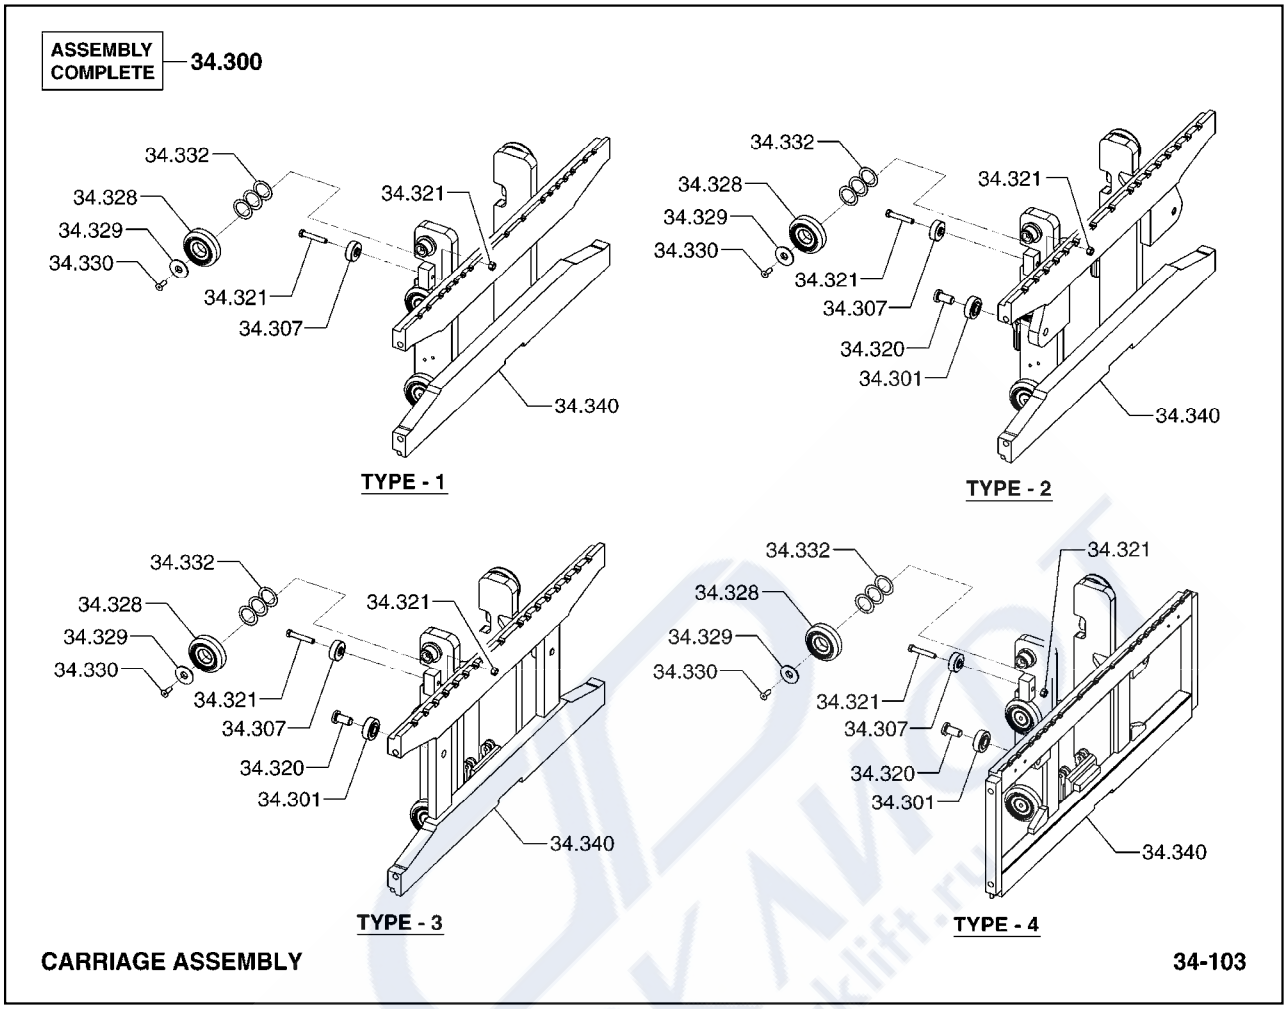

34.300 ASSEMBLY, FORK BARS & CARRIAGE
캐리지

34.301 ROLLER, CARRIAGE OUTER THRUST
롤러

34.307 ROLLER, CARRIAGE INNER THRUST
롤러

34.320 SHAFT, CARRIAGE OUTER THRUST ROLLER
샤프트

34.321 FASTENER, CARRIAGE ROLLER SHAFT
패스너

34.328 ROLLER, CARRIAGE CAPTIVE
롤러

34.329 RETAINER, CARRIAGE CAPTIVE ROLLER
리테이너

34.330 FASTENER, CARRIAGE CAPTIVE ROLLER RETAINER
패스너

34.332 SHIM, CARRIAGE CAPTIVE ROLLER
심

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

34.340 CARRIAGE WELDED ASSEMBLY
캐리지용접물

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

This Carriage assembly was manufactured by the CASCADE CORPORATION and is not serviced by CLARK Material Handling Company.

CASCADE parts manuals, technical specifications and lists of worldwide distributors are available on-line at:

http://www.cascorp.com.

When ordering service parts, it will be necessary to provide CASCADE with the CASCADE model and serial numbers of the carriage. CASCADE will not recognize the CLARK carriage part number listed on the PIC or in PartsPRO.

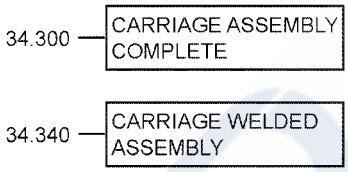

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

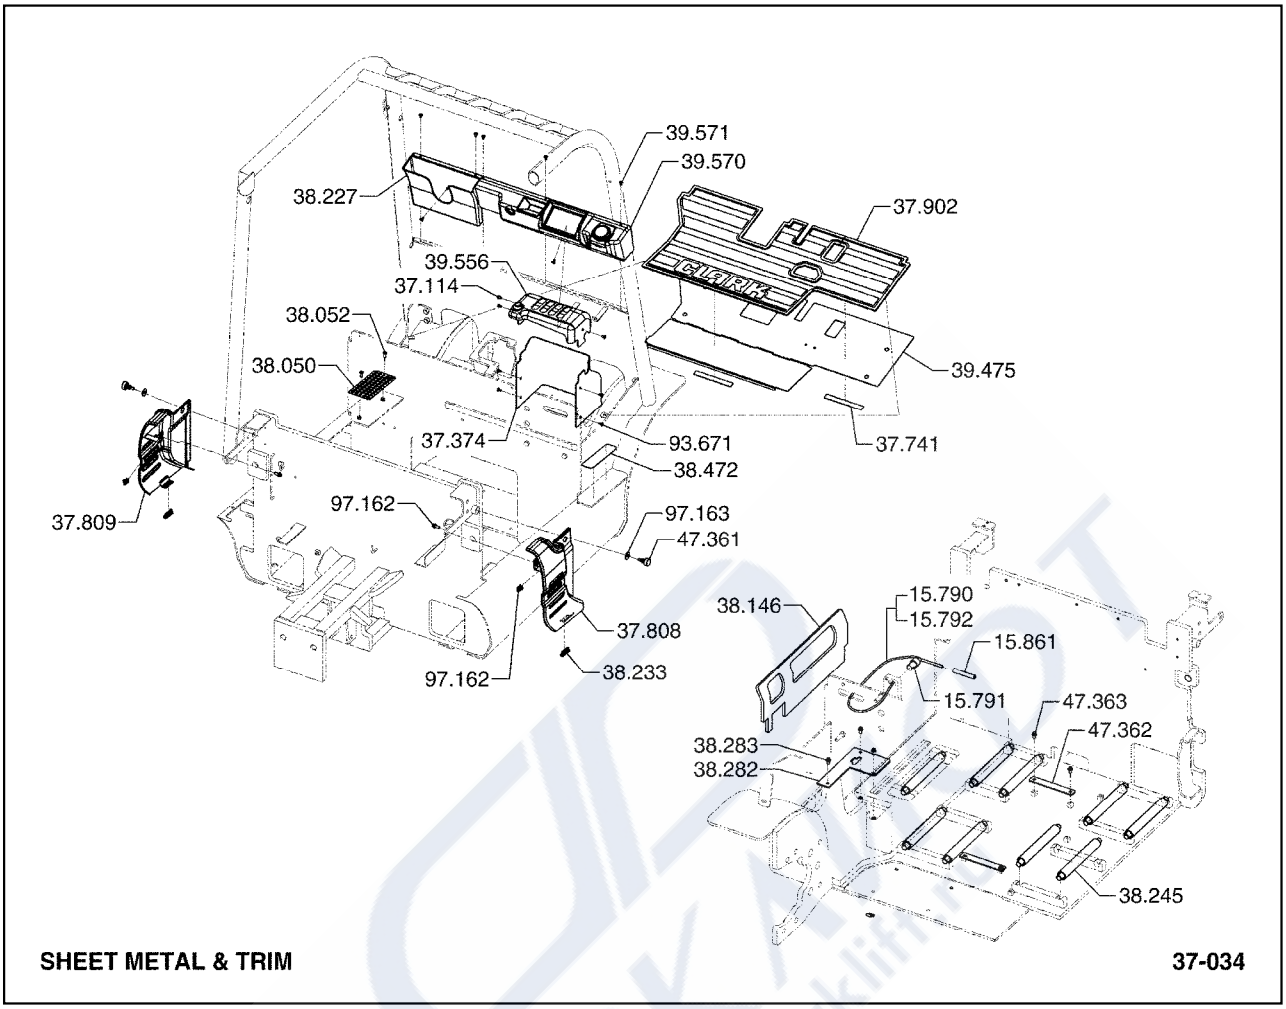

15.790	WIRE, BATTERY STOPPER 와이어	38.245	ROLLER ASSEMBLY, BATTERY 롤러
15.791	HOLDER, BATTERY 홀더	38.282	COVER, BATTERY RETAINER INTERLOCK SWITCH 커버
15.792	SLEEVE, BATTERY STOOPER WIRE 슬리브	38.283	FASTENER, BATTERY RETAINER INTERLOCK SWITCH COVE 패스너
15.861	SHIELD, SPARK PROVENTION 쉴드	38.472	PAD, RH STEP NON-SKID 패드
37.114	FASTENER, VALVE LINKAGE ACCESS COVER 패스너	39.475	PLATE, FRONT FLOOR 플레이트
37.374	COVER, HYDRAULIC VALVE 커버	39.556	COVER, VALVE LINKAGE ACCESS 커버
37.741	SOUND ABSORBER, FLOOR PLATE 흡음재	39.570	COVER ASSEMBLY, DASH 커버
37.808	COVER, REAR RH 커버	39.571	FASTENER, DASH COVER 패스너
37.809	COVER, REAR LH 커버	47.361	KNOB, SIDE COVER 노브
37.902	MAT, FLOORPLATE 매트	47.362	COVER, CABLE PROTECTION 커버
38.050	STEP ASSEMBLY, LH 스텝	47.363	FASTENER, CABLE PROTECTION COVER 패스너
38.052	FASTENER, STEP FRONT 패스너	93.671	FASTENER, HYDRAULIC VALVE COVER 패스너
38.146	PLATE, BATTERY STOP 플레이트	97.162	FASTENER, SIDE COVER TO FRAME 패스너
38.227	POCKET, DASH PANEL 포켓	97.163	FASTENER, SIDE COVER 패스너
38.233	RUBBER, FRAME SIDE COVER 러버		

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

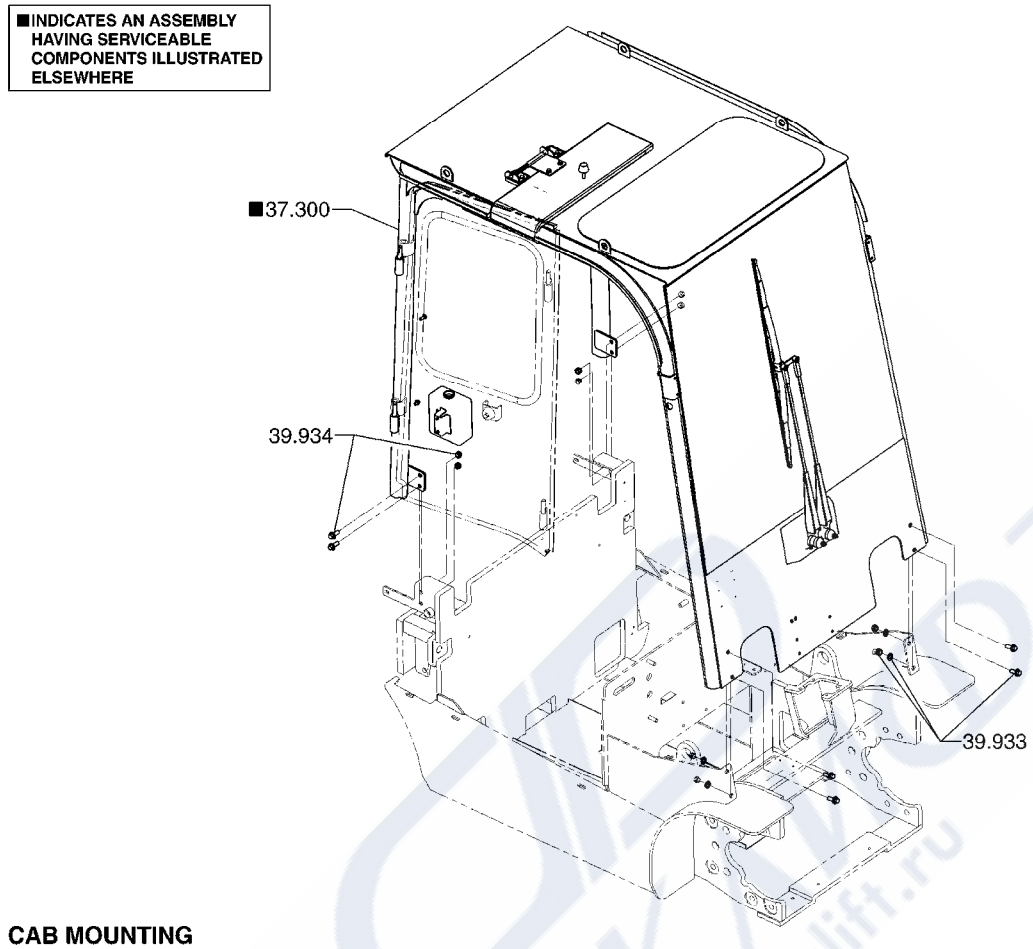

37.300	CAB ASSEMBLY 캐빈
39.933	FASTENER, OVERHEAD GUARD 패스너
39.934	FASTENER, OVERHEAD GUARD 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

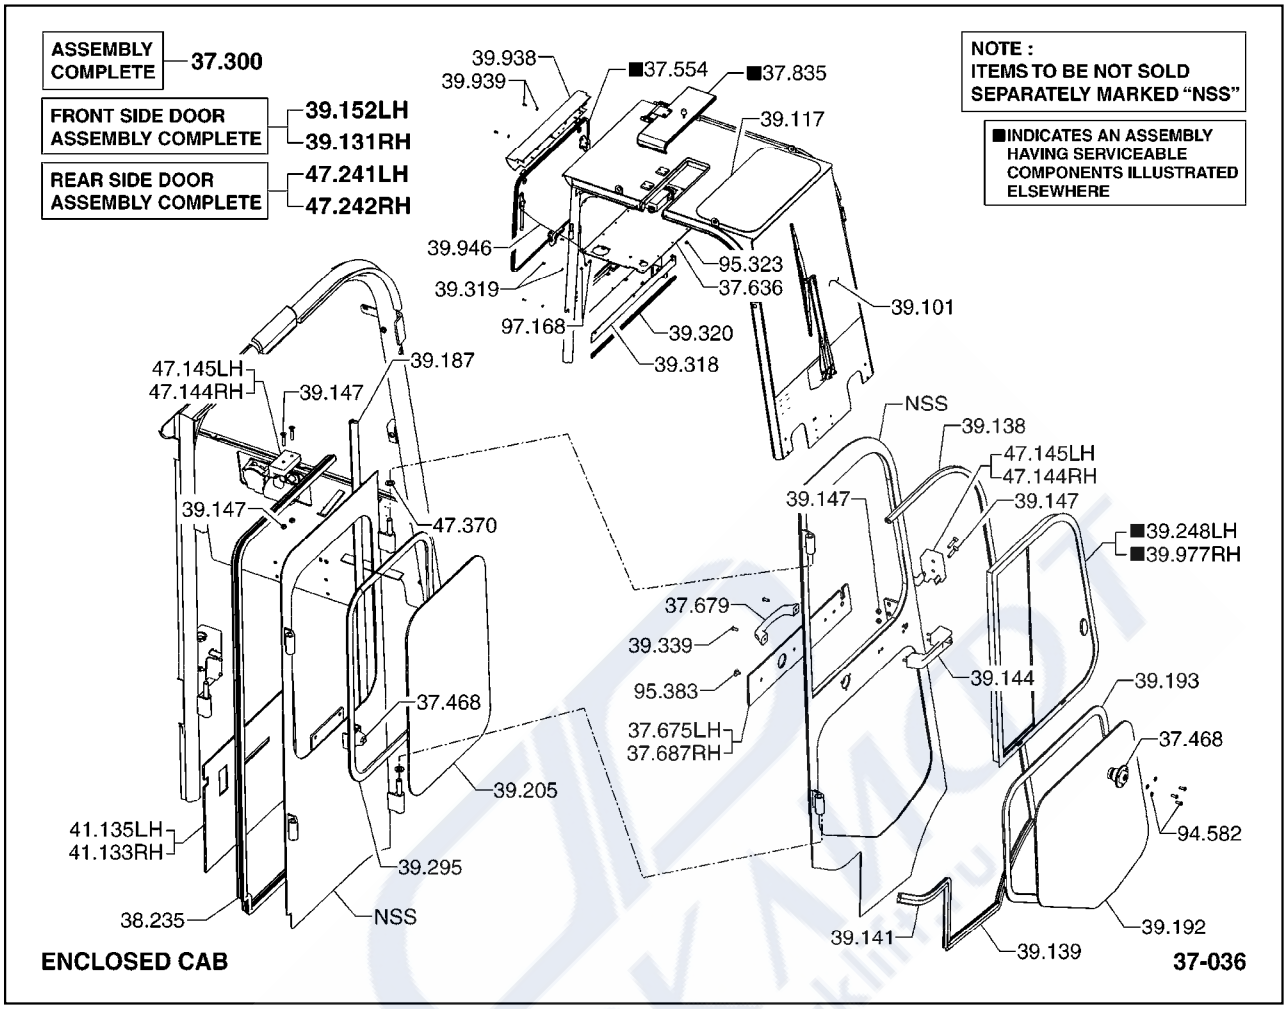

37.300	CAB ASSEMBLY 캐빈	39.144	HANDLE, RH DOOR OUTSIDE 핸들
37.468	CATCH, CAB DOOR LATCH 캐치	39.147	FASTENER, RIGHT HAND DOOR LATCH 패스너
37.554	REAR GLASS COMPLETE, CABIN 리어글래스	39.152	DOOR ASSEMBLY, LEFT HAND 도어
37.636	COVERING, CAB INSIDE ROOF 커버링	39.187	SEAL, DOOR HINGE 씰
37.675	COVER, CAB DOOR INSIDE LEFT 커버	39.192	GLASS, RIGHT HAND DOOR (LOWER) 글래스
37.679	HANDLE, RH DOOR INSIDE 핸들	39.193	WEATHERSEAL, RH DOOR GLASS (LOWER) 웨더씰
37.687	COVER, CAB DOOR INSIDE RIGHT 커버	39.205	GLASS, RH DOOR REAR 글래스
37.835	COVER,CAB ROOF 커버	39.248	WINDOW ASSEMBLY, CAB DOOR (LH) 윈도우
38.235	WEATHERSEAL, REAR DOOR 웨더씰	39.295	WEATHERSEAL, DOOR REAR GLASS 웨더씰
39.101	GLASS, WINDSHIELD 글래스	39.318	PANEL, REAR LOWER 판넬
39.117	ROOF SCREEN 루프스크린	39.319	FASTENER, LOWER REAR PANEL 패스너
39.131	DOOR ASSEMBLY, RIGHT HAND 도어	39.320	SEAL STRIP, REAR PANEL LOWER 씰스트립
39.138	WEATHERSEAL, RIGHT HAND DOOR 웨더씰	39.339	FASTENER, RH DOOR INSIDE HANDLE 패스너
39.139	SEAL, RIGHT HAND DOOR LOWER 씰	39.938	BRACKET, OVERHEAD GUARD REAR SUPPORT 브라켓
39.141	SEAL, RIGHT HAND DOOR LOWER 씰	39.939	FASTENER, OVERHEAD GUARD REAR SUPPORT BRACKET 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

39.946	LANYARD, OVERHEAD GUARD REAR SUPPORT FASTENER 랜야드
39.977	WINDOW ASSEMBLY, CAB DOOR (RH) 윈도우
41.133	PANEL, RH DOOR INNER 판넬
41.135	PANEL, LH DOOR INNER 판넬
47.144	LATCH, RH DOOR INSIDE 래치
47.145	LATCH, LH DOOR INSIDE 래치
47.241	DOOR ASSY, CAB REAR (RH) 도어
47.242	DOOR ASSY, CAB REAR (LH) 도어
47.370	SPACER, CAB DOOR HINGE 스페이서
94.582	FASTENER, CAB DOOR LATCH CATCH 패스너
95.323	FASTENER, CAB INSIDE ROOF COVERING 패스너
95.383	FASTENER, DOOR INSIDE LATCH COVER 패스너
97.168	FASTENER, OVERHEAD GUARD REAR SUPPORT LANYARD 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

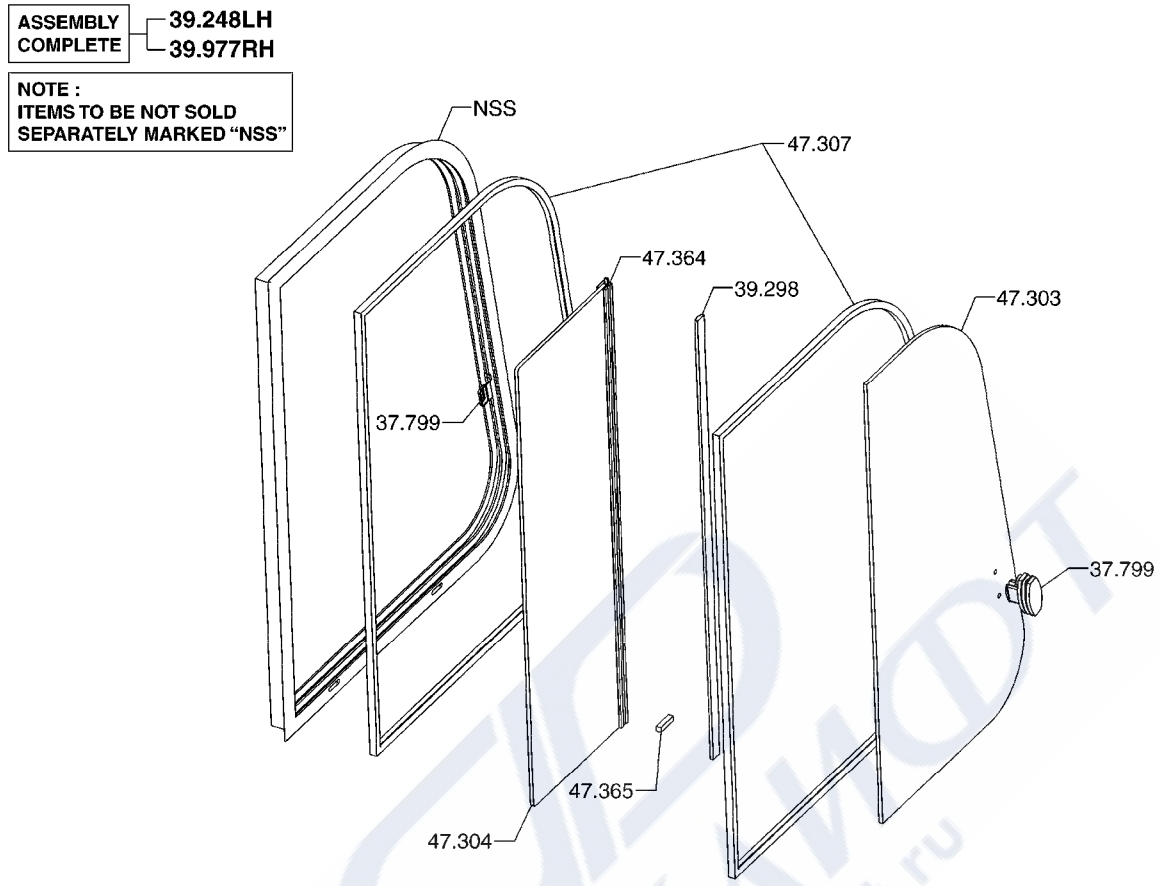

37.799 LATCH, CAB DOOR WINDOW ASSEMBLY
래치

39.248 WINDOW ASSEMBLY, CAB DOOR (LH)
윈도우

39.298 CHANNEL, FRONT DOOR GLASS - FRONT
채널

39.977 WINDOW ASSEMBLY, CAB DOOR (RH)
윈도우

47.303 GLASS, CAB DOOR (FRONT)
글래스

47.304 GLASS, CAB DOOR (REAR)
글래스

47.307 CHANNEL, CAB SIDE DOOR WINDOW
채널

47.364 CHANNEL, CAB SIDE DOOR WINDOW (CENTER)
채널

47.365 STOPPER, CAB SIDE DOOR WINDOW GLASS
스토퍼

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

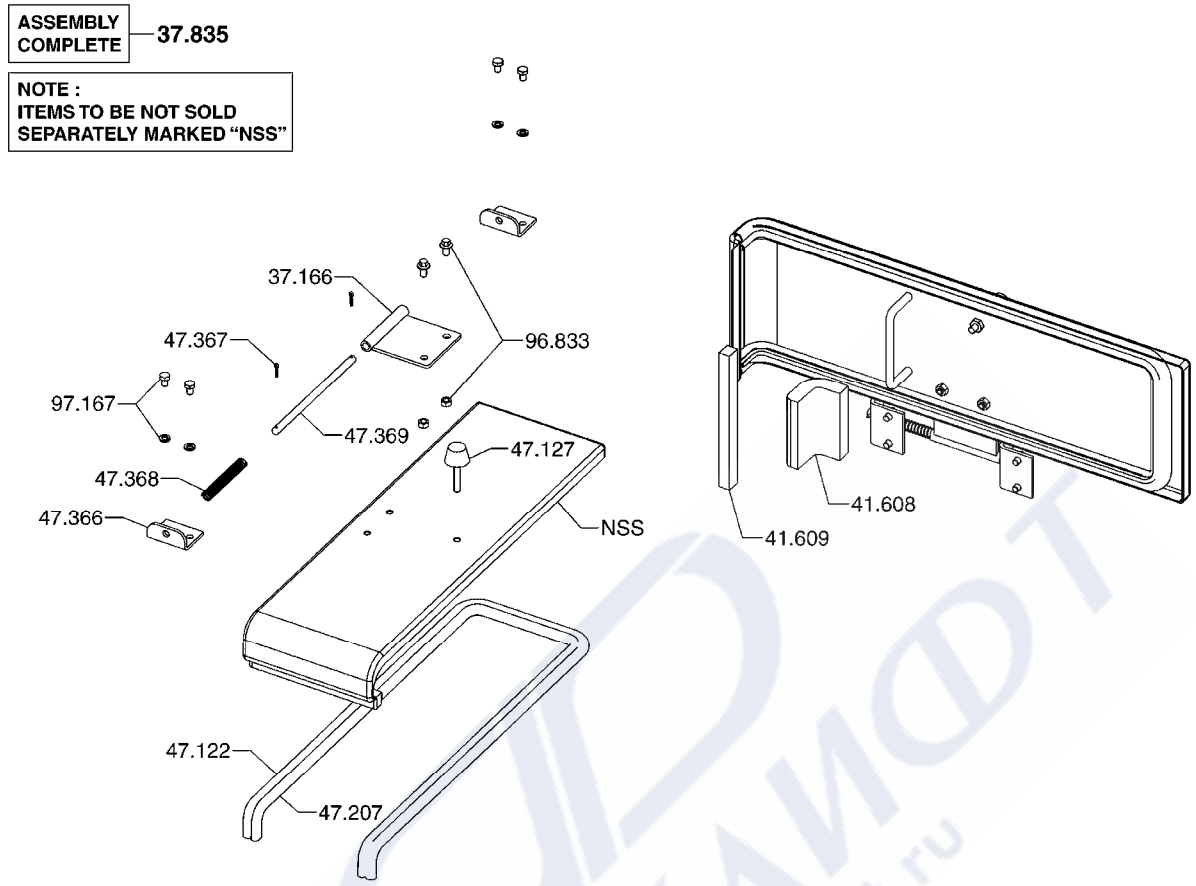

37.166	HINGE, COVER CAB ROOF 힌지
37.835	COVER,CAB ROOF 커버
41.608	SOUND ABSORBER, CAB ROOF COVER 흡음재
41.609	SOUND ABSORBER, CAB ROOF COVER 흡음재
47.122	SEAL, COVER CAB ROOF HANDLE 씰
47.127	RUBBER, CAB ROOF COVER 러버
47.207	SEAL, COVER CAB ROOF HANDLE 씰
47.366	BRACKET, CAB ROOF COVER MOUNTING 브라켓
47.367	PIN, CAB ROOF COVER HINGE PIVOT 핀

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

47.368	SPRING, CAB ROOF COVER HINGE PIVOT 스프링
47.369	PIVOT, CAB ROOF COVER HINGE 피봇
96.833	FASTENER,COVER CAB ROOF HINGE 패스너
97.167	FASTENER, CAB ROOF COVER MOUNTING BRACKET 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

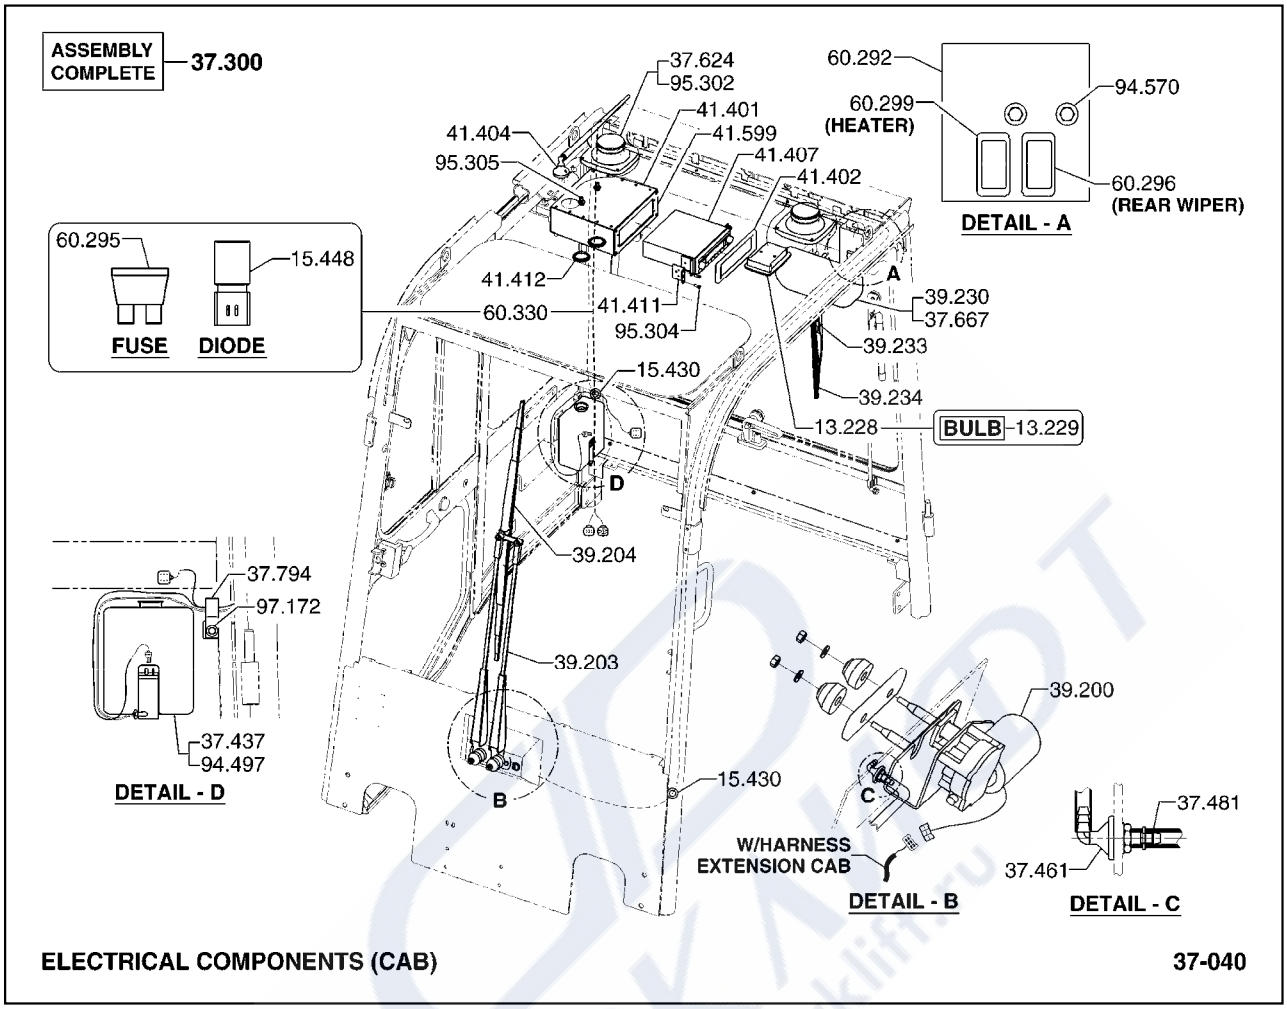

13.228	LAMP ASSEMBLY, DOME 램프	39.233	ARM, REAR WINDOW WIPER 암
13.229	BULB, DOME LAMP 전구	39.234	BLADE, REAR WINDOW WIPER 블레이드
15.430	GROMMET, CABIN WIRING HARNESS 그로멧	41.401	BOX, AUDIO AND TRANSCEIVER MOUNTING 박스
15.448	DIODE, HARNESS 다이오드	41.402	COVER, AUDIO AND TRANSCEIVER MOUNTING BOX 커버
37.300	CAB ASSEMBLY 캐빈	41.404	ANTENNA, AUDIO 안테나
37.437	PUMP & TANK, WINDSHIELD WASHER 펌프& 탱크	41.407	AUDIO 오디오
37.461	NOZZLE, WINDSHIELD GLASS WASHER 노즐	41.411	BRACKET, AUDIO AND TRANSCEIVER BOX MOUNTING 브라켓
37.481	LINE, WINDOW GLASS WASHER 라인	41.412	CAP, AUDIO AND TRANSCEIVER MOUNTING BOX 캡
37.624	SPEAKER, CABIN 스피커	41.599	PLATE, AUDIO COVER 플레이트
37.667	COVER, CAB REAR PANEL WIPER MOTOR 커버	60.292	COVER, CAB SWITCH PANEL 커버
37.794	CLIP, CAB WINDSHIELD WASHING LINE 클립	60.295	FUSE, CAB SWITCH PANEL 퓨즈
39.200	MOTOR, WINDSHIELD WIPER 모터	60.296	SWITCH, WINDSHIELD WIPER (REAR) 스위치
39.203	ARM, WINDSHIELD WIPER 암	60.299	SWITCH, HEATER ON/OFF 스위치
39.204	BLADE, WINDSHIELD WIPER 블레이드	60.330	WIRING HARNESS, CAB 와이어하네스
39.230	MOTOR, REAR WINDOW WIPER 모터	94.497	FASTENER, WINDSHIELD WASHER TANK 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

94.570 FASTENER, CAB SWITCH PANEL COVER
패스너

95.302 FASTENER, LOUDSPEAKER
패스너

95.304 FASTENER, AUDIO AND TRANSCEIVER BOX MOUNTING BRA
패스너

95.305 FASTENER, AUDIO AND TRANSCEIVER BOX TO MOUNTING
패스너

97.172 FASTENER, CAB WINDSHIELD WASHING LINE
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

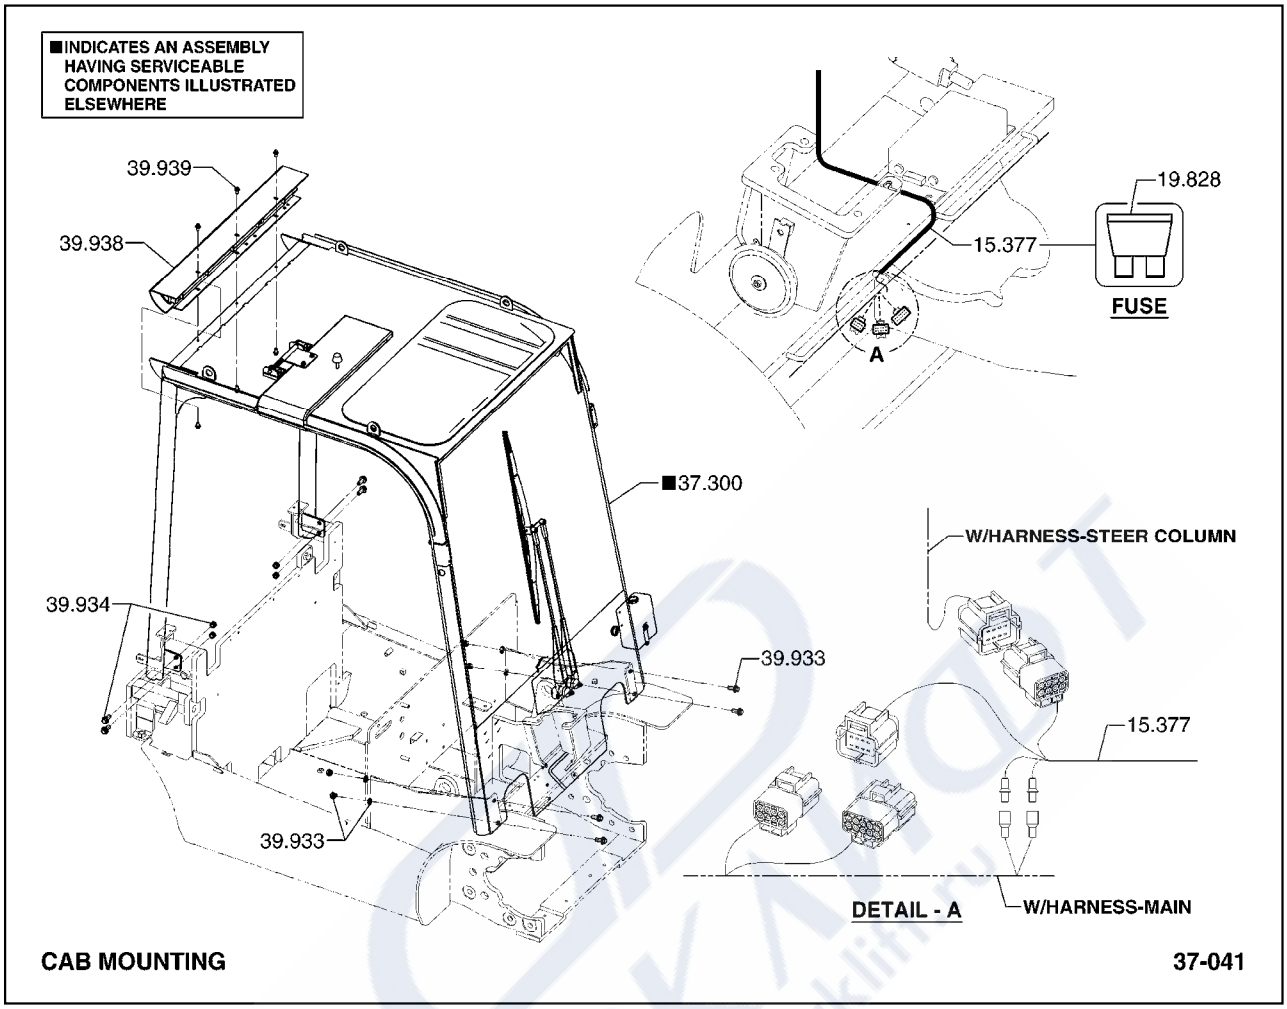

15.377 WIRING HARNESS, MACHINE TO CABIN
와이어하네스

19.828 FUSE, CONTROL CIRCUIT
퓨즈

37.300 CAB ASSEMBLY
캐빈

39.933 FASTENER, OVERHEAD GUARD
패스너

39.934 FASTENER, OVERHEAD GUARD
패스너

39.938 BRACKET, OVERHEAD GUARD REAR SUPPORT
브라켓

39.939 FASTENER, OVERHEAD GUARD REAR SUPPORT BRACKET
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

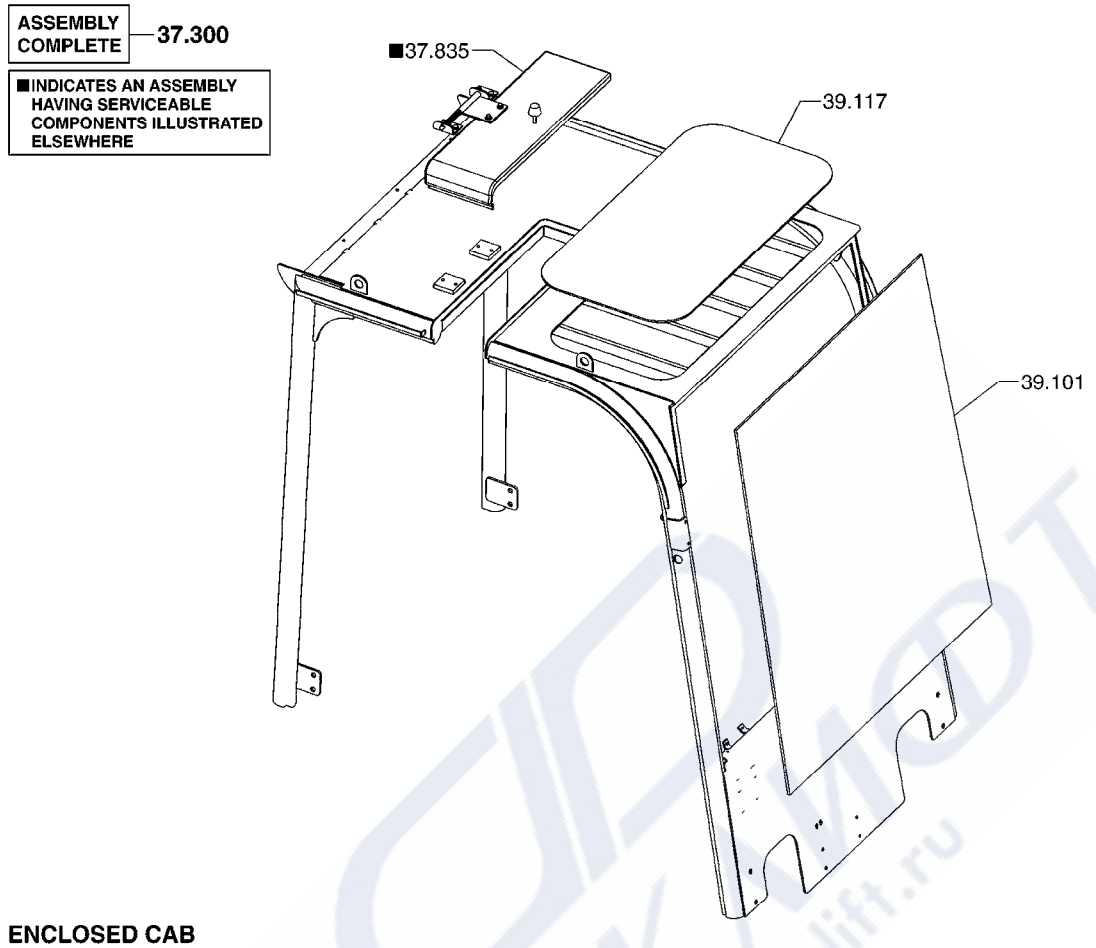

37.300	CAB ASSEMBLY 캐빈
37.835	COVER,CAB ROOF 커버
39.101	GLASS, WINDSHIELD 글래스
39.117	ROOF SCREEN 루프스크린

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

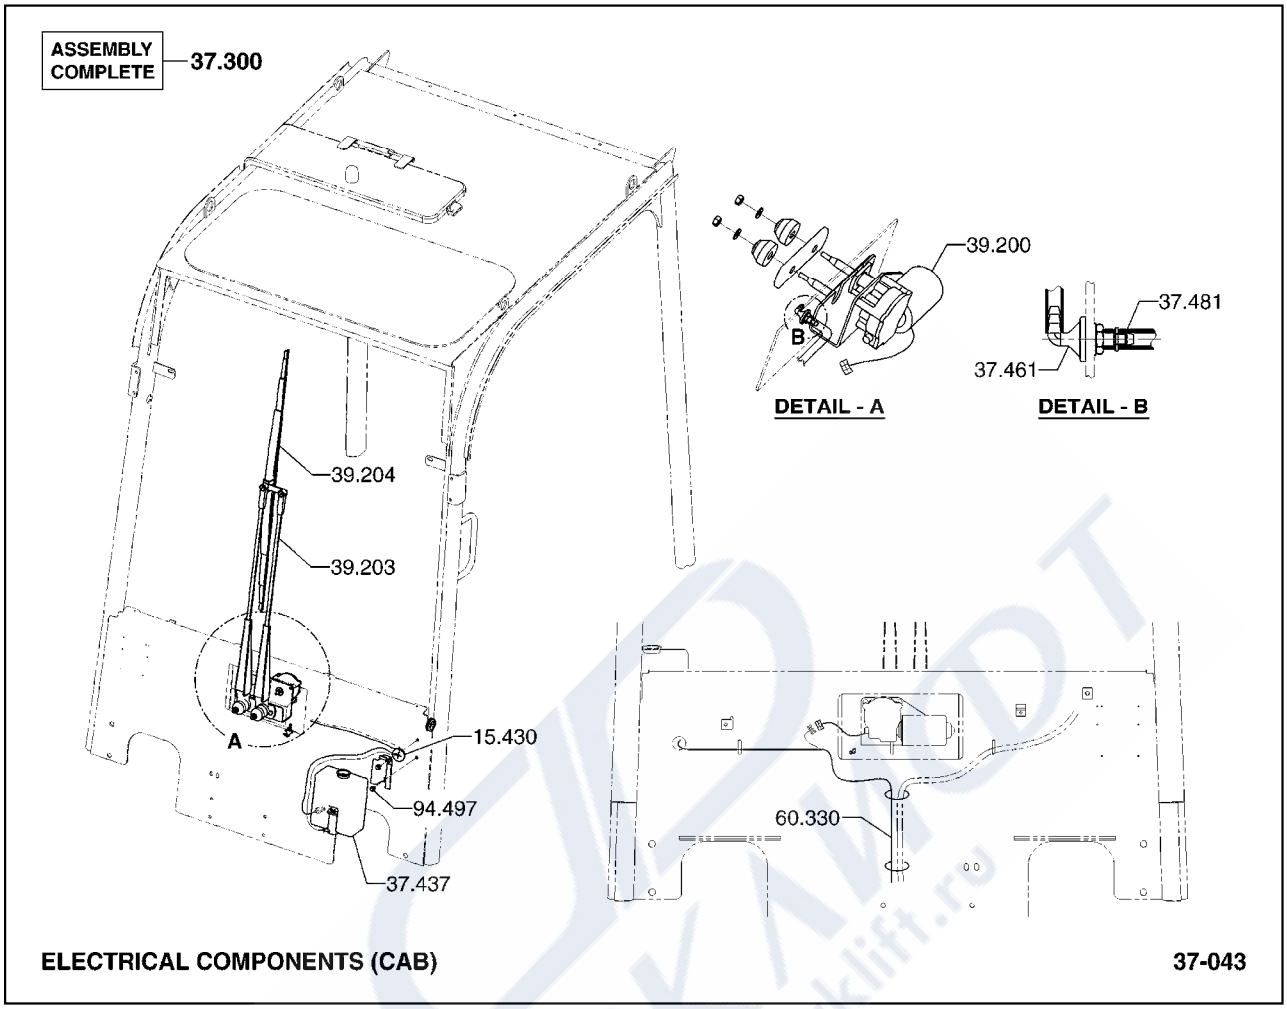

15.430 GROMMET, CABIN WIRING HARNESS
그로멧

37.300 CAB ASSEMBLY
캐빈

37.437 PUMP & TANK, WINDSHIELD WASHER
펌프& 탱크

37.461 NOZZLE, WINDSHIELD GLASS WASHER
노즐

37.481 LINE, WINDOW GLASS WASHER
라인

39.200 MOTOR, WINDSHIELD WIPER
모터

39.203 ARM, WINDSHIELD WIPER
암

39.204 BLADE, WINDSHIELD WIPER
블레이드

60.330 WIRING HARNESS, CAB
와이어하네스

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

94.497 FASTENER, WINDSHIELD WASHER TANK
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

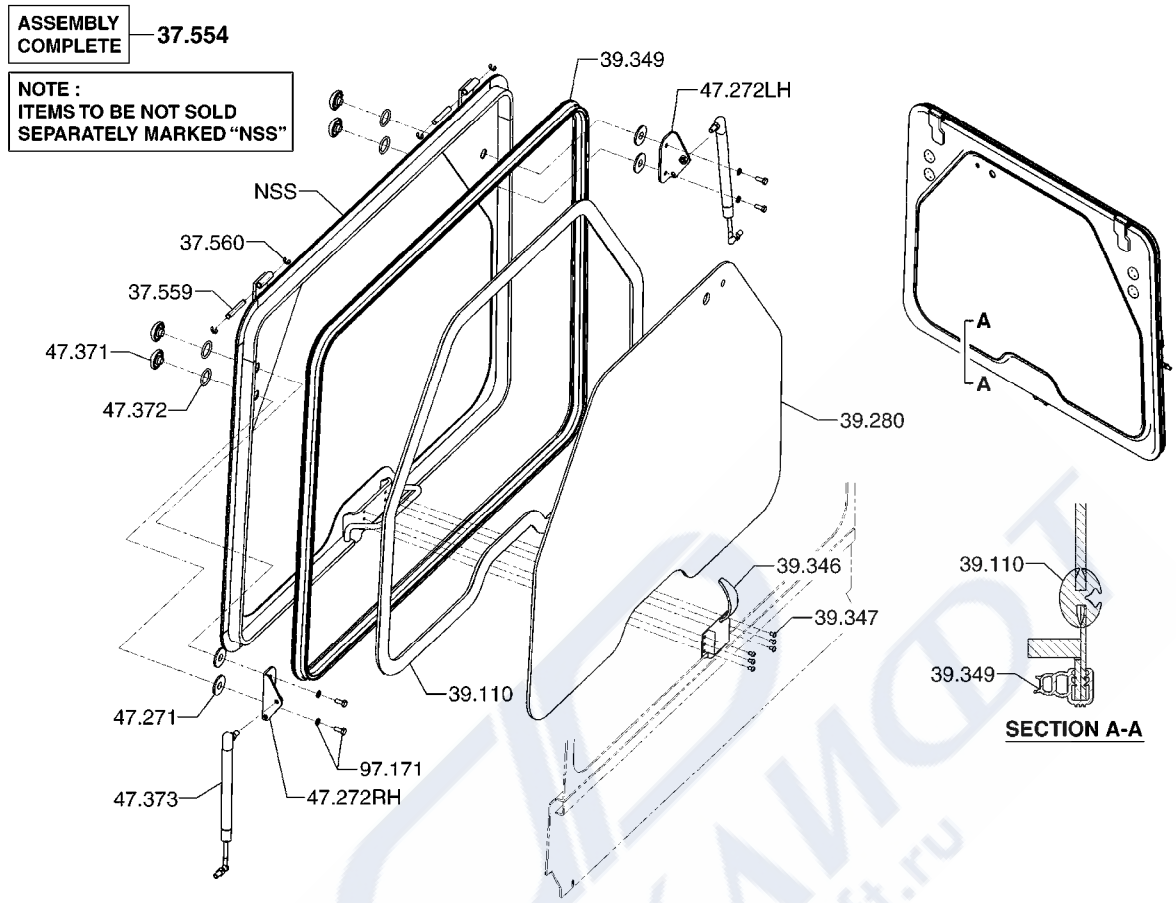

37.554 REAR GLASS COMPLETE, CABIN
리어글래스

37.559 PIN, CABIN REAR GLASS HANGER
핀

37.560 RETAINER, CAB REAR GLASS HANGER PIN
리테이너

39.110 WEATHERSEAL, REAR GLASS SETTING
웨더씰

39.280 GLASS, REAR WINDOW - MOVEABLE
글래스

39.346 LATCH, CAB REAR WINDOW
래치

39.347 FASTENER, CAB REAR WINDOW LATCH
패스너

39.349 WEATHERSEAL, CAB REAR WINDOW
웨더씰

47.271 RUBBER, CAB REAR GLASS GAS SPRING MOUNTING
러버

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

47.272 BRACKET, CAB REAR GLASS GAS SPRING MOUNTING
브라켓

47.371 CAP, CAB REAR GLASS GAS SPRING MOUNTING FASTENER
캡

47.372 SEAL, CAB REAR GLASS GAS SPRING MOUNTING FASTENER
씰

47.373 SHOCK ABSORBER, CAB REAR GLASS
쇼브업쇼버

97.171 FASTENER, CAB REAR GLASS GAS SPRING MOUNTING
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

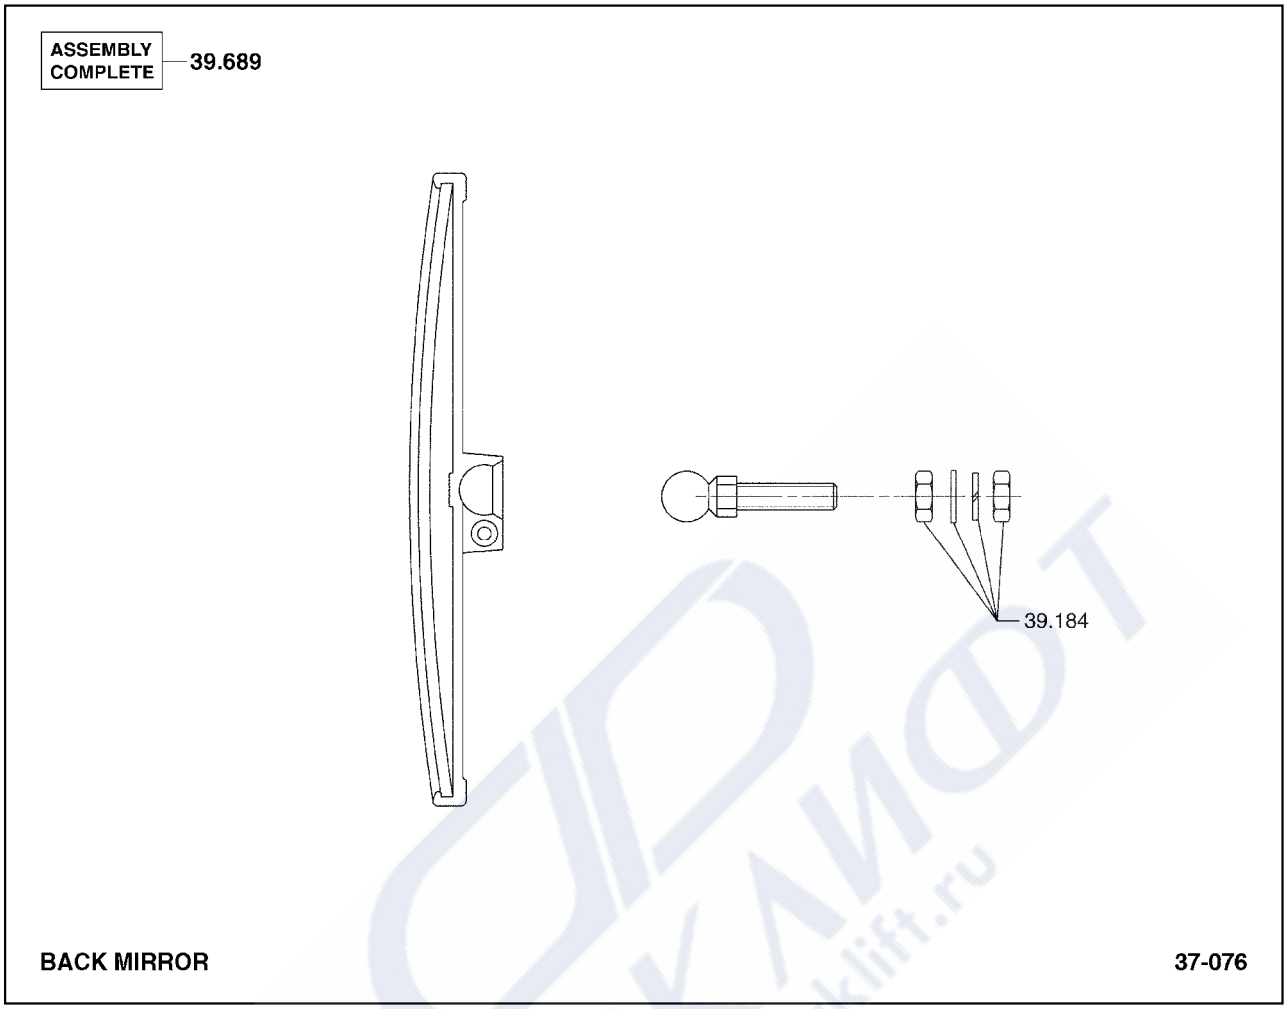

39.184	FASTENER, REAR VIEW MIRROR 패스너
39.689	MIRROR, REAR VIEW 미러

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

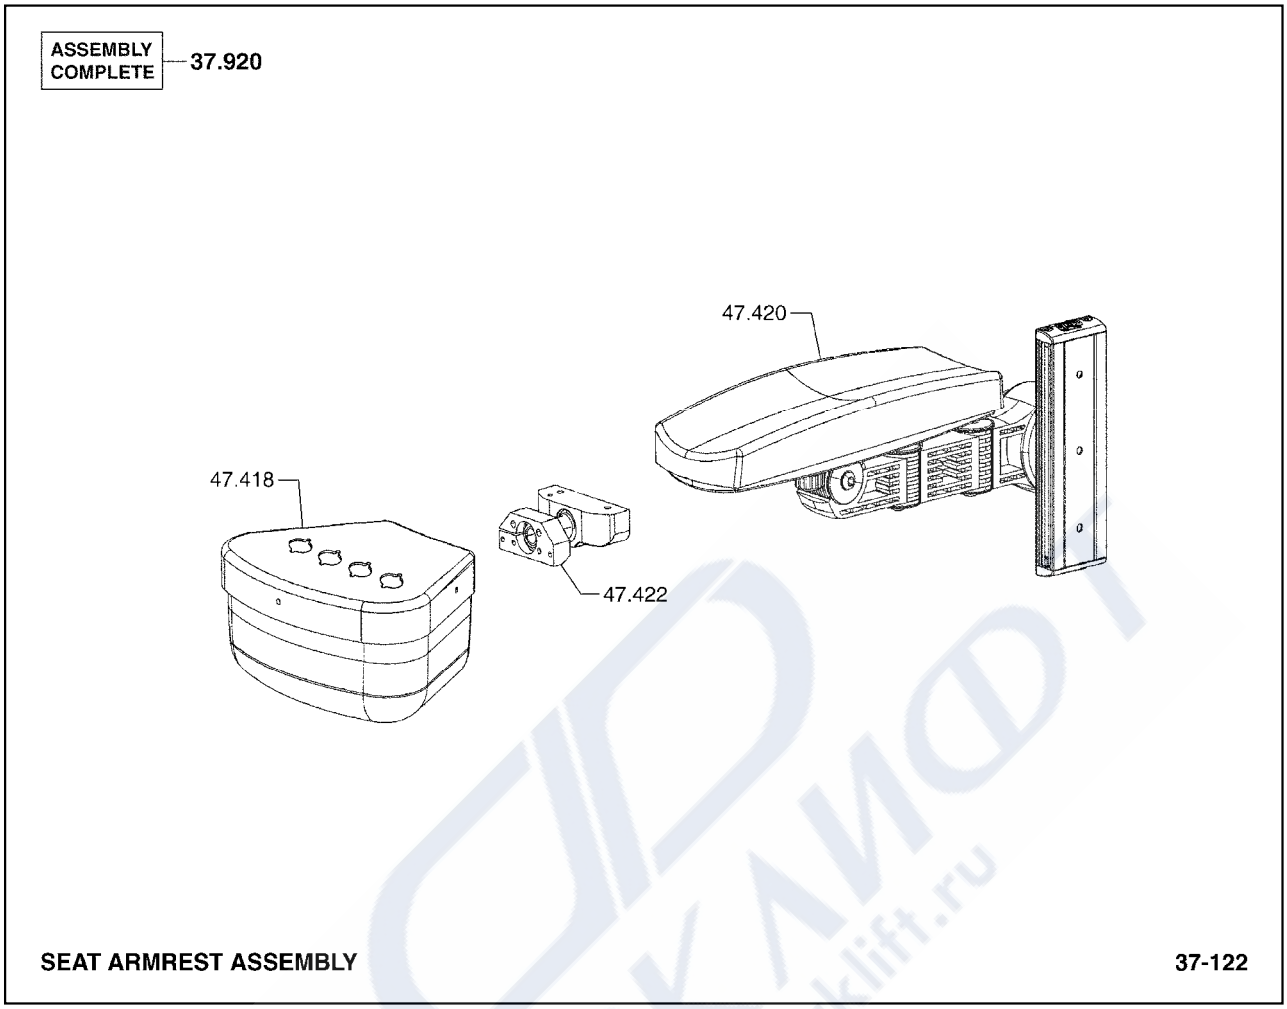

37.920	ARMREST RH, SEAT 암레스트
47.418	ADJUSTOR, SEAT ARMREST ASSEMBLY 어드져스터
47.420	SLIDER, SEAT ARMREST 슬라이더
47.422	POSITIONER, SEAT ARMREST 포지셔너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

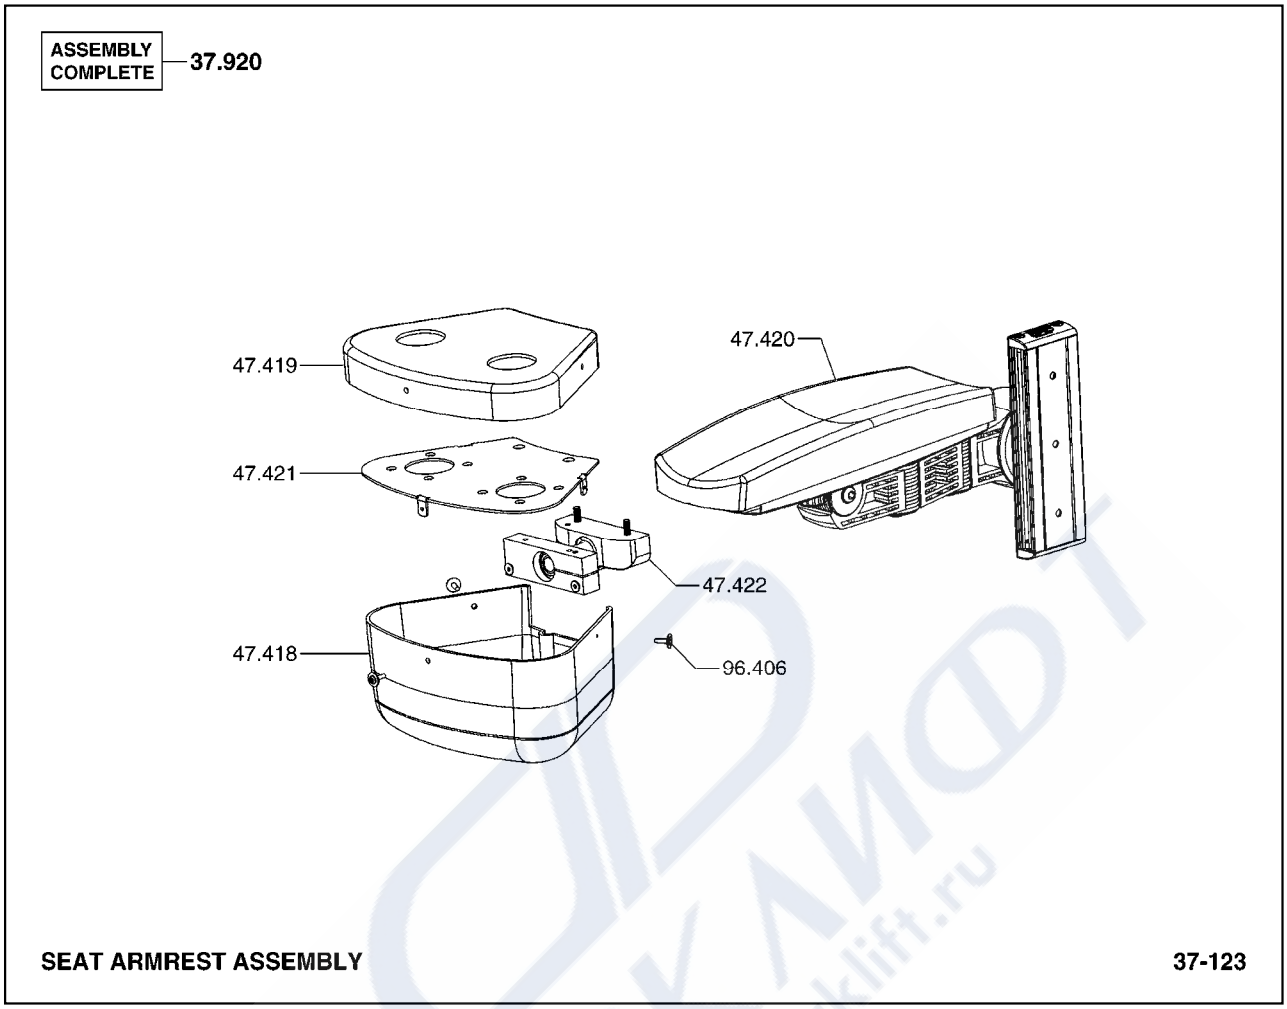

37.920	ARMREST RH, SEAT 암레스트
47.418	ADJUSTOR, SEAT ARMREST ASSEMBLY 어드져스터
47.419	COVER, SEAT ARMREST ADJUSTOR 커버
47.420	SLIDER, SEAT ARMREST 슬라이더
47.421	PLATE, SEAT ARMREST ADJUSTOR 플레이트
47.422	POSITIONER, SEAT ARMREST 포지셔너
96.406	SCREW, SEAT ARMREST ADJUSTING 스크류

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

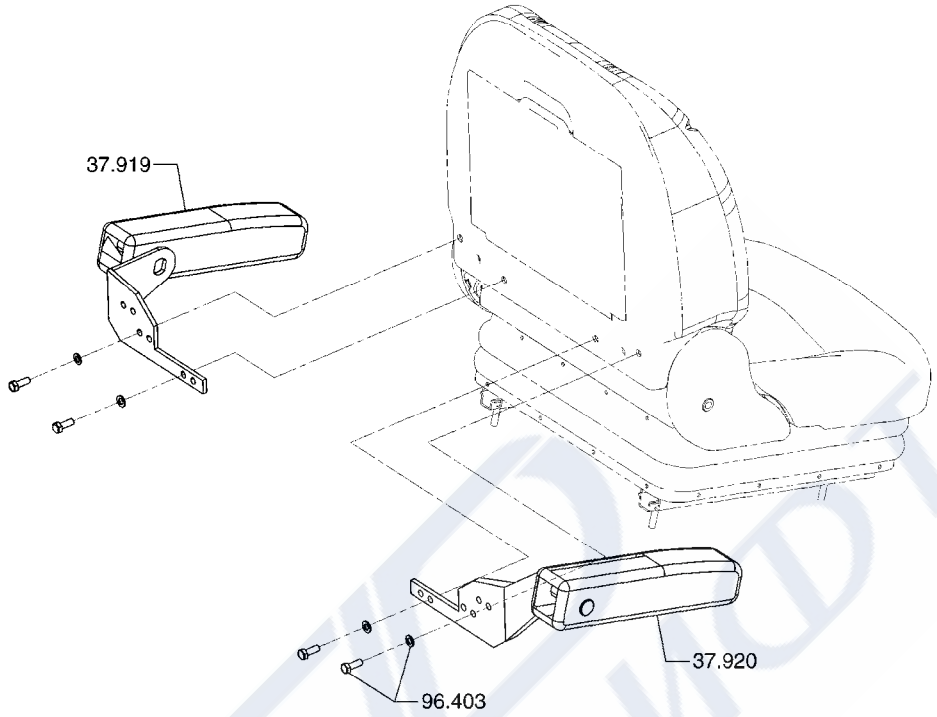

SEAT ARMREST ASSEMBLY **37-124**

37.919	ARMREST LH, SEAT 암레스트
37.920	ARMREST RH, SEAT 암레스트
96.403	FASTENER, SEAT ARMREST BRACKET 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

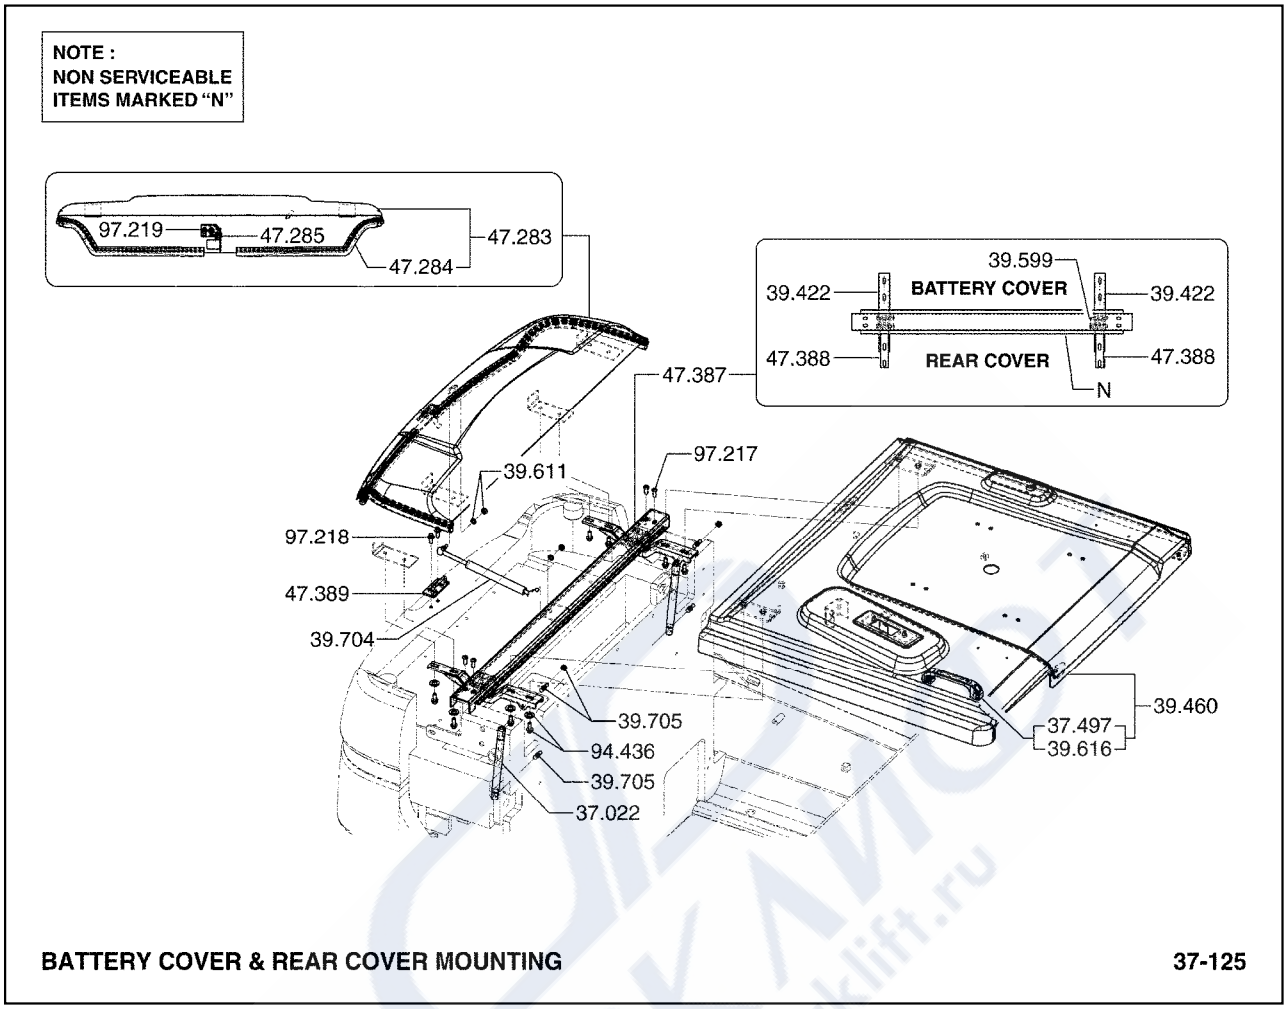

37.022 SPRING, HOOD PROP INNER
스프링

37.497 HANDLE, TOP HOOD LATCH
핸들

39.422 HINGE, TOP HOOD
힌지

39.460 COVER ASSEMBLY, BATTERY
커버

39.599 FASTENER, HOOD PIVOT HINGE
패스너

39.611 FASTENER, HOOD PROP SUPPORT
패스너

39.616 FASTENER, TOP HOOD LATCH
패스너

39.704 SPRING, HOOD PROP (OUTER)
스프링

39.705 FASTENER, HOOD PROP
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

47.283	COVER, FRAME REAR 커버
47.284	WEATHERSTRIP, FRAME REAR COVER 웨더스트립
47.285	LATCH, FRAME REAR COVER 래치
47.387	BRACKET, FRAME COVERING HOOD LINKAGE 브라켓
47.388	HINGE, FRAME REAR COVER 힌지
47.389	HOLDER, REAR COVER LATCH 홀더
94.436	FASTENER, HOOD PROP BRACKET SUPPORT 패스너
97.217	FASTENER, FRAME COVERING HOOD LINKAGE BRACKET 패스너
97.218	FASTENER, REAR COVER LATCH HOLDER 패스너
97.219	FASTENER, REAR COVER LATCH 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

■INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

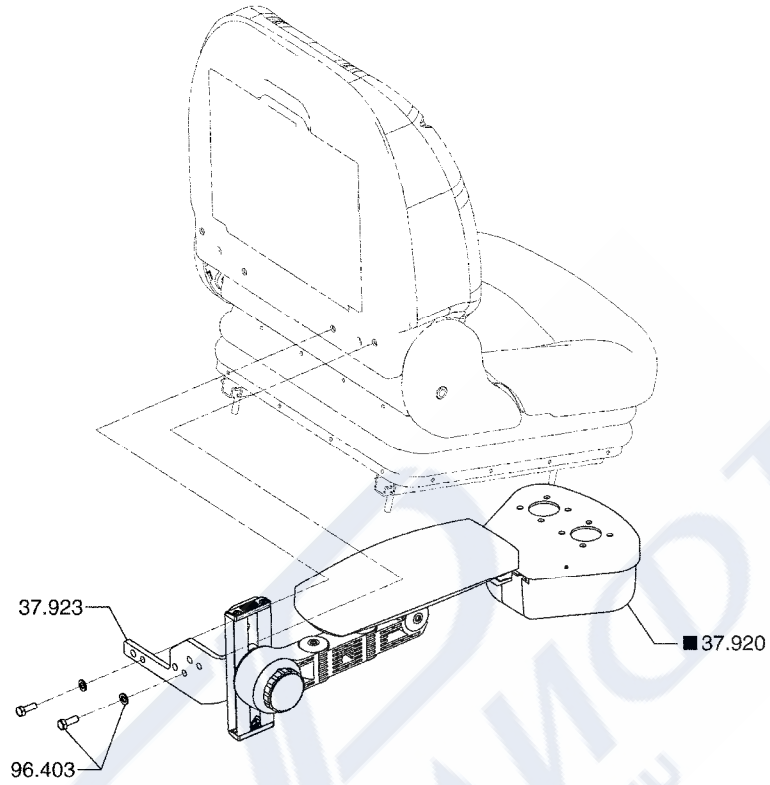

ARMREST MOUNTING (ELH) **37-168**

37.920	ARMREST RH, SEAT 암레스트
37.923	BRACKET, SEAT ARMREST RIGHT HAND 브라켓
96.403	FASTENER, SEAT ARMREST BRACKET 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

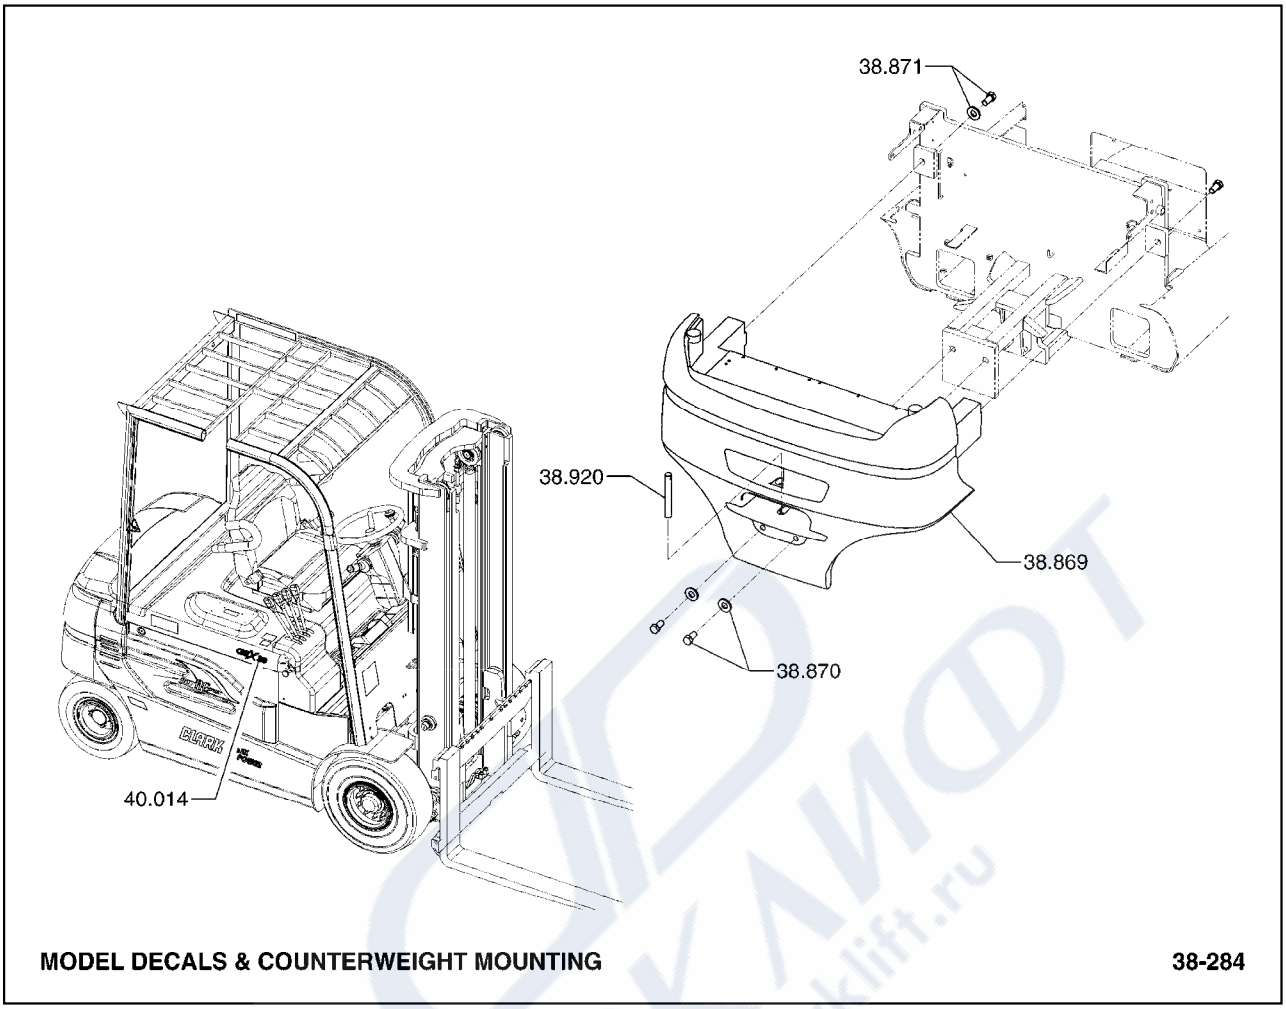

38.869	COUNTERWEIGHT 카운터웨이트
38.870	FASTENER, COUNTERWEIGHT (LOWER) 패스너
38.871	FASTENER, COUNTERWEIGHT (UPPER) CONTINUED 패스너
38.920	PIN, COUPLER 핀
40.014	DECAL, MODEL NAME 데칼

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

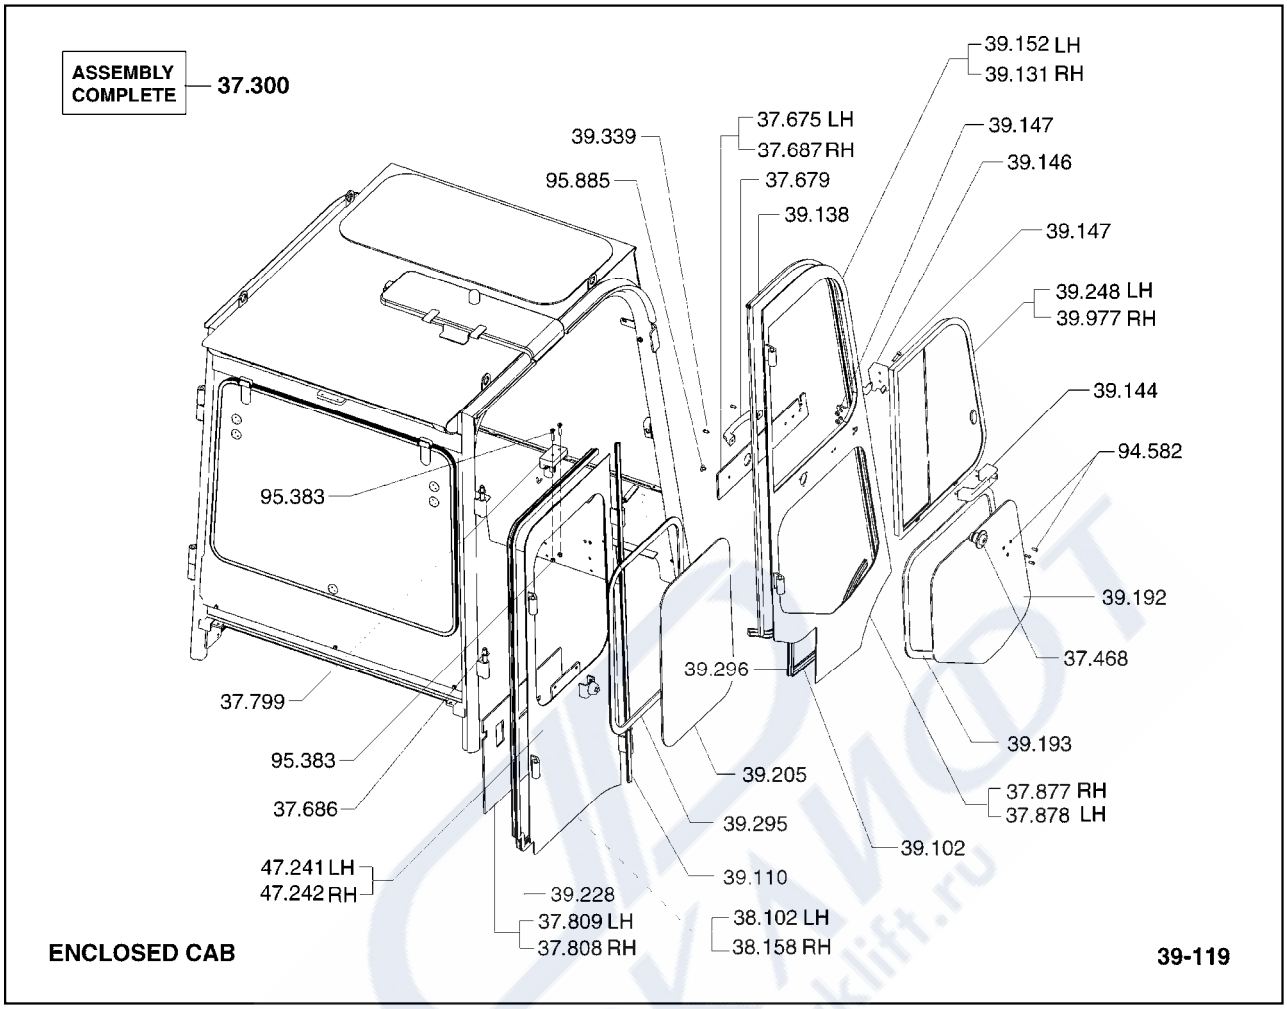

37.300	CAB ASSEMBLY 캐빈	39.131	DOOR ASSEMBLY, RIGHT HAND 도어
37.468	CATCH, CAB DOOR LATCH 캐치	39.138	WEATHERSEAL, RIGHT HAND DOOR 웨더씰
37.487	FILLER,DOOR WINDOW WEATHERSEAL 필러	39.144	HANDLE, RH DOOR OUTSIDE 핸들
37.675	COVER, CAB DOOR INSIDE LEFT 커버	39.146	LATCH, RH DOOR INSIDE 래치
37.679	HANDLE, RH DOOR INSIDE 핸들	39.147	FASTENER, RIGHT HAND DOOR LATCH 패스너
37.686	SPACER, DOOR INSIDE HANDLE 스페이서	39.152	DOOR ASSEMBLY, LEFT HAND 도어
37.799	LATCH, CAB DOOR WINDOW ASSEMBLY 래치	39.192	GLASS, RIGHT HAND DOOR (LOWER) 글래스
37.808	COVER, REAR RH 커버	39.193	WEATHERSEAL, RH DOOR GLASS (LOWER) 웨더씰
37.809	COVER, REAR LH 커버	39.205	GLASS, RH DOOR REAR 글래스
37.877	FRAME, CAB DOOR-RH 프레임	39.228	WEATHERSEAL, WINDSHIELD SETTING 웨더씰
37.878	FRAME, CAB DOOR-LH 프레임	39.248	WINDOW ASSEMBLY, CAB DOOR (LH) 윈도우
38.102	DOOR, REAR (LH) 도어	39.295	WEATHERSEAL, DOOR REAR GLASS 웨더씰
38.158	DOOR, REAR (RH) 도어	39.296	WEATHERSEAL, DOOR FRONT GLASS - REAR 웨더씰
39.102	WEATHERSEAL, WINDSHIELD SETTING 웨더씰	39.339	FASTENER, RH DOOR INSIDE HANDLE 패스너
39.110	WEATHERSEAL, REAR GLASS SETTING 웨더씰	39.977	WINDOW ASSEMBLY, CAB DOOR (RH) 윈도우

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

47.241 DOOR ASSY, CAB REAR (RH)
도어

47.242 DOOR ASSY, CAB REAR (LH)
도어

94.582 FASTENER, CAB DOOR LATCH CATCH
패스너

95.383 FASTENER, DOOR INSIDE LATCH COVER
패스너

95.885 FASTENER, CAB DOOR HINGE
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

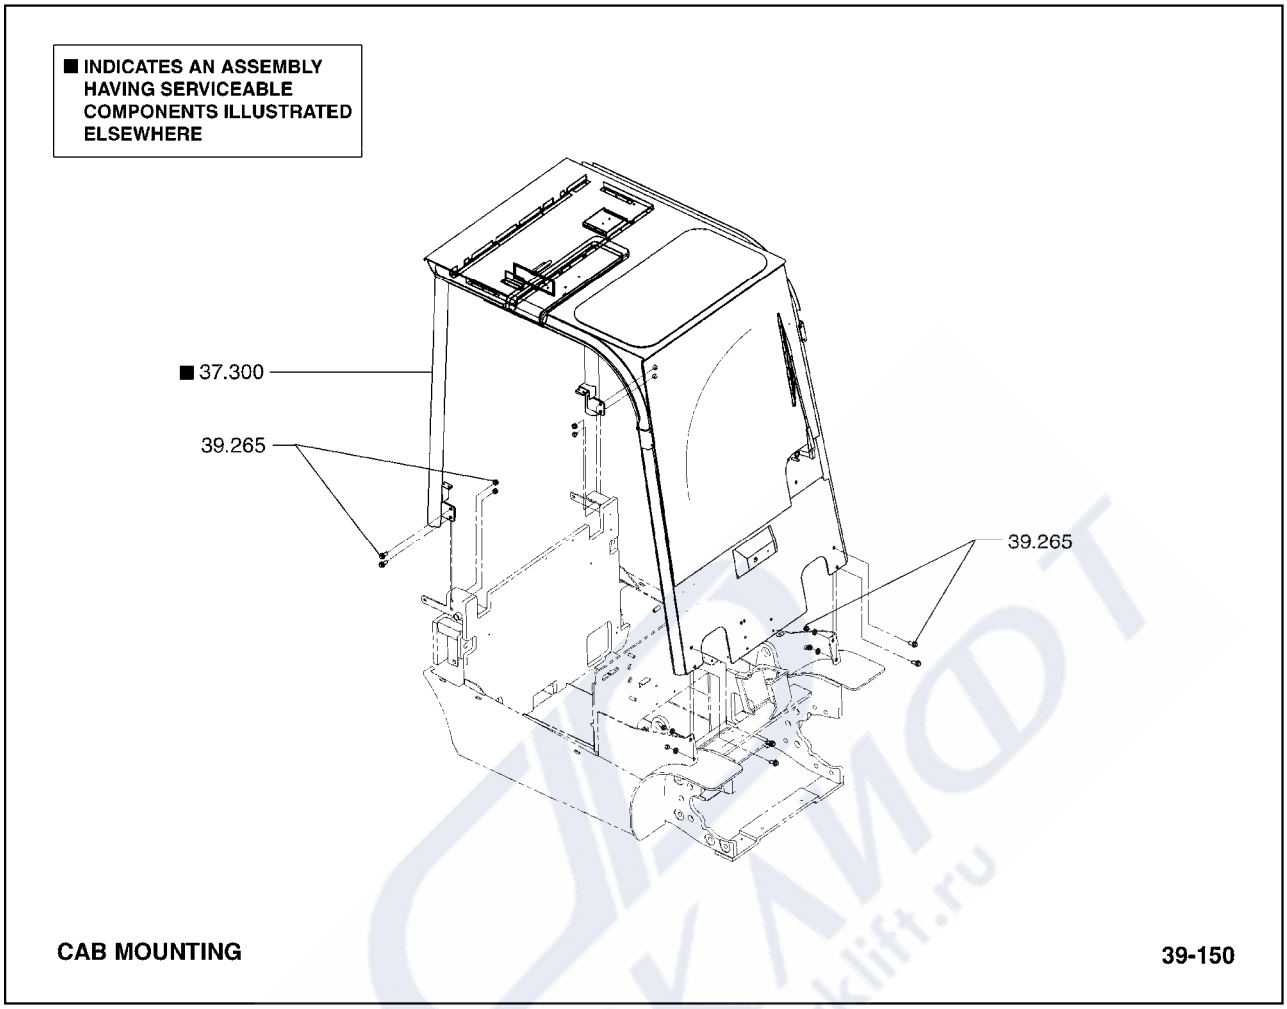

37.300 CAB ASSEMBLY
캐빈

39.265 FASTENER, CAB TO MOUNT
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

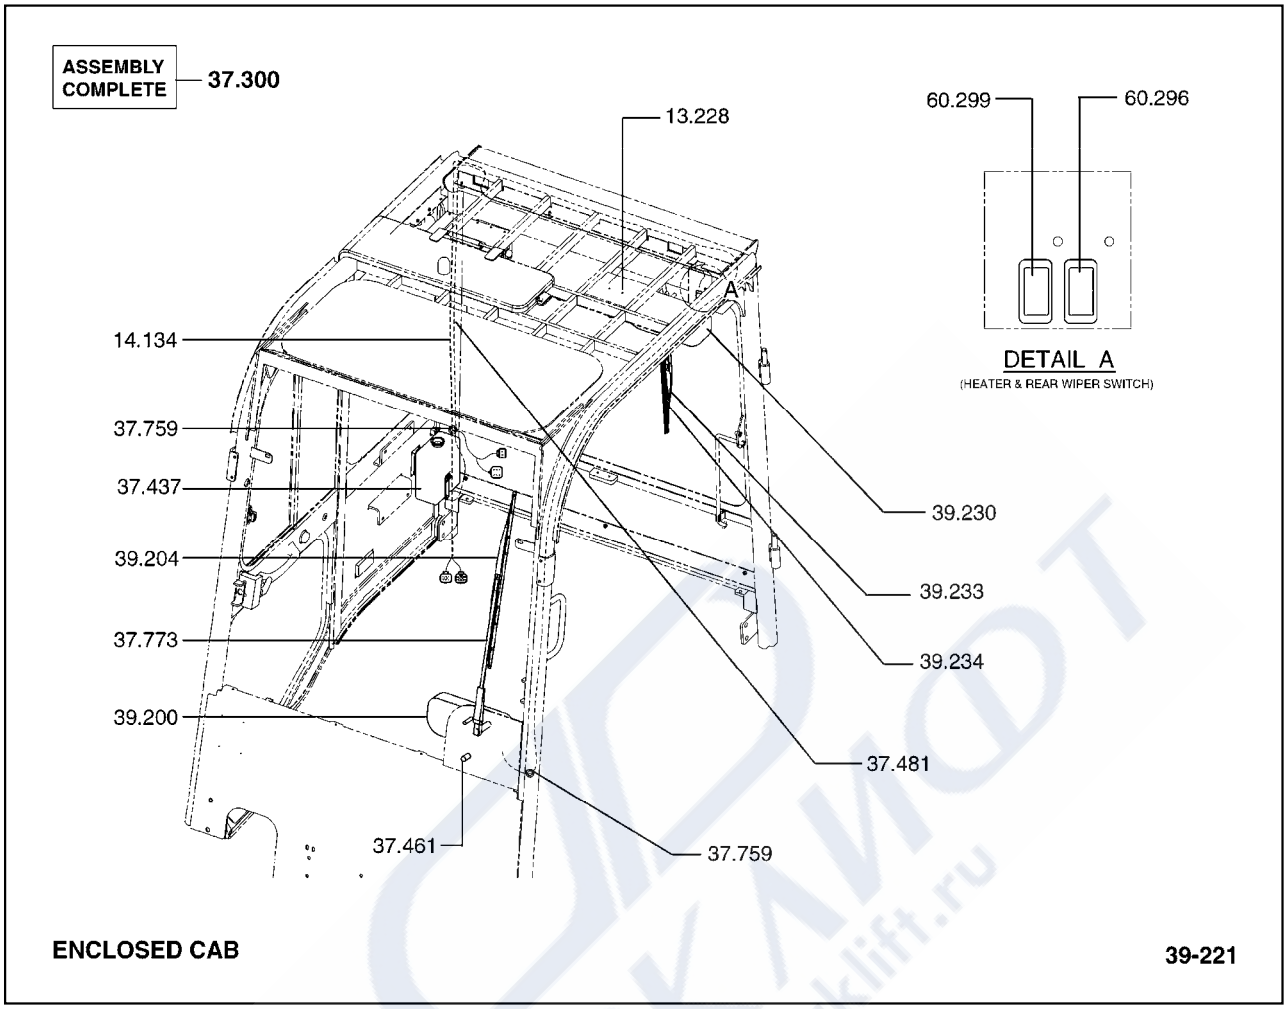

13.228 LAMP ASSEMBLY, DOME
램프

14.134 WIRE ASSEMBLY, WIPER MOTOR TO AMP METER
와이어

37.300 CAB ASSEMBLY
캐빈

37.437 PUMP & TANK, WINDSHIELD WASHER
펌프& 탱크

37.461 NOZZLE, WINDSHIELD GLASS WASHER
노즐

37.481 LINE, WINDOW GLASS WASHER
라인

37.759 GROMMET, COVER WINDSHIELD WIPER MOTOR
그로멧

37.773 WINDSHIELD WIPER INSTALLATION
윈드실드와이퍼

39.200 MOTOR, WINDSHIELD WIPER
모터

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

39.204	BLADE, WINDSHIELD WIPER 블레이드
39.230	MOTOR, REAR WINDOW WIPER 모터
39.233	ARM, REAR WINDOW WIPER 암
39.234	BLADE, REAR WINDOW WIPER 블레이드
60.296	SWITCH, WINDSHIELD WIPER (REAR) 스위치
60.299	SWITCH, HEATER ON/OFF 스위치

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

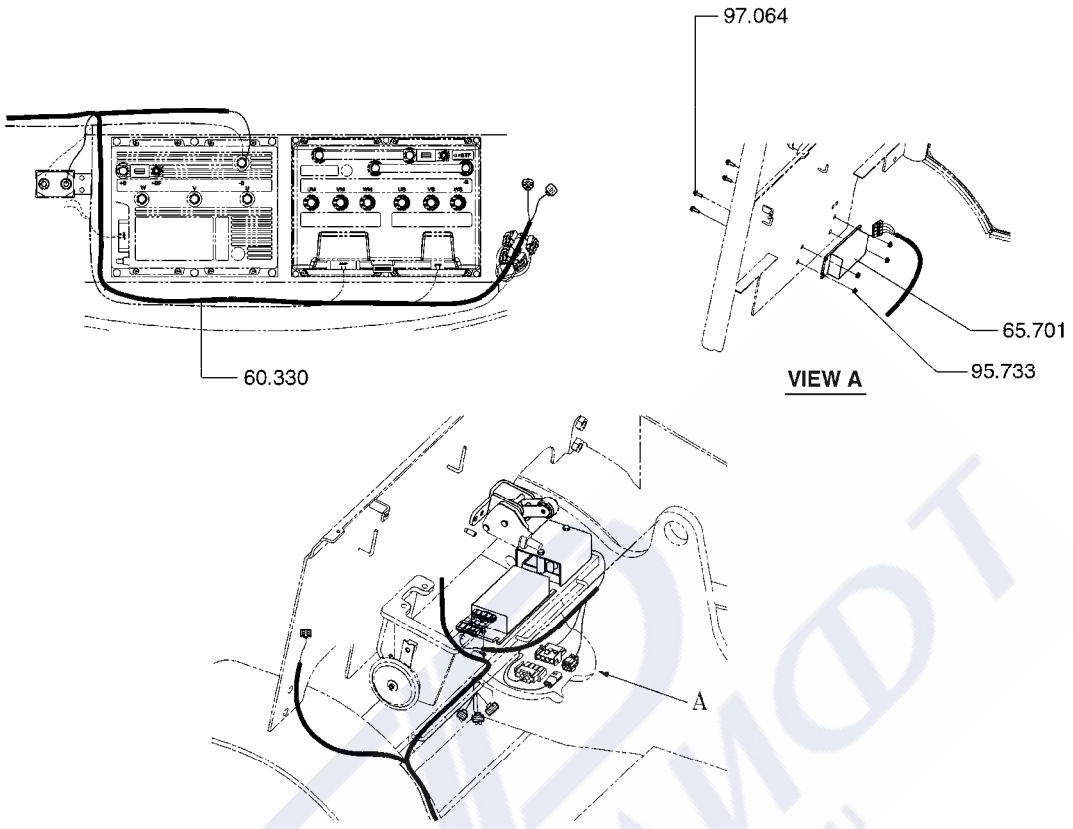

CABIN AND HEATER INSTALLATION **39-223**

60.330 WIRING HARNESS, CAB
와이어하네스

65.701 CONVERTER, CONTROL PANEL
컨버터

95.733 NUT, CONTROL PANEL CONVERTER FASTENER
너트

97.064 FASTENER, CONTROLLER BRACKET MOUNTING
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

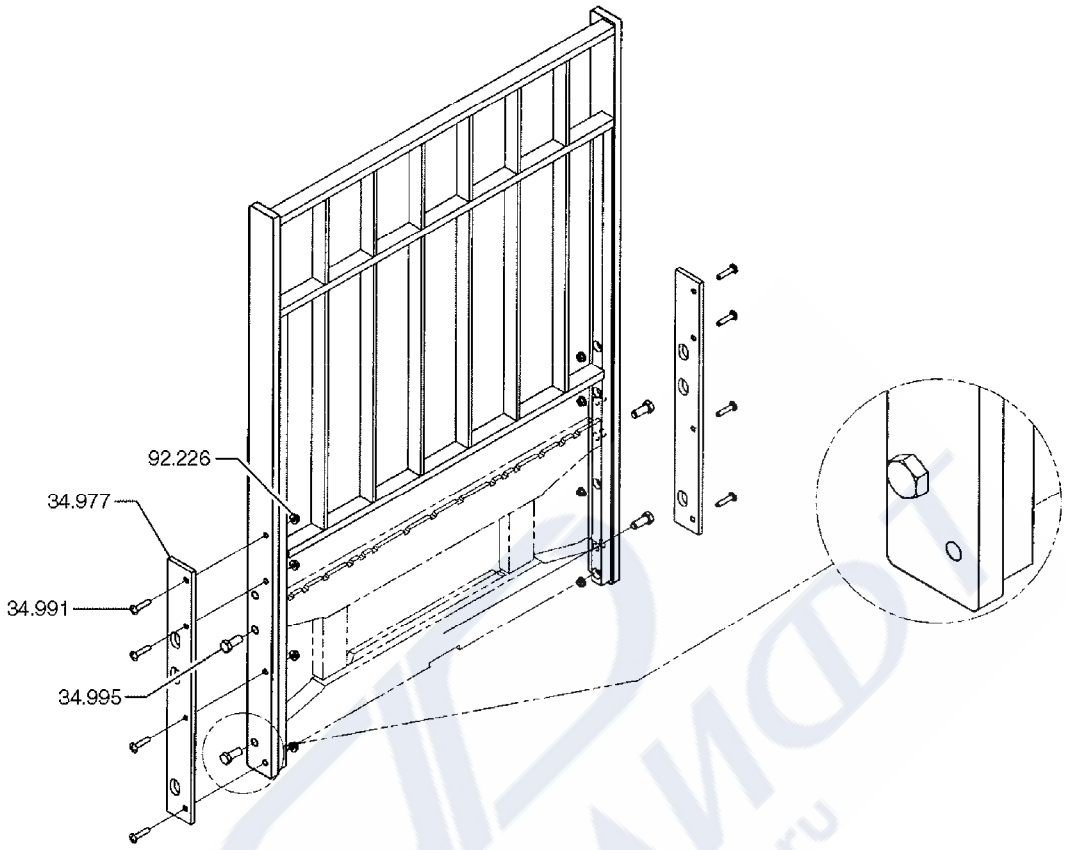

LOAD BACK REST **39-519**

34.977	RETAINER, LOAD BACK REST TRUNNION PIN 리테이너
34.991	FASTENER, LOAD SAFETY BACK REST EXT 패스너
34.995	FASTENER, LOAD SAFETY BACK REST 패스너
92.226	NUT, LOAD SAFETY BACK REST FASTENER 너트

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

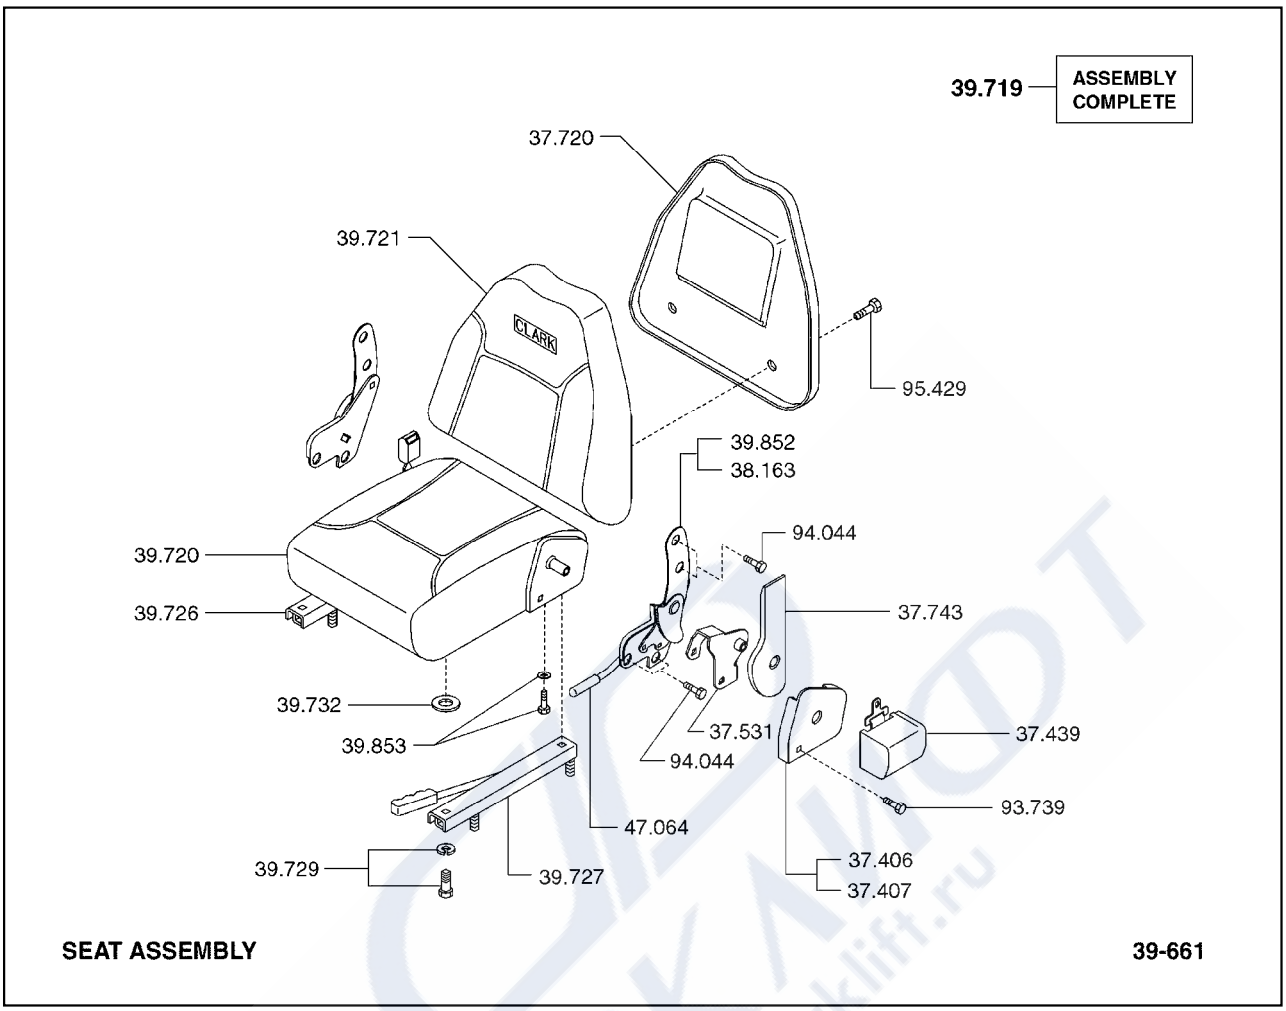

37.406 BRACKET, SEAT BACK REST COVER LH
브라켓

37.407 BRACKET, SEAT BACK REST COVER RH
브라켓

37.439 SAFETY BELT, SEAT
안전벨트

37.531 BRACKET, SEAT SAFETY BELT MOUNTING
브라켓

37.720 COVER, OPERATOR SEAT LATERAL RESTRAINT
커버

37.743 COVER, SEAT SUPPORT LATCH
커버

38.163 BRACKET, SEAT SUPPORT RH
브라켓

39.719 SEAT ASSEMBLY
시트

39.720 CUSHION, SEAT
쿠션

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

39.721	CUSHION, SEAT BACK REST 쿠션
39.726	ADJUSTOR, SEAT 어드져스터
39.727	ADJUSTOR, SEAT WITH LATCH 어드져스터
39.729	FASTENER, ADJUSTOR TO SEAT SUPPORT 패스너
39.732	SPACER, SEAT FRAME TO ADJUSTOR 스페이서
39.852	BRACKET, SEAT SUPPORT LH 브라켓
39.853	FASTENER, SEAT SUPPORT BRACKET 패스너
47.064	KNOB, SEAT ASSEMBLY WEIGHT ADJUSTER 노브
93.739	FASTENER, SAFETY BELT ASSEMBLY 패스너
94.044	FASTENER, SEAT CUSHION MOUNTING PLATE 패스너
95.429	FASTENER, SEAT LATERAL RESTRAINT COVER 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

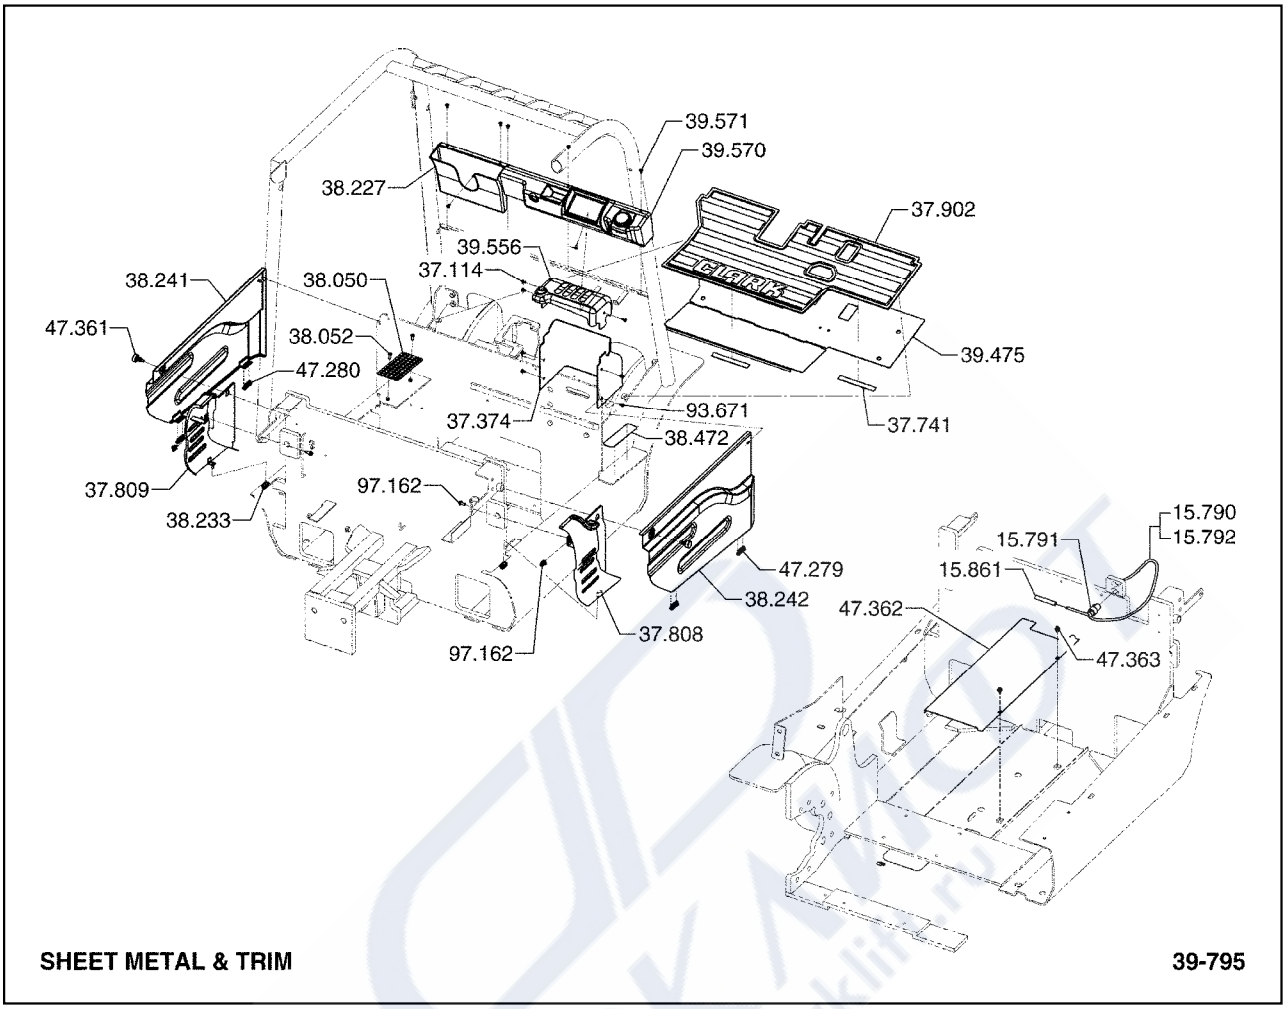

15.790 WIRE, BATTERY STOPPER
와이어

15.791 HOLDER, BATTERY
홀더

15.792 SLEEVE, BATTERY STOOPER WIRE
슬리브

15.861 SHIELD, SPARK PROVENTION
쉴드

37.114 FASTENER, VALVE LINKAGE ACCESS COVER
패스너

37.374 COVER, HYDRAULIC VALVE
커버

37.741 SOUND ABSORBER, FLOOR PLATE
흡음재

37.808 COVER, REAR RH
커버

37.809 COVER, REAR LH
커버

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

37.902	MAT, FLOORPLATE 매트
38.050	STEP ASSEMBLY, LH 스텝
38.052	FASTENER, STEP FRONT 패스너
38.227	POCKET, DASH PANEL 포켓
38.233	RUBBER, FRAME SIDE COVER 러버
38.241	COVER ASSEMBLY, SIDE LH 커버
38.242	COVER ASSEMBLY, SIDE RH 커버
38.472	PAD, RH STEP NON-SKID 패드
39.475	PLATE, FRONT FLOOR 플레이트
39.556	COVER, VALVE LINKAGE ACCESS 커버
39.570	COVER ASSEMBLY, DASH 커버
39.571	FASTENER, DASH COVER 패스너
47.279	RUBBER, SIDE COVER RH 러버
47.280	RUBBER, SIDE COVER LH 러버
47.361	KNOB, SIDE COVER 노브
47.362	COVER, CABLE PROTECTION 커버
47.363	FASTENER, CABLE PROTECTION COVER 패스너
93.671	FASTENER, HYDRAULIC VALVE COVER 패스너
97.162	FASTENER, SIDE COVER TO FRAME 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

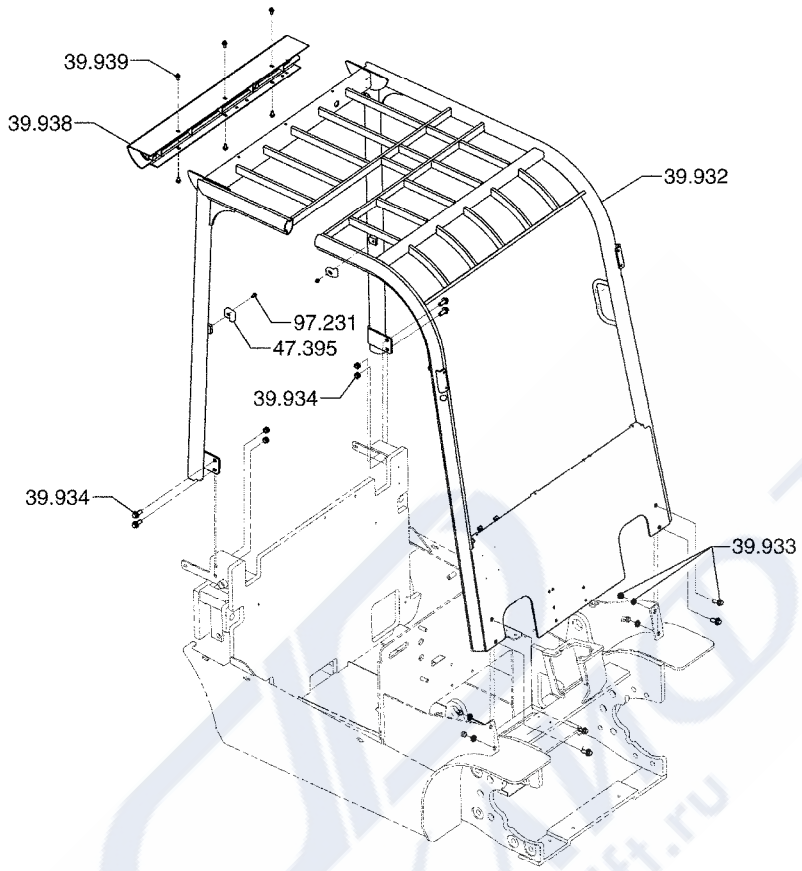

OVERHEAD GUARD MOUNTING **39-798**

39.932	GUARD, OVERHEAD 가드
39.933	FASTENER, OVERHEAD GUARD 패스너
39.934	FASTENER, OVERHEAD GUARD 패스너
39.938	BRACKET, OVERHEAD GUARD REAR SUPPORT 브라켓
39.939	FASTENER, OVERHEAD GUARD REAR SUPPORT BRACKET 패스너
47.395	BUMPER, FRAME COVERING HOOD SUPPORT 범퍼
97.231	FASTENER, FRAME COVERING HOOD SUPPORT BUMPER 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

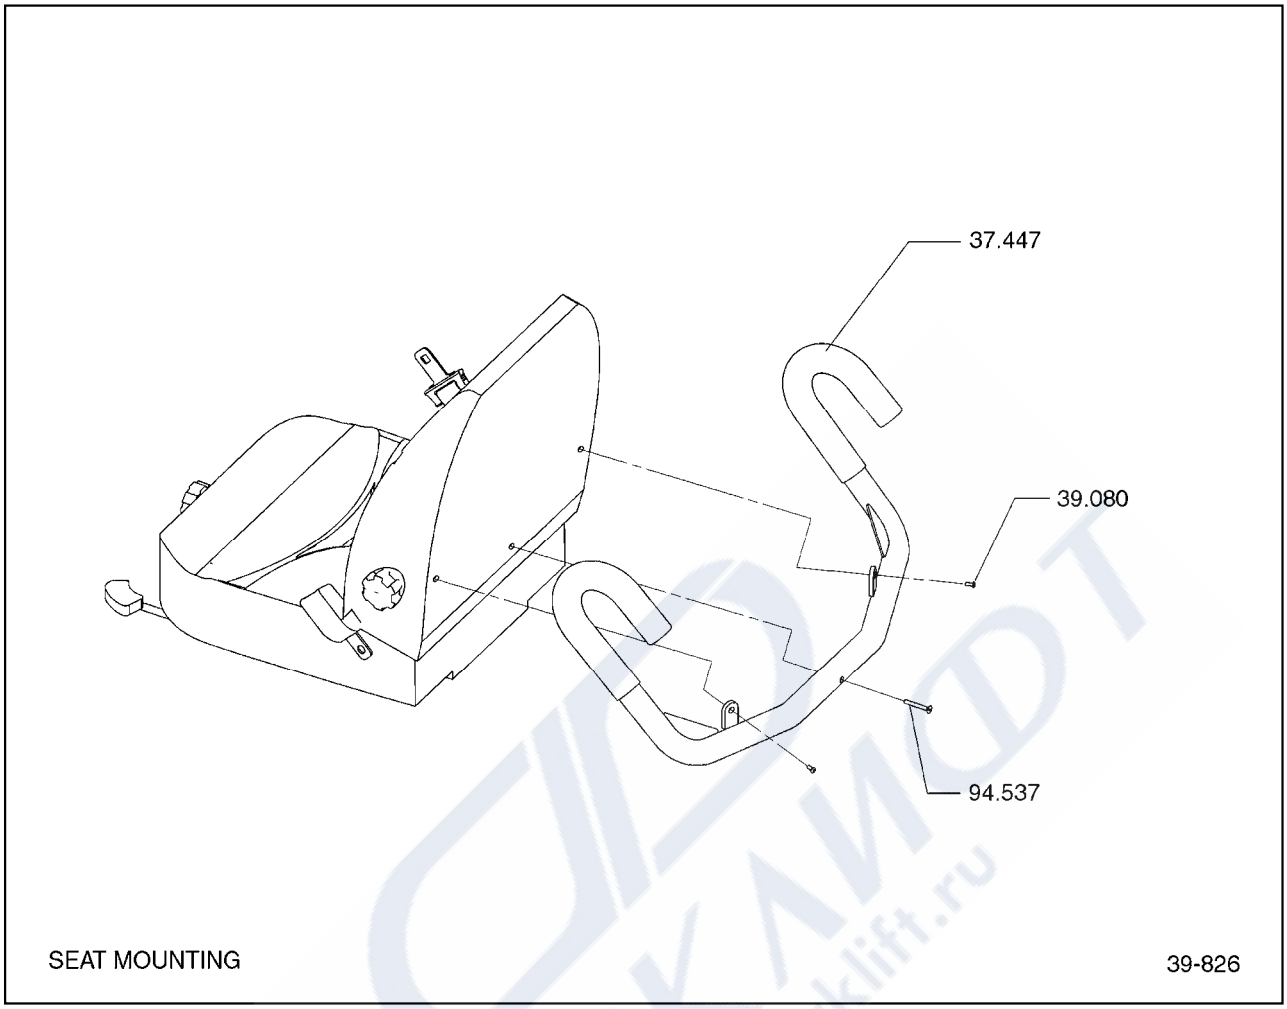

37.447 RESTRAINT, OPERATOR SEAT LATERAL
레스트레인트

39.080 FASTENER, OPERATOR SAFETY GUARD
패스너

94.537 FASTENER, OPERATOR SEAT LATERAL RESTRAINT
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

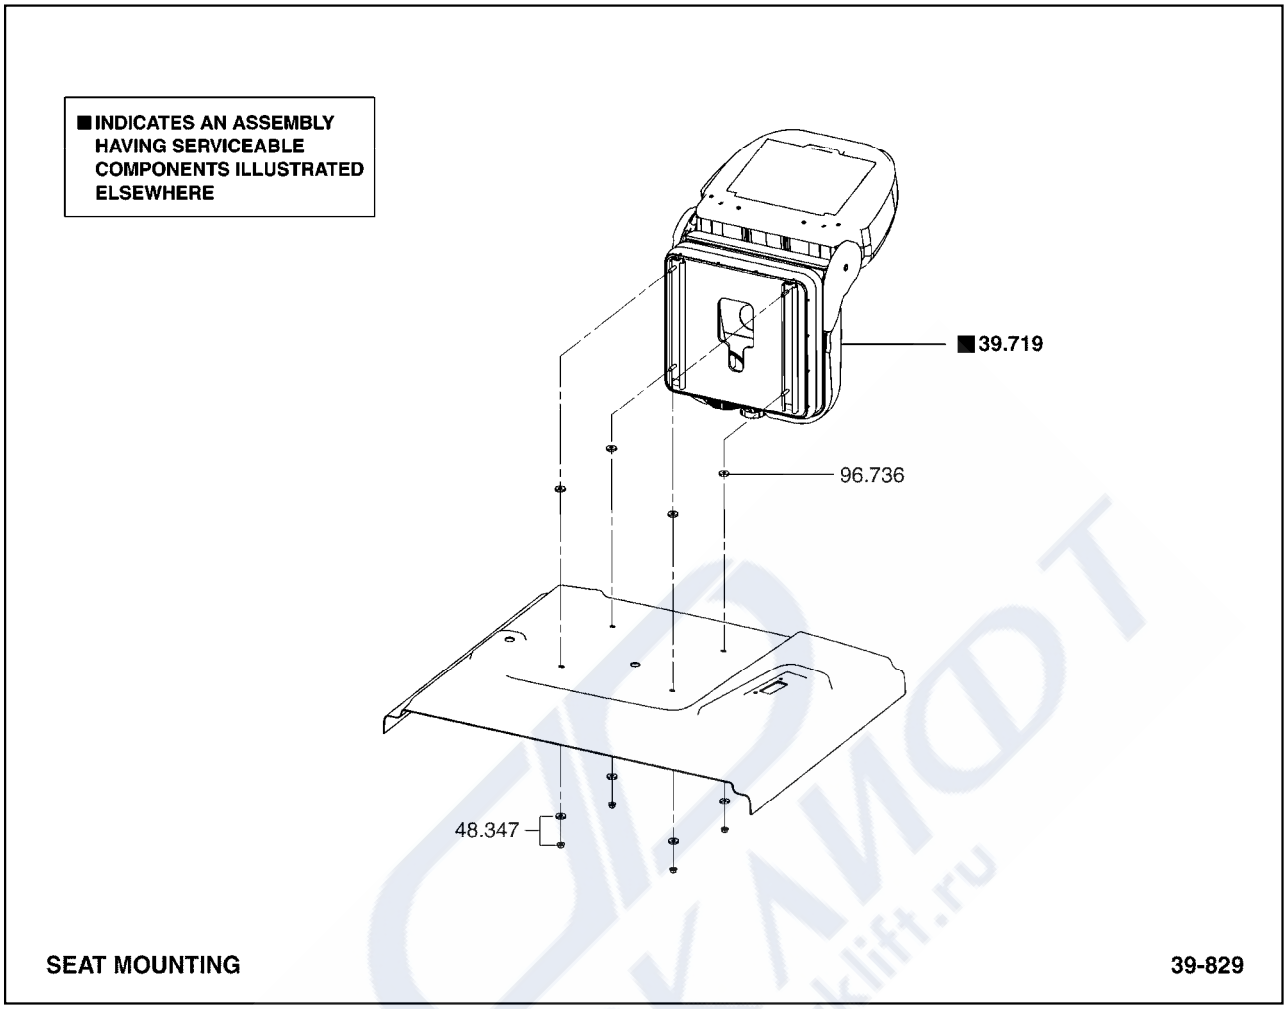

39.719	SEAT ASSEMBLY 시트
48.347	FASTENER, SEAT ASSEMBLY 패스너
96.736	WASHER, SEAT ASSEMBLY FASTENER 와셔

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

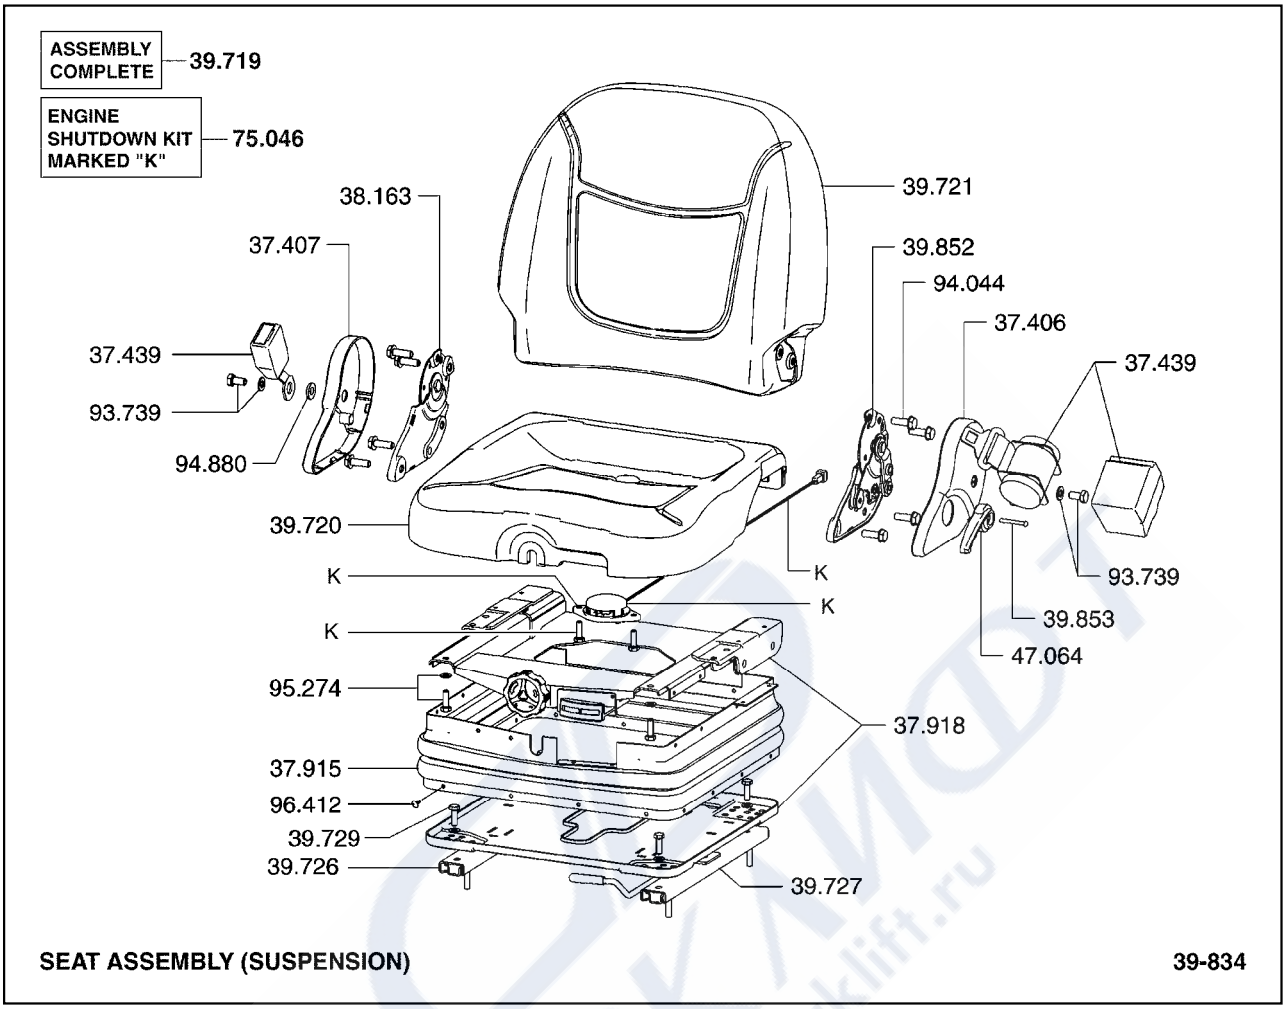

37.406 BRACKET, SEAT BACK REST COVER LH
브라켓

37.407 BRACKET, SEAT BACK REST COVER RH
브라켓

37.439 SAFETY BELT, SEAT
안전벨트

37.915 SUSPENSION COVER, SEAT SUSPENSION
서스펜션커버

37.918 SUSPENSION ASSEMBLY, SEAT
서스펜션

38.163 BRACKET, SEAT SUPPORT RH
브라켓

39.719 SEAT ASSEMBLY
시트

39.720 CUSHION, SEAT
쿠션

39.721 CUSHION, SEAT BACK REST
쿠션

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

39.726	ADJUSTOR, SEAT 어드져스터
39.727	ADJUSTOR, SEAT WITH LATCH 어드져스터
39.729	FASTENER, ADJUSTOR TO SEAT SUPPORT 패스너
39.852	BRACKET, SEAT SUPPORT LH 브라켓
39.853	FASTENER, SEAT SUPPORT BRACKET 패스너
47.064	KNOB, SEAT ASSEMBLY WEIGHT ADJUSTER 노브
75.046	KIT, SEAT ACTUATED ENGINE SHUTDOWN 키트
93.739	FASTENER, SAFETY BELT ASSEMBLY 패스너
94.044	FASTENER, SEAT CUSHION MOUNTING PLATE 패스너
94.880	FASTENER, SEAT SUPPORT CATCH BRACKET 패스너
95.274	FASTENER, SEAT CUSHION SUSPENSION SUPPORT 패스너
96.412	FASTENER, SEAT SUSPENSION BACK SIDE COVER 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

■INDICATES AN ASSEMBLY HAVING SERVICEABLE COMPONENTS ILLUSTRATED ELSEWHERE

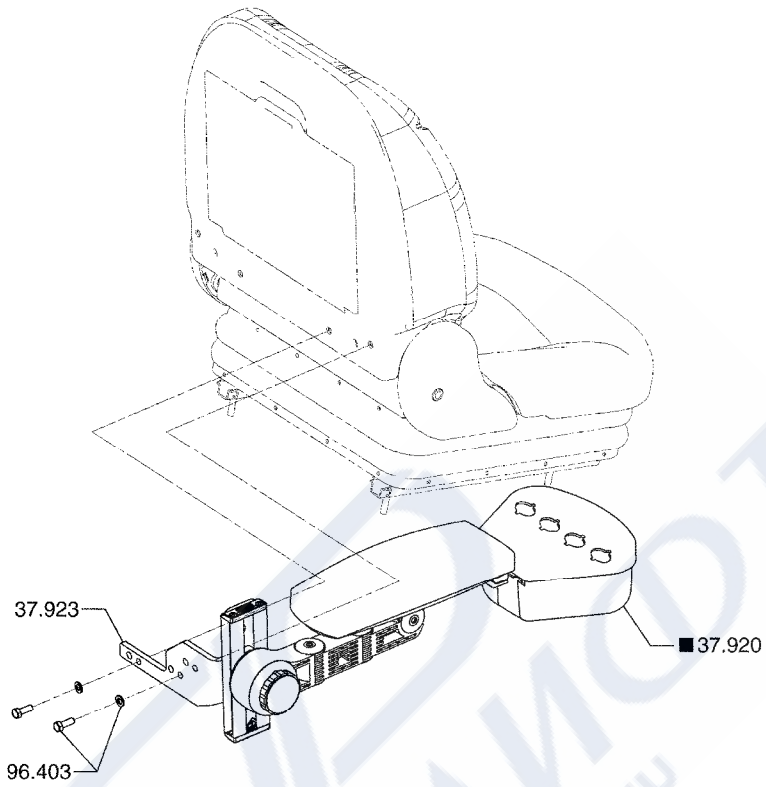

ARMREST MOUNTING (ELH) **39-835**

37.920	ARMREST RH, SEAT 암레스트
37.923	BRACKET, SEAT ARMREST RIGHT HAND 브라켓
96.403	FASTENER, SEAT ARMREST BRACKET 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

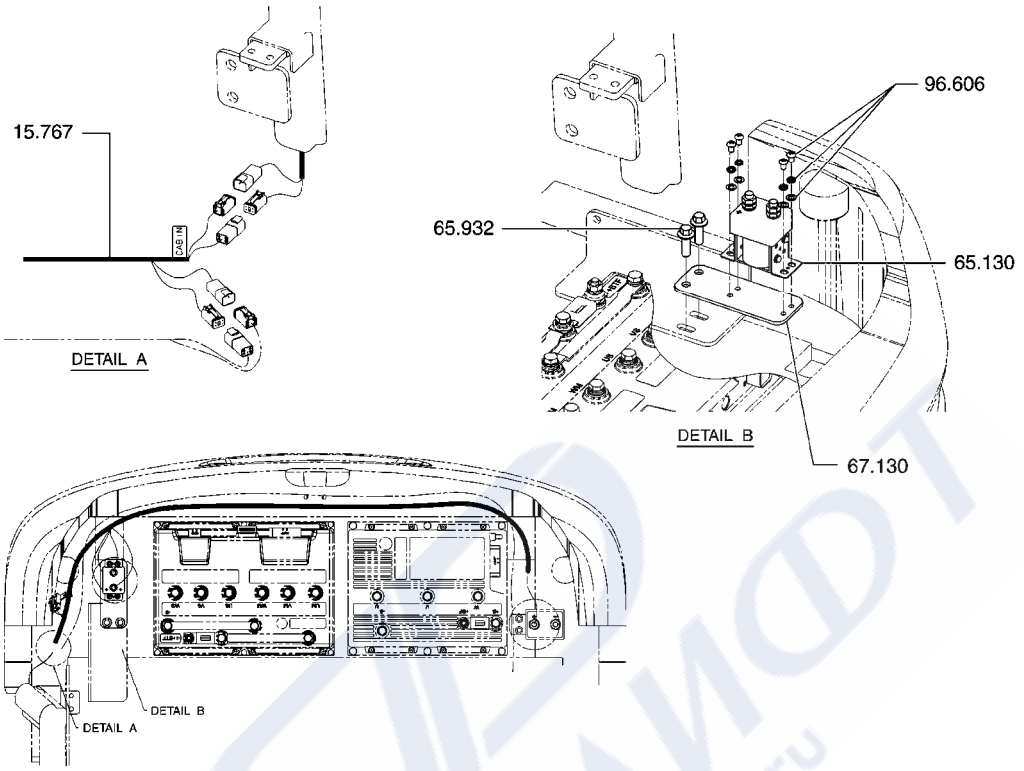

CABIN AND HEATER INSTALLATION **39-869**

15.767	WIRE HARNESS, ELECTRONIC CONTROL UNIT 와이어하네스
65.130	CONTACTOR ASSEMBLY, LINE 컨택터
65.932	FASTENER, LINE CONTACTOR 패스너
67.130	HEAT SINK, PUMP CONTROL POWER TRANSISTOR 히트싱크
96.606	FASTENER, LINE CONTACTOR MOUNTING BRACKET 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

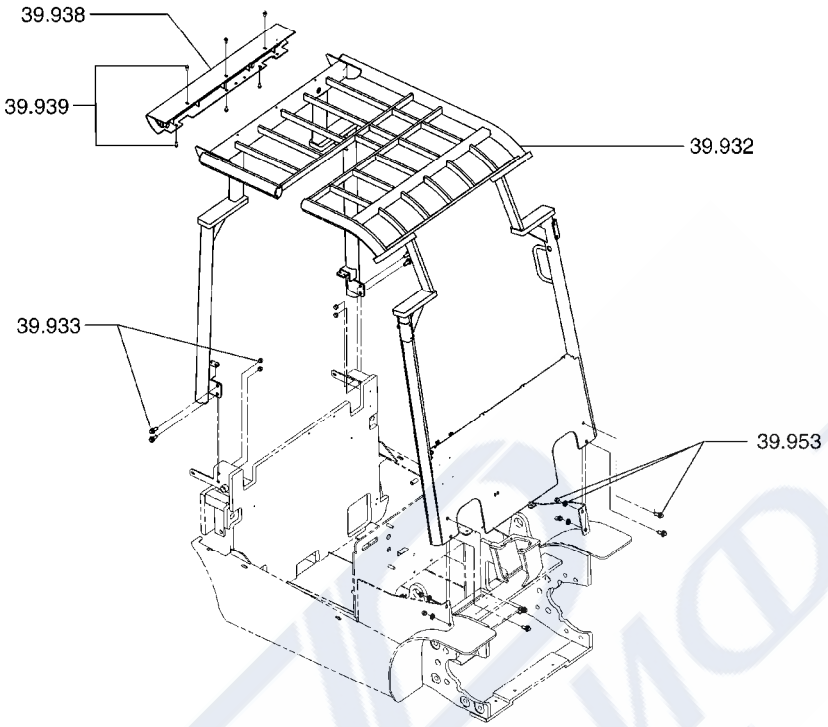

OHG DIDT 39-930

39.932 GUARD, OVERHEAD
가드

39.933 FASTENER, OVERHEAD GUARD
패스너

39.938 BRACKET, OVERHEAD GUARD REAR SUPPORT
브라켓

39.939 FASTENER, OVERHEAD GUARD REAR SUPPORT BRACKET
패스너

39.953 FASTENER, OVERHEAD GUARD (FRONT LEGS)
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

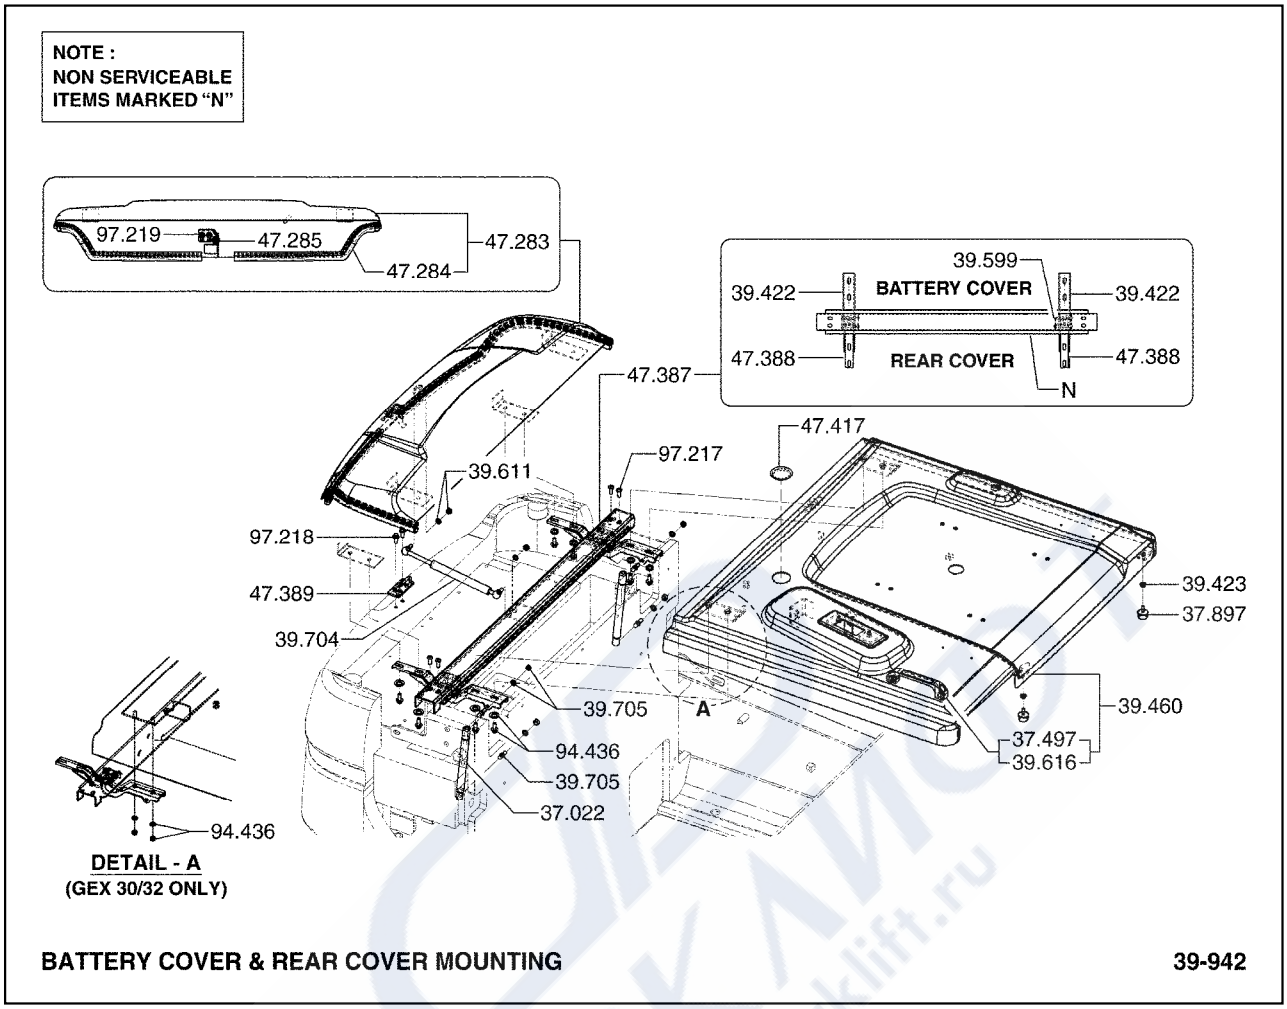

37.022 SPRING, HOOD PROP INNER
스프링

37.497 HANDLE, TOP HOOD LATCH
핸들

37.897 BUMPER, TOP HOOD
범퍼

39.422 HINGE, TOP HOOD
힌지

39.423 FASTENER, TOP HOOD
패스너

39.460 COVER ASSEMBLY, BATTERY
커버

39.599 FASTENER, HOOD PIVOT HINGE
패스너

39.611 FASTENER, HOOD PROP SUPPORT
패스너

39.616 FASTENER, TOP HOOD LATCH
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

39.704	SPRING, HOOD PROP (OUTER) 스프링
39.705	FASTENER, HOOD PROP 패스너
47.283	COVER, FRAME REAR 커버
47.284	WEATHERSTRIP, FRAME REAR COVER 웨더스트립
47.285	LATCH, FRAME REAR COVER 래치
47.387	BRACKET, FRAME COVERING HOOD LINKAGE 브라켓
47.388	HINGE, FRAME REAR COVER 힌지
47.389	HOLDER, REAR COVER LATCH 홀더
47.417	CAP, SEAT WIRING HARNESS HOLE 캡
94.436	FASTENER, HOOD PROP BRACKET SUPPORT 패스너
97.217	FASTENER, FRAME COVERING HOOD LINKAGE BRACKET 패스너
97.218	FASTENER, REAR COVER LATCH HOLDER 패스너
97.219	FASTENER, REAR COVER LATCH 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

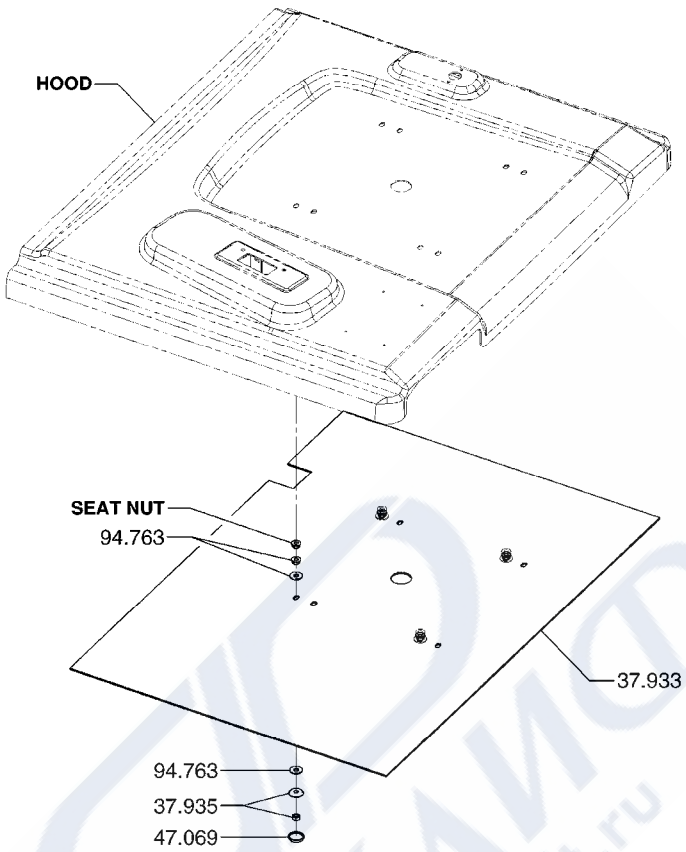

EE CONSTRUCTION, HOOD / FRAME **39-944**

37.933	COVER, HOOD ACCESS 커버
37.935	FASTENER, HOOD ACCESS COVER 패스너
47.069	PLUG, TOP HOOD 플러그
94.763	FASTENER, HOOD SUPPORT 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

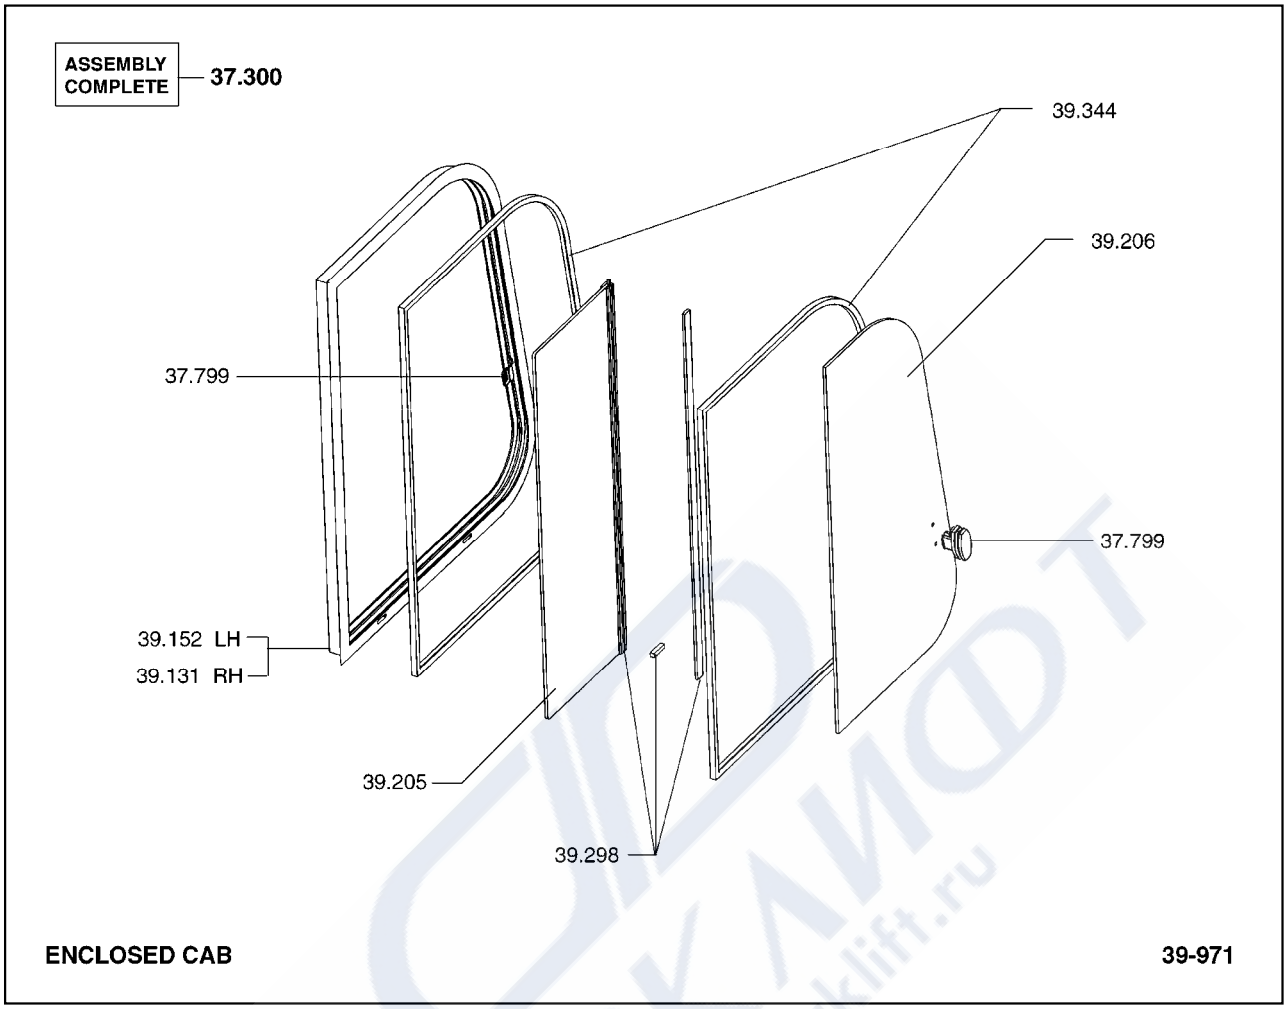

37.300	CAB ASSEMBLY 캐빈
37.799	LATCH, CAB DOOR WINDOW ASSEMBLY 래치
39.131	DOOR ASSEMBLY, RIGHT HAND 도어
39.152	DOOR ASSEMBLY, LEFT HAND 도어
39.205	GLASS, RH DOOR REAR 글래스
39.206	GLASS, RH DOOR FRONT 글래스
39.298	CHANNEL, FRONT DOOR GLASS - FRONT 채널
39.344	WEATHERSEAL, RH DOOR WINDOW ASSEMBLY 웨더씰
39.799	FASTENER, ADJUSTOR TO EXTRA SEAT SUPPORT REAR 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

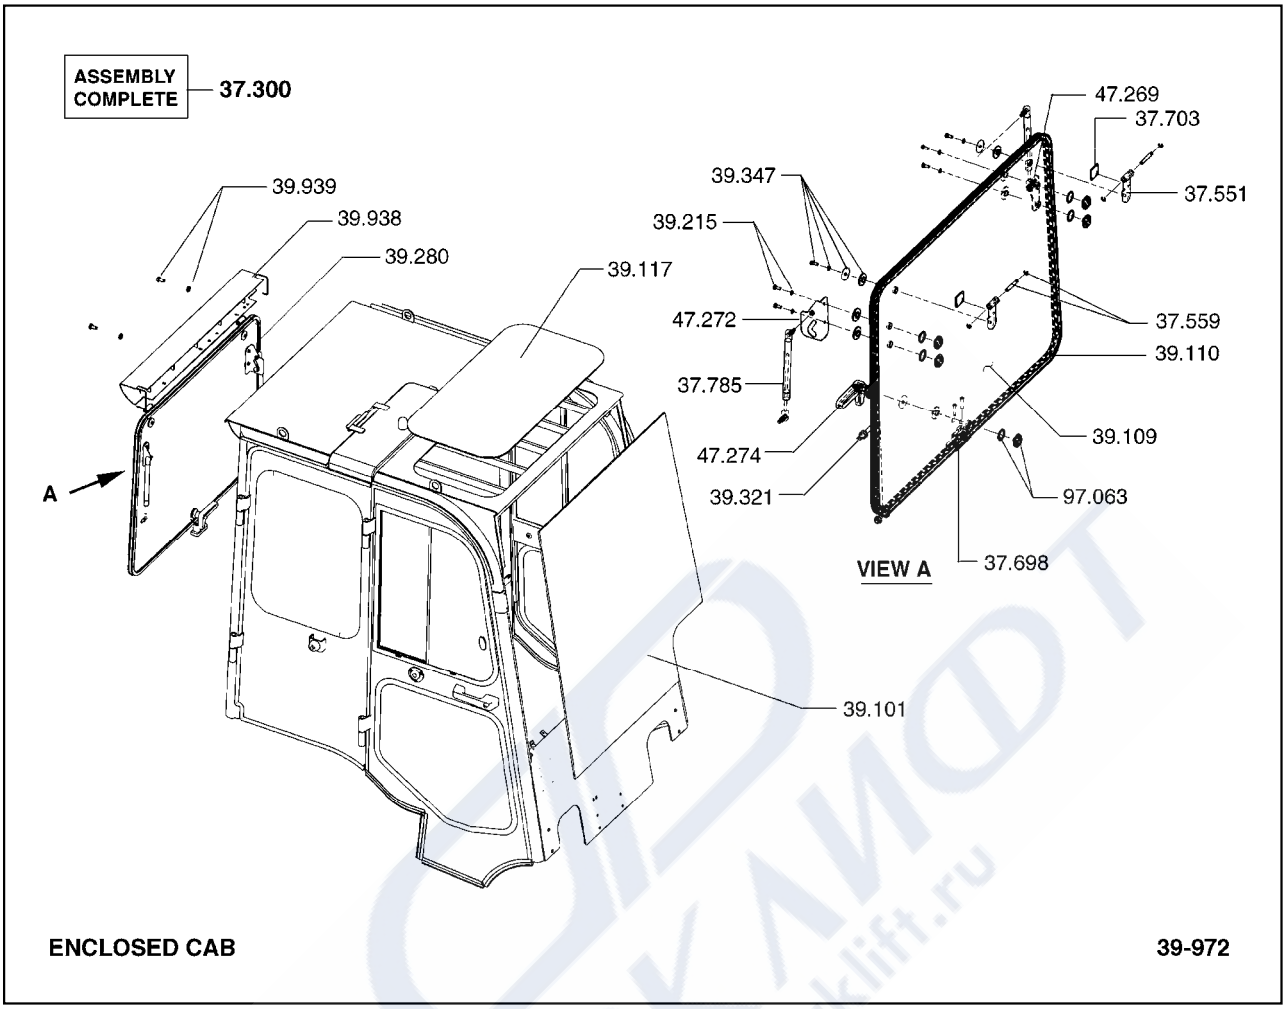

37.300	CAB ASSEMBLY 캐빈
37.551	HANGER, CAB REAR GLASS 행거
37.559	PIN, CABIN REAR GLASS HANGER 핀
37.698	HINGE, CORNER WINDOW GLASS 힌지
37.703	RUBBER PLATE, WINDOW GLASS RETAINER FASTENER 러버플레이트
37.785	SHOCK ABSORBER, CAB INSPECTION FRAME 쇼브업쇼버
39.101	GLASS, WINDSHIELD 글래스
39.109	GLASS, REAR 글래스
39.110	WEATHERSEAL, REAR GLASS SETTING 웨더씰

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

39.117	ROOF SCREEN 루프스크린
39.215	FASTENER, GAS SPRING 패스너
39.280	GLASS, REAR WINDOW - MOVEABLE 글래스
39.321	GUARD, REAR WINDOW 가드
39.347	FASTENER, CAB REAR WINDOW LATCH 패스너
39.938	BRACKET, OVERHEAD GUARD REAR SUPPORT 브라켓
39.939	FASTENER, OVERHEAD GUARD REAR SUPPORT BRACKET 패스너
47.269	BRACKET, CAB REAR GLASS GAS SPRING SUPPORT 브라켓
47.272	BRACKET, CAB REAR GLASS GAS SPRING MOUNTING 브라켓
47.274	HANDLE, CAB REAR GLASS 핸들
97.063	FASTENER, REAR DOOR HANDLE MOUNTING 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

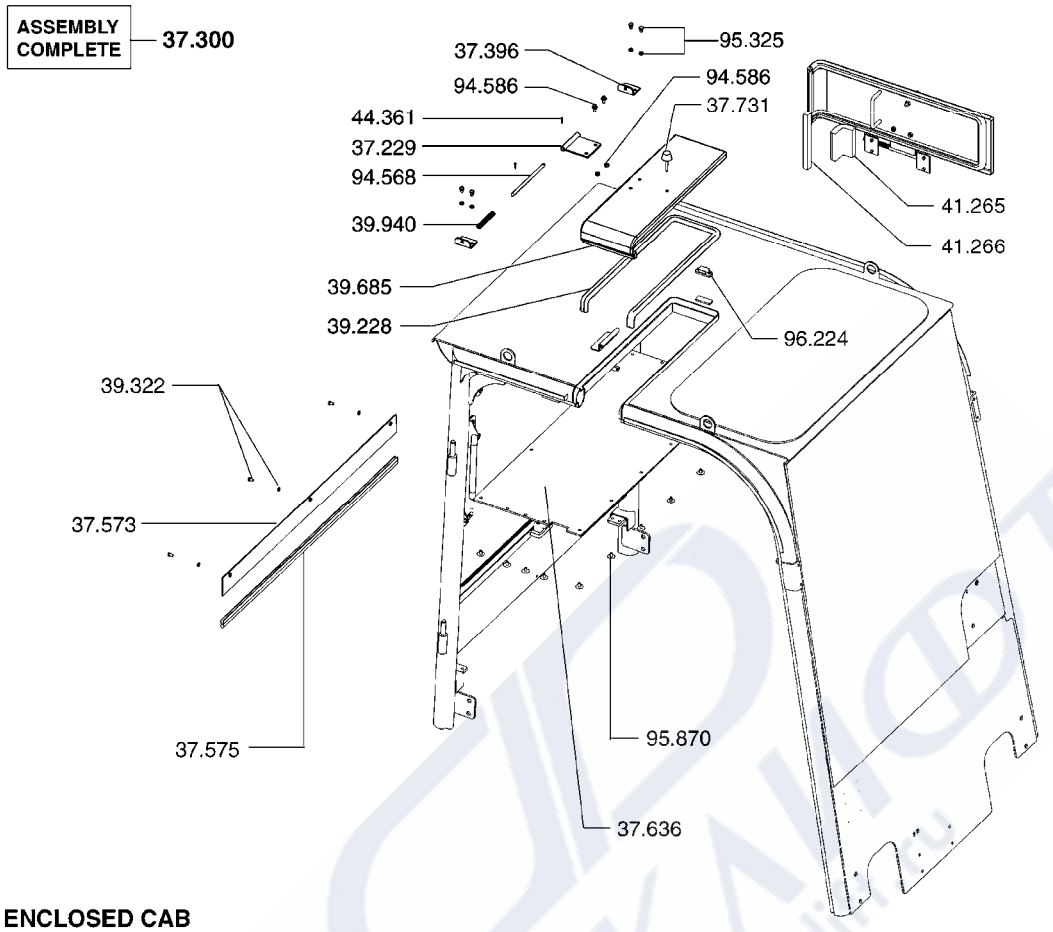

37.229 HINGE, DRIVE UNIT COVER
힌지

37.300 CAB ASSEMBLY
캐빈

37.396 PLATE, DRIVERS OVERHEAD GUARD TOP SECTION COVER
플레이트

37.573 SUPPORT, DOOR STOP
서포트

37.575 COVER, LOWER REAR PANEL
커버

37.636 COVERING, CAB INSIDE ROOF
커버링

37.731 CUSHION, WINDSHIELD GLASS MOUNTING
쿠션

39.228 WEATHERSEAL, WINDSHIELD SETTING
웨더씰

39.322 FASTENER, REAR WINDOW GUARD
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

39.685	COVER, ROOF ASSEMBLY RH SUPPORT 커버
39.940	SPRING, OVERHEAD GUARD REAR SUPPORT OVER CENTER 스프링
41.265	SOUND ABSORBER, CAB ROOF 흡음재
41.266	SOUND ABSORBER, CAB ROOF 흡음재
44.361	PIN, CLEVIS 핀
94.568	FASTENER, CAB REAR COVER 패스너
94.586	FASTENER, CAB PROP 패스너
95.325	FASTENER, CAB ROOF 패스너
95.870	FASTENER, CAB ROOF SOUND ABSORBER SUPPORT 패스너
96.224	FASTENER, CAB WEATHERSEAL SUPPORT 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

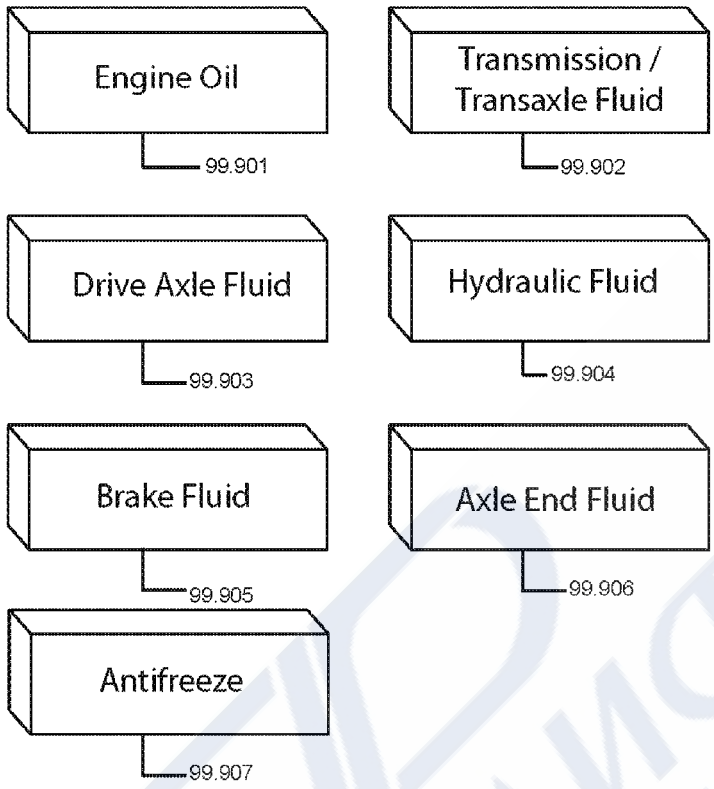

NOTE: All Trucks Do Not Use All Fluid Key Numbers

TRUCK FLUIDS 40-260

99.901 ENGINE OIL
엔진오일

99.902 TRANSMISSION FLUID
트랜스미션오일

99.903 DRIVE AXLE FLUID
드라이브액슬

99.904 HYDRAULIC SUMP OIL
유압섬프오일

99.905 BRAKE FLUID
브레이크오일

99.906 AXLE END FLUID
액슬엔드오일

99.907 ENGINE ANTIFREEZE
부동액

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

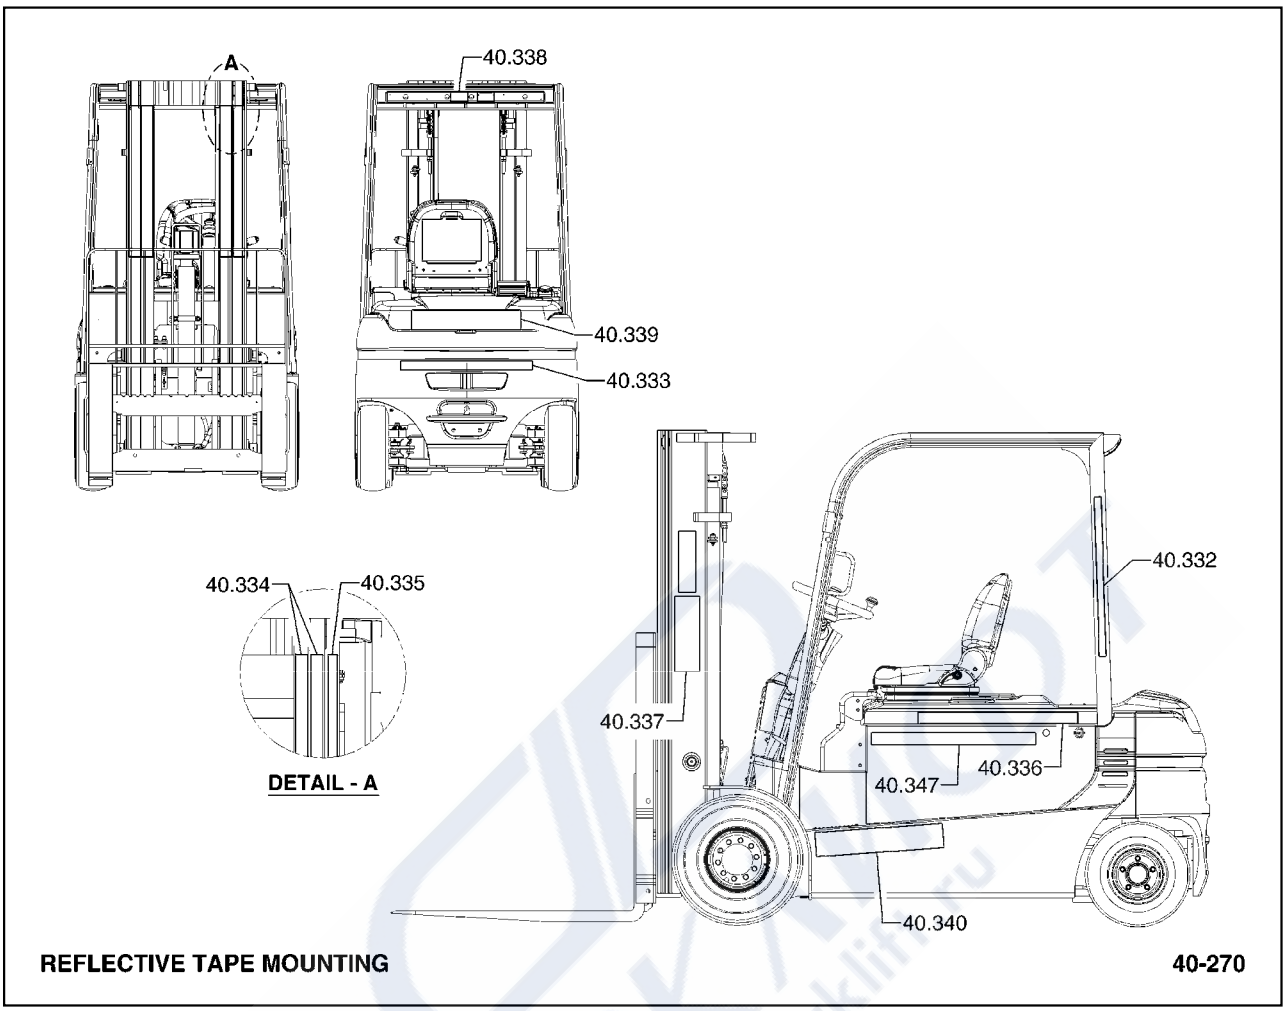

40.332 REFLECTOR, OVERHEAD GUARD
리플렉터

40.333 REFLECTOR, COUNTERWEIGHT
리플렉터

40.334 REFLECTOR, UPRIGHT RAIL FRONT
리플렉터

40.335 REFLECTOR, UPRIGHT RAIL FRONT
리플렉터

40.336 REFLECTOR, TOP HOOD
리플렉터

40.337 REFLECTOR, UPRIGHT RAIL SIDE
리플렉터

40.338 REFLECTOR, OVERHEAD GUARD REAR
리플렉터

40.339 DECAL, REAR CAUTION
데칼

40.340 DECAL, SIDE CAUTION
데칼

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

40.347 REFLECTOR, FRAME SIDE COVER
리플렉터

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

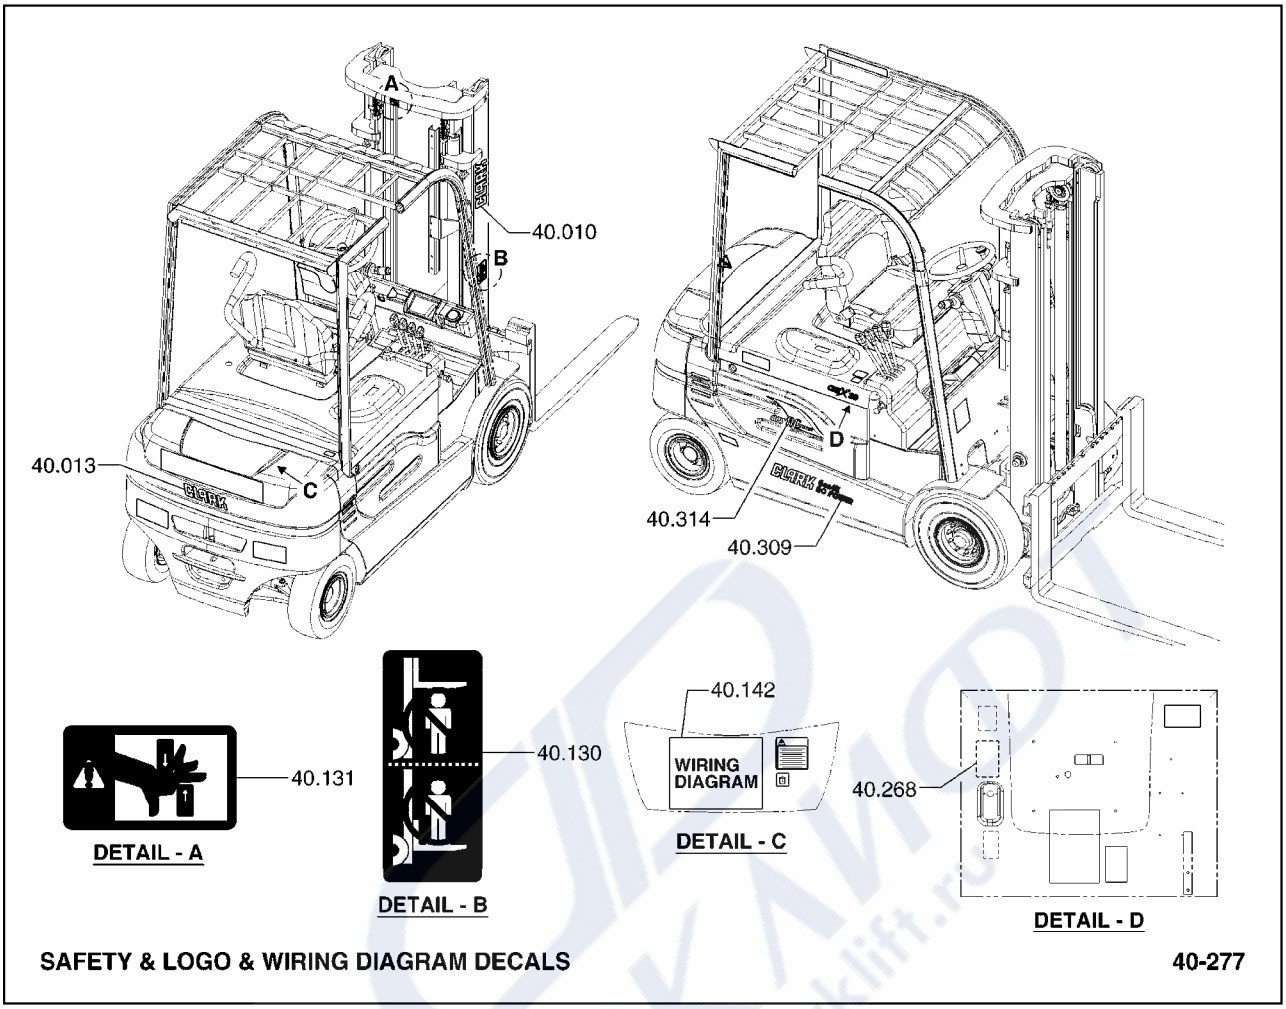

40.010	DECAL, CLARK 데칼
40.013	DECAL, CLARK LOGO-LARGE 데칼
40.130	LEGEND, SAFETY 범례
40.131	LEGEND, SAFETY 범례
40.142	DECAL, ELECTRICAL CIRCUIT DIAGRAM 데칼
40.268	DECAL, SPEC 데칼
40.309	DECAL, AC LOGO 데칼
40.314	DECAL, AC LOGO 데칼

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

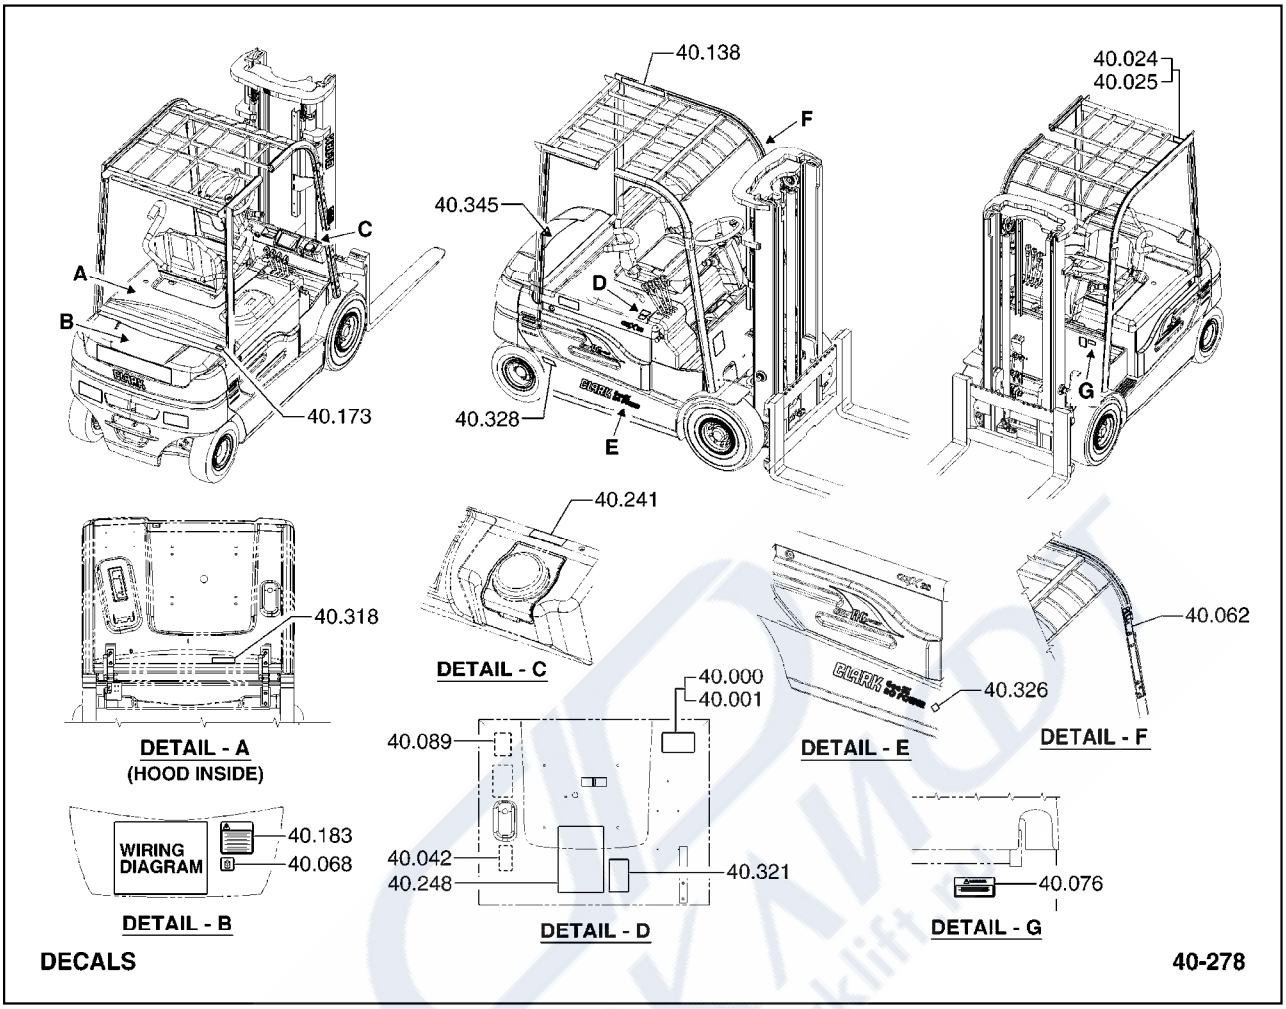

40.000 PLATE, CAPACITY & SERIAL NUMBER
플레이트

40.001 FASTENER, CAPACITY & SERIAL PLATE
패스너

40.024 PLATE, UNDERWRITERS LABEL
플레이트

40.025 FASTENER, UNDERWRITERS LABEL PLATE
패스너

40.042 DECAL, POLARITY
데칼

40.062 DECAL, DRIVERS CAUTION
데칼

40.068 DECAL, HYD-SYSTEM OIL
데칼

40.076 DECAL, ELECTRIC TRUCK CAUTION
데칼

40.089 PLATE, SAFETY INSTRUCTION
플레이트

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

40.138 DECAL, SAFETY
데칼

40.173 DECAL, IMPORTANT
데칼

40.183 DECAL, BATTERY DISCONNECT WARNING
데칼

40.241 DECAL, BRAKE OIL SPEC
데칼

40.248 DECAL, SERVICE CHART
데칼

40.318 DECAL, BATTERY LOCATION
데칼

40.321 DECAL, DISTILLED WATER
데칼

40.326 DECAL, EE MARKING
데칼

40.328 DECAL, WHEEL NUT WARNING
데칼

40.345 DECAL, VOLTAGE WARNING
데칼

40.351 DECAL, HOOD OPEN OPERATING INSTRUCTIONS
데칼

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

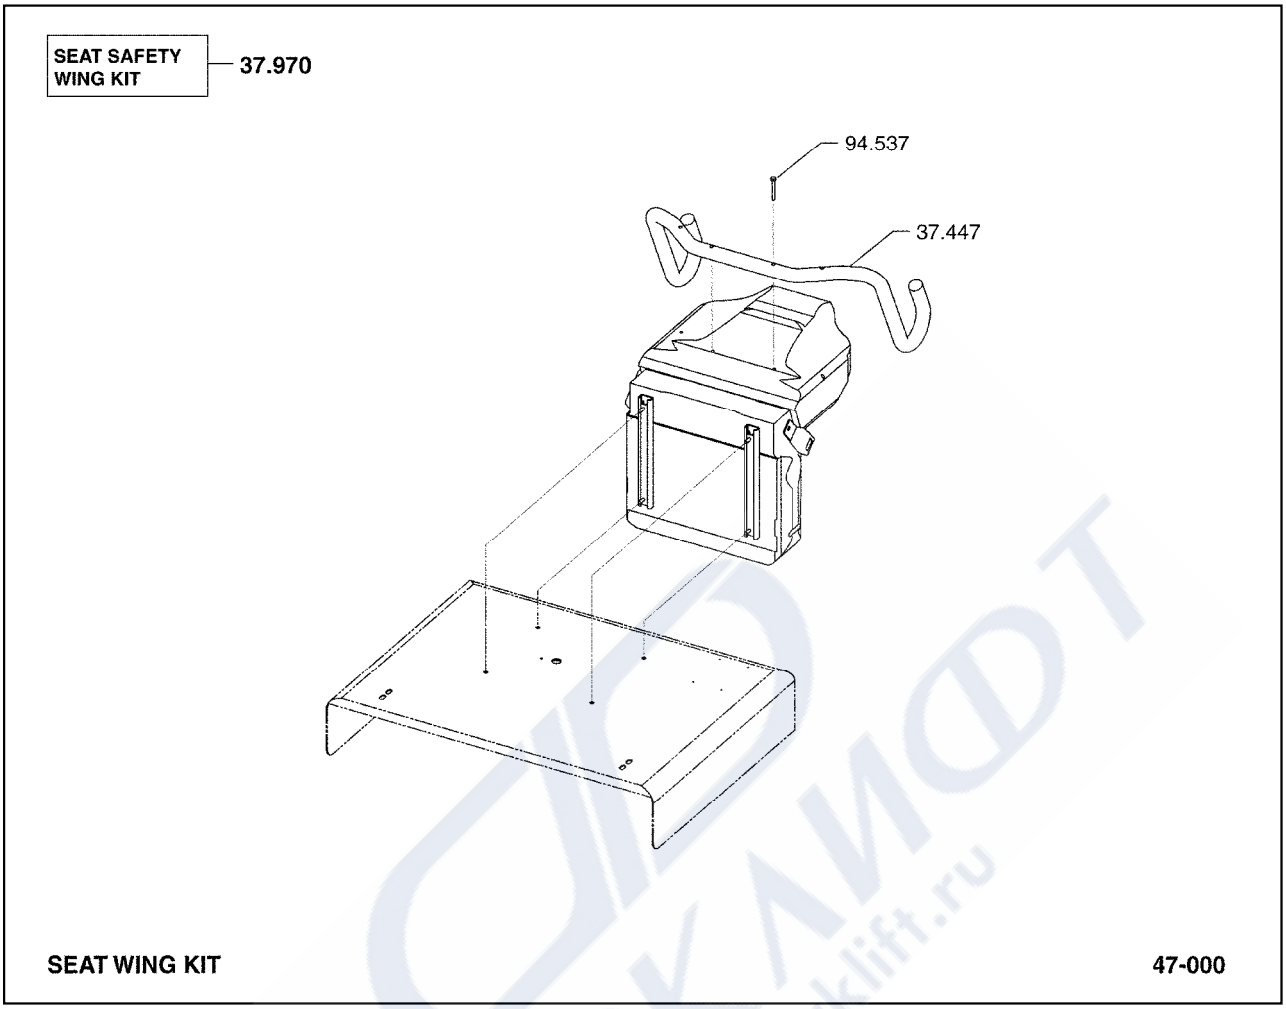

37.447	RESTRAINT, OPERATOR SEAT LATERAL 레스트레인트
37.970	KIT, SEAT SAFETY 키트
94.537	FASTENER, OPERATOR SEAT LATERAL RESTRAINT 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

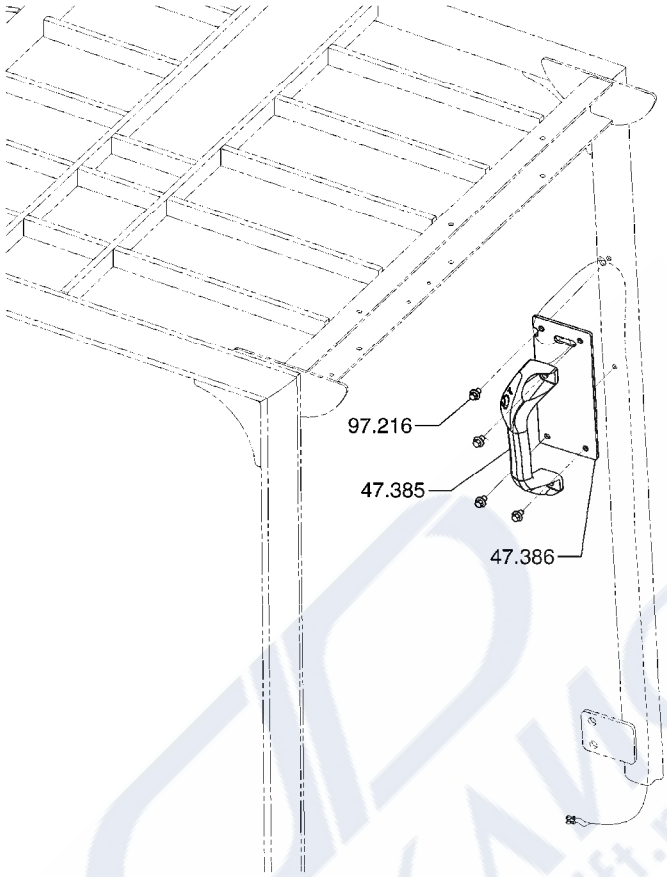

REAR HAND GRIP MOUNTING **47-016**

47.385 GRIP, OVERHEAD GUARD REAR HAND
그립

47.386 BRACKET, OVERHEAD GUARD REAR HAND GRIP
브라켓

97.216 FASTENER, OVERHEAD GUARD REAR HAND GRIP
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

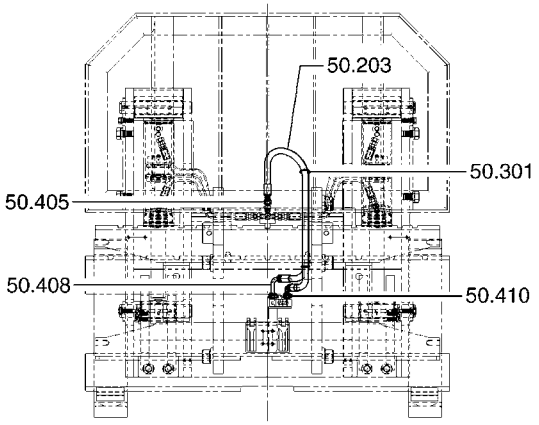

HINGED BUCKET (HB) / FORK (HF) - BASIC

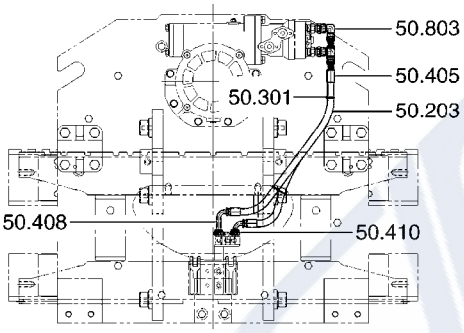

ROTATING FORK (RF) - BASIC

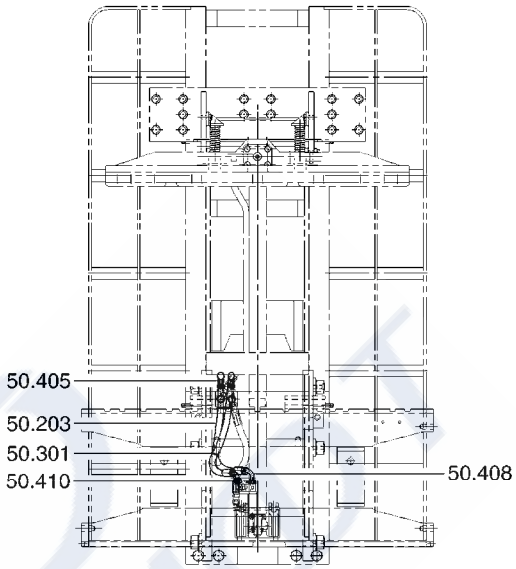

LOAD STABILIZER (LS) - BASIC

ATTACHMENT HOSE ADAPTATION (CARRIAGE) 50-171

50.203 LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인

50.301 CLIP, DEVICE RH HOSE (AT CARRIAGE)
클립

50.405 COUPLING, DEVICE HOSE
커플링

50.408 COUPLING, DEVICE HOSE
커플링

50.410 COUPLING, DEVICE HOSE
커플링

50.803 FITTING, DEVICE HYDRAULIC LINE
피팅

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

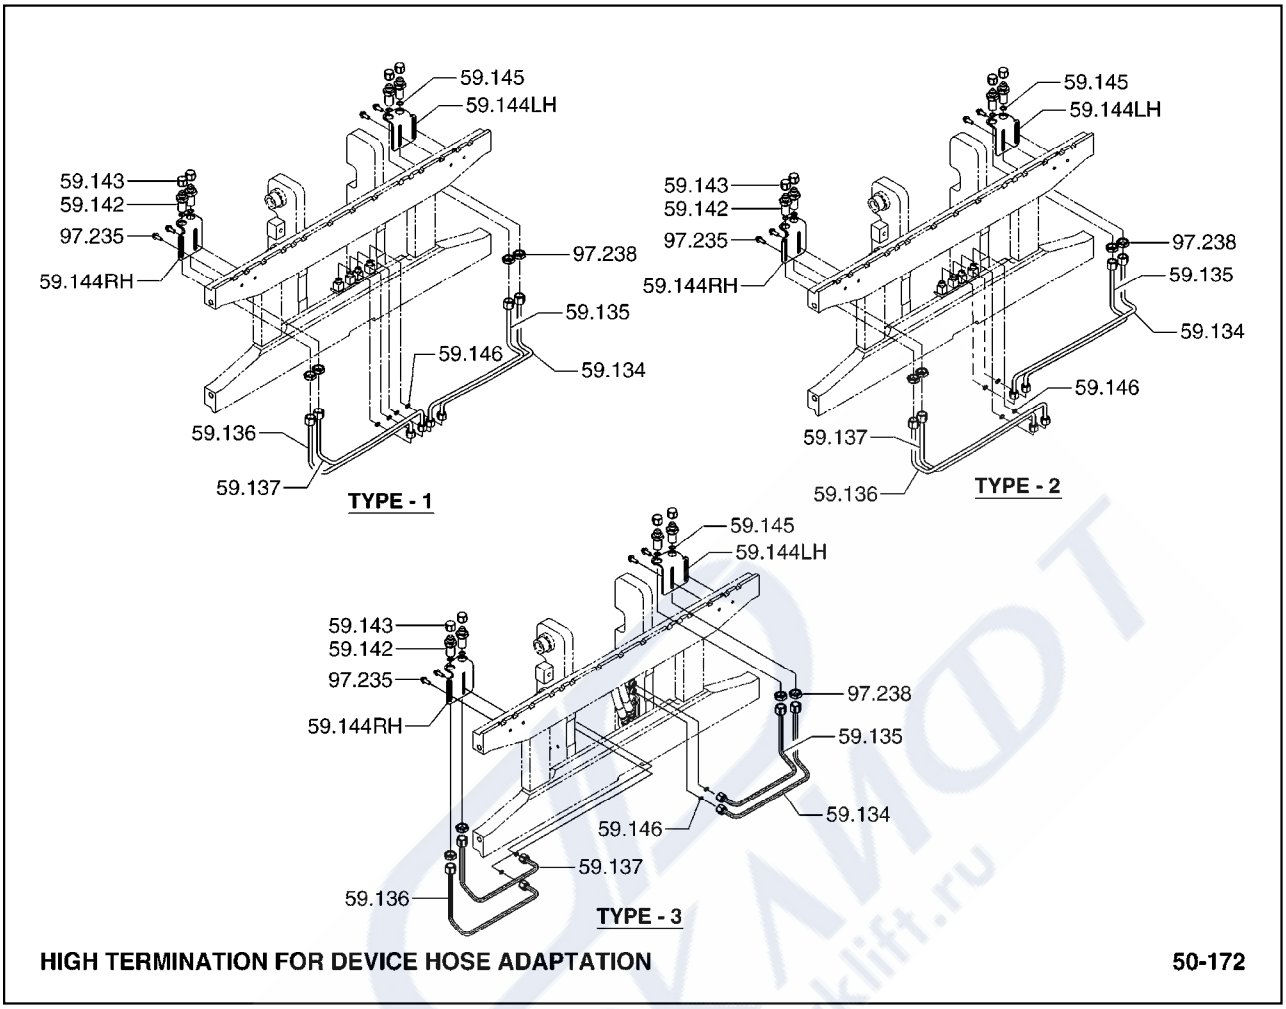

59.134 LINE, DEVICE LH LINE FOR HIGH TERMINATION
라인

59.135 LINE, DEVICE LH LINE FOR HIGH TERMINATION
라인

59.136 LINE, DEVICE RH LINE FOR HIGH TERMINATION
라인

59.137 LINE, DEVICE RH LINE FOR HIGH TERMINATION
라인

59.142 FITTING, DEVICE LINE FOR HIGH TERMINATION
피팅

59.143 CAP, DEVICE LINE FITTING FOR HIGH TERMINATION
캡

59.144 BRACKET, DEVICE LINE FOR HIGH TERMINATION
브라켓

59.145 SEAL, DEVICE LINE FITTING FOR HIGH TERMINATION
씰

59.146 SEAL, DEVICE LINE FITTING FOR HIGH TERMINATION
씰

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

97.235 FASTENER, DEVICE LINE CLAMP FOR HIGH TERMINATION
패스너

97.238 FASTENER, DEVICE LINE FITTING FOR HIGH TERMINATION
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

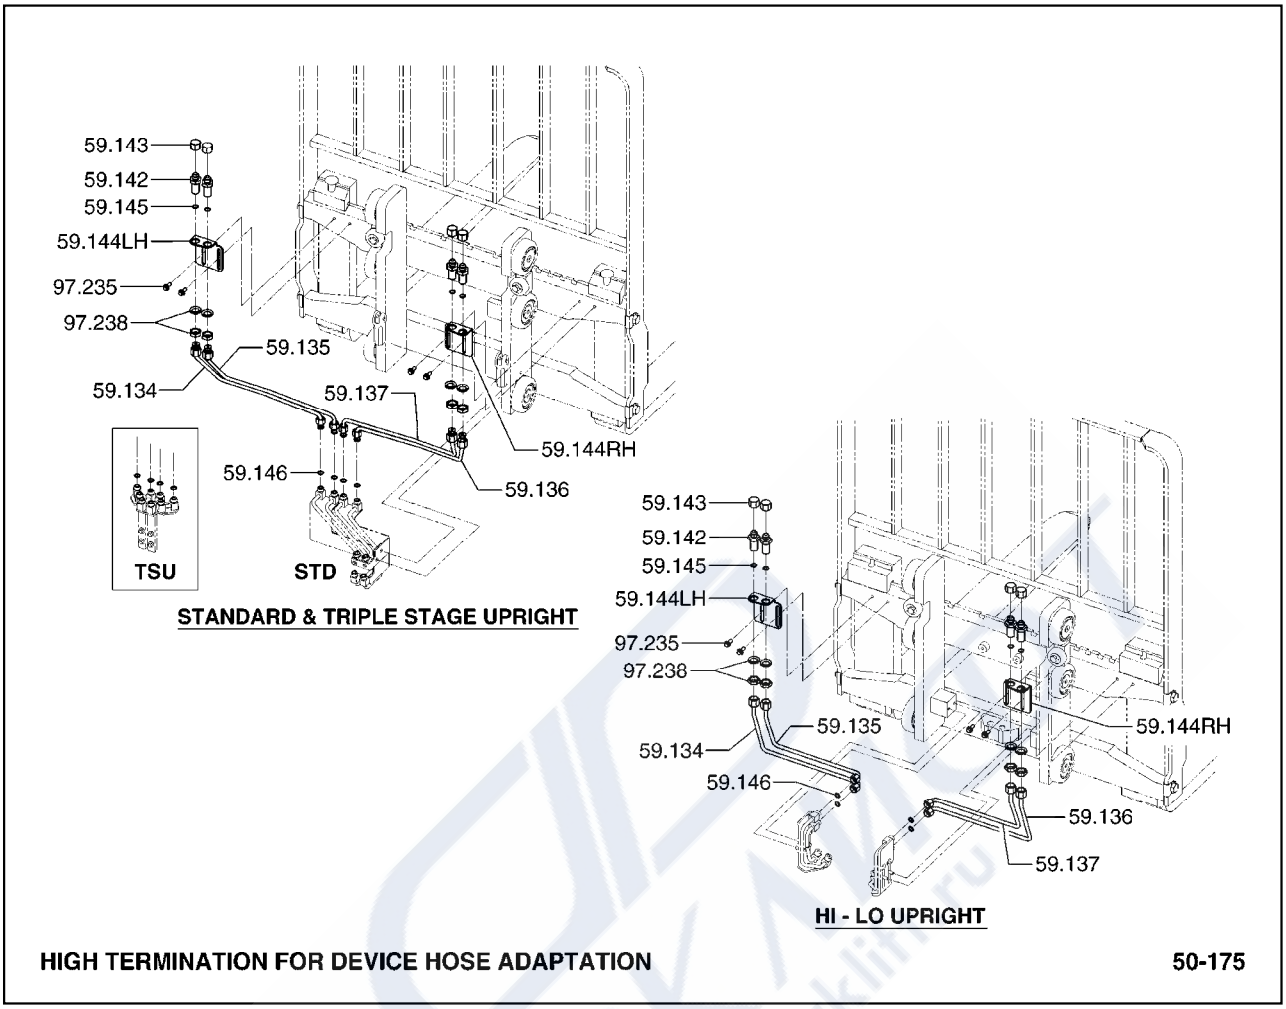

59.134 LINE, DEVICE LH LINE FOR HIGH TERMINATION
라인

59.135 LINE, DEVICE LH LINE FOR HIGH TERMINATION
라인

59.136 LINE, DEVICE RH LINE FOR HIGH TERMINATION
라인

59.137 LINE, DEVICE RH LINE FOR HIGH TERMINATION
라인

59.142 FITTING, DEVICE LINE FOR HIGH TERMINATION
피팅

59.143 CAP, DEVICE LINE FITTING FOR HIGH TERMINATION
캡

59.144 BRACKET, DEVICE LINE FOR HIGH TERMINATION
브라켓

59.145 SEAL, DEVICE LINE FITTING FOR HIGH TERMINATION
씰

59.146 SEAL, DEVICE LINE FITTING FOR HIGH TERMINATION
씰

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

97.235 FASTENER, DEVICE LINE CLAMP FOR HIGH TERMINATION
패스너

97.238 FASTENER, DEVICE LINE FITTING FOR HIGH TERMINATION
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

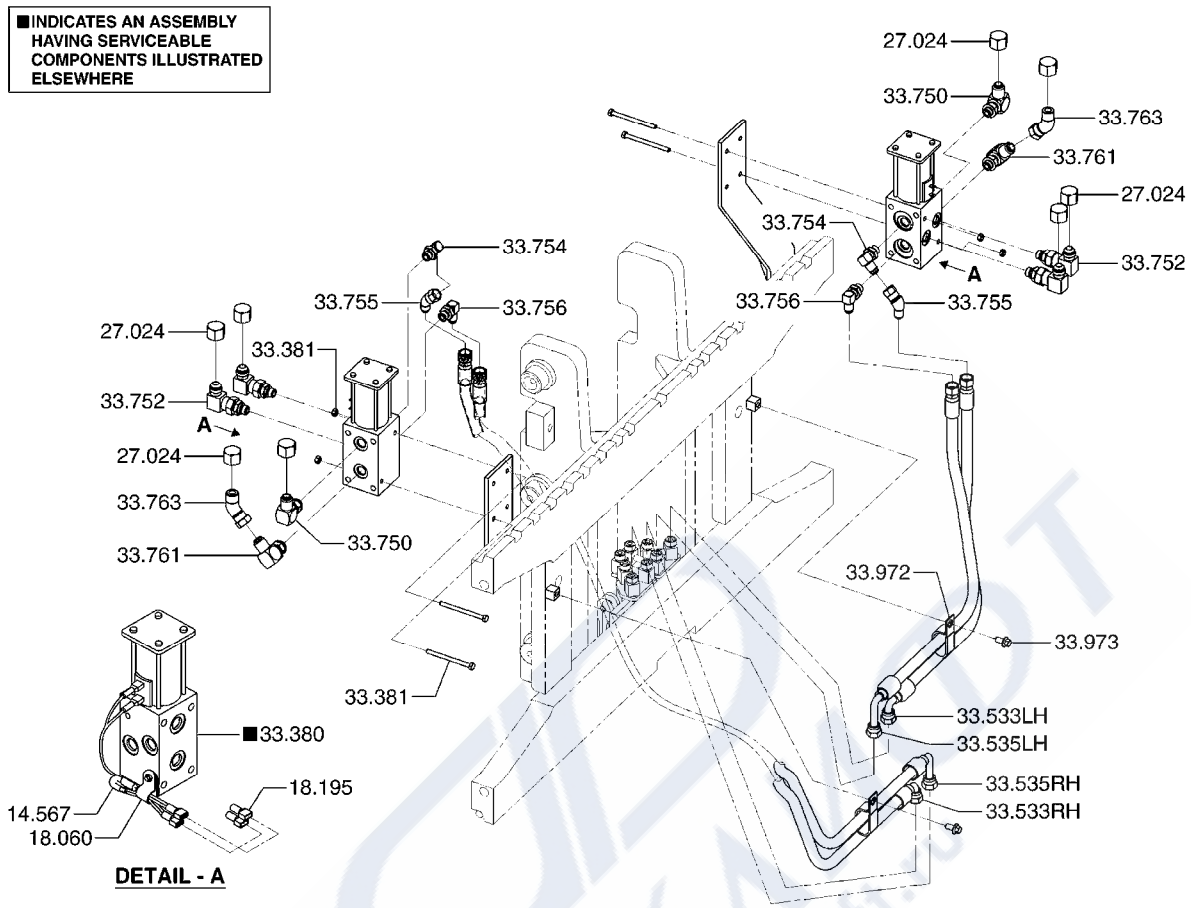

14.567 WIRE, DEVICE SELECTOR VALVE SWITCH FEED
와이어

18.060 CLAMP, DEVICE SELECTOR VALVE CABLE
클램프

18.195 TERMINAL, DEVICE SELECTOR VALVE SWITCH FEED WIRE
터미널

27.024 PLUG, DEVICE SELECTOR VALVE OPTIONAL OUTLET PORT
플러그

33.380 VALVE ASSEMBLY, DEVICE SELECTOR SOLENOID
밸브

33.381 FASTENER, DEVICE SELECTOR VALVE
패스너

33.533 LINE, DEVICE SELECTOR VALVE "P" PORT HYDRAULIC
라인

33.535 LINE, DEVICE SELECTOR VALVE "R" PORT HYDRAULIC
라인

33.750 FITTING, DEVICE SELECTOR VALVE C1 PORT
피팅

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

33.752	FITTING, DEVICE SELECTOR VALVE C2 PORT 피팅
33.754	FITTING, DEVICE SELECTOR VALVE "P" PORT 피팅
33.755	FITTING, DEVICE SELECTOR VALVE "P" PORT 피팅
33.756	FITTING, DEVICE SELECTOR VALVE "R" PORT 피팅
33.761	FITTING, DEVICE SELECTOR VALVE C4 PORT 피팅
33.763	FITTING, DEVICE SELECTOR VALVE C4 PORT 피팅
33.972	CLIP, DEVICE SELECTOR VALVE LINE 클립
33.973	FASTENER, DEVICE SELECTOR VALVE LINE CLIP 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

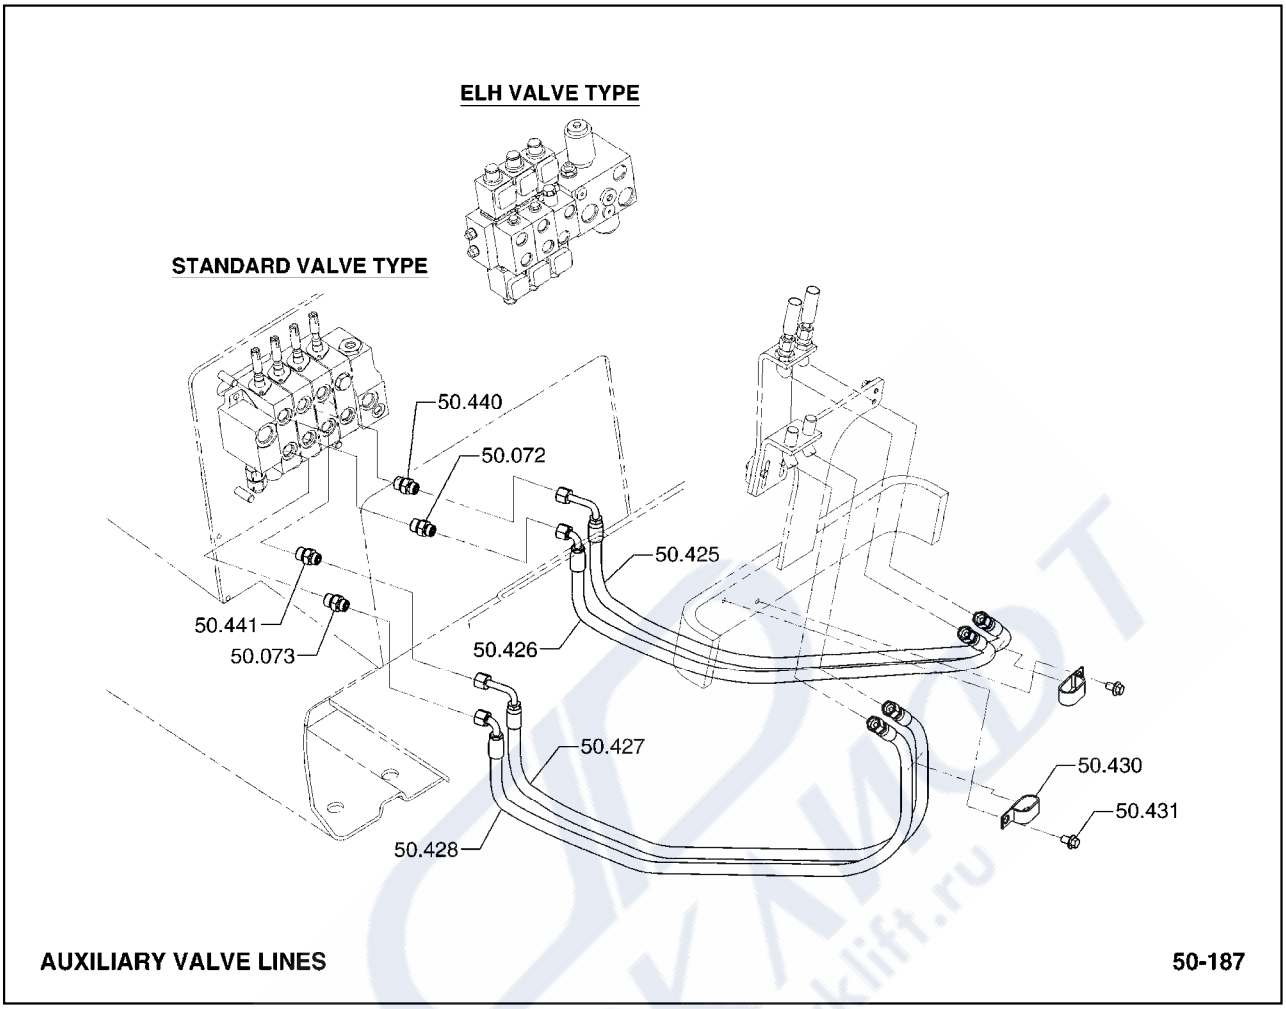

50.072 FITTING, 1ST AUXILIARY VALVE "B" PORT
피팅

50.073 FITTING, 2ND AUXILIARY VALVE "B" PORT
피팅

50.425 LINE, 1ST AUXILIARY VALVE "A" PORT
라인

50.426 LINE, 1ST AUXILIARY VALVE "B" PORT
라인

50.427 LINE, 2ND AUXILIARY VALVE "A" PORT
라인

50.428 LINE, 2ND AUXILIARY VALVE "B" PORT
라인

50.430 CLAMP, AUXILIARY VALVE LINES
클램프

50.431 FASTENER, AUX VALVE LINES CLAMP
패스너

50.440 FITTING, 1ST AUXILIARY VALVE "A" PORT
피팅

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

50.441 FITTING, 2ND AUXILIARY VALVE "A" PORT
피팅

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

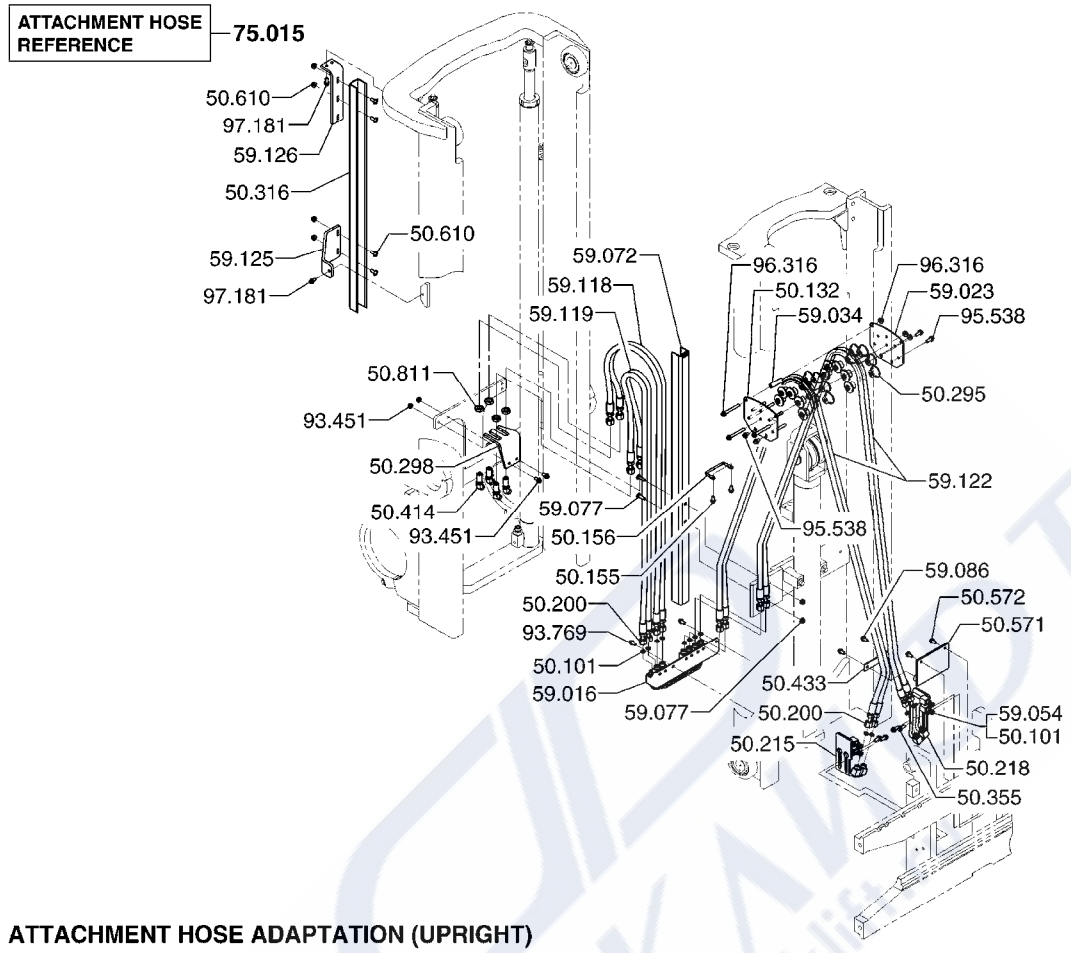

ATTACHMENT HOSE ADAPTATION (UPRIGHT) **50-232**

50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 씰
50.132	BRACKET, DEVICE HOSE REEL 브라켓
50.155	FASTENER, DEVICE HOSE CLIP 패스너
50.156	CLIP, DEVICE HOSE 클립
50.200	COUPLING, DEVICE HOSE 커플링
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록
50.218	TERMINAL BLOCK, DEVICE LH HOSE 터미널블록
50.295	ROLLER, DEVICE HOSE UPPER 롤러
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.316	GUARD, DEVICE RH HOSE 가드
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅
50.433	BRACKET, DEVICE HOSE CLAMP 브라켓
50.571	BRACKET, DEVICE HOSE 브라켓
50.572	FASTENER, DEVICE HOSE BRACKET 패스너
50.610	FASTENER, DEVICE HOSE GUARD 패스너
50.811	NUT, DEVICE HOSE FITTING 너트
59.016	JUNCTION BLOCK, DEVICE HOSE 정크션 블록
59.023	BRACKET, DEVICE HOSE REEL MOUNTING 브라켓
59.034	TUBE, DEVICE HOSE REEL MOUNTING BRACKET 튜브
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.072	GUARD, DEVICE HOSE 가드
59.077	FASTENER, DEVICE HOSE GUARD 패스너
59.086	FASTENER, DEVICE HOSE CLIP BRACKET 패스너
59.118	LINE, DEVICE HYDRAULIC (OUTER RAIL) 라인
59.119	LINE, DEVICE HYDRAULIC (OUTER RAIL) 라인
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
59.125	BRACKET, DEVICE HOSE GUARD MOUNTING 브라켓
59.126	BRACKET, DEVICE HOSE GUARD MOUNTING 브라켓
75.015	MODULE, ATTACHMENT HOSE LINES 모듈

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

93.316 DOWEL, STEERING INTERLOCK SWITCH FASTENER
다월

93.451 FASTENER, DEVICE HOSE TERMINAL BRACKET
패스너

93.769 FASTENER, DEVICE LINE JUNCTION BLOCK
패스너

95.538 FASTENER, DEVICE HOSE REEL BRACKET
패스너

96.316 FASTENER, DEVICE HOSE REEL
패스너

97.181 FASTENER, DEVICE HOSE GUARD MOUNTING BRACKET
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

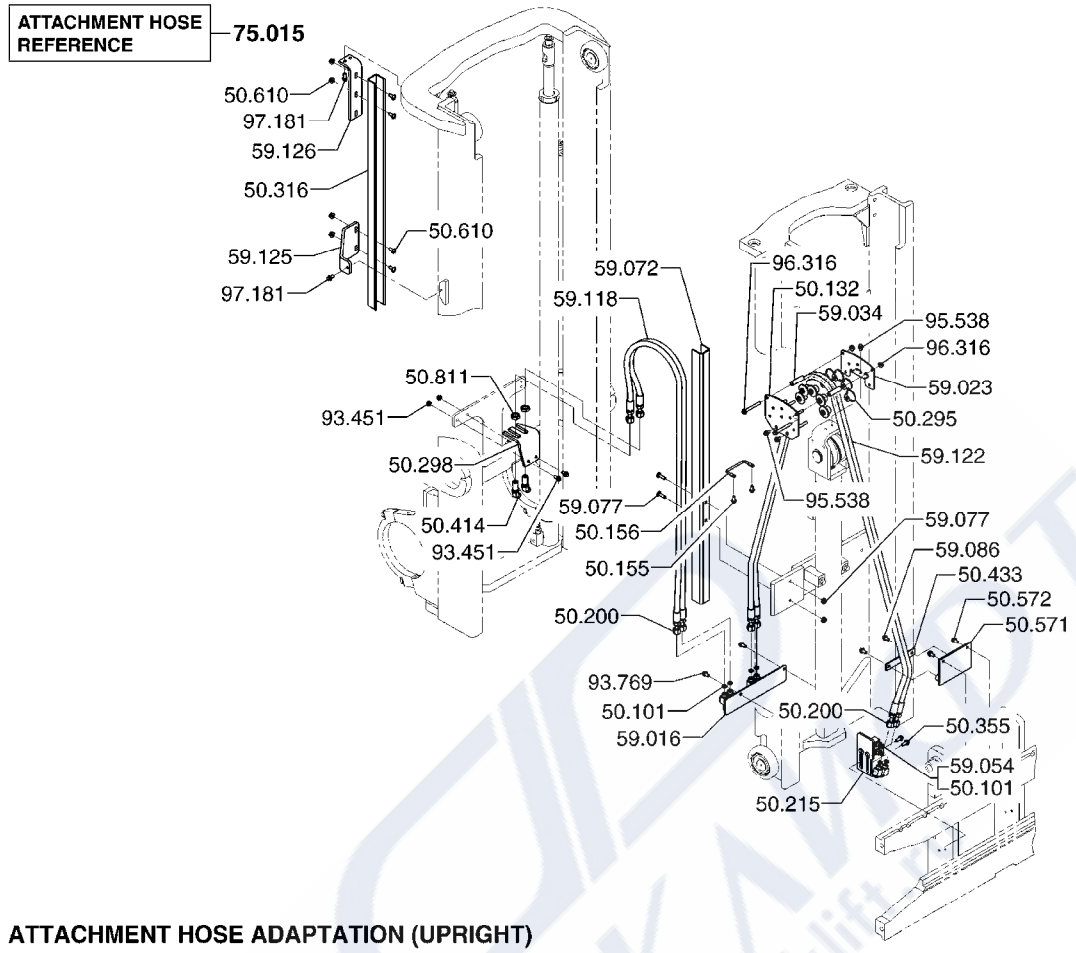

ATTACHMENT HOSE ADAPTATION (UPRIGHT) **50-269**

50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 씰
50.132	BRACKET, DEVICE HOSE REEL 브라켓
50.155	FASTENER, DEVICE HOSE CLIP 패스너
50.156	CLIP, DEVICE HOSE 클립
50.200	COUPLING, DEVICE HOSE 커플링
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록
50.295	ROLLER, DEVICE HOSE UPPER 롤러
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.316	GUARD, DEVICE RH HOSE 가드
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅
50.433	BRACKET, DEVICE HOSE CLAMP 브라켓
50.571	BRACKET, DEVICE HOSE 브라켓
50.572	FASTENER, DEVICE HOSE BRACKET 패스너
50.610	FASTENER, DEVICE HOSE GUARD 패스너
50.811	NUT, DEVICE HOSE FITTING 너트
59.016	JUNCTION BLOCK, DEVICE HOSE 정크션 블록
59.023	BRACKET, DEVICE HOSE REEL MOUNTING 브라켓
59.034	TUBE, DEVICE HOSE REEL MOUNTING BRACKET 튜브
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.072	GUARD, DEVICE HOSE 가드
59.077	FASTENER, DEVICE HOSE GUARD 패스너
59.086	FASTENER, DEVICE HOSE CLIP BRACKET 패스너
59.101	TIE STRAP, AUXILIARY FUNCTION LINES 타이스트랩
59.118	LINE, DEVICE HYDRAULIC (OUTER RAIL) 라인
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
59.125	BRACKET, DEVICE HOSE GUARD MOUNTING 브라켓
59.126	BRACKET, DEVICE HOSE GUARD MOUNTING 브라켓
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.316	DOWEL, STEERING INTERLOCK SWITCH FASTENER 다월

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

93.451 FASTENER, DEVICE HOSE TERMINAL BRACKET
패스너

93.769 FASTENER, DEVICE LINE JUNCTION BLOCK
패스너

95.538 FASTENER, DEVICE HOSE REEL BRACKET
패스너

96.316 FASTENER, DEVICE HOSE REEL
패스너

97.181 FASTENER, DEVICE HOSE GUARD MOUNTING BRACKET
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

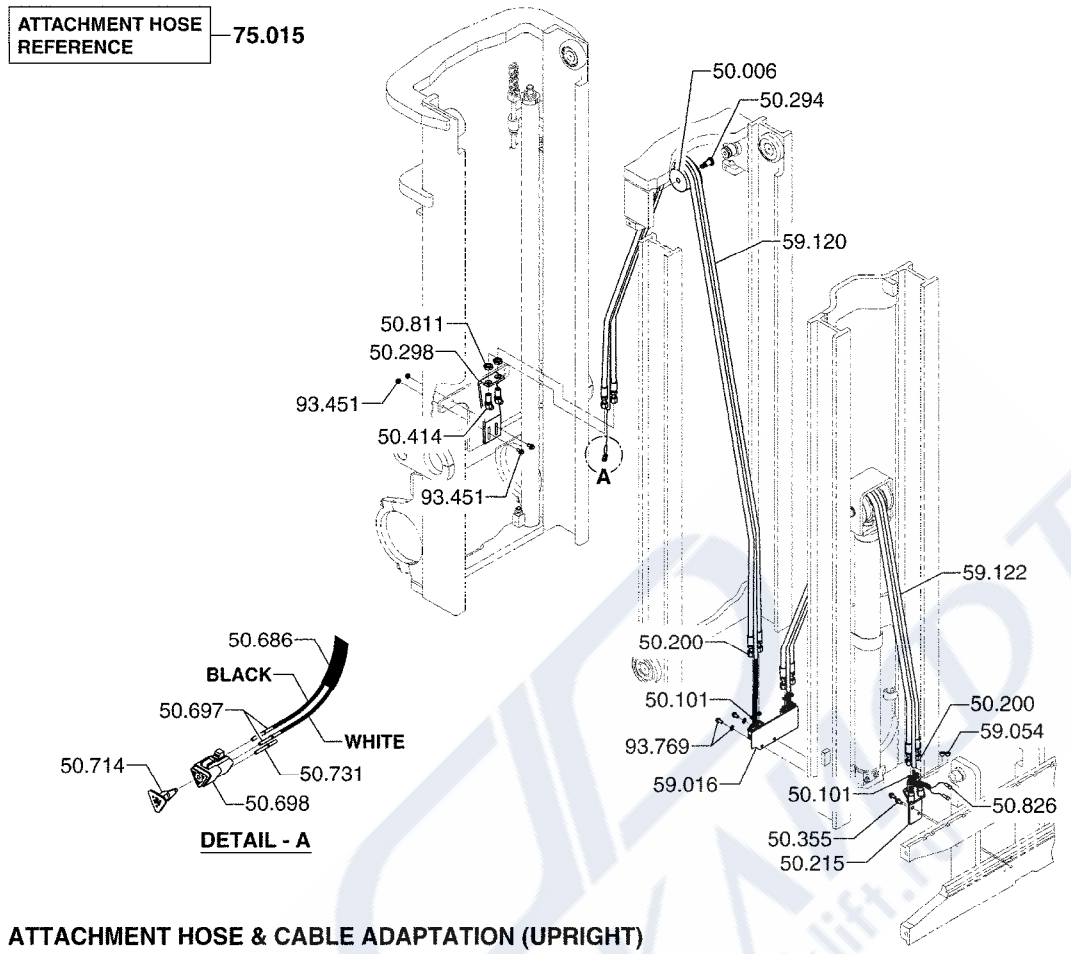

ATTACHMENT HOSE & CABLE ADAPTATION (UPRIGHT) **50-270**

50.006 SHEAVE, DEVICE HOSE UPPER
쉬브

50.101 SEAL, DEVICE HOSE SWIVEL COUPLING
씰

50.200 COUPLING, DEVICE HOSE
커플링

50.215 TERMINAL BLOCK, DEVICE HOSE
터미널블록

50.294 PIVOT, DEVICE HOSE UPPER SHEAVE
피봇

50.298 BRACKET, DEVICE HOSE TERMINAL
브라켓

50.355 FASTENER, DEVICE HOSE TERMINAL BLOCK
패스너

50.414 FITTING, DEVICE HOSE CONNECTOR
피팅

50.686 WIRE, DEVICE
와이어

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

50.697	CONNECTOR, DEVICE CABLE (PIN END) 커넥터
50.698	CONNECTOR, DEVICE CABLE (SOCKET END) 커넥터
50.714	LOCK, DEVICE CABLE CONNECTOR 로크
50.731	PLUG, DEVICE CABLE CONNECTOR 플러그
50.811	NUT, DEVICE HOSE FITTING 너트
50.826	TERMINAL, DEVICE CABLE 터미널
59.016	JUNCTION BLOCK, DEVICE HOSE 정크션 블록
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.120	LINE, DEVICE HYDRAULIC (INTERMEDIATE RAIL) 라인
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너
93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

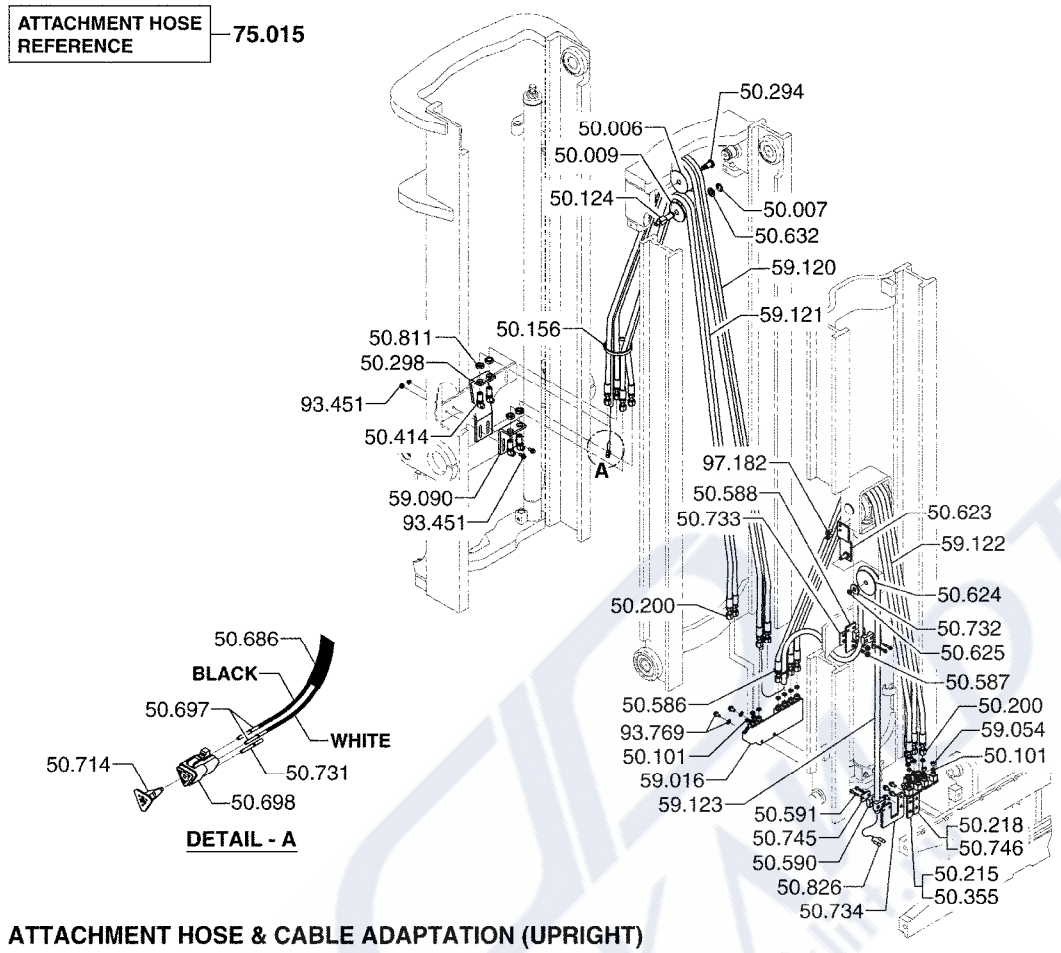

50.006	SHEAVE, DEVICE HOSE UPPER 쉬브	50.588	BRACKET, DEVICE CABLE CLAMP 브라켓
50.007	RETAINER, DEVICE HOSE SHEAVE 리테이너	50.590	CLAMP, DEVICE CABLE LOWER 클램프
50.009	SHEAVE, DEVICE HOSE LOWER 쉬브	50.591	FASTENER, DEVICE CABLE CLAMP LOWER 패스너
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 씰	50.623	BRACKET, DEVICE CABLE LOWER SHEAVE 브라켓
50.124	PIVOT, DEVICE HOSE LOWER RH SHEAVE 피봇	50.624	SHEAVE, DEVICE CABLE 쉬브
50.156	CLIP, DEVICE HOSE 클립	50.625	RETAINER, DEVICE CABLE LOWER SHEAVE 리테이너
50.200	COUPLING, DEVICE HOSE 커플링	50.632	SPACER, DEVICE HOSE SHEAVE 스페이서
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록	50.686	WIRE, DEVICE 와이어
50.218	TERMINAL BLOCK, DEVICE LH HOSE 터미널블록	50.697	CONNECTOR, DEVICE CABLE (PIN END) 커넥터
50.294	PIVOT, DEVICE HOSE UPPER SHEAVE 피봇	50.698	CONNECTOR, DEVICE CABLE (SOCKET END) 커넥터
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓	50.714	LOCK, DEVICE CABLE CONNECTOR 로크
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너	50.731	PLUG, DEVICE CABLE CONNECTOR 플러그
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅	50.732	SPACER, DEVICE CABLE SHEAVE 스페이서
50.586	CLIP, DEVICE CABLE 클립	50.733	SPACER, DEVICE CABLE CLAMP BRACKET 스페이서
50.587	FASTENER, DEVICE CABLE CLIP 패스너	50.734	BRACKET, DEVICE CABLE TERMINAL CLAMP 브라켓

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

50.745 BRACKET, DEVICE CABLE TERMINAL CLAMP MOUNTING
브라켓

50.746 FASTENER, DEVICE HOSE TERMINAL BLOCK
패스너

50.811 NUT, DEVICE HOSE FITTING
너트

50.826 TERMINAL, DEVICE CABLE
터미널

59.016 JUNCTION BLOCK, DEVICE HOSE
정크션 블록

59.054 PLUG, DEVICE HOSE JUNCTION BLOCK
플러그

59.090 BRACKET, DEVICE HOSE TERMINAL
브라켓

59.120 LINE, DEVICE HYDRAULIC (INTERMEDIATE RAIL)
라인

59.121 LINE, DEVICE HYDRAULIC (INTERMEDIATE RAIL)
라인

59.122 LINE, DEVICE HYDRAULIC (INNER RAIL)
라인

59.123 LINE, DEVICE HYDRAULIC (INNER RAIL)
라인

75.015 MODULE, ATTACHMENT HOSE LINES
모듈

93.451 FASTENER, DEVICE HOSE TERMINAL BRACKET
패스너

93.769 FASTENER, DEVICE LINE JUNCTION BLOCK
패스너

97.182 FASTENER, DEVICE CABLE LOWER SHEAVE BRACKET
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

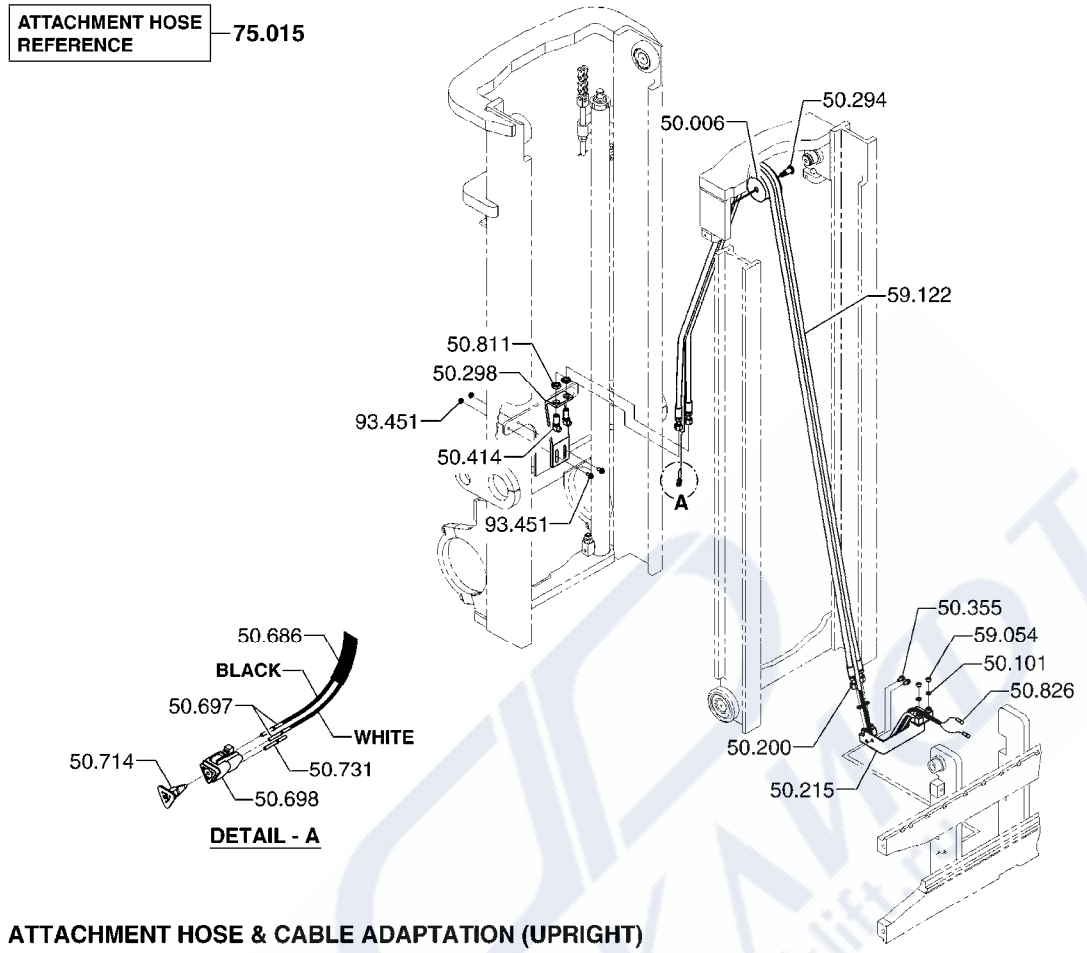

ATTACHMENT HOSE & CABLE ADAPTATION (UPRIGHT) **50-290**

50.006	SHEAVE, DEVICE HOSE UPPER 쉬브
50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 씰
50.200	COUPLING, DEVICE HOSE 커플링
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록
50.294	PIVOT, DEVICE HOSE UPPER SHEAVE 피봇
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅
50.686	WIRE, DEVICE 와이어

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

50.697	CONNECTOR, DEVICE CABLE (PIN END) 커넥터
50.698	CONNECTOR, DEVICE CABLE (SOCKET END) 커넥터
50.714	LOCK, DEVICE CABLE CONNECTOR 로크
50.731	PLUG, DEVICE CABLE CONNECTOR 플러그
50.811	NUT, DEVICE HOSE FITTING 너트
50.826	TERMINAL, DEVICE CABLE 터미널
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

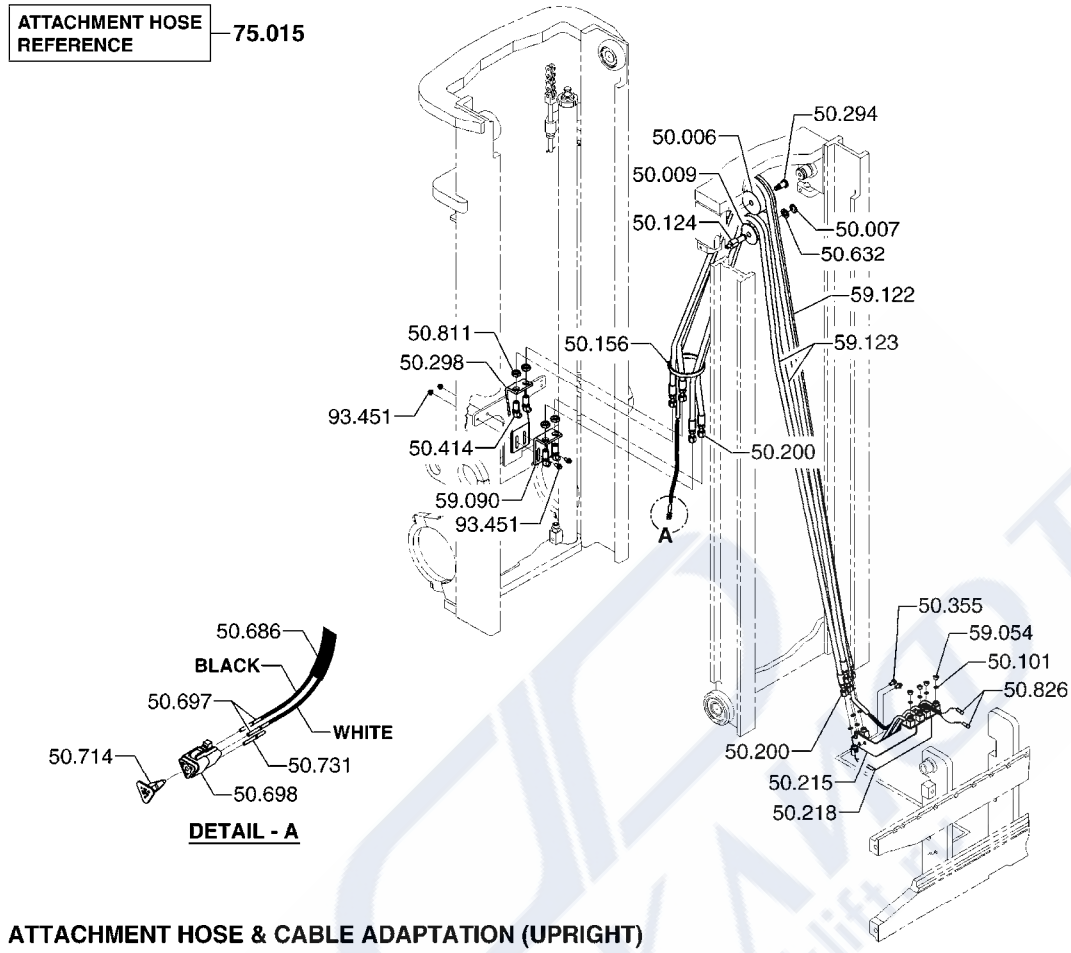

ATTACHMENT HOSE & CABLE ADAPTATION (UPRIGHT) **50-291**

50.006 SHEAVE, DEVICE HOSE UPPER
쉬브

50.007 RETAINER, DEVICE HOSE SHEAVE
리테이너

50.009 SHEAVE, DEVICE HOSE LOWER
쉬브

50.101 SEAL, DEVICE HOSE SWIVEL COUPLING
씰

50.124 PIVOT, DEVICE HOSE LOWER RH SHEAVE
피봇

50.156 CLIP, DEVICE HOSE
클립

50.200 COUPLING, DEVICE HOSE
커플링

50.215 TERMINAL BLOCK, DEVICE HOSE
터미널블록

50.218 TERMINAL BLOCK, DEVICE LH HOSE
터미널블록

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

50.294	PIVOT, DEVICE HOSE UPPER SHEAVE 피봇
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅
50.632	SPACER, DEVICE HOSE SHEAVE 스페이서
50.686	WIRE, DEVICE 와이어
50.697	CONNECTOR, DEVICE CABLE (PIN END) 커넥터
50.698	CONNECTOR, DEVICE CABLE (SOCKET END) 커넥터
50.714	LOCK, DEVICE CABLE CONNECTOR 로크
50.731	PLUG, DEVICE CABLE CONNECTOR 플러그
50.811	NUT, DEVICE HOSE FITTING 너트
50.826	TERMINAL, DEVICE CABLE 터미널
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.090	BRACKET, DEVICE HOSE TERMINAL 브라켓
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
59.123	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

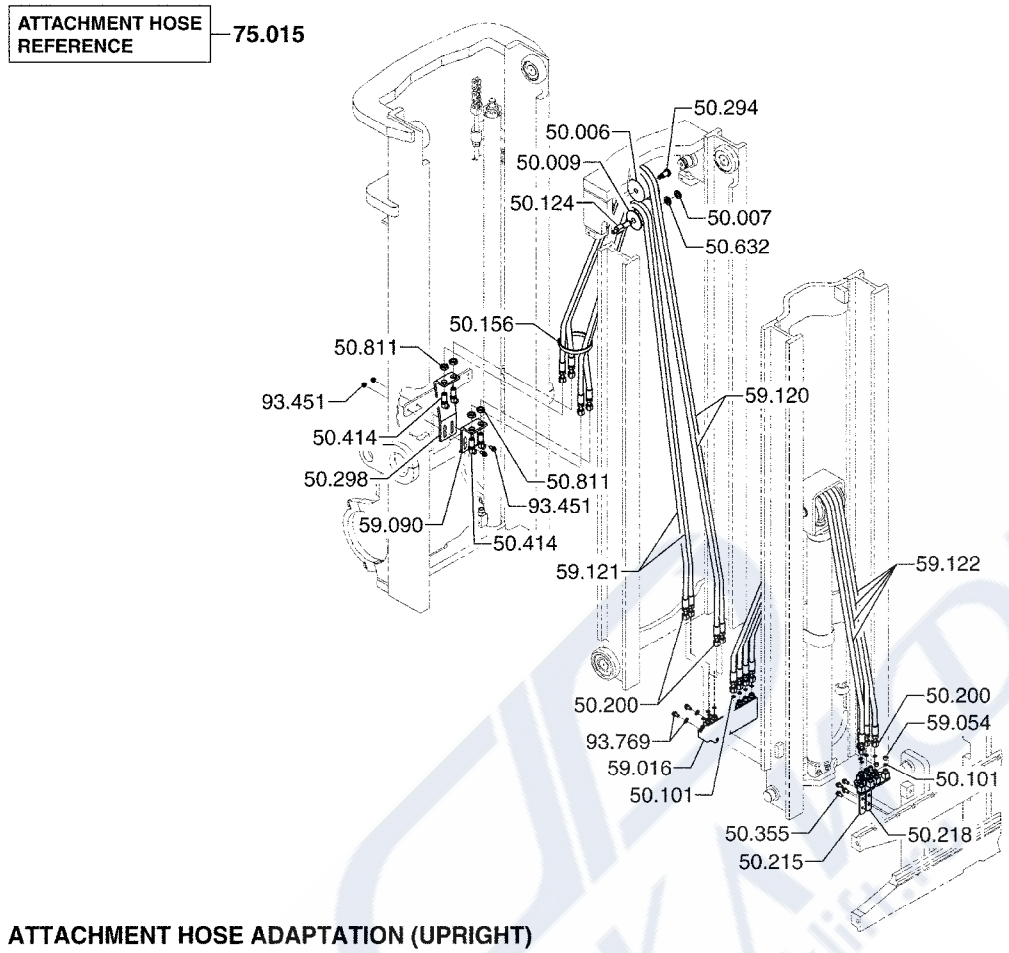

50.006 SHEAVE, DEVICE HOSE UPPER
쉬브

50.007 RETAINER, DEVICE HOSE SHEAVE
리테이너

50.009 SHEAVE, DEVICE HOSE LOWER
쉬브

50.101 SEAL, DEVICE HOSE SWIVEL COUPLING
씰

50.124 PIVOT, DEVICE HOSE LOWER RH SHEAVE
피봇

50.156 CLIP, DEVICE HOSE
클립

50.200 COUPLING, DEVICE HOSE
커플링

50.215 TERMINAL BLOCK, DEVICE HOSE
터미널블록

50.218 TERMINAL BLOCK, DEVICE LH HOSE
터미널블록

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

50.294	PIVOT, DEVICE HOSE UPPER SHEAVE 피봇
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅
50.632	SPACER, DEVICE HOSE SHEAVE 스페이서
50.811	NUT, DEVICE HOSE FITTING 너트
59.016	JUNCTION BLOCK, DEVICE HOSE 정크션 블록
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.090	BRACKET, DEVICE HOSE TERMINAL 브라켓
59.120	LINE, DEVICE HYDRAULIC (INTERMEDIATE RAIL) 라인
59.121	LINE, DEVICE HYDRAULIC (INTERMEDIATE RAIL) 라인
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너
93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

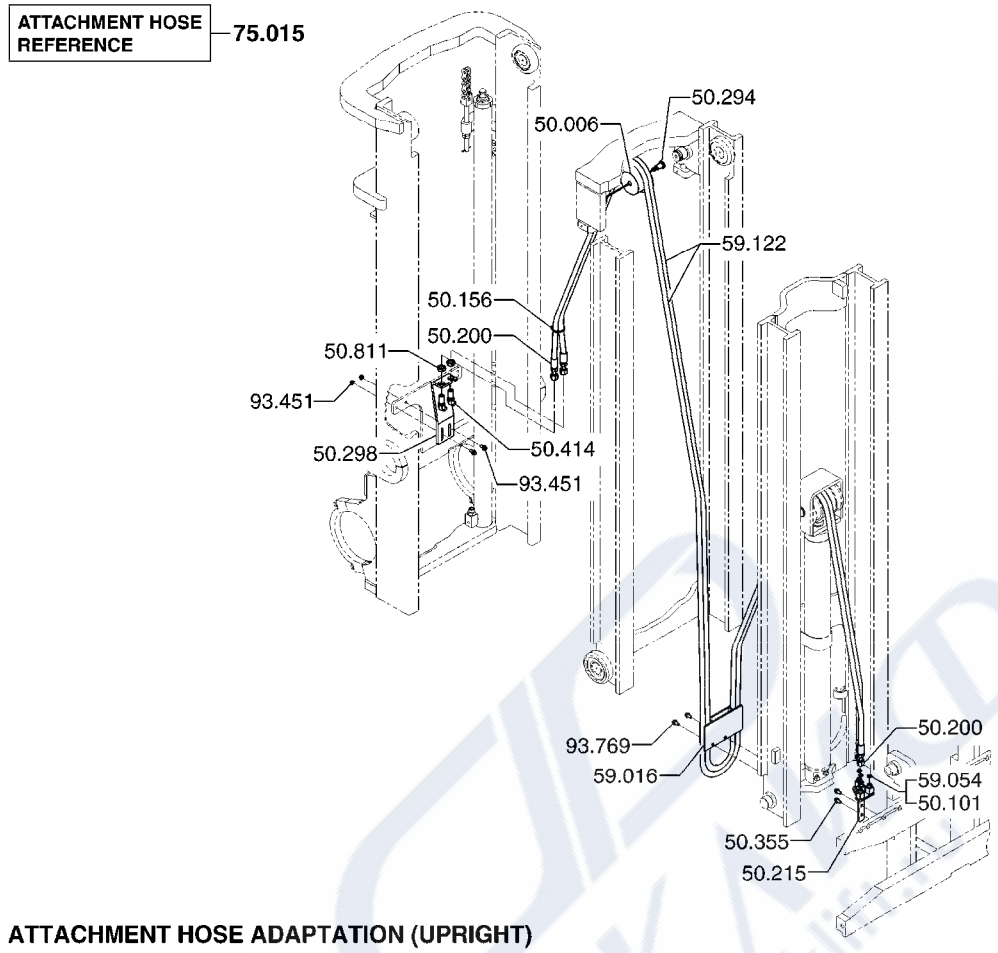

50.006 SHEAVE, DEVICE HOSE UPPER
쉬브

50.101 SEAL, DEVICE HOSE SWIVEL COUPLING
씰

50.156 CLIP, DEVICE HOSE
클립

50.200 COUPLING, DEVICE HOSE
커플링

50.215 TERMINAL BLOCK, DEVICE HOSE
터미널블록

50.294 PIVOT, DEVICE HOSE UPPER SHEAVE
피봇

50.298 BRACKET, DEVICE HOSE TERMINAL
브라켓

50.355 FASTENER, DEVICE HOSE TERMINAL BLOCK
패스너

50.414 FITTING, DEVICE HOSE CONNECTOR
피팅

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

50.811	NUT, DEVICE HOSE FITTING 너트
59.016	JUNCTION BLOCK, DEVICE HOSE 정크션 블록
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너
93.769	FASTENER, DEVICE LINE JUNCTION BLOCK 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

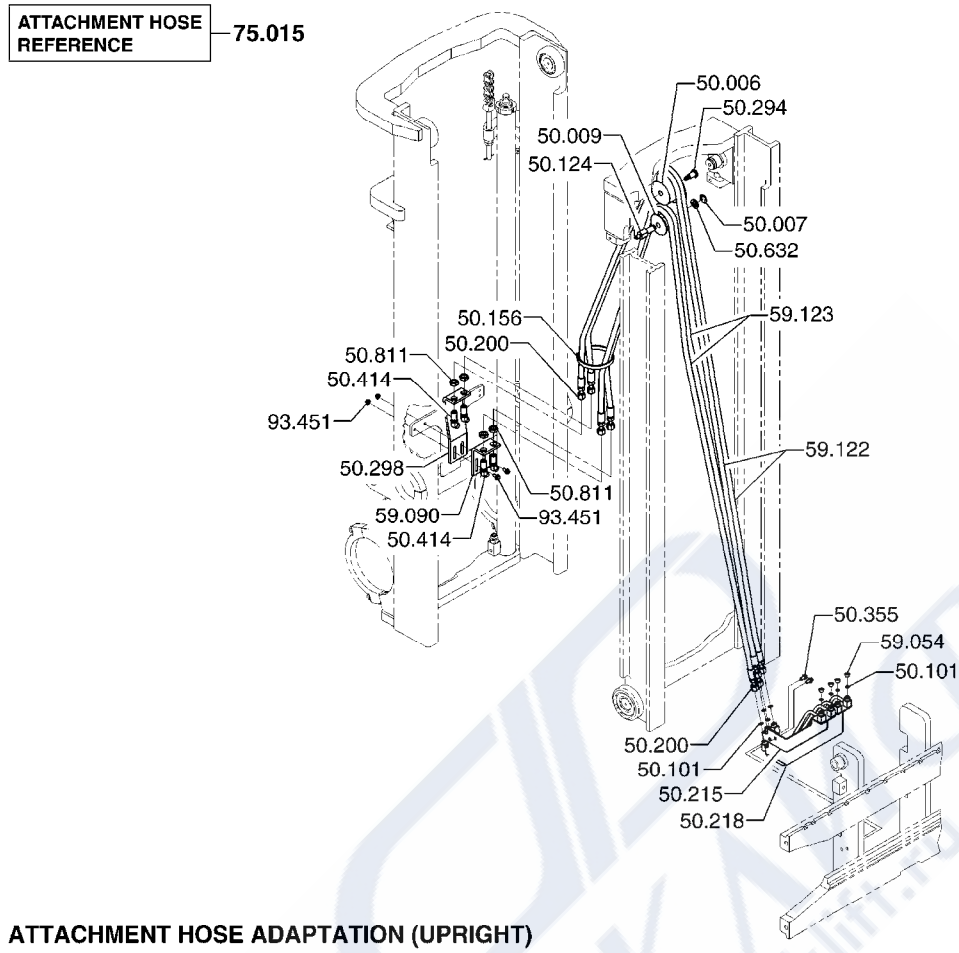

50.006 SHEAVE, DEVICE HOSE UPPER
쉬브

50.007 RETAINER, DEVICE HOSE SHEAVE
리테이너

50.009 SHEAVE, DEVICE HOSE LOWER
쉬브

50.101 SEAL, DEVICE HOSE SWIVEL COUPLING
씰

50.124 PIVOT, DEVICE HOSE LOWER RH SHEAVE
피봇

50.156 CLIP, DEVICE HOSE
클립

50.200 COUPLING, DEVICE HOSE
커플링

50.215 TERMINAL BLOCK, DEVICE HOSE
터미널블록

50.218 TERMINAL BLOCK, DEVICE LH HOSE
터미널블록

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

50.294	PIVOT, DEVICE HOSE UPPER SHEAVE 피봇
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅
50.632	SPACER, DEVICE HOSE SHEAVE 스페이서
50.811	NUT, DEVICE HOSE FITTING 너트
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.090	BRACKET, DEVICE HOSE TERMINAL 브라켓
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
59.123	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

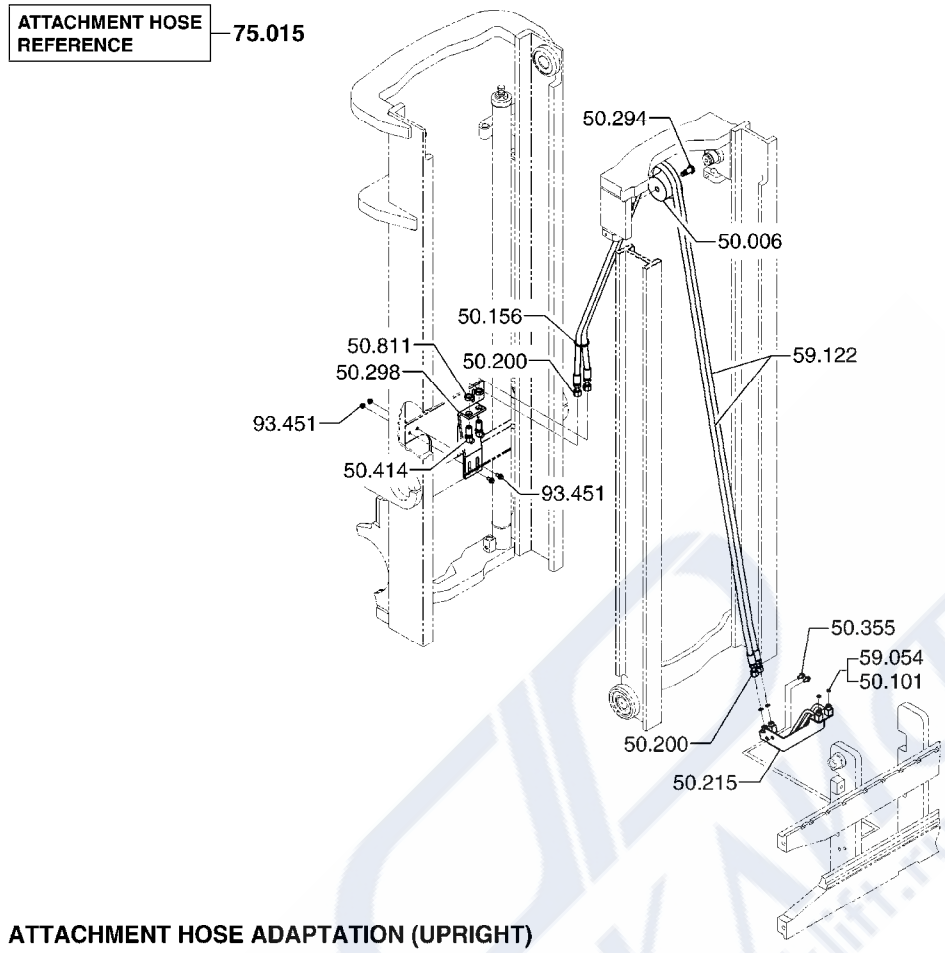

50.006 SHEAVE, DEVICE HOSE UPPER
쉬브

50.101 SEAL, DEVICE HOSE SWIVEL COUPLING
씰

50.156 CLIP, DEVICE HOSE
클립

50.200 COUPLING, DEVICE HOSE
커플링

50.215 TERMINAL BLOCK, DEVICE HOSE
터미널블록

50.294 PIVOT, DEVICE HOSE UPPER SHEAVE
피봇

50.298 BRACKET, DEVICE HOSE TERMINAL
브라켓

50.355 FASTENER, DEVICE HOSE TERMINAL BLOCK
패스너

50.414 FITTING, DEVICE HOSE CONNECTOR
피팅

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

50.811	NUT, DEVICE HOSE FITTING 너트
59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
59.122	LINE, DEVICE HYDRAULIC (INNER RAIL) 라인
75.015	MODULE, ATTACHMENT HOSE LINES 모듈
93.451	FASTENER, DEVICE HOSE TERMINAL BRACKET 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

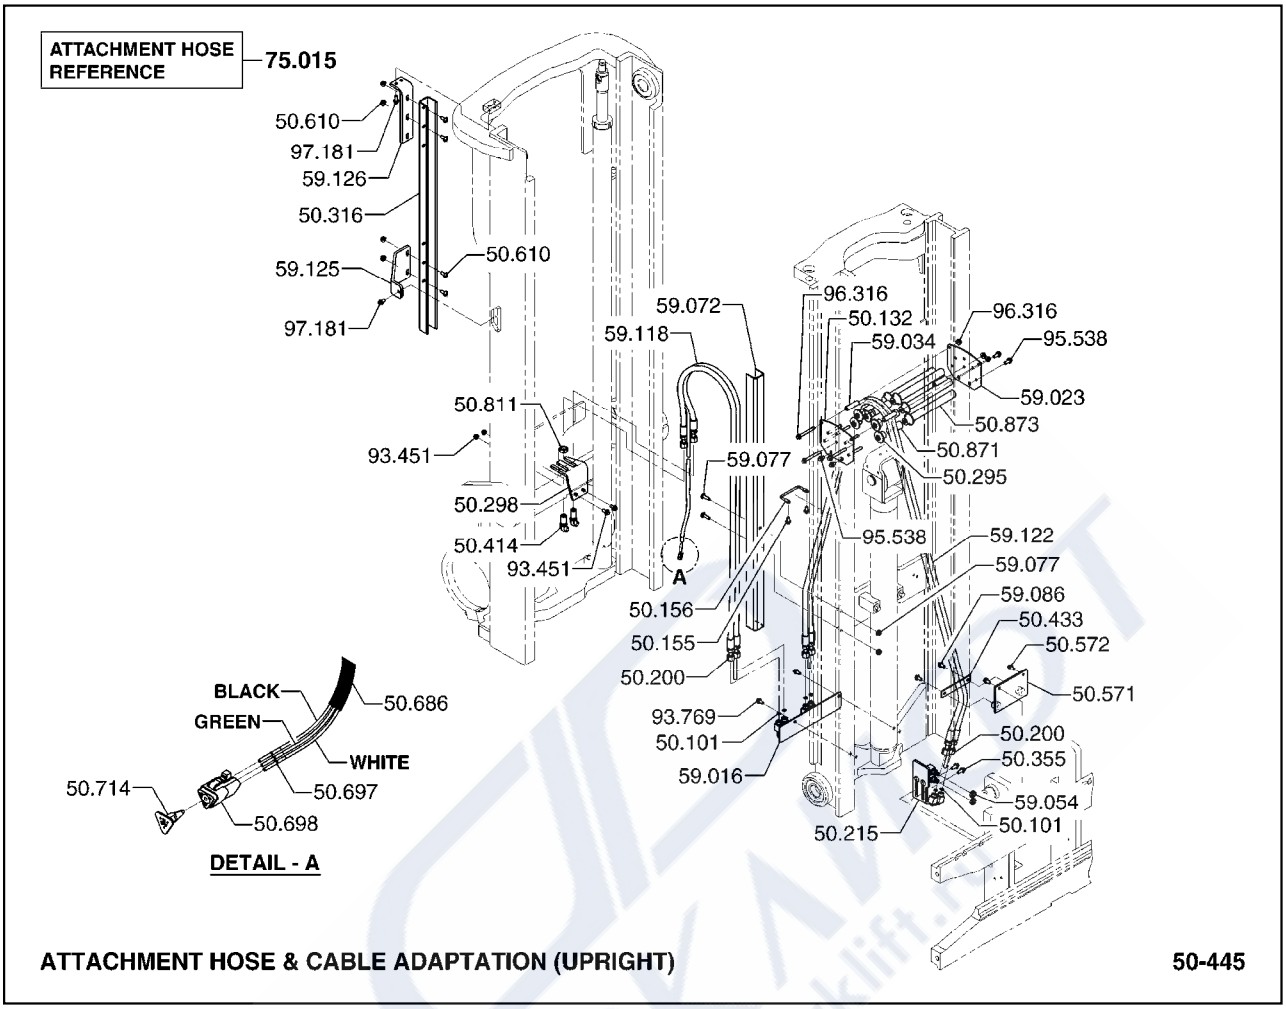

50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 씰	50.686	WIRE, DEVICE 와이어
50.132	BRACKET, DEVICE HOSE REEL 브라켓	50.697	CONNECTOR, DEVICE CABLE (PIN END) 커넥터
50.155	FASTENER, DEVICE HOSE CLIP 패스너	50.698	CONNECTOR, DEVICE CABLE (SOCKET END) 커넥터
50.156	CLIP, DEVICE HOSE 클립	50.714	LOCK, DEVICE CABLE CONNECTOR 로크
50.200	COUPLING, DEVICE HOSE 커플링	50.811	NUT, DEVICE HOSE FITTING 너트
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록	50.871	SPACER, DEVICE HOSE ROLLER 스페이서
50.295	ROLLER, DEVICE HOSE UPPER 롤러	50.873	SPACER, DEVICE HOSE ROLLER 스페이서
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓	59.016	JUNCTION BLOCK, DEVICE HOSE 정크션 블록
50.316	GUARD, DEVICE RH HOSE 가드	59.023	BRACKET, DEVICE HOSE REEL MOUNTING 브라켓
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너	59.034	TUBE, DEVICE HOSE REEL MOUNTING BRACKET 튜브
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅	59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
50.433	BRACKET, DEVICE HOSE CLAMP 브라켓	59.072	GUARD, DEVICE HOSE 가드
50.571	BRACKET, DEVICE HOSE 브라켓	59.077	FASTENER, DEVICE HOSE GUARD 패스너
50.572	FASTENER, DEVICE HOSE BRACKET 패스너	59.086	FASTENER, DEVICE HOSE CLIP BRACKET 패스너
50.610	FASTENER, DEVICE HOSE GUARD 패스너	59.118	LINE, DEVICE HYDRAULIC (OUTER RAIL) 라인

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

59.122 LINE, DEVICE HYDRAULIC (INNER RAIL)
라인

59.125 BRACKET, DEVICE HOSE GUARD MOUNTING
브라켓

59.126 BRACKET, DEVICE HOSE GUARD MOUNTING
브라켓

75.015 MODULE, ATTACHMENT HOSE LINES
모듈

93.451 FASTENER, DEVICE HOSE TERMINAL BRACKET
패스너

93.769 FASTENER, DEVICE LINE JUNCTION BLOCK
패스너

95.538 FASTENER, DEVICE HOSE REEL BRACKET
패스너

96.316 FASTENER, DEVICE HOSE REEL
패스너

97.181 FASTENER, DEVICE HOSE GUARD MOUNTING BRACKET
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

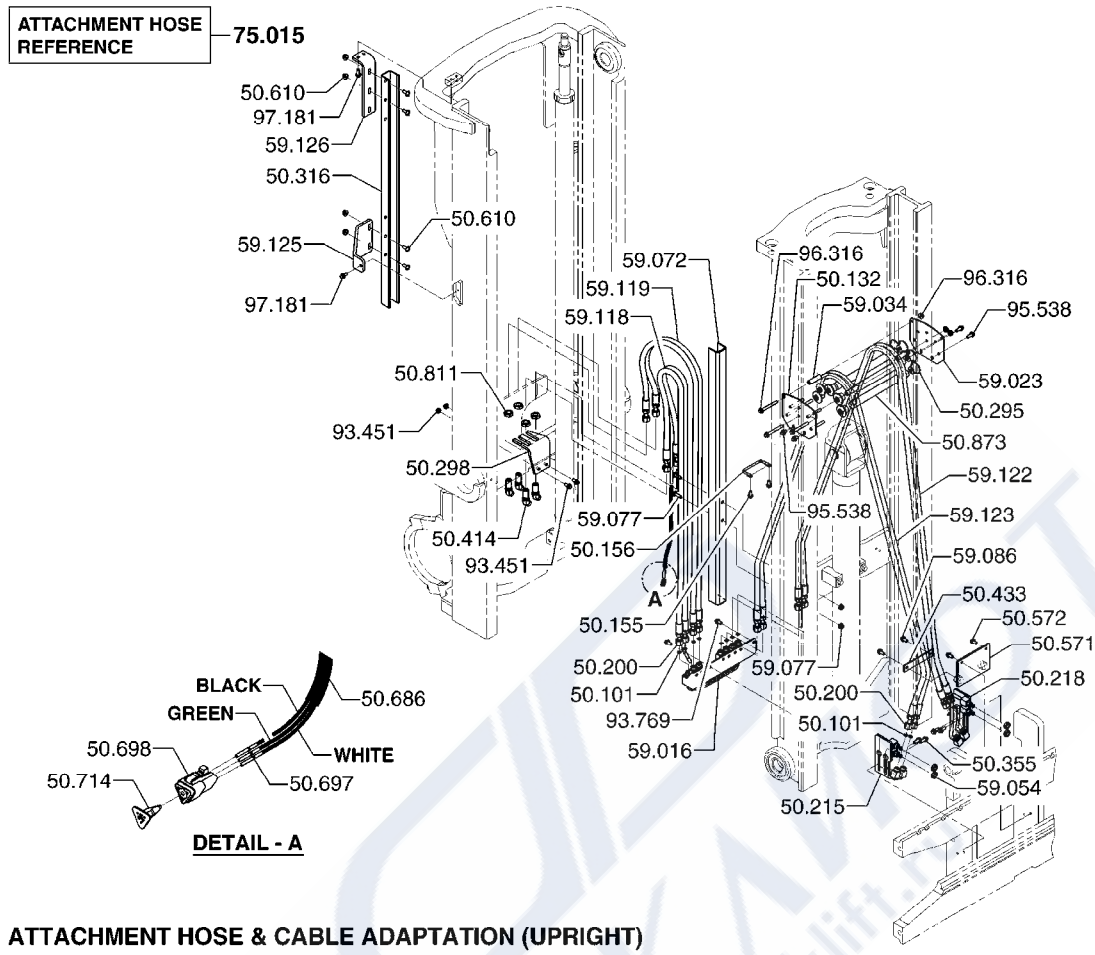

50.101	SEAL, DEVICE HOSE SWIVEL COUPLING 씰	50.610	FASTENER, DEVICE HOSE GUARD 패스너
50.132	BRACKET, DEVICE HOSE REEL 브라켓	50.686	WIRE, DEVICE 와이어
50.155	FASTENER, DEVICE HOSE CLIP 패스너	50.697	CONNECTOR, DEVICE CABLE (PIN END) 커넥터
50.156	CLIP, DEVICE HOSE 클립	50.698	CONNECTOR, DEVICE CABLE (SOCKET END) 커넥터
50.200	COUPLING, DEVICE HOSE 커플링	50.714	LOCK, DEVICE CABLE CONNECTOR 로크
50.215	TERMINAL BLOCK, DEVICE HOSE 터미널블록	50.811	NUT, DEVICE HOSE FITTING 너트
50.218	TERMINAL BLOCK, DEVICE LH HOSE 터미널블록	50.873	SPACER, DEVICE HOSE ROLLER 스페이서
50.295	ROLLER, DEVICE HOSE UPPER 롤러	59.016	JUNCTION BLOCK, DEVICE HOSE 정크션 블록
50.298	BRACKET, DEVICE HOSE TERMINAL 브라켓	59.023	BRACKET, DEVICE HOSE REEL MOUNTING 브라켓
50.316	GUARD, DEVICE RH HOSE 가드	59.034	TUBE, DEVICE HOSE REEL MOUNTING BRACKET 튜브
50.355	FASTENER, DEVICE HOSE TERMINAL BLOCK 패스너	59.054	PLUG, DEVICE HOSE JUNCTION BLOCK 플러그
50.414	FITTING, DEVICE HOSE CONNECTOR 피팅	59.072	GUARD, DEVICE HOSE 가드
50.433	BRACKET, DEVICE HOSE CLAMP 브라켓	59.077	FASTENER, DEVICE HOSE GUARD 패스너
50.571	BRACKET, DEVICE HOSE 브라켓	59.086	FASTENER, DEVICE HOSE CLIP BRACKET 패스너
50.572	FASTENER, DEVICE HOSE BRACKET 패스너	59.118	LINE, DEVICE HYDRAULIC (OUTER RAIL) 라인

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

59.119 LINE, DEVICE HYDRAULIC (OUTER RAIL)
라인

59.122 LINE, DEVICE HYDRAULIC (INNER RAIL)
라인

59.123 LINE, DEVICE HYDRAULIC (INNER RAIL)
라인

59.125 BRACKET, DEVICE HOSE GUARD MOUNTING
브라켓

59.126 BRACKET, DEVICE HOSE GUARD MOUNTING
브라켓

75.015 MODULE, ATTACHMENT HOSE LINES
모듈

93.451 FASTENER, DEVICE HOSE TERMINAL BRACKET
패스너

93.769 FASTENER, DEVICE LINE JUNCTION BLOCK
패스너

95.538 FASTENER, DEVICE HOSE REEL BRACKET
패스너

96.316 FASTENER, DEVICE HOSE REEL
패스너

97.181 FASTENER, DEVICE HOSE GUARD MOUNTING BRACKET
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

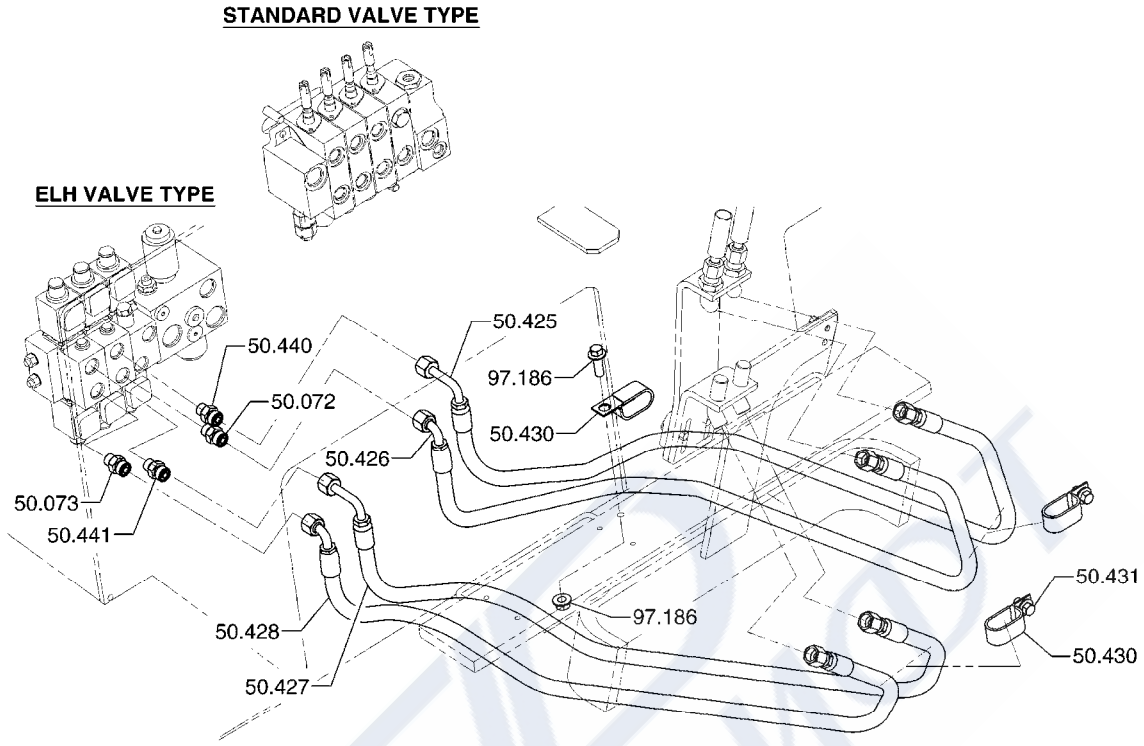

AUXILIARY VALVE LINES **50-535**

50.072 FITTING, 1ST AUXILIARY VALVE "B" PORT
피팅

50.073 FITTING, 2ND AUXILIARY VALVE "B" PORT
피팅

50.425 LINE, 1ST AUXILIARY VALVE "A" PORT
라인

50.426 LINE, 1ST AUXILIARY VALVE "B" PORT
라인

50.427 LINE, 2ND AUXILIARY VALVE "A" PORT
라인

50.428 LINE, 2ND AUXILIARY VALVE "B" PORT
라인

50.430 CLAMP, AUXILIARY VALVE LINES
클램프

50.431 FASTENER, AUX VALVE LINES CLAMP
패스너

50.440 FITTING, 1ST AUXILIARY VALVE "A" PORT
피팅

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

50.441	FITTING, 2ND AUXILIARY VALVE "A" PORT 피팅
97.186	FASTENER, AUX VALVE LINES CLAMP 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

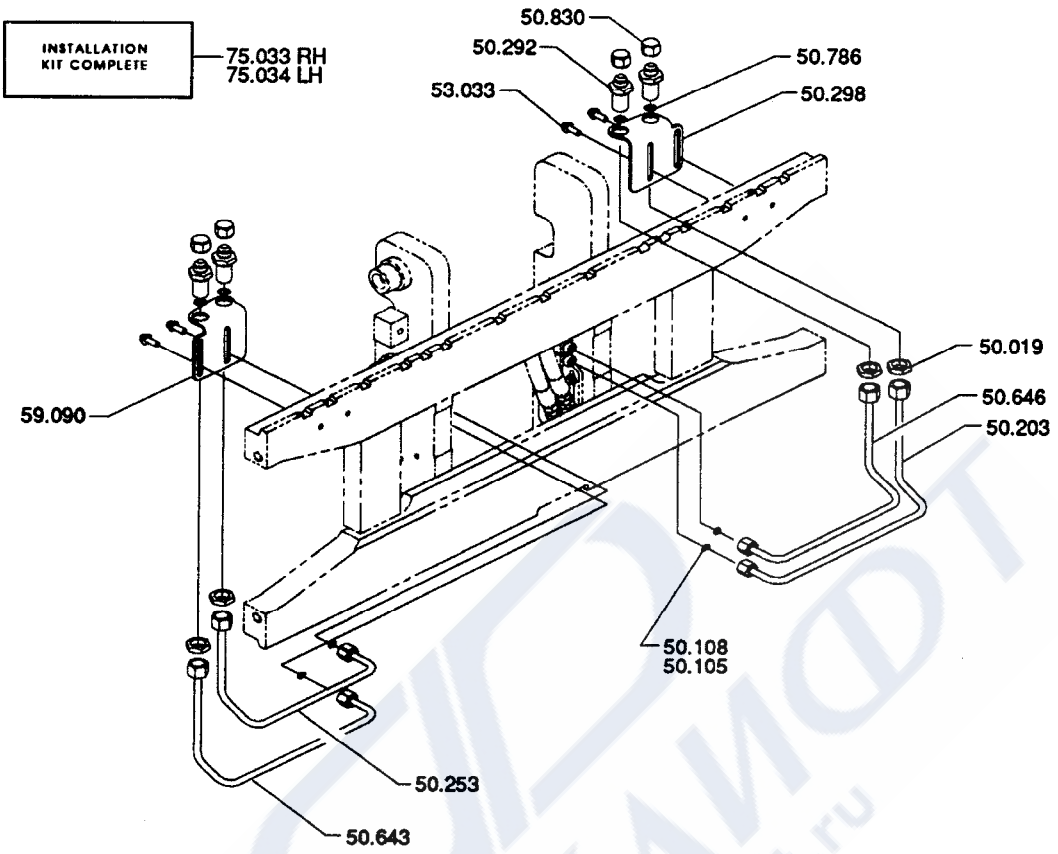

CARRIAGE HIGH TERMINATION PLUMBING 50-765

50.019 FASTENER, DEVICE HOSE DISCONNECT
패스너

50.105 SEAL, DEVICE HOSE SWIVEL COUPLING PLUG
씰

50.108 SEAL, DEVICE HOSE SWIVEL COUPLING INLET PORT
씰

50.203 LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인

50.253 LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인

50.292 FITTING, DEVICE RH HYDRAULIC HOSE
피팅

50.298 BRACKET, DEVICE HOSE TERMINAL
브라켓

50.643 LINE, DEVICE UPPER (AT CARRIAGE)
라인

50.646 LINE, DEVICE
라인

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

50.786	SEAL, DEVICE RH HOSE TERMINAL BLOCK PORT 씰
50.830	CAP, DEVICE HOSE REEL FITTING 캡
53.033	FASTENER, HOSE TERMINAL BRACKET 패스너
59.090	BRACKET, DEVICE HOSE TERMINAL 브라켓
75.033	KIT, CARRIAGE TERMINATION PIPING - RH 키트
75.034	KIT, CARRIAGE TERMINATION PIPING - LH 키트

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

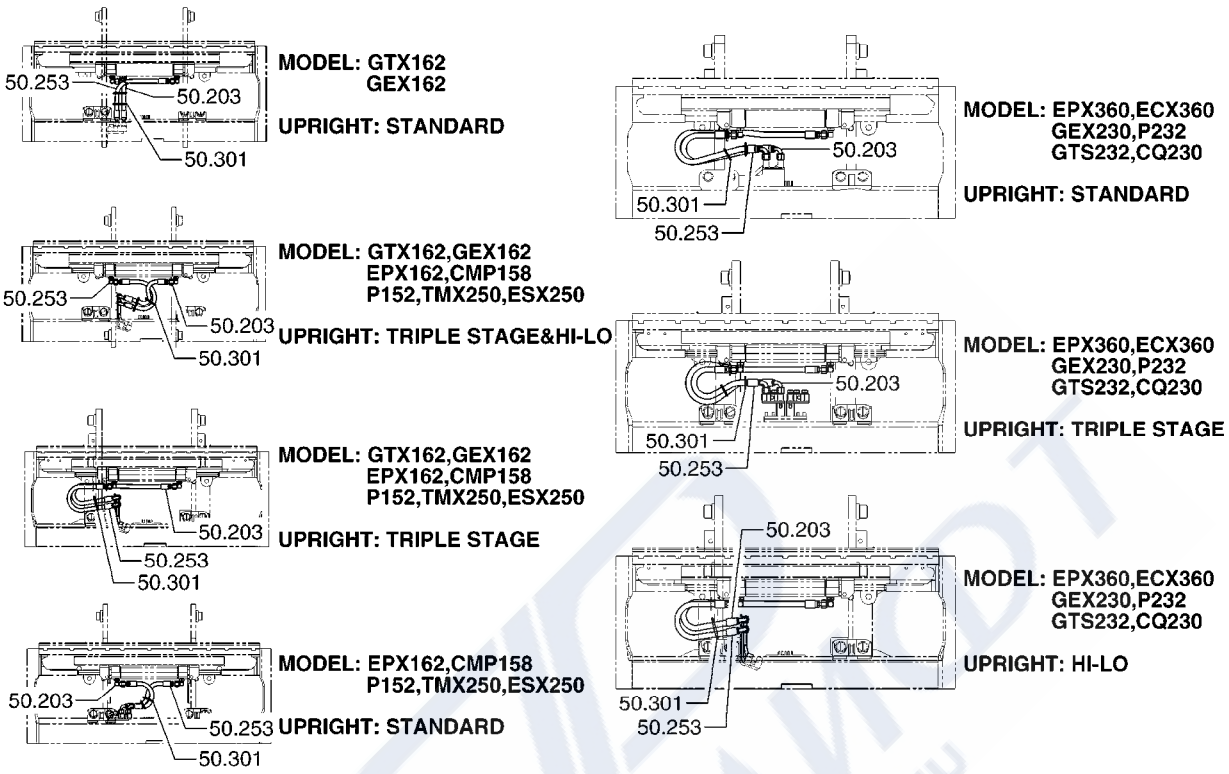

50.203 LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인

50.253 LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인

50.301 CLIP, DEVICE RH HOSE (AT CARRIAGE)
클립

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

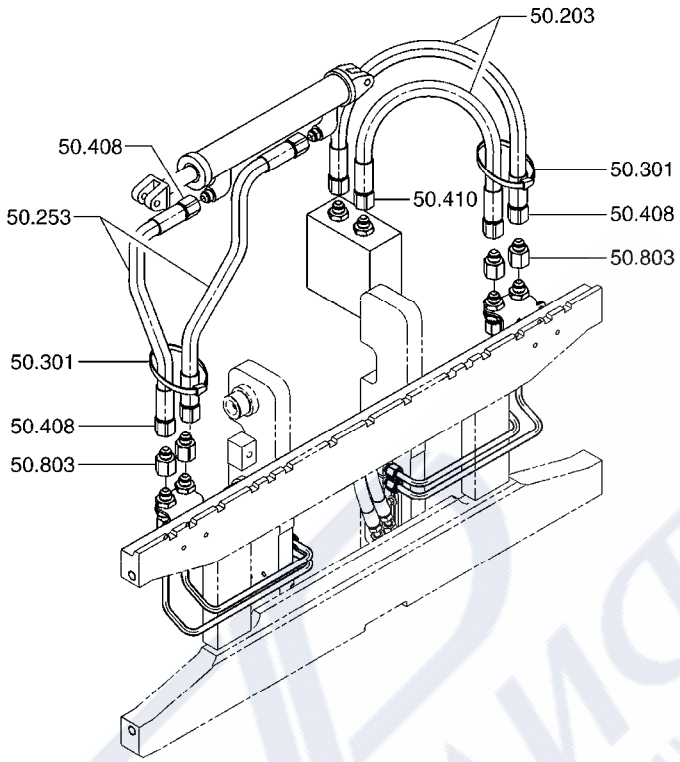

ATTACHMENT HOSE ADAPTATION (CARRIAGE) **50-794**

50.203 LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인

50.253 LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인

50.301 CLIP, DEVICE RH HOSE (AT CARRIAGE)
클립

50.408 COUPLING, DEVICE HOSE
커플링

50.410 COUPLING, DEVICE HOSE
커플링

50.803 FITTING, DEVICE HYDRAULIC LINE
피팅

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

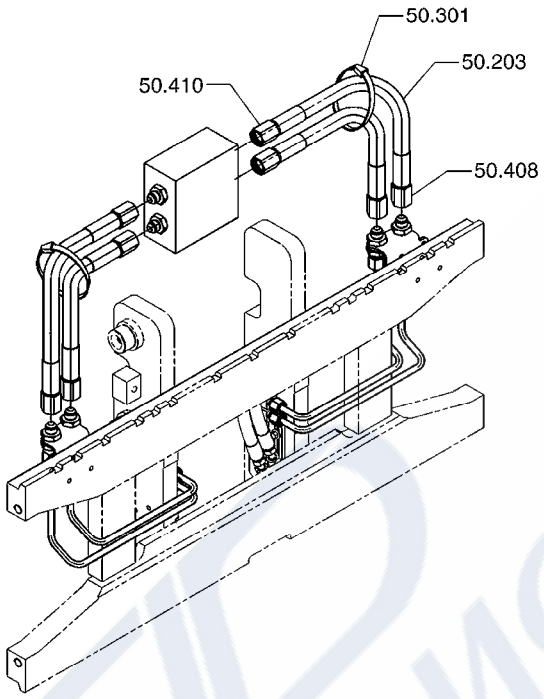

ATTACHMENT HOSE ADAPTATION (CARRIAGE) **50-796**

50.203	LINE, DEVICE HYDRAULIC (AT CARRIAGE) 라인
50.301	CLIP, DEVICE RH HOSE (AT CARRIAGE) 클립
50.408	COUPLING, DEVICE HOSE 커플링
50.410	COUPLING, DEVICE HOSE 커플링

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

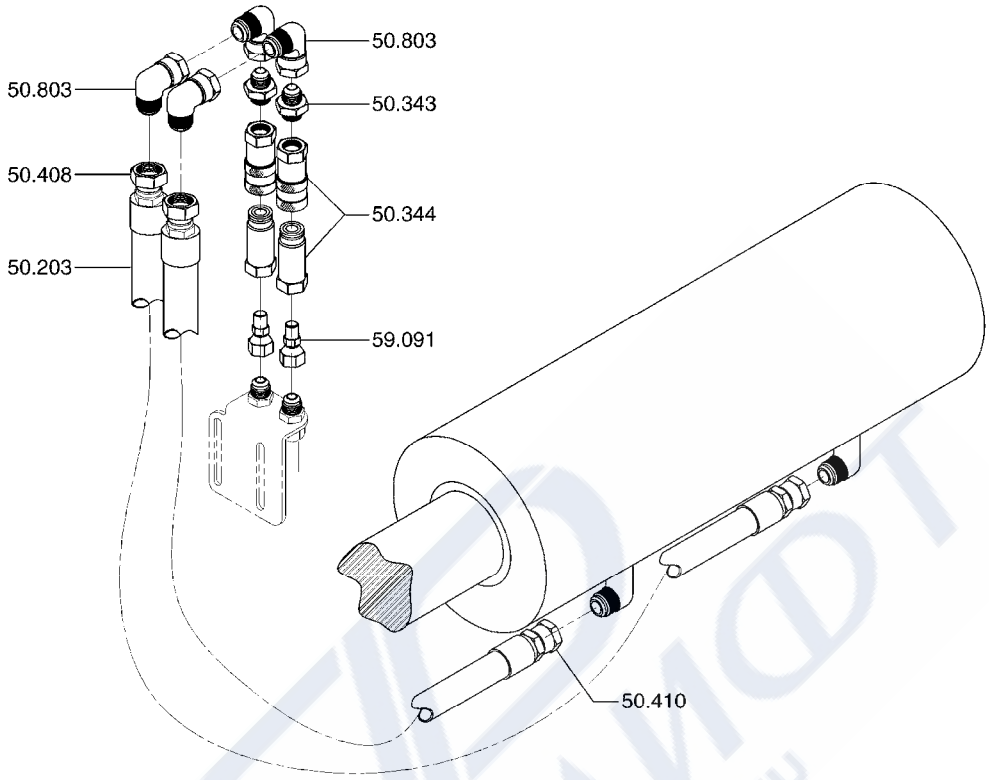

ATTACHMENT HOSE ADAPTATION (CARRIAGE) **50-797**

50.203 LINE, DEVICE HYDRAULIC (AT CARRIAGE)
라인

50.343 FITTING, DEVICE LH LINE
피팅

50.344 FITTING, DEVICE LH LINE
피팅

50.408 COUPLING, DEVICE HOSE
커플링

50.410 COUPLING, DEVICE HOSE
커플링

50.803 FITTING, DEVICE HYDRAULIC LINE
피팅

59.091 FITTING, DEVICE HYDRAULIC LINE
피팅

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

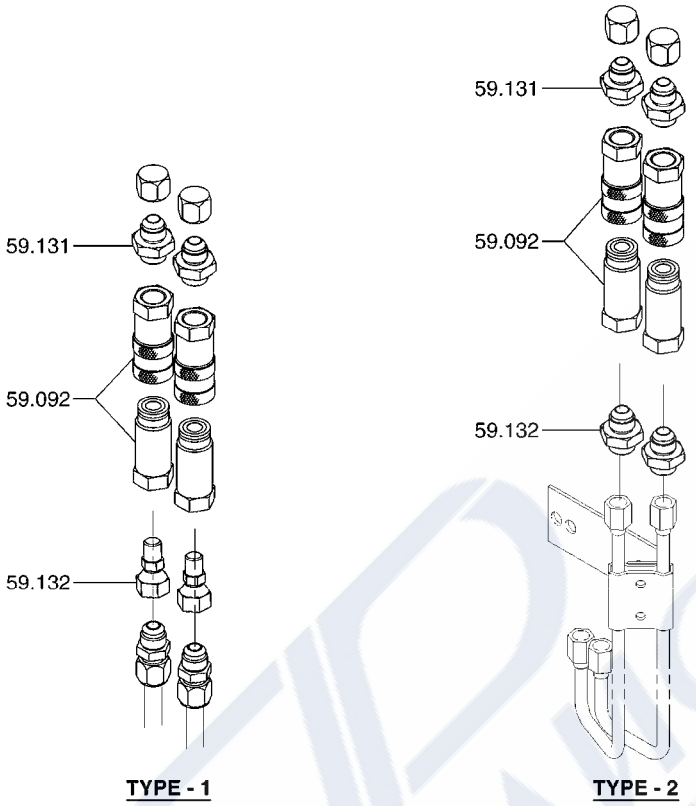

QUICK DISCONNECT FOR DEVICE HOSE ADAPTATION **50-798**

59.092 QUICK DISCONNECT, DEVICE HOSE
퀵디스커넥트

59.131 FITTING, DEVICE LINE QUICK DISCONNECT
피팅

59.132 FITTING, DEVICE LINE QUICK DISCONNECT
피팅

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

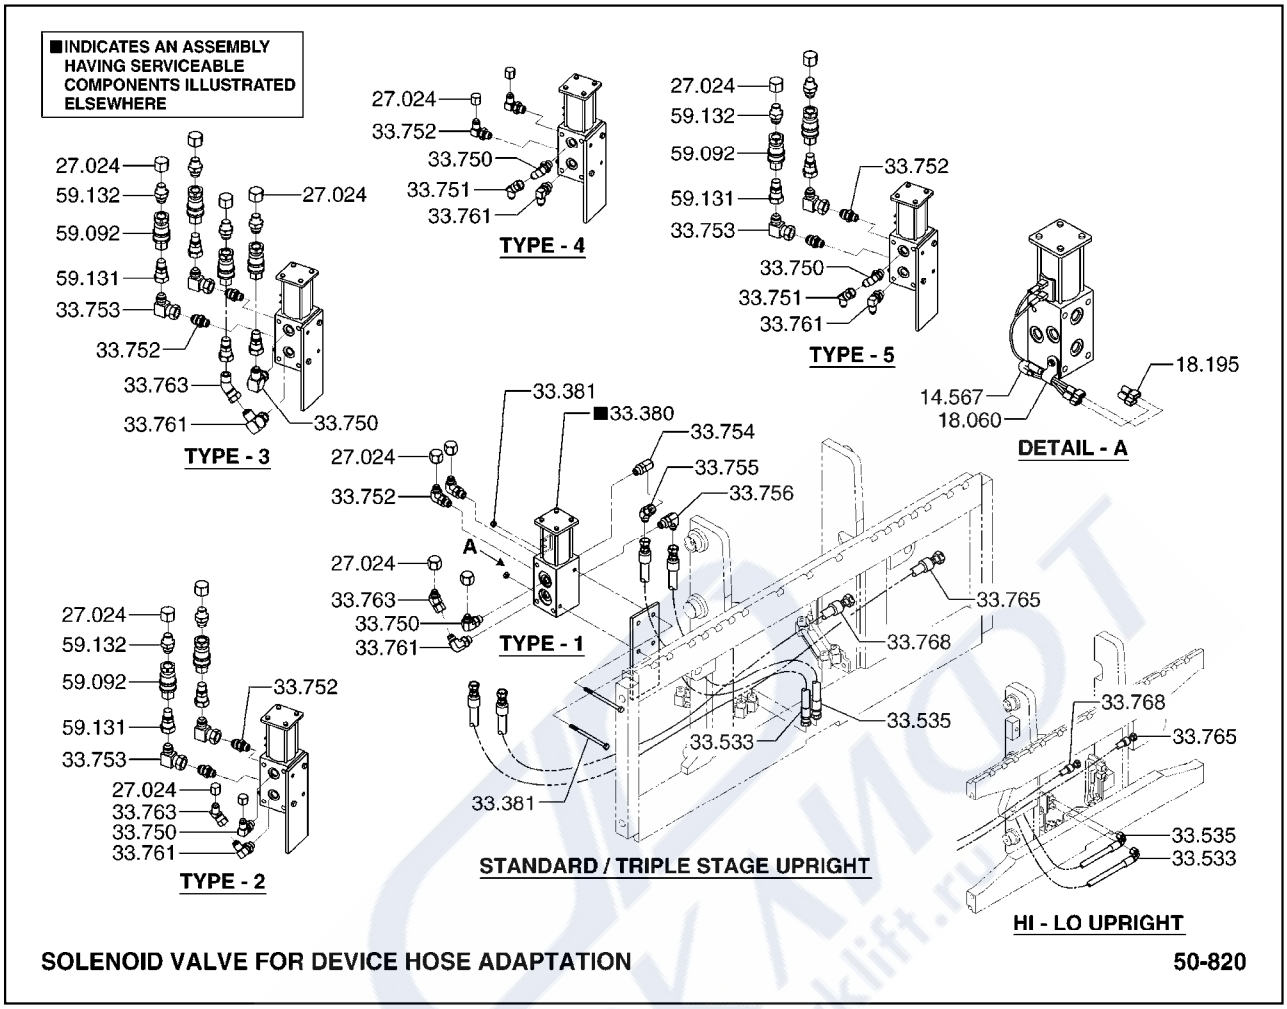

14.567	WIRE, DEVICE SELECTOR VALVE SWITCH FEED 와이어
18.060	CLAMP, DEVICE SELECTOR VALVE CABLE 클램프
18.195	TERMINAL, DEVICE SELECTOR VALVE SWITCH FEED WIRE 터미널
27.024	PLUG, DEVICE SELECTOR VALVE OPTIONAL OUTLET PORT 플러그
33.380	VALVE ASSEMBLY, DEVICE SELECTOR SOLENOID 밸브
33.381	FASTENER, DEVICE SELECTOR VALVE 패스너
33.533	LINE, DEVICE SELECTOR VALVE "P" PORT HYDRAULIC 라인
33.535	LINE, DEVICE SELECTOR VALVE "R" PORT HYDRAULIC 라인
33.750	FITTING, DEVICE SELECTOR VALVE C1 PORT 피팅

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

33.751	FITTING, DEVICE SELECTOR VALVE C1 PORT 피팅
33.752	FITTING, DEVICE SELECTOR VALVE C2 PORT 피팅
33.753	FITTING, DEVICE SELECTOR VALVE C2 PORT 피팅
33.754	FITTING, DEVICE SELECTOR VALVE "P" PORT 피팅
33.755	FITTING, DEVICE SELECTOR VALVE "P" PORT 피팅
33.756	FITTING, DEVICE SELECTOR VALVE "R" PORT 피팅
33.761	FITTING, DEVICE SELECTOR VALVE C4 PORT 피팅
33.763	FITTING, DEVICE SELECTOR VALVE C4 PORT 피팅
33.765	LINE, DEVICE SELECTOR VALVE C4 PORT HYDRAULIC 라인
33.768	LINE, DEVICE SELECTOR VALVE C1 PORT HYDRAULIC 라인
59.092	QUICK DISCONNECT, DEVICE HOSE 퀵디스커넥트
59.131	FITTING, DEVICE LINE QUICK DISCONNECT 피팅
59.132	FITTING, DEVICE LINE QUICK DISCONNECT 피팅

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

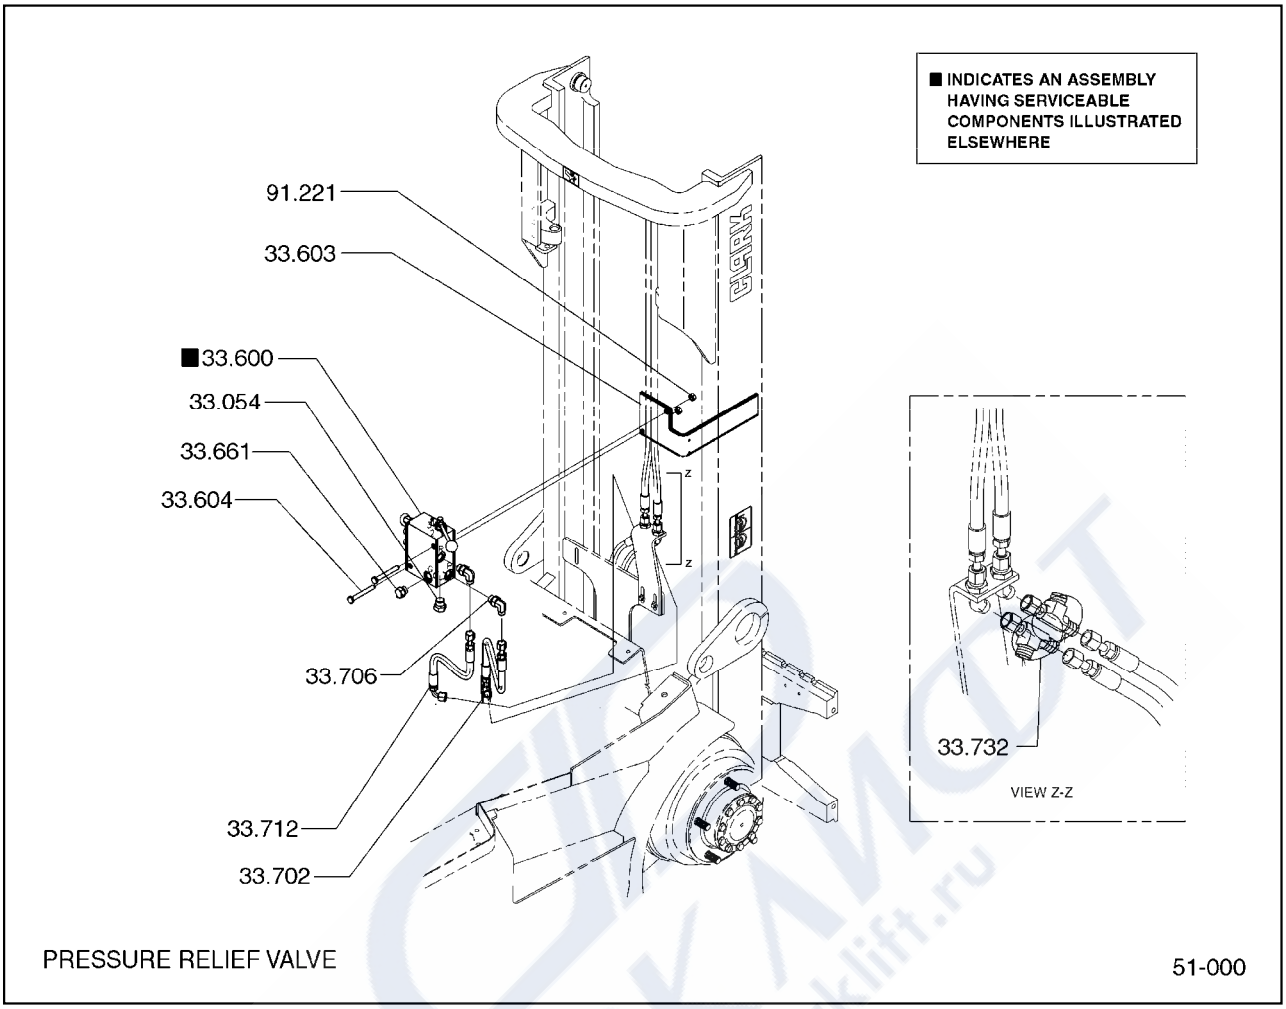

33.054 PLUG, RELIEF VALVE PORT
플러그

33.600 RELIEF VALVE, DEVICE VARIABLE PRESSURE
릴리프밸브

33.603 BRACKET, DEVICE CARIABLE RELIEF VALVE
브라켓

33.604 FASTENER, DEVICE VARIABLE RELIEF VALVE
패스너

33.661 FITTING, DEVICE RELIEF VALVE OUTLET PORT
피팅

33.702 LINE, DEVICE RELIEF VALVE INLET
라인

33.706 FITTING, DEVICE RELIEF VALVE INLET PORT
피팅

33.712 COUPLING, DEVICE RELIEF VALVE DISCHARGE HOSE
커플링

33.732 FITTING, DEVICE RELIEF VALVE INLET
피팅

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

91.221 NUT, DEV VARIABLE RELIEF VALVE FASTENER
너트

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

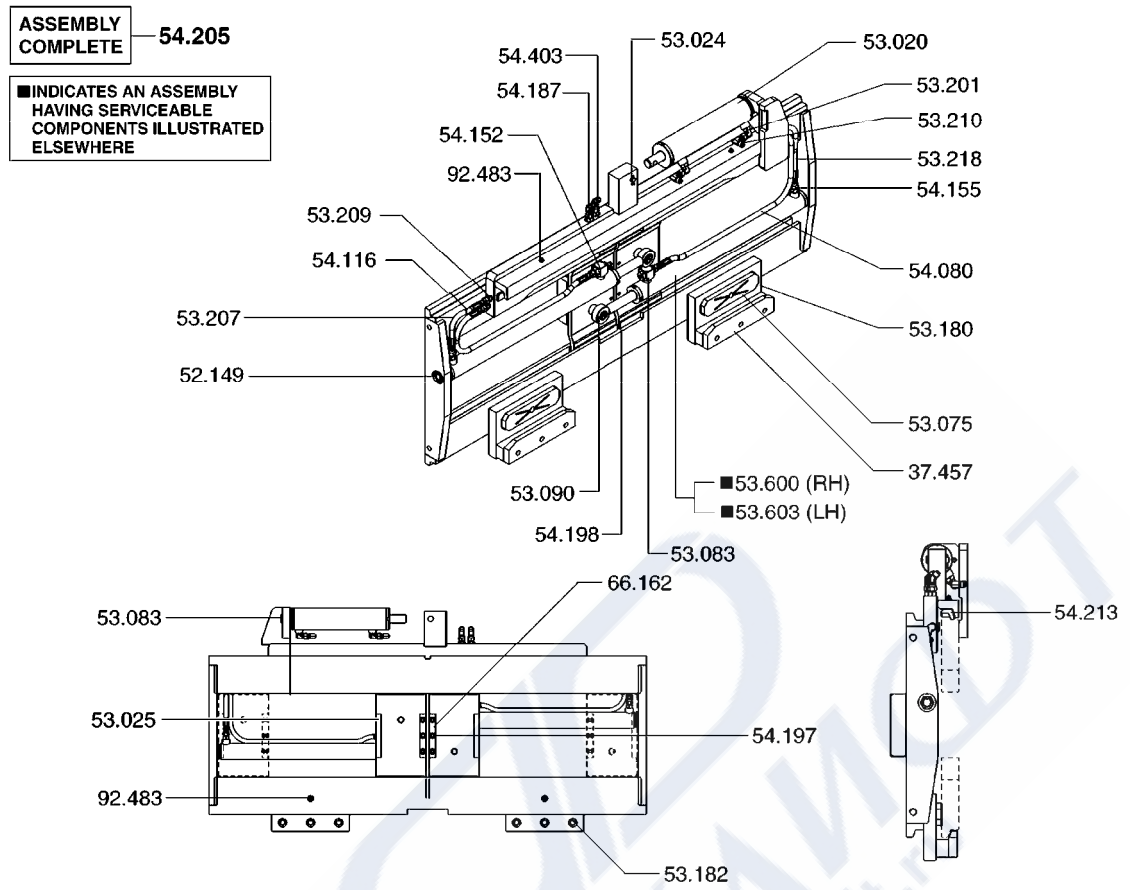

37.457	HOOK, CAB CLOTHING HANGER 후크	53.600	CYLINDER ASSEMBLY, INBOARD RH FORK 실린더
52.149	NUT, SIDE SHIFT CYLINDER ANCHOR PORT LINE FITTIN 너트	53.603	CYLINDER ASSEMBLY, INBOARD LH FORK 실린더
53.020	CYLINDER ASSEMBLY, SIDE SHIFTER 실린더	54.080	LINE, SIDE SHIFT CYLINDER ANCHOR PORT 라인
53.024	ANCHOR, SIDE SHIFTER CYLINDER BASE 앵커	54.116	LINE, SIDE SHIFT CYLINDER ROD PORT 라인
53.025	GUIDE, SIDE SHIFTER MOVABLE FRAME LOWER 가이드	54.152	FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT LINE 피팅
53.075	BEARING, SIDE SHIFTER (LOWER) 베어링	54.155	FITTING, SIDE SHIFTER CYLINDER ROD PORT LINE 피팅
53.083	FASTENER, SIDE SHIFTER CYLINDER ANCHOR 패스너	54.187	FITTING, SIDE SHIFTER ANCHOR PORT LINE 피팅
53.090	FASTENER, SIDE SHIFTER MOVABLE FRAME 패스너	54.197	FASTENER, SIDE SHIFTING BASE PLATE TO ARM 패스너
53.180	SPACER, SIDE SHIFTER BEARING 스페이서	54.198	BEARING, SIDE SHIFTER BASE PLATE ARM 베어링
53.182	FASTENER, SIDE SHIFTER HANGER 패스너	54.205	ATTACHMENT, FORK POSITIONER 어태치먼트
53.201	FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT 피팅	54.213	BEARING, SIDE SHIFTER (UPPER) 베어링
53.207	LINE, SIDE SHIFTER CYLINDER ANCHOR PORT 라인	54.403	FITTING-LUB, SIDE SHIFTER BASE PLATE ARM 피팅
53.209	FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT LINE 피팅	66.162	STOP, CARRIAGE TRAVEL 스톱
53.210	FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT LINE 피팅	92.483	NIPPLE, LUBRICATION 니플
53.218	LINE, SIDE SHIFTER CYLINDER ROD PORT 라인		

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

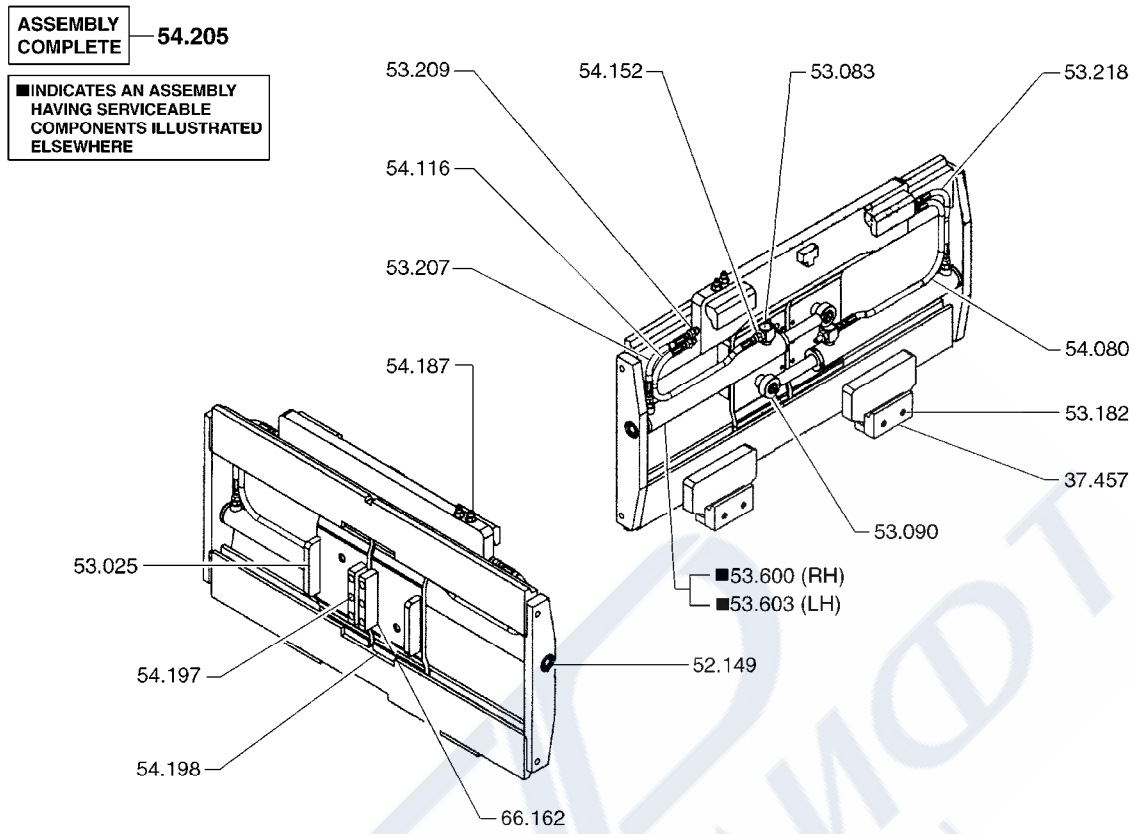

37.457 HOOK, CAB CLOTHING HANGER
후크

52.149 NUT, SIDE SHIFT CYLINDER ANCHOR PORT LINE FITTING
너트

53.025 GUIDE, SIDE SHIFTER MOVABLE FRAME LOWER
가이드

53.083 FASTENER, SIDE SHIFTER CYLINDER ANCHOR
패스너

53.090 FASTENER, SIDE SHIFTER MOVABLE FRAME
패스너

53.182 FASTENER, SIDE SHIFTER HANGER
패스너

53.207 LINE, SIDE SHIFTER CYLINDER ANCHOR PORT
라인

53.209 FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT LINE
피팅

53.218 LINE, SIDE SHIFTER CYLINDER ROD PORT
라인

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

53.600	CYLINDER ASSEMBLY, INBOARD RH FORK 실린더
53.603	CYLINDER ASSEMBLY, INBOARD LH FORK 실린더
54.080	LINE, SIDE SHIFT CYLINDER ANCHOR PORT 라인
54.116	LINE, SIDE SHIFT CYLINDER ROD PORT 라인
54.152	FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT LINE 피팅
54.187	FITTING, SIDE SHIFTER ANCHOR PORT LINE 피팅
54.197	FASTENER, SIDE SHIFTING BASE PLATE TO ARM 패스너
54.198	BEARING, SIDE SHIFTER BASE PLATE ARM 베어링
54.205	ATTACHMENT, FORK POSITIONER 어태치먼트
66.162	STOP, CARRIAGE TRAVEL 스톱

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

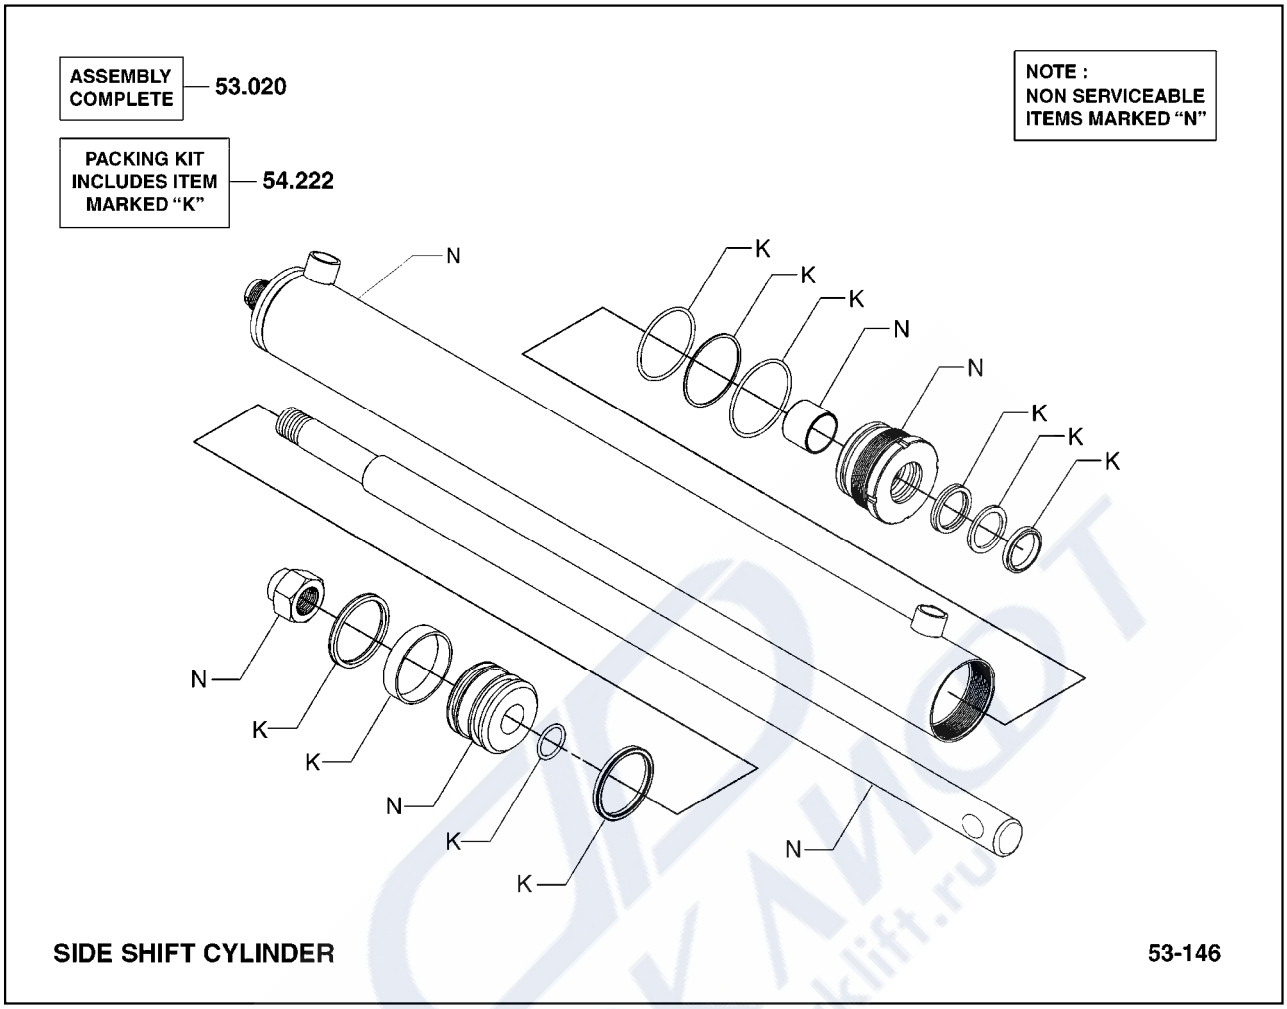

53.020 CYLINDER ASSEMBLY, SIDE SHIFTER
실린더

54.222 PACKING KIT, SIDE SHIFTER CYLINDER
패킹키트

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

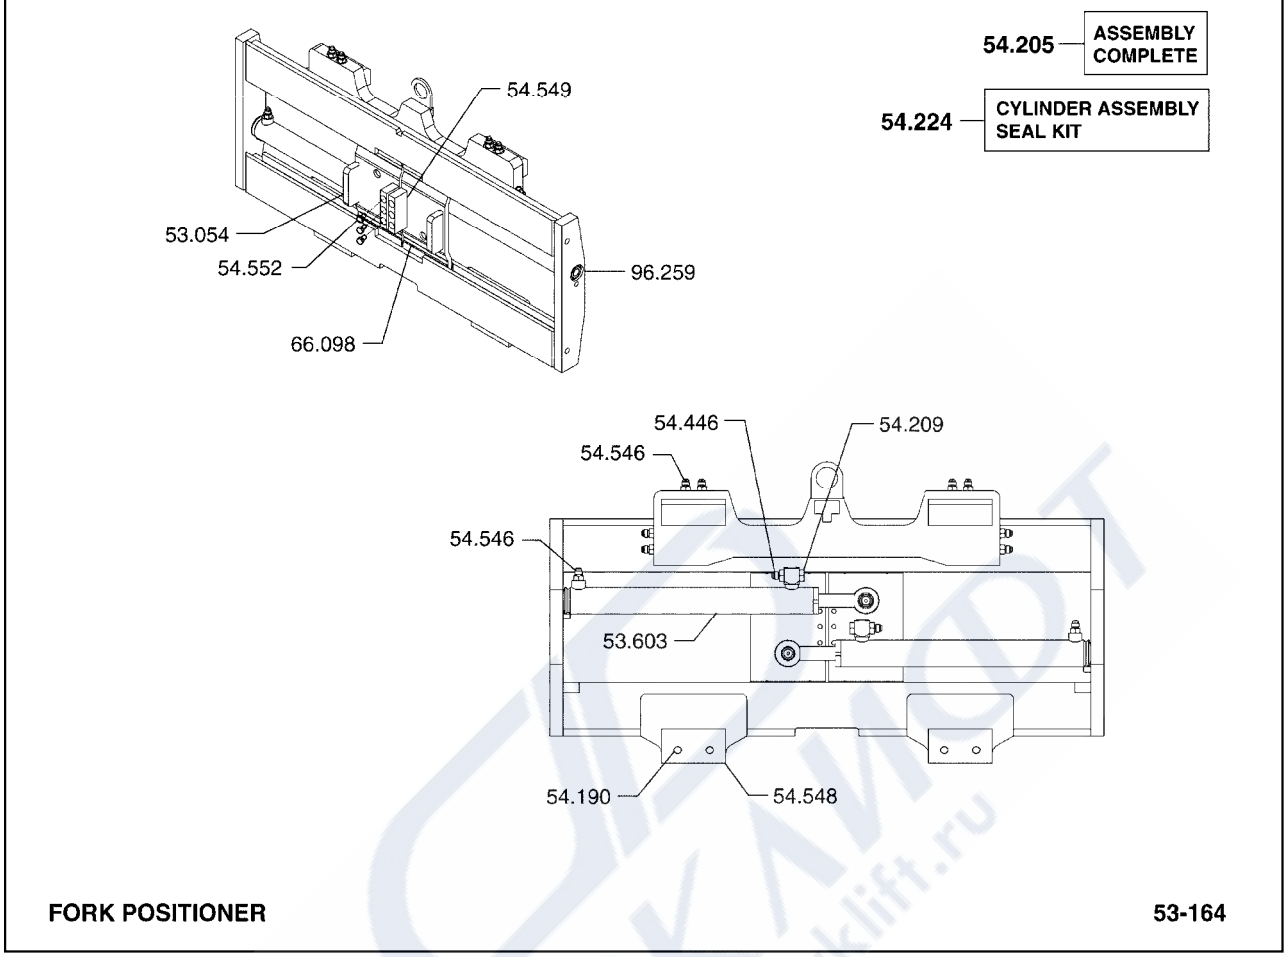

53.054 GUIDE, FORK
가이드

53.603 CYLINDER ASSEMBLY, INBOARD LH FORK
실린더

54.190 FASTENER, FORK HANGER SUPPORT
패스너

54.205 ATTACHMENT, FORK POSITIONER
어태치먼트

54.209 PLUG, FORK CYLINDER FLOW DIVIDER
플러그

54.224 PACKING KIT, LH FORK CYLINDER
패킹키트

54.446 FITTING - LUB, FORK POSITIONER
피팅

54.546 FITTING - LUB, FORK POSITIONER
피팅

54.548 HOOK, FORK POSITIONER HANGER
후크

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

54.549	STOP, FORK POSITIONER CYLINDER 스톱
54.552	FASTENER, FORK POSITIONER CYLINDER STOP 패스너
66.098	BEARING, FORK HORIZONTAL THRUST ROLLER 베어링
96.259	FASTENER, FORK CYLINDER ANCHOR END PIN RETAINER 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

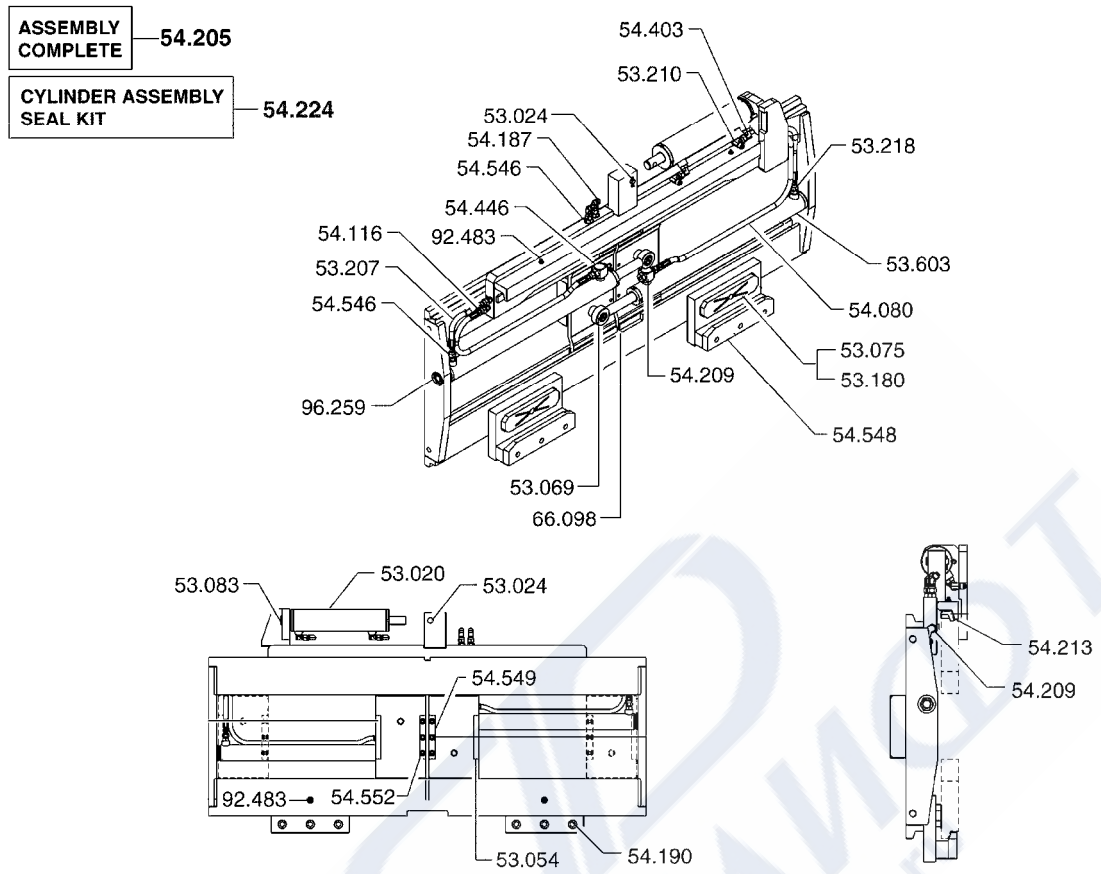

FORK POSITIONER (SHIFTING) **53-168**

53.020 CYLINDER ASSEMBLY, SIDE SHIFTER
실린더

53.024 ANCHOR, SIDE SHIFTER CYLINDER BASE
앵커

53.054 GUIDE, FORK
가이드

53.069 FASTENER, FORK CYLINDER ROD END
패스너

53.075 BEARING, SIDE SHIFTER (LOWER)
베어링

53.083 FASTENER, SIDE SHIFTER CYLINDER ANCHOR
패스너

53.180 SPACER, SIDE SHIFTER BEARING
스페이서

53.207 LINE, SIDE SHIFTER CYLINDER ANCHOR PORT
라인

53.210 FITTING, SIDE SHIFTER CYLINDER ANCHOR PORT LINE
피팅

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

53.218 LINE, SIDE SHIFTER CYLINDER ROD PORT
라인

53.603 CYLINDER ASSEMBLY, INBOARD LH FORK
실린더

54.080 LINE, SIDE SHIFT CYLINDER ANCHOR PORT
라인

54.116 LINE, SIDE SHIFT CYLINDER ROD PORT
라인

54.187 FITTING, SIDE SHIFTER ANCHOR PORT LINE
피팅

54.190 FASTENER, FORK HANGER SUPPORT
패스너

54.205 ATTACHMENT, FORK POSITIONER
어태치먼트

54.209 PLUG, FORK CYLINDER FLOW DIVIDER
플러그

54.213 BEARING, SIDE SHIFTER (UPPER)
베어링

54.224 PACKING KIT, LH FORK CYLINDER
패킹키트

54.403 FITTING-LUB, SIDE SHIFTER BASE PLATE ARM
피팅

54.446 FITTING - LUB, FORK POSITIONER
피팅

54.546 FITTING - LUB, FORK POSITIONER
피팅

54.548 HOOK, FORK POSITIONER HANGER
후크

54.549 STOP, FORK POSITIONER CYLINDER
스톱

54.552 FASTENER, FORK POSITIONER CYLINDER STOP
패스너

66.098 BEARING, FORK HORIZONTAL THRUST ROLLER
베어링

92.483 NIPPLE, LUBRICATION
니플

96.259 FASTENER, FORK CYLINDER ANCHOR END PIN RETAINER
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

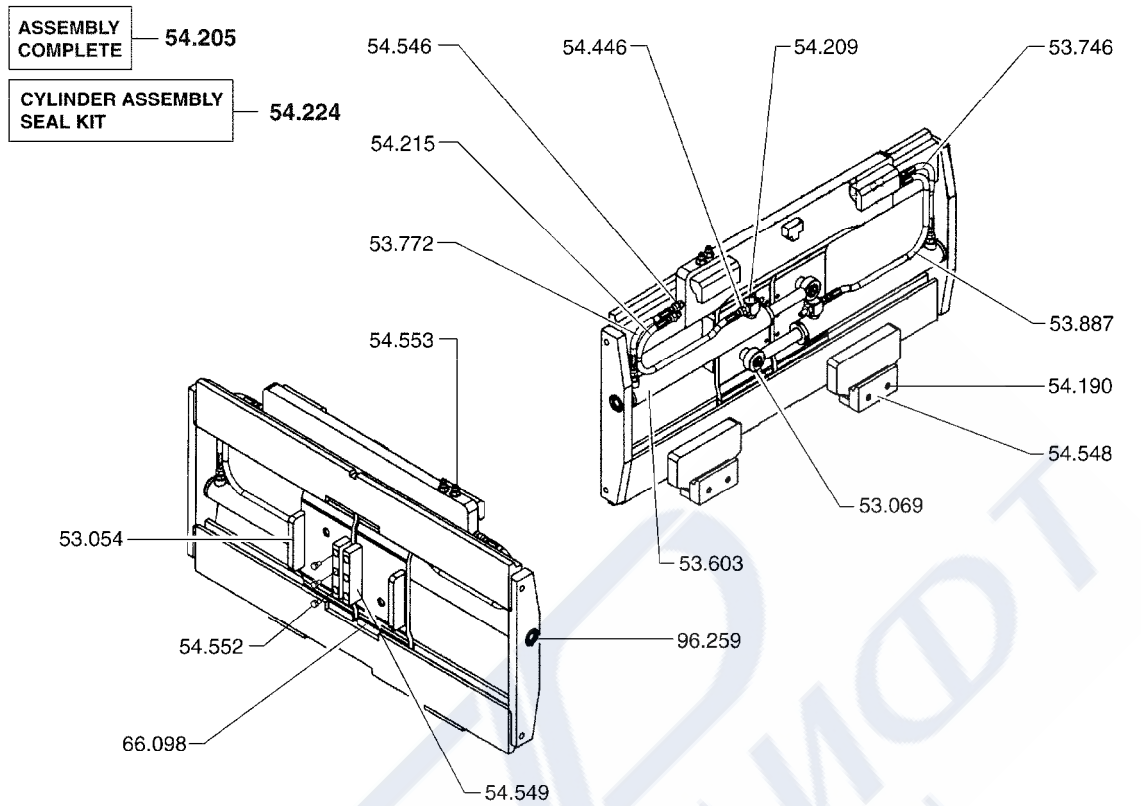

53.054 GUIDE, FORK
가이드

53.069 FASTENER, FORK CYLINDER ROD END
패스너

53.603 CYLINDER ASSEMBLY, INBOARD LH FORK
실린더

53.746 LINE, FORK CYLINDER ROD END
라인

53.772 LINE, FORK CYLINDER ANCHOR END
라인

53.887 LINE, FORK CYLINDER ANCHOR END
라인

54.190 FASTENER, FORK HANGER SUPPORT
패스너

54.205 ATTACHMENT, FORK POSITIONER
어태치먼트

54.209 PLUG, FORK CYLINDER FLOW DIVIDER
플러그

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

54.215	LINE, FORK CYLINDER ROD END 라인
54.224	PACKING KIT, LH FORK CYLINDER 패킹키트
54.446	FITTING - LUB, FORK POSITIONER 피팅
54.546	FITTING - LUB, FORK POSITIONER 피팅
54.548	HOOK, FORK POSITIONER HANGER 후크
54.549	STOP, FORK POSITIONER CYLINDER 스톱
54.552	FASTENER, FORK POSITIONER CYLINDER STOP 패스너
54.553	FITTING - LUB, FORK POSITIONER 피팅
66.098	BEARING, FORK HORIZONTAL THRUST ROLLER 베어링
96.259	FASTENER, FORK CYLINDER ANCHOR END PIN RETAINER 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

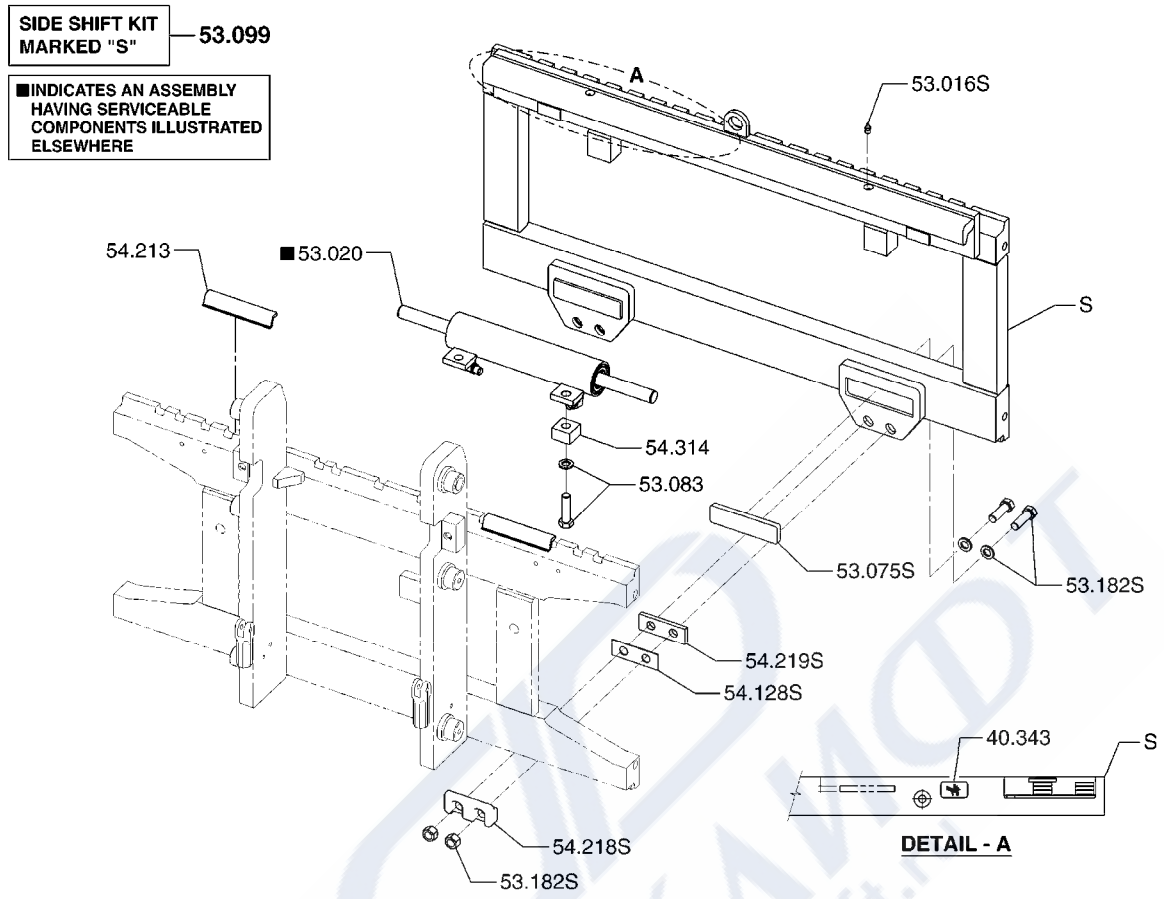

40.343	DECAL, ATTACHMENT SAFETY 데칼
53.016	FITTING-LUB, SIDE SHIFTER MOVABLE FRAME SUPPORT SH 피팅
53.020	CYLINDER ASSEMBLY, SIDE SHIFTER 실린더
53.075	BEARING, SIDE SHIFTER (LOWER) 베어링
53.083	FASTENER, SIDE SHIFTER CYLINDER ANCHOR 패스너
53.099	SIDE SHIFTER, DEVICE 사이드쉬프트
53.182	FASTENER, SIDE SHIFTER HANGER 패스너
54.128	SPACER, SIDE SHIFTER MOVEABLE FRAME BEARING 스페이서
54.213	BEARING, SIDE SHIFTER (UPPER) 베어링

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

54.218 HOOK, SIDE SHIFTER HANGER
후크

54.219 SPACER, SIDE SHIFTING BASE PLATE HANGER
스페이서

54.314 SPACER, SIDE SHIFTER CYLINDER REAR
스페이서

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

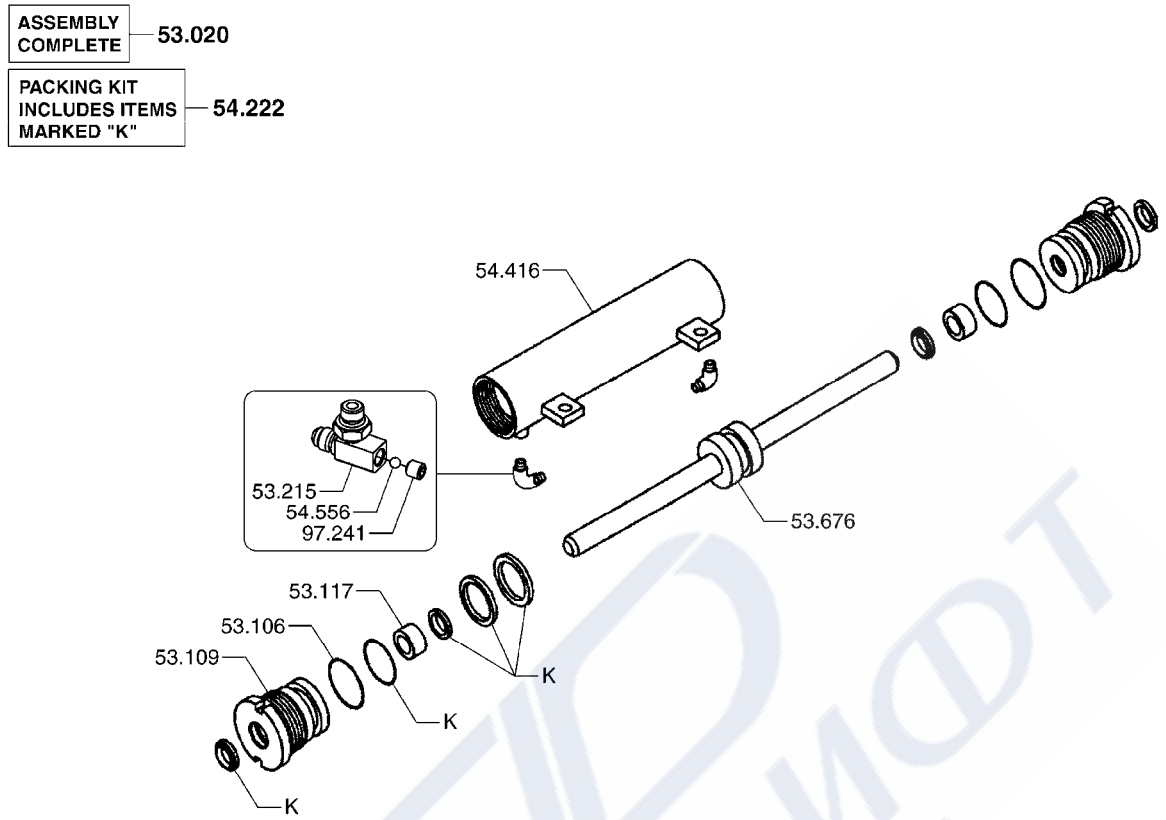

SIDESHIFT CYLINDER **53-198**

53.020	CYLINDER ASSEMBLY, SIDE SHIFTER 실린더
53.109	GLAND, SIDE SHIFTER CYLINDER 그랜드
53.110	RETAINER, SIDE SHIFTER CYLINDER GLAND 리테이너
53.117	BUSHING, SIDE SHIFTER CYLINDER GLAND 부싱
53.215	FITTING, SIDE SHIFTER CYLINDER ROD PORT 피팅
53.676	ROD, SIDE SHIFTER CYLINDER PISTON 로드
54.222	PACKING KIT, SIDE SHIFTER CYLINDER 패킹키트
54.416	BARREL, SIDE SHIFT CYLINDER 배럴
54.556	BALL, SIDE SHIFTER CYLINDER ROD PORT 볼

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

97.241 SET SCREW, SIDE SHIFTER CYLINDER ROD PORT
세트스크류

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

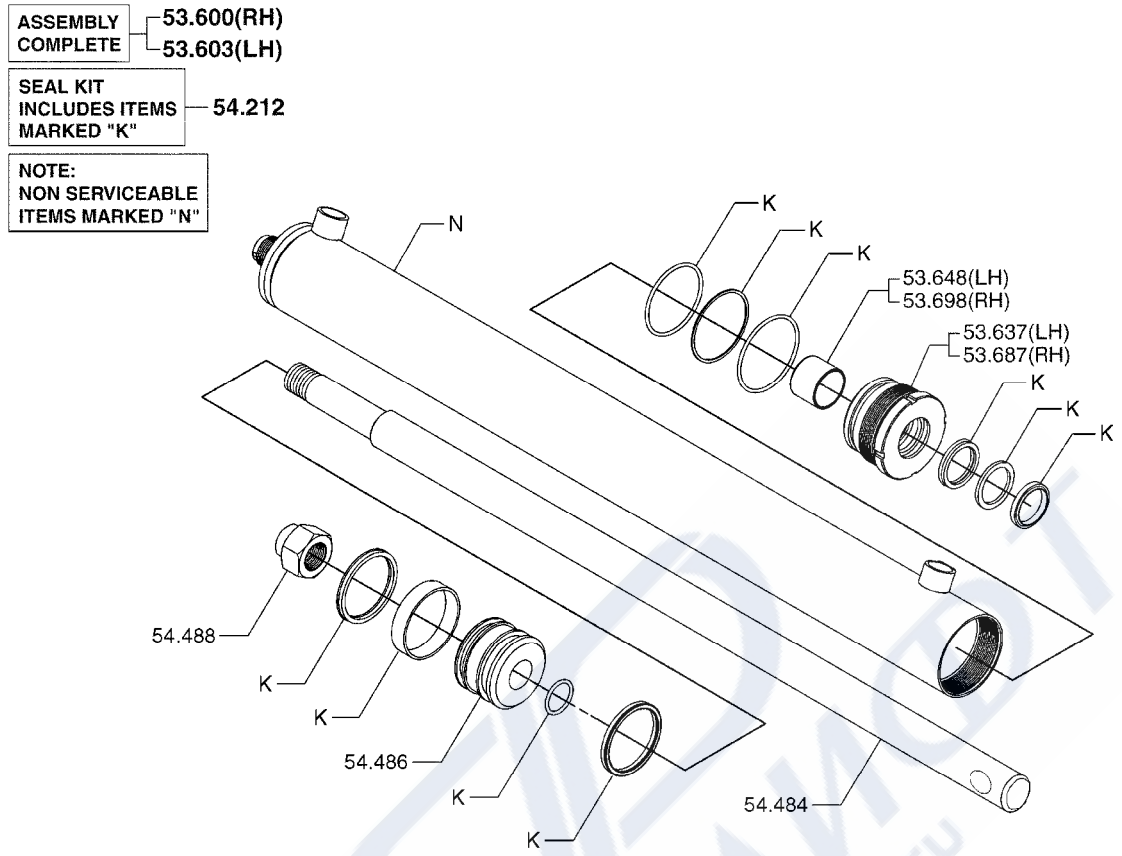

FORK POSITIONER CYLINDER **53-223**

53.600 CYLINDER ASSEMBLY, INBOARD RH FORK
실린더

53.603 CYLINDER ASSEMBLY, INBOARD LH FORK
실린더

53.637 GLAND, INBOARD LH FORK CYLINDER
그랜드

53.648 BUSHING, LH FORK CYLINDER GLAND
부싱

53.687 GLAND, INBOARD RH FORK CYLINDER
그랜드

53.698 BUSHING, RH FORK CYLINDER GLAND
부싱

54.212 SEAL KIT,FORK CYLINDER
씰키트

54.484 ROD, FORK CYLINDER PISTON
로드

54.486 PISTON, FORK CYLINDER
피스톤

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

54.488 NUT, FORK CYLINDER PISTON
너트

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

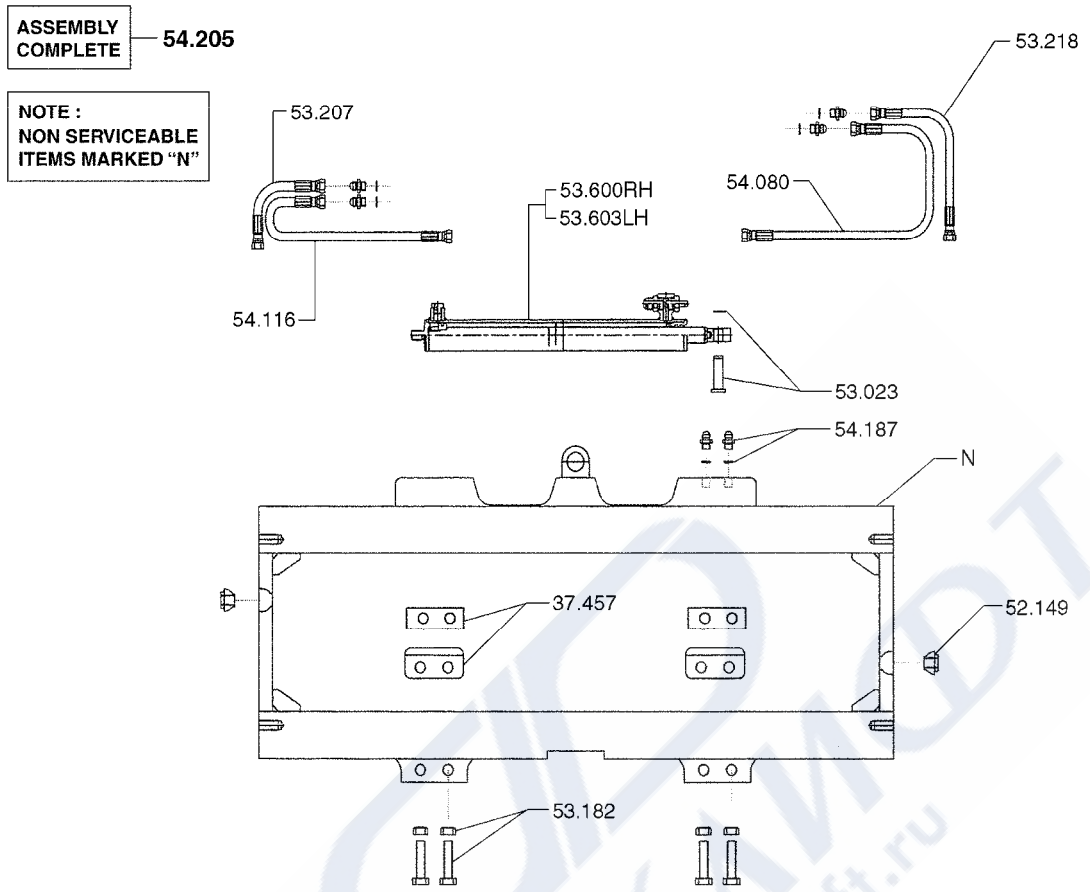

52.149 NUT, SIDE SHIFT CYLINDER ANCHOR PORT LINE FITTING
너트

53.023 ANCHOR, SIDE SHIFTER CYLINDER ROD END
앵커

53.182 FASTENER, SIDE SHIFTER HANGER
패스너

53.207 LINE, SIDE SHIFTER CYLINDER ANCHOR PORT
라인

53.218 LINE, SIDE SHIFTER CYLINDER ROD PORT
라인

53.600 CYLINDER ASSEMBLY, INBOARD RH FORK
실린더

53.603 CYLINDER ASSEMBLY, INBOARD LH FORK
실린더

54.080 LINE, SIDE SHIFT CYLINDER ANCHOR PORT
라인

54.116 LINE, SIDE SHIFT CYLINDER ROD PORT
라인

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

54.187 FITTING, SIDE SHIFTER ANCHOR PORT LINE
피팅

54.205 ATTACHMENT, FORK POSITIONER
어태치먼트

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

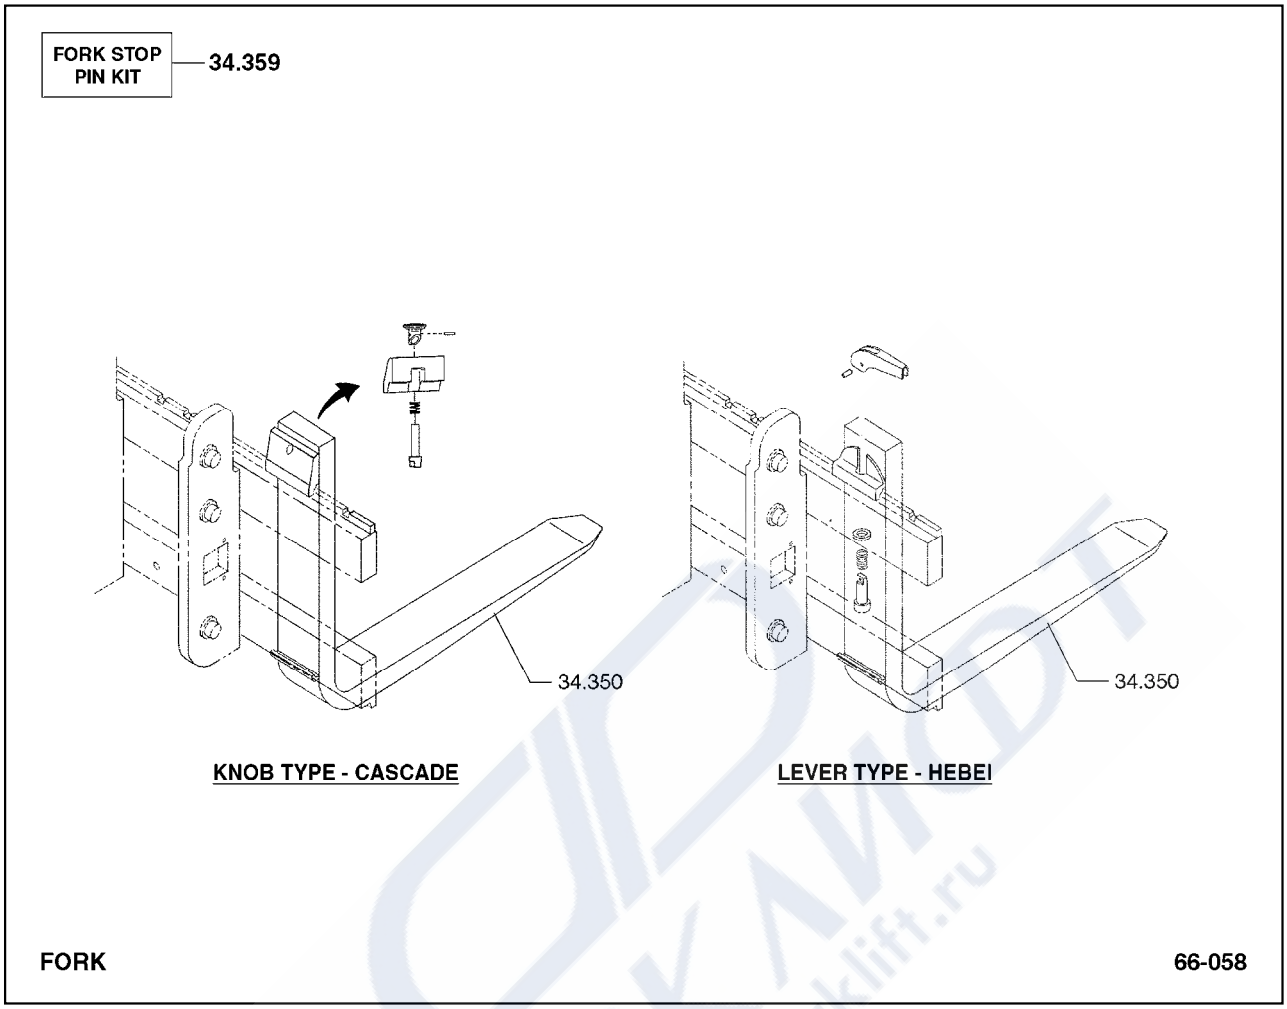

34.350 FORK ASSEMBLY
포크

34.359 KIT, FORK STOP PIN (CAPTIVE)
키트

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

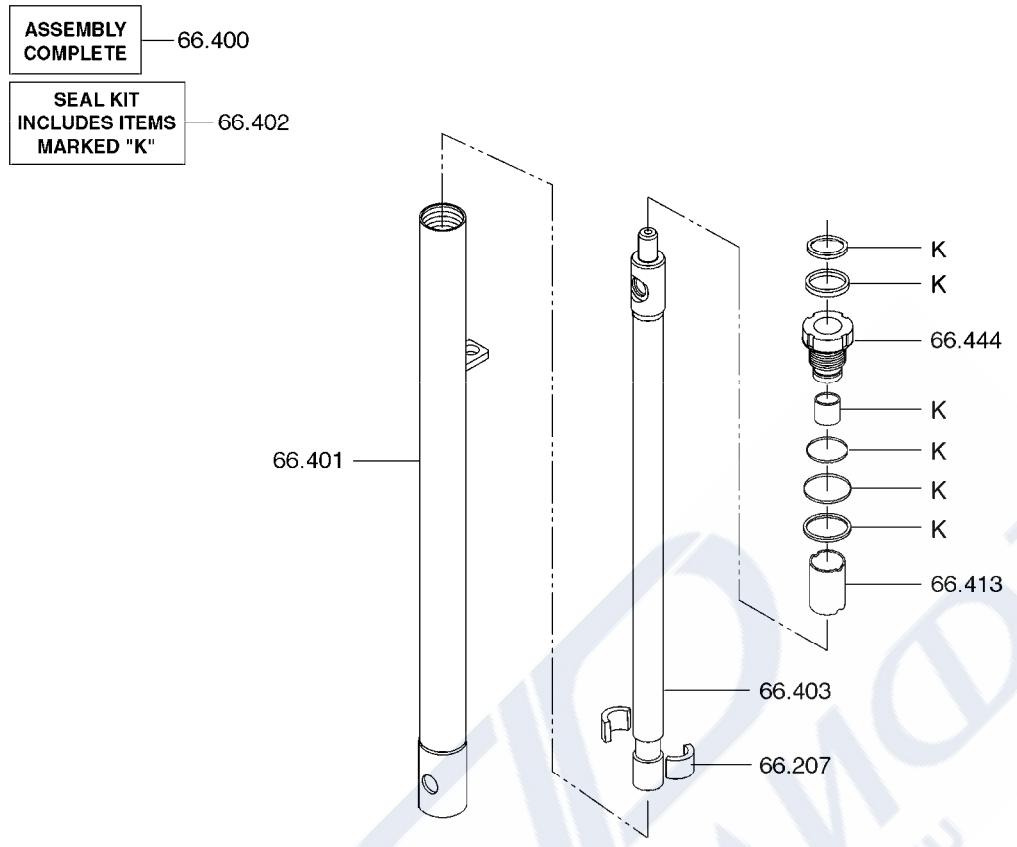

SECONDARY CYLINDER ASSEMBLY **66-139**

66.207 PISTON, FINAL LIFT CYLINDER
피스톤

66.400 CYLINDER ASSEMBLY, FINAL LIFT
실린더

66.401 BARREL, FINAL LIFT CYLINDER
배럴

66.402 PACKING KIT, FINAL LIFT CYLINDER
패킹키트

66.403 PISTON ROD, FINAL LIFT CYLINDER
피스톤로드

66.413 SPACER, FINAL LIFT CYLINDER PISTON ROD
스페이서

66.444 GLAND, FINAL LIFT CYLINDER
그룹드

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

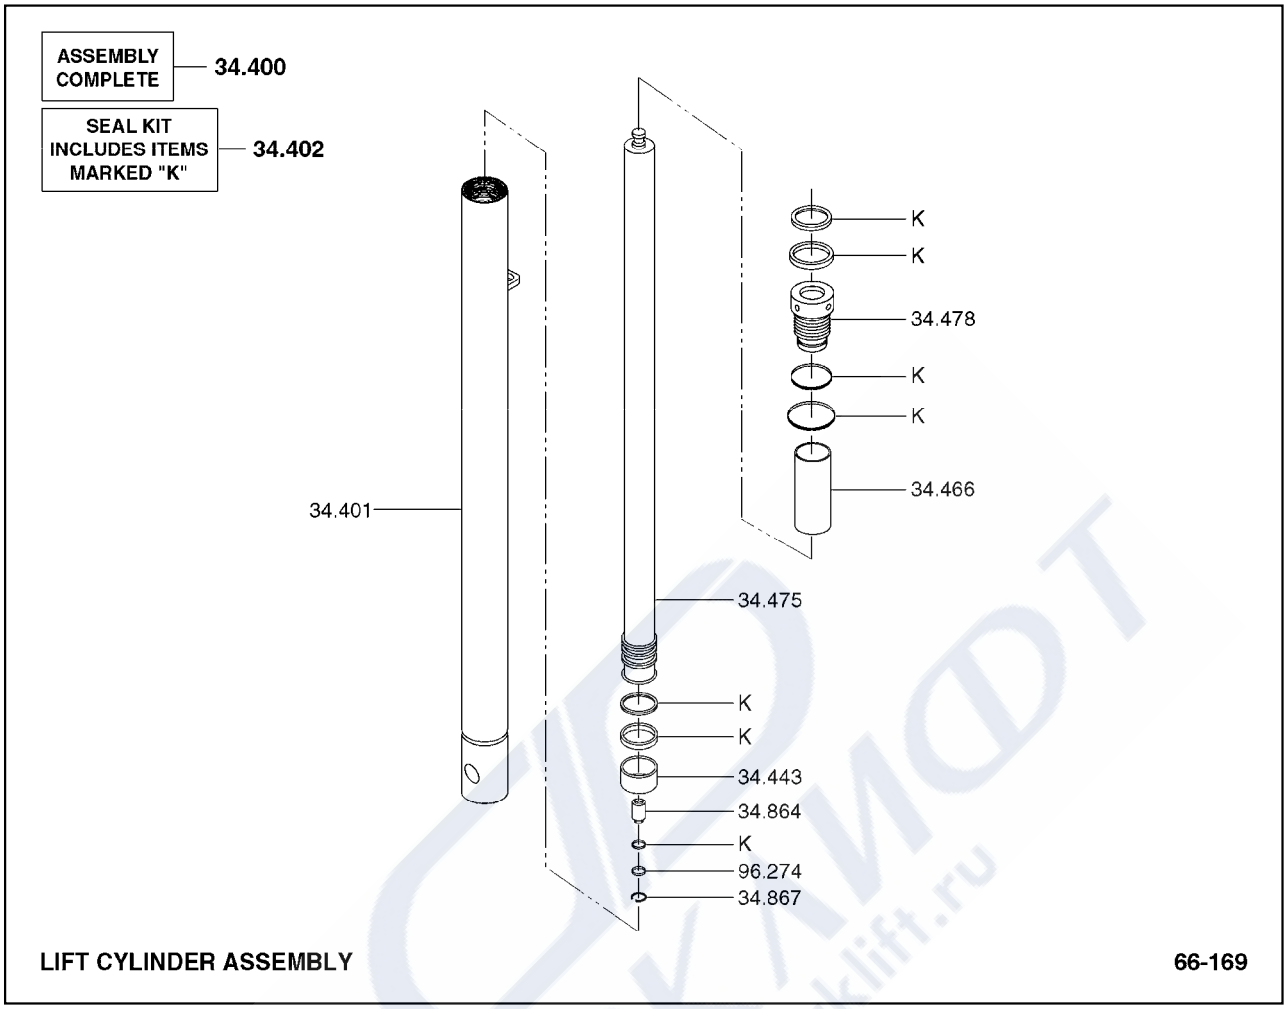

34.400	CYLINDER ASSEMBLY, LIFT 실린더
34.401	BARREL, LIFT CYLINDER 배럴
34.402	SEAL & PACKING KIT, LIFT CYLINDER 씰& 팩킹키트
34.443	RING, LIFT CYLINDER PISTON WEAR 링
34.466	SPACER, LIFT CYLINDER FEED TUBE 스페이서
34.475	ROD, LIFT CYLINDER 로드
34.478	GLAND, LIFT CYLINDER 그랜드
34.864	CHECK VALVE, LIFT CYLINDER 체크밸브
34.867	RETAINER, LIFT CYLINDER CHECK VALVE 리테이너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

96.274 WASHER, LIFT CYLINDER CHECK VALVE
와셔

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

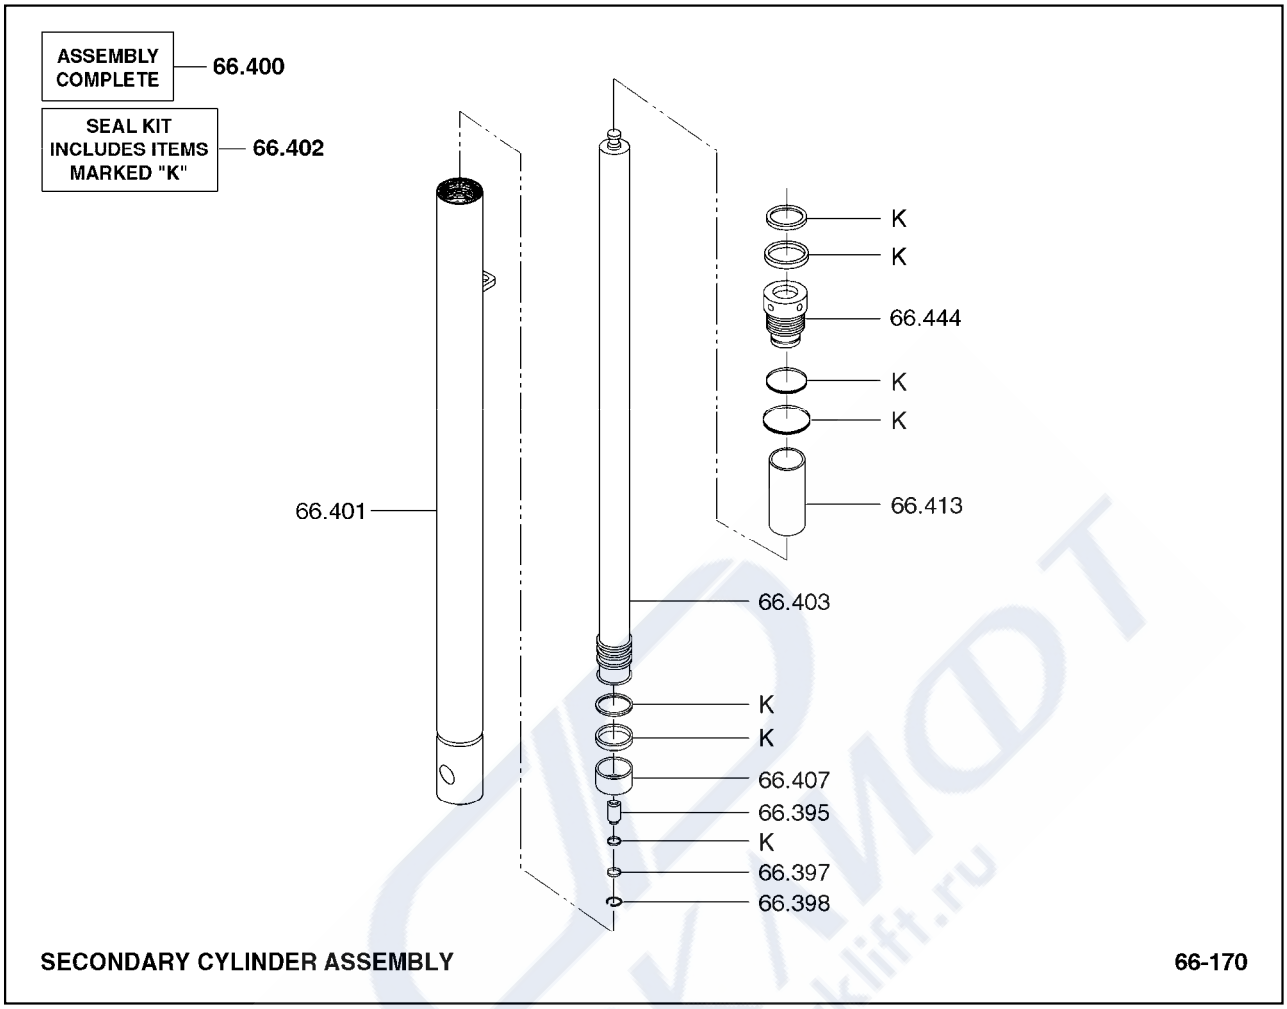

66.395 CHECK VALVE, FINAL LIFT CYLINDER
체크밸브

66.397 WASHER, FINAL LIFT CYLINDER CHECK VALVE
와셔

66.398 SNAP RING, FINAL LIFT CYLINDER CHECK VALVE
스냅링

66.400 CYLINDER ASSEMBLY, FINAL LIFT
실린더

66.401 BARREL, FINAL LIFT CYLINDER
배럴

66.402 PACKING KIT, FINAL LIFT CYLINDER
패킹키트

66.403 PISTON ROD, FINAL LIFT CYLINDER
피스톤로드

66.407 WEAR RING, FINAL LIFT CYLINDER PISTON
웨어링

66.413 SPACER, FINAL LIFT CYLINDER PISTON ROD
스페이서

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

66.444 GLAND, FINAL LIFT CYLINDER
그룹드

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

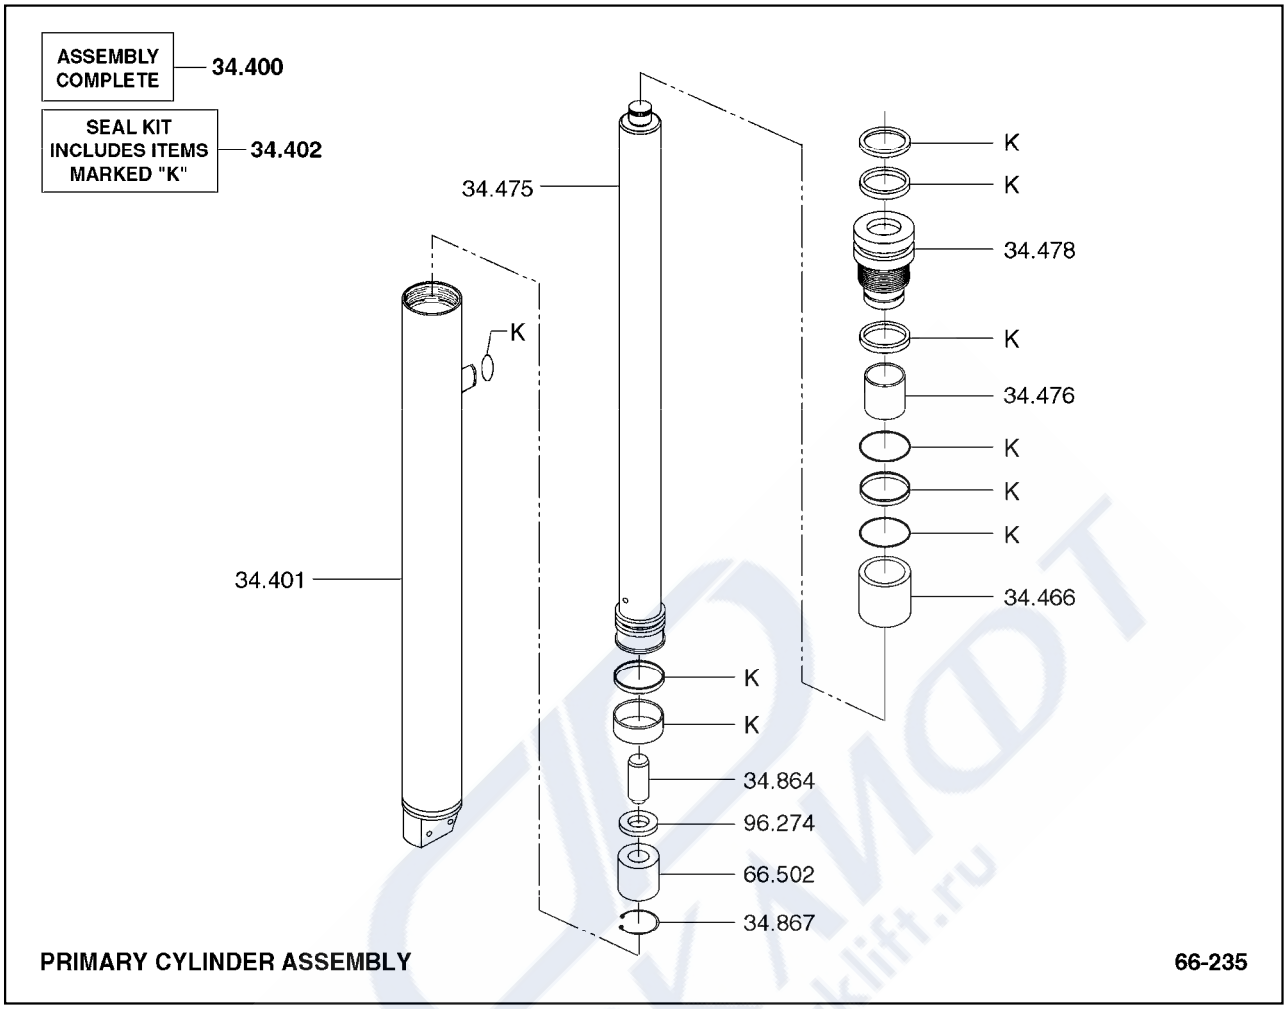

34.400 CYLINDER ASSEMBLY, LIFT
실린더

34.401 BARREL, LIFT CYLINDER
배럴

34.402 SEAL & PACKING KIT, LIFT CYLINDER
씰& 팩킹키트

34.466 SPACER, LIFT CYLINDER FEED TUBE
스페이서

34.475 ROD, LIFT CYLINDER
로드

34.476 BEARING, LIFT CYLINDER ROD
베어링

34.478 GLAND, LIFT CYLINDER
그랜드

34.864 CHECK VALVE, LIFT CYLINDER
체크밸브

34.867 RETAINER, LIFT CYLINDER CHECK VALVE
리테이너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

66.502 CUSHION, LIFT CYLINDER
쿠션

96.274 WASHER, LIFT CYLINDER CHECK VALVE
옥셔

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

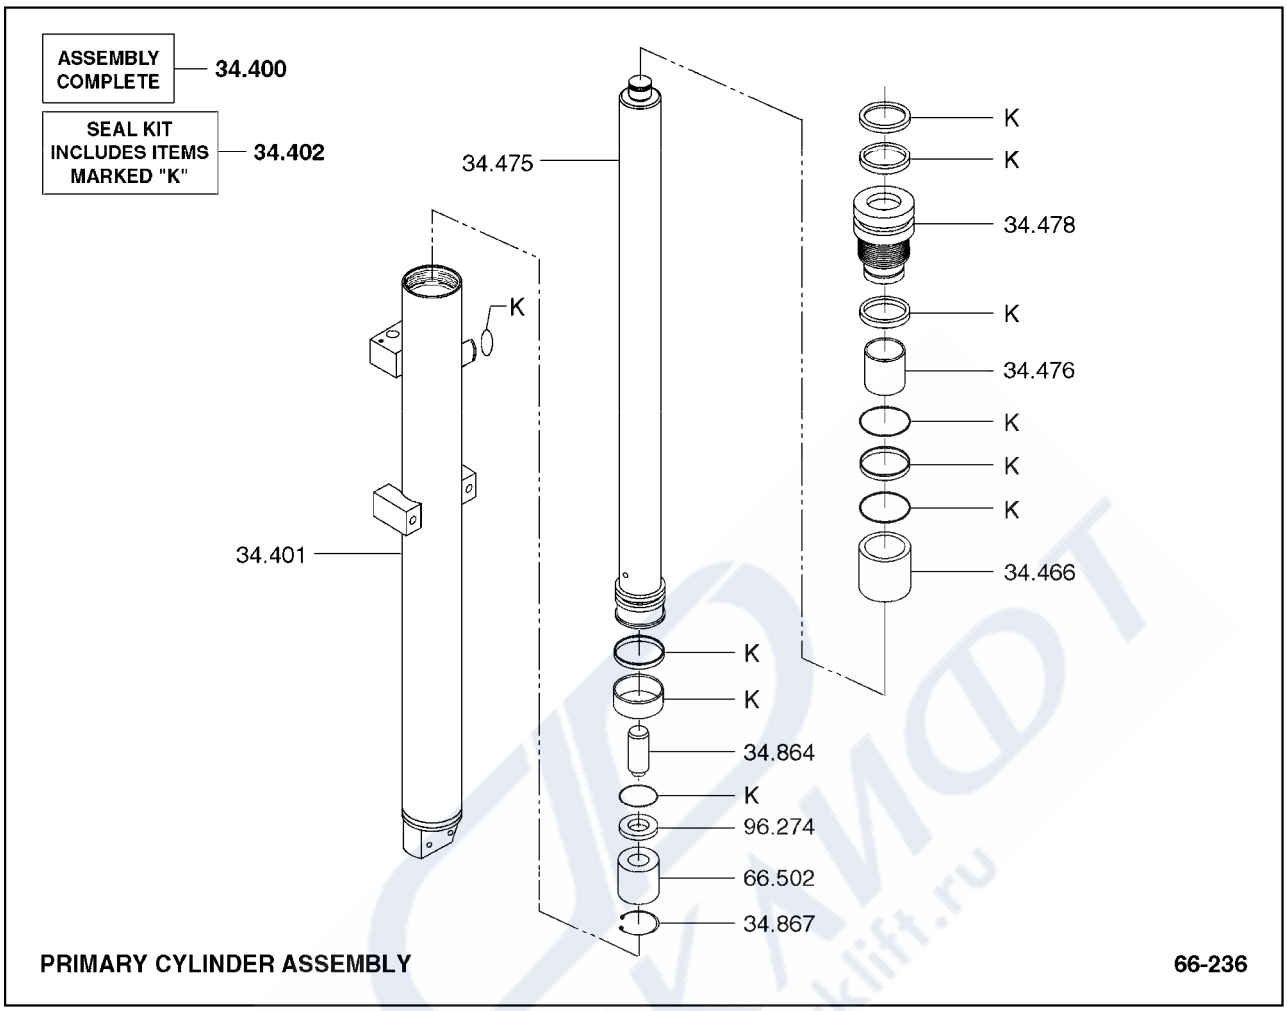

34.400	CYLINDER ASSEMBLY, LIFT 실린더
34.401	BARREL, LIFT CYLINDER 배럴
34.402	SEAL & PACKING KIT, LIFT CYLINDER 씰& 팩킹키트
34.466	SPACER, LIFT CYLINDER FEED TUBE 스페이서
34.475	ROD, LIFT CYLINDER 로드
34.476	BEARING, LIFT CYLINDER ROD 베어링
34.478	GLAND, LIFT CYLINDER 그랜드
34.864	CHECK VALVE, LIFT CYLINDER 체크밸브
34.867	RETAINER, LIFT CYLINDER CHECK VALVE 리테이너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

66.502 CUSHION, LIFT CYLINDER
쿠션

96.274 WASHER, LIFT CYLINDER CHECK VALVE
옥셔

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

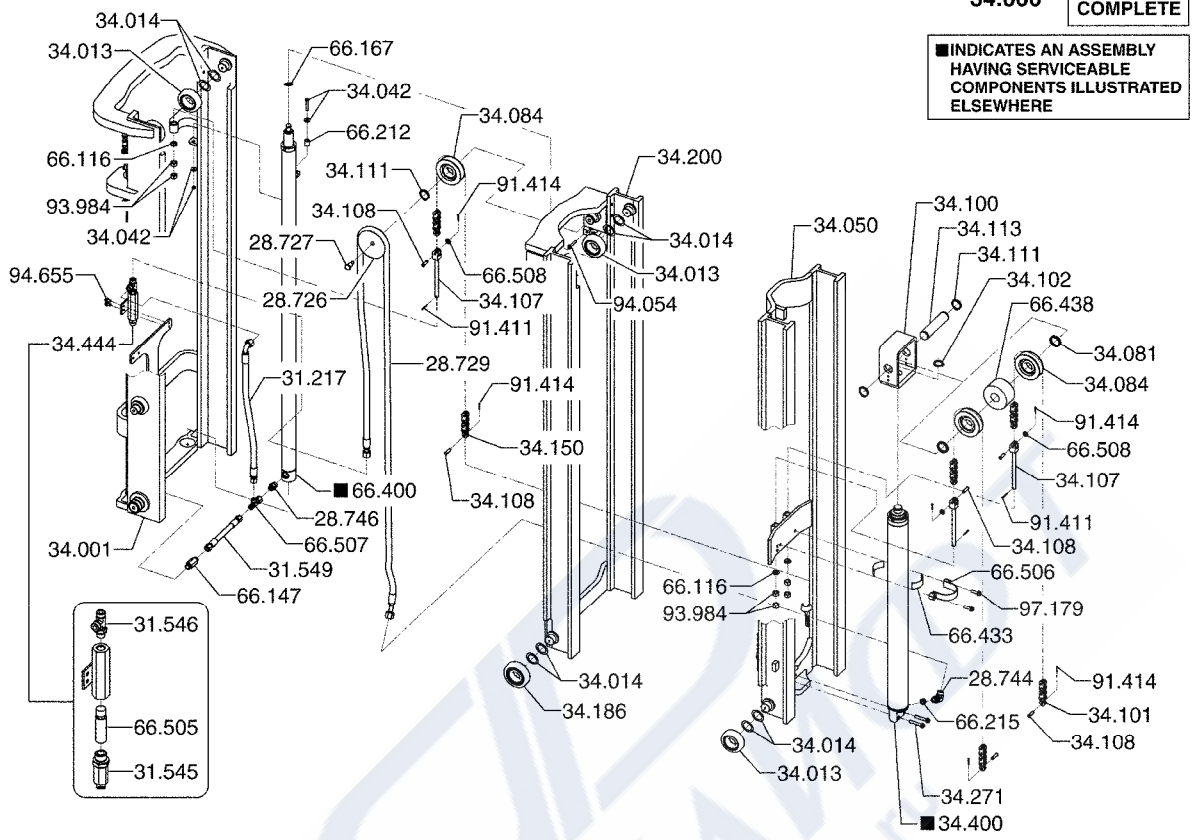

28.726	SHEAVE, LIFT CYLINDER HOSE 쉬브	34.081	SPACER, LIFT CHAIN SHEAVE CARRIER 스페이서
28.727	PIVOT, LIFT CYLINDER HOSE SHEAVE 피봇	34.084	SHEAVE, LIFT CHAIN 쉬브
28.729	LINE, LIFT CYLINDER 라인	34.100	CARRIER, LIFT CYLINDER CHAIN SHEAVE 캐리어
28.744	FITTING, LIFT CYLINDER LINE 피팅	34.101	CHAIN, LIFT 체인
28.746	FITTING, LIFT CYLINDER LINE 피팅	34.102	FASTENER, SHEAVE CARRIER 패스너
31.217	LINE, LIFT CYLINDER INLET FITTING 라인	34.107	ANCHOR, LIFT CHAIN 앵커
31.545	FITTING, LIFT CYL FLOW CONTROL VALVE INLET 피팅	34.108	FASTENER, LIFT CHAIN TO ANCHOR 패스너
31.546	FITTING, LIFT CYL FLOW CONTROL VALVE OUTLET 피팅	34.111	FASTENER, CHAIN SHEAVE SHAFT (CARRIER) 패스너
31.549	LINE, LIFT CYL FLOW CONTROL VALVE INLET 라인	34.113	SHAFT, LIFT CHAIN SHEAVE (CARRIER) 샤프트
34.000	UPRIGHT & LIFT CYL ASSEMBLY 마스트& 실린더	34.150	CHAIN, UPRIGHT RAIL LIFT 체인
34.001	OUTER RAIL WELDER ASSEMBLY, UPRIGHT 아우터레일	34.186	ROLLER, UPRIGHT 롤러
34.013	ROLLER, UPRIGHT 롤러	34.200	INTERMEDIATE RAIL WELDED ASSEMBLY, UPRIGHT 인터레일
34.014	SHIM, UPRIGHT ROLLER 심	34.271	FASTENER, LIFT CYLINDER LOWER 패스너
34.042	FASTENER, LIFT CYLINDER (UPPER) 패스너	34.400	CYLINDER ASSEMBLY, LIFT 실린더
34.050	INNER RAIL WELDED ASSEMBLY, UPRIGHT 인너레일	34.444	VALVE ASSEMBLY, LIFT CYLINDER FLOW CONTROL 밸브

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

66.116 SPACER, LIFT CHAIN ANCHOR
스페이서

66.147 VALVE, FINAL LIFT CYLINDER PORT FLOW CONTROL
밸브

66.167 SHIM, LIFT CYLINDER UPPER
심

66.212 SPACER, LIFT CYLINDER FASTENER
스페이서

66.215 VALVE, LIFT CYLINDER PORT FLOW CONTROL
밸브

66.400 CYLINDER ASSEMBLY, FINAL LIFT
실린더

66.433 SHIM, CYLINDER MOUNT
심

66.438 SHEAVE, HOSE
쉬브

66.505 CARTRIDGE, LIFT CYLINDER FLOW CONTROL VALVE
카트리지

66.506 CLAMP, LIFT CYLINDER
클램프

66.507 TEE, LIFT CYLINDER LINE
티

66.508 SPACER, LIFT CHAIN ANCHOR FASTENER
스페이서

91.411 RETAINER, LIFT CHAIN TO ANCHOR FASTENER
리테이너

91.414 RETAINER, LIFT CHAIN TO ANCHOR FASTENER
리테이너

93.984 FASTENER, LIFT CHAIN ANCHOR
패스너

94.054 FASTENER, LIFT CYLINDER (UPPER)
패스너

94.655 FASTENER, LIFT CYLINDER LINE JUNCTION BLOCK
패스너

97.179 FASTENER, LIFT CYLINDER CLAMP
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

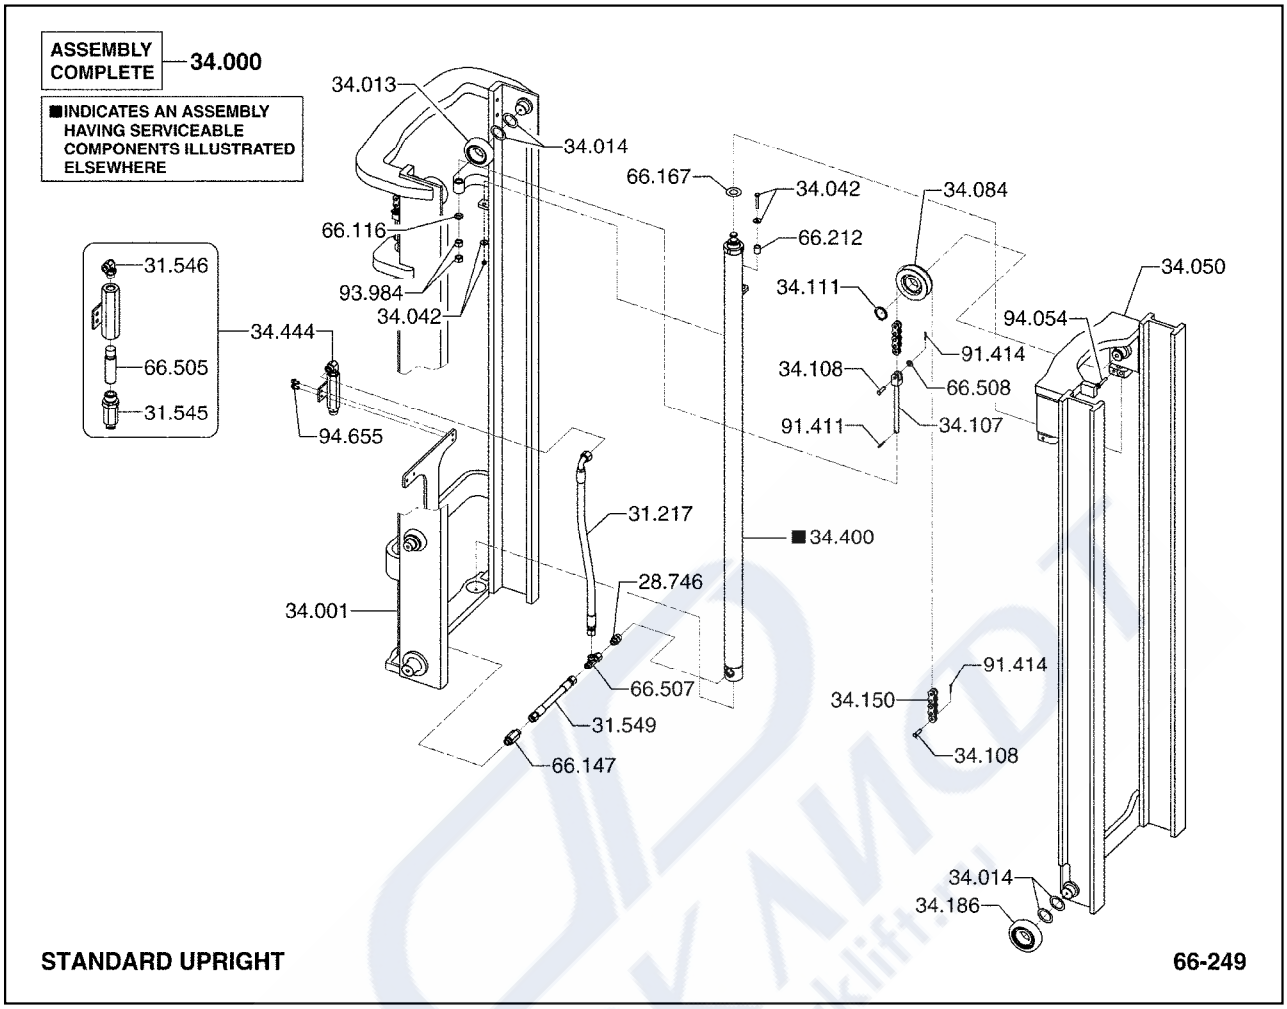

28.746	FITTING, LIFT CYLINDER LINE 피팅	34.150	CHAIN, UPRIGHT RAIL LIFT 체인
31.217	LINE, LIFT CYLINDER INLET FITTING 라인	34.186	ROLLER, UPRIGHT 롤러
31.545	FITTING, LIFT CYL FLOW CONTROL VALVE INLET 피팅	34.400	CYLINDER ASSEMBLY, LIFT 실린더
31.546	FITTING, LIFT CYL FLOW CONTROL VALVE OUTLET 피팅	34.444	VALVE ASSEMBLY, LIFT CYLINDER FLOW CONTROL 밸브
31.549	LINE, LIFT CYL FLOW CONTROL VALVE INLET 라인	66.116	SPACER, LIFT CHAIN ANCHOR 스페이서
34.000	UPRIGHT & LIFT CYL ASSEMBLY 마스트& 실린더	66.147	VALVE, FINAL LIFT CYLINDER PORT FLOW CONTROL 밸브
34.001	OUTER RAIL WELDER ASSEMBLY, UPRIGHT 아우터레일	66.167	SHIM, LIFT CYLINDER UPPER 심
34.013	ROLLER, UPRIGHT 롤러	66.212	SPACER, LIFT CYLINDER FASTENER 스페이서
34.014	SHIM, UPRIGHT ROLLER 심	66.505	CARTRIDGE, LIFT CYLINDER FLOW CONTROL VALVE 카트리지
34.042	FASTENER, LIFT CYLINDER (UPPER) 패스너	66.507	TEE, LIFT CYLINDER LINE 티
34.050	INNER RAIL WELDED ASSEMBLY, UPRIGHT 인너레일	66.508	SPACER, LIFT CHAIN ANCHOR FASTENER 스페이서
34.084	SHEAVE, LIFT CHAIN 쉬브	91.411	RETAINER, LIFT CHAIN TO ANCHOR FASTENER 리테이너
34.107	ANCHOR, LIFT CHAIN 앵커	91.414	RETAINER, LIFT CHAIN TO ANCHOR FASTENER 리테이너
34.108	FASTENER, LIFT CHAIN TO ANCHOR 패스너	93.984	FASTENER, LIFT CHAIN ANCHOR 패스너
34.111	FASTENER, CHAIN SHEAVE SHAFT (CARRIER) 패스너	94.054	FASTENER, LIFT CYLINDER (UPPER) 패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

94.655 FASTENER, LIFT CYLINDER LINE JUNCTION BLOCK
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

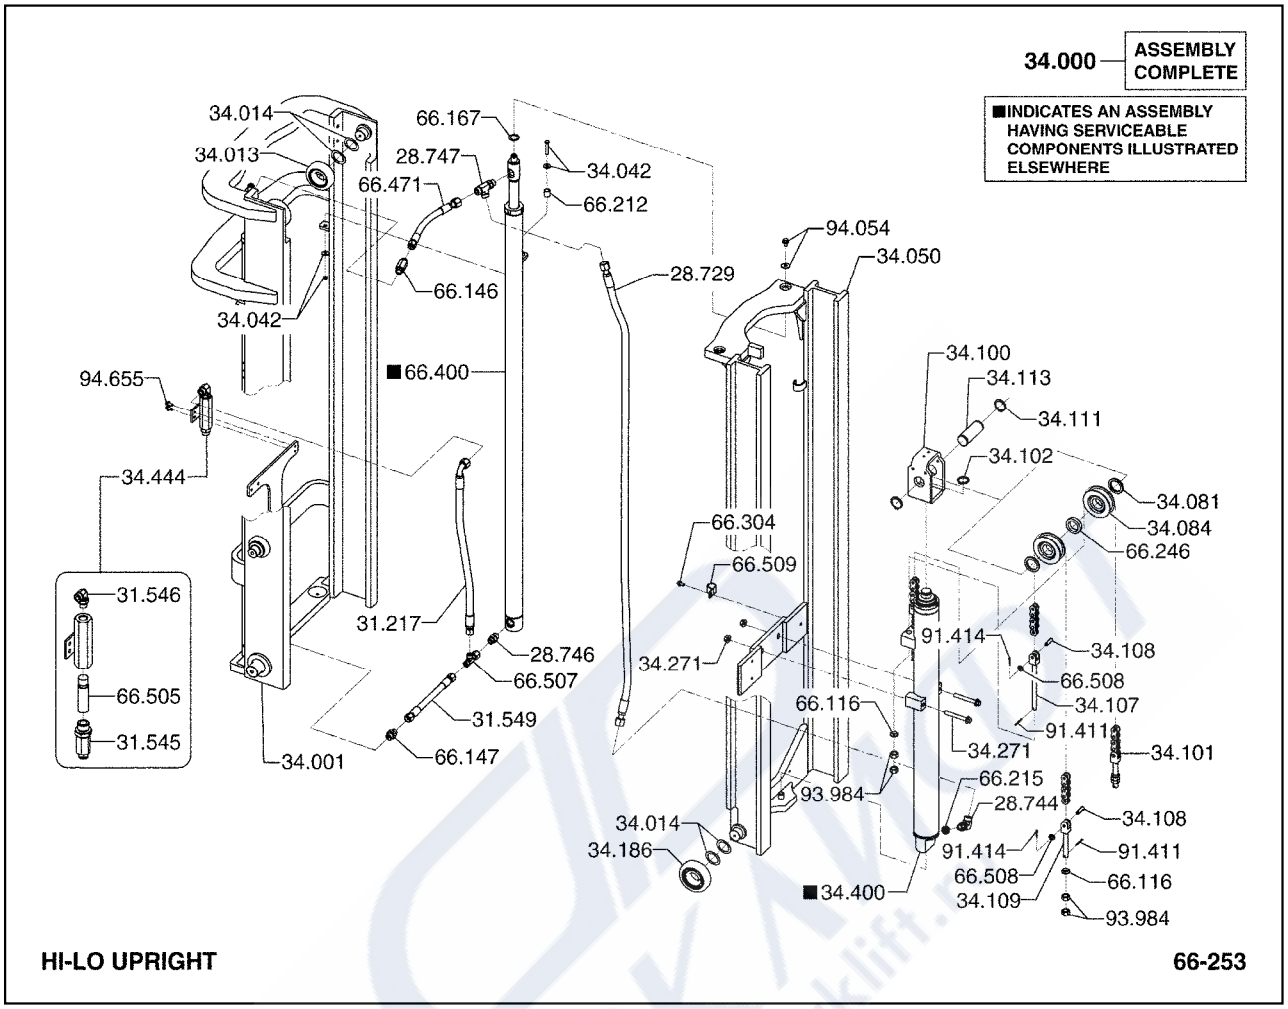

28.729	LINE, LIFT CYLINDER 라인
28.744	FITTING, LIFT CYLINDER LINE 피팅
28.746	FITTING, LIFT CYLINDER LINE 피팅
28.747	FITTING, LIFT CYLINDER LINE 피팅
31.217	LINE, LIFT CYLINDER INLET FITTING 라인
31.545	FITTING, LIFT CYL FLOW CONTROL VALVE INLET 피팅
31.546	FITTING, LIFT CYL FLOW CONTROL VALVE OUTLET 피팅
31.549	LINE, LIFT CYL FLOW CONTROL VALVE INLET 라인
34.000	UPRIGHT & LIFT CYL ASSEMBLY 마스트& 실린더
34.001	OUTER RAIL WELDER ASSEMBLY, UPRIGHT 아우터레일
34.013	ROLLER, UPRIGHT 롤러
34.014	SHIM, UPRIGHT ROLLER 심
34.042	FASTENER, LIFT CYLINDER (UPPER) 패스너
34.050	INNER RAIL WELDED ASSEMBLY, UPRIGHT 인너레일
34.081	SPACER, LIFT CHAIN SHEAVE CARRIER 스페이서
34.084	SHEAVE, LIFT CHAIN 쉬브
34.100	CARRIER, LIFT CYLINDER CHAIN SHEAVE 캐리어
34.101	CHAIN, LIFT 체인
34.102	FASTENER, SHEAVE CARRIER 패스너
34.107	ANCHOR, LIFT CHAIN 앵커
34.108	FASTENER, LIFT CHAIN TO ANCHOR 패스너
34.109	ANCHOR, LIFT CHAIN CARRIAGE END 앵커
34.111	FASTENER, CHAIN SHEAVE SHAFT (CARRIER) 패스너
34.113	SHAFT, LIFT CHAIN SHEAVE (CARRIER) 샤프트
34.186	ROLLER, UPRIGHT 롤러
34.271	FASTENER, LIFT CYLINDER LOWER 패스너
34.400	CYLINDER ASSEMBLY, LIFT 실린더
34.444	VALVE ASSEMBLY, LIFT CYLINDER FLOW CONTROL 밸브
66.116	SPACER, LIFT CHAIN ANCHOR 스페이서
66.146	VALVE, LIFT CYLINDER PORT FLOW CONTROL 밸브

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

66.147 VALVE, FINAL LIFT CYLINDER PORT FLOW CONTROL
밸브

66.167 SHIM, LIFT CYLINDER UPPER
심

66.212 SPACER, LIFT CYLINDER FASTENER
스페이서

66.215 VALVE, LIFT CYLINDER PORT FLOW CONTROL
밸브

66.246 SPACER, LIFT CHAIN SHEAVE
스페이서

66.304 FASTENER, LIFT CYLINDER LINE CLAMP
패스너

66.400 CYLINDER ASSEMBLY, FINAL LIFT
실린더

66.471 LINE, LIFT CYLINDER FEED
라인

66.505 CARTRIDGE, LIFT CYLINDER FLOW CONTROL VALVE
카트리지

66.507 TEE, LIFT CYLINDER LINE
티

66.508 SPACER, LIFT CHAIN ANCHOR FASTENER
스페이서

66.509 CLAMP, LIFT CYLINDER LINE
클램프

91.411 RETAINER, LIFT CHAIN TO ANCHOR FASTENER
리테이너

91.414 RETAINER, LIFT CHAIN TO ANCHOR FASTENER
리테이너

93.984 FASTENER, LIFT CHAIN ANCHOR
패스너

94.054 FASTENER, LIFT CYLINDER (UPPER)
패스너

94.655 FASTENER, LIFT CYLINDER LINE JUNCTION BLOCK
패스너

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

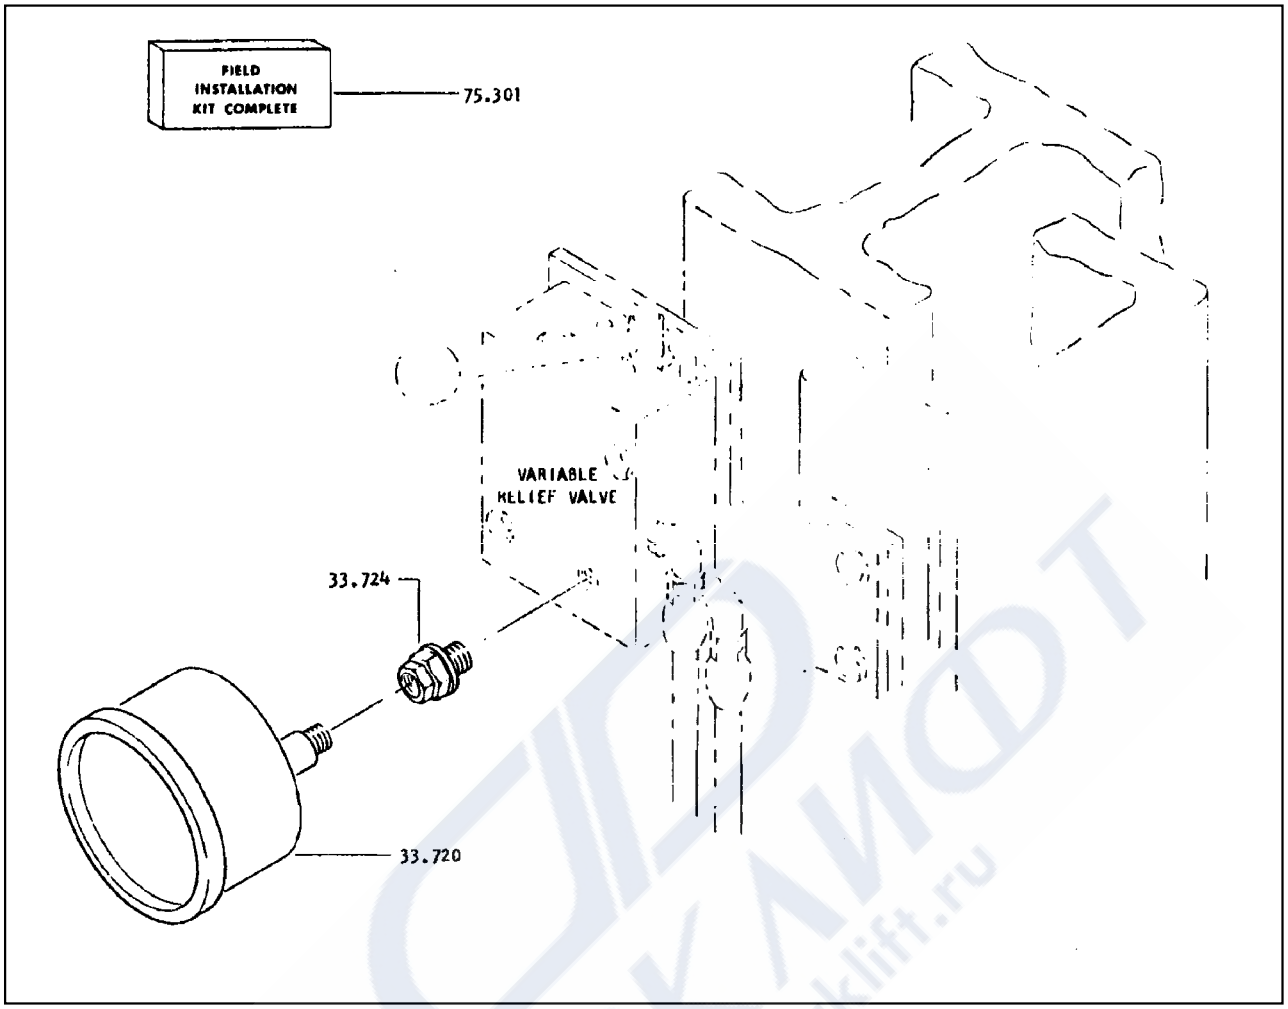

33.720	GAUGE, DEVICE HYDRAULIC PRESSURE 게이지
33.724	FITTING, DEVICE HYD PRESSURE GAUGE 피팅
75.301	DEVICE, HYDRAULIC PRESSURE GAUGE 디바이스

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

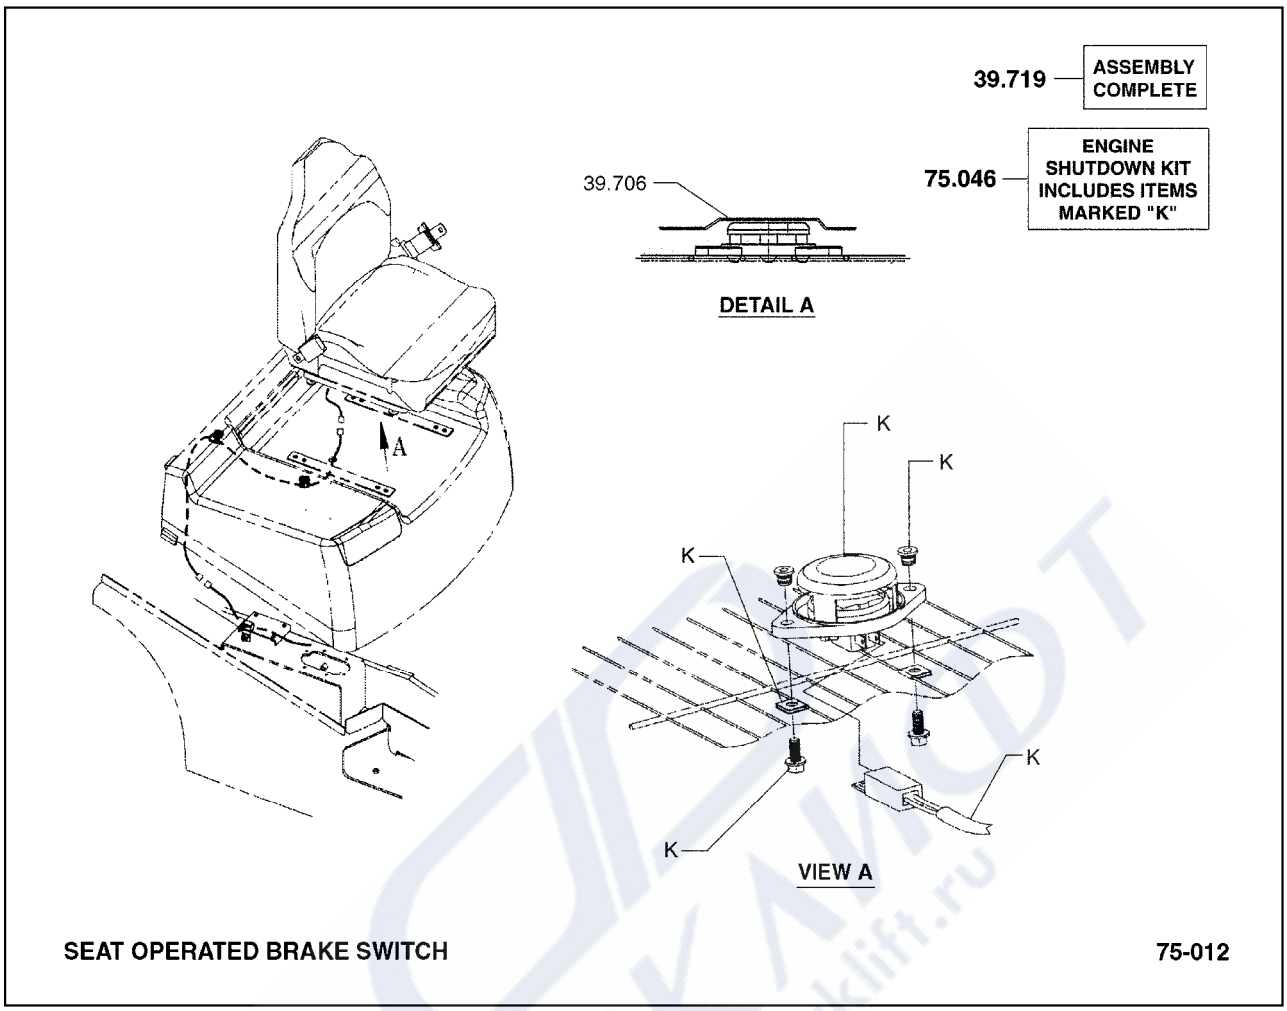

39.706	SUPPORT, SEAT 서포트
39.719	SEAT ASSEMBLY 시트
75.046	KIT, SEAT ACTUATED ENGINE SHUTDOWN 키트

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural

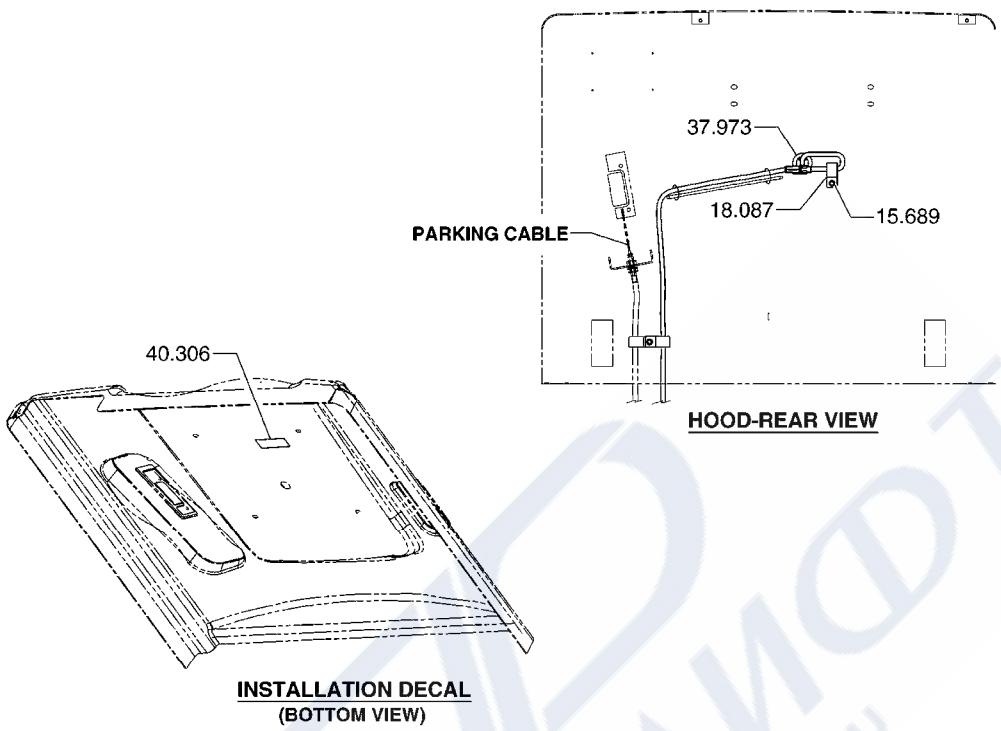

SEAT OPERATED BRAKE SWITCH INSTALLATION **75-013**

15.689 FASTENER, SEAT SWITCH HARNESS RETAINER
패스너

18.087 CLIP, SEAT SAFETY SWITCH WIRE
클립

37.973 GROMMET, SEAT WIRING HARNESS
그로멧

40.306 DECAL, SEAT SWITCH
데칼

ООО «Форклифт», тел./факс: (499) 951-79-99 (многоканальный)
Екатеринбург: (343) 344-00-22, Пермь: (342) 294-40-49, Челябинск: (351) 211-54-25, Тюмень: (345) 238-28-26
E-mail: sales@forklift.ru, Web: www.forklift.ru, Skype: forklift-ural